

# SMART WANDS™

THE WORLD'S  
PREMIUM  
CORDLESS BODY  
MASSAGERS



**reddot** design award  
winner 2013



# PRODUCT DESCRIPTION

*For sheer, concentrated power and unparalleled relaxation, no other cordless massager even comes close to the best-selling and world-famous LELO Smart Wand™.*

- **Groundbreaking Technology for Earth-Shattering Pleasure**  
The vibrations build on contact with your body and the intensity increases naturally
- **High-Powered yet Quiet for Indulgence Without Disruption**  
Relax and unwind with ultra-quiet vibrating massage strokes
- **Cordless Design for Portable Power**  
The rechargeable Smart Wand™ does away with cables – you get all the power of mains charging with more maneuverability

LELO

# SPECIFICATIONS

- **Materials:** ABS Plastic / Silicone
- **Finish:** Glossy / Matte
- **Size:**   **Large:** 304 x 80 x 60mm / 12.0 x 3.2 x 2.4in.  
                  **Medium:** 220 x 58 x 43mm / 8.7 x 2.3 x 1.7in.
- **Weight:**   **Large:** 395g / 13.9oz.  
                  **Medium:** 155g / 5.5oz.
- **Battery:**   **Large:** Li-Ion 900mAh 7.4V  
                  **Medium:** Li-Ion 500mAh 3.7V
- **Charging:**   **Large:** 2hrs at 9.0V 700mA  
                  **Medium:** 2hrs at 5V 500mA
- **User Time:** Up to 2hrs
- **Standby:** Up to 90 days
- **Frequency:**   **Large:** 100Hz  
                  **Medium:** 120Hz
- **Max Noise Level:** <60dB
- **Interface:** 3-button interface, 8 modes, tactile response function


# FEATURES

Powerful vibrations with  
SenseTouch™-technology

Waterproof and  
rechargeable design

Smooth body-safe  
silicone design

Easy-to-use controls  
to explore 8  
massage patterns

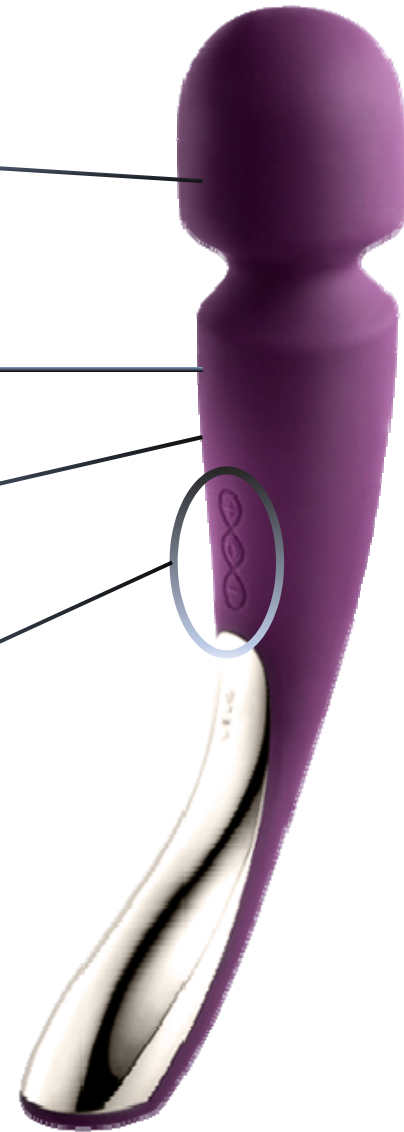

L 165mm/6.50"    Ø 35mm/1.38"

LELO

# CONTROLS



- Press **+** to turn on and to increase vibration strength.
- Press **-** to lower vibration strength; hold **-** to turn off.
- Press **()** to cycle through the different vibration patterns
- Lock by holding **+** and **-** for 5 seconds; the light will turn off when the device is locked.
- Unlock by pressing for 5 more seconds; the light will turn on when the device is active.

LELO

# USING SENSETOUCH™

SenseTouch™ is designed to deliver gradual tension relief through simulating a professional massage technique.



Use SenseTouch™ to create soothing and relaxing sensations wherever they are needed.

LELO

# USING SENSETOUCH™



- SenseTouch™ causes vibrations to increase on contact with the body
- And decrease when the massage tip is not touching skin
- Turn SenseTouch™ on and off by pressing the (i) button for 3 seconds.

LELO

# USING SENSETETOUCH™

Test vibration strength by holding the tip against your palm and using the + and - buttons.

When you switch to SenseTouch™, the Smart Wand™ will remember next time you turn it on.

To return to standard mode, press the **( )** button again for 3 seconds.

LELO



# CHARGING

Always charge LELO massagers before first use and only use original chargers provided by LELO

Insert the LELO charger into the charging socket

The light will pulsate to indicate that your massager is charging

When fully charged, the light will emit a steady glow

LELO

# HYGIENE & CARE



Use **LELO's Antibacterial Cleaning Spray** before and after each use for total peace of mind.

When cleaning with water, ALWAYS use a premium antibacterial solution.

**100% Waterproof and Rechargeable Design.**

Store your LELO massager in its protective storage pouch between uses.

**WARNING:** Do not boil or use metal scour. Avoid leaving your LELO in direct sunlight and NEVER expose it to extreme heat. Do not use on swollen or damaged skin. Keep your LELO out of the reach of children.

**IMPORTANT:** For Adult Use Only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis or thrombosis should consult with a medical professional regarding the risk of blood clots before using any personal massage product.



**LELO**

# WARRANTY REGISTRATION

1. Visit **LELO.com** and click **REGISTER/LOG IN** in the top right corner of the screen.
2. Follow the directions to register your product and attach details of your purchase.

Don't forget to take advantage of  
LELO's full warranty coverage.



The serial number is on the back of the  
authenticity card provided with every  
LELO product.

LELO

# DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).**

The crossed-out dustbin symbol indicates that this product should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



\* FCC Mark, C-Tick and IC certifications relevant to remote-controlled products only.

**Disclaimer:** Users of this LELO Product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Further, LELO reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

**Applicable for ALL products. Model may be changed for improvements without notice.**

© 2015 LELOi AB. ALL RIGHTS RESERVED.

LELOi AB, Birger Jarlsgatan 22, 114 34 STOCKHOLM, SWEDEN.

LELO Inc., 4320 STEVENS CREEK BLVD., SUITE #205, SAN JOSE, CA 95129, USA.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED BY LELO IN CHINA

WEBSITE [WWW.LELO.COM](http://WWW.LELO.COM) - SUPPORT [CUSTOMERCARE@LELO.COM](mailto:CUSTOMERCARE@LELO.COM)

LELO

LELO