



RECentral 3



Disclaimer

All the screen shots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability, however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright and Trademark Information

© 2017 by AVerMedia Technologies, Inc. All rights reserved. No part of this publication, in whole or in part, may be reproduced, transmitted, transcribed, altered or translated into any language in any form by any means without the written permission of AVerMedia Technologies, Inc. Information and specification contained in this manual are subject to change without notice and do not represent a commitment on the part of AVerMedia.

For more information, please refer to www.avermedia.com

AVerMedia and RECentral™ are trademarks or registered trademarks of AVerMedia Technologies, Inc.

Headquarters

Address No.135, Jian 1st Rd., Zhonghe Dist., New Taipei City 23585, Taiwan

Website www.avermedia.com

Support www.avermedia.com/support
Telephone +886-2-2226-3630

5 TABLE OF CONTENTS

INTRODUCTION	04
Download & Install	04
INTERFACE	05
RECORD	OE
Live Editing	07
Scenes	08
STREAM	09
BROWSE & SHARE	10
SETTINGS	11



Thank you for purchasing one of our Live Gamer capture cards. We strongly recommend using it with RECentral to unleash its full potential.

This manual will go over the interface and the main functions of RECentral.

Download & Install

Download the installation file from q.avermedia.com/RECentral and install RECentral 3 to your computer.

For instructions on hardware connections, please refer to the quick guide inside the box of your Live Gamer capture card.





This is RECentral 3's interface:



1	Mode Dial	Switches between modes
2	Option Panel	Audio and video options
3	Preview Panel	Main viewing area
4	Info Panel	Information and action buttons



1. Click ◆ to switch to Capture / Stream mode
2. Your active capture card
3. Adjust your video and audio settings
4. Click ◆ to select the Record tab
5. Select a Recording Quality
6. Select a Codec

1 Capture / Stream mode
2 Wideo

1 Wideo

1 Deck Audio

1 Capture / Stream

2 Video

1 Deck Audio

1 Capture / Stream

2 Video

1 Deck Audio

1 Deck Aud

6

7

8

- 7. Type in a Game Genre to categorize your recording8. Tick to enable Live Editing, see the next section for more details
- 9. Disk space available (in hours and minutes)
- 10. Click REC to start recording, click (a) to capture images
- 11. Click to go fullscreen, and (1) to mute audio
- 12. Click ___ to stop recording



Live Editing


When enabled, your source feed will be cached to your storage. When storage is full, older footages will be overwritten.



- 1. Click to select the Dashboard tab
- 2. Edit cached footage
 - Drag $\overline{\ \ }$ or click on the timeline to shift forward/backward
 - Click to go back 30 seconds, or give to return to the live feed
 - Click to add/remove time marks at your current position in time, or right-click on the timeline to add/remove time marks anywhere on the timeline. Add multiple marks to create clips of footages in-between
 - Click on a clip to remove it, 5 to add it back, or drag-and-drop the filmstrips to reorder the clips
- 3. When done, click **SAVE** to export your edited video

Scenes

Scenes are different arrangements of on-screen elements (including the source video, your webcam's view, and images). When enabled, you may select from a number of pre-arranged scenes, or create ones that match your occasions.

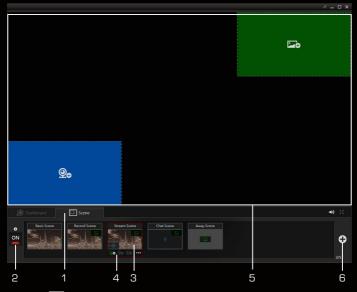

- 1. Click to select the Scene tab
- 2. Click the button to enable/disable Scenes
- 3. Select a scene to apply to your video
- 4. Click to add elements (picture, webcam, video, webpage, or text)
- Edit the position, size, transformation, and layer properly of each individual element in the Preview Panel
- 6. Click + to create new scenes



- 1. Click to switch to Capture / Stream mode
 2. Your active capture card
 3. Adjust your video and audio settings
 4. Click ((○)) to select the Stream tab
 5. Select a Streaming Platform, or click + to add one
 6. Tick to enable Video Backup
 7. Click STREAM to start streaming, click ② to capture images
 8. Click 3 to go fullscreen, and (○)) to mute audio
- 10. Click to stop streaming

9. Click & to go to your channel in your default browser



5 BROWSE & SHARE

- 1. Click to switch to Media Share mode
- 2. Browse by Game Genre and capture dates
- 3. Click ≡ for List View, or ₩ for Grid View
- 4. Click to select a video, or double-click to play it
- 5. Detailed information of selected video
- Click A_i to rename, to edit the category of, or to delete the selected video
- 7. Click SHARE to share the selected videos



RECENTRAL





- 1. Click to switch to Settings mode
- Select a menu to adjust detailed settings for RECentral. Refer to the table below for the settings available under each menu
- 3. Click to adjust settings for your capture card



General	» Language» Save Path» Shortcuts	Select interface languageSet locations to save filesSet keyboard shortcuts
Microphone	» Microphone» Microphone Volume» Test Volume	Select your microphoneAdjust its volumeTest microphone volume
Shortcuts	» Keyboard Shortcuts	- Set keyboard shortcuts
Social Network Account	» Facebook» Twitter» YouTube	- Set up social network accounts
Profile Management	» Recording Profile» Streaming Profile	 Edit, import, or export recording / streaming profiles
About	» Software Version» UXIP	RECentral version and updatesSubmit anonymous usage data

