

Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Canon EOS R10 + 50mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Canon EOS R10 + 18-150mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere



EOS R10



Advanced User Guide

Contents

Introduction	0
Package Contents.	11
Supplemental Information.	13
Compatible Accessories.	14
Instruction Manuals.	15
Quick Start Guide	16
About This Guide	20
Compatible Cards	22
Safety Instructions	23
Handling Precautions	26
Part Names	30
Software	38
Preparation and Basic Operations	12
Charging the Battery	43
Inserting/Removing the Battery and Card.	46
Using the Screen	52
Turning on the Power	54
Attaching and Detaching RF/RF-S Lenses.	58
Attaching and Detaching EF/EF-S Lenses	63
Multi-Function Shoe	67
Using the Viewfinder	69
Basic Operations	70
Menu Operations and Settings	32
Quick Control	88
Touch-Screen Operation.	90
Basic Zone	92
A+: Fully Automatic Shooting (Scene Intelligent Auto)	93
Special Scene Mode)3
Self Portrait Mode	06
Portrait Mode	07

108
109
110
111
113
114
115
117
118
119
120
121
122
123
130
131
134
136
139
143
146
150
151
155
174
178
179
181
189
194
196
198

Manual Exposure Compensation.	200
Exposure Lock (AE Lock).	202
ISO Speed Settings for Still Photos.	204
HDR Shooting	213
HDR Mode.	215
Auto Lighting Optimizer.	219
Highlight Tone Priority.	221
Anti-Flicker Shooting.	223
Metering Mode.	225
White Balance	227
White Balance Correction	237
Color Space.	241
Picture Style Selection.	242
Picture Style Customization.	246
Picture Style Registration.	250
Clarity	253
Shooting Creative Filters.	254
Lens Aberration Correction.	259
Long Exposure Noise Reduction.	266
High ISO Speed Noise Reduction.	268
Dust Delete Data Acquisition.	270
Multiple Exposures.	274
RAW Burst Mode.	283
Focus Bracketing.	287
Interval Timer Shooting.	293
Silent Shutter Function.	297
Shutter Mode.	298
Releasing Shutter without Card.	300
Image Stabilizer (IS Mode).	301
Customizing Quick Controls.	303
Shooting with the Touch Shutter.	307
Image Review.	309
High-Speed Display.	312

N	fetering Timer	314
D	isplay Simulation	315
С	Optical Viewfinder Simulation.	317
S	hooting Information Display	319
R	Reverse Display	331
V	/iewfinder Display Format	332
D	Display Performance	333
G	General Still Photo Shooting.	335
Μο	vie Recording	338
Т	ab Menus: Movie Recording	339
N	lovie Recording.	344
N	lovie Recording Size	357
н	ligh Frame Rate	365
D	igital Zoom	366
S	ound Recording	368
S	hooting Creative Filters.	372
Т	ime-Lapse Movies	376
Ν	Novie Self-Timer	390
In	nage Stabilizer (IS Mode)	391
S	hutter Button Function for Movies.	393
Z	ebra Settings	395
Т	ime Code	398
С	Other Menu Functions	405
G	Seneral Movie Recording Precautions.	415
AF/Dr	ive	419
т	ab Menus: AF (Still Photos).	420
т	ab Menus: AF (Movie Recording).	426
A	F Operation	429
N	lovie Servo AF	435
S	electing the AF Area.	438
Р	Preview AF	463
т	ouch & Drag AF Settings.	464
N	Ianual Focus	467

Servo AF Characteristics.	 475
Customizing AF Functions	 486
Selecting the Drive Mode	 498
Using the Self-Timer	 501
Remote Control Shooting.	 503
Customizing Operation.	 505
Playback	 511
Tab Menus: Playback	 513
Image Playback	 518
Magnified Image Display.	 523
Index Display (Multiple-Image Display).	 531
Movie Playback.	 534
Editing a Movie's First and Last Scenes.	 538
Frame Extraction from 4K Movies or 4K Time-Lapse Movies	 541
Playback on a TV Set	 544
Protecting Images.	 546
Erasing Images.	 550
Rotating Still Photos.	 557
Changing Movie Orientation Information.	 559
Rating Images.	 561
Print Ordering (DPOF)	 567
Photobook Set-up.	 572
RAW Image Processing.	 577
Creative Assist.	 586
Quick Control RAW Processing.	 589
Cloud RAW Image Processing.	 591
Playback Creative Filters	 601
Red-Eye Correction.	 605
Resizing JPEG/HEIF Images.	 607
Cropping JPEG/HEIF Images	 609
Converting HEIF to JPEG.	 612
Slide Show	 614
Setting Image Search Conditions.	 617

Resuming from Previous Playback.	621
Browsing Images with the Main Dial.	622
Customizing Playback Information Display.	624
Displaying the Highlight Alert.	628
AF Point Display.	629
Playback Grid	630
Movie Play Count	631
Still Photo Extraction from RAW Burst Images.	633
HDMI HDR Output.	636
Wireless Features.	637
Tab Menus: Wireless Features.	639
Wi-Fi/Bluetooth Connection.	640
Connecting to a Smartphone.	642
Connecting to a Computer via Wi-Fi.	682
Connecting to a Printer via Wi-Fi.	689
Sending Images to a Web Service.	703
Streaming Images.	709
Wi-Fi Connection via Access Points.	717
Connecting to a Wireless Remote Control.	725
Reconnecting via Wi-Fi/Bluetooth.	729
Registering Multiple Connection Settings.	731
Airplane Mode	732
Wi-Fi Settings.	733
Bluetooth Settings.	734
Nickname	735
GPS Device Settings.	736
Changing or Deleting Connection Settings.	741
Resetting Communication Settings.	744
View Info Screen.	745
Virtual Keyboard Operations.	746
Responding to Error Messages.	747
Wireless Communication Function Precautions.	754
Security	756

	Checking Network Settings.	757
	Wireless Communication Status.	758
Set-	up	760
	Tab Menus: Set-up.	761
	Folder Settings.	764
	File Numbering.	767
	Card Formatting.	772
	Auto Rotate.	775
	Adding Orientation Information to Movies.	777
	Date/Time/Zone.	778
	Language.	781
	Video System.	782
	Help.	783
	Shooting Mode Guide.	786
	Beeps.	788
	Volume	789
	Power Saving.	790
	Screen and Viewfinder Display.	792
	Screen Brightness.	794
	Viewfinder Brightness.	795
	Fine-Tuning Viewfinder Color Tone.	796
	UI Magnification.	797
	HDMI Resolution.	798
	Touch Control.	799
	Multi-Function Lock.	800
	Focus Mode Switch (AF/MF).	801
	Sensor Cleaning.	802
	App Selection for USB Connections.	805
	Resetting the Camera.	806
	Custom Shooting Mode (C1, C2).	807
	Battery Information.	810
	Copyright Information.	812
	Other Information.	

Custom Functions/My Menu 8	16
Tab Menus: Custom Functions. 8	317
Custom Function Setting Items	320
Tab Menus: My Menu. 8	346
Registering My Menu 8	347
Reference	54
Importing Images to a Computer 8	355
Importing Images to a Smartphone	358
Using a USB Power Adapter to Charge/Power the Camera 8	361
Troubleshooting Guide	364
Error Codes	383
ISO Speed in Movie Recording 8	384
Information Display	385
Specifications 8	396
Trademarks and Licensing	17

Before starting to shoot, be sure to read the following

To avoid shooting problems and accidents, first read the <u>Safety Instructions</u> and <u>Handling</u> <u>Precautions</u>. Also read this Advanced User Guide carefully to ensure that you use the camera correctly.

Take some test shots, and understand about product liability

After shooting, play images back and check whether they have been properly recorded. If the camera or memory card is faulty and images cannot be recorded or transferred to a computer, Canon cannot be held liable for any loss or inconvenience caused.

Copyrights

Copyright laws in some countries prohibit the unauthorized use of images recorded with the camera (or music/images with music transferred to the memory card) for purposes other than personal enjoyment. Also be aware that certain public performances, exhibitions, etc. may prohibit photography even for private enjoyment.

- Package Contents
- Supplemental Information
- <u>Compatible Accessories</u>
- Instruction Manuals
- Quick Start Guide
- About This Guide
- Compatible Cards
- Safety Instructions
- Handling Precautions
- Part Names
- <u>Software</u>

Package Contents

Before use, make sure the following items are included in the package. If anything is missing, contact your dealer.



Camera (with body cap (Camera Cover R-F-5) and shoe cover)



Battery Pack LP-E17

(with protective cover)

	Canon	
_		
•	•	
E	•	_

Battery Charger LC-E17/LC-E17E*



* Battery Charger LC-E17 or LC-E17E is provided. (The LC-E17E comes with a power cord.)

- The camera does not come with a memory card (
), interface cable, or HDMI cable.
- If you purchased a Lens Kit, check that the lenses are included.
- Be careful not to lose any of these items.

Caution

Lens Instruction Manuals (PDF files) are for lenses sold separately, and when a lens kit is purchased, some accessories included with the lens may not match those listed in the Lens Instruction Manual.

Refer to the following website for information on lenses compatible with camera features, and for supplemental information about the camera.

https://cam.start.canon/H001/



Check the following website for details on compatible accessories.

• https://cam.start.canon/H002/





The included Instruction Manual provides basic camera instructions.

Advanced User Guide

Complete instructions are provided in this Advanced User Guide. For the latest Advanced User Guide, refer to the following website. https://cam.start.canon/C006/




Lens/Software Instruction Manual Download from the following website and refer to the supplemental information. <u>https://cam.start.canon/</u>



Note

Select [" Manual/software URL] to display the QR code on the camera screen.


1. Insert the battery (2).

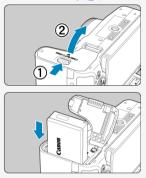






 Insert the card with the label facing the back of the camera until it clicks into place. 3. Attach the lens (2).

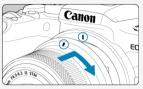

- Align the red mount index on the lens with the red mount index on the camera to attach the lens.
- 4. Set the focus mode to < AF > (@).
- 5. Set the power switch to < ()N>, then set the Mode dial to < (a^* > ((2), (2))).

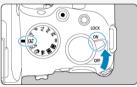

• All the necessary camera settings is set automatically.

6. Flip out the screen (2).


 When the date/time/zone setting screen is displayed, see <u>Date/Time/</u> <u>Zone</u>.

7. Focus on the subject (O).



- A tracking frame [] for AF appears over any face detected.
- Press the shutter button halfway, and the camera will focus on the subject.
- If < 4 > blinks on the screen, manually raise the built-in flash.

8. Take the picture (2).

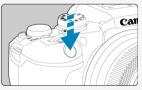

Press the shutter button completely to take the picture.



● To display the image again, press the < ▶ > button (②).

- Icons in This Guide
- Basic Assumptions for Operational Instructions and Sample Photos

Icons in This Guide

< 50000 >	Indicates the Main dial.
< > ~ ~ ~	Indicates the Quick control dial.
< +	Indicates the Multi-controller.
<	Indicates the direction to press the cross keys (< \diamondsuit >).
< () >	Indicates the lens control ring.
< ()>	Indicates the Quick Control/Set button.
@*	Indicates the duration (in * seconds) of the operation for the button you pressed, as timed after you release the button.

 In addition to the above, the icons and symbols used on the camera's buttons and displayed on the screen are also used in this guide when discussing relevant operations and functionality.

☆	☆ to the right of titles indicates functions only available in < FV >, < P >, < TV >, < AV >, < M >, or < B > mode or for manual exposure movie recording.	
ø	Links to pages with related topics.	
D	Warning to prevent shooting problems.	
	Supplemental information.	
-W-	Tips or advice for better shooting.	
?	Troubleshooting advice.	

Basic Assumptions for Operational Instructions and Sample Photos

- Before following any instructions, make sure the power switch is set to < ON > (2) and the Multi-function lock feature is off (2).
- It is assumed that all the menu settings and Custom Functions are set to their defaults.
- Illustrations in this guide show the camera with the RF-S18-45mm F4.5-6.3 IS STM lens attached as an example.
- The sample photos displayed on the camera and used in this guide are for instructional purposes only.
- In references to using EF or EF-S lenses, it is assumed that a mount adapter is used.

Compatible Cards

The following cards can be used with the camera regardless of capacity. If the card is new or was previously formatted (initialized) by another camera or computer, format the card with this camera (3).

 SD/SDHC/SDXC memory cards UHS-II and UHS-I cards compatible

Cards That Can Record Movies



In this guide, "card" refers to SD memory cards, SDHC memory cards, and SDXC memory cards.

*A card is not included. Please purchase it separately.

Be sure to read these instructions in order to operate the product safely.

Follow these instructions to prevent injury or harm to the operator of the product or others.

MARNING: Denotes the risk of serious injury or death.

Keep the product out of the reach of young children.

A strap wrapped around a person's neck may result in strangulation.

The parts or provided items of cameras or accessories are dangerous if swallowed. If swallowed, seek immediate medical assistance.

The battery is dangerous if swallowed. If swallowed, seek immediate medical assistance.

- Use only power sources specified in this instruction manual for use with the product.
- Do not disassemble or modify the product.
- Do not expose the product to strong shocks or vibration.
- Do not touch any exposed internal parts.
- Stop using the product in any case of unusual circumstances such as the presence of smoke or a strange smell.
- Do not use organic solvents such as alcohol, benzine or paint thinner to clean the product.
- Do not get the product wet. Do not insert foreign objects or liquids into the product.

Do not use the product where flammable gases may be present.

This may cause electric shock, explosion or fire.

 Do not leave a lens or a camera/camcorder with a lens attached, exposed without the lens cap attached.

The lens may concentrate the light and cause fire.

Do not touch the product connected to a power outlet during lightning storms.

This may cause electric shock.

- Observe the following instructions when using commercially available batteries or provided battery packs.
 - · Use batteries/battery packs only with their specified product.
 - · Do not heat batteries/battery packs or expose them to fire.
 - · Do not charge batteries/battery packs using non-authorized battery chargers.
 - Do not expose the terminals to dirt or let them come into contact with metallic pins or other metal objects.
 - · Do not use leaking batteries/battery packs.
 - When disposing of batteries/battery packs, insulate the terminals with tape or other means.

This may cause electric shock, explosion or fire.

If a battery/battery pack leaks and the material contacts your skin or clothing, flush the exposed area thoroughly with running water. In case of eye contact, flush thoroughly with copious amounts of clean running water and seek immediate medical assistance.

- Observe the following instructions when using a battery charger or AC adapter.
 - Periodically remove any dust buildup from the power plug and power outlet using a dry cloth.
 - · Do not plug in or unplug the product with wet hands.
 - · Do not use the product if the power plug is not fully inserted into the power outlet.
 - Do not expose the power plug and terminals to dirt or let them come into contact with metallic pins or other metal objects.
 - Do not touch the battery charger or AC adapter connected to a power outlet during lightning storms.
- Do not place heavy objects on the power cord. Do not damage, break or modify the power cord.
- Do not wrap the product in cloth or other materials when in use or shortly after use when the product is still warm in temperature.
- Do not unplug the product by pulling the power cord.
- Do not leave the product connected to a power source for long periods of time.
- Do not charge batteries/battery packs at temperatures outside the range of 5 40 °C (41 104 °F).
- This may cause electric shock, explosion or fire.
- Do not allow the product to maintain contact with the same area of skin for extended periods of time during use.

This may result in low-temperature contact burns, including skin redness and blistering, even if the product does not feel hot. The use of a tripod or similar equipment is recommended when using the product in hot places and for people with circulation problems or less sensitive skin.

• Follow any indications to turn off the product in places where its use is forbidden.

Not doing so may cause other equipment to malfunction due to the effect of electromagnetic waves and even result in accidents.

Follow the cautions below. Otherwise physical injury or property damage may result.

Do not fire the flash near the eyes.

CAUTION:

It may hurt the eyes.

Do not look at the screen or through the viewfinder for prolonged periods of time. This may induce symptoms similar to motion sickness. In such a case, stop using the product immediately and rest for a while before resuming use.

- Flash emits high temperatures when fired. Keep fingers, any other part of your body, and objects away from the flash unit while taking pictures.
- This may cause burns or malfunction of the flash.
- Do not leave the product in places exposed to extremely high or low temperatures.
- The product may become extremely hot/cold and cause burns or injury when touched.
- Strap is intended for use on the body only. Hanging the strap with any product attached on a hook or other object may damage the product. Also, do not shake the product or expose the product to strong impacts.
- Do not apply strong pressure on the lens or allow an object to hit it.

This may cause injury or damage to the product.

- Only mount the product on a tripod that is sufficiently sturdy.
- Do not carry the product when it is mounted on a tripod.

This may cause injury or may result in an accident.


Do not touch any parts inside the product.

This may cause injury.

 If any abnormal skin reaction or irritation occurs during or following the use of this product, refrain from further use and get medical advice/attention.

Do not touch the screen storage compartment (A), because its

temperature can increase by repeated continuous shooting for extended time or movie recording. This may cause burns.

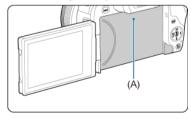

Camera care

- This camera is a precision instrument. Do not drop it or subject it to physical shock.
- The camera is not waterproof and cannot be used underwater. If the camera gets wet, contact a Canon Service Center immediately. Wipe off any water droplets with a dry and clean cloth. If the camera has been exposed to salty air, wipe it with a clean, well-wrung wet cloth.
- Never leave the camera near anything having a strong magnetic field such as a magnet or electric motor. Also, avoid using or leaving the camera near anything emitting strong radio waves, such as a large antenna. Strong magnetic fields can cause camera malfunction or destroy image data.
- Do not leave the camera in excessive heat, such as in a car in direct sunlight. High temperatures can cause the camera to malfunction.
- The camera contains precision electronic circuitry. Never attempt to disassemble the camera yourself.
- Do not block shutter curtain operation with your finger or other objects. Doing so may cause a malfunction.
- Only use a commercially available blower to blow away dust on the lens, viewfinder, or other parts. Do not use cleaners that contain organic solvents to clean the camera body or lens. For stubborn dirt, take the camera to the nearest Canon Service Center.
- Do not touch the camera's electrical contacts with your fingers. This is to prevent the contacts from corroding. Corroded contacts can cause camera malfunction.
- If the camera is suddenly brought in from the cold into a warm room, condensation may form on the camera and internal parts. To prevent condensation, first put the camera in a sealed plastic bag and let it adjust to the warmer temperature before taking it out of the bag.
- If condensation forms on the camera, to avoid damage, do not use the camera or remove the lens, card, or battery. Turn the camera off and wait until the moisture has fully evaporated before resuming use. Even after the camera is completely dry, if it is still internally cold, do not remove the lens, card, or battery until the camera has adjusted to the ambient temperature.
- If the camera will not be used for an extended period, remove the battery and store the
 camera in a cool, dry, well-ventilated location. Even while the camera is in storage,
 press the shutter button a few times once in a while to check that the camera is still
 working.
- Avoid storing the camera where there are chemicals that result in rust and corrosion such as in a chemical lab.
- If the camera has not been used for an extended period, test all its functions before using it. If you have not used the camera for some time or if there is an important shoot such as a foreign trip coming up, have the camera checked by your nearest Canon Service Center or check the camera yourself and make sure it is working properly.
- The camera may become hot after repeated continuous shooting or still photo/movie shooting over an extended period. This is not a malfunction.
- If there is a bright light source inside or outside the image area, ghosting may occur.
- When shooting with backlighting, keep the sun sufficiently away from the angle of view. Always keep intense light sources such as the sun, lasers, and other intense artificial light sources out of the image area and not near it. Concentrated intense light may cause smoke or damage the image sensor or other internal components.

 Attach the lens cap to prevent direct sunlight and other light from entering the lens when you are not shooting.

Screen and viewfinder

The following does not affect images captured by the camera.

- Although the screen and viewfinder are manufactured with very high precision technology with over 99.99% effective pixels, 0.01% or fewer of the pixels may be dead, and there may also be spots of black, red, or other colors. This is not a malfunction.
- If the screen is left on for a prolonged period, screen burn-in may occur where you see remnants of what was displayed. However, this is only temporary and will disappear when the camera is left unused for a few days.
- The screen display may seem slightly slow in low temperatures or may look black in high temperatures. It will return to normal at room temperature.

Cards

To protect the card and its recorded data, note the following:

- Do not drop, bend, or wet the card. Do not subject it to excessive force, physical shock, or vibration.
- Do not touch the card's electronic contacts with your fingers or anything metallic.
- Do not affix any stickers, etc. on the card.
- Do not store or use the card near anything that has a strong magnetic field, such as a television, speakers, or magnets. Also avoid places prone to having static electricity.
- Do not leave the card in direct sunlight or near a heat source.
- Store the card in a case.
- Do not store the card in hot, dusty, or humid locations.
- Cards may become hot after long sessions of repeated continuous shooting or still photo shooting/movie recording. This is not a malfunction.

Lens


 After detaching the lens from the camera, put down the lens with the rear end up and attach the rear lens cap to avoid scratching the lens surface and electrical contacts (1).




Smudges on the image sensor

Besides dust entering the camera from outside, in rare cases, lubricant from the camera's internal parts may adhere to the front of the sensor. If smudges are visible on images, have the sensor cleaned by a nearest Canon Service Center.

Attaching the Strap

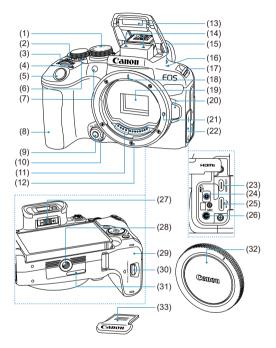

(1)	Mode dial
(2)	<lock> Multi-function lock button</lock>
(3)	< 🖳 > Main dial
(4)	< M-Fn > Multi-function button
(5)	Shutter button
(6)	Movie shooting button
(7)	AF-assist beam/red-eye reduction/self-timer/remote control lamp
(8)	Grip
(9)	Depth-of-field preview button
(10)	Focus mode switch
(11)	Contacts
(12)	Lens mount
(13)	Built-in flash
(14)	Microphone
(15)	Speaker
(16)	< 🕂 > Focal plane mark
(17)	Strap mount
(18)	RF lens mount index
(19)	Image sensor
(20)	Lens release button
(21)	Lens lock pin
(22)	Terminal cover
(23)	< HDMI OUT > HDMI micro OUT terminal
(24)	< û > Remote control terminal
(25)	< • 🚓 > Digital terminal
(26)	< MIC > External microphone IN terminal
(27)	Dioptric adjustment slider
(28)	Tripod socket
(29)	Card/battery compartment cover
(30)	Card/battery compartment cover lock
(31)	Serial number (body number)
(32)	Body cap
(33)	Shoe cover

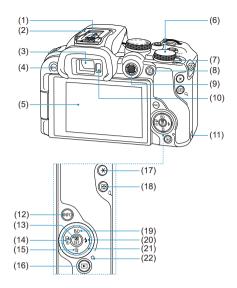


(1)	Flash sync contacts
(2)	Multi-function shoe
(3)	Viewfinder eyepiece
(4)	< MENU > Menu button
(5)	Screen
(6)	< 💭 > Quick control dial
(7)	< ON/OFF > Power switch
(8)	< AF > AF start button
(9)	< * > Multi-controller (can also be pressed straight in)
(10)	Viewfinder sensor
(11)	DC cord hole
(12)	< INFO > Info button
(13)	<
(14)	< ◀ / 및 / ॐ> Left/drive mode/self-timer selection button
(15)	< ▼ / m > Down/erase button
(16)	< > Playback button
(17)	< 🗙 > AE lock button
(18)	< Image: AF point selection/index/magnify/reduce button
(19)	< //ISO > Up/ISO speed setting button
(20)	< > / \$ > Right/flash button
(21)	< \diamond > Cross keys
(22)	Access lamp

Mode dial

The Mode dial is divided into Basic Zone and Creative Zone modes.

(1) Basic Zone

All you do is press the shutter button. The camera sets everything to suit the subject or scene for shooting.

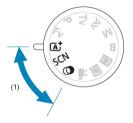

SCN : Special scene (2)


ú	Self Portrait	*	Panning
Ð	Portrait	÷,	<u>Close-up</u>
۹	Smooth skin	٣f	Food
iţî	Group Photo	N	Night Portrait
2	Landscape	2	Handheld Night Scene
П	Panoramic shot	ž	HIM HDR Backlight Control
×.	Sports		Silent shutter
ş,	Kids		

②: Creative filters (☑)

ß	Grainy B/W	₫	Miniature effect
2	Soft focus	HDR	HDR art standard
۵	Fish-eye effect	HDR	HDR art vivid
<.	Water painting effect	K HDR	HT HDR art bold
đ	Toy camera effect	HDR	HDR art embossed

(2) Creative Zone

These modes give you more control for shooting various subjects as desired.

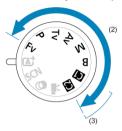

Fv	Flexible-priority AE		
Р	Program AE		
Tv Shutter-priority AE			
Av	Aperture-priority AE		
Manual exposure			
В	Long (bulb) exposures		

(3) Custom shooting modes

You can assign < Fv >, < P >, < Tv >, < Av >, < M >, < B >, AF operation, menu functions, and more to < **(**r) > or < (**(**r) > (**(**r)).


(4) Movie recording

For a variety of movie recording (2).



Battery Charger LC-E17


Charger for Battery Pack LP-E17 (2).

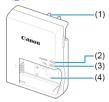


- (1) Power plug
- (2) Charge lamp
- (3) Full-charge lamp
- (4) Battery slots

Battery Charger LC-E17E

Charger for Battery Pack LP-E17 (2).

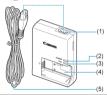

- (1) Power cord socket
- (2) Charge lamp
- (3) Full-charge lamp
- (4) Battery pack slot
- (5) Power cord

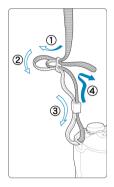

Pass the end of the strap through the strap mount from the bottom, then pass it through the strap buckle as shown. Pull the strap to take up any slack and make sure the strap will not loosen from the buckle.

Software

- Software Overview
- Downloading and Installing EOS Software or Other Dedicated Software
- Software Instruction Manuals

Software Overview

This section summarizes software used with EOS cameras. Note that downloading and installing the software requires an internet connection. The software cannot be downloaded or installed in environments without an internet connection.

EOS Utility

Enables you to transfer your captured still photos and movies from the camera to a connected computer, set various camera settings from the computer, and shoot remotely from the computer.

Digital Photo Professional

Software recommended for users who shoot RAW images. Enables image viewing, editing, printing, and more.

Picture Style Editor

Enables you to edit existing Picture Styles or create and save original Picture Style files. This software is for users who are familiar with image processing.

Always install the latest version of the software.

Update any previous versions that are installed by overwriting them with the latest version.

Caution

- Do not connect the camera to a computer before you install the software. The software will not be installed correctly.
- The software cannot be installed unless the computer is connected to the internet.
- Previous versions cannot display images from this camera correctly. Also, processing RAW images from this camera is not possible.

1. Download the software.

 Connect to the internet from a computer and access the following Canon website. https://cam.start.canon/



- Select your country or region of residence and download the software.
- Depending on the software, you may need to enter the camera's serial number. The serial number is on the bottom of the camera.
- Decompress it on the computer.

For Windows

Click the displayed installer file to start the installer.

For macOS

A dmg file will be created and displayed. Follow the steps below to startup the installer.

- 1.Double-click the dmg file.
 - A drive icon and installer file will appear on the desktop. If the installer file does not appear, double-click the drive icon to display it.

2.Double-click the installer file.

· The installer starts.

$\label{eq:2.1} \textbf{Follow the on-screen instructions to install the software.}$

Check the following website for software instruction manuals.


• https://cam.start.canon/




This chapter describes preparatory steps before you start shooting and the basic camera operations.

- · Charging the Battery
- Inserting/Removing the Battery and Card
- Using the Screen
- Turning on the Power
- Attaching and Detaching RF/RF-S Lenses
- Attaching and Detaching EF/EF-S Lenses
- <u>Multi-Function Shoe</u>
- Using the Viewfinder
- Basic Operations
- Menu Operations and Settings
- Quick Control
- <u>Touch-Screen Operation</u>

1. Detach the protective cover provided with the battery.

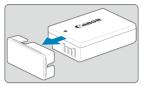

 $\label{eq:constraint} 2. \ \ {\rm Fully insert the battery into the charger}.$

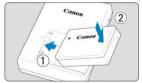

Do the opposite to remove the battery.

3. Charge the battery.

LC-E17




 Flip out the charger prongs as shown and plug the charger into a power outlet.

LC-E17E



 Connect the power cord to the charger and insert the plug into a power outlet.

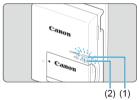

- Charging starts automatically and the charge lamp (1) lights up in orange.
- When the battery is fully charged, the full-charge lamp (2) will light up in green.
- Charging a depleted battery takes approx. 2 hr. at room temperature (23°C/73°F).

The time required to charge the battery will vary greatly depending on the ambient temperature and the battery's remaining capacity.

 For safety, charging in low temperatures (5–10°C/41–50°F) takes longer (up to approx. 4 hr.).

• Upon purchase, the battery is not fully charged. Charge the battery before use.

- Charge the battery on the day before or on the day it is to be used. Charged batteries gradually lose their charge, even when they are not used.
- After charging the battery, remove it and disconnect the charger from the power outlet.
- When not using the camera, remove the battery.

If the battery is left in the camera for a prolonged period, a small amount of power current will keep being released, resulting in excess discharge and shorter battery life. Store the battery with the protective cover attached. Storing the battery when it is fully charged may lower the battery performance.

• The battery charger can also be used in foreign countries.

The battery charger is compatible with a 100 V AC to 240 V AC 50/60 Hz power source. If necessary, attach a commercially available plug adapter for the respective country or region. Do not attach any portable voltage transformer to the battery charger. Doing so may damage the battery charger.

 If the battery becomes exhausted quickly even after having been fully charged, the battery has reached the end of its service life.

Check the battery's recharge performance (2) and purchase a new battery.

Caution

- After disconnecting the charger's power plug, do not touch the prongs for approx. 5 sec.
- The provided charger cannot charge any battery other than Battery Pack LP-E17.


Inserting/Removing the Battery and Card

- Insertion
- Formatting the Card
- Removal


Insert a fully charged Battery Pack LP-E17 and card in the camera. The captured images are recorded onto the card.

Insertion

1. Slide the card/battery compartment cover lock and open the cover.

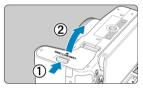


2. Insert the battery.

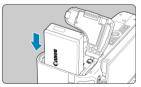

- Insert the end with the electrical contacts.
- Insert the battery until it locks in place.

3. Insert the card.

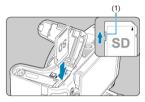

 Insert the card with the label facing the back of the camera until it clicks into place.

Caution

- Make sure the card's write-protect switch (1) is set upward to enable writing and erasing.
- 4. Close the cover.



Press the cover until it snaps shut.


Caution

You cannot use batteries other than the Battery Pack LP-E17.

Formatting the Card


If the card is new or was previously formatted (initialized) by another camera or computer, format the card with this camera (
).

1. Slide the card/battery compartment cover lock and open the cover.

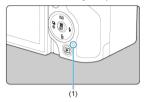


- Set the power switch to < OFF >.
- Make sure the access lamp (1) is off before opening the card/ battery compartment cover.
- If [Saving...] is displayed on the screen, close the cover.

2. Removing the battery.

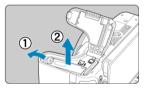


- Press the battery lock lever as shown by the arrow and remove the battery.

3. Remove the card.

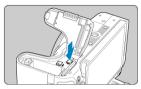

Gently push in the card, then let it go to eject.

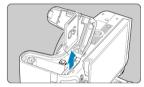

Pull the card straight out, then close the cover.

Caution

Do not remove cards immediately after a red [[[[1]]]]] icon is displayed as you are shooting. Cards may be hot, due to high internal camera temperature. Set the

power switch to < OFF > and stop shooting for a while before removing cards. Removing hot cards immediately after shooting may cause you to drop and damage them. Be careful when removing cards.

Note

- The number of shots available varies depending on remaining card capacity and settings such as image quality and ISO speed.
- Setting [1]: Release shutter without card] to [Disable] will prevent you from forgetting to insert a card (2).

Caution


- When the access lamp is lit or blinking, it indicates that images are being written to, read from, or erased from the card, or data is being transferred. Do not open the card/battery compartment cover. To avoid corrupting image data or damaging cards or the camera, never do any of the following while the access lamp is lit or blinking.
 - · Removing the card.
 - · Removing the battery.
 - · Shaking or striking the camera.
 - Unplugging or plugging in a power cord (when using optional household power outlet accessories).
- If the card already contains recorded images, the image number may not start from 0001 (2).
- If a card-related error message is displayed on the screen, remove and reinsert the card. If the error persists, use a different card.
 If you can transfer images on the card to a computer, transfer all the images and then format the card with the camera (*i*²₀). The card may then return to normal.
- Do not touch the card's contacts with your fingers or metal objects. Do not expose the contacts to dust or water. If smudges adhere to the contacts, contact failure may result.
- Multimedia cards (MMC) cannot be used. (Card error will be displayed.)
- Use of UHS-II microSDHC/SDXC cards with a microSD to SD adapter is not recommended.

When using UHS-II cards, use SDHC/SDXC cards.


Using the Screen

You can change the direction and angle of the screen.

1. Flip out the screen.

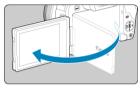

2. Rotate the screen.

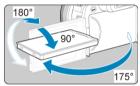

- When the screen is out, you can tilt it up or down or rotate it to face the subject.
- Indicated angles are only approximate.
- 3. Face it toward you.



Normally, use the camera with the screen facing you.

Caution

- Avoid forcing the screen into position as you rotate it, which puts undue pressure on the hinge.
- When a cable is connected to a camera terminal, the rotation angle range of the flipped-out screen will be limited.

Note

- Keep the screen closed and facing the camera body when the camera is not in use. You can protect the screen.
- A mirror image (right/left reversed) of subjects is displayed when the screen faces subjects in front of the camera.

- Setting the Date, Time, and Time Zone
- Changing the Interface Language
- Automatic Sensor Cleaning
- Battery Level Indicator



ON>

The camera turns on. You can now shoot still photos and record movies.

<OFF>

The camera is turned off and does not function. Set the power switch to this position when not using the camera.

Note

 If you set the power switch to < OFF > while an image is being recorded to the card, [Saving...] will be displayed and the power will turn off after the recording finishes.

Setting the Date, Time, and Time Zone

If you turn on the camera and the date/time/zone setting screen appears, see <u>Date/Time/</u> Zone to set the date/time/zone. To change the interface language, see Language.

- Whenever the power switch is set to < OFF >, the sensor is cleaned automatically (which may make a faint sound). During the sensor cleaning, the screen will display [.t__]. To enable automatic sensor cleaning when the power switch is set to < ON > as well, you can set this in [**Y**: Sensor cleaning] ((a)).
- If you repeatedly turn the power switch to < ON > or < OFF > within a short time period, the [.m] icon may not be displayed, but this does not indicate the camera is malfunctioning.

When the power switch is set to $\langle ON \rangle$, the battery level will be indicated.



Battery level is sufficient.
Battery level is low, but the camera can still be used.
Battery will be exhausted soon (blinks).
Charge the battery.

Note

- Doing any of the following will exhaust the battery faster:
 - · Pressing the shutter button halfway for a prolonged period.
 - · Activating the AF frequently without taking a picture.
 - · Using Image Stabilizer.
 - · Using the Wi-Fi function or Bluetooth function.
 - · Using the screen frequently.
 - · Using accessories compatible with the multi-function shoe.
- The number of available shots may decrease depending on the actual shooting conditions.
- Lens operations are powered by the camera's battery. Certain lenses may exhaust the battery faster than others.
- See [See] See [See] See [See] See
- In low ambient temperatures, shooting may not be possible even with a sufficient battery level.

Attaching a Lens

Detaching a Lens


Caution

- Do not look at the sun directly through any lens. Doing so may cause loss of vision.
- When attaching or detaching a lens, set the camera's power switch to < OFF >.
- If the front part (focusing ring) of the lens rotates during autofocusing, do not touch the rotating part.


Tips for avoiding smudges and dust

- When changing lenses, do it quickly in a place with minimal dust.
- When storing the camera without a lens attached, be sure to attach the body cap to the camera.
- Remove smudges and dust on the body cap before attaching it.

1. Remove the caps.

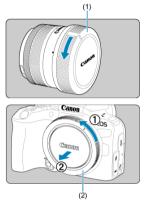

- Remove the rear lens cap (1) and body cap (2) by turning them as shown by the arrows.
- 2. Attach the lens.

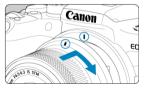

 Align the red mount index on the lens with the red mount index on the camera and turn the lens as shown by the arrow until it clicks in place.

- 3. Set the focus mode to (< AF >).
 - < AF > stands for autofocus.
 - < MF > stands for manual focus. Autofocus is disabled.
 - For RF lenses without a focus mode switch
 - With [♥: ♥ switch (AF/MF)] set to [Enable] (ஂ), set the focus mode switch on the front of the camera to < AF >.




With [Y: O switch (AF/MF)] set to [Disable] ((), set [AF: Focus mode] to [AF].

Ô	AF	►		((†))	Ý	D	*
1 2	3	4	5	6			
							_
					<mark>AF</mark> MF		
Foc	us mo	bde			MF		


• For RF lenses with a focus mode switch

Set the lens focus mode switch to < AF >. The setting on the lens takes precedence, and the camera's focus mode switch and [Υ : **Q** switch (AF/MF)] setting have no effect.

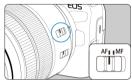

4. Remove the front lens cap.

While pressing the lens release button, turn the lens as shown by the arrow.

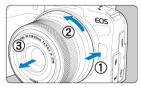

- Turn the lens until it stops, then detach it.
- Attach the rear lens cap to the lens you removed.


Attaching a Lens

Detaching a Lens


All EF and EF-S lenses can be used by attaching an optional Mount Adapter EF-EOS R. The camera cannot be used with EF-M lenses.

Attaching a Lens


1. Remove the caps.

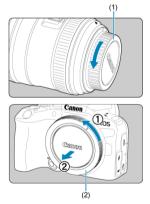


 Remove the rear lens cap (1) and body cap (2) by turning them as shown by the arrows. 2. Attach the lens to the adapter.

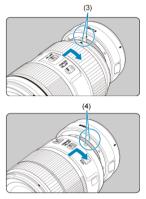

- Align the red or white mount index on the lens with the corresponding mount index on the adapter and turn the lens as shown by the arrow until it clicks into place.
 - (3) Red index
 - (4) White index
- $\textbf{3.} \quad \textbf{Attach the adapter to the camera.}$

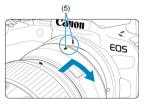


 Align the red mount indexes (5) on the adapter and camera and turn the lens as shown by the arrow until it clicks into place. 4. Set the lens's focus mode switch to < AF >.

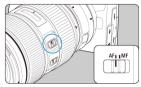


- < AF > stands for autofocus.
- < MF > stands for manual focus. Autofocus will not operate.
- 5. Remove the front lens cap.

1. While pressing the lens release button, turn the adapter as shown by the arrow.

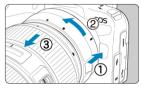

Turn the lens until it stops, then detach it.

2. Detach the lens from the adapter.

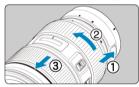

- Hold down the lens release lever on the adapter and turn the lens counterclockwise.
- Turn the lens until it stops, then detach it.
- Attach the rear lens cap to the lens you removed.

Caution

• For lens precautions, see <u>Attaching and Detaching RF/RF-S Lenses</u>.


Multi-Function Shoe

Using the Multi-Function Shoe

The multi-function shoe is a hot shoe that supplies power to accessories and offers advanced communication functionality.

Using the Multi-Function Shoe

Removing the shoe cover

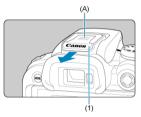


Remove the shoe cover (1) by pressing the part labeled (A) in the figure as shown with your finger. After removal, keep the shoe cover in a convenient place to avoid losing it.

Attaching accessories

- When attaching accessories that communicate through contacts of the multi-function shoe, insert the accessory's mounting foot until it clicks into place, then slide the mounting foot locking lever to secure it. For details, refer to the accessory's Instruction Manual.
- The following accessories cannot be attached directly to the multi-function shoe.
 - Speedlite EL-1/600EXII-RT/600EX-RT/580EX II
 - Speedlite Transmitter ST-E3-RT (Ver. 2)/ST-E3-RT
 - Off-Camera Shoe Cord OC-E3
- To use the accessories listed above with the camera, you will need Multi-Function Shoe Adapter AD-E1, sold separately. For details, refer to the AD-E1 Instruction Manual.
- When attaching accessories other than these that are designed for regular hot shoes, insert the accessory's mounting foot all the way in, then slide the mounting foot locking lever to secure it. For details, refer to the accessory's Instruction Manual.
- Electronic Viewfinder EVF-DC2/EVF-DC1 cannot be attached to the multi-function shoe. Attempting to attach the accessories by force may damage them or the multi-function shoe.

Attaching the shoe cover

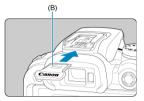

- After removing accessories from the multi-function shoe, reattach the shoe cover to
 protect the contacts from dust and water.
- Slide the shoe cover all the way in by pressing the part labeled (B) in the figure, as shown.

Caution

- Attach accessories correctly as described in <u>Attaching accessories</u>. Incorrect attachment may cause the camera or accessories to malfunction, and accessories may fall off.
- Blow off any foreign material on the multi-function shoe with a commercially available blower or similar tool.
- If the multi-function shoe becomes wet, turn off the camera and allow it to dry before use.
- Use the shoe cover included with the camera.

Dioptric Adjustment

Look through the viewfinder to activate it. You can also restrict display to either the screen or viewfinder (愛).

Dioptric Adjustment

1. Slide the dioptric adjustment slider.



Slide the slider left or right to make the viewfinder display look sharp.

Caution

- The viewfinder and screen cannot be activated at the same time.
- Viewfinder display is disabled when the screen is flipped out, even if you look through the viewfinder.
- At some aspect ratios, black bars are displayed on the top and bottom or left and right edges of the screen. These areas are not recorded.


Basic Operations

- Holding the Camera
- Shutter Button
- 🗹 < 🚰 > Main Dial

- ≤ M-Fn ≥ Multi-Function Button
- ≤LOCK > Multi-Function Lock Button
- ✓ ≤ INFO ≥ Info Button


Viewing the screen as you shoot

As you shoot, you can tilt the screen to adjust it. For details, see Using the Screen.

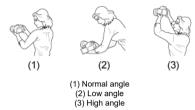

Shooting through the viewfinder

To obtain sharp images, hold the camera still to minimize camera shake.

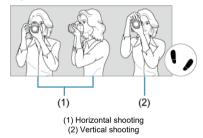

1.With your right hand, hold the camera firmly by the camera grip.

2.With your left hand, support the lens from below.

3.Rest your right index finger lightly on the shutter button.

4.Rest your arms and elbows lightly against the front of your body.

5.To maintain a stable stance, place one foot slightly ahead of the other.

6.Hold the camera near your face and look through the viewfinder.

The shutter button has two steps. You can press the shutter button halfway. Then you can further press the shutter button completely.


Pressing halfway



This activates autofocusing and the automatic exposure system that sets the shutter speed and aperture value.

The exposure value (shutter speed and aperture value) is displayed on the screen or in the viewfinder for 8 sec. (metering timer/ \mathring{O} 8).

Pressing completely

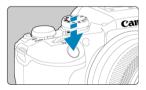

This releases the shutter and takes the picture.

• Preventing camera shake


Hand-held camera movement during the moment of exposure is called camera shake. It can cause blurred pictures. To prevent camera shake, note the following:

- · Hold the camera still, as shown in Holding the Camera.
- Press the shutter button halfway to autofocus, then slowly press the shutter button completely.

Note

- The camera will still pause before taking a picture if you press the shutter button completely without pressing it halfway first, or if you press the shutter button halfway and immediately press it completely.
- Even during menu display or image playback, you can return to shooting standby by pressing the shutter button halfway.

(1) After pressing a button, turn the < 🖄 > dial.

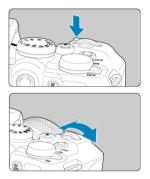


Press a button such as <M-Fn > or < ISO >, then turn the $< E^{+} > dial$.

If you press the shutter button halfway, the camera will go back to shooting standby.

 Used for operations such as setting the ISO speed, drive mode, AF operation, white balance, and flash exposure compensation.

(2) Turn only the < 🖳 > dial.

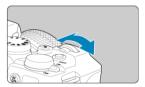


While looking at the screen or viewfinder, turn the < $\sum_{i=1}^{n}$ > dial.

• Use this dial to set the shutter speed, aperture value, etc.

7 Note

 The operations in (1) can be performed even when controls are locked with the Multi-function lock (2).

(1) After pressing a button, turn the < \bigcirc > dial.

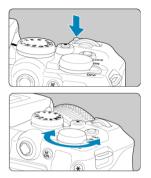


Press a button such as < M-Fn > or < ISO >, then turn the < $\sqrt[3]{2}$ > dial.

If you press the shutter button halfway, the camera will go back to shooting standby.

 Used for operations such as selecting the ISO speed, drive mode, AF operation, white balance, and flash exposure compensation.

(2) Turn only the $< \bigcirc >$ dial.

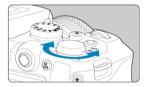


While looking at the screen or viewfinder, turn the < 500 > dial.

 Used for operations such as setting the exposure compensation amount and the aperture value setting for manual exposures.


Note

 The operations in (1) can be performed even when controls are locked with the Multi-function lock (2). < is an eight-direction key with center button. To use it, press lightly with the tip of your thumb.

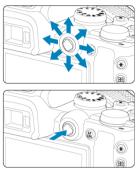

- Examples of using the Multi-controller
 - · AF point/magnified frame movement in still photo shooting or movie recording
 - · White balance correction
 - · Magnified area position movement during playback
 - · Quick Control
 - · Selecting or setting menu items


<M-Fn > Multi-Function Button

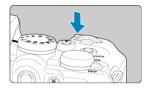


By pressing the < M-Fn > button and turning the < M > dial, you can set the ISO speed (\mathcal{O}), drive mode (\mathcal{O}), AF operation (\mathcal{O}), white balance (\mathcal{O}), and flash exposure compensation (\mathcal{O}).


To select the AF area, press the $< \square >$ button, then press the $< M - F_n >$ button (O6).

Equivalent to pressing the shutter button halfway (in Creative Zone modes).

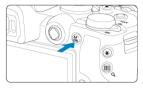

Configuring [Ψ : Multi function lock] ((2)) and pressing the < LOCK > button prevents settings from being changed by accidentally touching the Main dial, Quick control dial, Multi-controller, control ring, or touch-screen panel. Press the < LOCK > button again to unlock the controls.

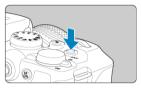


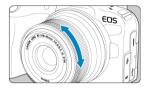

By default, exposure compensation can be set by turning the control ring of RF lenses or mount adapters while pressing the shutter button halfway in $\langle FV \rangle$, $\langle P \rangle$, $\langle TV \rangle$, $\langle AV \rangle$, or $\langle M \rangle$ mode. Otherwise, you can assign a different function to the control ring by customizing operations in [Ω : Customize dials] (\mathcal{C}).




Each press of the < |NFO| > button changes the information shown. The following sample screens are for still photos.

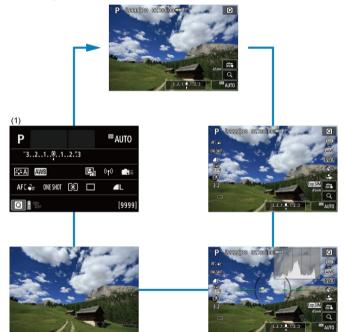

* In Basic Zone modes, the screen by (1) is not displayed.

- Basic Zone Menu Screen
- Creative Zone Menu Screen
- Menu Setting Procedure
- Dimmed Menu Items

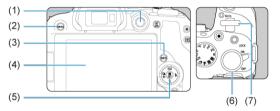

 (1)
 < ★ > Multi-controller

 (2)
 < MENU > button


 (3)
 < INFO > button

 (4)
 Screen

 (5)
 < > button


 (6)
 < > > Quick control dial

 (7)
 < ∑ > Main dial

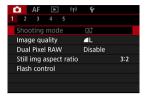


* In Basic Zone modes, some tabs and menu items are not displayed.

Creative Zone Menu Screen

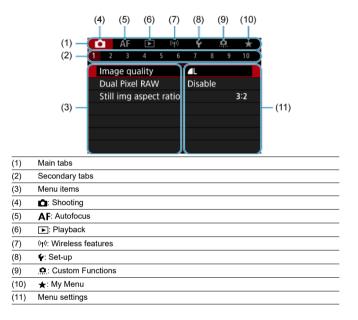

1. Display the menu screen.

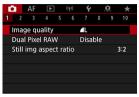

Press the < MENU > button to display the menu screen.

2. Select a tab.

- Press the < INFO > button to switch between main tabs (groups of functions).
- Turn the < is > dial to select a secondary tab.

3. Select an item.



● Turn the < २००२ > dial to select an item, then press the < இ > button.

4. Select an option.



- Turn the < S > dial to select an option.
- The current setting is indicated in blue.

5. Set an option.



Press the < (R) > button to set it.

6. Exit the setting.

Press the < MENU > button to return to shooting standby.

Note The description of menu functions hereafter assumes that you have pressed the < MENU > button to display the menu screen.

- Menu operations are also possible by tapping the menu screen or using < < > or < * >.
- To cancel the operation, press the < MENU > button.

Example: When set to single shooting drive mode



Dimmed menu items cannot be set. The menu item is dimmed if another function setting is overriding it.

□HHigh speed display						
Not available because of the associated function's setting. • Drive mode						
ОК						

You can see the overriding function by selecting the dimmed menu item and pressing the $\langle \langle R \rangle >$ button.

If you cancel the overriding function's setting, the dimmed menu item will become settable.

0	Caution
•	You may not be able to see the overriding function for certain dimmed menu items.
	Note
•	You can reset menu functions to the default settings by selecting [Basic settings] in [Ý : Reset camera] (愛).

Quick Control

You can directly and intuitively select and set the settings displayed.

1. Press the < B > button (O10).



2. Select a setting item and set your preferred option.



- Select an item by using the < ▲ > < ▼ > keys or pressing < ※ > up or down.
- Adjust the setting by turning the < ²/₂²/₂ > dial, using the < ◀> < ▶> keys, or pressing < ^{*}/₃ > left or right. Some items are set by pressing a button after this.

Р				60	AUTO	
⁻3210123 🖬			5 ≱±0			
i a	WB WB	WB	P.	((†))		
AFE 📑	ONE SHOT	۲			IL	
Exposure comp./AEB setting						

- Press < ◆ > or < ※ > up, down, left, or right to select an item on the screen shown above.
- Turn the < ²⁰/₂₀ > or < ⁵/₂₀ > dial to adjust the setting. Some items are set by pressing a button after this.

- Tapping
- Dragging



Sample screen (Quick Control)



- Use your finger to tap (touch briefly and then remove your finger from) the screen.
- For example, when you tap [Q], the Quick Control screen appears. By tapping [_], you can return to the preceding screen.

Note

- To have the camera beep for touch operations, set [: Beep] to [Enable] (2).
- Responsiveness to touch operations can be adjusted in [": Touch control] (").

Sample screen (Menu screen)



Slide your finger while touching the screen.

This chapter describes how to use the Basic Zone modes on the Mode dial for best results. With Basic Zone modes, all you do is point and shoot, and the camera sets everything automatically.





- <u>A+: Fully Automatic Shooting (Scene Intelligent Auto)</u>
- Special Scene Mode
 - Self Portrait Mode
 - Portrait Mode
 - Smooth Skin Mode
 - Group Photo Mode
 - Landscape Mode
 - Panoramic Shot Mode
 - Sports Mode
 - Kids Mode
 - Panning Mode
 - <u>Close-up Mode</u>
 - Food Mode
 - Night Portrait Mode
 - Handheld Night Scene Mode
 - HDR Backlight Control Mode
 - Silent Shutter Mode
- Creative Filters Mode

- R **Shooting Moving Subjects**
- ø Scene Icons
- R **Adjusting Settings**
- R Shooting with Effects Applied (Creative Assist)

< [] > is a fully automatic mode. The camera analyzes the scene and sets the optimum settings automatically. It can also adjust focus automatically on either the still or moving subject by detecting the motion of the subject (2).







2. Press the < >> button.




۲ Read the message and select [OK]. 3. Aim the camera at what you will shoot (the subject).



- An AF point (1) may be displayed on the subject, under some shooting conditions.
- When an AF point is displayed on the screen, aim it over the subject.

4. Focus on the subject.

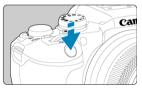


Press the shutter button halfway to focus.

If < 4 > blinks, manually raise the built-in flash.

- You can also focus by tapping a person's face or other subject on the screen (Touch AF).
- Once the subject is in focus, that AF point turns green and the camera beeps (One-Shot AF).
- An AF point in focus on a moving subject turns blue and tracks subject movement (Servo AF).

5. Take the picture.

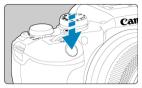

- Press the shutter button completely to take the picture.
- The image just captured will be displayed for approx. 2 sec. on the screen.
- To retract the built-in flash, push it down with your fingers.

Caution

 Subject movement (whether subjects are still or moving) may not be detected correctly for some subject or shooting conditions.

Note

- AF operation (One-Shot AF or Servo AF) is set automatically when you press the shutter button halfway. Even when automatically set to One-Shot AF, the camera will switch to Servo AF if subject motion is detected while you are pressing the shutter button halfway.
- The < (<u>A</u>⁺ > mode makes the colors look more impressive in nature, outdoor, and sunset scenes. If you do not obtain the desired color tones, change the mode to a Creative Zone mode (<u>C</u>) and select a Picture Style other than [<u>----A</u>], then shoot again (<u>C</u>).

Minimizing blurred photos

- Be careful about camera shake in handheld shots. To avoid camera shake, consider using a tripod. Use a sturdy tripod that can bear the weight of the shooting equipment. Attach the camera securely to the tripod.

? FAQ

Focusing is not possible (indicated by an orange AF point).

Aim the AF point over an area with good contrast, then press the shutter button halfway (
). If you are too close to the subject, move away and shoot again.

Multiple AF points are displayed simultaneously.

Focus has been achieved at all those points.

The shutter speed display is blinking.

Since it is too dark, taking the picture may result in a blurred subject due to camera shake. Using a tripod, the built-in flash, or an external flash (
) is recommended.

Pictures are too dark.

Raise the built-in flash in advance to enable automatic flash firing, in case subjects in daytime shots are backlit, or when shooting under low light.

Pictures taken with flash are too bright.

Pictures may be bright (overexposed) if you shoot subjects at close range in flash photography. Move away from the subject and shoot again.

• The bottom part of pictures taken with flash is unnaturally dark.

Shooting subjects that are too close may make the shadow of the lens visible in your shots. Move away from the subject and shoot again. If you are using a lens hood, try removing it before shooting.

Note

Note the following if you are not using the built-in flash.

- Under low light, when camera shake tends to occur, hold the camera steady or use a tripod. When using a zoom lens, you can reduce the blur caused by camera shake by setting the lens to the wide-angle end.
- When shooting portraits under low light, tell subjects to stay still until you have finished shooting. Any movement as you shoot will make the person look blurry in the picture.



Pressing the shutter button halfway tracks moving subjects to keep them in focus. Keep the subject on the screen as you hold down the shutter button halfway, and at the decisive moment, press the shutter button completely.



The camera detects the scene type and sets everything automatically to suit the scene. An icon representing the detected scene appears in the upper left of the screen () in still photo shooting, or when you press the movie shooting button to record a movie with the Mode dial set to $< \textcircled{}_{+} >$.

Adjusting Settings



By touching icons on the screen, you can adjust settings for drive mode, image quality, Touch Shutter, and Creative Assist.

1. Press the < > button.



- Read the message and select [OK].
- 2. Select an effect.



● Use the < ﷺ > dial to select an effect, then press the < ∰ > button.

3. Select the effect level and other details.



- Set with the < 2 > dial, then press the < () > button.
- To reset the setting, press the < ★ > button, then select [OK].

Creative Assist effects

[] Preset

Select one of the preset effects. Note that [Saturation], [Color tone 1], and [Color tone 2] are not available with [B&W].

● [<u>▲</u>] Background blur

Adjust background blur. Choose higher values to make backgrounds sharper. To blur the background, choose lower values. [Auto] adjusts background blurring to match the brightness. Depending on lens brightness (f/number), some positions may not be available.

[*] Brightness

Adjust image brightness.

- [①] Contrast Adjust contrast.
- [] Saturation
 Adjust the vividness of colors.
- [①] Color tone 1 Adjust amber/blue color tone.
- [①] Color tone 2 Adjust green/magenta color tone.
- [] Monochrome Set the toning effect for monochrome shooting.

Note

- [Background blur] is not available in flash photography.
- These settings are reset when you switch shooting modes or set the power switch to < OFF >. To save the settings, set [C: Retain Creative Assist data] to [Enable].

Saving effects

To save the current setting to the camera, tap [INFO] Register] on the [Creative Assist] setting screen, then select [OK]. Up to three presets can be saved as [USER*]. After three have been saved, an existing [USER*] preset must be overwritten to save a new one.

The camera will automatically choose the appropriate settings when you select a shooting mode for your subject or scene.

* < **SCN** > stands for Special Scene.

1.

- Set the Mode dial to < SCN >.
- 2. Press the < >> button.



3. Select a shooting mode.



Use the < 10 km select a shooting mode, then press the < (R) > button.

4. Review the settings.



Press the < () > button to display the Quick Control screen.

Note

- You can also set the shooting mode in [: Shooting mode].
- When [♥: Mode guide] is set to [Disable], after step 1, press the < (ℝ) > button to access the Quick Control screen, use the < (≧) > dial to select a shooting mode, then press the < (ℝ) > button.

Available Shooting Modes in <SCN> Mode

Shooting Mode							
úa	Self Portrait	*	Panning				
Ð	Portrait		<u>Close-up</u>				
۹	Smooth skin	٣f	Food				
iţi	Group Photo	N	Night Portrait				
2	Landscape	2	Handheld Night Scene				
П	Panoramic shot	ž	HR Backlight Control				
Ř	Sports		Silent shutter				
ş,	Kids		·				

To take shots that include yourself, use [iii] (Self Portrait) mode. Rotate the screen around toward the lens. Customizable image processing includes skin smoothing as well as brightness and background adjustment to make yourself stand out.



The Shooting tips

Set the brightness and smooth skin effect.
 [Brightness] and [Smooth skin effect] can be set in a range of five levels. In [Background], you can adjust the level of background blurring.

Tap the screen to shoot.


Besides pressing the shutter button completely to shoot, you can also shoot by tapping the screen, once you enable Touch Shutter by tapping [66] to change it to [C1] (60).

Caution

- After the camera achieves focus, do not change the distance between you and the camera until the picture is taken.
- Be careful not to drop the camera.

Note

 You can also take shots of yourself in shooting modes other than [Self Portrait] (except [Silent shutter]) by rotating the screen toward the front and tapping [in the lower left. Use [] (Portrait) mode to blur the background and make the person you shoot stand out. It also makes skin tones and hair look softer.

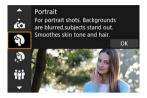

* Shooting tips

 Select the location where the distance between the subject and the background is the farthest.

The further the distance between the subject and background, the more blurred the background will look. The subject will also stand out better against an uncluttered dark background.

Use a telephoto lens.

If you have a zoom lens, use the telephoto end to fill the frame with the subject from the waist up.

Focus on the face.

As you focus before shooting, make sure the AF point on the subject's face is green. When shooting close-ups of faces, you can set [**AF**: **Eye detection**] to [**Enable**] to shoot with the subject's eyes in focus.

Shoot continuously.

The default setting is [] (Low speed continuous). If you keep holding down the shutter button, you can shoot continuously to capture changes in the subject's facial expression and pose.

Use [?] (Smooth skin) mode to make skin look more attractive. Image processing makes skin look smoother.



V Shooting tips

Enable the camera to detect faces.

Frames are displayed around any main subjects detected for skin smoothing. For more effective skin smoothing, you can move closer to or farther from the subject so that the frame is displayed on the subject's face.

Focus on the face.

As you focus before shooting, make sure the AF point on the subject's face is green.

When shooting close-ups of faces, you can set [AF: Eye detection] to [Enable] to shoot with the subject's eyes in focus.

Caution

 Areas other than people's skin may be modified, depending on the shooting conditions.

Group Photo Mode

Use [iii] (Group Photo) mode to take group photos. You can shoot with people from the front to the back all in focus.



V Shooting tips

Use a wide-angle lens.

With zoom lenses, zooming out near the wide-angle end makes it easier to focus on everyone in front and back at once. You can also increase the depth of field by standing a little farther away from subjects, so that they fit completely in the frame.

Take a few shots of the group.

It is a good idea to take a few shots, because people sometimes blink.

Note

Hold the camera steady or use a tripod when shooting indoors or under low light.

- The angle of view changes slightly, due to distortion correction.
- Not all people may be in focus, depending on shooting conditions.

Use [14] (Landscape) mode for expansive scenery, to keep everything in focus from near to far. For vivid blues and greens, and sharp and crisp images.



V Shooting tips

- With a zoom lens, use the wide-angle end. When using a zoom lens, set the lens to the wide-angle end to make the objects near and far in focus. It also adds breadth to landscapes.
- Keep the camera steady when shooting night scenes. Using a tripod is recommended.

Caution

Flash photography is not available.

Use [□□] (Panoramic Shot) mode to shoot panoramas. The panorama is created by combining shots captured in continuous shooting as you move the camera in one direction while pressing the shutter button completely.



1. Choose a shooting direction.



- An arrow is displayed showing the direction to move the camera.

2. Press the shutter button halfway.

• Keeping the shutter button pressed halfway, focus on the subject.

3. Shoot.



- Press the shutter button completely and move the camera at a constant speed in the direction of the arrow.
- The area displayed clearly (1) is captured.
- A shooting progress indicator (2) is displayed.
- Shooting stops when you release the shutter button, or when all of the progress indicator is white.

Caution

- For details on lenses that can counteract blur from swinging the camera, visit the Canon website (
).
- In some scenes, images you intended to capture may not be saved as expected, and the panorama may not look as expected.
- Shooting may stop midway if you move the camera too slowly or quickly. However, the panorama created up to that point will still be saved.
- In consideration of the large sizes of < > mode images, use a computer or other device to reduce panorama images if you will print them from a memory card inserted in a Canon printer.

If panoramas cannot be managed correctly by software or Web services, try resizing them on a computer.

Shots of the following subjects and scenes may not be combined correctly.

- · Subjects in motion
- · Subjects at close range
- · Scenes where the contrast varies greatly
- · Scenes with long stretches of the same color or pattern, such as the sea or sky
- Shooting is not affected by any correction applied to counteract blur from swinging the camera.
- Move the camera slowly when using a lens with a long focal length, or when shooting night scenes or under low light.

Use [(Sports) mode to shoot subjects in motion, such as runners or moving vehicles.



Shooting tips

Use a telephoto lens.

Use of a telephoto lens is recommended to enable shooting from a distance.

Track the subject with the Area AF frame.

An Area AF frame appears after you press the shutter button halfway. Once the subject is in focus, the AF point turns blue.

Shoot continuously.

The default setting is []] (High speed continuous). At the decisive moment, press the shutter button completely to take the picture. To track the subject and capture changes as it moves, keep holding down the shutter button to shoot continuously.

- Under low light where camera shake tends to occur, the shutter speed value in the lower left will blink. Hold the camera steady and shoot.
- Flash photography is not available.

Kids Mode

Use [\$] (Kids) mode to capture active children who are moving around. Skin tones will look vibrant.





Shooting tips

Track the subject with the Area AF frame.

By default, [**AF**: **AF** area] is set to [**Whole area AF**]. Area AF frames (1) appear when you press the shutter button halfway. Once the subject is in focus, the AF point turns blue.

Shoot continuously.

The default setting is []] (High speed continuous). At the decisive moment, press the shutter button completely to take the picture. To track the subject and capture changes in facial expression and movement, keep holding down the shutter button to shoot continuously.

Caution

Using an external flash unit will reduce the continuous shooting speed.

Panning Mode

By panning, you can blur the background to convey a sense of speed.

Attach a lens compatible with [;] (Panning) mode to reduce subject blurring and keep subjects clear and sharp.



🍄 Shooting tips

• Turn the camera to follow the moving subject.

As you shoot, turn the camera smoothly while tracking the moving subject. With the AF point over the part of the moving subject to focus on, press the shutter button halfway, start turning the camera to keep up with the subject, then press the shutter button completely to shoot. Continue tracking the subject with the camera after this.

Set the level of background motion blur.

In [Effect], you can set the level of background motion blur. Set to [Effect: max] for a slower shutter speed and more background motion blur around subjects. If subject blur is excessive, reduce it by setting [Effect] to [Effect: med] or [Effect: min].

- For details on lenses compatible with [; mode, visit the Canon website ().
- Shutter speeds are slower. For this reason, Panning mode is not suitable unless you pan as you shoot.
- AF area options are limited to [1-point AF], [Flexible Zone AF 1], [Flexible Zone AF 2], and [Flexible Zone AF 3].
- The default setting is []]. Note that []H] is not available.
- Flash photography is not available.
- Although lens IS is applied to images captured with lenses supporting [image, the effect is not shown on the screen as you shoot. (IS and subject blur correction are activated when you shoot, regardless of the lens IS setting.)
- With lenses that do not support [implicit and implicit a
- Your specified panning effect level may not be applied when shooting under bright light (such as on sunny summer days), or when shooting slow subjects.
- The following subjects or shooting conditions may prevent suitable subject blur correction with lenses supporting [36] mode.
 - · Subjects with very low contrast.
 - · Subjects in low light.
 - · Strongly backlit or reflective subjects.
 - · Subjects with repetitive patterns.
 - · Subjects with few patterns, or with monotone patterns.
 - · Subjects with reflections (such as images reflected in glass).
 - · Subjects smaller than the Zone AF frame.
 - · Multiple subjects moving within a Zone AF frame.
 - · Subjects moving in irregular directions or at irregular speeds.
 - Subjects who sometimes move erratically (such as runners who move up and down as they run).
 - Subjects whose speed changes greatly (such as immediately after initial movement, or when moving along a curve).
 - · When the camera moves too quickly or slowly.
 - · When camera movement does not match subject movement.
 - · With long lens focal lengths.

Use [] (Close-up) mode for close-ups of small subjects such as flowers. To make small things appear much larger, use a macro lens (sold separately).



V Shooting tips

- Use a simple background. A simple background makes small objects such as flowers stand out better.
- Move in as close as possible to the subject.
 Check the lens for its minimum focusing distance.
 The lens minimum focusing distance is many and for the compared to the c

is measured from the < - + > (focal plane) mark on the top of the camera to the subject. Focusing is not possible if you are too close.

With a zoom lens, use the telephoto end.

If you have a zoom lens, using the telephoto end will make the subject look larger.

When [4] blinks

Manually raise the built-in flash.

Use [14] (Food) mode for culinary photography. The photo will look bright and appetizing. Also, the reddish tinge due to the light source will be suppressed in the pictures taken under tungsten lights, etc.



🌾 Shooting tips

Change the color tone.

[Color tone] can be adjusted. To increase the reddish tinge of food, set toward [Warm tone] (red), or set toward [Cool tone] (blue) if it looks too red.

- The warm color cast of subjects may fade.
- When multiple light sources are included in the scene, the warm color cast of the picture may not be reduced.
- In flash photography, [Color tone] switches to the standard setting.
- If there are people in the picture, the skin tone may not be reproduced properly.

Use [**b**] (Night Portrait) mode for bright, beautiful shots of people with night scenes in the background. **Note that shooting in this mode requires the built-in flash or a Speedlite.** Using a tripod is recommended.



The Shooting tips

Use a wide-angle lens and a tripod.

When using a zoom lens, use the wide-angle end to obtain a wide night view. Because camera shake occurs in handheld shooting, using a tripod is also recommended.

Check the image brightness.

It is recommended to play back the captured image on location to check the image brightness. If the subject looks dark, move nearer and shoot again.

Also shoot in other shooting modes.

Consider also shooting in < 🔥 > and 🚰 mode, because shots are more likely to be blurry.

Caution

- Tell subjects to remain still for a moment after the flash fires.
- Focusing may be difficult if subject faces look dark when you shoot. In this case, set the focus mode to MF (2) and focus manually.
- Autofocusing at night or in dark scenes may be difficult when points of light lie within the AF point. In this case, set the focus mode to MF (2) and focus manually.
- Shots will look slightly different from the preview image shown on the screen.

Note

The self-timer lamp fires briefly after shots in this mode if the self-timer is used.

[1] (Handheld Night Scene) mode enables handheld shooting for night scenes. In this shooting mode, four shots are taken consecutively for each picture, and the resulting image with reduced camera shake is recorded.



🍄 Shooting tips

Hold the camera steady.

Keep your elbows close to your body to hold the camera steady ((2)). In this mode, four shots are aligned and merged into a single image, but if there is significant misalignment in any of the four shots due to camera shake, they may not align properly in the final image.

- Compared to other shooting modes, the image area will be smaller.
- RAW image quality cannot be set.
- Flash photography is not available.
- Autofocusing at night or in dark scenes may be difficult when points of light lie within the AF point. In this case, set the focus mode to MF (2) and focus manually.
- Shooting moving subjects may result in afterimages from the movement, or darkness around the subject.
- The image alignment may not function properly with repetitive patterns (lattice, stripes, etc.), flat or single-tone images, or images significantly misaligned due to camera shake.
- It takes some time to record images to the card since they are merged after shooting. "BUSY" appears on the screen as images are processed, and shooting is not possible until processing is finished.
- Shots will look slightly different from the preview image shown on the screen.

Use [於] (圖HDR Backlight Control) mode for backlit scenes with both bright and dark areas. Shooting once in this mode captures three consecutive images at different exposures, which are combined to create a single HDR image that retains detail in shadows that might otherwise be lost from backlighting.

* HDR stands for High Dynamic Range.



V Shooting tips


Hold the camera steady.

Keep your elbows close to your body to hold the camera steady ((2)). In this mode, three shots are aligned and merged into a single image. However, if there is significant misalignment in any of the three shots due to camera shake, they may not align properly in the final image.

- Compared to other shooting modes, the image area will be smaller.
- RAW image quality cannot be set.
- Flash photography is not available.
- Note that the image may not be rendered with a smooth gradation and may look irregular or have significant noise.
- HDR Backlight Control may not be effective for excessively backlit scenes or extremely high-contrast scenes.
- When shooting subjects that are sufficiently bright as they are, for example for normally lit scenes, the image may look unnatural due to the HDR effect.
- Shooting moving subjects may result in afterimages from the movement, or darkness around the subject.
- The image alignment may not function properly with repetitive patterns (lattice, stripes, etc.), flat or single-tone images, or images significantly misaligned due to camera shake.
- It takes some time to record images to the card since they are merged after shooting. "BUSY" appears on the screen as images are processed, and shooting is not possible until processing is finished.

Silent Shutter Mode

Where silence is needed, you can shoot without beeps or shutter release sounds.

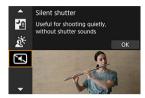

V Shooting tips

Take some test shots.

Consider taking some test shots in advance, because lens aperture and focusing adjustment may be audible under some shooting conditions.

- Be responsible when using silent shooting, and respect subject privacy and portrait rights.
- Images of fast-moving subjects may look distorted.
- Continuous shooting and flash photography are not available.

- Creative Filter Characteristics
- Adjusting the Miniature Effect

You can shoot with filter effects applied. Filter effects can be previewed before you shoot.

1. Set the Mode dial to $< \bigcirc >$.



2. Press the < (B) > button.



3. Select a filter effect.



- Turn the < >> dial to select a filter effect (>>), then press the < >> button.
- The image is shown with the filter effect applied.

4. Adjust the effect and shoot.



- Press the < (B) > button and select an icon below [Creative filters] (except 個/ Chor, Stor, Stor, 10 Stor).
- Turn the < 2 > dial to adjust the effect, then press the < < > button.

- These operations are also possible by using < \$\$> or < \$\$>.
- RAW and RAW+JPEG are not available. When RAW image quality is set, images are captured with a image quality. When RAW+JPEG image quality is set, images are captured with the specified JPEG image quality.
- Continuous shooting is not available when [♣], [♣], [♠], [√], [◯], or [♣] is set.

Note

- With [Grainy B/W], the grainy preview will differ somewhat from the appearance of your shots.
- With [Soft focus] or [Miniature effect] options, the blurred effect preview may differ somewhat from the appearance of your shots.
- No histogram is displayed.
- A magnified view is not available.
- In Creative Zone modes, some Creative filter settings are available from the Quick Control screen (2).

Grainy B/W

Makes the image grainy and black and white. By adjusting the contrast, you can change the black-and-white effect.

Soft focus

Gives the image a soft look. By adjusting the blur, you can change the degree of softness.

Fish-eye effect

Gives the effect of a fish-eye lens. The image will have barrel distortion. Depending on the level of this filter effect, the area trimmed along the periphery of the image changes. Also, because this filter effect magnifies the center of the image, the apparent resolution at the center may degrade depending on the number of recorded pixels, so set the filter effect while checking the resulting image. One AF point is used, fixed at the center.

Water painting effect

Makes the photo look like a watercolor painting with soft colors. By adjusting the effect, you can change the color density. Note that night scenes or dark scenes may not be rendered with a smooth gradation and may look irregular or have significant noise.

Toy camera effect

Shifts colors to those typical of toy cameras and darkens the four corners of the image. Color tone options can be used to change the color cast.

Miniature effect

Creates a diorama effect.

Shooting under the default setting will keep the center looking sharp.

To move the area that looks sharp (the scene frame), see <u>Adjusting the Miniature Effect</u>. [1-point AF] is used as the AF area. Shooting with the AF point and scene frame aligned is recommended.

King Height HDR art standard

Photos retain more detail in highlights and shadows. With reduced contrast and flatter gradation, the finish resembles a painting. The subject outlines will have bright (or dark) edges.

HDR art vivid

Colors are more saturated than with [IMB] HDR art standard], and the low contrast and flat gradation resemble graphic art.

King HDR art bold

The colors are the most saturated, making the subject pop out, and the picture looks like an oil painting.

• 👔 HDR art embossed

The color saturation, brightness, contrast and gradation are decreased to make the picture look flat, so that the picture looks faded and old. The subject outlines will have intensely bright (or dark) edges.

Caution

Precautions for [THDR], [THDR], [THDR], and [THDR]

- Compared to other shooting modes, the image area will be smaller.
- Shots will look slightly different from the filter effect previews shown on the screen.
- Shooting moving subjects may result in afterimages from the movement, or darkness around the subject.
- The image alignment may not function properly with repetitive patterns (lattice, stripes, etc.), flat or single-tone images, or images significantly misaligned due to camera shake.
- Be careful about camera shake in handheld shots.
- Subjects such as the sky or white walls may not be rendered with smooth gradation and may have noise or irregular exposure or colors.
- Shooting under fluorescent or LED lighting may result in unnatural color reproduction of the illuminated areas.
- It takes some time to record images to the card since they are merged after shooting. "BUSY" appears on the screen as images are processed, and shooting is not possible until processing is finished.
- Flash photography is not available.

Note

With [\$\screwthinksing], [\$\screwthinksing], and [\$\screwthinksing], you can shoot high dynamic range photos that retain detail in highlights and shadows of high-contrast scenes. Three consecutive images are captured at different brightnesses each time you shoot and used to create a single image. See the precautions for [\$\screwthinksing], [\$\screwthinksing], and [\$\screwthinksing].

1. Move the scene frame.



- Use the scene frame to set an area that will look sharp.
- To make the scene frame movable (displayed in orange), press the < [...] > button or tap [...] in the lower right of the screen. By tapping [[...]], you can also switch between vertical and horizontal scene frame orientation. Switching scene frame orientation is also possible with the < ◀ > < ▶ > keys when in horizontal orientation and < ▲ > < ♥ > keys when in vertical orientation.
- To move the scene frame, use the < [™]/_ℓ > dial or < ▲ > < ▼ > < ◀ > < ► > keys. To center the scene frame again, press the < INFO > button.
- To return to positioning the AF point, press the < I > button again.
- To confirm the position of the scene frame, press the < () > button.

2. Move the AF point as needed and shoot.



- The AF point turns orange and can be moved.
- Press the < ▲ > < ▼ > < ◀ > < ► > keys to move the AF point to the position to focus on.
- Aligning the AF point and scene frame is recommended.
- To return the AF point to the center of the screen, tap [].
- To confirm the position of the AF point, press the < () > button.

Creative Zone

Creative Zone modes give you the freedom to shoot in a variety of ways by setting your preferred shutter speed, aperture value, exposure, and more.



- To clear the shooting mode description displayed when you turn the Mode dial, press the < (B) > button ((a)).
 - Fv: Flexible-Priority AE
 - P: Program AE
 - <u>Tv: Shutter-Priority AE</u>
 - Av: Aperture-Priority AE
 - M: Manual Exposure
 - B: Long (Bulb) Exposures

In this mode, you can set shutter speed, aperture value, and ISO speed manually or automatically and combine these settings with your choice of exposure compensation. Shooting in < Fv > mode, with control over each of these parameters, is equivalent to shooting in < P >, < Tv >, < Av >, or < M > mode.

* < **FV** > stands for Flexible value.





2. Set the shutter speed, aperture value, and ISO speed.



- Turn the < 5, > dial to select an item to set. [2014] appears to the left of the selected item.
- Turn the < is > dial to set the option.
- To reset the setting to [AUTO], press the < m > button.

3. Set the amount of exposure compensation.



- Turn the < Use > dial and select the exposure level indicator.
 appears to the left of the exposure level indicator.
- Turn the < 200 > dial to set the option.
- To reset the setting to [±0], press the < m > button.

Combinations of functions in < Fv > mode

Shutter Speed	Aperture Value	ISO Speed	Exposure Compensation	Shooting Mode
[AUTO]	[AUTO]	[AUTO]	Available	Similar to < \mathbf{P} >
		Manual selection		
Manual selection	[AUTO]	[AUTO]	Available	Similar to < Tv >
		Manual selection		
[AUTO]	Manual selection	[AUTO]	Available	Similar to < Av >
		Manual selection		
Manual selection	Manual selection	[AUTO]	Available	Similar to < M >
		Manual selection	-	

Caution

Blinking of the values indicates a risk of underexposure or overexposure. Adjust the
exposure until the value stops blinking.


Slow synchro is not used under low light when you have set up < FV > mode to resemble < AV > or < P > mode, even when [Slow synchro] in [D: Flash control] is set to [1/250-30 sec. auto] (or [1/200-30sec. auto]).

Note

- Values for shutter speed, aperture value, and ISO speed that are set to [AUTO] are underlined.
- You can set the shutter speed, aperture value, and ISO speed to [AUTO] and the exposure compensation amount to [±0] in step 2 or 3 by pressing the < m > button.

The camera automatically sets the shutter speed and aperture value to suit the subject's brightness.

- * < **P** > stands for Program.
- * AE stands for Auto Exposure.
 - 1. Set the Mode dial to < P >.

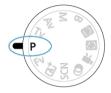

2. Focus on the subject.



- Aim the AF point over the subject and press the shutter button halfway.
- Once the subject is in focus, the AF point turns green (with One-Shot AF).
- The shutter speed and aperture value are set automatically.


3. Check the display.



 As long as the exposure value is not blinking, standard exposure will be obtained.

4. Take the picture.

Compose the shot and press the shutter button completely.

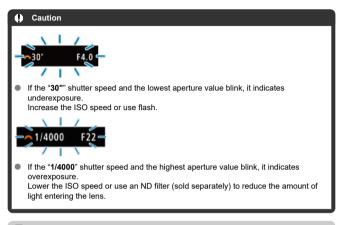

Note

Differences between $\langle \mathbf{P} \rangle$ and $\langle \mathbf{A}^{\dagger} \rangle$ modes

< (A) > mode limits available functions and sets the AF area, metering mode, and many other functions automatically to prevent bad shots. In contrast, < P > mode only sets the shutter speed and aperture value automatically, and you can freely set the AF area, metering mode, and other functions.

Program shift

- In < P > mode, you can freely change the combination (program) of shutter speed and aperture value set automatically by the camera while maintaining the same exposure. This is called Program shift.
- With Program shift, you can press the shutter button halfway, then turn the < in shift, you can press the shutter button halfway, then turn the < in shift, you can press the shutter button halfway.
- Program shift will be canceled automatically when the metering timer ends (exposure setting display turns off).
- Program shift cannot be used with flash.

In this mode, you set the shutter speed and the camera automatically sets the aperture value to obtain the standard exposure matching the brightness of the subject. A faster shutter speed can freeze the action of a moving subject. A slower shutter speed can create a blurred effect, giving the impression of motion.

* < **Tv** > stands for Time value.



Blurred motion (Slow speed: 1/30 sec.)



Frozen motion (Fast speed: 1/2000 sec.)


1. Set the Mode dial to < Tv >.



2. Set the desired shutter speed.



- Turn the < in > dial to set it.
- 3. Focus on the subject.

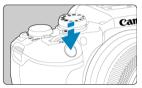

- Press the shutter button halfway.
- The aperture value is set automatically.
- 4. Check the display and shoot.



 As long as the aperture value is not blinking, the standard exposure will be obtained.

Caution 1/500 44.05 If the lowest aperture value blinks, it indicates underexposure. Turn the < >> dial to set a slower shutter speed until the aperture value stops blinking or set a higher ISO speed. 1/15 F225 If the highest aperture value blinks, it indicates overexposure. Turn the < >> dial to set a faster shutter speed until the aperture value stops blinking, or set a lower ISO speed.

Note

Shutter speed display

• For example, "0"5" indicates 0.5 sec. and "15"", 15 sec.

Depth-of-Field Preview

In this mode, you set the desired aperture value and the camera sets the shutter speed automatically to obtain the standard exposure matching the subject brightness. A higher f/ number (smaller aperture hole) will make more of the foreground and background fall within acceptable focus. On the other hand, a lower f/number (larger aperture hole) will make less of the foreground and background fall within acceptable focus.


* < Av > stands for Aperture value (aperture opening).



Blurred background (With a low aperture value: f/5.6)



Sharp foreground and background (With a high aperture value: f/32)

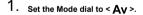



2. Set the desired aperture value.




- Turn the < i > dial to set it.
- 3. Focus on the subject.



- Press the shutter button halfway.
- The shutter speed is set automatically.
- 4. Check the display and shoot.



 As long as the shutter speed is not blinking, the standard exposure will be obtained.

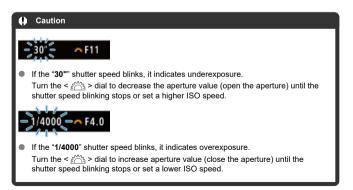


Note

Aperture value display

 The higher the value, the smaller the aperture opening will be. The aperture value displayed varies depending on the lens. If no lens is attached to the camera, "F00" will be displayed for the aperture.

Depth-of-Field Preview

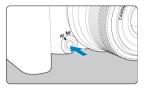

Press the depth-of-field preview button to stop down the lens to the current aperture value setting and check the area in focus (depth of field).



- The larger the aperture value, the wider the area in focus, from the foreground to the background.
- The depth-of-field effect is readily apparent on images as you change the aperture value and press the depth-of-field preview button.
- Exposure is locked (AE lock) as you hold down the depth-of-field preview button.

Exposure Compensation with ISO Auto

In this mode, you set both the shutter speed and aperture value as desired. To determine the exposure, refer to the exposure level indicator or use a commercially available exposure meter.

* < M > stands for Manual.

1. Set the Mode dial to < M>.



- 2. Set the ISO speed (2).
 - Press the < |SO > button to set it.
 - With ISO Auto, you can set exposure compensation (2).
- 3. Set the shutter speed and aperture value.



To set the shutter speed, turn the < 1 > dial, and to set the aperture value, turn the < 2 > dial.

4. Focus on the subject.



- Press the shutter button halfway.
- Check the exposure level mark []] to see how far the current exposure level is from the standard exposure level.
- (1) Standard exposure index
- (2) Exposure level mark
- 5. Set the exposure and take the picture.



 Check the exposure level indicator and set the desired shutter speed and aperture value.

Exposure Compensation with ISO Auto

If the ISO speed is set to [AUTO] for manual exposure shooting, you can set exposure compensation (😰) as follows:

- Tap the exposure level indicator
- [C: Expo.comp./AEB]
- Turn the control ring while pressing the shutter button halfway

- Exposure may not be as expected when ISO Auto is set, because the ISO speed is adjusted to ensure standard exposure for your specified shutter speed and aperture value. In this case, set the exposure compensation.
- Exposure compensation is not applied in flash photography with ISO Auto, even if you have set an exposure compensation amount.


Note

- ISO speed is locked when you hold down the shutter button halfway after subjects are in focus with One-Shot AF in < M > mode with ISO Auto, <
 (Evaluative metering), and [.⁰.: AE lock meter. mode after focus] set to the default setting (²/₆).
- When ISO Auto is set, you can press the < ★ > button to lock the ISO speed.
- If you press the < ★ > button and recompose the shot, you can see the exposure level difference on the exposure level indicator compared to when the < ★ > button was pressed.
- Any existing exposure compensation amount is maintained if you switch to < M > mode with ISO Auto after using exposure compensation in < P >, < Tv >, or
 Av > mode (②).
- To coordinate exposure compensation in ½-stop increments with ISO speed set in ½-stop increments when [Ω]: Exposure level increments] is set to [1/2-stop] and used with ISO Auto, exposure compensation is further adjusted by adjusting shutter speed. However, the shutter speed displayed will not change.


Bulb Timer

In this mode, the shutter stays open as long as you hold down the shutter button completely, and closes when you let go of the shutter button. Use bulb exposures for night scenes, fireworks, astrophotography, and other subjects requiring long exposures.

1. Set the Mode dial to < B >.

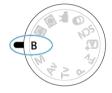

2. Set the desired aperture value.

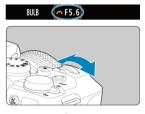

Turn the < is > dial to set it.

3. Take the picture.

- The exposure will continue for as long as you keep the shutter button pressed completely.
- Elapsed exposure time is displayed on the screen.

Caution

- Do not point the camera toward an intense light source, such as the sun or an intense artificial light source. Doing so may damage the image sensor or the camera's internal components.
- Long bulb exposures produce more noise in the image than usual.
- ISO 400 is used when the camera is set to ISO Auto.
- When shooting bulb exposures with the self-timer instead of the bulb timer, keep
 pressing the shutter button completely (for the self-timer time and bulb exposure
 time).

Note

- You can reduce the noise generated during long exposures by using [Long exp. noise reduction] (2).
- Using a tripod and the bulb timer is recommended for bulb exposures.
- You can also shoot bulb exposures with Remote Switch RS-60E3 (sold separately, 2).
- You can also shoot bulb exposures with Wireless Remote Control BR-E1 (sold separately). When you press the remote controller's release (transmit) button, the bulb exposure will start immediately or 2 sec. later. Press the button again to stop the bulb exposure.

Bulb Timer

☆

You can set the exposure time for bulb exposures in advance. This feature eliminates the need to keep holding down the shutter button during bulb exposures, which can reduce camera shake.

Note that the bulb timer can only be set and will only take effect in < ${f B}$ > (bulb exposure) mode.

- AF
 Image: Provide the provided and the provi
- 1. Select [D: Bulb timer].

2. Select [Enable].



Select [Enable], then press the < INFO > button.

3. Set the exposure time.

Adjust exposure time
Enter hours:minutes:seconds
00:03:00
•
OK Cancel

- Select an option (hours : minutes : seconds).
- Press the < () > button to display ().
- Set a value, then press the < ()> button. (Returns to [□].)

4. Select [OK].



5. Take the picture.

- After you press the shutter button completely, the bulb exposure continues for your specified time.
- [TIMER] and the exposure time are displayed on the screen during bulb timer shooting.
- To clear the timer setting, select [Disable] in step 2.

Caution

- Bulb exposure stops if you press the shutter button completely and release it during the timer. Note that setting the power switch to < OFF > ends bulb timer shooting when the camera is set to [Shooting creative filters].
- Bulb exposure continues even after your specified exposure time if you keep
 pressing the shutter button completely (which overrides automatic stopping when
 your specified exposure time elapses).
- The bulb timer is cleared (and reverts to [Disable]) when you switch shooting modes.

Flash Photography

This chapter describes how to shoot with the built-in flash or an external flash (EL/EX series Speedlites).

☆ to the right of page titles indicates functions only available in Creative Zone modes (< Fy >/< P >/< Ay >/< M>/< B>).


0	Caution
	Flash photography is not available with [C: Shutter mode] set to [Electronic]. Flash cannot be used while you are recording movies. AEB is not available in flash photography.

- Shooting with the Built-in Flash
- Flash Function Settings
- Shooting with Speedlites ☆


Shooting with FE Lock

Using the built-in flash is recommended when the [4] icon appears in the viewfinder or on the screen, when subjects in daytime shots are backlit, or when shooting under low light.

1. Manually raise the flash.

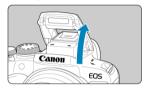

- In Creative Zone modes, shooting with flash is possible whenever the flash is raised.
- [BUSY] is displayed on the screen while the flash is charging.
- 2. Press the shutter button halfway.
 - Confirm that [4] appears on the screen.
- 3. Take the picture.

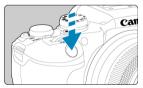

- When focus is achieved and you press the shutter button completely, the flash will fire at all times.
- To retract the built-in flash after shooting, push it down with your fingers until it clicks into place.

The Shooting tips

In bright light, decrease the ISO speed.

If the exposure setting in the viewfinder blinks, decrease the ISO speed.

Detach the lens hood. Do not get too close to the subject.

If the lens has a hood attached or you are too close to the subject, the bottom of the picture may look dark due to the obstructed flash light. For important shots, play back the image and check to make sure the picture does not look unnaturally dark at the bottom part.

Caution

Do not use the built-in flash unless it is fully raised.

Note


 If the bottom of images is dark when you use super telephoto or large-diameter lenses, consider using an external Speedlite (sold separately, 2).

Shooting with FE Lock

☆

The background or other factors may make subjects brighter or darker in flash photography with subjects near the edge of the screen. In this case, use FE lock. After setting the flash output for the appropriate subject brightness, you can recompose (put the subject toward the side) and shoot. This feature can also be used with a Canon EL/EX series Speedlite. * FE stands for Flash Exposure.

1. Manually raise the flash.

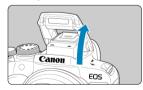

Press the shutter button halfway and confirm that [4] appears on the screen.

- 2. Focus on the subject.
- 3. Press the < \times > button (\odot 16).



- Center the subject on the screen, then press the < ★ > button.
- A preflash is fired by the flash, and the flash output required for shooting is retained.



- [FEL] appears briefly on the screen, and [\$*] is lit.
- Each time you press the < ★ > button, a preflash is fired, and the flash output required for shooting is retained.
- 4. Take the picture.



Compose the shot and press the shutter button completely.

Caution


• The [4] icon blinks when subjects are too far away and your shots would be dark. Approach the subject and repeat steps 2–4.

- Flash Firing
- <u>E-TTL Balance</u>
 ☆
- E-TTL II Flash Metering
- Continuous Flash Control
- Red-Eye Reduction
- Slow Synchro ☆
- Built-in Flash Function Settings
- External Flash Function Settings
- External Flash Custom Function Settings
- Clearing Flash Function Settings/C.Fn Settings

Functions of the built-in flash or external EL/EX series Speedlites can be set from menu screens on the camera.

Before setting functions of external Speedlites, attach the Speedlite and turn it on. For details on external Speedlite functions, refer to the Speedlite's instruction manual.

1. Select [C: Flash control].

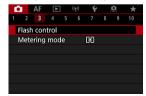

2. Select an option.

Flash control	
Flash firing	4
E-TTL balance	Standard
E-TTL II meter.	Eval (FacePrty)
Contin flash ctrl	E-TTL each shot
Red-eye reduc.	Disable
Slow synchro	^{1/250} A
Clear settings	MENU ᠫ

Flash Firing

Flash firing		
	Fire	
\$ A	4	(\mathfrak{S})
		SET OK

- Set to [\$^] (in Basic Zone or < P > modes) to have the flash fire automatically, based on shooting conditions.
- Set to [4] to have the flash always fire when you shoot.
- Select [1] (in Creative Zone modes) to keep the flash off, or if you will use the AF-assist beam.

Flash control	
E-TTL balance	Ambience priority Standard Flash priority

You can set your preferred appearance (balance) for flash shots. This setting enables you to adjust the ratio of ambient light to Speedlite light output.

- Set the balance to [Ambience priority] to lower the proportion of flash output and uses ambient light to produce lifelike shots with a natural mood. Especially useful when shooting dark scenes (indoors, for example). After switching to < Av > or < P > mode, consider setting [Slow synchro] in [1]: Flash control] to [1/250-30 sec. auto] (or [1/200-30sec. auto]) and using slow-sync shooting.
- Set the balance to [Flash priority] to make the flash the main source of light. Useful for reducing shadows on subjects and in the background from ambient light.

Caution

For some scenes, [Ambience priority] may yield the same results as [Standard].

Flash control	
E-TTL II meter.	Eval (FacePrty)
	Evaluative
	Average


- Set to [Eval (FacePrty)] for flash metering suitable for shots of people.
- Set to [Evaluative] for flash metering that emphasizes firing in continuous shooting.
- If [Average] is set, the flash exposure will be averaged for the entire metered scene.

Note

Depending on the scene, flash exposure compensation may be necessary.

Caution

 Even when [Eval (FacePrty)] is set, some subjects and shooting conditions may prevent you from obtaining the expected result.

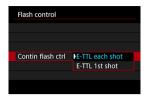

- Set to [E-TTL each shot] to perform flash metering for each shot.
- Set to [E-TTL 1st shot] to perform flash metering for only the first shot before continuous shooting. The flash output level for the first shot is applied to all subsequent shots. Useful when prioritizing continuous shooting speed without recomposing shots.

Caution

- Any subject movement in continuous shooting may cause exposure problems.
- [E-TTL 1st shot] is set automatically in []] drive mode.

Flash control		
Red-eye reduc.	Disable	
	Enable	

Set to [Enable] to reduce red-eye by firing the red-eye reduction lamp before firing the flash.

You can set the flash-sync speed for flash photography in < A_V > or < P > mode. Note that the maximum flash synchronization speed varies depending on the [\bigcirc : Shutter mode] setting. It is 1/250 sec. when set to [Elec. 1st-curtain] and 1/200 sec. when set to [Mechanical].

☆

Slow synchro	
1/250-30sec. auto	1/250 -30" A
1/250-1/60sec. auto	1/250 A
1/250 sec. (fixed)	1/250
Mechanical 1/20	0-1/60 sec.
Elec. 1st-curtain 1/25	0-1/60 sec.
INFO Help	SET OK

1/250-30 sec. auto (^{1/250}_{-30"}A)*1

Shutter speed is automatically set in the following range to suit brightness. High-speed sync is also possible.

[C: Shutter mode] Setting	Shutter Speed
Mechanical	1/200-30 sec.
Elec. 1st-curtain	1/250-30 sec.

1/250-1/60 sec. auto (^{1/250}_{-1/60}A)*1

Prevents a slow shutter speed from being set automatically in low-light conditions. Effective for preventing subject blur and camera shake. Light from the flash provides standard exposure for subjects, but note that backgrounds may be dark.

[D: Shutter mode] Setting	Shutter Speed
Mechanical	1/200-1/60 sec.
Elec. 1st-curtain	1/250-1/60 sec.

1/250 sec. (fixed) (1/250)*1

Shutter speed is fixed as follows, which is more effective in preventing subject blur and camera shake than with [1/250-1/60 sec. auto].

[C: Shutter mode] Setting	Shutter Speed
Mechanical	1/200 sec.
Elec. 1st-curtain	1/250 sec.

However, in low light, the subject's background will come out darker than with [1/250-1/60 sec. auto].

* 1: When set to [Elec. 1st-curtain].

Caution

 High-speed sync is not available in < P > or < Av > mode when set to [1/250 sec. (fixed)].

1
.1.:2


Flash mode

Built-in flash settings			
Flash mode	E-TTL II		
	Manual flash		

- Set to [E-TTL II] to shoot in E-TTL II/E-TTL fully automatic flash mode.
- Set to [Manual flash] to specify your preferred flash output in [Laflash output].

Built-in flash sett	ings	
▲flash output	Maximum Medium	
	Minimum	

Shutter sync.

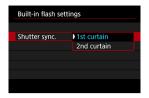

Normally, set to [1st curtain] so that the flash fires immediately after shooting starts. Set to [2nd curtain] and use low shutter speeds for natural-looking shots of subject motion trails, such as car headlights.

Caution

 When using second-curtain synchronization, set the shutter speed to 1/30 sec. or slower. For shutter speeds exceeding 1/40 sec., first-curtain synchronization is used automatically even if [2nd curtain] is set.

Aexp. comp.

Set the flash exposure compensation if the brightness of the subject does not come out as desired (so you want to adjust the flash output) in flash photography.

1. Select [Sexp. comp.].

Shutter sync. 1st curtain
Shutter sync. Ist curtain
▶exp. comp. 2101.

2. Set the compensation amount.



- To brighten flash exposure, set the compensation amount toward [Brighter] (positive compensation), or to darken it, set toward [Darker] (negative compensation).
- After taking the picture, cancel the flash exposure compensation by setting it back to 0.

Caution

- Setting [D: Auto Lighting Optimizer] (2) to an option other than [Disable] may still cause images to look bright even if you set negative flash exposure compensation for darker exposure.
- If flash exposure compensation is set with a Speedlite (sold separately, g), you
 cannot set the flash exposure compensation with the camera (Quick Control or
 external flash function setting). Note that the Speedlite's setting overrides the
 camera's if both are set at the same time.

Note

 The exposure compensation amount will remain in effect even after you set the power switch to < OFF >. The information displayed on the screen, position of display, and available options vary depending on the Speedlite model, its Custom Function settings, the flash mode, and other factors. Refer to the instruction manual of your flash unit for details on its functions.

Sample display



- (1) Flash mode
- (2) Wireless functions/
 - Firing ratio control (RATIO)
- (3) Flash zoom (flash coverage)
- (4) Shutter synchronization
- (5) Flash exposure compensation
- (6) Flash exposure bracketing

Caution

 Functions are limited when using EX series Speedlites that are not compatible with flash function settings.

Flash mode

You can select the flash mode to suit your desired flash photography.



- [E-TTL II flash metering] is the standard mode of EL/EX series Speedlites for automatic flash photography.
- [Manual flash] is for setting the Speedlite's [Flash output level] yourself.
- [CSP] (Continuous shooting priority mode) is available when using a compatible Speedlite. This mode automatically reduces flash output by one stop and increases ISO speed by one stop. Useful in continuous shooting, and helps conserve flash battery power.
- Regarding other flash modes, refer to the Instruction Manual of a Speedlite compatible with the respective flash mode.

Caution

Adjust exposure compensation (2) as needed in case of overexposure from flash photography with [CSP] in < Fy >, < Ty >, or < M > mode.

Note

With [CSP], ISO speed is automatically set to [Auto].

Wireless functions

Wireless functi	ons	
N	ireless:0	ff
WIRELESS	((†))	~
	(II)	
		SET OK

You can use radio or optical wireless transmission to shoot with wireless multiple-flash lighting.

For details on wireless flash, refer to the Instruction Manual of a Speedlite compatible with wireless flash photography.

Firing ratio control (RATIO)

Firing ratio control		
Firing ratio co	ontrol:Disable	
RATIO	RATIO	
	SET O	К

With a macro flash, you can set the firing ratio control.

For details on firing ratio control, refer to the Instruction Manual of the macro flash.

Flash zoom (flash coverage)

Flash zoom					
Auto					
AUTO	20	24	28	35	50
70	80	105	135	200	
					10000
				LS	ET OK

With Speedlites having a zooming flash head, you can set the flash coverage.

Shutter synchronization



Normally, set this to [First-curtain synchronization] so that the flash fires immediately after the shooting starts.

Set to [Second-curtain synchronization] and use low shutter speeds for natural-looking shots of subject motion trails, such as car headlights.

Set to [High-speed synchronization] for flash photography at higher shutter speeds than the maximum flash sync shutter speed. This is effective when shooting with an open

aperture in < Av > mode to blur the background behind subjects outdoors in daylight, for example.

Caution

 When using second-curtain synchronization, set the shutter speed to 1/30 sec. or slower. If the shutter speed is 1/40 sec. or faster, first-curtain synchronization will be applied automatically even if [Second-curtain synchronization] is set.

Flash exposure compensation




Just as exposure compensation is adjustable, you can also adjust flash output of external Speedlites.



 If flash exposure compensation is set with the Speedlite, you cannot set the flash exposure compensation with the camera. Note that the Speedlite's setting overrides the camera's if both are set at the same time.

Flash exposure bracketing

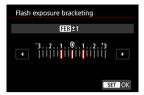


Speedlites equipped with flash exposure bracketing (FEB) can change the external flash output automatically as three shots are taken at once.

For details on the external Speedlite's Custom Functions, refer to the Speedlite's Instruction Manual.

1. Select [External flash C.Fn setting].

Flash control	
Contin flash ctrl	E-TTL each shot
Red-eye reduc.	Disable
Slow synchro	^{1/250} A
Built-in flash setti	ings
External flash fun	c. setting
External flash C.F.	n setting
Clear settings	MENU ᠫ

2. Set the desired functions.

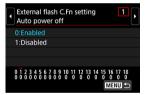

- Select the number.
- Select an option.

Caution

- With an EL/EX series Speedlite, the Speedlite will always fire at full output if the [Flash metering mode] Custom Function is set to [1:TTL] (autoflash).
- Setting or clearing Speedlite Personal Functions (P.Fn) is not possible from the camera's [D: External flash func. setting] screen. Set it directly on the Speedlite.

1. Select [Clear settings].

Flash control		
Contin flash ctrl	E-TTL each shot	
Red-eye reduc.	Disable	
Slow synchro	^{1/250} A	
Built-in flash setti	ngs	
External flash fun	c. setting	
External flash C.Fn setting		
Clear settings	MENU 🕤	

2. Select the settings to be cleared.



- Select [Clear built-in flash set.], [Clear external flash set.], or [Clear ext. flash C.Fn set.].
- Select [OK] on the confirmation screen to clear all flash settings or Custom Function settings.

- EL/EX Series Speedlites for EOS Cameras
- Canon Speedlites Other Than the EL/EX Series
- Non-Canon Flash Units

EL/EX Series Speedlites for EOS Cameras

Features of EL/EX series Speedlites (sold separately) can be used in flash photography with the camera.

For instructions, refer to the EL/EX series Speedlite's Instruction Manual.

Sync speed

Varies depending on the shutter mode.

[C: Shutter mode] Setting	Sync Speed
Mechanical	1/200 sec. or slower
Elec. 1st-curtain	1/250 sec. or slower

Flash exposure compensation

You can adjust flash output (flash exposure compensation). With an image displayed on the screen, press the $\langle M-F_n \rangle$ button, turn the $\langle \bigcup_{i=1}^{N} \rangle$ dial to select the flash exposure compensation item, then turn the $\langle \bigsqcup_{i=1}^{N} \rangle$ dial to set the flash exposure compensation amount.

FE Lock

This enables you to obtain appropriate flash exposure for a specific part of the subject. Aim the viewfinder center over the subject, press the camera's $< \frac{1}{2}$ > button, then compose the shot and take the picture.

Caution

- Some Speedlites cannot be attached directly to this camera. For details, see <u>Multi-Function Shoe</u>.
- Setting [: Auto Lighting Optimizer] ((2)) to an option other than [Disable] may still cause images to look bright even if you set lower flash exposure compensation for darker images.

Note

- The Speedlite will fire an intermittent AF-assist beam as needed, if autofocusing is difficult under low light.
- You can also set flash exposure compensation in [External flash func. setting] in [D: Flash control] (@).
- The camera can turn on certain Speedlites automatically when the camera is turned on. For details, refer to the instruction manual of Speedlites that support this feature.

 With an EZ/E/EG/ML/TL series Speedlite set to A-TTL or TTL autoflash mode, the flash can be fired at full output only.

Set the camera's shooting mode to < M > or < Av > and adjust the aperture value before shooting.

• When using a Speedlite that has manual flash mode, shoot in the manual flash mode.

Sync speed

Sync speed for non-Canon compact flash units varies by shutter mode.

[D: Shutter mode] Setting	Sync Speed
Mechanical	1/200 sec. or slower
Elec. 1st-curtain	1/250 sec. or slower

With large studio flash units, the flash duration is longer than that of a compact flash unit and varies depending on the model. Before shooting, confirm that flash sync is performed correctly by taking some test shots at a sync speed of approx. 1/60 sec. to 1/30 sec.

Caution

- Manually lower the built-in flash before attaching an external flash unit.
- Using the camera with a dedicated flash unit or flash accessory for cameras of other manufacturers poses a risk of malfunction and even damage.
- Do not attach a high-voltage flash unit to the camera's multi-function shoe. It may not fire.

This chapter describes shooting and recording and introduces menu settings on the shooting [1] tab.

- Still Photo Shooting
- Movie Recording

☆ to the right of titles indicates functions only available in Creative Zone modes.

- <u>Tab Menus: Still Photo Shooting</u>
- Image Quality
- Dual Pixel RAW
- <u>Still Image Aspect Ratio</u>
- Auto Exposure Bracketing (AEB) ☆
- Manual Exposure Compensation 1/2
- Exposure Lock (AE Lock) ☆
- ISO Speed Settings for Still Photos ☆
- HDR Shooting ☆
- HDR Mode ☆
- Auto Lighting Optimizer 🕁
- <u>Highlight Tone Priority</u>
- Anti-Flicker Shooting 🛧
- Metering Mode ☆
- White Balance ☆
- White Balance Correction ☆
- Color Space ☆
- Picture Style Selection ☆
- Picture Style Customization ☆
- Picture Style Registration ☆
- <u>Clarity</u> ☆
- Shooting Creative Filters 1/2
- Lens Aberration Correction ☆
- Long Exposure Noise Reduction ☆
- High ISO Speed Noise Reduction
- <u>Dust Delete Data Acquisition</u> ☆
- Multiple Exposures 🕁
- <u>RAW Burst Mode</u> ☆
- Focus Bracketing
- Interval Timer Shooting
- Silent Shutter Function ☆
- Shutter Mode ☆
- <u>Releasing Shutter without Card</u>
- Image Stabilizer (IS Mode)
- <u>Customizing Quick Controls</u>

- Shooting with the Touch Shutter
- Image Review
- High-Speed Display ☆
- <u>Metering Timer</u>☆
- Display Simulation ☆
- Optical Viewfinder Simulation ☆
- Shooting Information Display
- Reverse Display
- <u>Viewfinder Display Format</u>
- Display Performance
- General Still Photo Shooting

O		AF	►		((†))	Ý		<u>Ô</u>	\star
١n	naç	ge qu	ality			4			_
D	ual	Pixe	I RAV	V		Disa	ble		
St	ill	img a	aspeo	t r	atio				3:2 —

- (1) Image quality
- (2) Dual Pixel RAW
- (3) Still img aspect ratio

Ľ	2	AF	►		((†))	Ý		<u>Å</u>	*
	Expo	o.com	ıp./AE	В		-32.	.10	.12	.:3 —
		SO sp	eed s	etti	ngs				-
	HDR	shoc	oting	HDF	R PQ			l	off —
	®∎H	IDR N	lode					(off —
	Auto) Ligh	nting	Opt	imi	zer			B) —
	High	nlight	tone	e pri	orit	y		(off —
	Anti	-flicke	er sho	oot.				I	OFF

- (1) Expo.comp./AEB ☆
- (2) So speed settings
- (3) HDR shooting HDR PQ 🛧
- (4) ^{IIII}HDR Mode ☆
- (5) Auto Lighting Optimizer 🛧
- (6) Highlight tone priority
- (7) Anti-flicker shoot. ☆



- (1) Flash control
- (2) Metering mode ☆

Ľ		AF	►		((†))	Ý		Ð	\star
									10
١	Whi	te ba	lance			AWB			_
	Cust	om V	Vhite	e Ba	lance	5			-
١	WВ	Shift/	Bkt.			0,0/±	=0		-
	Colc	or spa	ice			sRGE	3		-
I	Pictu	ure St	tyle			Auto			-
	Clari	ity				■ +++	+0		÷ —
	Sho	oting	crea	tive	e filte	rs			Coff —

- (1) White balance ☆
- (2) Custom White Balance \bigstar
- (3) WB Shift/Bkt.☆
- (4) Color space ☆
- (5) Picture Style
 - Picture Style Selection ☆
 - Picture Style Customization ☆
 - Picture Style Registration 🛧
- (6) Clarity ☆
- (7) Shooting creative filters \bigstar



- (1) Lens aberration correction 🕁
- (2) Long exp. noise reduction 🛧
- (3) High ISO speed NR
- (4) Dust Delete Data ☆

â		AF	►		((†))	Ý		<u>n</u>	\star
	2				6				10
M	ult	iple e	expo	sur	e	Disa	ble		_
RA	W	burs	st mo	ode		Disa	ble		-
Fo	cu	s bra	cket	ing		Disa	ble		-

- (1) <u>Multiple exposure</u> ☆
- (2) RAW burst mode 🕁
- (3) Focus bracketing ☆

	Ô.	AF	۵]	((†))	Ý		<u>n</u>	*		
1	2								10		
	Driv	e mo	de								
	Inte	rval ti	imer			Disa		-			
	Siler	nt shu	itter	fur	octio		(off —			
	Shut	tter n	node			Elec.	1s	t-curi	tain —		
	Rele	ase s	hutte	er v	/itho	ut ca	rd		on 🗕		

- (1) Drive mode
- (2) Interval timer
- (3) Bulb timer 🕁
- (4) Silent shutter function ☆
- (5) Shutter mode ☆
- (6) Release shutter without card

	â		AF	►		((†))	Ý		D	\star
1								8		
	IS	(Ir	nage	Stab	iliz	er) m	lode			_
	Cι	ıst	omiz	e Qui	ck	Cont	rols			-
	Тс	ouc	:h Sh	utter				-		
	Im	ıaç	ge rev	/iew						-
										_
	М	et	ering	timer			8 se			-

- (1) IS (Image Stabilizer) mode
- (2) Customize Quick Controls
- (3) Touch Shutter
- (4) Image review
- (5) IJ_HHigh speed display ☆
- (6) Metering timer 🕁

		_					
	AF	►		((†))	Ý		\star
						9	
Disp	olay si	mula	tio	n			Exp.SIM
OVF	sim.	view	ass	ist	Off		-
Sho	oting	info.	di	sp.			-
Rev	erse d	lispla	y		On		-
VF o	lispla	y forr	nat				-
Disp	o. per	forma	anc	e			ਛ –

- (1) Display simulation 🛧
- (2) OVF sim. view assist 🛧
- (3) Shooting info. disp.
- (4) Reverse display
- (5) VF display format
- (6) Disp. performance

Ô		AF	►		((†))	Ý		D	\star
									10
Ν	0	vie reo	c. size			EFHD	29.97P	IPB	_
S	วน	nd re	cordi	ng		Auto)		-
ч	٦I,	SO sp	eed s	etti	ings				-
٩,	ς,	Auto :	slow	shu	itter				รเด่ม ดพ
S	hu	tter b	tn fu	nct	ion f	for m	ovi	es	-

- (1) Movie rec. size
- (2) Sound recording
- (3) ^I, ISO speed settings ☆
- (4) Rev Auto slow shutter
- (5) Shutter btn function for movies

In Basic Zone modes, the following screens are displayed.

Shooting 1

• AF 🕨 (ŋ)	Ý	
Shooting mode	L†	_
Image quality	L	—
Dual Pixel RAW	Disable	—
Still img aspect ratio		3:2 —
Flash control		-

- (1) Shooting mode
- (2) Image quality
- (3) Dual Pixel RAW
- (4) Still img aspect ratio
- (5) Flash control

• Shooting 2

Û		AF	►		((†))		Ý		
	2								
D	riv	e mo	de			C			-
Ir	ite	rval ti	imer			C	Disable		-
R	ele	ase sl	hutte	er v	/itho	but	t card	ON	-

- (1) Drive mode
- (2) Interval timer
- (3) Release shutter without card

● AF ► ((†))	Ý		
IS (Image Stabilizer)	mode		—(
Touch Shutter	Disable	_	
Image review		_	(
Shooting info. disp.			
Reverse display	On	_	
VF display format			— (
Disp. performance		<u>廊</u>	(

- (1) IS (Image Stabilizer) mode
- (2) Touch Shutter
- (3) Image review
- (4) Shooting info. disp.
- (5) Reverse display
- (6) VF display format
- (7) Disp. performance

Shooting 4



(1) Retain Creative Assist data




- (1) Movie rec. size
- (2) Sound recording
- (3) Shutter btn function for movies

- RAW Images
- Guide to Image Quality Settings
- Maximum Burst for Continuous Shooting

You can select the pixel count and the image quality. JPEG/HEIF image quality options are as follows: AL / AL / AM / AM / ASI / ASI / S2. For RAW images, you can specify RAW or CRAW as the image quality.

1. Select [C: Image quality].

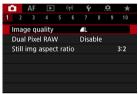

2. Set the image quality.



- For RAW images, turn the < [™]₂→ solid to select the size, and for JPEG/HEIF images, turn the < [™]₂→ solid.
- Press the < () > button to set it.

Note HEIF can be specified when [A: HDR shooting (DRR) is set to [Enable]. You can convert these images to JPEG images after shooting (G). Is set if you set both RAW and JPEG/HEIF to [-]. Two versions of each shot are recorded at your specified image quality when you have selected both RAW and JPEG/HEIF. Both images have the same file number but each has a different file extension, with JPG for JPEG, HIF for HEIF and .CR3 for RAW. S2 is in I (Fine) quality. Meaning of image quality icons: IXW RAW, CIXW Compact RAW, JPEG, HEIF, Large, M Medium, S Small.

RAW images are raw data from the image sensor that are recorded to the card digitally as

RAW or CRAW, based on your selection. CRAW produces RAW images with smaller file sizes than RAW.

RAW images can be processed using [E: RAW image processing] (27) to save them as JPEG or HEIF images. As the RAW image itself does not change, you can process the RAW image to create any number of JPEG or HEIF images with various processing conditions.

You can use Digital Photo Professional (EOS software) to process RAW images. You can make various adjustments to images depending upon how they will be used and can generate JPEG, HEIF, or other types of images reflecting the effects of those adjustments.

Note

- To display RAW images on a computer, using Digital Photo Professional (EOS software, hereafter DPP) is recommended.
- Older versions of DPP Ver. 4.x do not support display, processing, editing, or other operations with RAW images captured by this camera. If a previous version of DPP Ver. 4.x is installed on your computer, obtain and install the latest version of DPP from the Canon website to update it (@), which will overwrite the previous version. Similarly, DPP Ver. 3.x or earlier does not support display, processing, editing, or other operations with RAW images captured by this camera.
- Commercially available software may not be able to display RAW images captured by this camera. For compatibility information, contact the software manufacturer.

For details on file size, number of shots available, maximum burst, and other estimated values, see <u>Still photo file size / Number of shots available</u> and <u>Maximum burst for continuous shooting [Approx.]</u>.



The approximate maximum burst is displayed at the upper left of the shooting screen and lower right of the viewfinder.

Note

If the maximum burst is displayed as "99", it indicates that you can shoot 99 or more shots continuously. Fewer shots are available for a value of 98 or lower, and when [BUSY] is displayed on the screen, internal memory is full and shooting will stop temporarily. If you stop continuous shooting, the maximum burst will increase. After all captured images have been written to a card, you can once again shoot at the maximum burst listed in Maximum burst for continuous shooting [Approx.].

Shooting RAW or CRAW images with this feature enabled produces special Dual Pixel RAW images containing dual pixel information from the image sensor. This is called Dual Pixel RAW shooting.

When processing these images in Digital Photo Professional software for EOS cameras, you can take advantage of the dual pixel data to fine-tune apparent resolution (using depth information), shift the camera viewpoint slightly, and reduce ghosting.

Results will vary depending on shooting conditions, so before using this feature, refer to the Digital Photo Professional instruction manual for details on Dual Pixel RAW characteristics and image processing.

1. Select [C: Dual Pixel RAW].



2. Select [Enable].

Dual Pixel RAW
Disable
Enable
Enabled when image quality is set to RAW or CRAW
INFO Help

- 3. Set the image quality to RAW or CRAW.
 - Set the image quality to RAW, RAW + JPEG, RAW + HEIF, CRAW, CRAW + JPEG, or CRAW + HEIF.

4. Take the picture.

 A RAW image containing dual pixel data (Dual Pixel RAW image) is captured.

Caution

- Startup takes longer when the power switch is set to < ON > or the camera resumes operation from auto power off.
- [型♯] and [型H] drive modes are not available. Setting the mode to [型♯] or [型H] has the effect of setting it to [型i].
- Noise may be slightly more noticeable in RAW, RAW+JPEG, or RAW+HEIF images.
- These features are not available: multiple exposures, HDR shooting, RAW burst mode, focus bracketing, electronic shutter, and one-touch image quality setting.

Note

Amount and effect of Dual Pixel RAW correction

- Larger lens apertures increase the amount and effect of correction.
- The amount and effect of correction may not be sufficient with some lenses and in some shooting scenes.
- The amount and effect of correction varies depending on the camera orientation (vertical or horizontal).
- The amount and effect of correction may not be sufficient under some shooting conditions.

You can change the image's aspect ratio.

1. Select [D: Still img aspect ratio].

Ď	1	AF	►		((†))	Ý		Ċ.	\star
h	mag	ie qu	ality			A L			
C	Dual	Pixe	I RAV	٧		Disa	ble		
S	till i	img a	aspec	t r	atio				3:2

2. Set the aspect ratio.

Still img aspect ratio
3:2
4:3
16:9
1:1
INFO Shooting area

- Select an aspect ratio.
- To proceed without changing shooting area display, press the < ()> button.

JPEG images

The images will be recorded with the set aspect ratio.

RAW Images

The images will always be recorded in the [3:2] aspect ratio. The selected aspect ratio information is added to the RAW image file, which enables Digital Photo Professional (EOS software) to generate an image with the same aspect ratio as set at the time of shooting when you process RAW images with this software. 3. Select how the shooting area is displayed.



- On the screen in step 2, press the < INFO > button.
- Select the type of display, then press the < () > button.

Note

RAW images shot at an aspect ratio of [4:3], [16:9], or [1:1] are displayed during playback with lines indicating the shooting area, but these lines are not recorded in the image. Note that only the shooting image area is shown in slideshows (2).


In exposure bracketing, three consecutive images are captured at different exposures within your specified range of up to ±3 stops (in 1/3-stop increments) by automatically adjusting the shutter speed, aperture value, or ISO speed.

* AEB stands for Auto Exposure Bracketing.

1. Select [C: Expo.comp./AEB].

ſ	2	AF	٨]	$\langle (\uparrow) \rangle$	Ý		ġ.	*
1	2		4		6			9	10
ł	Expo	.com	ip./A	EB		32.	10	.12	.:3
1	O IS	O sp	eed :	setti	ings				
HDR shooting HDR PQ OFF					OFF				
HDR Mode OF						OFF			
1	Auto	Ligh	iting	Op	timiz	er			e,
Highlight tone priority OFF					OFF				
1	Anti-	flick	er sh	oot					OFF

2. Set the AEB range.

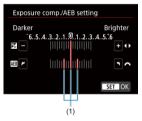

- Turn the < 2003 > dial to set the AEB range (1). By turning the < 500 > dial, you can set the exposure compensation amount.
- Press the < (R) > button to set it.
- When you close the menu, the AEB range will be displayed on the screen.

3. Take the picture.

Standard exposure



- Three bracketed shots are taken, according to the specified drive mode, in this sequence: Standard exposure, decreased exposure, and increased exposure.
- AEB will not be automatically canceled. To cancel AEB, follow step 2 to turn off the AEB range display.

Caution

Exposure compensation in AEB may be less effective with [1]: Auto Lighting Optimizer] (2) set to an option other than [Disable].

Note

- [+] blinks in the lower left of the screen during AEB.
- If the drive mode is set to [□], press the shutter button three times for each shot. In [□此], [□此], or [□] mode, holding down the shutter button completely captures three images, one after another, before the camera automatically stops shooting. When [⑤10] or [⑥2] is set, three consecutive shots are captured after a delay of 10 or 2 sec. When set to [⑥c], three times the specified number of shots are taken in continuous shooting.
- You can set AEB in combination with exposure compensation.
- AEB is not available in flash photography or bulb exposures, with Multi Shot Noise Reduction, focus bracketing, or shooting creative filters, or in HDR or RAW burst mode.
- AEB will be canceled automatically if you do any of the following: Setting the power switch to < OFF > or when the flash is fully charged.

Exposure compensation can brighten (increased exposure) or darken (decreased exposure) the standard exposure set by the camera.

Exposure compensation is available in $\langle FV \rangle$, $\langle P \rangle$, $\langle TV \rangle$, $\langle AV \rangle$, and $\langle M \rangle$ modes. For details on exposure compensation when $\langle M \rangle$ mode and ISO Auto are both set, see <u>M: Manual Exposure</u>, and see Fv: Flexible-Priority AE for $\langle FV \rangle$ mode.

- 1. Check the exposure.
 - Press the shutter button halfway and check the exposure level indicator.
- 2. Set the compensation amount. Increased exposure, to brighten images



Decreased exposure, to darken images

∽ 1/125 F5.6 💙 ⁻3...(1,1,1,1,1,2,1:3</sup> 🗷

- Set it by looking at the screen as you turn the < >> dial.
- A [1] icon is displayed to indicate exposure compensation.
- 3. Take the picture.
 - To cancel exposure compensation, set the exposure level [] to the standard exposure index ([]).

Caution

 If [D: Auto Lighting Optimizer] (2) is set to any setting other than [Disable], the image may still look bright even if decreased exposure compensation is set to darken images.


Note

 The exposure compensation amount will remain in effect even after you set the power switch to < OFF >.

Effect of AE Lock

You can lock the exposure when you want to set the focus and exposure separately or when you will take multiple shots at the same exposure setting. Press the < $\frac{1}{K}$ > button to lock the exposure, then recompose and take the picture. This is called AE lock. It is effective for shooting backlit subjects, etc.

- 1. Focus on the subject.
 - Press the shutter button halfway.
 - The exposure value will be displayed.
- 2. Press the $< \times >$ button ($\bigcirc 8$).

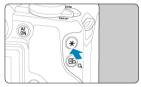

- A [¥] icon is displayed in the lower left of the screen to indicate that exposure is locked (AE lock).
- Each time you press the < ★ > button, the current exposure setting is locked.

3. Recompose and take the picture.



● When you are to take more pictures while maintaining the AE lock, keep holding down the < ★ > button and press the shutter button to take another picture.

Note

AE lock is not possible with bulb exposures.


Effect of AE Lock

Metering Mode	AF Point Selection				
Selection	Automatic Selection	Manual Selection			
۲	Exposure centered on the AF point in focus is locked.	Exposure centered on the selected AF point is locked.			
	Center-weighted exposure is locked.				

* Center-weighted exposure is locked when [()] is set with the camera configured for manual focusing ().

- So Speed Range When Set Manually
- So Speed Range Used with ISO Auto
- Minimum Shutter Speed for ISO Auto

Set the ISO speed (image sensor's sensitivity to light) to suit the ambient light level. In Basic Zone modes, ISO speed is set automatically. For details on ISO speed in movie recording, see ISO Speed in Movie Recording.

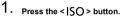



2. Set the ISO speed.



- Turn the < >>> > dial to set it.
- ISO speed can be set within ISO 100–32000 in 1/3-stop increments.
- With [AUTO] selected, ISO speed is set automatically.
- When [AUTO] is selected, pressing the shutter button halfway will display the ISO speed actually set.
- To specify [AUTO] when setting [ISO speed] in [1]: 1SO speed settings], press the < INF() > button.

ISO speed			
	Auto		►
	AUTO	100 	200 40
INFO AUTO			SET OK

ISO speed guide

- Low ISO speeds reduce image noise but may increase the risk of camera/subject shake or reduce the area in focus (shallower depth of field), in some shooting conditions.
- High ISO speeds enable low-light shooting, a larger area in focus (deeper depth of field), and longer flash range but may increase image noise.

Note

- ISO speed can also be set in the ISO speed item by pressing the < M-Fn > button with an image displayed on the screen.
- To expand the manual ISO speed setting range to H (equivalent to ISO 51200), adjust [ISO speed range] in [1]: 1SO speed settings] (2).

Caution

- Image noise (dots of light or banding) and irregular colors may increase and apparent resolution may decrease at H (equivalent to ISO 51200), because this is an expanded ISO speed.
- Setting [D: Highlight tone priority] to [Enable] or [Enhanced] (2) will prevent you from selecting ISO 100/125/160 or H (equivalent to ISO 51200).
- When shooting with a high ISO speed, high temperature, long exposure, or multiple exposure, image noise (graininess, dots of light, banding, etc.), irregular colors, or color shift may become noticeable.
- When shooting in conditions that produce an extreme amount of noise, such as a combination of high ISO speed, high temperature, and long exposure, images may not be recorded properly.
- If you use a high ISO speed and flash to shoot a close subject, overexposure may result.

You can set the manual ISO speed setting range (minimum and maximum limits). You can set the minimum limit within ISO 100 to ISO 32000 and the maximum limit within ISO 200 to H (equivalent to ISO 51200).

1. Select [C: Select Select].

Ľ	2	AF	Δ		((†))	Ý		¢.	*
	2		4		6			9	10
- 3	Expo	o.com	ip./A	EB		32.	.10	.12	.::3
		SO sp	eed :	setti	ings				
	HDR	shoc	oting	HD	r pq			10	OFF
HDR Mode OFF					OFF				
	Auto	o Ligh	nting	Op	timiz	er			e,
Highlight tone priority OFF					OFF				
	Anti	-flick	er sh	oot					OFF

2. Select [ISO speed range].

ISO speed settings					
ISO speed	Auto				
ISO speed range	100-32000				
Auto range	100-6400				
Min. shutter spd.	Auto				
	MENU 🕤				

3. Set [Minimum].

ISO speed range	
Minimum	Maximum
^	
100	32000
OK	Cancel
INFO Help	

- Select the [Minimum] box, then press the < () > button.
- Select an ISO speed, then press the < (P) > button.

4. Set [Maximum].

ISO speed range	
Minimum	Maximum
100	32000
	-
OK	Cancel
INFO Help	

- Select the [Maximum] box, then press the < () > button.
- 5. Select [OK].

You can set the automatic ISO speed range for ISO Auto within ISO 100–32000. The minimum can be set within ISO 100–25600 and the maximum within ISO 200–32000, in 1stop increments.

1. Select [Auto range].

ISO speed setting	gs
ISO speed	Auto
ISO speed range	100-32000
Auto range	100-6400
Min. shutter spd.	Auto
	MENU 🕤

2. Set [Minimum].

Auto range	
Minimum	Maximum
100	6400
OK	Cancel
INFO Help	

- Select the [Minimum] box, then press the < () > button.
- Select an ISO speed, then press the < () > button.

3. Set [Maximum].

Auto range	
Minimum	Maximum
100	6400
	-
OK	Cancel
INFO Help	

- Select the [Maximum] box, then press the < () > button.

4. Select [OK].

Note

To prevent shutter speeds from being set too low automatically, you can set the minimum shutter speed for ISO Auto.

This is effective in $< P > or < A_V >$ mode when shooting subjects in motion with a wideangle lens, or when using a telephoto lens. It can also reduce camera shake and blurred subjects.

1. Select [Min. shutter spd.].

ISO speed	Auto
ISO speed range	100-32000
Auto range	100-6400
Min. shutter spd.	Auto

2. Set the desired minimum shutter speed.

Auto

Min. shutter spd.	
Auto(Standard)	
Auto	
Manual	
Slower	Faster
	`
INFO Help	SET OK

If you select [Auto], turn the <
 <p>> dial to set the difference relative to standard speed (toward Slower or Faster), then press the < <p>> button.

Manual

	Ma	nual(1/1	25)	
Auto				
Manua				
1/4000	1/2000	1/1000	1/500	1/250
1/125	1/60	1/30	1/15	1/8
1/4	0"5	1″		^

● If you select [Manual], turn the < ()>> > dial to select the shutter speed, then press the < ()>> > button.

Caution

- If a correct exposure cannot be obtained with the maximum ISO speed limit set with [Auto range], a shutter speed slower than the [Min. shutter spd.] will be set to obtain the standard exposure.
- This function will not be applied to flash photography.

Note

 When [Auto(Standard)] is set, the minimum shutter speed will be the reciprocal of the lens focal length. A single step from [Slower] to [Faster] is equivalent to a single stop of the shutter speed. PQ in HDR PQ refers to the gamma curve of the input signal for displaying HDR images. HDR PQ settings enable the camera to produce HDR images conforming to the PQ specification defined in ITU-R BT.2100 and SMPTE ST.2084. (Actual display depends on monitor performance.)

Shots are captured as HEIF or RAW images.


* HDR stands for High Dynamic Range.

* PQ stands for Perceptual Quantization.

1. Select [: HDR shooting HDR PQ].

Ľ	2	AF	►]	((†))	Ý		Ċ.	*	
	2		4		6			9	10	
j,	Expo.comp./AEB -3210							12.*3		
1		SO sp	eed :	setti	ings					
HDR shooting HDR PQ OFF								OFF		
HDR Mode OFF							OFF			
Auto Lighting Optimizer 🛛 🖓							e,			
Highlight tone priority OFF							OFF			
	Anti-flicker shoot.							OFF		

2. Select [Enable].

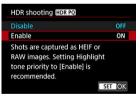

 On the screen during shooting and playback, converted images are displayed that resemble how the images would look on an HDR display device.

Caution

- Expanded ISO speeds (H) are not available in HDR shooting.
- Some scenes may look different from how they appear on an HDR display device.
- Unused signal values are roughly indicated by image areas in gray in the histogram when [D: HDR shooting [IDRPO] is set to [Enable].
- [D: Disp. performance] is not available when [D: HDR shooting [DRPQ] is set to [Enable]. It is set to [Smooth].
- For images captured with [: HDR shooting [: IDRPQ] set to [Enable], before playback on an HDR display device, set [: HDMI HDR output] to [On] (:). Note that regardless of the [: HDMI HDR output] setting, HDR images are used for display on HDR display devices.

You can shoot still photos with clipped highlights and shadows reduced for a high dynamic range of tones even in high-contrast scenes. HDR shooting is effective for landscape and still-life shots.

HDR shooting enhances gradation in dark image areas by merging three images deliberately captured at different exposures (standard, underexposed, and overexposed) to produce an HDR image that compensates for loss of detail in dark image areas. HDR images are captured as HEIFs or JPEGs.

* HDR stands for High Dynamic Range.

1. Select [

ľ	1	AF	٨]	((†))	Ý		Ċ.	*
	2		4		6			9	10
E	xpo	.com	ip./A	EB		32.	.10	.12	.::3
1	O IS	O sp	eed	setti	ings				
ł	IDR	shoc	oting	HD	R PQ			10	OFF
🖾 HDR Mode						OFF			
A	Auto	Ligh	nting	Op	timiz	er			e,
Highlight tone priority						OFF			
Anti-flicker shoot.)(OFF	

2. Set [Adjust dyn range].

Adjust dyn range	
Disable HDR	OFF
Auto	AUTO
±1 EV	±1
±2 EV	±2
±3 EV	±3
	SET OK

- Selecting [Auto] will have the dynamic range set automatically depending on the image's overall tonal range.
- The higher the number, the wider the dynamic range will be.
- To exit HDR shooting, select [Disable HDR].

- 3.
 - Set [Limit max brightness] (only with [1]: HDR shooting [IDRPO] set to [Enable]).



- With [Disable], maximum brightness is not limited. Recommended when you will review images on a monitor supporting display at brightnesses exceeding 1000 nits.
- With [1000 nits], maximum brightness is limited to approx. 1000 nits.

4. Set [Continuous HDR].



- With [1 shot only], HDR shooting is canceled automatically after you finish shooting.
- With [Every shot], HDR shooting continues until the setting in step 2 is set to [Disable HDR].

5. Set [Auto Image Align].

HDR Mode	
Auto Image Align	Enable Disable
	Disable

- For handheld shooting, select [Enable]. When using a tripod, select [Disable].
- 6. Specify the images to save.

HDR Mode		
	All images	
Save source imgs	HDR img only	

- To save the three images captured and the resulting HDR image, select [All images].
- To save only the HDR image, select [HDR img only].

7. Take the picture.

 When you press the shutter button completely, three consecutive images will be captured, and the HDR image will be recorded to the card.

Caution

- Expanded ISO speeds (H) are not available in HDR shooting.
- The flash will not fire during HDR shooting.
- AEB is not available.
- In HDR shooting, three images are captured with settings such as shutter speed automatically adjusted. For this reason, even in < Fv >, < Tv >, and < M > modes, the shutter speed and ISO speed will change, relative to your specified speed.
- To prevent camera shake, a high ISO speed may be set.
- When shooting HDR images with [Auto Image Align] set to [Enable]. AF point display information (2) and Dust Delete Data (2) will not be appended to the image.
- If you perform handheld HDR shooting with [Auto Image Align] set to [Enable], image periphery will be slightly trimmed and resolution will be slightly lowered. Also, if the images cannot be aligned properly due to camera shake, etc., auto image alignment may not take effect. Note that when shooting with excessively bright (or dark) exposure settings, auto image alignment may not work properly.
- If you perform handheld HDR shooting with [Auto Image Align] set to [Disable], the three images may not be properly aligned and the HDR effect may be reduced. Using a tripod is recommended.
- Auto image alignment may not function properly with repetitive patterns (lattice, stripes, etc.) or flat, single-tone images.
- Subjects such as the sky or white walls may not be rendered with smooth gradation and may have noise or irregular exposure or colors.
- HDR shooting under fluorescent or LED lighting may cause issues such as irregular exposure or colors in HDR images, due to the flickering light source.
 Effects of flickering may be reduced by setting [Anti-flicker shoot.] to [Enable].
- With HDR shooting, the images will be merged, then saved to the card, so it may take some time. [BUSY] appears on the screen as images are processed, and shooting is not possible until processing is finished.
- Maximum shutter speed in HDR shooting with an electronic shutter is 1/8000 sec.

Note

Image quality of RAW HDR images is as follows.

- [C: HDR shooting [HDR PO] set to [Disable]: JPEG quality
- [C: HDR shooting HDR PQ] set to [Enable]: HEIF quality

HDR image quality in RAW+JPEG or RAW+HEIF shooting corresponds to your specified JPEG or HEIF image quality.

Brightness and contrast can be corrected automatically if shots look dark or contrast is too low or high.

1. Select [1]: Auto Lighting Optimizer].

1	AF	٨		((1))	Ý		Ċ.	*	
		4		6			9	10	
хрс	.com	ip./A	EB		-32.	.10	.12	.::3	
SIS	O sp	eed	sett	ings					
IDR	shoc	oting	HD	r pq				OFF	
BH	DR N	lode						OFF	
uto	Ligh	nting	Op	timiz	er		19g		
ligh	light	ton	e pr	iority	(OFF	
nti-	flick	er sh	oot					OFF	
	2 xpc IS IDR M H utc	2 3 xpo.com ISO sp IDR shoo HDR N uto Ligh	2 3 4 xpo.comp./A ISO speed IDR shooting HDR Mode uto Lighting lighlight ton	2 3 4 5 xpo.comp./AEB ISO speed sett IDR shooting ID HDR Mode uto Lighting Op lighlight tone pr	2 3 4 5 6 xpo.comp./AEB ISO speed settings IDR shooting HDRPQ HDR Mode suto Lighting Optimiz	2 3 4 5 6 7 xpo.comp./AEB 32. DISO speed settings IDR shooting (IDR 20) HDR Mode uuto Lighting Optimizer lighlight tone priority	2 3 4 5 6 7 8 xpo.comp./AEB 32.1.0 DISO speed settings DIDR shooting UDR FO PHDR Mode uto Lighting Optimizer lighlight tone priority	2 3 4 5 6 7 8 9 xpo.comp./AEB 3.2.1.@.1.2 DISC speed settings DIRS hooting (DDR PO) PHDR Mode uto Lighting Optimizer lighlight tone priority	

2. Set a correction option.



Caution

- Noise may increase and apparent resolution may change, under some shooting conditions.
- If the effect of Auto Lighting Optimizer is too strong and results are not at your preferred brightness, set to [Low] or [Disable].
- If a setting other than [Disable] is set and you use exposure compensation or flash exposure compensation to darken the exposure, the image may still come out bright. If you want a darker exposure, set this function to [Disable].

Note

■ To enable [☐: Auto Lighting Optimizer] to be set even in < M > and < B > modes, press the < |NFO > button in step 2 to clear the checkmark [√] for [Disabled in M or B modes].

You can reduce overexposed, clipped highlights.

1. Select [1]: Highlight tone priority].

Ľ	2	AF	٨]	((1))	Ý		ġ.	*
	2		4		6		8	9	10
Ĵ.	Expo	.com	ip./A	EB		32.	.10	.12	.::3
	O IS	O sp	eed :	sett	ings				
1	HDR	shoc	oting	HD	R PQ			(OFF
1	B	DR N	lode					1	OFF
1	Auto	Ligh	ting	Op	timiz	er			en.
	High	light	ton	e pr	iority	(OFF
1	Anti-	flick	er sh	oot					OFF

2. Set an option.

Highlight tone priority	
Disable	OFF
Enable	D+
Enhanced	D+2
📧 🗸 For HDR PQ,	use D+
INFO Help	SET OK

 [Enable]: Improves gradation in highlights. The gradation between the grays and highlights becomes smoother.

☆

 [Enhanced]: Reduces overexposed highlights even more than [Enable], under some shooting conditions.

Caution

- Noise may increase slightly.
- The available ISO range starts at ISO 200. Expanded ISO speeds cannot be set.
- With [Enhanced], results in some scenes may not look as expected.

Note I Highlight tone priority] is set to [Enable] and cannot be changed after you set [1]: HDR shooting [IDRPO] to [Enable] by pressing the < :> button to add a checkmark to this setting. [1]: Highlight tone priority] will be set to [Disable] even if you set [1]: HDR shooting [IDRPO] to [Enable], with [Adjust dyn range] in [1]: HDR Mode] set to an option other than [Disable HDR].

Uneven exposure and color may appear in continuous shooting at fast shutter speeds under flickering light sources such as fluorescent lights, due to uneven vertical exposure. Antiflicker shooting enables you to take pictures when exposure and colors are less affected by flickering.

1. Select [C: Anti-flicker shoot.].

ľ		AF	٨]	((†))	Ý		â	*
1	2		4		6			9	10
ł	xpo	.com	ip./A	EB		32.	.10	.12	.::3
1	O IS	O sp	eed :	setti	ngs				
ł	IDR	shoc	oting	HDI	r PQ				OFF
Į	2)H	DR N	lode						OFF
1	Auto	Ligh	nting	Opt	timiz	er			E)
ł	ligh	light	ton	e pri	ority				OFF
	Anti-	flick	er sh	oot.					OFF

2. Select [Enable].



3. Take the picture.

Caution

- When [Enable] is set and you shoot under a flickering light source, the shutterrelease time lag may become longer. Also, the continuous shooting speed may become slower, and the shooting interval may become irregular.
- Flicker at a frequency other than 100Hz or 120Hz cannot be detected. Also, if the flickering frequency of the light source changes during continuous shooting, effects of the flicker cannot be reduced.
- In < Fv >, < P >, or < Av > mode, color tone of captured images may vary if the shutter speed changes during continuous shooting or if you take multiple shots of the same scene at different shutter speeds. To avoid inconsistent color tone, shoot

in $\langle Fv \rangle$, $\langle M \rangle$, or $\langle Tv \rangle$ mode at a fixed shutter speed.

- Color tone of captured images may vary between [Enable] and [Disable].
- Shutter speed, aperture value, and ISO speed may change when you start shooting with AE lock.
- If the subject is against a dark background or if there is a bright light in the image, flicker may not be properly detected.
- Flicker reduction may not be possible under special lighting.
- Depending on the light source, flicker may not be detected properly.
- Depending on the light sources or shooting conditions, the expected result may not be obtained even if you use this function.

Note


- Taking test shots in advance is recommended.
- Detect flicker manually if the screen flickers (as when the light source changes) by pressing the < ()> button, selecting [Anti-flicker shoot.], then pressing the < |NFO > button.
- Flicker is not reduced in Basic Zone modes.
- Flicker reduction also works with flash photography. However, the expected result
 may not be obtained for wireless flash photography.

Four methods (metering modes) to measure the subject's brightness are provided. Normally, evaluative metering is recommended. Evaluative metering is set automatically in Basic Zone modes (except in < (a): (b) > mode, which uses center-weighted average metering).

1. Select [C: Metering mode].



2. Select an option.

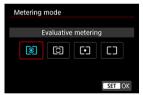

S: Evaluative metering

General-purpose metering mode suited even for backlit subjects. The camera adjusts the exposure automatically to suit the scene.

O: Partial metering

Effective where there are much brighter lights around the subject due to backlight, etc. The partial metering area is indicated on the screen.

• [•]: Spot metering

Effective when metering a specific part of the subject. The spot metering area is indicated on the screen.

• []: Center-weighted average

The metering across the screen is averaged, with the center of the screen weighted more heavily.

Caution


- With ((valuative metering), holding down the shutter button halfway when shooting with [One-Shot AF] locks the exposure value (AE lock). With ((valuation)), ((valuation)), (valuation)), (valuation), (valuation)
- With [...]: AE lock meter. mode after focus] ((2), you can set whether or not to lock the exposure (AE lock) once subjects are in focus with One-Shot AF.

- White Balance
- [AWB] Auto White Balance
- ☑ [▶] Custom White Balance☆
- Color Temperature

White balance (WB) is for making the white areas look white. Normally, the Auto [WB] (Ambience priority) or [WWW] (White priority) setting will obtain the correct white balance. If natural-looking colors cannot be obtained with Auto, you can select the white balance to match the light source or set it manually by shooting a white object.

In Basic Zone modes, [[]]] (Ambience priority) is set automatically. ([[]]]] (White priority) is set in < ♥] > mode.)

1. Press the < M-Fn > button (\archef{b}).

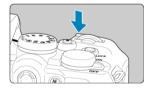

- With an image displayed on the screen, press the < M-Fn > button.
- 2. Select the white balance item.



Turn the < Solve > dial to select the white balance setting item.

3. Select a white balance setting.



Turn the < is > dial to make a selection.

Note

- For [AWB] and [AWBW] setting instructions, see [AWB] Auto White Balance.
- To set your preferred color temperature, select [1] in [1]: White balance], then turn the < ²/₂ > dial.

(Approx.)

Display	Mode	Color Temperature (K: Kelvin)
AWB	Auto (Ambience priority)	3000-7000
AWBW	Auto (White priority)	3000-7000
*	Daylight	5200
≜ ⊾	Shade	7000
4	Cloudy, twilight, sunset	6000
*	Tungsten light	3200
	White fluorescent light	4000
4	When using Flash	Automatically set*
	Custom	2000–10000
K	Color temperature	2500–10000

* Applicable with Speedlites having a color temperature transmission function. Otherwise, it will be fixed to approx. 6000K.

The human eye adapts to changes in lighting so that white objects look white under all kinds of lighting. Cameras determine white from the color temperature of lighting and, based on this, apply image processing to make color tones look natural in your shots. With [WW] (Ambience priority), you can slightly increase the intensity of the image's warm color cast when shooting a tungsten-light scene.

If you select [[AWBW] (White priority), you can reduce the intensity of the image's warm color cast.

1. Select [D: White balance].

Ľ	2	AF	A		((†))	Ý		ġ	*		
		3		5	6		8	9	10		
1	Whi	te ba	lance			AWB					
(Cust	om V	Vhite	Bal	ance	e					
١	WB	Shift/	Bkt.			0,0/=	=0				
(Colc	or spa	ce			sRGB					
1	Pictu	ure St	yle			Auto					
(Clari	ity					+ 0		8		
	Sho	oting	creat	tive	filte	rs			COFF		

2. Select [AWB].



- With [AWB] selected, press the < -----> button.
- 3. Select an option.



Caution

Precautions when set to [AWBW] (White priority)

- The warm color cast of subjects may fade.
- When multiple light sources are included in the scene, the warm color cast of the picture may not be reduced.
- When using flash, the color tone will be the same as with [WB] (Ambience priority).

With custom white balance, you can manually set the white balance for the specific light source of the shooting location. Make sure to perform this procedure under the light source at the actual location of the shoot.

Registration from an image on a card

1. Shoot a white object.



- Aim the camera at a plain white object, so that white fills the screen.
- You can use any of the white balance settings.

Caution

- Correct white balance may not be obtained if the exposure of your image differs greatly from standard exposure.
- These images cannot be selected: images captured with the Picture Style set to [Monochrome], images from multiple-exposure or RAW burst shooting, images that are cropped or have a Creative filter applied, or images from another camera.

2. Select [Custom White Balance].



3. Import the white balance data.

2			
	SET 🔛	MENU 🗲	

- Turn the < 500 > dial to select the image captured in step 1, then press the < (இ) > button.
- Select [OK] to import the data.
- 4. Select [C: White balance].
- 5. Select the custom white balance.

Custom	、
🛲 * 🖦 📤 * 🗯 \$	 K
MENU Shoot to set WB	Ð

● Select [⊾•].

Shooting and registering white balances

- 1. Press the < (P) > button.
- 2. Select the white balance item.




Press < 🔆 > up or down for selection.

3. Select [Record and register WB].


1963		\mathbb{G}
OVERHOU		
4		.Qa
(H) (3312	Custom	983
Ø	(MENU Shoot to set WB	Ô.
3:2	INFO ₩ 0,0 ₩ ±0	&
« [🗯 💈 🔜 📧 5200] [»

● Turn the < ⁵, dial or press < * > left or right to select [...], then press the < MENU > button.

4. Shoot a white object.

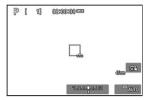

- Aim the camera at a plain white object, so that white fills the screen.
- Set the camera to manual focus (2) and shoot so that the white object has standard exposure.
- The custom white balance is registered to the camera.

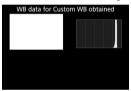

Caution

 Correct white balance may not be obtained if the exposure of your image differs greatly from standard exposure.

Note

 Instead of shooting a white object, you can also shoot a gray card or standard 18% gray reflector (commercially available). A value can be set representing the white balance color temperature.

1. Select [D: White balance].

T o	2	AF	►		((1))	Ý		ġ.	*		
1					6			9	10		
١	Whit	e ba	lance			AWB					
(Custo	om V	Vhite	Ва	lance	5					
١	WB S	hift/	Bkt.			0,0/±0 sRGB					
(Colo	r spa	ce								
F	Pictu	re St	yle			Auto					
WB Shift/Bkt. Color space Picture Style Clarity						=++++0++++=					
5	Shoc	ting	crea	tive	filte	rs			OFF		

2. Set the color temperature.



- Select [K].
- Turn the < ^{wind}/₂ > dial to set a color temperature, then press the < ^(R)/₂ > button.
- The color temperature can be set from approx. 2500K to 10000K in 100K increments.

Note

- When setting the color temperature for an artificial light source, set the white balance correction (magenta or green bias) as necessary.
- When setting [I] to a value measured with a commercially available color temperature meter, take some test shots in advance and adjust the setting as needed to compensate for any difference between the color temperature meter and the camera.

- White Balance Correction
- White Balance Auto Bracketing


You can correct the white balance that is set. This adjustment will have the same effect as using a commercially available color temperature conversion filter or color compensating filter.

White Balance Correction

1. Select [C: WB Shift/Bkt.].



2. Set the white balance correction.

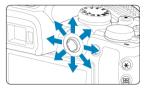

Sample setting: A2, G1




- Use < * > to move the "•" mark on the screen to your preferred position.
- B is for blue, A for amber, M for magenta, and G for green. White balance is corrected in the direction you move the mark.
- The direction and amount of correction are indicated in the upper right of the screen.
- Pressing the < INFO > button will cancel all the [WB Shift/Bkt.] settings.
- Press the < (R) > button to exit setup.

Note

 One level of the blue/amber correction is equivalent to approx. 5 mireds of a color temperature conversion filter. (Mired: Unit of measure for color temperature used to indicate values such as the density of a color temperature conversion filter.) White balance bracketing enables you to capture three images at once with different color tones.


Setting the white balance bracketing amount

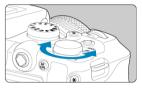

In step 2 for <u>White Balance Correction</u>, when you turn the < _>> dial, the "∎" mark on the screen will change to "∎ ■ ∎" (3 points).

Turning the dial clockwise sets the B/A bracketing, and turning it counterclockwise sets the M/G bracketing.

B/A bias ±3 levels

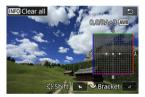

- The direction and amount of bracketing are indicated in the upper right of the screen.
- Pressing the < INFO > button will cancel all the [WB Shift/Bkt.] settings.
- Press the <

 button to exit setup.

Caution

- During white balance bracketing, the maximum burst for continuous shooting will be lower.
- Since three images are recorded for one shot, it takes longer to record the image to the card.


Note

- The images will be bracketed in the following sequence: 1. Standard white balance, 2. Blue (B) bias, and 3. Amber (A) bias, or 1. Standard white balance, 2. Magenta (M) bias, and 3. Green (G) bias.
- You can also set white balance correction and AEB together with white balance bracketing. If you set AEB in combination with white balance bracketing, a total of nine images will be recorded for a single shot.
- The white balance icon blinks to indicate that white balance bracketing has been set.
- Bracket stands for bracketing.

The range of reproducible colors is called the "color space." For normal shooting, sRGB is recommended.

In Basic Zone, [sRGB] is set automatically.


- 1. Select [D: Color space].
- 2. Set a color space option.

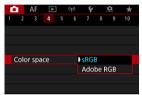

Select [sRGB] or [Adobe RGB], then press the < () > button.

Adobe RGB

This color space is mainly used for commercial printing and other professional applications. Recommended when using equipment such as Adobe RGB-compatible monitors or DCF 2.0 (Exif 2.21 or later) compatible printers.

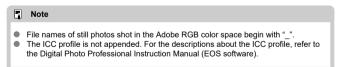

Picture Style Characteristics

Symbols

Just by selecting a preset Picture Style, you can obtain image characteristics effectively matching your photographic expression or the subject.

1. Select [1: Picture Style].



2. Select a Picture Style.

Picture Style	G,G,G,O,&,O
👬 Auto	4,2,3,0,0,0
👬 Standard	4,2,3,0,0,0
EP Portrait	3,2,4,0,0,0
EL Landscape	5,2,3,0,0,0
Fine Detail	4,1,1,0,0,0
SEN Neutral	0,2,2,0,0,0
INFO Detail set.	SET OK

🔹 🛋 Auto

The color tone will be adjusted automatically to suit the scene. The colors will look vivid for blue skies, greenery and sunsets, particularly in nature, outdoor, and sunset scenes.



If the desired color tone is not obtained with [Auto], use another Picture Style.

Standard

The image looks vivid, sharp, and crisp. Suitable for most scenes.

Portrait

For smooth skin tones, with slightly less sharpness. Suited for close-up portraits. Skin tone can be adjusted by changing [Color tone] as described in <u>Settings and</u> <u>Effects</u>.

🔹 🖾 Landscape

For vivid blues and greens, and very sharp and crisp images. Effective for impressive landscapes.

Fine Detail

For detailed rendering of fine subject contours and subtle textures. The colors will be slightly vivid.

Neutral

For retouching later on a computer. Makes images subdued, with lower contrast and natural color tones.

Arr Faithful

For retouching later on a computer. Faithfully reproduces the actual colors of subjects as measured in daylight with a color temperature of 5200K. Makes images subdued, with lower contrast.

Monochrome

Creates black-and-white images.

Caution

 Color images cannot be recovered from JPEG/HEIF images shot with the [Monochrome] Picture Style.

User Def. 1–3

You can add a new style based on presets such as [**Portrait**] or [**Landscape**] or a Picture Style file, then adjust it as needed (
). Shots taken with a style you have not customized yet will have the same characteristics as the default [**Auto**] setting.

Icons on the Picture Style selection screen represent [Strength], [Fineness], and [Threshold] for [Sharpness] as well as [Contrast] and other parameters. The numbers indicate the values for these settings specified for the respective Picture Style.

Picture Style	6.6.0.9.9	Picture Style	G.G.G.O. @.@
Auto	4,2,3,0,0,0	🛲 Neutral	0,2,2,0,0,0
🖅 Standard	4,2,3,0,0,0	🖅 🛙 Faithful	0,2,2,0,0,0
E Portrait	3,2,4,0,0,0	Monochrome	4,2,3,0,N,N
📰 Landscape	5,2,3,0,0,0	📰 User Def. 1	Auto
🚌 Fine Detail	4,1,1,0,0,0	Ser Def. 2	Auto
📰 Neutral	0,2,2,0,0,0	📰 User Def. 3	Auto
INFO Detail set.	SET OK	INFO Detail set.	SET OK

	Sharpness			
•	ß	Strength		
0	ſ	Fineness		
	G	Threshold		
0	Contrast			
•	Saturation			
	Color tone			
۲	Filter effect (Monochrome)			
Ø	Toning effect (Monochrome)			

Caution

 For movie recording, "*, *" is indicated for the [Fineness] and [Threshold] parameters of [Sharpness]. [Fineness] and [Threshold] cannot be set for movie recording.

Settings and Effects

Monochrome Adjustment

You can customize any Picture Style by changing it from the default settings. For details on customizing [Monochrome], see [3:4] Monochrome Adjustment.

1. Select [C: Picture Style].

r		AF	A		((†))	Ý		A	*
1					6			9	10
١	Nhit	e ba	lance			AWB			
(Custo	om V	Vhite	Ва	lance	9			
١	NB S	hift/	Bkt.			0,0/=	±0		
Color space					sRGB				
ł	Pictu	re St	yle			Auto)		
(Clarit	ty					+ 0		
3	Shoc	ting	creat	tive	filte	rs			OFF

2. Select a Picture Style.

Picture Style	G,G,G,O,&,O
🛤 Auto	4,2,3,0,0,0
🛋 Standard	4,2,3,0,0,0
Portrait	3,2,4,0,0,0
📰 Landscape	5,2,3,0,0,0
Fine Detail	4,1,1,0,0,0
💷 Neutral	0,2,2,0,0,0
INFO Detail set.	SET OK

Select the Picture Style to adjust, then press the < INFO > button.

3. Select an option.

Detail set.	EP Portrait
Sharpness	
Strength	0
Fineness	0B
Threshold	0
Contrast	<u> = + + + 0</u> + + + + ₽
Default set.	MENU ᠫ

- Select an option, then press the < () > button.
- For details on settings and effects, see <u>Settings and Effects</u>.

4. Set the effect level.



Adjust the effect level, then press the < (P) > button.

Picture Style	G.G.G.O.&.O
👬 Auto	4,2,3,0,0,0
👬 Standard	4,2,3,0,0,0
Portrait	5,2,4,0,0,0
Landscape	5,2,3,0,0,0
📰 Fine Detail	4,1,1,0,0,0
Neutral	0,2,2,0,0,0
INFO Detail set.	SET OK

- Press the < MENU > button to save the adjusted setting and return to the Picture Style selection screen.
- Any settings you change from default values are displayed in blue.

Note

- For movie recording, [Fineness] and [Threshold] for [Sharpness] cannot be set (not displayed).
- By selecting [Default set.] in step 3, you can restore the parameter settings of the respective Picture Style to the defaults.
- To shoot with the Picture Style you adjusted, first select the adjusted Picture Style, then shoot.

Settings and Effects

0	Shar	Sharpness							
	Strength		0: Weak outline emphasis	7: Strong outline emphasis					
	Fineness*1		1: Fine	5: Grainy					
	Threshold*2		1: Low	5: High					
\bullet	Cont	rast	-4: Low contrast	+4: High contrast					
&	Satu	ration	-4: Low saturation	+4: High saturation					
	Colo	r tone	-4: Reddish skin tone	+4: Yellowish skin tone					

* 1: Indicates the edge thinness that enhancement applies to. The smaller the number, the finer the outlines that can be emphasized.

*2: Contrast threshold between edges and surrounding image areas, which determines edge enhancement. The smaller the number, the more the outline will be emphasized when the contrast difference is low. However, noise tends to be more noticeable when the number is smaller.

VFilter effect

Detail set.	🚟 Monochrome		
	N:None		
	Ye:Yellow		
	Or:Orange		
 Filter effect 	R:Red		
	G:Green		

With a filter effect applied to a monochrome image, you can make white clouds or green trees stand out more.

Filter	Sample Effects
N:None	Normal black-and-white image with no filter effects.
Ye:Yellow	Blue sky will look more natural, and white clouds will look crisper.
Or:Orange	The blue sky will look slightly darker. The sunset will look more brilliant.
R:Red	The blue sky will look quite dark. Fall leaves will look crisper and brighter.
G:Green	Skin tones and lips will appear muted. Green tree leaves will look crisper and brighter.

Note

Increasing [Contrast] will make the filter effect more pronounced.

Toning effect

Detail set.	EM Monochrome
	N:None
	S:Sepia
	B:Blue
	P:Purple
Toning effect	G:Green

By applying a toning effect, you can create a monochrome image in the selected color. Effective when you want to create memorable images.

You can select a base Picture Style such as [**Portrait**] or [Landscape], adjust it as desired, and register it under [User Def. 1] – [User Def. 3]. Useful when creating several Picture Styles with different settings.

Picture Styles that you have registered on the camera using EOS Utility (EOS software, 😰) can also be modified here.

1. Select [C: Picture Style].

		AF	A		((†))	Ý		ġ.	*
1		3			6		8	9	10
١	Nhit	te ba	lance			AWB			
(Cust	om V	Vhite	ва	lance	e			
١	NB :	Shift/	Bkt.			0,0/:	±0		
(Colo	r spa	ce			sRG	В		
ł	Pictu	ire St	yle			Auto)		
(Clari	ty					+0		
S	Shoo	oting	crea	tive	filte	rs			OFF

2. Select [User Def.].

Picture Style	
📰 Neutral	0,2,2,0,0,0
📰 Faithful	0,2,2,0,0,0
🖅 Monochrome	4,2,3,0,N,N
User Def. 1	Auto
🚉 User Def. 2	Auto
Ser Def. 3	Auto
INFO Detail set.	SET OK

• Select [User Def. *], then press the < INFO > button.

3. Press the < >> button.

Detail set.	📰 User Def. 1
Picture Style	Auto
Sharpness	
Strength	0
(Fineness	0 — ↓ →→51
Threshold	0 →→→→−5
Contrast	=++++ů++++=
	MENU 🗢

- 4. Select a base Picture Style.

Detail set. 📰 User Def. 1	
Auto	Fine Detail
Standard	Neutral
Portrait	Faithful
Landscape	Monochrome
	SET OK

- Select the base Picture Style, then press the < (> button.
- Also select styles this way when adjusting styles registered to the camera with EOS Utility (EOS software).

5. Select an option.

Detail set.	📰 User Def. 1
Picture Style	Landscape
Sharpness	
Strength	0
Fineness	0
Threshold	aa
Contrast	=++++ů++++=
	MENU 🕤

• Select an option, then press the < () > button.

6. Set the effect level.



- Adjust the effect level, then press the < () > button.
- For details, see Picture Style Customization.

Picture Style	
📰 Neutral	0,2,2,0,0,0
📰 🛙 Faithful	0,2,2,0,0,0
📰 Monochrome	4,2,3,0,N,N
📰 User Def. 1	Landscape
🚉 User Def. 2	Auto
📰 User Def. 3	Auto
INFO Detail set.	SET OK

- Press the < MENU > button to save the adjusted setting and return to the Picture Style selection screen.
- The base Picture Style will be indicated on the right of [User Def. *].
- Blue style names in [User Def. *] have been changed from default values.

Caution

- If a Picture Style is already registered under [User Def. *], changing the base Picture Style will clear the parameter settings of the previously registered User Defined Picture Style.
- You can restore the default [User Def. *] style and settings by selecting [Basic settings] in [
 exect camera].

Note

- To shoot with a registered Picture Style, select the registered [User Def. *], then shoot.
- For instructions on registering a Picture Style file to the camera, refer to the EOS Utility Instruction Manual.

You can adjust image clarity, as determined by the contrast of image edges. Set toward the negative end to make images look softer or toward the positive end for a sharper appearance.

1. Select [Carity].

r	2	AF	٨		((1))	Ý		Ċ.	*		
					6			9	10		
١	Whit	e ba	lance			AWB					
(Custo	om V	Vhite	e Ba	lance	5					
WB Shift/Bkt.						0,0/±0					
Color space						sRGB					
Picture Style						Auto					
Clarity											
Shooting creative filt						rs			COFF		

2. Set the effect level.

Clarity	
• • • • • • • • • • • • • • • • • • •	
SET	OK

Caution

- Setting clarity may darken or lighten the areas around boundaries in high-contrast images.
- The effect of this setting is not shown in images on the screen in still photo shooting.

- Configuring Shooting Creative Filters
- Characteristics of Shooting Creative Filters

You can shoot with filter effects applied. Note that only images with the filter effects applied are saved.

Configuring Shooting Creative Filters

1. Select [: Shooting creative filters].

Ľ	2	AF	►		((†))	Ý		Ċ.	*			
					6			9	10			
١	Whit	e ba	lance			AWB						
(Custo	om V	Vhite	Ва	lance							
WB Shift/Bkt.						0,0/±0						
Color space						sRGB						
Picture Style						Auto						
Clarity						=++++ 0 ++++=						
	Shoc	filte	rs			COFF						

Caution

● The camera shoots in single shooting mode when a Creative filter is set, regardless of the drive mode setting (< 및‡ >, < 및H >, or < 및 >). 2. Select a filter effect.



- Use the < is > dial to select the filter effect (is).
- Images are shown with the filter effect applied.



- Some items on the AF tab are not available with [Fish-eye effect] or [Miniature effect] selected.
- 3. Adjust the filter effect.



- Press the < INFO > button.
- Use the < is > dial to adjust the filter effect (i).

4. Take the picture.

The images captured have the filter effect applied.

	Note
•	Different creative filter effects are available in movie recording ().

Grainy B/W

Makes the image grainy and black and white. By adjusting the contrast, you can change the black-and-white effect.

Soft focus

Gives the image a soft look. By adjusting the blur, you can change the degree of softness.

Fish-eye effect

Gives the effect of a fish-eye lens. The image will have barrel distortion. Depending on the level of this filter effect, the area trimmed along the periphery of the image changes. Also, because this filter effect magnifies the center of the image, the apparent resolution at the center may degrade depending on the number of recorded pixels, so set the filter effect while checking the resulting image. **[AF area]** is set to **[1-point AF]**.

Art bold effect

Makes the photo look like an oil painting and the subject look more three-dimensional. By adjusting the effect, you can change the contrast and saturation. Note that subjects such as the sky or white walls may not be rendered with a smooth gradation and may look irregular or have significant noise.

Water painting effect

Makes the photo look like a watercolor painting with soft colors. By adjusting the effect, you can change the color density. Note that night scenes or dark scenes may not be rendered with a smooth gradation and may look irregular or have significant noise.

Toy camera effect

Shifts colors to those typical of toy cameras and darkens the four corners of the image. Color tone options can be used to change the color cast.

Miniature effect

Creates a diorama effect.

Shooting under the default setting will keep the center looking sharp.

To move the area that looks sharp (the scene frame), see "Adjusting the Miniature Effect" (2).

[AF area] is set to [1-point AF]. Shooting with the AF point and scene frame aligned is recommended.

Caution

- With [Grainy B/W], the grainy preview will differ somewhat from the appearance of your shots.
- With [Soft focus] or [Miniature effect] options, the blurred effect preview may differ somewhat from the appearance of your shots.
- No histogram is displayed.
- A magnified view is not available.

- Peripheral Illumination Correction
- Distortion Correction
- Digital Lens Optimizer
- Chromatic Aberration Correction
- Diffraction Correction

Vignetting, image distortion, and other issues may be caused by lens optical characteristics. The camera can compensate for these phenomena by using [Lens aberration correction].

1. Select [

T.		AF	AF ▶		((1))			â	i *	
1			4		6			9	10	
I	ens	aber	ratio	on c	orrec	tion				
l	ong	g exp	. noi	se r	educ	tion			OFF	
High ISO speed NR								 0		
[Dust	Dele	ete D	ata						

2. Select an option.

Lens aberration correction	
RF-S18-45mm F4.5-6.3]	IS STM
Peripheral illum corr	ON
Distortion correction	OFF
Digital Lens Optimizer	©.0
	MENU 🕤

3. Select a setting.



- Confirm that the name of the attached lens and [Correction data available] are displayed.
- If [Correction data not available] or []] is displayed, see <u>Digital Lens</u> <u>Optimizer</u>.

Peripheral Illumination Correction

Vignetting (dark image corners) can be corrected.

Caution

- Depending on shooting conditions, noise may appear on the image periphery.
- The higher the ISO speed, the lower the amount of correction will be.

Note

 The amount of correction applied will be lower than the maximum correction amount applied with Digital Photo Professional (EOS software). Distortion (image warping) can be corrected.

Caution

- Specifying distortion correction may subtly change the angle of view, resulting in images that are cropped a little and seem slightly less sharp.
- The amount of image cropped may vary between still photos and movies.

Note

With RF lenses, distortion correction during movie recording is supported.

Various aberrations from lens optical characteristics can be corrected, along with diffraction and low-pass filter-induced loss of resolution.

If [Correction data not available] or []] is displayed by [Digital Lens Optimizer], you can use EOS Utility to add the lens correction data to the camera. For details, refer to the EOS Utility Instruction Manual.

Caution

- Image processing after you shoot takes longer when set to [High] (which causes the access lamp to be illuminated longer).
- Maximum burst is lower with [High]. Image recording to the card also takes longer.
- Depending on shooting conditions, noise may be intensified together with the
 effects of correction. Image edges may also be emphasized. Adjust Picture Style
 sharpness or set [Digital Lens Optimizer] to [Disable] as needed before shooting.
- The higher the ISO speed, the lower the amount of correction will be.
- For movie recording, [Digital Lens Optimizer] will not appear. (Correction is not possible.)
- The effect of Digital Lens Optimizer cannot be checked on the screen at the time of shooting.

Note

 With [Digital Lens Optimizer] set to [Standard] or [High], [Chromatic aberr corr] and [Diffraction correction] are not displayed, but they are both set to [Enable] for shooting.

Chromatic Aberration Correction

Chromatic aberration (color fringing around subjects) can be corrected.

Note [Chromatic aberr corr] is not displayed when [Digital Lens Optimizer] is set to [Standard] or [High].

Diffraction (loss of sharpness caused by the aperture) can be corrected.

Caution

- Depending on shooting conditions, noise may be intensified together with the effects of correction.
- The higher the ISO speed, the lower the amount of correction will be.
- For movie recording, [Diffraction correction] will not appear. (Correction is not possible.)
- The effect of diffraction correction cannot be checked on the screen at the time of shooting.

Note

- "Diffraction correction" corrects degraded resolution not only from diffraction but also from the low-pass filter and other factors. Thus, correction is also effective for exposures with the aperture wide open.
- [Diffraction correction] is not displayed when [Digital Lens Optimizer] is set to [Standard] or [High].

Caution

General precautions for lens aberration correction

- Lens aberration correction cannot be applied to existing JPEG/HEIF images.
- When using a non-Canon lens, setting the corrections to [Disable] is recommended even if [Correction data available] is displayed.
- Magnifying the periphery of the image may display parts of the image that will not be recorded.
- The amount of correction (except diffraction correction) is less for lenses that do not provide distance information.

Note

General notes for lens aberration correction

- Effects of lens aberration correction vary by lens and shooting conditions. Also, the
 effect may be difficult to discern depending on the lens used, shooting conditions,
 etc.
- If the correction is difficult to discern, magnifying and checking the image after shooting is recommended.
- Corrections are applied even when an extender or life-size converter is attached.
- If the correction data for the attached lens is not registered to the camera, the result will be the same as when the correction is set to [Disable] (except for diffraction correction).
- If necessary, refer to the EOS Utility Instruction Manual as well.

Noise such as dots of light or banding that tends to occur in long exposures at shutter speeds of one sec. or slower can be reduced.

1. Select [C: Long exp. noise reduction].

Ľ	2	AF	▲		((†))	Ý		<u>n</u>	*
j.	Lens	aber	ratio	n co	orrec	tion			
	Long	g exp	nois	e re	duc	tion			OFF
1	High ISO speed NR								
Î	Dust	t Dele	te Da	ata					

2. Set a reduction option.

Long exp. noise reduction	
Disable	OFF
Auto	AUTO
Enable	ON
INFO Help	SET OK

Auto

For images exposed for 1 sec. or longer, noise reduction is performed automatically if noise typical of long exposures is detected. This setting is effective enough in most cases.

Enable

Noise reduction is performed for all images exposed for 1 sec. or longer. The [Enable] setting may reduce noise that cannot be detected with the [Auto] setting.

Caution

- With [Auto] or [Enable] set, noise reduction after you shoot may take as long as exposure for the shot.
- Images may look grainier with the [Enable] setting than with the [Disable] or [Auto] setting.
- [BUSY] is displayed as noise is reduced, and the shooting screen is not displayed until processing is finished, when you can shoot again.

You can reduce the image noise generated. This function is especially effective when shooting at high ISO speeds. When shooting at low ISO speeds, the noise in the darker parts of the image (shadow areas) can further be reduced.

1. Select [D: High ISO speed NR].



2. Set the level.

High ISO speed NR	
Standard	-10
High	
Multi Shot Noise Reduction	NR
INFO Help	SET OK

Low, Standard, High

The camera applies an amount of noise reduction corresponding to your specified level.

Multi Shot Noise Reduction

Applies noise reduction with higher image quality than [High]. For a single photo, four shots are taken continuously and aligned and merged automatically into a single JPEG image.

Note that [Multi Shot Noise Reduction] is not available with image quality set to RAW or RAW+JPEG.

Caution

Precautions on Multi Shot Noise Reduction

- If there is significant misalignment in the image due to camera shake, the noise reduction effect may become smaller.
- Be careful about camera shake in handheld shots. Using a tripod is recommended.
- If you shoot a moving subject, the moving subject may leave afterimages.
- Auto image alignment may not function properly with repetitive patterns (lattice, stripes, etc.) or flat, single-tone images.
- If the subject's brightness changes as the four consecutive shots are taken, irregular exposure in the image may result.
- After shooting, it may take some time to record an image to the card after performing noise reduction and merging the images. "BUSY" is displayed as images are processed, and shooting is not possible until processing is finished.
- [Multi Shot Noise Reduction] is not available with any of these features: bulb exposures, AEB or WB bracketing, RAW or RAW+JPEG, long exposure noise reduction, multiple exposures, HDR mode or HDR PQ settings, focus bracketing, Creative filter shooting, or RAW burst mode.
- Flash photography is not available. Note that the AF-assist beam of Speedlites may be fired, depending on the [AF: AF-assist beam firing] setting.
- [Multi Shot Noise Reduction] is not available (not displayed) when recording movies.
- The camera automatically switches to [Standard] when RAW or RAW+JPEG image quality is set.
- The camera automatically switches to [Standard] if you set the power switch to <OFF>, replace the battery or card, or switch to mode or movie recording.

Preparation

Dust Delete Data Appending

Dust Delete Data used to erase dust spots can be appended to images in case sensor cleaning leaves dust on the sensor. The Dust Delete Data is used by Digital Photo Professional (EOS software) to erase the dust spots automatically.


Preparation

- Use an RF or EF lens.
- Prepare a solid white object such as a sheet of paper.
- Set the lens focal length to 50 mm or longer.
- Set the focus mode to MF (𝔅) and focus manually at infinity (∞). If the lens has no distance scale, rotate the camera to face toward you and turn the focusing ring clockwise all the way.


1. Select [Di: Dust Delete Data].

ľ		AF	٨		((1))	Ý		ġ.	*
			4		6			9	10
L	ens	aber	ratic	n c	orrec	tion			
ι	ong	exp	. noi	se re	educ	tion			OFF
High ISO speed NR							.. 0		
I	Dust	Dele	ete D	ata					

2. Select [ОК].

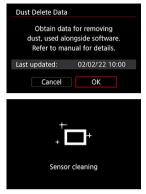

 After the automatic self-cleaning of the sensor is performed, a message will appear. Although there will be a mechanical sound of the shutter during the cleaning, no picture is taken. 3. Shoot a plain white object.

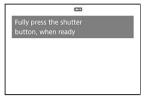

- Shoot with a plain white object (such as a new sheet of white paper) filling the screen, at a distance of 20–30 cm (0.7–1.0 ft.).
- Since the image will not be saved, the data can still be obtained even if there is no card in the camera.

Dust Delete Data	
Data obtained	
ОК	

- When the picture is taken, the camera will start collecting the Dust Delete Data. When the Dust Delete Data is obtained, a message will appear.
- If the data is not obtained successfully, an error message will appear. Check the information in <u>Preparation</u>, select [OK], and shoot again.

The camera will append the Dust Delete Data obtained to all shots from now on. Acquiring Dust Delete Data before shooting is recommended.

For details about using Digital Photo Professional (EOS software) to erase dust spots automatically, refer to the Digital Photo Professional Instruction Manual.

File size is essentially unaffected by Dust Delete Data appended to images.

Caution

- Dust Delete Data is not obtained when EF-S lenses are used.
- Dust Delete Data is not added to images when [Distortion correction] is set to [Enable].
- If the object has any pattern or design, it may be recognized as dust data and affect the accuracy of the dust deletion with the Digital Photo Professional (EOS software).

- Merging Multiple Exposures with a JPEG Image Recorded on the Card
- Checking and Deleting Multiple Exposures During Shooting

As you shoot multiple exposures (2–9), you can see how the images will be merged into a single image.

1. Select [1]: Multiple exposure].



2. Set [Multiple exposure].



Select [Enable].

3. Set [Multi-expos ctrl].



Select a merging option, then press the < () > button.

Additive

The exposure of each single image captured is added cumulatively. Based on **[No. of exposures]**, set negative exposure compensation. Follow these basic guidelines to set the exposure compensation amount.

Exposure compensation setting guidelines, by number of exposures

Two exposures: -1 stop, three exposures: -1.5 stops, four exposures: -2 stops

Average

Based on the [No. of exposures], negative exposure compensation is set automatically as you shoot multiple exposures. If you shoot multiple exposures of the same scene, the exposure of the subject's background will be automatically controlled to obtain the standard exposure.

Bright/Dark

Brightness (or darkness) of the base image and added images is compared at the same position, and bright (or dark) portions are retained. Some overlapping colors may be mixed, depending on the relative brightness (or darkness) of the images. 4. Set [No. of exposures].



• Select the number of exposures, then press the < (B) > button.

5. Set [Continue Mult-exp].

1 shot only
Continuously

- With [1 shot only], multiple-exposure shooting will be canceled automatically after the shooting ends.
- With [Continuously], multiple-exposure shooting continues until the setting in step 2 is set to [Disable].

6. Shoot the first exposure.



- The captured image is displayed.
- The [] icon blinks.
- The number of remaining exposures is indicated on the screen (1) for reference.

7. Shoot the next exposures.

- Images captured so far are displayed merged. For only image display, press the < NFO > button repeatedly.
- Multiple-exposure shooting will end when the set number of exposures are taken.

Note

 As shooting information, the multiple-exposure image has information captured for the last shot.

Caution

- Image noise, color shift, or banding may be noticeable in multiple exposures, depending on subjects and shooting conditions.
- With multiple exposures, the more exposures there are, the more noticeable the noise, irregular colors, and banding will be.
- Multiple-exposure shooting is canceled if you set the power switch to < OFF > or switch batteries or cards.
- Multiple-exposure shooting ends if you switch to a Basic Zone mode or to < < >,
 , or < >, or < >, >
- If you connect the camera to a computer, multiple-exposure shooting will not be possible. If you connect the camera to a computer during shooting, multipleexposure shooting will end.

You can select a JPEG image recorded on the card as the first single exposure. The selected JPEG image will remain intact.

1. Select [Select image for multi. expo.].

Multiple exposure	
Multiple exposure	Enable
Multi-expos ctrl	Additive
No. of exposures	3
Continue Mult-exp	1 shot only
Select image fo	r multi. expo.
Deselect imq	MENU *

2. Select the first image.

- Turn the < √, > dial to select the first image, then press the < () > button.
- Select [OK].
- The file number of the selected image will be displayed at the bottom of the screen.

3. Take the picture.

 When you select the first image, the number of remaining exposures as set with [No. of exposures] will decrease by 1.

Caution

- The following images cannot be selected.
 - · RAW or HEIF images
 - JPEG images in M / S1 / S2 sizes
 - · Images from other cameras
- Images that cannot be merged may be displayed.

Note

- You can also select a JPEG image used in multiple-exposure shooting.
- Select [Deselect img] to cancel image selection.
- The color space set for the first image also applies to subsequent images.



Before you finish shooting your specified number of exposures, you can press the < > button to view the multiple-exposure image so far, check exposure, and see how the images will be merged.

Pressing the < $\overleftarrow{\mathbbm}$ > button will display the operations possible during multiple-exposure shooting.

Option	Description					
Return to previous screen	The screen before you pressed the < $\widecheck{\boxplus}$ > button will reappear.					
🗃 Undo last image	Deletes the last image you shot (enabling you to replace it by shooting again). The number of remaining exposures will increase by 1.					
🕒 Save and exit	Saves shots up to that point as a multiple-exposure image and exits multiple-exposure shooting.					
Section 2 Exit without saving	Exits the multiple-exposure shooting without saving the image.					

Caution

During multiple-exposure shooting, you can only play back multiple-exposure images.

? FAQ

Are there any restrictions on the image quality?

Multiple exposures are captured as JPEG [**1**] images. Even with [**1**]: **Image quality**] set to RAW only, they are captured as JPEG [**1**] images.

Can I merge images recorded on the card?

With [Select image for multi. expo.], you can select the first single exposure from the images recorded on the card (2). Note that you cannot merge multiple images already recorded on the card.

Will auto power off take effect during multiple-exposure shooting?

During multiple-exposure shooting, auto power off will not take effect. Note that before you start multiple-exposure shooting, auto power off automatically takes effect at the time set in the [Auto power off] option of [**Ý**: Power saving], which will cancel multiple-exposure shooting.

Enables fast continuous shooting of RAW images. Useful for choosing the best shot, taken at exactly the right moment, from your captured images. Shots are captured as a single file (roll) with multiple images.

You can extract any image from the roll to save it separately (2).

1. Select [C: RAW burst mode].

Ô		٩F	▲		((1))	Ý		Ð	*		
1			4		6			9	10		
M	ulti	ple	expo	sure	e	Disa	able				
RA	W	burs	st mo	de		Disa	ble				
Fo	Focus bracketing						Disable				

2. Set [RAW burst mode].




3. Select [Enable].



After you select [Enable], [I] is displayed when you shoot.

4. Select [Pre-shooting].

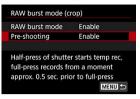

5. Set an option.

RAW burst mode (crop)						
Pre-shooting	Enable					
	Disable					

- [Enable]: Shooting begins slightly before (up to approx. 0.5 sec. before) you press the shutter button completely, after you momentarily press it halfway. [Conditional is displayed when you shoot.
- [Disable]: Shooting begins when you press the shutter button completely. [46]; is displayed when you shoot.

6. Shoot.



- An on-screen indicator shows buffer status. The color varies by status. The indicator is green during shooting, red if recording is not possible because the buffer is full, and white otherwise.
- Pressing the shutter button completely shoots continuously until the buffer is full or you release the button.

Caution

- Use cards with 4 GB or more of free space.
- Images may not be captured correctly if the battery runs out during image processing while you are shooting in RAW burst mode with a slow-writing card and low battery.
- Display pauses when you press the shutter button halfway.
- Camera shake or subject motion may cause image distortion.
- ISO Auto is used when shooting in < P >, < Tv >, or < Av > mode.
- Shutter speeds slower than 1/30 sec. are not available in < Tv >, < M>, or < Fv > mode.
- The camera shoots with approx. 24 megapixels (6000×4000).
- Images are captured using the electronic shutter. Maximum shutter speed is 1/4000 sec. Before shooting, consider checking the [Electronic] precautions ((2)).
- To view images in rolls on a computer, either extract them or use the EOS application Digital Photo Professional.
- Set [D: RAW burst mode] to [Disable] if you will connect the camera to a computer and use the EOS application EOS Utility. Setting it to [Enable] will prevent the camera from communicating with the computer.
- Maximum burst may be lower under low light.
- In RAW burst mode, the aperture value will change if you zoom while pressing the shutter button halfway or completely with zoom lenses that have variable maximum aperture. To maintain the same exposure in < M > mode, consider shooting with ISO Auto.
- In RAW burst mode, even with zoom lenses that do not have variable maximum aperture, exposure may change if you zoom while pressing the shutter button halfway or completely. For details, refer to the Canon website (⁷_Q).
- There may be a delay before subsequent shooting in RAW burst mode is possible, depending on shooting conditions, the type of memory card, and the number of shots taken continuously. Writing will finish faster on cards with a fast write speed.

Note


- RAW images captured are saved in a single file (roll). These files have a .CR3 file extension.
- Picture Style, white balance, and Auto Lighting Optimizer settings configured for the first shot also apply to the next shots.
- The camera does not beep as you are shooting.
- [D: RAW burst mode] reverts to [Disable] when the power switch is set to < OFF >.

Focus bracketing enables continuous shooting with the focal distance changed automatically after each shot. These images enable you to create a single image in focus over a deep depth of field. Compositing is also possible using an application that supports depth compositing, such as Digital Photo Professional (EOS software).

1. Select [C: Focus bracketing].

r	2	AF	▲		((1))	Ý		Ð	*	
1			4		6			9	10	
	Mult	iple	expo	sure		Disa	ble			
1	RAW	burs	st mo	ode		Disa	ble			
1	Focus bracketing					Disable				

2. Set [Focus bracketing].

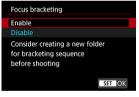


Select [Enable].

3. Set [Number of shots].

Number of shots	
▲ 100 ▼	
OK Cancel	

- Specify the number of images captured per shot.
- Can be set in a range of [2]-[999].
- 4. Set [Focus increment].

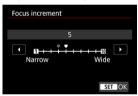


- Specify how much to shift the focus. This amount is automatically adjusted to suit the aperture value at the time of shooting. Larger aperture values increase the focus shift and make focus bracketing cover a wider range under the same focus increment and number of shots.
- After completing the settings, press the < () > button.

5. Set [Exposure smoothing].

Focus bracketing
Fundation and esthing h England
Exposure smoothing Enable
Disable

- You can compensate for changes in image brightness during focus bracketing by selecting [Enable], so that the camera makes adjustments based on differences between the displayed and actual aperture value (effective f/number), which varies by focal position.
- Select [Disable] if you prefer not to compensate for changes in image brightness during focus bracketing. Use this option for purposes other than depth compositing of the captured images in applications such as DPP.

6. Set [Depth composite].

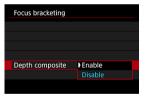

- Select [Enable] for in-camera depth compositing. Both the depthcomposited image and the source images are saved.
- Select [Disable] if you prefer not to perform in-camera depth compositing. Only captured images are saved.

7. Set [Crop depth comp.].

Focus bracketing	
	Enable
Crop depth comp.	Disable

- Select [Enable] for cropping before compositing, to prepare any images without a sufficient angle of view for compositing alignment by cropping them to correct the angle of view.
- Select [Disable] if you prefer not to crop these images. In this case, areas without a sufficient angle of view are covered by a black border in the saved images. You can crop the images manually or edit them as needed.

8. Shoot.

- To save your shots in a new folder, tap [1] and select [OK].
- Focus at the nearer end of your preferred focal range, then press the shutter button completely.
- Once shooting begins, release the shutter button.
- The camera shoots continuously, shifting the focal position toward infinity.
- Shooting ends after your specified number of images, or at the far end of the focal range.
- To cancel shooting, press the shutter button completely again.

Caution

- Focus bracketing is intended for still photo shooting on a tripod.
- Shooting with a wider angle of view is recommended. After depth compositing, you can crop the image if necessary.
- For details on lenses compatible with this feature, visit the Canon website (2).
- Suitable [Focus increment] settings vary by subject. An unsuitable [Focus increment] setting may cause unevenness in composite images, or shooting may take more time because more shots are taken. Take some test shots to decide a suitable [Focus increment] setting.
- Flash photography is not available.
- Shooting under flickering light may cause uneven images. In this case, lowering the shutter speed may give better results.
- Focus bracketing is not available when the camera is set to manual focus (2).
- Canceling shooting in progress may cause exposure problems in the last image. Avoid using the last image when combining the images in Digital Photo Professional.
- Maximum shutter speed with focus bracketing is 1/8000 sec.
- Depth compositing is canceled if you open the card/battery compartment cover, or if the remaining battery capacity becomes too low. After cancellation, composited images are not saved.
- Depth compositing may fail for patterned images (with a lattice or stripes, for example) or images that are generally flat and uniform.
- When taking several shots, start by focusing closer, then gradually focus farther away.
- Too great a distance when moving the focal position between multiple shots may cause unevenness in depth-composited images, or it may cause compositing to fail.
- Depth compositing is intended for subjects that are not moving. For this reason, shooting subjects in motion may prevent effective compositing.
- Depth compositing of images with multiple subjects may fail if your shots are composed with the subjects far apart from each other, for example.
- To cancel depth compositing in progress, press the < INFO > button. Cancellation discards the composited image but keeps all source images.
- In depth compositing, optimal images from the shots are selected and combined by the camera. Not all of the shots are combined to create the composite image.

Note

- Using a tripod, remote switch (sold separately,), or wireless remote control (sold separately,) is recommended.
- For best results, set the aperture value in a range of f/5.6–11 before shooting.
- Details such as shutter speed, aperture value, and ISO speed are determined by conditions for the first shot.
- [D: Focus bracketing] reverts to [Disable] when the power switch is set to <OFF >.

Depth compositing image quality setting and images saved

		Source Images*1	Composited Image
	Only RAW (CRAW)	RAW	JPEG/HEIF*2
Image Quality	Only JPEG/HEIF*3	JPEG/HEIF	JPEG/HEIF
	RAW (CRAW) + JPEG/HEIF*3	RAW (CRAW) + JPEG/HEIF	JPEG/HEIF

* 1 Multiple captured images

* 2 Image quality of composited images is L when set to RAW (CRAW).

* 3 M/IM/IS1/IS1/S2 image quality is not available. Settings are adjusted so that the resulting image is II for M/IS1/S2 or IIL for IM/IS1/S2 or IIL for IM/I

Note

 Composited images are saved as JPEG or HEIF images. RAW composited images are not produced. With the interval timer, you can set the shooting interval and number of shots, so that the camera takes individual shots repeatedly according to your interval until your specified number of shots are taken.

1. Select [



2. Select [Enable].



Select [Enable], then press the < INFO > button.

3. Set the shooting interval and number of shots.



- Select an option to set (hours : minutes : seconds / number of shots).
- Press the < (P) > button to display [].
- Set a value, then press the < ()> button. (Returns to []).)


Interval

Can be set in a range of [00:00:01]-[99:59:59].

No. of shots

Can be set in a range of [01]-[99]. To keep the interval timer on indefinitely until you stop it, set [00].

4. Select [OK].

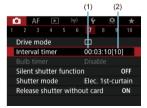

- The interval timer settings will be displayed on the menu screen.
 (1) Interval
 - (2) Number of shots

5. Take the picture.

- First shot is taken and shooting continues according to the interval timer settings.
- During interval timer shooting, [TIMER] will blink.
- After the set number of shots are taken, the interval timer shooting will stop and be automatically canceled.

Note

- Using a tripod is recommended.
- Taking test shots in advance is recommended.
- Even during interval timer shooting, you can still shoot as usual by pressing the shutter button completely. Note that the camera will prepare for the next interval timer shot approx. 5 sec. in advance, which will temporarily prevent operations such as adjusting shooting settings, accessing menus, and playing back images.
- If the next scheduled interval timer shot is not possible because the camera is shooting or processing images, it will be skipped. For this reason, fewer shots than specified will be taken.
- Even during interval timer operation, auto power off is triggered after approx. 8 sec. of inactivity, as long as [Auto power off] under [\vec{Y}: Power saving] is not set to [Disable].
- Can also be combined with AEB, white balance bracketing, multiple exposures, and HDR mode.
- To stop interval timer shooting, select [Disable] or set the power switch to <OFF >.

Caution

- Do not point the camera toward an intense light source, such as the sun or an intense artificial light source. Doing so may damage the image sensor or the camera's internal components.
- In < AF > focus mode, the camera will not shoot unless subjects are in focus. Consider setting the mode to manual focus and focusing manually before shooting.
- If the shooting time is long, using the household power outlet accessories (sold separately) is recommended.
- Shooting long exposures or using shutter speeds longer than the shooting interval will prevent shooting at the specified interval. For this reason, fewer shots than specified will be taken. Using shutter speeds nearly the same as the shooting interval may also reduce the number of shots.
- If the time it takes to record to the card exceeds the shooting interval due to the shooting functions set or card performance, some of the shots may not be taken with the set intervals.
- When using flash with interval timer shooting, set an interval longer than the flash charge time. Intervals that are too short may prevent the flash from firing.
- Intervals that are too short may prevent shooting or autofocusing.
- Interval timer shooting is canceled and reset to [Disable] if you set the power switch to < OFF >, set the shooting mode to < B >/< ④ >/< ④ >/< ♥, >, or use EOS Utility (EOS software).
- During interval timer shooting, you cannot use <u>Remote Control Shooting</u> or remoterelease shooting with a Speedlite.

Disables shutter release sounds, operating sounds, and firing and illumination of the flash and other light sources.

The following settings are used and cannot be changed.

- Shutter mode: [Electronic]
- Beep: [Disable]
- Long exposure noise reduction: [Disable]
- Flash firing: [Disable]
- AF-assist beam firing: [Disable]

When using lenses equipped with focus preset, consider turning off the focus preset beep.

1. Select [1]: Silent shutter function].

T.	2	AF	A		((₁))	Ý		ġ.	*
1			4		6			9	10
[Drive	mo	de						
1	nter	val ti	mer			Disa	ble		
1	Silen	t shu	itter	fun	ctior				OFF
5	Shut	ter n	node			Elec	. 1st	-cur	tain
F	Relea	ise s	hutte	r w	ithou	ut ca	rd		ON

2. Select [On].

Silent shutter function	
On	ON
Off	OFF
INFO Help	SET OK

You can choose the method of shutter release.

1. Select [C: Shutter mode].

D		AF	A		((1))	Ý		â	*
1			4		6		8	9	10
C	orive	mo	de						
l	nter	val t	imer			Disa	ble		
S	ilen	t shu	itter	fun	ctior				OFF
S	hut	ter n	node			Elec.	1st	-cur	tain
R	elea	ise s	hutte	er w	ithou	ut ca	rd		ON
	cicc	15C 5	nutte		Territor	at ca	i u		

2. Select an option.

Shutter mode
Mechanical
Electronic
SET OK

Mechanical

Shooting activates the mechanical shutter. Recommended when shooting with the aperture of a bright lens wide open.

Elec. 1st-curtain

Camera vibration blur may be reduced more than with the mechanical shutter, under some shooting conditions.

Flash sync shutter speed can be set higher than with the mechanical shutter.

Electronic

Enables reduced sound and vibration from shutter operations, compared to mechanical shutter or electronic first-curtain.

Recommended when shooting with the aperture of a bright lens wide open.

Maximum shutter speed can be set higher than for mechanical shutter or electronic firstcurtain.

- A white frame is displayed around the screen when [☐: Drive mode] is set to [□,H] or [□,H].
- Shutter operations are accompanied by beeps. You can disable beeping in [**Ý**: **Beep**].

Caution

- Defocused image areas may be incomplete when shooting near maximum aperture at high shutter speeds, depending on shooting conditions. If you dislike the appearance of defocused image areas, shooting as follows may give better results.
 - · Shoot with an option other than [Elec. 1st-curtain].
 - · Lower the shutter speed.
 - · Increase the aperture value.
- Setting [Silent shutter function] to [On] sets the shutter mode to [Electronic].
- Depending on the lens used, consider shooting with [Elec. 1st-curtain] or [Electronic] to ensure effective image stabilization. For details, refer to the lens instruction manual.

Precautions when set to [Elec. 1st-curtain]

Camera vibration blur is more likely to occur with [□]] than with [□]].

Precautions when set to [Electronic]

- The continuous shooting speed may become slower depending on the shooting conditions.
- Images of fast-moving subjects may look distorted.
- Images may lack suitable exposure if the aperture value changes in < P > (Program AE), < Tv > (Shutter-priority AE), or < Fv > (Flexible-priority AE) shooting.
- With some lenses and under some shooting conditions, lens focusing and aperture adjustment may be audible.
- Bands of light may be displayed and captured images may be affected by light and dark banding if you shoot with electronic shutter during flash firing by other cameras or under fluorescent lighting or other flickering light sources.
- Banding may appear in the viewfinder or on the screen if you shoot under flickering light sources.
- Maximum shutter speed is 1/4000 sec. in [□↓] drive mode.

You can set the camera not to shoot unless there is a card in the camera. The default setting is [Enable].


1. Select [1: Release shutter without card].

Ľ		AF	►		((1))	Ý		<u>n</u>	*
1			4		6			9	10
	Drive	e mo	de						
	Inter	val t	imer			Disa	ble		
	Silen	t shu	utter	fun	ctior			Ű.	OFF
	Shut	ter n	node			Elec	. 1st	-cur	tain
	Relea	ase s	hutte	er w	itho	it ca	rd		ON

2. Select [Disable].

Image stabilization by the lens reduces camera shake in still photo shooting. To activate lens IS when using IS lenses without an IS switch, set [**IS mode**] to [**On**] as follows. Note that the [**IS mode**] setting is not displayed when you are using IS lenses that have an IS switch. In that case, setting the lens IS switch to < ON > activates stabilization by the lens.

1. Select [1: IS (Image Stabilizer) mode].

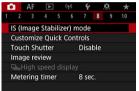

2. Select an [IS mode] option.

IS mode Off On	Image Stabilizer) mode	
) On	node Off	
) On	

[Off]

Deactivates image stabilization.

[On]

Camera shake will be corrected.

Caution

In some cases, this may not provide sufficient stabilization for certain lenses.

Note

• For details on image stabilization for movie recording, see Movie Digital IS.

Resetting the Custom Quick Control Screen or Clearing All Items

Quick Control items and the layout are customizable.

1. Select [Customize Quick Controls].



2. Select [Edit layout].

3. Select items to remove.



- Turn the < Sum > dial or use < ⅔ > to select an item to remove, then press the < (ℜ) > button.
- Items shown on the Quick Control screen are labeled with a checkmark. Items without a checkmark will be removed.

4. Select items to add.



- Turn the < ↓ > dial or use < ☆ > to select an item to add, then press the < ⑧ > button.
- To change the layout, press the < INFO > button.

5. Change the layout.



● Use the < ^t → dial to select an item to move, then press the < () > button.



- Press the < MENU > button to exit setup.

6. Select [Save and exit].



7. Review the screen.



Press the < (P) > button to check the screen with your settings applied.

Resetting the Custom Quick Control Screen or Clearing All Items

Customize Quick Controls	
Edit layout	
Reset settings	
Clear all items	
Reset Quick Control items and layout	
	MENU ᠫ

- Select [Reset settings] to restore the default Quick Control screen items and layout.
- Select [Clear all items] to remove all items from the layout, so that no Quick Control screen is displayed when the < (R) > button is pressed.

Just by tapping the screen, you can focus and take the picture automatically.

1. Enable the Touch Shutter.



- Tap [2013] on the screen.
- Each time you tap the icon, it will toggle between [#3] and [#3].
- [Ci] (Touch Shutter: Enable) The camera will focus on the spot you tap, then the picture will be taken.
- [m] (Touch Shutter: Disable) You can tap a spot to perform focusing on the spot. Press the shutter button completely to take the picture.
- 2. Tap the screen to shoot.



- Tap the face or subject on the screen.
- On the point you tap, the camera focuses (Touch AF) using your specified <u>AF Area</u>.
- When [Cs] is set, the AF point turns green when focus is achieved, then the picture is taken automatically.
- If focus is not achieved, the AF point turns orange and the picture cannot be taken. Tap the face or subject on the screen again.

Caution

- The camera shoots in single shooting mode regardless of the drive mode setting ([□‡], [□]^H], or [□]).
- Tapping the screen focuses with [One-Shot AF], even if [AF: AF operation] is set to [Servo AF].
- Tapping the screen in magnified view will not focus or take the picture.
- When shooting by tapping with [Review duration] in [D: Image review] set to [Hold], you can take the next shot by pressing the shutter button halfway or tapping [].

Note

To shoot with bulb exposure, tap the screen twice. Tap once to start exposure and again to stop it. Be careful not to shake the camera when tapping the screen.

- Review Duration
- Viewfinder Display

Review Duration

To keep the image displayed immediately after you shoot, set to [Hold], and if you prefer not to have the image displayed, set to [Off].

1. Select [1: Image review].



2. Select [Review duration].

Review duration
Off
2 sec.
4 sec.
8 sec.
Hold
SET OK


3. Set a time option.

Note When [Hold] is set, images are displayed as long as the time set in the [Screen off] option of [\u03c4: Power saving].

Viewfinder Display

Set to [Enable] for viewfinder display of your shots immediately after you shoot.

1. Select [C: Image review].

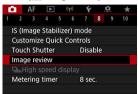

2. Select [Viewfinder display].



3. Select an option.

Note

[Viewfinder display] settings take effect when [Review duration] is set to an option other than [Off].

High-speed display that switches between each shot and the live image is available when shooting in [□,H] (high-speed continuous shooting) drive mode and in a shutter mode other than electronic shutter.

1. Select [D: ⊒HHigh speed display].



2. Select an option.

□ _H High speed display	
Enable	ON
Disable	OFF
	SET OK

 Select [Enable] for display that switches between each shot and the live image.

Caution

- Images may waver or flicker during high-speed display. This occurs more often at high shutter speeds. However, this does not affect shooting results.
- High-speed display is not performed for shutter speeds slower than 1/30 sec., aperture values higher than f/11, conditions that make autofocusing difficult, flash photography, or high ISO expansion. It may also stop as you are shooting.
- High-speed display is not available in the following cases.
 - With [C: OVF sim. view assist] set to [On]
 - With [Display simulation] set to [Disable] or [Exposure only during
 DOF]

You can set how long the metering timer runs (which determines the duration of exposure value display/AE lock) after it is triggered by an action such as pressing the shutter button halfway.

- 1. Select [C: Metering timer].
- 2. Set a time option.

I.	1	AF	٨		((1))	Ý		0	*
1			4		6		8	9	10
						4 se	ec.		
) 8 se	ec.		
						16 :	sec.		
						30 :	sec.		
						1 m	in.		
ľ	/let	ering	time	r		10	min		
						30 1	min		

With display simulation, display of image brightness and depth of field more closely matches the actual brightness (exposure) of your shots.

1. Select [Display simulation].

ſ		AF	A		((1))	Ý	<u>a</u>	*
			4		6		9	10
1	Disp	lay si	mula	tio	n		1	Exp.SIM
(OVF	sim.	view	ass	sist	Off		
9	Shoc	oting	info.	di	sp.			
F	Reve	rse d	ispla	у		On		
١	/F d	ispla	y for	mat				
[Disp	. per	forma	anc	e			ß

2. Select an option.

Display simulation	
Exposure+DOF	(35IM
Exposure	Exp.SIM
Exposure only during 🚳 DOF	Exp.SIM 🗄
S	ET OK
5	

Exposure+DOF (SSIM)

Image brightness and depth of field as displayed closely matches the actual brightness (exposure) of your shots. If you set exposure compensation, the image brightness will change accordingly. Similarly, changes to the aperture value will alter the depth of field.

Exposure (Exp.SIM)

Image brightness as displayed closely matches the actual brightness (exposure) of your shots. If you set exposure compensation, the image brightness will change accordingly.

Exposure only during DOF (Example)

Normally, the image is displayed at standard brightness, so it is easy to see. Only when you press and hold the depth-of-field preview button will image brightness resemble actual brightness (exposure) of your shot, and you can check depth of field.

Disable (OFF)

The image is displayed at standard brightness, so it is easy to see. Even if you set exposure compensation, the image is displayed at the standard brightness.

Caution

Notes on [Exposure+DOF]

- Display may flicker at some shutter speeds.
- With EF lenses, this setting may increase the shutter-release time lag.
- The depth of field shown is only a guideline. For more precise indication of the depth of field, press the depth-of-field preview button.
- [Exposure+DOF] is not available with some lenses.
- [SSIM] blinks if either exposure or depth of field cannot be simulated, or if neither can be simulated.
- [SSIM] is dimmed if either exposure or depth of field simulation stops, or if both simulations stop.

Natural-looking viewfinder and screen display, resembling the view from an optical viewfinder, is available in still photo shooting. Note that images displayed with this feature set to [**On**] may differ from actual shooting results.

1. Select [



2. Select an option.



Caution

- Setting this feature to [On] sets [Display simulation] to [Disable].
- Optical viewfinder simulation is used for display when this feature is set to [On] in HDR shooting.
- Creative filter display is used when shooting with Creative filters, even if this feature set to [On].
- Image brightness before and after One-Shot AF is more likely to change when set to [On] than when set to [Off].
- Optical viewfinder simulation is not used during display to external monitors, including in display to both an external monitor and the camera screen.
- Depending on setting screens, optical viewfinder simulation may not be used for display.
- Display may not resemble an optical viewfinder in some cases.
- The display appearance may change during continuous shooting, with some combinations of drive and shutter modes.

Note

Not available for multiple exposures or in RAW burst mode.

- Customizing Information on the Screen
- Customizing Information in the Viewfinder
- Viewfinder Vertical Display
- Grid
- Histogram
- Lens Information Display
- Clearing Settings

You can customize the details and screens of information shown on the screen or in the viewfinder when you shoot.

Customizing Information on the Screen

1. Select [1: Shooting info. disp.].

ľ		AF	A		((†))	Ý	â	*
			4		6			10
[Displ	ay si	mula	tio			[Exp.SIM
(OVF :	sim.	view	ass	ist	Off		
5	Shoo	ting	info.	dis	sp.			
F	Reve	rse d	ispla	у		On		
١	/F di	spla	y form	nat				
[Disp.	per	forma	anc	е			ß

2. Select [Screen info. settings].

Shoo	ting info. disp.	
Scree	n info. settings	5
VF int	fo/toggle settir	ngs
VF ve	rtical display	On
Grid	display	Off
Histo	gram disp	Brightness
Lens	info display	
	Reset	MENU ᠫ

3. Select screens.




- Turn the < २००३ > dial to select screens of information to show on the camera.
- For information you prefer not to display, press the < ()> button to clear the checkmark [√].
- To edit the screen, press the < INFO > button.

4. Edit the screen.



- Turn the < Use of the select options to show on the screen of information.
- For items you prefer not to display, press the < () > button to clear the checkmark [√].
- Select [OK] to register the setting.

1. Select [1: Shooting info. disp.].

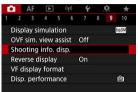

2. Select [VF info/toggle settings].

Shooting info. disp.	
Screen info. settings	5
VF info/toggle settir	ngs
VF vertical display	On
Grid display	Off
Histogram disp	Brightness
Lens info display	
Reset	MENU 🕤

3. Select screens.



- Turn the <
 Just > dial to select screens of information to show on the camera.
- For information you prefer not to display, press the < (ℜ) > button to clear the checkmark [√].
- To edit the screen, press the < INFO > button.

4. Edit the screen.



- Turn the < Use of the select options to show on the screen of information.
- For items you prefer not to display, press the < () > button to clear the checkmark [√].
- Select [OK] to register the setting.

You can select how viewfinder information is displayed when you are shooting still photos vertically.

1. Select [: Shooting info. disp.].

		AF	▲		((†))	4	a	*
			4		6			10
0	Displ	ay si	mula	tio			[Exp.SIM
C	OVF	sim.	view	ass	ist	Off		
S	hoc	ting	info.	dis.	p.			
F	Reve	rse d	ispla	у		On		
٧	/F di	splay	y for	mat				
0	Disp.	per	forma	anc	e			ß

2. Select [VF vertical display].

Shooting info. disp.	
Screen info. settings	5
VF info/toggle settir	ngs
VF vertical display	On
Grid display	Off
Histogram disp	Brightness
Lens info display	
Reset	MENU 🕤

3. Select an option.



On

Information is automatically rotated, making it easier to read.

• Off

Information is not automatically rotated.

Grid

A grid can be displayed on the screen and viewfinder.

1. Select [1]: Shooting info. disp.].

ľ	2	AF	Ā		((1))	Ý		â	*
1			4		6		8	9	10
Ì	Disp	lay si	mula	tio					Exp.SIM
(OVF	sim.	view	ass	ist	Off			
	Shoc	oting	info.	dis	p.				
1	Reve	rse d	ispla	у		On			
1	/F di	ispla	y for	mat					
1	Disp.	per	forma	anc	е				膨

2. Select [Grid display].

Shooting info. disp.	
Screen info. settings	5
VF info/toggle settir	ngs
VF vertical display	On
Grid display	Off
Histogram disp	Brightness
Lens info display	
Reset	MENU 🕁

3. Select an option.

Shooting info. disp)
	Off
Grid display	3x3 #
	6x4 ###
	3x3+diag 💥

Histogram

You can select the content and display size of the histogram.

1. Select [: Shooting info. disp.].

T.		AF	A		((†))	Ý		â	*
1			4		6		8	9	10
[Displ	ay si	mula	tior	۱			1	Exp.SIM
(OVF	sim.	view	ass	ist	Off			
1	Shoc	ting	info.	dis	p.				
F	Reve	rse d	ispla	у		On			
١	/F di	spla	y form	nat					
[Disp.	per	forma	ance	9				ß

2. Select [Histogram disp].

Shooting info. disp.	
Screen info. settings	5
VF info/toggle settir	ngs
VF vertical display	On
Grid display	Off
Histogram disp	Brightness
Lens info display	
Reset	MENU 🗢

3. Select an option.

Histogram disp	
Brightness/RGB	Brightness
Display size	Large
	MENU 🕤

Select the content ([Brightness] or [RGB]) and display size ([Large] or [Small]).

You can display information about the lens in use.

1. Select [: Shooting info. disp.].

Ô		AF	►		((1))	Ý		â	*
1			4		6		8	9	10
D	ispl	ay si	mula	tio					Exp.SIM
0	VF :	sim.	view	ass	ist	Off			
S	100	ting	info.	dis	p.				
Re	eve	rse d	ispla	у		On			
V	F di	splag	y for	mat					
D	isp.	per	forma	anc	9				膨

2. Select [Lens info display].

ngs
On
Off
Brightness
MENU 🕤

3. Select an option.

	Focus distance disp	In MF mode
F	ocal length disp	Enable
	SA variable amount	Enable

Focus distance disp


You can display focus distance when using RF lenses. In focus distance display, you can select the timing and unit of measurement.

Focal length disp

You can display the focal length of the lens in use.

SA variable amount

You can display the amount of correction set when using lenses featuring spherical aberration control. * SA: spherical aberration 1. Select [C: Shooting info. disp.].

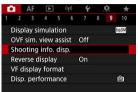

2. Select [Reset].

Shooting info. disp.	
Screen info. settings	
VF info/toggle settir	ngs
VF vertical display	On
Grid display	Off
Histogram disp	Brightness
Lens info display	
Reset	MENU 🕤

3. Select [OK].



A mirror image can be displayed when you shoot with the screen rotated toward the subject (toward the front of the camera).

1. Select [C: Reverse display].

T O		AF	▲		((1))	Ý	â	*
			4		6			10
[Displ	ay si	mula	tio			[Exp.SIM
(OVF	sim.	view	ass	ist	Off		
5	Shoc	ting	info.	dis	sp.			
F	Reve	rse d	ispla	у		On		
١	/F di	splag	y for	mat				
[Disp.	per	forma	anc	e			膨

2. Select [On].

Ľ		AF	►		((†))	Ý		<u> â</u>	\star	
									10	
ł	Reve	erse d	ispla	y		On				
						Off				

 Select [Off] if you prefer not to reverse display when the screen is facing the subject. You can select how information is presented in the viewfinder.

1. Select [C: VF display format].

ľ		AF	Ā		((1))	Ý		Ð	*
			4		6		8	9	10
[Disp	lay si	mula	tio				1	Exp.SIM
(OVF	sim.	view	ass	ist	Off			
5	Shoc	oting	info.	dis	sp.				
F	Reve	rse d	ispla	у		On			
١	/F di	ispla	y for	mat					
[Disp.	per	forma	anc	e				ß

2. Select an option.



You can select the performance parameter to prioritize in shooting screen display for still photos.

1. Select [Disp. performance].

OVF	3 olay si sim.	view			7 Off	9	10 Exp.SIM
OVF	sim.	view			Off	1	Exp.SIM
			ass	ist	Off		
Sho					U II		
	oting	info	. dis	p.			
Rev	erse d	lispla	ay		On		
VF o	lispla	y for	mat				
Disp	. per	form	ance	е			ß

2. Select an option.

Disp. performance	
Power saving	ß
Smooth	Ē
	SET OK

When set to [Smooth]



- By pressing the < INFO > button to add a checkmark, you can include low-light locations in the scenarios for suppressing lower display frame rates.
- The high frame rate (119.88 fps) display of the [Smooth] option is used for shooting standby in viewfinder shooting.

Caution

- Some shooting conditions and camera operations may prevent smooth, high frame rate display, even when set to [Smooth].
- Shooting under low light with [Suppress lower frame rate] set for shooting screen display may affect performance as follows.
 - · Faster battery consumption
 - · Fewer shots available
 - · Lower image display brightness
 - · Difficulty in autofocusing
 - · Lower metering precision
 - Lower flicker detection precision
 - · Lower subject detection precision

- Information Display
- General Still Photo Shooting Precautions

Information Display

For details on the icons displayed for still photo shooting, see Information Display.



- White display of the [ExpSIM] icon indicates that your shots will be about as bright as the image displayed.
- If the [EXPSIM] icon is blinking, it indicates that the image is displayed at a brightness that differs from the actual shooting result because of low- or bright-light conditions. However, the actual image recorded will reflect the exposure setting. Note that the noise may be more noticeable than the actual image recorded.
- Display simulation may not be performed under some shooting settings. The
 ESTSIM icon and histogram will be displayed in gray. The image will be displayed
 on the screen at the standard brightness. The histogram may not be properly
 displayed in low- or bright-light conditions.
- Histogram display is available when [Display simulation] is set to an option other than [Disable] (2).

Caution

 Do not point the camera toward an intense light source, such as the sun or an intense artificial light source. Doing so may damage the image sensor or the camera's internal components.

Image quality

- When you shoot at high ISO speeds, noise (such as dots of light and banding) may become noticeable.
- Shooting in high temperatures may cause noise and irregular colors in the image.
- Frequent shooting over an extended period may cause high internal temperatures and affect image quality. When you are not shooting, always turn off the camera.
- If you shoot a long exposure while the camera's internal temperature is high, image quality may decline. Stop shooting and wait a few minutes before shooting again.

White []] internal temperature warning icon

- A white [10] icon indicates high internal camera temperature. The white [10] icon indicates that the image quality of still photos will decline. Stop shooting for a while and allow the camera to cool down.
- If the camera's internal temperature is high, the quality of images shot with a high ISO speed or long exposure may decline even before the white [10] icon is displayed.

Shooting results

- In magnified view, the shutter speed and aperture value will be displayed in orange. If you take the picture in magnified view, the exposure may not come out as desired. Return to the normal view before taking the picture.
- Even if you take the picture in magnified view, the image will be captured with the image area of the normal view.

Images and display

- Under low- or bright-light conditions, the displayed image may not reflect the brightness of the captured image.
- Although noise may be noticeable in images under low light (even at low ISO speeds), there will be less noise in your shots, due to differences in image quality between displayed and captured images.
- The screen may flicker if the light source (lighting) changes. In this case, stop shooting temporarily and resume under the light source you will use.
- Pointing the camera at different direction may momentarily prevent correct display of brightness. Wait until the brightness level stabilizes before shooting.
- If there is a very bright light source in the image, the bright area may appear black on the screen. However, the actual captured image will correctly show the bright area.

- Under low light, bright [": Screen brightness] settings may cause noise or irregular colors in images. However, the noise or irregular colors will not be recorded in the captured image.
- When you magnify the image, the image sharpness may look more pronounced than in the actual image.

Lens

- If the attached lens has an Image Stabilizer and you set the Image Stabilizer switch to < ON>, the Image Stabilizer will operate at all times even if you do not press the shutter button halfway. The Image Stabilizer consumes battery power and may decrease the number of available shots depending on the shooting conditions. When the Image Stabilizer is not necessary, such as when using a tripod, it is
- recommended that you set the Image Stabilizer switch to < OFF >.
- With EF lenses, focus preset during shooting is only available when using (super) telephoto lenses equipped with this function released in and after the second half of 2011.

Note

- If the camera is idle over an extended period, the screen will turn off automatically after the time set in [Auto power off] or [Viewfinder off] under [": Power saving].

The camera then turns off automatically after the time set in [Auto power off] (2).

 Using a commercially available HDMI cable, you can display images on a television (
 (
). Note that no sound will be output.



For movie recording, set the Mode dial to < The set of the set of

☆ to the right of titles indicates functions only available in [•••••] mode.

Caution

 When switching from still photo shooting to movie recording, check the camera settings again before recording movies.

Note

- You can record movies by pressing the movie shooting button during still photo shooting.
- Tab Menus: Movie Recording
- Movie Recording
- Movie Recording Size
- High Frame Rate
- Digital Zoom
- Sound Recording
- <u>Shooting Creative Filters</u>
- <u>Time-Lapse Movies</u>
- Movie Self-Timer
- · Image Stabilizer (IS Mode)
- Shutter Button Function for Movies
- Zebra Settings
- <u>Time Code</u>
- Other Menu Functions
- General Movie Recording Precautions

â		AF	٨		((†))	Ý	<u>n</u>	*
	2							
Sh	oc	ting	moc	le		.		_
Mo	ovi	e rec	. siz	е		[≣] FHD ⊠	97P IPB	-
Hig	gh	Fran	ne Ra	ate		Off		_
Dig	git	al zo	om			Disab	ole	-
So	ur	id rea	cordi	ing		Auto		-

- (1) Shooting mode
- (2) Movie rec. size
- (3) High Frame Rate
- (4) Digital zoom
- (5) Sound recording

Shooting 2

a	AF	٨]	((†))	Ý	0	*
Expo	sure	com	p.		-321	012	
' " IS	O sp	eed :	setti	ngs			-
HDR	sho	oting	HDF	R PQ			OFF -
Auto	Ligh	nting	Opt	imi	zer		B) -
High	light	ton	e pri	orit	y		OFF -
"MA							-
PR A	uto	slow	shu	tter			ระบับ เพ

- (1) Exposure comp.
- (2) RISO speed settings
- (3) HDR shooting HDR PQ
- (4) Auto Lighting Optimizer
- (5) Highlight tone priority
- (6) **P**<u>Av 1/8-stop incr.</u> ☆
- (7) Auto slow shutter

ľ	a	AF	►		((†))	Ý	<u>n</u>	\star
	Whi	te bal	ance			AWB		_
	Cust	om V	Vhite	Ba	alanc	e		-
	WB	corre	ction			0,0		-
	Pictu	ure St	yle			Auto		-
	Clari	ity						e —
	Sho	oting	creat	ive	e filte	ers		@1FF —

- (1) White balance
- (2) Custom White Balance
- (3) WB correction
- (4) Picture Style
 - <u>Picture Style Selection</u>
 - <u>Picture Style Customization</u>
 - Picture Style Registration
- (5) Clarity
- (6) Shooting creative filters

Shooting 4



- (1) Lens aberration correction
- (2) High ISO speed NR



- (1) Time-lapse movie
- (2) Movie self-timer
- (3) Remote control

Shooting 6

Ô.	AF	▲			Ý	<u>n</u>	7	k
				6				
IS (Ir	nage	Stab	ilizer) m	ode			-
Cust	omiz	e Qui	ck C	ontr	rols			-
Shut	ter b	tn fu	nctio	n fo	or m	ovies		-
Met	ering	time		8	B sec			-
Zebr	a set	tings		(Off			-
Shoo	oting	info.	disp					-
Reve	erse d	ispla	/	(On			-

- (1) IS (Image Stabilizer) mode
- (2) Customize Quick Controls
- (3) Shutter btn function for movies
- (4) Metering timer
- (5) Zebra settings
- (6) Shooting info. disp.
- (7) Reverse display



- (1) VF display format
- (2) Standby: Low res.
- (3) HDMI display
- (4) Time code

In < 💮 > mode, the following screens are displayed.

Shooting 1

AF 🖻	((†)) Ý		
1 2 3			
Shooting mode	a .	_	(1)
Sound recording	On	_	(2)

(1) Shooting mode

(2) Sound recording



- (1) Movie self-timer
- (2) Remote control

• Shooting 3

AF ト ((す)) ¥	
Shutter btn function for movies	(1)
Shooting info. disp.	(2)
Reverse display On	(3)
VF display format	(4)
Standby: Low res. On	(5)

- (1) Shutter btn function for movies
- (2) Shooting info. disp.
- (3) Reverse display
- (4) VF display format
- (5) Standby: Low res.

Movie Recording

- Autoexposure Movie Recording
- So Speed in [P-] Mode
- Manual Exposure Movie Recording
- SO Speed in [M] Mode
- Shutter Speed
- HDR Movie Recording
- Still Photo Shooting
- Information Display (Movie Recording)


Recording

Exposure is controlled automatically to suit the brightness.

1. Set the Mode dial to <




2. Select [: Shooting mode].

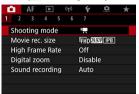

3. Select [Movie auto exposure].




4. Focus on the subject.

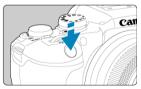

- Before recording a movie, focus with AF (2) or manual focus (2).
- When you press the shutter button halfway, the camera focuses using your specified AF area.


5. Record the movie.

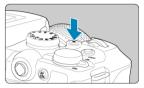

 Press the movie shooting button to start recording a movie. You can also start recording a movie by tapping [•] on the screen.



While the movie is being recorded, the [OREC] icon (1) will be displayed in the upper right of the screen.

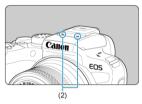


- Sound is recorded with the movie microphone (2).
- To stop recording the movie, press the movie shooting button again.
 You can also stop recording a movie by tapping []) on the screen.

ISO speed is set automatically. See ISO Speed in Movie Recording.

You can manually set the shutter speed, aperture value, and ISO speed for movie recording.

- 1. Set the Mode dial to <',>
- 2. Select [C: Shooting mode].

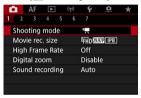

3. Select [Movie manual exp.].



4. Set the shutter speed, aperture value, and ISO speed.



- Press the shutter button halfway and check the exposure level indicator.
- Turn the < <p>dial to set the shutter speed (1) and the < <p>dial to set the aperture value (2), and press the < ISO > button to set the ISO speed (3).

5. Focus and record the movie.

Same as steps 4 and 5 for <u>Autoexposure Movie Recording</u>.

Caution

- During movie recording, avoid changing the shutter speed, aperture value, or ISO speed, which may record changes in the exposure or create more noise at high ISO speeds.
- When recording a movie of a moving subject, a shutter speed of approx. 1/25 sec. to 1/125 sec. is recommended. The faster the shutter speed, the less smooth the subject's movement will look.
- If you change the shutter speed while recording under fluorescent or LED lighting, image flicker may be recorded.

Note

- Exposure compensation with ISO Auto can be set in a range of ±3 stops as follows.
 Tap the exposure level indicator
 - [C: Exposure comp.]
 - · Turn the control ring while pressing the shutter button halfway
- When ISO Auto is set, you can press the < ★ > button to lock the ISO speed. After locking during movie recording, ISO speed lock can be canceled by pressing the

< 🗙 > button again.

 If you press the < ★ > button and recompose the shot, you can see the exposure level difference on the exposure level indicator (②) compared to when the < ★ > button was pressed.

ISO Speed in ['M] Mode

You can set the ISO speed manually or select [AUTO] to set it automatically. For details on ISO speed, see ISO Speed in Movie Recording.

Available shutter speeds in $[{\bf v}{\!\!\!\!\!\!\!\!}M]$ mode vary depending on the frame rate you have set for your specified movie recording size.

Frame Rate	Shu	itter Speed (Sec.)
Frame Rate	Normal Movie Recording	High Frame Rate Movie Recording
119.9P		1/4000–1/125
100.0P	_	1/4000–1/100
59.94P		
50.00P		
29.97P	1/4000–1/8	-
25.00P		
23.98P		


You can record high dynamic range movies that retain detail in highlights of high-contrast scenes.

Note Movies are recorded at FHD 29.97P IPB (NTSC) or FHD 25.00P IPB (PAL).

- 1. Set the Mode dial to <
- 2. Select [: Shooting mode].

Ľ		AF	٨]	((1))	Ý	ġ	*
1	Sho	oting	mod	le				
	Mov	ie re	c. siz	e		FHD	97P IPB	
1	High	n Frar	ne Ri	ate		Off		
1	Digi	tal zo	om			Disab	le	
	Sour	nd re	cord	ing		Auto		

3. Select [III] HDR Movie].

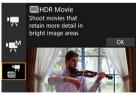

4. Record an HDR movie.

- Record the movie in the same way as normal movie recording.
- For details on file sizes and the recording time available, see <u>Movie</u> recording.

Caution

- Since multiple frames are merged to create an HDR movie, certain parts of the movie may look distorted. This is more noticeable in handheld recording affected by camera shake, so consider using a tripod. Note that even if a tripod is used for recording, afterimages or noise may become more noticeable, compared to normal playback, when the HDR movie is played back frame-by-frame or in slow motion.
- Image color and brightness may change significantly for a moment if you change settings for HDR movie recording. Also, the movie will not be updated for a moment, and the frame stops momentarily. Be aware of this when recording movies to external devices via HDMI.

Still photo shooting is not supported in movie recording mode. To shoot still photos, turn the Mode dial to switch to another shooting mode.

For details on the icons on the movie recording screen, see Information Display.

Caution

- The remaining time displayed for movie recording is only a guideline.
- Movie recording may stop before the initially displayed recording time elapses if the red [[1]][1]]] icon appears due to high internal camera temperature during recording (@).

- <u>4K Movie Recording</u>
- Image Area
- Cards That Can Record Movies
- Movie Files Exceeding 4 GB
- Total Movie Recording Time and File Size Per Minute
- Movie Recording Time Limit

You can set the recording size, frame rate, and compression method in [C1: Movie rec. size].

Note that the frame rate is updated automatically to match the [**Ý**: **Video system**] setting (**Ø**).

1920x1080 2 Standard (IPE		Total rec time 02:00:00
4K 29972	4K 29978	4K 23553
4K 23.989 +	EC46 59.94P	EC4559.542
FHD 59.94P	FHD 59.94P	FHD 29.978
FHD 231978	FHD 23.982	FHD 23.582

Image Size		Aspect Ratio
[⊑] 4K	3840×2160	16:9
ECTOP	3840×2160	16:9
^I FHD	1920×1080	16:9

Caution

- If you change the [Y: Video system] setting, also set [D: Movie rec. size] again.
- Other devices may not play movies such as 4K, "FHD 5994P/5000P, and High Frame Rate movies normally, because playback is processing-intensive.
- Sharpness and noise vary slightly depending on the movie recording size setting and lens used.

Note

- Movies cannot be recorded in HD or VGA quality.

4K Movie Recording

- Recording 4K movies requires a stable card with a fast writing speed. For details, see Cards That Can Record Movies.
- From a 4K movie, you can select any frame to save to the card as a JPEG still image (
 ^(C)).

The movie image area varies depending on the movie recording size setting.



- (1) 4K (3840×2160) / FHD (1920×1080)
- (2) Ecrop (3840×2160)

Caution

Frame rate (fps: frames per second)

[[[1007] 119.9 fps/[[50027] 59.94 fps/[[20077] 29.97 fps
 For areas where the TV system is NTSC (North America, Japan, South Korea, Mexico, etc.). For [[1007], see High Frame Rate.

[[0007] 100.00 fps/[[0007] 50.00 fps/[[05007] 25.00 fps For areas where the TV system is PAL (Europe, Russia, China, Australia, etc.). For [[0007], see High Frame Rate.

[23.98P] 23.98 fps

Mainly for cinematic purposes. Available when [": Video system] is set to [For NTSC].

Compression method

- [[PB]] IPB (Standard)
 Compresses multiple frames at a time efficiently for recording.
- [IPB] IPB (Light)

Since the movie is recorded at a bit rate lower than with IPB (Standard), the file size will be smaller than with IPB (Standard) and the playback compatibility will be higher. This will make the available recording time longer than with IPB (Standard) (with a card of the same capacity).

Movie recording format

[MP4] MP4

All movies you record with the camera are recorded as movie files in MP4 format (file extension ".MP4").

See <u>Card performance requirements</u> for details on cards supporting all movie recording sizes.

Test cards by recording a few movies to make sure they can record correctly at your specified size (2).

0	Caution
•	Before recording 4K movies, format cards by selecting [Low level format] in [Ý : Format card] (@). If you use a slow-writing card when recording movies, the movie may not be recorded properly. Also, if you play back a movie on a card with a slow reading speed, the movie may not be played back properly. When recording movies, use high-performance cards with a writing speed sufficiently higher than the bit rate. When movies cannot be recorded properly, format the card and try again. If formatting the card does not resolve the problem, refer to the card manufacturer's website, etc.
5	Note
	To a black in the Manuar of Summary with the second form which the second with the

- To check the card's writing/reading speed, refer to the card manufacturer's website, etc.

Using SDHC cards formatted with the camera

If you use the camera to format an SDHC card, the camera will format it in FAT32. With a FAT32-formatted card, if you record a movie and the file size exceeds 4 GB, a new movie file will be created automatically.

When you play back the movie, you will have to play back each movie file individually. Movie files cannot be played back automatically in consecutive order. After the movie playback ends, select the next movie and play it back.

Using SDXC cards formatted with the camera

If you use the camera to format an SDXC card, the camera will format it in exFAT. When using an exFAT-formatted card, even if the file size exceeds 4 GB during movie recording, the movie will be saved as a single file (rather than being split into multiple files).

Caution

When importing movie files exceeding 4 GB to a computer, use either EOS Utility or a card reader (2). It may not be possible to save movie files exceeding 4 GB if you attempt this using standard features of the computer's operating system. For details, see Movie recording.

When recording non-High Frame Rate movies

The maximum recording time per movie is 2 hr. Once 2 hr. is reached, recording stops automatically. You can start recording a movie again by pressing the movie shooting button (which records the movie as a new file).

When recording High Frame Rate movies

The maximum recording time per movie is 30 min. Once 30 min. is reached, recording stops automatically. You can start recording a High Frame Rate movie again by pressing the movie shooting button (which records the movie as a new file).

Caution

 The camera's internal temperature may rise and less recording time may be available after extended movie playback/Live View display. You can record movies at a high frame rate of 119.9 fps or 100.0 fps. This is ideal for recording movies that will be played back in slow motion. Note that the maximum recording time per movie is 30 min.

x1080 119.9fps lard (IPB)	Το	tal rec time 00:30:00
Disable	Enable	
o is not recorder Frame Rate mo	vies	SET OK

- Movies are recorded in FHD1199P IPB (IPB) or FHD1000P IPB (IPB) quality.
- Sound is not recorded in High Frame Rate movies.
- Time code display during movie recording advances 4 sec. per second.
- Because High Frame Rate movies are recorded as 29.97 fps/25.00 fps movie files, they
 are played in slow motion at 1/4 speed.

Caution

Precautions when set to [High Frame Rate: On]

- Time codes are not recorded when [Count up] is set to [Free run] in [C: Time code] (2).
- Check the [C: Movie rec. size] setting if you return this setting to [Disable].
- The screen may flicker if you record High Frame Rate movies under fluorescent or LED lighting.
- For a moment when you start or stop recording High Frame Rate movies, the movie is not updated, and the frame stops momentarily. Be aware of this when recording movies to external devices via HDMI.
- Movie frame rates shown on the screen as you record High Frame Rate movies do not correspond to the frame rate of the movie recorded.
- ISO speed can be set within ISO 100–12800. By changing the maximum for the ISO speed range in [①: '➡ISO speed settings] to H (25600), you can also set up to H (25600) in [+M] mode.
- The frame rate of HDMI video output is 59.94 fps or 50.00 fps.
- The camera's internal temperature may rise and less recording time may be available after extended movie playback or image display.

With the recording size set to [#FHD 23007]/[#FHD 23007] (NTSC) or [#FHD 25007] (PAL), you can shoot with approx. 1–10× digital zoom.

1. Select [Digital zoom].

Ľ	2	AF	٨]	((†))	Ý	â	*
			4		6			
	Shooting mode							
1	Mov	vie red	. size	е		FHDE	97P IPB	
1	High	n Fran	ne Ra	ate		Off		
	Digi	tal zo	om			Disab	le	
Sound recording						Auto		

2. Select an option.



- Select the amount to zoom, then press the < () > button.
- Press the < MENU > button to close the menu.

3. Use digital zoom.



- To zoom, either tap [W/T] in the lower right or, if you have assigned the < ▲ > < ♥ > keys to [Digital zoom] in [....: Customize buttons], press the < ▲ > < ♥ > keys.
- The digital zoom bar will appear.
- Tap [▲T] or press the < ▲ > key to zoom in, and tap [▼W] or press the < ▼ > key to zoom out.
- Pressing the shutter button halfway focuses with [1-point AF] (fixed at center).
- To cancel digital zoom, select [Disable] in step 2.

Caution

- Using a tripod to prevent camera shake is recommended.
- Time-lapse movies, Creative filters, and Movie digital IS are not available.
- Maximum ISO speed is ISO 12800.
- A magnified view is not available.
- Since Movie digital zoom processes the image digitally, the image will look grainier at higher magnifications. Noise, dots of light, etc. may also become noticeable.
- Also see <u>Shooting Conditions That Make Focusing Difficult</u>.
- The camera's internal temperature may rise and reduce the available recording time.
- Overheat control is set to [Disable] and cannot be changed (2).

Sound Recording

- Sound Recording/Sound-Recording Level
- Wind Filter
- Audio Noise Reduction

You can record movies while recording sound with the built-in stereo microphone or an external stereo microphone. You can also freely adjust the sound-recording level.

Use [C: Sound recording] to set sound recording functions.

Sound recording	
Sound recording	Auto
Rec. level	
Wind filter	Auto
Audio noise reduc.	Enable
	MENU 🗂
	MENU S

Caution

- Sounds from Wi-Fi operations may be captured with built-in or external microphones. During sound recording, using the wireless communication function is not recommended.
- The camera's built-in microphone may also record mechanical sounds of the lens or sounds of camera/lens operations if AF operations are performed or the camera or lens is operated during movie recording. If so, it may help reduce these sounds if you use an external microphone equipped with an output plug and position it away from the camera and lens.
- Do not connect anything other than an external microphone to the camera's external microphone IN terminal.

Note

- In Basic Zone modes, the settings available for [1]: Sound recording] are [On] and [Disable]. Set to [On] for automatic adjustment of the recording level.
- Audio is also output when the camera is connected to televisions via HDMI, unless [Sound recording] is set to [Off]. In case of feedback from television audio output, move the camera away from the television or turn down the volume.
- The volume balance between L/R (left/right) cannot be adjusted.
- Sound is recorded at a 48 kHz/16-bit sampling rate.

Sound Recording/Sound-Recording Level

Auto

The sound-recording level is adjusted automatically. Auto level control will take effect automatically in response to the sound level.

Manual

You can adjust the sound-recording level as needed. Select [Rec. level] and turn the $< \frac{1}{2} > 3$ dial while looking at the level meter to adjust the sound-recording level. Look at the peak hold indicator, and adjust so that the level meter sometimes lights up on the right of the "12" (-12 dB) mark for the loudest sounds. If it exceeds "0", the sound will be distorted.

Disable

Sound will not be recorded.

Set to [Auto] to reduce audio distortion in windy outdoor scenes. Disabled when external microphones are connected to the external microphone IN terminal. When the wind filter function takes effect, part of the low bass sounds will also be reduced. When recording with the built-in microphone, this feature reduces mechanical lens sounds caused by autofocusing, as well as white noise.

Disable

Disables audio noise reduction.

Enable

Enables audio noise reduction.

High

Reduces audio noise more than with [Enable].

Caution

- Audio quality may be different when set to [Enable] than when set to [Disable].
- Although [High] reduces audio noise more than with [Enable], this option may also have a greater impact on audio quality.
- Effectiveness of audio noise reduction varies by lens.
- Reducing white noise may make some noise more noticeable.
- Test recording in advance, because audio noise reduction effectiveness and resulting changes in audio quality vary by shooting conditions.

Creative Filter Characteristics

In < > (creative filters) mode, you can record movies with one of five filter effects applied: Dream, Old movies, Memory, Dramatic B&W, or Miniature effect movies.

Recording size can be set to FHD 29.97P/FHD 23.98P (NTSC) or FHD 25.00P (PAL).

1. Select [D: Shooting creative filters].



2. Select a filter effect.



- Turn the < is > dial to select a filter effect (i).
- For Miniature effect movies, move the AF point to the position to focus on. Move the scene frame if the AF point is outside of it, so that the AF point is aligned with it.

3. Adjust the filter effect level.



- Press the < INFO > button.
- Turn the < [™]₂ > dial to select a filter effect level, then press the < (𝔅) > button.
- When setting up miniature effect movies, select the playback speed.

4. Take the picture.

Caution

- A magnified view is not available.
- No histogram is displayed.
- Subjects such as the sky or white walls may not be rendered with smooth gradation and may have noise or irregular exposure or colors.

Image: Second Second

Applies a soft, dreamy, otherworldly appearance. Gives the movie a soft look overall, blurring the periphery of the screen. You can adjust the blurry areas along the screen edges.

Old movies

Creates an atmosphere like an old film by adding wavering, scratches, and flickering effects to the image. The top and bottom of the screen are masked in black. You can modify the wavering and scratch effects by adjusting the filter effect.

Memory

Creates the atmosphere of a distant memory. Gives the movie a soft look overall, reducing brightness of the periphery of the screen. You can modify the overall saturation and the dark areas along the screen edges by adjusting the filter effect.

Dramatic B&W

Creates an atmosphere of dramatic realism with high-contrast black and white. You can adjust the graininess and black-and-white effect.

Miniature effect movies

You can record movies with a miniature (diorama) effect. Select the playback speed and record.

Shooting under the default setting will keep the center looking sharp.

To move the area that looks sharp (the scene frame), see "Adjusting the Miniature Effect" ((2)). 1-point AF is used as the AF area. Shooting with the AF point and scene frame aligned is recommended. The AF point and scene frame are hidden during recording.

In step 5, set the playback speed to [5x], [10x], or [20x] before recording.

Speed and playback time (for a 1-minute movie)

Speed	Playback Time
5x	Approx. 12 sec.
10x	Approx. 6 sec.
20x	Approx. 3 sec.

Caution

[

- Sound is not recorded.
- Movie Servo AF is disabled.
- Editing is not available for miniature effect movies with a playback time less than 1 sec. (2).

Approx. Time Available for Recording Time-Lapse Movies

Still photos shot at a set interval can be stitched together automatically to create a 4K or Full HD time-lapse movie. A time-lapse movie shows how a subject changes in a much shorter period of time than the actual time it took. It is effective for a fixed-point observation of changing scenery, growing plants, celestial motion, etc.

Time-lapse movies are recorded in MP4 format at the following quality: ^E4k (2007) ALL-1 (NTSC)/^E4k (2007) ALL-1 (PAL) in 4K recording, and ^EFHD (2007) ALL-1 (NTSC)/^EFHD (2007) ALL-1 (PAL) in Full HD recording.

Note that the frame rate is updated automatically to match the [**Ý**: **Video system**] setting (**Ø**).

1. Select [C: Time-lapse movie].


Ľ	2	AF	▲	((†))	Ý	â	*
1			4	5	6			
	Time	e-laps	e mov	<i>ie</i>		Disab	le	
	Mov	ie sel	f-time	r		Off		
	Rem	ote c	ontrol			Enabl	e	

2. Select [Time-lapse].

Time-lapse movies	FHD 29.97P ALL-1
Time-lapse	Enable
Interval	00:00:03
No. of shots	0300
Movie rec. size	EFHD
Auto exposure	Fixed 1st frame
· . 00:14:57	▶ 00:30:00
	MENU 🕤

Select [Enable].

3. Set [Interval].

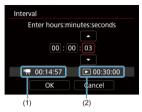

- Select [Interval].
- As you set the number, refer to the [1, 1] time required (1) and [] playback time (2).
- Select an option (hours : minutes : seconds).
- Press the < (P) > button to display [].
- Set a value, then press the < () > button. (Returns to [].)
- Can be set in a range of [00:00:02]–[99:59:59]. (An interval of once per second is not available.)
- Select [OK] to register the setting.

4. Set [No. of shots].

No. of shots					
• • • • •					
Mathematical Ma					
OK Cancel					

- Select [No. of shots].
- As you set the number, refer to the time required ([*,]) and playback time ([,)).
- Select the digit.
- Press the < (2) > button to display [1].
- Set a value, then press the < (P) > button. (Returns to []).)
- Can be set in a range of [0002]–[3600].
- Make sure the playback time ([>]) is not displayed in red.
- Select [OK] to register the setting.
- The playback time ([[])) is displayed in red if the card does not have enough free space to record the specified number of shots. Although the camera can continue recording, the recording will stop when the card becomes full.
- Playback time ([[])) is displayed in red if the [No. of shots] setting results in a file size exceeding 4 GB for a card not formatted in exFAT (@)). If you keep recording in this condition and the movie file size reaches 4 GB, the time-lapse movie recording will stop.

Note

- For details on cards that can record time-lapse movies (card performance requirements), see <u>Card performance requirements</u>.
- If the number of shots is set to 3600, the time-lapse movie will be approx. 2 min. in NTSC and approx. 2 min. 24 sec. in PAL.

5. Select [Movie rec. size].




4K (3840×2160)

The movie is recorded in 4K quality. The aspect ratio is 16:9. Additionally, the frame rate is 29.97 fps (2007) for NTSC and 25.00 fps (2007) for PAL, and movies are recorded in MP4 (MP4) format with ALL-I (<u>ALL-I</u>) compression.

FHD (1920×1080)

The movie will be recorded in Full High-Definition (Full HD) quality. The aspect ratio is 16:9. Additionally, the frame rate is 29.97 fps (2007) for NTSC and 25.00 fps (2500) for PAL, and movies are recorded in MP4 ([112]) format with ALL-I ([ALL-I)) compression.

6. Set [Auto exposure].

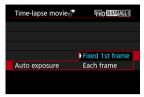

Fixed 1st frame

When taking the first shot, metering is performed to set the exposure automatically to match the brightness. The exposure setting for the first shot will be applied to subsequent shots. Other shooting-related settings for the first shot will also be applied for subsequent shots.

Each frame

Metering is also performed for each subsequent shot to set the exposure automatically to match the brightness. Note that any functions such as Picture Style and white balance that are set to **[Auto]** will be set automatically for each subsequent shot.

Caution

 Significant changes in brightness between shots may prevent the camera from shooting at the specified interval when [Interval] is set to less than 3 sec. and [Auto exposure] is set to [Each frame].

7. Set [Screen auto off].



Disable

Even during time-lapse movie recording, the image will be displayed. (The screen turns off only at the time of shooting.) Note that the screen will turn off when approx. 30 min. elapse after the shooting started.


Enable

Note that the screen will turn off when approx. 10 sec. elapse after the shooting started.



Note

 During time-lapse movie recording, you can press the < INFO > button to turn on/off the screen. 8. Set [Beep per ⊗'™ taken].

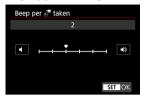

Set to [0] to prevent the camera from beeping for each shot.

9. Check the settings.

Time-lapse movies	EFHD 29.97P ALL-1
Time-lapse	Enable
Interval	00:00:03
No. of shots	0300
Movie rec. size	ELID
Auto exposure	Fixed 1st frame
' 只 00:14:57	• 00:30:00
	MENU ᠫ
(1)	(2)

Time required (1)

Indicates the time required to shoot the set number of shots with the set interval. If it exceeds 24 hours, "*** days" will be displayed.

Playback time (2)

Indicates the movie recording time (time required to play back the movie) when creating the time-lapse movie in 4K movie or Full HD movie from the still photos taken with the set intervals.

10. Close the menu.

Press the < MENU > button to turn off the menu screen.

11. Read the message.



Read the message and select [OK].

12. Take a test shot.




- Press the < INFO > button and double-check the Time required (1) and Interval (2) shown on the screen.
- As in still photo shooting, set the exposure and shooting functions, then press the shutter button halfway to focus.
- Press the shutter button completely to take a test shot, which is recorded to the card as a still photo.
- If there are no problems with the test shot, go to the next step.
- To take more test shots, repeat this step.

Note


- Test shots are captured in JPEG IL quality.
- In ['AM] mode, you can set the shutter speed in a range of 1/4000 to 30 sec.
- You can set the maximum limit for Auto ISO in [¹,[™]] mode or in [¹,[™]] mode with ISO Auto, in the [^{*},[™]][™]Max for Auto] option of [¹,[™]][™]][™]SO speed settings] ([™]₂).
- If you have set [Half-press] in [D]: Shutter btn function for movies] to [Meter.+¹], Servo AF], it is automatically changed to [Meter.+One-Shot AF] when you set up time-lapse movie recording.

13. Press the movie shooting button.

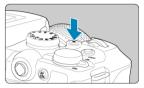

- The camera is now ready to start recording a time-lapse movie.
- To return to step 12, press the movie shooting button again.

14. Record the time-lapse movie.

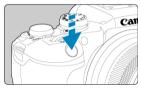

- Press the shutter button completely to start recording the timelapse movie.
- AF will not work during time-lapse movie recording.
- A recording icon "•" is displayed on the screen as the time-lapse movie is recorded.
- When the set number of shots are taken, the time-lapse movie recording ends.
- To cancel recording time-lapse movies, set [Time-lapse] to [Disable].

Note

- Using a tripod is recommended.
- Taking test shots as in step 12 and recording test movies for time-lapse movies beforehand is recommended.
- The movie's field of view coverage for both the 4K and Full HD time-lapse movie recording is approx. 100%.
- To cancel time-lapse movie recording in progress, either press the shutter button completely or press the movie shooting button. The time-lapse movie shot so far will be recorded on the card.
- If the time required for recording is more than 24 hours but not more than 48 hours, "2 days" will be indicated. If three or more days are required, the number of days will be indicated in 24-hour increments.
- Even if the time-lapse movie's playback time is less than 1 sec., a movie file will still be created. In this case, "00'00"" is indicated in [Playback time].
- If the shooting time is long, using the household power outlet accessories (sold separately) is recommended.
- YCbCr 4:2:0 (8-bit) color sampling and the BT.709 color space are used for 4K/Full HD time-lapse movies.

Caution

- Do not point the camera toward an intense light source, such as the sun or an intense artificial light source. Doing so may damage the image sensor or the camera's internal components.
- Time-lapse movies cannot be recorded when the camera is connected to a computer with the interface cable, or when an HDMI cable is connected.
- Movie Servo AF will not function.
- If the shutter speed is 1/30 sec. or slower, the exposure of the movie may not be displayed properly (may differ from that of the resulting movie).
- Do not zoom the lens during time-lapse movie recording. Zooming the lens may cause the image to be out of focus, the exposure to change, or the lens aberration correction not to function properly.
- Recording time-lapse movies under flickering light may cause noticeable screen flickering, and images may be captured with horizontal stripes (noise) or irregular exposure.
- Images displayed as time-lapse movies are recorded may look different from the resulting movie (in details such as inconsistent brightness from flickering light sources, or noise from a high ISO speed).
- When recording a time-lapse movie under low light, the image displayed during shooting may look different from what is actually recorded in the movie. In such cases, the [INNIM] icon will blink.
- If you move the camera from left to right (panning) or shoot a moving subject during time-lapse movie recording, the image may look extremely distorted.
- During time-lapse movie recording, auto power off will not take effect. Also, you
 cannot adjust the shooting function and menu function settings, play back images,
 etc.
- Sound is not recorded for time-lapse movies.
- To start or stop time-lapse movie recording, you can press the shutter button completely, regardless of the [1]: Shutter btn function for movies] setting.
- Significant changes in brightness between shots may prevent the camera from shooting at the specified interval when [Interval] is set to less than 3 sec. and [Auto exposure] is set to [Each frame].
- If the shutter speed exceeds the shooting interval (such as for long exposures), or if
 a slow shutter speed is set automatically, the camera may not be able to shoot at
 the set interval. Shooting may also be prevented by shooting intervals nearly the
 same as the shutter speed.
- If the next scheduled shot is not possible, it will be skipped. This may shorten the recording time of the created time-lapse movie.
- If the time it takes to record to the card exceeds the shooting interval due to the shooting functions set or card performance, some of the shots may not be taken with the set intervals.
- The captured images are not recorded as still photos. Even if you cancel the timelapse movie recording after only one shot is taken, it will be recorded as a movie file.
- Set [D: Time-lapse movie] to [Disable] if you will connect the camera to a computer with the interface cable and use EOS Utility (EOS software). Options other than [Disable] will prevent the camera from communicating with the computer.

- Image stabilization is not applied in time-lapse movie recording.
- Time-lapse movie shooting ends if the power switch is set to < OFF >, for example, and the setting is changed to [Disable].
- Even if a flash is used, it will not fire.
- The following operations cancel standby for time-lapse movie recording and switch the setting to [Disable].
 - Selecting either [Clean now.] in [4: Sensor cleaning] or [Basic settings] in [Reset camera]
 - · Turning the Mode dial
- Image quality may be lower if you start time-lapse movie recording while a white [[1]]]]]]] or red [[1]]]]] icon ((2)) is displayed. For best results, before recording, wait until the white [[1]]]]]] or red [[1]]]]]]]] icon is no longer displayed, which indicates that the camera has cooled down.
- With [Auto exposure] set to [Each frame], the ISO speed, shutter speed, and aperture value may not be recorded in the time-lapse movie Exif information in some shooting modes.

Note

 You can use Wireless Remote Control BR-E1 (sold separately) to start and stop time-lapse movie recording.

With Wireless Remote Control BR-E1

- Set [Remote control] to [Enable].
- If the remote control's switch has been set to < >, the time-lapse movie recording cannot start.

Camera Status/Remote Control Setting	<>> Immediate Release <2> 2-sec. Delay	< Pre>Movie Recording
Test-recording screen	Test recording	To recording standby
Recording standby	Starts recording	To test-recording screen
During time-lapse movie recording	Ends recording	Ends recording

For guidelines on how long you can record time-lapse movies (until the battery runs out), see <u>Movie recording</u>.

Movie Self-Timer

Movie recording can be started by the self-timer.

1. Select [D: Movie self-timer].

Ď	AF	►	((†))	Ý	â	*
1	23	4 5	6			
Tin	ne-laps	se movie		Disab	le	
Mo	ovie se	lf-timer		Off		
Re	mote c	ontrol		Enabl	e	

2. Select an option.

Ď	1	AF	►	((†))	Ý	<u>à</u>	\star
1			4 5				
Ν	Λovi	ie sel	f-timer		Off		
					10 se	c	
					2 sec		

- 3. Record the movie.
 - After you press the movie shooting button or tap [], the camera displays the number of seconds left before recording and beeps.

Note

To cancel the self-timer, either tap the screen or press the <

 > button.

Movie Digital IS

Movie digital IS reduces camera shake as movies are recorded. This can provide effective stabilization even when non-IS lenses are used.

When using an IS lens, set the Image Stabilizer switch to < ON >.

Movie Digital IS

1. Select [C: IS (Image Stabilizer) mode].



2. Select a [" Digital IS] option.

' Digital IS
Off
On
Enhanced
SET OK

Off ((\))

Image stabilization with Movie digital IS is disabled.

● On ((\📲 🛯)

Camera shake will be corrected. The image will be slightly magnified.

Enhanced ((\u00fc)___)

Compared to when **[On]** is set, stronger camera shake can be corrected. The image will be more magnified.

Caution

- Movie digital IS will not function when the lens's optical Image Stabilizer switch is set to < OFF >.
- Stabilization by Movie digital IS may be less effective at some movie recording sizes.
- The wider the angle of view (wide angle), the more effective the image stabilization will be. The narrower the angle of view (telephoto), the less effective the image stabilization will be.
- When using a tripod, setting Movie digital IS to [Off] is recommended.
- Depending on the subject and shooting conditions, the subject may blur noticeably (the subject momentarily looks out of focus) due to the effects of the Movie digital IS.
- Consider setting to [Off] when using a TS-E lens or fish-eye lens.
- Since Movie digital IS magnifies the image, the image looks more grainy. Noise, dots of light, etc. may also become noticeable.

Note

 For details on configuring image stabilization for still photo shooting, see <u>Image</u> <u>Stabilizer (IS Mode)</u>. You can set the functions performed by pressing the shutter button halfway or completely during movie recording.

1. Select [1]: Shutter btn function for movies].



2. Select an option.



Half-press

Specify the function performed by pressing the shutter button halfway.

Fully-press

Specify the function performed by pressing the shutter button completely.



With [Fully-press] set to [Start/stop mov rec], you can start/stop movie recording not only with the movie shooting button but also by pressing the shutter button completely, or by using Remote Switch RS-60E3 (sold separately). To help you adjust exposure before or during movie recording, you can display a striped pattern over or around image areas of a specified brightness.

1. Select [D: Zebra settings].

Ľ		AF	A		((1))	Ý	â	*
			4					
	S (In	nage	Stab	iliz	er) m	ode		
(Cust	omiz	e Qu	ick	Cont	rols		
	Shut	ter b	tn fu	nct	ion f	or mo	ovies	
Metering timer				8 sec.				
Zebra settings					Off			
Shooting info. disp.								
Ĭ	Reverse display					On		

2. Select [Zebra].

Zebra settings	
Zebra	Off
) On

Select [On].

3. Select [Zebra pattern].



- [Zebra 1]: Displays left-slanting stripes around areas of the specified brightness.
- [Zebra 2]: Displays right-slanting stripes over areas that exceed the specified brightness.
- [Zebra 1+2]: Displays both [Zebra 1] and [Zebra 2].
 [Zebra 1] display takes precedence where [Zebra 1] and [Zebra 2] display areas overlap.

4. Set the level.

Zebra 1 level



Zebra 2 level

Zebra 2 level	
	100 %
	-
	SET OK

● Set by turning the < 💬 > dial or pressing < 🔆 > up or down.

Note

- The maximum brightness value does not reach 100% when HDR-PQ is set. Note that the maximum brightness value varies depending on [D: Highlight tone priority] and [D: Picture Style] settings.
- Checking the zebra display level in advance is recommended when you will set [Zebra pattern].

- Count Up
- Start Time Setting
- Movie Recording Count
- Movie Play Count
- HDMI
- Drop Frame

Time codes record the time automatically as movies are recorded. Time codes always record elapsed hours, minutes, seconds, and frames. They are mainly used when movies are edited.

To set up the time code, use [: Time code].

Count up	Rec run
	Rectun
Start time setting	
Movie rec count	Rec time
Movie play count	Rec time
HDMI	
Drop frame	Enable

Caution

 Time codes may not be displayed correctly if your movies are played back on devices other than the camera.

Rec run

The time code advances only during movie recording. Time codes in each movie file recorded continue from the last time code in the previous file.

Free run

The time code keeps advancing, even when you are not recording.

0	Caution
•	When set to [Free run], time codes are not added to movies recorded with the camera configured for High Frame Rate, time-lapse, or Creative filter recording.
	cancel computed for high frame react, the hapse, of ofeative find recording.

Start Time Setting

You can set the initial time of the time code.

Manual input setting

Enables you to set any starting hour, minute, second, and frame.

Reset

Resets the time set with [Manual input setting] or [Set to camera time] to "00:00:00." or "00:00:00." (愛).

Set to camera time

Matches the hour, minute, and second set as the time on the camera. Sets the frame value to "00."

Movie Recording Count

You can select how time is displayed on the movie recording screen.

Rec time

During recording standby, displays the available recording time. During recording, displays the time that has elapsed since movie recording began (1).

Time code

Displays the time code during movie recording (2).



Movie Play Count

You can select how time is displayed on the movie playback screen.

Rec time

Displays the recording or playback time during movie playback.

Time code

Displays the time code during movie playback.



Note

- Time codes are always recorded to movie files (except when High Frame Rate movies are set to [Free run]), regardless of the [Movie rec count] setting.
- The [Movie play count] setting in [1]: Time code] is linked to the [1]: Movie play count], so that these settings always match.
- The "frame" count is not displayed during movie recording or playback.

Time code

Time codes can be added to movies as you record them to an external device via HDMI.

• Off

No time code is added to HDMI video output.

۰On

Time codes are added to HDMI video output. When [On] is set, [Rec Command] is displayed.

Rec Command

For HDMI video output recorded by an external device, you can synchronize recording to when you start and stop recording movies on the camera.

• Off

Recording is started and stopped by the external device.

۰On

Recording by an external device is synchronized to starting/stopping recording on the camera.

Caution

- Time codes are not added to HDMI video output when you record High Frame Rate movies with [Count up] in [Time code] set to [Free run].
- To determine compatibility of external recording devices with [Time code] and [Rec Command] functions, check with the device manufacturer.
- Even with [Time code] set to [Off], external recording devices may add time codes to movies, depending on their specifications. For details on device specifications relevant to adding time code to HDMI input, check with the device manufacturer.

Drop Frame

The time code's frame count will cause a discrepancy between the actual time and the time code if the frame rate is set to (1000) (119.9 fps), 5000) (59.94 fps), or 2000) (29.97 fps). The discrepancy is corrected automatically when [Enable] is set.

Enable

Corrects the discrepancy automatically by skipping time code numbers (DF: drop frame).

Disable

The discrepancy is not corrected (NDF: non-drop frame). Time codes are displayed as follows.

- Enable (DF) 00:00:00. (Playback: 00:00:00.00)
- Disable (NDF) 00:00:00: (Playback: 00:00:00:00)

Note

The [Drop frame] setting item is not displayed when the frame rate is set to 2398? (23.98 fps), or when [Y: Video system] is set to [For PAL].

- 🗹 🚺 🖸 🖄
- 🗹 🚺 🖸 🖸
- 2 [04]
- 🗹 [🗖 5]
- 🗹 [🗖 6]
- C [**0**7]



Exposure comp.

Exposure compensation can be adjusted in a range of ±3 stops, in 1/3-stop increments. For details on exposure compensation, see <u>Manual Exposure Compensation</u>.

ISO speed settings

· ISO speed

In [mm] mode, you can set the ISO speed manually. You can also select ISO Auto.

· ISO speed range

You can set the manual ISO speed setting range (minimum and maximum). ISO expansion can also be configured.

· Max for Auto

You can set the maximum limit for ISO Auto in movie recording in [*] mode or in [*] mode with ISO Auto.

• Not Max for Auto

You can set the maximum limit for ISO Auto in 4K time-lapse/Full HD time-lapse movie recording in [177] mode or in [177] mode with ISO Auto.

HDR shooting HDR PQ

For details on HDR shooting HDR PQ, see HDR Shooting.

Auto Lighting Optimizer

Brightness and contrast can be corrected automatically. For details on Auto Lighting Optimizer, see <u>Auto Lighting Optimizer</u>.

Highlight tone priority

You can reduce overexposed, clipped highlights as you record movies. For details on Highlight tone priority, see <u>Highlight Tone Priority</u>.

• RAv 1/8-stop incr.

 You can set aperture values on a finer scale when recording movies with an RF lens.

This feature is available when the camera is set to [m/M]. Select [Enable] to change the aperture increment from 1/3 stop (or 1/2 stop) to 1/8

Caution

stop.

- [*\, Av 1/8-stop incr.] is not available (not displayed) when EF or EF-S lenses are used.
- When set to [Enable], setting options in [....: Exposure level increments] are disabled and have no effect.

In the second second



You can choose whether to record movies that are brighter and less affected by image noise than when set to [**Disable**] by automatically slowing the shutter speed under low light.

Available in [177] recording mode. Applies when the frame rate of the movie recording size is 1999 or 1999.

Disable

Enables you to record movies with smoother, more natural movement, less affected by subject shake than when set to [Enable]. Note that under low light, movies may be darker than when set to [Enable].

Enable

Enables you to record brighter movies than when set to [Disable] by automatically reducing the shutter speed to 1/30 sec. (NTSC) or 1/25 sec. (PAL) under low light.

Note

 Setting to [Disable] is recommended when recording moving subjects under low light, or when afterimages such as trails may occur.

White balance

For details on white balance, see White Balance.

Custom White Balance

For details on custom white balance, see Custom White Balance.

WB correction

For details on white balance correction, see White Balance Correction.

Picture Style

For details on Picture Styles, see Picture Style Selection.

Clarity

For details on clarity, see Clarity.

Lens aberration correction

Peripheral illumination correction, distortion correction, and chromatic aberration correction can be corrected as you record movies. For details on lens aberration correction, see Lens Aberration Correction.

High ISO speed NR

For details on High ISO speed noise reduction, see High ISO Speed Noise Reduction.

Remote control

By setting to [Enable], you can start or stop movie recording using Wireless Remote Control BR-E1 (sold separately).

Customize Quick Controls

For details on customizing Quick Controls, see Customizing Quick Controls.

Metering timer

For details on the metering timer, see Metering Timer.

• Shooting info. disp.

For details on configuring shooting information display, see <u>Shooting Information</u> <u>Display</u>.

Reverse display

For details on reverse display, see Reverse Display.

VF display format

For details on the viewfinder display format, see Viewfinder Display Format.

Standby: Low res.

Standby: Low res.	
Off	
On	
INFO Help SET_OK	

Set to [**On**] to conserve battery power and control the rise of camera temperature during standby.

As a result, it may enable you to record movies over a longer period.

Caution

- Image quality on the standby screen may differ from image quality on the screen during movie recording.
- Briefly when you start recording movies, image display may remain on the current frame instead of being updated.
- With digital zoom set to an option other than [Disable], overheat control is set to [Disable] and cannot be changed (
).



You can specify how movies are displayed as they are recorded via HDMI to an external device. Movie output itself corresponds to the [Movie rec. size] setting.

The default setting is [.

• 🗗 + 🖵

Enables movie display both on the camera screen and on the other device, via HDMI output.

Camera operations such as image playback or menu display are shown on the other device via HDMI, not on the camera screen.

٠ 🖵

Deactivates the camera screen during output via HDMI, so that the screen is blank. Shooting information, AF points, and other information is shown on the external device via HDMI, but you can stop output of this information by pressing the

< INFO > button.

Before recording movies externally, confirm that no information is being sent by the camera by making sure no shooting information, AF points, and so on is displayed on external monitors or other devices.

Caution

- Card recording is not performed with [HDMI display] set to [1]+[]. Camera menus and image playback are only displayed on the screen connected via HDMI.
- The HDMI output resolution and frame rate are automatically adjusted to suit the movie recording size.

? For longer HDMI output

To continue HDMI output for longer than 30 min., select [1]+口, then set [Auto power off] in [Y: Power saving] to [Disable] (愛). HDMI output will continue after the camera screen turns off when the time set in [Screen off] elapses.

Caution

- HDMI output without information prevents display of warnings about the card space, battery level, or high internal temperature (g)) via HDMI.
- During HDMI output, display of the next image may take some time if you switch between movies of different recording sizes or frame rates.
- Avoid operating the camera when recording movies to external devices, which may cause information to be displayed in the HDMI video output.
- Brightness and color of movies recorded with the camera may look different from that of HDMI video output recorded by external devices, depending on the viewing environment.


Note

- By pressing the < INFO > button, you can change the information displayed.
- Audio is also output via HDMI, except when [Sound rec.] is set to [Disable].

- Guidance Display Before Recording
- Warning Indicator Display in Movie Recording

Guidance Display Before Recording

Guidance may be displayed when the camera starts up, after settings are adjusted, or in other situations.

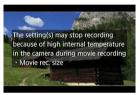

The guidance warns that the camera may become hot internally if movies are recorded under the current settings, and that if you continue recording, the camera may turn off automatically.

If you will record over an extended period, consider changing the settings listed in the guidance (such as movie recording size or use of digital zoom), so that you can record without the camera displaying guidance.

If you prefer to record without changing the settings, note any warning indicators displayed as you record. A 10-level indicator (1) is displayed during movie recording in case of excessive internal camera temperature.



As the internal temperature rises, the level on the indicator extends to the right. How fast the level increases will depend on shooting conditions. Levels 1–7 are marked in white, but once the temperature reaches level 8, the color changes.



[W] flashes in red if you continue recording after the indicator reaches level 9, marked in orange. A flashing icon indicates that the camera will soon turn off automatically.



A message is displayed if you continue to record while the icon is flashing, and the camera automatically turns off.

Subsequent recording

To keep recording under the same settings, leave the camera off and let it cool down a while. Note that the camera may overheat again after you resume recording.

Caution

Precautions for movie recording

- Do not point the camera toward an intense light source, such as the sun or an intense artificial light source. Doing so may damage the image sensor or the camera's internal components.
- If you record something that has fine detail, moire or false colors may result.
- If [AWB] or [AWBW] is set and the ISO speed or aperture value changes during movie recording, the white balance may also change.
- If you record a movie under fluorescent or LED lighting, the movie image may flicker.
- If you perform AF with a USM lens during movie recording in low light, horizontal banding noise may be recorded in the movie. The same type of noise may you focus manually with certain lenses equipped with an electronic focusing ring.
- Recording a few test movies is recommended if you intend to perform zooming during movie recording. Zooming as you record movies may cause exposure changes or lens sounds to be recorded, an uneven audio level, inaccurate lens aberration correction, or loss of focus.
- Large aperture values may delay or prevent accurate focusing.
- Performing AF during movie recording may cause the following kinds of issues: significant temporary loss of focus, recording of changes in movie brightness, temporary stopping of movie recording, or recording of mechanical lens sounds.
- Avoid covering the built-in microphones with your fingers or other objects.
- Connecting or disconnecting an HDMI cable during movie recording will end recording.
- If necessary, also see <u>General Still Photo Shooting Precautions</u>.
- The camera may become hot in movie recording while connected via Wi-Fi. Use a tripod or take other measures to avoid handheld recording.

Recording and image quality

- If the attached lens has an Image Stabilizer and you set the Image Stabilizer switch to < ON >, the Image Stabilizer will operate at all times even if you do not press the shutter button halfway. This will consume battery power, and it may reduce the total movie recording time. When the Image Stabilizer is not necessary, such as when using a tripod, it is recommended that you set the Image Stabilizer switch to < OFF >.
- If the brightness changes as you record a movie with auto exposure, the movie may appear to stop momentarily. In this case, record movies with manual exposure.
- If there is a very bright light source in the image, the bright area may appear black on the screen. Movies are recorded almost exactly as they appear on the screen.
- Image noise or irregular colors may occur when shooting at high ISO speeds, high temperatures, slow shutter speeds, or under low light. Movies are recorded almost exactly as they appear on the screen.
- Video and audio quality of recorded movies may be worse on other devices, and playback may not be possible, even if the devices support MP4 formats.

If you use a card with a slow writing speed, an indicator may appear on the right
of the screen during movie recording. The indicator shows how much data has
not yet been written to the card (remaining capacity of the internal buffer
memory), and it increases more quickly the slower the card is. If the indicator (1)
becomes full, movie recording will stop automatically.



(1)

- If the card has a fast writing speed, the indicator will not appear or the level (if displayed) will not increase much. First, record a few test movies to see if the card can write fast enough.
- If the indicator shows that the card is full, and movie recording stops automatically, the sound near the end of the movie may not be recorded properly.
- If the card's writing speed is slow (due to fragmentation) and the indicator appears, formatting the card may make the writing speed faster.

Note

Notes for movie recording

- Each time you record a movie, a new movie file is created on the card.
- Field of view (coverage) is approx. 100%.
- Focusing is also possible by pressing the < AF > button.
- To enable starting/stopping movie recording by pressing the shutter button completely, set [Fully-press] for [C: Shutter btn function for movies] to [Start/ stop mov rec] (2).
- Most external microphones equipped with a 3.5 mm mini-plug can be used.
- Any connected external microphone is used instead of the built-in microphone.
- Focus preset during movie recording is available when using (super) telephoto lenses equipped with this function released in and after the second half of 2011.
- YCbCr 4:2:0 (8-bit) color sampling and the BT.709 color space are used for 4K and Full HD movies.

AF/Drive

This chapter describes autofocus operation and drive modes and introduces menu settings on the AF [AF] tab.

☆ to the right of page titles indicates functions only available in Creative Zone modes (< Fv >/< P >/< Tv >/< Av >/< M >/< B >).

Note

- < AF > stands for autofocus. < MF > stands for manual focus.
- Tab Menus: AF (Still Photos)
- Tab Menus: AF (Movie Recording)
- AF Operation ☆
- Movie Servo AF
- Selecting the AF Area ☆
- Preview AF
- <u>Touch & Drag AF Settings</u>
- Manual Focus
- Servo AF Characteristics ☆
- Customizing AF Functions ☆
- Selecting the Drive Mode
- Using the Self-Timer
- <u>Remote Control Shooting</u>
- <u>Customizing Operation</u>

Tab Menus: AF (Still Photos)

AF1

Ô	AF	►		((†))	Ý	<u>0</u>	7	t
AF c	perat	tion			ONE S	SHOT		-
AF a	irea				AFE 3			-
Sub	ject tr	racki	ng				• TON	-
Sub	ject to	o det	ect		Peopl	e		-
Eye	detec	tion			Enabl	e		-
Swit	tching	g trad	cke	d sub	ojects			-

- (1) AF operation
- (2) AF area
- (3) Subject tracking
- (4) Subject to detect
- (5) Eye detection
- (6) Switching tracked subjects

Note

 When lenses without a focus mode switch are used, [Focus mode] is displayed on the [AF1] tab if you have set [Y: O switch (AF/MF)] to [Disable] (@).



- (1) Case 1
- (2) <u>Case 2</u>
- (3) <u>Case 3</u>
- (4) Case 4
- (5) <u>Case A</u>
- (6) Tracking sensitivity
- (7) Accel./decel. tracking
- AF3

AF 🗈	((†))	Ý	<u>n</u>	\star
1 2 <mark>3</mark> 4 5				
One-Shot AF rele	ease p	rior.		0 –
Preview AF		Disab	le	
Lens drive when	AF im	possit	ole	ON —
AF-assist beam f	iring			on —

- (1) One-Shot AF release prior.
- (2) Preview AF
- (3) Lens drive when AF impossible
- (4) AF-assist beam firing



- (1) Touch & drag AF settings
- (2) Limit AF areas
- (3) States sensitivity- AF pt select
- (4) Orientation linked AF point

AF5

Ô		AF	►		((†))	Ý	ļ	<u>A</u> .	*
		3	4	5	6				
MF	p	eaki	ng se	etti	ngs				OFF -
Fo	cu	s gui	ide			Off			-
Movie Servo AF					Enab	le		-	

- (1) MF peaking settings
- (2) Focus guide
- (3) Movie Servo AF

• AF6

Ô	AF	►	((†))	Ý	<u>n</u>		\star
			5 6				
Elec	tronic	: full	-time N	١F		OF	F –
Len	s elect	troni	c MF			0 +	OFF —
Foc	us/cor	ntrol	ring			FOC	US—
Foc	us rin	g rot	ation			-	, + —
RF I	ens M	IF fo	us ring	g sensi	itivity	C	+ –

- (1) Electronic full-time MF
- (2) Lens electronic MF
- (3) Focus/control ring
- (4) Focus ring rotation
- (5) RF lens MF focus ring sensitivity

In Basic Zone modes, the following screens are displayed. Note that available menus vary by shooting mode.

• AF1

- AF
 ▶
 (ψ)
 •

 1
 2
 3
 4
 5

 AF area
 AFC 3
 (1)

 Subject tracking
 •
 (2)

 Subject to detect
 People
 (3)


 Eye detection
 Enable
 (4)
- (1) AF area
- (2) Subject tracking
- (3) Subject to detect
- (4) Eye detection
- AF2



(1) Preview AF

(2) AF-assist beam firing

AF3

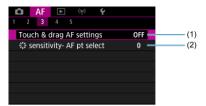

- (1) Touch & drag AF settings
- (2) Sensitivity- AF pt select

• AF4



- (1) MF peaking settings
- (2) Focus guide
- (3) Movie Servo AF

AF5



- (1) Focus ring rotation
- (2) RF lens MF focus ring sensitivity

AF1


Ľ	2	AF	►]	((†))	Ý	D	7	k
		3	4		6				
	Mov	ie Sei	rvo A	١F		Enable			-
	AF a	rea				AFE 3			-
	Subj	ect tr	acki	ng				€Ē	-
	Subj	ect to	o de	tect		People			-
	Eye	detec	tion			Enable			-
	Swit	ching	ı tra	cke	d sul	ojects			-

- (1) Movie Servo AF
- (2) AF area
- (3) Subject tracking
- (4) Subject to detect
- (5) Eye detection
- (6) Switching tracked subjects

Note

 When lenses without a focus mode switch are used, [Focus mode] is displayed on the [AF1] tab if you have set [¥: Ø switch (AF/MF)] to [Disable] (②).

AF2

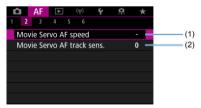


- (1) Movie Servo AF speed
- (2) Movie Servo AF track sens.



(1) Lens drive when AF impossible

• AF4

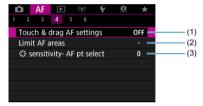

- (1) Touch & drag AF settings
- (2) Limit AF areas
- (3) Sensitivity- AF pt select
- AF5



- (1) MF peaking settings
- (2) Focus guide

• AF6

Ô	AF	►	(† ¹⁾	Ý		Ċ.	\star	
				6					
Elec	tronio	: full	-time	MF				OFF	-
Len	s elect	troni	c MF				0	•OFF	-
Foc	us/cor	ntrol	ring				F	OCUS	-
Foc	us ring	g rot	atior					7	-
RF I	ens M	IF fo	us ri	ng s	iensi	tivit	y ,	3	-


- (1) Electronic full-time MF
- (2) Lens electronic MF
- (3) Focus/control ring
- (4) Focus ring rotation
- (5) RF lens MF focus ring sensitivity

AF Operation

- One-Shot AF for Still Subjects
- Servo AF for Moving Subjects

You can select the AF operation characteristics to suit the shooting conditions or subject.

- 1. Set the focus mode to (< AF >).
 - For RF lenses without a focus mode switch
 - With [\$\mathbf{Y}: \$\mathbf{O}\$ switch (AF/MF)] set to [Enable] (\$\vec{B}\$), set the focus mode switch on the front of the camera to < AF >.

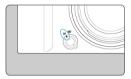


 With [\$\vec{Y}: \$\vec{O}\$ switch (AF/MF)] set to [Disable] (\$\vec{O}\$), set [\$\vec{AF}\$: Focus mode] to [\$\vec{AF}\$].

Ď	AF	►	((†))	Ý	A	*
1 2						
				AF		
Foo	us mo	ode		MF		

For RF lenses with a focus mode switch

Set the lens focus mode switch to < AF >. The camera focus mode switch is now disabled.

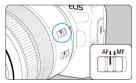

2. Select [AF: AF operation].

Û		AF	►		((†))	Ý	â	*			
1	2	3	4	5	6						
Α	FO	perat	tion			ONE SHOT					
A	۲F a	rea				AFC 3					
S	ubj	ect ti	racki	ng				• Ton			
S	ubj	ect to	o det	ect		People					
E	ye o	detec	tion		Enable						
S	wit	ching	trac	kec	d sul	ojects					

3. Select an option.

AF operation							
One-Sh	iot AF						
ONE SHOT	SERVO						
	SET OK						

Note

- If focus is not achieved, the AF point will turn orange. When using One-Shot AF, either recompose the shot and try to focus again or see <u>Shooting Conditions That</u> <u>Make Focusing Difficult</u>.
- With Servo AF, the camera shoots even when subjects are not in focus.

This AF operation is suited for still subjects. When you press the shutter button halfway, the camera will focus only once.

- When focus is achieved, the AF point will turn green and the beeper will sound.
- The focus remains locked while you hold down the shutter button halfway, allowing you to recompose the image before taking the picture.
- For details on the continuous shooting speed for continuous shooting, see <u>Selecting the</u> <u>Drive Mode</u>.



- If [: Beep] is set to [Disable], the beeper will not sound when focus is achieved.
- See <u>Lens electronic MF</u> when using a lens that supports electronic manual focusing.

Shooting with the focus locked

In focus lock shooting, you will use One-Shot AF with a fixed AF point, then recompose the shot before shooting. The steps are as follows when you will press the shutter button halfway to focus.

1. Aim the fixed AF point over the subject to focus on, then press the shutter button halfway.



2. After the AF point in focus turns green, keep the shutter button pressed halfway and recompose the shot.



 $\textbf{3.} \quad \textbf{Press the shutter button completely to take the picture.}$

This AF operation is suited for moving subjects. While you hold down the shutter button halfway, the camera will keep focusing on the subject continuously.

- When focus is achieved, the AF point will turn blue. The beeper will not sound even when focus is achieved.
- The exposure is set at the moment the picture is taken.
- For details on the continuous shooting speed for continuous shooting, see <u>Selecting the</u> <u>Drive Mode</u>.

Caution

- Accurate focusing may not be possible at high aperture values or depending on the lens, the distance to the subject, and how fast the subject is moving.
- Zooming during continuous shooting may throw off the focus. Zoom first, then recompose and shoot.
- Consider shooting with One-Shot AF if Servo AF operation is unsteady for still subjects.

With this function enabled, the camera focuses on the subject continuously during movie recording.

1. Select [AF: Movie Servo AF].

Ô	AF	٨		((T))	¥	0	*
1 2	3	4	5	6			
Mo	vie Se	rvo A	١F		Enable		
AF a	area				AFE 3		
Sub	ject ti	racki	ng				• Ton
Sub	ject to	o def	tect		People		
Eye	detec	tion			Enable		
Swi	tching	tra	cked	d sub	ojects		

2. Select [Enable].



Enable

- The camera focuses on the subject continuously even when you are not pressing the shutter button halfway.
- To keep the focus at a specific position, or if you prefer not to record mechanical sounds from the lens, you can temporarily stop Movie Servo AF by tapping [stops] in the lower left of the screen.
- Movie Servo AF will resume after pausing if you return to movie recording after operations such as pressing the < MENU > or
 > button or changing the AF area.

Disable

While you hold down the shutter button halfway, the camera will keep focusing on the subject continuously. Pressing the < $_{\rm ON}^{\rm AF}$ > button focuses only once.

Caution


Precautions when set to [Movie Servo AF: Enable]

- Shooting conditions that make focusing difficult
 - · A fast-moving subject approaching or moving away from the camera.
 - · A subject moving at a close distance to the camera.
 - · When shooting with a higher aperture value.
 - · Also see Shooting Conditions That Make Focusing Difficult.
- Since the lens is driven continuously and the battery power is consumed, the possible movie recording time (2) will be shortened.
- The camera's built-in microphone may also record mechanical sounds of the lens or sounds of camera/lens operations if AF operations are performed or the camera or lens is operated during movie recording. In this case, using an external microphone may reduce these sounds. If the sounds are still distracting with an external microphone, it may be more effective to remove the external microphone from the camera and position it away from the camera and lens.
- Movie Servo AF pauses during zooming or magnified view.
- During movie recording, if a subject approaches or moves away or if the camera is moved vertically or horizontally (panning), the recorded image may momentarily expand or contract (change in image magnification).

- Mathematic AF Area
- Selecting the AF Area
- Subject Tracking
- Subject to Detect
- Eye Detection
- Switching Tracked Subjects
- Tracking with the Button
- Focus Mode
- Manually Setting AF Points or Zone AF Frames
- Magnified View
- AF Shooting Tips
- Shooting Conditions That Make Focusing Difficult
- AF Range

This section describes AF area operation with [AF: Subject tracking] set to [Off].

: Spot AF

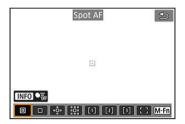


The camera focuses in a narrower area than 1-point AF.

: 1-point AF

1-point AF	Ð
INFO THE	
	M-Fn

The camera focuses using a single AF point []].

🔅: Expand AF area: 🔅

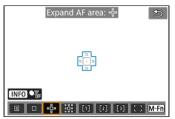

Focuses using one AF point []] and the AF area outlined here in blue. Effective for moving subjects, which are difficult to track with 1-point AF.

Focusing on your preferred subject is easier than with Flexible Zone AF.

When Servo AF is used, first you will focus using an AF point []].

Expand AF area: Around



Focuses using one AF point []] and the surrounding AF area outlined here in blue, which makes it easier to focus on moving subjects than with Expand AF area: •¹/₂•. When Servo AF is used, first you will focus using an AF point []].

[1]: Flexible Zone AF 1

By default, a square Zone AF frame is set.



[2]: Flexible Zone AF 2

By default, a vertical rectangular Zone AF frame is set.



[3]: Flexible Zone AF 3

Flexible Zone AF 3 ↔

By default, a horizontal rectangular Zone AF frame is set.

With Flexible Zone AF 1–3, you can freely set the size of the Zone AF frame (
). Uses auto selection AF in Zone AF frames to cover a larger area than Expand AF area, which makes focusing easier than with 1-point AF/Expand AF area and effective for moving subjects.

Focusing areas are determined not only based on the nearest subject but also based on a variety of other conditions such as faces (of people or animals), vehicles, subject motion, and subject distance.

Pressing the shutter button halfway displays []] over AF points in focus.

[]: Whole area AF

	Whole	area	AF		Ð
INFO • of	-D- (.D.)	0	[2]		M-Fn

Uses auto selection AF in a whole-area AF frame to cover a larger area than Flexible Zone AF, which makes focusing easier than with 1-point AF/Expand AF area/Flexible Zone AF and effective for moving subjects.

Focusing areas are determined not only based on the nearest subject but also based on a variety of other conditions such as faces (of people or animals), vehicles, subject motion, and subject distance.

Pressing the shutter button halfway displays []] over AF points in focus.

You can select the AF area to suit the shooting conditions or subject. If you prefer to focus manually, see <u>Manual Focus</u>.

1. Select [AF: AF area].

1 AF	2 3						
AF			5				
	operat	ion			ONE S	нот	
AF	area				AFE 3		
Sι	ıbject tr	acki	ng				•==
Su	bject to	o det	ect		People	e	
Ey	e detec	tion			Enable	e	
Sv	vitching	trad	ked	l sul	ojects		

2. Select the AF area.

AF area							
1-point AF							
	[3] []						
	SET OK						
AF area							
0	63						
0	63						
D	53						
	MENU 🕤						
	MENU 🕤						

 The screen above is displayed when [AF: Orientation linked AF point] (②) is set to [Separate AF pts: Area+pt]. Set separate AF areas after choosing vertical and horizontal orientations.

Note To set the AF area, you can also press the < :>> button and then the < M-Fn > button. The following descriptions apply to the camera with AF operation set to [One-Shot AF] (@). With [Servo AF] (@) set, the AF point will turn blue when focus is achieved.

Among the subjects detected, a tracking frame $\begin{bmatrix} c \\ c \end{bmatrix}$ is displayed over the main subject. If the subject moves, the tracking frame $\begin{bmatrix} c \\ c \end{bmatrix}$ also moves to track it.

You can set [AF: Eye detection] to [Enable] to shoot with the subject's eyes in focus (2).

1. Select [AF: Subject tracking].

*
T
• TON

2. Select an option.

Subject tracking	
On	• .
Off	● _{Öff}
	SET OK

Caution

 No tracking frame is displayed when [AF: Subject tracking] is set to [Off], regardless of the [AF: Subject to detect] setting.

Manually selecting a subject for focus

1. Check the tracking frame.



- A tracking frame [] appears over any subjects detected.
- Tracking frames [[]] away from AF points are displayed in gray.
- Once the tracked subject is near an AF point, even if it is outside the AF point, the tracking frame turns white (distinguishing it as an active frame), which enables selection as the main subject. The AF point turns gray.
- Gray display of tracking frames [] does not apply in movie recording.

2. Focus and shoot/record.





 Once you press the shutter button halfway and the subject is in focus, the AF point turns green and the camera beeps.
 An orange AF point indicates that the camera could not focus on subjects.

Note

- Selecting a subject by touch with [AF: AF area] set to [Whole area AF] changes the tracking frame to [[#]_b] and locks on to that subject for tracking across the entire screen.
- To release locked tracking, tap [].
- Pressing the shutter button halfway when the AF point does not overlap the tracking frame [^{*}] will focus using the active, white AF frame.
- When AF operation is set to Servo AF, pressing the shutter button halfway focuses using Whole area AF.
- For human subjects, the active [] may cover only a part of the face, not the whole face.
- The size of tracking frames varies depending on the subject.
- No tracking frame is displayed when [AF: Subject tracking] is set to [Off], regardless of the [AF: Subject to detect] setting.

Caution

- Tapping the screen to focus will focus with [One-Shot AF], regardless of the AF operation setting.
- If the subject's face is significantly out of focus, face detection will not be possible.
 Adjust the focus manually (g) so that the face can be detected, then perform AF.
- AF may not detect subjects or people's faces at the edges of the screen.
 Recompose the shot to center the subject or bring the subject closer to the center.

Subject to detect	
People	÷.
Animals	٤.
Vehicles	æ
None	OFF
	SET OK

You can specify conditions for automatic selection of the main subject to track.

People

Prioritizes the faces or heads of people as the main subjects to track. When a person's face or head cannot be detected, the camera attempts to detect and track their torso. If their torso cannot be detected, the camera may track other parts of their body.

Animals

Detects animals (dogs, cats, or birds) and people and prioritizes detection results for animals as the main subjects to track.

For animals, the camera attempts to detect faces or bodies, and a tracking frame is shown over any face detected.

When an animal's face or entire body cannot be detected, the camera may track part of their body.

Vehicles

Detects two- or four-wheeled motorsports vehicles and people and prioritizes detection results for vehicles as the main subjects to track.

For vehicles, the camera attempts to detect key details or the entire vehicle, and a tracking frame is shown over any of these details detected.

If key details or the entire vehicle cannot be detected, the camera may track other parts of the vehicle.

Press the < INFO > button to enable or disable Spot detection for key details of vehicles.

None

The camera determines the main subject automatically from how you compose shots, without detecting subjects.

Tracking frames are not displayed.

Caution

- The camera may detect areas other than faces or bodies of people or animals or key details or bodies of vehicles as subjects.
- Faces that are very small or large in the picture, too bright or dark, or partly hidden cannot be detected.
- Animal face detection is not possible unless the subject is close enough and facing the camera steadily. A tracking frame is displayed for the entire body.
- Detection may not be possible for birds camouflaged in a forest, or similar situations.
- Detection may not be possible for ordinary passenger cars or bicycles, or for motorcyclists performing stunts or kicking up dirt and dust.
- No tracking frame is displayed when [AF: Subject tracking] is set to [Off], regardless of the [AF: Subject to detect] setting.

Note

- When pressing the shutter button halfway for subject selection, you can choose the following subjects. In scenes without relevant subjects, the camera tracks other objects.
 - People People, animals, vehicles
 - Animals People, animals
 - Vehicles
 People, vehicles

You can shoot with the eyes of people or animals in focus.

1. Select [AF: Eye detection].

Û	AF	►		((†))	Ý	â	*
1 2	3	4	5	6			
AF	operat	tion			ONE S	HOT	
AF	area				AFE 3		
Sub	oject ti	ackir	ng				• Ton
Sub	oject to	o det	ect		Peopl	e	
Eye	detec	tion			Enabl	e	
Swi	itching	, trac	:ke	d sul	ojects		
		,			,,		

2. Select an option.

Ô	AF	►	((†))	Ý	D	*
Eye	detec	tion		Disab		
				Enabl	e	

3. Aim the camera at the subject.




- A tracking frame is displayed around their eye.
- To choose an eye to focus on when [AF: AF area] is set to [Whole area AF], either tap the screen or use < % >. As you use < % >, the tracking frame changes again to [4, 3).
- You can also tap the screen to choose an eye, when [AF: AF area] is set to [Whole area AF] or during tracking in progress.
- If your selected eye is not detected, an eye to focus on is selected automatically.



Caution

- Subject eyes may not be detected correctly, depending on the subject and shooting conditions.
- No tracking frame is displayed when [AF: Subject tracking] is set to [Off], even if [AF: Subject to detect] is set to an option other than [None].
- Eyes are not detected when [AF: Subject to detect] is set to [None].

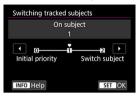

You can specify how easily the camera switches AF points to track subjects.

Initial priority

Tracks the subject initially determined for AF, to the extent possible.

On subject

Tracks the subject initially determined for AF, to the extent possible. Switches to other subjects if the camera can no longer determine if the tracked subject is the main subject.

Switch subject

Switches to track other subjects in response to shooting conditions.

Caution

Precautions when set to [Initial priority]

- The camera may not be able to continue tracking subjects under some subject conditions.
 - · If subjects move vigorously
 - · If subjects face a different direction or change their posture
 - If the tracking frame strays from subjects, or if subjects are hidden behind obstructions and you can no longer see them
- Subjects selected by touch operations are tracked to the extent possible, regardless of the [Subject to detect] setting.

You can press a button assigned to [Start/stop tracking] in [\bigcap_{a} : Customize buttons] to track subjects with a tracking frame $\begin{bmatrix} r & n \\ a & a \end{bmatrix}$. This example is based on assigning the < A_{ON}^{A} > button (O).

1. Check the AF point.



- The AF point (1) will appear.
- With Expand AF area: •hore or Expand AF area: Around, adjacent AF points are also displayed.
- With Flexible Zone AF, the specified Zone AF frame is displayed.
- 2. Press the $< \frac{AF}{ON} >$ button.



- The AF point changes to a tracking frame ^[In a]_{ln a]}, which locks on to that subject for tracking and follows the subject within the screen if it moves. To cancel tracking, press the < ^{AN}_D > button again.
- The tracking frame changes to [4,]) when multiple subjects can be detected, and you can use < * > to choose a subject to focus on.
- Once tracking begins, the subject is tracked across the entire screen, regardless of the specified AF area.

3. Take the picture.

Note

 AF areas and points return to the position before tracking when tracking stops after you press the shutter button halfway or completely, or in shooting standby (when [Servo AF] is used). You can set how the camera focuses.

1. Select [AF: Focus mode].

Ľ	2	AF	►		((†))	Ý	â	*
	2	3	4	5	6			
	AF o	perat	tion			ONE S	HOT	
	AF a	rea				AFE 3		
	Subj	ect ti	ackir	ng				• Ton
	Subj	ect to	o det	ect		People	e	
1	Eye	detec	tion			Enable	е	
	Swit	ching	trac	ke	d sul	ojects		
	Focu	s mo	de			AF		

2. Select an option.

AF	▲	((†))	Ý	D	*
1 2 3					
		1	AF		
Focus mo	de		AF MF		

AF

The camera operates in autofocus mode.

MF

The camera operates in manual focus mode.

Caution

- [AF: Focus mode] is not displayed under these conditions.
 - With [Switch (AF/MF)] set to [Enable]
 - · When lenses with a focus mode switch are attached
 - · When lenses designed exclusively for manual focusing are attached
 - · When no lens is attached
 - When set to [MF], AF points are hidden during basic information display, and an MF icon is displayed.

You can manually set the AF point or Zone AF frame. Screens such as these are shown when set to Flexible Zone AF 1.

1. Check the AF point or Zone AF frame.



An AF point or Zone AF frame (1) appears.

2. Move the AF point or Zone AF frame.



- Use < * > to move the AF point or Zone AF frame into position for focusing (but note that with some lenses, it may not move to the edge of the screen).
- To center the AF point or Zone AF frame, press < * > straight in.
- You can also focus by tapping a position on the screen.

3. Focus and shoot/record.



 Aim the AF point or Zone AF frame over the subject and press the shutter button halfway.



- When focus is achieved, the AF point or Zone AF frame will turn green and the beeper will sound.
- If focus is not achieved, the AF point or Zone AF frame will turn orange.

Caution

- The camera will keep moving the AF point [] to track subjects when set to Flexible Zone AF and Servo AF, but under some shooting conditions (such as when subjects are small), it may not be possible to track the subject.
- Focusing may be difficult when using a peripheral AF point. In this case, select an AF point in the center.
- Tapping the screen to focus will focus with [One-Shot AF], regardless of the AF operation setting.

Note

 You can set AF areas and AF points when [AF: Orientation linked AF point] is set to [Separate AF pts: Area+pt] (
 (
 (
)). To check the focus, you can magnify display by approx. $5 \times \text{ or } 10 \times \text{ by tapping } [Q].$

- Magnification is centered on the AF point for [Spot AF], [1-point AF], [Expand AF area: *=1. and [Expand AF area: Around]. or on the Zone AF frame for Flexible Zone AF.
- Autofocusing is performed in magnified view if you press the shutter button halfway.
- When set to Servo AF, pressing the shutter button halfway in magnified view reverts to the normal view for focusing.
- Magnification is centered on the tracking frame when [AF: Subject tracking] is set to [Enable] and the tracking frame [⁻,] is white (as an active frame).

Caution

- If focusing is difficult in the magnified view, return to the normal view and perform AF.
- If you perform AF in the normal view and then use the magnified view, accurate focus may not be achieved.
- AF speed differs between the normal view and magnified view.
- Preview AF and Movie Servo AF are not available in magnified view.
- With the magnified view, achieving focus becomes more difficult due to camera shake. Using a tripod is recommended.

AF Shooting Tips

- Even when focus is achieved, pressing the shutter button halfway will focus again.
- Image brightness may change before and after autofocusing.
- Depending on the subject and shooting conditions, it may take longer to focus, or the continuous shooting speed may decrease.
- If the light source changes as you shoot, the screen may flicker, and focusing may be difficult. In this case, restart the camera and resume shooting with AF under the light source you will use.
- If focusing is not possible with AF, focus manually (2).
- For subjects at the edge of the screen that are slightly out of focus, try centering the subject (or AF point, or Zone AF frame) to bring them into focus, then recompose the shot before shooting.
- With certain lenses, it may take more time to achieve focus with autofocus, or accurate focusing may not be achieved.

- Subject with low-contrast such as the blue sky, solid-color flat surfaces or when highlight
 or shadow details are clipped.
- Subjects in low light.
- Stripes and other patterns where there is contrast only in the horizontal direction.
- Subjects with repetitive patterns (Example: Skyscraper windows, computer keyboards, etc.).
- Fine lines and subject outlines.
- Under light sources with constantly changing brightness, colors, or patterns.
- Night scenes or points of light.
- The image flickers under fluorescent or LED lighting.
- Extremely small subjects.
- Subjects at the edge of the screen.
- Strongly backlit or reflective subjects (Example: Car with a highly reflective surfaces, etc.).
- Near and distant subjects covered by an AF point (Example: Animal in a cage, etc.).
- Subjects that keep moving within the AF point and will not stay still due to camera shake or subject blur.
- Performing AF when the subject is very far out of focus.
- Soft focus effect is applied with a soft focus lens.
- A special effect filter is used.
- Noise (dots of light, banding, etc.) appears on the screen during AF.

The available autofocus range varies depending on the lens used and settings that control the aspect ratio, image quality, 4K movie recording, and Movie digital IS.

This function keeps subjects generally in focus. The camera is ready to focus immediately when you press the shutter button halfway.

1. Select [AF: Preview AF].

1 2 3 4 5 6 One-Shot AF release prior. Preview AF Disable Lens drive when AF impossible ON	AF	►		((†))	Ý	â	*
Preview AF Disable Lens drive when AF impossible ON	1 2 3	4	5	6			
Lens drive when AF impossible ON	One-Shot	AF re	elea	ise p	rior.		0
	Preview A	F			Disab	le	
A Francisk bases fields and an	Lens drive	whe	en A	AF im	possil	ble	ON
AF-assist beam firing ON	AF-assist I	beam	n fir	ing			ON

2. Select [Enable].

Ĺ		AF	►	((₁))	Ý	<u>n</u>	*
1							
P	rev	iew A	١F		Enabl	e	
					Disab	le	

Caution

 Fewer shots are available when set to [Enable], because the lens is driven continuously and battery power is consumed.

- C Touch & Drag AF
- Positioning Method
- Active Touch Area

You can move the AF point or Zone AF frame by tapping or dragging on the screen as you look through the viewfinder.

Touch & Drag AF

1. Select [C: Touch & drag AF settings].



2. Select [Touch & drag AF].



Select [Enable].

You can set how positions are specified by tapping or dragging.

1. Set [Positioning method].

Touch & drag AF settings	
Positioning method Absolute	
Relative	

Absolute

The AF point moves to the tapped or dragged position on the screen.

Relative

The AF point moves in the direction you drag, by an amount corresponding to the amount you drag, no matter where you tap the screen.

You can specify the area of the screen used for tap and drag operations.

1. Select [Active touch area].

Touch & drag AF	Disable
Positioning method	Relative
Active touch area	🗇 Right

2. Set the area that will respond to touch.

Active touch area	
Whole panel	
💼 Right	
🛍 Left	
🗎 Тор	
🖨 Bottom	
🖻 Top right	
	SET OK

Note


A round orange frame [()] is displayed when you tap the screen with [AF: AF area] set to [Whole area AF]. After you lift your finger at the position to move the AF point to, [^b_a] is displayed and that subject is tracked. To cancel subject selection, tap [^b_a]_{[b}].

Manual Focus


- Setting MF peaking (Outline Emphasis)
- Focus Guide

If focusing is not possible with autofocus, you can magnify the image and focus manually.

- 1. Set the focus mode to < MF >.
 - For RF lenses without a focus mode switch
 - With [\$\mathcal{Y}: \$\mathcal{O}\$ switch (AF/MF)] set to [Enable] (\$\vec{B}\$), set the focus mode switch on the front of the camera to < MF >.

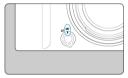


 With [♥: Ø switch (AF/MF)] set to [Disable] (∅), set [AF: Focus mode] to [MF].

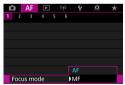

For RF lenses with a focus mode switch

Set the lens's focus mode switch to < $\ensuremath{MF}\xspace$ >. The camera's focus mode switch is now disabled.

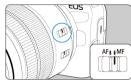

2. Magnify the image.



• Each tap of [Q] changes the magnification ratio, as follows.

$$\longrightarrow$$
 x5 \rightarrow x10 \rightarrow x1 \longrightarrow

3. Move the magnified area.



- Use < 🔆 > to move the magnified area into position for focusing.
- To center the magnified area, press < 🔆 > straight in.

4. Focus manually.

- While looking at the magnified image, turn the lens focusing ring to focus.
- After focusing, tap [Q] to return to the normal view.

🖫 Note

- In magnified view, the exposure is locked.
- Even when focusing manually, you can use Touch Shutter to shoot.

Edges of subjects in focus can be displayed in color to make focusing easier. You can set the outline color and adjust the sensitivity (level) of edge detection.

1. Select [AF: MF peaking settings].

Û	AF		((†))	ŕ	Q	*
1 2	3	4 5	6			
MF	peaki	ng sett	ings			OFF
Foc	us gui	de		Off		
Mo	vie Se	rvo AF		Enable		

2. Select [Peaking].

Peaking	
On	ON
Off	OFF
	SET OK

- Select [On].
- 3. Set [Level] and [Color].

MF peaking setting	5
Peaking	On
Level	High
Color	Red
	MENU 🕤

Set as necessary.

Caution

- In magnified view, peaking display is not shown.
- During HDMI output, peaking display is not shown on equipment connected via HDMI. Note that peaking display is shown on the camera screen when [1]: HDMI display] is set to [1]+ [].
- MF peaking may be hard to discern at high ISO speeds, especially when ISO expansion is set. If necessary, lower the ISO speed or set [Peaking] to [Off].

Note

Peaking display shown on the screen is not recorded in images.

Setting [**AF**: Focus guide] to [**On**] provides a guide frame that shows which direction to adjust focus and the extent of adjustment needed.

1. Select [AF: Focus guide].


Û		AF	►		((†))	Ý	â	*
				5				
Ν	MF peaking settings OFF							
Focus guide Off								
Movie Servo AF						Enabl	e	

2. Select [On].

Ď		AF	►		((†))	Ý	<u>a</u>	*
1			4	5				
F	ocu	is gui	de			On		
						Off		

- The guide frame is displayed on the face of any person detected as the main subject.
- To display the guide frame near the eyes of any person detected as the main subject, set [AF: Subject tracking] to [Enable] and [AF: Eye detection] to [Enable].
- After pressing the < ...> button, you can use < ...> to move the guide frame in the direction you press.
- To set the guide frame after moving it with < * >, press the < <> button.
- You can also move and set the guide frame by tapping the screen.
- To center the guide frame, tap [B] or press < * > straight in.

The guide frame indicates the current position in focus and adjustment amount as follows.

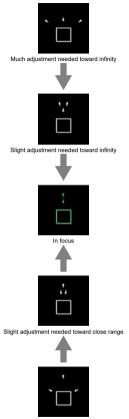





Adjustment information not detected

Caution

- Higher aperture values are more likely to prevent correct guide frame display.
- No AF points are displayed while the guide frame is displayed.
- The guide frame is not displayed in these situations.
 - When the focus mode is set to $\langle AF \rangle$ on the camera or lens
 - · When display is magnified
 - · When digital zoom is set
- The guide frame is not displayed correctly during shifting or tilting of TS-E lenses.

Note

 The camera's auto power off counter does not count time spent adjusting the focus with a lens's electronic focusing ring.

- Case Details
- Case 1: Versatile Multi-Purpose Setting
- Case 2: Continue to Track Subjects, Ignoring Possible Obstacles
- Case 3: Instantly Focus on Subjects Suddenly Entering AF Points
- Case 4: For Subjects That Accelerate or Decelerate Quickly
- Case A: Tracking Automatically Adapts to Subject Movement
- Parameters
- Adjusting Case Parameters

Shooting with AI Servo AF/Servo AF can be easily tailored to your subjects or shooting situations by selecting a Case option. This feature is called the "AF Configuration Tool."

1. Select the [AF2] tab.



2. Select a case.

- Turn the < [§], dial to select a case icon, then press the < () > button.
- Your selected case is now set. Selected cases are displayed in blue.
- To check help information, tap [Help].

Case 1 to Case A are five combinations of settings for "<u>Tracking sensitivity</u>" and "<u>Acceleration/deceleration tracking</u>." Referring to the following table, select the case for your subject and shooting situation.

Case	lcon	Description	Examples of Shooting Situations
Case 1	Ý-1, AL	Versatile multi purpose setting	Moving subjects in general
Case 2	×.	Continue to track subjects, ignoring possible obstacles	Tennis, freestyle skiing
Case 3	Ŕ	Instantly focus on subjects suddenly entering AF points	Start of a cycling race, downhill skiing
Case 4	ħ∕o¥	For subjects that accelerate or decelerate quickly	Soccer, rhythmic gymnastics, motorsports, basketball
Case A	AUTO	Tracking automatically adapts to subject movement	Moving subjects in general, especially in dynamic shooting situations



- Tracking sensitivity: 0
- Accel./decel. tracking: 0

Standard setting suited to moving subjects in general. Suitable for many kinds of subjects and scenes.

In the following situations, select [Case 2] to [Case 4] instead: non-subjects moving across AF points, elusive subjects, or subjects that suddenly appear or change speed.



· Tracking sensitivity: Locked on: -1

· Accel./decel. tracking: 0

Setting to continue focusing on the subject even if non-subjects move across AF points, or if the subject strays from AF points. Effective if you prefer the focus not to switch to nonsubjects or the background.

Note

 Try setting [Tracking sensitivity] to [-2] if non-subjects tend to steal the focus or AF points tend to stray from the subject much of the time, preventing the camera from tracking the target subject under default settings (2).



• Tracking sensitivity: Responsive: +1

· Accel./decel. tracking: +1

Setting to focus on a series of subjects at different distances in the AF points, one after another. Focus switches to any new subject that appears in front of the target subject. Also effective when you want to always focus on the closest subject.

Note
Try setting [Tracking sonsitivity] to [+2] if you prefer focusi

 Try setting [Tracking sensitivity] to [+2] if you prefer focusing that immediately switches to new subjects that appear suddenly (2).



• Tracking sensitivity: Responsive: 0

· Accel./decel. tracking: +1

Setting to keep tracking and focusing on subjects even if they suddenly change speed. Effective for subjects having sudden movements, sudden acceleration/deceleration, or sudden stops.


Note	
 Try setting [Accel./decel. tracking] to [+2] to keep up with subjects that change speed significantly from moment to moment (@). 	



Useful when you prefer to shoot with parameters set automatically, based on how subjects change.

Tracking sensitivity and acceleration/deceleration tracking are set automatically.

Tracking sensitivity

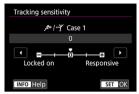

Setting for Servo AF subject-tracking sensitivity in response to non-subjects moving across AF points or subjects straying from AF points.

• 0

Standard setting. Suitable for moving subjects in general.

Locked on: –2 / Locked on: –1


The camera will try to continue focusing on the subject even if non-subjects move across AF points or if the subject strays from the AF points. The -2 setting makes the camera keep tracking the target subject longer than the -1 setting. However, if the camera focuses on a wrong subject, it may take slightly longer to switch and focus on the target subject.

Responsive: +2 / Responsive: +1

The camera can focus consecutively on subjects at different distances that are covered by the AF points. Also effective when you want to always focus on the closest subject. The +2 setting is more responsive than the +1 setting when focusing on the next subject.

However, the camera will be more prone to focus on an unintended subject.

Acceleration/deceleration tracking

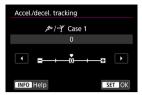

Setting for subject-tracking sensitivity in response to sudden, significant changes in speed, as when subjects suddenly start or stop moving.

• 0

Suited for subjects that move at a steady speed (minor changes in moving speed).

• -2 / -1

Suited for subjects that move at a steady speed (minor changes in moving speed). Effective when a setting of 0 makes focus unstable, due to slight subject movement or an obstruction in front of the subject.

• +2 / +1

Effective for subjects having sudden movements, sudden acceleration/deceleration, or sudden stops. Even if the moving subject's speed suddenly changes significantly, the camera continues to focus on the target subject. For example, the camera is less likely to focus behind a subject that suddenly starts approaching you, or in front of an approaching subject that suddenly stops moving. Setting +2 can track dramatic changes in the moving subject's speed better than with +1.

However, since the camera will be sensitive to even slight movements of the subject, focusing may become unstable for short periods.

You can manually adjust the parameters ((1) Tracking sensitivity and (2) Acceleration/ deceleration tracking) for Case 1 to Case 4.

1. Select a case.



- Turn the < २००२ > dial to select the number of a case to adjust.
- 2. Press the < ⊕ > button.
 - The selected parameter is outlined in purple.
- 3. Select a parameter to adjust.



4. Make the adjustment.

Tracking sensitivity
<i>≫</i> /・資 Case 1
+1
Locked on Responsive
INFO Help SET OK

- Default settings are indicated by a light gray [] icon.
- To confirm the adjustment, press the < () > button.
- To return to the screen in step 1, press the < ---- > button.

Note

- To restore default parameter settings for (1) and (2) to each case, press the < > button in step 2, then press the < > button.
- You can also register (1) and (2) parameter settings to My Menu (2). This enables you to adjust settings for the selected case.
- To shoot with a case you have adjusted, first select the adjusted case, then shoot.

- 🗹 [AF3]
- 🗹 [AF4]
- ☑ [AF6]
- [AF2] (In Movie Recording)



You can configure AF functions in detail to suit your shooting style or subject.

[**AF**3]

One-Shot AF release priority

You can specify whether to prioritize focus or release timing for One-Shot AF (except when shooting with Touch Shutter).

One-Shot AF release	e prior.
Focus p	briority
Release	Focus
Release	Tocus
INFO Help	SET OK

[③] Focus

The picture will not be taken until focus is achieved. Useful when you want to achieve focus before capturing the image.

● [□] Release

Prioritizes shutter release over focus. Useful when capturing the decisive moment is most important.

Note that the camera shoots whether or not the subject is in focus.

Lens operation when AF is not available

You can specify lens operation that applies when autofocusing on a subject is not possible.



[ON] Continue focus search

If focus cannot be achieved with autofocus, the lens is driven to search for the precise focus.

[OFF] Stop focus search

If autofocus starts and the focus is far off or if focus cannot be achieved, the lens drive will not be performed. This prevents the lens from becoming grossly out of focus due to the focus search drive.


Caution

 [Stop focus search] is recommended for super telephoto lenses or other lenses that are driven over a large focus area, to avoid significant delay from focus search drive if the lens becomes greatly out of focus.

AF-assist beam firing

You can enable or disable AF-assist beam firing of the camera or a Speedlite for EOS cameras.

1. Select [AF: AF-assist beam firing].

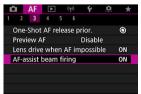

2. Select an option.

Enable	ON
Disable	OFF
LED AF assist beam only	LED
INFO Help	SET OK

[ON] Enable

Enables firing of the AF-assist beam, when needed.

[OFF] Disable

Disables firing of the AF-assist beam. Set if you prefer not to fire the AF-assist beam.

[LED] LED AF assist beam only

Enables LED AF-assist beam firing by Speedlites equipped with this feature, when these flash units are attached. If your Speedlite is not LED-equipped, the camera's AF-assist beam is fired instead.

Caution

Speedlite AF-assist beam firing is disabled when the Speedlite's [AF-assist beam firing] Custom Function is set to [Disable].

Limit AF areas


You can limit the AF areas available to the areas that you normally use. Select available AF areas and press the $\langle \textcircled{B} \rangle$ button to add a checkmark [\checkmark]. Select [**OK**] to register the setting. For details on AF areas, see <u>AF Area</u>.

Limit AF areas								
	Spot AF							
\checkmark	1	1	\	1	✓	\checkmark	✓	
٥		•0•	:0: :	[1]	[2]	[3]	[]	
	OK Cancel							
INFO	He	lp						

0	Caution
•	The $[\checkmark]$ mark cannot be cleared from all items at the same time.
-	
	Note

*Multi-controller sensitivity in AF point selection

You can adjust Multi-controller sensitivity, which applies to AF point positioning.

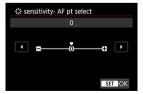

Orientation-linked AF points

You can set separate AF areas/points or separate AF point positions for vertical and horizontal shooting.

Same for both vert/ho	riz 😐
Separate AF pts: Area+	pt 🛛 🕬
Separate AF pts: Pt on	y 💿

[□] Same for both vert/horiz

The same AF points or Zone AF frames in the same AF areas are used in both vertical and horizontal shooting.

[m]] Separate AF pts: Area+pt

Separate types of AF areas or separate positions of AF points or Zone AF frames can be set for each camera orientation ((1) Horizontal, (2) Vertical with the camera grip up, (3) Vertical with the camera grip down ((2)).

Useful when switching to other types of AF areas or positions of AF points or Zone AF frames automatically based on camera orientation.

AF areas and positions of AF points or Zone AF frames you assign to each of the three camera orientations are retained.

• [.....] Separate AF pts: Pt only

Separate positions of AF points or Zone AF frames can be set for each camera orientation ((1) Horizontal, (2) Vertical with the camera grip up, (3) Vertical with the camera grip down). Useful when switching to other positions of AF points or Zone AF frames automatically based on camera orientation.

Positions of AF points or Zone AF frames you assign to each of the three camera orientations are retained.

Caution

- The default setting of [Same for both vert/horiz] is restored if you select [Basic settings] in ["Reset camera] ((2)). Settings for orientations (1)–(3) are cleared, and the selected AF area option becomes [Whole area AF].
- The setting may be cleared if you switch lenses.

Electronic full-time MF

Operation of manual focus adjustment using the electronic focusing ring when certain lenses are attached is customizable. Check the Canon website for compatible lenses (窗).

Electronic full-time MF	
Enable	ON
Disable	OFF
INFO Help	SET OK

Disable

Operation of manual focus adjustment corresponds to the [Lens electronic MF] setting.

Enable

Manual focus adjustment is available whenever camera operations are possible.

Lens electronic MF

For lenses equipped with electronic manual focusing, you can specify how manual focus adjustment is used with One-Shot AF.



● [③→0FF] Disable after One-Shot

After the AF operation, manual focusing adjustment is disabled.

● [③→0N] One-Shot→enabled

You can manually adjust the focus after the AF operation if you keep holding down the shutter button halfway.

[S+[®]_M] One-Shot→enabled (magnify)

You can manually adjust the focus after the AF operation if you keep holding down the shutter button halfway. You can magnify the area in focus and adjust the focus manually by turning the lens focusing ring.

[OFF] Disable in AF mode

Manual focus adjustment is disabled when the focus mode switch of the camera or lens is set to < AF >.

Caution

With [One-Shot→enabled (magnify)], display may not be magnified even if you turn the lens focusing ring while pressing the shutter button halfway immediately after shooting. If so, you can magnify display by releasing the shutter button, waiting for [Q] display, then pressing the shutter button halfway as you turn the lens focusing ring.

Note

 For details on your lens's manual focus specifications, refer to the Lens Instruction Manual.

Focusing ring rotation

You can reverse the direction that the focusing ring of RF lens is rotated to adjust settings.



- [-__+] Normal
- [+_] Reverse direction

Focusing ring sensitivity of RF lenses

You can set the sensitivity of the RF lens focusing ring.

RF lens MF focus ring sensitivity	
Varies with rotation speed	í
Linked to rotation degree	ň
INFO Help	SET OK

[A list of the second secon

Focusing ring sensitivity varies depending on rotation speed.

● [☆☆] Linked to rotation degree

The focal position is adjusted based on the amount of rotation, regardless of the rotation speed.

Use as a focusing or control ring

Menu-based switching of lens focus/control ring functionality.

Caution

 Available when using lenses that have a combination focusing ring/control ring but have no switch to switch between these features.

Focus/control ring	
Use as focus ring	FOCUS
Use as control ring	CONTROL
INFO Help	SET OK

Use as focus ring

The ring works as a focusing ring.

Use as control ring

The ring works as a control ring.

Note

Switching is also possible from the Quick Control screen, when customized with
 [1]: Customize Quick Controls] (
 ^(C)).

Movie Servo AF speed

You can set the AF speed and operating conditions for Movie Servo AF. The function is enabled when using a lens supporting slow focus transition during movie recording*.

When active

Before shoot .:	Standard
During shoot.:	Standard
Not available, incompatible lens	
When active	Always on
AF speed	⊒···· •0••3
INFO Help	MENU 5

You can set [Always on] to have the AF speed take effect at all times for movie recording (before and during movie recording) or set [During shooting] to have the AF speed take effect only during movie recording.

AF speed



You can adjust the AF speed (focus transition speed) from the standard speed (0) to slow (one of seven levels) or fast (one of two levels) to obtain the desired effect for the movie creation.

* Lenses supporting slow focus transition during movie recording

USM and STM lenses released in and after 2009 are compatible. For details, refer to the Canon website (
).



Note

- Operation when inactive is equivalent to when [AF speed] is set to [Standard (0)].
- An asterisk "*" to the right of [AF: Movie Servo AF speed] indicates that the default setting has been modified.

Movie Servo AF tracking sensitivity

You can adjust the tracking sensitivity (to one of seven levels), which affects responsiveness if the subject strays from the AF point during Movie Servo AF, as when interfering objects move across AF points or when you pan.

This function is available when [AF: Movie Servo AF] is set to [Enable].

Movie Servo AF track sens.		
0		
Locked on	Responsive	
INFO Help	SET OK	

Locked on: -3/-2/-1

With this setting, the camera is less likely to track a different subject if the subject strays from the AF point. The closer the setting is to the minus (–) symbol, the less the camera is inclined to track a different subject. It is effective when you want to prevent the AF points from rapidly tracking something that is not the intended subject during panning or when an obstacle cuts across the AF points.

Responsive: +1/+2/+3


This makes the camera more responsive when tracking a subject that covers the AF point. The closer the setting is to the plus (+) symbol, the more responsive the camera is. It is effective when you want to keep tracking a moving subject as its distance from the camera changes or to rapidly focus on another subject.

Note

Operation when inactive is equivalent to when set to [0].

Single and continuous drive modes are provided. You can select the drive mode suiting the scene or subject.

1. Press the < M-Fn > button (\bigcirc 6).

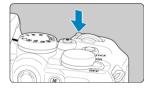

With an image displayed on the screen, press the < M-Fn > button.

2. Select the drive mode item.



● Turn the < २००२ > dial to select the drive mode item.

3. Select the drive mode.



Turn the < is > dial to make a selection.

[] Single shooting

When you hold down the shutter button completely, only one shot will be taken.

● [□[↓]] High-speed continuous shooting +

When you hold down the shutter button completely, you can shoot continuously as described below while you keep holding it down, based on the [12]: Shutter mode] setting.

- · [Mechanical]: max. approx. 15 shots/sec.
- · [Elec. 1st-curtain]: max. approx. 15 shots/sec.
- · [Electronic]: max. approx. 23 shots/sec.

● [□]H] High-speed continuous shooting

When you hold down the shutter button completely, you can shoot continuously as described below while you keep holding it down, based on the [12]: Shutter mode] setting.

- · [Mechanical]: max. approx. 6.3 shots/sec.
- · [Elec. 1st-curtain]: max. approx. 7.7 shots/sec.
- · [Electronic]: max. approx. 15 shots/sec.

[] Low-speed continuous shooting

When you hold down the shutter button completely, you can shoot continuously at max. approx. 3.0 shots/sec. while you keep holding it down.

- [3]* Self-timer: 10 sec.
- [3] [3] Self-timer: 2 sec.

[Oc] Self-timer: Continuous

For self-timer shooting, see <u>Using the Self-Timer</u>. For remote control shooting, see <u>Remote Control Shooting</u>.

* [[0] and [[02] are displayed when the camera is paired with a wireless remote control (sold separately, (2)).

Caution

- [□th] enables approx. 15 shots/sec. continuous shooting speed when set to [Elec. 1st-curtain] or [Mechanical] under these conditions.
 - Room temperature (23°C/73°F)
 - · Using any of the following power sources
 - Fully charged LP-E17 (note that continuous shooting speed may become slower when using batteries with weak recharge performance)
 - · Household power outlet accessories (sold separately)
 - · USB power adapters (sold separately)
 - · Shutter speed: 1/1000 sec. or faster
 - · Flicker reduction: None
- Approx. 23 shots/sec. continuous shooting speed with [Electronic] set to [] is available under the following conditions.
 - · Shutter speed: 1/25 sec. or faster

Note that the continuous shooting speed may be less than approx. 23 shots/sec. if any of the following occurs during continuous shooting.

- Switching to < P > or < Tv > shooting mode, or applying settings that cause the aperture value to change in < Fv > mode
- · Zooming is performed
- · Manual focusing is performed
- · Servo AF changes the position in focus
- Continuous shooting speed with Servo AF may be slower depending on subject conditions or the lens used.

Continuous shooting speed may be lower when shooting under flickering light with

[1] Anti-flicker shoot.] set to [Enable] (27). Also, the continuous shooting interval may become irregular and the release time lag may become longer.

 When internal memory becomes full during continuous shooting, the continuous shooting speed may drop off because shooting will be temporarily disabled (g). Use the self-timer when you want to be in the picture such as a commemorative photograph.

- 1. Press the < M-Fn > button (\circlearrowright 6).
 - With an image displayed on the screen, press the < M-Fn > button.
- 2. Select the drive mode item.



- Turn the < Solve > dial to select the drive mode item.
- 3. Select the self-timer.



Turn the < is > dial to select the self-timer.


Shoot in 10 sec.

𝔥₂: Shoot in 2 sec.

${\boldsymbol{\circlearrowright}}_C$: Shoot continuously in 10 sec. for the specified number of shots*

* To set the number of shots taken continuously (2–10), use the < 🖵 > button or configure [**D**: **Drive mode**].

4. Take the picture.

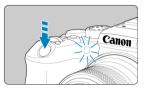

- Focus on the subject, then press the shutter button completely.
- To check operation, look at the self-timer lamp, listen for beeps, or watch the countdown in seconds on the screen.
- Self-timer lamp blinking accelerates and the camera beeps quickly approx. 2 sec. before the picture is taken.

Caution

 With [Oc], some conditions in continuous shooting may lengthen the shooting interval, such as image quality and use of flash.

Note

- [i32] is used to start shooting without touching the camera (to avoid camera shake) when it is mounted on a tripod for shots such as still lifes or long exposures, for example.

- To cancel the self-timer after it starts, either tap the screen or press the <

 button.
- Auto power off time may be extended when the camera is set for remote control shooting.

- Wireless Remote Control BR-E1
- Remote Switch RS-60E3

Remote shooting is supported with Wireless Remote Control BR-E1 or Remote Switch RS-60E3 (Bluetooth and wired connections, respectively; sold separately).

Wireless Remote Control BR-E1

You can shoot remotely up to approx. 5 meters/16.4 feet from the camera. After pairing the camera and BR-E1 (@), set the drive mode to [[3] or [[3] for still photo shooting (@). For movie recording, set [**1**]: **Remote control**] to [**Enable**]. For operating instructions, refer to the BR-E1 instruction manual.


Note

- Auto power off time may be extended when the camera is set for remote control shooting.

Once connected to the camera, the switch enables you to shoot remotely over a wired connection.

For operating instructions, refer to the RS-60E3 instruction manual.

- 1. Open the terminal cover.
- $2. \ \ \, \text{Connect the plug to the remote control terminal.}$

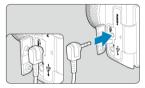

- Switching AF Areas with the Quick Control Dial
- Choosing One Subject from Several People with the Multi-Controller
- Adjusting the Zone AF Frame Size

This section describes ways to customize AF operation. You can also use a combination of customized settings.

Switching AF Areas with the Quick Control Dial

You can switch AF areas with the Quick control dial as you look through the viewfinder.

1. In [.a.: Customize dials], select [**].



2. Select [Select AF area].



• You can now switch AF areas with the < 5.5.5. > dial.

Note

Choosing One Subject from Several People with the Multi-Controller

You can choose one subject from several people to lock the tracking frame on that person.

Note
Before this customization, some other settings must be set as follows. [AF area]: [Whole area AF]
 [Subject tracking]: [On]
[Subject to detect]: [People]
 [Eye detection]: [Enable]

1. In [.a.: Customize buttons], set [*] to [Direct AF point selection].



2. Select [[INFO]Detail set.], and in [Direct sel. on * press], select [Start/stop tracking].



 $\textbf{3.} \quad \textbf{Press the shutter button halfway, then release it.}$



- A tracking frame (()) is displayed if multiple subjects are detected.
- 4. Use the Multi-controller to set your preferred subject.



- Either press the Multi-controller straight in or press it left or right. The tracking frame changes to [4^e_k ³/₂] and locks on to that subject for tracking.
- To release locked tracking, press the Multi-controller.

You can resize the Zone AF frame displayed for Flexible Zone AF 1-3.

1. Press the < 🖅 > button during shooting screen display.



2. Press the < M-Fn > button.



3. Press the < $M-F_{\Pi}$ > button and select Flexible Zone AF 1, 2, or 3.



4. Press the < ⊡ > button.



- 5. Adjust the Zone AF frame size.
 - Use the < (> or <) > dial to adjust the Zone AF frame, then press the < (> button.
 - To restore the default setting, press the < INFO > button.

This chapter covers topics related to playback—playing back captured still photos and movies—and introduces menu settings on the playback [] tab.

Caution

- Normal display or selection on this camera may not be possible for images captured on other cameras, or images from this camera that have been edited or renamed on a computer.
- Tab Menus: Playback
- Image Playback
- Magnified Image Display
- Index Display (Multiple-Image Display)
- Movie Playback
- · Editing a Movie's First and Last Scenes
- Frame Extraction from 4K Movies or 4K Time-Lapse Movies
- Playback on a TV Set
- Protecting Images
- Erasing Images
- Rotating Still Photos
- <u>Changing Movie Orientation Information</u>
- Rating Images
- Print Ordering (DPOF)
- Photobook Set-up
- RAW Image Processing
- Creative Assist
- Quick Control RAW Processing
- <u>Cloud RAW Image Processing</u>
- Playback Creative Filters
- Red-Eye Correction
- <u>Resizing JPEG/HEIF Images</u>
- Cropping JPEG/HEIF Images
- <u>Converting HEIF to JPEG</u>
- <u>Slide Show</u>
- <u>Setting Image Search Conditions</u>
- <u>Resuming from Previous Playback</u>
- · Browsing Images with the Main Dial

- <u>Customizing Playback Information Display</u>
- Displaying the Highlight Alert
- AF Point Display
- Playback Grid
- Movie Play Count
- Still Photo Extraction from RAW Burst Images
- HDMI HDR Output

l	Î.	AF		((†))	Ý	<u>n</u>	\star
	2	3	4	5			
	Prot	ect in	nage	S			
	Eras	e ima	iges				_
	Rota	te sti	lls				_
	Char	nge n	nov r	otate i	nfo		_
	Ratir	ng					_
	Print	orde	er				_
	Phot	oboc	ok Se	t-up			_

- (1) Protect images
- (2) Erase images
- (3) Rotate stills
- (4) Change mov rotate info
- (5) Rating
- (6) Print order
- (7) Photobook Set-up
- Playback 2

Ô	AF		((_†))	Ý	<u>n</u>	\star		
1 2								
RAV	V ima	ge pr	ocessi	ng				(1)
Cre	ative /	Assist				_		(2)
Qui	ck Co	ntrol	RAW p	orocess	ing	_	((3)
Clo						_		(4)
Pla	/back	creat	ive filt	ers		_		(5)
Rec	-eye d	orrec	tion			_		(6)
Res	ize					_		(7)

- (1) RAW image processing
- (2) Creative Assist
- (3) Quick Control RAW processing
- (4) Cloud RAW image processing
- (5) Playback creative filters
- (6) Red-eye correction
- (7) Resize



(1) Cropping

(2) HEIF→JPEG conversion

• Playback 4

🛍 AF 💽	((†))	Ý	9	*	
1 2 3 4 5					
Slide show					
Set image searc	h cond	litions			
View from last s	een	Enable			
Magnification					
Image jump w/	•	. 10			

(1) Slide show

(2) Set image search conditions

- (3) View from last seen
- (4) Magnification
- (5) Image jump w/

• Playback 5

Ľ	2	AF	►		((†))	Ý	<u>n</u>	\star
		3	4	5				
	Play	back i	infor	ma	tion	displa	у	
	High	nlight	alert			Disab	le	-
	AF p	oint o	disp.			Disab	le	-
	Play	back g	grid			Off		-
	Mov	ie pla	у со	unt		Rec ti	me	-
	HDN	/I HD	R out	tpu	t	Off		-

- (1) Playback information display
- (2) Highlight alert
- (3) AF point disp.
- (4) Playback grid
- (5) Movie play count
- (6) HDMI HDR output

In Basic Zone modes, the following screens are displayed for [**D**], [**B**], and [**B**].

Playback 2

- AF
 (1) 1 2 3 4 Creative Assist Red-eye correction Resize Cropping (1) (1) (1) (2) (3) Resize (4) (5)
- (1) Creative Assist
- (2) Playback creative filters
- (3) Red-eye correction
- (4) <u>Resize</u>
- (5) Cropping

Playback 3

🗅 AF 💽 ((†))	Ý		
1 2 3 4			
Slide show			
Set image search cor	nditions	—	
View from last seen	Enable	_	
Magnification		_	
Image jump w/🚗	. 10	_	

- (1) Slide show
- (2) Set image search conditions
- (3) View from last seen
- (4) Magnification
- (5) Image jump w/

Ĺ	1	AF	►	((†))	Ý		
		3	4				
F	Playb	back	inforn	nation	display		
ŀ	ligh	light	alert		Disable		-
A	AF p	oint (disp.		Disable		-
F	Playt	back	grid		Off		-
Ν	Movi	e pla	iy cou	nt	Rec tim	ie	-
H	HDM	II HD	R out	put	Off		-

- (1) Playback information display
- (2) Highlight alert
- (3) AF point disp.
- (4) Playback grid
- (5) Movie play count
- (6) HDMI HDR output

Image Playback

- Single-Image Display
- Shooting Information Display
- C Touch Playback


Single-Image Display

1. Switch to playback.




- Press the < > button.
- The last image captured or played back is displayed.

2. Browse images.

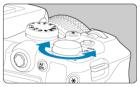

- To play back images starting with your most recent shot, turn the
 < 5, 3 > dial counterclockwise. To play back images starting with the first captured image, turn the dial clockwise.
- Each time you press the < INFO > button, the display will change.

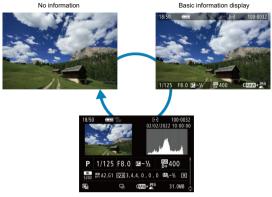

Shooting information display

3. Exit image playback.

 Press the < > button to exit image playback and return to shooting standby.

	Note
•	Lines indicating the image area are shown on RAW images captured with [: Still img aspect ratio] set to [1:1], [4:3], or [16:9] ((2)).
٠	If the search conditions are set with [E: Set image search conditions] (), only the filtered images will be displayed.
•	When played back, images captured with []: Add cropping information] set to an option other than [Disable] () are displayed with lines indicating the image area.

Shooting Information Display

With the shooting information screen displayed (B), you can press < \cancel{K} > up or down to view other information. You can also customize the information displayed, in [\blacktriangleright : Playback information display] (B).

The camera features a touch-screen panel that you can touch to control playback. Supported touch operations are like those used with smartphones and similar devices. First, press the $< | \mathbf{ > } >$ button to prepare for touch playback.

Browse images





Jump display



Index display



Magnified view



Note

• You can also magnify display by double-tapping with one finger.

- Setting the Initial Magnification Ratio
- Setting the Initial Magnification Position
- Magnification for Subsequent Images

You can magnify display of your captured images.

1. Magnify the image.




Press the < Q > button.



- To magnify images, turn the < i > dial clockwise.
- To reduce magnification, turn the < 2003/2013 > dial counterclockwise. For index display (20), keep turning the dial.
- To erase the current image, select [Erase images] (2).

2. Scroll the image.

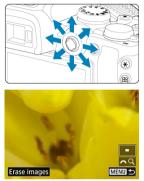


- Use < to scroll around the magnified image.
- Press the < Q > or < MENU > button to exit magnified view.

Note

- To switch to other images while maintaining magnified view, turn the < 5, > dial.
- Magnification is not available for movies.

You can set the initial magnification ratio.

1. Select [Ragnification].

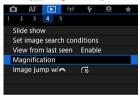

2. Select [Magnificatn (apx)].

Magnification	
Magnificatn (apx)	2x
Magnified position	From focus pt
Maintain position	Disable
	MENU 🕤

3. Select an option.

Magnificatn (apx)	
2x	
4x	
8x	
10x	
Actual size	
	SET OK

• 1×, 2×, 4×, 8×, 10×

Magnified view starts at the selected magnification ratio.

Actual size


The recorded image's pixels will be displayed at approx. 100%.

Same as last

Magnified view resumes from the same ratio as the last time you exited magnified view by pressing < \triangleright > or < Q >.

You can set the initial magnification position.

1. Select [Ragnification].

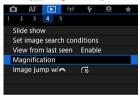

2. Select [Magnified position].

Magnification	
Magnificatn (apx)	2x
Magnified position	From focus pt
Maintain position	Disable

3. Select an option.



From center

Magnified view starts from the center of the screen.

• From focus pt

Magnified view starts from the AF point in focus. If the photo is taken with manual focus, the magnified view starts from the center of the screen. You can specify whether to maintain the same position for magnified view or to use the position set in [Magnified position] when displaying subsequent images.


1. Select [E: Magnification].



2. Select [Maintain position].

lagnification	
lagnificatn (apx)	2x
lagnified position	From focus pt
laintain position	Disable

3. Select an option.

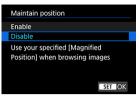


Enable

The current magnified position is maintained when displaying subsequent images in magnified view.


Disable

The position set in [Magnified position] is used when displaying subsequent images in magnified view.

1. Press the < Q > button.

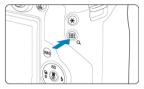

- During image playback, press the < Q > button.
- [ﷺQ] will be displayed in the lower right of the screen.
- 2. Switch to the index display.

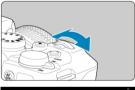



- Turn the < is > dial counterclockwise.
- The 4-image index display will appear. The selected image is highlighted with an orange frame.
- Turning the < 2003 > dial further counterclockwise will switch the display from 9 to 36 to 100 images. Turning the dial clockwise cycles through 100, 36, 9, 4, and single-image display.


















		2	
		10 A 14	
		1	
	× 84 - 24	1450	2 - LEX
		10 10 a	
		4	
		100 m 1	
	2	4.948	2 KQ 🗠
			a a a
- 10 C			🖛 🕻 MENU 🛳

3. Browse images.



- Use < > or the < ^E, > dial to move the orange frame for image selection.
- Press the < () > button in the index display to show the selected image in single-image display.

1. Switch to playback.

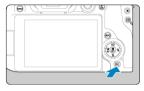

- Press the < > button.
- 2. Select a movie.



- Turn the < 500 > dial to select a movie to play.
- In single-image display, the [SII] icon displayed in the upper left of the screen indicates a movie.



 In index display, perforations at the left edge of a thumbnail indicate a movie. Movies cannot be played from index display, so press the < () > button to switch to single-image display.

- $\textbf{3.} \quad \text{In single-image display, press the } < \textcircled{R} > \text{button.}$
- 4. Select [▶].





- The movie will start playing back. Sound is played through the speaker (1).
- You can pause playback and access the movie playback panel by pressing the < (3) > button (3). Press it again to resume the playback.
- Press the < ▲ > < ▼ > keys to adjust the volume (even during playback).

Movie playback panel



ltem	Playback Operations	
Playback	Pressing the < $\langle {\mathfrak B} \rangle$ > button toggles between playing movies and stopping playback.	
Skip backward	Skips backward approx. 1 sec. each time you press < ◀ >. Holding < ◀ > down will rewind the movie.	
Previous frame	Displays the previous frame each time you turn the $< \frac{1}{2} \sum_{i=1}^{N^{N_{ex}}} > $ dial left.	
Next frame	Displays the next frame each time you turn the <	
Skip forward	Skips forward approx. 1 sec. each time you press < ► >. Holding < ► > down will fast forward the movie.	
	Playback position	
hh:mm:ss	Playback time (hours:minutes:seconds, when [Movie play count] is set to [Rec time])	
hh:mm:ss.ff (DF) hh:mm:ss:ff (NDF)	Time code (hours:minutes:seconds:frames, when [Movie play count] is set to [Time code])	
◀)) Volume	Press the < \blacktriangle > < \bigtriangledown > keys to adjust the volume of the speaker (\textcircled{o}) or headphones.	
H ±	Press the < 🔃 > button to go to the next screen (😰).	
	Press the < MENU > button to return to single-image display.	



Controls not on the previous screen are as follows.

Item	Playback Operations	
🗲 Edit	Displays the editing screen (🗭).	
Slow motion	Adjust the slow motion speed by turning the < SUNS > dial. The slow motion speed is indicated in the upper right of the screen.	
다그 Frame Grab	Available when you play 4K movies. Enables you to extract the current frame and save it as a JPEG or HEIF still image (
	Press the < MENU > button to return to the previous screen.	

Caution

- Adjust the volume using television controls when the camera is connected to a television for movie playback ((), because volume cannot be adjusted by pressing the < ▲ > < ▼ > keys.
- Movie playback may stop if the card's read speed is too slow or movie files have corrupted frames.

You can edit out the first and last scenes of a movie in approx. 1-sec. increments.

1. Pause movie playback.



• The movie playback panel will appear.

2. Press the < ::: > button, then select [><].



3. Specify the part to be edited out.



Select either [x] (Cut beginning) or [x] (Cut end).



- Press < * > left or right to go back or forward one frame. Keep pressing the Multi-controller to fast rewind or fast forward frames. Each turn of the < Sum > dial goes back or forward one frame.
- After deciding which part to edit out, press the < () > button. The portion indicated by a line at the bottom of the screen will remain.
- 4. Check the edited movie.



- Select [>] to play back the edited movie.
- To change the edited part, go back to step 3.
- To cancel the editing, press the < MENU > button.

5. Save.



- Select [[2] (1).
- The save screen will appear.
- To save it as a new file, select [New file], or to save it and overwrite the original movie file, select [Overwrite].
 Select [m]?] (2) to save a compressed version of the file. 4K movies are converted to Full HD movies before compression.
- On the confirmation screen, select [OK] to save the edited movie and return to the movie playback screen.

Caution

- Because editing is performed in approx. 1 sec. increments (at the position indicated by [X] at the bottom of the screen), the actual position where movies are trimmed may differ from your specified position.
- Movies shot with another camera cannot be edited with this camera.
- You cannot edit a movie when the camera is connected to a computer.
- Compress and save is not available for the following movies.
 - Movies recorded with [: HDR shooting HDR PQ] set to [Enable]
 - Movies recorded in [#]FHD 23007 [PB] [™] (NTSC), [#]FHD 23007 [PB] [™] (PAL), or [#]FHD 23007 [PB] [™] (NTSC) sizes
- Movies may not be compressed when the remaining battery capacity is low. Use of a fully charged battery or a household power outlet accessory (sold separately) is recommended.
- For extensive movie editing, consider using an optional household power outlet accessory.

Frame Extraction from 4K Movies or 4K Time-Lapse Movies

From 4K or 4K time-lapse movies, you can select individual frames to save as JPEG or HEIF still images. This function is called "Frame Grab."

1. Select a 4K movie or 4K time-lapse movie.



- Turn the < >>>> dial to make a selection.
- On the shooting information screen (2), 4K movies and 4K time-lapse movies are indicated by [±4K] or [±c%].
- In index display, press the < (P) > button to switch to single-image display.
- 2. In single-image display, press the < > button.
- 3. select [▶].



• The movie will start playing back.

- 4. Press the < () > button to pause the movie.
 - The movie playback panel will appear.
- 5. Select a frame to grab.



- Use the movie playback panel to select the frame to grab as a still image.
- For movie playback panel instructions, see Movie playback panel.
- 6. Press the < ⊕ > button, then select [☐].



7. Save.



- Select [OK] to save the current frame as a JPEG still image. HEIF images are saved if you grab frames from movies recorded with [D: HDR shooting [IDRPQ] set to [Enable].
- Check the destination folder and image file number.

8. Select the image to display.

• Select [View original movie] or [View extracted still image].


Caution

- Frame grabbing is not possible from the following 4K movies.
 - · Movies recorded with other cameras
- Frame grabbing is not possible while the camera is connected to a computer.

By connecting the camera to a television with a commercially available HDMI cable, you can play back the captured still photos and movies on the television.

If the image does not appear on the TV screen, confirm that [**Y**: Video system] is correctly set to [For NTSC] or [For PAL] (depending on the video system of your television).

- 1. Connect the HDMI cable to the camera.
 - Insert the HDMI cable in the camera's < HDMI OUT > terminal.

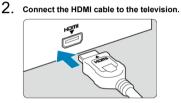

- Connect the HDMI cable to the television's HDMI IN port.
- 3. Turn on the television and switch the television's video input to select the connected port.
- 4. Set the camera's power switch to < ON >.

Press the < ► > button.



- Images are now displayed on the television, with nothing displayed on the camera screen.
- The images will automatically be displayed at the optimum resolution matching the connected television.

Caution

- Adjust movie sound volume with the television. The sound volume cannot be adjusted with the camera.
- Before connecting or disconnecting the cable between the camera and television, turn off the camera and television.
- Depending on the television, part of the image displayed may be cut off.
- Do not connect any other device's output to the camera's < HDMI OUT > terminal. Doing so may cause a malfunction.
- Certain televisions may not display the images due to incompatibility.
- It may take some time before images are displayed. To avoid delay, set [HDMI resolution] to [1080p] (2).
- Touch-screen operations are not supported while the camera is connected to a television.

Protecting Images

- Protecting Individual Images
- Specifying the Range of Images to Protect
- Protecting All Images in a Folder or on a Card

You can protect important images from being accidentally erased.

Caution

Note

- Once an image is protected, it cannot be erased by the camera's erase function. To
 erase a protected image, you must first cancel the protection.
- If you erase all the images (g), only the protected images will remain. This is convenient when you want to erase all unneeded images at once.

Protecting Individual Images

1. Select [E: Protect images].

Ď		AF	Þ	((†))	Ý	<u>p</u>	*
1							
P	rote	ect in	nage	s			
E	ras	e ima	ges				
F	Rotate stills						
(Change mov rotate info						
F	Rating						
F	Print order						
P	hot	oboc	ok Se	t-up			

2. Select [Select images].



- 3. Select the image to protect.
 - Turn the < 💬 > dial to select an image to protect.
- 4. Protect the image.



- Press the < (B) > button to protect the selected image, after which it will be labeled with a [m] icon (1) at the top of the screen.
- To cancel protection and clear the [m] icon, press the < (P) > button again.
- To protect another image, repeat steps 3 and 4.

Note

 During playback, you can press the < (P) > button and protect images from the Quick Control screen. While looking at the images in the index display, you can specify the first and last images for a range to protect all the specified images at once.

1. Select [Select range].

o-Protect i	mages		
Select imag	les		
Select rang	e		
All images	in folder		
Unprotect	all images	in folder	
All images	on card		
Unprotect	all images	on card	
		MENU 🖆)

- Select [Select range] in [E: Protect images].
- 2. Specify the range of images.



- Select the first image (start point).
- Next, select the last image (end point). The images in the specified range will be protected and the [Om] icon will appear.
- To select another image to protect, repeat step 2.



You can protect all the images in a folder or on a card at once.

- When you select [All images in folder] or [All images on card] in [E: Protect images], all the images in the folder or on the card will be protected.
- To cancel protection, select [Unprotect all images in folder] or [Unprotect all images on card].
- If the search conditions are set with [E: Set image search conditions] (2), the display will change to [All found images] and [Unprotect all found].

• Protect images	
Select images	
Select range	
All found images	
Unprotect all found	
	MENU ᠫ

- If you select [All found images], all the images filtered by the search conditions will be protected.
- If you select [Unprotect all found], the protection of all the filtered images will be canceled.

Erasing Images

- Erasing Images Individually
- Selecting ([1]) Multiple Images to Erase Together
- Specifying the Range of Images to Erase
- Erasing All Images in a Folder or on a Card

You can either select and erase unnecessary images individually or erase them in one batch. Protected images (
②) will not be erased.



 Once an image is erased, it cannot be recovered. Make sure you no longer need the image before erasing it. To prevent important images from being erased accidentally, protect them.

Erasing Images Individually

- Press the < ► > button.
- 2. Select the image to be erased.
 - Turn the < >>> dial to select the image to erase.

3. Press the < \tilde{m} > button.



4. Erase the images.

JPEG/HEIF/RAW images or movies



• Select [Erase].


RAW+JPEG/RAW+HEIF images



- Select an option.
- Series of images captured in [¹/₄], [¹/₂]⁴], or [¹/₂] drive mode are erased when you select [Erase scene including image] during playback.

By adding checkmarks to the images to be erased, you can erase all those images at once.

1. Select [>: Erase images].

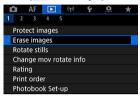

2. Select [Select and erase images].



3. Select an image.




- Turn the < ⁵,...,³ > dial to select an image to erase, then press the < (♠) > button.
- To select another image to be erased, repeat step 3.
- Press the < MENU > button.

4. Erase the images.



While looking at the images in the index display, you can specify the first and last images for a range to erase all the specified images at once.

1. Select [Select range].

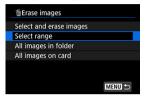

- Select [Select range] in [E: Erase images].
- 2. Specify the range of images.



- Select the first image (start point).
- Next, select the last image (end point). A checkmark [v] will be appended to all the images within the range between first and last images.
- To select another image to be erased, repeat step 2.
- 3. Press the < MENU > button.

4. Erase the images.



You can erase all the images in a folder or on a card at once.

Erase images	
Select and erase	e images
Select range	
All images in fo	lder
All images on c	ard

- When you select [All images in folder] or [All images on card] in [E: Erase images], all the images in the folder or on the card will be erased.
- If the search conditions are set with [E: Set image search conditions] (
 (), the display will change to [All found images].

面Erase images
Select and erase images
Select range
All found images
MENU 🖆

 If you select [All found images], all the images filtered by the search conditions will be erased.

	Note	
•	To erase all the images including protected images, format the card ($\textcircled{\ensuremath{\mathcal{B}}}$).	

You can use this feature to rotate the displayed image to the desired orientation.

1. Select [E: Rotate stills].

Û	AF	►	((†))	Ý	<u>n</u>	*	
1 2	3	4	5				
Pro	tect in	nages	5				
Era	Erase images						
Rot	Rotate stills						
Cha	Change mov rotate info						
Rat	Rating						
Prir	Print order						
Pho	otoboo	ok Set	t-up				

2. Select an image to rotate.



• Turn the < 5 > dial to select the image.

3. Rotate the image.




- Each time you press the < (இ) > button, the image is rotated clockwise as follows: 90° → 270° → 0°.
- To rotate another image, repeat steps 2 and 3.

Note

- If the rotated image is not displayed in the rotated orientation during image playback, set [". Auto rotate] to [On] .
- Movies cannot be rotated.

You can manually edit movie playback orientation information (which determines which side is up).

1. Select [E: Change mov rotate info].

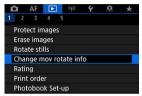

2. Select a movie.



Turn the < Solve > dial to select a movie with orientation information to change.

3. Change the orientation information.



As you watch the camera and ▲ icon in the upper left of the screen, press the < ()> button to specify which side is up. Each press of the < ()> button edits the movie rotation information as follows: []→ []→ []→ []→ [].

Caution

- Movies are played horizontally on the camera and via HDMI video output, regardless of the [**Ý**: Add '**开 rotate info**] setting (**i**?).
- Movie orientation information of movies recorded with other cameras cannot be edited with this camera.

Rating Images

- Rating Individual Images
- Rating by Specifying the Range
- Rating All Images in a Folder or on a Card

You can rate images on a scale of 1–5 ([*]/[**]/[**]/[**]/[**]). This function is called rating. * Rating images can help you organize them.

Rating Individual Images

1. Select [E: Rating].

Ľ	1	AF	Þ	((Ţ>)	Ý	â	*
	2	3	4	5			
Ì	Protect images						
j.	Eras	e ima	iges				
	Rotate stills						
Change mov rotate info							
	Rating						
Print order							
Ĵ	Phot	oboo	ok Set	-up			

2. Select [Select images].

★ Rating
Select images
Select range
All images in folder
All images on card
MENU 🗩

3. Select the image to be rated.



• Turn the < Start > dial to select the image to be rated.

4. Rate the image.



- Press the < (A) > button so that the current rating is outlined in blue, as shown.
- Turn the < ⁵, so ial to select a rating mark, then press the < () > button.
- When you append a rating mark to the image, the number beside the set rating will increase by one.
- To rate another image, repeat steps 3 and 4.

While looking at the images in the index display, you can specify the first and last images for a range to rate all the specified images at once.

1. Select [Select range].

★ Rating	
Select images	
Select range	
All images in folder	
All images on card	
	MENU 🕁

- Select [Select range] in [E: Rating].
- 2. Specify the range of images.



- Select the first image (start point).
- Next, select the last image (end point). A checkmark [v] will be appended to all the images within the range between first and last images.
- To select other images, repeat step 2.
- 3. Press the < MENU > button.

4. Rate the image.



 Turn the < initial to select a rating mark, then select [OK]. All the images in the specified range will be rated (same rating) at once. You can rate all the images in a folder or on a card at once.

★ Rating	
Select images	
Select range	
All images in folder	
All images on card	
	MENU 🕤

 Under []: Rating], when you select [All images in folder] or [All images on card], all the images in the folder or on the card will be rated.

★ Rating					
Change the rating of images in the folder					
Cancel	ОК				

- Turn the < 200 > dial to select a rating, then select [OK].
- When you are not rating images or canceling the rating, select [OFF].
- If the search conditions are set with [E]: Set image search conditions] (
 (i), the display will change to [All found images].

★ Rating
Select images
Select range
All found images

 If you select [All found images], all the images filtered by the search conditions will be rated as specified.

Note Values next to ratings are displayed as [###] if more than 1,000 images have that rating. With []: Set image search conditions] and []: Image jump w/, jawe], you can display only the images given a specific rating.

Print Options

Selecting Images for Printing

DPOF (Digital Print Order Format) enables you to print images recorded on the card according to your printing instructions such as the image selection, quantity to print, etc. You can print multiple images in one batch or create a print order for a photofinisher. You can set the print settings such as print type, date imprinting, file number imprinting, etc. The print settings will be applied to all the images specified for printing. (They cannot be set individually for each image.)

Print Options

1. Select [E: Print order].

Û		AF	►	((†))	Ý	A	*
1				5			
Protect images							
Erase images							
Rotate stills							
Change mov rotate info							
Rating							
P	Print order						
P	Photobook Set-up						

2. Select [Set up].



3. Set the options as desired.

		Standard	Prints one image on one sheet.	
Print type	₿	Index Multiple thumbnail images are prin on one sheet.		
	ÐĐ	Both	Prints both the standard and index prints.	
Date	On	[On] imprints the recorded date of the captured		
Date	Off	image.		
File No.	On	[On] imprints the file number.		
The NO.	Off			

• Set [Print type], [Date], and [File No.] options.

4. Exit the setting.

Print order				
Set up				
Print type	Standard			
Date	Off			
File No.	On			
	MENU 🕤			

- Press the < MENU > button.
- Next, select [Sel.Image] or [Multiple] to specify the images to be printed.

Caution

- If you print an image with a large image size using the [Index] or [Both] setting (2), the index print may not be printed with certain printers. In this case, resize the image (2), then print the index print.
- Even if [Date] and [File No.] are set to [On], the date or file number may not be imprinted, depending on the print type setting and printer.
- With [Index] prints, the [Date] and [File No.] cannot both be set to [On] at the same time.
- When printing with DPOF, use the card for which print order specifications are set. You cannot print in the specified print order if you extract just the images from the card for printing.
- Certain DPOF-compliant printers and photofinishers may not be able to print the images as you specified. When using a printer, refer to the printer's instruction manual. When requesting service from a photofinisher, ask in advance.
- Do not use this camera to configure print settings for images with DPOF settings set up on another camera. All the print orders may be overwritten inadvertently. Also, the print order may not be possible, depending on the image type.


Selecting images



Select and specify the images individually.

Press the < MENU > button to save the print order to the card.

Standard/Both

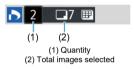

Press the <() > button to set the print quantity for the current image to 1. By turning the <() > dial, you can set a print quantity of up to 99 copies.

Index



Images that you add a checkmark [\checkmark] to by pressing the < (B) > button are included in index printing.

Selecting multiple images

Select range

Select range	
Mark all in folder	
Clear all in folder	
Mark all on card	
Clear all on card	

Select [Select range] in [Multiple]. Selecting the first and last images of the range marks all the images in the range with a checkmark [\checkmark], and one copy of each image will be specified for printing.

All images in a folder

Select [Mark all in folder] and select the folder. A print order for one copy of all the images in the folder will be specified.

If you select [Clear all in folder] and select the folder, the print order for all the images in the folder will be canceled.

All images on a card

If you select [Mark all on card], one copy of all the images on the card will be specified for printing.

If you select [Clear all on card], the print order will be cleared for all the images on the card.

If the search conditions are set with [E: Set image search conditions] ((2)) and you select [Multiple], the display will change to [Mark all found images] and [Clear all found images].

All found images

If you select [Mark all found images], one copy of all the images filtered by the search conditions will be specified for printing.

If you select [Clear all found images], all the print order of the filtered images will be cleared.

Caution


 RAW/HEIF images and movies cannot be specified for printing. Note that RAW/ HEIF images and movies will not be specified for printing even if you specify all images with [Multiple].

- Specifying Individual Images
- Specifying the Image Range for a Photobook
- Specifying All Images in a Folder or on a Card


You can specify up to 998 images to be printed in a photobook. When you use EOS Utility (EOS software) to import images to a computer, the specified images for a photobook will be copied to a dedicated folder. This function is useful for ordering photobooks online.

Specifying Individual Images

1. Select [Photobook Set-up].

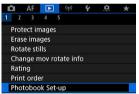

2. Select [Select images].

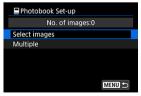


3. Select an image for the photobook.



- To select other images to be specified for a photobook, repeat step 3.

While looking at the images in the index display, you can specify the range (start point to end point) of images to be specified for a photobook at once.

1. Select [Multiple].

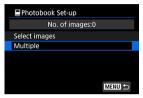

Select [Multiple] in [Photobook Set-up].

2. Select [Select range].

Photobook Set-up	
Select range	
All images in folder	
Clear all in folder	
All images on card	
Clear all on card	
	MENU 🕤

3. Specify the range of images.



- Select the first image (start point).
- Next, select the last image (end point).

A checkmark $[\checkmark]$ will be appended to all the images within the range between first and last images.


You can specify all the images in a folder or on a card at once for a photobook.



All images in the folder or on the card are specified for the photobook when you select [All images in folder] or [All images on card] in the [Multiple] option for [[]: Photobook Setup].

To cancel the selection, select [Clear all in folder] or [Clear all on card].

If the search conditions are set with [E: Set image search conditions] (②) and you select [Multiple], the display will change to [All found images] and [Clear all found images].

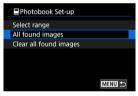

[All found images]: All images filtered by the search conditions are specified for the photobook.

[Clear all found images]: Clears photobook designation of all filtered images.

Caution

- RAW/HEIF images and movies cannot be specified for photobooks. Note that RAW/HEIF images and movies will not be specified for photobooks even if you specify all images with [Multiple].
- Do not use this camera to configure photobook settings for images with photobook settings set up on another camera. All the photobook settings may be overwritten inadvertently.

- Magnified View
- Processing Images with Specified Aspect Ratios
- RAW Image Processing Options


You can process RAW or CRAW images with the camera to create JPEG or HEIF images. The RAW images remain the same as when captured, so you can adjust the processing conditions to create as many JPEGs as needed.

You can also use Digital Photo Professional (EOS software) to process RAW images.


Caution

 Processing into HEIF is not available for RAW or CRAW images captured at an expanded ISO speed (H).

1. Select [E: RAW image processing].

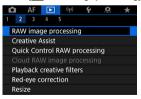

2. Select an option, then select images.

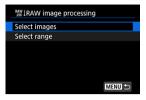

You can select multiple images to process at once.

Select images



- Turn the < ₩ > dial to select an image to process, then press the < (>> button.
- Press the < MENU > button.

Select range



- Select the first image (start point).
- Next, select the last image (end point). A checkmark [√] will be appended to all the images within the range between first and last images.
- To process other images, repeat this step.
- Press the < MENU > button.

3. Set the desired processing conditions.

Use shot settings

- Images are processed using image settings at the time of capture.
- Images captured with [C: HDR shooting [IDR 0] set to [Enable] are processed to create HEIFs, and images captured with this function set to [Disable] are processed to create JPEGs.

Set up processing -> JPEG/Set up processing -> HEIF



- Use < 🔆 > to select an item.
- Turn the < 2 > or < 2 > dial to switch the setting.
- Press the < () > button to access the function setting screen.
- To reset the settings, press the < ★ > button and select [OK] after a confirmation message is displayed.

Comparison screen

- You can switch between the [After change] and [Shot settings] screens by pressing the < [NFO > button and turning the < 5, 3 dial.
- Items in orange on the [After change] screen have been modified since the time of capture.
- Press the < MENU > button to return to the processing conditions screen.

4. Save.



- When using [Set up processing JPEG] or [Set up processing HEIF], select [[']] (Save).
- Read the message and select [OK].
- To process other images, select [Yes] and repeat steps 2-4.
- $5. \hspace{0.1in} \text{Select the image to display.}$



- Select [Original image] or [Processed img.].
- Your selected image is displayed.

Magnified View

You can magnify images displayed for [Set up processing -> JPEG] or [Set up

processing→HEIF] by pressing the < ... > button. The magnification ratio varies depending on the [Image quality] setting. With < ☆ >, you can scroll around the magnified image.

To cancel the magnified view, press the < ••• > button again.

Caution

 Results of processing with [Digital Lens Optimizer] set to [High] are only applied in magnified view. Results are not applied in normal display. JPEG or HEIF images at the specified aspect ratio are created when you process RAW images captured with [1]: Still img aspect ratio] (②) set to [1:1], [4:3], or [16:9].

RAW Image Processing Options

*±0: Brightness adjustment

You can adjust the image brightness up to ±1 stop in 1/3-stop increments.

🔹 🛱 🔤 : White balance (🔂)

You can select the white balance. Selecting [AWB] enables you to select [Auto: Ambience priority] or [Auto: White priority]. If you select [[]], you can set the color temperature.

Image: Picture Style (2)

You can select the Picture Style. You can adjust the sharpness, contrast, and other parameters.

* [3.4], [3.4], [3.4], and [3.4] are not available when [Set up processing HEIF] is set.

You can adjust clarity in a range of -4 to +4. * Not available when [Set up processing→HEIF] is set.

You can set the Auto Lighting Optimizer.

You can set the noise reduction processing for high ISO speeds. If the effect is difficult to discern, magnify the image (2).

Image quality (⁽²⁾)

You can set the image quality when creating a JPEG or HEIF image.

sRGB: Color space (⁽ ^{() ⁽⁾ ⁽⁾}</sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup></sup>

You can select either sRGB or Adobe RGB. Since the camera screen is not compatible with Adobe RGB, the difference in the image will hardly be perceptible when either color space is set.

* [[HDRPO]] is displayed when [Set up processing -- HEIF] is set but is not an option for selection.

• III: Lens aberr correction

• OFF: Peripheral illum corr (2)

A phenomenon that makes the image corners look darker due to the lens characteristics can be corrected. If **[Enable]** is set, the corrected image will be displayed. If the effect is difficult to discern, magnify the image (\mathfrak{g}) and check the four corners. Less correction is applied than for maximum correction with Digital Photo Professional (EOS software, \mathfrak{g}). If the effects of correction are not apparent, use Digital Photo Professional to apply the peripheral illumination correction.

• 🖽 OFF: Distortion correction (2)

Image distortion due to lens characteristics can be corrected. If [Enable] is set, the corrected image will be displayed. The image periphery will be trimmed in the corrected image.

Since the image resolution may look slightly lower, adjust the sharpness with the Picture Style's sharpness parameter setting as necessary.

© OFF: Digital Lens Optimizer (()

Correct lens aberration, diffraction, and low-pass filter-induced loss of resolution by applying optical design values. To check the effect of setting this option to [High] or [Standard], use magnified view (g). Without magnification, the effect when Digital Lens Optimizer is set to [High] is not applied. Selecting [High] or [Standard] corrects both chromatic aberration and diffraction, although these options are not displayed.

Source of the second seco

Chromatic aberrations (color fringing along the subject's outline) due to the lens characteristics can be corrected. If [**Enable**] is set, the corrected image will be displayed. If the effect is difficult to discern, magnify the image (\mathfrak{g}).

• KOFF: Diffraction correction (2)

The diffraction by the lens aperture degrading the image sharpness can be corrected. If [Enable] is set, the corrected image will be displayed. If the effect is difficult to discern, magnify the image (②).


Caution

- Processing RAW images in the camera will not produce exactly the same results as processing RAW images with Digital Photo Professional (EOS software).
- If you perform [Brightness adjustment], noise, banding, etc. may be intensified with the effects of adjustment.
- When [Digital Lens Optimizer] is set, noise may be intensified together with the
 effects of correction.
- When [Digital Lens Optimizer] is set, image edges may be emphasized, under some shooting conditions. Adjust sharpness of the Picture Style as needed.
- Processing with [Digital Lens Optimizer] set to [High] may take some time.

Note

 Effects of lens aberration correction vary by lens and by shooting conditions. Also, the effect may be difficult to discern depending on the lens used, shooting conditions, etc. You can process RAW images by applying your preferred effects and saving as JPEGs.

1. Select [E: Creative Assist].

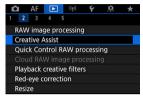

2. Select an image.



● Turn the < ₩ > dial to select an image to process, then press the < < > > button.

3. Select an effect.



Use the < Solve > dial to select the effect.



 By selecting [Preset] and pressing the < (B) > button, you can choose [VIVID], [SOFT], or other preset effects. [AUT01], [AUT02], and [AUT03] are effects recommended by the camera based on image conditions.



- You can select effects such as [Brightness] or [Contrast] by pressing the < (ℜ) > button and then using the < ⁵√³ > dial.
- Press the < () > button when adjustment is finished.




- To reset the settings, press the < ★ > button and select [OK] after a confirmation message is displayed.
- To confirm the effect, press the < -----> button.
- 4. Select [OK] to save the image.




You can select the type of RAW image processing performed from the Quick Control screen.

1. Select [E: Quick Control RAW processing].

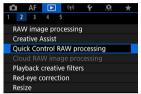

2. Select an option.

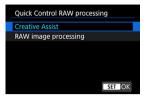

Creative Assist



RAW processing that applies your preferred effect (2).



RAW image processing

RAW processing according to conditions you specify (2).

- Checking Processing Capacity
- Adding Images to Process
- Checking/Removing Selected Images
- Uploading Images

You can upload RAW or CRAW images to image.canon for processing into JPEG or HEIF images. The RAW images remain the same as when captured, so you can adjust the processing conditions to create as many JPEGs or HEIFs as needed.

 Complimentary enrollment at image.canon must be completed in advance. Note that cloud RAW image processing requires a paid subscription. For subscription details, visit the image.canon website. Images generated by this image processing are saved on image.canon servers. The processed images are not saved to the camera. 	0	Caution
	•	Note that cloud RAW image processing requires a paid subscription. For subscription details, visit the image.canon website. Images generated by this image processing are saved on image.canon servers.


Note

Before proceeding, connect the camera to image.canon (2).

Checking Processing Capacity

You can check how many images you can process at image.canon.

1. Select [E: Cloud RAW image processing].

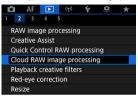

2. Select [Check proc. capacity (refresh)].



The camera accesses image.canon.

3. Check the quantity in [Proc. capacity].




Information in [Proc. capacity] is updated.

Caution

 [Proc. capacity] is [0] unless you have a paid subscription for cloud RAW image processing. You will receive subscription information at the email address on record at image.canon if you check the processing capacity without a subscription. 1. Select [Add images to process].

Qty selected	10 images
Proc. capacity	20 images
Last updated:	02/02/22 10:00
Check proc. capa	city (refresh)
Add images to pr	ocess
Check/remove sel	ected images
Send	MENU

2. Select an option, then select images.

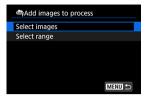

You can select multiple images to process at once.

Select images



- Turn the < ₩ > dial to select an image to process, then press the < (>> button.
- Press the < MENU > button.

Select range



- Select the first image (start point).
- Next, select the last image (end point). A checkmark [√] will be appended to all the images within the range between first and last images.
- To process other images, repeat this step.
- Press the < MENU > button.

3. Set the desired processing conditions.



Use shot settings

- Images are processed using image settings at the time of capture.
- Images captured with [C: HDR shooting [IDR P0] set to [Enable] are processed to create HEIFs, and images captured with this function set to [Disable] are processed to create JPEGs.

Set up processing -> JPEG/Set up processing -> HEIF



- Use < > to select an item.
- Turn the < ^{mage} > or < ^{mage} > dial to switch the setting.
- Press the < () > button to access the function setting screen.
- To return to the image settings at the time of shooting, press the < *> button and select [OK] when "Revert to shot settings" is displayed.

Comparison screen

- You can switch between the [After change] and [Shot settings] screens by pressing the < |NFO > button and turning the < [™]₂ > or < [™]₂ > dial.
- Items in orange on the [After change] screen have been modified since the time of capture.
- Press the < MENU > button to return to the processing conditions screen.

4. Select [Save].



- When using [Set up processing→JPEG] or [Set up processing→HEIF], select [['?]] (Save).
- Read the message and select [OK].
- 5. Add to the upload list.



Read the message and select [OK].

1. Select [Check/remove selected images].

age processing
10 images
20 images
02/02/22 10:00
city (refresh)
ocess
ected images
MENU 🕤

2. Browse your images.



- Turn the < >> dial to check images.
- To remove from the upload list, press the < () > button.
 [√] is displayed.
- To check image processing conditions, press the < m > button.

3. Remove the current image from the upload list as needed.



 Press the < MENU > button. Select [OK] when a message is displayed about removing images from the upload list.

Uploading Images

1. Select [Send].

Cloud RAW im	
Qty selected	10 images
Proc. capacity	20 images
Last updated:	02/02/22 10:00
Check proc. capa	city (refresh)
Add images to pr	ocess
Check/remove sel	ected images
Send	MENU 🕤

2. Read the message.

Selected images are	e uploaded
and processed in th	ne cloud. As
more are received,	fewer new
ones can be proces	sed. Check
processed images i	n the cloud
Cancel	Send

Read the message, then tap [Send].


Caution

- The number of images and processing capacity may not be updated correctly if an [Err 138] transmission error occurs during uploading. Note that even if the number of images and processing capacity are not updated correctly, images may be processed on the server. To check the processing status, use the image.canon app.
- The camera continues to upload images even if [Stop] is selected on the [Send images] screen. To cancel uploading, select [OK] on the [Cancel transmission] screen while the access lamp is blinking.
- Depending on when you select [OK] on the [Cancel transmission] screen, uploading may continue, and the images may be processed on the server.

Creative Filter Characteristics

You can apply the following filter processing to an image and save it as a separate image: Grainy B/W, Soft focus, Fish-eye effect, Art bold effect, Water painting effect, Toy camera effect, and Miniature effect.

1. Select [E: Playback creative filters].

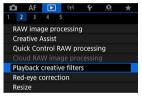

2. Select an image.



- Turn the < २००२ > dial to select an image, then press the < ⊕ > button.
- Images can be selected by touch from index display (2).

3. Select a filter effect (♂).



4. Adjust the filter effect.



- Adjust the filter effect, then press the < () > button.
- For [Miniature effect], turn the <) dial to move the white frame enclosing the area to keep in sharper focus, then press the <) button.

5. Save.



- Select [OK].
- Check the destination folder and image file number, then select [OK].
- To apply filter processing to other images, repeat steps 2–5.

Note

- RAW images cannot be selected. Note that for images captured in RAW+JPEG shooting, filter processing is applied to the JPEG image before saving the results.

Grainy B/W

Makes the image grainy and black and white. By adjusting the contrast, you can change the black-and-white effect.

Soft focus

Gives the image a soft look. By adjusting the blur, you can change the degree of softness.

Fish-eye effect

Gives the effect of a fish-eye lens. The image will have barrel distortion. Depending on the level of this filter effect, the area trimmed along the periphery of the image changes. Also, because this filter effect magnifies the center of the image, the apparent resolution at the center may degrade depending on the number of recorded pixels, so set the filter effect in step 4 while checking the resulting image.

Art bold effect

Makes the photo look like an oil painting and the subject look more three-dimensional. By adjusting the effect, you can change the contrast and saturation. Note that subjects such as the sky or white walls may not be rendered with a smooth gradation and may look irregular or have significant noise.

Water painting effect

Makes the photo look like a watercolor painting with soft colors. By adjusting the effect, you can change the color density. Note that night scenes or dark scenes may not be rendered with a smooth gradation and may look irregular or have significant noise.

Toy camera effect


Shifts colors to those typical of toy cameras and darkens the four corners of the image. Color tone options can be used to change the color cast.

A Miniature effect

Creates a diorama effect. You can change where the image looks sharp. To switch between vertical and horizontal orientation of the sharp area (white frame), press < $\frac{1}{3}$ > left or right in step 4 ($\frac{1}{60}$), or tap [$\frac{1}{10}$].

Automatically corrects relevant portions of images affected by red-eye. The image can be saved as a separate file.

1. Select [Red-eye correction].

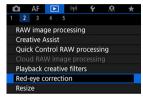

2. Turn the $< \bigcup >$ dial to select the image.



- After image selection, press the < () > button.
- White frames are displayed around corrected image areas.

3. Select [OK].





• The image is saved as a separate file.

Caution

Some images may not be corrected accurately.

You can resize a JPEG or HEIF image to reduce the pixel count and save it as a new image. Resizing is available for $L,\,M,\,$ or S1 JPEGs or HEIFs (in sizes except S2), including those captured in RAW+JPEG and RAW+HEIF shooting. S2 images and RAW images or movies cannot be resized.

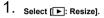

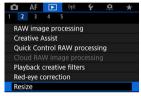

2. Select an image.



- Turn the < >> dial to select the image to resize.
- Press the < () > button to display the image size.

3. Select the desired image size.




- Select the desired image size (1).
- 4. Save.



- Select [OK] to save the resized image.
- Check the destination folder and image file number, then select [OK].
- To resize another image, repeat steps 2 to 4.

You can crop a captured JPEG image and save it as another image. Cropping is available for JPEG or HEIF images. RAW images and frame-grab images from 4K movies cannot be cropped.

1. Select [E: Cropping].

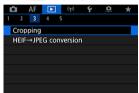

2. Select an image.



3. Set the cropping frame.



• The image area within the cropping frame will be cropped.

Resizing the cropping frame size

Turn the $<\underline{s}^{(n)}$ > dial to resize the cropping frame size. The smaller the cropping frame, the more magnified the cropped image will look.

Correcting tilt

You can correct image tilt by $\pm 10^{\circ}$. Turn the < > dial to select [\bigcirc], then press the < @ > button. While checking tilt relative to the grid, turn the < > dial (in 0.1° increments) or tap the left or right arrow (in 0.5° increments) in the upper left of the screen to correct tilt. After correction is finished, press the < @ > button.

• Changing the cropping frame aspect ratio and orientation

Turn the < $\frac{1}{2}$ > dial and select [III]. Each press of the < (B) > button changes the cropping frame aspect ratio.

Moving the cropping frame

Use < * > to move the cropping frame vertically or horizontally.

4. Check the image area to be cropped.



Turn the < (); > but to select [.], then press the < () > button. The image area to crop is displayed.

5. Save.




- Turn the < ? > dial to select [[]], then press the < இ > button.
- Select [OK] to save the cropped image.
- Check the destination folder and image file number, then select [OK].
- To crop another image, repeat steps 2 to 5.

Caution

- The position and size of the cropping frame may change depending on the angle set for tilt correction.
- Once a cropped image is saved, it cannot be cropped again or resized.
- AF point display information (
) and Dust Delete Data (
) will not be appended to the cropped images.

You can convert HEIF images captured in HDR shooting and save them as JPEG images.

1. Select [\blacktriangleright : HEIF \rightarrow JPEG conversion].

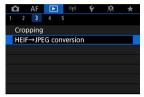

2. Select an image.



- Turn the < २००२ > dial to select an HEIF image to convert to JPEG.
- Press the < () > button to convert to JPEG.

3. Save.




- Select [OK] to save the JPEG image.
 - Check the destination folder and image file number, then select [OK].
 - To convert another image, repeat steps 2 and 3.

Note Some scenes may look different after conversion if the original and converted images are compared. Conversion is not available for cropped images, or for frame-grab images from 4K movies.

You can play back the images on the card as an automatic slide show.

1. Specify the images to be played back.

- To play back all the images on the card, go to step 2.
- If you want to specify the images to be played back in the slide show, filter the images with [E]: Set image search conditions] (2).
- 2. Select [Slide show].

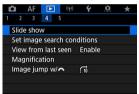

3. Set the playback as desired.



- Select [Set up].
- Set the [Display time] and [Repeat] (repeated playback) settings for the still photos.
- After completing the settings, press the < MENU > button.

=		
Slide show		
Display time	1 sec.	
	2 sec.	
	3 sec.	
	5 sec.	
	10 sec.	
	20 sec.	

Displa	ay time
--------	---------



Slide show	
Repeat	Enable Disable

4. Start the slide show.



- Select [Start].
- After [Loading image...] is displayed, the slide show will start.

5. Exit the slide show.

 To exit the slide show and return to the setting screen, press the <MENU > button.


Note

- To pause the slide show, press the < () > button. During pause, () will be displayed in the upper left of the screen. Press the <) > button again to resume the slide show.
- During the automatic playback of still photos, you can press the < INFO > button to switch the display format (2).
- Volume during movie playback can be adjusted by pressing the < ▲ > < ▼ > keys.
- During auto playback or when playback is paused, you can turn the < >> dial to view another image.
- During auto playback, auto power off will not take effect.
- The display time may differ depending on the image.

Clearing the Search Conditions

You can filter image display according to your search conditions. After setting the image search conditions, you can play back and display only the found images. You can also protect, rate, play a slide show, erase, and apply other operations to filtered images.



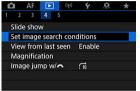

2. Set the search conditions.



- Turn the < \$\constructs > dial to select an option.
- Turn the $< \frac{1}{2} >$ dial to set the option.
- A checkmark [v] (1) is appended to the left of the option. (Specified as the search condition.)
- If you select the option and press the < INFO > button, the checkmark
 [√] will be removed (which cancels the search condition).

Option	Description			
* Rating	Displays images with the selected (rating) condition.			
🕑 Date	Displays images taken on the selected shooting date.			
Folder	Displays images in the selected folder.			
Om Protect	Displays images with the selected (protect) condition.			
Type of file (1)	Displays images of the selected file type.			
2 Type of file (2)	Displays images of the selected file type.			

3. Apply the search conditions.



- Press the < (P) > button and read the message displayed.
- Select [OK]. The search condition is applied.
- 4. Display the found images.



(2)

Press the < >> button.
 Only the images that match the set conditions (filtered) will be played back.

When the images are filtered for display, the screen will have an outer yellow frame (2).

Caution

 If no images match the search conditions, pressing the < () > button in step 3 has no effect.


Note

- Search conditions may be cleared after operations involving camera power or card changes and editing, adding, or erasing images.
- Auto power off time may be extended while the [E: Set image search conditions] screen is displayed.


Clearing the Search Conditions

Access the screen in step 2, then press the < 📑 > button to clear all the search conditions.

1. Select [IN: View from last seen].

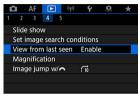


2. Select an option.

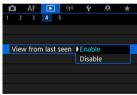

- [Enable]: Playback resumes from the last image displayed (unless you have just finished shooting).
- [Disable]: Playback resumes from your most recent shot whenever the camera is restarted.

In single-image display, you can turn the < [20] > dial to jump through the images forward or backward according to the jump method set.

1. Select [E: Image jump w/

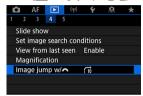

2. Select the jump method.

In	Image jump w/🔿								
Ju	Jump 10 images								
	ſi	: 10	ۍ:	©.	ſ				
	C.	ē	Į.	. *	ģ				
				í	CET I)K			
				,	SET (JK			

Note

- With [Jump images by the specified number], you can turn the < i > dial to select the number of images to jump by.
- With [Display by image rating], turn the < [∞]/₂ > dial to select the rating ([∞]/₂). Selecting ★ will show all rated images as you browse.

3. Browse by jumping.



- (1) Jump method
- (2) Playback position
- Press the < > button.
- In single-image display, turn the < 2003 > dial. You can browse by the jump method set.

Note

You can also change the jump method by pressing < * > left or right during playback.



Histogram

You can specify screens and accompanying information displayed during image playback.

1. Select [E: Playback information display].

Û	AF		((1))	Ý	a	*		
			5					
Play	yback	inform	nation	displa	у			
Hig	hlight	alert		Disab	le			
AF	point	disp.		Disable				
Play	yback	grid		Off				
Мо	vie pla	ay cou	nt	Rec time				
HD	MI HD	R out	out	Off				

2. Add a checkmark [v] next to the number of screens to display.



- Select numbers with the < 5 > dial.
- Press the < (R) > button to clear a checkmark [v]. Press it again to add a checkmark [v].
- Repeat these steps to add a checkmark [√] to the number of each screen to display, then select [OK].
- Your selected information can be accessed by pressing the < INFO > button during playback, or by using < * > when shooting information is displayed.


Histogram disp	
Brightness	
RGB	
	SET OK

The histograms show signal levels across the tonal range. Brightness display (for checking the general exposure level and overall gradation) and RGB display (for checking saturation and gradation of red, green, and blue) are available. You can switch the histogram displayed by pressing the < INFO > button when [INFO] is displayed in the lower left of the [E]: Playback information display] screen.


[Brightness] display

This histogram is a graph showing the distribution of the image's brightness level, with the horizontal axis indicating the brightness level (darker on the left and brightner on the right) and the vertical axis indicating the pixel count at each brightness level. The more pixels there are toward the left, the darker the image, and the more pixels there are toward the right, the brighter the image. If there are too many pixels on the left, detail in shadows will be lost, and if there are too many pixels on the right, detail in highlights will be lost. The gradation in-between will be reproduced. By checking the image and its brightness histogram, you can see the exposure level inclination and the overall gradation.

Sample histograms

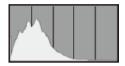

Dark image

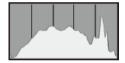

Normal brightness



Bright image

[RGB] display

This histogram is a graph showing the distribution of each primary color's brightness level in the image (RGB or red, green, and blue), with the horizontal axis indicating the color's brightness level (darker on the left and brighter on the right) and the vertical axis indicating the pixel count at each color brightness level. The more pixels there are toward the left, the darker and less prominent the color, and the more pixels there are toward the right, the brighter and denser the color. If there are too many pixels on the left, the color will be too saturated, without gradation. By checking the image's RGB histogram, you can see the color's saturation and gradation conditions, as well as the white balance bias. You can specify blinking display of overexposed highlights on the playback screen. To obtain more detailed gradation in the blinking areas where you want the gradation to be faithfully reproduced, set the exposure compensation to a negative amount and shoot again for a better result.

1. Select [: Highlight alert].

Ô		AF	►	((1))	۴	a	*
1	2	3	4	5				
P	ayb	ack	inforn	natio	n dis	splay		
Н	ighl	ight	alert		D	sabl	e	
A	Fpc	oint (disp.		Disable			
P	ayb	ack	grid		Off			
N	lovi	e pla	y cou	nt	Rec time			
HDMI HDR output				Off				

2. Select [Enable].

Ď	1	AF	Þ		((†))	Ý	â	*
1				5				
ŀ	ligh	light	alert			Disat	ole	
						Enab	le	

You can display the AF points that were used to focus, which will be outlined in red on the playback screen.

1. Select [>: AF point disp.].

Ľ	3	AF			((1))	Ý	â	*		
1	2	3	4	5						
H	Playl	back	infor	ma	tion	displa	ıy			
ł	High	light	alert			Disat	ole			
1	AF p	oint	disp.			Disable				
ł	Play	back	grid			Off				
1	Nov	ie pla	ay co	unt	t	Rec t	ime			
ł	IDN	II HD	R out	tpι	ıt	Off				

2. Select [Enable].

Ľ		AF	►	((†))	Ý	<u>n</u>	*
1				5			
/	λF p	oint	disp.		Disab	le	
					Enabl	e	

You can display a grid over still photos shown in single-image display on the playback screen. This function is convenient for checking the image's vertical or horizontal tilt as well as composition.

1. Select [Playback grid].

Ô	ł	AF	►		((†))	Ý	D	*		
1	2	3	4	5						
P	layt	back	infor	ma	tion	displa	y			
Н	ligh	light	alert			Disab	le			
A	Fp	oint	disp.			Disable				
Ρ	layt	back	grid			Off				
N	lovi	ie pla	ау соц	Int		Rec ti	me			
Н	DN	II HD	R out	pu	it	Off				

2. Select an option.

Ľ	i	AF	►		((†))	Ý	<u>a</u>	*
				5				
F	Play	back	grid			Off		
						3x3 =	ŧ	
						6x4 ‡		
						3x3+	diag ≯	¥



 When panoramic images are displayed, a single vertical and horizontal line are shown if [Playback grid] is set to an option other than [Off].




You can select how time is displayed on the movie playback screen.

1. Select [>: Movie play count].

Û	AF]	((†))	¥	a	*	
1	23	4	5					
Pla	aybacl	k infor	rma	ation	displa	ıy		
Hi	ghligh	t aler	t		Disat	ole		
AF point disp.					Disable			
Playback grid					Off			
Movie play count				t	Rec time			
HDMI HDR output			ut	Off				

2. Select an option.

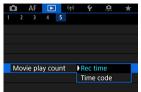

Rec time

Displays the recording or playback time during movie playback.



• Time code

Displays the time code during movie playback.



Note

- Time codes are always recorded to movie files (except when High Frame Rate movies are set to [Free run]), regardless of the [Movie rec count] setting.
- The [Movie play count] setting in [D]: Time code] is linked to the []: Movie play count], so that these settings always match.
- The "frame" count is not displayed during movie recording or playback.

Still Photo Extraction from RAW Burst Images

You can extract any image from the sets ("rolls,"
) that are captured in RAW burst mode as a JPEG, HEIF, or RAW image.

- 1. Display the image.
 - Press the < > button.
- 2. Select a roll.



- Turn the < Solve > dial to select a roll.
- In single-image display, rolls are identified by a [SET] [] icon in the upper left.
- In index display, press the <

 > button to switch to single-image display.

Note

- Various settings may have a different effect on rolls than on extracted JPEG/HEIF images or on JPEG/HEIF images processed from extracted RAW images.
- 3. In single-image display, press the < \$\$ button.

4. Select []].



- The roll is played.
- 5. Select an image.



- Turn the < 5, > dial to select the image to extract.
- 6. Press the < >> button.



7. Select an image format and save the extracted image.

 With [Extract as JPEG] or [Extract as HEIF], you can choose [Edit and save] and apply RAW image processing (2) before saving.

3	Note
•	Images are saved in [] quality when you select [Extract as JPEG] or [Extract as HEIF].
•	Creative filters, cropping, and resizing are not available for JPEG/HEIF images extracted from RAW burst images or processed from extracted RAW images. HEIF images extracted from RAW burst images cannot be converted to JPEGs.

You can view RAW or HEIF images in HDR by connecting the camera to an HDR TV.

1. Select [F: HDMI HDR output].

Ľ	1	AF	►	(1	P)	Ý	Q	*	
1	2	3	4	5					
F	Playb	ack	inforr	natio	on c	lispla	у		
ł	lighl	light	alert		j.	Disab	le		
1	AF po	oint	disp.	Ĩ	Disable				
Playback grid						Off			
Movie play count					1	Rec ti	me		
HDMI HDR output					Off				

2. Select [On].

HD	MIHDR	output		
Of				
On				
			SET	IOK

Note

- Make sure the HDR TV is set up for HDR input. For details on how to switch inputs on the TV, refer to the TV manual.
- Depending on the TV used, images may not look as expected.
- On HDR TVs, some information may not be displayed.
- Quick Control RAW processing of displayed images is recommended if you will process RAW images while viewing HDMI HDR output.

This chapter describes how to connect the camera to a smartphone wirelessly via Bluetooth[®] or Wi-Fi[®] and send images to devices or Web services, how to control the camera from a computer or wireless remote control, and other operations.

Caution

Important

- Note that Canon cannot be held liable for any loss or damage caused by erroneous wireless communication settings when using the camera. In addition, Canon cannot be held liable for any other loss or damage caused by use of the camera. When using wireless communication functions, establish appropriate security at your own risk and discretion. Canon cannot be held liable for any loss or damage caused by unauthorized access or other security breaches.
- <u>Tab Menus: Wireless Features</u>
- <u>Wi-Fi/Bluetooth Connection</u>
- <u>Connecting to a Smartphone</u>
- · Connecting to a Computer via Wi-Fi
- · Connecting to a Printer via Wi-Fi
- Sending Images to a Web Service
- Streaming Images
- <u>Wi-Fi Connection via Access Points</u>
- <u>Connecting to a Wireless Remote Control</u>
- Reconnecting via Wi-Fi/Bluetooth
- <u>Registering Multiple Connection Settings</u>
- <u>Airplane Mode</u>
- Wi-Fi Settings
- Bluetooth Settings
- <u>Nickname</u>
- GPS Device Settings
- <u>Changing or Deleting Connection Settings</u>
- <u>Resetting Communication Settings</u>
- <u>View Info Screen</u>
- <u>Virtual Keyboard Operations</u>
- <u>Responding to Error Messages</u>
- <u>Wireless Communication Function Precautions</u>
- Security
- <u>Checking Network Settings</u>

<u>Wireless Communication Status</u>

Wireless features 1

Û	AF	►	((†))	Ý	<u>n</u>	\star
Wi-	i/Blue	etooth	conne	ction		_
Airp	lane r	node		Off		-
Wi-	i setti	ings		Disab	le	-
Blue	etooth	settin	gs	Disab	le	-
Nic	name			XXXX	X	-
GPS	devic	e setti	ngs			-
Rese	et com	nmunic	ation	settin	gs	-

- (1) Wi-Fi/Bluetooth connection
- (2) Airplane mode
- (3) Wi-Fi settings
- (4) Bluetooth settings
- (5) Nickname
- (6) GPS device settings
- (7) Reset communication settings

Caution

- Wireless communication is not available while the camera is connected via an interface cable to a computer or other device.
- Other devices, such as computers, cannot be used with the camera by connecting them with an interface cable while the camera is connected to devices via Wi-Fi.
- The camera cannot be connected via Wi-Fi if there is no card in the camera (except for []]). Also, for [] and Web services, the camera cannot be connected via Wi-Fi if there are no images saved on the card.
- The Wi-Fi connection will be terminated if you set the camera power to < OFF > or open the card/battery compartment cover.
- With a Wi-Fi connection established, the camera's auto power off does not function.

1. Select [((†)): Wi-Fi/Bluetooth connection].

🗅 AF 🗈 🔇	t)) 🛉	â	*
Wi-Fi/Bluetooth co	nnection		
Airplane mode	Off		
Wi-Fi settings	Disabl	e	
Bluetooth settings	Disabl	e	
Nickname	XXXXX		
GPS device setting	s		
Reset communicat	ion setting	gs	

2. Select an option for the camera to connect to.



Control the camera remotely and browse images on the camera over a Wi-Fi connection by using the dedicated Camera Connect app on smartphones or tablets (collectively referred to as "smartphones" in this manual).

After pairing the camera with a smartphone supporting Bluetooth low energy technology (hereafter, "Bluetooth"), you only need to use the smartphone to connect via Wi-Fi.

Remote control (EOS Utility) (2)

Connect the camera to a computer via Wi-Fi and operate the camera remotely using EOS Utility (EOS software). Images on the camera can also be sent to the computer.

🕒 Print from Wi-Fi printer (😰)

Connect the camera to a printer supporting PictBridge (Wireless LAN) via Wi-Fi to print images.

● Upload to Web service (②)

Images can be sent directly from the camera to the image.canon cloud service for Canon customers after you complete member registration (free of charge). Original files of images sent to image.canon are retained for 30 days, without storage limitations, and can be downloaded to computers or transferred to other Web services.

Sonnect to Wireless Remote (

This camera can also be connected to Wireless Remote Control BR-E1 (sold separately) via Bluetooth for remote control shooting.

- Turning on Bluetooth and Wi-Fi on a Smartphone
- Installing Camera Connect on a Smartphone
- Connecting to a Bluetooth-compatible Smartphone via Wi-Fi
- Camera Connect Functions
- Maintaining a Wi-Fi Connection When the Camera Is Off
- Canceling the Pairing
- Wi-Fi Connection without Using Bluetooth
- Automatic Image Transfer as You Shoot
- Sending Images to a Smartphone from the Camera
- Terminating Wi-Fi Connections
- Settings to Make Images Viewable from Smartphones

You can do the following after pairing the camera with a Bluetooth-compatible smartphone.

- Geotag images with GPS information acquired by the smartphone (2).

You can also do the following after connecting the camera to a smartphone via Wi-Fi.

- Browse and save images on the camera from a smartphone (2).

Turn on Bluetooth and Wi-Fi from the smartphone settings screen. Note that pairing with the camera is not possible from the smartphone's Bluetooth settings screen.



The dedicated app Camera Connect (free of charge) must be installed on the smartphone on which Android or iOS is installed.

- Use the latest version of the smartphone OS.
- Camera Connect can be installed from Google Play or App Store. Google Play or App Store can also be accessed using the QR codes that appear when the camera is paired or connected via Wi-Fi to a smartphone.

Note

- For the operating system versions supported by Camera Connect, refer to the download site of Camera Connect.
- Sample screens and other details in this guide may not match the actual user interface elements after camera firmware updates or updates to Camera Connect, Android, or iOS.

Steps on the camera (1)


1. Select [(1): Wi-Fi/Bluetooth connection].



2. Select [Connect to smartphone].



3. Select [Add a device to connect to].

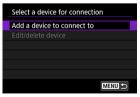


4. Select an option.



- If Camera Connect is already installed, select [Do not display].
- If Camera Connect is not installed, select [Android] or [iOS], scan the displayed QR code with the smartphone to access Google Play or App Store and install Camera Connect.

5. Select [Pair via Bluetooth].

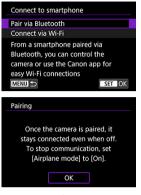

• Press the < (P) > button to start pairing.

Pairing						
Pairing in progress.						
Use the Canon app/software						
on the smartphone.						
Nickname:						
XXXXX						
Cancel						
Pairing						
End the current Bluetooth						
connection and pair with a						
new device						
Current Bluetooth connection:						
XXXXX						
Cancel OK						

• To pair with a different smartphone after pairing with one initially, select [OK] on the screen shown above.

Steps on the smartphone (1)

6. Start Camera Connect.



 $7. \ \ {\rm Tap \ the \ camera \ for \ pairing}.$



- In Android, go to Steps on the camera (2).
- 8. Tap [Pair] (iOS only).



Steps on the camera (2)

9. Select [OK].



10. Press the < (P) > button.

Pairir	ng
	Paired with:
	XXXXX
	Use the Canon app/software on the smartphone
	OK

 Pairing is now complete, and the camera is connected to the smartphone via Bluetooth.



• A Bluetooth icon appears on the main Camera Connect screen.

Caution

- The camera cannot be connected to two or more devices at the same time via Bluetooth. To switch to a different smartphone for the Bluetooth connection, see <u>Reconnecting via Wi-Fi/Bluetooth</u>.
- Bluetooth connection consumes battery power even after the camera's auto power off is activated. Therefore, the battery level may be low when you use the camera.


Troubleshooting pairing

Keeping pairing records for previously paired cameras on your smartphone will
prevent it from pairing with this camera. Before you try pairing again, remove
pairing records for previously paired cameras from your smartphone's Bluetooth
settings screen.

Note

Steps on the smartphone (2)

11. Tap a Camera Connect function.

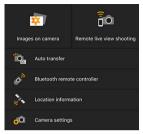

- In iOS, tap [Join] when a message is displayed to confirm camera connection.
- An error message may be displayed on the smartphone even if Camera Connect is connected. If so, close the error message and continue using the app.
- For the Camera Connect functions, see <u>Camera Connect Functions</u>.
- When a Wi-Fi connection is established, the screen for the selected function will appear.



[Wi-Fi on] is displayed on the camera screen.



The Bluetooth and Wi-Fi icons are lit on the main Camera Connect screen.

The Wi-Fi connection to a Bluetooth-compatible smartphone is now complete.

- For how to terminate the Wi-Fi connection, see <u>Terminating Wi-Fi Connections</u>.
- Terminating the Wi-Fi connection will switch the camera to the Bluetooth connection.
- To reconnect via Wi-Fi, start Camera Connect and tap the function you will use.

• [-Wi-Fi on] screen

Disconnect,exit

Terminates the Wi-Fi connection.

Confirm set.

• You can check the settings.

Error details

• When a Wi-Fi connection error occurs, you can check the details of the error.

Images on camera

- Images can be browsed, deleted, or rated.
- Images can be saved on a smartphone.
- Effects can be applied to RAW images and saved to a smartphone (Creative Assist).

Remote live view shooting

Enables remote shooting as you view a live image on the smartphone.

Auto transfer

Enables camera and app setting adjustment for automatic transfer of your shots (2).

Bluetooth remote controller

- Enables remote control of the camera from a smartphone paired via Bluetooth. (Not available when connected via Wi-Fi.)
- Auto power off is disabled while you are using the Bluetooth remote controller feature.

Location information


Not supported on this camera.

Camera settings

Camera settings can be changed.

Even when the camera power switch is set to < OFF>, as long as it is paired to a smartphone via Bluetooth, you can use the smartphone to connect via Wi-Fi and browse images on the camera or perform other operations.

If you prefer not to connect via Wi-Fi to the camera when it is off, either set [Airplane mode] to [On] or set [Bluetooth settings] to [Disable].

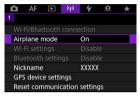

Caution

 This function can no longer be used if the wireless settings are reset or the smartphone connection information is erased. Cancel pairing with a smartphone as follows.

1. Select [('t'): Wi-Fi/Bluetooth connection].

🗅 AF 🗈 애	Ý <u>0</u>	*
Wi-Fi/Bluetooth con	nection	
Airplane mode	Off	
Wi-Fi settings	Enable	
Bluetooth settings	Enable	
Nickname	XXXXX	
GPS device settings		
Reset communicatio	n settings	


2. Select [Connect to smartphone].



- 3. Select [Edit/delete device].



4. Select the smartphone to cancel pairing with.

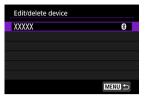

- Smartphones currently paired with the camera are labeled [8].
- 5. Select [Delete connection information].



6. select [ОК].

Delete connection information	
Delete XXXXX	
Cancel OK	

- $\label{eq:constraint} \textbf{7.} \quad \textbf{Clear the camera information on the smartphone.}$
 - In the smartphone's Bluetooth setting menu, clear the camera information registered on the smartphone.

Steps on the camera (1)

Select [(יוֹי): Wi-Fi/Bluetooth connection].

Ô A	F 🕨	((p))	Ý	â	*
1					
Wi-Fi/B	Bluetooth	conne	ction		
Airplar	ne mode		Off		
Wi-Fi s	ettings		Enabl	e	
Blueto	oth settir	igs	Enabl	е	
Nickna	ime		XXXX)		
GPS de	evice setti	ngs			
Reset o	communi	cation	settin	gs	

2. Select [Connect to smartphone].



- If the history (𝔅) is displayed, switch screens with the < ⁵, → 3 as needed.
- 3. Select [Add a device to connect to].




4. Select an option.



- If Camera Connect is already installed, select [Do not display].
- 5. Select [Connect via Wi-Fi].



6. Establish a Wi-Fi connection.

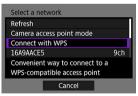


 Connect to an access point via Wi-Fi. Go to step 6 in <u>Wi-Fi Connection</u> via Access Points.

Steps on the smartphone

7. Operate the smartphone to establish a Wi-Fi connection.

Smartphone's screen (sample)

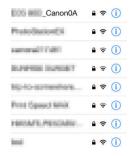

- Activate the smartphone's Wi-Fi function, then tap the SSID (network name) checked in step 6 in <u>Steps on the camera (1)</u>.
- For the password, enter the password checked in step 6 in <u>Steps on</u> the camera (1).
- 8. Start Camera Connect and tap the camera to connect to via Wi-Fi.



Steps on the camera (2)

9. Select [OK].



 To specify viewable images, press the < |NFO > button. Configure as described in <u>Settings to Make Images Viewable from Smartphones</u>, starting in step 5.



 The main window of Camera Connect will be displayed on the smartphone.

The Wi-Fi connection to a smartphone is now complete.

- For how to terminate the Wi-Fi connection, see <u>Terminating Wi-Fi Connections</u>.
- To reconnect via Wi-Fi, see Reconnecting via Wi-Fi/Bluetooth.

Note

Your shots can be automatically sent to a smartphone. Before following these steps, make sure the camera and smartphone are connected via Wi-Fi.

1. Select [('t'): Wi-Fi settings].

Ô	AF		((₁))	Ý	â	*
1						
Wi	-Fi/Blue	etooth c	onne	ction		
Air	plane i	node		Off		
Wi-Fi settings			Enabl	e		
GP	S devic	e settin	gs			
Res	et con	nmunica	ation	settin	gs	


2. Select [Send to smartphone after shot].



3. Set [Auto send] to [Enable].



4. Set [Size to send].

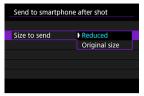

5. Take the picture.

You can use the camera to send images to a smartphone paired via Bluetooth (Android devices only) or connected via Wi-Fi.

1. Switch to playback.



2. Press the < >> button.



3. Select [] Send images to smartphone].



- If you perform this step while connected via Bluetooth, a message is displayed, and the connection switches to a Wi-Fi connection.
- 4. Select sending options and send the images.

(1) Sending images individually

1. Select an image to send.



- Turn the < >>>> dial to select an image to send, then press the < >>> button.
- Images can be selected by touch from index display (2).

2. Select [Send img shown].



- In [Size to send], you can select the image sending size.
- When sending movies, you can select the image quality of movies to send in [Quality to send].

(2) Sending multiple selected images



2. Select [Send selected].



3. Select images to send.




Turn the < 5, > dial to select an image to send, then press the < (R) > button.



- Images can be selected by touch from three-image display (2).
- After selecting the images to send, press the < MENU > button.

4. Select [Size to send].

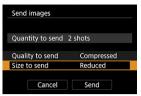

• On the displayed screen, select an image size.

Size to send	
Original size	
Reduced	
	SET OK

• When sending movies, select the image quality in [Quality to send].

5. Select [Send].

Send	images	
Quar	ntity to send	2 shots
Qual	ity to send	Compressed
Size to send		Reduced

(3) Sending a specified range of images

1. Press the < (P) > button.



2. Select [Send range].



3. Specify the range of images.



- Select the first image (start point).
- Select the last image (end point).
- To cancel the selection, repeat this step.
- Images can be selected by touch from index display (2).

4. Confirm the range.

Press the < MENU > button.

5. Select [Size to send].

Send	d images	
Qua	ntity to send	2 shots
Qua	lity to send	Compressed
Size	to send	Reduced

On the displayed screen, select an image size.

Size to send	
Original size	
Reduced	
	SET OK

• When sending movies, select the image quality in [Quality to send].

6. Select [Send].




(4) Sending all images on the card



2. Select [Send all card].



3. Select [Size to send].

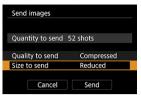

• On the displayed screen, select an image size.

Size to send	
Original size	
Reduced	
	SET OK

• When sending movies, select the image quality in [Quality to send].

4. Select [Send].

Send	images	
Quar	ntity to send	52 shots
Qual	ity to send	Compressed
Size to send		Reduced

(5) Sending images that match the search conditions

Send all the images that match the search conditions set in [Set image search conditions] at once. For details on [Set image search conditions], see <u>Setting Image Search</u> <u>Conditions</u>.


1. Press the < <p>> button.



2. Select [Send all found].



3. Select [Size to send].

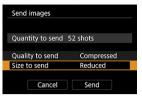

• On the displayed screen, select an image size.

Size to send	
Original size	
Reduced	
	SET OK

• When sending movies, select the image quality in [Quality to send].

4. Select [Send].

Send	images	
Quar	ntity to send	52 shots
Qual	ity to send	Compressed
Size to send		Reduced

Ending image transfer

Sending images from the camera when paired via Bluetooth (Android devices only)



Press the < MENU > button on the image transfer screen.

Send images to smartphone			
Disconnect Wi-Fi and exit			
Cancel	OK		

• Select [OK] to end image transfer and the Wi-Fi connection.

Sending images from the camera over a Wi-Fi connection



- Press the < MENU > button on the image transfer screen.
- To terminate the Wi-Fi connection, see <u>Terminating Wi-Fi Connections</u>.

Caution

 During the image transfer operation, a picture cannot be taken even if the camera's shutter button is pressed.

Note

- You can cancel the image transfer by selecting [Cancel] during the transfer.
- You can select up to 999 files at a time.
- With a Wi-Fi connection established, disabling the smartphone's power saving function is recommended.
- Selecting the reduced size for still photos applies to all still photos sent at that time. Note that S2 size still photos are not reduced.
- Selecting compression for movies applies to all movies sent at that time. Note that ^{EFHD} POSTOR IPBI¹¹ and EFHD PSTOR IPBI¹² movies are not reduced.
- When you use a battery to power the camera, make sure it is fully charged.

Perform either of the following operations.

On the Camera Connect screen, tap [X].



On the [GWi-Fi on] screen, select [Disconnect,exit].

🛛 Wi-Fi on
Disconnect,exit
Confirm set.
Disconnect Wi-Fi and return to
Wi-Fi function setting screen
MENU 🖆

- If the [Wi-Fi on] screen is not displayed, select [(1): Wi-Fi/Bluetooth connection].
- Select [Disconnect,exit], then select [OK] on the confirmation screen.

Images can be specified after the Wi-Fi connection is terminated.

1. Select [(۱): Wi-Fi/Bluetooth connection].

🛍 AF 🗈 애) 💡	D	*
Wi-Fi/Bluetooth cor	nection		
Airplane mode	Off		
Wi-Fi settings	Enabl	e	
Bluetooth settings	Enabl	e	
Nickname	XXXX)	XXXXX	
GPS device settings			
Reset communication	on settin	gs	


2. Select [Connect to smartphone].



- If the history (②) is displayed, switch screens with the < [™] > dial or
 ≪ > as needed.
- 3. Select [Edit/delete device].



4. Select a smartphone.

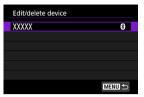

- Select the name of the smartphone on which you want to make the images viewable.
- 5. Select [Viewable imgs].



6. Select an option.




Select [OK] to access the setting screen.

[All images]

All images stored on the card become viewable.

[Images from past days]

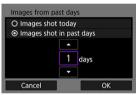

- Specify viewable images on the shooting-date basis. Images shot up to nine days ago can be specified.
- When [Images shot in past days] is selected, images shot up to the specified number of days before the current date become viewable. Press the < ▲ > < ♥ > keys to specify the number of days, then press <(®) > to confirm the selection.
- Once you select [OK], the viewable images are set.


Caution

 If [Viewable imgs] is set to any setting other than [All images], remote shooting is not possible.

[Select by rating]

★All	25	
[•]	5	-10100-0001
6-3	0	
[11]	12	and the second second
[::]	8	101-0107
[24]	0	T T
OFF		
MENU 🕤		SET OK

- Specify viewable images depending on whether a rating is appended (or not appended) or by the type of rating.
- Once you select the type of rating, the viewable images are set.

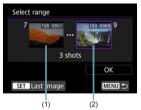

[File number range] (Select range)

- Select the first and last images from images arranged by the file number to specify the viewable images.
 - Press the < <p>> button to display the image selection screen. Turn the < <p>> dial to select the image.

You can change the number of images shown in index display for selection by touch (\bigotimes).

- 2.Select an image as the starting point (1).
- 3.Turn the $< \frac{1}{2}$ > dial and select an image as the ending point (2).
- 4.Select [OK].

Caution

- If the Wi-Fi connection is terminated while recording a movie with remote shooting, the following will occur.
 - · Any movie recording in progress in movie recording mode will continue.
 - · Any movie recording in progress in still photo shooting mode will end.
- With a Wi-Fi connection to a smartphone established, certain functions are unavailable.
- In remote shooting, the AF speed may become slower.
- Depending on the communication status, image display or shutter release timing may be delayed.
- When saving images to a smartphone, you cannot take a picture even if you press the camera's shutter button. Also, the camera screen may turn off.

Note

 With a Wi-Fi connection established, disabling the smartphone's power saving function is recommended.

Operating the Camera Using EOS Utility

This section describes how to connect the camera to a computer via Wi-Fi and perform camera operations using EOS software or other dedicated software. Install the latest version of software on the computer before setting up a Wi-Fi connection. For computer operating instructions, refer to the computer user manual.

Operating the Camera Using EOS Utility

Using EOS Utility (EOS software), you can import images from the camera, control the camera, and perform other operations.

Steps on the camera (1)

1. Select [((יף)): Wi-Fi/Bluetooth connection].

Ď /	AF 🖻	((†))	Ý	<u>a</u>	*	
1						
Wi-Fi/	Bluetoot	h conne	ction			
Airpla	ne mod	9	Off			
Wi-Fi	settings		Enabl	e		
Blueto	Bluetooth settings		Enable			
Nickn	Nickname			XXXXX		
GPS d	evice se	ttings				
Reset	commu	nication	settin	gs		

2. Select [_Remote control (EOS Utility)].


Remote	Remote control (EOS Utility)			
		Ъ		
	8 0 %			
INFO View i	nfo	MENU ᠫ		

If the history (𝔅) is displayed, switch screens with the < 𝔅 > dial or
 < ⅔ > as needed.

3. Select [Add a device to connect to].



4. Check the SSID (network name) and password.

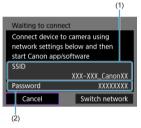

• Check the SSID (1) and Password (2) displayed on the camera screen.

Steps on the computer (1)

5. Select the SSID, then enter the password.

Computer's screen (sample)



- On the computer's network setting screen, select the SSID checked in step 4 in <u>Steps on the camera (1)</u>.
- For the password, enter the password checked in step 4 in <u>Steps on</u> the camera (1).

Steps on the camera (2)

6. Select [OK].



 The following message is displayed. "******" represents the last six digits of the MAC address of the camera to be connected.



Steps on the computer (2)

- 7. Start EOS Utility.
- 8. In EOS Utility, click [Pairing over Wi-Fi/LAN].



• If a firewall-related message is displayed, select [Yes].

9. Click [Connect].

• Select the camera to connect to, then click [Connect].

Steps on the camera (3)

10. Establish a Wi-Fi connection.



• Select [OK].

[Wi-Fi on] screen



Disconnect, exit

Terminates the Wi-Fi connection.

Confirm set.

You can check the settings.

Error details

• When a Wi-Fi connection error occurs, you can check the details of the error. The Wi-Fi connection to a computer is now complete.

- Operate the camera using EOS Utility on the computer.
- To reconnect via Wi-Fi, see <u>Reconnecting via Wi-Fi/Bluetooth</u>.

Caution

- If the Wi-Fi connection is terminated while recording a movie with remote shooting, the following will occur.
 - · Any movie recording in progress in movie recording mode will continue.
 - · Any movie recording in progress in still photo shooting mode will end.
- You cannot use the camera to shoot in still photo shooting mode when it is set to movie recording mode in EOS Utility.
- With a Wi-Fi connection to EOS Utility established, certain functions are unavailable.
- In remote shooting, the AF speed may become slower.
- Depending on the communication status, image display or shutter release timing may be delayed.
- In Remote Live View shooting, the rate of image transmission is slower compared to a connection via an interface cable. Therefore, moving subjects cannot be displayed smoothly.

- Image Printing
- Print Settings

This section describes how to print images by directly connecting the camera to a printer supporting PictBridge (Wireless LAN) via Wi-Fi. For printer operating instructions, refer to the printer user manual.

1. Select [('1'): Wi-Fi/Bluetooth connection].

🗅 AF 🗈 🙌	Ý 🔍 🖈		
Wi-Fi/Bluetooth con	nection		
Airplane mode	Off		
Wi-Fi settings	Enable		
Bluetooth settings	Enable		
Nickname	XXXXX		
GPS device settings			
Reset communicatio	n settings		

2. Select [DPrint from Wi-Fi printer].




If the history (☑) is displayed, switch screens with the < ⁵√³ > dial or
 < ※ > as needed.

3. Select [Add a device to connect to].



4. Check the SSID (network name) and password.

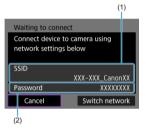

• Check the SSID (1) and Password (2) displayed on the camera screen.

5. Set up the printer.

- In the Wi-Fi settings menu of the printer to be used, select the SSID you have checked.
- For the password, enter the password checked in step 4.

6. Select the printer.



- In the list of detected printers, select the printer to connect to via Wi-Fi.
- If your preferred printer is not listed, selecting [Search again] may enable the camera to find and display it.

Note

 To establish a Wi-Fi connection via an access point, see <u>Wi-Fi Connection via</u> <u>Access Points</u>.

Printing images individually

1. Select the image to be printed.



- Turn the < Set > dial to select an image to print, then press the < () > button.
- Images can be selected by touch from index display (2).

2. Select [Print image].



3. Print the image.

	ତ୍ର Off	
1 . Jan	Off Off	
The way	Q 1 copies	
	Cropping	
🖓 Default	Paper settings	
👃 Default	Cancel	
🗊 Bordered	Print	

- For the print setting procedures, see Print Settings.
- Select [Print], then [OK] to start printing.

Printing according to specified image options

1. Press the < (R) > button.



2. Select [Print order].



3. Set the printing options.



- For the print setting procedures, see Print Ordering (DPOF).
- If the print order is complete before establishing a Wi-Fi connection, go to step 4.

4. Select [Print].

- [Print] can be selected only when an image is selected and the printer is ready to print.
- 5. Configure [Paper settings] (
- 6. Print the image.

Start printing	
Cancel OK	

• When [OK] is selected, printing starts.

Caution


- Shooting is not possible while connected to a printer via Wi-Fi.
- RAW images, HEIF images, and movies cannot be printed.
- Before printing, be sure to set the paper size.
- File number printing may not be supported by certain printers.
- Dates may be printed on the border by certain printers when [Bordered] is set.
- Depending on the printer, the date may appear faint if it is printed on a bright background or on the border.

Note

- When you use a battery to power the camera, make sure it is fully charged.
- It may take some time until printing starts after you select [Print], depending on file size and image quality.
- To stop printing, press the < ()> button while [Cancel] is displayed, then select [OK].
- When printing with [Print order], you can select [Resume] to continue printing the remaining images if you have stopped printing in progress. Note that printing will not resume if any of the following occurs.
 - You change the print order or delete any of the specified images before resuming printing.
 - · When index is set and you change the paper setting before resuming printing.
- If a problem occurs during printing, see <u>Notes</u>.

The screen display and setting options vary depending on the printer. Also, certain settings may not be available. For details, refer to the printer's instruction manual.

Print settings screen

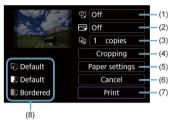

- Sets the printing effects (2).
- (3) Sets the number of copies to print (2).
- (4) Sets the print area (2).
- (5) Sets the paper size, type, and layout (2, 2, 2).
- (6) Returns to the image selection screen.
- (7) Starts the printing.
- (8) The paper size, type, and layout you have set are displayed.

* Depending on the printer, certain settings may not be selectable.

Paper settings



Select [Paper settings].

[^[]] Setting the paper size

	Paper size
9x13cm	
13x18cm	
10x14.8cm	
CreditCard	
4"x6"	
8.5"x11"	
MENU Cancel	SET Next

Select the size of the paper in the printer.

[I] Setting the paper type

0) 🚺 🕽 🗊	Paper type
Photo	
Fast photo	
Default	
MENU Previous	SET Next

Select the type of the paper in the printer.

[19] Setting the page layout

0 D D	Page layout
Bordered	
Borderless	
Bordered i	
Default	
MENU Previous	SET OK

Select the page layout.

Caution

 If the image's aspect ratio is different from the printing paper's aspect ratio, the image may be cropped significantly when you print it as a borderless print. Images may also be printed at lower resolution.

[2] Setting printing of the date/file number

Info to pri	nt with images	
	Off	
	Date	
	File No.	
	Both	
	Default	
		SET OK

- Select [♥]].
- Select what to print.

[^[5]] Setting printing effects (image optimization)




- Select [
].
- Select printing effects.

Caution

- ISO speeds may be misidentified in shooting information printed for images shot at an expanded ISO speed (H).
- [Default] in printing effects and other options refers to default settings determined by the printer manufacturer. For [Default] details, refer to the printer instruction manual.

[^[]] Setting the number of copies

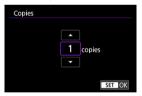

- Select [2].
- Select the number of copies to print.

Cropping the image

Set cropping immediately before printing. Changing other print settings after you crop images may require you to crop the images again.



- 1. Select [Cropping] on the print setting screen.
- 2. Set the cropping frame size, position, and orientation.
 - The image area within the cropping frame will be printed. The shape of the frame (aspect ratio) can be changed in [Paper settings].

Resizing the cropping frame size

Turn the < \leq dial to resize the cropping frame size.

Moving the cropping frame

Press < ** > to move the frame vertically or horizontally.

Switching the orientation of the cropping frame

Pressing the < INFO > button will toggle the cropping frame between the vertical and horizontal orientations.

- 3. Press the < B > button to exit cropping.
 - You can check the cropped image area in the upper left of the print setting screen.

Caution

- Depending on the printer, the cropped image area may not be printed as you specified.
- The smaller the cropping frame, the lower the resolution at which images are printed.

Note

Handling printer errors

 If printing does not resume after you resolve a printer error (such as no ink or paper) and select [Continue], use buttons on the printer. For details on resuming printing, refer to the printer's instruction manual.

Error messages

 If a problem occurs during printing, an error message will appear on the camera screen. After fixing the problem, resume printing. For details on how to fix a printing problem, refer to the printer's instruction manual.

Paper error

Confirm that paper is loaded correctly.

Ink error

Check the printer's ink level and the waste ink tank.

Hardware error

Check for any printer problems other than paper and ink problems.

File error

 The selected image cannot be printed. Images taken with a different camera or images edited with a computer may not be printable.

- Connecting to image.canon
- Automatic Image Transfer

This section describes how to send images to image.canon.

Connecting to image.canon

Link the camera to image.canon to send images directly from the camera.

- A computer or smartphone with a browser and internet connection is required.
- You will need to enter an email address used on your computer or smartphone.
- For instructions on how to use image.canon services and details on countries and regions where it is available, visit the image.canon site (<u>https://image.canon/</u>).
- Separate ISP connection and access point fees may apply.

Steps on the camera (1)

Select [((י)): Wi-Fi/Bluetooth connection].

🗅 AF 🗈 🕅	Ý	<u>0</u>	*
1			
Wi-Fi/Bluetooth con	nection		
Airplane mode	Off		
Wi-Fi settings	Enabl	e	
Bluetooth settings	Enabl	e	
Nickname	XXXX)	(
GPS device settings			
Reset communicatio	n settin	gs	

2. Select [Upload to image.canon].



3. Select [Connect].



4. Select [OK].



 $5. \ \ \, {\rm Scan \ the \ QR \ code \ with \ the \ dedicated \ app.}$



Select [OK].

6. Establish a Wi-Fi connection.



- Connect to an access point via Wi-Fi. Go to step 6 in <u>Wi-Fi Connection</u> via Access Points.
- 7. Confirm that the number is displayed in the dedicated app.



8. Select [OK].

Upload to image.canon				
Settings complete				
To send images autom turn camera off and o				
ОК				
Upload to image.ca	anon			
	Ъ			
	\$			
INFO View info	MENU ᠫ			
• The [jes to [4 6].			

Steps on the computer or smartphone

- 9. Set up camera web link.
 - Follow the instructions to complete the settings on the camera web link settings page.

Images are automatically uploaded to image.canon after the camera starts up (or recovers from auto power off). Original files of images sent to image.canon are retained for 30 days, without storage limitations, and can be downloaded to computers or transferred to other Web services.

- Uploading is not possible during interval timer shooting.
 - AF
 (v)
 (v)
 (v)

 Wi-Fi/Bluetooth connection

 Airplane mode
 Off

 Wi-Fi settings
 Enable

 Bluetooth settings
 Disable

 Nickname
 XXXXX


 GPS device settings

 Reset communication settings
 - 1. Select [((†)): Wi-Fi/Bluetooth connection].

2. Select [Upload to image.canon].



- If the history (☑) is displayed, switch screens with the < ⁵√3 > dial or
 ↔ > as needed.
- 3. Set [Auto send] to [Enable].

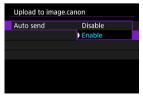

4. Set [Type to send].

Upload to image	.canon
Type to send	Stills only Stills+movies
	Stills+movies

 In [Type to send], you can select the type of images that uploading applies to.

Preparing to Stream

Live Streaming

You can live-stream images from the camera.

Only when streaming, you can use Wireless Remote Control BR-E1 (sold separately). Note that before streaming, you will need to pair the camera with Wireless Remote Control BR-E1 (愛).



Preparing to Stream

Set up "Live streaming" on the camera to enable streaming from the camera.

- Register the camera for image.canon and complete camera link settings as described in Connecting to image.canon.
- Complete the required streaming settings on the YouTube site.
- For instructions, visit the YouTube site.

Steps on the computer or smartphone

- 1. Enable YouTube streaming.
 - Display the settings screen for connected Web services used with image.canon.
 - Next to [YouTube], click or tap [Connect].
 - Sign in to YouTube and allow image.canon access.

Steps on the camera

2. Connect to image.canon.



- For instructions on connecting to image.canon, see <u>Connecting to</u> image.canon.
- A [Live streaming] icon is added once the camera is connected to image.canon.
- If the [Live streaming] icon does not work, see <u>Steps on the computer</u> or <u>smartphone</u> and check the YouTube settings. After setup, selecting [Live streaming] activates the icon.

Caution

Streaming

- YouTube is the only streaming service supported by this camera.
- Before you can use streaming services, you must complete image.canon registration.
- YouTube streaming is subject to change, suspension, or termination without prior notice.
- Canon is in no way responsible for third-party services such as YouTube streaming.
- No image is recorded to the card during streaming (but a card must be in the camera).
- Images are streamed at approx. 6 Mbps for either FHD 2007 (NTSC) or FHD 25007 (PAL).
- Images are streamed horizontally, regardless of the [Y: Add The rotate info] setting.
- Audio may be noisy during streaming. Check for noisy audio in advance by using [PRVW] (@), for example. If noise from the external microphone is distracting, try placing it on the left side of the camera (on the < MIC > external microphone IN terminal side) as far from the camera as possible.
- It is not possible to pair the camera with Wireless Remote Control BR-E1 (sold separately, (2)) after you have set up streaming.
- Wireless Remote Control BR-E1 cannot be used while connected to the camera via Wi-Fi unless you are streaming.
- Remote control from a smartphone is not possible during streaming.

You can also stream by using the camera to select an event that you have set up in advance on the YouTube site (by entering the streaming time and title).

- 1. Complete event settings on the YouTube site.
 - For instructions, visit the YouTube site.
- 2. Set the Mode dial to <



3. Start streaming.



- On the [(יף): Wi-Fi/Bluetooth connection] screen, select [Live streaming].
- If the history (☑) is displayed, switch screens with the < √→ > dial or
 ↔ > as needed.

4. Check the terms of service.



Read the agreement displayed and choose [I Agree].

5. Select an event.



- Select an event that you have added from the YouTube site in advance.
- Up to 20 events are listed.



6. Check the streaming details.



- Select [OK].
- 7. Select [OK].



8. Select [PRVW] or [LIVE].



- Selecting [PRVW] (Preview) enables you to test streaming without releasing images publicly. Useful for checking images before streaming.
- Selecting [LIVE] (Live) enables you to start streaming immediately.

9. Start previewing or streaming.



- Configure recording features, just as in normal movie recording.
- When ready, press the movie shooting button.
- Previewing or streaming starts automatically after [Preparing preview] or [Preparing to stream] is displayed.



- [OPRVW] or [OLIVE] is displayed in the upper right during previewing or streaming, respectively.
- The time that has elapsed since you pressed the movie shooting button is shown on the previewing/streaming screen (1). For streaming, the number of viewers is also indicated (2).
- Check the YouTube site to see how the streamed image looks.

10. Stop previewing or streaming.

- Press the movie shooting button again to stop previewing or streaming.
- After previewing the image, return to step 8 and select [LIVE] to start streaming.

11. Exit streaming mode.



Press the < MENU > button, then select [OK].

Caution

- It will take a moment before streaming begins in step 9. Do not operate the camera while the message is displayed.
- In case of display problems (character corruption) on the camera for text you entered on the YouTube site, enter the text again from the YouTube site in ASCII format (single-byte letters or numbers).

Camera Access Point Mode

Manual IP Address Setup

This section describes how to join a Wi-Fi network via an access point compatible with WPS (PBC mode).

First, check the position of the WPS button and how long to press it. It may take approx. 1 min. to establish a Wi-Fi connection.

1. Select [('(1'): Wi-Fi/Bluetooth connection].

Ó	AF	▲	((†))	Ý	<u>a</u>	*
1						
Wi	-Fi/Blue	tooth	conne	ection		
Air	plane r	node		Off		
Wi	Wi-Fi settings			Enable		
Blu	Bluetooth settings		gs	Enable		
Nic	Nickname			XXXXX		
GP	S devic	e settir	ngs			
Res	set com	nmunic	ation	settin	gs	

2. Select an option.



If the history (☑) is displayed, switch screens with the < ⁵√3 > dial or
 ★ > as needed.

3. Select [Add a device to connect to].



 The following message is displayed if you have selected [Connect to smartphone]. If Camera Connect is already installed, select [Do not display].

Install Camera Connect on the smartphone. Display QR code for download site?
Do not display
Android
iOS

- On the [Connect to smartphone] screen displayed next, select [Connect via Wi-Fi].
- 4. Select [Switch network].



● Displayed when [□], [□], or [□] is selected.

5. Select [Connect with WPS].



Note

 For [Camera access point mode] displayed in step 5, see Camera Access Point Mode.

6. Select [WPS (PBC mode)].



Select [OK].

7. Connect to the access point via Wi-Fi.



- Press the access point's WPS button.
- Select [OK].

8. Select [Auto setting].

IP address setting (IPv4	1)
 Auto setting 	
O Manual setting	
Cancel	ОК

- Select [OK] to access the setting screen for the Wi-Fi function.
- If an error occurs with [Auto setting], see Manual IP Address Setup.

9. Specify the settings for the Wi-Fi function.

[Connect to smartphone]



 On the smartphone's Wi-Fi setting screen, tap the SSID (network name) shown on the camera screen, then enter the password of the access point for the connection.

Go to step 7 in Wi-Fi Connection without Using Bluetooth.

[Remote control (EOS Utility)]



Go to step 7 or 8 in Steps on the computer (2).

[DPrint from Wi-Fi printer]

XXXXX		
	Cancel	

Go to step 6 in Connecting to a Printer via Wi-Fi.

Register image.canon.

Go to step 5 in Connecting to image.canon.



Camera access point mode is a connection mode for connecting the camera directly to each device via Wi-Fi. Displayed when [], [], or [], is selected after [(η): Wi-Fi/Bluetooth connection].

Camera access point mode			
 Easy connection 			
O Manual connection			
Cancel	ОК		

Easy connection

Use the other device to establish a Wi-Fi connection with the SSID shown on the camera screen.

Manual connection

Enter the SSID of the other device to establish a connection. Follow the instructions on the camera screen to complete the connection settings.

Caution


Some printers may not be able to connect when the camera is used as an access point.

If connection in camera access point mode is not possible, you may be able to establish a connection as follows.

- · Establish a Wi-Fi connection via an access point
- · Start access point mode on the printer

The options displayed vary depending on the Wi-Fi function.

1. Select [Manual setting].

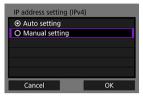

Select [OK].

2. Select an option.

IP address setting (IPv4)			
IP address	192.168.1.2		
Subnet mask	255.255.255.0		
Gateway	Disable		
Cancel	ОК		

- Select an option to access the screen for numerical input.
- To use a gateway, select [Enable], then select [Address].

Gateway	
Enable	
O Disable	
,	Address
	0.0.00
Cancel	ОК

3. Enter the number.



- Turn the < [™]/₁ > dial to move the input position in the upper area, and use the < [™]/₁ > dial or < [™]/₂ > to select numbers to enter. Press the < [®]/₂ > button to enter the selected number.
- To delete the number just entered, press the < MENU > button.
- Select [OK] after the numbers have been entered. Display returns to the screen in step 2.

4. Select [ОК].

IP address settin	ig (IPv4)		
IP address	192.168.1.3		
Subnet mask	255.255.255.0		
Gateway	Disable		
Cancel	ОК		

- When you have completed setting the necessary items, select [OK].
- If you are not sure what to enter, see <u>Checking Network Settings</u>, or ask the network administrator or another person knowledgeable about the network.

Canceling the Pairing

This camera can also be connected to Wireless Remote Control BR-E1 (sold separately, 2) via Bluetooth for remote control shooting.

1. Select [((1)): Wi-Fi/Bluetooth connection].

🛍 AF 🗈 💔	<u>۴</u>	<u>a</u> *
Wi-Fi/Bluetooth con	nection	
Airplane mode	Off	
Wi-Fi settings	Enable	
Bluetooth settings	Enable	
Nickname	XXXXX	
GPS device settings		
Reset communication	n settings	



2. Select [Sconnect to Wireless Remote].



3. Select [Add a device to connect to].



4. Pair the devices.



- When the [Pairing] screen appears, press and hold the <W> and <T> buttons on the BR-E1 simultaneously for at least 3 sec.
- After a message confirms that the camera is paired with the BR-E1, press the < (R) > button.

5. Set up the camera for remote shooting.

- When shooting still photos, select [3] or [3] as the drive mode (2).
- For movie recording, set [C: Remote control] to [Enable].
- For instructions after the pairing is complete, refer to the BR-E1's Instruction Manual.

Caution

 Bluetooth connections consume battery power even after the camera's auto power off is activated.

Note

 When you will not use Bluetooth, setting [Bluetooth settings] to [Disable] is recommended (2). Before pairing with a different BR-E1, clear the information about the connected remote control.

1. Select [(1): Wi-Fi/Bluetooth connection].

Ó	AF		((1))	Ý	D	*
1						
Wi	-Fi/Blue	tooth c	onne	ction		
Air	plane r	node		Off		
Wi	-Fi sett	ings		Enabl	e	
Blu	etooth	setting		Enabl	e	
Nickname			XXXXX			
GP	S devic	e settin	gs			
Res	set com	nmunica	tion	settin	gs	

2. Select [* Connect to Wireless Remote].



3. Select [Delete connection information].



4. Select [OK].

Delete connection information	
Delete	
XXXXX	
Cancel OK	

Follow these steps to reconnect to devices or Web services with registered connection settings.

1. Select [(1): Wi-Fi/Bluetooth connection].

🗅 AF 🗈 💜	Ý 🛄 🔸
1	
Wi-Fi/Bluetooth con	nection
Airplane mode	Off
Wi-Fi settings	Enable
Bluetooth settings	Enable
Nickname	XXXXX
GPS device settings	
Reset communication	on settings

2. Select an option.



- Select an option to connect to via Wi-Fi or Bluetooth from the past connections listed. If the option is not listed, turn the < Solver > dial to switch screens.
- The history is not displayed when [Connection history] is set to [Hide]
 (
 ^[6]).

3. Operate the connected device.

[] Smartphone

- Start Camera Connect.
- If the smartphone's connection destination has been changed, restore the setting to connect via Wi-Fi to the camera or the same access point as the camera.

When directly connecting the camera to a smartphone via Wi-Fi, "_Canon0A" is displayed at the end of the SSID.

[-] Computer

- On the computer, start the EOS software.
- If the computer's connection destination has been changed, restore the setting to connect via Wi-Fi to the camera or the same access point as the camera.

When directly connecting the camera to a computer via Wi-Fi,

"_Canon0A" is displayed at the end of the SSID.

[凸] Printer

 If the printer's connection destination has been changed, restore the setting to connect via Wi-Fi to the camera or the same access point as the camera.

When directly connecting the camera to a printer via Wi-Fi,

"_Canon0A" is displayed at the end of the SSID.

You can register up to 10 connection settings for the wireless communication functions.

Select [(۱)): Wi-Fi/Bluetooth connection].

🖸 AF 🗈 애) <u> </u>	*
1		
Wi-Fi/Bluetooth con	nection	
Airplane mode	Off	
Wi-Fi settings	Enable	
Bluetooth settings	Enable	
Nickname	XXXXX	
GPS device settings		
Reset communicatio	on settings	

2. Select an option.



- If the history (𝔅) is displayed, switch screens with the < Super > dial or
 ★ > as needed.
- For details on [[Connect to smartphone], see <u>Connecting to a</u> <u>Smartphone</u>.
- For details on [Remote control (EOS Utility)], see Connecting to a Computer via Wi-Fi.
- For details on [Print from Wi-Fi printer], see Connecting to a Printer via Wi-Fi.
- When sending images to a Web service, see <u>Sending Images to a Web</u> <u>Service</u>.

Note

To delete connection settings, see <u>Changing or Deleting Connection Settings</u>.

You can temporarily disable Wi-Fi and Bluetooth functions.

1. Select [('1'): Airplane mode].

🗅 AF 🗈 🚺	(†)) 🗣	ġ.	*
1			
Wi-Fi/Bluetooth co	nnection		
Airplane mode	Off		
Wi-Fi settings	Enable	e	
Bluetooth settings	Enable	9	
Nickname	XXXXX		
GPS device setting			
Reset communicat	ion setting	gs	

2. Set to [On].

Airplane mode	
Off	
On	
SET OK	

• [1] is displayed on the screen.

Note

 [1] may not be displayed in still photo shooting, movie recording, or playback, depending on display settings. If it is not displayed, press the < INFO > button repeatedly to access detailed information display. 1. Select [((1)): Wi-Fi settings].

Ô	AF	►	((Ţ))	Ý	ġ.	*
1						
Wi	-Fi/Blue	tooth	conne	ction		
Air	plane r	node		Off		
Wi	Fi sett	ings		Enabl	e	
Blu	etooth	settin	gs	Enabl	e	
Nic	kname			XXXX>	(
GP	S devic	e settir	ngs			
Res	et com	nmunic	ation	settin	gs	

2. Select an option.

Wi-Fi	Enable
Connection history	Show
Send to smartphone	after shot
MAC address	

Wi-Fi

When the use of electronic devices and wireless devices is prohibited, such as on board airplanes or in hospitals, set it to [Disable].

Connection history

You can set the connection history for devices connected via Wi-Fi to [Show] or [Do not display].

Send to smartphone after shot

Images can be transferred to a smartphone automatically (2).

MAC address

You can check the MAC address of the camera.

1. Select [((†)): Bluetooth settings].

Ó	AF		((†))	۴	â	*
1						
Wi	-Fi/Blue	etooth o	conne	ection		
Air	plane i	node		Off		
Wi	Fi sett	ings		Enabl	e	
Blu	etooth	setting	gs	Enabl	e	
Nic	kname			XXXX>	(
GP	S devic	e settir	igs			
Res	et con	nmunic	ation	settin	gs	

2. Select an option.

Bluetooth settings	
Bluetooth	Enable
Check connection	information
Bluetooth address	
	MENU ᠫ

Bluetooth

If you will not use the Bluetooth function, select [Disable].

Check connection information

You can check the name and communication status of the paired device.

Bluetooth address

You can check the camera's Bluetooth address.

Nickname

You can change the camera nickname (displayed on smartphones and other cameras) as needed.

1. Select [('j'): Nickname].

Û	AF	►	((p))	Ý	â	*		
1								
Wi	-Fi/Blue	tooth c	onne	ction				
Air	plane r	node		Off				
Wi	Wi-Fi settings			Enable				
Blu	etooth	setting		Enable				
Nic	kname			XXXX)	(
GP:	S devic	e settin	gs					
Res	et com	nmunica	tion	settin	gs			

2. Enter text using the <u>Virtual Keyboard Operations</u>.



• When you finish entering characters, press the < MENU > button.

- ☑ <u>GP-E2</u>
- Smartphone
- GPS Connection Display

You can geotag images with GPS Receiver GP-E2 (sold separately) or a Bluetoothcompatible smartphone.

GP-E2

- 1. Attach GP-E2 to the camera.
 - Attach GP-E2 to the camera's hot shoe and turn it on. For details, refer to the GP-E2 Instruction Manual.
- 2. Select [('(1'): GPS device settings].

Ó	AF		((†))	Ý	â	*
1						
Wi	-Fi/Blue	etooth o	onne	ction		
Air	plane r	node		Off		
Wi	Fi sett	ings		Enabl	e	
Blu	etooth	setting	IS	Enabl	e	
Nic	kname			XXXX)	(
GP	S devic	e settin	gs			
Res	et con	nmunica	ation	settin	gs	

3. In [Select GPS device], select [GPS receiver].



- 4. Take the picture.
 - For details on [Set up], refer to the GP-E2 Instruction Manual.

Caution

Precautions when using GP-E2

- Before use, check the countries and regions where use of GPS is allowed, and follow local regulations.
- Update the GP-E2 firmware to Ver. 2.0.0 or later. Firmware updating requires an interface cable. For updating instructions, visit the Canon website.
- GP-E2 cannot be connected to the camera with a cable.
- The camera does not record the shooting direction.

Complete these settings after installing the dedicated Camera Connect app (
) on the smartphone.

- 1. On the smartphone, activate location services.
- 2. Establish a Bluetooth connection.
 - Start Camera Connect and pair the camera and smartphone via Bluetooth.
- 3. Select [(1): GPS device settings].



4. In [Select GPS device], select [Smartphone].



- 5. Take the picture.
 - Images are geotagged with the information from the smartphone.

You can check the status of smartphone location information acquisition in the GPS connection icon on the screens for still photo shooting or movie recording (O and O, respectively).

- Gray: Location services are off
- Blinking: Location information cannot be acquired
- On: Location information acquired

For details on how GPS connection status is indicated when GP-E2 is used, refer to the GP-E2 Instruction Manual.

Geotagging images as you shoot

Images you shoot while the GPS icon is on are geotagged.

Geotagging information

You can check the location information added to your shots on the shooting information screen (愛).



- (1) Latitude
- (2) Longitude
- (3) Elevation
- (4) UTC (Coordinated Universal Time)

Caution

- The smartphone can acquire location information only while it is paired with the camera via Bluetooth.
- Direction information is not acquired.
- Acquired location information may not be accurate, depending on traveling conditions or smartphone status.
- It may take some time to acquire location information from the smartphone after you turn the camera on.
- Location information is no longer acquired after any of the following operations.
 - · Pairing with a wireless remote control via Bluetooth
 - · Turning the camera off
 - · Quitting Camera Connect
 - · Deactivating location services on the smartphone
- Location information is no longer acquired in any of the following situations.
 - · The camera power turns off
 - · The Bluetooth connection is ended
 - · The smartphone's remaining battery level is low

Note

- Coordinated Universal Time, abbreviated as UTC, is essentially the same as Greenwich Mean Time.
- For movies, the GPS information initially acquired is added.

To change or delete the connection settings, terminate the Wi-Fi connection first.

1. Select [⁽⁽†⁾): Wi-Fi/Bluetooth connection].

🖸 AF 🗈 애)
1	
Wi-Fi/Bluetooth cor	inection
Airplane mode	Off
Wi-Fi settings	Enable
Bluetooth settings	Enable
Nickname	XXXXX
GPS device settings	
Reset communication	on settings

2. Select an option.




If the history (𝔅) is displayed, switch screens with the <⁵√√ > dial or
 ★ > as needed.

3. Select [Edit/delete device].



- You can change the Bluetooth connection by selecting a smartphone labeled with [3] in gray. After the [Connect to smartphone] screen is displayed, select [Pair via Bluetooth], then press the < > button on the next screen.
- 4. Select the device for which to change or delete the connection settings.

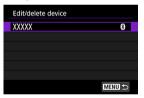

5. Select an option.



• Change or delete the connection settings on the displayed screen.

Change device nickname

You can change the nickname using the virtual keyboard (2).

Viewable imgs (2)

Displayed when [Connect to smartphone] is selected. Settings will appear at the bottom of the screen.

Delete connection information

When deleting connection information for a paired smartphone, also delete the camera information registered on the smartphone (\bigotimes).

Note

To delete image.canon connection settings, visit the image.canon website.

All wireless communication settings can be deleted. By deleting the wireless communication settings, you can prevent their information from being exposed when you lend or give your camera to other people.

1. Select [((j)): Reset communication settings].

Ô	AF		((†))	Ý	<u>a</u>	*		
1								
Wi-	-Fi/Blue	tooth co	onne	ction				
Air	plane r	node		Off				
Wi	Wi-Fi settings			Enable				
Blu	etooth	setting	s	Enable				
Nic	kname			XXXX)	(
GP	S devic	e setting	gs					
Res	et com	nmunica	tion	settin	gs			

2. Select [OK].



Caution

If you have paired the camera with a smartphone, on the smartphone's Bluetooth settings screen, delete the connection information of the camera for which you restored default wireless communication settings.

Note

 All wireless communication settings can be cleared by selecting the [Communication settings] option for [Other settings] in [Y: Reset camera].

View Info Screen

You can check error details and the camera's MAC address.

Select [(יוֹי): Wi-Fi/Bluetooth connection].

🗂 AF 🗈 애) 🐓	<u>n</u>	*
1			
Wi-Fi/Bluetooth con	nection		
Airplane mode	Off		
Wi-Fi settings	Enabl	e	
Bluetooth settings	Enabl	e	
Nickname	XXXX)	(
GPS device settings			
Reset communication	on settin	gs	

2. Press the < INFO > button.


	Conn	ect to smartp	hone	
	ļ		Ъ	L.
Ľ		LIVE	0 00	ľ
IN	FO View i	nfo	MENU	Ð

• The [View info] screen appears.

View info	
MAC address	00:00:00:00:00:00
	MENU 🕤

• If an error has occurred, press the < () > button to display error details.

Virtual Keyboard Operations

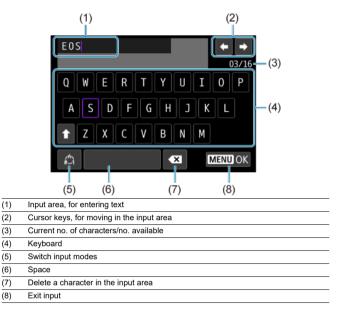

Use the < is > dial to move within (1).

- Use < ⅔ >, the < ⁵√⁵ > dial, or < ↔ > to move within (2) and (4)–(7).
- Press the < () > button to confirm input or when switching input modes.

When an error occurs, display the details of the error by following one of the procedures below. Then, eliminate the cause of the error by referring to the examples shown in this chapter.

- On the [View info] screen, press the < () > button.
- Select [Error details] on the [Wi-Fi on] screen.

Click the following error numbers to jump to the corresponding section.

11	<u>12</u>						
<u>21</u>	<u>22</u>	<u>23</u>					
<u>61</u>	<u>64</u>	<u>65</u>]				
<u>91</u>			-				
<u>121</u>	<u>125</u>	<u>127</u>]				
<u>130</u>	<u>131</u>	<u>133</u>	<u>134</u>	<u>135</u>	<u>136</u>	<u>137</u>	<u>138</u>
<u>141</u>	<u>142</u>						

Note

 When an error occurs, [Err**] is displayed in the upper right of the [Wi-Fi/ Bluetooth connection] screen. It disappears when the camera's power is set to <OFF>.

11: Connection target not found

- In the case of []], is Camera Connect running?

In the case of [], is EOS Utility running?

- Start EOS Utility and try to connect again (2).
- Are the camera and the access point set to use the same encryption key for authentication?
 - This error occurs if the encryption keys do not match when the authentication method for encryption is [Open system].
 Check upper- and lower-case letters, and make sure the correct encryption key for authentication is set on the camera (

12: Connection target not found

- Are the target device and access point turned on?
 - Turn on the target device and access point, then wait a while. If a connection still cannot be established, perform the procedures to establish the connection again.

21: No address assigned by DHCP server

What to check on the camera

- On the camera, the IP address is set to [Auto setting]. Is this the correct setting?
 - If no DHCP server is used, configure the setting after setting the IP address to [Manual setting] on the camera (愛).

What to check on the DHCP server

- Is the power of the DHCP server on?
 - Turn on the DHCP server.
- Are there enough addresses for assignment by the DHCP server?
 - · Increase the number of addresses assigned by the DHCP server.
 - Remove devices assigned addresses by the DHCP server from the network to reduce the number of addresses in use.
- Is the DHCP server working correctly?
 - Check the DHCP server settings to make sure it is working correctly as a DHCP server.
 - · If applicable, ask your network administrator to ensure the DHCP server is available.

22: No response from DNS server

What to check on the camera

- On the camera, the DNS address is set to [Manual setting]. Is this the correct setting?
 - If no DNS server is used, set the camera's DNS address setting to [Disable] (2).
- On the camera, does the DNS server's IP address setting match the server's actual address?
 - Configure the IP address on the camera to match the actual DNS server address (
 ⁽²⁾).

What to check on the DNS server

- Is the power of the DNS server on?
 - Turn the DNS server on.
- Are the DNS server settings for IP addresses and the corresponding names correct?
 - On the DNS server, make sure IP addresses and the corresponding names are entered correctly.
- Is the DNS server working correctly?
 - Check the DNS server settings to make sure the server is working correctly as a DNS server.
 - · If applicable, ask your network administrator to ensure the DNS server is available.

What to check on the network as a whole

- Does your network include a router or similar device that serves as a gateway?
 - If applicable, ask your network administrator for the network gateway address and set it on the camera (2).
 - Make sure that the gateway address setting is correctly entered on all network devices including the camera.

23: Device with same IP address exists on selected network

Is another device on the camera network using the same IP address as the camera?

- Change the camera's IP address to avoid using the same address as another device on the network. Otherwise, change the IP address of the device that has a duplicate address.
- If the camera's IP address is set to [Manual setting] in network environments using a DHCP server, change the setting to [Auto setting] (2).

Note

Responding to error messages 21-23

- Also check the following points when responding to errors numbered 21–23. Are the camera and the access point set to use the same password for authentication?
 - This error occurs if the passwords do not match when the authentication method for encryption is set to [Open system]. Check upper- and lower-case letters, and make sure the correct password for authentication is set on the camera (G).

61: Selected SSID wireless LAN network not found

- Are any obstacles blocking the line of sight between the camera and the antenna of the access point?
 - Move the antenna of the access point to a position clearly visible from the point of view of the camera.

What to check on the camera

- Does the SSID set on the camera match that of the access point?
 - Check the SSID at the access point, then set the same SSID on the camera (2).

What to check at the access point

- Is the access point turned on?
 - Turn on the power of the access point.
- If filtering by MAC address is active, is the MAC address of the camera in use registered at the access point?
 - Register the MAC address of the camera used to the access point (2).

64: Cannot connect to wireless LAN terminal

- Are the camera and the access point set to use the same encryption method?
 - The camera supports the following encryption methods: WEP, TKIP, and AES (2).
- If filtering by MAC address is active, is the MAC address of the camera in use registered at the access point?
 - Register the MAC address of the camera used to the access point. The MAC address can be checked on the [MAC address] screen (2).

65: Wireless LAN connection lost

- Are any obstacles blocking the line of sight between the camera and the antenna of the access point?
 - Move the antenna of the access point to a position clearly visible from the point of view of the camera.
- The wireless LAN connection was lost, for some reason, and the connection cannot be restored.
 - The following are possible reasons: excessive access to the access point from another device, a microwave oven or similar appliance in use nearby (interfering with IEEE 802.11b/g/n (2.4 GHz band)), or influence of rain or high humidity.

91: Other error

- A problem other than error code number 11 to 83 occurred.
 - Turn the camera's power switch off and on.

121: Not enough free space on server

- The target Web server does not have enough free space.
 - Delete unnecessary images on the Web server, check the free space on the Web server, then try sending the data again.

125: Check the network settings

- Is the network connected?
 - · Check the connection status of the network.

127: An error has occurred

- A problem other than error code number 121 to 126 occurred while the camera is connected to the Web service.
 - · Try again to establish the Wi-Fi connection to image.canon.

130: The server is currently busy Please wait a moment and try again

- The image.canon site is busy at the moment.
 - · Try accessing image.canon over Wi-Fi again later.

131: Try again

- An error occurred when connecting to image.canon over Wi-Fi.
 - · Try again to establish the Wi-Fi connection to image.canon.

133: Cannot log in to Web service

- An error occurred when signing in to image.canon.
 - · Check the image.canon settings.
 - · Try accessing image.canon over Wi-Fi again later.

134: Set the correct date and time

- The date, time, and time zone settings are incorrect.
 - Check the [": Date/Time/Zone] settings.

135: Web service settings have been changed

- The settings for image.canon were changed.
 - · Check the image.canon settings.

136: The QR code shown on the camera was not scanned correctly by the dedicated app. Try camera web link setup again.

- The QR code was not scanned correctly by the smartphone.
 - Reconfigure camera web link settings and scan the QR code displayed again on the camera.

137: The QR code shown on the camera has expired. Try camera web link setup again.

- The QR code displayed has expired.
 - Reconfigure camera web link settings and scan the QR code displayed again on the camera.

138: Communication error with server. Please send again.

• Could not connect to the server for some reason.

 Check the status of cloud RAW image processing online at image.canon and try uploading the images again.

141: Printer is busy. Try connecting again.

Is the printer performing a printing process?

- Try again to establish the Wi-Fi connection to the printer after the printing process is finished.
- Is another camera connected to the printer via Wi-Fi?
 - Try again to establish the Wi-Fi connection to the printer after the Wi-Fi connection to the other camera has been terminated.

142: Could not acquire printer information. Reconnect to try again.

Is the power of the printer on?

• Try again to establish the Wi-Fi connection after turning on the printer.

- Distance between the camera and the smartphone
- Installation location of access point antenna
- Nearby electronic devices
- Precautions for using multiple cameras

If the transmission rate drops, the connection is lost, or other problems occur when using the wireless communication functions, try the following corrective actions.

If the camera is too far from the smartphone, a Wi-Fi connection may not be established even when Bluetooth connection is possible. In this case, bring the camera and the smartphone closer together, then establish a Wi-Fi connection.

Installation location of access point antenna

- When using indoors, install the device in the room where you are using the camera.
- Install the device where people or objects do not come between the device and the camera.

Nearby electronic devices

If the Wi-Fi transmission rate drops because of the influence of the following electronic devices, stop using them or move further away from the devices to transmit communication.

 The camera communicates over Wi-Fi via IEEE 802.11b/g/n using radio waves in the 2.4 GHz band. For this reason, the Wi-Fi transmission rate will drop if there are Bluetooth devices, microwave ovens, cordless telephones, microphones, smartphones, other cameras, or similar devices operating on the same frequency band nearby.

Precautions for using multiple cameras

- When connecting multiple cameras to one access point via Wi-Fi, make sure the cameras' IP addresses are different.
- When multiple cameras are connected to one access point via Wi-Fi, the transmission rate drops.
- When there are multiple IEEE 802.11b/g/n (2.4 GHz band) access points, leave a gap of five channels between each Wi-Fi channel to reduce radio wave interference. For example, use channels 1, 6, and 11, channels 2 and 7, or channels 3 and 8.

Security

If security settings have not been properly set, the following problems may occur.

- Transmission monitoring Third parties with malicious intent may monitor wireless LAN transmissions and attempt to acquire the data you are sending.
- Unauthorized network access Third parties with malicious intent may gain unauthorized access to the network you are using to steal, modify, or destroy information. Additionally, you could fall victim to other types of unauthorized access such as impersonation (where someone assumes an identity to gain access to unauthorized information) or springboard attacks (where someone gains unauthorized access to your network as a springboard to cover their tracks when infiltrating other systems).

It is recommended to make use of the systems and functions to thoroughly secure your network, preventing these types of problems from occurring.

Windows

Open the Windows [Command Prompt], then enter ipconfig/all and press the <Enter> key. In addition to the IP address assigned to the computer, the subnet mask, gateway, and DNS server information are also displayed.

macOS

In macOS, open the [**Terminal**] application, enter ifconfig -a, and press the <Return> key. The IP address assigned to the computer is indicated in the [**enX**] item (X: number) next to [**inet**], in the format "****.****.***.

For information about the [Terminal] application, refer to the macOS help.

To avoid using the same IP address for the computer and other devices on the network, change the rightmost number when configuring the IP address assigned to the camera in the processes described in <u>Manual IP Address Setup</u>. Example: 192.168.1.10 Wireless communication status can be checked on the screen.



Quick Control screen

Information display screen during playback



- (1) Wi-Fi function
- (2) Bluetooth function
- (3) Wireless signal strength

Communica	tion Status		Screen
Communica	aion Status	Wi-Fi Function	Wireless Signal Strength
Not connected	Wi-Fi: Disable	() TeOFF	Off
Not connected	Wi-Fi: Enable	() POFF	Uli
Conne	ecting	膏 (Blinking)	Ψ
Conne	ected	([•	¶.
Sendin	g data	((•	¶.i
Connecti	on error	🙃 (Blinking)	Ψ

Bluetooth Function Indicator

Bluetooth Function	Connection Status	Screen
Other than [Disable]	Bluetooth connected	0
	Bluetooth not connected	8
[Disable]	Bluetooth not connected	Not displayed

This chapter describes menu settings on the set-up [4] tab.

★ to the right of page titles indicates functions only available in Creative Zone modes (<Fv >/<P >/<Tv >/<Av >/<M >/).

- Tab Menus: Set-up
- Folder Settings
- File Numbering
- Card Formatting
- Auto Rotate
- Adding Orientation Information to Movies
- Date/Time/Zone
- Language
- Video System
- Help
- Shooting Mode Guide
- Beeps
- Volume
- Power Saving
- <u>Screen and Viewfinder Display</u>
- Screen Brightness
- Viewfinder Brightness
- Fine-Tuning Viewfinder Color Tone
- <u>UI Magnification</u>
- HDMI Resolution
- <u>Touch Control</u>
- Multi-Function Lock
- Focus Mode Switch (AF/MF)
- <u>Sensor Cleaning</u>
- <u>App Selection for USB Connections</u>
- <u>Resetting the Camera</u>
- Custom Shooting Mode (C1, C2) ☆
- Battery Information
- Copyright Information ☆
- Other Information

Set-up 1

	â	AF	►		((†))	Ý	<u>.</u>	\star
1	2	3	4	5				
	Sele	ect fol	der					
	File	numt	perin	g		Conti	nuous	-
	For	nat ca	ard					-
	Aut	o rota	ite			On	旦	-
	Add	P, r	otate	e inf	0	Disab	le	_
	Dat	e/Time	e/Zor	ne		02/02/	22 10:	00 —
	Lan	guage	- C			Engli	sh	-

- (1) Select folder
 - <u>Creating a Folder</u>
- (2) File numbering
- (3) Format card
- (4) Auto rotate
- (5) Add Trotate info
- (6) Date/Time/Zone
- (7) Language
- Set-up 2

Ô	AF	►	((†))	Ý	<u>.</u>	\star
1 2	3					
Vid	eo sys	tem		For N	TSC	
He	p text	size		Small		-
Mc	de gu	ide		Enabl	e	-
Bee	ep			Enabl	e	-
Vo	ume					-
Pov	ver sa	ving				-

- (1) Video system
- (2) Help text size
- (3) Mode guide
- (4) <u>Beep</u>
- (5) Volume
- (6) Power saving

Set-up 3

I	Ô	AF		Þ	((†))	Ý		<u>0</u>	\star	
		3	4							
	Scr	een/\	viewf	inde	er dis	play			AUTO1	
	Scr	een l	origh	tnes	is				4	-
	Vie	wfin	der b	righ	tnes	s		1	AUTO	_
	Fin	e-tur	ie VF	colo	or to	ne				-
	UI	magr	nifica	tion		Disa	ble			_
	HD	MI re	esolu	tion		Auto	С			-

- (1) Screen/viewfinder display
- (2) Screen brightness
- (3) Viewfinder brightness
- (4) Fine-tune VF color tone
- (5) UI magnification
- (6) HDMI resolution

• Set-up 4

🗅 AF 🗈	((†)) 🌱	<u>n</u>	\star	
1 2 3 4 5				
Touch control	Stan	dard		
Multi function lo	ock			
			_	
Sensor cleaning			_	
Choose USB con	nection ap	р		

- (1) Touch control
- (2) Multi function lock
- (3) Switch (AF/MF)
- (4) Sensor cleaning
- (5) Choose USB connection app

• Set-up 5

Ô	AF	▲	((†))	Ý	<u>0</u>	\star	
		4 5					
Rese	et cam	nera					(1
Cus	tom sl	hooting	g moo	de (C1,	C2)	-	(2
Batt	ery in	fo.				_	(3
Сор	yright	t inforn	natior	า		-	(4
Mar	nual/so	oftware	e URL			_	(5
Cert	ificati	ion Log	o Dis	play		-	(6
Firm	iware			Ver.	1.0.0	_	(7

- (1) Reset camera 🕁
- (2) Custom shooting mode (C1, C2) ☆
- (3) Battery info.
- (4) Copyright information
- (5) Manual/software URL
- (6) Certification Logo Display 🛧
- (7) Firmware

Folder Settings

- Creating a Folder
- Selecting a Folder

You can freely create and select the folder where the captured images are to be saved.

Creating a Folder

1. Select [4: Select folder].




2. Select [Create folder].



3. Select [OK].



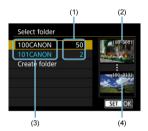

- (1) Number of images in folder
- (2) Lowest file number
- (3) Folder name
- (4) Highest file number
- Select a folder on the folder selection screen.
- Captured images are stored in your selected folder.

Note

Folders

Folders are named as in "100CANON," with a three-digit folder number followed by five letters or numbers. A folder can contain up to 9999 images (file number 0001–9999). When a folder becomes full, a new folder with the folder number increased by one is created automatically. Also, if manual reset (3) is executed, a new folder will be created automatically. Folders numbered from 100 to 999 can be created.

Creating folders with a computer

With the card open on the screen, create a new folder with "DCIM" as the name. Open the DCIM folder and create as many folders as necessary to save and organize your images. "100ABC_D" is the required format for folder names, and the first three digits must be a folder number in the range 100–999. The last five characters can be any combination of upper- and lower-case letters from A to Z, numerals, and the underscore "_". The space cannot be used. Also note that two folder names cannot share the same three-digit folder number (for example, "100ABC_D" and "100W_XYZ") even if the remaining five characters in each name are different.

File Numbering

- Continuous
- Muto Reset
- Manual Reset


The captured images saved in a folder are assigned a file number from 0001 to 9999. You can change how the image files are numbered.



1. Select [4: File numbering].



2. Set the item.

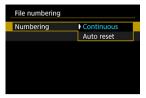

- Select [Numbering].
- Select [Continuous] or [Auto reset].

File numbering	
Numbering	Continuous
Manual reset	
	MENU 🗂

If you want to reset the file numbering, select [Manual reset] (2).




 Select [OK] to create a new folder, and the file number will start with 0001.

Caution

 If the file number in folder 999 reaches 9999, shooting will not be possible even if the card still has free space. After a message requesting you to replace the card is displayed, switch to a new card.

For continuous file numbering regardless of switching cards or creating folders

Even after you replace the card or create a new folder, the file numbering continues in sequence up to 9999. This is useful when you want to save images numbered anywhere between 0001 to 9999 on multiple cards or in multiple folders into one folder on a computer. If the replacement card or existing folder already contains images recorded previously, the file numbering of the new images may continue from the file numbering of the existing images on the card or in the folder. If you want to use continuous file numbering, it is recommended that you use a newly formatted card each time.

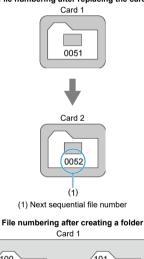


File numbering after replacing the card




For restarting file numbering from 0001 after switching cards or creating folders

When you replace the card or create a folder, the file numbering restarts from 0001 for the new images saved. This is useful if you want to organize images by cards or folders. If the replacement card or existing folder already contains images recorded previously, the file numbering of the new images may continue from the file numbering of the existing images on the card or in the folder. If you want to save images with the file numbering starting from 0001, use a newly formatted card each time.

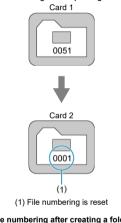

File numbering after replacing the card

File numbering after creating a folder

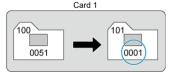

For resetting file numbering to 0001 or starting from 0001 in new folders

When you reset the file numbering manually, a new folder is created automatically and the file numbering of images saved to that folder starts from 0001.

This is useful, for example, if you want to use different folders for the images taken yesterday and the ones taken today.

Card Formatting

If the card is new or was previously formatted (initialized) by another camera or computer, format the card with this camera.

Caution

When the card is formatted, all images and data on the card will be erased. Even protected images will be erased, so make sure there is nothing you need to keep. If necessary, transfer the images and data to a computer, etc. before formatting the card.

1. Select [4: Format card].

Ľ	1	AF	▲		((†))	¥	â	*
1	2	3	4	5				
5	Selec	t fol	der					
F	ile r	numt	perin	g		Conti	nuous	
I	orm	nat ca	ard					
1	Auto	rota	te			On		
1	Add	' — r	otate	inf		Disab	le	
[Date	/Time	e/Zor	ne	(02/02/	22 10:0	00
l	ang	uage	- 69			Englis	sh	

2. Format the card.

Format card
Format card All data will be lost!
7.76 GB used 7.81 GB
Cancel OK
• Select [OK].
Format card
Format card All data will be lost!
7.76 GB used 7.81 GB
Cancel OK

 For low-level formatting, press the < INFO > button to add a checkmark [√] to [Low level format], then select [OK].

Tonditions requiring card formatting

- The card is new.
- The card was formatted by a different camera or a computer.
- The card is full of images or data.
- A card-related error is displayed (2).

Low-level formatting

- Perform low-level formatting if the card's writing or reading speed seems slow or if you
 want to totally erase the data on the card.
- Since low-level formatting will format all recordable sectors on the card, the formatting will take longer than normal formatting.
- During low-level formatting, you can cancel formatting by selecting [Cancel]. Even in this case, normal formatting will already be complete and you can use the card as usual.

Card file formats

- SD/SDHC cards will be formatted in FAT. SDXC cards will be formatted in exFAT.
- Individual movies recorded to exFAT-formatted cards are recorded as a single file (without splitting them into multiple files) even if they exceed 4 GB, so the resulting movie file will exceed 4 GB.

Caution

- It may not be possible to use SDXC cards formatted with this camera in other cameras. Also note that exFAT-formatted cards may not be recognized by some computer operating systems or card readers.
- Formatting or erasing data on a card does not completely erase the data. Be aware
 of this when selling or discarding the card. When disposing of cards, take steps to
 protect personal information if necessary, as by physically destroying cards.

Note

- The card capacity displayed on the card format screen may be smaller than the capacity indicated on the card.
- This device incorporates exFAT technology licensed from Microsoft.



You can change the auto rotation setting that straightens images shot in vertical orientation when they are displayed.

1. Select [4: Auto rotate].

B	â	AF		A	Ý	<u>0</u>	*
1	2	3	4	5			
	Selec	t fol	der				
	File r	umb	berir	ıg	Cor	ntinuous	
	Form	at ca	ard				
	Auto	rota	te		On		
	Add	- ro	otat	e info	Dis	able	
	Date	/Time	e/Zo	ne	02/0	2/22 10	:00
	Lang	uage	- G		Eng	glish	

2. Select an option.

Ó		AF		►	Ý	â	*
1			4				
A	uto	rota	te				
					On Off		
					Off		

• On

Automatically rotates images for display on both the camera and computers.

• On 🛄

Automatically rotates images only for display on computers.

Off

Images are not automatically rotated.

Caution

 Images captured with auto rotation set to [Off] will not rotate during playback even if you later set auto rotation to [On].

Note

- If a picture is taken while the camera is aimed up or down, automatic rotation to the proper orientation for viewing may not be performed correctly.
- If images are not rotated automatically on a computer, try using EOS software.

For movies recorded with the camera held vertically, orientation information indicating which side is up can be added automatically to enable playback in the same orientation on smartphones or other devices.

1. Select [4: Add Trotate info].

Ľ	۲ الا	AF		▲	¥ .	<u>0</u>	*
1	2	3	4	5			
5	elec	t fold	ler				
F	ile r	umb	erir	ıg	Cor	ntinuous	
F	orm	at ca	rd				
A	Auto	rotat	te		On		
A	٨dd	г, rc	tat	e info	Disa	able	
[Date/Time/Zone				02/0	2/22 10	:00
l	ang	uage	ą,		Eng	llish	

2. Select an option.

Add 🖳 rotate info		
Enable		
Disable		
	SET OK	

Enable

Play movies on smartphones or other devices in the orientation in which they were recorded.

Disable

Play movies horizontally on smartphones or other devices, regardless of the recording orientation.

Caution

 Movies are played horizontally on the camera and via HDMI video output, regardless of this setting. When you turn on the power for the first time or if the date/time/zone have been reset, follow these steps to set the time zone first.

By setting the time zone first, you can simply adjust this setting as needed in the future and the date/time will be updated to match it.

Since the captured images will be appended with the shooting date and time information, be sure to set your date/time.

1. Select [4: Date/Time/Zone].



2. Set the time zone.



Turn the < 5 > dial to select [Time zone].

Zone/Time difference				
02/02/2022 1	0:00:00			
Zone				
London				
Time difference	+ 00 : 00			
	Cancel			


Press the < (P) > button.

02/02/2022 10:0	00:00
São Paulo	-03:00
Fernando de Noronha	-02:00
Azores	-01:00
London	±00:00
Paris	+01:00

- Select the time zone.
- If your time zone is not listed, press the < MENU > button, then set the difference from UTC in [Time difference].

Zone/Time difference						
02/02/2022 10:00:00						
Zone						
Time difference	+ 00 : 15					
• • OK	Cancel					

- Select a [Time difference] option (+-/hour/minute), then press the < (P) > button.
- After setting the item, press the < () > button.
- After entering the time zone or time difference, select [OK].
- 3. Set the date and time.

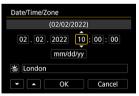

- Select an item, then press the < (P) > button.

4. Set daylight saving time.



- Set it as necessary.
- Select [☆] or [↓], then press the <

 > button.
- When the daylight saving time is set to [*], the time set in step 3 will advance by 1 hour. If [*] is set, the daylight saving time will be canceled and the time will go back by 1 hour.

5. Exit the setting.



Caution

- The date, time, and time zone settings may be reset when the camera is stored without the battery, when the battery is exhausted, or when it is exposed to freezing temperatures for an extended period. If this happens, set them once again.
- After changing [Zone/Time difference], check that the correct date/time are set.

Note

 Auto power off time may be extended while the [Y: Date/Time/Zone] screen is displayed. 1. Select [♥: Language [₽].

Ľ.		AF	►		((†))	4	<u>à</u>	*
1	2	3	4	5				
S	elec	t fol	der					
F	ile ı	numt	berin	g		Cont	inuous	
Format card								
Auto rotate						On		
Add 🌄 rotate info						Disa	ble	
Date/Time/Zone						02/02/22 10:00		
L	Language						ish	

2. Set the desired language.

English	Čeština	
Deutsch	Magyar	
Français	Tiếng Việt	ור
Nederlands	हिन्दी	٦I
Dansk	Română	71
Português	Türkçe	71
Suomi	العربية	71
Italiano	ภาษาไทย	71

Set the video system of any television used for display. This setting determines the frame rates available when you record movies.

1. Select [4: Video system].

Û	AF	A	Ý	<u>a</u>	*
1 2	3	4 5			
Vide	o syste	m	For NTSC		
Help	text si	ze	Small		
Mod	le guid	e	Enable		
Beep)		Enable		
Volu	me				
Pow	er savir	ng			

2. Select an option.

Û	AF	►	Ý	â	*
1 2	3 4				
Vide	o syste	m) For	NTSC	
			For	PAL	

For NTSC

For areas where the TV system is NTSC (North America, Japan, South Korea, Mexico, etc.).


For PAL

For areas where the TV system is PAL (Europe, Russia, China, Australia, etc.).

Changing the Help Text Size

When [INFO Help] is displayed, you can display a description of the feature by pressing the < [NFO > button. Press it again to exit Help display. To scroll the screen when a scrollbar (1) appears on the right, turn the < > dial.

Example: [: Bracketing auto cancel]

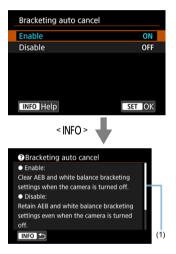

• Example: [4: Multi function lock]

Multi function lock
Main Dial
∧
OK Cancel
< INFO >
Multi function lock
Select controls that are deactivated when the multi-function lock button is pressed. This can help prevent accidentally changing settings.
INFO D

1. Select [4: Help text size].

Û	AF	▲	Ý	<u>a</u>	*
1 2	3	4 5			
Vide	o syste	em	For NTSC		
Help	text s	ize	Small		
Mod	le guid	e	Enable		
Beep)		Enable		
Volu	me				
Pow	er savi	ng			

2. Select an option.

Help text size	
Help text size	Small
Help text size	Standard
	SET OK

A brief description of the shooting mode can be displayed when you switch shooting modes. The default setting is [Enable].

1. Select [4: Mode guide].

AF 🗈 💡	
3 4 5	
system Fo	or NTSC
text size Sn	nall
e guide En	able
En	nable
ne	
r saving	
er saving	

2. Select [Enable].

Û	AF		▲	Ý	<u>a</u>	*
1 2	3	4	5			
Mod	le gui	ide) Ena	able	
				Dis	able	

3. Turn the Mode dial.



• A description of the selected shooting mode will appear.

4. Press the < ▼ > key.



- The rest of the description will appear.
- To clear the mode guide, press the < (2) > button.
- In < SCN >/< >> mode, you can display the shooting mode selection screen.

1. Select [4: Beep].

Ľ	1	AF	►	((†))	¥ .	â	*
1	2	3	4	5			
١	/ide	o sys	tem		For N	TSC	
ł	Help	o text	size		Small		
I	Mod	le gui	ide		Enabl	e	
E	Bee	c			Enabl	e	
١	/olu	ıme				~	
F	Pow	er sa	ving				

2. Select an option.

	Î	AF		▲	Ý		
1	2	3	4	5			
	Beep) Ena		
					Dis	able	

Enable

The camera beeps after focusing and in response to touch operations.

Disable

Disables beeping for focusing, self-timer, shutter, and touch operations.

Note

By default, beeping volume for touch operations is set to [0] (2).

Volume

The volume of camera sounds is adjustable.

1. Select [4: Volume].

Û	,	AF	►		((1))	Ý	<u>à</u>	*
1	2	3	4	5				
Vi	ideo	sys	tem			For N	TSC	
H	elp 1	text	size			Small		
Μ	lode	gui	ide			Enab	le	
Be	eep					Enab	le	
V	olun	ne						
Po	owe	r sa	ving					

2. Set the option.

Volume	
Shutter volume	• • • • • • • • • • • • •
Focused beep	< ***
Touch sounds	•
Selftimer vol.	• • • • • • • • • • • • • • • • • • •
Beep per 🖑 taken	<

● Select an option, then turn the < ଽ

You can adjust the timing of when the screen dims and then turns off, when the camera turns off, and when the viewfinder turns off after the camera is left idle (Screen dimmer, Screen off, Auto power off, and Viewfinder off).

1. Select [4: Power saving].

1	2	3	4	5			
1	/ide	o sys	tem		For N	TSC	
1	Help	text	size		Small		
1	Mod	e gui	ide		Enab	le	
1	Beep				Enab	le	
١	/olu	me					
ſ	Powe	er sa	ving				

2. Select an option.

Screen off	
	Disable
Auto power off	1 min.
Viewfinder off	1 min.
	ME

Note

- [Screen dimmer] and [Screen off] apply while the shooting screen is displayed. These settings do not apply during menu display or image playback.
- The camera turns off during menu display or image playback after the time set in [Screen dimmer], [Screen off], and [Auto power off] elapses.
- To protect the screen, the screen turns off 30 min. after it is dimmed (although the camera itself remains on), even if [Screen off] and [Auto power off] are set to [Disable].
- [Viewfinder off] also applies while the screen is still on. After this time elapses, the viewfinder sensor is deactivated.
- Only [Viewfinder off] applies during viewfinder display. After this time elapses, the viewfinder sensor is deactivated and the viewfinder turns off.
- Images on the screen are displayed at a lower frame rate after the screen dims during still photo shooting standby.

You can specify to use the screen or viewfinder for display, to avoid accidentally activating the viewfinder sensor when the screen is open.

1. Select [: Screen/viewfinder display].

Ľ	ľ	AF		¥	4		
1	2	3	4	5			
S	Scree	n/vie	ewfi	nder d	display		AUT01
S	Scree	n br	ight	ness			4
١	/iew	finde	er bi	ightn	ess		AUTO
F	ine-	tune	VF	color	tone		
ι	JI m	agnit	ficat	ion	Disa	ble	
ŀ	IDM	I res	olut	ion	Auto)	

2. Select an option.

Auto 1 (C): only screen)	AUT01
Auto 2 (C: auto switching)	AUTO2
Viewfinder	ĉ
Screen	â

Always use the screen for display when it is open. Use the screen for display when it is closed and facing you, and switch to the viewfinder when you look through it.

AUTO2: Auto 2 (m⁽¹⁾: auto switching)

Use the screen for display when it is closed and facing you, and switch to viewfinder display when you look through the viewfinder.

Tiewfinder

Always use the viewfinder for display.

E: Screen

Always use the screen for display when it is open.

Note

- You can also switch between viewfinder and screen display by pressing a button you have customized by assigning to switching. With this setting set to [AUTO1] or [AUTO2], the camera responds to the viewfinder sensor accordingly.
- With [AUT01] set, the camera does not respond to the viewfinder sensor when the screen is open.

1. Select [4: Screen brightness].

		¥	AF		E
		5	3 4	2	1
AUT01	ıy	der d	viewf	Scree	
4		ness	brigh	Scree	E
AUTO		ghtne	nder b	Viewf	١
		olor t	ne VF	Fine-t	ŝ
	isable	on	nifica	UI ma	1
	uto	on	esolu	HDMI	1
	uto	on	esolu	HDMI	31

2. Make the adjustment.



● Referring to the gray image, turn the < ⁵, > dial to adjust brightness, then press the < (♠) > button. Check the effect on the screen.

Note

1. Select [4: Viewfinder brightness].



2. Turn the < i > dial and select either [Auto] or [Manual].

Auto



 Press the < () > button. Check the effect in the viewfinder while shooting.

Manual




Turn the < >> dial to adjust viewfinder brightness, then press the
 > button. Check the effect in the viewfinder.

1. Select [4: Fine-tune VF color tone].

Ô	AF	▲	((1)	Ý (<u>o</u>	*
1 2	3	4	5			
Scre	en/vie	wfin	der d	isplay	A	UT01
Scre	en br	ightn	ess			4
View	vfinde	r brig	ghtne	ss	A	UTO
Fine	-tune	VF co	olor t	one		-
Ul m	nagnif	icatio	on	Disal	ole	
HDN	/I reso	olutic	n	Auto		

2. Make the adjustment.

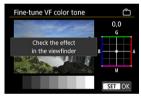

● Referring to the gray image, use < ☆ > for adjustment, then press the < இ > button. Check the effect in the viewfinder.

UI Magnification

You can magnify menu screens by double-tapping with two fingers. Double-tap again to restore the original display size.

1. Select [4: UI magnification].

Û	AF	►	((Ţ))	¥ .	D	*
1	2 3	4 5				
Sci	reen/vie	ewfinde	er dis	play	A	UT01
Sci	reen br	ightnes	SS			4
Vie	ewfinde	er brigh	ntness		A	UTO
Fir	e-tune	VF col	or tor	ne		
UI	magnit	fication	1	Disabl	e	
HC	MI res	olution	l.	Auto		

2. Select [Enable].



Caution

 Use camera controls when configuring menu functions with the display magnified. Touch-screen operations are not supported. Set the image output resolution used when the camera is connected to a television or external recording device with an HDMI cable.

1. Select [4: HDMI resolution].

Ľ		١F	▲	((†))	¥ .	<u>n</u>	*
1	2	3	4 5				
	Screer	n/viev	vfinde	er dis	play	A	UTO1
	Screer	n brig	htnes	SS			4
1	/iewfi	inder	brigh	ntness		A	UTO
Ĵ	ine-t	une V	F col	or tor	ne		
3	JI ma	gnific	ation		Disable	5	
	IDMI	resol	ution	i i	Auto		
I	IDMI	resol	ution		Auto		

2. Select an option.

HDMI resolution	
Auto	
1080p	
Display may take some time, until the camera switches resolution	
SET OK	

Auto

The images will automatically be displayed at the optimum resolution matching the connected television.

1080p

Output at 1080p resolution. Select if you prefer to avoid display or delay issues when the camera switches resolution.

1. Select [4: Touch control].



2. Select an option.

SET OK

- [Sensitive] makes the touch-screen panel more responsive than [Standard].
- To disable touch operations, select [Disable].


Caution

Precautions for touch-screen panel operations

- Do not use sharp objects such as fingernails or ballpoint pens for touch operations.
- Do not use wet fingers for touch operations. If the screen has any moisture or if your fingers are wet, the touch-screen panel may not respond or malfunction may occur. In this case, turn off the power and wipe off the moisture with a cloth.
- Attaching a commercially available protective sheet or a sticker on the screen may impair responsiveness to touch operations.
- The camera may not respond as well if you quickly perform touch operation when [Sensitive] is set.

Specify camera controls to lock when the Multi-function lock is enabled. This can help prevent accidentally changing settings.

1. Select [4: Multi function lock].

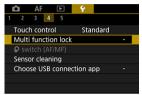

2. Select camera controls to lock.



- Press the < (P) > button to add a checkmark [√].
- Select [OK].
- Pressing the < LOCK > button locks the selected [v] camera controls.

Note An asterisk *** to the right of [**Y**: Multi function lock] indicates that the default setting has been modified.

When an RF lens without a focus mode switch is attached, you can configure operation of the camera's focus mode switch.

1. Select [4: Switch (AF/MF)].

Ľ	Ô I	AF	▲	- 	
1	2	3	4 5		
	Touc	h cor	ntrol	Standard	
1	Mult	i fun	ction lo	ck	
I	9 sv	vitch	(AF/MF)	Enable	
-	Sens	or cle	eaning		
	Choc	se II	SB conr	nection app	

2. Select an option.



Enable

Enables the camera's focus mode switch.

Disable

Disables the camera's focus mode switch. In this case, set **[AF]** or **[MF]** in **[AF**: Focus mode] ((2)). This can help prevent accidentally changing settings.

Sensor Cleaning

- Cleaning Now
- Cleaning Automatically

The camera's sensor cleaning feature cleans the front of the image sensor.



Cleaning Now

1. Select [4: Sensor cleaning].



2. Select [Clean now, ___].



Select [OK] on the confirmation screen.

Note

■ Even if you repeat the sensor cleaning, the result will not improve much. Note that [Clean now, ____] may not be available immediately after cleaning.

1. Select [Auto cleaning.[†]



2. Select an option.




Note

When set to [At pwr off] or [Enable], the sensor is cleaned when the screen goes
off, including when it has been turned off automatically.

By connecting the camera to a smartphone or computer with the interface cable, you can transfer images or import images to the smartphone or computer.

1. Select [4: Choose USB connection app].

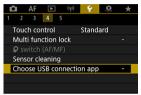

2. Select an option.



Photo Import/Remote Control

Select if you will use EOS Utility after connecting to a computer, or if you will use dedicated Android apps or the iOS version of Photos.

• Canon app(s) for iPhone

Select if you will use an iOS app.

Connecting the camera to a smartphone requires a cable for this purpose. For details, refer to the instruction manual of the dedicated apps.

The camera's settings for shooting functions and menu functions can be restored to their defaults.

1. Select [4: Reset camera].



2. Select an option.

Reset camera	
Basic settings	
Other settings	
	MENU 🕤

Basic settings

Restores default settings for camera shooting functions and menu settings.

Other settings

Settings for individual selected options can be reset.

3. Clear the settings.

Select [OK] on the confirmation screen.


- Automatic Update of Registered Settings
- Canceling Registered Custom Shooting Modes

Current camera settings such as shooting, menu, and Custom Function settings can be registered in Custom shooting modes < $(\mathbf{q}) > \text{or} < (\mathbf{q}) > .$


1. Select [4: Custom shooting mode (C1, C2)].



2. Select [Register settings].

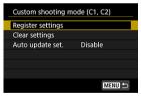

3. Register the desired items.

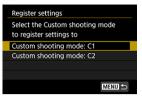

- Select the Custom shooting mode to register, then select [OK] on the [Register settings] screen.
- The current camera settings are registered to Custom shooting mode C*.

Automatic Update of Registered Settings

If you change a setting while shooting in Custom shooting mode, the mode can be automatically updated with the new setting (Auto update). To enable this automatic update, set [Auto update set.] to [Enable] in step 2.

If you select [Clear settings] in step 2, the settings of each mode can be restored to default settings, as they were before registration.



You can check the conditions of the battery you are using on the screen.

- 1. Select [4: Battery info.].
 - 🗖 AF 🗈 👘 Ď. 4 5 Reset camera Custom shooting mode (C1, C2) Battery info. Copyright information Manual/software URL Certification Logo Display Firmware Ver. 1.0.0 (1) (2) Battery info. 🖳 P-E17 -Remaining cap. (3) Recharge performance Maximum (4) MENU 🕤
 - (1) Battery position
 - (2) Model of battery or household power source used
 - (3) Remaining battery level (2)
 - (4) Battery recharge performance, in three levels
 - Green): Battery recharge performance is good.
 - Green): Battery recharge performance is slightly degraded.
 - (Red): Purchasing a new battery is recommended.

Caution

 Using a genuine Canon Battery Pack LP-E17 is recommended. If you use batteries that are not genuine Canon products, the camera's full performance may not be attained or malfunction may result.

Note

 If a battery communication error message is displayed, follow the instructions in the message.


- Checking the Copyright Information
- Deleting the Copyright Information

When you set the copyright information, it will be recorded to the image as Exif information.

☆

0	Caution
•	If the entry for "Author" or "Copyright" is long, it may not be displayed entirely when you select [Display copyright info.].
	Note
•	You can also set or check copyright information with EOS Utility (EOS software, @).

1. Select [4: Copyright information].

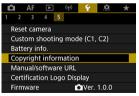

2. Select an option.



3. Enter text.



- Use the < 5, 3 > dial or < ★ > to select a character, then press the < ⑧ > button to enter it.
- By selecting [♣], you can change the input mode.
- Select [] to delete a character.

4. Exit the setting.

Press the < MENU > button, then press [OK].

Checking the Copyright Information

Display copyright info.	
Author	
XXXXX. XXXXX	
Copyright	
Canon Inc.	
	MENU 🕁

When you select [Display copyright info.] in step 2, you can check the [Author] and [Copyright] information that you entered.

When you select [Delete copyright information] in step 2, you can delete the [Author] and [Copyright] information.



Manual/software URL

To download instruction manuals, select [**'**: **Manual/software URL**] and scan the displayed QR code with a smartphone. You can also use a computer to access the website at the URL displayed and download software.

■ Certification Logo Display ☆

Select [**Y**: Certification Logo Display] to display some of the logos of the camera's certifications. Other certification logos can be found on the camera body and packaging.

Firmware

Select [**\vec{v}**: Firmware] to update the firmware of the camera, lens, or other compatible accessories in use.


You can fine-tune camera functions and change the functionality of buttons and dials to suit your shooting preferences. You can also add menu items and Custom Functions that you adjust frequently to My Menu tabs.

- Tab Menus: Custom Functions
- <u>Custom Function Setting Items</u>
- Tab Menus: My Menu
- Registering My Menu

Custom Functions 1

	Ċ	1		AF	►	((†))	Ý	.0	*
1			2	3	4	5			
	I	Ex	p	osure	level	incre	ments		1/3 —
	I	S	0	speec	sett	ing in	crement	ts	1/3 —
		Sp	bee	ed fro	m m	eterin	g/ISO A	uto	AUTO 5
	Bracketing auto cancel ON -								
	l	Br	ac	ketin	g seq	uence			0-+
	I	N١	um	nber d	of bra	ickete	d shots		3 —
	1	Sa	ife	ty shi	ft				OFF —

- (1) Exposure level increments
- (2) ISO speed setting increments
- (3) Speed from metering/ISO Auto
- (4) Bracketing auto cancel
- (5) Bracketing sequence
- (6) Number of bracketed shots
- (7) Safety shift
- Custom Functions 2

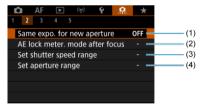

- (1) Same expo. for new aperture
- (2) AE lock meter. mode after focus
- (3) Set shutter speed range
- (4) Set aperture range

Custom Functions 3




- (1) <u>direction to set Tv/Av</u>
- (2) direction to set Tv/Av
- (3) Switch When shooting
- (4) Customize buttons
- (5) Customize dials
- (6) Clear customized settings

Custom Functions 4

Ľ	a	AF	►	((†))	Ý	.0	\star
1			4				
	Add	crop	ping i	nforma	ition		OFF -
	Defa	ault E	rase o	ption			Ť0 -
	Rele	ase s	hutter	w/o le	ns		OFF —
	Retr	act le	ens on	power	off		0N —

- (1) Add cropping information
- (3) Default Erase option
- (4) Release shutter w/o lens
- (5) Retract lens on power off

Custom Functions 5

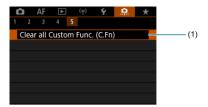

(1) Clear all Custom Func. (C.Fn)

Selecting [....: Clear all Custom Func. (C.Fn)] clears all Custom Function settings.

- C.Fn1
- C.Fn2
- C.Fn3
- ☑ <u>C.Fn4</u>
- C.Fn5

You can customize camera features on the [\hat{n}] tab to suit your shooting preferences. Any settings you change from default values are displayed in blue.

Exposure level increments

Sets 1/2-stop increments for the shutter speed, aperture value, exposure compensation, AEB, flash exposure compensation, etc.

- 1/3: 1/3-stop
- 1/2: 1/2-stop



ISO speed setting increments

You can change the manual ISO speed setting increment to a whole stop.

1/3: 1/3-stop

1/1: 1-stop

Note

 Even if [1-stop] is set, ISO speed will be automatically set in 1/3-stop increments when ISO Auto is set.

Speed from metering/ISO Auto

You can set the ISO speed status after the metering timer ends in cases where, for ISO Auto operation in < P > < Tv > < Av > < M > < B > mode, the camera has adjusted the ISO speed during metering or during the metering timer.

- AUTO : Restore Auto after metering
- AUTO :: Retain speed after metering

Bracketing auto cancel

You can specify to cancel AEB and white balance bracketing when the power switch is set to < OFF >.

- ON: Enable
- OFF: Disable

Bracketing sequence

The AEB shooting sequence and white balance bracketing sequence can be changed.

- 0-+: 0, -, +
- -0+: -, 0, +
- +0-: +, 0, -

AEB	White Balance Bracketing		
	B/A Direction	M/G Direction	
0: Standard exposure	0: Standard white balance	0: Standard white balance	
-: Underexposure	-: Blue bias -: Magenta bias		
+: Overexposure	+: Amber bias	+: Green bias	

Number of bracketed shots

The number of shots taken with AEB and white balance bracketing can be changed. When [**Bracketing sequence**] is set to [0, -, +], the bracketed shots will be taken as shown in the following table.

- 3: 3 shots
- 2: 2 shots
- 5: 5 shots
- 7: 7 shots

(1-stop/step increments)

	1st Shot	2nd Shot	3rd Shot	4th Shot	5th Shot	6th Shot	7th Shot
3: 3 shots	Standard (0)	-1	+1				
2: 2 shots	Standard (0)	±1					
5: 5 shots	Standard (0)	-2	-1	+1	+2		
7: 7 shots	Standard (0)	-3	-2	-1	+1	+2	+3

Note

If [2 shots] is set, you can select the + or - side when setting the AEB range. With
white balance bracketing, the second shot is adjusted toward the negative side for
the B/A or M/G direction.

Safety shift

If the subject brightness changes and the standard exposure cannot be obtained within the autoexposure range, the camera will automatically change the manually selected setting to obtain the standard exposure. [Shutter speed/Aperture] applies to < Tv > or < Av > mode. [ISO speed] applies to < P >, < Tv >, or < Av > mode.

- OFF: Disable
- Tv/Av: Shutter speed/Aperture
- ISO: ISO speed
 - Note
 - Safety shift overrides any changes to [ISO speed range] or [Min. shutter spd.] from default settings in [D: DISO speed settings] if standard exposure cannot be obtained.
 - The minimum and maximum limits for the safety shift with the ISO speed are
 determined by [Auto range] (@). However, if the manually set ISO speed exceeds
 the [Auto range], the safety shift will take effect up or down to the manually set
 ISO speed.
 - Safety shift will take effect as necessary even when flash is used.

Same expo. for new aperture

The maximum aperture value may decrease (the lowest f/number may increase) in < M > mode (manual exposure shooting) with ISO speed set manually (except when set to ISO Auto) if you (1) Change lenses, (2) Attach an extender, or (3) Use a zoom lens with a variable maximum aperture value. This function prevents the corresponding underexposure by adjusting ISO speed or shutter speed (Tv value) automatically to maintain the same exposure as before (1), (2), or (3).

With [ISO speed/Shutter speed], the ISO speed is automatically adjusted within the ISO speed range. If exposure cannot be maintained by adjusting ISO speed, shutter speed (Tv value) is automatically adjusted.

- OFF: Disable
- ISO: ISO speed
- ISO/Tv: ISO speed/Shutter speed
- Tv: Shutter speed

Caution

- Does not respond to changes in effective aperture value from changes in magnification when macro lenses are used.
- Cannot provide the same exposure as before (1), (2), or (3) if [ISO speed] is set and the exposure cannot be maintained at speeds set in [ISO speed range].
- Cannot provide the same exposure as before (1), (2), or (3) if [Shutter speed] is set and the exposure cannot be maintained at speeds set in [, , ; Set shutter speed range].
- Shutter speed is limited to 1/8000 when [: Shutter mode] is [Electronic] and [Same expo. for new aperture] is set to [Shutter speed] or [ISO speed/Shutter speed].

Note

- Also responds to changes in the highest f/number (minimum aperture).
- The original exposure setting is restored if you perform (1), (2), or (3) with [ISO speed], [ISO speed/Shutter speed], or [Shutter speed] set and do not adjust ISO speed, shutter speed, or aperture value before returning the camera to the original state, before (1), (2), or (3).
- Shutter speed may change to maintain exposure if the ISO speed increases to an expanded ISO speed when [ISO speed] is set.

AE lock meter. mode after focus

AE lock meter. mode after focus						
Evaluative metering						
 ✓ Ø 	3	•	دی			
	OK		Cancel			
INFO Help						

For each metering mode, you can specify whether to lock the exposure (AE lock) once subjects are in focus with One-Shot AF. The exposure will be locked while you keep pressing the shutter button halfway. Select metering modes for AE lock and add a checkmark [$\sqrt{$]}. Select [**OK**] to register the setting.

Set shutter speed range

You can set the shutter speed range for each [: Shutter mode] option. In < Fy >,

< Tv >, or < M > mode, you can set the shutter speed manually within your specified range. In < P > and < Av > mode, or in < Fv > mode with shutter speed set to [AUTO], the shutter speed is set automatically within your specified range (except for movie recording). Select [OK] to register the setting.

Mech shutter/elec 1st-curtain

- · Lowest speed: Can be set in a range of 30 sec.-1/2000 sec.
- · Highest speed: Can be set in a range of 1/4000 sec.-15 sec.
- Electronic
 - · Lowest speed: Can be set in a range of 30 sec.-1/8000 sec.
 - · Highest speed: Can be set in a range of 1/16000* sec.-15 sec.
 - * When set to [모]: 1/4000 sec.

Caution

Shutter speed is limited to 1/4000 when [C: Shutter mode] is [Electronic] and [C: Drive mode] is set to [4].

Set aperture range

You can set the aperture value range. In $\langle FV \rangle$, $\langle AV \rangle$, $\langle M \rangle$, or $\langle B \rangle$ mode, you can set the aperture value manually within your specified range. In $\langle P \rangle$ and $\langle TV \rangle$ mode, or in $\langle FV \rangle$ mode with the aperture value set to [AUTO], the aperture value is set automatically within your specified range. Select [OK] to register the setting.

Max. aperture

Can be set in a range of f/1.0-f/64.

Min. aperture

Can be set in a range of f/91-f/1.4.

Note

 The available aperture value range varies depending on the lens's minimum and maximum aperture value.

🚜 🐭 direction to set Tv/Av

Dial turning direction when setting the shutter speed and aperture value can be reversed. Reverses the turning direction of the < $\stackrel{\sim}{\longrightarrow}$ > and < $\stackrel{\sim}{\longrightarrow}$ > dials in < M > shooting mode and only the < $\stackrel{\sim}{\longrightarrow}$ > dial in other shooting modes. The direction of the < $\stackrel{\sim}{\longrightarrow}$ > dial in < M > mode matches the direction to set exposure compensation in < P >, < T_V >, and < A_V > modes.

- -----+: Normal
- +___: Reverse direction

() direction to set Tv/Av

RF lens and mount adapter control ring turning direction when setting the shutter speed and aperture value can be reversed.

- - +: Normal
- +-: Reverse direction

Switch 🚧/ 🐜 when shooting

Functions assigned to the Main dial and Quick control dial can be reversed.

- OFF: Disable
- ON: Enable

Customize buttons

You can assign frequently used functions to camera buttons that are easy for you to use. Different functions, for use when shooting still photos or movies, can be assigned to the same button.

1. Select [. Customize buttons].

Ľ		AF	A	((1 >)	¥	.0.	*
1	2	3	4	5				
	~~	' dire	ction	to s	et T\	//Av		-∕+
() di	rectio	on to	set 1	۲v/A	/		-~t
9	Swit	ch 🔨	1~ 1	vhen	sho	oting	J	OFF
(Cust	omiz	e but	tons				-
(Cust	omiz	e dia	ls				
(Clea	r cust	omiz	ed s	ettin	igs		

2. Select a camera control.

Customize butto	ons	
	outt. half-pro g and AF sta	N 32773
	C	' .
	MED: RM	MED: BML Rinc

3. Select a function to assign.



- Press the < (P) > button to set it.
- You can configure advanced settings for functions labeled with [INFO Detail set.] in the lower left of the screen by pressing the < INFO > button.

Note

 [.Q.: Customize buttons] settings are not cleared even if you select [.Q.: Clear all Custom Func. (C.Fn)]. To clear the settings, select [.Q.: Clear customized settings].

Functions available for customization

AF

Default o: Available for customization

													-
۹		AF-ON	×		0		Min	SET					*
©∄AF:	Metering	and AF s	tart										
•	-	•	0	-	0	0	-	-	-	-	-	-	-
AF-OFF	: AF stop												
-	0	0	0	-	0	•	0	-	-	-	-	-	-
•••: A	AF point s	election											
-	0	0	0	•	0	0	0	0	0	0	0	0	-
-8-4-3	Direct AF	point sel	ection										
-	-	-	-	-	-	-	-	-	0	0	0	0	•
B : 5	Set AF poi	int to cent	er										
-	0	0	0	0	0	0	0	0	0	0	0	0	-
●≡	Start/stop	tracking											
-	0	0	0	0	•*4	0	0	0	0	0	0	0	-
ONE SHOT	: One-She	ot AF 컱	Servo AF	*1									
-	0	0	0	o	0	0	o	0	0	0	0	0	-
●AF:	Eye Dete	ction AF*1	1										
-	-	0	0	-	0	0	-	-	-	-	-	-	-
: ا	Eye detec	tion			•			•					
-	0	0	0	o	0	0	0	0	0	0	0	0	-
PEAK	: Peaking	•			•			•					
-	0	0	0	o	0	0	0	0	0	0	0	0	-
≟: Foo	cus guide												
-	0	0	0	o	0	0	0	0	0	0	0	0	-
	Drive mode	9 ^{*1}											
-	0	0	0	o	0	0	0	0	0	0	•*2	0	-

* 1: Cannot be assigned as a function available in movie recording. * 2: Default in still photo shooting.

* 4: Default in movie recording.

Exposure

•: Default o: Available for customization

٩		AFON	*		0		MED	SET					*
(): M	letering s	Lart											
0	-	-	-	-	-	-	-	-	-	-		-	-
★ : A	E lock												
-	0	0	0	-	0	0	0	-	-	-	-	-	-
¥н	AE lock (I	hold)											
-	0	0	•*4	-	0	0	o	-	-	-	-	-	-
¥AF-() JFF: AE lo	ck, AF sto	op										
-	0	0	0	-	0	0	o	-	-	-	-	-	-
* : A	E lock (wi	hile buttor	n pressed))*1									
0	-	-	-	-	-	-	-	-	-	-	-	-	-
AEL : A	E lock/FE	lock*1											
-	0	0	•* ³	-	0	0	0	-	-	-	-	-	-
X off:	Release /	AE Lock	_			_			_				
-	0	0	0	-	0	0	0	-	-	-	-	-	-
≱ :	Expo con	np (hold b	tn, turn 🔬	** ()	_	_	_	_	_	_			
-	-	0	0	-	0	0	-	0	-	-		-	-
ISO:	ISO spee	ed	_		_	_	_	_		_			
-	0	0	0	0	0	0	o	0	•	0	0	0	-
ISO ₹	Set ISO	speed(ho	ld btn,turr)									
-	-	o	o	-	0	0	-	0	-	-		-	-
\$: Fla	sh firing*1												
-	0	o	o	o	0	0	o	0	o	o	o	•* ³	-
FEL:	FE lock*1	-											
-	0	0	0	-	0	0	0	-	-	-	-	-	-

* 1: Cannot be assigned as a function available in movie recording.

* 3: Default in still photo shooting.

* 4: Default in movie recording.

Image: Note and the set of t										: Defaun	. ○. Avan		Sustoniiz	auon
· ·	۹		AFON	*		0		Millio	SET					*
Image quality Image quality setting** Image quality Image quality setting** Image quality Image quality	€ : In	nage qual	ity*1											
Image Image <t< td=""><td>-</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>-</td></t<>	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image Image <t< td=""><td>RAW JPEG: C</td><td>One-touch</td><td>image qu</td><td>uality setti</td><td>ng*1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>	RAW JPEG: C	One-touch	image qu	uality setti	ng*1									
· ·	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image: Statis and the set of the s	RAW H	One-touc	ch image (quality (ho	old)*1									
· ·	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image: Auto Lighting Optimizer Image: Auto Lighting Optimizer <th< td=""><td>[€]: S</td><td>Still img as</td><td>pect ratio</td><td>*1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></th<>	[€]: S	Still img as	pect ratio	*1										
- 0	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image: Notice balance Image: Notice balance •	遇 : A	Auto Lighti	ng Optim	izer										
····································	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image: style Image: style <t< td=""><td>WB</td><td>White ba</td><td>lance</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>	WB	White ba	lance											
· ·	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Image: RAW burst mode*1 Image: RAW burst mode*1 • <	3	Picture S	Style											
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	-	0	0	0	0	0	0	0	0	0	0	0	0	-
Om: Protect Image: Select folder Image: Select folder Image: Select folder Image: Select folder	💽: F	RAW burst	mode*1											
· ·	-	0	0	0	0	0	0	0	0	0	0	0	0	-
★: Rating • ○ ○ • <t< td=""><td>0-т: Р</td><td>rotect</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>	0- т: Р	rotect												
	-	0	0	0	-	0	0	0	-	-	-	-	-	-
E Select folder	★ : R	ating												
	-	0	0	0	-	0	0	0	-	-	-	-	-	-
- 0 0 0 0 0 0 0 0 0 0 0 0 -		Select fold	ler											
	-	0	0	0	0	0	0	o	0	0	0	0	0	-

•: Default o: Available for customization

* 1: Cannot be assigned as a function available in movie recording.

۲	P.R.	AFON	×		0		Mifn	SET			K		*
💯: Z	Z Zebra*2												
-	-	0	0	0	0	0	0	0	0	0	0	0	-
P 🗮 : N	Novie reco	ording											
-	•	0	0	0	0	0	0	-	-	-	-	-	-
II °∰ SERVO AF∶	Pause M	ovie Serve	o AF										
-	0	0	0	0	0	0	0	0	0	0	0	•*4	-
_®: C	□¶: Digital zoom*2												
-	-	0	0	o	0	0	0	0	0	0	0	0	-

•: Default o: Available for customization

* 2: Cannot be assigned as a function available in still photo shooting. * 4: Default in movie recording.

Operation

•: Default	o: Available	e for customizati	on
------------	--------------	-------------------	----

٢		AFON	×		Q		Milfin	SED					*
ו,/*	E Flash	function	settings*1										
-	o	0	0	0	0	0	o	0	0	0	0	0	-
DIAL FUNC: D	ial functio	on settings	5										
-	o	0	0	0	0	0	•	0	0	0	0	0	-
() : D	epth-of-fie	ld previev	N*1										
-	o	0	0	-	•*3	0	o	-	-	-	-	-	-
<u>AUTO</u>	: Reset se	elected ite	em in Fv m	node*1									
-	0	0	0	0	0	0	0	0	0	0	0	0	-
ALL Auto: F	Reset Tv/A) in Fv mo	de*1									
-	o	0	0	0	0	0	o	0	0	•* ³	0	0	-
Q : Q	uick Contr	rol screen	1 ^{*1}										
-	o	0	0	0	0	0	o	•	0	0	0	0	-
Q : м	agnify/Re	duce											
-	o	0	0	0	0	0	o	0	0	0	0	0	-
• : I	mage repl	lay											
-	0	0	0	0	0	0	0	0	0	0	0	0	-
►q:I	Magnify in	nages dur	ring playb	ack									
-	0	0	0	0	0	0	0	0	0	0	0	0	-
MEN	U: Menu d	display											
-	0	0	0	0	0	0	0	0	0	0	0	0	-
C\$: T	ouch Shu	itter*1											
-	o	0	o	o	0	0	o	0	o	o	o	o	-
1	reate fold	ler*1											
-	0	0	o	0	0	0	o	0	0	0	0	0	-
													-

OVF V.A	OVEVA: OVF sim. view assist*1													
-	o	0	o	o	o	o	0	0	o	o	0	o	-	
⊡ *†∶	[≩†: Maximize screen brightness (temp)													
-														
Power off														
-	· · · · · · · · · · ·													
<mark>ď</mark> z: S	creen off													
-	0	0	o	0	0	0	0	0	0	0	0	0	-	
\ : s	Silent shutter function*1													
-	0	0	o	0	0	0	0	0	0	0	0	0	-	
()+:s	Switch foo	us/contro	l ring											
-	0	0	o	0	0	0	0	0	0	0	0	0	-	
IOI: S	Switch be	tween VF	screen											
-	0	o	o	o	o	0	0	0	0	0	0	0	-	
((†)): W	/i-Fi/Bluet	ooth conr	ection	-										
-	0	0	o	0	0	0	0	0	0	0	0	0	-	
OFF	No funct	ion (disab	led)											
-	0	0	o	0	0	0	0	0	0	•* ⁴	•*4	0	0	

* 1: Cannot be assigned as a function available in movie recording.

* 3: Default in still photo shooting.

* 4: Default in movie recording.

Note

 [[En]: "AF Stop" or "Lens Function" button on super telephoto lenses with Image Stabilizer.

Customize dials

Frequently used functions can be assigned to the < $\sum_{i=1}^{3}$ >, < $\sum_{i=1}^{3}$ >, and < () > dials.

1. Select [. . Customize dials].

Ľ		AF	►	((Ţ))	Ý	<u>.</u>	*
1	2	3	4	5			
	~~	dire	ction	to set	Tv/Av		-∕+
() di	rectio	on to	set Tv	/Av		- ~⁺
9	Swit	ch 🔨	/~ v	vhen s	hooting	9	OFF
(Cust	omiz	e but	tons			
(Cust	omiz	e dia	ls			-
(Clea	r cust	omiz	ed set	tings		

2. Select a camera control.

Mai	n Dial
Shutter speed s	etting in M mode
offeren opeca o	and a second second
	∩ ∶ Tv
77000	(CONTRACTOR OF A
	🗸 : Av
	0:12±

3. Select a function to assign.



Press the < (P) > button to set it.

Note

- [.Q.: Customize dials] settings are not cleared even if you select [.Q.: Clear all Custom Func. (C.Fn)]. To clear the settings, select [.Q.: Clear customized settings].
- Setting ["Switch "// when shooting] to [Enable] also changes the functions you can assign.

Functions available for dials

•: Default o: Available for customization

	Function	n Land	2.000 A	()
AFロ	Select AF area		0	0
AF□≞	AF area (hold metering button)			0
Τv	Change shutter speed			0
Av	Change aperture value			0
Z	Exposure compensation		0	0
ISO	Set ISO speed		0	0
Tv±	Change shutter spd. (hold meter. btn)			0
Av∓	Change aperture (hold meter. btn)			0
Ź₹	Exposure comp. (hold meter. btn)			•
ISO ≣	Set ISO speed (hold meter. btn)			0
522 ±	Flash exp comp (hold meter.btn)			0
Τv	Shutter speed setting in M mode	•	0	
Av	Aperture setting in M mode	0	•	
WB	White balance selection		0	0
К	Select color temperature		0	0
2.5	Picture Style		0	0
WB≞	Select WB (hold meter. btn)			0
K₹	Color temp. (hold meter. btn)			0
ð 1	Select 😹 (hold meter. btn)			0
OFF	No function (disabled)	0	0	0

Note

<()>: Control ring on RF lenses and mount adapters.

1. Select [. . : Clear customized settings].

Ľ		AF	►	(0	(†))	¥	<u>0</u>	*
1	2	3	4	5				
	~~	dire	ctior	to s	et T	//Av		- ∕⁺
() di	rectio	on to	set '	Tv/A	/		~ †
Switch ~/~ when shooting							OFF	
Customize buttons								
Customize dials -								
(Clea	r cust	omi	zed s	ettir	ngs		

2. Select [OK].



• [Customize buttons] and [Customize dials] are restored to defaults.

Add cropping information

Adding cropping information displays vertical lines for the aspect ratio specified in shooting, so that you can compose shots as if shooting with a medium- or large-format camera (6×6 cm, 4×5 inch, and so on).

When you shoot, instead of cropping images recorded to the card, the camera adds aspect ratio information to images for cropping in the Digital Photo Professional (EOS software). You can import images to Digital Photo Professional on a computer and easily crop images to the aspect ratio set at the time of shooting.

- OFF: Disable
- 6:6: Aspect ratio 6:6
- 3:4: Aspect ratio 3:4
- 4:5: Aspect ratio 4:5
- 6:7: Aspect ratio 6:7
- 5:6: Aspect ratio 10:12
- 5:7: Aspect ratio 5:7

Caution

- Cropping information can only be added when [1]: Still img aspect ratio] is set to [3:2].
- JPEG or HEIF images are not saved at the cropped size if you use the camera to process RAW images with cropping information ((2)). In this case, RAW processing produces JPEG or HEIF images with cropping information.

Note

Vertical lines indicating your specified aspect ratio are displayed on the screen.

Default Erase option

You can set which option is selected by default in the erase menu (O), which is accessed by pressing the < O > button during image playback or during review after shooting. By setting an option other than [**Cancel**], you can simply press the < (O) > button to erase images quickly.

- To: [Cancel] selected
- RAW: [EraseRAW] selected
- J/H: [Erase non-RAW] selected

Caution

 Be careful not to erase images accidentally when an option other than [Cancel] is set.

Release shutter w/o lens

You can specify whether shooting still photos or movies is possible without a lens attached.

- OFF: Disable
- ON: Enable

Retract lens on power off

You can set whether to retract gear-type STM lenses (such as RF35mm F1.8 Macro IS STM) automatically when the camera's power switch is set to < OFF >.

ON: Enable

OFF: Disable

Caution With auto power off, the lens will not retract regardless of the setting. Before detaching the lens, make sure that it is retracted.

 When [Enable] is set, this function takes effect regardless of the setting of the focus mode switch (AF or MF) on the camera or lens.

Clear all Custom Func. (C.Fn)

Selecting [...,: Clear all Custom Func. (C.Fn)] clears all Custom Function settings except [Customize buttons] and [Customize dials].

	Note
•	To clear settings configured with [

dials], select [. Clear customized settings].

Tab Menus: My Menu

Ô	AF	►	((†))	Ý	<u>n</u>	*
1					MY MENI	J:Set up
Add	My N	/lenu t	ab			_
						-
						-
						-

- (1) Add My Menu tab
- (2) Delete all My Menu tabs
- (3) Delete all items
- (4) Menu display

Registering My Menu

- Creating and Adding My Menu Tabs
- Registering Menu Items on My Menu Tabs
- My Menu Tab Settings
- Deleting All My Menu Tabs/Deleting All Items
- Menu Display Settings

On the My Menu tab, you can register menu items and Custom Functions you often adjust.

1. Select [Add My Menu tab].




2. Select [OK].



• You can create up to five My Menu tabs by repeating steps 1 and 2.

1. Select [MY MENU*: Configure].

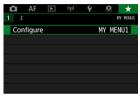

2. Select [Select items to register].

Configure	MY MENU1
Select items to register	
Sort registered items	
Delete selected items	
Delete all items on tab	
Delete tab	
Rename tab	
	MENU 🕤

3. Register the desired items.

Select item to register	
Image quality	
Dual Pixel RAW	
Still img aspect ratio	
Expo.comp./AEB	
ISO speed settings	
HDR shooting HDR PQ	
MENU 🗩	SET OK

- Select an item, then press the < (P) > button.
- Select [OK] on the confirmation screen.
- You can register up to six items.
- To return to the screen in step 2, press the < MENU > button.

Configure	MY MENU1
Select items to register	
Sort registered items	
Delete selected items	
Delete all items on tab	
Delete tab	
Rename tab	
	MENU ⊃

You can sort and delete items on the menu tab, and rename or delete the menu tab itself.

Sort registered items

You can change the order of the registered items in My Menu. Select [Sort registered items], select an item to rearrange, then press the < () > button. With [\Rightarrow] displayed, turn the < () > button. Vith [\Rightarrow] displayed, turn the < () > button.

Delete selected items/Delete all items on tab

You can delete any of the registered items. [Delete selected items] deletes one item at a time, and [Delete all items on tab] deletes all the registered items on the tab.

Delete tab

You can delete the current My Menu tab. Select [Delete tab] to delete the [MY MENU*] tab.

Rename tab

You can rename the My Menu tab from [MY MENU*].

1. Select [Rename tab].

2. Enter text.



- Use the < [{] ↓ 3 → dial or < ***** > to select a character, then press the < [®] → button to enter it.
- By selecting [,], you can change the input mode.
- Select [] to delete a character.

3. Confirm input.

Press the < MENU > button, then select [OK].

Deleting All My Menu Tabs/Deleting All Items



You can delete all the created My Menu tabs or My Menu items registered on them.

Delete all My Menu tabs


You can delete all My Menu tabs you created. When you select [Delete all My Menu tabs], all the tabs from [MY MENU1] to [MY MENU5] will be deleted and the [★] tab will revert to its default.

Delete all items

You can delete all the items registered under the [MY MENU1] to [MY MENU5] tabs. The tabs themselves will remain.

Caution

 Performing [Delete tab] or [Delete all My Menu tabs] will also delete tab names renamed with [Rename tab].

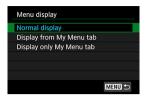

You can select [Menu display] to set the menu screen that is to appear first when you press the < MENU > button.

Normal display

Displays the last displayed menu screen.

Display from My Menu tab

Displays with the [+] tab selected.

Display only My Menu tab

Restricts display to the $[\star]$ tab ($[\bullet]/[AF]/[\bullet]/[(\uparrow))/[[+]/[.]]$ tabs are not displayed).

Reference

This chapter provides reference information on camera features.

- Importing Images to a Computer
- Importing Images to a Smartphone
- Using a USB Power Adapter to Charge/Power the Camera
- <u>Troubleshooting Guide</u>
- Error Codes
- ISO Speed in Movie Recording
- Information Display
- Specifications

- Connecting to a Computer with an Interface Cable
- Using a Card Reader
- Connecting to a Computer via Wi-Fi

You can use EOS software to import images from the camera to a computer.

Connecting to a Computer with an Interface Cable

- 1. Install EOS Utility (2).
- 2. Connect the camera to the computer.



- Use an interface cable.
- Connect the other end to a USB port on the computer.
- 3. Use EOS Utility to import the images.
 - Refer to the EOS Utility Instruction Manual.

Caution

 With a Wi-Fi connection established, the camera cannot communicate with the computer even if they are connected with an interface cable. You can use a card reader to import images to a computer.

- 1. Install Digital Photo Professional (2).
- 2. Insert the card into the card reader.
- 3. Use Digital Photo Professional to import the images.
 - Refer to the Digital Photo Professional Instruction Manual.

Note

 When downloading images from the camera to a computer with a card reader without using EOS software, copy the DCIM folder on the card to the computer. You can connect the camera to the computer via Wi-Fi and import images to the computer (2).

- Preparation
- Using Camera Connect
- Using Smartphone Features

You can import images captured with the camera to a smartphone by connecting the smartphone to the camera with Multi-Function Shoe Adapter for Smartphone Link AD-P1 (sold separately, for Android smartphones only) or a USB cable.

Preparation

- 1. Select an option in [♥: Choose USB connection app] (@).
 - Select [Photo Import/Remote Control] when connecting an Android smartphone, or when connecting an iPhone and using the Photos app.
 - Select [Canon app(s) for iPhone] when connecting an iPhone and using Camera Connect.
 - After the settings are complete, turn the camera off.

2. Connect the camera to the smartphone with AD-P1 or a USB cable.

- When using AD-P1, refer to the instruction manual included with AD-P1.
- Use of a Canon USB cable (Interface Cable IFC-100U or IFC-400U) is recommended when connecting Android smartphones.
- For details on USB cables used to connect iPhones, visit the Canon website.

- 1. Install Camera Connect on the smartphone and start it.
 - For details on installing Camera Connect, see <u>Installing Camera</u> <u>Connect on a Smartphone</u>.
- 2. Turn the camera on.
- 3. Tap [Images on camera].



• Select images displayed to import them to the smartphone.

- 1. Turn the camera on.
- $\label{eq:2.1} \textbf{Use the smartphone to import images.}$
 - Android smartphones: In the [Files] menu, select [Canon Digital Camera ***], then import images in the DCIM folder.
 - iPhones: Start the Photos app, then import images from the card.

Using a USB Power Adapter to Charge/Power the Camera


Using USB Power Adapter PD-E1 (sold separately), you can charge Battery Pack LP-E17 without removing it from the camera. The camera can also be powered.

Charging


1. Connect the USB power adapter.



 With the camera power switch set to < OFF >, insert the USB power adapter plug fully into the digital terminal. 2. Connect the power cord.

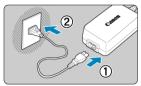

- Connect the power cord to the USB power adapter and plug the other end into a power outlet.
- Charging begins, and the access lamp (1) is lit in green.

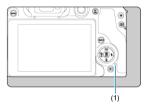

When charging is finished, the access lamp turns off.

Supplying power

To power the camera without charging batteries, set the camera power switch to < ON >. However, batteries are charged during auto power off.

The battery level indicator is gray when power is supplied.

To change from powering the camera to charging, set the camera power switch to < OFF >.

Caution

- The camera cannot be powered unless a battery pack is in it.
- When batteries are depleted, the adapter charges them. In this case, power is not supplied to the camera.
- To protect the battery pack and keep it in optimal condition, do not charge it continuously for more than 24 hours.
- If the charging lamp fails to light up or a problem occurs during charging (shown by the access lamp blinking in green), unplug the power cord, reinsert the battery, and wait a few minutes before plugging it in again. If the problem persists, take the camera to the nearest Canon Service Center.
- The charging time required and the amount charged vary depending on ambient temperature and remaining capacity.
- For safety, charging in low temperatures takes longer.
- The remaining battery level may decline when power is supplied to the camera. To avoid running out of battery power, use a fully charged battery when shooting at regular intervals.
- Before disconnecting USB power adapters, set the camera power switch to < OFF >.

- Power-related problems
- Shooting-related problems
- Problems with wireless features
- Operation problems
- Display problems
- Playback problems
- Sensor cleaning problems
- Computer connection problems
- Problems with the multi-function shoe

If a problem occurs with the camera, first refer to this Troubleshooting Guide. If this Troubleshooting Guide does not resolve the problem, take the camera to the nearest Canon Service Center.

Power-related problems

Batteries cannot be charged with the battery charger.

- Do not use any battery packs other than a genuine Canon Battery Pack LP-E17.
- In case of charging or charger issues, see <u>Charging the Battery</u>.

The charger's lamp blinks at high speed.

Constant, rapid orange blinking of the lamp indicates that a protection circuit has stopped charging because (1) there is a problem with the battery charger or battery, or (2) communication with the battery failed (with a non-Canon battery, for example). In the case of (1), unplug the charger, reinsert the battery, and wait a few minutes before plugging the charger in again. If the problem persists, take the camera to the nearest Canon Service Center.

The charger's lamp does not blink.

For safety, hot or cold batteries inserted in the charger are not charged, and the lamp remains off. In this case, let the battery adjust to the ambient temperature before attempting to charge it again. During charging, if the battery's temperature becomes high for any reason, charging will stop automatically (lamp blinks). When the battery temperature goes down, charging will resume automatically.

Batteries cannot be charged with the USB power adapter (sold separately).

- Batteries are not charged while the camera power switch is set to < ON>. However, batteries are charged during auto power off.
- Operating the camera will stop charging in progress.

The access lamp blinks during charging with the USB power adapter.

- In case of charging problems, the access lamp blinks in green and a protective circuit stops charging. In this case, unplug the power cord, reattach the battery, and wait a few minutes before plugging it in again. If the problem persists, take the camera to the nearest Canon Service Center.
- If batteries are hot or cold, the access lamp blinks in green and a protective circuit stops charging. In this case, let the battery adjust to the ambient temperature before attempting to charge it again.

The access lamp is not lit during charging with the USB power adapter.

Try unplugging the USB power adapter and plugging it in again.

The camera cannot be powered with the USB power adapter.

- Check the battery compartment. The camera cannot be powered without a battery pack.
- Check the remaining battery level. When batteries are depleted, the adapter charges them. In this case, power is not supplied to the camera.

The camera is not activated even when the power switch is set to < ON>.

- Make sure the battery is inserted properly in the camera (2).
- Make sure the card/battery compartment cover is closed (2).
- Charge the battery (
 ⁽²⁾).

The access lamp still lights or blinks even when the power switch is set to <OFF>.

 If the power is turned off while an image is being recorded to the card, the access lamp will remain on or continue to blink for a few seconds. When the image recording is complete, the power will turn off automatically.

[Battery communication error. Does this battery/do these batteries display the Canon logo?] is displayed.

- Do not use any battery packs other than a genuine Canon Battery Pack LP-E17.
- Remove and install the battery again (2).
- If the electrical contacts are dirty, use a soft cloth to clean them.

The battery becomes exhausted quickly.

- The battery performance may have degraded. See [Y: Battery info.] to check the battery recharge performance level (2). If the battery performance is poor, replace the battery with a new one.
- The number of available shots will decrease with any of the following operations:
 - · Pressing the shutter button halfway for a prolonged period
 - · Activating the AF frequently without taking a picture
 - · Using the lens's Image Stabilizer
 - · Using the wireless communication functions

The camera turns off by itself.

- Auto power off is in effect. To deactivate auto power off, set [Auto power off] in [
 Power saving] to [Disable] (
).
- Even if [Auto power off] is set to [Disable], the screen and viewfinder will still turn off
 after the camera is left idle for the time set in [Screen off] or [Viewfinder off] (although
 the camera itself remains on).

Shooting-related problems

The lens cannot be attached.

 To attach EF or EF-S lenses, you will need a mount adapter. The camera cannot be used with EF-M lenses (2).

No images can be shot or recorded.

- Slide the card's write-protect switch to the Write/Erase setting (2).
- If the card is full, replace the card or delete unnecessary images to make space (2), (2)).
- Shooting is not possible if the AF point turns orange when you attempt to focus. Press the shutter button halfway again to refocus automatically, or focus manually (g), g).

The card cannot be used.

 If a card error message is displayed, see <u>Inserting/Removing the Battery and Card</u> and <u>Error Codes</u>.

An error message is displayed when the card is inserted in another camera.

 Since SDXC cards are formatted in exFAT, if you format a card with this camera and then insert it into another camera, an error may be displayed and it may not be possible to use the card.

The image is out of focus or blurred.

- With a lens equipped with an Image Stabilizer, set the Image Stabilizer switch to < ON>.
- In low light, the shutter speed may become slow. Use a faster shutter speed (2), set a higher ISO speed (2), use flash (2), or use a tripod.
- See <u>Minimizing blurred photos</u>.

I cannot lock the focus and recompose the shot.

Set the AF operation to One-Shot AF (2). Shooting with the focus locked is not possible with Servo AF (2).

The continuous shooting speed is slow.

 High-speed continuous shooting may be slower depending on the battery level, ambient temperature, flicker reduction, shutter speed, aperture value, subject conditions, brightness, AF operation, type of lens, use of flash, shooting settings, and other conditions. For details, see <u>Selecting the Drive Mode</u> or <u>Maximum burst for continuous</u> shooting [Approx.].

The maximum burst during continuous shooting is lower.

Shooting intricate subjects such as fields of grass may result in larger file sizes, and the
actual maximum burst may be lower than the guidelines in <u>Maximum burst for
continuous shooting [Approx.]</u>.

Even after I change the card, the maximum burst displayed for continuous shooting does not change.

Estimated maximum burst indicated in the viewfinder does not change when you switch cards, even if you switch to a high-speed card. Maximum burst listed in <u>Maximum burst for continuous shooting [Approx.]</u> is based on the standard Canon test card, and the actual maximum burst is higher for cards with faster writing speeds. For this reason, estimated maximum burst may differ from actual maximum burst.

High-speed display is not available during high-speed continuous shooting.

Refer to the high-speed display requirements in <u>High-Speed Display</u>.

The aspect ratio cannot be set.

 Aspect ratios cannot be set when [A: Add cropping information] is set to an option other than [Disable].

ISO 100 cannot be set for still photo shooting.

 The minimum speed in the ISO speed range is ISO 200 when [1]: Highlight tone priority] is set to [Enable] or [Enhanced].

Expanded ISO speeds cannot be selected for still photo shooting.

- Check the [ISO speed range] setting under [C1: C1SO speed settings].
- Expanded ISO speeds are not available when [C: Highlight tone priority] is set to [Enable] or [Enhanced].
- Expanded ISO speeds are not available when [: HDR shooting [: DR PQ] is set to [Enable].

Even if I set a decreased exposure compensation, the image comes out bright.

Set [D: Auto Lighting Optimizer] to [Disable] (2). When [Low], [Standard], or [High] is set, even if you set a decreased exposure compensation or flash exposure compensation, the image may come out bright.

I cannot set the exposure compensation when both manual exposure and ISO Auto are set.

• See <u>M: Manual Exposure</u> to set the exposure compensation.

Not all the lens aberration correction options are displayed.

- With [Digital Lens Optimizer] set to [Standard] or [High], [Chromatic aberr corr] and [Diffraction correction] are not displayed, but they are both set to [Enable] for shooting.
- During movie recording, [Digital Lens Optimizer] or [Diffraction correction] are not displayed.

Using flash in $\langle A_V \rangle$ or $\langle P \rangle$ mode lowers the shutter speed.

Set [Slow synchro] in [1: Flash control] to [1/250-1/60 sec. auto] (or [1/200-1/60sec. auto]) or [1/250 sec. (fixed)] (or [1/200 sec. (fixed)]) (@).

The built-in flash does not fire.

 Shooting with the flash may be temporarily disabled to protect the flash head if the builtin flash is used repeatedly over a short period.

The external Speedlite does not fire.

Make sure any external flash units are securely attached to the camera.

The Speedlite always fires at full output.

- Flash units other than EL/EX series Speedlites used in autoflash mode always fire at full output (2).
- The flash always fires at full output when [Flash metering mode] in external flash Custom Function settings is set to [1:TTL] (autoflash) (2).

External flash exposure compensation cannot be set.

 If flash exposure compensation is set with the external Speedlite, compensation amount cannot be set with the camera. When the Speedlite's flash exposure compensation is canceled (set to 0), flash exposure compensation can be set with the camera.

High-speed sync is not available in $\langle A_V \rangle$ or $\langle F_V \rangle$ mode.

 Set [Slow synchro] in [1: Flash control] to an option other than [1/250 sec. (fixed)] (or [1/200 sec. (fixed)]) (2:).

Remote control shooting is not possible.

● In still photo shooting, set the drive mode to [[]] or [[]] (@). In movie recording, set

[C: Remote control] to [Enable] (

- Check the position of the remote control's release timing switch.
- If you are using Wireless Remote Control BR-E1, see <u>Remote Control Shooting</u> or <u>Connecting to a Wireless Remote Control</u>.
- To use a remote control for time-lapse movie recording, see <u>Time-Lapse Movies</u>.

A white [[IIIIIII]] or red [IIIIIII]] icon is displayed during movie recording.

Movie recording stops by itself.

- If the card's writing speed is slow, movie recording may stop automatically. For details
 on cards that can record movies, see <u>Card performance requirements</u>. To find out the
 card's writing speed, refer to the card manufacturer's website, etc.
- Recording stops automatically once your movie reaches 2 hr. (or 30 min. for a High Frame Rate movie).

The ISO speed cannot be set for movie recording.

- ISO speed is set automatically in [¹, ¹, ¹] recording mode. In [¹, ^M] mode, you can manually set the ISO speed (¹/₆).
- The minimum speed in the ISO speed range is ISO 200 when [: Highlight tone priority] is set to [Enable] or [Enhanced].

Expanded ISO speeds cannot be selected for movie recording.

- Check the [ISO speed range] setting under [C: PRISO speed settings].
- Expanded ISO speeds are not available when [C: Highlight tone priority] is set to [Enable] or [Enhanced].

The exposure changes during movie recording.

- If you change the shutter speed or aperture value during movie recording, the changes in the exposure may be recorded.
- Recording a few test movies is recommended if you intend to perform zooming during movie recording. Zooming as you record movies may cause exposure changes or lens sounds to be recorded, or loss of focus.

The image flickers or horizontal stripes appear during movie recording.

Flickering, horizontal stripes (noise), or irregular exposures can be caused by fluorescent lighting, LED lighting, or other light sources during movie recording. Also, changes in the exposure (brightness) or color tone may be recorded. In [m] mode, using a slower shutter speed may reduce the problem. The problem may be more noticeable in time-lapse movie recording.

The subject looks distorted during movie recording.

 If you move the camera to the left or right (panning) or shoot a moving subject, the image may look distorted. The problem may be more noticeable in time-lapse movie recording.

Sound is not recorded in movies.

Sound is not recorded in High Frame Rate movies.

A time code is not added.

Time codes are not added when you record High Frame Rate movies with [Count up] in [C: Time code] set to [Free run] (2). Additionally, no time code is added to HDMI video output (2).

Time codes advance faster than the actual time.

Time codes in High Frame Rate movie recording advance 4 sec. per second (2).

I cannot take still photos during movie recording.

 Still photos cannot be taken during movie recording. To shoot still photos, stop recording the movie, then select a shooting mode for still photos.

I cannot record movies during still photo shooting.

- It may not be possible to record movies during still photo shooting if operations such as extended Live View display increase the camera's internal temperature. Turn off the camera or take other measures, and wait until the camera cools down.
- Reducing the movie recording size may enable recording.

Problems with wireless features

Cannot pair with a smartphone.

- Use a smartphone compliant with Bluetooth Specification Version 4.1 or later.
- Turn on Bluetooth from the smartphone settings screen.
- Pairing with the camera is not possible from the smartphone's Bluetooth settings screen. Install the dedicated app Camera Connect (free of charge) on the smartphone (2).
- Pairing with a previously paired smartphone is not possible if pairing information registered for another camera remains on the smartphone. In this case, remove the camera's registration retained in the Bluetooth settings on the smartphone and try pairing again (^g₂).

Wi-Fi functions cannot be set.

 If the camera is connected to a computer or another device with an interface cable, Wi-Fi functions cannot be set. Disconnect the interface cable before setting any functions (2).

A device connected with an interface cable cannot be used.

Other devices, such as computers, cannot be used with the camera by connecting them
with an interface cable while the camera is connected to devices via Wi-Fi. Terminate
the Wi-Fi connection before connecting the interface cable.

Operations such as shooting and playback are not possible.

 With a Wi-Fi connection established, operations such as shooting and playback may not be possible. Terminate the Wi-Fi connection, then perform the operation.

Cannot reconnect to a smartphone.

- Even with a combination of the same camera and smartphone, if you have changed the settings or selected a different setting, reconnection may not be established even after selecting the same SSID. In this case, delete the camera connection settings from the Wi-Fi settings on the smartphone and set up a connection again.
- A connection may not be established if Camera Connect is running when you reconfigure connection settings. In this case, quit Camera Connect for a moment and then restart it.

Operation problems

Settings change when I switch from still photo shooting to movie recording or vice versa.

Separate settings are retained for use when shooting still photos and recording movies.

Settings cannot be changed with < 2° , < 3° ,

- Press the < LOCK > button to release the Multi-function lock (2).
- Check the [": Multi function lock] setting (").

Touch operation is not possible.

Make sure [": Touch control] is set to [Standard] or [Sensitive] (2).

A camera button or dial does not work as expected.

- In movie recording, check the [1]: Shutter btn function for movies] setting (2).
- Check the [...]: Customize buttons], [...]: Customize dials], and [Switch #4/7# when shooting] settings (20, 20, 20).

Display problems

The menu screen shows fewer tabs and items.

Tabs and items on the menu screen vary for still photos and movies.

The display starts with $[\star]$ My Menu, or the $[\star]$ tab alone is displayed.

 [Menu display] on the [★] tab is set to [Display from My Menu tab] or [Display only My Menu tab]. Set [Normal display] (②).

The file name's first character is an underscore ("_").

 Set [1]: Color space] to [sRGB]. If [Adobe RGB] is set, the first character will be an underscore (2).

The file numbering does not start from 0001.

 If the card already contains recorded images, the image number may not start from 0001 (2).

The shooting date and time displayed are incorrect.

- Check the time zone and daylight saving time (2).

The date and time are not in the image.

 The shooting date and time do not appear in the image. The date and time are recorded in the image data as shooting information. When you print photos, this information can be used to include the date and time (²/_R).

[###] is displayed.

 If the number of images recorded on the card exceeds the number the camera can display, [###] will be displayed.

The screen does not display a clear image.

- If the screen is dirty, use a soft cloth to clean it.
- The screen display may seem slightly slow in low temperatures or may look black in high temperatures, but it will return to normal at room temperature.

Playback problems

Part of the image blinks in black.

[]: Highlight alert] is set to [Enable] (2).

A red box is displayed on the image.

[►: AF point disp.] is set to [Enable] (②).

During image playback, the AF points are not displayed.

- AF points are not displayed when the following types of images are played back:
 - · Images taken with Multi Shot Noise Reduction applied.
 - · Cropped images.
 - · Images from HDR shooting with [Auto Image Align] set to [Enable].

The image cannot be erased.

Still photos and movies cannot be played back.

- The camera may not be able to play back images taken with another camera.
- Movies edited with a computer cannot be played back with the camera.

Only few images can be played back.

The images have been filtered for playback with [E: Set image search conditions]
 (@). Clear the image search conditions.

Mechanical sounds or sounds of camera operations can be heard during movie playback.

The camera's built-in microphone may also record mechanical sounds of the lens or sounds of camera/lens operations if AF operations are performed or the camera or lens is operated during movie recording. In this case, using an external microphone may reduce these sounds. If the sounds are still distracting with an external microphone, it may be more effective to remove the external microphone from the camera and position it away from the camera and lens.

Movie playback stops by itself.

 Extended movie playback or movie playback under high ambient temperature may cause the camera's internal temperature to rise, and movie playback may stop automatically.

If this happens, playback is disabled until the camera's internal temperature decreases, so turn off the power and let the camera cool down a while.

The movie appears to freeze momentarily.

 Significant change in the exposure level during autoexposure movie recording may cause recording to stop momentarily until the brightness stabilizes. In this case, record in [14]^M mode (27).

The movie is played in slow motion.

 High Frame Rate movies are recorded at 29.97 fps or 25.00 fps, so they are played in slow motion at 1/4 speed.

No picture appears on the television.

- Make sure [": Video system] is set to [For NTSC] or [For PAL] correctly for the video system of your television.
- Make sure the HDMI cable's plug is inserted all the way in (2).

There are multiple movie files for a single movie recording.

 If the movie file size reaches 4 GB, another movie file will be created automatically (③). However, if you use an SDXC card formatted with the camera, you can record a movie in a single file even if it exceeds 4 GB.

My card reader does not recognize the card.

Depending on the card reader used and the computer's operating system, SDXC cards
may not be correctly recognized. In this case, connect the camera to the computer with
the interface cable, then import the images to the computer using EOS Utility (EOS
software, ③).

Images cannot be resized or cropped.

- This camera cannot resize JPEG S2 images, RAW images, or frame-grab images from 4K movies saved as still photos (2).
- This camera cannot crop RAW images or frame-grab images from 4K movies saved as still photos (2).

 White, red, or blue dots of light may appear in captured images if the sensor is affected by cosmic rays or similar factors. Their appearance may be reduced by performing [Clean now, b] under [Y: Sensor cleaning] (2).

Sensor cleaning problems

The shutter makes a sound during sensor cleaning.

 Although there is a mechanical sound from the shutter during cleaning after [Clean now .'____] is selected, no image is recorded to the card (@).

Automatic sensor cleaning does not work.

Repeatedly turning the power switch < ON > and < OFF > within a short period may
prevent the [:___] icon from being displayed (@).

I cannot import images to a computer.


- Install EOS Utility (EOS software) on the computer (2).
- Make sure the main EOS Utility window is displayed.
- If the camera is already connected via Wi-Fi, it cannot communicate with any computer connected with an interface cable.
- Check the version of the application.

Communication between the connected camera and computer does not work.

When using EOS Utility (EOS software), set [1]: Time-lapse movie] to [Disable] (2).

A message was displayed on the screen when I attached an accessory.

- If [Communication error Reattach accessory] is displayed, reattach the accessory. In case this message is displayed again after reattachment, make sure the terminals of the multi-function shoe and accessory are clean and dry. If you cannot remove the dirt or moisture, contact a Canon Service Center.
- If [Accessory unavailable status] is displayed, check the terminals of the multi-function shoe and accessory and make sure the accessory is not damaged.

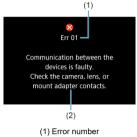

(2) Cause and countermeasures

If there is a problem with the camera, an error message will appear. Follow the on-screen instructions.

If the problem persists, write down the error code (Err xx) and request service.

In ["] mode

- ISO speed is set automatically in a range of ISO 100–12800.
- Setting [Max for Auto] in [D: '♥ISO speed settings] to [H (25600)] (∅) expands the maximum speed in the automatic setting range to H (equivalent to ISO 25600).
- The minimum speed in the automatic setting range is ISO 200 when [: Highlight tone priority] is set to [Enable] or [Enhanced] (: The maximum limit is not expanded, even when expansion is set in [Max for Auto].

In ['^{¶M}] mode

- With ISO speed set to [AUTO], ISO speed is set automatically in a range of ISO 100– 12800.
- When ISO Auto is set, setting [Max for Auto] in [1]: "FISO speed settings] to [H (25600)] (2) expands the maximum speed in the automatic setting range to H (equivalent to ISO 25600).
- ISO speed can be set manually in a range of ISO 100–12800. Setting [ISO speed range] in [☆: '¬, ISO speed settings] to [H (25600)] (②) expands the maximum speed in the manual setting range to H (equivalent to ISO 25600).
- The minimum speed in the automatic or manual setting range is ISO 200 when [1]: Highlight tone priority] is set to [Enable] or [Enhanced] (2). Even when ISO speed expansion is set, the maximum limit will not be expanded.

In 🖃 mode

ISO speed is set automatically in a range of ISO 100–12800.

- Still Photo Shooting Screen
- Movie Recording Screen
- Scene Icons
- Playback Screen


Still Photo Shooting Screen

Each time you press the < INFO > button, the information display will change.

The display will show only the settings currently applied.



(1)	Maximum burst
(2)	Number of available shots/Sec. until self-timer shoots
(3)	Focus bracketing/HDR/Multiple exposures/Multi Shot Noise Reduction/Bulb timer/Interval timer/Dual Pixel RAW shooting
(4)	Shooting mode
(5)	AF area
(6)	AF operation
(7)	Image quality
(8)	Movie recording size
(9)	Metering mode
(10)	Still image aspect ratio
(11)	Electronic level
(12)	AF point (1-point AF)
(13)	No. of remaining shots for focus bracketing, multiple exposures, or interval timer
(14)	Movie recording time available
(15)	Battery level
(16)	Multi-function lock warning
(17)	Quick Control button
(18)	Anti-flicker shooting
(19)	White balance/White balance correction
(20)	Picture Style
(21)	Creative filters
(22)	Subject to detect
(23)	Touch Shutter/Create folder
(24)	Magnify button
(25)	Histogram (Brightness/RGB)

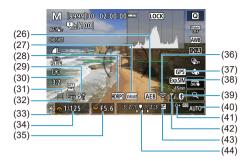

(26)	AEB/FEB
(27)	View Assist
(28)	HDR PQ
(29)	Flash ready/FE lock/High-speed sync
(30)	Accessory attached indicator
(31)	Drive mode
(32)	Electronic shutter
(33)	AE lock
(34)	Shutter speed
(35)	Aperture value
(36)	Wi-Fi function
(37)	GPS
(38)	Exposure simulation
(39)	Bluetooth function
(40)	ISO speed
(41)	Highlight tone priority
(42)	Wi-Fi signal strength
(43)	Exposure compensation
(44)	Exposure level indicator

Note

- You can specify the information displayed in response to pressing the < INFO > button (@).
- The electronic level is not displayed when the camera is connected via HDMI to a television.
- Other icons may be displayed temporarily after setting adjustments.

Each time you press the < INFO > button, the information display will change.

The display will show only the settings currently applied.



- (1) Multi-function lock warning
- (2) Battery level

(3)	Movie recording time available/Elapsed recording time
(4)	Shooting mode
(5)	AF area
(

- (6) Movie recording size
- (7) Digital zoom
- (8) Movie digital IS
- (9) Movie Servo AF
- (10) AF point (1-point AF)
- (11) Histogram (Brightness/RGB)
- (12) Movie recording in progress
- (13) White balance/White balance correction
- (14) Picture Style
- (15) Creative filters
- (16) Subject to detect
- (17) GPS
- (18) Electronic level



(19) View Assist

(-)	
(20)	HDR PQ
(21)	Audio recording level indicator (manual)
(22)	Movie self-timer
(23)	AE lock
(24)	Shutter speed
(25)	Overheat control
(26)	Aperture value
(27)	Wi-Fi function
(28)	Wi-Fi signal strength
(29)	Bluetooth function
(30)	Magnify button
(31)	ISO speed
(32)	Highlight tone priority
(33)	Exposure compensation
(34)	Exposure level indicator (metering levels)

Caution

- You can specify the information displayed in response to pressing the < INFO > button (2).
- The electronic level is not displayed when the camera is connected via HDMI to a television.
- The electronic level, grid lines, and histogram cannot be displayed during movie recording (and if they are currently displayed, recording a movie will clear the display).
- When movie recording starts, the movie recording remaining time will change to the elapsed time.

Note Other icons may be displayed temporarily after setting adjustments.

Subject Background		Peo	ople	Subjects Other Than People			
			In Motion*1	Nature/ Outdoor Scene	In Motion*1	Close*2	Background Color
	Bright			(A)	E	3	Gray
	Backlit			The second			Glay
Blue Sky Included			R	t)		8	Light blue
	Backlit			N.			Light blue
Sunset		*	3	2	?	*3	Orange
Spotlight		A					
Dark		F	7	<u>ل</u> ع		3	Dark blue
	With Tripod*1	*4*5	*3	*3			

In < (Δ) shooting mode, the camera detects the type of scene and sets all settings accordingly. The detected scene type is indicated in the upper left of the screen.

* 1: Not displayed during movie recording.

* 2: Displayed when the attached lens has distance information. With an extension tube or close-up lens, the icon displayed may not match the actual scene.

* 3: Icons of scenes selected from those that can be detected are displayed.

* 4: Displayed when all the following conditions apply.

The shooting scene is dark, it is a night scene, and the camera is mounted on a tripod.

* 5: Displayed with any of the following lenses.


- · EF300mm f/2.8L IS II USM
- · EF400mm f/2.8L IS II USM
- · EF500mm f/4L IS II USM
- · EF600mm f/4L IS II USM
- · Image Stabilizer lenses released in and after 2012.

* Slower shutter speeds are used when the conditions in both *4 and *5 apply.

Note

 For certain scenes or shooting conditions, the icon displayed may not match the actual scene.

Basic information display for still photos

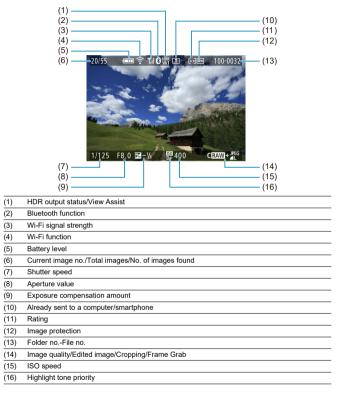

Caution

- If the image was taken by another camera, certain shooting information may not be displayed.
- It may not be possible to play back images taken with this camera on other cameras.

Detailed information display for still photos

(1)	(10)
(2) 4/52 7 1 0 100-0032 (2) 02/02/2022 10:00:00- (3)	— (11) — (12)
	— (13)
(5) P 1/125 F8.0 ⊠ −1/3 ¹⁵⁰ 400	(14)
(6) → KA2,G1 → A2,G1 → A2,G1 → A2,G1 → A2,G1	— (15) (16)
(7) CRAW + JPEG 31_0MB	— (16)
	(17)
(9)	— (18)

- (1) Aperture value
- (2) Picture Style/Settings
- (3) Shutter speed
- (4) White balance correction/Bracketing
- (5) Shooting mode/Multiple exposure/Frame Grab
- (6) White balance
- (7) Auto Lighting Optimizer
- (8) First image of scene
- (9) Image quality/Edited image/Cropping
- (10) Exposure compensation amount
- (11) Shooting date and time
- (12) Histogram (Brightness/RGB)
- (13) Scroll bar
- (14) ISO speed
- (15) Highlight tone priority
- (16) Metering mode
- (17) File size
- (18) Flash exposure compensation amount/Bounce/HDR shooting/Multi Shot Noise Reduction

* For images captured in RAW+JPEG/HEIF shooting, indicates RAW file sizes.

- * For images with added cropping information, lines are shown to indicate the image area.
- * During flash photography without flash exposure compensation, [2] will be displayed.
- * [13] indicates images shot with bounce flash photography.
- * The dynamic range adjustment amount is shown for images captured in HDR shooting.
- * [1] indicates images captured in multiple-exposure shooting.
- * [NR]] indicates images processed with Multi Shot Noise Reduction.
- * [Main and a line lapse movies.
- * [2] indicates images created and saved by performing RAW image processing, resizing, cropping, or frame-grabbing.
- * [4] indicates images cropped and then saved.

^{*} Lines indicating the image area are displayed for images taken with the aspect ratio set (
) and with RAW or RAW+JPEG set for image quality.

Detailed information display for movies

	(6)
31/50 ☞ 😤 Ti 🕃 (1)	변금 - 10 - 100-0132 02/02/2022 10:00:00
(2) → M 1/125 F8.0	1530 400
(3) (4) (5) (3) (3) (4) (5) (3) (4) (5) (4) (5) (4) (5)	00:00:12 70.3MB (7) (7) (8)

(1)	Movie playback
(2)	Movie recording mode/High Frame Rate mode
(3)	Movie recording size
(4)	Frame rate
(5)	Compression method
(6)	Movie orientation information
(7)	Recording time/Time code
(8)	Movie recording format

* For simplicity, explanations are omitted for items that are also included in basic/detailed information display for still photos, which are not shown here.

Note

 During movie playback, "*, *" is displayed for the [Fineness] and [Threshold] parameters of [Sharpness] in [Picture Style].

Туре

Type: Digital single-lens non-reflex AF/AE camera Lens mount: Canon RF mount Compatible lenses: Canon RF and RF-S lens groups * Using Mount Adapter EF-EOS R: Canon EF or EF-S lenses (EF-M lenses not compatible) Lens focal length: Approx. 1.6 times the focal length indicated on the lens

Image sensor

Type: CMOS sensor

Effective pixels*1*2	Max. approx. 24.2 megapixels
Total pixels*1	Approx. 25.5 megapixels
Screen size	Approx. 22.3 × 14.9 mm
CMOS size	APS-C
Dual Pixel CMOS AF	Supported

* 1: Rounded to the nearest 100,000.

* 2: Using RF or EF lenses.

The effective pixel count may be lower with certain lenses and image processing.

Recording system

Image recording format: Compliant with Design rule for Camera File system 2.0 and Exif 2.31*1

* 1: Supports time difference information

Image type and extension

Imag	Extension		
	JPEG	JPG	
	HEIF	HIF	
Ctill photos	RAW	CR3	
Still photos	Dual Pixel RAW		
	RAW burst		
	C-RAW		
Movies	ALL-I*1, IPB (Std), IPB (Light)	MP4	

* 1: Time-lapse movies only

Recording media

Recording media

SD, SDHC, SDXC memory cards

SD speed class	Supported
UHS speed class	Supported
UHS-I	Supported
UHS-II	Supported

Card slot: Equipped with a single slot

* Supports UHS-II

Still photo recording

Still photo pixel count

Image quality		Recorded pixels			
		Aspect ratio			
		3:2	4:3	16:9	1:1
	L	24.0 megapixels (6000 × 4000)	Approx. 21.3 megapixels*1 (5328 × 4000)	Approx. 20.2 megapixels*1 (6000 × 3368)	16.0 megapixels (4000 × 4000)
JPEG/	М	Approx. 10.6 megapixels (3984 × 2656)	Approx. 9.5 megapixels (3552 × 2664)	Approx. 8.9 megapixels*1 (3984 × 2240)	Approx. 7.1 megapixels (2656 × 2656)
HEIF	51	Approx. 5.9 megapixels (2976 × 1984)	Approx. 5.3 megapixels (2656 × 1992)	Approx. 5.0 megapixels*1 (2976 × 1680)	Approx. 3.9 megapixels (1984 × 1984)
	S2	Approx. 3.8 megapixels (2400 × 1600)	Approx. 3.4 megapixels*1 (2112 × 1600)	Approx. 3.2 megapixels*1 (2400 × 1344)	Approx. 2.6 megapixels (1600 × 1600)
RAW	RAW / CRAW	24.0 megapixels (6000 × 4000)			

* Values for recorded pixels are rounded off to the nearest 100,000th.

* RAW/C-RAW images are generated at 3:2, with information added about the specified aspect ratio, and JPEG images are generated at the specified aspect ratio.

* These aspect ratios (M / S1 / S2) and pixel counts also apply to resizing.

* 1: Aspect ratios are slightly different for these image sizes.

Image	e quality	File size Available shots [Approx. MB] [Approx.]*1			
	A L	8.7	3511		
	<u>a</u> L	4.6	6617		
	∎M	4.7	6439		
JPEG*2	M	2.6	11407		
	▲ S1	3.1	9761		
	a S1	1.8	16130		
	S2	1.8	16264		
HEIF*3	A L	9.1	3369		
	a l.	7.0	4389		
	∎M	5.4	5639		
	M	4.3	7172		
	 ∎S1	3.7	8221		
	∎S1	3.0	10104		
	S2	2.2	14117		
RAW*2	RAW	27.0	1142		
KAW**	CRAW	14.0	2230		
RAW+JPEG*2	RAW +	27.0 + 8.7	861		
RAWTJPEG -	CRAW +	14.0 + 8.7	1362		
RAW+HEIF*3	RAW +	29.9 + 9.1	785		
RAWTHEIF"		16.9 + 9.1	1183		

Still photo file size / Number of shots available

* 1: Number of shots available applies to a 32 GB card conforming to Canon testing standards.

* 2: When set to [HDR shooting HDR PQ: Disable].

* 3: When set to [HDR shooting HDR PQ: Enable].

* File size and number of shots available are measured based on Canon testing standards.

* File size and number of shots available vary depending on shooting conditions (including aspect ratio, subject, ISO speed, Picture Style, and Custom Function).

Maximum burst for continuous shooting [Approx.]

Number of shots available when set to [Drive mode: 型灯 without slower continuous shooting

Shutter mode Continuous shooting speed		1st-c	utter / Electronic urtain shots/sec.	Electronic shutter Approx. 23 shots/sec.		
Card used for recording		Standard card*1	High-speed card*2	Standard card*1	High-speed card* ²	
JPEG*3	A L	123	460	70	70	
	∎M	231	231	55	55	
	▲ S1	249	249	60	61	
	S2	272	272	59	60	
HEIF*4	A L	90	190	56	60	
	∎M	172	172	55	55	
	⊿ S1	208	208	60	60	
	\$2	220	227	59	59	
RAW*3	RAW	21	29	18	21	
	CRAW	40	157	32	43	
RAW+JPEG*3	RAW +	21	23	18	19	
	CRAW +	40	60	32	40	
RAW+HEIF*4	RAW +	21	23	17	17	
	CRAW +	40	49	32	38	

* Maximum burst as measured under conditions conforming to Canon testing standards (High-speed continuous + in One-Shot AF mode, ISO 100, and Standard Picture Style).

*Number of shots available varies depending on shooting conditions (including aspect ratio, subject, memory card brand, ISO speed, Picture Style, and Custom Function).

* 1: When using a 32 GB UHS-I card that conforms to Canon testing standards.

* 2: When using a 32 GB UHS-II card that conforms to Canon testing standards.

* 3: When set to [HDR shooting HDR PQ: Disable].

* 4: When set to [HDR shooting HDR PQ: Enable].

Movie recording

Movie recording format: MP4

Estimated recording time, movie bit rate, and file size

HDR PQ: OFF

Movie recording size				Total recording time (Approx.)		Movie bit		
Movie recording	Frame rate (fps)		Compression method	32 GB	128 GB	512 GB	rate (Approx. Mbps)	File size (Approx. MB/min.)
	NTSC	PAL						1
4K UHD	29.97 23.98	25.00	IPB (Standard)	35 min.	2 hr. 21 min.	9 hr. 27 min.	120	860
			IPB (Light)	1 hr. 10 min.	4 hr. 43 min.	18 hr. 52 min.	60	431
4K UHD Crop	59.94	50.00	IPB (Standard)	18 min.	1 hr. 14 min.	4 hr. 56 min.	230	1647
			IPB (Light)	35 min.	2 hr. 21 min.	9 hr. 27 min.	120	860
4K UHD (Time-lapse movies)	29.97	25.00	ALL-I	9 min.	36 min.	2 hr. 25 min.	470	3362
Full HD (High Frame Rate movies)	119.88	100.00	IPB (Standard)	35 min.	2 hr. 22 min.	9 hr. 28 min.	120	858
			IPB (Light)	1 hr. 0 min.	4 hr. 3 min.	16 hr. 15 min.	70	501
Full HD	59.94 50.0	50.00	IPB (Standard)	1 hr. 10 min.	4 hr. 43 min.	18 hr. 52 min.	60	431
		30.00	IPB (Light)	2 hr. 0 min.	8 hr. 3 min.	32 hr. 15 min.	35	252
	29.97 23.98 25.00	25.00	IPB (Standard)	2 hr. 20 min.	9 hr. 23 min.	37 hr. 35 min.	30	216
		20.00	IPB (Light)	5 hr. 47 min.	23 hr. 11 min.	92 hr. 47 min.	12	88
Full HD (Time-lapse movies)	29.97	25.00	ALL-I	47 min.	3 hr. 9 min.	12 hr. 38 min.	90	644

* Bit rate only applies to video output, not audio or metadata.

* Movie recording stops when the maximum recording time per movie is reached.

* Sound is not recorded for approx, the last two frames when the compression method for movie recording quality is IPB (Standard) or IPB (Light). Moreover, the video and sound may be slightly out of sync when movies are played back in Windows.

HDR PQ: ON

Movie recording size				Total recording time (Approx.)		Movie bit	File size	
		e rate os)	Compression method	32 GB	128 GB	512 GB	rate (Approx. Mbps)	(Approx. MB/min.)
	NTSC	PAL	motiou					
4K UHD	29.97	97 25.00	IPB (Standard)	25 min.	1 hr. 40 min.	6 hr. 40 min.	170	1218
	23.98	23.00	IPB (Light)	50 min.	3 hr. 20 min.	13 hr. 20 min.	85	610
4K UHD	59.94	50.00	IPB (Standard)	12 min.	50 min.	3 hr. 20 min.	340	2434
Сгор	59.94	50.00	IPB (Light)	25 min.	1 hr. 40 min.	6 hr. 40 min.	170	1218
4K UHD (Time-lapse movies)	29.97	25.00	ALL-I	9 min.	36 min.	2 hr. 25 min.	470	3362
Full HD	119.88 10	9.88 100.00	IPB (Standard)	23 min.	1 hr. 34 min.	6 hr. 19 min.	180	1287
(High Frame Rate movies)		100.00	IPB (Light)	42 min.	2 hr. 50 min.	11 hr. 22 min.	100	715
	59.94 50.0	50.00	IPB (Standard)	47 min.	3 hr. 9 min.	12 hr. 36 min.	90	646
Full HD		50.00	IPB (Light)	1 hr. 24 min.	5 hr. 39 min.	22 hr. 38 min.	50	360
	29.97	25.00	IPB (Standard)	1 hr. 34 min.	6 hr. 17 min.	25 hr. 8 min.	45	324
	23.98	23.00	IPB (Light)	2 hr. 30 min.	10 hr. 3 min.	40 hr. 15 min.	28	202
Full HD (Time-lapse movies)	29.97	25.00	ALL-I	31 min.	2 hr. 6 min.	8 hr. 25 min.	135	966

* Bit rate only applies to video output, not audio or metadata.

* Movie recording stops when the maximum recording time per movie is reached.

* Sound is not recorded for approx. the last two frames when the compression method for movie recording quality is IPB (Standard) or IPB (Light). Moreover, the video and sound may be slightly out of sync when movies are played back in Windows.

Card performance requirements (movie recording) [write/read speed]

Movie recording size			e	SD card	
Resolution	(fr	e rate os)	Compression	8 bit	10 bit (HDR PQ)
	NTSC	PAL	method		
	59.94	50.00	IPB (Standard)	UHS Speed Class 3 or higher	Video Speed Class V60 or higher
4K UHD			IPB (Light)	UHS Speed C	lass 3 or higher
4K OHD	29.97		IPB (Standard)	UHS Speed C	lass 3 or higher
	23.98	25.00	IPB (Light)	SD Speed Class 10 or higher	UHS Speed Class 3 or higher
			IPB (Standard)	UHS Speed Class 3 or higher	
	119.88	100.00	IPB (Light)	SD Speed Class 10 or higher	UHS Speed Class 3 or higher
Full HD	59.94	50.00	IPB (Standard)	SD Speed Class 10 or higher	UHS Speed Class 3 or higher
1 di Hb	59.94	50.00	IPB (Light)	SD Speed Class 6 or higher	SD Speed Class 10 or higher
	29.97	.97 25.00	IPB (Standard)	SD Speed Class 6 or higher	
	23.98	25.00	IPB (Light)	SD Speed Cl	ass 4 or higher
4K UHD (Time-lapse movies)	29.97	25.00	ALL-I	Read speed of 60 MB/sec. or higher	
Full HD (Time-lapse movies)	29.97	25.00	ALL-I	Read speed of 30 MB/sec. or higher	

Built-in and external microphones

Built-in microphone: Stereo microphones External microphone (External microphone IN terminal): 3.5 mm diameter stereo mini jack External microphone (Multi-function shoe): Compatible with Directional Stereo

Microphone DM-E1D

Viewfinder

Type: OLED color electronic viewfinder Screen size: Approx. 1.00 cm (0.39 inch) Dot count: Approx. 2,360,000 dots Magnification / angle of view: Approx. 0.95× / Approx 28° (with 3:2 display, an RF50mm F1.2 L USM lens at infinity, -1 m⁻¹) Coverage: Approx. 100% Eyepoint: Approx. 22 mm (at -1m⁻¹ from eyepiece lens end) Dioptric adjustment: Approx. -3.0 to +1.0m⁻¹ (dpt)

Screen

Type: TFT color, liquid-crystal monitor Screen size: Approx. 7.5 cm (3.0 inch) (screen aspect ratio of 3:2) Dot count: Approx. 1,040,000 dots Angle of view: Approx. 150° vertically and horizontally Coverage: Approx. 100% vertically and horizontally (at L image quality and an aspect ratio of 3:2) Screen brightness: Adjustable to one of seven brightness levels Touch-screen: Capacitive sensing

HDMI output

HDMI video / audio output: HDMI micro OUT terminal (Type D) * HDMI CEC not supported HDMI resolution: Auto / 1080p

Autofocus

Focusing method: Dual Pixel CMOS AF

Focusing brightness range

Still photo shooting: EV -4.0 to 20 Conditions: When used with an f/1.2 lens,* center AF point, One-Shot AF, at room temperature and ISO 100 * Except for RF lenses with a Defocus Smoothing (DS) coating.

Movie recording: EV –3.5 to 20

Conditions: When used with an f/1.2 lens,* center AF point, One-Shot AF, at room temperature and ISO 100, recording in Full HD (29.97 / 25.00 fps) * Except for RF lenses with a Defocus Smoothing (DS) coating.

Focusing operation

	Still photo shooting	Movie recording
AF operation	One-Shot AF Servo AF In A+ mode, automatically switched from One-Shot AF to Servo AF depending on the subject	One-Shot AF Movie Servo AF
Manual focus	Supported	Supported

Focus mode switch: AF / MF

* Applies when an RF or RF-S lens without a focus mode switch is attached.

* When lenses with a focus mode switch are attached, the setting on the lens takes precedence.

Lens compatibility based on AF area: Refer to the Canon website

Number of AF area available for automatic selection

Focusing area	Horizontal: Approx. 100%, Vertical: Approx. 100%
Still photos	Max. 651 zones (31 × 21)
Movies	Max. 527 zones (31 × 17)

Selectable positions for AF point

Focusing area		Horizontal: Approx. 90%, Vertical: Approx. 100%
Numbers of	Still photos	Max. 4503 positions (79 × 57)
positions	Movies	Max. 3713 positions (79 × 47)

* When set to [1-point AF] and selected using the Multi-controller.

Exposure control

Metering functions under various shooting conditions

Item		Still photo shooting	Movie recording	
Metering sensor		384-zone (24×16) metering using image sensor output signals		
	Evaluative metering	0	° * When face is detected	
Metering mode	Partial metering	 * Approx. 5.8 % in the center of the screen 		
Metering mode	Spot metering	 * Approx. 2.9 % in the center of the screen 		
Center-weighted average		0	° * When face is not detected	
Metering brightness range (At room temperature, ISO 100)		EV -2 to 20	EV 0 to 20	

ISO speed (recommended exposure index) in still photo shooting

Manual ISO speed setting for still photos

Normal ISO speed	ISO 100–32000 (in 1/3-stop or 1-stop increments)
Expanded ISO speed	H (equivalent to ISO 51200)

* ISO 200-32000 when [Highlight tone priority] is configured.

* Expanded ISO speeds cannot be set in HDR mode or for HDR shooting (HDR PQ).

Manual ISO speed setting range limits for still photos

Maximum	ISO 200-H (equivalent to ISO 51200, in 1-stop increments)
Minimum	ISO 100–32000 (in 1-stop increments)

ISO Auto setting range limits for still photos

Maximum	ISO 200-32000 (in 1-stop increments)
Minimum	ISO 100-25600 (in 1-stop increments)

ISO Auto details for still photos

Shooting mode			Using flash		
Variable control of maximum ISO Auto limit for E-TTL		No flash	Compatible lenses	Incompatible lenses	
Fv					
Creative Zone	Р		ISO 100*1*2-6400*2	ISO 100*1+2-1600*2	
	Τν	ISO 100*1*2-32000*2			
	Av				
	м				
В		ISO 400*4			
	ها	ISO 100-6400	ISO 100-6400	ISO 100-3200*3	
Basic Zone	SCN	Varies by shooting mode			
Q		Varies by shooting mode			

* 1: ISO 200 when set to [Highlight tone priority: Enable/Enhanced].

*2: Varies depending on the [Maximum] and [Minimum] settings for [Auto range].

* 3: When using built-in flash. ISO 1600 when using an external flash unit.

* 4: If outside the setting range, changed to the value most close to ISO 400.

Variable control of maximum ISO Auto limit for E-TTL for still photos: Supported

ISO speed (recommended exposure index) in movie recording

Manual ISO speed setting for movies

	ISO speed
Normal ISO speed	ISO 100–12800 (in 1/3- or 1-stop increments)
Expanded ISO speed	H (equivalent to ISO 16000–25600) (in 1/3-stop increments)

* Maximum and minimum ISO speed when set manually corresponds to the [ISO speed range] setting.

* The setting range is ISO 200-12800 when [Highlight tone priority] is configured.

* Expanded ISO speeds are not available in HDR PQ movie, HDR movie, or High Frame Rate movie recording.

Automatic ISO speed setting for movies (in [ISO Auto] mode)

	ISO speed
Normal ISO speed	ISO 100–12800 (in 1/3- or 1-stop increments)
Expanded ISO speed	H (equivalent to ISO 25600)

* Maximum ISO speed when set automatically corresponds to the [Max for Auto] setting.

* The setting range is ISO 200-12800 when [Highlight tone priority] is configured.

* Expanded ISO speeds are not available in HDR PQ movie, HDR movie, or High Frame Rate movie recording.

Manual ISO speed setting range limit for movies

The manual ISO speed setting range (maximum and minimum) can be changed.

Maximum	ISO 200–12800 or H (equivalent to ISO 25600, in 1-stop increments)
Minimum	ISO 100–12800 (in 1-stop increments)

Maximum ISO Auto setting for movies

Max. for ISO Auto	ISO 6400 / 12800 / H (equivalent to ISO 25600)
Time-lapse movies Max for ISO Auto	ISO 400–12800 (in 1-stop increments)

Shutter

Shutter functionality in still photo shooting

Type:

Electronically controlled focal-plane shutter Rolling shutter, using the image sensor

Shutter mode

	Flash
Mechanical shutter	Possible
Electronic 1st curtain	Possible
Electronic shutter	Disabled

Shutter speed / X-sync speed

Shutte	r mode	Setting range	Set increment	X-sync
Mechanical shutter 1/4000-30 sec., Bulb		1/4000-30 sec., Bulb	1/3 stop, 1/2 stop	1/200 sec.
Electronic 1st curtain		1/4000-30 sec., Bulb	1/3 stop, 1/2 stop	1/250 sec.
Electronic shutter	High-speed continuous shooting +	1/4000-30 sec., Bulb	1/3 stop, 1/2 stop	
	Other than above	1/16000, 1/8000–30 sec., Bulb		

Shutter functionality in movie recording

Type: Rolling shutter, using the image sensor

Shutter Speed:

Movie auto exposure: 1/4000-1/25*1 sec.

Movie manual exposure: 1/4000-1/8^{*1} sec.

* Varies by shooting mode and frame rate.

* 1: 1/125 sec. (NTSC) or 1/100 sec. (PAL) with [High Frame Rate] set to [Enable].

Built-in flash

Type: Retractable flash Retraction method: Manual Guide no.: Guide no. of approx. 6 (ISO 100/m) / 19.7 (ISO 100/feet) Flash exposure compensation: ±2 in 1/3-stop increments Out of flash range (Example) (Approx.)

	Lens: RF-S18-45mm F4.5-6.3 IS STM			
ISO speed	Wide-angle end f/4.5		Telephoto end f/6.3	
	m	ft.	m	ft.
100	0.2–1.1	0.7–3.6	0.4–0.8	1.3–2.6
1600	0.4-4.4	1.3–14.4	0.4–3.2	1.3–10.5
25600	1.8–17.8	5.9-58.4	1.3–12.7	4.3-41.7

* Rounded to the first decimal place.

* When shooting with a far focus distance at high ISO speeds, preflash will cause metering limitations to be exceeded and may prevent correct exposure.

External flash

Accessory shoe contacts: 21 pins for accessories compatible with the multi-function shoe, 5 pins for X-sync and communication Flash exposure compensation: ±3-stops in 1/3- or 1/2-stop increments

Drive

Drive mode and continuous shooting speed

Drive modes	Operating modes	Mechanical shutter	Electronic 1st curtain	Electronic shutter	
Single shooting		•			
High-speed continuous shooting	One-Shot AF	Max. approx. 15	Max. approx. 15 shots/sec.	Max. approx. 23 shots/sec.	
+	Servo AF	shots/sec.			
High-speed continuous shooting	One-Shot AF	Max. approx. 6.3	Max. approx. 7.7 shots/sec.	Max. approx. 15 shots/sec.	
	Servo AF	shots/sec.			
Low-speed	One-Shot AF	Max. approx. 3.0	Max. approx. 3.0	Max. approx. 3.0 shots/sec.	
continuous shooting	Servo AF	shots/sec.	shots/sec.		
Self-timer: 10 sec / remote control		0			
Self-timer: 2 sec / remote control		0			
Self-timer: Continuous		0			

Playback functions

Item	Still photos	Movies	
AF point display	0		
Playback grid	Off / 3x3 / 6x4 / 3x3+diag		
Magnified view	1.5x-10x (15 levels)		
Set image search conditions	Search conditions Rating / Date / Folder / Protection / Type of file (1) / Type of file (2)		
Ratings	OFF / ★ to ★★★★★ Select images / Select range / All images in folder / All images on card / All found images		
Protect images	Select images / Select range / All images in folder / Unprotect all images in folder / All images on card / Unprotect all images on card / All found images / Unprotect all found images		
In-camera RAW image processing	o		
Resizing	0		
Cropping	0		

Cloud RAW image processing

A feature for uploading images to image.canon for cloud-based RAW processing. Requires some preparation, such as pairing the camera and submitting information for billing purposes.

Frame grab from 4K movies

Individual frames of 4K movies recorded with this camera can be saved as approx. 8.3megapixel (3840×2160) still photos (JPEG or HEIF*).

* From normal movies, still photos are saved as JPEGs, and from HDR PQ movies, as HEIF images.

* Only 4K and 4K Crop movies can be extracted.

* Extracted still photos cannot be resized or cropped within the camera.

Print order (DPOF)

Compliant with DPOF Version 1.1

External interface

Digital terminal

Terminal type	USB Type-C
Transmission	Hi-Speed USB (USB 2.0) equivalent
Applications	For computer communication / smartphone communication USB battery charging / camera power supply

HDMI output terminal: HDMI micro OUT terminal (Type D)

External microphone input terminal: Equipped with the 3.5 mm diameter stereo mini jack Remote control terminal: Remote Switch RS-60E3 type terminal supported

Power source

Battery

Compatible battery packs	LP-E17
Quantity used	1

Battery check: Automatic battery check with 4-level display when the power switch is set to ON

Battery information

Power supply	Туре
Remaining capacity	4-level indicator
Recharge performance	3 levels

USB battery charging/Camera power supply: Using USB Power Adapter PD-E1

AC power source

Power source section	AC Adapter AC-E6N
Connected section	DC Coupler DR-E18

Number of shots available

Type of shooting	Temperature	Battery life (Approx. number of shots)		
		Using 50% flash		AE shooting*2
		Power saving*1	Smooth*2	Power saving
Viewfinder shooting	+23°C / 73°F	260	210	290
On-screen shooting		430	350	450

* 1: CIPA guidelines compliant.

* 2: Based on CIPA guidelines, conforming to Canon testing standards.

* Using a new or fully charged LP-E17 with an SD card conforming to Canon testing standards.

* The number of shots available may vary greatly depending on the shooting environment.

* Fewer shots may be available with a compatible accessory attached to the multifunction shoe, because the camera powers the accessory.

Available operating time

Conditions of use			Temperature	Available operating time
Time available for bulb exposure			+23°C / 73°F	Approx. 2 hr. 40 min.
Time available for Live View display (on-screen recording)			+23°C / 73°F	Approx. 2 hr. 50 min.
Time available for movie recording * Movie Servo AF: Disable	Full HD	 IPB (Standard) 29.97 fps / 25.00 fps 	+23°C / 73°F	Approx. 2 hr.
			0°C / 32°F	Approx. 1 hr. 50 min.
Available movie playback time (normal playback)	4K	 IPB (Standard) 29.97 fps / 25.00 fps 	+23°C / 73°F	Approx. 3 hr.

* With a fully charged LP-E17

Dimensions and weight

Dimensions

$(W) \times (H) \times (D)$	Approx. 122.5 × 87.8 × 83.4mm / 4.82 × 3.46 × 3.28 in.
-----------------------------	--

* Based on CIPA guidelines.

Weight

Body (including battery and SD card) * Based on CIPA guidelines.	Approx. 429 g / 15.14 oz.
Body only	Approx. 382 g / 13.48 oz.

* Not including body cap or shoe cover.

Operating environment

Operating temperature: 0–40°C / 32–104°F Operating humidity: 85% or less

Wi-Fi (Wireless LAN) communication

Supported standards (Equivalent to IEEE 802.11b/g/n standards)

Wi-Fi standards	Transmission method	Maximum link speed
IEEE 802.11b	DSSS modulation	11 Mbps
IEEE 802.11g	OFDM modulation	54 Mbps
IEEE 802.11n	Or Divi modulation	72.2 Mbps

Transmission frequency (Center frequency)

Frequency	2412-2462 MHz
Channels	1–11 ch

Authentication and data encryption methods

Connection method	Authentication method	Encryption method
Comero accore point	WPA2 / WPA3-Personal	AES
Camera access point	Open	Disable
	Open	WEP
		Disable
Infrastructure	Shared key	WEP
	WPA / WPA2 / WPA3-Personal	TKIP AES

Bluetooth

Standards compliance: Bluetooth Specification Version 4.2 compliant (Bluetooth Low Energy technology)

Transmission method: GFSK modulation

- All data above is based on Canon testing standards and CIPA (Camera & Imaging Products Association) testing standards and guidelines.
- Dimensions and weight listed above are based on CIPA Guidelines (except weight for camera body only).
- Product specifications and appearance are subject to change without notice.
- If a problem occurs with a non-Canon lens attached to the camera, contact the respective lens manufacturer.

- Trademarks
- About MPEG-4 Licensing
- Accessories

Trademarks

- Adobe is a trademark of Adobe Systems Incorporated.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- App Store and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Google Play and Android are trademarks of Google LLC.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- QR Code is a trademark of Denso Wave Inc.
- SDXC logo is a trademark of SD-3C, LLC.
- HDMI, HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- The Wi-Fi CERTIFIED logo and the Wi-Fi Protected Setup mark are trademarks of the Wi-Fi Alliance.
- The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Canon Inc. is under license. Other trademarks and trade names are those of their respective owners.
- USB Type-C[™] and USB-C[™] are trademarks of USB Implementers Forum.
- All other trademarks are the property of their respective owners.

"This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard."

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE <u>HTTP://WWW.MPEGLA.COM</u>

* Notice displayed in English as required.

Use of genuine Canon accessories is recommended

This product is designed to achieve optimum performance when used with genuine Canon accessories. Therefore, using this product with genuine accessories is highly recommended. Canon shall not be liable for any damage to this product and/or accidents such as malfunction, fire, etc. caused by the failure of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery). Please note that repairs arising out of the malfunction of non-genuine accessories will not be covered by the warranty for repairs, although you may request such repairs on a chargeable basis.

Caution

 Battery Pack LP-E17 is dedicated to Canon products only. Using it with an incompatible battery charger or product may result in malfunction or accidents for which Canon cannot be held liable.

Check the following website for details on compatible accessories.

https://cam.start.canon/H002/

