



Network Camera Web 3.0

Operation Manual

V2.0.0

Foreword

General

This manual introduces the functions, basic configuration, general operation, configuration, installation and system maintenance of network camera.

Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, may result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision Content	Release Date
V2.0.0	1. Consolidate the outline, and add baseline and safety contents, and some intelligent functions such as face recognition and ANPR. 2. Delete some old function such as stereo vision.	July 2019
V1.0.4	1. Update the chapters of "People Counting" and "Heat Map" function. 2. Add VR mode of Fisheye device. 3. Add video structuralization function.	March 2019
V1.0.3	Add Stereo Analysis function.	November 2018
V1.0.2	1. Add chapters of "Initialization" and "Stereo vision." 2. Update the chapters of "Account", "Profile Management" and "SNMP."	October 2017
V1.0.1	First release.	September 2016

Privacy Protection Notice

As the device user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures include but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

Important Safeguards and Warnings

Electrical safety

- All installation and operation should conform to your local electrical safety codes.
- The power source shall conform to the Safety Extra Low Voltage (SELV) standard, and supply power with rated voltage which conforms to Limited power Source requirement according to IEC60950-1. Please Description that the power supply requirement is subject to the device label.
- Make sure the power supply is correct before operating the device.
- A readily accessible disconnect device shall be incorporated in the building installation wiring.
- Prevent the power cable from being trampled or pressed, especially the plug, power socket and the junction extruded from the device.

Environment

- Do not aim the device at strong light to focus, such as lamp light and sun light; otherwise it might cause over brightness or light marks, which are not the device malfunction, and affect the longevity of Complementary Metal-Oxide Semiconductor (CMOS).
- Do not place the device in a damp or dusty environment, extremely hot or cold temperatures, or the locations with strong electromagnetic radiation or unstable lighting.
- Keep the device away from any liquid to avoid damage to the internal components.
- Keep the indoor device away from rain or damp to avoid fire or lightning.
- Keep sound ventilation to avoid heat accumulation.
- Transport, use and store the device within the range of allowed humidity and temperature.
- Heavy stress, violent vibration or water splash are not allowed during transportation, storage and installation.
- Pack the device with standard factory packaging or the equivalent material when transporting the device.
- Install the device in the location where only the professional staff with relevant knowledge of safety guards and warnings can access. The accidental injury might happen to the non-professionals who enter the installation area when the device is operating normally.

Operation and Daily Maintenance

- Do not touch the heat dissipation component of the device to avoid scald.
- Carefully follow the instructions in the manual when performing any disassembly operation about the device; otherwise, it might cause water leakage or poor image quality due to unprofessional disassemble. Please contact after-sale service for desiccant replacement if there is condensed fog found on the lens after unpacking or when the desiccant turns green. (Not all models are included with the desiccant).
- It is recommended to use the device together with lightning arrester to improve lightning

protection effect.

- It is recommended connect the grounding hole to the ground to enhance the reliability of the device.
- Do not touch the image sensor (CMOS) directly. Dust and dirt could be removed with air blower, or you can wipe the lens gently with soft cloth that moistened with alcohol.
- Device body can be cleaned with soft dry cloth, which can also be used to remove stubborn stains when moistened with mild detergent. To avoid possible damage on device body coating which could cause performance decrease, do not use volatile solvent such as alcohol, benzene, diluent and so on to clean the device body, nor can strong, abrasive detergent be used.
- Dome cover is an optical component, do not touch or wipe the cover with your hands directly during installation or operation. For removing dust, grease or fingerprints, wipe gently with moisten oil-free cotton with diethyl or moisten soft cloth. You can also air blower to remove dust.



WARNING

- Please strengthen the protection of network, device data and personal information by adopting measures which include but not limited to using strong password, modifying password regularly, upgrading firmware to the latest version, and isolating computer network. For some device with old firmware versions, the ONVIF password will not be modified automatically along with the modification of the system password, and you need to upgrade the firmware or manually update the ONVIF password.
- Use standard components or accessories provided by manufacturer and make sure the device is installed and maintained by professional engineers.
- The surface of the image sensor should not be exposed to laser beam radiation in an environment where a laser beam device is used.
- Do not provide two or more power supply sources for the device unless otherwise specified. A failure to follow this instruction might cause damage to the device.

Table of Contents

Foreword	I
Important Safeguards and Warnings	III
1 Overview.....	1
1.1 Introduction	1
1.2 Network Connection.....	1
1.3 Function	1
1.3.1 Basic Function	1
1.3.2 Intelligent Function.....	2
2 Configuration Flow.....	5
3 Device Initialization	6
4 Basic Configuration	9
4.1 Login.....	9
4.2 Live.....	10
4.2.1 Live Interface	10
4.2.2 Encode bar	11
4.2.3 Live view Function Bar	12
4.2.4 Window Adjustment Bar	14
4.3 PTZ Operation.....	20
4.3.1 Configuring External PTZ Protocol.....	20
4.3.2 Configuring PTZ Function.....	21
4.3.3 Calling PTZ	31
4.4 Playback.....	34
4.4.1 Playback Interface	34
4.4.2 Playing back Video or Picture.....	37
4.4.3 Clipping Video.....	39
4.4.4 Downloading Video or Picture	40
4.5 Camera.....	41
4.5.1 Conditions.....	41
4.5.2 Setting Video Parameters.....	53
4.5.3 Audio	67
4.6 Network	69
4.6.1 TCP/IP	70
4.6.2 Port	71
4.6.3 PPPoE	73
4.6.4 DDNS.....	74
4.6.5 SMTP (Email).....	75
4.6.6 UPnP.....	77
4.6.7 SNMP.....	78
4.6.8 Bonjour.....	80
4.6.9 Multicast.....	81
4.6.10 802.1x	82

4.6.11 QoS	82
4.6.12 Access Platform	83
4.7 Storage	85
4.7.1 Schedule	85
4.7.2 Destination	86
4.8 System	89
4.8.1 General	89
4.8.2 Date & Time	90
4.8.3 Splicing	91
4.8.4 Account	92
4.8.5 Safety	99
4.8.6 Peripheral	106
5 Event	110
5.1 Setting Alarm Linkage	110
5.1.1 Alarm Linkage	110
5.1.2 Subscribing Alarm	116
5.2 Setting Smart Track	118
5.2.1 Setting Calibration Parameters for Smart Track	118
5.2.2 Enabling Alarm Track	119
5.3 Setting Panoramic Calibration	121
5.4 Setting Video Detection	122
5.4.1 Setting Motion Detection	122
5.4.2 Setting Video Tamper	124
5.4.3 Setting Scene Changing	125
5.5 Setting Audio Detection	125
5.6 Setting Smart Plan	126
5.7 Setting IVS Analysis	127
5.7.1 Global Configuration	128
5.7.2 Rule Configuration	130
5.8 Setting Crowd Map	134
5.8.1 Global Configuration	134
5.8.2 Rule Configuration	135
5.9 Setting Face Recognition	138
5.9.2 Setting Face Detection	138
5.9.3 Setting Face Database	140
5.9.4 Setting Face Recognition Alarm Linkage	147
5.9.5 Viewing Face Recognition Result	148
5.10 Setting Face Detection	150
5.11 Setting People Counting	153
5.11.1 People Counting	153
5.11.2 Viewing People Counting Report	155
5.12 Setting Heat Map	156
5.12.1 Heat Map	156
5.12.2 Viewing Heat Map Report	157
5.13 Setting Stereo Analysis	157
5.13.1 Setting Rules for Stereo Analysis	157
5.13.2 Calibration Configuration	160

5.14 Setting ANPR	161
5.14.1 Scene Configuration	162
5.14.2 Setting Picture Overlay	164
5.14.3 Viewing ANPR Report.....	165
5.15 Setting Video Structralization.....	166
5.15.1 Scene Configuration	166
5.15.2 Setting Picture Information	168
5.15.3 Viewing Video Structralization Report	169
5.16 Setting Relay-in.....	170
5.17 Setting Abnormality	170
5.17.1 Setting SD Card.....	171
5.17.2 Setting Network	171
5.17.3 Setting Illegal Access.....	172
5.17.4 Setting Voltage Detection	173
5.17.5 Setting Security Exception.....	173
6 Maintenance.....	175
6.1 Requirements.....	175
6.2 Auto Maintain	175
6.3 Resetting Password	176
6.4 Backup and Default.....	178
6.4.1 Import/Export	178
6.4.2 Default.....	179
6.5 Upgrade	179
6.6 Information	180
6.6.1 Version	180
6.6.2 Log	180
6.6.3 Remote Log	181
6.6.4 Online User.....	182
Appendix 1 Cybersecurity Recommendations	183

1 Overview

1.1 Introduction


IP camera (Internet Protocol camera), is a type of digital video camera that receives control data and sends image data through internet. They are commonly used for surveillance, requiring no local recording device, but only a local network.

IP camera is divided in to single-channel camera and multi- channel camera according to the channel quantity. For multi- channel camera, you can set the parameters for each channel.

1.2 Network Connection

The common IPC network is connecting IPC and PC through network switch or router. See Figure 1-1.

Figure 1-1 Common IPC network

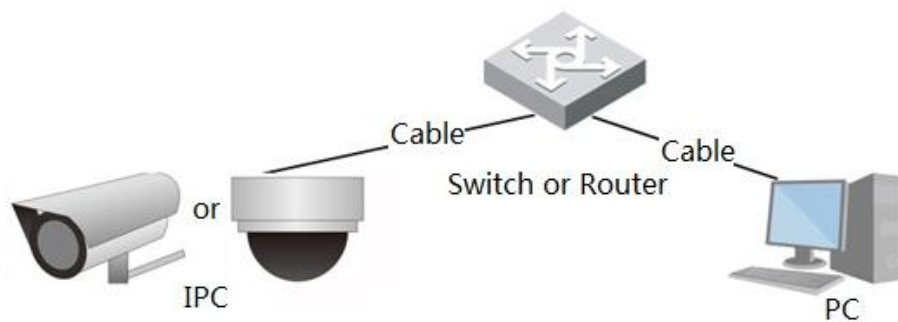

Get IP address by searching on ConfigTool, and then you can start accessing IPC through network.

1.3 Function

Functions might vary with different devices, and the actual product shall prevail.

1.3.1 Basic Function

Real-time Monitoring

- Live view
- When live viewing the image, you can enable audio, voice talk and connect monitoring center for quick processing on the abnormality.
- Adjust the image to the proper position by PTZ.
- Snapshot and triple snapshot abnormality of the monitoring image for subsequent view and processing.
- Record abnormality of monitoring image for subsequent view and processing.
- Configure coding parameters, and adjust live view image.

Record

- Auto record as schedule.
- Play back record and picture to view the necessary record or picture.
- Download record and picture to be judgment basis.
- Alarm linked record.

Account

- Add, modify and delete user group, and manage user authorities according to user group.
- Add, modify and delete user, and configure user authorities.
- Modify user password.

1.3.2 Intelligent Function

Alarm

- Set alarm prompt mode and tone according to alarm type.
- View alarm prompt message.

Smart Track

- Smart track and alarm track.
- Switch between smart track and speed dome auto track.

Video Detection

- Motion detection, video tampering detection and scene changing detection.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Audio Detection

- Audio input abnormal detection and intensity change detection.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

IVS

- Cross fence, tripwire, intrusion, abandoned object, moving object, fast moving, parking detection, people gathering, and loitering detection.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Crowd Map

- View crowd distribution in real time for the timely arm to avoid accidents like stampede.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Face Detection

- Detection face and display the related attributes on live interface.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Face Recognition

- After detecting face, make comparison between the detected face with the face in face database, and activates alarm output.
- Query the recognition result.

People Counting

- Count the people flow in/out the detection area, and output report.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Heat Map

- Count cumulative density of moving objects.
- View report of heat map.

Stereo Analysis

- Include fall detection, violence detection, people No. error, people approaching detection, and strand detection.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

ANPR

- Recognize plate number in detection area, and display the related information on live interface.
- When alarm is triggered, the system links alarm output and snapshot.

Video Structuralization

- Snap people, non-motor vehicle and vehicle, and display the related information on the live interface.

- When alarm is triggered, the system links alarm output.

Alarm Setting

- When external alarm input device generates alarm, the alarm is triggered.
- When alarm is triggered, the system links record, alarm output, sending email, PTZ operation, and snapshot and so on.

Abnormality

- SD card error, network disconnection, illegal access and voltage detection.
- When SD card error or illegal access is triggered, the system links alarm output and sending email.
- When network disconnection alarm is triggered, the system links record and alarm output.
- When the input voltage is more or less than the rated voltage, the alarm is triggered and the system links sending email.

2 Configuration Flow

For the device configuration flow, see Figure 2-1. For details, see Table 2-1. Configure the device according to the actual situation.

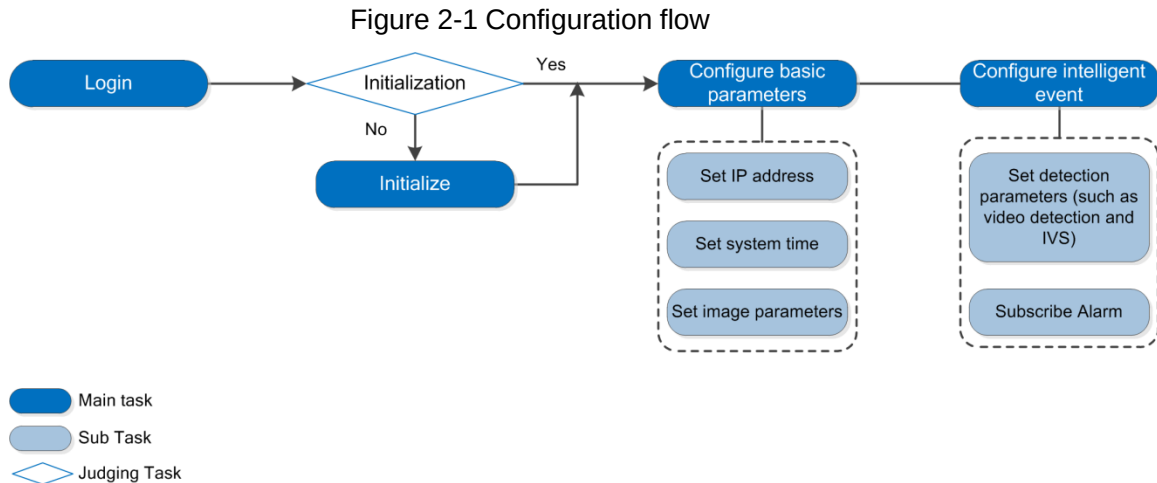


Table 2-1 Description of flow

Configuration		Description	Reference
Login		Open IE browser and enter IP address to login to web interface, The devices IP address is 192.168.1.108 by default.	4.1 Login
Initialization		Initialize device when you use the device for the first time.	3 Device Initialization
Basic parameters	IP address	Modify IP address according to network planning for the first use or during network adjustment.	4.6.1 TCP/IP
	Date & time	Set date & time to ensure the record time is correct.	4.8.2 Date & Time
	Image parameters	Adjust image parameters according to the actual situation to ensure the image quality.	4.5.1 Conditions
Intelligent Event	Detection rules	Configure the necessary detection rules, including video detection and IVS and so on.	5 Event
	Subscribe alarm	Subscribe alarm event. When the subscribed alarm is triggered, the system will record the alarm on alarm tab.	5.1.2 Subscribing Alarm

3 Device Initialization

Device initialization is required for first-time use. This manual is based on the operation on the web interface. You can also initialize device with ConfigTool, NVR, or platform devices.

Before first login, you need to set the password for admin account to proceed.



- To ensure device safety, please keep the password properly after initialization and change the password regularly.
- When initializing device, keep the PC IP and device IP in a same network.

Step 1 Open IE browser, enter the IP address of the device in the address bar, and then press Enter.

The **Device Initialization** interface is displayed, see Figure 3-1.



The IP is 192.168.1.108 by default.

Figure 3-1 Device initialization

Device Initialization

Username

admin

Password

The minimum pass phrase length is 8 characters

Weak

Middle

Strong

Confirm Password

Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them.(please do not use special symbols like *";: &)

☒ Email Address

To reset password, please input properly or update in time.

Save

Step 2 Set the password for admin account. For details, see Table 3-1.


Table 3-1 Description of password configuration

Parameter	Description
User name	The default user name is admin.
Password	The password must consist of 8 to 32 digits and at least two forms from number, letter, and common symbols (except "", "", "", ":", "&"). Set a high security level password according to the password security notice.
Confirm password	
email	Enter an email address for password reset, and this option is selected by default. When you need to reset the password of the admin account, there will be a security code sent to the reserved email address which can be used to reset the password.

Step 3 Click **Save**.


The **End-User License Agreement** interface is displayed, see Figure 3-2.

Figure 3-2 End-user license agreement

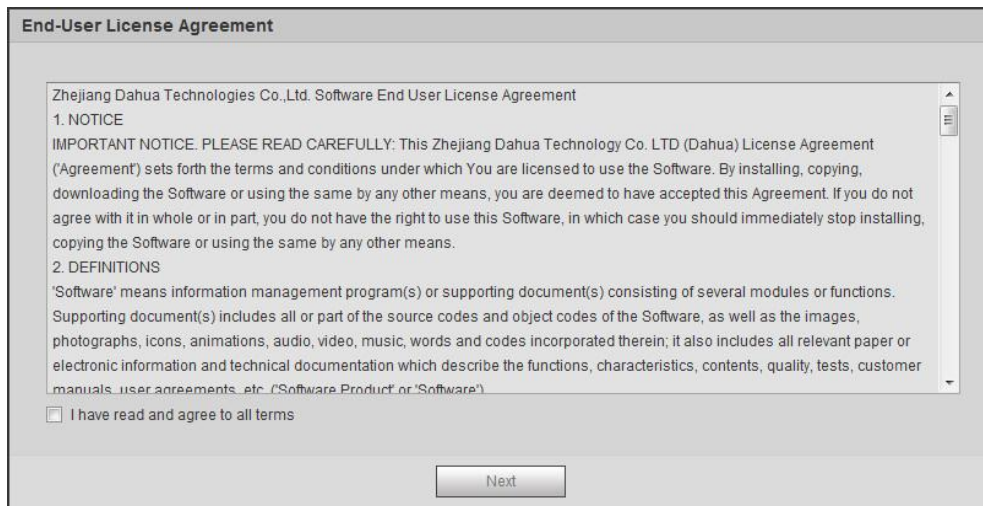

Step 4 Select the check box I have read and agree to all terms, and then click Next. The **Easy4ip** interface is displayed, see Figure 3-3.


Figure 3-3 Easy4ip

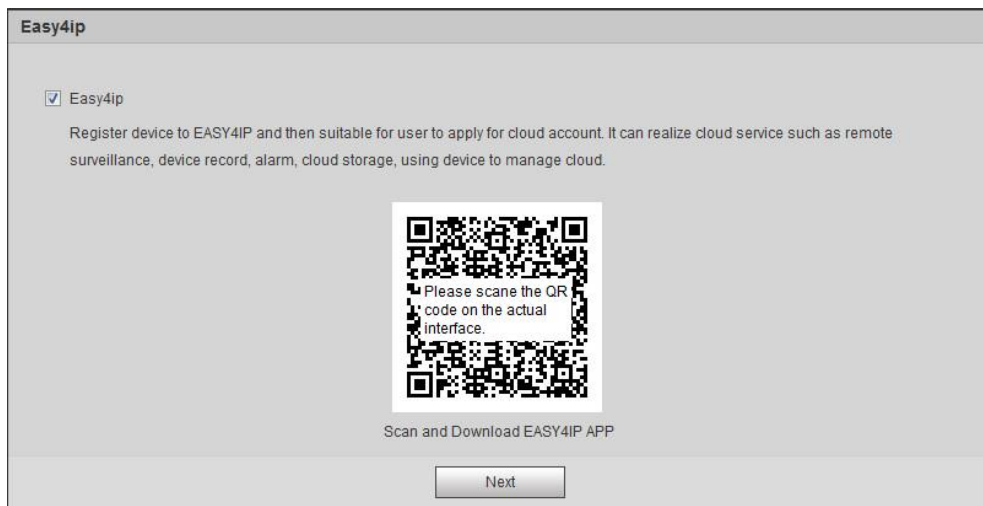

Step 5 You can now register your device to Easy4ip, select the option if you need it, and then click **Next**.

The **Online Upgrade** interface is displayed, see Figure 3-4.

Figure 3-4 Online upgrade

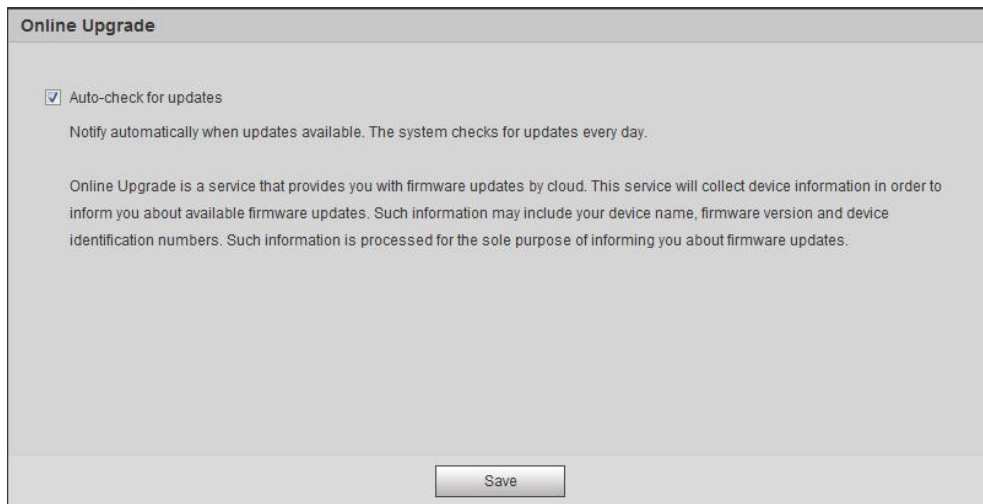

The screenshot shows a window titled "Online Upgrade". Inside, there is a checked checkbox labeled "Auto-check for updates". Below it, a line of text reads: "Notify automatically when updates available. The system checks for updates every day." Further down, a paragraph explains: "Online Upgrade is a service that provides you with firmware updates by cloud. This service will collect device information in order to inform you about available firmware updates. Such information may include your device name, firmware version and device identification numbers. Such information is processed for the sole purpose of informing you about firmware updates." At the bottom right of the window is a "Save" button.

Step 6 Select the upgrading method as needed.

If you select **Auto-check for updates**, the system checks new version once a day automatically. There will be system notice on **Upgrade** interface and **Version** interface if any new version is available.



Select **Setting > System > Upgrade > Online Upgrade**, you can also configure this function on **Online Upgrade** interface after login.

Step 7 Click **Save**.

Device initialization is completed.

4 Basic Configuration

4.1 Login

This section introduces how to log in and log out of web interface, and the content is based on IE Explorer 9.



- You need to initialize the device first to log in web interface.
- You need to install plug-in for the first login, follow the instruction to download and install.
- When initializing device, keep the PC IP and device IP in a same network.

Step 1 Open IE browser, enter the IP address of the device (192.168.1.108 by default) in the address bar and press Enter.

The login interface is displayed. See Figure 4-1.

Figure 4-1 Login



Step 2 Enter the username and password.



The username is admin by default.

Click **Forget password?**, and you can reset the password through the email address set during initialization. For details, see "6.3 Resetting Password."

Step 3 Click **Login**.

The **Live** interface is displayed, see Figure 4-2.


- Live: Click **Live**, and you can view the real-time monitoring image.
- Playback: Click **Playback**, and you can play back or download record/image files.
- Setting: Click **Setting**, and you can set the basic and intelligent functions of the device.

For the device with multiple channels, through selecting channel numbers, you can set the parameters of the channels.

- Alarm: Click **Alarm**, and you can subscribe and view alarm information.
- Logout: Click **Logout** to return to login interface.

The system will sleep automatically after idling for a period of time.

Figure 4-2 Live

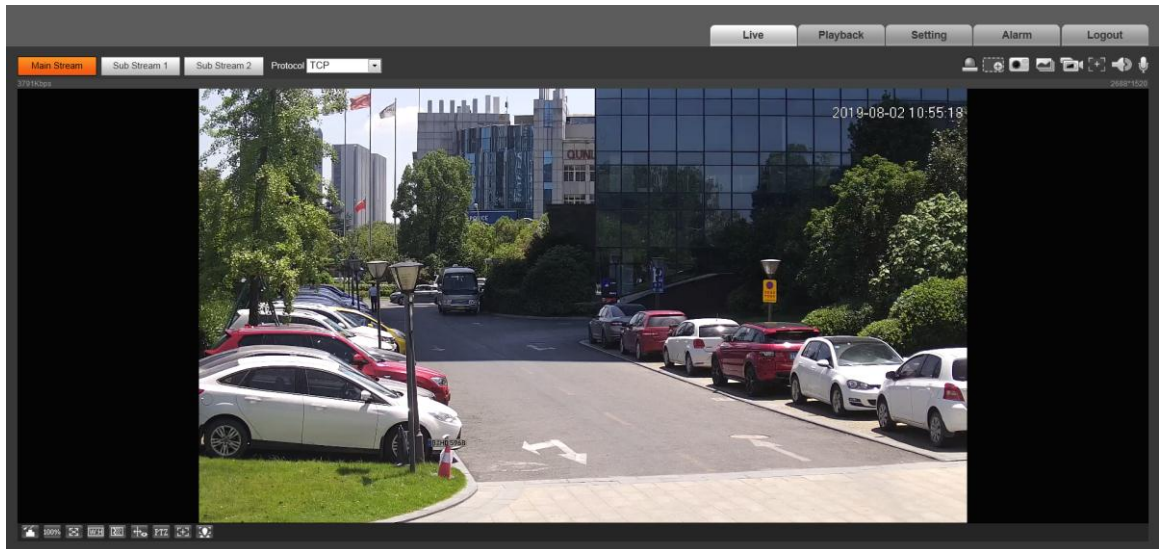

4.2 Live

This section introduces the layout of the interface and function configuration.

4.2.1 Live Interface

This section introduces system menu, encode bar, live view function bar, and window adjustment bar.

Log in and click **Live** tab, the **Live** interface is displayed. See Figure 4-3. For the layout details, see Table 4-1.



The functions and interfaces of different devices might vary, and the actual product shall prevail.

Figure 4-3 Live

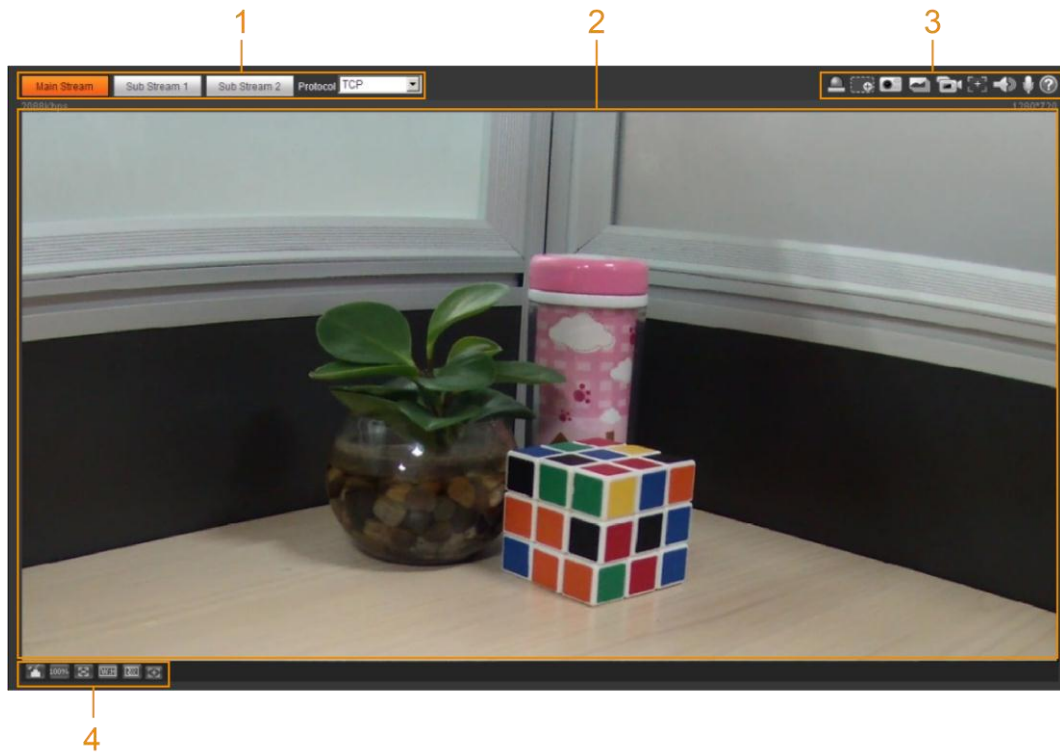



Table 4-1 Description of function bar description

No.	Function	Description
1	Encode bar	Sets stream type and protocol:
2	Live view	Displays the real-time monitoring image.
3	Live view function bar	Functions and operations in live viewing.
4	Window adjustment bar.	Adjustment operations in live viewing.

4.2.2 Encode bar

For encode bar, see Figure 4-4.

 Figure 4-4 Encode bar



- **Main Stream:** It has large bit stream value and image with high resolution, but also requires large bandwidth. This option can be used for storage and monitoring. For details, see "4.5.2.1 Video."
- **Sub Stream:** It has small bit stream value and smooth image, and requires little bandwidth. This option is normally used to replace main stream when bandwidth is not enough. For details, see "4.5.2.1 Video."
- **Protocol:** You can select the network transmission protocol as needed, and the options are **TCP**, **UDP** and **Multicast**.



Before selecting **Multicast**, make sure that you have set the **Multicast** parameters.

4.2.3 Live view Function Bar

For the live view function bar, please see Table 4-2.

Table 4-2 Description of Live view function bar

Icon	Function	Description
	Manual position	Manually position the tracking speed dome to the selected location of corresponding panoramic camera. Click the icon and click or select randomly on the image of panoramic camera channel, the tracking speed dome will automatically position the selected location.  - For multi-sensor panoramic network camera + PTZ camera, before enabling manual position, make sure that you have enabled alarm track and smart track calibration. For details, see "5.2 Setting Smart Track." - For panoramic network camera, before enabling manual position, make sure that you have enabled panoramic linkage. For details, see "5.3 Setting Panoramic Calibration."
	Regional Focus	Select channel image of the tracking speed dome, click the icon and click or select randomly on the channel image of the tracking speed dome, and then the speed dome can realize auto focus upon the selected region.
	Wiper	Controls the wiper of the camera. Click the icon to enable or disable wiper function.
	Ranging	Click the icon, select a point on the ground, and the distance between the camera and the selected point will be displayed.  Before using this function, you need to set the installation of device first. For details, see "4.5.2.3.11 Configuring Ranging."
	Gesture	Controls PTZ by operating the mouse on the live view of tracking speed dome. Select the live view of tracking speed dome, click the icon, press left-button and drag image to control PTZ. And you can zoom the image through rolling mouse wheel.
	Manual track	Click the icon, and select tracking target on the live view of tracking speed dome, the camera tracks the selected target automatically.
	Relay-out	Displays alarm output state. Click the icon to force enable or force disable alarm output. Alarm output state description:

Icon	Function	Description
		- Red: Alarm output enabled. - Grey: Alarm output disabled.
	Digital Zoom	You can zoom video image through two operations: - Click the icon, and then select an area in the video image to zoom in; right-click to resume. In zoom in state, drag the image to check other area. - Click the icon, and then scroll the mouse wheel in the video image to zoom in or out.
	Snapshot	Click the icon to snap one picture of the current image, and it will be saved to the defined storage path.  About viewing or configuring storage path, see "4.5.2.5 Path."
	Triple Snapshot	Click the icon to snap three pictures of the current image, and they will be saved to the defined storage path.  About viewing or configuring storage path, see "4.5.2.5 Path."
	Record	Click the icon to record video, and it will be saved to the defined storage path.  About viewing or configuring storage path, see "4.5.2.5 Path."
	Easy Focus	Click the icon, the AF Peak (focus eigenvalue) and AF Max (max focus eigenvalue) are displayed on the video image. - AF Peak: the eigenvalue of image definition, it displays during focus. - AF Max: the best eigenvalue of image definition. - The closer the AF peak value and the AF max value are with each other, the better the focus is.  Easy focus closes automatically after five minutes.
	Audio	Click the icon to enable or disable audio output.
	Talk	Click the icon to enable or disable intercom.

4.2.4 Window Adjustment Bar

4.2.4.1 Adjustment

This section introduces the adjustment of image. For details, see Table 4-3.

Table 4-3 Description of adjustment bar

Icon	Function	Description
	Image Adjustment	Click the icon, and then the Image Adjustment interface is displayed at the right side of the Live interface. You can adjust brightness, contrast, hue, and saturation.  The adjustment is only available on web interface, and it does not adjust the device parameters.  (Brightness adjustment): Adjusts the overall image brightness, and changes the value when the image is too bright or too dark. The bright and dark areas will have equal changes.  (Contrast adjustment): Changes the value when the image brightness is proper but contrast is not enough  (Hue adjustment): Makes the color deeper or lighter. The default value is made by the light sensor, and it is recommended.  (Saturation adjustment): Adjusts the image saturation, this value does not change image brightness.
	Original Size	Click the icon, and then the video displays with original size.
	Full Screen	Click the icon to enter full screen mode; double-click or press Esc to exit.
	W:H	Click the icon to resume to original ratio or change ratio.
	Fluency	Click the icon to select the fluency from Realtime, Fluency and Normal. Realtime: Guarantee the realtime of image. When the bandwidth is not enough, the image might not be smooth. Fluency: Guarantee the fluency of image. There might be delay between live view image and

Icon	Function	Description
		real-time image. ● Normal: It is between Realtime and Fluency.
	Rule Info	Click the icon, and then select Enable to display smart rules and detection box; select Disable to stop.
	PTZ	Click the icon, and the PTZ control panel is displayed on the right of the Live interface. You can control and call PTZ function. For details, see "4.3.3 Calling PTZ."
	Zoom and Focus	Adjust focal length to zoom in and out video image. Click the icon, and the Zoom and Focus configuration interface is displayed at the right side of the Live interface. You can control and call PTZ function. For details, see "4.2.4.2 Zoom and Focus."
	Fisheye	Click the icon, and then the fisheye configuration interface is displayed on the right of the Live interface. For details, see "4.2.4.3 Fisheye."
	Face	Click the icon, and the face detection /recognition results are displayed on Live interface. ● For face recognition, see "5.9 Setting Face Recognition." ● For face detection: see "5.10 Setting Face Detection."
	ANPR	Click the icon, and the ANPR results are displayed on Live interface. For details, see "5.14 Setting ANPR."
	Video Structuralization	Click the icon, the video structuralization results are displayed on Live interface. For details, see "5.15 Setting Video Structuralization."
	Window Layout	When view multi-channel image, you can select display layout.
	Crowd Map	Click the icon and select Enable . The Crowd Map interface is displayed. For details, see "5.8 Setting Crowd Map."

4.2.4.2 Zoom and Focus

You can adjust focal length to zoom in and out video image; by adjusting focus manually, automatically or within a certain area, you can change image clarity or correct adjusting errors.



The focus would adjust automatically after zooming in or out.

Figure 4-5 Zoom and focus

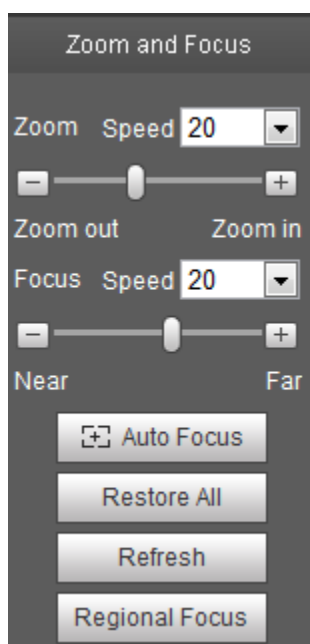


Table 4-4 Description of zoom and focus

Parameter	Function
Zoom	Changes the focal length of the camera to zoom in or out the image. - Set the Speed value. The Speed is the adjustment range in one click. The larger the value is, the more the image would zoom in or out in one click. - Click or hold + /- button, or drag the slider to adjust zoom.
Focus	Adjusts the optical back focal length to make the image clearer. - Set the Speed value. The Speed is the adjustment range in one click. The larger the value is, the more the image would zoom in or out in one click. - Click or hold +/- button, or drag the slider to adjust zoom.
Auto Focus	Adjusts image clarity automatically.  Do not make any other operation during auto focus process.
Restore All	Restores focus to default value and corrects errors.  You can restore the focus if the image has poor clarity or has been zoomed too frequently.
Regional Focus	Focus on the subject of a selected area. Click Regional Focus, and then select an area in the image, the camera performs auto focus in that area.
Refresh	Get the latest zoom setting of the device.

4.2.4.3 Fisheye

You can configure the install mode, display mode and VR mode of fisheye devices as needed. For details, see Table 4-5.

- **Install Mode:** Install the fisheye camera according to the actual situation.
- **Display Mode:** Select the display mode of live view.
- **VR Mode:** Select VR mode to display the image in stereo mode.

Figure 4-6 Fisheye



Table 4-5 Description of Fisheye configuration

Parameter	Description
Installation Mode	Includes ceiling, wall, and ground.

Parameter	Description	
Display Mode	You can configure how the image needs to be presented (all display modes support original size image by default); there are different display modes for each installation mode. • Ceiling: 1P+1, 2P, 1+2, 1+3, 1+4, 1P+6, 1+8. • Wall: 1P, 1P+3, 1P+4, 1P+8. • Ground: 1P+1, 2P, 1+3, 1+4, 1P+6, 1+8.  The image will be on original size by default when switching installation mode.	
Ceiling/Wall/Ground	 Original image	The original image before correction.
	 1P+1	360° rectangular panoramic image screen + independent sub-screens. • You can zoom or drag the image in all the screens. • You can rotate the image on rectangular panoramic image screen to change the start point.
	 2P	Two associated 180° rectangular image screens, and at any time, the two screens form a 360° panoramic image. It is also called Dual panoramic image. You can rotate the image on the two rectangular panoramic image screens to change the start point, and the two screens link each other.
Ceiling /Ground	 1+2	Original image screen + two independent sub-screens. • You can zoom or drag the image in all the screens. • You can rotate the image on the original image screen to change the start point.
	 1+3	Original image screen + three independent sub-screens. • You can zoom or drag the image in all the screens. • You can rotate the image on the original image screen to change the start point.
	 1+4	Original image screen + four independent sub-screens. • You can zoom or drag the image in all the screens. • You can rotate the image on the original image screen to change the start point.

Parameter	Description	
	 1P+6	360° rectangular panoramic screen + six independent sub-screens. - You can zoom or drag the image in all the screens. - You can rotate the image on rectangular panoramic image screen to change the start point.
	 1P+8	Original image screen + eight independent sub-screens. - You can zoom or drag the image in all the screens. - You can rotate the image on the original image screen to change the start point.
Wall mounted	 1P	180° rectangular panoramic image screen (from left to right). - You can zoom or drag the image in all the screens. - You can rotate the image on the original image screen to change the start point.
	 1P+3	180° rectangular panoramic image screen + three independent sub-screens. - You can zoom or drag the image in all the screens. - You can rotate the image on the rectangular panoramic image screen to change the start point.
	 1P+4	180° rectangular panoramic image screen + four independent sub-screens. - You can zoom or drag the image in all the screens. - You can rotate the image on the rectangular panoramic image screen to change the start point.
	 1P+8	180° rectangular panoramic image screen + eight independent sub-screens. - You can zoom or drag the image in all the screens. - You can rotate the image on the rectangular panoramic image screen to change the start point.
VR Mode	 Panorama	Drag or cross the screen 360° to unfold the distortion panorama, and you can drag the image in left/right direction.

Parameter	Description	
	 Semi-circle	- You can drag the image in upper/lower/left/right direction. Press I to display the panorama, and press O to return the original size. - Press S to rotate the image in anticlockwise direction, and press E to stop the rotation. - Scroll the mouse wheel to zoom the image.
	 Cylinder	Display the distortion panorama in 360°circularity. - You can drag the image in upper/lower/left/right direction. Press I to display the panorama, and press O to return the original size. - Press S to rotate the image in anticlockwise direction, and press E to stop the rotation. - Scroll the mouse wheel to zoom the image.
	 Asteroid	- You can drag the image in upper/lower/left/right direction. Press I to display the panorama, and press O to return the original size. - Press the left mouse-button to slide down to display the image on the planet surface. - Scroll the mouse wheel to zoom the image.

4.3 PTZ Operation

This chapter introduces PTZ parameter configuration, PTZ control and PTZ function configuration.

4.3.1 Configuring External PTZ Protocol

Precondition


- Access external PTZ through RS-485
- You have configured the parameters of serial port. For details, see "4.8.6.1 Serial Port Settings."

Procedures

Step 1 Select **Setting > PTZ Setting > Protocol**.

The **PTZ Setting** interface is displayed. See Figure 4-7.

Figure 4-7 PTZ Setting

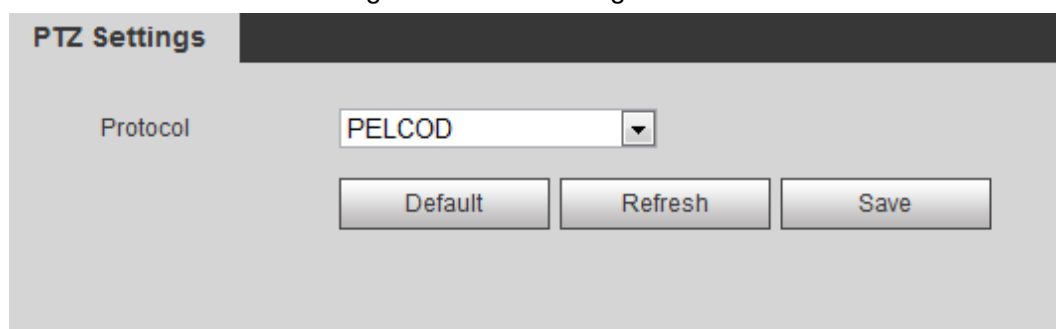

Step 2 Select the PTZ protocol

Step 3 Click **OK**.

4.3.2 Configuring PTZ Function


4.3.2.1 Preset

Preset means certain defined positions that the camera can make quick orientation to. It contains several defined parameters, including PTZ pan and tilt angles, camera focus, and location.

Step 1 Select **Setting > PTZ settings > Function > Preset**.

The **Preset** interface is displayed. See Figure 4-8.

Figure 4-8 Preset

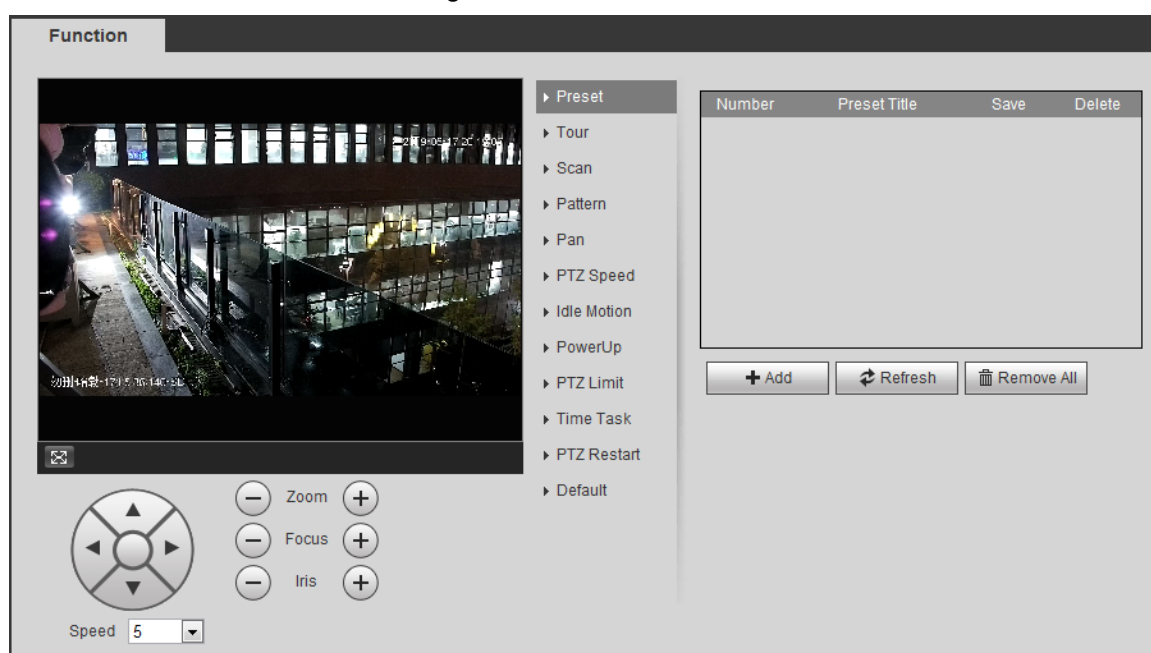

Step 2 Set the speed, and click direction buttons,  and  to adjust the parameters of direction, zoom, focus and iris, to move the camera to the position you need.

Step 3 Click **Add** to add the current position to be a preset, and the preset is displayed in preset list.

Step 4 Double-click the preset title to edit the title.

Step 5 Click  to save the preset.

Other Operation

- Click  to delete the preset.
- Click Remove All to remove all presets.

4.3.2.2 Tour

Tour means a series of movements that the camera makes along several preset points.

Precondition


You have set several presets.

Procedures

Step 1 Select **Setting > PTZ settings > Function > Tour**.

The **Tour** interface is displayed. See Figure 4-9.

Figure 4-9 Tour

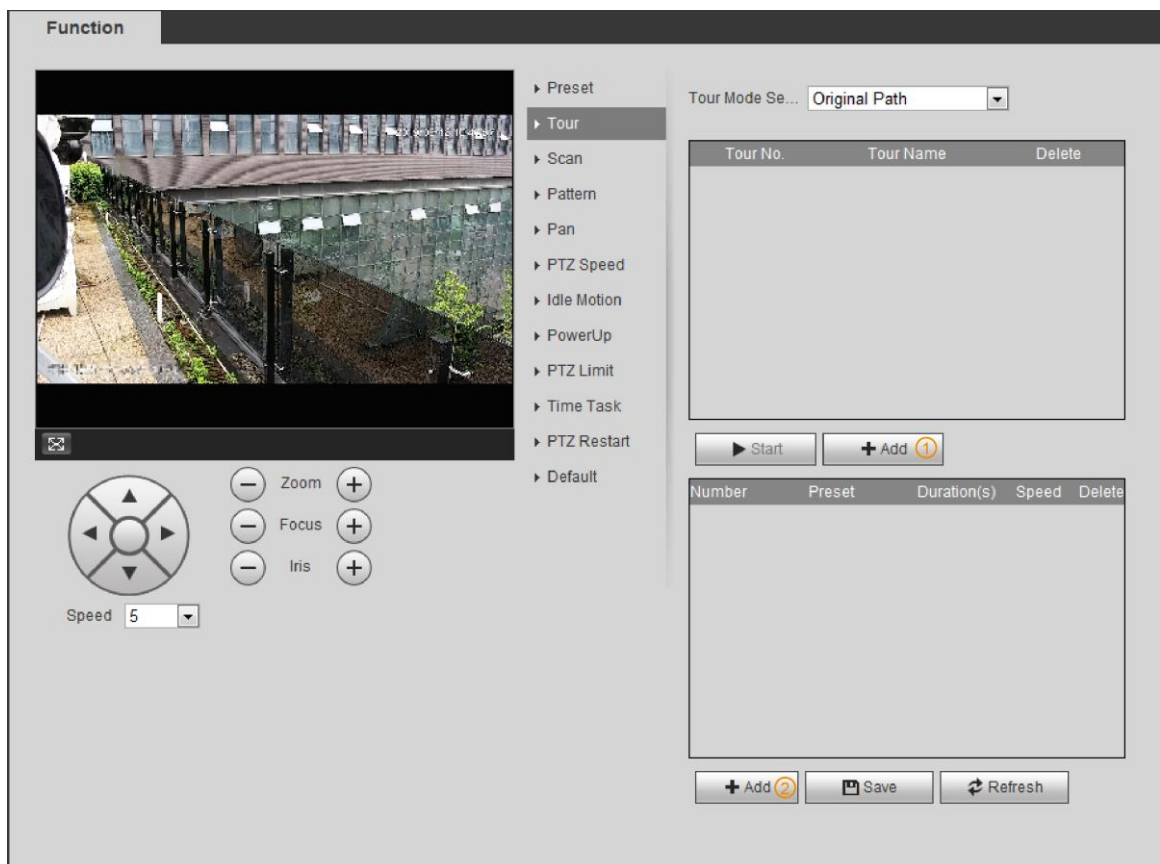

Step 2 Click **Add** ① to add tour.

Double-click the tour name to edit the name.

Step 3 Click **Add** ② to add preset.

Double-click the duration to set the duration.

Step 4 Select the tour mode.

- Original Path: The PTZ camera moves in the order of the selected presets.

- Shortest Path: The PTZ camera ranks presets by distance, and moves in the optimal path.

Step 5 Click **Save** to complete the configuration.

Step 6 Click **Start** to start touring.



- If you operate PTZ during tour, the camera will stop tour.
- Click **Stop** to stop touring.


4.3.2.3 Scan

Scan means the camera moves horizontally on a certain speed between the defined left and right boundaries.

Step 1 Select **Setting > PTZ settings > Function > Scan**.

The **Scan** interface is displayed. See Figure 4-10.

Figure 4-10 Scan

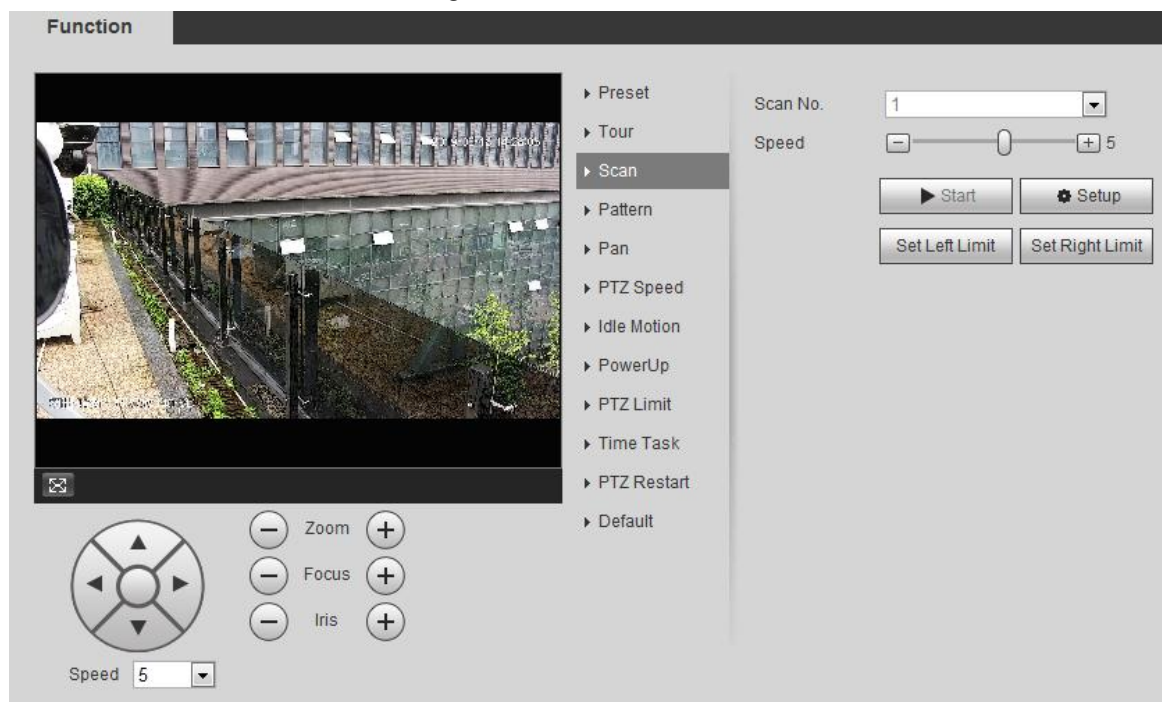

Step 2 Select the scan number, and set the speed.

Step 3 Click **Setup** to set left limit and left limit.

- 1) Click **Set Left Limit** to set the current position to be the left limit.
- 2) Click **Set Right Limit** to set the current position to be the right limit.

Step 4 Click **Start** to start scanning.

Click **Stop** to stop scanning.


4.3.2.4 Pattern

Pattern means a record of a series of operations that you make to the camera, and when pattern starts, the camera performs the operations repeatedly. The record includes the manual operations that the user performed to the PTZ, and the changes in focus and zoom.

Step 1 Select **Setting > PTZ settings > Function > Pattern**.

The **Pattern** interface is displayed. See Figure 4-11.

Figure 4-11 Pattern

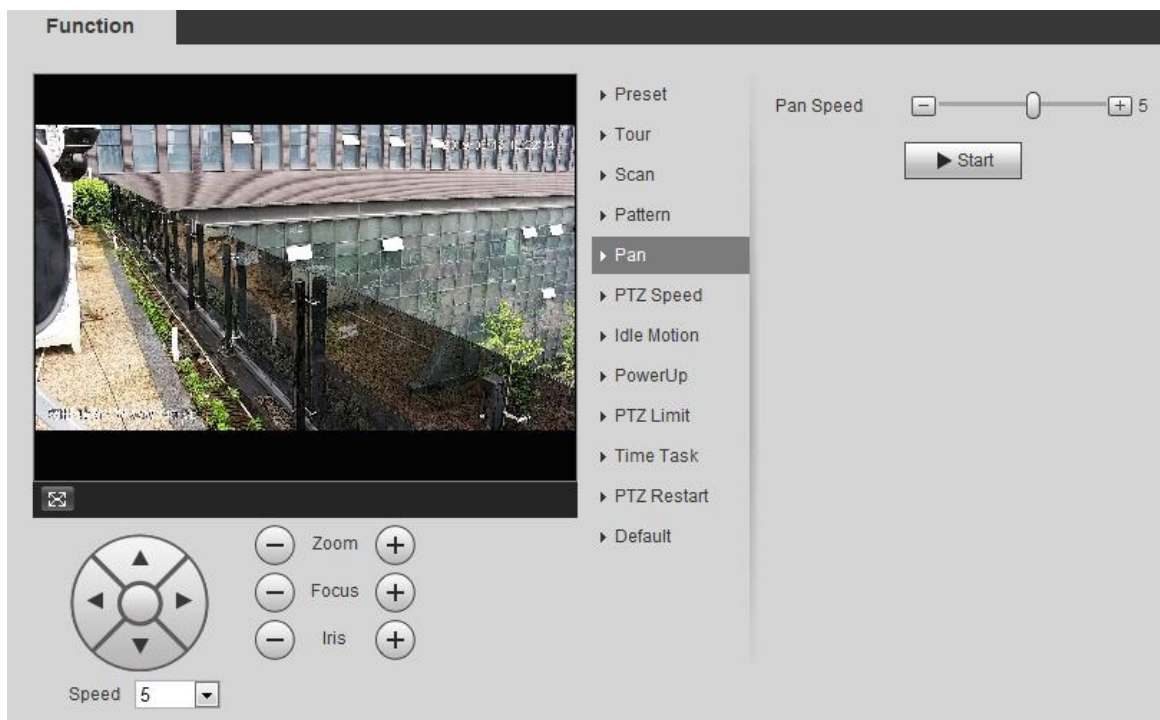

Step 2 Select the pattern number.

Step 3 Click **Setup**, and then click **Start Rec**. Adjust the parameters of direction, zoom, focus and iris according to the actual situation.

Step 4 Click **Stop Rec** to stop recording.

Step 5 Click **Start** to start patterning.
Click **Stop** to start patterning.


4.3.2.5 Pan

Enable Pan, the camera can realize 360° horizontal rotation.

Step 1 Select **Setting > PTZ settings > Function > Pan**.

The **Pan** interface is displayed. See Figure 4-12.

Figure 4-12 Pan

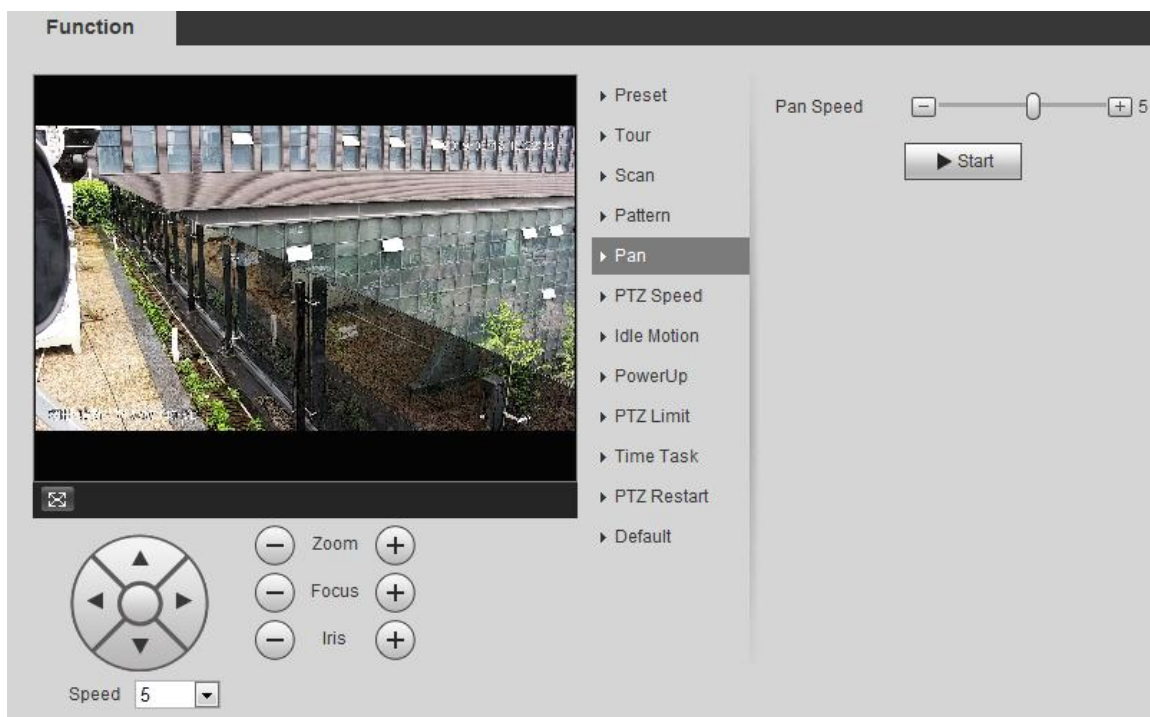


Step 2 Set the pan speed and click **Start**, and the camera starts horizontal rotation.
Click **Stop** to stop rotation.

4.3.2.6 PTZ Speed

Step 1 Select **Setting > PTZ settings > Function > PTZ Speed**.

The **PTZ Speed** interface is displayed. See Figure 4-13.

Figure 4-13 PTZ speed

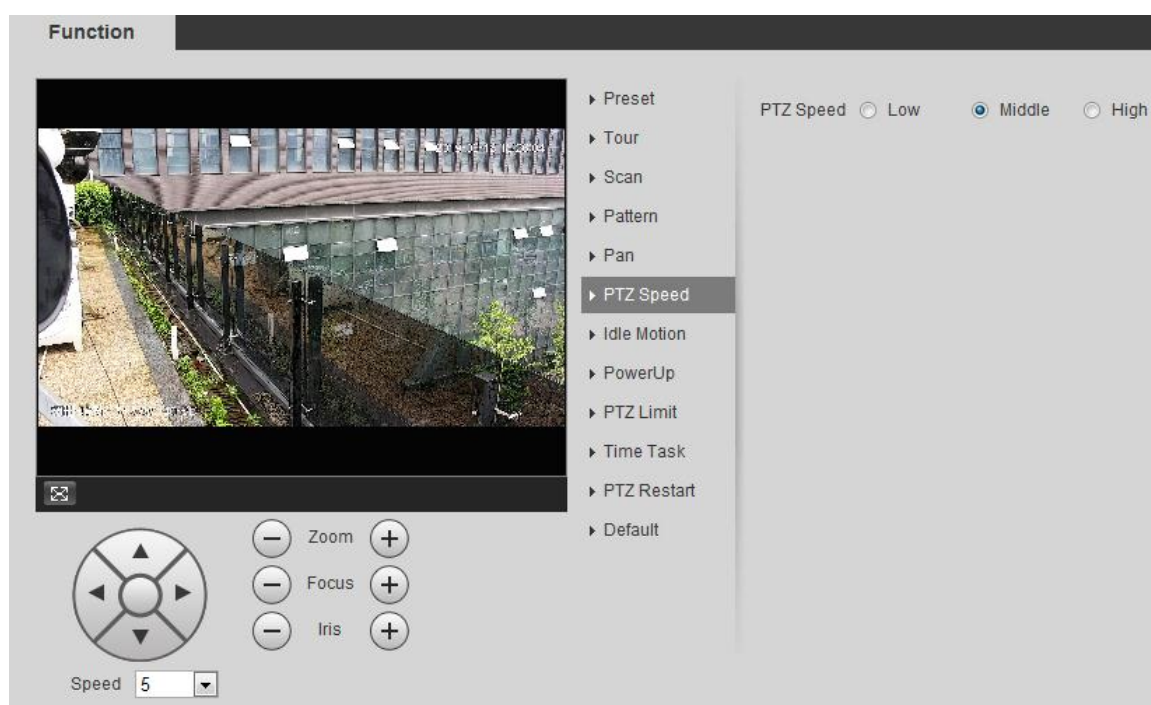

Step 2 Select the PTZ speed.

4.3.2.7 Idle Motion

PTZ idle motion is a function of a PTZ camera where you can set an interval of idle time before the camera defaults to one of the following: Preset, scan, tour, or pattern.

Precondition


You have configured the PTZ motions, including preset, scan, tour, or pattern.

Procedures

Step 1 Select **Setting > PTZ settings > Function > Idle Motion**.

The **Idle Motion** interface is displayed. See Figure 4-14.

Figure 4-14 Idle motion

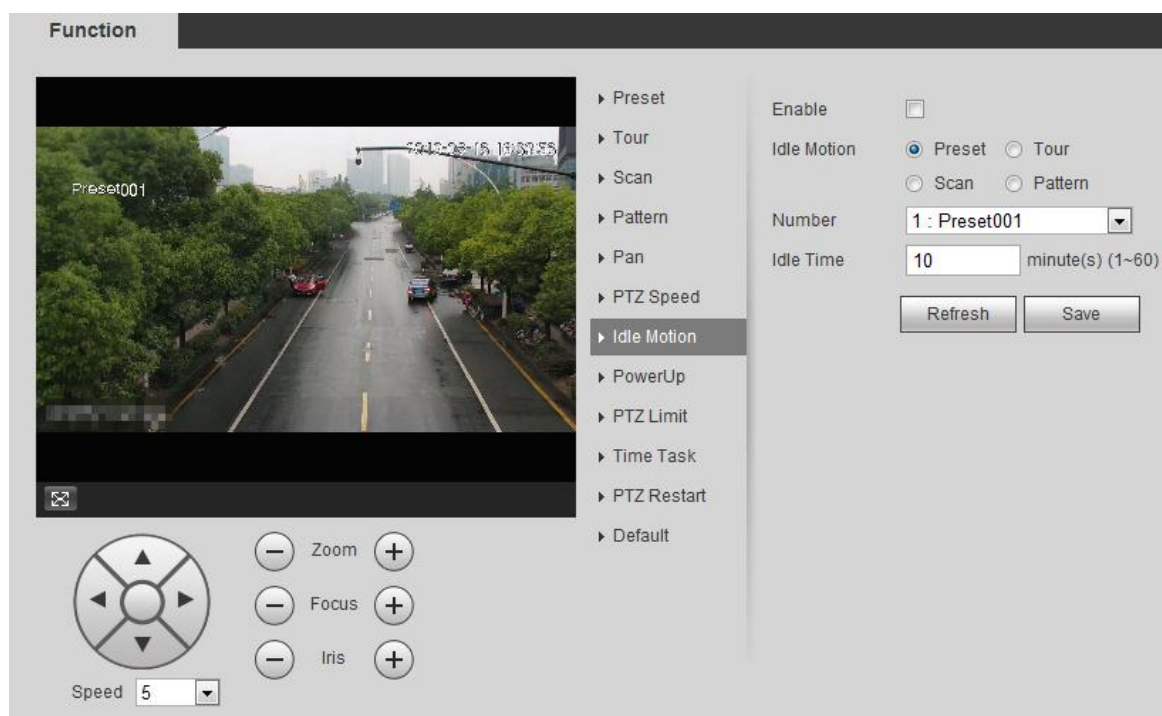

Step 2 Select **Enable** check box to enable idle motion.

Step 3 Select idle motion and set idle time.

You need to select the corresponding number for some selected idle motions, such as **Preset001**.

Step 4 Click **Save**

4.3.2.8 PowerUp

After setting Powerup motion, the camera will execute the configured motion after power up.

Precondition


You have configured the PTZ motions, including preset, scan, tour, or pattern.

Procedures

Step 1 Select **Setting > PTZ settings > Function > PowerUp**.

The **PowerUp** interface is displayed. See Figure 4-15.

Figure 4-15 PowerUp

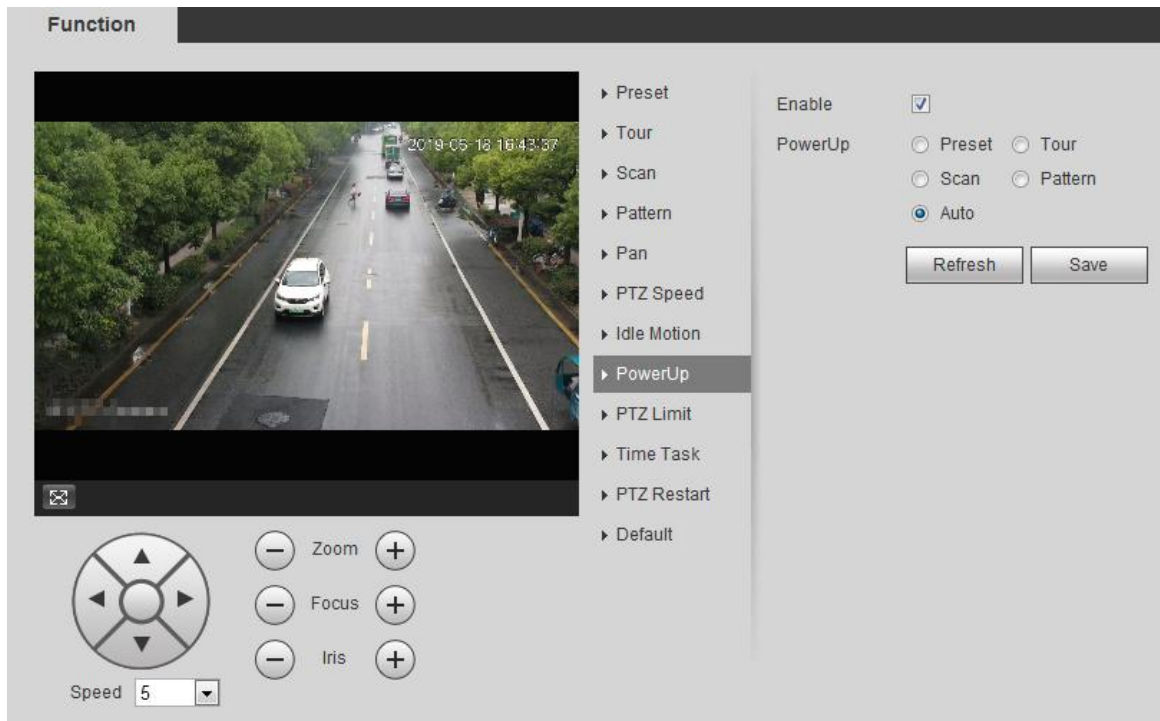

Step 2 Select **Enable** check box to enable powerup motion.

Step 3 Select the powerup motion.



When you select **Auto**, the system will execute the last motion before power off for 20 s.

Step 4 Click **OK**.


4.3.2.9 PTZ Limit

After setting PTZ limit, the camera can only move in the set area.

Step 1 Select **Setting > PTZ settings > Function > PTZ Limit**.

The **PTZ Limit** interface is displayed. See Figure 4-16.

Figure 4-16 PTZ limit

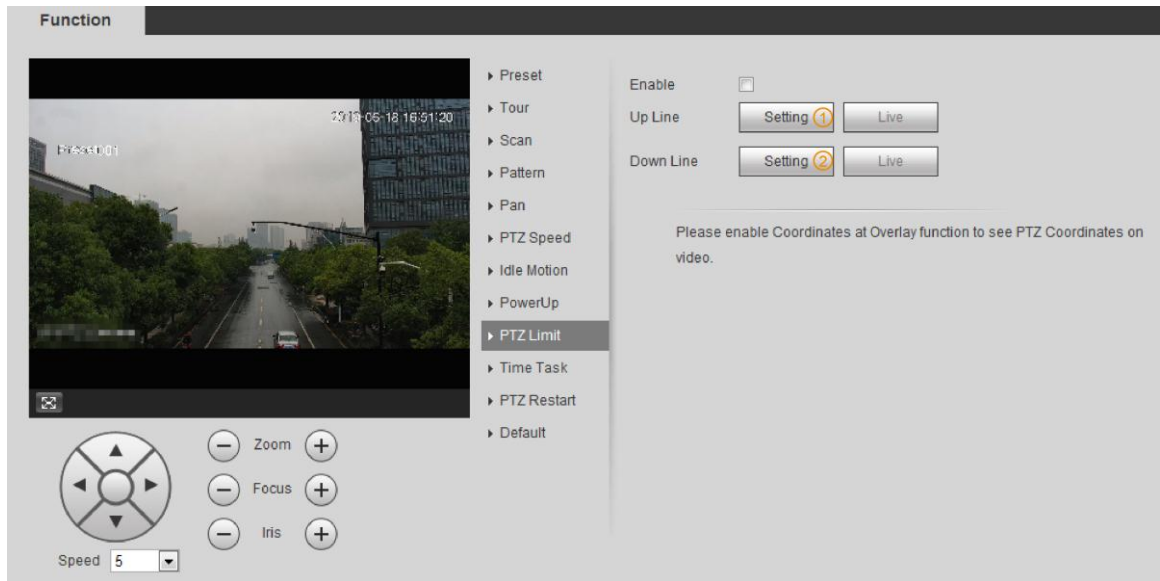

Step 2 Control camera direction, click **Setting** ① to set up line.

Step 3 Control camera direction, click **Setting** ② to set down line.
Click **Live** to live view the set up/down line.

Step 4 Select **Enable** check box to enable PTZ limit function.

4.3.2.10 Time Task

After setting time task, the camera executes the motions during the set period.


Precondition

You have configured the PTZ motions, including preset, scan, tour, or pattern.

Procedures

Step 1 Select **Setting > PTZ settings > Function > Time Task**.
The **Time Task** interface is displayed. See Figure 4-17.

Figure 4-17 Time task

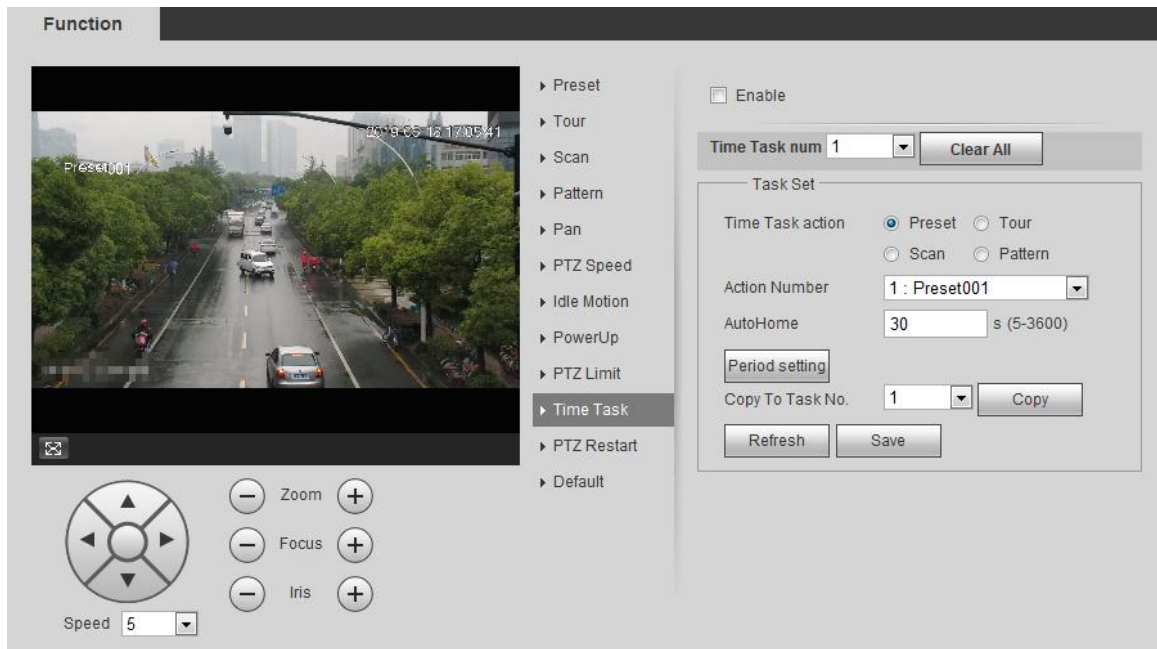

Step 2 Select **Enable** check box to enable time task function.

Step 3 Select the time task number.

Step 4 Select the time task action.

You need to select the corresponding action number for some selected time task actions.

Step 5 Set the auto home time in **AutoHome**.

AutoHome: When you call PTZ, the time task will be interrupted. After setting **AutoHome** time, the camera will resume the time task automatically.

Step 6 Click **Period setting** to set the time of the task, and then click **Save**.

For setting arm/disarm time, See "5.1.1.1 Setting Period."

Step 7 Click **Save**.

Other Operations

You can copy the configurations of existing task number to other task number.

Step 1 Select the existing task number in **Time Task num**.

Step 2 Select the task number to be configured in **Copy To Task No.**

Step 3 Click **Copy**.

Step 4 Click **Save**.

4.3.2.11 PTZ Restart

Step 1 Select **Setting > PTZ settings > Function > PTZ Restart**.

Step 2 The **PTZ Restart** interface is displayed. See Figure 4-18.

Figure 4-18 PTZ restart



Step 3 Click **PTZ Restart** to restart PTZ.

4.3.2.12 Default




This function restores the device to default configuration.

Step 1 Select **Setting > PTZ settings > Function > Default**.

Step 2 The **Default** interface is displayed. See Figure 4-19.

Figure 4-19 Default

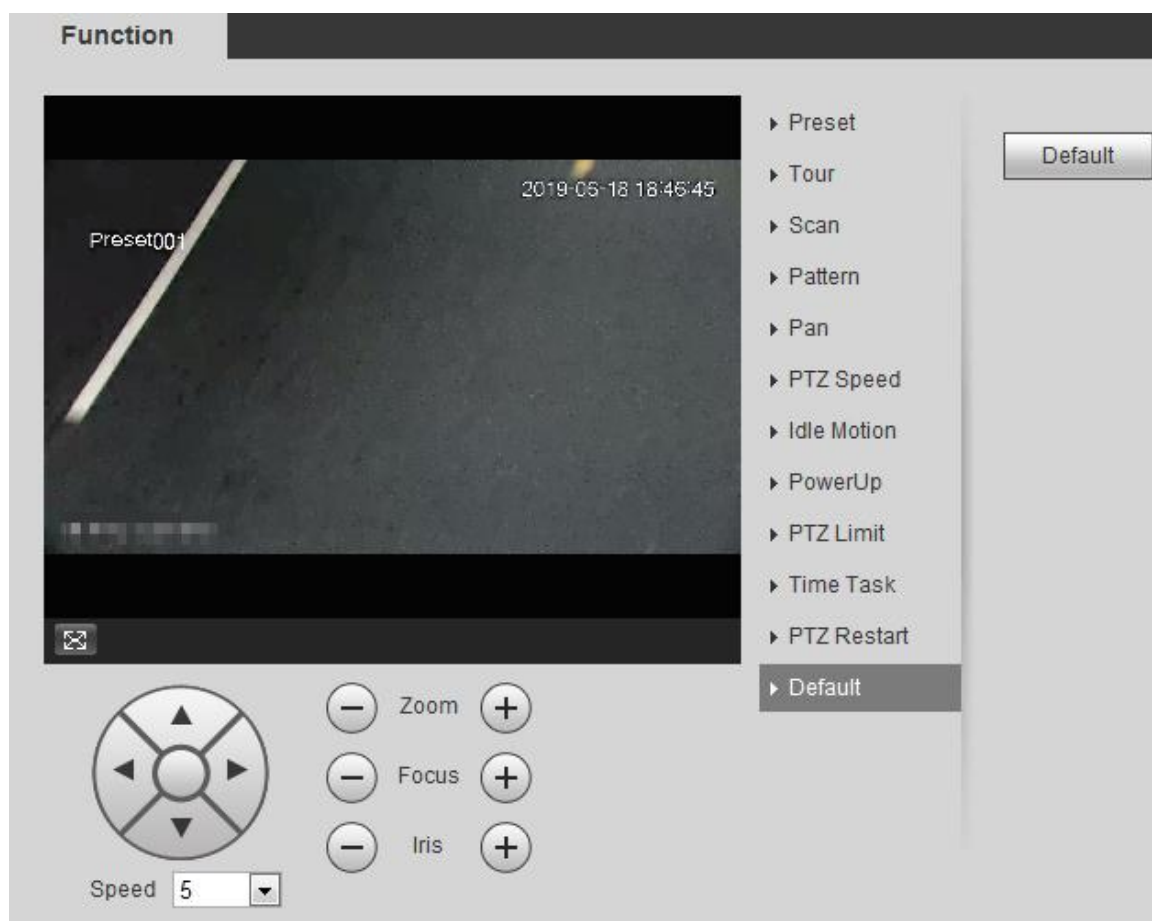

Step 2 Click **Default** and the PTZ function is restored to default.

4.3.3 Calling PTZ

Click **PTZ** on **Live** interface, and the PTZ configuration panel is displayed. You can control PTZ and call PTZ function.


4.3.3.1 PTZ Control

You can rotate device, zoom image, and adjust iris through PTZ control or virtual joystick. See Figure 4-20 and Figure 4-21.

Figure 4-20 PTZ control



Figure 4-21 Joystick

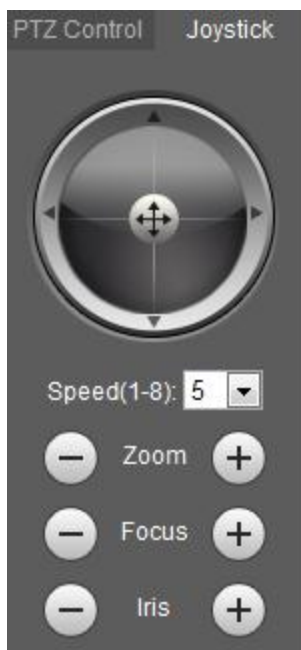

- : Rotate PTZ direction through direction button. PTZ supports eight directions: left/right/up/down/upper left/upper right/bottom left/bottom right. Click , and draw a box in the image, PTZ will rotate, focus and quickly position the defined scene.
- : Rotate PTZ direction through joystick. Press , and drag it to the direction that you need, then PTZ will move to the defined direction.
- Speed: Measure the rotation speed. The bigger the step length is, the faster the speed becomes.

- Zoom, focus and iris: Click  or  to adjust zoom, focus and iris.

4.3.3.2 PTZ Function

Select the PTZ function from the dropdown list to call the corresponding functions, including Scan, Preset, Tour, Pattern, Pan, Go to, Assistant and Light Wiper. See Figure 4-22. For details, see Table 4-6. Before calling PTZ function, see "4.3.2 Configuring PTZ Function" to configure PZT function.



- If an external PTZ is connected to the camera, the configurations are valid only when the corresponding functions are available on the external PTZ.
- The range of PTZ function (preset, tour and so on) depends on the PTZ protocol.

Figure 4-22 PTZ function

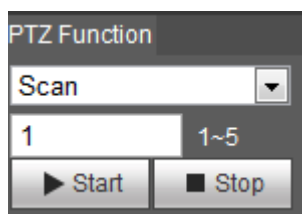


Table 4-6 PTZ Description of function

Parameter	Description
Scan	Set scan number and click Start , the camera moves horizontally on a certain speed between the set left and right limit. Click Stop to stop scanning.
Preset	Set preset number and click Go to , the camera quickly positions the corresponding preset.
Tour	Set tour number and click Start , the camera moves in the order of the set presets. Click Stop to stop touring.
Pattern	Set pattern number and click Start , the camera moves continuously according to the operation records. Click Stop to stop patterning. Operation records include the information of manual operation, focus and zoom.
Pan	Click Start , and the camera rotates 360° at a certain speed in horizontal direction.
Go to	Set horizontal angle, vertical angle, and zoom. Click Go to to position a certain point accurately.
Assistant	Set assistant number and click Aux On to enable the corresponding assistant function, and then you can adjust the camera. Click Aux On to disable the corresponding assistant function
Light/Wiper	Set the light or wiper of the camera. • Click Enable to enable light/wiper function. • Click Disable to disable light/wiper function.

4.4 Playback

This section introduces playback related functions and operations, including video playback and picture playback.



- Before playing back video, you need to configure record time range, record storage method, record schedule and record control. For details, see "5.1.1.2.1 Setting Record Plan."
- Before playing back picture, you need to configure snapshot time range, snapshot storage method, snapshot plan. For details, see "5.1.1.3.1 Setting Snapshot Plan."
- When using Dahua smart card, make sure the card has been authenticated before using.

4.4.1 Playback Interface

Click **Playback** tab, and the **Playback** interface is displayed. See Figure 4-23 and Figure 4-24. For details, see Table 4-7.

Figure 4-23 Video Playback

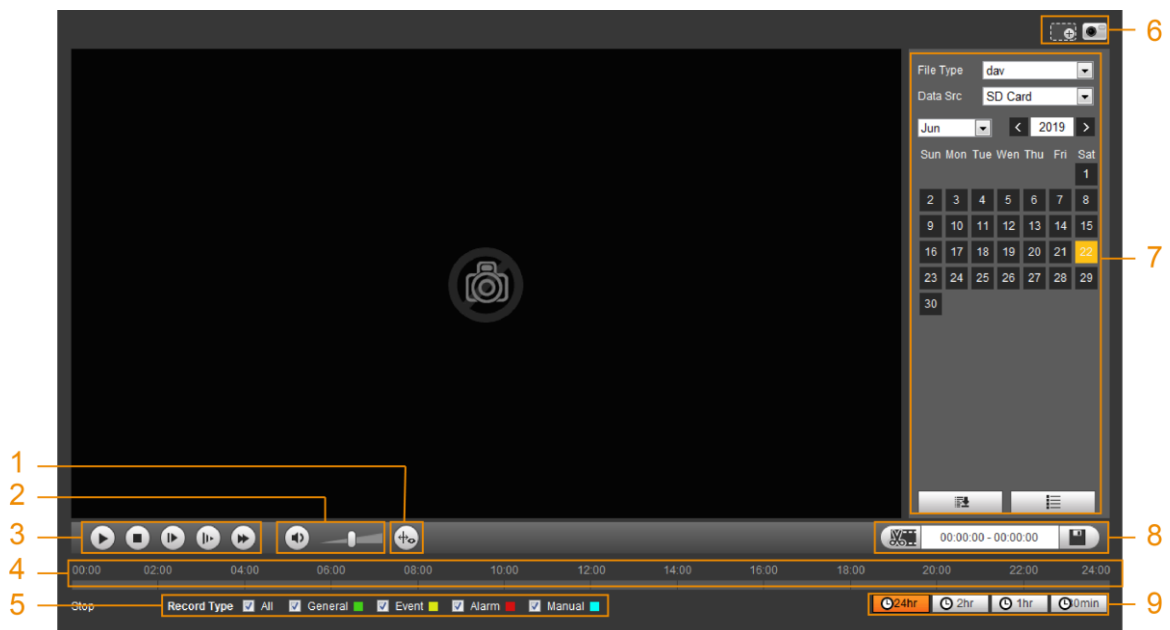


Figure 4-24 Picture Playback

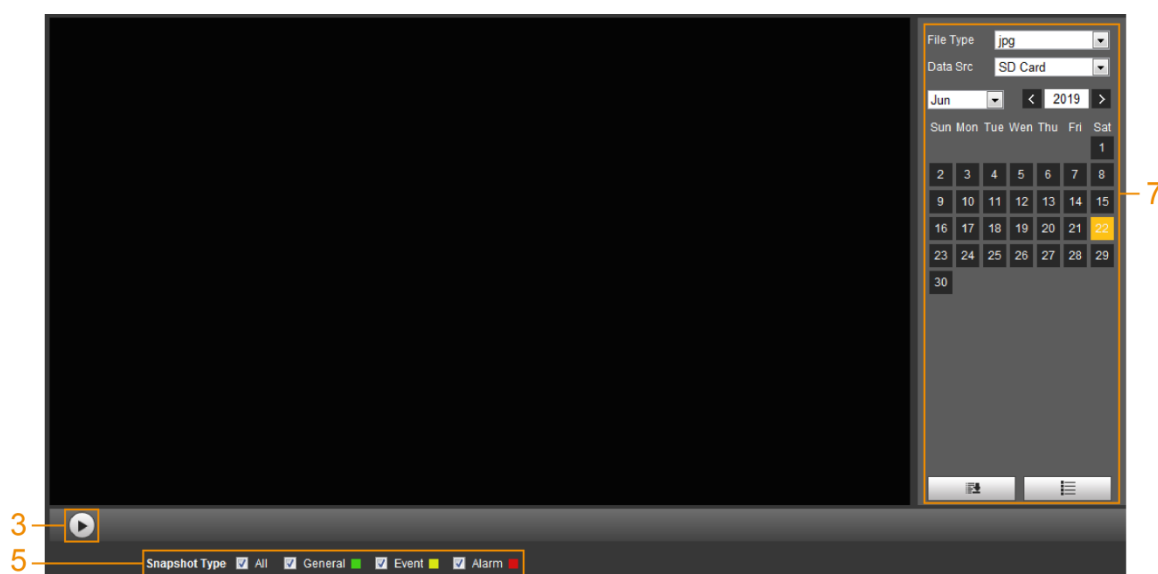


Table 4-7 Playback interface description

No	Function	Description
1	Fisheye	Click , you can select display mode according to the installation mode during playback.  This function is only available on fisheye cameras.
	Rules Info	Click , intelligent rules and object detection box are displayed. It is enabled by default.  Rules Info is valid only when you enabled the rule during recording.
2	Sound	Controls the sound during playback: : Mute mode. : Vocal state, and you can adjust the sound.

No	Function	Description
3	Play control bar	Controls playback: : Click the icon to play back record. : Click the icon to stop playing back record. : Click the icon to play the next frame.  When you enable the function of playing video by frame, stop playback. : Click the icon to slow down the play. : Click the icon to speed up the play.
4	Progress bar	Displays the record type and the corresponding period. - Click any point in the colored area, and the system will play back the record from the selected moment. - Each record type has its own color, and you can see their relations in Record Type bar.
5	Record/Snapshot Type	Select the record type or snapshot type: - Record type includes General, Event, Alarm, Manual - Snapshot type includes General, Event, Alarm
6	Assistant	: You can zoom video image of the selected area through two operations: ◇ Click the icon, and then select an area in the video image to zoom in; right-click to resume. In zoom in state, drag the image to check other area. ◇ Click the icon, and then scroll the mouse wheel in the video image to zoom in or out. : Click the icon to snap one picture of the current image, and it will be saved to the defined storage path.  About viewing or configuring storage path, see "4.5.2.5 Path."
7	Playback video	You can select the file type, data source, and record date.
8	Video clip	Clip a certain record and save it. For details, see "4.4.3 Clipping Video."

No	Function	Description
9	Time format of progress bar	Includes 4 time formats:  ,  ,  ,  . Take  as an example, the whole progress stands for 24 hours.


4.4.2 Playing back Video or Picture

This section introduces the operation of video playback and picture playback. This section takes video playback as an example.

Step 1 Select **dav** from **Record Type** drop-down list and **SD card** in the **Data Src** drop-down list. See Figure 4-25.

Select **jpg** from **Record Type** drop-down list when playing back picture, and you do not need to select data source.

Figure 4-25 File type selection

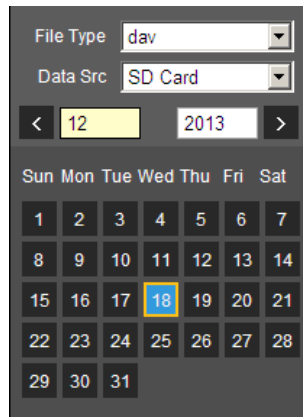


Step 2 Select the record type in **Record Type**. See Figure 4-26.

Figure 4-26 Record type selection



When selecting **Event** as the record type, you can select the specific event types from the playback file list, such as **Motion Detection**, **Video Tamper** and **Scene Changing**. See Specific event types.

Figure 4-27 Specific event types

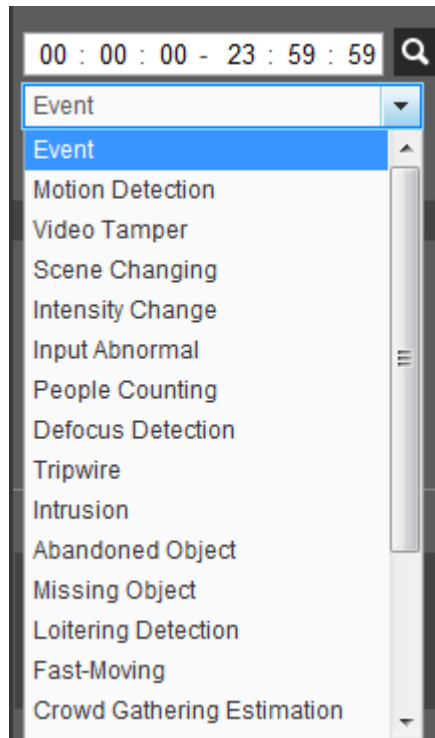

Step 3 Select the month and year of the video you want to play.



Those dates with blue color indicate there were videos recorded in those days.

Step 4 Play video

- Click  in the control bar.
The system plays the recorded video of the selected date (in the order of time).
- Click any point in the colored area on the progress bar, see Figure 4-28.
The playback starts from that moment.


Figure 4-28 Progress bar



- Click , the video files of the selected date would be listed. See Figure 4-29.

Enter the start time and end time, and then click  to search all files between the start time and end time. Double-click the file in the list, and the system plays the video and displays file size, starting time, and ending time.

Figure 4-29 Playback file list (1)

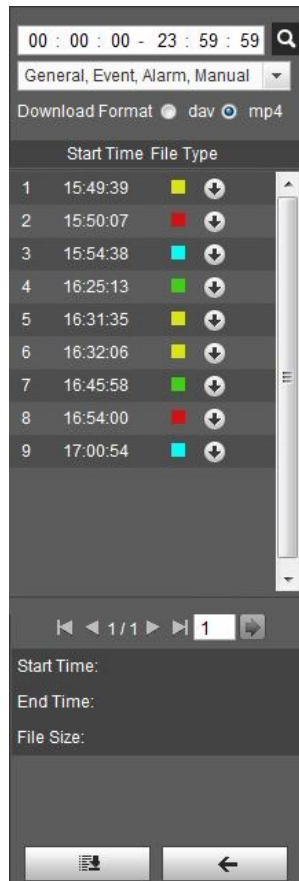


4.4.3 Clipping Video

Step 1 Click , the video files of the selected date are listed.

Step 2 Select **dav** or **mp4** in Download Format.

Step 3 Click on the progress bar to select the start time of the target video, and then click . See Figure 4-30.

 Figure 4-30 Clipping Video



Step 4 Click again on the progress bar to select the end time of the target video, and then click .

Step 5 Click  to download the video.

The system will prompt that it cannot playback and download at the same time.

Step 6 Click **OK**.

The playback stops and the clipped file is saved in the defined storage path. For the configuration of storage path, see "4.5.2.5 Path."

4.4.4 Downloading Video or Picture

Download video or picture to a defined path. You can download single video or picture file, or download them in batches. This section takes downloading video as an example.



- Playback and downloading at the same time is not supported.
- Operation might be vary with different browsers, and the actual product shall prevail
- For details of viewing or setting storage path, see "4.5.2.5 Path."

4.4.4.1 Downloading Single File

Step 1 Select **dav** from **Record Type** drop-down list and **SD card** in the **Data Src** drop-down list.

Select **jpg** from **Record Type** drop-down list when playing back picture, and you do not need to select data source.

Step 2 Click , the video files of the selected date are listed. See Figure 4-29.

Step 3 Select **dav** or **mp4** in **Download Format**. Click  behind the file to de download.


The system starts to download the file to the defined path. When downloading picture, you do not need to select the download format.

4.4.4.2 Downloading File in Batches

Step 1 Click  on the playback interface.

The **Batch Download** interface is displayed. See Figure 4-31.

Figure 4-31 Batch download

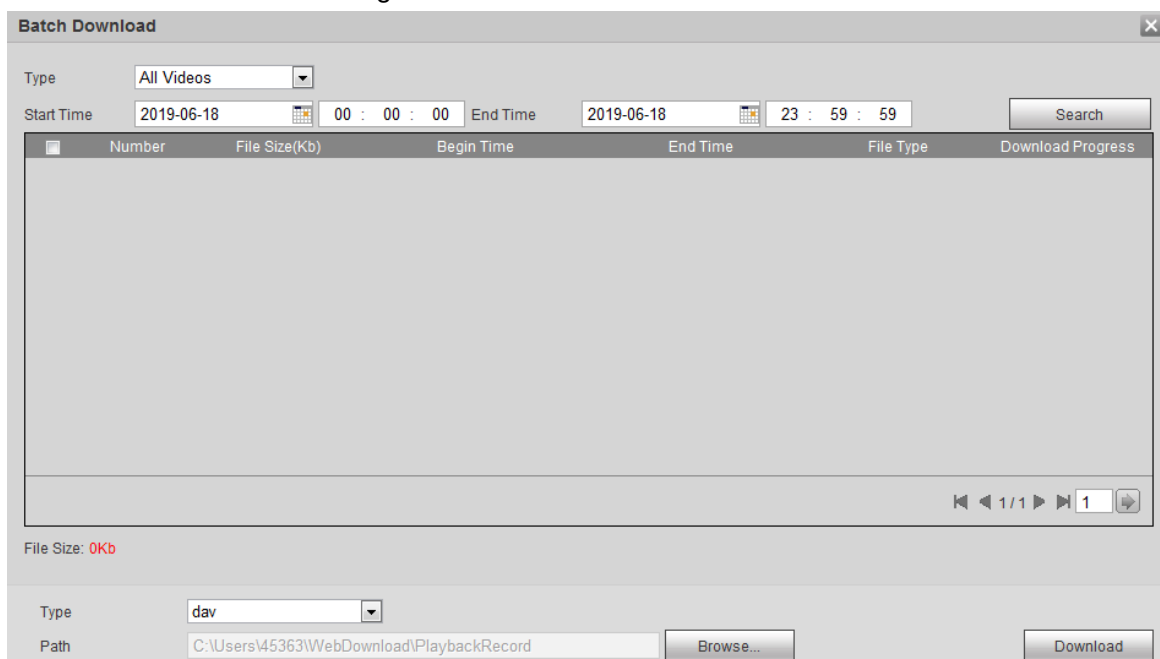

Step 2 Select the record type, set the start time and end time, and then click **Search**.

The searched files are listed

Step 3 Select the files to be downloaded, select **dav** or **mp4** from **Format** drop-down list, and then set the storage path. Click **Download**.

The system starts to download the file to the defined path. When downloading picture, you do not need to select the download format.

4.5 Camera

This section introduces the camera setting, including conditions, video and audio.



Camera parameters of different devices might vary, and the actual product shall prevail.

4.5.1 Conditions

Configure camera parameters of the camera to ensure surveillance goes properly.

4.5.1.1 Conditions

Configure camera parameters according to the actual situation, including picture, exposure, backlight and white balance.

4.5.1.1.1 Interface Layout

Configure camera parameters to improve the scene clarity, and ensure surveillance goes properly. See Figure 4-32.

- You can select from normal, day and night mode to view the configuration and the effect of the selected mode, including picture, exposure, and backlight and so on.
- Camera with PZT function supports zoom, focus and iris operations. See Figure 4-33.

Configure speed, click direction button,  and  to adjust the direction, zoom, focus and iris and so on, to adjust the camera to the proper position.

Figure 4-32 Camera conditions


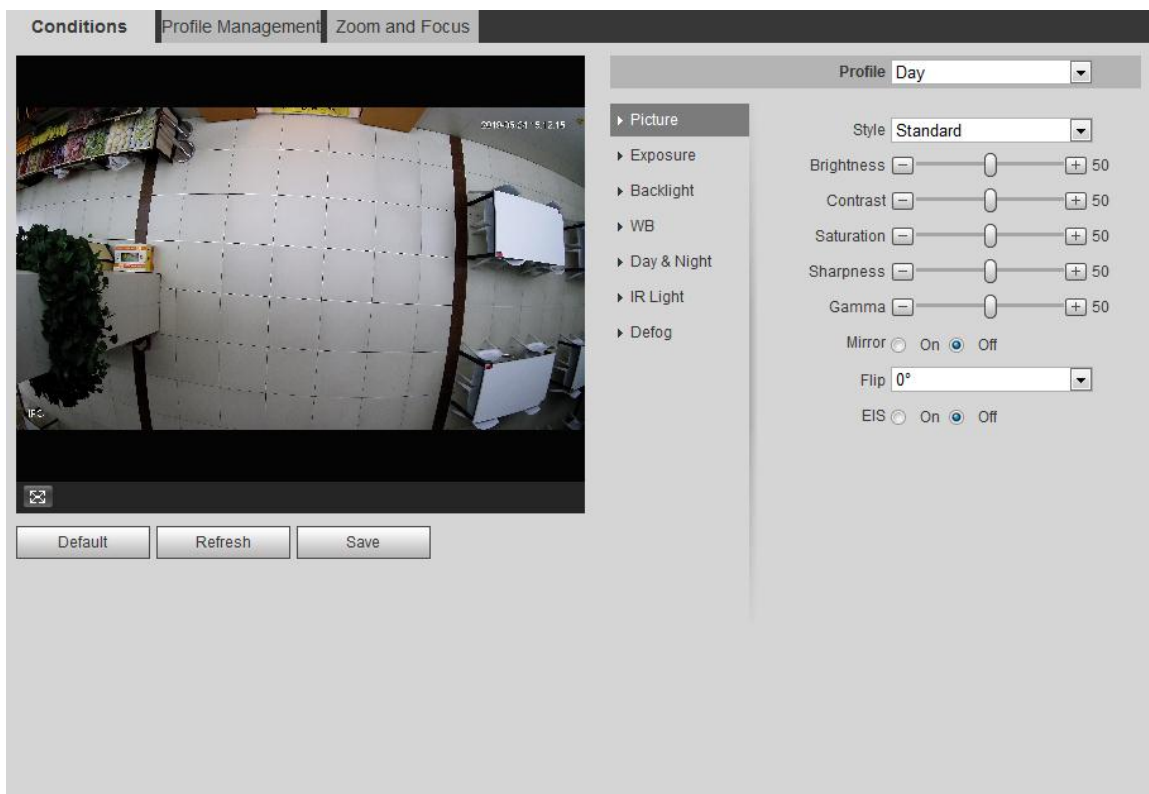


Figure 4-33 Camera conditions (PTZ Camera)

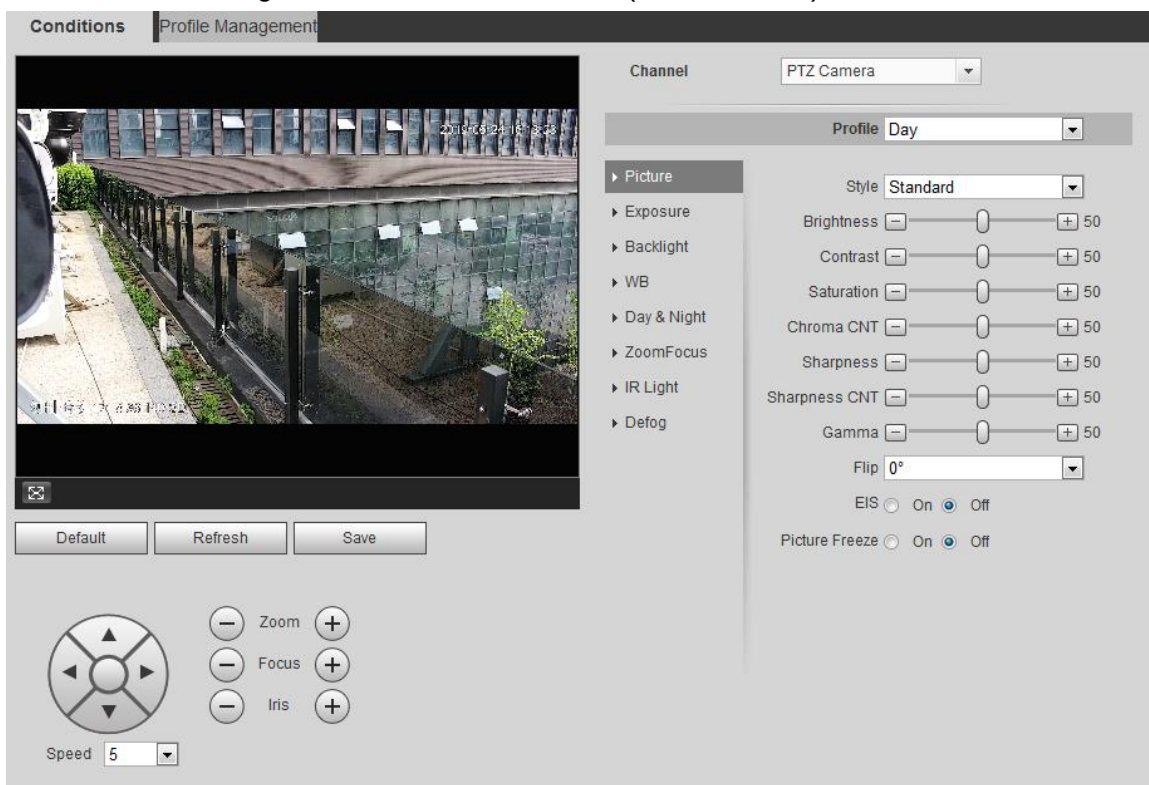


4.5.1.1.2 Picture

You can configure picture parameters according to the actual needs.

Step 1 Select **Setting > Camera > Conditions > Conditions > Picture**.

The **Picture** interface is displayed. See Figure 4-34.

Figure 4-34 Picture

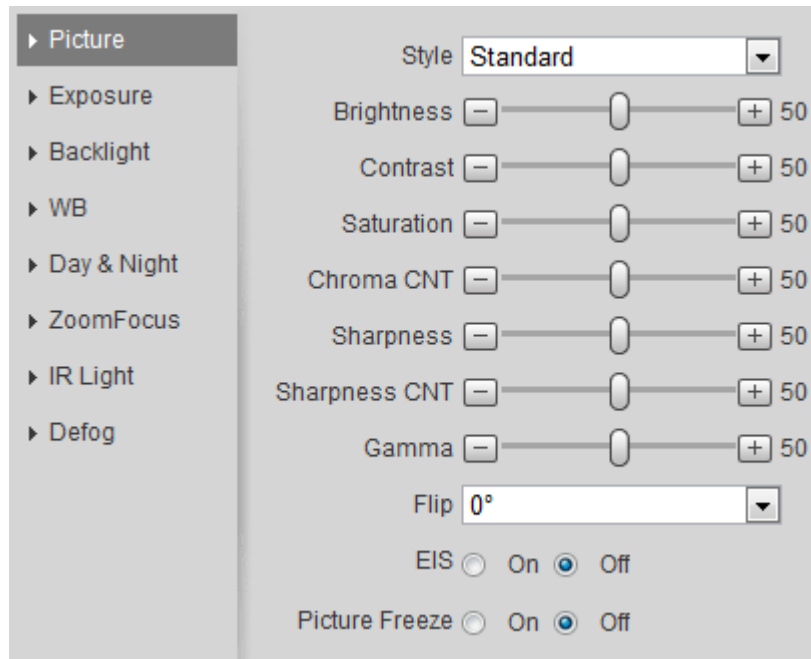

Step 2 Configure picture parameters. For details, see Table 4-8.

Table 4-8 Description of picture parameter

Parameter	Description
Style	Select picture style from soft, standard and vivid. • Soft: Default image style, displays the actual color of the image. • Standard: The hue of the image is weaker than the actual one, and contrast is smaller. • Vivid: The image is more vivid than the actual one.
Brightness	Changes the value to adjust the picture brightness. The bigger the value is, the brighter the picture will be, and the smaller the darker. The picture might be hazy if the value is configured too big.
Contrast	Changes the contrast of the picture. The bigger the value is, the more the contrast will be between bright and dark areas, and the smaller the less. If the value is set too big, the dark area would be too dark and bright area easier to get overexposed. The picture might be hazy if the value is set too small.
Saturation	Makes the color deeper or lighter. The bigger the value is, the deeper the color will be, and the lower the lighter. Saturation value doesn't change image brightness.
Sharpness	Changes the sharpness of picture edges. The bigger the value is, the clearer the picture edges will be, and if the value is set too big, picture noises are more likely to appear.
Gamma	Changes the picture brightness and improves the picture dynamic range in a non-linear way. The bigger the value is, the brighter the picture will be, and the smaller the darker.
Mirror	Select On , and the picture would display with left and right side reversed.

Parameter	Description
Flip	Changes the display direction of the picture, see the options below. 0°: Normal display. 90°: The picture rotates 90° clockwise. 180°: The picture rotates 90° counterclockwise. 270°: The picture flips upside down.  For some models, please set the resolution to 1080p or lower when using 90° and 180°. For details, see "4.5.2.1 Video."
EIS	Corrects the device shaking with difference comparison algorithm and improves the image clarity, effectively solves the picture shaking problem.
Picture Freeze	When you call a preset, the image displays the preset location, not the rotation image.

Step 3 Click **Save**.

4.5.1.1.3 Exposure

Configure iris and shutter to improve image clarity.




Cameras with true WDR don't support long exposure when WDR is enabled in **Backlight**.

Step 1 Select **Setting > Camera > Conditions > Conditions > Exposure**.

The **Exposure** interface is displayed. See Figure 4-35.

Figure 4-35 Exposure

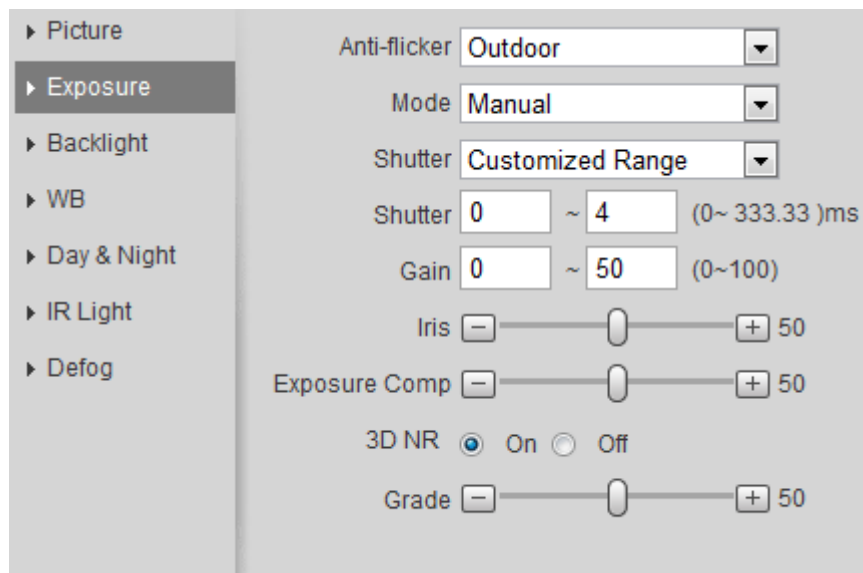

Step 2 Configure exposure parameters. For details, see Table 4-9.

Table 4-9 Description of exposure parameter

Parameter	Description
Anti-flicker	You can select from 50Hz, 60Hz and Outdoor. 50Hz: when the current is 50Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears. 60Hz: when the current is 60Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears. - Outdoor: You can select any exposure mode as needed.
Mode	Device exposure modes, the options are: - Auto: adjusts the image brightness according to the actual condition automatically - Gain Priority: When the exposure range is normal, the system prefers the configured gain range when auto adjusting according to the ambient lighting condition. If the image brightness is not enough and the gain has reached upper or lower limit, the system adjusts shutter value automatically to ensure the image at ideal brightness. You can configure gain range to adjust gain level when using gain priority mode. - Shutter priority: When the exposure range is normal, the system prefers the configured shutter range when auto adjusting according to the ambient lighting condition. If the image brightness is not enough and the shutter value has reached upper or lower limit, the system adjusts gain value automatically to ensure the image at ideal brightness. - Iris priority: The iris value is set to a fixed value, and the device adjusts shutter value then. If the image brightness is not enough and the shutter value has reached upper or lower limit, the system adjusts gain value automatically to ensure the image at ideal brightness. - Manual: Configure gain and shutter value manually to adjust image brightness.  When the Anti-flicker is set to Outdoor, you can select Gain priority or Shutter priority in the Mode list.
Exposure Comp	Sets the value, and it ranges from 0 to 50. The bigger the value is, the brighter the image is.
Shutter	Set the effective exposure time. The value is smaller, the shorter the exposure time is.
Shutter range	When selecting Shutter Priority or Manual in Mode , and setting Customized Range in Shutter , you can set shutter range, and the unit is ms.

Parameter	Description
Gain	When selecting Gain Priority or Manual in Mode , you can set shutter range. With Min. illumination, the camera increase Gain automatically to get clearer images.
Iris	When selecting Aperture Priority in Mode , you can set iris range.
Auto Iris	This configuration is available only when the camera is equipped with auto-iris lens. - When auto iris is enabled, the iris size changes automatically according to the ambient lighting condition, and the image brightness changes accordingly. - When auto iris is disabled, the iris stays at full size and doesn't change no matter how much ambient lighting condition changes.
2D NR	Average single-frame dots and other dots around to reduce noise.
3D NR	Works with multi-frame (no less than 2 frames) images and reduces noise by using the frame information between previous and latter frames.
Grade	This configuration is available only when the 3D NR is enabled. The higher the NR level is, the better the result will be.

Step 3 Click **Save**.

4.5.1.1.4 Backlight


You can select backlight mode from Auto, BLC, WDR, and HLS.

- Auto: Adjusts the brightness according to the environment.
- When in BLC mode, the camera gets clearer image of the dark areas on the target when shooting against light.
- When in WDR mode, the camera constrains over bright areas and compensates dark areas to improve the image clarity.
- When in HLS mode, the camera dims strong light, and it is applicable to the entrance of toll station or parking lot. Works well for taking pictures of human face or car plate detail under extreme low ambient light.

Step 1 Select **Setting > Camera > Conditions > Conditions > Backlight**.

The **Backlight** interface is displayed. See Figure 4-36.

Figure 4-36 Backlight

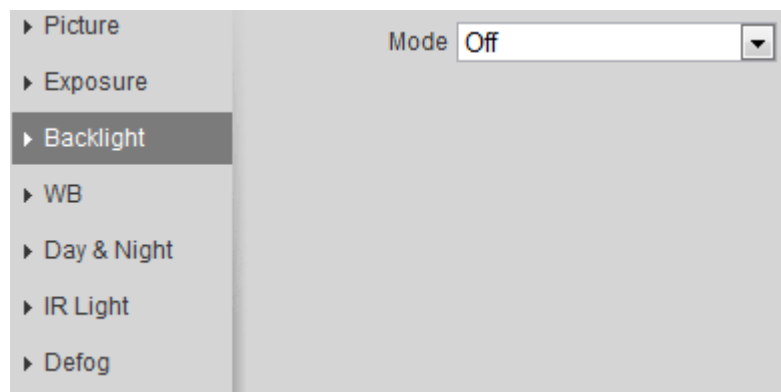

Step 2 Configure backlight parameters. For details, see Table 4-10.

Table 4-10 Description of backlight mode

Backlight mode	Description
Auto	The system adjusts image brightness according to ambient lighting condition automatically to ensure image clarity.
BLC	You can select Default mode or Customized mode. - When in Default mode, the system adjusts exposure according to ambient lighting condition automatically to ensure the clarity of the darkest area. - When in Customized mode, the system auto adjusts exposure only to the set area according to ambient lighting condition to ensure the image of the set area at ideal brightness.
WDR	The system dims bright areas and compensates dark areas to ensure the clarity of all the area.  There might be a few seconds of video loss when the device is switching to WDR mode from other mode.
HLS	The system constrains bright areas and reduces halo size to dim the overall brightness.

Step 3 Click **Save** to finish configuration.


4.5.1.1.5 WB

WB function makes the image color display precisely as it is. When in WB mode, white objects would always display white color in different environments.

Step 1 Select **Setting > Camera > Conditions > Conditions > WB**.

The **WB** interface is displayed. See Figure 4-37.

Figure 4-37 WB

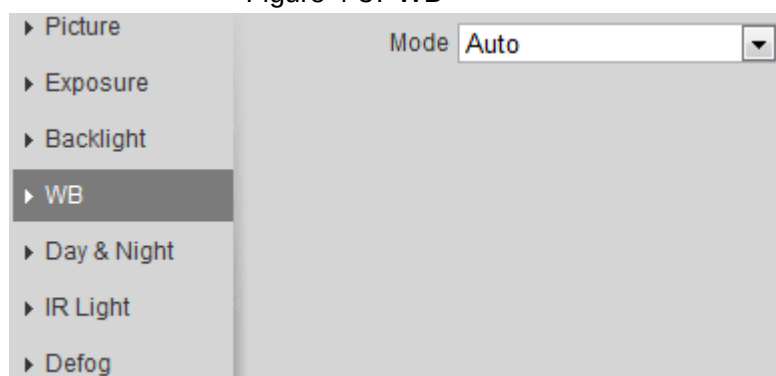

Step 2 Configure WB mode. For details, see Table 4-11.

Table 4-11 Description of WB mode

WB mode	Description
Auto	The system compensates WB according to color temperature to ensure color precision.
Natural	The system auto compensates WB to environments without artificial light to ensure color precision.
Street Lamp	The system compensates WB to outdoor night scene to ensure color precision.

WB mode	Description
Outdoor	The system auto compensates WB to most outdoor environments with natural or artificial light to ensure color precision.
Manual	Configure red and blue gain manually; the system auto compensates WB according to color temperature.
Regional Custom	The system compensates WB only to the set area according to color temperature to ensure color precision.

Step 3 Click **Save**.


4.5.1.1.6 Day & Night

Configure the display mode of the image. The system switches between color and black-and-white mode according to the actual condition.

Step 1 Select **Setting > Camera > Conditions > Conditions > Day & Night**.

The **Day & Night** interface is displayed. See Figure 4-38.

Figure 4-38 Day & Night

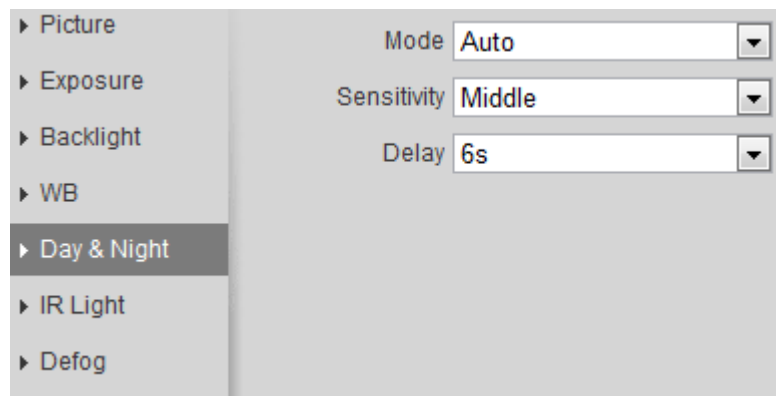

Step 2 Configure day & night parameters. For details, see Table 4-12.

Table 4-12 Description of day & night mode

Parameter	Description
Mode	You can select device display mode from color or black-and-white mode, and the options are:  Day & Night configuration is independent from profile management configuration. • Color: The system displays color image. • Auto: The system switches between color and black-and-white display according to the actual condition. • B/W: The system displays black-and-white image.
Sensitivity	This configuration is available only when the Day & Night Mode set as Auto. You can configure camera sensitivity in switching between color and black-and-white mode.
Delay	This configuration is available only when the Day & Night Mode set as Auto. You can configure the delay when camera switching between color and black-and-white mode. The lower the value is, the faster the camera switches between color and black-and-white mode.

Step 3 Click **Save**.


4.5.1.1.7 Zoom and Focus

Initialize lens to adjust zoom and focus. Only PZT camera supports lens initialization.

Step 1 Select **Setting > Camera > Conditions > Conditions > ZoomFocus**.

The **ZoomFocus** interface is displayed. See Figure 4-39.

Figure 4-39 Zoom and focus

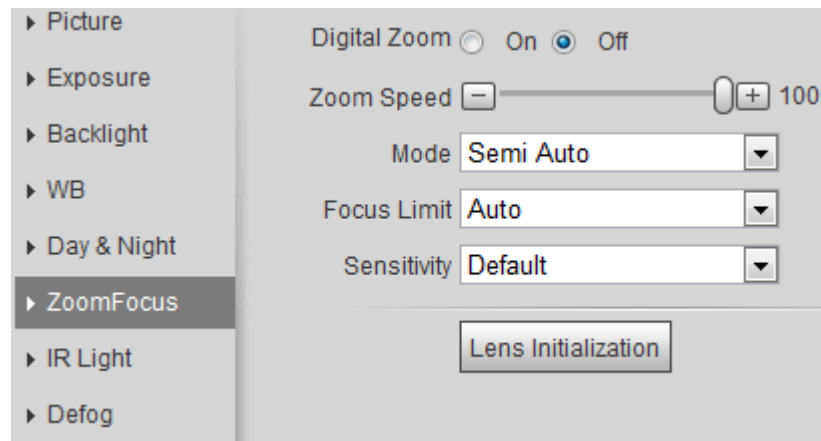

Step 2 Configure zoom and focus parameters. For details, see Table 4-12.

Table 4-13 Description of zoom and focus

Parameter	Description
Digital Zoom	Select On to enable digital zoom function. After the optical zoom reached the upper limit, enable digital zoom function, you still can do digital zoom operation.
Zoom Speed	Adjusts zoom speed. The bigger the value is, the higher the speed is.
Mode	Sets focus model: • Auto: When image moves or object changes in the scene, the camera will focus automatically. • Semi Auto: Click  or  corresponding to Focus or Zoom, the camera will focus. Calling preset, positioning accurately or rotating PTZ also will trigger focus. • Manual: Click  or  corresponding to Focus to adjust the focus.
Focus Limit	When the focus length is too short, the camera will focus on the dome cover. Sets the shortest focus distance to avoid focusing on the dome cover. You can also change the focus speed by changing focus length.
Sensitivity	The sensitivity of triggering focus. The bigger the value is, the easier the focus is triggered.

Step 3 Click **Save**.


4.5.1.1.8 IR Light

This configuration is available only when the device is equipped with IR light.

Step 1 Select **Setting > Camera > Conditions > Conditions > IR Light**.

The **IR Light** interface is displayed. See Figure 4-40.

Figure 4-40 IR light

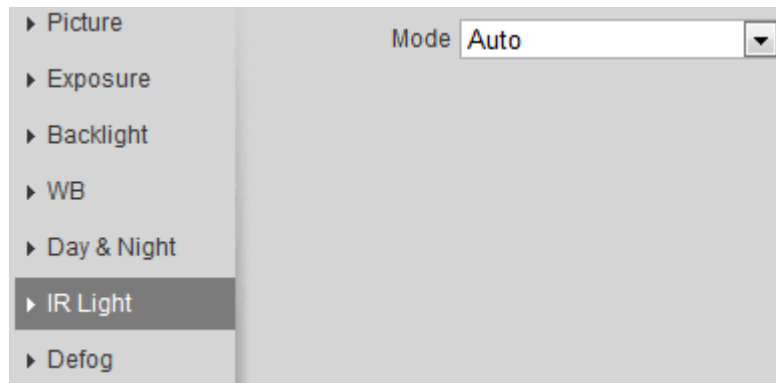

Step 2 Configure IR light mode. For details, see Table 4-14.

Table 4-14 Description of IR light mode

IR light mode	Description
Manual	Adjust the brightness of IR light manually, and then the system will supply IR light to the image accordingly.
Smart IR	The system adjusts the IR light intensity according to the ambient lighting condition.
ZoomPrio	The system adjusts the IR light intensity automatically according to the change of the ambient light. - When the ambient light turns darker, the system turns on the low beam lights first, if the brightness is still not enough, it turns on the high beam lights then. - When the ambient light turns brighter, the system dims high beam lights until they are off, and then the low beam lights. - When the focus reaches certain wide angle, the system doesn't turn on high beam light in order to avoid over-exposure in short distance. In the meantime, you can configure light compensation manually to make fine adjustment to the IR light intensity.
Off	IR light is off.

Step 3 Click **Save**.


4.5.1.1.9 Defog

The image quality is compromised in foggy or hazy environment, and defog can be used then to improve image clarity.

Step 1 Select **Setting > Camera > Conditions > Conditions > Defog**.

The **Defog** interface is displayed. See Figure 4-41.

Figure 4-41 Defog

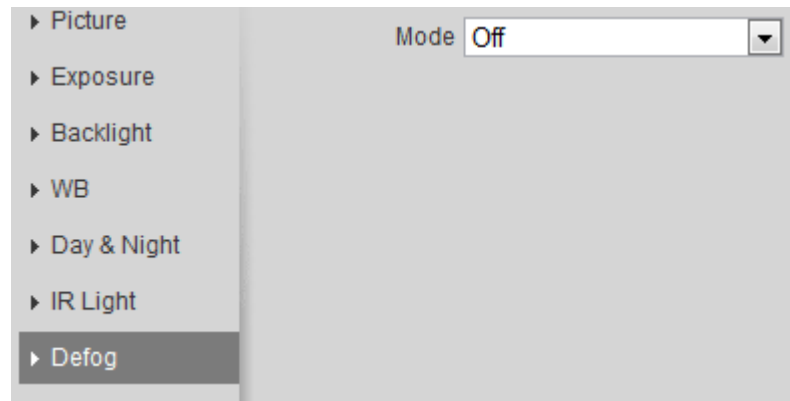

Step 2 Configure defog mode. For details, see Table 4-15.

Table 4-15 Description of defog mode

Defog	Description
Manual	Configure function intensity and atmospheric light mode manually, and then the system adjusts image clarity accordingly. Atmospheric light mode can be adjusted automatically or manually.
Auto	The system adjusts image clarity according to the actual condition.
Off	Defog function is disabled.

Step 3 Click **Save**.

4.5.1.1.10 Fisheye

Select install mode and record mode according to the actual installation scene. When you the camera outputting corrective stream accesses to the platform, the platform displays the corrective image.




This function is only available on fisheye device.

Step 1 Select **Setting > Camera > Conditions > Conditions > Fisheye**.

The **Fisheye** interface is displayed. See Figure 4-42.

Figure 4-42 Fisheye

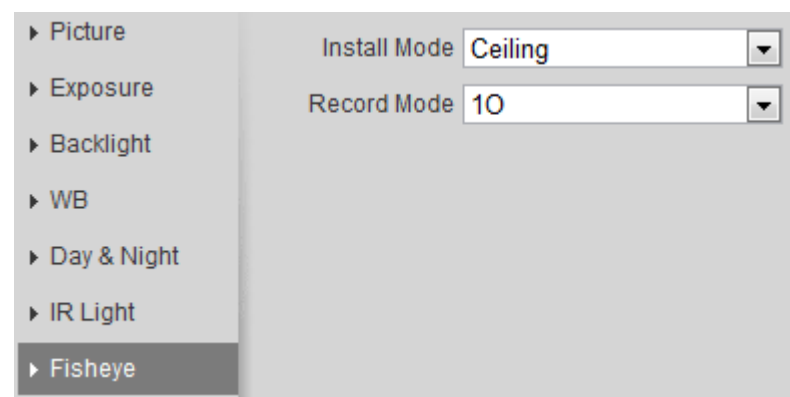

Step 2 Set install mode and record mode. For details, see Table 4-16.

Table 4-16 Description of fisheye mode

Parameter	Description
Install Mode	You can select Ceiling , Wall , or Ground .
Record Mode	1O: The original image before correction. 1P: 360°rectangular panoramic image. 2P: When the install mode is Ceiling or Ground, you can set this mode. Two associated 180° rectangular image screens, and at any time, the two screens form a 360° panoramic image. 1R: Original image screen + independent sub-screen. You can zoom or drag the image in all the screens. 2R: Original image screen + two independent sub-screens. You can zoom or drag the image in all the screens. 4R: Original image screen + four independent sub-screens. You can zoom or drag the image in all the screens. 1O + 3R: Original image screen + three independent sub-screens. You can zoom or drag the image in all the screens.

Step 3 Click **Save**.

4.5.1.2 Profile Management

The surveillance system works in different ways as profile configured in different time.

Step 1 Select **Setting > Camera > Conditions > Profile Management**.

The **Profile Management** interface is displayed.

Step 2 Manage profile.

- When **Profile Management** is set as **General**, the surveillance system works under **General** configuration.

Figure 4-43 General

The screenshot shows the 'Profile Management' tab selected in the top navigation bar. Below the navigation bar, there are four radio buttons: 'General' (selected), 'Full Time', 'Schedule', and 'Day/Night'. At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.


- When **Profile Management** is set as **Full Time**, you can select **Day** or **Night** in the **Always Enable** list, the surveillance system works under **Always Enable** configuration.

Figure 4-44 Full time

The screenshot shows the 'Profile Management' tab selected in the top navigation bar. Below the navigation bar, there are four radio buttons: 'General', 'Full Time' (selected), 'Schedule', and 'Day/Night'. Below these, there is a label 'Always Enable' followed by a dropdown menu showing 'Day'. At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.


- When **Profile Management** is set as **Schedule**, you can drag the slide block to set certain time as **Day** or **Night**. For example, set 8:00–18:00 as day, and 0:00–8:00 and 18:00–24:00 as night.

Figure 4-45 Schedule

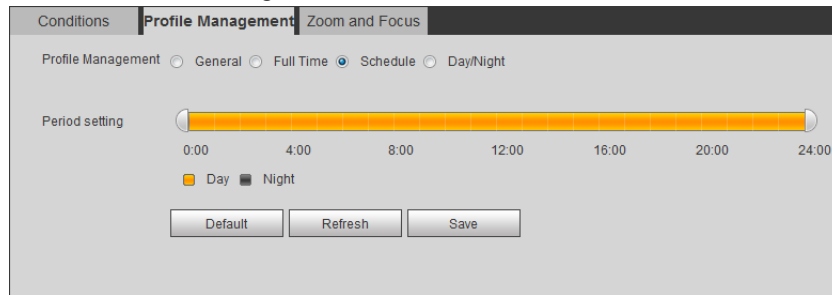

- When **Profile Management** is set as **Day & Night**, the surveillance system works under **Day & Night** configuration.

Figure 4-46 Day/Night

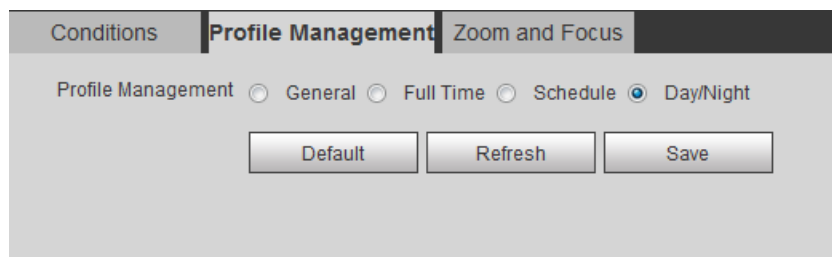

Step 3 Click **Save**.

4.5.1.3 Zoom and Focus

You can adjust image clarity through auto or manual focus; and adjust the image size through zoom. For details, see 4.2.4.2 Zoom and Focus."

4.5.2 Setting Video Parameters

This section introduces video parameters, such as video, snapshot, overlay, ROI (region of interest), and path.



Click **Default**, and the device is restored to default configuration. Click **Refresh** to view the latest configuration.

4.5.2.1 Video

Configure video stream parameters, such as stream type, encode mode, resolution, frame rate, bit rate type, bit rate, I frame interval, SVC, and watermark.

Step 1 Select **Setting > Camera > Video > Video**.

The **Video** interface is displayed. See Figure 4-47.

Figure 4-47 Video

The screenshot shows a configuration window with tabs: Video, Snapshot, Overlay, ROI, and Path. The 'Video' tab is active, displaying settings for 'Main Stream' and 'Sub Stream'.

Main Stream Settings:

- Encode Mode: H.264H
- Smart Codec: Off
- Resolution: 4000*3000(4000x3000)
- Frame Rate(FPS): 30
- Bit Rate Type: CBR
- Reference Bit Rate: 7726-16384Kb/S
- Bit Rate: Customized (8448 Kb/S)
- I Frame Interval: 60 (30~150)
- SVC: 2
- Watermark Settings: ☒ (Watermark Character: DigitalCCTV)

Sub Stream Settings:

- ☒ Enable
- Sub Stream: Sub Stream1
- Encode Mode: H.264H
- Resolution: 704*480(D1)
- Frame Rate(FPS): 30
- Bit Rate Type: CBR
- Reference Bit Rate: 512-2048Kb/S
- Bit Rate: 768 (Kb/S)
- I Frame Interval: 60 (30~150)
- SVC: 1(off)

Buttons at the bottom: Default, Refresh, Save.

Step 2 Configure video parameters. For details, see Table 4-17.

Table 4-17 Description of video parameter

Parameter	Description
Enable	Select the Enable check box to enable sub stream, it is enabled by default.  You can enable multiple sub streams simultaneously.
Enable	Select the Enable check box to enable sub stream, it is enabled by default.
Enable	You can enable both Sub Stream 1 and Sub Stream 2 .
Encode Mode	You can select encode mode from: ● H.264: Main Profile Encode Mode. ● H.264H: High Profile Encode Mode. ● H.264B: Baseline Profile Encode Mode. ● H.265: Main Profile Encode Mode. ● MJPEG: When under this mode, the image requires high bit rate value to ensure clarity, it is recommended to set the Bit Rate value to the biggest value in the Reference Bit Rate.
Smart Codec	Enable smart codec to improve video compressibility and save storage space.  After smart codec is enabled, the device would stop supporting the third bit stream, ROI, and smart event detection, and the actual interface shall prevail.
Resolution	The resolution of the video. The max resolution of different devices might vary, and the actual product shall prevail.

Parameter	Description
Video Clip	This function is available only for sub stream 2 of select device. 1. Select Video Clip, and click . The Area interface is displayed. 2. Select resolution as needed and clip image on the interface. 3. View the clipped video in Live interface (the live interface of sub stream 2 only displays the clipped area).
Frame Rate (FPS)	The number of frame in one second of video. The bigger the FPS is, the clearer and smoother the video will be.
Bit Rate Type	You can select bit rate type from: ● CBR: the bit rate changes little and keeps close to the defined bit rate value. ● VBR: the bit rate changes as monitoring scene changes.  The Bit Rate Type can be only be set as CBR when Encode Mode is set as MJPEG.
Quality	This parameter can be configured only when the Bit Rate Type is set as VBR. There are six levels of Image quality, and the sixth is the best.
Reference Bit Rate	The most suitable bit rate value range recommended to user according to the defined resolution and frame rate.
Max Bit Rate	This parameter can be configured only when the Bit Rate Type is set as VBR. You can select the value of the Max Bit Rate according to the Reference Bit Rate value. The bit rate then changes as monitoring scene changes, but the max bit rate keeps close to the defined value.
Bit Rate	This parameter can be configured only when the Bit Rate Type is set as CBR. Select bit rate value in the list according to actual condition.
I Frame Interval	The number of P frames between two I frames, and the I Frame Interval range changes as FPS changes. It is recommended to set I Frame Interval twice as big as FPS.
SVC	Scaled video coding, able to encode a high quality video bit stream that contains one or more subset bit streams. When sending stream, to improve inflency, the system will quit some data of related lays acoording to the network staus. ● 1: The default value, which means no layered coding. ● 2, 3 and 4: The lay number that the video stream is packed.
Watermark Settings	You can verify the watermark to check if the video has been tampered. 1. Select the check box to enable watermark function. 2. The default character is DigitalCCTV.
Watermark Character	

Step 3 Click **Save**.


4.5.2.2 Snapshot

You can configure snapshot parameters, including snapshot type, image size, quality and interval.

Step 1 Select **Setting > Camera > Video > Snapshot**.

The **Snapshot** interface is displayed, see Figure 4-48.

Figure 4-48 Snapshot

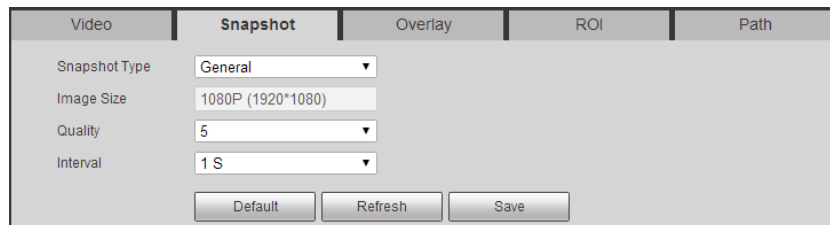

Step 2 Configure snapshot parameters. For details, see Table 4-18.

Table 4-18 Description of snapshot parameter

Parameter	Description
Snapshot Type	You can select General and Event . ● General: The system takes snapshot as scheduled. For details, see "4.7.1 Schedule." ● Event: The system takes snapshot when the video detection, audio detection, event, or alarm is triggered. This function requires the corresponding snapshot being enabled.
Image Size	The same resolution with main stream.
Quality	Configures the snapshot quality. There are six levels of Image quality, and the sixth is the best.
Interval	Configures the snapshot frequency. Select Customized , and then you can configure snapshot frequency manually.

Step 3 Click **Save**.

4.5.2.3 Overlay

Configure overlay information, and it will be displayed on the **Live** interface.

4.5.2.3.1 Configuring Privacy Masking

You can enable this function when you need to protect privacy of some area on the video image.

Step 1 Select **Setting > Camera > Video > Overlay > Privacy Masking**.

The **Privacy Masking** interface is displayed. See Figure 4-49 and Figure 4-50.

Figure 4-49 Privacy masking


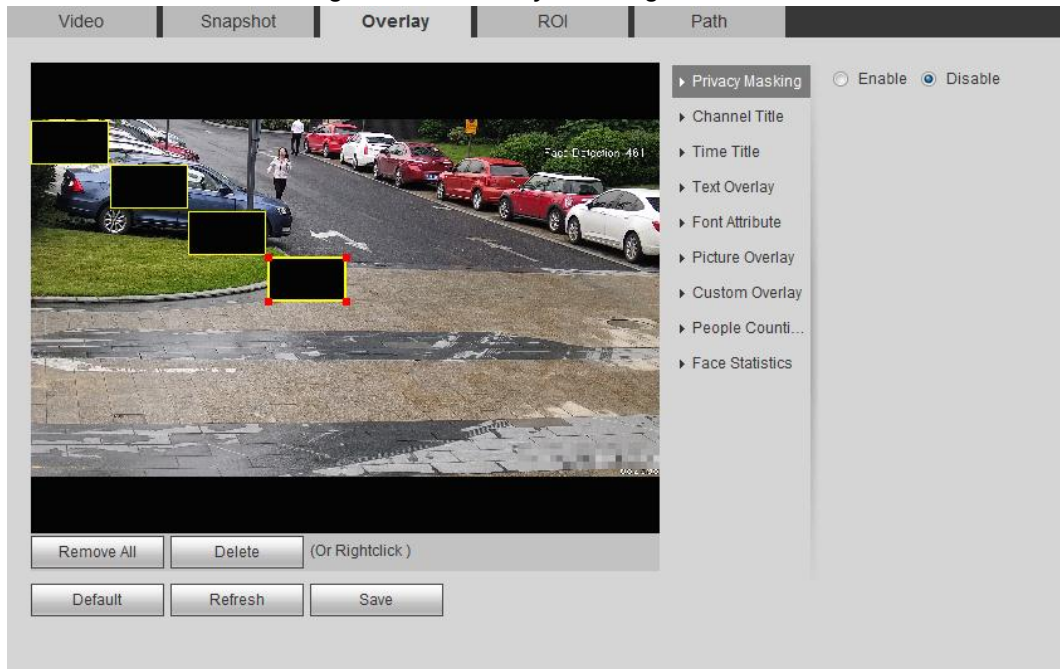


Figure 4-50 Privacy masking (speed dome)

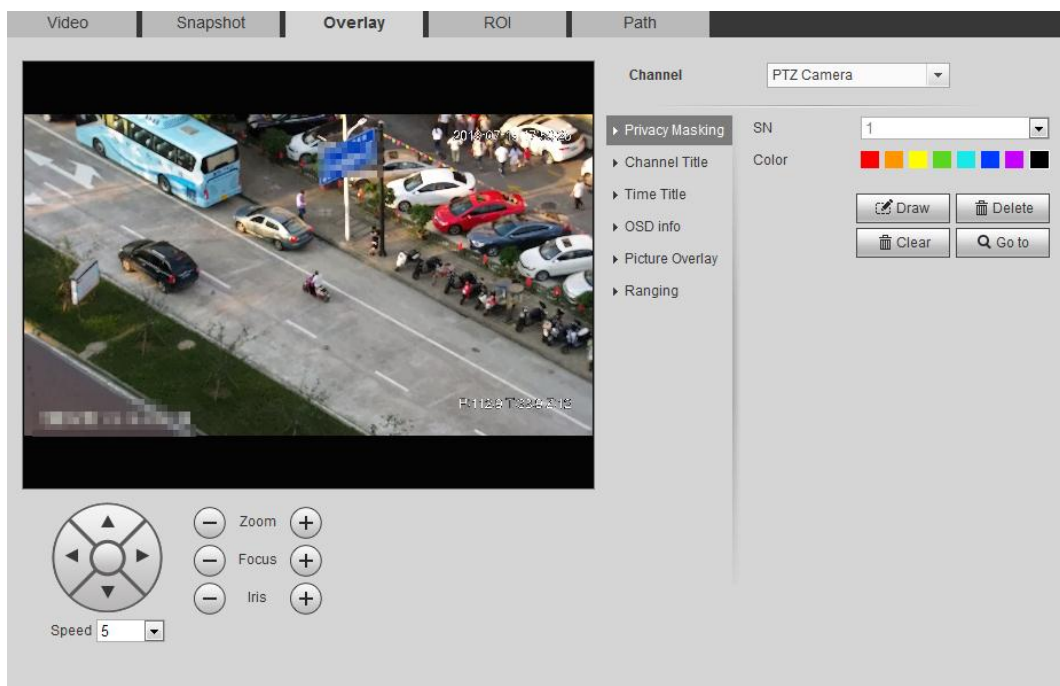

Step 2 Set privacy masking.

- Speed Dome
- 3) Select the SN.
- 4) Adjust the live image to the proper location through PTZ, select the color, and then click **Draw**. Press the mouse button to drag rectangles. The configuration takes effect immediately.

Other operation:

- ◇ Select the SN, and click **Go to**, the speed dome rotates to the masked area.
- ◇ Select the SN, and click **Delete** to delete the masking rectangles.
- ◇ Click **Clear**, and then click **OK** to clear all masking rectangles.
- Other cameras:

- 1) Select **Enable**, and then drag the block to the area that you need to cover.



- You can draw four rectangles at most.
- Click **Remove All** to delete all the area boxes; select one box, and then click **Delete** or right-click to delete it.

- 2) Adjust the size of the rectangle to protect the privacy.
- 3) Click **Save**.


4.5.2.3.2 Configuring Channel Title

You can enable this function when you need to display channel title in the video image.

Step 1 Select **Setting > Camera > Video > Overlay > Channel Title**.

The **Channel Title** interface is displayed. See Figure 4-51.

Figure 4-51 Channel title

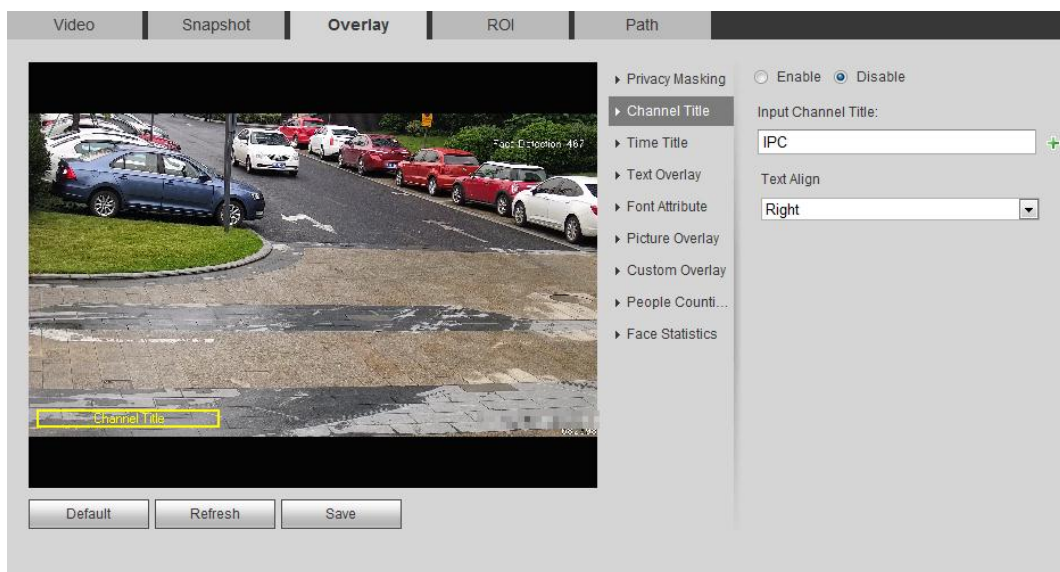

Step 2 Select **Enable**, enter the channel title, and select the text align.



Click **+** to expand the channel title, and you can expand 1 line at most.

Step 3 Move the title box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.3 Configuring Time Title

You can enable this function when you need to display time in the video image.

Step 1 Select **Setting > Camera > Video > Overlay > Time Title**.

The **Time Title** interface is displayed. See Figure 4-52.

Figure 4-52 Time title

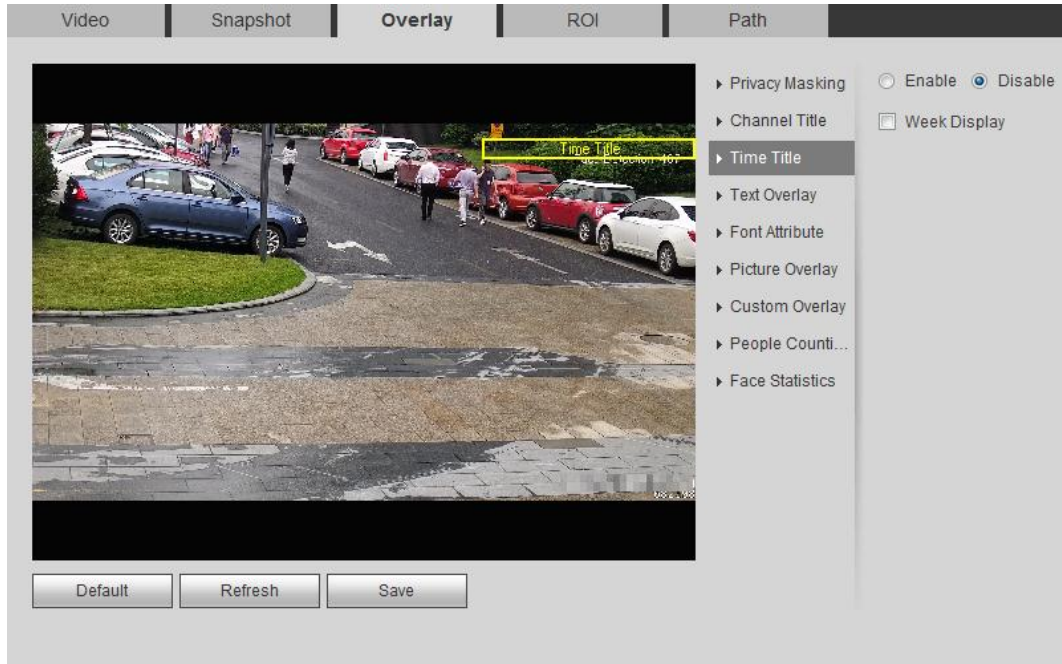

Step 2 Select **Enable**.

Step 3 Select **Week Display** check box.

Step 4 Move the time box to the position you want in the image.

Step 5 Click **Save**.

4.5.2.3.4 Configure Text Overlay

You can enable this function if you need to display text in the video image.




Text overlay and picture overlay can't work at the same time, and the IPC that connects to mobile NVR with private protocol would display GPS information as priority.

Step 1 Select **Setting > Camera > Video > Overlay > Text Overlay**.

The **Text Overlay** interface is displayed. See Figure 4-53.

Figure 4-53 Text overlay

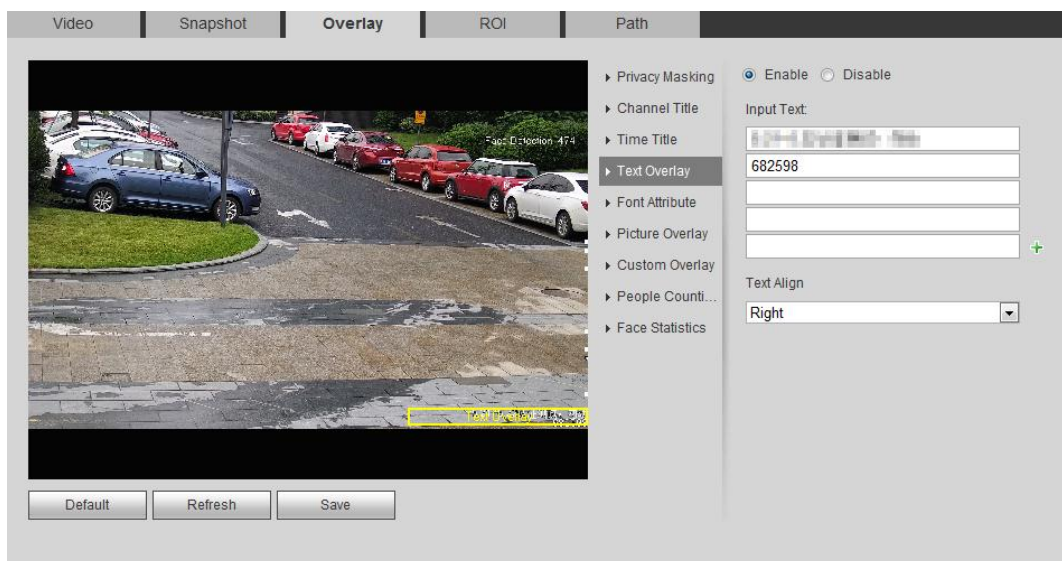

Step 2 Select **Enable**, enter the text you need, and then select alignment. The text displays in the video image.



Click **+** to expand the text overlay, and you can expand 9 lines at most.

Step 3 Move the text box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.5 Configure Font Attribute

You can enable this function if you need to adjust the font size in the video image.

Step 1 Select **Setting > Camera > Video > Overlay > Font Attribute**.

The **Font Attribute** interface is displayed. See Figure 4-54.

Figure 4-54 Font attribute

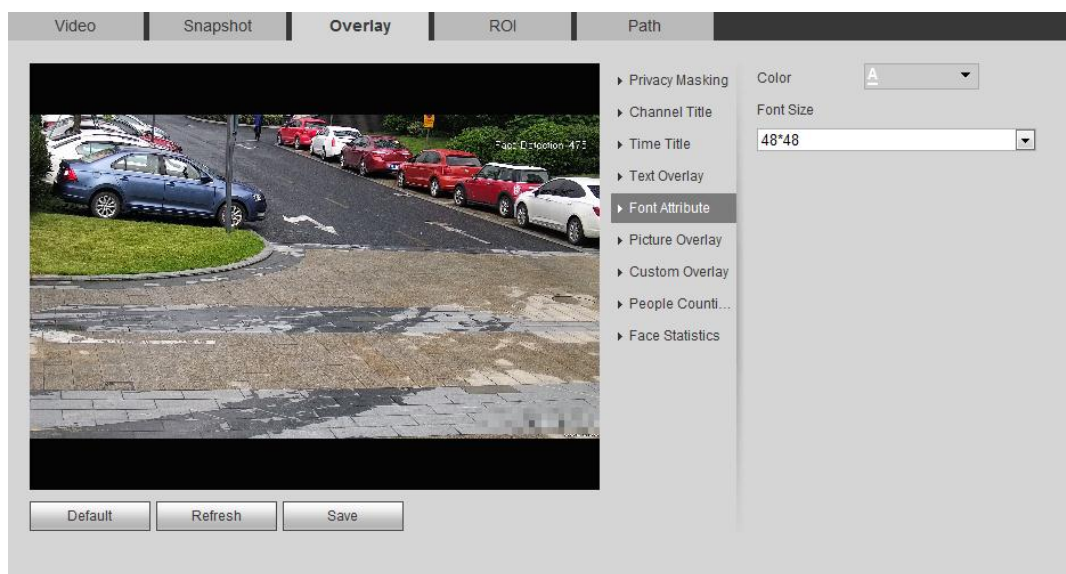

Step 2 Select the font color and size.

Click **More Color** to customize the font color

Step 3 Click **Save**.

4.5.2.3.6 Configure Picture Overlay

You can enable this function if you need to display picture information on the video image.




Text overlay and picture overlay cannot work at the same time.

Step 1 Select **Setting > Camera > Video > Overlay > Picture Overlay**.

The **Picture Overlay** interface is displayed. See Figure 4-55.

Figure 4-55 Picture overlay

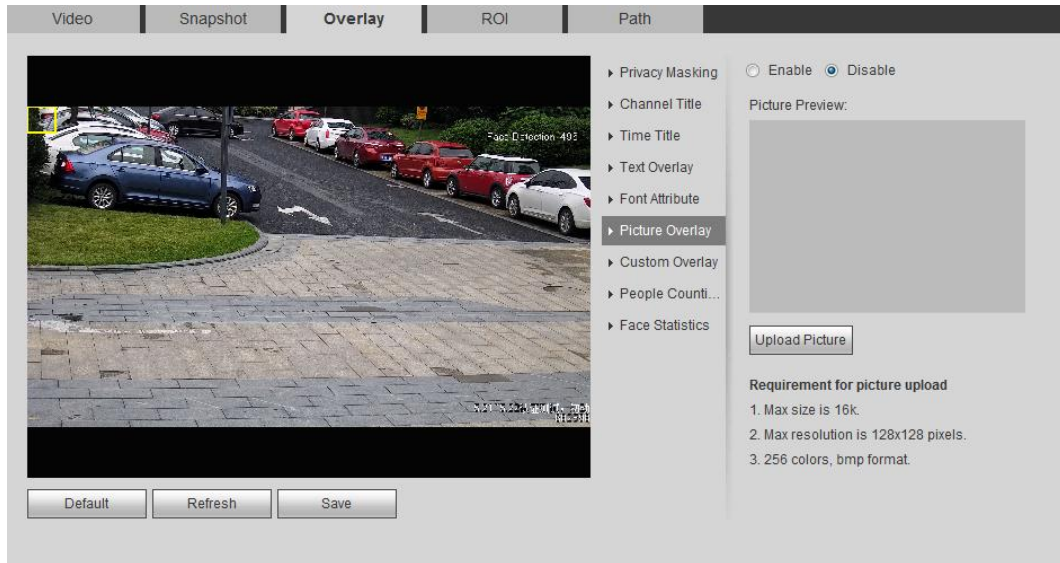

Step 2 Select **Enable**, click **Upload Picture**, and then select the picture to be overlaid.
The picture is displayed on the video image.

Step 3 Move the overlaid picture to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.7 Configure Custom Overlay

You can enable this function if you need to display custom information on the video image.

Step 1 Select **Setting > Camera > Video > Overlay > Custom Overlay**.

The **Custom Overlay** interface is displayed, see Figure 4-56.

Figure 4-56 Custom overlay

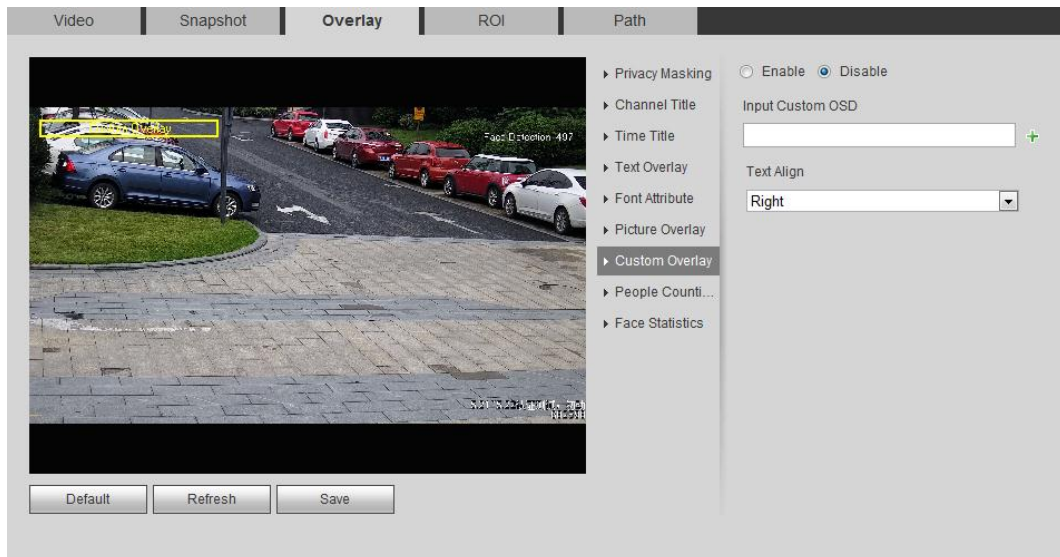

Step 2 Select **Enable**, and then select the text align.



Click **+** to expand the custom overlay, and you can expand 1 line at most.

Step 3 Move the custom box to the position you want in the image.

Step 4 Click **Save**.

4.5.2.3.8 Configuring OSD Info

You can enable this function if you want to display words on the video image.




Only tracking speed dome supports OSD info function.

Step 1 Select **Setting > Camera > Video > OSD Info**.

The **OSD Info** interface is displayed. See Figure 4-57.

Figure 4-57 OSD info

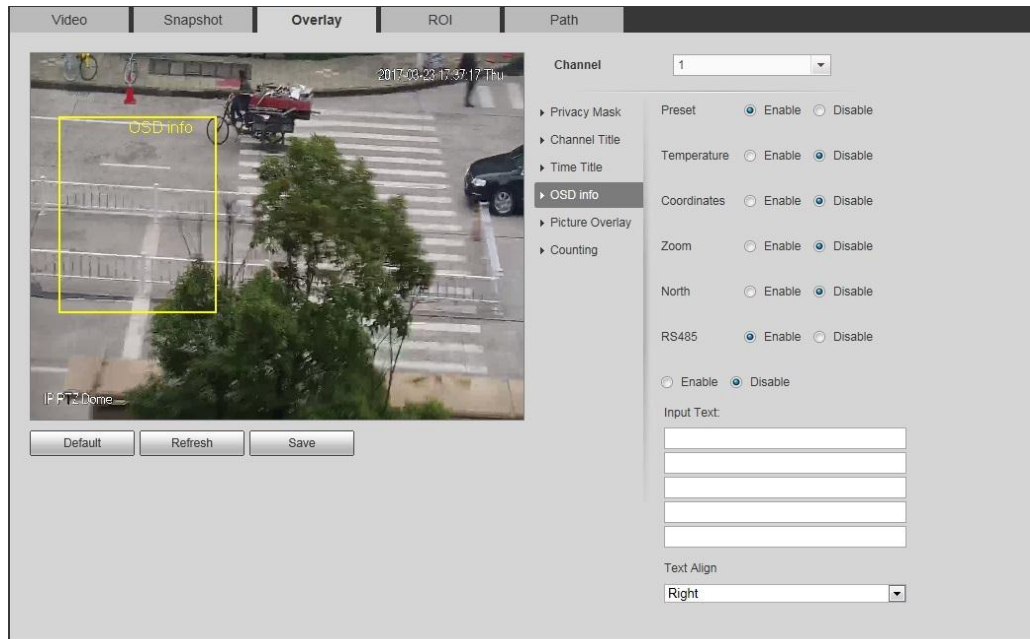

Step 2 Configure OSD info. See Table 4-19

Table 4-19 Description of OSD info

Parameter	Description
Preset	Select Enable , and the preset name is displayed in the image when the camera turns to the preset, and it will disappear 3 s later.
Temperature	Select Enable and the internal temperature of the current device is displayed.
Coordinates	Select Enable and the PTZ coordinates info is displayed in the image.
Zoom	Select Enable and the zoom info is displayed in the image. such as  , which means 12x zoom rate.
North	Select Enable and the north direction is displayed in the image.
RS485	Select Enable and it will enable RS-485 communication function.
Text	Select Enable and set text, and the text is display in the image.
Input Text	
Text Align	Alignment mode of the displayed information in the image.

Step 3 Move the OSD box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.9 Configure Counting

The image displays statistics of the enter number and leave number. When the overlay function is enabled during intelligent rules configuration, this function is enabled simultaneously.

Step 1 Select **Setting > Camera > Video > Overlay > Counting**.

The **Counting** interface is displayed. See Figure 4-58.

Figure 4-58 Counting

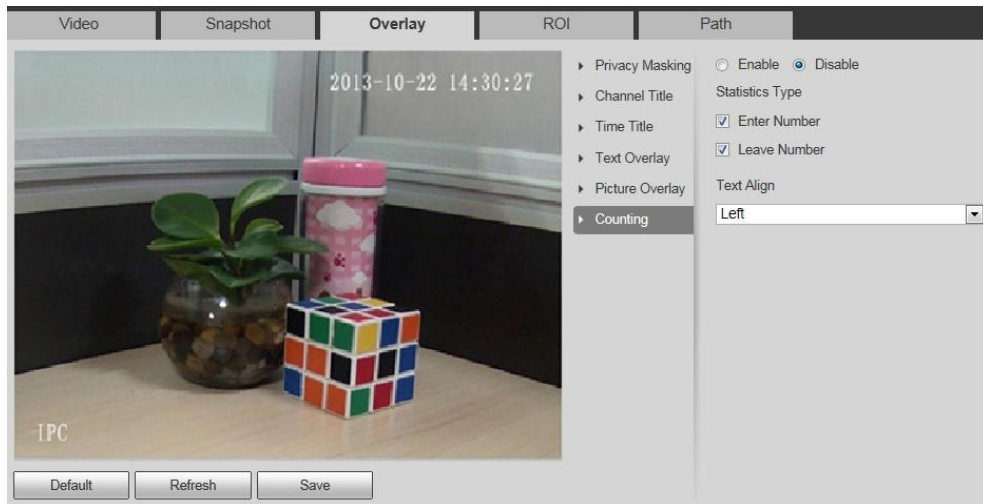

Step 2 Select **Enable**, and then configure counting method and alignment.

Step 3 Move the counting box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.10 Configuring Structured Statistics

The image displays structured statistics. When the overlay function enabled during intelligent rules configuration, this function is enabled simultaneously.

Step 1 Select **Setting > Camera > Video > Overlay > Structured Statistics**.

The **Structured Statistics** interface is displayed. See Figure 4-59.

Figure 4-59 Structured statistics

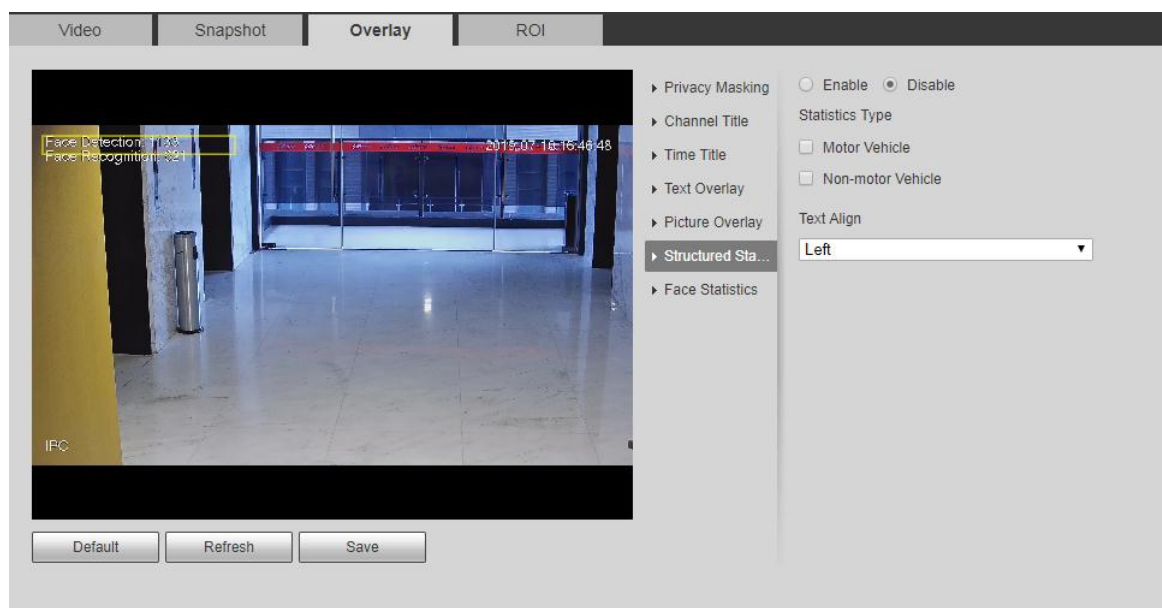

Step 2 Select **Enable**, select the statistics type, and then select text align.

Step 3 Move the structured statistics box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.11 Configuring Ranging

Configure camera height and the display time of OSD information. Click any point on the image, and the OSD information between camera and the selected point is displayed.

Step 1 Select **Setting > Camera > Video > Overlay > Ranging**.

The **Ranging** interface is displayed. See Figure 4-60.

Figure 4-60 Ranging

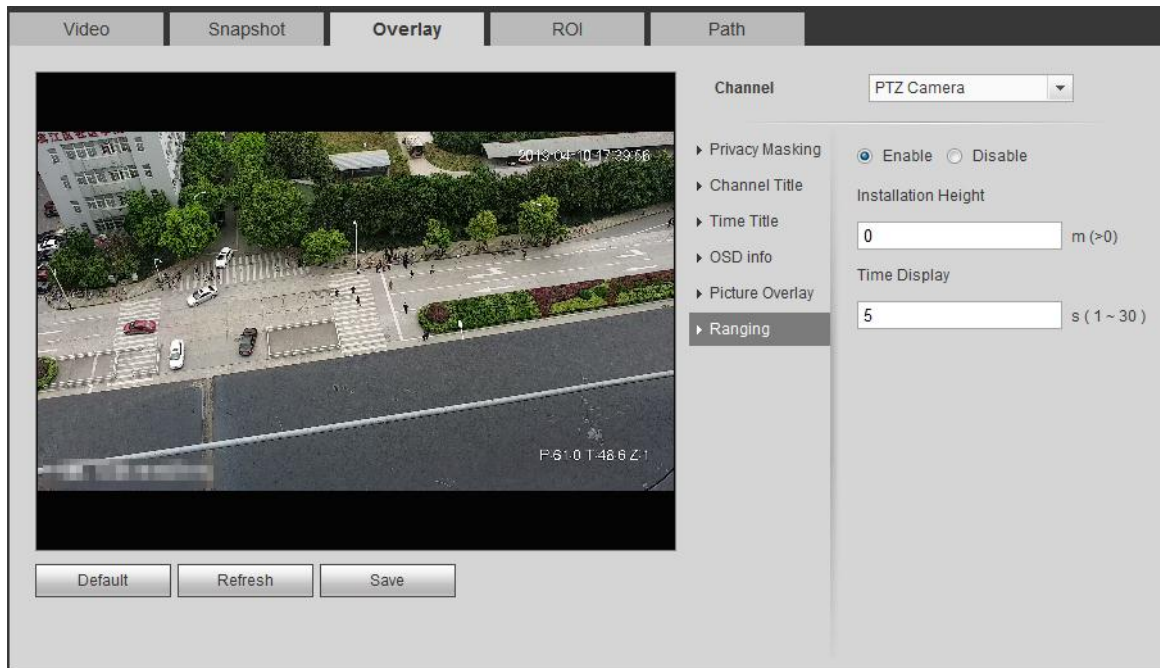

Step 2 Select **Enable**, and then set the installation height and time display.

Time display: The display time of the ranging information on live image.

Step 3 Click **Save**.


4.5.2.3.12 Configuring ANPR

The image displays ANPR statistics. When the overlay function enabled during intelligent rules configuration, this function is enabled simultaneously.

Step 1 Select **Setting > Camera > Video > Overlay > ANPR**.

The **ANPR** interface is displayed. See Figure 4-61.

Figure 4-61 ANPR

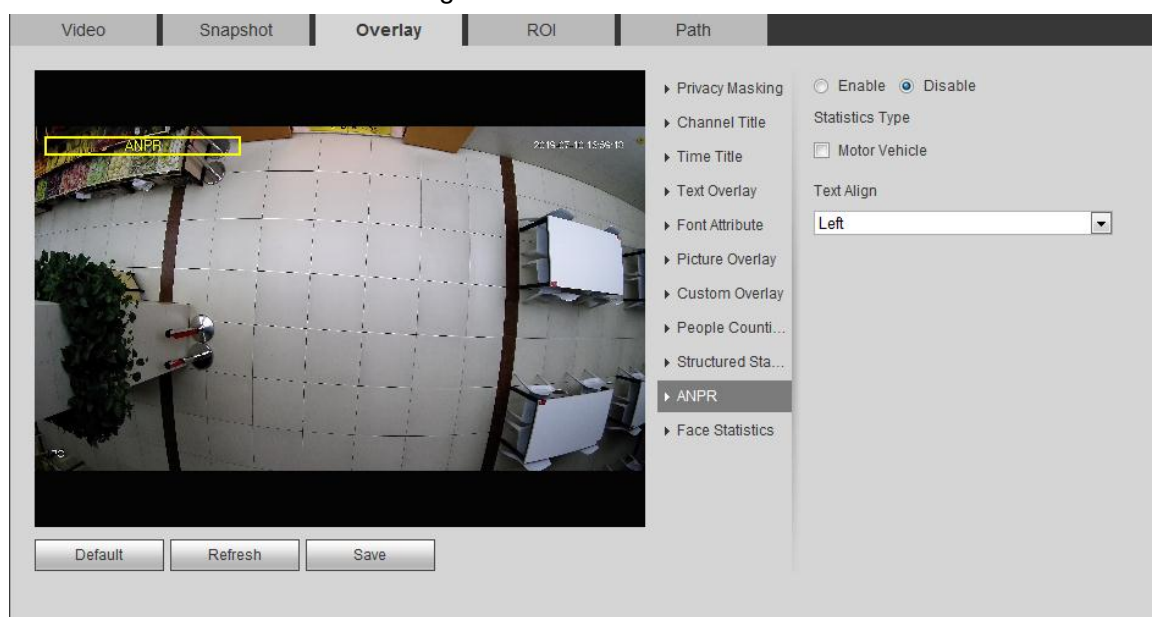

Step 2 Select **Enable**, select the statistics type, and select text align.

Step 3 Move the ANPR box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.3.13 Configuring Face Statistics

The image displays face statistics. When the overlay function enabled during intelligent rules configuration, this function is enabled simultaneously.

Step 1 Select **Setting > Camera > Video > Overlay > Face Statistics**.

The **Face Statistics** interface is displayed. See Figure 4-62.

Figure 4-62 Face statistics

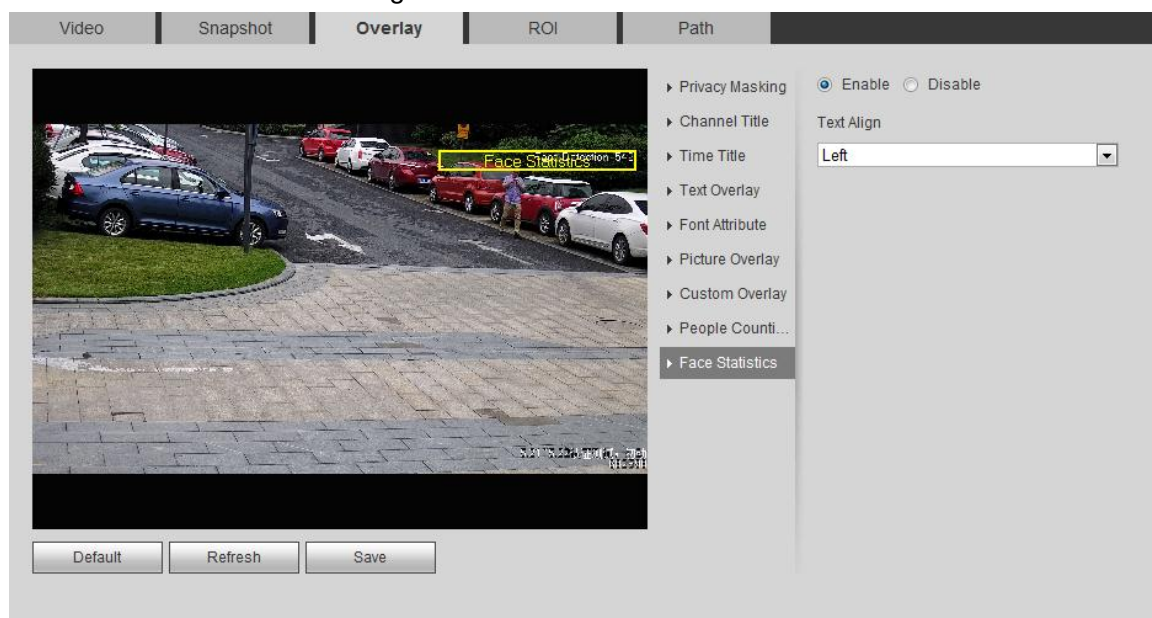

Step 2 Select **Enable**, and select the text align.

Step 3 Move the structured statistics box to the position you want in the image.

Step 4 Click **Save**.


4.5.2.4 ROI

Select ROI (region of interest) on the image, and the selected image is display at defined quality.

Step 1 Select **Setting > Camera > Video > ROI**.

The **ROI** interface is displayed. See Figure 4-63.

Figure 4-63 ROI

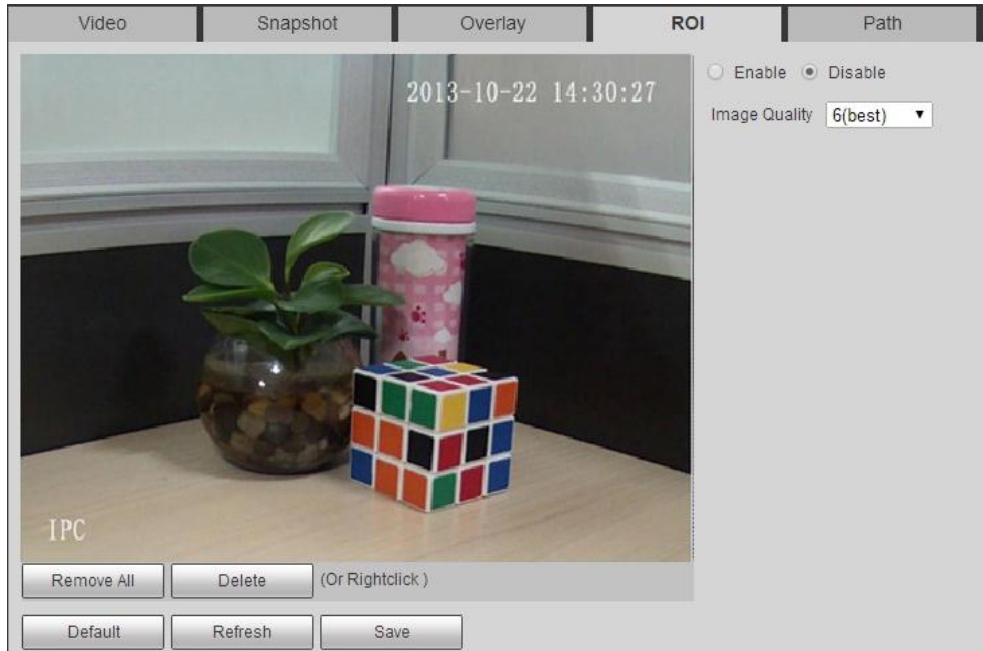

Step 2 Select **Enable**, draw the area on the image, and then configure the image quality of ROI.



- You can draw four area boxes at most.
- The bigger the image quality value, the better the quality.
- Click **Remove All** to delete all the area boxes; select one box, and then click **Delete** or right-click to delete it.

Step 3 Click **Save**.

4.5.2.5 Path

You can configure the storage path for live snapshot, live record, playback snapshot, playback download, and video clips.

Step 1 Select **Setting > Camera > Video > Path**.

The **Path** interface is displayed. See Figure 4-64.

Figure 4-64 Path

Video	Snapshot	Overlay	Path
Live Snapshot	C:\Users\admin\WebDownload\LiveSnapshot		Browse...
Live Record	C:\Users\admin\WebDownload\LiveRecord		Browse...
Playback Snapshot	C:\Users\admin\WebDownload\PlaybackSnapshot		Browse...
Playback Download	C:\Users\admin\WebDownload\PlaybackRecord		Browse...
Video Clips	C:\Users\admin\WebDownload\VideoClips		Browse...
Default Save			

Step 2 Click **Browse** to select the storage path for live snapshot, live record, playback snapshot, playback download, and video clips. For details, see Table 4-20.

Table 4-20 Description of path

Parameter	Description	
Live Snapshot	The snapshot of live interface. The default path is C:\Users\admin\WebDownload\LiveSnapshot.	 Admin means the account being used.
Live Record	The recorded video of live interface. The default path is C:\Users\admin\WebDownload\LiveRecord.	
Playback Snapshot	The snapshot of playback interface. The default path is C:\Users\admin\WebDownload\PlaybackSnapshot.	
Playback Download	The downloaded video of playback interface. The default path is C:\Users\admin\WebDownload\PlaybackRecord.	
Video Clips	The clipped video of playback interface. The default path is C:\Users\admin\WebDownload\VideoClips.	

Step 3 Click **Save**.

4.5.3 Audio

You can configure audio parameters and alarm audio.



This function is available on select model.

4.5.3.1 Configuring Audio Parameter

This section introduces audio parameters, including encode mode, sampling frequency, audio in type, and noise filter.

Step 1 Select **Setting > Camera > Audio > Audio**.

The **Audio** interface is displayed. See Figure 4-65.

Figure 4-65 Audio

Step 2 Select **Enable** check box in Main Stream or Sub Stream.

For the device with multiple channels, select the channel number.

Step 3 Configure audio parameters. For details, see Table 4-21.

Table 4-21 Description of audio parameter

Parameter	Description
Encode Mode	You can select audio Encode Mode from G.711A , G.711Mu , AAC , G.726 . The configured audio encode mode applies to both audio and intercom.
Sampling Frequency	Sampling number per second. The higher the sampling frequency, the more the sample in a second, and the more accuary the restored signal. You can select audio Sampling Frequency from 8K , 16K , 32K , 48K , 64K .
Audioin Type	You can select Audioin Type from: Linein: Requires external audio device. Mic: Not require external audio device.
Noise Filter	Enable this function, and the system auto filters ambient noise.
Microphone Volume	Adjusts microphone volume.
Speaker Volume	Adjusts speaker volume.

Step 4 Click **Save**.

4.5.3.2 Configuring Alarm Audio


You can record or upload alarm audio file. The audio file will be played when the alarm is triggered.

- Click  to play the selected audio.
- Click  to download the audio to local storage.

Step 1 Select **Setting > Camera > Audio > Alarm Audio**.

The **Alarm Audio** interface is displayed. See Figure 4-66.


Figure 4-66 Alarm audio

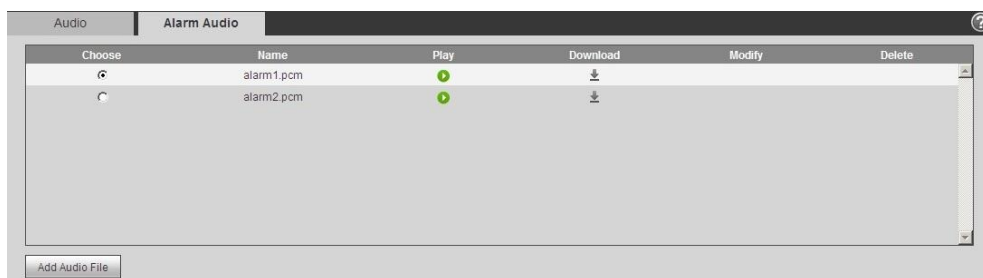

Step 2 Click **Add Audio File**.

The **Add Audio File** dialog box is displayed. See Figure 4-67.

Figure 4-67 Add audio file

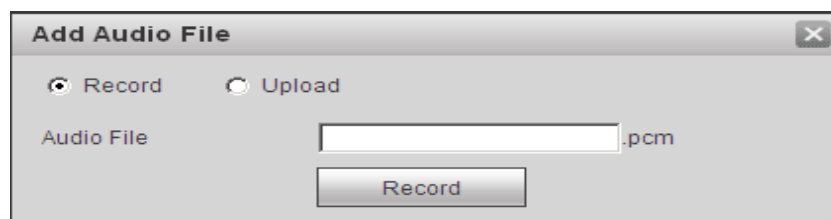

Step 3 Configure audio file

- Select **Record**, and then enter the audio name in the input box, then click **Record**.
- Select **Upload**, click  to select the audio file to be uploaded, and then click **Upload**.



The device only support audio file with .pcm format, and you can upload audio files with .pcm or .wav2 formats.

Step 4 Select the file you need.

4.6 Network

This section introduces network configuration.


4.6.1 TCP/IP

You can configure IP address, DNS (Domain Name System) server and so on according to network planning.

Step 1 Select **Setting > Network > TCP/IP**.

The **TCP/IP** interface is displayed. See Figure 4-68.

Figure 4-68 TCP/IP

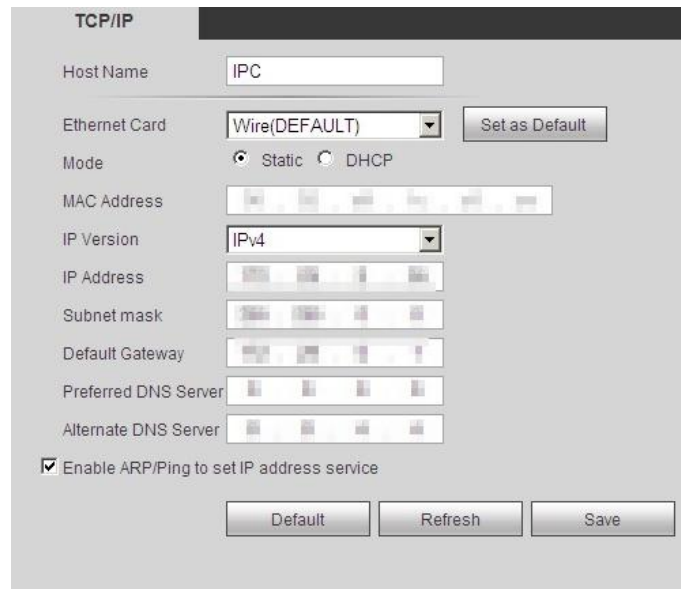

Step 2 Configure parameters. For details, see Table 4-22.

Table 4-22 Description of TCP/IP parameter

Parameter	Description
Host Name	Enter host name, 15 characters most.
Ethernet Card	Select the Ethernet card that need to be configured, the default one is Wire .
Mode	• Static Configure IP Address, Subnet Mask, and Default Gateway manually, and then click Save, the login interface with the configured IP address is displayed. • DHCP When there is DHCP server in the network, select DHCP, and the camera acquires IP address automatically.
MAC Address	Displays host MAC address.
IP Version	Select IPv4 or IPv6 .
IP Address	Enter the IP Address and Subnet Mask you need.
Subnet Mask	 The system would run validity test for all the IPv6 addresses, to pass the test, make sure a certain part of the subnet prefix in the IP address and default gateway are the same.

Parameter	Description	
Default Gateway	Configure as needed, the default gateway must be in the same network segment with the IP address.	 IPv6 has no default gateway. Enter 128 digits in preferred DNS and alternate DNS.
Preferred DNS	IP address of the preferred DNS	
Alternate DNS	IP address of the alternate DNS	
Enable ARP/Ping to set IP address service	Select the check box, get the device MAC address, and then you can modify and configure the device IP address with ARP/ping command. This is enabled by default. During reboot, you will have no more than 2 minutes to configure the device IP address by a ping packet with certain length, the server will be turned off in 2 minutes, or it will be turned off immediately after the IP address is successfully configured. If this is not enabled, the IP address cannot be configured with ping packet. A demonstration of configuring IP address with ARP/Ping. - Keep the IPC that needs to be configured and the PC within the same local network, and then get a usable IP address. - Get the MAC address of the IPC from device label. - Open command editor on the PC and enter the following command. Windows syntax↵ <pre>arp -s <IP Address> <MAC> ↵ ping -l 480 -t <IP Address> ↵</pre> Windows example↵ <pre>arp -s 192.168.0.125 11-40-8c-18-10-11↵ ping -l 480 -t 192.168.0.125↵</pre> UNIX/Linux/Mac syntax↵ <pre>arp -s <IP Address> <MAC> ↵ ping -s 480 <IP Address> ↵</pre> UNIX/Linux/Mac example↵ <pre>arp -s 192.168.0.125 11-40-8c-18-10-11↵ ping -s 480 192.168.0.125↵</pre> - Reboot IPC through power or network. - Check the PC command line, if there are information such as “Reply from 192.168.0.125...” are displayed, the configuration succeeds, and you can turn it off then. - Enter http://(IP address) in the browser address bar to log in.	

Step 3 Click **Save**.

4.6.2 Port

Configure the port numbers and the max. number of users that can connect to the device simultaneously.

Step 1 Select **Setting > Network > Port**.

The **Port** interface is displayed. See Figure 4-69.

Figure 4-69 Port

Port		
Max Connection	10	(1~20)
TCP Port	37777	(1025~65534)
UDP Port	37778	(1025~65534)
HTTP Port	80	
RTSP Port	554	
HTTPS Port	443	
Default Refresh Save		

Step 2 Configure port parameters. For details, see Table 4-23.



- The configuration of **Max Connection** takes effect immediately, and others after reboot.
- 0–1024, 1900, 3800, 5000, 5050, 9999, 37776, 37780–37880, 39999, 42323 are occupied for specific uses.
- It is not recommended to use the default value of other port during port configuration.

Table 4-23 Description of port parameter

Parameter	Description
Max Connection	The max number of users (web client, platform client or mobile phone client) that can connect to the device simultaneously. The value is 10 by default.
TCP Port	Transmission control protocol port, the value is 37777 by default.
UDP Port	User datagram protocol port, the value is 37778 by default.
HTTP Port	Hyper text transfer protocol port, the value is 80 by default.

Parameter	Description
RTSP Port	- Real time streaming protocol port, leave it if the value is 554 by default. If you play live view with QuickTime, VLC or Blackberry smart phone, the following URL format is available. - When the URL format requiring RTSP, you need to specify channel number and bit stream type in the URL, and also user name and password if needed. - When playing live view with Blackberry smart phone, you need to turn off the audio, and then set the codec mode to H.264B and resolution to CIF. URL format example: <pre>rtsp://username:password@ip:port/cam/realmonitor?channel=1&subtype=0</pre> Among that: - Username: The user name, such as admin. - Password: The password, such as admin. - IP: The device IP, such as 192.168.1.112. - Port: Leave it if the value is 554 by default. - Channel: The channel number, which starts from 1. For example, if you are using channel 2, then the channel=2. - Subtype: The bit stream type; 0 means main stream (Subtype=0) and 1 means sub stream (Subtype=1). Example: If you require the sub stream of channel 2 from a certain device, then the URL should be: <pre>rtsp://admin:admin@10.12.4.84:554/cam/realmonitor?channel=2&subtype=1</pre> If user name and password are not needed, then the URL can be: <pre>rtsp://ip:port/cam/realmonitor?channel=1&subtype=0</pre>
HTTPs Port	It is 443 by default.

Step 3 Click **Save**.

4.6.3 PPPoE

Point-to-Point Protocol over Ethernet, it is one of the protocols that device uses to connect to the internet. Get the PPPoE user name and password from the internet service provider, and then set up network connection through PPPoE, the device will acquire a WAN dynamic IP address.



- Disable UPnP while using PPPoE to avoid possible influence.
- After making PPPoE connection, the device IP address cannot be modified through web interface.

Step 1 Select **Setting > Network > PPPoE**.

The **PPPoE** interface is displayed. See Figure 4-70.

Figure 4-70 PPPoE

Step 2 Select **Enable**, and then enter user name and password.

Step 3 Click **Save**.

The success prompt box is displayed, and then the real-time WAN IP address is displayed. You can visit device through this IP address.

4.6.4 DDNS

Properly configure DDNS, and then the domain name on the DNS server matches your IP address and the matching relation refreshes in real time. You can always visit your device with the same domain name no matter how much your device IP address changes.

Precondition

Before making any changes, please check if your device supports the DNS server.



- Third party server might collect your device information after DDNS is enabled.
- Register and log in the DDNS website, and then you can view the information of all the connected devices in your account.

Procedures

Step 1 Select **Setting > Network > DDNS**.

The **DDNS** interface is displayed. See Figure 4-71.

Figure 4-71 DDNS (1)

Step 2 Select **Type**, and then configure the parameters as needed. For details, see Table 4-24.

Table 4-24 Description of DDNS parameter

Parameter	Description
Type	The name and web address of the DDNS service provider, see the matching relationship below: • CN99 DDNS web address: www.3322.org • NO-IP DDNS web address: dynupdate.no-ip.com • Dyndns DDNS web address: members.dyndns.org
Web Address	
Domain Name	The domain name you registered on the DDNS website.
Test	Only when selecting NO-IP DDNS type, you can click test to check whether the domain name registration is successful.
Username	Enter the user name and password that you got from the DDNS server provider. You need to register an account (includes user name and password) on the DDNS server provider's website.
Password	
Interval	The update cycle of the connection between the device and the server, and the time is 10 minutes by default.

Step 3 Click **Save**.

Verification

Open the browser on PC, and then enter the domain name at the address bar, and then press Enter, the log in interface is displayed.

4.6.5 SMTP (Email)

Configure email parameter and enable email linkage. The system sends email to the defined address when the corresponding alarm is triggered.

Step 1 Select **Setting > Network > SMTP (Email)**.

The **SMTP (Email)** interface is displayed, see Figure 4-72.

Figure 4-72 SMTP (Email)

The screenshot shows the 'SMTP (Email)' configuration window. It contains the following elements:

- SMTP Server:** A text box containing 'none'.
- Port:** A text box containing '25'.
- Anonymity:** A checkbox that is currently unchecked.
- Username:** A text box containing 'anonymity'.
- Password:** A text box with masked characters (dots).
- Sender:** A text box containing 'none'.
- Authentication:** A dropdown menu set to 'TLS'.
- Title:** A text box containing 'IPC Message'.
- Attachment:** A checkbox that is checked.
- Mail Receiver:** A list box with a '+' button to add and a '-' button to remove entries.
- Health Mail:** A checkbox that is unchecked.
- Update Period:** A text box containing '30'.
- Min. (30~1440):** A label indicating the valid range for the update period.
- Buttons:** 'Test', 'Default', 'Refresh', and 'Save' buttons are located at the bottom.

Step 2 Configure parameters. For details, see Table 4-25.

Table 4-25 Description of SMTP (Email) parameter

Parameter	Description
SMTP Server	SMTP server address
Port	The port number of the SMTP server.
Username	Sender's email account.
Password	Sender's email password.
Anonymity	Enable this function, and the sender's information is not displayed in the email.
Sender	Sender's email address.
Authentication	Select Authentication from None , SSL and TLS .  For the detailed configuration, see "Table 4-26."
Title	Enter max. 63 characters in Chinese, English, and Arabic numerals. Click  to select title type, including Name , Device ID , and Event Type , and you can set max. 2 titles.
Attachment	Select the check box to support attachment in the email.
Mail Receiver	Receiver's Email address. Supports 3 addresses at most.
Health Mail	The system sends test mail to check if the connection is successfully configured. Select Health Mail and configure the Update Period , and then the system sends test mail as the defined period.
Test	Test the email sending and receiving function. If the configuration is correct, you would receive test mail. Save Email configuration before running rest.

For the configuration of major mailboxes, see Table 4-26.

Table 4-26 Description of major mailbox configuration

Mailbox	SMTP server	Authentication	Port	Description
QQ	smtp.qq.com	SSL	465	- The authentication type cannot be None. - You need to enable SMTP service in your mailbox. - The authentication code is required, the QQ password or email password is not applicable.  Authentication code: The code you receive when enabling SMTP service.
		TLS	587	
163	smtp.163.com	SSL	465/994	- You need to enable SMTP service in your mailbox. - The authentication code is required; the email password is not applicable.  Authentication code: the code you receive when enabling SMTP service.
		TLS	25	
		none	25	
Sina	smtp.sina.com	SSL	465	Enable SMTP service in your mailbox.
		none	25	
126	smtp.126.com	none	25	Enable SMTP service in your mailbox.

Step 3 Click **Save**.

Step 4 Click **Test** to test whether the emails can be sent and received successfully.

4.6.6 UPnP

UPnP (Universal Plug and Play), a protocol that establishes mapping relation between local area and wide area networks. This function enables you to visit local area device through wide area IP address.

Precondition

- Make sure the UPnP service is installed in the system.
- Log in the router, and configure WAN IP address to set up internet connection.
- Enable UPnP in the router.
- Connect your device to the LAN port of the router.
- Select **Setting > Network > TCP/IP**, in **IP Address**, enter the local area IP address of the router or select **DHCP** and acquires IP address automatically.

Procedures

Step 1 Select **Setting > Network > UPnP**.

The **UPnP** interface is displayed. See Figure 4-73.

Figure 4-73 UPnP

Service Name	Protocol	Internal Port	External Port	Status	Modify
HTTP	WebService.TCP	80	8080	Mapping Failed	
TCP	PrivService.TCP	37777	37777	Mapping Failed	
UDP	PrivService.UDP	37778	37778	Mapping Failed	
RTSP	RTSPService.TCP	554	554	Mapping Failed	

Step 2 Select **Enable**, and there are two mapping modes: **Custom** and **Default**.

- Select **Custom**, click and then you can modify external port as needed.
- Select **Default**, and then the system finishes mapping with unoccupied port automatically, and you cannot modify mapping relation.

Step 3 Click **Save** to finish configuration.

Open web browser on PC , enter "http:// wide area IP address: external port number", and then you can visit the local area device with corresponding port.

4.6.7 SNMP

SNMP (Simple Network Management Protocol), which can be used to enable software such as MIB Builder and MG-SOFT MIB Browser to connect to the device and manage and monitor your device.

Precondition

- Install SNMP monitoring and managing tools such as MIB Builder and MG-SOFT MIB Browser.
- Get the MIB file of the matched version from technical support.

Procedures

Step 1 Select **Setting > Network > SNMP**.

The **SNMP** interface is displayed. See Figure 4-74 and Figure 4-75.

Figure 4-74 SNMP (1)

Figure 4-75 SNMP (2)

The image shows a web-based configuration interface for SNMP. At the top, the title is "SNMP". Below it, there are three radio buttons for "Version": v1, v2, and v3 (Recommended). The v3 option is selected. Below the version selection, there are several input fields: "SNMP Port" (161), "Read Community" (empty), "Write Community" (empty), "Trap Address" (empty), and "Trap Port" (162). Below these, there are two sections for user authentication and encryption. The first section is for "Read-only Username" (public) and the second is for "Read&write Username" (private). Both sections have radio buttons for "Authentication Type" (MD5 and SHA) and "Encryption Type" (CBC-DES). There are also input fields for "Authentication Password" and "Encryption Password" for both sections. Red text next to the password fields states "The minimum pass phrase length is 8 characters". At the bottom, there are three buttons: "Default", "Refresh", and "Save".

Step 2 Select SNMP version to enable SNMP.

- Select **V1**, and the system can only process information of V1 version.
- Select **V2**, and the system can only process information of V2 version.
- Select **V3**, and then **V1** and **V2** become unavailable. You can configure user name, password and authentication type. It requires corresponding user name, password and authentication type to visit your device from the server.



Using **V1** and **V2** might cause data leakage, **V3** is recommended.

In the **Trap Address**, enter the IP address of the PC that has MIB Builder and MG-SOFT MIB Browser installed, leave other parameters to the default.

Table 4-27 Description of SNMP parameter

Parameter	Description
SNMP Port	The listening port of the software agent in the device.
Read Community, Write Community	The read and write community string that the software agent supports. You can enter number, letter, underline and dash to form the name.
Trap Address	The target address of the Trap information sent by the software agent in the device.
Trap Port	The target port of the Trap information sent by the software agent in the device.

Parameter	Description
Read-only Username	Set the read-only username accessing device, and it is public by default.  You can enter number, letter, and underline to form the name.
Read/Write Username	Set the read/write username access device, and it is public by default.  You can enter number, letter, and underline to form the name.
Authentication Type	You can select from MD5 and SHA . The default type is MD5 .
Authentication Password	It should be no less than 8 digits.
Encryption Type	The default is CBC-DES.
Encryption Password	It should be no less than 8 digits.

Step 3 Click **Save**.

Verification

View device information

Step 1 Run MIB Builder and MG-SOFT MIB Browser.

Step 2 Compile the two MIB files with MIB Builder.

Step 3 Load the generated modules with MG-SOFT MIB Browser.

Step 4 Enter the IP address of the device you need to manage in the MG-SOFT MIB Browser, and then select version to search.

Step 5 Unfold all the tree lists displayed in the MG-SOFT MIB Browser, and then you can view the configuration information, video channel amount, audio channel amount, and software version.



Use PC with Windows OS and disable SNMP Trap service. The MG-SOFT MIB Browser will display prompt when alarm is triggered.

4.6.8 Bonjour

Enable this function, and the OS and clients that support “Bonjour” would find your device automatically. You can have quick visit to your device with “Safari” browser.



Bonjour is enabled by default.

Procedures

Step 1 Select **Setting > Network > Bonjour**.

The **Bonjour** interface is displayed, see Figure 4-76.

Figure 4-76 Bonjour

Step 2 Select **Enable**, and then configure server name.

Step 3 Click **Save**.

Verification

In the OS and clients that support "Bonjour", follow the steps blow to visit the network camera with "Safari" browser.

Step 1 Click **Show All Bookmarks** in Safari.

Step 2 Enable **Bonjour**. The OS or client automatically detects the network cameras with Bonjour enabled in the LAN.

Step 3 Click the device to visit the corresponding web interface.

4.6.9 Multicast

When multiple users are previewing the device video image simultaneously through network, it might fail due to limited bandwidth. You can solve this kind of problem by setting up a Multicast IP (224.0.1.0–238.255.255.255) for the device and adopt the multicast protocol.

Procedures

Step 1 Select **Setting > Network > Multicast**.

The **Multicast** interface is displayed. See Figure 4-77.

Figure 4-77 Multicast

Step 2 Select **Enable**, and then enter IP address and port number. For details, see Table 4-28.

Table 4-28 Description of multicast parameter

Parameter	Description
Multicast Address	The multicast IP address of Main Stream/Sub Stream is 224.1.2.4 by default, and the range is 224.0.0.0–239.255.255.255.
Port	See the multicast port of corresponding stream: Main Stream : 40000; Sub Stream1 : 40016; Sub Stream2 : 40032, all the range is 1025–65500.

Step 3 Click **Save**, and the login interface is displayed.

Verification

In the **Live** interface, select **RTSP** in **Multicast**, and then you can view the video image with multicast protocol.

4.6.10 802.1x

Device can connect to LAN after passing 802.1x authentication.

Step 1 Select **Setting > Network > 802.1x**.

The **802.1x** interface is displayed, see Figure 4-78.

Figure 4-78 802.1x



Step 2 Select **Enable**, and then configure parameters. For details, see Table 4-29.

Table 4-29 Description of 802.1x parameter

Parameter	Description
Authentication	PEAP (protected EAP protocol).
Username	The user name that was authenticated on the server.
Password	Corresponding password.

Step 3 Click **Save**.

4.6.11 QoS


You can solve problems such as network delay and congestion with this function. It helps to assure bandwidth, reduce transmission delay, packet loss rate, and delay jitter to improve experience.

(0–63) means 64 degrees of priority; 0 for the lowest and 63 the highest.

Step 1 Select **Setting > Network > QoS**.

The **QoS** interface is displayed. See Figure 4-79.

Figure 4-79 QoS

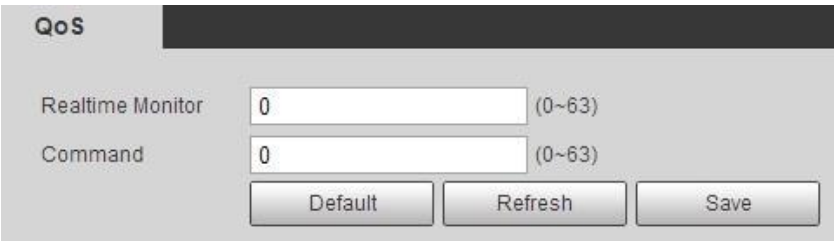

Step 2 Configure parameters. For details, see Table 4-30.

Table 4-30 Description of QoS parameter

Parameter	Description
Realtime Monitor	Configure the priority of the data packets that used for network surveillance. 0 for the lowest and 63 the highest.
Command	Configure the priority of the data packets that used for configure or checking.

Step 3 Click **Save**.

4.6.12 Access Platform

4.6.12.1 P2P


P2P is a private network traversal technology which enables user to manage devices easily without requiring DDNS, port mapping or transit server.

Scan the QR code with your smart phone, and then you can add and manage more devices on your mobile client.

Step 1 Select **Setting > Network > Access Platform > P2P**.

The **P2P** interface is displayed, see Figure 4-80.

Figure 4-80 P2P

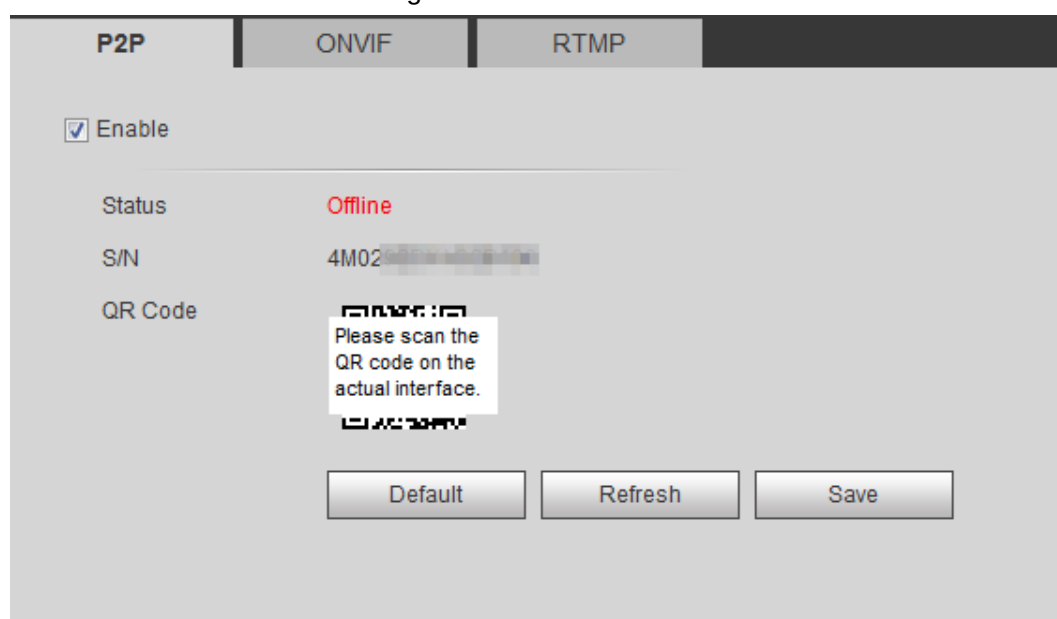

- When P2P is enabled, remote management on device is supported.
- When P2P is enabled and the device accesses to the network, the status shows online. The information of the IP address, MAC address, device name, and device SN will be collected. The collected information is for remote access only. You can cancel Enable selection to reject the collection.

Step 2 Log in mobile phone client and tap **Device management**.

Step 3 Tap the + at the upper right corner.

Step 4 Scan the QR code on the **P2P** interface.

Step 5 Follow the instructions to finish the settings.

4.6.12.2 ONVIF

The ONVIF authentication is **On** by default, which allows the network video products (including video recording device and other recording devices) from other manufacturers to connect to your device.




ONVIF is enabled by default.

Step 1 Select **Setting > Network > Port > ONVIF**.

The **ONVIF** interface is displayed. See Figure 4-81.

Figure 4-81 ONVIF

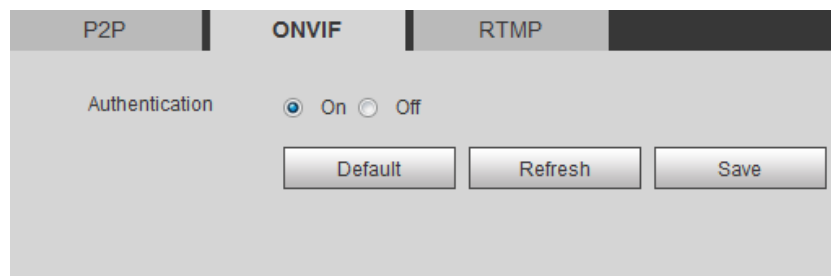

Step 2 Select **On** in **Authentication**.

Step 3 Click **Save**.

4.6.12.3 RTMP

Through RTMP, you can access the third-party platform (such as Ali and YouTube) to realize video live view.




- RTMP can be configured by admin only.
- RTMP supports the H.264, H.264 B and H.264H video formats, and the AAC audio format only.

Step 1 Select **Setting > Network > Port > RTMP**.

The **RTMP** interface is displayed. See Figure 4-82.

Figure 4-82 ONVIF

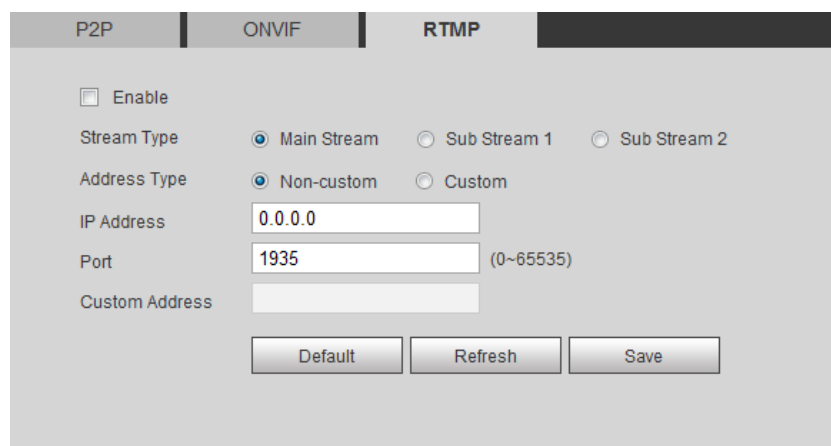

Step 2 Select **Enable** check box.



Make sure the IP address is trustable when enabling RTMP.

Step 3 Configure parameters. For details, see Table 4-31.

Table 4-31 Description of RTMP parameters

Parameter	Description
Stream Type	The stream for live view. Make sure that the video format is the H.264, H.264 B and H.264H, and the audio format is AAC.
Address Type	Includes Non-custom and Custom . • Non-custom: Enter the server IP and domain name. • Custom: Enter the path allocated by the server.
IP Address	When selecting Non-custom , you need to enter server IP address and port. • IP address: Support IPv4 or domain name. • Port: We recommend that you use the default one.
Port	
Custom Address	When selecting Custom , you need to enter the path allocated by the server.

Step 4 Click **Save**.

4.7 Storage

This section introduces how to manage saved resources (such as recorded video) and storage space. The storage management helps to make best use of storage space.

4.7.1 Schedule

You can configure record schedule, snapshot schedule and holiday schedule.



When holiday schedule setting is not the same with the general setting, holiday schedule setting is prior to the general setting. For example, with **Holiday Schedule** enabled, if the day is holiday, snapshot or record as holiday schedule setting, otherwise, snapshot or record as general setting

Set certain days as holiday, and when the **Record** or **Snapshot** is selected in the holiday schedule, the system takes snapshot or records video as holiday schedule defined.

Precondition

- Set the record mode to be **Auto** in Record control. For details, see "5.1.1.2.1 Setting Record Plan."
- Configure holiday record and snapshot schedule. For details, see "5.1.1.2.1 Setting Record Plan" and "5.1.1.3.1 Setting Snapshot Plan."

Procedures

- Step 1 Select **Setting > Storage > Schedule > Holiday Schedule**.
The **Holiday Schedule** interface is displayed. See Figure 4-83.

Figure 4-83 Holiday schedule

The screenshot shows the 'Holiday Schedule' interface. At the top, there are three tabs: 'Record', 'Snapshot', and 'Holiday Schedule'. Below the tabs, there are two checkboxes: 'Record' and 'Snapshot'. In the center is a calendar for the month of July. The calendar has columns for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and rows for dates (1-31). Below the calendar are two buttons: 'Refresh' and 'Save'.

- Step 2 Select from **Record** and **Snapshot**.
Step 3 Select the days you need to set as holiday.
Those days with yellow color indicates they were set as holidays.
Step 4 Click **Save** to finish configuration.

4.7.2 Destination

This section introduces the configuration of the storage method for the recorded videos and snapshots, and how to configure each storage method.

4.7.2.1 Path

You can select different storage paths for the recorded videos and snapshots according to event type; the options are: SD card, FTP or NAS.



Local is displayed only on models that support SD card.

- Step 1 Select **Setting > Storage > Destination > Path**.
The **Path** interface is displayed, see Figure 4-84.

Figure 4-84 Path

The screenshot shows a configuration interface with a top bar containing tabs for 'Path', 'Local', 'FTP', and 'NAS'. The 'Path' tab is active. Below the tabs are two main sections: 'Record' and 'Snapshot'. Each section contains a table with columns for 'Event Type', 'Scheduled', 'Motion Detection', and 'Alarm'. In the 'Record' section, 'FTP' is selected for all three options. In the 'Snapshot' section, 'FTP' is also selected for all three options. Below the tables are three buttons: 'Default', 'Refresh', and 'Save'.

Event Type	Scheduled	Motion Detection	Alarm
Local	☐	☐	☐
FTP	☒	☒	☒
NAS	☐	☐	☐

Event Type	Scheduled	Motion Detection	Alarm
Local	☐	☐	☐
FTP	☒	☒	☒
NAS	☐	☐	☐

Default Refresh Save

Step 2 Select the storage method you need for the recorded videos and snapshots of different types.

Table 4-32 Description of path parameters

Parameter	Description
Event Type	Select from Scheduled , Motion Detection and Alarm .
Local	Save in the internal SD card.
FTP	Save in the FTP server.
NAS	Save in the NAS (network attached storage).

Step 3 Click **Save**.

Step 4 Configure other path parameters on **Destination**, **FTP** or **NAS** interface. For details, see "4.7.2 Destination", "4.7.2.3 FTP" or "4.7.2.4 NAS."

4.7.2.2 Local

Display the information of the local SD card. You can set it as read only or read & write; you can also hot swap and format SD card, and reset password for it. When inserting Dahua smart card onto a device available for it, there are 3 modes according to the SD card status:

- Normal mode: The new SD cards and the cards whose password are cleared successfully show normal mode. The SD cards of this status do not support authorization operation.
- Unauthorized mode: The SD card authorized by other devices shows unauthorized mode. The SD cards of this status do not support operations of setting read only, read & write, formatting and encryption.
- Encrypted mode: The SD cards encrypted and authorized on this camera show encrypted mode. The camera can record max. 10 pieces of encrypted SD information. When the records exceed 10 pieces, the earliest ones will be overwritten.




- Functions might vary with different models, and the actual product shall prevail.
- If you enter the wrong password for five times when authorizing, modifying, and clearing password, the camera will be locked for five minutes.
- Make sure that the SD card has been authorized before recording and playback.
- The health status of SD card:
 - ◇ Green: The health status is excellent.
 - ◇ Blue: The health status is good.
 - ◇ Orange: The health status is moderate.
 - ◇ Red: The health status is poor, and you need to replace the SD card.

Select **Setting > Storage > Destination > Local**, and the **Local** interface is displayed. See Figure 4-85.

- Click **Read Only**, and then the SD card is set to read only.
- Click **Read & Write**, and then the SD card is set to read & write.
- Click **Hot Swap**, and then you can pull out the SD card.
- Click **Refresh**, and then you can format the SD card.

Figure 4-85 Local

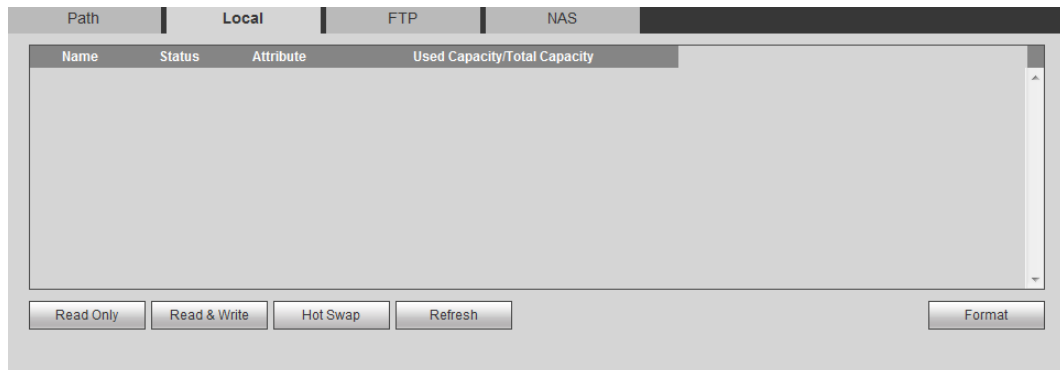


4.7.2.3 FTP

FTP function can be enabled only when it was selected as a destination path. When the network doesn't work, you can save all the files to the internal SD card for emergency.

Step 1 Select **Setting > Storage > Destination > FTP**.

The **FTP** interface is displayed. See Figure 4-86.

Figure 4-86 FTP

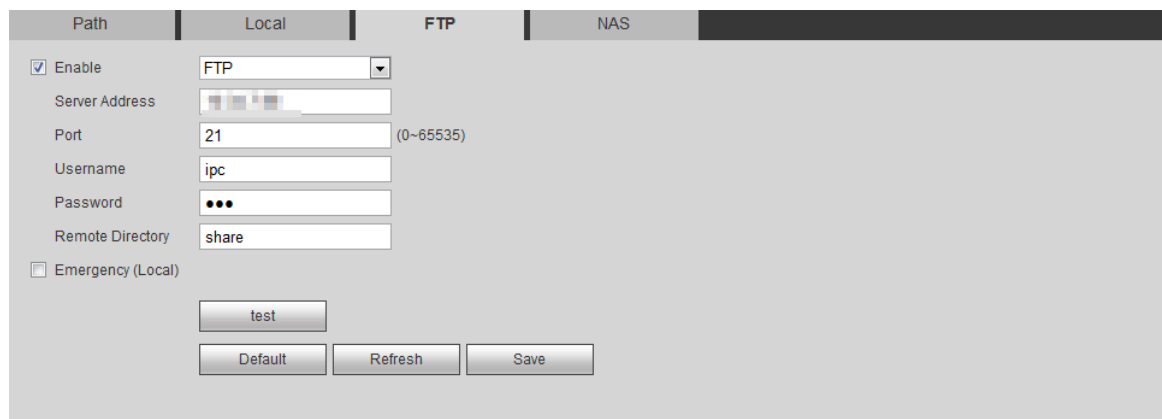

Step 2 Select **Enable**, and then the FTP function is enabled.



SFTP is recommended to enhance network security.

Step 3 Configure FTP parameters. For details, see Table 4-33.

Table 4-33 Description of FTP parameters

Parameter	Description
Server Address	The IP address of the FTP server.
Port	The port number of the FTP server.
Username	The user name to log in the FTP server.

Parameter	Description
Password	The password to log in the FTP server.
Remote Directory	The destination path in the FTP server.
Emergency (Local)	Select Emergency (Local) , and when the FTP server doesn't work, all the files are saved to the internal SD card.

Step 4 Click **Save**.

4.7.2.4 NAS

This function can be enabled only when NAS was selected as a destination path. You can then save all the files in the NAS.

Step 1 Select **Setting > Storage > Destination > NAS**.

The **NAS** interface is displayed. See Figure 4-87.

Figure 4-87 NAS

Step 2 Select **Enable**, and then the NAS function is enabled.

Step 3 Configure NAS parameters. For details, see Table 4-34.

Table 4-34 Description of NAS parameters

Parameter	Description
Enable	NFS (Network File System): a file system which enables computers in the same network share files through TCP/IP. SMB (Server Message Block): can be used for providing shared access for clients and the server.  SMB protocol requires user name and password, you can enter as needed.
Server Address	The IP address of the NAS server.
Remote Directory	The destination path in the NAS server.

Step 4 Click **Save**.

4.8 System

This section introduces system configurations, including general, date & time, account, safety, PTZ settings, default, import/export, remote, auto maintain and upgrade.

4.8.1 General

You can configure device name, language and video standard.

Step 1 Select **Setting > System > General > General**.

The **General** interface is displayed. See Figure 4-88.

Figure 4-88 General

The screenshot shows the 'General' configuration tab. It contains four input fields: 'Name' with the value '4M0292DYAG2B100', 'Language' set to 'English', 'Video Standard' set to 'PAL', and 'TVOut' set to 'TV'. Below these fields are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Configure general parameters. For details, see Table 4-35.

Table 4-35 Description of general parameters

Parameter	Description
Name	The name of the device.  Each device has different name.
Language	Select system language.
Video Standard	Select video standard from PAL and NTSC .
TVOut	Select On or Off , this function is available on models with analog output.  - If the TV out is On, Smart plans will be disabled. - If the Smart plans are enabled, the TV out will be set as Off. - SDI and HDCVI are available on select model.

Step 3 Click **Save**.

4.8.2 Date & Time

You can configure date and time format, time zone, current time, DST (Daylight Saving Time) or NTP server.

Step 1 Select **Setting > System > General > Date & Time**.

The **Date & Time** interface is displayed. See Figure 4-89.

Figure 4-89 Date & Time

Step 2 Configure Date & Time parameters. For details, see Table 4-36.

Table 4-36 Description of date and time parameters

Parameter	Description
Date Format	Configure the date format.
Time Format	Configure the time format, you can select from 12-Hour or 24-Hour .
Time Zone	Configure the time zone that the device is at.
Current Time	Configure system time. Click Sync PC , and the system time changes to the time on PC.
DST	Enable DST as needed. Select the check box, and then configure start time and end time of DST with Date or Week .
NTP	Select the check box, and then the NTP (network time protocol) is enabled, the system then syncs time with the internet server in real time. You can also enter the IP address, time zone, port, and interval of a PC which installed NTP server to use NTP.
NTP Server.	
Time Zone	
Port	
Interval	

Step 3 Click **Save**.

4.8.3 Splicing

When the panorama contain multiple images of various lens, enable this function. Before splicing, make sure the surveillance scene is large and there is no shield on the image, and do not move the camera, otherwise, the splicing might fail.

Step 1 Select **Setting > System > General > Splicing**

The **Splicing** interface is displayed. See Figure 4-90 and Figure 4-91.

Figure 4-90 Splicing (1)


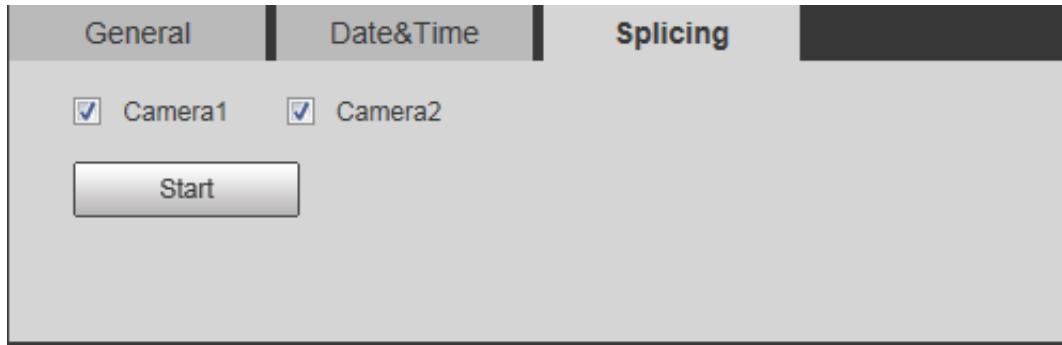


Figure 4-91 Splicing (2)



Step 2 Select the camera which needs to be spliced.

When splicing the image through selecting lenses, you need to select the continuous splicing screens. The screen with the icon  (deeper color) means the first screen of the splicing. You can select any screen as the first one, and select the following screens continuous. The system supports the splicing of 4, 5, 6, 7 and 8 sensors.

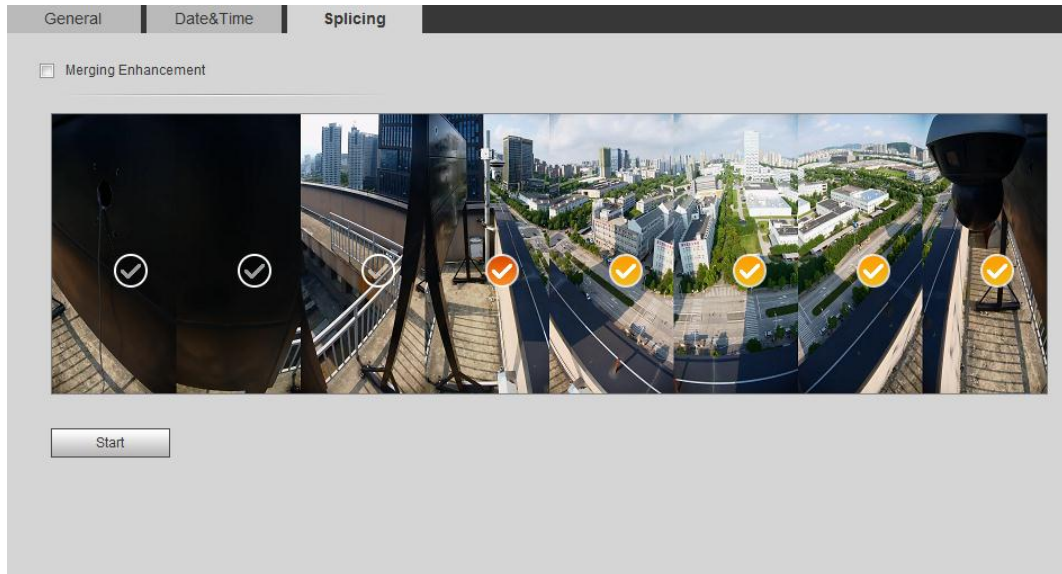

This function is available on some select models. And it is all sensors splicing by default.

Step 3 Click **Start**.

The system begins to splice image.

- Some camera restarts automatically after splicing is completed, and you can view the splicing effect on **Live** view.
- Some camera displays splicing preview interface after splicing is completed. Click **OK**, and the system prompts default box. And then click **OK**. The splicing takes effect.

4.8.4 Account

Manages all the users, you can add, delete, or modify users. Users include admin, added users and ONVIF users.

Managing users and groups are only available for administrator users.

- The max length of the user or group name is 31 characters which can be consisted with number, letters, underline, dash, dot and @.
- The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &).
- You can have 18 users and 8 groups at most.
- You can manage users through single user or group, duplicate user names or group names are not allowed. A user can be in only one group at a time, and the group users can own authorities within group authority range.
- Online users cannot modify their own authority.
- There is one admin by default which has highest authority.
- Select **Anonymous Login**, and then log in with only IP address instead of user name and password. Anonymous users only have preview authorities. During anonymous login, click **Logout**, and then you can log in with other username.

4.8.4.1 Adding a User

You are admin user by default, you can add user, delete added users or modify their password.

Step 1 Select **Setting > System > Account > Account > Username**.

The **Username** interface is displayed. See Figure 4-92.

Figure 4-92 Username

Account | Onvif User

☐ Anonymous Login

No.	Username	Group Name	Memo	Restricted Login	Modify	Delete
1	admin	admin	admin's account	/		
2	admin1	admin				

Authority

User	Live	Playback	System	System Info
Manual Control	File Backup	Storage	Event	Network
Peripheral	AV Parameter	PTZ	Security	Maintenance

Step 2 Click **Add User**.

The **Add User** interface is displayed. See Figure 4-93 and Figure 4-94.

Figure 4-93 Add user (Operation permission)

The 'Add User' dialog box is shown with the 'Operation Permission' tab selected. It contains fields for Username, Password, Confirm Password, Group Name (set to 'admin'), and Memo. A red error message states: 'The minimum pass phrase length is 8 characters'. Password strength indicators 'Weak', 'Middle', and 'Strong' are present. The 'Operation Permission' list includes: All, User, Live, Playback, System, System Info, Manual Control, File Backup, Storage, Event, Network, Peripheral, AV Parameter, PTZ, Security, and Maintenance, all of which are checked. 'Restricted Login' is also an option. 'Save' and 'Cancel' buttons are at the bottom.

Add User

Username **Must**

Password

The minimum pass phrase length is 8 characters

Confirm Password

Group Name

Memo

Operation Permission **Restricted Login**

- ☒ All
- ☒ User
- ☒ Live
- ☒ Playback
- ☒ System
- ☒ System Info
- ☒ Manual Control
- ☒ File Backup
- ☒ Storage
- ☒ Event
- ☒ Network
- ☒ Peripheral
- ☒ AV Parameter
- ☒ PTZ
- ☒ Security
- ☒ Maintenance

Figure 4-94 Add user (Restricted login)

Step 3 Configure user parameters. For details, see Table 4-37.

Table 4-37 Description of user parameters (1)

Parameter	Description
Username	User's unique identification. You cannot use existed user name.
Password	Enter password and confirm it again. The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; &).
Confirm Password	
Group Name	The group that users belong to. Each group has different authorities.
Memo	Describe the user
Operation Permission	Select authorities as needed.  It is recommended to give fewer authorities to normal users than premium users.

Parameter	Description
Restricted Login	Set the PC address that allows the defined user to log in to the camera and the validity period and time range. You can log in to web with the defined IP in the defined time range of validity period. • IP address: You can log in to web through the PC with the set IP. • Validity period: You can log in to web in the set validity period. • Time Range: You can log in to web in the set time range. Set as following: 1. Select IP Address: Select IP type and set IP address. ◇ IP Address: Enter the IP address of the host to be added. ◇ IP segment: Enter the start address and end address of the host to be added. 2. Select Validity Period: Set the begin Time and end time. 3. Select Time Range: Set the time range that allow user to log in. For details, see "5.1.1.1 Setting Period."

Step 4 Click **Save**.

The newly added user displays in the user name list.



- After adding user, click  to modify password, group, memo or authorities;
click  to delete the added user, admin user cannot be deleted.
- Click  in the **admin** row to modify its user name and email address.

4.8.4.2 Adding User Group

You have two groups named admin and user by default, you can add new group, delete added group or modify group authority and memo.

Step 1 Select **Setting > System > Account > Account > Group Name**.

The **Group Name** interface is displayed. See Figure 4-95.

Figure 4-95 Group name

The screenshot shows the 'Account' tab in the 'Onvif User' interface. At the top, there is a checkbox for 'Anonymous Login'. Below it is a table with columns: 'No.', 'Group Name', 'Memo', 'Modify', and 'Delete'. The table contains two rows: '1' with 'admin' group name and 'administrator group' memo, and '2' with 'user' group name and 'user group' memo. Below the table is a section titled 'Authority' with a grid of checkboxes for various permissions: User, Manual Control, Peripheral, Live, File Backup, AV Parameter, Playback, Storage, PTZ, System, Event, Security, System Info, Network, and Maintenance. At the bottom left is an 'Add Group' button.

Step 2 Click **Add Group**.

The **Add Group** interface is displayed. See Figure 4-96.

Figure 4-96 Add group

The screenshot shows the 'Add Group' dialog box. It has a title bar with a close button. Inside, there are three main sections: 'Group Name' with a text input field and a red 'Must' label; 'Memo' with a text input field; and 'Authority' with a checkbox for 'All' and a list box containing 'Live', 'Playback', 'System', and 'System Info'. At the bottom are 'Save' and 'Cancel' buttons.

Step 3 Enter group name and memo, and then select group authorities.

Step 4 Click **Save** to finish configuration.

The newly added group displays in the group name list.



- After adding group, click  to modify group memo or authorities; click  to delete the added group, admin group and user group cannot be deleted.
- Click  in the row of admin group or user group to modify group memo.


4.8.4.3 ONVIF User

You can add or delete ONVIF user, also can modify their passwords.

Step 1 Select **Setting > System > Account > ONVIF User**.

The **ONVIF User** interface is displayed. See Figure 4-97.

Figure 4-97 ONVIF user

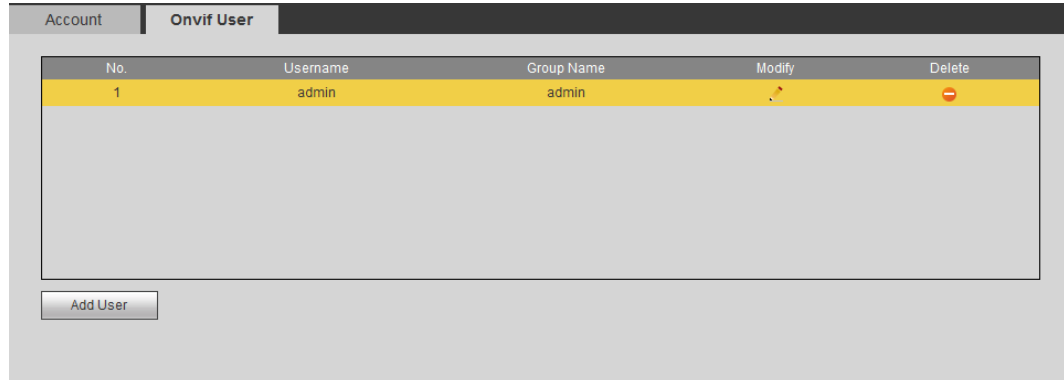

Step 2 Click **Add User**.

The **Add User** interface is displayed. See Figure 4-98.

Figure 4-98 Add user

The screenshot shows a dialog box titled 'Add User' with a close button (X) in the top right corner. Inside the dialog, there are four input fields: 'Username' (with a red 'Must' label), 'Password' (with a red label 'The minimum pass phrase length is 8 characters' below it), 'Confirm Password', and 'Group Name' (with a dropdown menu showing 'admin'). Below the password fields are three buttons: 'Weak', 'Middle', and 'Strong'. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

Step 3 Configure user parameters. For details, see Table 4-38.

Table 4-38 Description of user parameters (2)

Parameter	Description
Username	User's unique identification. You cannot use existed user name.
Password	Enter password and confirm it again.
Confirm Password	The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &).
Group Name	The group that users belong to. Each group has different authorities.

Step 4 Click **Save**.

The newly added user displays in the user name list.



- After adding user, click  to modify password, group, memo or authorities;
click  to delete the added user, admin user cannot be deleted.
- Click  in the **admin** row to modify its user name and email address.

4.8.5 Safety

You can configure system service, HTTPS, and Firewall.


4.8.5.1 System Service

Configure the IP hosts (devices with IP address) that are allowed to visit the device, only the hosts in the trusted sites list can log in the web interface. This is to enhance network and data security.

Step 1 Select **Setting > System > Safety > System Service**.

The **System Service** interface is displayed. See Figure 4-99.

Figure 4-99 IP filter

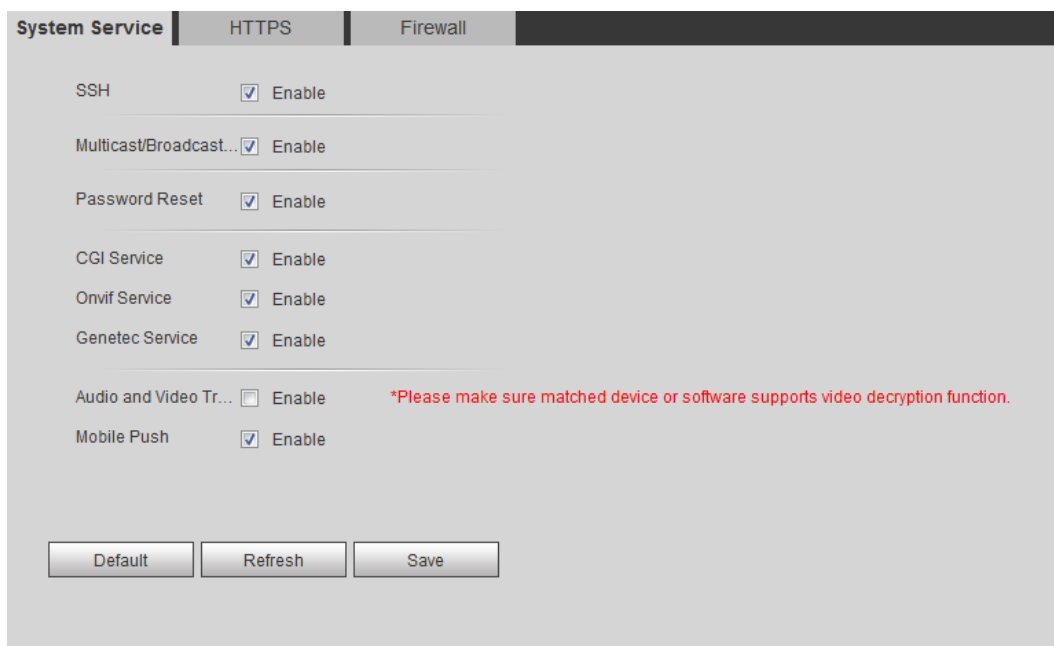

Step 2 Enable the system service according to the actual needs. For details, see Table 4-39.

Table 4-39 Description of system service parameters

Function	Description
SSH	You can enable SSH authentication to perform safety management.
Multicast/Broadcast Search	Enable this function, and then when multiple users are previewing the device video image simultaneously through network, they can find your device with multicast/broadcast protocol.
Password Reset	Manage system security with this function.

Function	Description
CGI Service	Enable this function, and then other devices can access through this service.
Onvif Service	Enable this function, and then other devices can access through this service.
Genetec Service	Enable this function, and then other devices can access through this service.
Audio and Video Transmission Encryption	Enable to encrypt audio/video transmission.  Please make sure the other devices and software that working together with the camera support video decryption.
Mobile Push	Enable this function, and then the system would send the snapshot that was taken when alarm is triggered to you phone, this is enabled by default.

Step 3 Click **Save** to finish configuration.

4.8.5.2 HTTPS

Create certificate or upload the authenticated certificate, and then you can connect through HTTPS with your PC. The HTTPS can protect page authenticity on all types of websites; secure accounts; keep user communications, identity, and web browsing private.


Step 1 Create certificate or upload the authenticated certificate.

- If you select **Create Certificate**, follow the steps below.

1) Select **Setting > Network > HTTPS**.

The **HTTPS** interface is displayed. See Figure 4-100.


Figure 4-100 HTTPS (1)

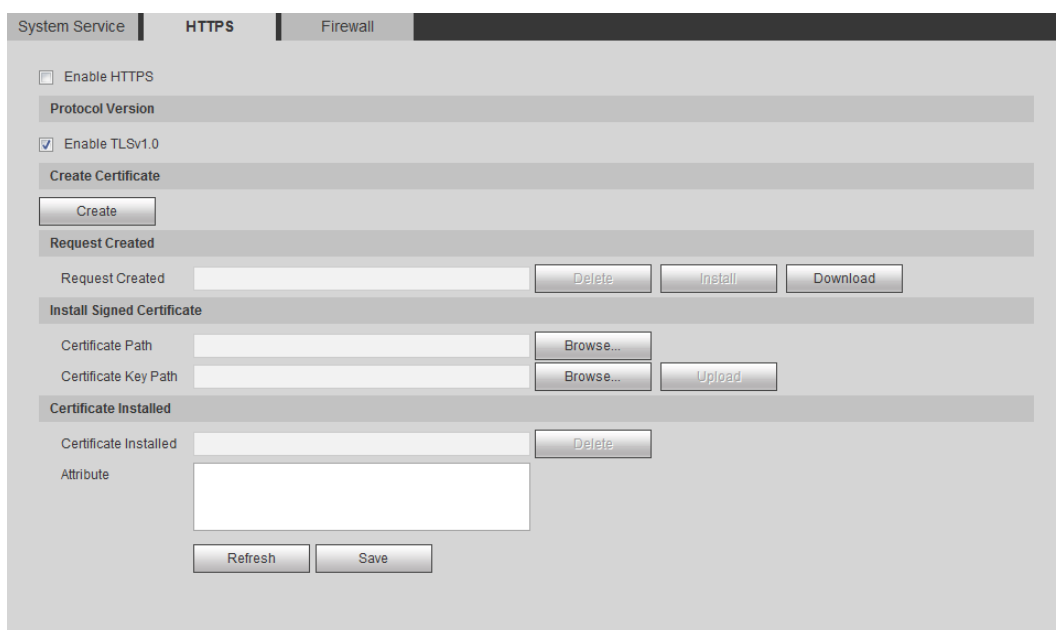

2) Click **Create**.

The **HTTPS** dialog box is displayed. See Figure 4-101.

Figure 4-101 **HTTPS** dialog box

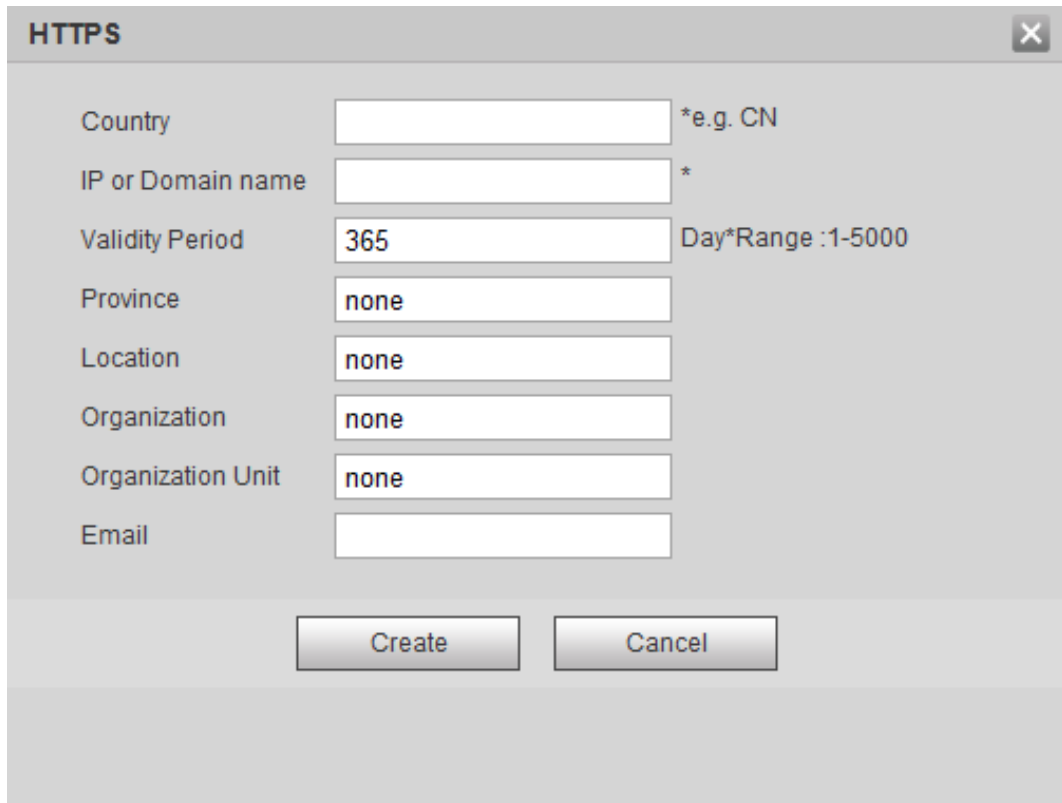

The dialog box is titled "HTTPS" and contains the following fields and buttons:

- Country:** Text input field with a hint "*e.g. CN".
- IP or Domain name:** Text input field with a hint "*".
- Validity Period:** Text input field containing "365" with a hint "Day*Range :1-5000".
- Province:** Text input field containing "none".
- Location:** Text input field containing "none".
- Organization:** Text input field containing "none".
- Organization Unit:** Text input field containing "none".
- Email:** Text input field.
- Buttons:** "Create" and "Cancel" buttons at the bottom.


- 3) Enter the required information and then click **Create**.
If the operation is correct, then the **Create Successful** prompt is displayed.



The entered **IP or Domain name** must be the same as the IP or domain name of the device.

- 4) Click **Install**. See Figure 4-102.

Figure 4-102 Certificate installation

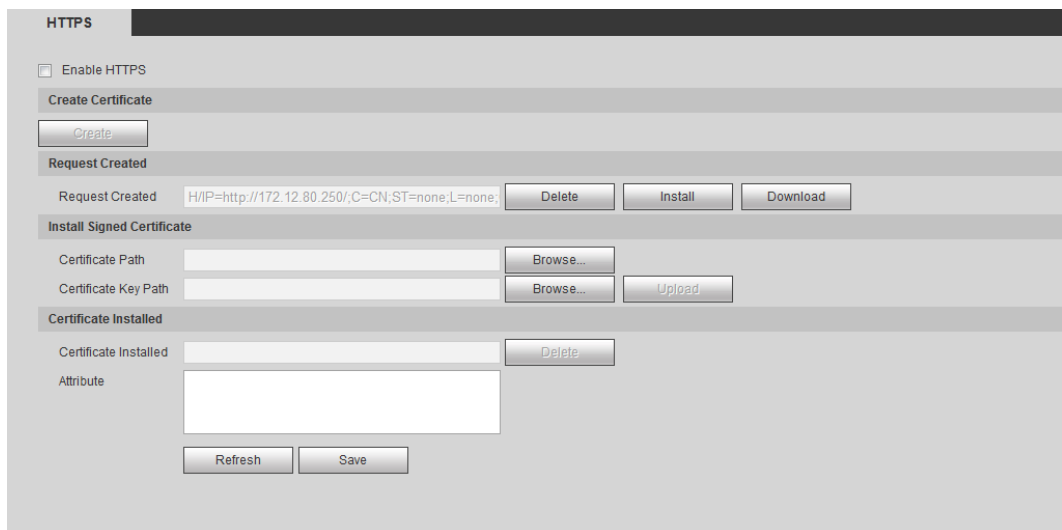


The interface shows the "HTTPS" section with the following options and actions:

- Enable HTTPS:** A checkbox that is currently unchecked.
- Create Certificate:** A section with a "Create" button.
- Request Created:** A section showing a generated request string: "H/IP=http://172.12.80.250/C=CN;ST=none;L=none;". It includes "Delete", "Install", and "Download" buttons.
- Install Signed Certificate:** A section with "Certificate Path" and "Certificate Key Path" text input fields, each with a "Browse..." button, and an "Upload" button.
- Certificate Installed:** A section with a "Certificate Installed" text input field and a "Delete" button.
- Attribute:** A large text input field.
- Buttons:** "Refresh" and "Save" buttons at the bottom.


- 5) Click **Download** to download root certificate.
- 6) Click **Download Root Certificate**.
The **File Download-Security Warning** dialogue box is displayed. See Figure 4-103.

Figure 4-103 File download

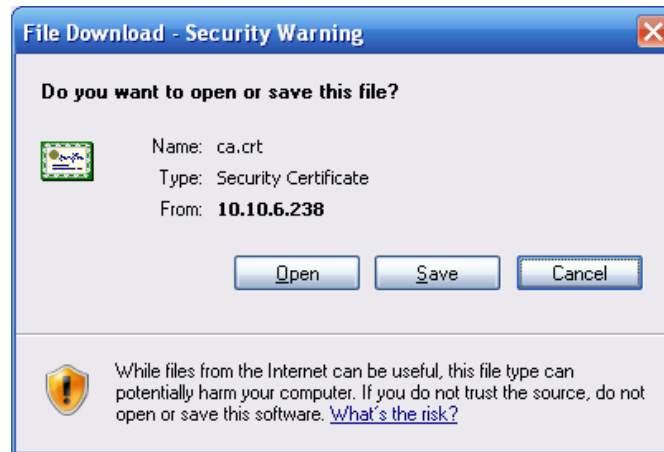

- 7) Click **Open**. The **Certificate Information** interface is displayed. See Figure 4-104.

Figure 4-104 Certificate information

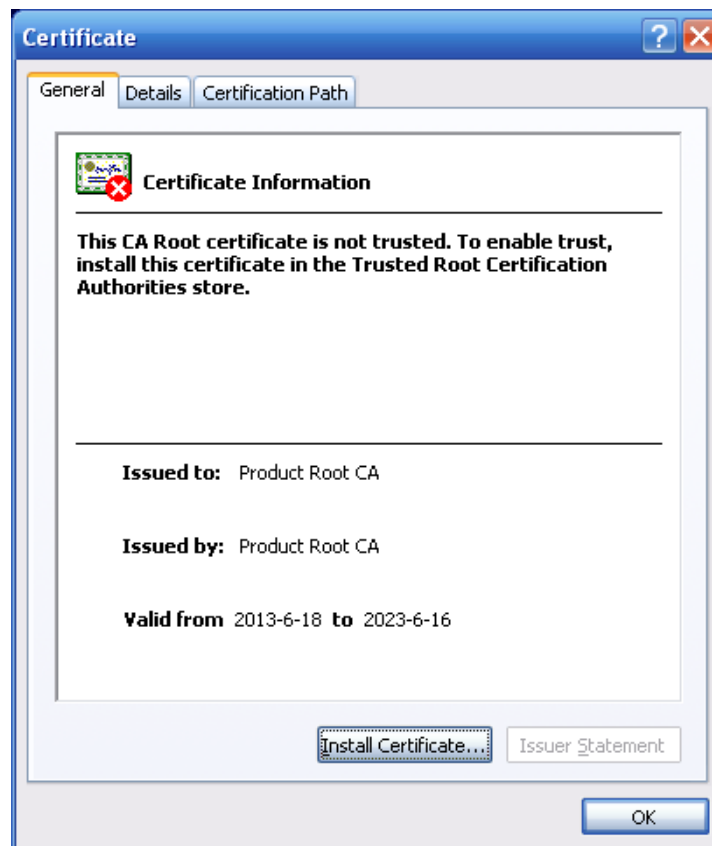

- 8) Click **Install Certificate**.
- 9) The **Certificate Import Wizard** interface is displayed. See Figure 4-105.


Figure 4-105 Certificate import wizard



10) Click **Next**.

The **Certificate Store** interface is displayed. See Figure 4-106.


Figure 4-106 Certificate import wizard

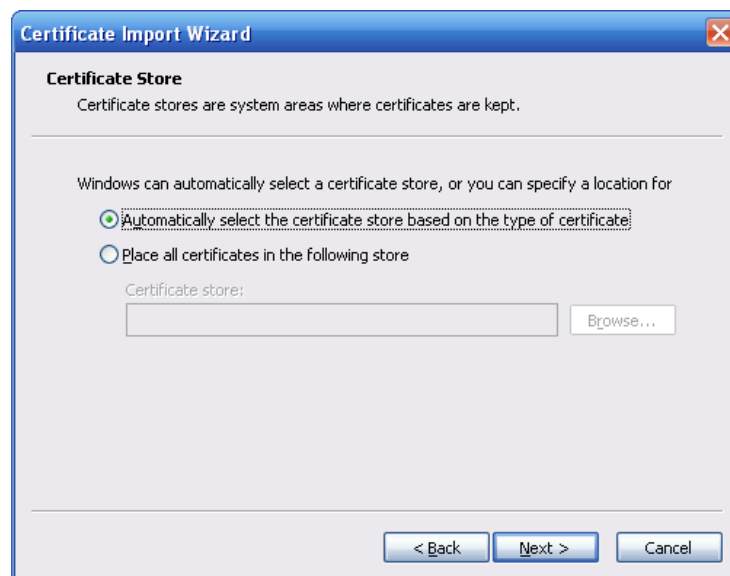

11) Select the storage location and click **Next**.

The **Certificate Import Wizard** interface is displayed. See Figure 4-107.

Figure 4-107 Certificate import wizard

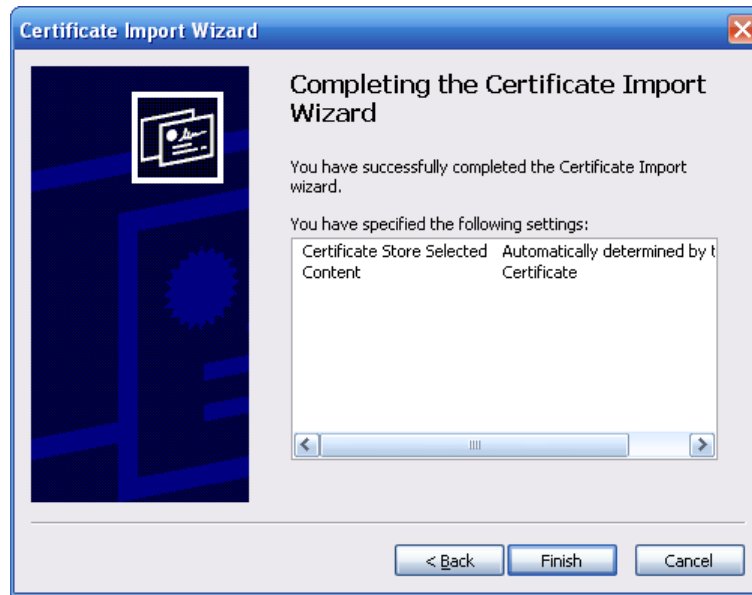

- 12) Click **Finish** and a dialog box showing **The import was successful** pops up. See Figure 4-108.

Figure 4-108 Success



4.8.5.3 Firewall

Configure **Network Access**, **PING prohibited** and **Prevent Semijoin** to enhance network and data security.

- **Network Access:** Set white list and black list to limit access permission.
 - ◇ **Trust list:** Only when the IP/MAC of your PC in the trust list, you can access the camera. Ports are the same.
 - ◇ **Banned list:** When the IP/MAC of your PC in the banned list, you cannot access the camera. Ports are the same.
- **PING prohibited:** Enable **PING prohibited** function, and the camera will not response to the ping request.
- **Prevent Semijoin:** Enable **Prevent Semijoin** function, and the camera can provide service normally under Semijoin attack.



- You cannot set trust/banned list for camera IP/MAC addresses.
- You cannot set trust/banned list for port MAC addresses.
- When the IP addresses of the camera and your PC are in the same LAN, MAC verification takes effect.

- When you access the camera through internet, MAC address verifies according to the router MAC.

This section takes **Network Access** as an example.

Step 1 Select **Setting > System > Safety > Firewall**.

The **Firewall** interface is displayed. See Figure 4-109.

Figure 4-109 IP filter

System Service | HTTPS | **Firewall**

Rule Type: Network Access

Enable: ☒

Mode: ☒ TrustList ☐ BannedList

Only the listed IP addresses/MAC are allowed to visit corresponding ports of the device.

☒	IP address /MAC address	Port	Modify	Delete
☒	192.168.1.1	Device All Ports		
☒	192.168.1.2	Device All Ports		
☒	192.168.1.3	Device All Ports		
☒	192.168.1.4	Device All Ports		

Add IP/MAC

Default Refresh Save

Step 2 Select **Network Access** from Rule Type list, and then **Enable** check box.

- Enable **PING prohibited** and **Prevent Semijoin**, and click **Save** to complete the configuration. You do not need to configure parameters.
- Enable **Network Access**, and configure trust list and banned list.
 - 1) Select the mode: **TrustList** and **BannedList**.
 - 2) Click **Add IP/MAC**.

The **Add IP/MAC** interface is displayed. See Figure 4-110.

Figure 4-110 Add IP/MAC

Add IP/MAC

Rule Type: IP Address

IP Version: IPv4

IP Address: 1 .

Device All Ports: ☐

Device Start Server...: 1

Device End Server...: 1

OK Cancel

Step 3 Configure parameters. For details, see Table 4-40.

Table 4-40 Description of adding IP/MAC parameters

Parameter	Description
Rule Type	Select IP address, IP segment, MAC address or all IP addresses. - IP address: Select IP version and enter the IP address of the host to be added. - IP segment: Select IP version and enter the start address and end address of the segment to be added. - MAC address: Enter MAC address of the host to be added. - All IP addresses: Set all IP addresses in trust list or Banned list.
Device All Ports	Set access ports. You can select all ports or the ports in defined areas. - Device all ports: Set all IP port in trust list or Banned list. When selecting BannedList in Mode, and All IP Address in Rule Type, you cannot select Device All Ports check box. - Device start server port and Device end server port: Set Device start server port and device end server port, and the range is 1–65535.
Device Start Server Port	
Device End Server Port	

Step 4 Select **OK**, and the **Firewall** interface is displayed.

Step 5 Click **Save**.

4.8.6 Peripheral

4.8.6.1 Serial Port Settings

Set the serial port of external device.

Step 1 Select **Setting > System > Peripheral > Serial Port Settings**.

The **Serial Port Settings** interface is displayed. See Figure 4-111.

Figure 4-111 Serial Port Settings

Step 2 Configure serial port settings parameters. For details, see Table 4-41.

Table 4-41 Description of serial port settings parameters

Parameter	Description
Address	The corresponding device address. It is 1 by default.  Make sure that the address is the device address, otherwise you cannot control the device.
Baud Rate	Select the boud rate for the camera. It is 9600 by default.
Date bit	It is 8 by default.
Stop Blt	It is 1 by default.
Parity	It is None by default.

Step 3 Click **Save**.

4.8.6.2 External Light

You need to configure external light mode when the external light is used.

Precondition


- Connect external light with RS-485 port.
- You have configured serial port parameters. For details, see "4.8.6.1 Serial Port Settings."

Procedures

Step 1 Select **Setting > System > Peripheral > External Light**.

The **External Light** interface is displayed. See Figure 4-112.

Figure 4-112 Serial port settings

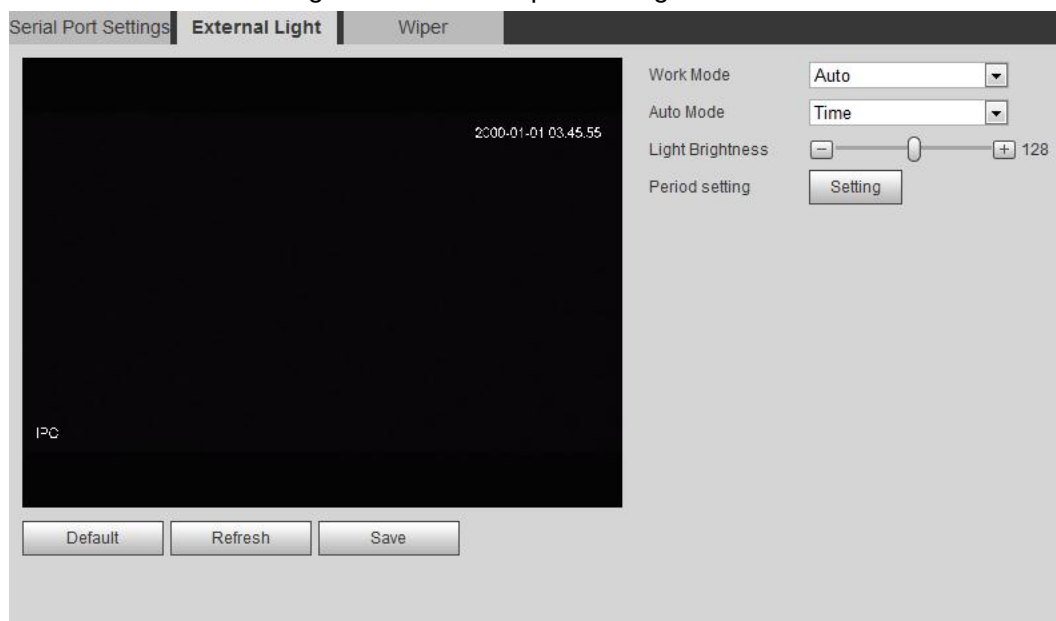

Step 2 Configure external light work mode. For details, see Table 4-42.

Table 4-42 Description of external light parameters

Parameter	Description
Work Mode	- Off: Turn off the external light. - Manual: Set the light brightness manually. - Auto: The camera turns on or turns off the light according to the light time and photoresistor automatically.
Auto Mode	Time: When selecting Time in Auto Mode, click Setting to set the arming period. During the arming period, the external light is on. For details of arming period setting, see "5.1.1.1 Setting Period." Photoresistor: When you select Photoresistor in Auto Mode, the system turns on the external light according to the brightness automatically.
Light Brightness	Set the brightness of the external light..


Step 3 Click **Save**.

4.8.6.3 Wiper

Step 1 Select **Setting > System > Peripheral > Wiper**.

Step 2 The **Wiper** interface is displayed. See Figure 4-113.

Figure 4-113 Serial Port Settings

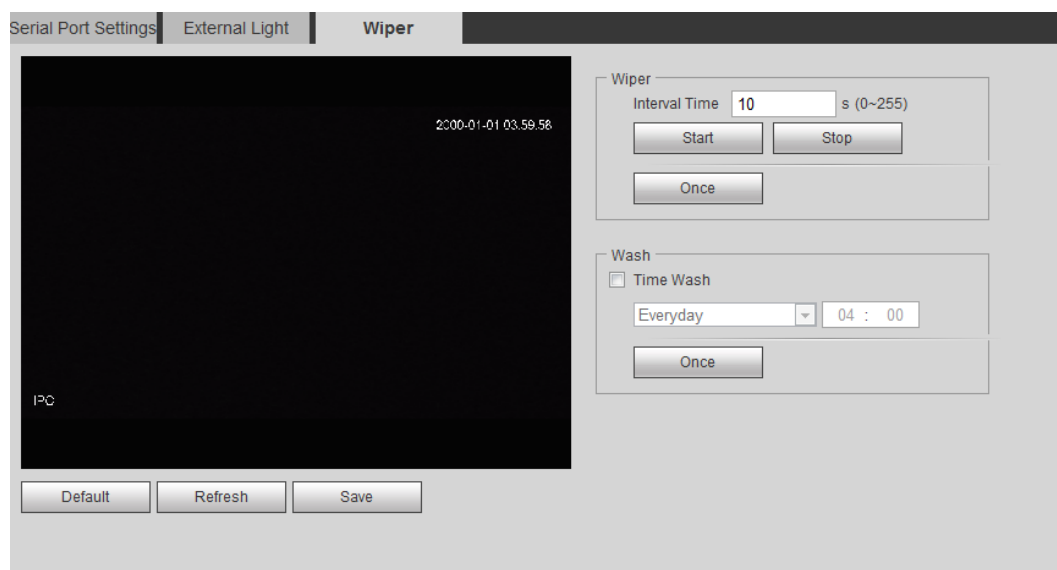

Step 3 Configure wiper work mode. For details, see Table 4-42.

Table 4-43 Description of Wiper parameters

Parameter	Description
Interval Time	The interval time between stop mode and start mode. For example, set the time 10 s, and the wiper will work every 10 s.
Sart	Set the work status of wiper. - Start: Click Start, and the wiper works as the set interval time. - Stop: Click Stop, and the wiper stops working. - Once: Click Once, and the wiper works once.
Stop	
Once	
Time Wash	Select Time Wash check box and set the time, and then the

Parameter	Description
	wiper will work as the set time. Click Once , and the wiper works once. It can be used to check whether the wiper can work normally.

Step 4 Click **Save**.

5 Event

This chapter introduces intelligent event settings, including smart track, panoramic calibration, video detection, audio detection, smart plan, IVS, face detection, face recognition, people counting, heat map, video structuralization, alarm, and abnormality.

5.1 Setting Alarm Linkage

5.1.1 Alarm Linkage

Set alarm linkage (such as record and snapshot) when configuring alarm event. The alarm linkage is triggered when an alarm event occurs. See Figure 5-1.

Figure 5-1 Alarm linkage

The screenshot shows a configuration window for alarm linkage. At the top, there is a 'Period' label and a 'Setting' button. Below this, the 'Anti-Dither' is set to '0' with a unit of 's (0~100)', and the 'Sensor Type' is set to 'NO' with a dropdown arrow. A horizontal line separates the top section from the linkage options. The options include: 'Record' (checked), 'Record Delay' (10 s (10~300)), 'Relay-out' (checked), 'Alarm Delay' (10 s (10~300)), 'Send Email' (unchecked), 'PTZ' (unchecked), and 'Snapshot' (checked). At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

5.1.1.1 Setting Period

Set arming periods. The system only performs corresponding linkage action in the set period.

Step 1 Click **Setting** on the **Period** interface.

The **Period** interface is displayed. See Figure 5-2.

Figure 5-2 Period

Step 2 Set arming periods. The time period in green on the timeline is armed.

- Method one: Directly press and drag the left mouse button on the timeline.
- Method two: Enter an actual time period.
 - 1) Click **Setting** for a day.
 - 2) Select a time period to be enabled.
 - 3) Enter start time and end time of a time period.



- ◇ Select **All** or the check box of any day to synchronously set the time period of multiple days.
- ◇ You can set 6 time periods per day.

Step 3 Click **Save**.

5.1.1.2 Record Linkage

The system can link record channel when an alarm event occurs. After alarm, the system stops recording after an extended time period according to the **Record Delay** setting.

To use the record linkage function, set recording plan for motion detection alarm and enable auto recording in record control.


5.1.1.2.1 Setting Record Plan

The record channel starts alarm linkage record only after the corresponding alarm type (**Normal**, **Motion**, **Alarm**) is enabled.

Step 1 Select **Setting > Storage > Schedule > Record**.

The **Record** interface is displayed. See Figure 5-3.

Figure 5-3 Record

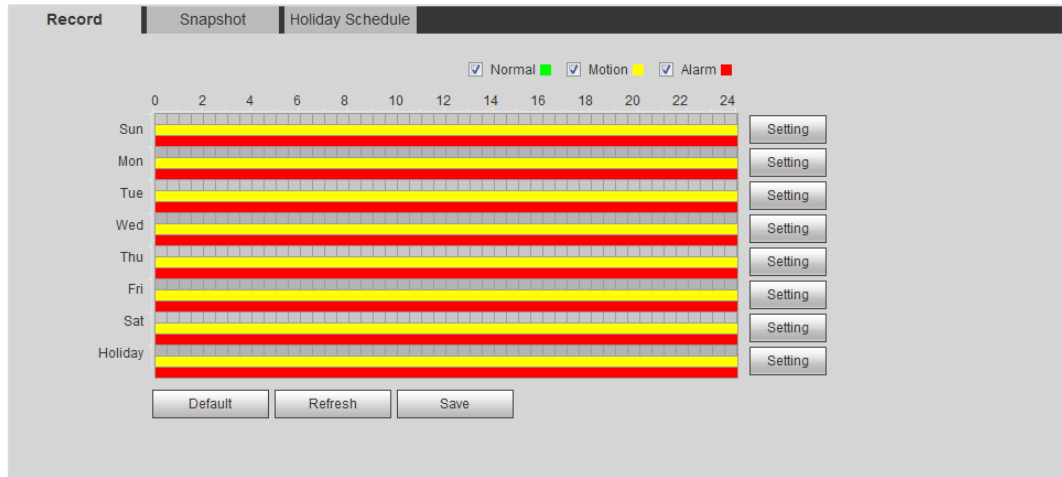


Step 2 Set record plan.

Green represents normal record plan (such as timing record); yellow represents motion record plan (such as intelligent event-triggered record); red represents alarm record plan (such as record triggered by alarm).

- Method one: Select a record type, such as **Normal**, and directly press and drag the left mouse button to set the time period for normal record on the timeline.
- Method two: Enter an actual time period.
 - 1) Click **Setting** of a day.

The **Setting** interface is displayed. See Figure 5-4.

Figure 5-4 Setting (record time period)

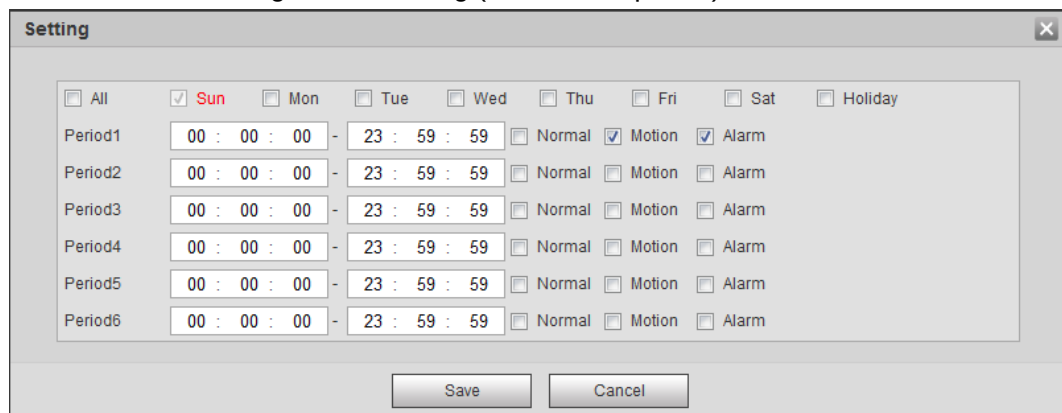

- 2) Select a day, and the alarm type next to a period. Then set time period.



- ◇ Select **All** or the check box of any day to synchronously set the time period of multiple days.
- ◇ You can set 6 time periods per day.

- 3) Click **Save**.

The **Record** interface is displayed.

Step 3 Click **Save**.

5.1.1.2.2 Setting Record Control

Set parameters such as pack duration, pre-event record, disk full, record mode, record stream.



Make sure that the SD card is authenticated before recording if you use Dahua smart card. For details, see "4.5.2.5 Path."

Step 1 Select **Setting > Storage > Record Control**.

The **Record Control** interface is displayed. See Figure 5-5.

Figure 5-5 Record control

The screenshot shows the 'Record Control' window. It contains the following settings:

- Pack Duration: 8 (Min. (1~120))
- Pre-event Record: 5 (s (0~5))
- Disk Full: Overwrite (dropdown menu)
- Record Mode: Auto (radio buttons for Auto, Manual, Off)
- Record Stream: Main Stream (dropdown menu)

At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Set parameters. See Table 5-1.

Table 5-1 Description of record control parameters

Parameter	Description
Pack Duration	The pack duration for each video.
Pre-event Record	The time to record in advance in case of an alarm. For example, if the pre-event record is set to be 5, the system saves the record of 5 seconds before such alarm is triggered.  When an alarm or motion links recording, the system saves the video data in pre-event record to the video file if the record is not enabled.
Disk Full	- Stop: Stop recording when the disk is full. - Overwrite: Cyclically overwrite the earliest video when the disk is full.
Record Mode	The system starts recording in Manual mode. The system starts recording in a set time period of record plan in Auto mode.
Record Stream	Select record stream, including Main Stream and Sub Stream .

Step 3 Click **Save**.

5.1.1.2.3 Setting Record Linkage

On the alarm event setting interface (such as the motion detection interface), select **Record** and set **Record Delay**.

When record delay is set, alarm recording continues for an extended period of time after the alarm ends.

Figure 5-6 Record linkage

The screenshot shows the 'Record linkage' section. It includes a checked checkbox labeled 'Record' and a text input field for 'Record Delay' with the value '10' and the unit 's (10~300)'.

5.1.1.3 Snapshot Linkage

The system can automatically give an alarm and takes snapshot when an alarm event occurs. After Motion is enabled in **Snapshot**, the system takes snapshot when an alarm is triggered. For querying and setting snapshot storage location, see "4.5.2.5 Path".


5.1.1.3.1 Setting Snapshot Plan

According to the set snapshot plan, the system enables or disables snapshot at corresponding time.

Step 1 Select **Setting > Storage > Schedule > Snapshot**.

The **Snapshot** interface is displayed. See Figure 5-1.

Figure 5-1 Snapshot

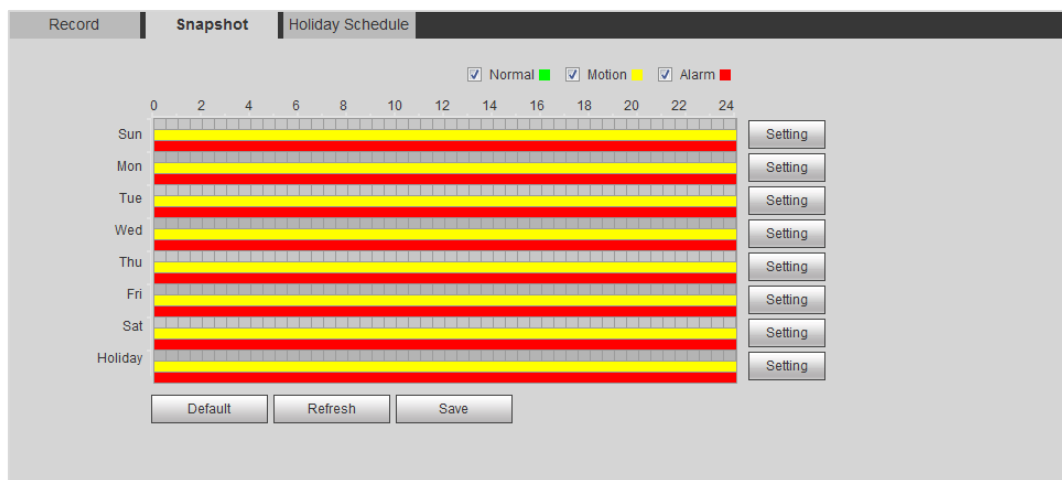

Step 2 Select snapshot type and set time period.


Green represents normal snapshot plan (such as timing snapshot); yellow represents motion snapshot plan (such as intelligent event-triggered snapshot); red represents alarm snapshot plan (such as snapshot triggered by alarm).

- Method one: Select snapshot type, such as **Normal**, and directly press and drag the left mouse button to set time period for normal snapshot on the timeline.
- Method two: Enter an actual time period.

1) Click **Setting** of a day.

The **Setting** interface is displayed. See Figure 5-2.

Figure 5-2 Setting (snapshot time period)

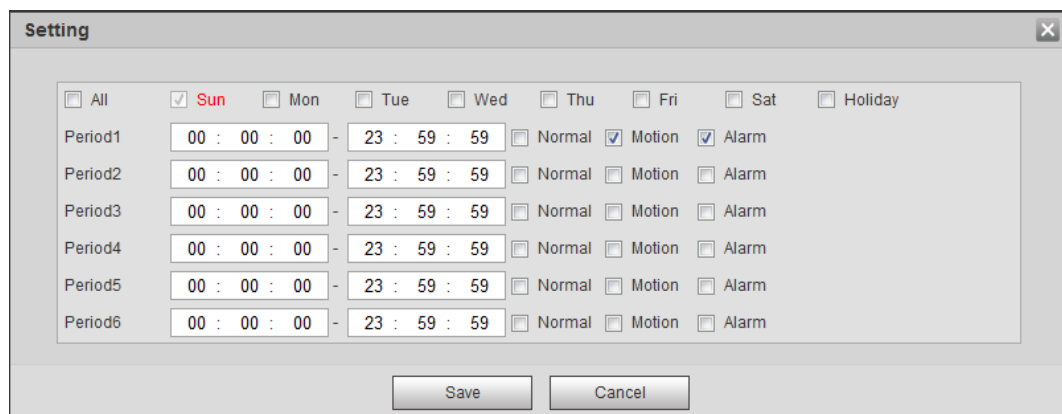

2) Select a day, and the alarm type next to a period. Then set time period.



- ◇ Select **All** or the check box of any day to synchronously set the time period of multiple days.
 - ◇ You can set 6 time periods per day.
- 3) Click **Save**.
The **Snapshot** interface is displayed.

Step 3 Click **Save**.

5.1.1.3.2 Setting Snapshot Linkage

On the alarm event setting interface (such as the motion detection interface), select **Snapshot** and set alarm linkage snapshot.

Figure 5-3 Snapshot linkage



5.1.1.4 Relay-out Linkage

The system can automatically link with relay-out device when an alarm event occurs.

On the alarm event setting interface (such as the motion detection interface), select **Alarm** and set **Alarm Delay**.

When alarm delay is set, alarm continues for an extended period of time after the alarm ends.

Figure 5-4 Relay-out linkage



5.1.1.5 Email Linkage

The email can be automatically sent to user when an alarm event occurs.

Email linkage takes effect only when SMTP is configured. For SMTP setting, see "4.6.5 SMTP (Email)."

Figure 5-5 Email linkage



5.1.1.6 PTZ Linkage

The system can link PTZ to operate when an alarm event occurs. For example, the system links PTZ to rotate to the preset X.

Figure 5-6 PTZ Linkage




5.1.1.7 White Light Linkage

The system can automatically enable the white light when an alarm occurs.

After setting white light duration, the white light is turned off after an extended time of period after an alarm. The duration is 10 seconds–300 seconds.

Figure 5-7 White light linkage

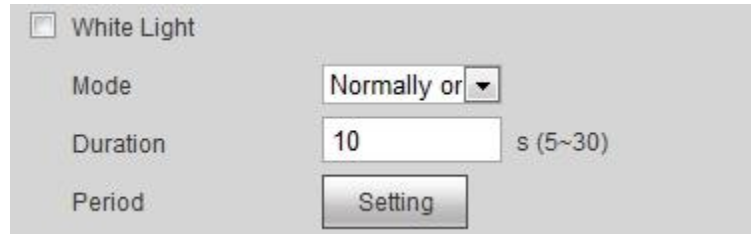

5.1.1.8 Audio Linkage

The system broadcasts alarm audio file when an alarm event occurs. Select **Setting > Camera > Audio > Alarm Audio** to set alarm audio file.

Figure 5-8 Audio Linkage



5.1.2 Subscribing Alarm

5.1.2.1 About Alarm Types

For alarm types and preconditions that can trigger the alarm events, see Table 5-2.

Table 5-2 Description of alarm types

Alarm Type	Description	Precondition
Motion Detection	The alarm is triggered when moving object is detected.	Motion detection is enabled. For details, see "5.4.1 Setting Motion Detection."
Disk Full	The alarm is triggered when the free space of SD card is less than the set value.	The SD card no space function is enabled. For details, see "5.17.1 Setting SD Card."
Disk Error	The alarm is triggered when there is failure or malfunction in the SD card.	SD card failure detection is enabled. For details, see "5.17.1 Setting SD Card."
Video Tampering	The alarm is triggered when the camera lens is covered or there is defocus in video images.	Video tampering is enabled. For details, see "5.4.2 Setting Video Tamper."

Alarm Type	Description	Precondition
External Alarm	The alarm is triggered when there is external alarm input.	The device has alarm input port and external alarm function is enabled. For details, see "5.16 Setting Relay-in ."
Illegal Access	The alarm is triggered when the number of consecutive login password error is up to the allowable number.	Illegal access detection is enabled. For details, see "5.17.3 Setting Illegal ."
Audio Detection	The alarm is triggered when there is audio connection problem.	Abnormal audio detection is enabled. For details, see "5.5 Setting Audio Detection."
IVS	The alarm is triggered when intelligent rule is triggered.	Enable IVS, crowd map, face detection or people counting, and other intelligent functions.
Scene Changing	The alarm is triggered when the device monitoring scene changes.	Scene changing detection is enabled. For details, see "5.4.3 Setting Scene Changing."
Voltage Detection	The alarm is triggered when the device detects abnormal voltage input.	Voltage detection is enabled. For details, see "5.17.4 Setting Voltage ."
Security Exception	The alarm is triggered when the device detects malicious attack.	Voltage detection is enabled. For details, see "5.17.5 Setting Security ."

5.1.2.2 Subscribing Alarm Information

You can subscribe alarm event. When a subscribed alarm event is triggered, the system records detailed alarm information at the right side of the interface.



Function of different devices might vary, and the actual product shall prevail.

Step 1 Click the **Alarm** tab.

The **Alarm** interface is displayed. See Figure 5-9.

Figure 5-9 Alarm (subscription)

Alarm Type

☐ Motion Detection ☐ Disk Full

☐ Disk Error ☐ Video Tampering

☐ External Alarm ☐ Illegal Access

☐ Audio Detection ☐ IVS

☐ Scene Changing ☐ Security Exception

Operation

☐ Prompt

Alarm Tone

☐ Play Alarm Tone

Tone Path

No.	Time	Alarm Type	Source IP	Alarm Channel
-----	------	------------	-----------	---------------

Step 2 Select **Alarm Type** accord to the actual need. For details, see Table 5-2.

- Select **Prompt**. The system prompts and records alarm information according to actual conditions.
 - ◇ When the subscribed alarm event is triggered and the **Alarm** interface is not displayed, the  is displayed on the **Alarm** tab and the alarm information is recorded automatically. Click the **Alarm** tab, and this icon disappears.
 - ◇ When the subscribed alarm event is triggered and the **Alarm** interface is displayed, the corresponding alarm information is displayed in the alarm list at the right side of the **Alarm** interface.
- Select **Play Alarm Tone**, and select the tone path.

The system would play the selected audio file when the selected alarm is triggered.

5.2 Setting Smart Track

The dome camera can automatically link to a corresponding position and tracks an object until the object is beyond the monitoring range or the set tracking time is reached when the intelligent rules for panoramic camera triggers an alarm.


5.2.1 Setting Calibration Parameters for Smart Track

The device has calibration parameters by default. See this section for manual calibration in case of poor using effect of default setting.

Step 1 Select **Setting > Event > Smart Track > Smart Track**.

The **Smart Track** interface is displayed. See Figure 5-10.

Figure 5-10 Smart track

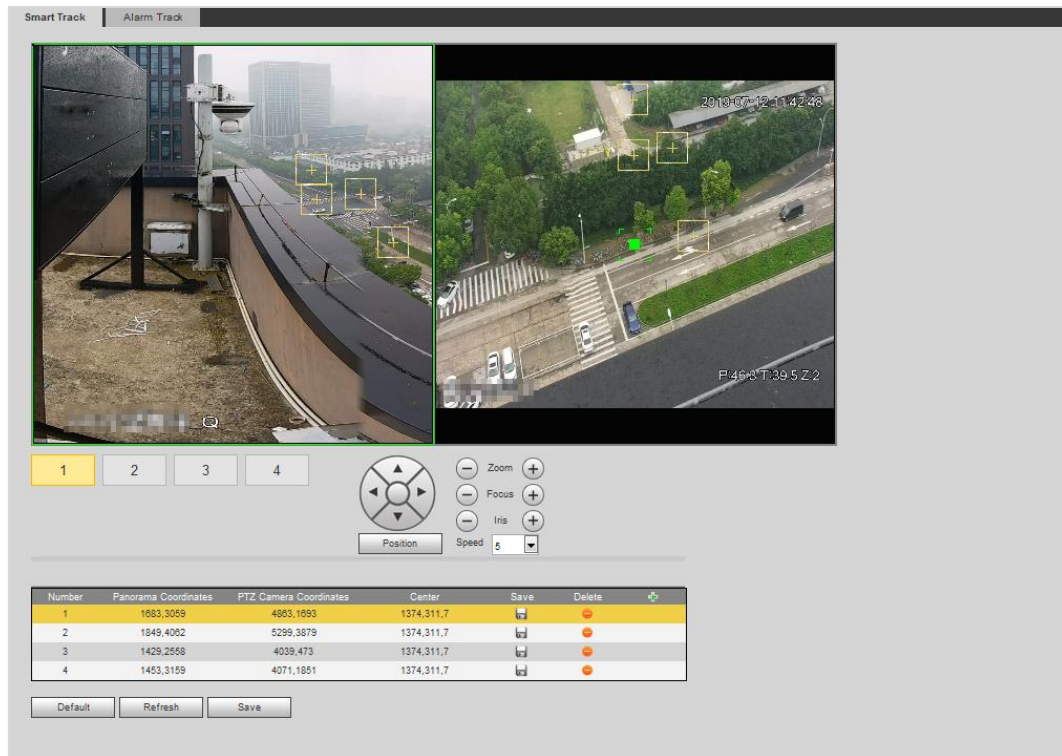

Step 2 Select scene number under the video images in turns (See Figure 5-11) to add calibration points to the video images of the corresponding scene. Scene number 1 to 4 are four scenes divided by spliced image with at least four calibration points for each scene.

Figure 5-11 Selecting scene number



Add calibration points by the procedure as below.

- 1) Adjust the video image of dome to a position aligned with the panoramic image, and then click

Calibration box is displayed in the images of dome and panoramic camera.

- 2) Drag the calibration box to a proper position, and click to save one pair of calibration boxes.

After the calibration record is saved, the calibration box is displayed in yellow.

Step 3 Click **Save**.

5.2.2 Enabling Alarm Track

The **Alarm Track** is disabled by default. Smart track is enabled only after **Alarm Track** is enabled and intelligent rule is set for panoramic camera. **Smart Track** is supported only when rules of crowd map, cross region and tripwire intrusion are triggered. See "5.7 Setting " and "5.8 Setting Crowd Map."

Step 1 Select **Setting > Event > Smart Track > Alarm Track**.

The **Alarm Track** interface is displayed. See Figure 5-12.

Figure 5-12 Alarm Track

Step 2 To enable track linkage, select **Enable**.

- Manual positioning and manual track are enabled after **Alarm Track** is enabled.
- **Auto Track** is enabled after **Alarm Track** and **Auto Track** are enabled.

Step 3 Set parameters. See Table 5-3.

Table 5-3 Description of alarm track parameters

Parameter	Description
Auto Track	Select Enable , the dome would automatically links to a corresponding position and tracks an object when the intelligent rules for panoramic camera triggers an alarm.
Track Time	Set time for alarm track. • Before an object disappears: The dome would automatically links to a corresponding position and tracks an object until the object moves out of the monitoring range when the intelligent rules for panoramic camera triggers an alarm. • Custom: Set time for auto alarm track of dome.
Idle Time	It is an interval from the end of alarm track of dome to the start of idle mode.
Idle Position	Set Idle Time and Idle Position . If no event needs to be tracked after passing the set idle time, the device automatically rotates to the set idle position. For example, set the Idle Time to be five seconds and the Idle Position to be the preset point 1. When the dome does not start tracking after five seconds, it automatically rotates to the preset point 1. To set Idle Position , first set a preset point. For preset point, see "4.3.2.1 Preset."

Step 4 Click **Save**.

5.3 Setting Panoramic Calibration


The device has calibration parameters by default. See this section for manual calibration in case of poor using effect of default setting. Before manually calibrate a channel, clear all default calibration parameters.

Channel 1 is PTZ camera. You should calibrate the scene coordinates of **Channel 1** and other channels. Take calibration **Channel 2** as an example.

Step 1 Select **Setting > Event > Panoramic Calibration**.

The **Panoramic Calibration** interface is displayed. See Figure 5-13.

Figure 5-13 Panoramic calibration

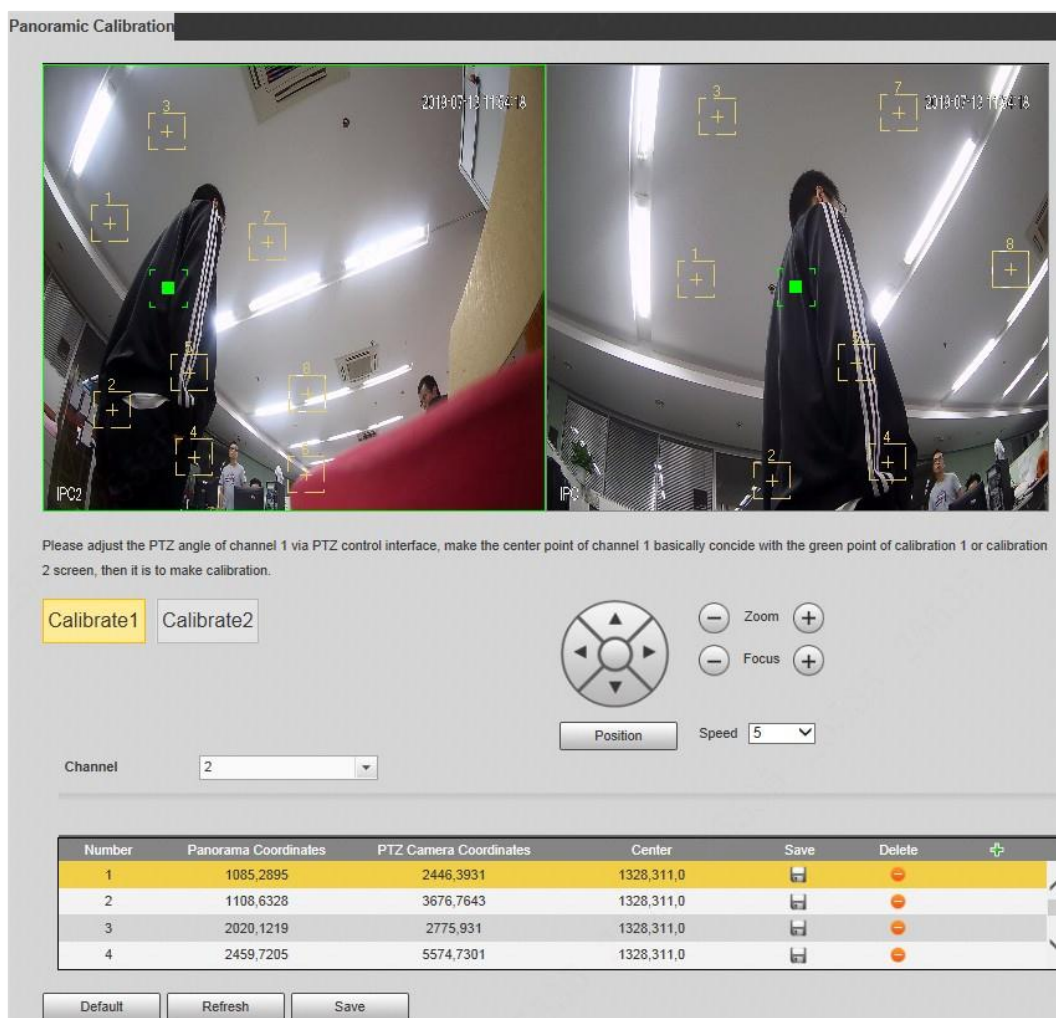

Step 2 Select channel 2, and then select a calibration number under the video images in turns (See Figure 5-14) to add calibration points to the corresponding video images. Take **Calibrate1** as an example.

Figure 5-14 Selecting a calibration number.



- 1) Adjust the dome PTZ angle of channel 1 by the PTZ control interface to rotate the center of channel 1 to a position aligned with the green point in **Calibrate1** image, and then click

Calibration box is displayed in pictures of **Channel 1** and **Calibrate1**.

- 2) Respectively drag calibration boxes in images of **Channel 1** and **Calibrate1** to the corresponding positions of the two images. Click  to save this pair of calibration boxes.

It is recommended to select a static and clear position in the image to drag calibration box. This can ensure the boundary can be accurately distinguished by camera. After the calibration record is saved, the calibration box is displayed in yellow.

To add at least 4 pairs of calibration points to each calibration picture, repeat steps 1)–2).

Step 3 Click **Save**.

5.4 Setting Video Detection

Check whether there are considerable changes on the video by analyzing video images. In case of any considerable change on the video (such as occurrence of moving object, fuzzy image), the system performs alarm linkage.

5.4.1 Setting Motion Detection

The system performs alarm linkage when the moving object appears on the image and its moving speed reaches the preset sensitivity.

Step 1 Select **Setting > Event > Video Detection > Motion Detection**.

The **Motion Detection** interface is displayed. See Figure 5-15.

Figure 5-15 Motion Detection

Step 2 Select the **Enable** check box to enable motion detection.

Step 3 Set the area for motion detection.

1) Click **Setup** next to **Area**.

The **Area** interface is displayed. See Figure 5-16.

Figure 5-16 Area

2) Select a color and set the region name. Select an effective area for motion detection in the image and set **Sensitivity** and **Threshold**.

◇ Select a color on  to set different detection parameters for each region.

- ◇ Sensitivity: Sensitive degree of outside changes. It is more easier to trigger the alarm with higher sensitivity.
- ◇ Threshold: Effective area threshold for motion detection. The smaller the threshold is, the easier the alarm is triggered.
- ◇ The whole video image is the effective area for motion detection by default.
- ◇ The red line in the waveform means that the motion detection is triggered, while the green one stands for no motion detection. Adjust sensitivity and threshold according to the waveform.

3) Click **Save**.

Step 4 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Anti-dither: After the **Anti-dither** time is set, only record a motion detection event in the period.

Step 5 Click **Save**.

5.4.2 Setting Video Tamper

The system performs alarm linkage when the lens is covered or video output is mono-color screen caused by light and other reasons.

Step 1 Select **Setting > Event > Video Detection > Video Tamper**.

The **Video Tamper** interface is displayed. See Figure 5-17.

Figure 5-17 Video Tampering

Step 2 Select **Enable**, set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Enable Defocus Detection: The alarm is triggered when the image is fuzzy. Not all models support this function.

Step 3 Click **Save**.

5.4.3 Setting Scene Changing

The system performs alarm linkage when the image switches from the current scene to another one.

Step 1 Select **Setting > Event > Video Detection > Scene Changing**.

The **Scene Changing** interface is displayed. See Figure 5-18.

Figure 5-18 Scene Changing

The screenshot shows the 'Scene Changing' configuration window. At the top, there are three tabs: 'Motion Detection', 'Video Tamper', and 'Scene Changing', with 'Scene Changing' being the active tab. Below the tabs, the 'Channel' is set to '1'. The 'Enable' checkbox is checked. The 'Working Period' is set to 'Setup'. The 'Record' checkbox is checked, and the 'Record Delay' is set to '10' seconds (range 10~300). The 'Relay-out' checkbox is checked, and the 'Alarm Delay' is set to '10' seconds (range 10~300). The 'Send Email', 'PTZ', and 'Snapshot' checkboxes are unchecked. At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 3 Click **Save**.

5.5 Setting Audio Detection

The system performs alarm linkage when vague voice, tone change, or sound intensity rapid change is detected.

Step 1 Select **Setting > Event > Audio Detection**.

The **Audio Detection** interface is displayed. See Figure 5-19.

Figure 5-19 Audio Detection

Step 2 Set parameters.

- Input abnormal: Select **Enable Input Abnormal**, and the alarm is triggered when the system detects abnormal sound input.
- Intensity change: Select **Enable Intensity Change** and then set **Sensitivity** and **Threshold**. The alarm is triggered when the system detects that the sound intensity exceeds the set threshold.
 - ◇ It is easier to trigger the alarm with higher sensitivity or smaller threshold. Set a high threshold for noisy environment.
 - ◇ The red line in the waveform represents audio detection is triggered, while the green one stands for no audio detection. Adjust sensitivity and threshold according to the waveform.

Step 3 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.


5.6 Setting Smart Plan

Smart plan includes face detection, heat map, IVS, people counting, face detection, video structuralization, and stereoscopic behavior analysis. The intelligent function can be enabled only after the corresponding smart plan is enabled.

Step 1 Select **Setting > Event > Smart Plan**.

The **Smart Plan** interface is displayed. For smart plan icon, see Table 5-4.

 Table 5-4 Description of smart plan icon

Icon	Description	Icon	Description	Icon	Description
	Face detection		Stereo vision		Heat map
	Stereoscopic behavior analysis		IVS		Face recognition
	People counting		Video structuralization		Crowd map
	ANPR		-		-

Step 2 Enable smart functions accord to the actual need.

Different devices support different ways to enable smart functions. Select corresponding ways to enable these functions according to the actual interface.

- Select an icon to enable the corresponding smart plan.
Click an icon to enable it, and the selected smart function is highlighted. Click it again to cancel the selection.

If there is  icon on the interface, click it to enable the smart function switch.

- To enable smart plan, click **Add**.
 - Select a preset point on the **Add** interface.
The smart plan for the point is displayed.
 - To enable a smart function, click the corresponding icon.
The selected smart function is highlighted. Click it again to cancel the selection.

Step 3 Click **Save**.

5.7 Setting IVS Analysis

This section Introduces scene selection requirements, rule configuration, and global configuration for IVS (intelligent video surveillance).

Basic requirements on scene selection are as follows.

- The target should be less than 10% of the image.
- The target size in the image should not be less than 10×10 pixels. The size of abandoned object in the image should not be less than 15×15 pixels (CIF image). The target height and width should be less than a third of the image height and width. The recommended target height is 10% of the image height.
- Brightness difference between the target and the background should not be less than 10 greyscale.
- The target should be continuously present in the image for no less than two seconds, and

the moving distance of the target should be larger than its width and no less than 15 pixels (CIF image).

- Reduce the complexity of surveillance scene as possible as you can. Intelligent analysis function is not recommended to be used in scene with dense targets and frequent illumination change.
- Avoid areas such as glass, reflective ground, water surface, and areas interfered by branch, shadow and mosquito. Avoid backlight scene and direct light.

5.7.1 Global Configuration

Set global rules for IVS analysis, including disturbance filter, depth of field calibration, and valid motion parameter for targets.

Calibration Purpose

Determine corresponding relationship between 2D image captured by the camera and 3D actual object according to one horizontal ruler and three vertical rulers calibrated by the user and the corresponding actual distance.

Applicable Scene

- Medium or distant view with installation height of more than three meters. Scenes with parallel view or ceiling-mounted are not supported.
- Calibrate horizontal surfaces, not vertical walls or sloping surfaces.
- This function is not applicable to scenes with distorted view captured by super wide-angle or fisheye camera.

Notes

- Calibration Drawing
 - ◇ Calibration area: The calibration area drawn should be on a flat surface.
 - ◇ Vertical ruler: The bottom of three vertical rulers should be on the same horizontal surface. Select three reference objects with fixed height in triangular distribution as vertical ruler, such as vehicle parked at roadside or road lamp poles. Arrange three persons to draw at each of the three positions in the monitoring scene.
 - ◇ Horizontal ruler: Select reference object with known length on the ground, such as sign on the road, or use a tape to measure the actual length.
- Calibration Verification


After setting the ruler, draw a straight line on the image, check the estimated value of the straight line, and then compare this value with the value measured in the actual scene to verify calibration accuracy. In case of major difference between the estimated value and the actual one, fine-tune or reset parameters until the error requirement is met.

Procedures

Step 1 Select **Setting > Event > IVS > Global Setup**.

The **Global Setup** interface is displayed. See Figure 5-20.

Figure 5-20 Global setup of IVS (common camera)

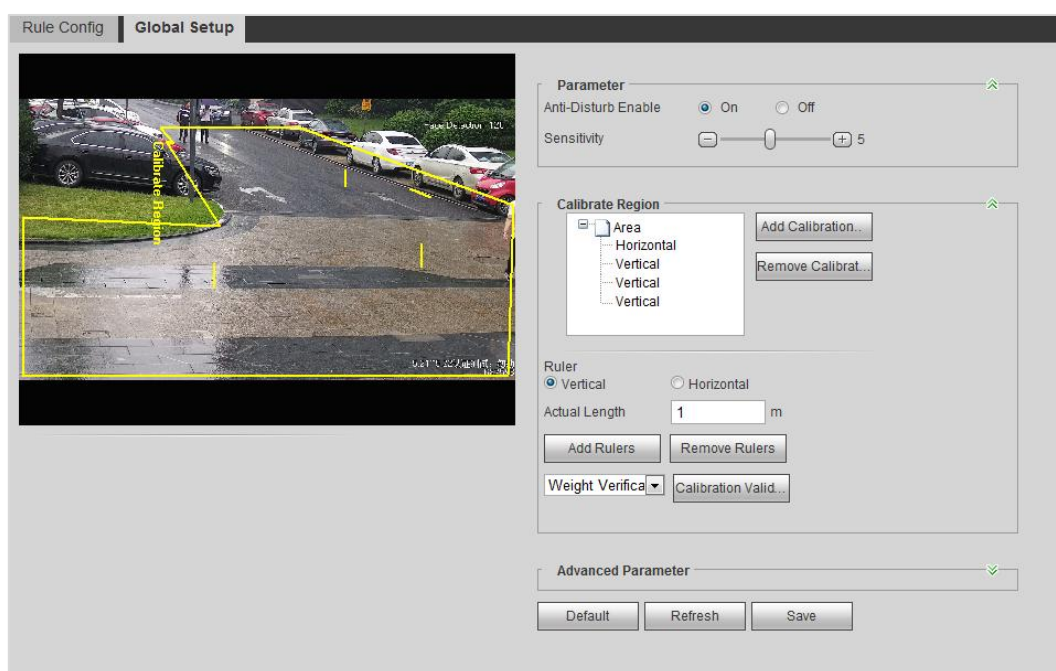

Step 2 Set parameters. See Table 5-5.

Table 5-5 Description of global setup (IVS) parameters

Parameter	Description
Anti-disturb Enable	A reserved function.
Shadow Screen	This function is aimed at differentiating the object from its shadow. Several objects with their shadows partly overlaid can be detected separately. So this function can give user a precise clue of where the object really locates. When a part of the object is similar to the shadow, this part might be falsely detected as shadow and removed.
Sensitivity	Adjust the filter sensitivity. With higher value, it is easier to trigger alarm when low-contrast object and small object are captured, causing higher false detection.
Set as Tracking Rate	Set the current zoom parameter as the tracking rate to maintain clear image when zooming.
Save Preset Point	Save parameters such as the current horizontal angle and tilt angle of PTZ as a new preset point.
Tracking Overlap Rate	A reserved function.
Valid Tracking Distance	A reserved function.
Valid Tracking Time	A reserved function.

Step 3 Set calibration area and ruler.

- 1) Click **Add Calibration Area** and draw a calibration area in the image.
- 2) Select a calibration type and enter the actual length, and then click **Add Rulers**.
- 3) Draw one horizontal ruler and three vertical rulers in the calibration area.

Step 4 Click **Save**.

Verification

Step 1 Select a verification type, and then click **Calibration Valid**.

To verify vertical ruler and horizontal ruler, respectively select **Height Verification** and **Width Verification**.

Step 2 Draw a straight line in the image to verify whether the rulers are correctly set.

In case of big difference between the estimated value and the actual one, fine tune or reset parameters until the error requirement is met.

5.7.2 Rule Configuration

Set rules for IVS, including cross fence detection, tripwire, cross region, abandoned object, moving object, fast moving, parking detection, crowd gathering, and loitering detection.

For the functions and applications of the rules, see Table 5-6.

Table 5-6 Description of IVS functions

Rule	Description	Applicable Scene
Cross fence	When the target crosses the set fence line from the defined direction, the system performs alarm linkage.	Road, airport, and other scenes with isolation zone.
Tripwire	When the target crosses tripwire from the defined motion direction, the system performs alarm linkage.	Scenes with sparse targets and no occlusion among targets, such as perimeter protection of unattended area.
Intrusion	When the target enters, leaves, or appears in the detection area, the system performs alarm linkage.	
Abandoned object	When an object is abandoned in the detection area over the set time, the system performs alarm linkage.	Scenes with sparse targets and without obvious and frequent light change. Simple scene in the detection area is recommended. - Missed alarm omission might increase in the scenes with dense targets, frequent occlusion, and people staying. - In scenes with complex foreground and background, false alarm might be triggered for abandoned or missing object.
Moving object	When an object is taken out of the detection area over the defined time, the system performs alarm linkage.	
Fast moving	When the motion speed exceeds the defined speed to trigger alarms, the system performs alarm linkage.	Scene with sparse targets and less occlusion. The camera should be installed right above the monitoring area. The light direction should be vertical to the motion direction.

Rule	Description	Applicable Scene
Parking detection	When the target stays over the defined time, the system performs alarm linkage.	Road monitoring and traffic management.
Crowd gathering	When the crowd gathers or the crowd density is large, the system performs alarm linkage.	Scenes with medium or long distance, such as outdoor plaza, government entrance, station entrance and exit. It is not suitable for short-distance view analysis.
Loitering detection	When the target loiters over the shortest alarm time, the system performs alarm linkage. After alarm is triggered, if the target stay in the area within the time interval of alarm, then alarm will be triggered again.	Scenes such as park and hall.

Precondition

- Select **Setting > Event > Smart Plan**, and enable **IVS**.
- To set **Fast Moving** rule, first select **Setting > Event > IVS > Global Setup** to finish global configuration.

Procedures

This section takes tripwire for example to introduce rule configuration of IVS analysis.




Go to the **Rule Config** interface, and the PTZ lock is automatically on. The locking time is 180 seconds. You can only manually control PTZ during the locking time. To manually unlock PTZ, click **Unlock** at lower left corner of the **Rule Config** interface. To relock PTZ, click it again after unlocking.

Step 1 Select **Setting > Event > IVS > Rule Config**.

The **Rule Config** interface is displayed.

Step 2 Click , double-click the name, and select **Tripwire** in the **Type** drop-down list. See Figure 5-21.

Figure 5-21 Tripwire

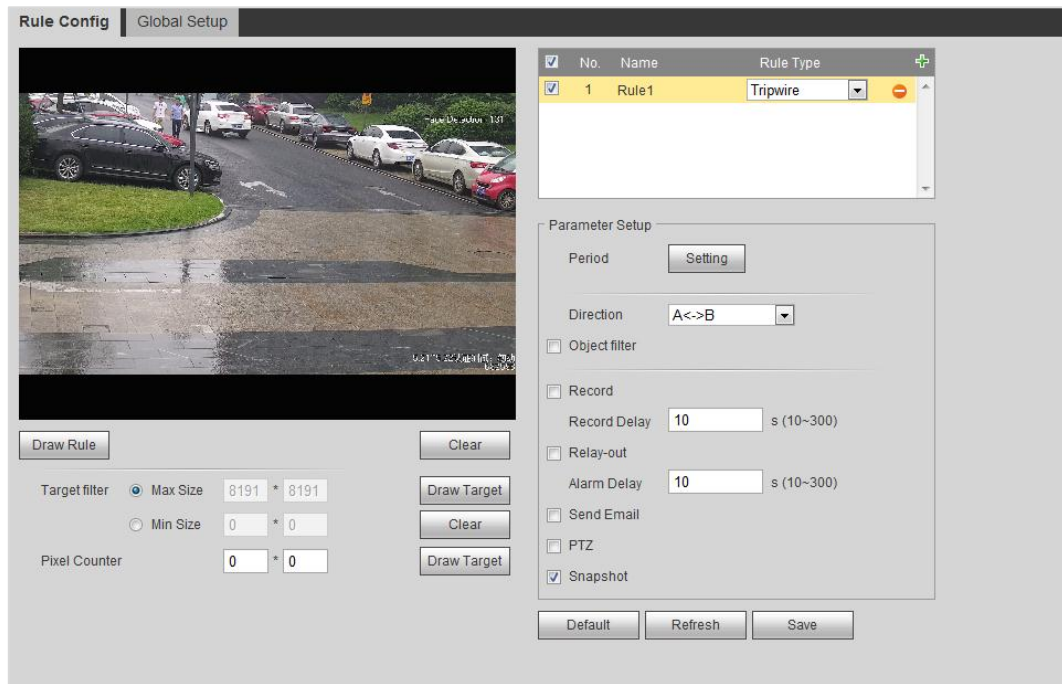

Step 3 Click **Draw Rule** to draw rule line in the image. Right click to finish drawing.
For drawing requirements on rules, see Table 5-7. After drawing rules, drag corners of the detection area to adjust the area range.

Table 5-7 Description of IVS analysis

Rule	Description
Cross fence detection	Draw two detection lines. It includes cross the fence up and down. When the center of the rectangular box is beyond the fence boundary drawn, the cross fence alarm is triggered. Requirements on fence: - No transparent fence, such as iron fence. - No short wall (with a height less than normal height of a person).
Tripwire	Draw a detection line.
Intrusion	Draw a detection area.
Abandoned object	- During the detection of abandoned object, the alarm is also triggered if pedestrian or vehicle stays for a long time. If the abandoned object is smaller than pedestrian and vehicle, set the target size to filter pedestrian and vehicle or properly extend the duration to avoid false report caused by transient staying of pedestrian. - During the detection of crowd gathering, false alarm might be triggered by low installation height, large percentage of single person in an image or obvious target occlusion, continuous shaking of device, shaking of leaves and tree shade, frequent opening or closing of retractable door, or dense traffic or people flow.
Moving object	
Fast moving	
Parking detection	
Crowd gathering	
Loitering detection	

Step 4 (Optional) Click **Draw Target** at the right side of **Target Filter**, and then draw the target in the image.

- When the crowd gathering is set, it is necessary to draw the minimum gathering area rather than setting the target filter. Click **Draw Target** to draw the minimum gathering area in the scene. The alarm is triggered when the number of people in

the detection area exceeds the minimum area and the duration.

- Click **Clear** to delete all drawn detection lines.
- Click **Draw Target** at the right side of **Pixel Counter**, and then press and hold the left mouse button to draw a rectangle, the **Pixel Counter** then displays its pixel.

Step 5 Set rule parameters for IVS. For details, see Table 5-8.

Table 5-8 Description of IVS parameters

Parameter	Description
Direction	Set the direction of rule detection. • When setting cross fence detection and tripwire, select A->B, B->A or A<->B • When setting intrusion, select Enters, Exits, or Enter&Exit.
Action	When setting intrusion action, select Appears or Cross.
Object tracking	Select Object Tracking to enable this function. When alarm is triggered by a moving object, select 1P+3 or 1P+5 as the object tracking display mode in the Live interface. Then the tracking scene follows the moving object until the object is beyond the camera range. For details, see "4.2.4 Window Adjustment Bar."  This function is available on select models.
Track linkage	Select Alarm Track and set the tracking time. When alarm is triggered, the device automatically tracks person or object that triggers the alarm. Tracking time is the duration of device automatically tracking the object.  Before enabling this function, you need to enable or disable the Alarm Track function under Smart Track accord to the actual need. • When you select Dome in Channel list, first disable Alarm Track under Smart Track. • When you select Panoramic Camera in Channel list, first enable Alarm Track under Smart Track.
AI Recognition	Select AI Recognition to enable this function. • When you select Person as the alarm target, alarm will be triggered when person that violates the rule is detected. • When you select Vehicle as the alarm target, alarm will be triggered when vehicle that violates the rule is detected.
Duration	• For abandoned object, the duration is the shortest time to trigger an alarm after an object is abandoned. • For missing object, the duration is the shortest time to trigger an alarm after an object is missing. • For parking detection, crowd gathering, or loitering detection, the duration is the shortest time to trigger an alarm after an object appears in the area.

Parameter	Description
Sensitivity	- For fast moving, sensitivity is related to the triggering speed. Lower sensitivity requires faster motion speed to trigger the alarm. - For crowd gathering, sensitivity is related to the alarm triggering time. It is easier to trigger the alarm with higher sensitivity.

Step 6 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 7 Click **Save**.

To view alarm information on the **Alarm** tab, you need to subscribe relevant alarm event. For details, see "5.1.2 Subscribing Alarm."

5.8 Setting Crowd Map

You can view crowd distribution on the map in real time for timely arming, so as to prevent stampede and other risk events.

5.8.1 Global Configuration

Set calibration parameters of panoramic camera.

Calibration Purpose

Determine corresponding relationship between 2D image captured by the camera and 3D actual object according to the rulers calibrated by the user and its corresponding actual distance.

Notes


Draw two rulers at a position close to and a position far away from the center area in the image to ensure small difference between actual vertical distance and the calibrated one of each point in the image after calibration. Arrange two persons to draw at each of the two positions in the monitoring scene.

Procedures

Step 1 Select **Setting > Event > Crowd Map > Global Setup**.

The **Global Setup** interface is displayed. See Figure 5-22.

Figure 5-22 Global setup (crowd distribution map)

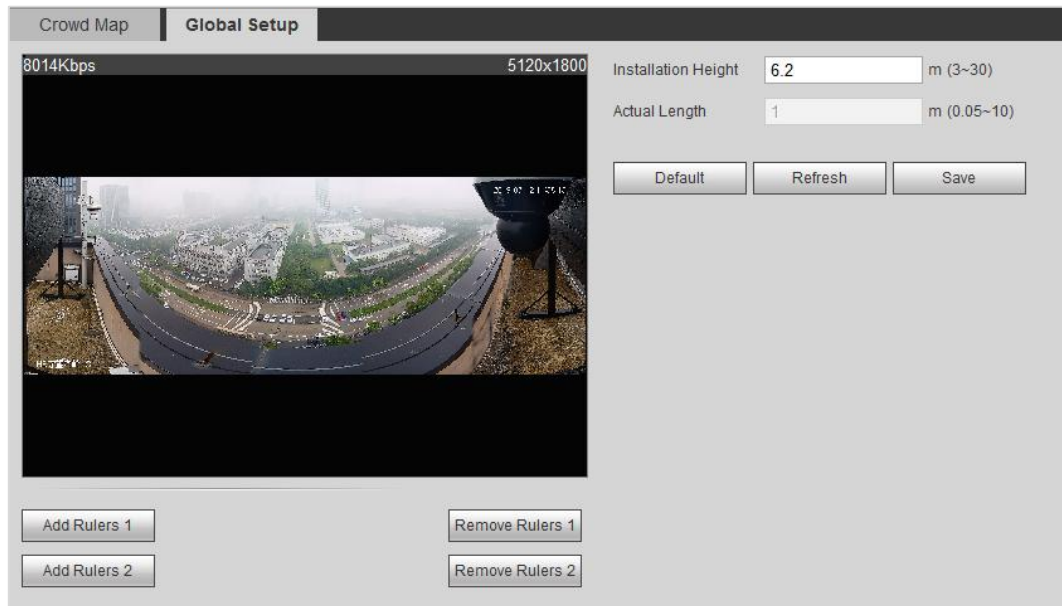

Step 2 Click **Add Rulers 1** and **Add Rulers 2** to respectively draw a ruler in the area.

Step 3 Enter the installation Height and the actual length according to the actual need.

Step 4 Click **Save**.

5.8.2 Rule Configuration

When the number of people or the crowd density in the detection area exceeds the set threshold, the system performs alarm linkage.

Precondition


- Select **Setting > Event > Smart Plan**, and enable **Crowd Map**.
- Select **Setting > Event > Crowd Map > Global Setup** to configure the crowd map.

Procedures

Step 1 Select **Setting > Event > Crowd Map > Crowd Map**.

The **Crowd Map** interface is displayed. See Figure 5-23.

Figure 5-23 Crowd map

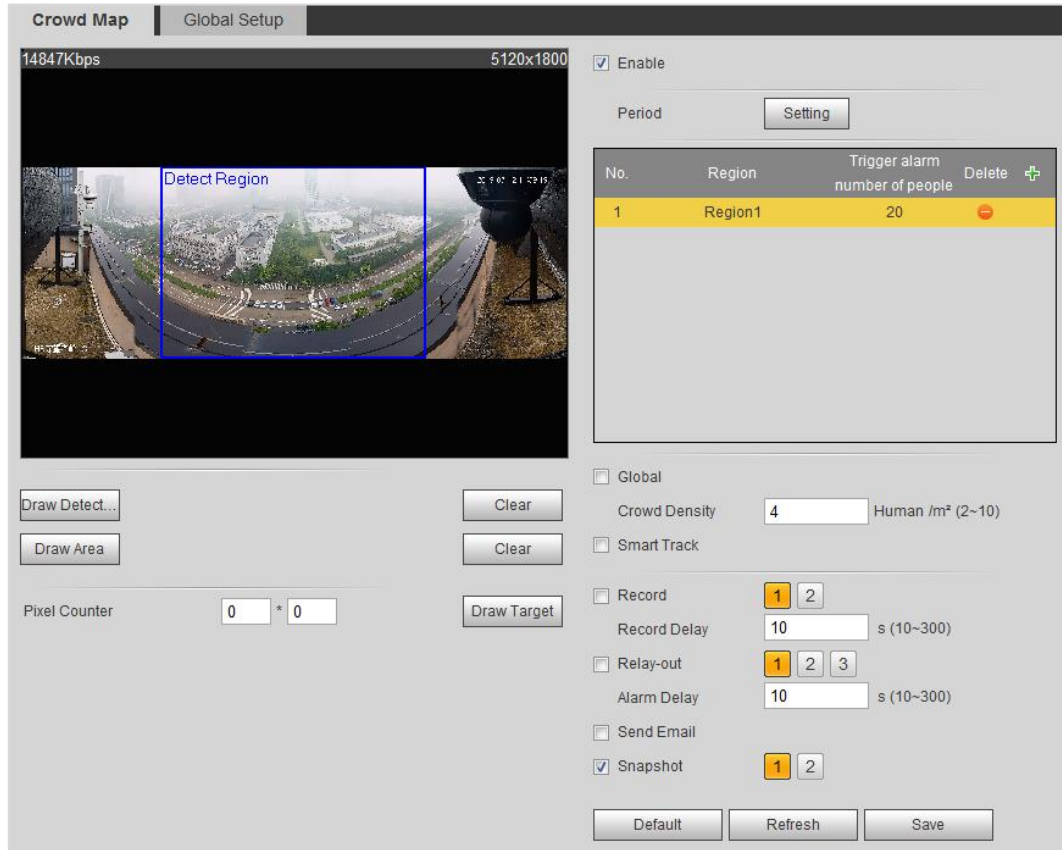

Step 2 Select **Enable**, and then the crowd map function is enabled.

Step 3 Click **Draw Detection Area** to draw global area for detecting crowd distribution in the image.

After drawing a global area, you can draw multiple local statistical areas in the global area according to the actual need. Follow these steps:

- 1) Click **+**, and then click **Draw Area** to draw local statistical area in global detection area.

You can draw up to eight local statistical areas.

- 2) Double-click the area name and the alarm people amount to set the area name for local statistical area and the threshold of the alarm people amount.

When the number of people in the statistical area exceeds the alarm people amount, the system performs alarm linkage. The default alarm people amount is 20.

Step 4 Set parameters. See Table 5-9.

Table 5-9 Description of crowd map parameters

Parameter	Description
Global	Select Global and set the crowd density threshold. The system detects crowd distribution in the global area. When the crowd density detected exceeds the defined threshold, the system performs alarm linkage.
Crowd Density	

Parameter	Description
Smart track	Select Smart Track, and when alarm is triggered by the panoramic camera, the dome camera automatically turns to the position where alarm is triggered. The tracking time is "idle time + five seconds." To set idle time, see "5.2.2 Enabling Alarm Track." Linkage rules: • Detect global alarm only: Turns to crowd with highest density. • Detect local alarm only: Turns to local area first triggering alarm. • Detect global alarm + one local alarm: First turns to local area, and then the crowd with highest density in case of no alarm in local area. • Detect global alarm + multiple local alarms: First turns to local area that triggers alarm first, and then the crowd with highest density in case of no alarm in local area.  Before enabling this function, you need to set smart track. See "5.2 Setting Smart Track."
Pixel Counter	Click Draw Target at the right side of Pixel Counter , and then press and hold the left mouse button to draw a rectangle, the Pixel Counter then displays its pixel.

Step 5 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 6 Click **Save**.

Verification

View crowd map on the **Live** interface. See Figure 5-24.

Figure 5-24 Crowd map (1)



Double-click the rendering area at the lower-right corner in the image to view crowd distribution in the area. See Figure 5-25.

Figure 5-25 Crowd map (2)




5.9 Setting Face Recognition

When face is detected or recognized in the detection area, the system performs alarm linkage and supports searching face detection and recognition results.

- **Face Detection:** When face is detected in the area, the system performs alarm linkage, such as recording and sending emails.
- **Face Recognition:** When face is detected in the area, the system compares the face image captured with the information in the face database, and links alarm according to the comparison result.

For the process of setting face recognition, see Figure 5-26.

Figure 5-26 Face recognition flowchart

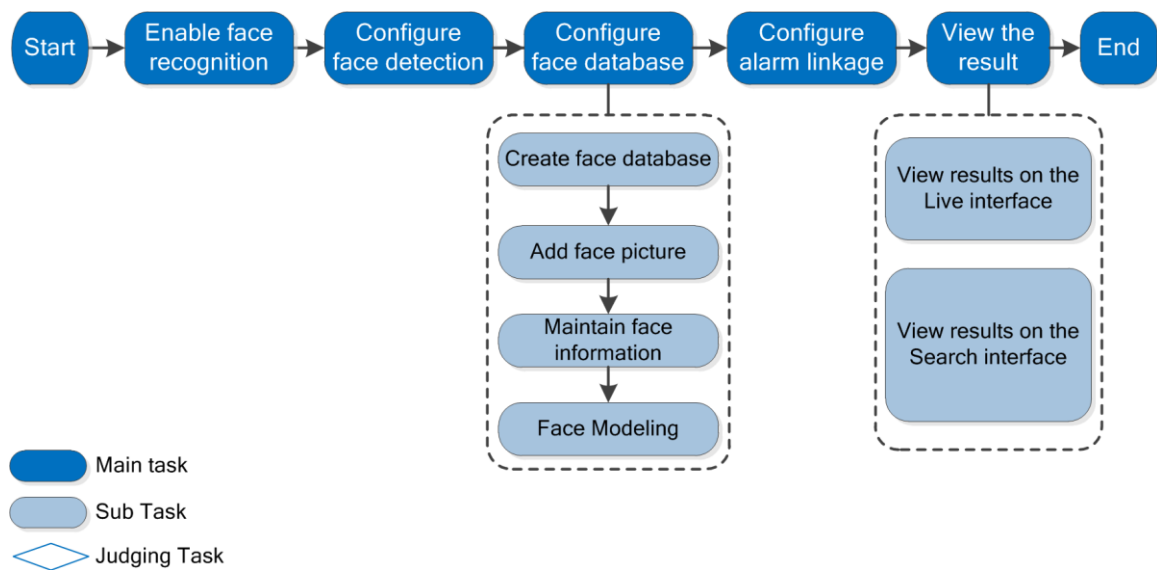

5.9.2 Setting Face Detection

When face is recognized in the detection area, the system performs alarm linkage.

Precondition


Enable **Face Recognition** from **Setting > Event > Smart Plan**.

Procedures

Step 1 Select **Setting > Event > Face Recognition > Face Detection**.

The **Face Detection** interface is displayed. See Figure 5-27.

Figure 5-27 Face detection

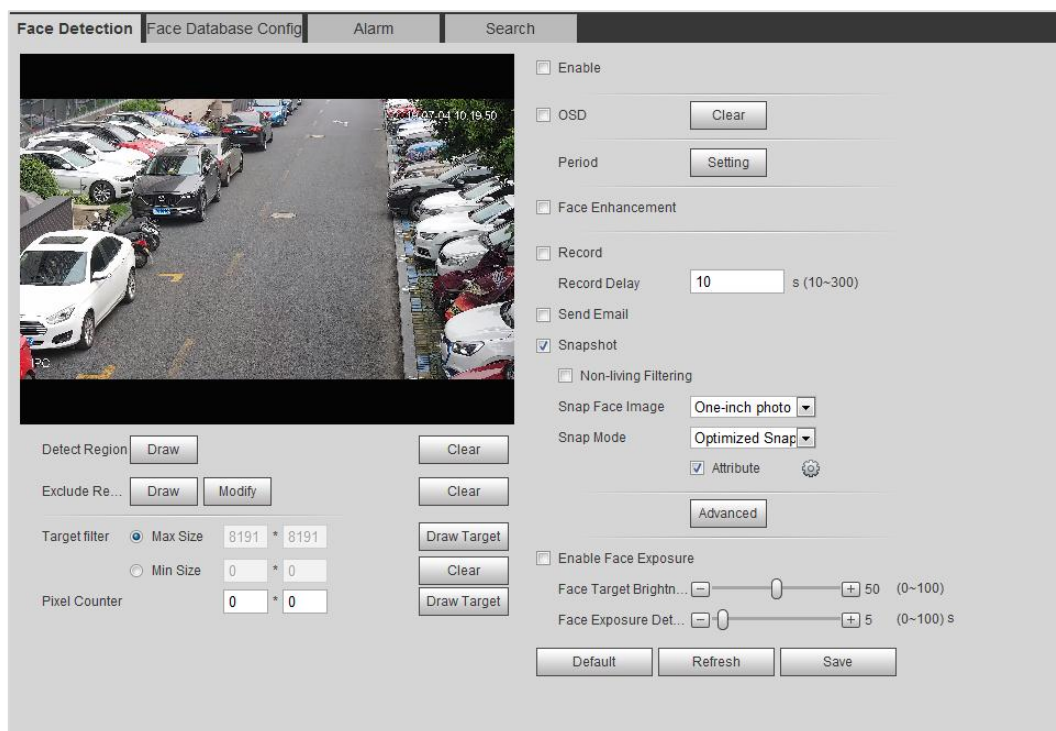

Step 2 Select **Enable** to enable the face detection.

Step 3 (Optional) Click **Draw** next to **Detect Region** to draw a face detection area in the image.

Step 4 (Optional) Click **Draw** next to **Exclude Region** to draw a non-face detection area in the **Detect Region**.

Step 5 (Optional) Select **Max Size** or **Min Size**, click **Draw Target** at the right side of **Target filter**, and then draw the target in the image.

Step 6 Set parameters. See Table 5-10.

Table 5-10 Description of face detection parameters

Parameter	Description
OSD	Select OSD , and the number people with face detected and recognized is displayed on the Live interface. Click Reset to recount.
Face Enhancement	Select Face Enhancement to preferably guarantee clear face with low stream.
Target Box Overlay	Select Non-living Filtering to add a target box to the face in the captured picture to highlight the face. The captured face picture is saved in SD card. Click the Snap Face Image tab to view the captured picture.
Snap Face Image	Set a range for snapping face image, including face picture and one-inch picture.

Parameter	Description
Snap Mode	- Optimized Snapshot: Capture the clearest picture within the set time after the device detects face. - Preferred Recognition: Repeatedly compare the face to the armed face database after the device detects face, and capture the picture most matching with the face database. It is recommended to use this mode in access control scene.  Click Advanced to set the preferred time.
Attribute	Select Attribute , and click  to set the display of face attribute for face detection.
Advanced	- Snapshot Angle Filter: Set snapshot angle to be filtered for face detection. - Snapshot Sensitivity: Set snapshot sensitivity for face detection. It is easier to detect face with higher sensitivity. - Optimized Time: Set a time period to capture the clearest picture after the device detects face.
Enable Face Exposure	Select Enable Face Exposure . When face is detected, the device can enhance brightness of the face to make face image clear.
Face Target Brightness	Set the face target brightness. It is 50 by default.
Face Exposure Detection Interval	Set the face exposure detection interval to prevent image flickering caused by constant adjustment of face exposure. It is five seconds by default.
Pixel Counter	Click Draw Target at the right side of Pixel Counter , and then press and hold the left mouse button to draw a rectangle, the Pixel Counter then displays its pixel.

Step 7 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 8 Click **Save**.

5.9.3 Setting Face Database

By setting face database, the face database information can be used to compare with the face detected.

Face database setting includes creating face database, adding face picture, and face modeling.


5.9.3.1 Creating Face Database

Face database includes face picture, face data and other information. It also provides comparison data for the captured face pictures.

Step 1 Select **Setting > Event > Face Recognition > Face Database Config**.

The **Face Database Config** interface is displayed. See Figure 5-28.


Figure 5-28 Face database config

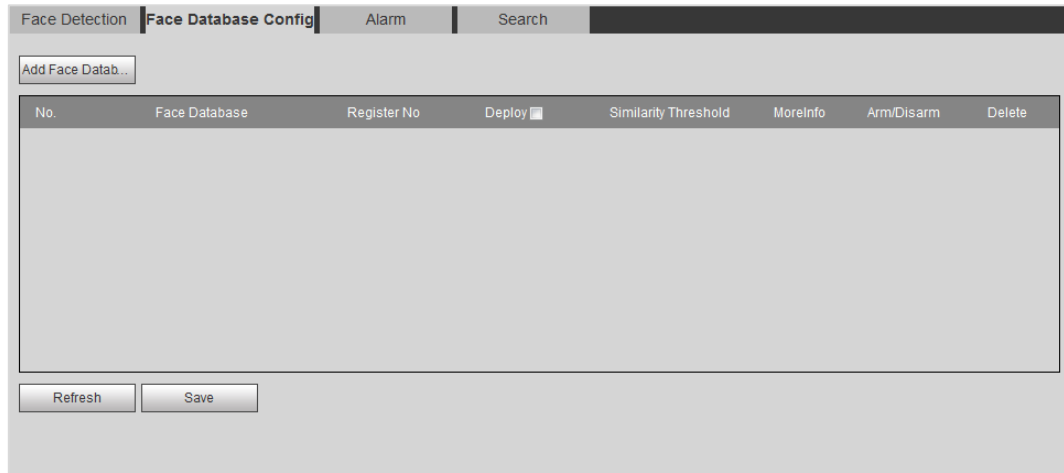

Step 2 Click **Add Face Database**.

The **Add Face Database** interface is displayed. See Figure 5-29.


Figure 5-29 Add face database

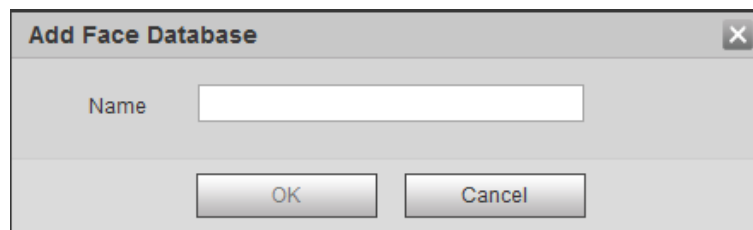

Step 3 Set the **Name** of face database.

Step 4 Click **OK**. See Figure 5-30.

Figure 5-30 Face database successfully added

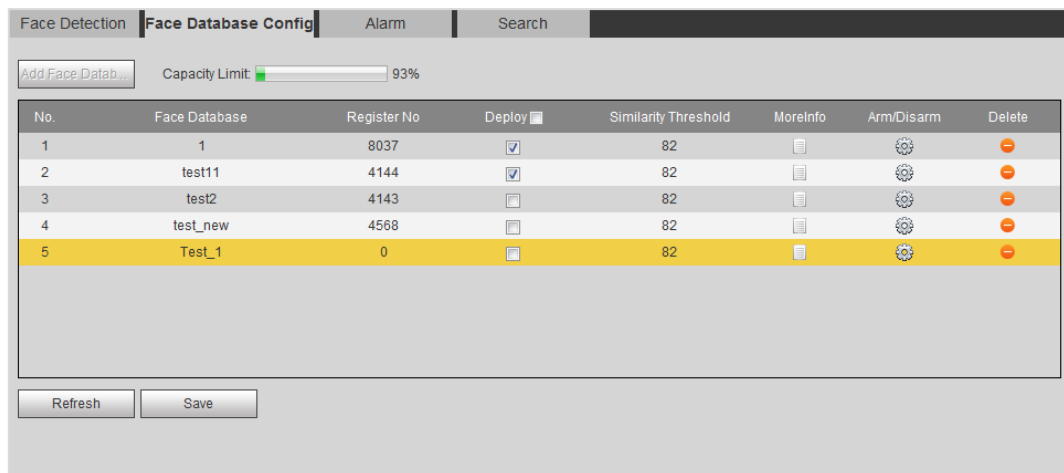

Step 5 Set parameters. See Table 5-11.

Table 5-11 Description of face database parameters

Parameter	Description
Deploy	Select Deploy , and the face database deployment is enabled. The captured face picture is compared to the armed face database.
Similarity Threshold	The detected face matches the face database only when the similarity between the detected face and the face feature in face database reaches the set similarity threshold. After this, the comparison result is displayed on the Live interface.

Parameter	Description
MoreInfo	Click MoreInfo to manage face database. You can search face images by setting search conditions, register personnel, and modify personnel information.
Arm/Disarm	Set the alarm time period. Alarm event will be triggered only within the defined time. See "5.1.1.1 Setting Period."
Delete	Delete the selected face database.

5.9.3.2 Adding Face Picture

Add face picture to the created face database. Single add and batch import are supported.

Requirements on face picture:

- Single face picture size is 50K–150K in JPEG or PNG. The resolution is less than 1080P.
- Face size is 30%–60% of the whole picture. Pixel should be more than 100 pixels between the ears.
- Taken in full-face view directly facing the camera without makeup, beautification, glasses, and fringe. Eyebrow, mouth and other face features must be visible.

5.9.3.2.1 Single Add

Add face pictures one by one. Select this way when you need to add a small number of face pictures.


Step 1 Select **Setting > Event > Face Recognition > Face Database Config**.

The **Face Database Config** interface is displayed.

Step 2 Click  next to the face database to be set.

The **Face Database Config** interface is displayed. See Figure 5-31.


Figure 5-31 Face database config

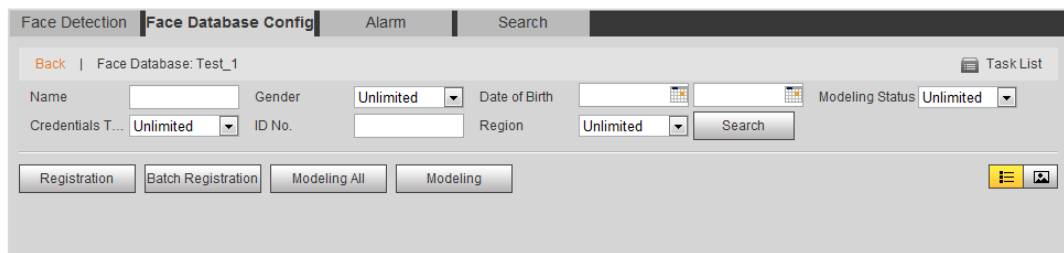

Step 3 Click **Registration**.

The **Registration** interface is displayed. See Figure 5-32.

Figure 5-32 Registration (1)

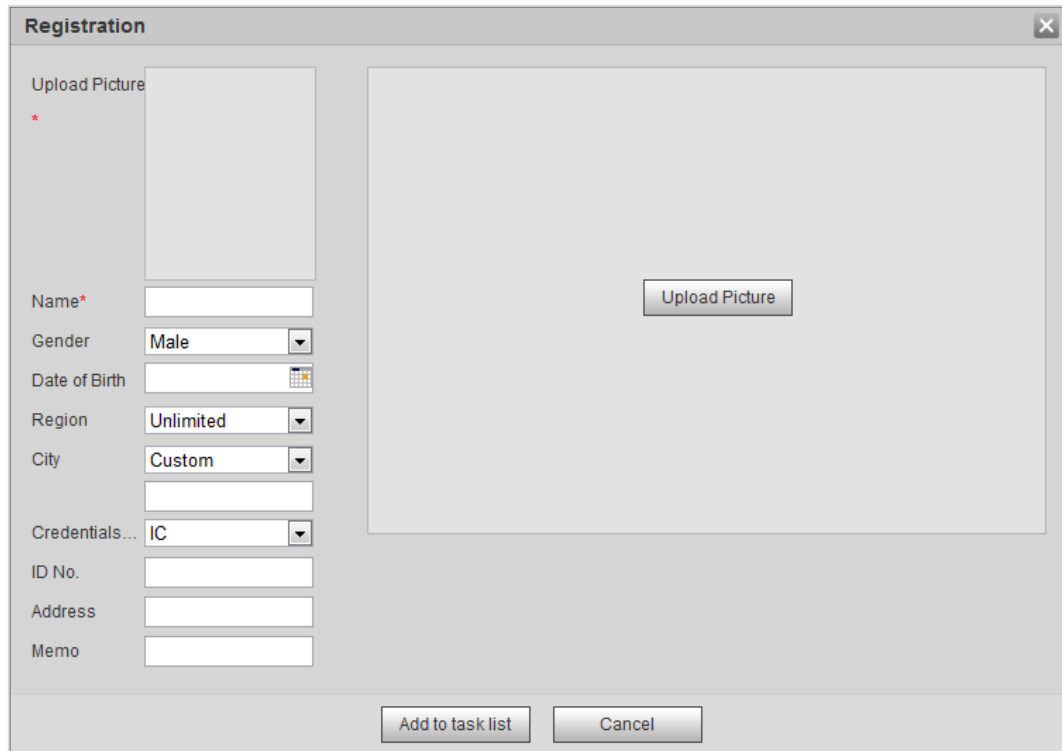


The screenshot shows a 'Registration' window with a sidebar on the left and a main area on the right. The sidebar contains the following fields: 'Upload Picture' with a red asterisk and a placeholder box; 'Name*' with a text input; 'Gender' with a dropdown menu set to 'Male'; 'Date of Birth' with a text input and a calendar icon; 'Region' with a dropdown menu set to 'Unlimited'; 'City' with a dropdown menu set to 'Custom' and a text input; 'Credentials...' with a dropdown menu set to 'IC'; 'ID No.' with a text input; 'Address' with a text input; and 'Memo' with a text input. The main area on the right is a large placeholder box with a button labeled 'Upload Picture' in the center. At the bottom of the window are two buttons: 'Add to task list' and 'Cancel'.

Step 4 Click **Upload Picture**, select a face picture to be uploaded, and click **Open**. The interface shown as Figure 5-33 is displayed.



You can manually select a face area. After uploading picture, select a face area and click **OK**. When there are multiple faces in a photo, select the target face and click **OK** to save face picture.

Figure 5-33 Registration (2)

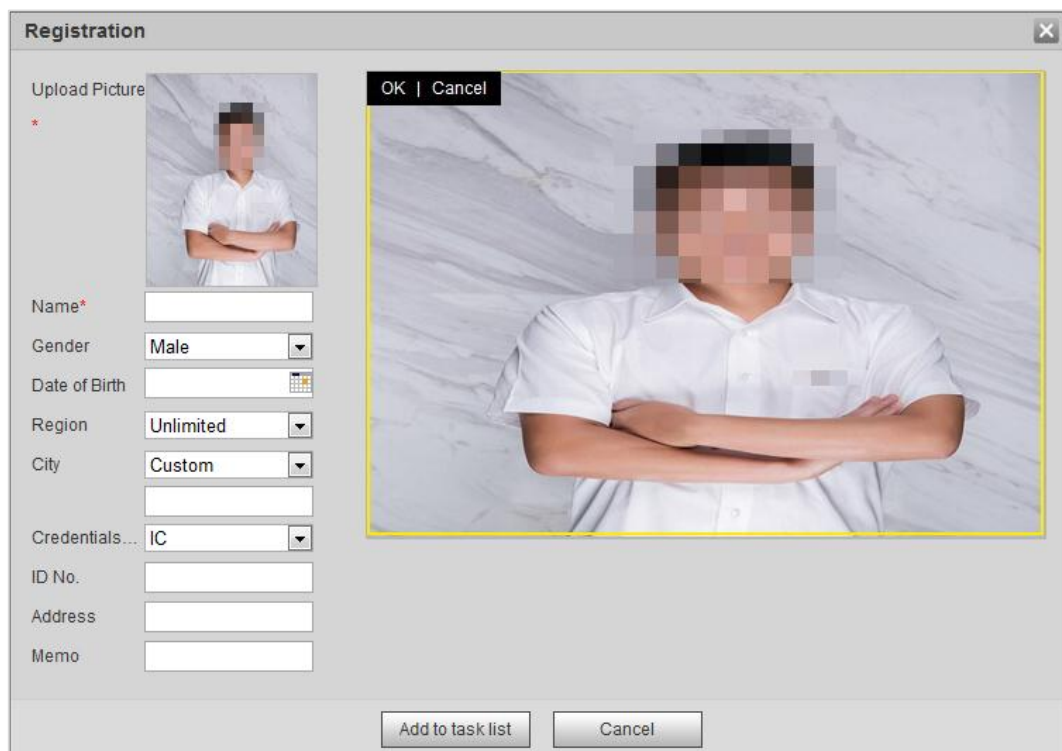

The screenshot shows the 'Registration' window after a picture has been uploaded. The 'Upload Picture' field now displays a small thumbnail of a person with their arms crossed. The main area on the right shows a larger version of the same photo. A yellow rectangular box is drawn around the person's face in the main photo. Above the main photo is a small black bar with the text 'OK | Cancel'. The sidebar fields and the bottom buttons ('Add to task list' and 'Cancel') remain the same as in Figure 5-32.


Step 5 Enter the information about face picture according to the actual need.

Step 6 Click Add to task list.

Step 7 Click **Task List1**, and then click **OK**.

The **Task List** interface is displayed. See Figure 5-34.

Figure 5-34 Task list (manually add)

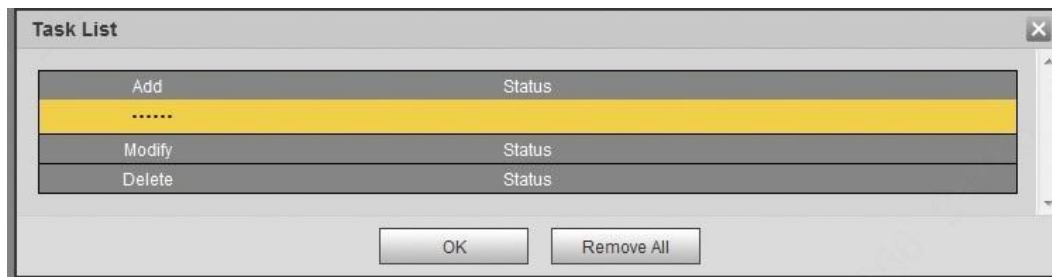

Click **Remove All** to remove all tasks by one click.

5.9.3.2.2 Batch Add

Import face pictures in batches. Select this way when you need to add a large number of face pictures.

Precondition

Before importing pictures in batches, name face pictures in a format of "Name#SGender#BDate of Birth#NRegion#TCredentials Type#MID No.jpg" (for example, "John#S1#B1990-01-01#T1#M0000). For naming rules, see Table 5-12.

Table 5-12 Description of naming rules for batch import parameters

Parameter	Description
Name	Enter a name, required.
Gender	Enter a figure, optional. "1" is male and "2" female.
Date of Birth	Enter a figure, optional. Format: yyyy-mm-dd, such as 2017-11-23.
Province	Enter Chinese name of a province, optional.
City	Enter Chinese name of a city, optional.
Credentials Type	Enter a figure, optional. "1" is ID card and "2" passport.
ID number	Enter ID No., optional.

Procedures

Step 1 Select **Setting > Event > Face Recognition > Face Database Config**.

The **Face Database Config** interface is displayed.


Step 2 Click  next to the face database to be set.

The **Face Database** interface is displayed.

Step 3 Click **Batch Registration**.


The **Task List** interface is displayed. See Figure 5-35.

Figure 5-35 Batch add

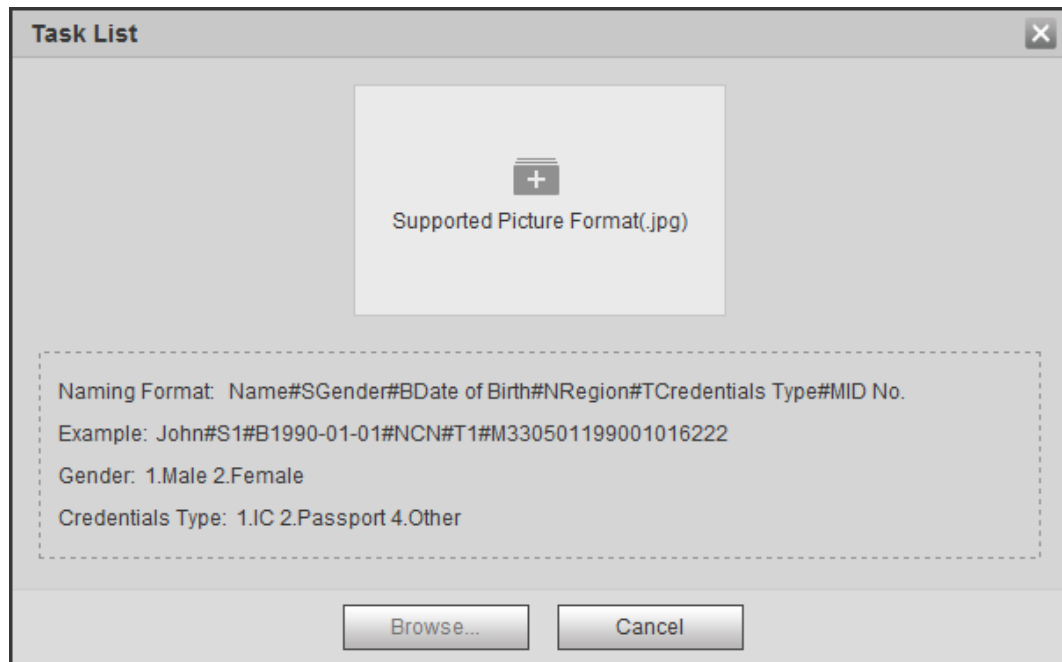

Step 4 Click  to select file path.


Figure 5-36 Batch import

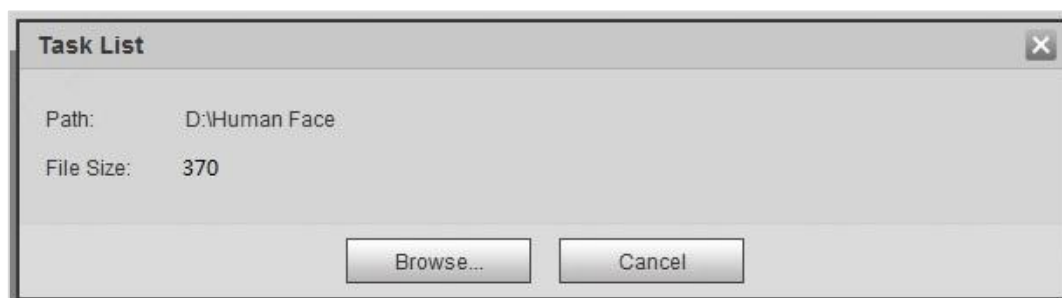

Step 5 Click **Browse**.

The interface shows import process. After import, the interface shown as Figure 5-37 is displayed.

Figure 5-37 Importing successfully

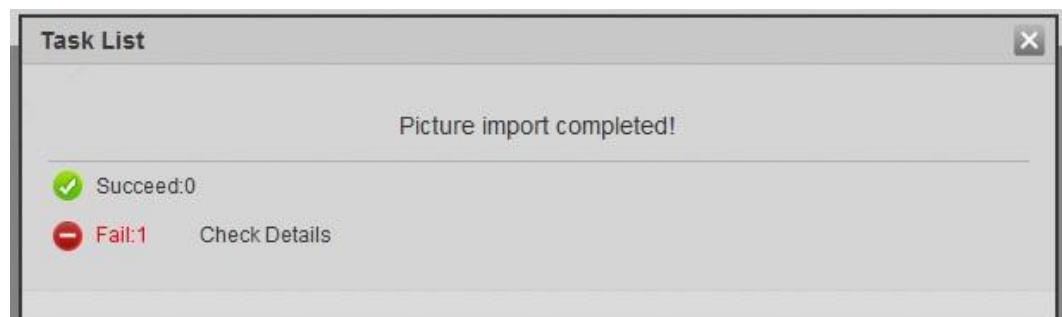

5.9.3.3 Managing Face Picture

 
Add face picture to face database, and then manage and maintain face picture to ensure correct information.

5.9.3.3.1 Modifying Face Information

Step 1 Go to the **Face Database Config** interface, set screening condition according to the actual need, and click **Search**.

The search result is displayed.

Step 2 Select the row where the face picture or the personnel information is located, and click



The **Registration** interface is displayed. See Figure 5-38.

Figure 5-38 Face information modification

The screenshot shows a 'Registration' window with a close button (X) in the top right corner. On the left, there is a vertical list of fields: 'Upload Picture' (with a red asterisk), 'Name*' (text input with '021819'), 'Gender' (dropdown), 'Date of Birth' (calendar icon), 'Region' (dropdown with 'Unlimited'), 'City' (dropdown with 'Custom'), 'Credentials...' (dropdown with 'Other'), 'ID No.', 'Address', and 'Memo'. Each field has a corresponding input area. To the right of these fields is a large rectangular area for an uploaded picture, with an 'Upload Picture' button centered within it. At the bottom of the window are two buttons: 'Add to task list' and 'Cancel'.

Step 3 Modify face information according to the actual need. Click **Add to task list**.

Step 4 Click **Task List1**, and then click **OK**.

5.9.3.3.2 Deleting Face Picture

Go to the **Face Database Config** Interface, and delete the created face picture.

- Single Delete: Select the row where the face picture or the personnel information is located, and click  or  to delete the face picture.
- Batch Delete: Select ☐ at the upper right corner of the face picture or ☐ of the row where the personnel information is located. Select information, click **Add to Deletion List**, **Task List1**, and then click **OK** to delete the selected face picture.
- Delete All: To view face picture in a list, click ☐ of the row where the serial number is located; or to view by picture, select **All** to select all face picture. Click **Add to Deletion**

List,  , and then click **OK** to delete all face pictures.

5.9.3.4 Face Modeling

Face recognition and other intelligent detection can be realized by using this function to extract face picture information and import the information to a database for establishing relevant face feature model.



- The more the selected face pictures are, the longer time the face modeling takes. Please wait patiently.
- During modeling, some intelligent detection functions (such as face recognition) are not available temporarily, and will be available after modeling.

Step 1 Select **Setting > Event > Face Recognition > Face Database Config**.

The **Face Database Config** interface is displayed.

Step 2 Click  next to the face database to be set.

The **Face Database Config** interface is displayed. See Figure 5-39.

Figure 5-39 Face database config

Step 3 Select a picture for modeling according to the actual need.



Click  to view face pictures in a list; click  to view by thumbnail.

- All Modeling
Click **Modeling All** to complete modeling of all face pictures in the face database.
- Selective Modeling
If there are many face pictures in the face database, set search condition and click **Search** to select face pictures for modeling. Then click **Modeling**.

5.9.4 Setting Face Recognition Alarm Linkage

When face recognition is succeeded or failed, the device links alarm out.

Step 1 Select **Setting > Event > Face Recognition > Alarm**.

The **Alarm** interface is displayed. See Figure 5-40.

Figure 5-40 Alarm (face recognition)

The screenshot shows the 'Alarm' tab in a software interface. At the top, there are four tabs: 'Face Detection', 'Face Database Config', 'Alarm', and 'Search'. The 'Alarm' tab is active. Below the tabs, there is a 'Face Database' section with a dropdown menu showing 'Please add face databa'. Below this, there is a 'Relay-out' section with a checkbox and a dropdown menu showing 'Alarm Channel1'. Below that, there is an 'Alarm Rule' section with two checkboxes: 'Face Recognition Succeeded' and 'Face Recognition Failed'. Below the checkboxes, there is an 'Alarm Delay' section with a text input field showing '1' and a unit 's (1~300)'. At the bottom, there are two buttons: 'Refresh' and 'Save'.

Step 2 Select a Face Database and an Alarm Rule.

- Face Recognition Succeeded: When the detected face matches the face database, the device links alarm out.
- Face Recognition Failed: When the detected face fails to match the face database, the device links alarm out.

Step 3 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.

5.9.5 Viewing Face Recognition Result


View face recognition result on the **Live** interface or by the query function.

5.9.5.1 Viewing in the Live Interface

View face recognition result on the **Live** interface. See Figure 5-41.

- Face recognition result is displayed at the left side and the captured face picture and attribute information at the right side.
- Click a face picture in the display area, and the information is displayed.

Figure 5-41 Face recognition result

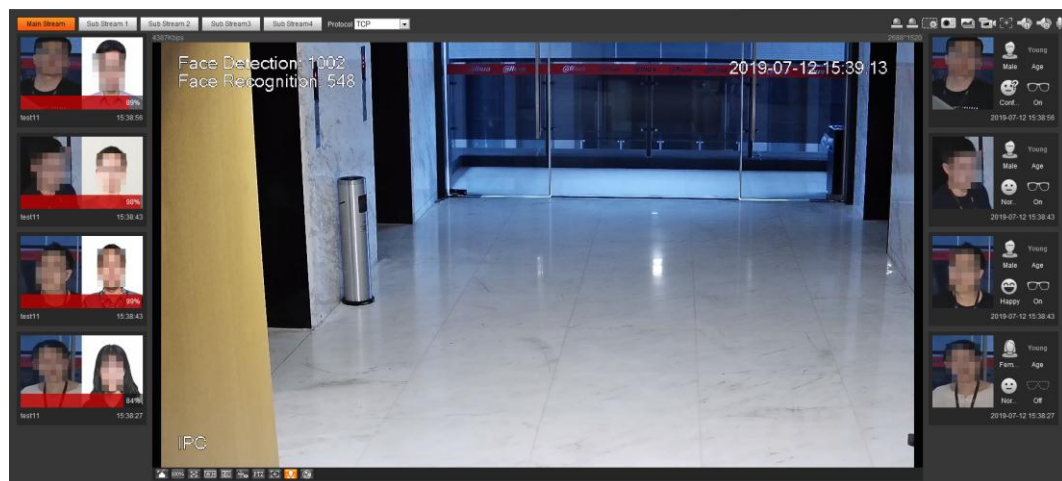

5.9.5.2 Viewing by Search Function

Query face recognition or face snapshot result. Take face recognition query as an example.

Precondition


You have installed an SD card in the device.

Procedures

Step 1 Select **Setting > Event > Face Recognition > Search**.

The **Search** interface is displayed. See Figure 5-42.

Figure 5-42 Face recognition search

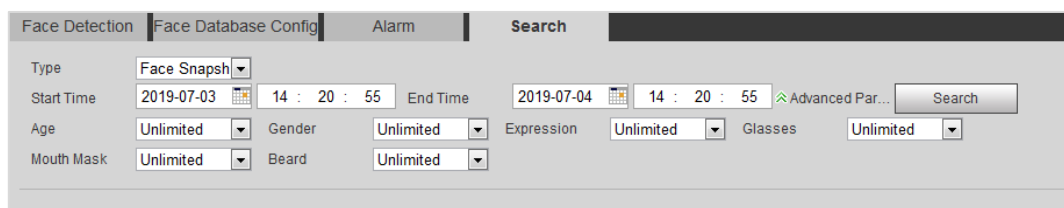

Step 2 Select **Face Recognition** for **Type**, enter the **Start Time** and the **End Time**, and click **Search**.

The result is displayed. See Figure 5-43.

- Click **Advanced Parameters** to set more search conditions.
- Click the search result to view details. See Figure 5-44.

Figure 5-43 Search result (face recognition)

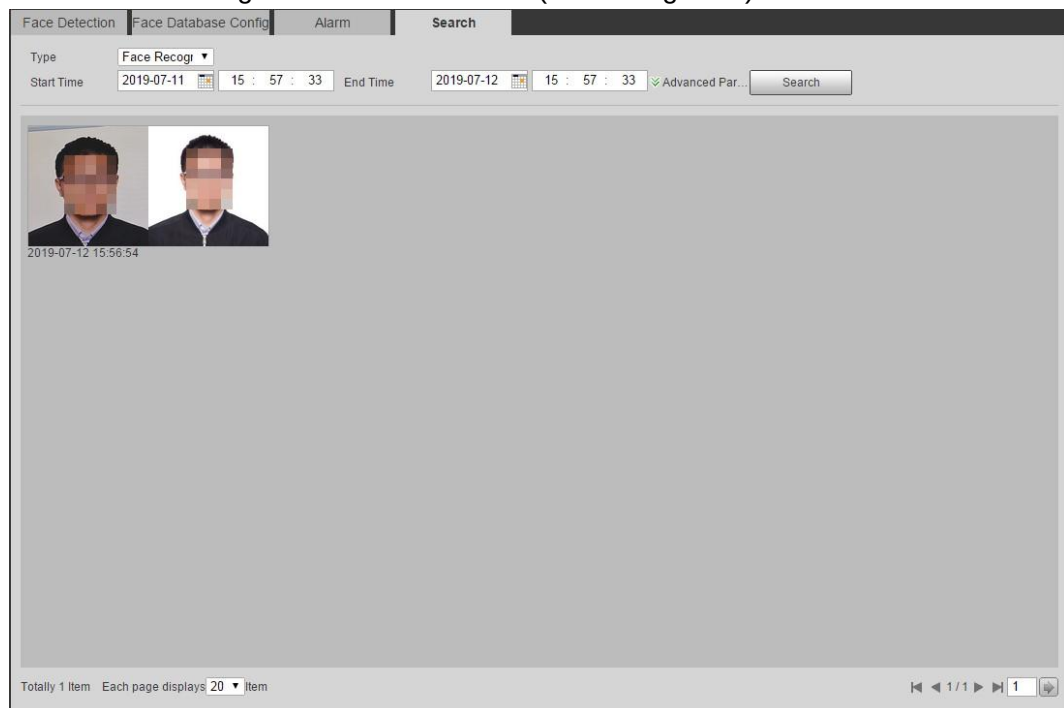


Figure 5-44 MoreInfo (face recognition)

The screenshot shows a window titled "MoreInfo" with a close button in the top right corner. The window is divided into two main sections. The top section, labeled "Alarm Info", contains the following text: "Face Database: [blurred]", "Similarity: 99%", and "Time: 2019-07-12 15:56:54". The bottom section, labeled "Attribute", contains a small portrait of a man and a list of attributes: "Age: Young", "Gender: Male", "Expression: Confused", "Glasses: General", "Mouth Mask: No", and "Beard: No". Below this, there is another section labeled "MoreInfo" which contains another small portrait of the same man and a list of personal details: "Name: Jhon", "Date of Birth: 1991-05-20", "Gender: Male", "Region: Brazil", "City: Brasilia", "Credentials Type: Passport", "ID No.: PE1234478", "Address: Unknown", and "Memo: Unknown".

Alarm Info	
Face Database:	[blurred]
Similarity:	99%
Time:	2019-07-12 15:56:54

Attribute	
	Age: Young Gender: Male Expression: Confused Glasses: General Mouth Mask: No Beard: No

MoreInfo	
	Name: Jhon Date of Birth: 1991-05-20 Gender: Male Region: Brazil City: Brasilia Credentials Type: Passport ID No.: PE1234478 Address: Unknown Memo: Unknown

5.10 Setting Face Detection

When a face is detected in the detection area, the system performs alarm linkage.

Precondition


Select **Setting > Event > Smart Plan**, and then enable **Face Detection**.

Procedures

Step 1 Select **Setting > Event > Face Detection**.

The **Face Detection** interface is displayed. See Figure 5-45.

Figure 5-45 Face detection

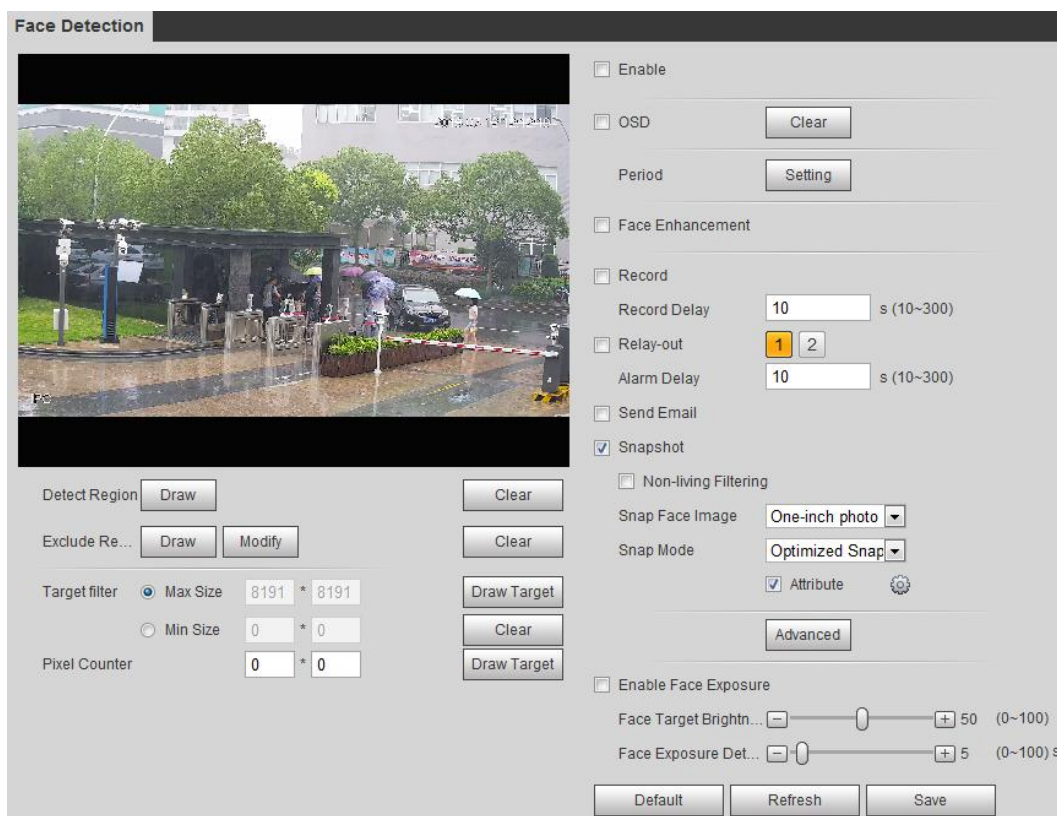

Step 2 Select **Enable** to enable the face detection.

Step 3 (Optional) Click **Draw** next to **Detect Region** to draw a face detection area in the image.

Step 4 (Optional) Click **Draw** next to **Exclude Region**, and then draw an area excluding face detection in the image.

Step 5 (Optional) Select **Max Size** or **Min Size**, click **Draw Target** at the right side of **Target filter**, and then draw the target in the image.

Step 6 Set parameters. See Table 5-13.

Table 5-13 Description of face detection parameters

Parameter	Description
OSD	Select OSD . The number of detected faces is displayed on the preview interface. Click Reset to recount.
Face Enhancement	Select Face Enhancement to preferably guarantee clear face with low stream.
Target Box Overlay	Select Non-living Filtering to add a target box to the face in the captured picture to highlight the face. The snapshot is saved in the SD card and the preset path for monitoring snapshots. For details, see "4.5.2.5 Path".
Non-living Filtering	Filter non-living faces in the image, such as a face picture.
Snap Face Image	Set a range for snapping face image, including face picture and one-inch picture.

Parameter	Description
Snap Mode	• Instant Snap: The device snaps a face immediately when detecting it. • Optimized Snapshot: Capture the clearest picture within the set time after the device detects face. • Quality Priority: The device snaps a face only when detecting that the snapped face picture has higher quality than the quality threshold.  Click Advanced to set Optimized Time and Quality Threshold.
Attribute	Select Attribute , and click  to set the display of face attribute for face detection.
Advanced	• Snapshot Angle Filter: Set snapshot angle to be filtered for face detection. • Snapshot Sensitivity: Set snapshot sensitivity for face detection. It is easier to detect face with higher sensitivity. • Quality Threshold: If you select Quality Threshold, and then select Quality Priority for Snap Mode, the device detects the face attribute only when the snapped face picture has higher quality than the quality threshold. • Optimized Time: Set a time period to capture the clearest picture after the device detects face.
Enable Face Exposure	Select Enable Face Exposure . When face is detected, the device can enhance brightness of the face to make face image clear.
Face Target Brightness	Set the face target brightness, 50 by default.
Face Exposure Detection Interval	Set the face exposure detection interval to prevent image flickering caused by constant adjustment of face exposure. it is five seconds by default.
Pixel Counter	Click Draw Target at the right side of Pixel Counter , and then press and hold the left mouse button to draw a rectangle, the Pixel Counter then displays its pixel.

Step 7 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 8 Click **Save**.


To view alarm information on the **Alarm** tab, you should subscribe relevant alarm event. For details, see "5.1.2 Subscribing Alarm."

Verification

The face detection result is displayed on the preview interface. See Figure 5-46.

- The face pictures snapped in real time and their attribute information are displayed.
- Click a face picture in the display area, and the information is displayed.

Figure 5-46 Face detection result

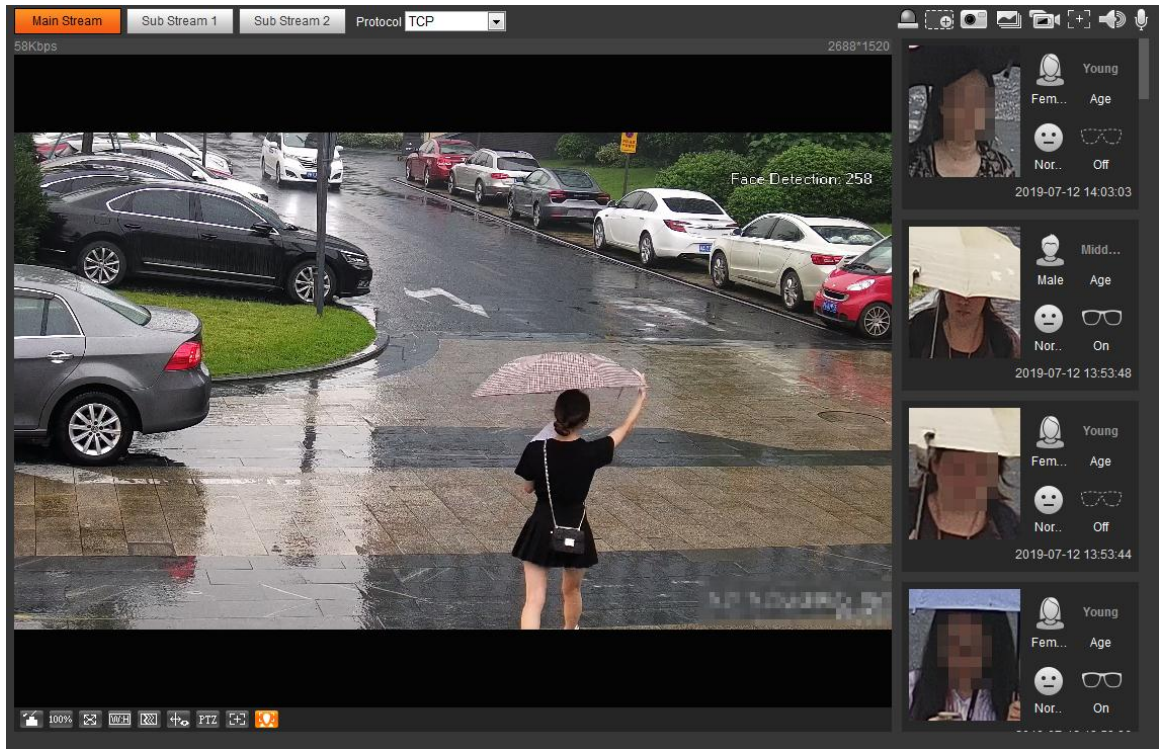

5.11 Setting People Counting

Make statistics on people flow and view people counting data in report form.

5.11.1 People Counting

The system counts the people flow into and out of the detection area. When the counted people flow exceeds the preset value, the system performs alarm linkage.

Precondition


Select **Setting** > **Event** > **Smart Plan**, and then enable **People Counting**.

Procedures

Step 1 Select **Setting** > **Event** > **People Counting**.

The **People Counting** interface is displayed. See Figure 5-47.

Figure 5-47 People counting

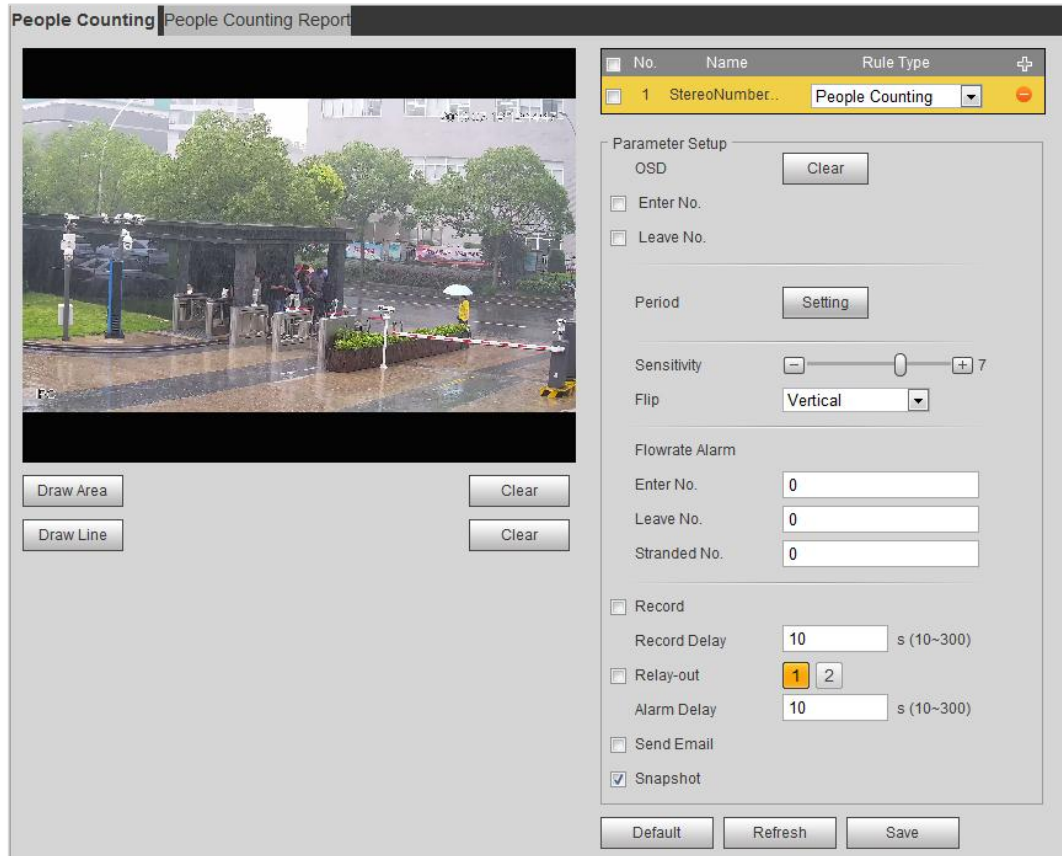

Step 2 Click  to add the people counting function.

Step 3 Double-click the name to modify the rule name. Select **People Counting** or **In Area No.**

- **People Counting:** The system counts the people flow into and out of the detection area. When the counted number of people who enter/leave/stay in the area exceeds the preset value, the system performs alarm linkage.
- **Region People Counting:** The system counts the people flow in the detection area and the duration that people stay in the area. When the counted number of people in the detection area or the stay duration exceeds the preset value, the system performs alarm linkage. Only some devices support this function.

Step 4 Click **Draw Area** to draw a detection area in the image.

When setting **People Counting**, you need to draw direction lines.

Step 5 Set parameters. See Table 5-14.

Table 5-14 Description of people counting parameters

Parameter	Description
OSD	Select OSD or select Enter No. or Leave No. under OSD to display the people count in the image. Click Clear to clear the count.
Flip	Set the viewing angle of the image as Inclined or Vertical .
Flowrate Alarm	Set Enter No. , Leave No. , and Stranded No. The alarm is triggered when the set value is reached.
Regional People Number Statistics Alarm	Set the number of people in the people counting region. When the people count reaches the threshold or the stay duration exceeds the preset value, the alarm is triggered.

Step 6 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 7 Click **Save**.

To view alarm information on the **Alarm** tab, you should subscribe relevant alarm event.
For details, see "5.1.2 Subscribing Alarm."

5.11.2 Viewing People Counting Report

Generate people counting data in report form.

Step 1 Select **Setting > Event > People Counting > People Counting Report**.

The **People Counting Report** interface is displayed. See Figure 5-48.

Figure 5-48 People counting report

The screenshot shows the 'People Counting Report' interface. At the top, there's a tab labeled 'People Counting Report'. Below it, the 'Rule' is set to 'In Area No.'. The 'Report Type' is 'Daily'. The 'Begin Time' is '2019-07-12 00:00:00' and the 'End Time' is '2019-07-12 12:00:00'. There's a note: '*Daily report max range is 24 hours.' The 'Stranding Time' has radio buttons for '5s', '30s', and '60s', with '5s' selected. The 'Report Type' has radio buttons for 'Bar Chart' and 'Line Chart', with 'Bar Chart' selected. There are 'Search' and 'Export' buttons. At the bottom, there's a bar chart with the word 'Report' below it.

Step 2 Set search conditions. For details, see Table 5-15.

Table 5-15 Description people counting report parameters

Parameter	Description
Rule	Select the statistical rule of the report to be queried.
Credentials Type	Statistical period of people counting report. - Select People Counting to view daily report, monthly report, or annual report. - Select In Area No. to view daily report or monthly report.
Begin Time	View the begin time and the end time of people counting.
End Time	
People Counting Direction	In and out directions of people counting report. You can select Entrance or Leave . Select Display Data , and the statistical quantity is displayed on the report.
Stranding Time	After setting Regional People Number Statistics , select 5s , 30s , or 60s .

Parameter	Description
Report Type (Bar Chart/Line Chart)	Report type includes bar chart or line chart.

Step 3 Click **Search** to complete the report.

Click **Export** to export the report in .bmp or .csv format.

5.12 Setting Heat Map

Make statistics on the cumulative density of object movement and view heat map in report.

5.12.1 Heat Map

With the heat map function, the system detects the distribution of dynamically living objects in the target area within a certain period of time and displays the distribution on a heat map. Color varies from blue to red. The lowest heating value is in blue, and the highest heating value in red.

When mirroring occurs on the device or the viewing angle changes, original data on the heat map will be cleared.

Precondition


Select **Setting > Event > Smart Plan**, and then enable **Heat Map**.

Procedures

Step 1 Select **Setting > Event > Heat Map > Heat Map**.

The **Heat Map** interface is displayed. See Figure 5-49.

Figure 5-49 Heat map

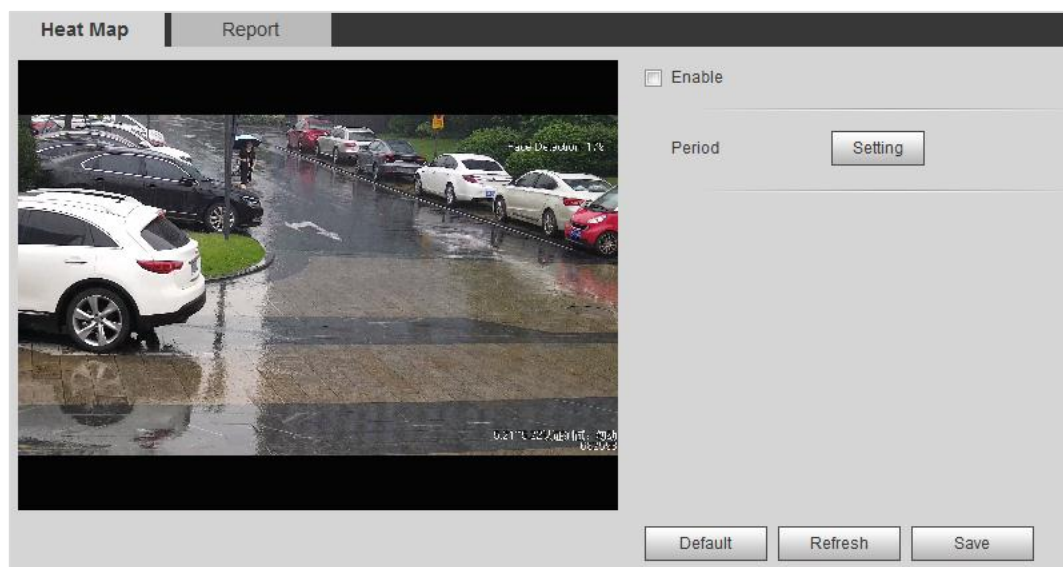

Step 2 Select **Enable** to enable the heat map function.

Step 3 Set **Period**. For details, see "5.1.1.1Setting Period."

Step 4 Click **Save**.


5.12.2 Viewing Heat Map Report

The system can export heat map data as a report.

Step 1 Select **Setting > Event > Heat Map > Report**.

The **Report** interface is displayed. See Figure 5-50.

Figure 5-50 Heat map report

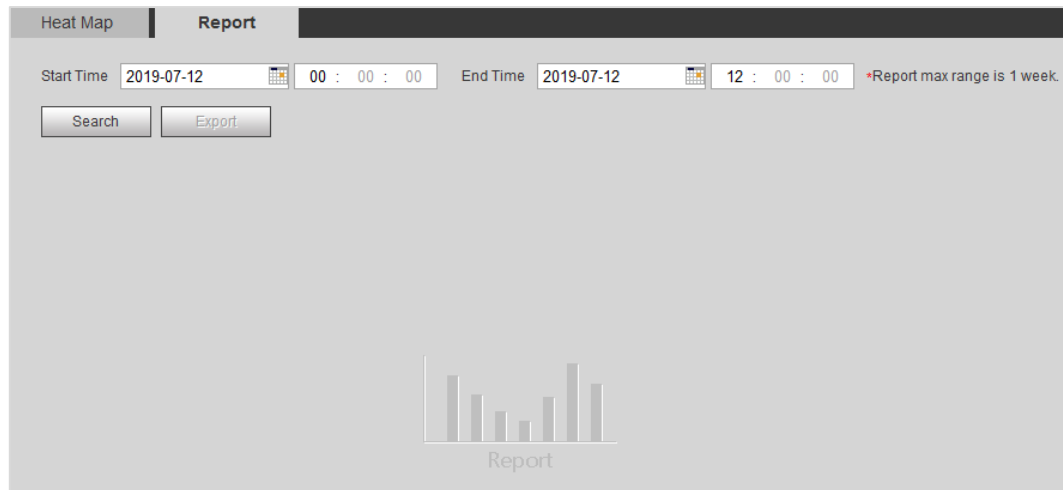

Step 2 Set the start time and end time.

Only some devices support heat map sequence numbers.

Step 3 Click **Search** to complete the report.

Click **Export** to export the statistical report.

5.13 Setting Stereo Analysis

Stereo analysis includes rule configuration and calibration configuration.

5.13.1 Setting Rules for Stereo Analysis

The rules for stereo analysis include **Fall Detection**, **Violence Detection**, **People No. Error**, **People Approaching Detection**, and **Strand Detection**.

For the functions and applications of the rules, see Table 5-16.

Table 5-16 Description of stereo analysis function

Rule	Function	Applicable Scene
Fall Detection	When walking or standing people in the detection area suddenly fall down on the ground, the alarm is triggered.	Park and hall.

Rule	Function	Applicable Scene
Violence Detection	When people walking or standing inside or outside the self-service hall or ATM protection cabin have violent movement (such as smashing ATM machine) or fighting, the alarm is triggered.	Bank halls and ATM protection cabins
People No. Error (Functions of People No. Error vary from devices.)	With the People No. Error function, the device can recognize the real-time number of people in the monitoring area. When the number of people exceeds the preset value, the alarm is triggered.	Scenic spots and banks
	When a recording device is used, the device that monitors the front of a classroom needs to be configured with this function. With this function, the teacher's actions can be traced and enlarged. When the number of people in the image is not 1, the whole image is displayed.	Classrooms
People Approaching Detection	When the distance between walking or standing people is too close, the alarm is triggered.	Banks and educational institutions
Strand Detection	When people in the monitoring area stay longer than the preset stranding time, the alarm is triggered.	Banks and parks

Precondition

Select **Setting > Event > Smart Plan**, and then enable **Stereo Analysis**.

Procedures


The following describes configuration for stereo analysis rule. Take fall detection as an example.

Step 1 Select **Setting > Event > Stereo Analysis > Stereo Analysis**.

The **Stereo Analysis** interface is displayed.

Step 2 Click , double-click the name to modify the rule name, and set **Rule Type** as **Fall Detection**. See Figure 5-51.

Figure 5-51 Fall detection

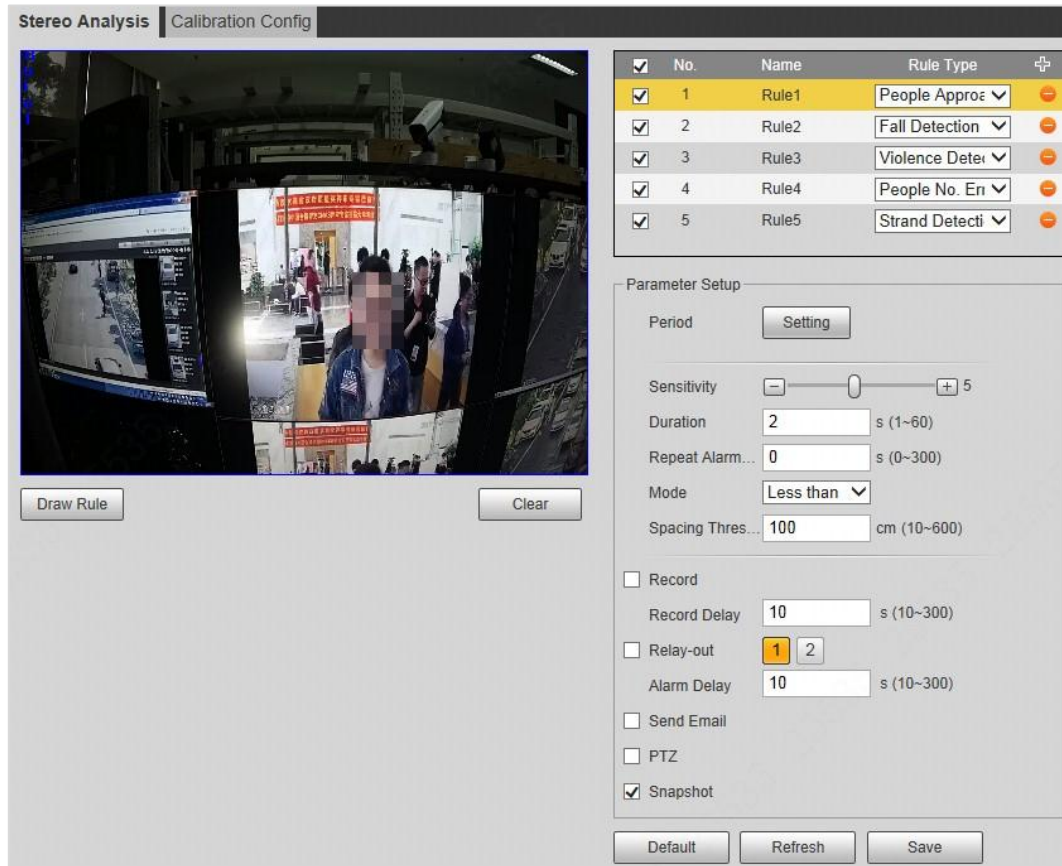

Step 3 (Optional) Click **Clear** to delete the default rule box, and then click **Draw Rule** to draw a detection area in the image.

- When selecting People No. Error for a recording device, draw the front of a classroom as the detection area.
- When selecting Stand Detection function for a recording device, draw the students area as the detection area.
- If no special requirements for other devices, use the default box of the system (draw the full screen).

Step 4 Set parameters. See Table 5-17.

Parameters for recording device and common device are different. The actual interface shall prevail.

Table 5-17 Description of stereo analysis parameters

Parameter	Description
Sensitivity	Set the alarm-triggered sensitivity. Higher sensitivity is more easier to trigger alarm.
Alarm People Amount	To set People No. Error function, set Alarm People Amount and Type . Alarm type includes Greater than , Equal to , Less than , and Unequal to .
Alarm Type	When the real-time number of people in the detection area is greater than, equal to, less than, or unequal to Alarm People Amount , the alarm is triggered.

Parameter	Description
Duration	- For People Approaching Detection, the alarm is triggered when the time for people approaching reaches Duration. - For Fall Detection, the alarm is triggered when the time for people falling down on the ground reaches Duration. - For People No. Error, the alarm is triggered when the number of people in the area meets Alarm People Amount and Type, and the time reaches Duration.
Close-up Mode	- For people No. error function for a recording device, set Close-up Mode to Tracking Mode. Then the camera traces the walking trajectory of the teacher. You can view the tracking effect through sub stream 1 of the preview interface. When the number of people on the image is not equal to 1, the full screen is displayed. - When setting the stand detection function for a recording device, set Close-up Mode to Fixed Mode. Then sub stream 1 enlarges and displays the image of standing people. When the number of standing people is not 1, the full screen is displayed.  Before viewing the tracking or enlargement effect through sub stream 1, ensure that sub stream 1 is enabled and the resolution of the main stream and sub stream is 1080P. For the settings related to the main and sub streams, see "4.5.2.1 Video."
Repeat Alarm Time	After the alarm is triggered, if the status lasts for the time specified in Repeat Alarm Time, the alarm is triggered again.  0 is to disable the repeat alarm repetition function.
Strand Time Threshold	For Strand Detection, you need to set the strand time threshold. The alarm is triggered when people in the area stay longer than the preset strand time threshold.

Step 5 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 6 Click **Save**.

- Select **Setting > Event > Stereo Analysis > Ratio Calibration** to finish ratio calibration for a recording device, and then the detection rule becomes valid. Select **Setting > Event > Stereo Analysis > Calibration Config** to finish calibration configuration for other devices, and then the detection rule becomes valid.
- To view alarm information on the **Alarm** tab, you should subscribe relevant alarm event. For details, see "5.1.2 Subscribing Alarm."

5.13.2 Calibration Configuration

After setting the rule configuration for stereo analysis, set the installation height and angle of the device through calibration configuration.

- Calibration mode 1: Directly enter device installation height and angle according to the actual conditions.
- Calibration mode 2: Draw a area in the image to automatically calculate the installation height and the angle.

Precondition

You have set at least one rule under **Setting > Event > Stereo Analysis > Stereo Analysis**.


Procedures

Take the calibration mode 2 as an example.

Step 1 Select **Setting > Event > Stereo Analysis > Calibration Config**.

The **Calibration Config** interface is displayed, see Figure 5-52.

Figure 5-52 Calibration config (stereo analysis)

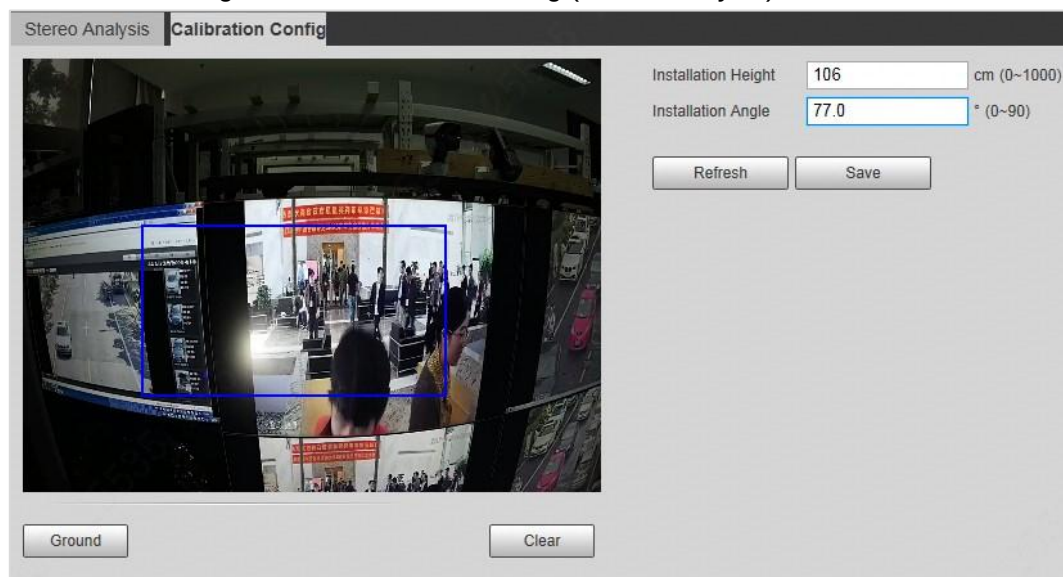

Step 2 Click **Clear** to clear the default calibration box.

Step 3 Click **Ground** to draw a rectangular box in the image.

Ground should be on the same plane and as big as possible for calibration.

Step 4 Click **Save**, and then the device calculates its height above the ground and the angle it forms with the ground.

If the height and angle are quite different from the actual situation, repeat Step 2–Step 4.

5.14 Setting ANPR

You can use this function to extract information about motor vehicles, non-motor vehicles, and people from images and display related attributes on the preview interface.

5.14.1 Scene Configuration

Configure ANPR scene, including non-motor vehicle detection, local word setting, alarm linkage, and lane drawing.

Precondition


Select **Setting > Event > Smart Plan**, and then enable **ANPR**.

Procedures

Step 1 Select **Setting > Event > ANPR > Scene Set**.

The **Scene Set** interface is displayed. See Figure 5-53.

Figure 5-53 Scene set (ANPR)

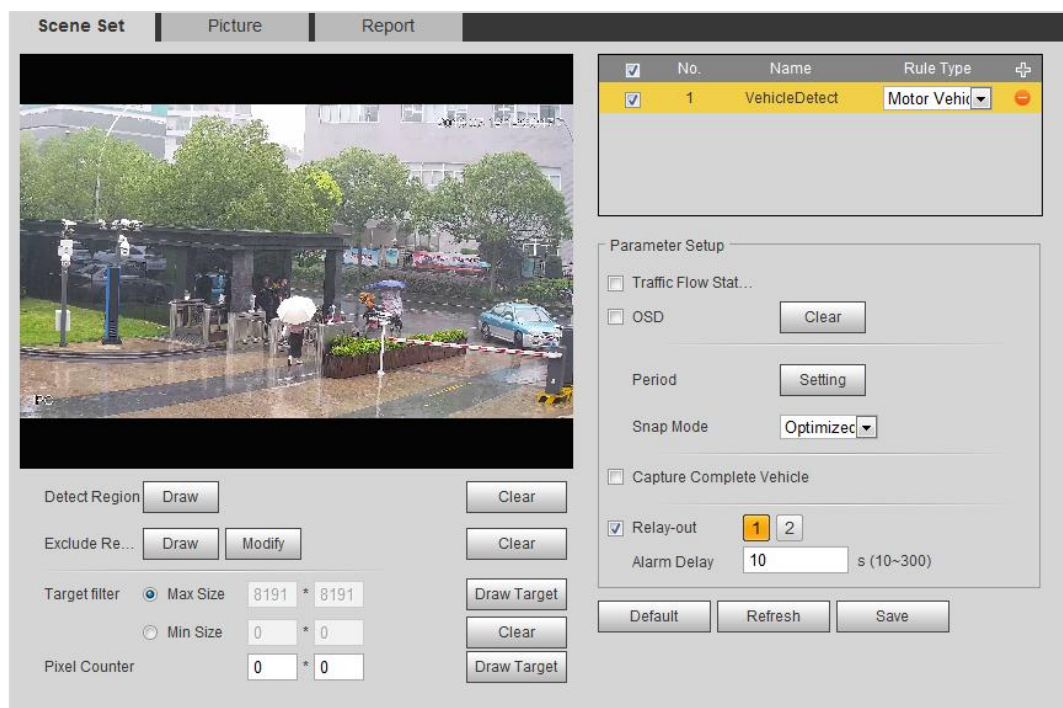

Step 2 Select **Enable** to enable the plate no. recognition function.

Step 3 Click **Draw** after **Detect Region** to draw a detection area. See the blue box in Figure 5-63.

To draw the detection area again, click **Clear** at the right side.

Step 4 Click **Detection Line** to draw an intelligent detection line for triggering snapshot. See the yellow line in Figure 5-63.

- Requirement for drawing a detection line: When the detection line is triggered, the plate no. in the snapshot is clear.
- To draw the detection area again, click **Clear** at the right side.

Step 5 Click **Plate No.**, and homocentric rectangular frames are displayed. After a snapshot is taken, adjust the camera and the rectangular box to make the actual plate no. in the frames to get a better detection effect.

Step 6 Set parameters. See Table 5-18.

Table 5-18 Description of scene set parameters (ANPR)

Parameter	Description
Non-Motor Vehicle Detection	Select Non-Motor Vehicle Detection to detect non-motor vehicles in the detection area.
Traffic Flow Stat	Select Traffic Flow Stat , and the device detects the number of motor vehicles and non-motor vehicles in the detection area and generates the statistical report. If Traffic Flow Stat is disabled, the report has no statistical data. Select OSD to display the statistical result on the preview interface. To clear the statistical result, click Clear .
OSD	
Target Box Overlay	Select Non-living Filtering to add a target box to the target in the snapshot to highlight the target position. The snapshot is saved in the preset path for monitoring snapshots. For details, see "4.5.2.5 Path."
Lane Line	Draw the lane to be detected according to actual conditions. Each lane consists of two lines. Arrow on lane indicates the driving direction. To add a lane: 1. Click  to add a lane. 2. Click  to draw a lane in the image. 3. Click  to delete the corresponding lane.

Step 7 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."


Step 8 Click **Save**.

Verification

The plate no. recognition result is displayed on the preview interface. See Figure 5-54.

- The plate no. and attribute information of vehicle are displayed at the right side.
- Click the image in the display area, and the detailed information is displayed.

Figure 5-54 Plate no. recognition result

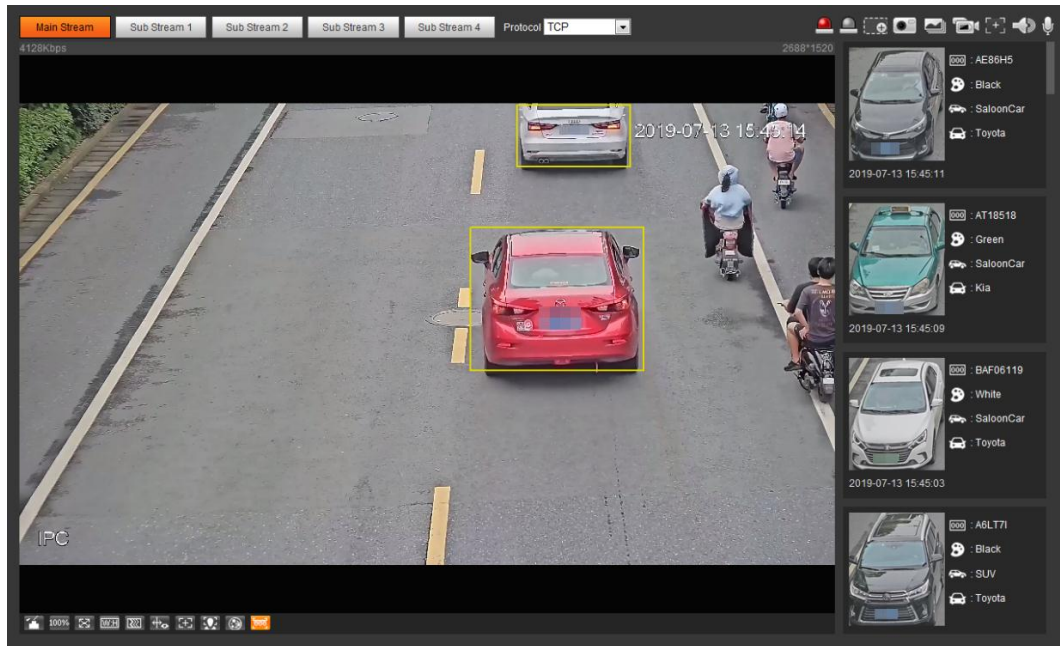

5.14.2 Setting Picture Overlay


Set overlay of motor vehicle, non-motor vehicle and people and the box position.

Take setting of motor vehicle overlay as an example.

Step 1 Select **Setting > Event > ANPR > Picture**.

The **Picture** interface is displayed. See Figure 5-55.

Figure 5-55 Picture (plate no. recognition)

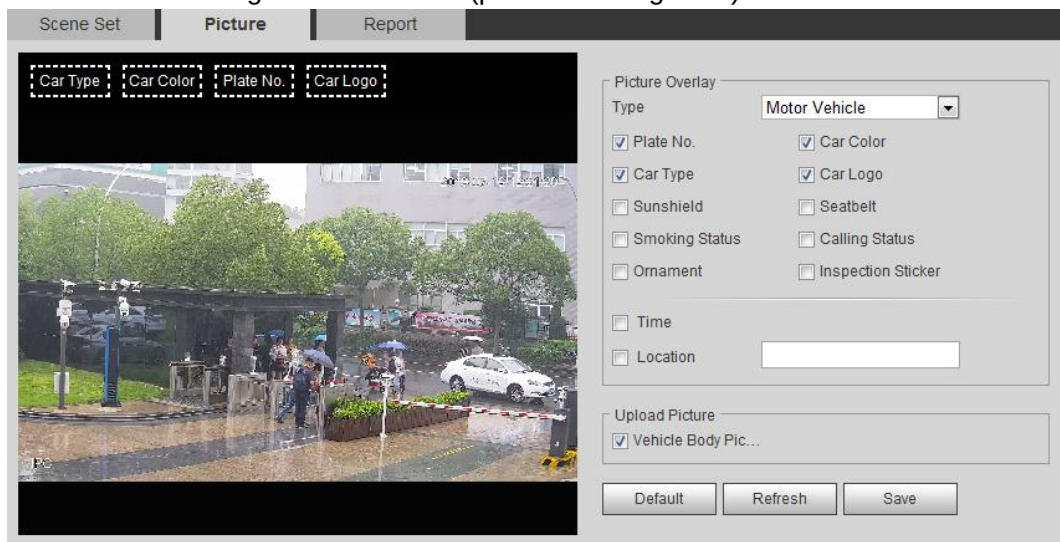

Step 2 Select **Motor Vehicle** for Type.

Select Non-motor **Vehicle** or **People**, and set non-motor vehicle and people overlay.

Step 3 Set overlay information and box position, including plate no., time, car color, car type, and car logo.

Step 4 Click **Save**.

5.14.3 Viewing ANPR Report

Generate data of plate no. recognition in report form.

Precondition


Select **Setting > Event > ANPR > Scene Set**, and then enable **ANPR**. Otherwise, no statistics are displayed.

Procedures

Step 1 Select **Setting > Event > ANPR > Report**.

The **Report** interface is displayed. See Figure 5-56.

Figure 5-56 Report

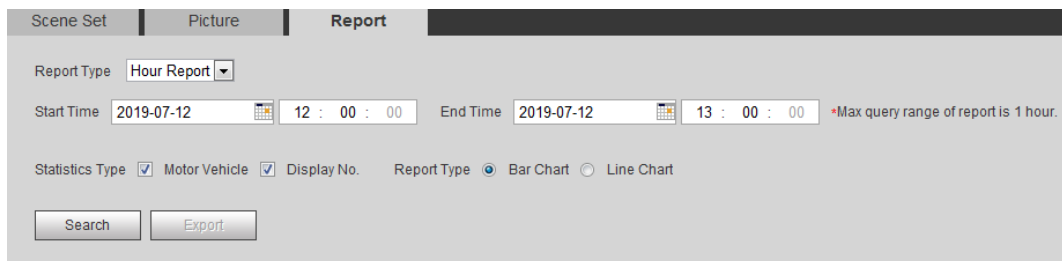


The screenshot shows the 'Report' tab of the ANPR interface. It includes a 'Report Type' dropdown set to 'Hour Report'. The 'Start Time' is '2019-07-12 12:00:00' and the 'End Time' is '2019-07-12 13:00:00'. A note states 'Max query range of report is 1 hour.' Below these are checkboxes for 'Statistics Type' (Motor Vehicle, Display No.) and 'Report Type' (Bar Chart, Line Chart). At the bottom are 'Search' and 'Export' buttons.

Step 2 Set **Report Type**, **Start Time**, **End Time**, and other parameters.

Step 3 Click **Search**.

The statistical results are displayed. See Figure 5-57. Click **Export** to export the statistical report.

Figure 5-57 Statistical results

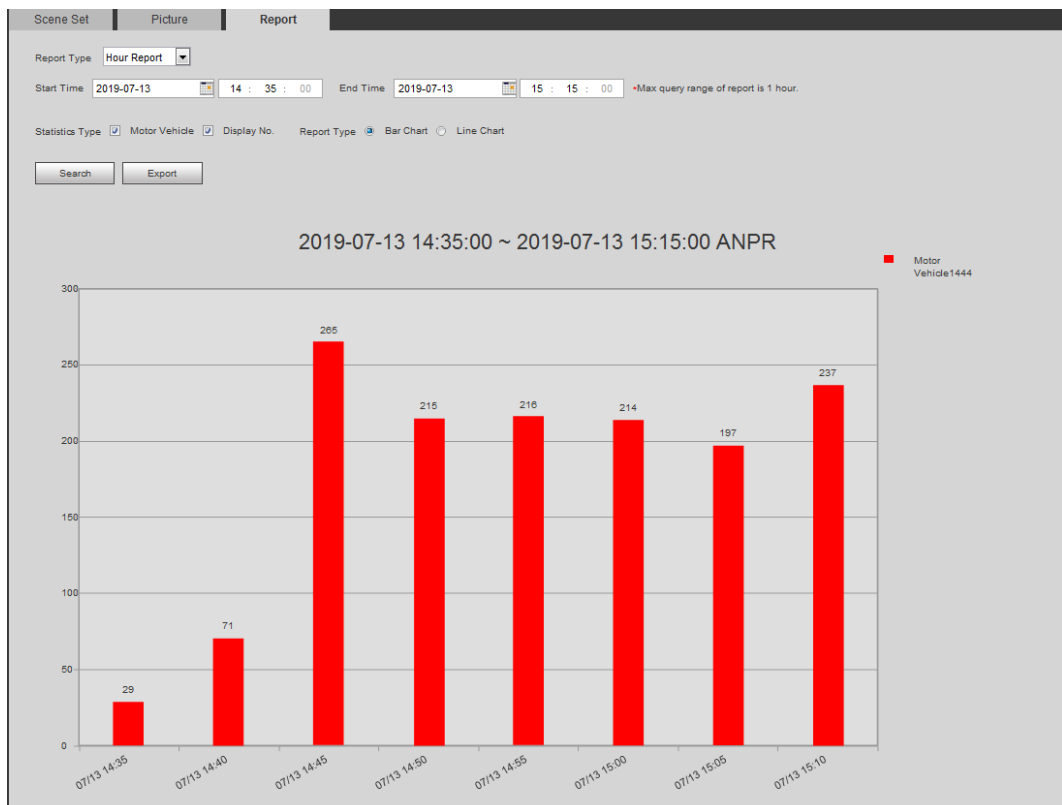

5.15 Setting Video Strutralization

Classify people, non-motor vehicles and motor vehicles in the captured video, and display the relevant attributes on the preview interface.

5.15.1 Scene Configuration

Set the detection scenes and rules, including rules for people, non-motor vehicles and motor vehicles.

Precondition

Select **Setting > Event > Smart Plan**, and then enable **Video Strutralization**.


Procedures

Take setting of the People detection rules as an example.

Step 1 Select **Setting > Event > Video Strutralization > Scene Set**.

The **Scene Set** interface is displayed. See Figure 5-58.

Figure 5-58 Scene set (video strutralization)

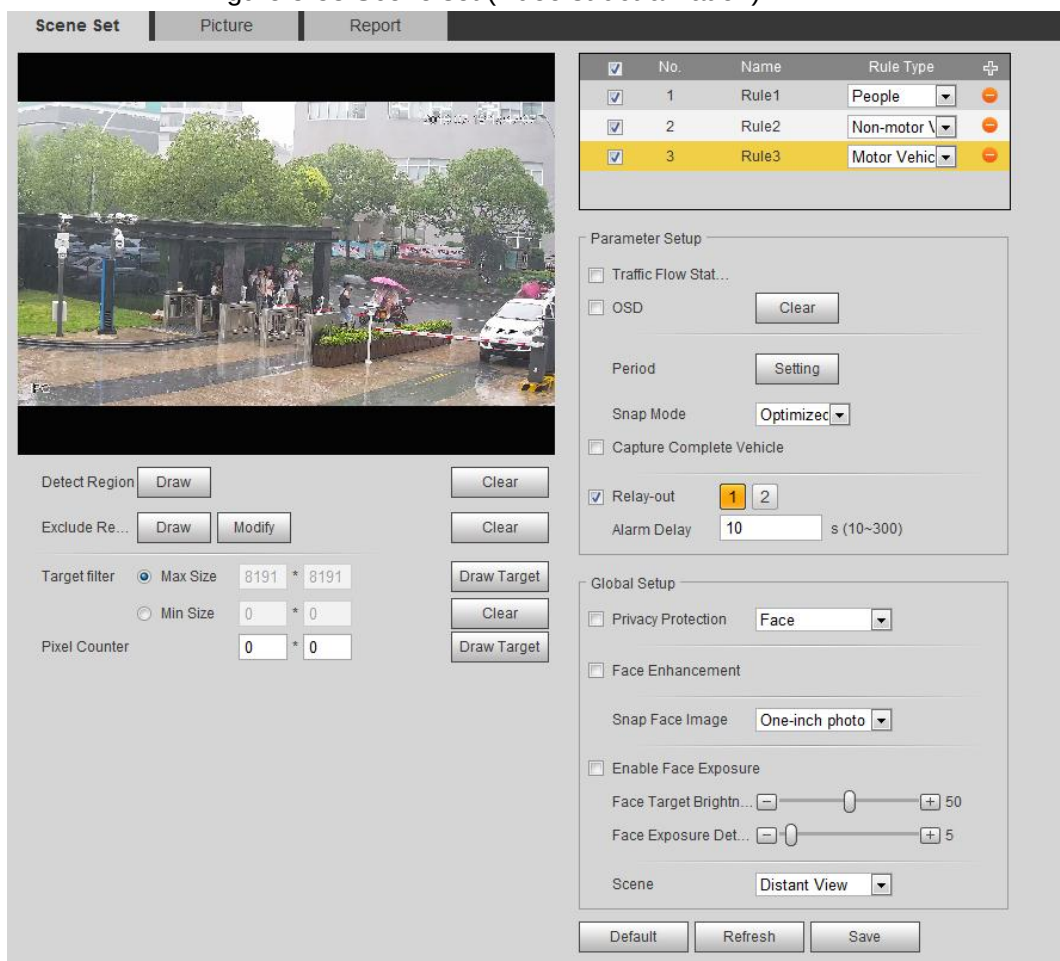

Step 2 Click , and double-click the name to modify the rule name, and select **People** in **Rule Type** list.

Step 3 Click **Draw** to draw a detect region and a exclude region in the image.

- Detect Region: A region to be detected.
- Exclude Region: A region not to be detected.

Step 4 Click **Draw Target** next to **Target Filter** to draw the max size and minimum size for the detection target in the image.

Step 5 Set parameters. For details, see Table 5-19.

Table 5-19 Description of scene set parameters (video structuralization)

Parameter	Description
People Flow Statistics	Select People Flow Statistics to count the number of people in the detection area.
Traffic Flow Stat	Select Traffic Flow Statistics to count the number of motor vehicles in the detection area.
Capture whole vehicle	Select Capture Whole Vehicle to capture whole vehicle. The snapshot is saved in the preset path for monitoring snapshots. For details, see "4.5.2.5 Path."
Non-motor Vehicle Flow Statistics	Select Non-motor Vehicle Flow Statistics to count the number of non-motor vehicles in the detection area.
OSD	Select OSD , and the numbers of motor vehicles, non-motor vehicles and people in the detection area are displayed.  Click Reset to recount.
Pixel Counter	Click Draw Target at the right side of Pixel Counter , and then press and hold the left mouse button to draw a rectangle, the Pixel Counter then displays its pixel.
Face Enhancement	Select Face Enhancement to preferably guarantee clear face with low stream.
Snap Face Image	Set a range for snapping face image, including face picture and one-inch picture.
Enable Face Exposure	Select Enable Face Exposure to make face more clear by adjusting lens aperture and shutter.
Face Target Brightness	Set the face target brightness, 50 by default.
Face Exposure Detection Interval	Set the face exposure detection interval to prevent image flickering caused by constant adjustment of face exposure. The default value is five seconds.
Scene	Set scene as Distant View or Close View.

Step 6 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."


Step 7 Click **Save**.

Verification

View the detection results of video structuralization/ ANPR on the preview interface. See Figure 5-59.

- The plate no. and attributes of motor vehicle are displayed at the right side, and pictures of people and non-motor vehicles and their attributes at the bottom.
- Click the image in the display area, and the detailed information is displayed.

Figure 5-59 Video structuralization result

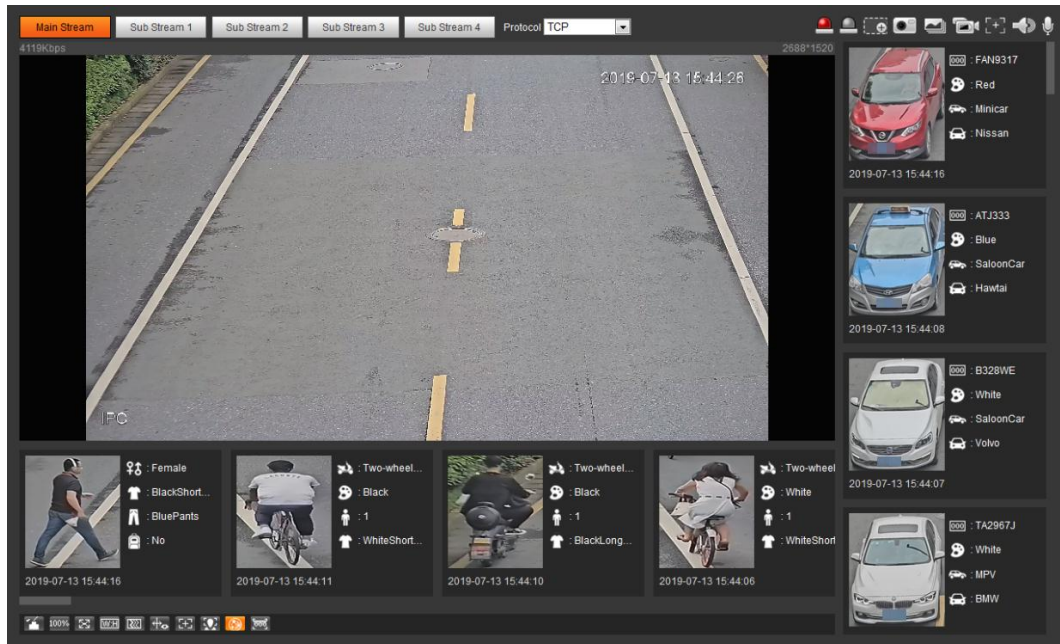

5.15.2 Setting Picture Information

Set overlay of motor vehicle, non-motor vehicle and people and the box position.

Take setting of motor vehicle overlay as an example.

Step 1 Select **Setting > Event > Video Structuralization > Picture**.

The **Picture** interface is displayed. See Figure 5-60.

Figure 5-60 Picture (video structuralization)

Step 2 Select **Motor Vehicle** for Type.

Select **Non-motor Vehicle** or **People**, and set non-motor vehicle and people overlay.

Step 3 Set overlay information and box position, including plate no., time, car color, car type, and car logo.

Step 4 Click **Save**.

5.15.3 Viewing Video Structuralization Report

Generate data of video structuralization recognition in report form.

Step 1 Select **Setting > Event > Video Structuralization > Report**.


The **Report** interface is displayed.

Step 2 Set **Report Type**, **Start Time** and **End Time**, and other parameters.

Step 3 Click **Search** to complete the report.

The statistical results are displayed. See Figure 5-61. Click **Export** to export the statistical report.

Figure 5-61 Video structuralization report

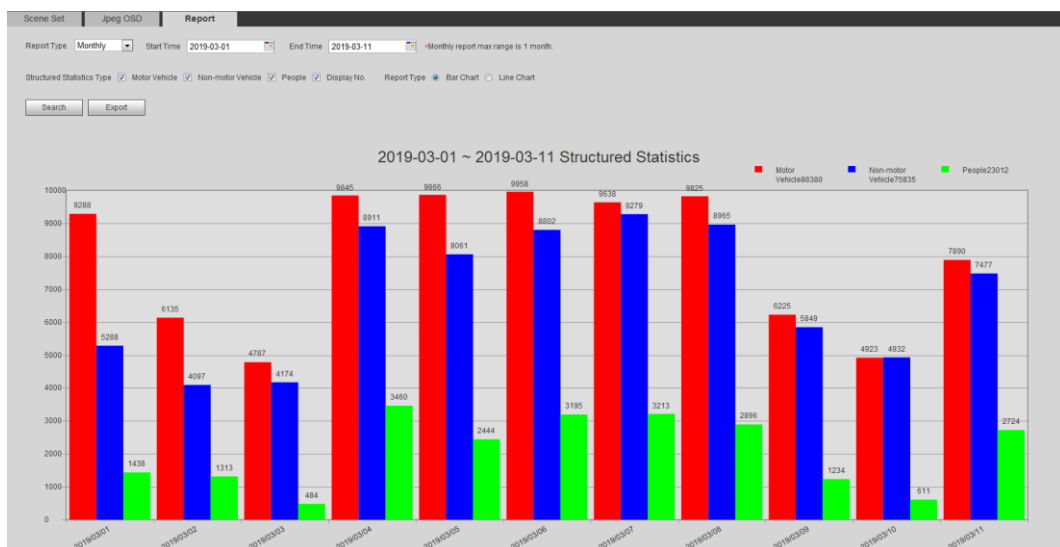

5.16 Setting Relay-in

When an alarm is triggered at the alarm in interface, the system performs alarm linkage.

Step 1 Select **Setting > Event > Alarm Settings > Alarm**.

The **Alarm** interface is displayed. See Figure 5-62.

Figure 5-62 Alarm linkage

The screenshot shows the 'Alarm' configuration window. At the top, there's a title bar 'Alarm'. Below it, there's a section with a checkbox 'Enable'. Under 'Enable', there's a 'Relay-in' dropdown menu set to 'Alarm1'. Below that is a 'Period' button labeled 'Setting'. Then, there's an 'Anti-Dither' input field set to '0' with a unit 's (0~100)' and a 'Sensor Type' dropdown menu set to 'NO'. Below these, there's a 'Record' checkbox which is checked. Under 'Record', there's a 'Record Delay' input field set to '10' with a unit 's (10~300)'. Below that is a 'Relay-out' checkbox which is checked, with two buttons '1' and '2' next to it. Below 'Relay-out' is an 'Alarm Delay' input field set to '10' with a unit 's (10~300)'. Below that is a 'Send Email' checkbox which is unchecked. Below 'Send Email' is a 'Snapshot' checkbox which is checked. At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Select **Enable** to enable the alarm linkage.

Step 3 Select a relay-in interface and a sensor type.

- Sensor Type: On or Off.
- Anti-Dither: Only record one alarm event during the anti-dither period.

Step 4 Set arming periods and alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 5 Click **Save**.

5.17 Setting Abnormality

Abnormality includes SD card, network and illegal access.



Only device with SD card has abnormality functions, such as **No SD Card**, **Insufficient Space**, and **SD Card Error**.

5.17.1 Setting SD Card

In case of abnormal SD card, the system performs alarm linkage. The event types include No SD Card, Insufficient Space, and SD Card Error and Short Lifespan. **Short Lifespan** detection is supported only when you insert the Dahua smart card into a device available for it. Functions might vary with different models, and the actual interface shall prevail.

Step 1 Select **Setting > Event > Exception Handling > SD Card**.

The **SD Card** is displayed in the interface. See Figure 5-63.

Figure 5-63 SD card



Step 2 Select **Event Type**, and then select **Enable** to enable SD card detection.

When setting **Event Type** as **Insufficient Space**, set **Minimum SD Card Space**. When the remaining space of SD card is less than this value, the alarm is triggered.

Step 3 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.

5.17.2 Setting Network

In case of abnormal network, the system performs alarm linkage. The event types include disconnection and IP conflict.

Step 1 Select **Setting > Event > Abnormality > Network**.

The **Network** interface is displayed. See Figure 5-64.

Figure 5-64 Network

The screenshot shows the 'Network' configuration page. At the top, there are four tabs: 'SD Card', 'Network' (selected), 'Illegal Access', and 'Security Exception'. The main area contains the following settings:

- Event Type:** A dropdown menu set to 'Disconnection'.
- Enable:** A checked checkbox.
- Record:** An unchecked checkbox.
- Record Delay:** A text input field with '10' and a unit 's (10~300)'.
- Relay-out:** Two buttons, '1' (highlighted in orange) and '2'.
- Alarm Delay:** A text input field with '10' and a unit 's (10~300)'.

At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Select **Event Type**, and then select **Enable** to enable network detection.

Step 3 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.

5.17.3 Setting Illegal Access

When you enter a wrong login password more than the set times, the system performs alarm linkage.

Step 1 Select **Setting > Event > Abnormality > Illegal Access**.

The **Illegal Access** interface is displayed. See Figure 5-65.

Figure 5-65 Illegal access

The screenshot shows the 'Illegal Access' configuration page. At the top, there are four tabs: 'SD Card', 'Network', 'Illegal Access' (selected), and 'Security Exception'. The main area contains the following settings:

- Enable:** A checked checkbox.
- Login Error:** A text input field with '5' and a unit 'time (3~10)'.
- Relay-out:** Two buttons, '1' (highlighted in orange) and '2'.
- Alarm Delay:** A text input field with '10' and a unit 's (10~300)'.
- Send Email:** An unchecked checkbox.

At the bottom, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Select **Enable** to enable illegal access detection.

Step 3 Set the times allowed for login error.

If you consecutively enter a wrong password more than the set times, the account is locked.

Step 4 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 5 Click **Save**.


5.17.4 Setting Voltage Detection

When the input voltage is higher than or lower than the rated value of the device, the system performs alarm linkage.

Step 1 Select **Setting > Event > Abnormality > Voltage Detection**.

The **Voltage Detection** interface is displayed. See Figure 5-66.

Figure 5-66 Voltage detection

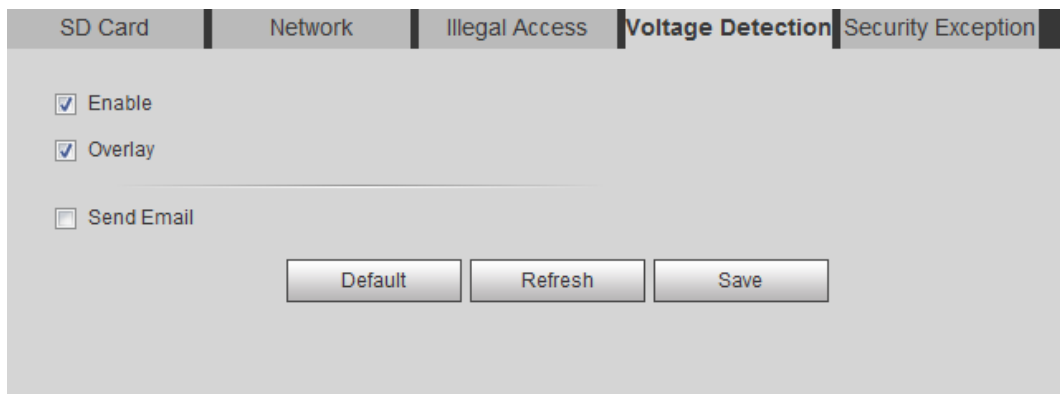

The screenshot shows the 'Voltage Detection' configuration page. At the top, there is a navigation bar with tabs: 'SD Card', 'Network', 'Illegal Access', 'Voltage Detection' (which is highlighted), and 'Security Exception'. Below the navigation bar, there are three checkboxes: 'Enable' (checked), 'Overlay' (checked), and 'Send Email' (unchecked). At the bottom of the configuration area, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Select **Enable** to enable voltage detection.

Select **Overlay**, and the alarm icon is displayed by overlapping when the alarm is

triggered.  is for undervoltage and  overvoltage.

Step 3 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.


5.17.5 Setting Security Exception

When a hostile attack is detected, the system performs alarm linkage.

Step 1 Select **Setting > Event > Abnormality > Security Exception**.

The **Security Exception** interface is displayed. See Figure 5-67.

Figure 5-67 Security exception

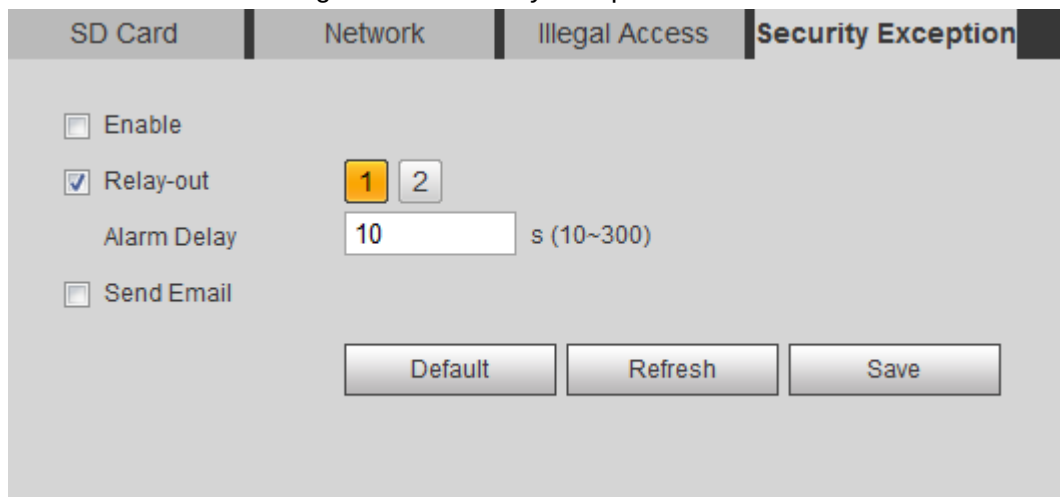

The screenshot shows the 'Security Exception' configuration page. At the top, there is a navigation bar with tabs: 'SD Card', 'Network', 'Illegal Access', 'Security Exception' (which is highlighted), and 'Voltage Detection'. Below the navigation bar, there are three checkboxes: 'Enable' (unchecked), 'Relay-out' (checked), and 'Send Email' (unchecked). To the right of the 'Relay-out' checkbox, there are two buttons labeled '1' and '2'. Below these, there is a text input field for 'Alarm Delay' with the value '10' and the unit 's (10~300)'. At the bottom of the configuration area, there are three buttons: 'Default', 'Refresh', and 'Save'.

Step 2 Select **Enable** to enable security exception detection.

Step 3 Set alarm linkage action. For details, see "5.1.1 Alarm Linkage."

Step 4 Click **Save**.

6 Maintenance

6.1 Requirements

To make sure the system runs normally, maintain it as the following requirements:

- Check surveillance images regularly.
- Clear regularly user and user group information that are not frequently used.
- Modify the password every three months. For details, see "4.8.4 Account."
- View system logs and analyze them, and process the abnormality in time.
- Back up the system configuration regularly.
- Restart the device and delete the old files regularly.
- Upgrade firmware in time.

6.2 Auto Maintain

You can restart the system manually, and set the time of auto reboot and auto deleting old files. This function is disabled by default.

Step 1 Select **Setting > System > Auto Maintain**.

The **Auto Maintain** interface is displayed. See Figure 6-1.

Figure 6-1 Auto maintain



Step 2 Configure auto maintain parameters. For details, see Figure 6-2.

- Select **Auto Reboot** check box, and set the reboot time, the system automatically restarts as the set time every week.
- Select **Auto Delete Old Files** check box, and set the time, the system automatically deletes old files as the set time. The time range is 1 to 31 days.
- Click **Manual Reboot**, and then click **OK** on the displayed interface, the camera will restart.



When you enable and confirm the **Auto Delete Old Files** function, The **The deleted files cannot be restored, are you sure?** notice is displayed. Operate it carefully.

Figure 6-2 Description of auto maintain parameters

Auto Maintain

☒ Auto Reboot Tue 02 : 00

☒ Auto Delete Old Files Customized 1 Day(s) ago

Manual Reboot

Refresh Save

Step 3 Click **OK**.

6.3 Resetting Password

When you need to reset the password for the admin account, there will be a security code sent to the entered email address which can be used to reset the password.

Precondition

You have enabled Password Reset service. For details, see "4.8.5.1 System Service."

Procedures

Step 1 Open IE browser, enter the IP address of the device in the address bar and press Enter.

Step 2 The login interface is displayed, see Figure 6-3.

Figure 6-3 Login

dahua TECHNOLOGY

Username:

Password: [Forgot password?](#)

Login Cancel

Step 3 Click **Forgot password?**

The **Prompt** dialog box is displayed. See Figure 6-4.

Figure 6-4 Prompt

Prompt

In order to provide a secure password reset environment, we need to collect your e-mail address, device MAC address, device SN, etc. All collected info is used only for the purposes of verifying device validity and sending a security code to you. Do you agree and want to continue the operation?

OK Cancel

Step 4 Click **OK**.

The **Reset the password (1/2)** interface is displayed, see Figure 6-5.



Clicking **OK** means that you are informed that some of your personal data might be collected to help reset the password, such as phone number, MAC address, and device serial number. Read the prompt carefully to decide whether to authorize the collection activity.

Figure 6-5 Reset the password (1)

Reset the password(1/2)

SN: 2C04AB9YAZ00019

QR code:

Please scan the QR code on the actual interface

Note(For admin only):

Option 1. Please download Easy4ip and then from Me-Settings-Reset device password, scan the left QR code.

Option 2. Please use an APP to scan the left QR code to get special strings. And then send the strings to support_rpwd@global.dahuatech.com.

The security code will be delivered to 1***@qq.com

Security code:

Cancel Next

Step 5 Reset the password

Step 6 Scan the QR code, and there will be a security code sent to the email address you entered. Enter the security code as instructed.



- Please use the security code within 24 hours after you receive it. Otherwise, it will become invalid.
- If you fail to use the security code for two times continuously, there will be fail notice when you try to get a security code for the third time. You will then have to reset the device to get a security code or wait 24 hours to get it again.

Step 7 Click **Next**.

The **Reset the password (2/2)** interface is displayed, see Figure 6-6.

Figure 6-6 Reset the password (2)

Reset the password(2/2)

Username: admin

Password:

Weak Middle Strong

Use a password that has 8 to 32 characters, it can be a combination of letter(s), number(s) and symbol(s) with at least two kinds of them. (please do not use special symbols like * ; : &)

Confirm Password:

Cancel Save

Step 8 Reset and confirm the password.

The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &).

Step 9 Click **Save**.

The login interface is displayed.

6.4 Backup and Default

6.4.1 Import/Export

- Export the system configuration file to back up the system configuration.
- Import system configuration file to make quick configuration or recover system configuration.

Step 1 Select **Setting > System > Import/Export**.

The **Import/Export** interface is displayed. See Figure 6-7.

Figure 6-7 Import/Export

Import/Export

Backup Path

Import Export

Step 2 Click **Import** or **Export**.

- Import: Select local configuration file, and click **Open** to import the local system configuration file to the system.
- Export: Select the storage path, and click **Save** to export the system configuration file to local storage.

Step 3 Click **Save** to finish configuration.

6.4.2 Default

Restore the device to default configuration or factory settings.




This function restores the device to default configuration.

Select **Setting > System > Default**. The **Default** interface is displayed. See Figure 6-8.

- Click **Default**, and then all the configurations except IP address and account are reset to default.
- Click **Factory Default**, and all the configurations are reset to factory settings.

Figure 6-8 Default

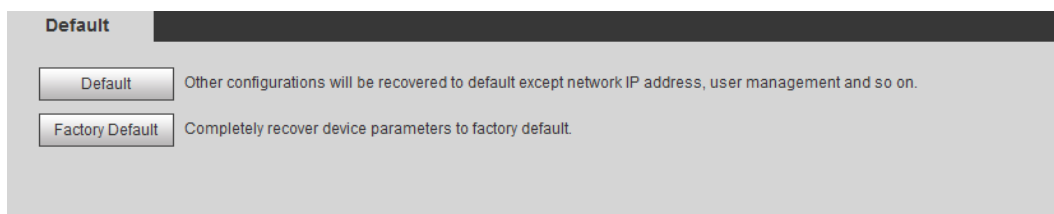

6.5 Upgrade

Upgrading to the latest system can improve device function and stability.




If wrong upgrade file has been used, please reboot the device, otherwise some functions might not work properly.

Step 1 Select **Setting > System > Upgrade**.

The **Upgrade** interface is displayed, see Figure 6-9.

Figure 6-9 Upgrade

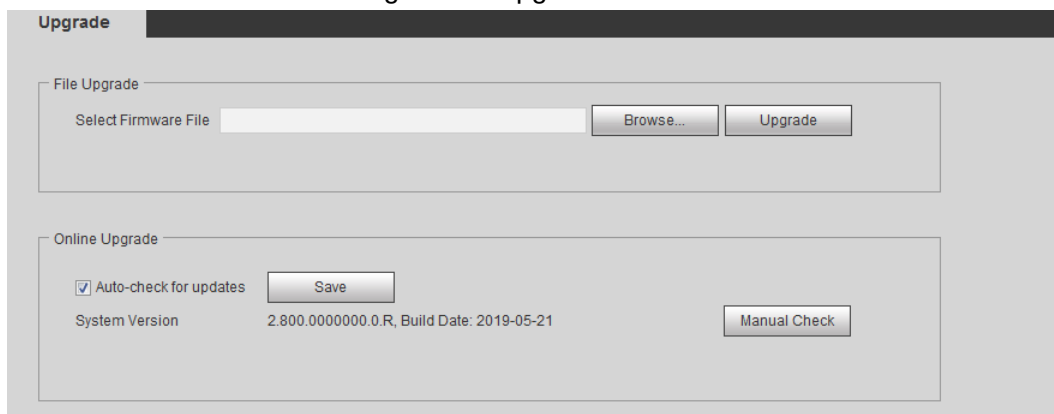

Step 2 Select upgrading method according to the actual needs.

- File Upgrade
 - 1) Click **Browse**, and then upload upgrade file.
The upgrade file should be a .bin file.
 - 2) Click **Upgrade**.
The upgrade starts.
- Online Upgrade
 - 1) Select the **Auto-check for updates** check box.

The system checks for upgrade once a day automatically, and there will be system notice if any upgrade is available.



We might need to collect the data such as device name, firmware version, and device serial number to proceed auto-check.

- 2) If there is any upgrade available, click **Upgrade**, and then the system starts upgrading.



Click **Manual Check** to check for upgrade manually.

6.6 Information

You can view the information, including version, log and online user, and back up or clear log.

6.6.1 Version

You can view device information such as hardware, system version, and web version.

Select **Setting > Information > Version** to view the version information.

6.6.2 Log

You can view and back up log.

Step 1 Select **Setting > Information > Log**.

The **Log** interface is displayed. See Figure 6-10.

Figure 6-10 Log

The screenshot shows the 'Log' interface with a 'Remote Log' tab selected. At the top, there are search filters: 'Start Time' (2019-07-17 19:25:40), 'End Time' (2019-07-18 19:25:40), and 'Type' (All). A 'Search' button is next to the 'Type' dropdown. Below the filters is a table with columns: 'No.', 'Log Time', 'Username', and 'Log Type'. The table is currently empty. At the bottom, there is a 'Detailed Information' section with fields for 'Time:', 'Username:', 'Type:', and 'Content:'. A 'Backup' button is located at the bottom left. On the bottom right, there are navigation controls showing '1 / 1' and a 'Next' button.

Step 2 Configure **Start Time** and **End Time**, and then select the log type.

The start time should be after January 1st, 2000, and the end time should be before December 31, 2037.

The log type includes All, System, Setting, Data, Event, Record, Account, and Safety.

- **System:** Includes program start, abnormal close, close, program reboot, device closedown, device reboot, system reboot, and system upgrade.
- **Setting:** Includes saving configuration and deleting configuration file.
- **Data:** Includes configuring disk type, clearing data, hot swap, FTP state, and record mode.
- **Event** (records events such as video detection, smart plan, alarm and abnormality): includes event start and event end.
- **Record:** Includes file access, file access error, and file search.
- **Account:** Includes login, logout, adding user, deleting user, modifying user, adding group, deleting group, and modifying group.
- **Safety:** Includes password resetting and IP filter.

Step 3 Click **Search**.

The searched results are displayed. See Figure 6-11.

- Click a certain log, and then you can view the detailed information in **Detailed Information** area.
- Click **Backup**, and then you can back up all found logs to local PC.

Figure 6-11 Log

The screenshot shows a web interface for viewing logs. At the top, there are tabs for 'Log' and 'Remote Log'. Below the tabs, there are input fields for 'Start Time' (2019-07-17 19:25:40) and 'End Time' (2019-07-18 19:25:40). A 'Type' dropdown menu is set to 'All', and a 'Search' button is next to it. Below the search fields, it says 'Find 72 log Time 2019-07-17 19:55:03 -- 2019-07-18 19:01:11'. The main part of the interface is a table with the following data:

No.	Log Time	Username	Log Type
1	2019-07-18 19:01:11	admin	Set Time
2	2019-07-18 19:01:11	admin	Set Time
3	2019-07-18 18:58:51	admin	Set Time
4	2019-07-18 18:56:30	admin	Login
5	2019-07-18 18:17:41	admin	Logout
6	2019-07-18 18:01:11	admin	Set Time
7	2019-07-18 18:01:11	admin	Set Time
8	2019-07-18 17:58:51	admin	Set Time
9	2019-07-18 17:31:36	admin	Set Time
10	2019-07-18 17:31:36	admin	Set Time

Below the table is a 'Detailed Information' section with fields for 'Time:', 'Username:', 'Type:', and 'Content:'. At the bottom left, there is a 'Backup' button. At the bottom right, there are navigation controls showing '1 / 1' and a '1' in a box.

6.6.3 Remote Log

Configure remote log, and you can get the related log by accessing the set address.

Step 1 Select **Setting > Information > Remote Log**.

The **Remote Log** interface is displayed. See Figure 6-12.

Figure 6-12 Log

Log Remote Log

☐ Enable

IP Address

Port (1~65534)

Device Number (0~23)

Default Refresh Save

Step 2 Select **Enable** check box to enable remote log function.

Step 3 Set address, port and device number.

Step 4 Click **Save**.

6.6.4 Online User

View all the current users logging in to web.

Select **Setting > Information > Online User**. The **Online User** interface is displayed. See Figure 6-13.

Figure 6-13 Online user

在线用户

序号	用户名	用户所在组	IP地址	用户登录时间
1	admin	admin	192.168.1.166	2014-11-06 09:04:13

刷新

Appendix 1 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations from Dahua on how to create a more secured security system.

Mandatory actions to be taken for basic equipment network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your equipment (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the equipment is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your equipment network security:

1. Physical Protection

We suggest that you perform physical protection to equipment, especially storage devices. For example, place the equipment in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable equipment (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The equipment supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. Enable Whitelist

We suggest you to enable whitelist function to prevent everyone, except those with specified IP addresses, from accessing the system. Therefore, please be sure to add your computer's IP address and the accompanying equipment's IP address to the whitelist.

8. MAC Address Binding

We recommend you to bind the IP and MAC address of the gateway to the equipment, thus reducing the risk of ARP spoofing.

9. Assign Accounts and Privileges Reasonably

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

10. Disable Unnecessary Services and Choose Secure Modes

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

11. Audio and Video Encrypted Transmission

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

12. Secure Auditing

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check equipment log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

13. Network Log

Due to the limited storage capacity of the equipment, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

14. Construct a Safe Network Environment

In order to better ensure the safety of equipment and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No.1199, Bin'an Road, Binjiang District, Hangzhou, P.R. China

Postcode: 310053

Tel: +86-571-87688883

Fax: +86-571-87688815

Email: overseas@dahuatech.com

Website: www.dahuasecurity.com