

Description - Important safeguards

en

Read this instruction booklet carefully before installing and using the appliance. This is the only way to ensure best results and maximum safety for the user.

Description (see page 3)

The terminology below will be used repeatedly on the following pages.

- A. Coffee container lid
- B. Coffee slits
- C. Barley coffee lid
- D. Barley coffee filter
- E. Coffee container
- F. Disk filter
- G. Gasket
- H. Funnel filter
- I. Half pot adapter disk
- L. Boiler
- M. Safety valve
- N. Electrical connector
- O. Support base
- P. Power cable
- Q. Control panel
- R. Display
- S. Settings button:
 - current time (CLOCK)
 - auto-start time (ALARM)
 - keep warm (ON/OFF)
- T. Auto-start enable/disable button (ALARM)
- U. Aroma/BARLEY COFFEE button (mild, medium, strong)
- V. ON/OFF button with light
- W. Time decrease button
- X. Time increase button

Important safeguards

- This appliance has been manufactured to "make coffee". Never use other extracts, cocoa powder, camomile, other infusions or instant mixes as these could block the holes in the filter.
- During cleaning, never immerse the base and boiler in water. This is an electrical appliance.
- Take care to avoid scalding caused by jets of water or steam or improper use of the appliance itself.
- When using the appliance do not touch the hot surfaces. Use the buttons or handle.
- After removing the packaging, make sure the product is complete and undamaged. If in doubt, do not use the appliance and contact a professionally qualified person.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a

safety hazard.

- The coffee maker must be operated exclusively by plugging into the electrical supply and never by resting it on lit gas rings or hot plates.
- The coffee maker may be used on the base provided only.
- Never touch the appliance with wet or damp hands or feet.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To guarantee the safety of the appliance, make sure the safety valve is working correctly. In the event of damage or doubts, do not use the appliance and contact the manufacturer's authorised customer services. All operations involving the valve must be performed by personnel authorised by the manufacturer.
- In the event of faults or malfunctioning of the appliance, switch it off and do not tamper with it. For any repairs, contact customer service centres authorised by the manufacturer only and insist on the use of original spare parts. Failure to respect the above could jeopardise the safety of the appliance.
- The power cable for this appliance must not be replaced by the user, as this operation requires the use of special tools. If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only to avoid all risks.

Designated use

This appliance is designed and made to prepare coffee and barley coffee. All other use is considered improper.

This appliance is not suitable for commercial use.

The manufacturer is not liable for damage deriving from improper use of the appliance. This is a household appliance only. All other uses are improper and therefore dangerous.

It is not intended to be used in:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

 
Installation


- Place the appliance on a work surface away from water taps and sinks.
- Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate. Connect the appliance to an efficiently earthed electrical socket with a minimum rating of 6A only. The manufacturer declines all liability for any accidents caused by the absence of an efficient earth system.
- If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified electrician.

IMPORTANT: the first time the coffee maker is used, all the accessories and internal components should be washed with hot water. Then make and throw away a few batches of coffee without drinking.

How to make coffee

When the base is plugged into the mains power supply, the electronic control emits a beep and 00:00 flashes on the display. You can now make coffee, even without setting the time.

- 1) Make sure the coffee maker is cold, then unscrew by holding the boiler with one hand and turning the coffee container anticlockwise with the other (fig. 1).
- 2) Remove the funnel filter and, to make a full pot of coffee, fill the boiler with cold water up to the top drop  (about 150 ml), without covering the safety valve (visible inside the boiler) (Fig. 2).


If you want to make just half a pot, fill the boiler with water up to the bottom drop  (fig. 2).

 
TIP: use cold soft water. Brackish or hard water will weaken the flavour. The coffee should ideally be up to the level of the filter.

IMPORTANT: do not use the coffee maker without water in the boiler. Do not use hot water to speed up coffee making.

- 3) Insert the funnel filter in the boiler (fig. 3). To prepare half a pot, insert the adapter disc (I) in the funnel filter (fig. 4).
- 4) Fill the funnel filter with ground coffee (about 20 g for a full pot of coffee); do not press down (fig. 6). Fill a little at a time to avoid the ground coffee overflowing.
- 5) Distribute the ground coffee uniformly and remove any excess coffee from the edge of the filter. **IMPORTANT:** Use good quality, medium-ground coffee for moka coffee makers.
- 6) Tighten the coffee maker firmly but without exaggerating, holding the boiler with one hand and turning the coffee container clockwise with the other, without pushing on the handle.

 
IMPORTANT: to avoid dangerous splashes of boiling water, never use the coffee maker unless the disk filter (F) is correctly in position.

- 7) Rest the coffee maker on the base (Fig. 6). Close the lid (A).
- 8) When preparing a full pot of coffee, you can select the coffee aroma by pressing the  button.



The Aroma function is effective when the quantities of water and ground coffee indicated above are respected.

 
Manual start-up


- Press the ON/OFF button . The light in the button shows that the coffee maker is on.
- Coffee delivery begins after a few minutes.
- When all the coffee has been delivered, the word “END” appears on the display accompanied by three beeps. The ON/OFF light goes off (if the “keep warm” function is not enabled). To remove the word “END”, press any button and wait for a few minutes for the current time to be displayed again.

Keep warm function

Once you have made the coffee, you can keep it warm for about 30 minutes by simply leaving it on the base.

To enable/disable this function, press and hold the **P** button for a few seconds until ON (enabled) or OFF (disabled) is displayed.

When the function is enabled, after the coffee has been delivered, END is displayed and the light in the  button remains on while the appliance is keeping the coffee warm.

To interrupt the function, press the  button. The light goes off and the current time is displayed.

If you remove the coffee maker from the base for about two minutes, the keep warm function goes off automatically.

Remember that coffee loses its characteristic aroma when warmed up.

Instruction for use

This function enables the time the appliance starts up to be programmed automatically, for example, in the evening for the following morning. Proceed as follows:

Set the exact time

- 1) Press the **P** button; CLOCK is displayed.
- 2) Press the + or - button until the exact time is displayed, then release the button.

After a few seconds, the time stops flashing and is set.


Please note: the time cannot be modified if auto-start is active.

 
Setting the start-up time

- 1) Press the **P** button twice; ALARM is displayed.
- 2) Press the + or - button until the time you want the coffee maker to come on is displayed, then release the button. After a few seconds, the time stops flashing and is set. After a few seconds, the current time reappears on the display.

Please note: the time cannot be modified if auto-start is active.

Important: the auto-start settings are lost if the appliance remains without power for more than a minute.

To enable auto-start, prepare the coffee maker as described above, place it on the base and press the  button; "ALARM" is displayed.

- At the set time, the appliance emits a number of "beeps", "ALARM" is displayed and the light in the  button comes on to indicate that coffee making has begun.
- If there is no water in the boiler or if the coffee maker is not correctly positioned on the base, "H2O" is displayed, accompanied by a long beep.

At the end of brewing


- At the end of brewing, mix the coffee to make it uniform then serve.
- Do not remove the coffee maker from the base until END appears on the display.

Tip: to obtain hot coffee, respect the levels of water indicated in the boiler. If using less water, you should leave the coffee maker on the base for a few minutes.


- After brewing, the current time is displayed, then after five minutes of inactivity, the appliance goes off. If the time has not been set, it remains on.

How to prepare barley coffee

Use barley coffee for moka coffee makers only. Do not use soluble barley coffee or barley coffee for espresso coffee machines.

- 1) Make sure the coffee maker is cold, then unscrew by holding the boiler with one hand and turning the coffee container anticlockwise with the other (fig. 1).
- 2) Remove the funnel filter and fill the boiler with cold water up to the top drop  without covering the safety valve (visible inside the boiler) (fig. 2).
- 3) Insert the funnel filter in the boiler (fig. 3).
- 4) Pour the ground barley coffee for moka coffee makers into the filter without filling it completely and without pressing down (fig. 5).

Fill a little at a time to avoid the ground barley coffee overflowing.

- 5) Tighten the coffee maker firmly but without exaggerating, holding the boiler with one hand and turning the coffee container clockwise with the other, without pushing on the handle.
- 6) Insert the special barley coffee filter (fig. 7) and push as far as it will go.
- 7) Rest the coffee maker on the base (Fig. 6). Close the lid (A).
- 8) Press the  button to select the BARLEY COFFEE function;



- 9) Press the ON/OFF button  to commence preparation.

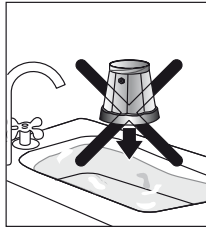
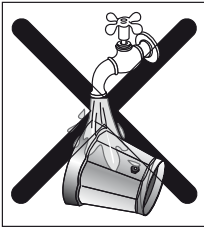
The appliance starts making the barley coffee.

Cleaning and maintenance

- Before cleaning the appliance, wait until it has cooled down after use.
- Check regularly to make sure the coffee slits are not blocked. Clean using a pin (fig. 8).
- Over time, the gasket (G) and funnel (H) become old. When signs of wear and deterioration become evident, they must be replaced. Use only gaskets and funnels available from authorised customer service centres or identical to the originals provided.
- Every so often check that the holes in the disk filter are not blocked. If necessary, clean using a pin (fig. 9).
- **DO NOT WASH THE COFFEE MAKER IN THE DISHWASHER.**
- When cleaning the boiler, safety valve and base do not use solvents or abrasive detergents. Cleaning with a damp cloth is sufficient, making sure water does not penetrate the connector.

Please note: when you remove the disk filter for cleaning or to replace the gasket, remember to replace it correctly before using the coffee maker to avoid dangerous splashes of hot water.

Never rinse the boiler under the tap and never immerse in water.



- After making barley coffee, rinse the coffee container with running water, open the barley coffee filter (fig. 10) and rinse under running water (fig. 11).

Technical data

Voltage/frequency: 220-240 V~ 50/60 Hz
 Absorbed power: 550W
 Size (LxHxD): 194x127x219mm
 Cable length: 0,98 m
 Weight: 1,01 kg

The appliance complies with the following EU directives:

- Low Voltage Directive 2006/95/EC and subsequent amendments;

- EMC Directive 2004/108/EC and subsequent amendments;
- Materials and accessories coming into contact with food conform to EC regulation 1935/2004.

Disposal



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

PROBLEM	PROBABLE CAUSES	SOLUTION
No coffee is released	No water in the boiler	Fill the boiler with fresh water
The coffee takes a long time to be released	The coffee used is not the right type	Use ground coffee expressly for moka coffee makers
	The disk filter is blocked	Clean the disk filter as described in the section "Cleaning and maintenance"
	The coffee has been pressed	Do not press the ground coffee
Coffee leaks from the edges of the boiler	Coffee leaks from the edges of the boiler	Clean the disk filter as described in the section "Cleaning and maintenance"
	The coffee container is not screwed to the boiler properly	Screw up firmly
	The gasket is burned or torn	Replace the gasket
"H2O" appears on the display	No water in the boiler	Fill the boiler
	The coffee maker is not resting correctly on the base	Make sure the boiler is fully inserted in the connector
	The appliance has been interrupted during operation	Do not interrupt the heating phase
	The boiler is too hot	Wait for the boiler to cool down. Use cold water