



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Denon SC-N10 Nero](#)
o cerca il tuo prodotto tra le [migliori offerte di Diffusori Audio](#)

DENON®

SPEAKER

SC-N10

Owner's Manual

Manuel de l'Utilisateur

Manuale delle istruzioni

取扱説明書

Bedienungsanleitung

Manual del usuario

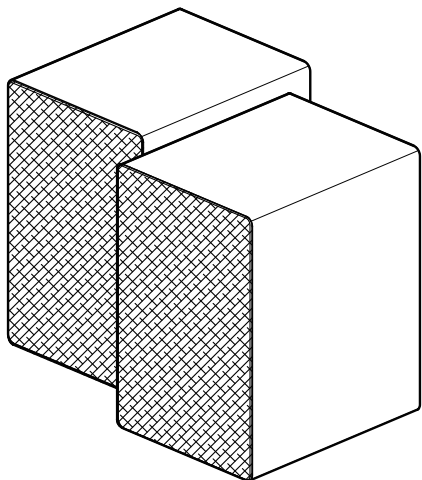 
Gebbruiksaanwijzing

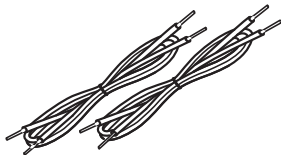 
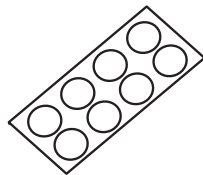 
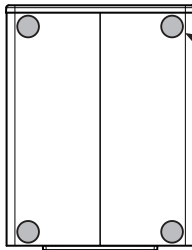 
Bruksanvisning

Руководство пользователя

Instrukcja obsługi

操作说明书

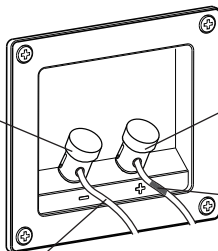 


3**4****A**

Anti-slip pads /
Rondelles antidérapantes /
Cuscinetti anticivolo /
すべり止め

B

"-" side terminal: Black /
Borne "-": Noir /
Terminale lato "-": Nero /
"- 側端子 : 黒



"+" side terminal: Red /
Borne "+": Rouge /
Terminale lato "+": Rosso /
"+ 側端子 : 赤

Connect to amplifier's "-" side: Plain core /
Connectez au côté "-" de l'amplificateur : Ame lisse /
Collegare al lato "-" dell'amplificatore: Anima liscia /
"- 側端子用ケーブル : 線にライン印刷なし

Connect to amplifier's "+" side:
The cable with a line printed on it and with a red tube /
Connectez au côté "+" de l'amplificateur :
Le câble avec une ligne imprimée et un tube rouge /
Collegare al lato "+" dell'amplificatore:
Il cavo su cui è stampata una linea e con un tubo rosso /
"+ 側端子用ケーブル :
線にライン印刷あり、および赤チューブ付き

Thank you for purchasing this Denon product. To ensure proper operation, please read this owner's manual carefully before using the product.

After reading them, be sure to keep them for future reference.

Accessories

① Owner's Manual	1
② Safety Instructions	1
③ Speaker cable.....	2
④ Anti-slip pads (8 pcs. / 1sheet)	1

Before using

Note on use

□ Cautions on installation

The quality of the sound produced from the speaker is affected by the size and type of the room, as well as by the method of installation. Consider the points listed below before installing the speaker.

- If the bass sound is overemphasized when the speakers are installed directly on the floor, set them on concrete blocks or other hard stands.
- Note that placing the speaker on the same stand or shelf as a record player may result in howling.
- Also note that if there is a magnet or any device generating magnetic force nearby, interaction between this device and the speakers can cause the colors on the TV to become blotchy.

WARNING

- Be sure to fasten the speaker cables to a wall, etc., to prevent people from tripping over them or otherwise pulling on them accidentally, causing the speakers to fall.
- Be sure to check for safety after installing the speakers. Afterwards, perform safety inspections at regular intervals to be sure there is no danger that the speakers will fall. Denon will not be liable for damages or accidents caused by inappropriate choice of the place of installation or improper installation procedures.

□ Cleaning

- Use a dry wiping cloth and wipe lightly to remove dirt from the cabinet and operation panel.
- When using chemically treated cloths, follow the precautions provided for them.
- Do not use benzene, thinners, or other organic solvents or insecticides on the speakers since they may cause a change in quality or color.

□ Other cautions

- Raising the amplifier's volume excessively and playing with distorted sound could damage the amplifier and speakers. Enjoy the sound at a reasonable volume level.
- When moving the unit, note that applying strong force to the surface of the speaker through the saran net could damage the speaker.
- The Saran net on the front of the speakers cannot be removed.

How to Install

Attach four of the included anti-slip pads to the bottom of the unit.

( **A**)

Connections

When connecting the speakers to an amplifier, be sure to read the amplifier's owner's manual carefully and connect properly.

- Connect the input terminals on the rear panel of the speaker with the speaker output terminals on the amplifier, using the included speaker cables.
- Connect the speaker for the left channel to the "L" terminal on the amplifier, the speaker for the right channel to the "R" terminal on the amplifier, making sure to check the polarities ("+" and "-"). (👉B)
- Amplifiers have various speaker output terminals. Check the owner's manual of the amplifier you are using for details.

NOTE

- Be sure to turn the amplifier's power off before connecting the speakers to the amplifier.
- If the polarities are inverted, the phase may be off and the sound may have no bass component, making it seem unnatural. Be sure to connect the polarities properly.

1 Push the speaker terminal and insert the speaker cable into the cable insertion slot.

2 Release your finger from the speaker terminal to fix the speaker cable.

Once connections are completed, pull gently on the speaker cables to check that they are securely connected.

NOTE

- Do not let the core wires of two speaker cables touch each other. Doing so will short-circuit the amplifier circuitry and damage the amplifier.

Specifications

Type:	2-way · 2-speakers Reflex box
Frequency range:	50 Hz ~ 20 kHz
Input impedance:	6 Ω/ohms
Max. input:	60 W (IEC), 120 W (PEAK)
Sensitivity:	85 dB (1 W · 1 m)
Crossover frequency:	3.5 kHz
Speakers:	12 cm (4-23/32") cone bass-mid x 1 3 cm (1-3/16") balance dome high range x 1
Maximum external dimensions:	153 (W) x 233 (H) x 200 (D) mm (6-1/32" x 9-11/64" x 7-7/8")
Weight:	2.4 kg (5 lbs 5 oz)

For improvement purposes, specifications and design are subject to change without notice.

DENON[®]

www.denon.com

Printed in China 5411 11694 10AD

Copyright © 2018 D&M Holdings Inc. All Rights Reserved.