



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Funker E100 Max](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)

 


Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Funker E100 Max](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)

funker

Funker E100 User Manual



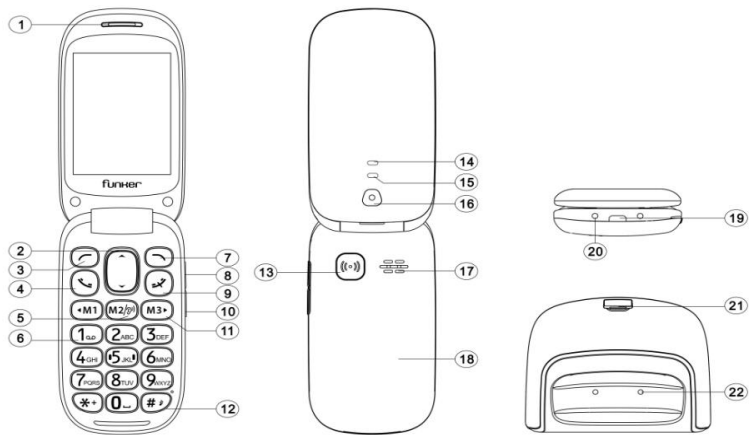

My phone

1. Conversation speaker	2. Up / down selection keys
3. Left selection key	4. Call key
5. M1 amplification / memory key	6. Voicemail
7. Right selection key	8. Volume + key and flashlight (On / Off)
9. Power on, off, end call	10. Volume key -
11. Speed dial keys	12. Silent mode key
13. SOS button	14. Calls, messages and charge indicator.
15. Flashlight	16. Photo camera
17. Melody speaker	18. Battery cover
19. Charging connector	20. Desktop charger
21/22. Charging contacts	

Contents

Installation.....	7
Installing the Micro-SD memory card.....	7
Installing the SIM card.....	8
Battery Installation.....	9
Contacts:	10
Search.....	10
Add new contact.....	10
Phonebook settings.....	10
Photo contacts	11
Messages.....	13
Write messages	13
Inbox	13
Drafts.....	14
Output tray	14
Sent messages	14
Message settings.....	14
Call history.....	15
Magnifying glass.....	16
Sound Recorder.....	16

Voice memories	17
Organizer	18
Calendar	18
Calculator	19
Alarm	20
Bluetooth.....	21
Multimedia	22
Image viewer.....	22
Camera	22
FM Radio.....	22
File manager.....	23
Setting	24
SOS button configuration.....	24
Phone Settings.....	25
Call settings.....	26
Amplify receiver volume	27
Sound frequency.....	27
Low battery notification	28
Sound profiles	29
Speed Dial.....	29
Lock functions.....	30

Up / Down Key Functions.....	30
Security settings	31
Restore factory settings	31
Recommendations and safety	32

 
 
Installation

IMPORTANT

Turn off the phone and unplug the charger before removing the battery cover.

Installing the micro-SD memory card


Insert the memory card into the slot under the SIM card holder, make sure the card is positioned face down. Be careful not to scratch or bend the metal contacts on the card.

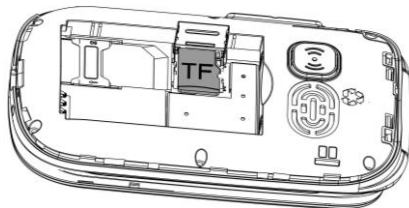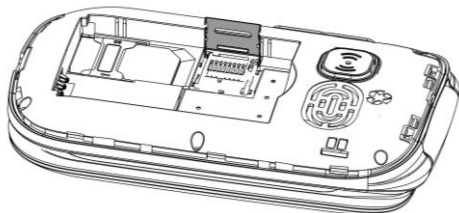

Micro-Sd card is used as phone storage, when connected to computer by USB cable, you can copy music or photos inside.

Install SIM card


1. Insert the SIM card into the SIM card slot on top of the memory card holder.
(Make sure the SIM card contacts are facing down.)
2. Before removing the SIM card, first turn off the phone.

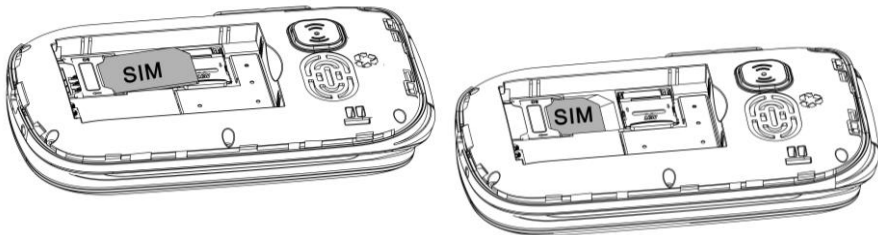


Installing the battery

The first time, charge the battery for 4 hours to get the best performance from it.

Remove the battery cover, insert it into the battery compartment, and replace the battery cover.

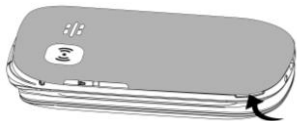

Contacts:

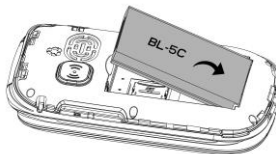

Look for

You can speed up the search for the contact's name by dialing the initial letter.

Add new contact

You can add a new contact to the SIM card or to the phone, press "save" to confirm.

1. To SIM

1.1 Enter name and phone number.

2. On the phone

2.1 Enter name and phone number.

2.2 Set caller image: press keyboard M1 to M3 the image from preset, camera or file.

2.3 Set the ringtone: press the keyboard M1 to M3 the ringtone.

2.4 Press Options to save.

3. Phone book settings

3.1 Preferred storage: you can save the new contact to SIM card, phone or both.


3.2 Memory status: to check how many contacts are on the SIM card and on the phone (max 250 in both cases).

- 3.3 Copy contacts: You can copy SIM and phone contacts between them.
- 3.4 Move contacts: You can move SIM and phone contacts between them.
- 3.5 Delete all contacts: You can delete all contacts from SIM card or phone.

In the phone book, you can check people's contacts, send SMS, make call, edit, delete, copy and add to the black list.

Warning! Check how to enter the text to see the input method.

Photo contacts

1. Press edit, enter a name and number for the new contact.
2. Use to  select caller image and ringtone.

2.1 Image of the caller (Options, Select). This image will be displayed when the contact is called or he calls us.

Please select one of the following options:

- 1) From camera and press Options to select From camera to take a photo.

Observation: use by default an image size of 240x320 for a correct visualization of the same.

2) From file and select from phone or memory card to select an existing image and press Open.

Observation: use an image size of 240x320 for its correct visualization.

2.2 Ringtone (□Options□Select) to select the desired incoming call tone. You can also use Record File to record a personal ringtone. See Sound recorder on p.16.

3. Press Options and scroll to Save, then press Select to save.

4.

Messages

Write messages

1. Press Menu, scroll to Messages.

2. Select Write message and press OK.

3. Enter your message and then press Options.

4. Choose Send to enter the destination number and then press OK to send.

Inbox

1. Press Menu go to Messages and press OK.
2. Select Inbox and press OK.
3. Select a message from the list and press Options to view the message.

Other options below:

1) **Answer**

Write the message and send to the sender.

2) **Call sender**

Press select to call the sender.

3) **Resend**

Press select to forward the message to other contacts.

4) **Get rid of**

Press select to delete the message.

5) **Erase everything**

Delete all received messages.

6) **Save to phonebook**

Here you can save the sender's phone number in the phonebook.

Eraser

Here you can see the messages that were created, but did not finish.

Outbox

1. Press Menu then go to Messages and press OK.

2. Select Outbox and press OK.
3. Select a message from the list and press Options to view, forward, edit, delete or delete all messages.

Sent messages


Here you can see all the messages we have sent.

SMS configuration

1. In standby mode, press Menu, go to Messages and press OK.
2. Go to SMS Settings and press OK to configure the message service.
- 1) **SIM:** Profile settings, Validity period, Message type, Delivery report, Reply path, Mail server.
- 2) **Memory status:** shows the status of the messages saved in the SIM and in the phone (Max 50).
- 3) **Message counter:** shows the number of messages sent and received.
- 4) **Save sent messages:** Press M1 or M2 to turn on or off.
- 5) **Storage preference:** set the storage destination (SIM or phone).

Call History

Call History

1. In standby mode, press Menu, go to Call History and press OK.
2. All missed, made and received calls are saved here.
3. Use to  move between the different types of calls described.
- 4.

Magnifying glass

MAGNIFYING GLASS

In standby mode, press Menu, go to Magnifier and press OK.

With the camera's magnifying glass, you can zoom by adjusting the focus distance.

With this feature, older users can use it to read texts more easily. Using the keys you can increase or decrease the size.



Sound recorder

The sound recorder allows you to record voice memos to keep as a reminder.

1. Press Menu go to Sound Recorder.
2. Press 2 to record / pause. Press 5 to play / pause / stop recordings. Press 8 to delete the recordings.
3. To listen to one of the recordings: press Sound Recorder-> List, choose the position of the list that you want to listen to.
4. With this function, recordings can be made to use as ringtones.

Observation:The internal memory of the phone only supports short recordings. You need to use a memory card to have more recordings.

Voice memories

This menu option allows you to configure tasks that the phone can later remember later. Accessing this menu option shows a list of configured tasks.

The options allow you to add new tasks, edit them or delete an existing one.

If we add a new task or edit an existing one, go to Subject , Remember sound, due time, Sound loop (10 times by default) and Remember interval (5 minutes by default).

Press Menu go to Voice Notes. You can use Remember Sound to record what you want to be remembered instead of the default entries.

Observation:

1. When the preset time arrives, the phone will play the recorded sound and there is a pop-up window with these options: Meet and Repeat. Press Meet or End the call to exit the task.
- 2 In case of not being able to hear the reminder task in time, press Repeat, the phone will play the recorded sound again with the frequency that we have predefined in: Repeat

Organizer

Calendar

1. Press Menu go to Organizer, press OK and select Calendar.
The current day and time are displayed on the screen.
2. Press Options to make the following settings:

Watch

Displays the event for the selected date.

See all

Show all events

Add event

- A. Entry subject for the event.
- A. Put time and date of the start of the event.
- B. Put time and end date of the event.
- C. Put the subject of the event.
- D. Activate alarm and snooze time.
- E. Put the location of the event.
- F. Save the event.

Delete event

Delete the selected event.

Jump to date

Set the day and press OK.

Go to today

Today's date is displayed

Go to the weekly view

Show this week's date

Beginning of the week

Choose Sunday or Monday

Calculator

1. Press Menu go to Organizer, press OK and select Calculator.

2. Calculate the number according to the following steps:

2.1 Enter numbers.

2.2 Use to select $+$, $-$, $=$, \times , \div .

2.3 Then press the left selection key to accept. The result of the operation is displayed on the screen.

Observation: Press to $\#$ for decimal numbers.

Alarm

1. To edit an alarm press Edit and press Save.

2. Use the keys and $\leftarrow M1$ $M3 \rightarrow$ s off / on.

3. Enter the time with the numbers on the keyboard.

4. Scroll to select **Repeat** to select Once / Everyday / Custom. The same way to choose Alarm tone, Snooze (min) and Alert type.

5. To stop the alarm, press Stop when the alarm is working or set the alarm status to Off and press Save.

Note: The alarm works, even if the phone is switched off

Bluetooth


1. Press **Menu**, go to **Organizer** and press OK.
2. Go to Bluetooth and press OK for the following settings:
 - 2.1 **On off**: Select the left selection key to enable or disable bluetooth.
 - 2.2 **Visibility**: Select On / Off to make the phone visible or not with other devices.
 - 2.3 **My device**: Allows you to search for new available devices and pair.
 - 2.4 **Search for audio devices**: Search for available audio device, search by pressing OK. When connecting with another device you have to share the password and then press OK.
 - 2.5 **Rename device**: Bluetooth name for the device.
 - 2.6 **Advanced**: Audio path, Storage, My address.

Multimedia

Pictures viewer

You can see all the photos saved in the phone.

Camera

1. Press Menu, go to Camera and press OK.
2. Press the up arrow key to take the photo. 
3. To view the photos, press Options and select Photos.

Warning! If the phone memory is insufficient, expand it with an external memory card.


FM Radio

 


1. Press Menu, go to Multimedia, press OK and select FM Radio.
2. Press Options to view Channel List.
3. Select Manual input and enter the desired channel.
4. Select Schedule Search for automatic search of local channels
5. Go to Settings to select background playback and audio quality.


If background playback is On, when you return to standby mode the radio will continue

to work.

6. Press to change the existing channel in the Channel List.

7. Press the keys to  adjust the frequency on the channel being played.

 8. Press or  or  or  increase the volume.

9. Press the key to  the radio on or off.

File manager

Use File Manager to manage all files, rename, copy, delete or move.

1. Press Menu, go to Multimedia, select File manager and press OK.

2. Select from Phone or SIM card

3. Press Options to open. You can manage all the saved files like Audio, Music, Photos, Videos etc.

Setting

SOS setting

1. Press Menu go to Configuration, select configure SOS and press OK.
2. Go to Status and select off or on.
3. Go to SOS number to enter the SOS number, you can put up to 5 different numbers.
4. Go to SMS SOS off / on to choose to send messages or not.
5. Go to SMS SOS to choose the message to be sent.
6. Go to Warning Tone Status to choose between off or on.

Make an SOS call

Before making an SOS call, make sure the SOS status is on.

A long press of the SOS button causes the phone to automatically send the SOS message to the recorded numbers and then make a one-by-one call to the recorded numbers, the warning tone is always on until someone answers the call. call.

Warning!

The SOS function must be activated before use. For some interference factors (erg. Internet, environment etc.), the SOS function is not available.

Phone settings

Press Menu, go to Settings. Select Phone settings and press OK.

You can configure the following things:

  **Time and date**

1.1 Select Time and date and press OK.

1.2 Select Start City to choose the local time for the area.

1.3 Select Set time / date to set the time, day and daylight saving time status then press Save to save the settings.

1.4 Select Set Format to set the 12 or 24 hour time format.

  **LED Settings**


2.1 Select Configure LED and press OK.

2.2 Here you can set the status of the flashing red LED.

The maximum operating hours setting is 0 to 23 hours.

  **Languages**

3.1 Select Languages and press OK.

3.2 Use t  lect the language from the list and then press OK to save.

  **Screen**

4.1 Change the wallpaper

1) Select Display, go to Wallpapers.

2) Here you can select wallpaper from phone memory or external memory card.

4.2 Display illumination

Here you can adjust the Brightness and time.



Airplane mode: Normal or flight mode.

Call settings

1. Pres Menu, go to Settings, select Call settings and press OK.
2. You can configure Call Waiting, Call Forwarding, Restricted Calls, and Advanced Settings.
3. In Advanced settings you can configure the following options:
 - Rejected list**
 - Mark again**
 - Call time display**
 - Call time notice**
 - Response mode**

Amplify the phone volume

This phone has a loud sound. Still there is a key to increase the listening sound by

25dB. This feature makes the phone very suitable for the hearing impaired.

Press **Menu** go to **Settings**, navigate to **Amplify receiver volume and** select to turn off or on

When on is selected, each time a call is received or made, this option can be switched on or off by holding down the M2 key.

Sound frequency

Each person has a different sensitivity to the frequencies of sounds.

You have the possibility to choose the one that best suits your hearing needs among the 3 options indicated below:

1. Low: 300-800Mhz
2. Normal: 300-3000Mhz (default)
3. High: 1500-3000Mhz

Press Menu go to Settings, go to Sound Frequency and press OK to select the one you want.

Low battery notification

1. Press **Menu** and go to Settings.

2. Please select **Low battery notification** and press **okay**. Then you will see the following:

2.1 **Status: on / off**

2.2 **Notification contacts: 3 numbers**

2.3 **Notification SMS**

When the battery capacity is 10%, the phone automatically sends a message at 3 **Notification contacts** that you have chosen to warn that the battery needs to be charged.

In addition, the phone has a pop-up warning window: “low battery, please put me on the base!” To remind you to charge your phone. This prompt window jumps every 30 minutes until the phone charges.

Profiles of user

1. Press **Menu**, go to Settings, select Profiles and press OK.

2. Choose one of the existing modes: General / Silent / Meeting / **Exterior**.


 
 
 
3. In standby mode, press the key to put **#** phone in Silent mode.

4. After choosing a mode, you can customize Alert Type, Ringtone, Volume Ringtone,


 
 
SMS ringtone and volume, Key ringtone and volume, and Flip open / closed tone.


Speed Dial

1. **M1 / M2 / M3** keys: Press Menu go to Configuration, select Direct memories and press OK, leccione on / off status, then select Choose numbers

 Press to    tcs and press Ok

to save

Notice: In standby mode, a long press of, will pop    number, assign now? ", Press YES to enter a phonebook number.

2. **2-9 Numbers:** press OK, select Status to switch on or off, go to Choose numbers and press to choose n  bers 2-9 from the phonebook, press OK to save.

Lock function

You can disable or hide some features to make your phone easier to use.

1. Press **Menu** go to Settings and press **okay**.

2. Select Lock function and press **okay**.
3. Scroll to choose each menu you want to disable or hide and press OK to choose on / off.

Up / Down Key Shortcut

1. The default setting for the up key is Messages.



2. The default setting for the down key is Photo Contacts



Security settings

1. SIM Security: In this option you can turn on or off the pin request when turning on the phone.
2. Phone security. In this option you can turn off or on the request for a lock for the phone or change the code

The default code for the phone is "1122".

Reset factory settings

In this menu after entering the phone's security code (0000) you can reset the phone to its

original settings

Recommendations and safety

- Be careful when you are near chemical plants, gas stations, tanks with flammable liquids or anything else that could explode as the phone emits RF signals even when it is in standby mode. Turn off the phone around these items.
- Do not use the phone while driving. If you need to use the phone, park your vehicle first.
- Do not use the phone in hospitals so as not to interfere with medical equipment.

Obey the current regulations on the use of the aforementioned devices before using the telephone.

- Keep the phone and accessories out of the reach of children.
- This device is designed to be marketed in the EEC.
- If you are on an airplane, turn off your phone before it takes off so as not to interfere with the airplane's equipment. The use of mobile phones during the journey is dangerous and illegal.
- Accessories and Battery: Use accessories and batteries supplied by the manufacturer. The use of non-original accessories may damage the phone and lead to dangerous situations and invalidate the warranty. Do not tamper with, adapt or break the battery. If the phone becomes too hot, swells, or you notice any other unusual phenomenon, stop using the phone and change the battery. Put the old batteries in the clean points.
- Do not charge the phone without the battery. Turn off the phone before removing the battery. The socket outlet must be easily accessible. The load feeder is the disconnect device.

- The phone is not waterproof so keep it dry. Avoid using the phone in very hot or very cold temperatures.
- Do not throw, drop or hit the phone as both internal and external parts may be damaged.
- If you have any problem contact the authorized technical service, do not try to open the phone yourself as it could be dangerous.
- Many hearing aids on the market are compatible with this phone, but compatibility is not assured.

DECLARATION OF CONFORMITY

CMR Components, SL Address:

Tel: 976-212-152 // Fax: 976-239-



Paseo Teruel nº 41.50004 - Zaragoza (Spain)

OIO

NIF:

B50845627

We declare the conformity of the product: **Funker E100** Complies with the provisions of the Directive 2014/53/EU on Radio and Telecommunications Terminal Equipment (R & TTE), Directive 2006/95 / CE on Electrical Safety of Low Voltage Equipment and Directive 2004/108 / CE on Electromagnetic Compatibility complying with harmonized standards:

EN60950-1: 2006 + A1: 2009 + A1: 2010 + A12: 2011 + A2: 2013, EN 50360: 2017, EN 62209-2: 2010. EN 62209-1: 2016, EN 50566: 2017, EN 62479: 2010

Draft ETSI EN 301 489-1 V2.2.0 (2017-03), Draft ETSI EN 301 489-17 V3.2.0 (2017-03)

Draft ETSI EN 301 489-52 V1.1.0 (2016-11),

ETSI EN 301 511 V12.5.1: 2017-03, ETSI EN 300 328 V2.1.1: 2016-11

You can request a copy of the Declaration of Conformity at the address indicated above.

Zaragoza to 08/06/ 2018 Jose Maria Miranda Diez



THIS MODEL COMPLIES WITH THE INTERNATIONAL GUIDELINES ON EXPOSURE TO RADIO WAVES, as well as the requirements of the EU 2014/53 / EU standard.

Your mobile device is the transmitter and receiver of radio waves. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

The guidelines for exposure to radio waves use a unit of measurement known as the Specific Absorption Limit (SAR). The SAR limit for mobile phones is 2 watts / kg.

The highest SAR values according to the ICNIRP guidelines for this device model are as follows:

Head SAR: 0.373W / kg.

SAR on body: 0.628W / kg.

WEEE Directive 2002/96 / EC of the European Parliament of January 27, 2003 on waste electrical and electronic equipment.

For these products to undergo a proper treatment, recovery and recycling process, please take them to designated collection points, where they will be admitted free of charge. By disposing of the product correctly, you are helping to conserve valuable resources and avoid any potential negative effects on human health and the environment that could result from improper waste treatment. Please contact your local authority for detailed information on the nearest designated collection point.

According to national legislation, fines may apply for improper disposal of these wastes.

funker

www.funkertech.com

