



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Funker E400i Max Pro](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)

 


 
Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Funker E400i Max Pro](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)

funker

Funker E400i User Manual



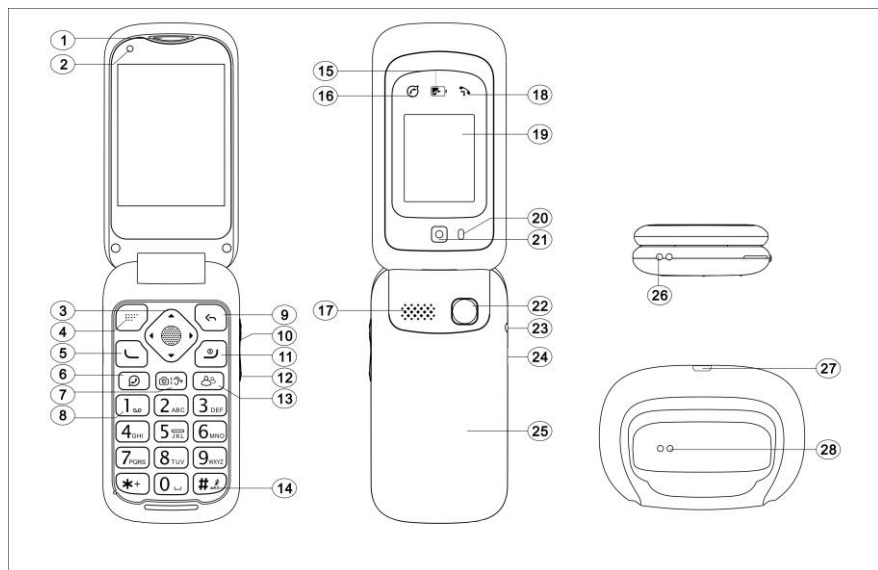

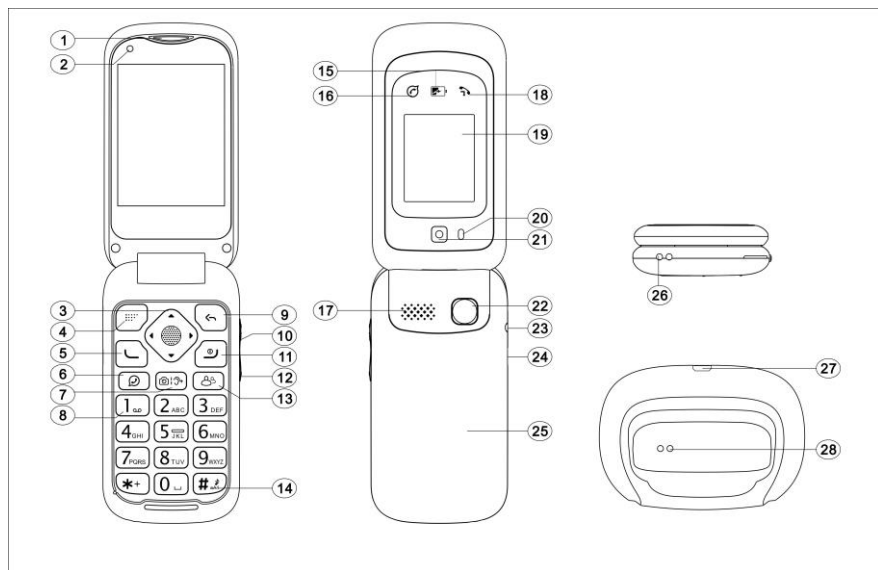

Button instructions and appearance

1. Headphone	2. Front Camera
3. Up key	4. Left Selection Key
5. Call Key	6. WhatsApp
7. Camera / Amplification Key	8. Voicemail
9. Right Selection Key / Back	10. Volume + / Torch Key
11. On-hook / Power / Call key	12. Volume Key -
13. Photo Contact	14. Silence / Method of Introduction
15. Red Charging LED	16. WhatsApp Messages / Missed Message
17. Speaker	18. Missed Call LED
19. External display	20. Torch
21. Rear Camera	22. SOS button
23. Audio Jack Connector	24/27. Usb connector
25. Battery cover	26/28 Charging Connectors

Main menu:

							
WhatsApp	Message	Records	Photo contacts	Phone Book	Camera	Gallery	Alarm
							
Voice recorder	Magnifying glass	Social media	Multimedia	SOS	Tools	Settings	APP

Contents

Installation	7
Installing the T-FLASH card	7
Installing the SIM card.....	9
Installing the battery.....	11
WhatsApp	12
Messages.....	13
Call Log.....	13
Photo Contacts.....	14
Telephone Book	15
Camera	16
Gallery.....	17
Alarm	17
Voice Memo.....	17
Magnifying glass.....	19
Social media	19
Facebook	19
YouTube	19

Browser	20
Multimedia.....	20
FM radio.....	20
Tape recorder.....	20
Music	21
Video	21
SOS.....	21
Tools.....	23
 Calendar	23
 Calculator	24
 Note.....	24
 File Manager	25
 SIM Toolkit	25
Cellular Transmissions	25
 Settings	25
 Airplane mode.....	25
 Wlan.....	26
 Mobile data	26

	Bluetooth.....	26
	Open to Answer.....	27
	Talking Keys	27
	Tone and volume	27
	Common Functions	28
	Call Settings	28
	Screen.....	28
	Idiom	28
	LED settings.....	28
	External Clock Style.....	29
	Special Features.....	29
	Low Battery Notifications.....	29
	Amplify receiver volume.....	30
	Android system	30
	Safety and Recommendations	33

 
Installation

IMPORTANT

Turn off the phone and unplug the charger before removing the battery cover.

Installing the T-FLASH card


Insert the memory card in the slot next to the SIM card, make sure the contacts are facing downwards, be careful not to scratch or bend the card contacts. You can check the pictures below:

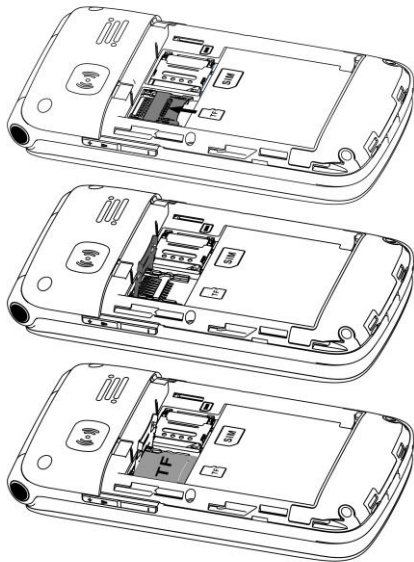

The T-Flash card is used as storage for the phone, if you connect it to a computer with a USB cable you can copy music, photos, videos ...

Install SIM card


1. Insert the SIM card into its corresponding slot next to the memory card.
(Make sure the contacts are facing down.)
2. Before removing the card, turn off the phone.

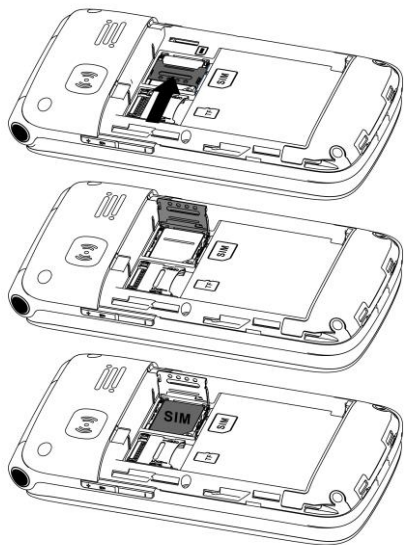

Install battery

The first time you use it, charge the battery for about 4 hours so that it reaches the maximum capacity.

Remove the battery cover and insert the battery into its compartment, then replace the cover.

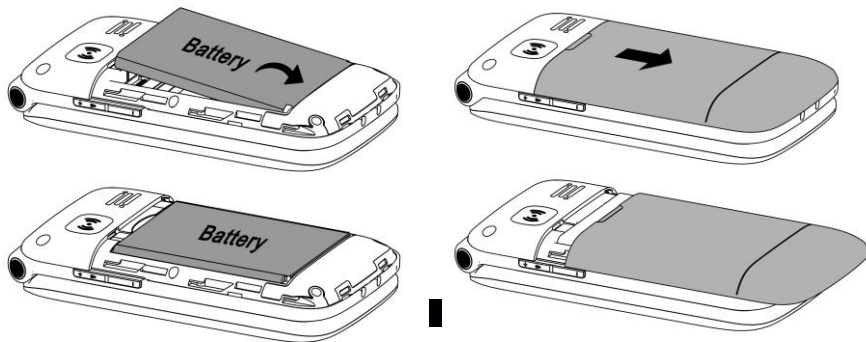

- 
- ACCEPT AND CONTINUE to verify your phone number.
 - Select the contact you want to send a message to and write it.
 - Hit the send icon when done.

Notice:

Check marks

You will notice that there are different check marks next to each message.

A gray mark it means that the message has been sent successfully.

Two gray marks they mean that the message has reached its recipient.

Two blue marks they mean that your contact has read your message.

- 
1. Press New to create a New message; Scroll or tap this icon  to choose the recipient from Phonebook or enter the number directly.
 2. Enter your message and press Send to send the message.
 3. Press Return to cancel and return to the previous steps.
 4. Press the trash icon  to delete received messages.

- 
1. All calls received, missed, dialed are saved in the Call Log.
 2. In the call log press **Options** to view Send Message, Add Contacts, Delete, Add to Blacklist.
 - 2.1 Send SMS: You can create a message for a contact from the Call Log.
 - 2.2 Call: You can make calls from the call log.
 - 2.3 Add contacts: You can save contacts to phone or SIM.
 - 2.4 Add or Remove from the black list: You can add or remove contacts from the black

list.

2.5 Delete: You can delete all missed, received or dialed calls from the call log.

- 
1. Press Edit, enter a name and number for a new contact, or press Import from Contacts to enter an already saved number automatically.
 2. Photo Call (→**Options**→**Take Photo** from the Chamber or **Choose photo** from the gallery. The selected image will be displayed when you call the selected contact or when they call you.

Select one of the following options:

- 1). Press Options to Take a photo from the camera.

Attention: You can use the front or rear camera to take the photo (the default image size is 5M pixels but you can choose 3M pixels, 2M pixels, 1.3M pixels, 1M pixels).

- two). Press Options to Choose photo from an existing image in your gallery.

Attention: You can use editing to adjust the size of the image.

- 3.**Caller ring** (→**Options**→**Voice recording** / **Select from files** / **Select from ringtones** / **Default**) to select the desired incoming call ringtone. Ex: you can select**Voice**

recording to record a custom ringtone and press **Keep** to finish it.

4. When you have a contact photo you can press Options to choose Send SMS, Call, Edit, Delete, and Import from contacts.

Telephone book

Options

1. Add contacts

You can add new contacts to phone or SIM card, enter Name y Number and press Save to confirm.

2. Select to delete

If you have saved contacts you can select them to delete the ones you need.

3. Speed Dial

You can select numbers 2 through 9 for speed dialing.

4. Manage the blacklist

You can select the contacts from the black list to filter calls and messages.

5. Other options

When there are stored contacts you can View, Send SMS, Edit, Delete and / or Copy to SIM.

- 
1. Press **Options** to choose **Rear camera** or **Frontal camera** to take pictures.
 2. Press the Flash icon  and choose **On** or **Off** to turn the flash on or off.
 3. Press the Timer icon  to choose a countdown from **3 seconds**, **5 seconds**, **10 seconds** or off.
 4. Press the icon  to go to the video library.
 5. Press the settings icon  to see more camera settings like: **Video quality**, **Storage**, **Reestablish**.

Attention:

- (1) Press * to see a preview of the image;
- (2) Press # to switch between front and rear camera;
- (3) Press left or right to switch between taking photo or recording video;
- (4) Press up or down to zoom in or out.

All images, Video, Media, Podcasts, Photos, all received images will be displayed here.

Press New to edit an alarm: **Alarm Name**, **Hour**, **Repetition**, **Sound**, **Vibration** (On / Off) and press **Keep**.

This menu allows you to set tasks that the phone can remind you of later. Accessing this menu you will be able to see a list of configured tasks. The option allows you to add new tasks, edit and delete existing ones.

If you add or edit an existing task you have to set Subject , Reminder Sound, Due Date, Due Time, Repeat, Sound Loop (default 10 times) and Reminder Interval (default 5 mins).

You can use a Reminder Sound to record whatever you want and use as an alarm instead of the existing ones.

Attention:

1. When the reminder of the scheduled task skips the phone will emit the programmed sound and a screen will appear with the task with two options for you to stop or repeat it.



With the camera's magnifying glass you can zoom to adjust the distance.

With this function older people can read newspapers, magazines or other books more easily.

Attention: Press * or # to zoom in or out.

Social media

1. Facebook

- 1) If you have a Facebook account enter username and password to access.
- 2) Without Facebook account press CREATE NEW to register and follow the steps.

2. Youtube

- 1) Tool that allows you to view and share streaming video and even upload your own videos to the network.
- 2) Find and watch the video you want.

3. Browser

- 1) Visit and operate web pages as well as any other function you can perform on the internet.
- 2) Search the web.

Notice: Using the applications listed here requires the use of mobile data or Wi-Fi.

1. FM Radio

- 1) Press the left keys < Y right > to adjust stations;
- 2) Press Options to access Auto search and save, Pause (default) / Play, choose the actions you need.
- 3) Press Return to remove or play in the background.

2. Tape recorder

Press ● to record sounds, press ■ to stop recording, press || to pause recording, press ► to play the recording, press ✓ to save the recording to a file, press ✕ to cancel recording, press ≡ to open the list of saved files.

3. Music

- (1) You can view and play files in mp3 and other formats here;
- (2) When there are audio files you will see Play, Use as ringtone, and Delete.

- 
1. Make sure the SOS option is On for it to work.
 2. Scroll to Emergency Contacts to set SOS numbers, you can put up to 5 contacts.
 3. Scroll to Warning Tone to turn the acoustic alert on or off.
 4. Scroll to Send Message to decide whether or not you want the SOS message to be sent.
 5. Scroll to Send Location if you want the phone to send your location.
 6. Scroll to Emergency Message to edit the text of the message.

Make SOS call

Before making a call with the SOS button, make sure that you have the function activated and correctly configured with the previous steps.

Press and hold the SOS Button for 3 seconds and the phone will send 2 emergency messages, one with the chosen text and another with its location in a google link, if it is active, to all emergency contacts to later start calling those numbers. If you have activated the SOS emergency sound, it will remain active until it is manually deactivated.

Attention:

- 1) There are 3 types of positioning: LBS (Location by Base Station), Wi-Fi and GPS. LBS and Wi-Fi are used indoors while GPS is used for location outdoors. The LBS positioning has an approximation of about 200m, the Wi-Fi about 20m, and the GPS about 10m.
- 2) When the SOS function is activated, the phone will automatically connect to mobile data and Wi-Fi networks and disconnect them when stopped.
- 3) The SOS function always connects to the networks to obtain the positioning and send the message. If you do not have an internet connection, the phone will send a message indicating that it has not been possible to connect to a network to obtain the position.
- 4) To obtain the position of the phone, the recipient must use Google Chrome. If you try to access it from Google Maps, the location will be incorrect.

1. Calendar

- 1) When accessing, it shows the current date.
- 2) Touch or scroll to a day to Add an Event
 - A. Enter a Title for the event.
 - A. Enter a Start Date and End Date for the event.

- B. Enter a Start Time and End Time for the event.
- C. Enter an Event Reminder for the event.
- D. Enter a Location for the event.
- E. Write Notes for the event.
- F. Save the event.

3) Delete event

Delete the selected event

4) Daily view

Show current date

5) Week View

Shows the current week.

6) Monthly View

Shows the current month.

Attention: If you select All day event, you will not need to enter the start and end time of the event.

2. Calculator

- 1) Perform math operations as follows:

2) Enter the numbers.

3) Use the arrows  to select $+$, $-$, $=$, $\times$, $\div$.

4) Press OK to be shown the result.

5) You can press $*$ to add decimals.

6) You can press $\#$ to erase and $/$ or delete.

3. Note

Here you can write any annotation you want.

4. File management

1) Use manager to rename, copy, delete, copy or move files.

2) You can check all the saved files whether they are audio, music, photos, videos ... both from the internal memory and from the SD card.

5. SIM Toolkit

Here you can see various services offered by your network operator.

6. Cellular Transmissions

It is an alert transmission function of your network operator.

Settings

1. Airplane mode

Active / Disable the airplane mode of your phone.

Attention: Airplane mode disconnects the phone from any mobile network and disables connectivity features.

2. Wlan

Activate / Deactivate the use of Wi-Fi networks.

Attention:

- 1) When the WLAN is activated, your phone will search for available nearby Wi-Fi networks and show them to you.
- 2) Click on the network you want to connect to and enter the network password if requested.

3. Mobile data

Active / Deactivate mobile data.

Attention: Mobile data is the way that mobile device users can connect to the internet.

4. Bluetooth

- 1) **Activate / Deactivate** the bluetooth of the phone making it accessible or not to other devices.
- 2) To pair devices, activate the function and press on the device that interests you, it may ask you for an access password.
- 3) You can transfer files, videos, etc. between two devices connected by bluetooth.

Attention: The pairing of bluetooth devices is done only once, once the devices are paired, they will recognize each other and will not ask you to enter codes again.

5. Open to Answer

Active / Disable the ability to pick up a call by opening the flip of the phone.

Attention: If you activate open to answer the phone, it will pick up an incoming call as long as you open the flip of the phone.

6. Keys that speak

Active / Disable the function for you to speak the numbers of the keys you press.

7. Tones and volume

- 1) You can adjust the volume for multimedia, alarms and ringers here.
- 2) Press **Also vibrate on calls** to turn vibration on or off.
- 3) Press **Phone ringtone** to select the phone ringtone.
- 4) Press **Advanced Settings** to configure more sound settings.

8. Common Functions

- 1) **Call settings:** You can configure Voicemail, Fixed Dialing, Call Forwarding, Call Blocking, and Additional Settings.
- 2) **Screen:** You can adjust brightness and turn off screen.
- 3) **Idiom:** You can add or remove languages here.

4) LED settings: Here you can activate or deactivate the LED warning lights as well as configure the hours in which it can be active (Blue LED flashes for missed calls; green LED flashes for missed and WhatsApp messages; and red LED flashes for low battery or charge) .

Attention: The numbers range from 0-23.

5) External watch style:

You can choose whether to view the clock on the external display in analog or digital format.

9. Special Features

Low battery notification

Status: On / Off

Notified Contacts: Up to 3 numbers

Notification SMS The message to send

When the battery capacity drops below 10% the phone will automatically send messages

to the 3 contacts configured for the alert indicating that the phone has a low battery. At the same time, a message will appear on the screen that will appear every 20 minutes indicating that the battery is low and should be charged. This message will repeat until the phone reaches a charge level greater than 10%.

Amplify receiver volume

- Touch or select the key **okay to Activate / Deactivate** the Boost the volume function of the receiver.
- This terminal has a fairly high ringtone, in addition to that there is the function of amplifying the volume by 25dB by pressing the Amplification Key. This function is suitable for older people with hearing problems as with this increase in volume they may not need to put on the hearing aid or the help of others in noisy environments.
- If you have activated this option, you can activate or deactivate the function by pressing the button. .

10. Android system

1) Network and Internet

You will see and configure Wi-Fi, Mobile Networks, Data Usage, Hotspot, Tethering and VPN here.

Notice: Use Mobile Hotspot to share your phone's internet with other devices.

2) Connected Devices

You will see and configure Bluetooth, Printing and USB here.

3) Apps and notifications

Check all the Apps, settings and notifications here.

4) Drums

Check the battery status here.

5) Screen

Already explained before.

6) Sound

Check the Tones and Volumes.

7) Storage

Check device storage and SD card here.

8) Security and location

Secure your device and protect your data with the lock screen and security settings.

- **Screen lock settings:** Use Select a **PIN** to unlock the screen. This option provides a medium to higher level of protection.
- **None:** Never use a screen lock.
- **SIM lock:** Use a **SIM PIN PIN** to lock the card.

9) Users and Accounts

You can check and add accounts, Emergency Information and Synchronize data automatically, from here.

10) System

You can configure the languages, date and time, recovery options, reset the device, erase data, etc. as well as view information about the device.

- **Reset Options:** you can reset DRM, Wi-Fi, mobile and Bluetooth settings, application preferences or erase all data.
- 

To use your phone safely and efficiently, read the following recommendations before using it:

- **Hearing aid compatible**

This terminal can meet the highest HAC standards: M4 / T4 from ANSI C63.19 test. Most hearing aids on the market should be compatible with this phone, although not all may. Check with your doctor or manufacturer before using your hearing aid. Also be sure to put the phone in the most suitable position when using it with hearing aids to achieve the best audio quality.

- Be careful if you use the phone near chemical plants, gas stations, or any other type of flammable or explosive product. Even when the phone is on hold, it is broadcasting radio signals. Turn it off whenever instructed to do so.

- Do not use your mobile phone when driving. If you must use it, stop the vehicle where possible first.
- Do not use the phone in hospitals as it may cause interference to electronic medical equipment.
- Turn off your phone on airplanes before taking off or landing, as well as whenever requested, as it may cause interference with electronic equipment on the plane.
- Do not leave the phone or its accessories or components within the reach of children.
- Use the original accessories and components delivered with the phone, otherwise you may damage the phone and void the warranty. Please do not short circuit, break or modify the battery as it may cause damage. Do not subject the phone to excessive temperatures. If you notice changes in color, size or any strange modification in the battery, remove it immediately and replace it. Dispose of old batteries at the appropriate recycling points.

- Do not charge the phone without the battery. Turn off the phone before removing the battery. The socket outlet must be easily accessible. The load feeder is the disconnect device.
- The phone is not waterproof so keep it dry. Avoid using the phone in very hot or very cold temperatures.
- Do not throw, drop or hit the phone as both internal and external parts may be damaged.
- If you have any problem contact the authorized technical service, do not try to open the phone yourself as it could be dangerous.
- The maintenance of the telephone should only be carried out by authorized technical services and by professionals. Do not try to repair the phone yourself.
- This device is designed to be marketed in the EEC.

EU DECLARATION OF CONFORMITY

Manufacturer or importer in the EU:

CMR Components, SL Address: Paseo Teruel nº 41.50004 - Zaragoza (Spain)

We declare the conformity of the product: **Funker E400i** complies with the basic requirements and other provisions of the Directive 2014/53/EU.

You can find the full text of the EU Declaration of Conformity at the following address:
<https://funkertech.com/descargas.php>.

THIS MODEL COMPLIES WITH THE INTERNATIONAL GUIDELINES ON EXPOSURE TO RADIO WAVES,

as well as the requirements of the EU 2014/53 / EU standard.

Your mobile device is the transmitter and receiver of radio waves. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

The guidelines for exposure to radio waves use a unit of measurement known as the Specific Absorption Limit (SAR). The SAR limit for mobile phones is 2 watts / kg.

The highest SAR values according to the ICNIRP guidelines for this device model are as follows:

Head SAR: 0.536W / kg.

Body SAR: 1.758W / kg.

WEEE Directive 2002/96 / EC of the European Parliament of January 27, 2003 on waste electrical and electronic equipment.

For these products to undergo a proper treatment, recovery and recycling process, please take them to designated collection points, where they will be admitted free of charge. By disposing of the product correctly, you are helping to conserve valuable resources and avoid any potential negative effects on human health and the environment that could result from improper waste treatment. Please contact your local authority for detailed information on the nearest designated collection point. According to national legislation, fines may apply for improper disposal of these wastes.

The logo for 'funker' is displayed in a bold, lowercase, orange sans-serif font.

FOR MORE INFORMATION, PLEASE VISIT

FÜR WEITERE INFORMATIONEN, BESUCHEN SIE BITTE

POUR PLUS D'INFORMATIONS, S'IL VOUS PLAÎT VISITEZ

FOR MAIS INFORMAÇÕES PLEASE VISIT

www.funkertech.com