



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Godox WMicS1](#) o cerca il tuo prodotto tra le [migliori offerte di Cuffie e Microfoni](#)



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Godox WMicS1](#) o cerca il tuo prodotto tra le [migliori offerte di Cuffie e Microfoni](#)




关注神牛微信公众号
Follow Wechat Public Account

godox audio

WMicS1

UHF无线麦克风系统
UHF Wireless Microphone System

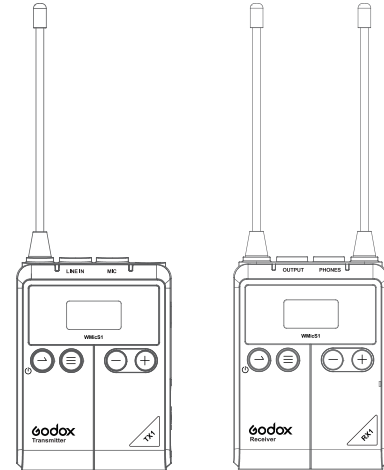

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋
电话: +86-755-29609320(8062) 传真: +86-755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao' an District, Shenzhen 518103, China
Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

Made In China



godox.com

Instruction Manual | 说明手册
Chinese English Bilingual | 中英文双语

前言

欢迎使用UHF无线麦克风系统——WMicS1，本产品非常适用于摄影录制，现场采访及语音录制等场合。请仔细阅读本说明书，以便能正确的操作，发挥本产品的优越性能。

产品特点：

- UHF频率范围：514MHz-596MHz，96个无线通道可随意切换，互不干扰
- 广播级音质，清晰稳定
- 无线距离最大可达100m
- OLED显示屏提供各项参数设置
- 3.5mm耳机实时监听
- 输出音量控制，提供静音功能
- 发射功率可调节
- 支持2个发射器拖1个接收器工作
- 2种供电方式

警告

- △ 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- △ 请保持干燥：请勿用湿手接触产品，亦不可将产品浸入水中或暴露于雨中。
- △ 请勿让儿童接触本产品。
- △ 请勿在易燃易爆环境中使用。在这些场合下，请注意相关警告标识。
- △ 请勿放置在超过40度的高温环境中。
- △ 若发生任何故障，请立即关闭电源。
- △ 使用电池的注意事项：


- 只能使用本手册中列出的电池。请勿混用新旧电池或不同类型的电池。
- 请仔细阅读并遵守由厂商提供的警告或指示。
- 切勿使电池短路或拆卸电池。
- 切勿将电池投入火中或加热升温。
- 切勿试图以反方向安装电池。
- 当电量用尽时，电池容易漏液。所以为了避免产品受损，请在长期不使用本产品或电量用尽时取出电池。
- 如果受损电池中的液体接触到皮肤或衣服，请立即用大量清水冲洗。

目录

前言	01
警告	01
目录	02
部件名称	03
标配物品	05
可搭配产品	06
供电方式	06
使用说明	06
规格参数	08
故障排除	09
维护保养	09


部件名称

腰包发射器 (TX1)

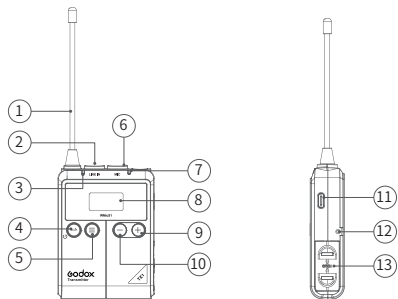


- | | | |
|--|--|--------------------|
| 1. 天线 | 6. 麦克风输入接口 | 11. Type-C USB |
| 2. 3.5mm 音频线输入接口 | 7. Audio 指示灯
- 绿灯: 拾音模式
- 红灯: 静音模式 | 12. 金属背夹接口 |
| 3. Power 指示灯
- 绿灯: 电量充足
- 红灯: 电量低, 需更换电池 | 8. OLED 显示屏 | 13. 电池盒 - 两节 5号 电池 |
| 4. 电源 / 静音键 | 9. 菜单 + | 14. 产品标签贴 |
| 5. 菜单键 | 10. 菜单 - | 15. 1/8 冷靴接口 |

OLED显示屏:

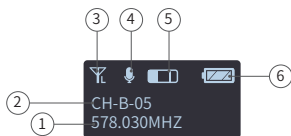


1. 通讯频段
2. 无线组别及通道
3. 发射功率指标
4. 静音图标
5. 输入音量显示
6. 电池电量显示

便携接收器 (RX1)

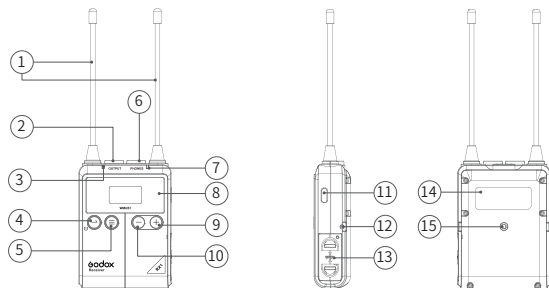


- | | | |
|---|---|--------------------|
| 1. 天线 | 6. 3.5mm 耳机监听接口 | 11. Type-C USB |
| 2. 3.5mm 音频线输出接口 | 7. RF 指示灯
- 绿灯: RF 信号强
- 红灯: RF 信号弱或已断开 | 12. 金属背夹接口 |
| 3. Power 指示灯
- 绿灯: 电量充足
- 红灯: 电量低, 需换电池 | 8. OLED 显示屏 | 13. 电池盒 - 两节 5号 电池 |
| 4. 电源 / 返回键 | 9. 音量 + / 菜单 + | 14. 产品标签贴 |
| 5. 菜单键 | 10. 音量 - / 菜单 - | 15. 1/8 冷靴接口 |

OLED显示屏:

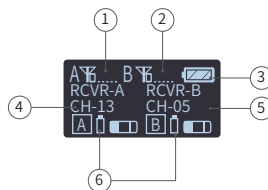


1. A 组射频频号
2. B 组射频频号
3. 电池电量显示
4. A 组接收频道
5. B 组接收频道
6. 同步发射器电量及输入音量

标配物品

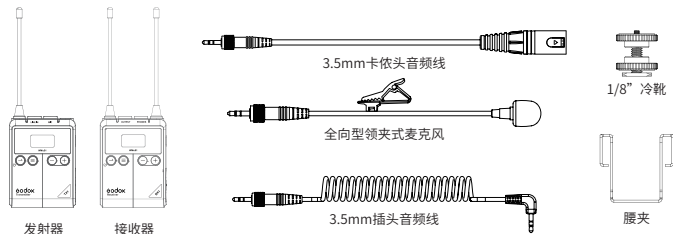


名称	型号	标配物品
腰包发射器	TX1	发射器 x1 腰夹 x1 全向型领夹式麦克风 x1
便携接收器	RX1	接收器 x1 腰夹 x1 3.5mm插头音频线 x1 3.5mm卡侬头音频线 x1 1/8" 冷靴 x1
UHF无线麦克风系统组合一	WMicS1 Kit 1	发射器 x1 接收器 x1 腰夹 x2 全向型领夹式麦克风 x1 3.5mm插头音频线 x1 3.5mm卡侬头音频线 x1 1/8" 冷靴 x1
UHF无线麦克风系统组合二	WMicS1 Kit 2	发射器 x2 接收器 x1 腰夹 x3 全向型领夹式麦克风 x2 3.5mm插头音频线 x1 3.5mm卡侬头音频线 x1 1/8" 冷靴 x1

可搭配产品

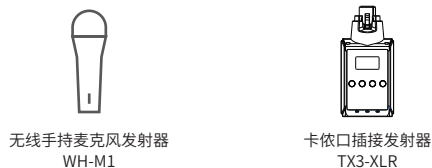


供电方式

两种供电方式

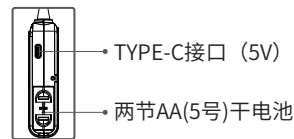

使用说明

一、发射器设置

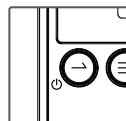

- 开关机：长按2秒电源开关按键即可开/关机；短按电源键开关静音。
- GRP/CH/RF设置：长按菜单键进入设置界面，再短按菜单键切换下一个设置。

- GRP组别设置：选中GRP，按+/-可选A/B组别。
- CH通道设置：选中CH，按+/-可设置CH，有01-48个通道可选择。
- RF功率设置：选中RF power切换H/L功率。

 
- 显示屏亮度设置：短按 +/- 至显示屏显示 OLED light，再长按菜单键选中 OLED light 对应的亮度级别。短按 +/- 键选择亮度级别，级别：1-8 八级。
- 软件版本：短按 +/- 显示 Version 时，表示软件的版本。
- 背光时间：短按 +/- 至显示屏显示 BackLight，再长按菜单键背光时间跳动，短按 +/- 键选择背光时间：ON 常亮, OFF 常闭, Delay10S/30S/60S。
- 恢复出厂设置：短按 +/- 至显示屏显示 Restore Default，再长按菜单键即可进行恢复出厂设置。

二、接收器设置




- 开关机 /GRP/CH 设置方法同发射器一样，设置为相同组别通道即可录音和实时监听。
- 显示屏亮度设置：短按 +/- 至显示屏显示 OLED light，再长按菜单键 OLED light 对应的亮度值跳动，短按 +/- 键选择亮度级别，级别：1-8 八级。
- 输出模式：分为 Stereo(立体声)和 Mono(单声道)两种模式。短按 +/- 键切换至 Output mode，再长按菜单键即可进行两种声道切换。当输出模式是 Mono(单声道)时，左声道和右声道音频将被混合输出；当输出模式是 Stereo(立体声)，左(A组)和右(B组)音频声道输出将独立；系统默认为 Mono(单声道)。
- 软件版本：短按 +/- 显示 Version 时，表示软件的版本。
- 背光时间：短按 +/- 至显示屏显示 BackLight，再长按菜单键背光时间跳动，短按 +/- 键选择背光时间：ON 常亮, OFF 常闭, Delay10S/30S/60S。
- 恢复出厂设置：短按 +/- 至显示屏显示 Restore Default，再长按菜单键即可进行恢复出厂设置。

三、发射器接口：



LINE IN：连接外界音频信号输入。
MIC：连接领夹麦克风。

 四、接收器接口：



OUTPUT：连接外界音频信号输出。
PHONES：连接耳机线。

规格参数

名称	腰包发射器 TX1	便携接收器 RX1
频道组	A/B	
频道数	96(A组48 B组48)	
RF频率范围	514MHz - 596MHz	
振荡器类型	晶体控制锁相环合成器	
音频频率范围	40Hz - 18KHz	
声音延迟	12ms	
天线	1/4λ	
音频输入接口	3.5mm接口	
供电	USB接口	Type -C USB
	电池	两节AA(5号)电池
工作温度范围	0°C-40°C	
储存温度	-10°C-40°C	
信噪比	≈70dB	
接收灵敏度	\	-95dBm
失真	\	0.5%以下
尺寸	63*190*22mm	63*190*25mm
净重	70g	80g

故障排除

- 如不能接收到音频信号，请检查电池是否正确安装以及是否打开发射器电源；发射器和接收器是否设置在同一组别和频道；麦克风及耳机是否已正确牢固连接到位；功能模式是否设置正确。
- 检查发射器是否设置的静音。
- 如您的发射器受到他人干扰，改变发射器和接收器的频道设置即可。
- 如您发现发射音频距离有限或者有漏发现象，请检查是否电池耗尽，请尝试更换电池。

维护保养

避免跌落：如果受到强烈碰撞或振动，发射器和接收器可能会发生故障。
保持干燥：本产品是非防水产品，如果将其浸入水中或放置于高湿度的环境中将可能发生故障。内部构造生锈可能会导致无法修理的损害。

避免温度骤变：温度的突变，诸如在寒冷天进出温暖的大楼将可能会使发射器和接收器内部结露。为避免结露，请将发射器和接收器事先装入手提袋或塑料包内，以防温度突变。

远离强磁场：无线电广播发射机等设备产生的强静电或强磁场可能会干扰本产品正常工作。

1 年保修，消耗品如领夹麦克风等，不在 1 年保修范围。

经发现擅自检修此设备，将取消一年保修期，维修需要收取相关费用。

如果本品出现故障或者被水淋湿，在专业人员维修后方可继续使用。

如有技术更改，恕不另行通知。

Forward

Thank you for purchasing UHF Wireless Microphone System —— WMicS1. These products are suitable for video recording, journalistic shooting, audio recording, etc. Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Features:

- UHF Frequency Range: 514MHz-596MHz. There are 96 wireless channels which can be freely switched without interference
- High and stable sound quality like broadcast
- The maximum wireless distance up to 100m
- With OLED display to show the parameters setting
- Achieve real-time monitoring with 3.5mm earphone
- With output volume control and silence function
- The power of transmitter is adjustable
- Support two transmitters and one receiver to work simultaneously
- Two power supply mode

Warning


- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Keep out of reach of children.
- ⚠ Do not use the flash unit in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Do not leave or store the product if the ambient temperature reads over 40°C.
- ⚠ Turn off the flash trigger immediately in the event of malfunction.
- ⚠ Observe precautions when handling batteries.
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Content

Forward	10
Warning	11
Content	12
Names of Parts	13
Included Item	15
Recommended Combination	16
Power Supply	16
Operation Instruction	16
Technical Data	19
Troubleshooting	20
Maintenance	20


Names of Parts

Body-pack Transmitter (TX1)

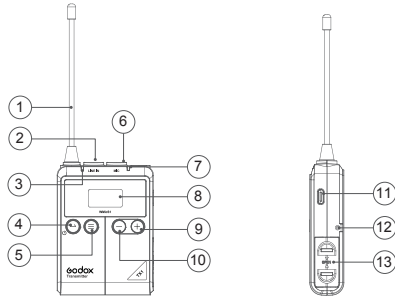


- | | | |
|--|---|-------------------------------------|
| 1. Antenna | 6. Microphone/Line In Port | 11. Type-C USB Port |
| 2. 3.5mm Audio Line In Port | 7. Audio Indicator
-Green light: Sound directivity mode
-Red light: Silent mode | 12. Metal Clip Port |
| 3. Power Indicator
-Green light: full battery level
-Red light: Low battery level, replace the batteries | 8. OLED Display | 13. Battery Holder (-2x AA Battery) |
| 4. Power Source/Mute Button | 9. Menu + | 14. Product Label |
| 5. Menu Button | 10. Menu - | 15. 1/8" Shoe Mount Port |

OLED Display:

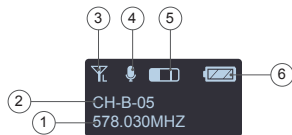


1. Communication Frequency
2. Wireless Group and Channel
3. Transmitting Power Icon
4. Silence Icon
5. Input Volume Indicator
6. Battery Level Indicator

Portable Receiver (RX1)

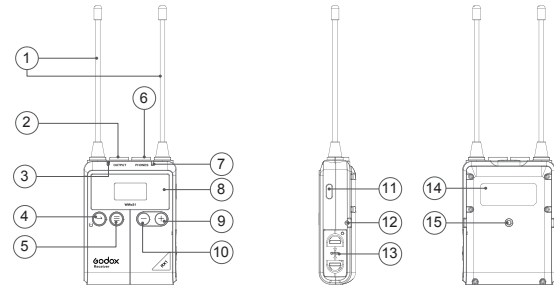


- | | | |
|--|---|-------------------------------------|
| 1. Antenna | 6. 3.5mm Earphone Monitoring Port | 11. Type-C USB Port |
| 2. 3.5mm Audio Output Port | 7. RF Indicator
-Green light: Strong RF signal
-Red light: Weak or disconnected RF signal | 12. Metal Clip Port |
| 3. Power Indicator
-Green light: full battery level
-Red light: Low battery level, replace the batteries | 8. OLED Display | 13. Battery Holder (-2x AA Battery) |
| 4. Power Source/Mute Button | 9. Volume +/Menu + | 14. Product Label |
| 5. Menu Button | 10. Volume -/Menu - | 15. 1/8" Shoe Mount Port |

OLED Display:

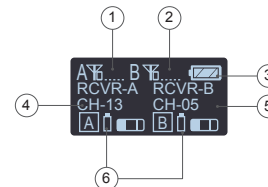

1. A Group Frequency Signal
2. B Group Frequency Signal
3. Battery Level Indicator
4. A Group Receive Channel
5. B Group Receive Channel
6. Transmitter's Battery Level and Volume

Included Item

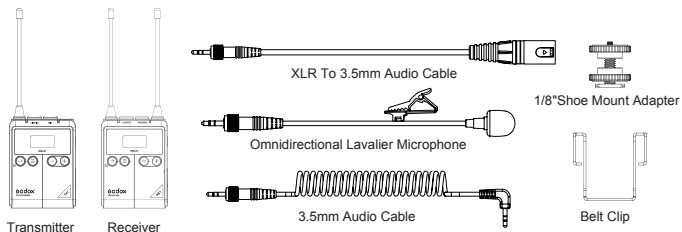

Name	Model	Included Items
Body-pack Transmitter	TX1	Transmitter x1 Belt Clip x1 Omnidirectional Lavalier Microphone×1
Portable Receiver	RX1	Receiver x1 Belt Clip x1 3.5mm Audio Cable×1 XLR To 3.5mm Audio Cable×1 1/8"Shoe Mount Adapter x1
UHF Wireless Microphone System Kit 1	WMicS1 Kit 1	Transmitter x1 Receiver x1 Belt Clip x2 Omnidirectional Lavalier Microphone×1 3.5mm Audio Cable×1 XLR To 3.5mm Audio Cable×1 1/8"Shoe Mount Adapter x1

UHF Wireless Microphone System Kit 2	WMicS1 Kit 2	Transmitter x2 Receiver x1 Belt Clip x3 Omnidirectional Lavalier Microphone×2 3.5mm Audio Cable×1 XLR To 3.5mm Audio Cable×1 1/8"Shoe Mount Adapter×1
---	-----------------	---

Recommended Combination




Wireless Handheld Microphone
Transmitter WH-M1



Plug-On XLR Transmitter TX3-XLR


Power Supply

There are two modes of power supply

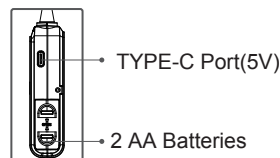

Operation Instruction

Transmitter Setting

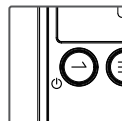

- Power on/off: Long press the power switch for 2 seconds to power it on or off. Short press the power switch to make it silent.

- GRP/CH/RF Setting: Long press the menu button to enter the setting interface. Then, short press the menu button to switch the next setting.
- GRP Group setting: Choose GRP and press +/- to choose A or B group.
- CH Channel setting: Choose CH and press +/- to set channel from 01 to 48.
- RF Power setting: Choose RF power to switch H/L power.
- Display brightness setting: short press +/- button until OLED light is displayed on the panel. Then, long press the menu button to choose the corresponding brightness level of OLED light. Short press +/- button to choose brightness from 1 to 8 levels.
- Software version: short press +/- button until Version is displayed, which means the version of software.
- Backlighting time: Short press +/- until Back Light is displayed on the LCD panel. Then, long press the menu button and the backlighting time will be blinking. Short press the +/- button to choose backlighting time: ON means lighting and OFF means off. Delay 10S/30S/60S.
- Restore factory settings: short press the +/- button until Restore Default is displayed. Then, long press the menu button to restore factory settings.

Receiver Setting

 


- The setting methods of power on&off/GRP/CH is the same as transmitter. Set the receiver's group and channel to the same as the transmitter's to record sound.
- Display brightness setting: short press +/- button until OLED light is displayed on the panel. Then, long press the menu button and the corresponding brightness value of OLED light will be blinking. Short press +/- button to choose brightness from 1 to 8 levels.
- Output mode: there are Stereo mode and Mono mode.

Short press +/- button to enter output mode. Then, long press the menu button to switch the two channels. When in Monochannel output, the sound of left channel and right channel will be output simultaneously. When in Stereo channel output, the sound of left channel(A group) and right channel(B group) will be output independently. The default channel of this system is Mono channel.


- Software version: short press +/- button until Version is displayed, which means the version of software.
- Backlighting time: Short press +/- until Back Light is displayed on the LCD panel. Then, long press the menu button and the backlighting time will be blinking. Short press the +/- button to choose backlighting time: ON means lighting and OFF means off. Delay 10S/30S/60S.
- Restore factory settings: short press the +/- button until Restore Default is displayed. Then, long press the menu button to restore factory settings.

Transmitter Port



LINE IN: To connect with external audio signal input.
MIC: To connect with lavalier microphone.

 Receiver Port



OUTPUT: To connect with external audio signal output.
PHONES: To connect with earphone cable.

Technical Data

Name	Body-pack Transmitter TX1	Portable Receiver RX1
Channel Group	A/B	
Selectable Channel	96(Group A: 48; Group B: 48)	
RF Frequency Range	514MHz - 596MHz	
Oscillator Type	Crystal Controlled Phase-Locked Loop Synthesizer	
Audio Frequency Range	40Hz-18KHz	
Sound Delay	12ms	
Antenna	1/4λ	
Audio Input Port	3.5mm Port	
Power Supply	USB Port	Type-C USB
	Battery	Two AA batteries
Working Temperature Range	0°C-40°C	
Storage Temperature	-10°C-40°C	
Signal Noise Ratio	≈70dB	
Receive Sensitivity	\	-95dBm
Distortion	\	Below 0.5%
Size	63*190*22mm	63*190*25mm
Net Weight	70g	80g

Troubleshooting

- Unable to receive audio signal. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and the receiver are set to the same channel, if the microphone or earphone is well connected, or if the devices are set to the correct mode.
- Check if the transmitter is set to silent mode or not.
- Signal disturbance or shooting interference. Change a different channel of the transmitter and receiver.
- Operating audio distance limited or signal missing. Check if batteries are exhausted. If so, replace them.

Maintenance

Avoid sudden drops. The device may fail to work after strong shocks, impacts, or excess stress.

Keep dry. The product isn't water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.

Avoid sudden temperature changes. Condensation happens if sudden temperature changes such as the circumstance when taking the transmitter and receiver out of a building with higher temperature to outside in winter. Please put the transmitter and receiver in a handbag or plastic bag beforehand.

Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

This product, except consumables e.g. lapel microphone, is supported with a one-year warranty.

Unauthorized service will void the warranty.

If the product had failures or was wetted, do not use it until it is repaired by professionals.

Changes made to the specifications or designs may not be reflected in this manual.