



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Nivona NICR 7'90](#)
o cerca il tuo prodotto tra le [migliori offerte di Macchine da Caffè](#)



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Nivona NICR 7'90](#)
o cerca il tuo prodotto tra le [migliori offerte di Macchine da Caffè](#)

NIVONA

passion for coffee

GB User manual

CafeRomatica

7'..



10
9
8
7
6
5

WELCOME TO THE NIVONA FAMILY!

We are delighted at the confidence you have shown in us by choosing a quality product from NIVONA.

We would like to express our sincere **THANKS**.

To ensure maximum enjoyment of your NIVONA machine, please read through this document carefully and pay attention to the safety instructions before using the machine for the first time.

Please keep this document in a safe place. Then you can use it as a reference or pass it on to any subsequent owner.

We hope you enjoy your NIVONA product and, with it, a good, flavourful cup of coffee.

Best wishes to you from the NIVONA team!



SYMBOLS USED

The following symbols are used in these instructions:



CAUTION

This symbol draws your attention to possible dangers.



NOTE

This symbol draws your attention to special information.



TIP

This symbol indicates helpful advice on how to use the machine.

TABLE OF CONTENTS

1. SAFETY INFORMATION	4	7. BASIC SETTINGS.....	15
1.1. Correct use	4	7.1. General settings	15
1.2. General instructions for the user	4	7.2. Set grind fineness	16
1.3. Limits to the range of users	5	7.3. Aroma Balance System	16
2. CONTROL ELEMENTS.....	6	7.4. NIVONA App.....	17
3. OPERATION OF THE MACHINE	7	8. CLEANING & MAINTENANCE	17
3.1. Operation with the rotary dial.....	7	8.1. Rinse frother	18
3.2. Symbol functions	8	8.2. Clean frother.....	19
4. INITIAL STARTUP	8	8.3. Rinse system	19
4.1. Preparation	8	8.4. Clean system	20
4.2. Initial Start menu	9	8.5. Descale system.....	21
5. MENU NAVIGATION.....	11	8.6. Remove & clean brewing unit.....	22
6. PREPARE SPECIALITY COFFEES	11	8.7. Clean regularly by hand.....	22
6.1. Draw speciality coffee.....	11	8.8. Disassemble and clean frother	23
6.2. Recipe menu	12	8.9. Change filter	24
6.3. 2-cup function	13	8.10. Status of maintenance	24
6.4. Cappuccino-Connaisseur	13	9. SOLVING PROBLEMS YOURSELF	25
6.5. Flavour profiles	13	10. ACCESSORIES & COFFEE ASSORTMENT	28
6.6. MY COFFEE (for individual speciality coffees)	13	11. CUSTOMER SERVICE & WARRANTY	28
6.7. Prepare ground coffee	14	12. PACKAGING & DISPOSAL	28
		13. TECHNICAL DATA.....	29

1. SAFETY INSTRUCTIONS

CAUTION

Repairs to electrical appliances must be carried out only by specialised technicians! Improper repairs can expose the user to considerable dangers! If the machine is used other than for its intended purpose or is operated or maintained improperly, we cannot accept liability for any resulting damage!

CAUTION

Actuating the on/off switch during the brewing process can damage the machine! Switch the machine off only when it is idle!

CAUTION

Danger of burns! Hot water might spray out of the outlet at first when steam or hot water is drawn. Touch the outlet only when cold.

1.1. Correct use

- The machine may only be used for its designated purpose (use only in private households) and is not intended for commercial use, which would void the warranty (see accompanying warranty terms).

1.2. General instructions for the user

- Set the machine on a dry, level and stable surface, and use it only indoors. Never place this machine on a hot surface, near other appliances which become very hot when in use (e.g. stove, deep fryer), or near open flames.
- The machine must not be used in cupboards or other closed pieces of furniture.
- The mains supply voltage must always match the working voltage of the machine. Please refer to the type plate on the machine.
- The machine must not be used at altitudes over 2000 m above sea level.
- Do not operate the machine if the mains supply cable or the casing is damaged. Never let the mains supply cable touch hot parts.
- If the mains supply cable of the machine is damaged, it must be replaced by the manufacturer, its customer service representative, or a similarly qualified technician to avoid hazards.
- Never immerse the machine in water.
- Always keep the mains supply plug dry and keep it away from moisture.
- Do not pull on the mains supply cable to disconnect the plug from the mains socket.

- If a fault occurs, disconnect the mains plug immediately (never by pulling on the mains supply cable or the machine itself).
- Before carrying out maintenance or cleaning, check that the machine is switched off and that the mains plug is disconnected.
- No liability for damage is accepted in case of incorrect operation, improper use, or incorrect repairs. The warranty is void in these cases.
- Always follow the instructions for cleaning and descaling! Failure to comply voids the warranty.
- Never clean the machine or individual parts in the dishwasher. Failure to comply voids the warranty.
- Do not leave the machine switched on unnecessarily.
- If you will be away for several days, always unplug the mains supply cable.
- Please use the integrated coffee grinder only to grind roasted and untreated coffee beans, not for other food items! Always make sure that there are no foreign objects mixed in with the coffee beans, which voids the warranty.

- If repair of the machine is required (including replacement of the mains cable!), please first contact the NIVONA service telephone or the dealer from which the machine was purchased, and, after consultation with us and observing the section “How to make your machine ready for shipment” in Chapter 11 of this document, send it to **NIVONA Central Customer Service, Südwestpark 49, D-90449 Nuremberg, Germany.**

1.3. Limits to the range of users

- This machine can be used by children 8 and older and by persons with physical, sensory, or mental impairments or who are lacking in experience and knowledge, provided they are acting under supervision or have been instructed on how to use the machine safely and are aware of the possible dangers. Children must not play with the machine. Cleaning and maintenance of this machine must not be carried out by children unless they are age 8 or over and are acting under supervision. The machine and its connection line must be kept away from children younger than 8.

D

GB

FR


NL

PL

RU


2.

2. CONTROL ELEMENTS

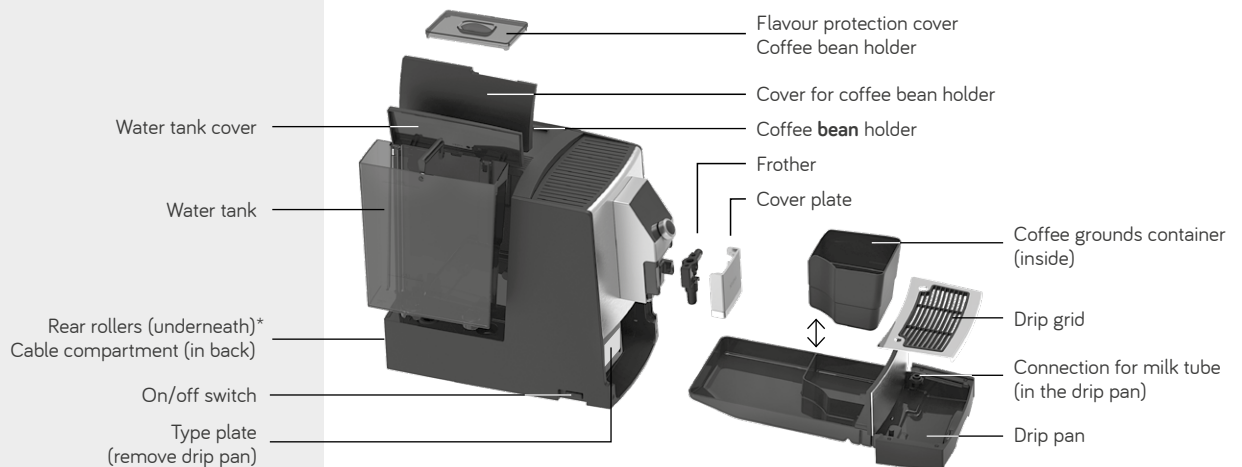

WELCOME PACK (included with machine)

- CLARIS fresh water filter
- User manual
- Warranty terms
- Measuring spoon
- 2 cleaning tablets
- Test strips (for measuring water hardness)
- Connection tube for milk

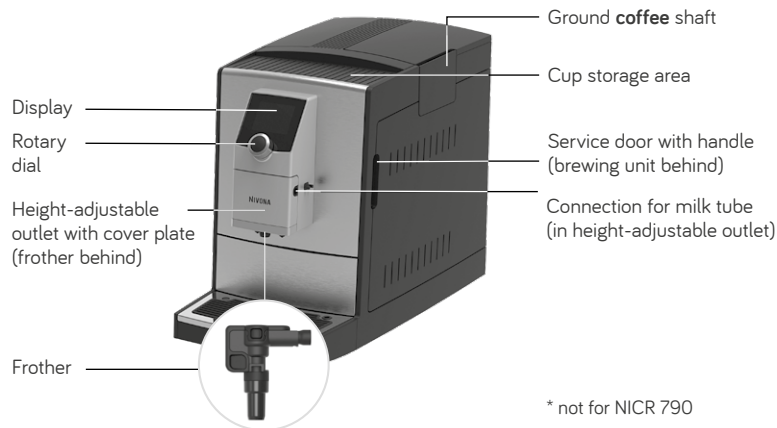

* not for NICR 790

3. OPERATION OF THE MACHINE

3.1. Operation with the rotary dial

The NIVONA machine can be operated using the *rotary dial*:



Rotary dial

navigate / select /
change / confirm
by turning and pressing

Turning

To switch between the **SPECIALITY COFFEES** and the main menus **SETTINGS** and **MAINTENANCE**, to select / navigate within the main menus and to change the setting options in the submenus and **recipe menu**.

Short press

To start / confirm the currently marked function.

In the submenus and in the **recipe menu**, the first press selects the setting parameters and the next press confirms the change.

A short press when the beverage is drawn cancels the procedure.

Long press

In the **SPECIALITY COFFEES**, a long press takes you to the recipe menu where you can change the settings. A long press in the recipe menu and in the **SETTINGS** menu will return you to the main menu.



Turning



Pressing

3.2. Symbol functions

	Flashing <i>rotary dial</i> symbol requires confirmation		Cancellation of a beverage draw or deletion of a saved MY COFFEE speciality
	Location / process progress in the MAINTENANCE menu		Start a SPECIALITY COFFEE beverage draw
	One step back		Save changes
	Message / instruction for action	The currently selected symbol / function is optically marked; for the SPECIALITY COFFEES the symbol description is displayed	

Even **during** a coffee draw that has already started, various parameters can be changed by turning the *rotary dial* **as long as they are optically marked**.

A beverage can be cancelled by pressing the *rotary dial* once while the beverage is being dispensed. If the draw is cancelled while the parameters are still optically marked, the *rotary dial* must be pressed twice.

4.

4. INITIAL STARTUP

4.1. Preparation

-  Remove the machine and other supplied parts from the packaging
-  Place the machine on a level, dry work surface (ventilation slots must not be covered)

- Connect the mains supply cable to a power socket which has been correctly installed (any unnecessary length of cable remains inside the cable compartment)
- Connect milk tube to the height-adjustable outlet and drip pan
- Turn on machine

When the machine is switched on **after the initial start-up**, it first heats up, the display shows **SYSTEM RINSING** and the rinsing process starts automatically.

4.2. Initial Start menu

The instructions on the display lead you through the Initial Start menu conveniently and step-by-step.

Set language

- Select the language with the *rotary dial* and confirm

Set filter

- Select filter setting with the *rotary dial*

Operation with filter

- Set the menu setting to **OPERATION WITH FILTER "YES"** and confirm with the *rotary dial*.
- Using the mounting aid at the end of the measuring spoon, screw the filter into the water tank and confirm using the *rotary dial*.

Operation without filter (factory settings)

- Set the menu setting to **OPERATION WITH FILTER "NO"** and confirm with the *rotary dial*.

When using the machine without a filter, the water hardness must be entered in the next step.



Milk tube – connected to drip pan

i NOTE

Details on **Operation of the Machine** are contained in Chapter 3, starting at page 7.

i NOTE

If used with a filter, the machine does not need to be descaled as often.



OPERATION WITH FILTER
YES




Screw filter into water tank



OPERATION WITH FILTER
NO

Test strips	Degree of hardness	Water hardness display
≤ 1 red point	1 - 7°	WATER HARDNESS 1
2 red points	8 - 14°	WATER HARDNESS 2
3 red points	15 - 21°	WATER HARDNESS 3 (factory settings)
≥ 4 red points	> 21°	WATER HARDNESS 4

 

FILL WATER TANK



FILL COFFEE BEANS



FILLING SYSTEM




FILTER RINSING

**NOTE**

 At initial startup, the grind chamber is still empty. After the first grinding, it is possible that **FILL COFFEE BEANS** is displayed and the machine does not make coffee.

➤ Press the *rotary dial* again for an additional draw; the process is then repeated



SYSTEM RINSING

Set water hardness*

- Immerse supplied test strip briefly in water, shake it off and read the test result after about 1 minute
- In the menu, use the *rotary dial* to select the water hardness read from the test strip and confirm

Fill water tank (> 0.5l)

- **Remove** the water tank, fill water tank with fresh, cold water without carbonation (no mineral water), reinsert the tank, and confirm using the *rotary dial*
- Do not fill with any carbonated liquids or any other liquids, or the warranty is void!

Fill coffee bean holder

- Fill the coffee bean holder with untreated, roasted coffee beans without foreign objects or dirt and without sugar, then close the flavour protection cover well and confirm using the *rotary dial*

Fill / rinse system, rinse filter

- Place a large container (> 0.5 l) under the outlet and confirm with the *rotary dial*
- When operating **with** filter, confirm again with the *rotary dial* to fill the system and rinse the filter
- Wait until no more water comes out of the outlet, then empty the container

* for operation without filter

Operation tutorial

At the end of the initial start-up, a short tutorial on the machine's operation appears. All operating functions that should be performed when they appear are shown on the display one after another. As soon as an operating function has been performed, the next one appears. If an operating function is not carried out, the next one appears automatically after some time.

All settings that were determined during initial startup can be changed at any time in the **SETTINGS** menu.

5. MENU NAVIGATION

In the NIVONA machine there is a choice of **SPECIALITY COFFEES** and the main menus **SETTINGS** and **MAINTENANCE**. All available functions of the machine can be carried out there.

Detailed information on navigation within and between the main menus is found in Chapter 3 starting at page 7.

6. PREPARE SPECIALITY COFFEES

6.1. Draw speciality coffee

- Select the desired **SPECIALITY COFFEE**
- For speciality coffees with milk, connect the milk-filled container (milk container, milk refrigerator, Tetra Pack, or similar) to the lower end of the milk tube. The upper end remains in the outlet



SETTINGS



 
MAINTENANCE



Connect
milk source



RINSE
FROTHER



Connect tube



Frother
is rinsed



Recipe menu

- A short press on the desired speciality coffee begins the beverage draw
- After completion of the draw of a speciality coffee with milk, the display shows the message / instruction to rinse the frother. The frother should then be rinsed as soon as possible, but at the latest before switching off the machine. To do this, reconnect the tube to the drip pan, and select and confirm the message / instruction on the display by turning the *rotary dial*. Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*.

6.2. Recipe menu

The recipe menu is a submenu in the individual speciality coffees. Here, the factory recipe settings can be changed individually and stored permanently.

- A long press on the *rotary dial* on the symbol of a speciality coffee leads to the **recipe menu** of the beverage

Adjustable parameters in the recipe menu:

	Bean strength		1- or 2-cup-function	80 ml	Quantity (coffee / milk froth / water / milk, depend- ing on the speciality coffee)
	Temperature		Flavour profile (DYNAMIC, CONSTANT, INTENSE)	80 ml	
	Cappuccino- Connaisseur (see 6.4.)			40 ml	

- A short press on the activated **Save** symbol saves the beverage recipe with the changed parameters
- A short press on the activated **Start** symbol begins the beverage draw with the changed parameters

6.3. 2-cup function*

To fill two cups directly next to each other from the same beverage draw, a second cup must be placed under the outlet and then either

- Press the *rotary dial* briefly twice in succession to start beverage preparation (for the current draw) or
- Change the cup symbol in the recipe menu of the speciality coffee (as permanent recipe setting)

6.4. Cappuccino-Connaisseur

By changing the sequence in the sequence symbol, cappuccino enthusiasts can specify **in the recipe menu** whether the milk or the coffee goes into the cup first.

6.5. Flavour profiles

Changing the flavour profile (DYNAMIC | CONSTANT | INTENSE) in the **recipe menu** changes the brewing process and extraction from the beans and thus the taste of the coffee (see also Chapter 7.3. Aroma Balance System on page 16).



SAVE
RECIPE



Start beverage draw
in the recipe menu



1 CUP



2 CUPS



1ST MILK



1ST COFFEE



DYNAMIC



CONSTANT



INTENSE

* only for ESPRESSO and COFFEE

MY
COFFEESAVE
RECIPEConfirm
deletionFILL GROUND
COFFEECLOSE
SHAFT LID**CAUTION**

The ground coffee shaft is not a storage container. Therefore, never add more than one portion to the shaft and use only fresh or vacuum-packed ground coffee from coffee beans.

Water-soluble instant coffee must not be used!

**NOTE**

If you accidentally open the ground coffee shaft – or have not started a beverage draw after adding ground coffee – the machine is automatically rinsed about one minute after the cover is closed again and is then ready for use again.

6.6. MY COFFEE (for individual speciality coffees)

Up to 5 different beverages can be individually set, named and stored with the NIVONA machine.

- To do this, select the menu item **MY COFFEE**
- Select an existing beverage with a long press or add a new one with **+**
- Select the basic recipe (speciality coffee), assign a name (if necessary, delete the MY COFFEE preset and confirm the name with **OK**), set the recipe individually and save it
- A saved **MY COFFEE recipe** can be changed, edited and also removed by confirming the deletion by pressing and holding the *rotary dial* on the corresponding symbol

6.7. Prepare ground coffee

- Open the cover of the ground coffee shaft (underneath the cover on the upper right of the machine)
- The display shows **FILL GROUND COFFEE AND CLOSE SHAFT LID**
- Add a level measuring spoon of ground coffee
- Close cover and flap
- The display shows when the ground coffee is ready
- Place a cup in the middle below the coffee outlet
- Select the beverage in the **Speciality coffees**
- Start preparation

7. BASIC SETTINGS

7.1. General settings


All of the following parameters can be changed, edited or checked in the **SETTINGS** menu using the *rotary dial*.




SETTINGS

LIVE PROGRAMMING – Change and save the recipe setting while a beverage is being drawn (choose a speciality coffee and follow the instructions on the display)	WATER HARDNESS – Set the water hardness (only displayed during operation without filter)	FILTER – Set operation with / without filter
TIMES – Set an automatic switch-off time	STATISTICS – Displays the draws per speciality coffee and the performed maintenance functions since initial startup	LANGUAGE – Set the language
BLUETOOTH – Connection to smartphone / tablet and control of the machine with the NIVONA App	FACTORY SETTINGS – Recipes, settings and Bluetooth can be reset to the factory settings here	

If the *rotary dial* has not been actuated for a longer period of time, the machine switches automatically into the **ECO mode**. A screensaver appears on the display. Actuate the *rotary dial* to leave the **ECO mode**.

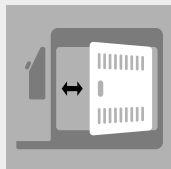

Open/close
service door

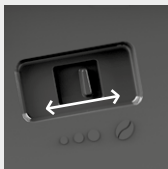

Set grind fineness

⚠ CAUTION

The grind fineness may only be set when the grinder is running!

The grinder can be adjusted to adapt to the roast of the coffee beans. We recommend you always leave the grinder at a medium setting.

i NOTE

When changing the grind fineness, we recommend:

- a finer setting for light roasts (regulator further to the left),
- a coarser setting for dark roasts (regulator further to the right).

7.2. Set grind fineness

To change the grind fineness, please:

- Open the service door on the right side of the housing (gently pull the recess in the handle away from the housing, then carefully remove the service door from the housing)
- Place cup under the height-adjustable outlet
- Set *rotary dial* in the SPECIALITY COFFEES menu to **ESPRESSO**, then press the *rotary dial*
- While the grinder grinds, change the grind fineness by moving the regulator (above right) (left = finer, right = coarser)
- Close service door again (guide pins at the rear end of the service door into the recesses, then press the service door until it locks in place)

7.3. Aroma Balance System

The NIVONA machine is equipped with the **Aroma Balance System**, which brings out the best of the bean for every taste. The three flavour profiles DYNAMIC, CONSTANT and INTENSE create a different taste with the same bean, same coffee strength, and same water amount.



DYNAMIC



CONSTANT



INTENSE

7.4. NIVONA App

The NIVONA machine can be controlled and operated through the NIVONA App as it is equipped with a Bluetooth interface.

- Download the NIVONA App from the Google Play Store (Android) or from the Apple App Store (iOS) onto your mobile device
- In the **SETTINGS** menu, select the **BLUETOOTH** menu option and enable Bluetooth with **CONNECT** on the NIVONA machine
- Enable Bluetooth on your mobile device and from there connect to the NIVONA machine through the NIVONA App

Now the NIVONA machine can be operated / controlled through the app.

8. CLEANING & MAINTENANCE

All cleaning and maintenance programs can generally be selected and started in the **MAINTENANCE** menu. If a message / instruction for a cleaning / maintenance activity appears on the display, this program can also be started directly through the message / instruction.

- Select and confirm the instruction with the *rotary dial* or
- Select **MAINTENANCE** menu
- Select the cleaning or maintenance program and start it with the *rotary dial*

The machine starts the corresponding cleaning or maintenance process and displays instructions for additional actions.

- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*




MAINTENANCE



Message / instruction

**CAUTION**

 The running program must not be interrupted!



Connect tube

8.1. Rinse frother

After you make speciality coffees with milk, the display instructs you to rinse the frother. This should be done as soon as possible, but at the latest before switching off the machine. Proceed as follows:

- Select and confirm the instruction with the *rotary dial* or
- In the **MAINTENANCE** menu, select the menu option **RINSE FROTHER**
- Connect the supplied tube to the height-adjustable outlet at one end and put the other end in the drip pan, and confirm with the *rotary dial*
- Place a sufficiently large container (≥ 0.5 l) under the height-adjustable outlet and confirm with the *rotary dial*

The machine starts the rinse process. As soon as the rinse cycle is ended, the machine heats up and is then ready for operation again.

8.2. Clean frother

- Select and confirm the message / instruction with the *rotary dial* or
- In the **MAINTENANCE** menu, select the menu option **CLEAN FROTHER**
- Put some detergent (recommendation: NIVONA CreamClean milk system cleaner) and water in a container (at least 0.3 l)
- Please observe the instructions of the detergent manufacturer for the mix ratio
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

8.3. Rinse system

The system should be rinsed from time to time.


- In the **MAINTENANCE** menu, select the menu option **RINSE SYSTEM**.
The display shows **SYSTEM RINSING**

As soon as the rinse cycle is ended, the machine heats up and is then ready for operation again.



CAUTION

The running program must not be interrupted!

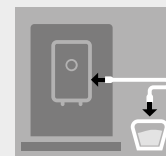

CONNECT TUBE
TO THE OUTLET
AND PUT IN
CLEANER



NOTE

A message / instruction is shown on the display when the frother has to be cleaned.



CAUTION

The running program must not be interrupted!



SYSTEM
RINSING

D

GB

FR

NL

PL

RU

**CAUTION**

The running program must not be interrupted!

Please do not insert a cleaning tablet into the round opening of the brewing unit until the machine instructs you to do this.



SYSTEM
CLEANING

**NOTE**

A message / instruction is shown on the display when the machine has to be cleaned. Beverages can still be drawn. But we recommend carrying out the cleaning program as soon as possible to avoid endangering the warranty.

We recommend also cleaning the brewing unit **BEFORE** the system cleaning (see also Chapter 8.6 **Remove & clean brewing unit** on page 22).

8.4. Clean system

- Select and confirm the instruction with the *rotary dial* or
- In the **MAINTENANCE** menu, select the menu option **CLEAN SYSTEM**
- Put a sufficiently large container (≥ 0.5 l) under the height-adjustable outlet
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

8.5. Descale system

CAUTION

The running descaling program must not be interrupted!

Never use vinegar or vinegar-based products for descaling, but always use **liquid products** recommended for fully automatic coffee machines (recommendation: NIVONA PREMIUM liquid descaler).

The filter (if present) must be removed from the water tank prior to the start of the descaling program.

During descaling, please follow exactly the sequence of the displays!

First pour in the corresponding amount of **water** up to the 0.5 l mark and **then** add the **descaler**. **Never in reverse order!** Observe the instructions of the descaler manufacturer.

- Select and confirm the instruction with the *rotary dial* or
- In the **MAINTENANCE** menu, select the menu option **DESCALE SYSTEM**
- Put a sufficiently large container (≥ 0.5 l) under the height-adjustable outlet
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*

The machine then heats up and is ready for operation again.

CAUTION

Please always remove residual descaling fluid on the housing with a moist cloth afterwards!

NOTE

A message / instruction is shown on the display when the machine has to be descaled. (The descaling program can also be started manually at any time.) Beverages can still be drawn. But we recommend carrying out the cleaning program as soon as possible to avoid endangering the warranty.

D

GB

FR


NL

PL

RU

**CAUTION**

Clean the brewing unit before every cleaning program, but at least once a month. Otherwise, the warranty can be void.

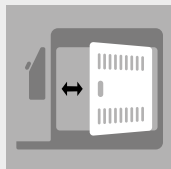

Open/close
service door



Unlock
brewing unit

**CAUTION**

Never immerse the machine in water!

Do not use scouring agents for cleaning.

Dried milk residue is hard to remove. Therefore, always clean immediately after the machine cools down! Always follow the message / instructions in the display on rinsing and cleaning the frother.

8.6. Remove & clean brewing unit

The brewing unit should be removed and cleaned under running water as needed and before each cleaning program. Please never use detergent, but only pure **cold** water!

- Open the service door on the right side of the housing (gently pull the recess in the handle away from the housing, then carefully remove the service door from the housing)
- Unlock brewing unit (press red switch upwards and turn the handle to the left up to the stop and to lock)
- Carefully remove the brewing unit with the handle
- Clean brewing unit under cold, running water and **then let it dry**
- Carefully insert brewing unit again and lock it (hold down red switch and turn the handle to the right up to the stop and to lock it)
- Close service door again (guide pins at the rear end of the service door into the recesses, then press the service door until it locks in place)

8.7. Clean regularly by hand

**NOTE**

Please follow these cleaning instructions. Maximum cleanliness is required, especially when handling food and beverages.

When cleaning the drip pan, make sure that the two metal contacts and the space between them at the rear of the drip pan are always clean and dry. Occasionally use some soapy water to clean the drip pan.

The machine is equipped with rear rollers.* These permit movement on a flat work surface. This allows cleaning under the machine.

*not for NICR 790

- Clean the housing inside and outside only with a soft, moist cloth without detergent
- Empty the drip pan and coffee grounds container not later than when shown in the display (only with the machine switched on, as only then can it tell that the containers have been emptied)
- After the drip pan and coffee grounds container have been removed, clean the housing inside with a soft, moist cloth without detergent
- The water tank should be rinsed with clean water daily and refilled with fresh, cool water
- Clean the frother, tube and outlet regularly

8.8. Disassemble and clean frother

- Remove the cover plate at the height-adjustable outlet, gently pull the frother down and then out to the front and take it apart
- Thoroughly clean the parts and put the frother back together
- Insert the assembled frother back in the height-adjustable outlet
- Reattach the cover plate to the height-adjustable outlet

NOTE

From time to time (ideally before every longer break in coffee making, but always on a regular basis!), the frother must be disassembled completely and then cleaned under clean water.



Cover plate on the height-adjustable outlet



Assembled frother



Individual parts of the frother

NOTE

You can continue to draw beverages. But we recommend changing the filter immediately.

CAUTION

Insert the filter **straight** and do not overturn



Unscrew /
screw in the filter
(in the water tank)

CAUTION

In case of low water consumption, you must replace the filter not later than after two months. No message appears in the display. You can set the replacement date with the dial on the head of the filter (month indicator).

8.9. Change filter

The filter's effectiveness is used up after about 50 l of water has flowed through it. A message / instruction to replace the filter appears in the display.

- In the **SETTINGS** menu, select the **FILTER** menu option
- Select **OPERATION WITH FILTER "YES"** so that the machine detects that a filter is currently inserted
- Select **REPLACE FILTER**
- Empty the water tank; carefully unscrew the old filter from its holder using the mounting aid at the end of the measuring spoon, and throw the filter away
- Carefully screw the new filter into its intended holder in the water tank using the mounting aid at the end of the measuring spoon
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*
- Wait for some time until no more water comes out of the outlet

The machine then heats up and is ready for operation again.

8.10. Status of maintenance

The machine shows through a progress bar whether cleaning or descaling will be required soon. The further to the right the progress bar is, the sooner the cleaning / descaling will be needed

- In the **MAINTENANCE** menu, select the **STATUS OF MAINTENANCE** menu option

9. SOLVING PROBLEMS YOURSELF

The following table shows some causes and options for solving the problem if the machine does not work properly.

If the system detects a fault, an error message appears in the display:

- **Note error message**
(According to the table on page 26 / 27, error 8 can sometimes resolve itself)
- **Turn off machine**
- **Pull out mains plug**




CAUTION

If an error occurs or a problem cannot be solved by yourself, please contact your specialist retailer or visit the service area at www.nivona.com.

The following information is important for fast, competent processing of the matter

- **Model** of the NIVONA product
- **Serial number**
- If available:
Error number / Error message

Type plate (example)

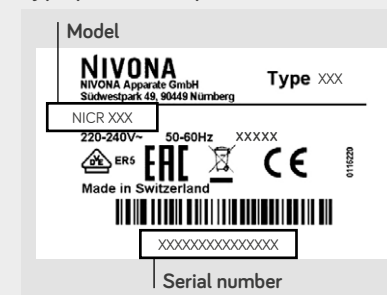

i NOTE

To avoid problems, the following should be observed:

- Always remove the water tank from the machine to fill it
- Do not store coffee beans in the refrigerator
- Always empty containers with the machine switched on
- Use fresh and cooled milk

Problem	Cause	Remedy
No hot water or drawing of milk froth / steam possible	System might need descaling	Perform high-dosage descaling (Chapter 8.5.)
	Frother is plugged	Disassemble frother completely and clean it thoroughly
Too little milk froth or liquid froth	Frother is plugged	Disassemble frother completely and clean it thoroughly
	Unsuitable milk	Use cold milk
	System might need descaling	Perform high-dosage descaling (Chapter 8.5.)
Coffee comes out only dropwise	System might need descaling	Perform high-dosage descaling (Chapter 8.5.)
	Grind fineness is too fine / too coarse	Set grind fineness coarser / finer (Chapter 7.2.)
	Ground coffee is too fine	Use coarser ground coffee
	Too much ground coffee added	Add less ground coffee
	Brewing unit is plugged	Remove and clean brewing unit (Chapter 8.6). Reinsert brewing unit and perform a system cleaning (Chapter 8.4.)
	Coffee outlets are plugged	Perform system cleaning (Chapter 8.4.)

Problem	Cause	Remedy
Coffee does not have “foam”	Brewing unit is plugged	Remove and clean brewing unit (Chapter 8.6). Replace brewing unit and perform a system cleaning (Chapter 8.4).
	Unsuitable coffee type	Change coffee type
	Beans are no longer roast-fresh	Use fresh beans
Loud noise in the coffee grinder	Grind fineness not adapted to coffee beans	Optimise grind fineness (Chapter 7.2.)
	Foreign matter in the grinder, e.g. small stones	Call NIVONA service telephone; ground coffee can still be used
The display shows Error 8 Service Tel	The drive cannot properly position the brewing unit	Turn off the machine and pull out the plug. Plug it back in and turn on the machine. If the machine is ready for operation, remove and clean the brewing unit (Chapter 8.6).

D

GB

FR

NL

PL

RU

10.

10. ACCESSORIES & COFFEE ASSORTMENT

Our current assortment of accessories and coffee can be found at www.nivona.com.

11.

11. CUSTOMER SERVICE & WARRANTY

If you have to send in the machine due to a defect, first evaporate it out so that no water remains in the system.



CAUTION

The running program must not be interrupted!



WARRANTY AND CUSTOMER SERVICE CONDITIONS

Please see the accompanying information sheet for detailed warranty and customer service conditions.

How to make your machine ready for shipment | Evaporate machine

- In the **MAINTENANCE** menu, select the **EVAPORATE** menu option
- Follow the instructions in the display up to the end of the program and confirm each time with the *rotary dial*
- Empty drip pan, coffee grounds container, water tank and the coffee bean holder as well as possible
- Reinsert all parts
- Pack the machine, ideally in the original packaging (no liability can be accepted for transportation damage)

12.

12. PACKAGING & DISPOSAL

The machine's complete original packaging should be kept to protect it during shipping in case customer service is needed.

Electrical and electronic appliances contain many materials which are still valuable or are harmful to the environment, and these should not be treated in the same way as normal

household waste. If treated as household waste or handled incorrectly, they may cause harm to human health or the environment. Therefore, never throw a defective machine away with household waste, but bring it to the community collection point for return and recycling of old electrical and electronic devices.

You can obtain more information from your local town hall, waste disposal service provider, or the retailer from whom the machine was purchased.

Filter cartridges are disposed of as household waste.

13. TECHNICAL DATA

Voltage	220 – 240 V AC, 50 – 60 Hz
Power output	1455 W
Conformity mark	CE
Static pump pressure max.	15 bar
Water tank capacity	Approx. 2.2 l
Coffee bean holder capacity	Approx. 250 g
Coffee grounds container capacity	Approx. 7-11 portions*
Cable length	Approx. 1.1 m
Weight	Approx. 11 kg
Dimensions (W x H x D):	Approx. 24 x 34 x 46 cm
Bluetooth**	Frequency range: 2,400 MHz – 2,483.5 MHz Max. transmission output: 10 mW

* Depending on the amount of beans used

** NIVONA Apparate GmbH hereby declares that the radio equipment complies with the Directive 2014/53/EU. The complete text of the EU conformity declaration is available at the internet address www.nivona.com in the SERVICE download area.



The NIVONA logo is a red oval with the word "NIVONA" in white, bold, sans-serif capital letters. It is positioned on the left side of the page, overlapping a dark blue gradient background and a red wavy shape.

NIVONA

NIVONA Apparate GmbH

Südwestpark 49
D-90449 Nürnberg, Germany
www.nivona.com

2022 © Copyright NIVONA Apparate GmbH, Germany
All rights reserved

ANR 000129626
BDA NICR 7. GB Rev.01 11.01.2022