



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Sencor SSM 4220SS](#) o cerca il tuo prodotto tra le [migliori offerte di Bistecchiere e piastre elettriche](#)



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Sencor SSM 4220SS](#) o cerca il tuo prodotto tra le [migliori offerte di Tostiere e Bistecchiere](#)

SENCOR®

SSM 4220SS SSM 4221RD



EN ■ Sandwich Maker

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- The appliance is designed for household use only. It is not intended for use in locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
- Before connecting the appliance to a power socket, check that the nominal voltage on its rating label matches the electrical voltage in the power socket. Connect the appliance only to a properly grounded socket.



Attention:

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.


- Do not use the appliance in an industrial environment or outdoors or for purposes other than those for which it is intended.
- Do not place the appliance on an electric or gas stove or in its vicinity, on a kitchen sink drainboard, on the edge of a table or on an unstable surface. The appliance must be located on a stable and even surface.
- To ensure sufficient air circulation during operation, there must be sufficient clearance on all sides of the appliance. From the fire safety standpoint, this appliance conforms to the norms valid in the European Union. According to these norms these appliances may be operated on a table or a similar surface under the condition that in the direction of the main heat radiation a safe distance of 50 cm must be maintained from flammable materials and at least 10 cm in other directions.



Attention: Hot surface

- The temperature of accessible surfaces may be higher during operation and after operation as a result of residual heat. Do not touch the hot surface. To close or open the top baking plate use the handle and to remove the sandwich, use a wooden or another heat resistant spatula.
- Never cover the appliance while it is in operation or hot, or place any items on to it.
- Always disconnect the appliance from the power socket when leaving it without supervision, when not using it and before moving or cleaning it. Allow the appliance to cool down before moving or cleaning it.
- Keep the appliance clean. Clean the baking plates after each use according to the instructions in chapter Cleaning and maintenance. Never wash the appliance under running water or submerge it in water or another liquid.
- Ensure that the power cord does not come into contact with water or a heated surface.
- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- If the power cord is damaged, it must be replaced by an authorised service centre or by another similarly qualified person, this will prevent the creation of a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs of the appliance performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

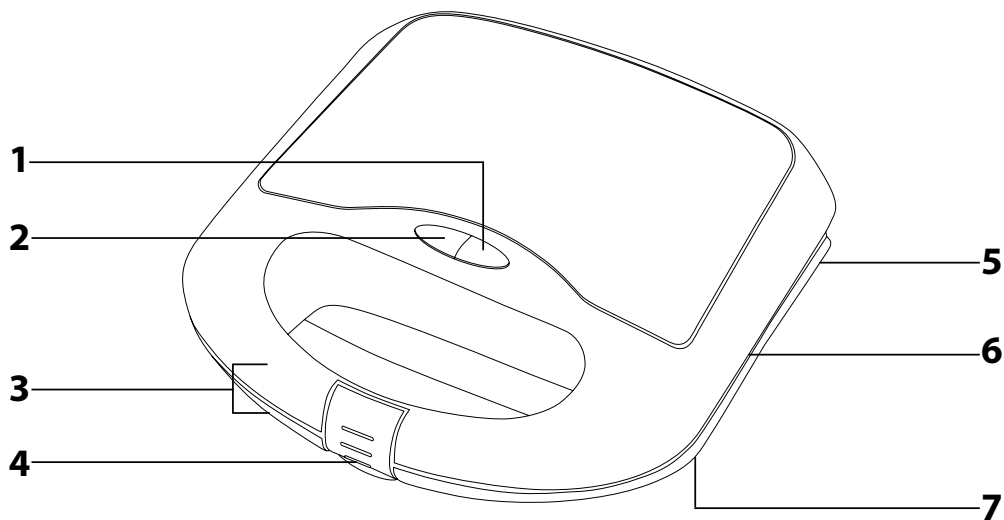

Sandwich Maker

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

A1 Baking plate heating indicator

A2 Power indicator

signals that the appliance is connected to a power socket.

A3 Thermally insulated handles

A4 Latch for locking and releasing the handle

A5 Space for winding up the power cord (not shown) is located on the underside of the appliance.

A6 Baking plates with a non-stick surface for making 2 square sandwiches.

A7 Anti-slip feet (not shown)

are located on the underside of the appliance.

BEFORE FIRST USE

- Take the appliance out of the packaging material and remove all promotional labels and stickers from it.
- Wipe the baking plates **A6** with a lightly dampened cloth or sponge and then wipe it thoroughly dry.
- Before first use, run the appliance empty for 5 to 7 minutes to remove any potential odours.



Note:

Light smoke may be emitted when the appliance is started for the first time. This effect is caused by the inner components being heated up and it will disappear after a few moments.

OPERATING THE APPLIANCE

- Connect the sandwich maker to a power socket. Both indicators on the top panel will be lit. The red indicator **A2** signals a connection to an electrical power source. The green indicator **A1** indicates that the baking plates **A6** are being heated.
- Coat the baking plates **A6** with a little butter or cooking oil, and close the sandwich maker to help the baking plates **A6** heat up faster.
- Prepare your sandwiches before the plates **A6** heat up. For one sandwich you will need two slices of bread and the ingredients to go between them. Place the filling ingredients precisely between the sandwich bread slices. Putting in too many ingredients may prevent the sandwich maker from closing. In such a case, it is necessary to remove some of the ingredients. Do not attempt to close the sandwich maker using force as this could damage it.
- When the baking plates **A6** are heated to the operating temperature, the green indicator **A1** will turn off.



Note:

The green indicator **A1** turns on and off intermittently during operation. This signals that the operating temperature is being maintained.

- Open the sandwich maker using the handle **A3** and place one or two sandwiches on to the bottom baking plate. Close the sandwich maker and use the latch **A4** to secure the handles **A3** to each other.
- After 3 to 5 minutes, release the latch **A4** and use the handle **A3** to tilt open the top plate, and check the sandwich. If it is sufficiently toasted, take it out. Otherwise, extend the toasting time. Use a wooden or another heat resistant spatula, etc. to remove the sandwich. Do not use a knife or fork or any other metal utensils. This could cause damage to the non-stick coating of the baking plates **A6**.



Note:

The toasting time depends on the type of bread, the ingredients and your taste.

- Before toasting more sandwiches, close the sandwich maker and wait until the green indicator **A1** turns off.
- After you finish using it, disconnect the power cord from the power socket. Allow the sandwich maker to cool down and clean it according to the instructions in chapter Cleaning and maintenance.

SANDWICH MAKING TIPS

- As base ingredients for the sandwich filling, you may use meat, fish, cheeses, smoked goods, boiled egg slices, mushrooms or fruit and vegetables such as bananas, apples, pineapples or tomatoes. Do not use excessive amount of filling, to prevent it from spilling on to the baking plates **A6**.
- You may season the filling with spices, herbs, ketchup, etc.
- For the sandwiches to get a golden brown colour, you may spread a light layer of butter on the top side of the sandwich bread slice.

RECIPES

Ham, cheese and pineapple sandwich (2x)

4 slices of sandwich bread

2 slices of cheese

4 slices of ham

2 slices of pineapple

Allow the baking plates **A6** to preheat. Place two slices of ham, a slice of cheese and pineapple between two slices of sandwich bread. Prepare the second sandwich in the same way. Toasting of sandwiches takes approximately 3 to 5 minutes.

Tomato and cheese sandwich (2x)

4 slices of sandwich bread

1 medium-size sliced tomato

2 tablespoons of grated cheese

Preheat the baking plates

Allow the baking plates **A6** to preheat. Between the two slices of sandwich bread, place a few slices of tomato and sprinkle them with grated cheese. Season the filling with ground paprika and prepare the second sandwich in the same way. Toasting of sandwiches takes approximately 3 to 5 minutes.

Chocolate spread and banana sandwich (2x)

4 slices of sandwich bread

1/2 banana cut into thin slices

chocolate spread

Allow the baking plates **A6** to preheat. On to the two sandwich bread slices, apply a thin layer of the chocolate spread and add a few banana slices. With the spread side facing inward, put the two pieces of bread together, and in the same way prepare the second sandwich. Toasting of sandwiches takes approximately 3 to 5 minutes.

CLEANING AND MAINTENANCE

- Prior to cleaning the sandwich maker, disconnect it from the power socket and allow it to cool down.
- Clean the non-stick surface of the baking plates **A6** after each use. This will prevent baked on food remains from accumulating. For cleaning, use a lightly dampened, soft cloth. If some burnt food residue is left on the baking plates **A6**, sprinkle with water and mild kitchen detergent. After applying the kitchen detergent, wipe the grill plates **A6** with a clean damp cloth. Then wipe everything so that it is thoroughly dry.



Tip:

It will be easier to clean the baking plates **A6** while they are still slightly warm.

- Wipe the outer surface of the sandwich maker with a lightly dampened cloth and then wipe it dry.
- Do not wash the appliance under running water or submerge it in water or another liquid.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the cleaned surface may be damaged.

STORAGE

- When the baking plates **A6** are cold, close the top plate and use the latch **A4** to secure the handles **A3** to each other. Wind the power cord into the bottom of the sandwich maker.
- Store the sandwich maker in a clean, dry place that is out of reach of children.



Note:

Storing the sandwich maker in a vertical position saves space in your kitchen.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V
Rated frequency	50/60 Hz
Rated power input.....	700 W

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to

the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.