



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Tenda AC7](#) o cerca il tuo prodotto tra le [migliori offerte di Modem e Router](#)



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Tenda AC7](#) o cerca il tuo prodotto tra le [migliori offerte di Router](#)

Tenda



AC1200 Smart Dual-Band WiFi Router· AC7

User Guide

Copyright Statement

© 2018 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Copyright of the whole product as integration, including its accessories and software, belongs to Shenzhen Tenda Technology Co., Ltd. No part of this publication can be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the prior written permission of Shenzhen Tenda Technology Co., Ltd.

Disclaimer

Pictures, images and product specifications herein are for references only. To improve internal design, operational function, and/or reliability, Tenda reserves the right to make changes to the products without obligation to notify any person or organization of such revisions or changes. Tenda does not assume any liability that may occur due to the use or application of the product described herein. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information and recommendations in this document do not constitute a warranty of any kind, express or implied.

Preface

Thank you for choosing Tenda! Please read this user guide before you start with AC7.

Conventions

The typographical elements that may be found in this document are defined as follows.

Item	Presentation	Example
Cascading menus	>	System > Live Users
Parameter and value	Bold	Set User Name to Tom .
Variable	Italic	Format: <i>XX:XX:XX:XX:XX:XX</i>
UI control	Bold	On the Policy page, click the OK button.
Message	“ ”	The “Success” message appears.

The symbols that may be found in this document are defined as follows.

Symbol	Meaning
 NOTE	This format is used to highlight information of importance or special interest. Ignoring this type of note may result in ineffective configurations, loss of data or damage to device.
 TIP	This format is used to highlight a procedure that will save time or resources.

Acronyms and Abbreviations

Acronym or Abbreviation	Full Spelling
AP	Access Point
DDNS	Dynamic Domain Name System
DHCP	Dynamic Host Configuration Protocol
DMZ	Demilitarized Zone
DNS	Domain Name System
IPTV	Internet Protocol Television
ISP	Internet Service Provider
L2TP	Layer 2 Tunneling Protocol
MPPE	Microsoft Point-to-Point Encryption
PPP	Point To Point Protocol
PPPoE	Point-to-Point Protocol over Ethernet
PPTP	Point to Point Tunneling Protocol
VLAN	Virtual Local Area Network
VPN	Virtual Private Network
WISP	Wireless Internet Service Provider
WPS	WiFi Protected Setup

Additional Information

For more information, search this product model on our website at <http://www.tendacn.com>.

Technical Support

If you need more help, contact us by any of the following means. We will be glad to assist you as soon as possible.



Hotline

Global: (86) 755-27657180 (China time zone)

United States: 1-800-570-5892

Canada: 1-888-998-8966

Hong Kong: 00852-81931998



Website

<http://www.tendacn.com>



Email

support@tenda.com.cn

Contents

1	Introduction	1
1.1	Overview	1
1.2	Appearance	2
2	Set up to access the internet	6
2.1	Setting the new router to access the internet	6
2.2	Replacing original router with AC7	14
3	Web UI description	22
3.1	Logging in to the web UI of the router	22
3.2	Logging out of the web UI of the router	23
4	Internet Status	24
4.1	Network status	24
4.2	Online device/WiFi extender	25
4.3	WiFi information	27
4.4	Other information	28
5	Internet Settings	29
5.1	Overview	29
5.2	Setting up an internet connection with PPPoE	30
5.3	Setting up an internet connection with a dynamic IP address	32
5.4	Setting up an internet connection with a static IP address	33
6	WiFi Settings	35
6.1	WiFi Name & Password	35
6.2	WiFi Schedule	38
6.3	Wireless Repeating	40
6.4	Channel & Bandwidth	44
6.5	Transmit Power	46
6.6	WPS	48
6.7	Beamforming+	52

6.8 AP Mode	53
6.9 Anti-interference.....	56
7 Guest Network.....	57
7.1 Overview.....	57
7.2 Setting guest network.....	58
8 Parental Control.....	59
8.1 Overview.....	59
8.2 Setting parental control rules	60
9 VPN	64
9.1 PPTP Server.....	64
9.2 Online PPTP Users.....	71
9.3 PPTP/L2TP Client.....	72
10 Advanced Settings	75
10.1 Bandwidth Control.....	75
10.2 Tenda App	77
10.3 Sleeping Mode	80
10.4 LED Control	81
10.5 Filter MAC Address	82
10.6 Firewall.....	86
10.7 IPTV.....	87
10.8 Static Route.....	90
10.9 DDNS.....	93
10.10 Virtual Server	99
10.11 DMZ Host	103
10.12 UPnP	104
11 System Settings.....	105
11.1 LAN Settings.....	105
11.2 DHCP Reservation	107
11.3 WAN Settings	109
11.4 Time Settings	111

11.5 Login Password	112
11.6 Reboot and Reset.....	113
11.7 Firmware Upgrade	115
11.8 Backup/Restore.....	117
11.9 Remote Management	118
11.10 System Status.....	121
11.11 System Log	124
11.12 Automatic Maintenance	125
Appendixes	128
A.1 Setting the IP address of your computer.....	128
A.2 FAQ	132

1

Introduction

1.1 Overview

AC7 is a stable, high-performance dual-band WiFi router dedicated to users requiring wide WiFi coverage and strong WiFi wall penetration capacity. Compliant with the 5th generation IEEE 802.11ac wave2.0 standard, AC7 supports data transmission at 5 GHz band with less interference and offers a simultaneous dual-band data rate of as high as 1167 Mbps. With five 6 dBi high-gain external antennas, 2.4 GHz and 5 GHz independent signal booster modules and Beamforming+ technology, AC7 features robust wall penetration capacity. MU-MIMO technology and high-performance chip of AC7 also allows more devices to access the internet at one time and provides you with fast and stable internet connection. Additionally, AC7 supports the migration of PPPoE user name and password from your original router as well, achieving quick internet connection without setup, which allows your family to enjoy an efficient and smart life.

Features

- MU-MIMO technology and IEEE 802.11ac wave2.0 standard.
- Five 6 dBi high-gain external antennas.
- Enabling/disabling the WiFi network of the router at a press of the **WIFI** button.
- WiFi Schedule to disable the WiFi network of the router at specified period.
- Simultaneous dual-band data rate of as high as 1167 Mbps.
- 2.4 GHz and 5 GHz independent signal booster modules.
- Wireless Repeating, Bandwidth Control, LED Control and Sleeping Mode functions.
- Migration of ISP user name and password for quick internet setup.
- Remote management with **Tenda WiFi** app.

1.2 Appearance


1.2.1 Top panel



AC7

LED indicator	LED indicator name	Status	Description
SYS	System LED indicator	Solid on	– The router is starting. – If the indicator is still solid on after your router completes startup, it indicates that the system is faulty.
		Slowing blinking	The system is working properly.
WAN	WAN LED indicator	Solid on	The WAN port is connected properly.
		Fast blinking	Data is being transmitted over the WAN port.
		Off	The WAN port is disconnected or connected improperly.
LAN	LAN LED indicator	Solid on	Port 1, 2 or 3/IPTV is connected properly.
		Blinking twice	A device is connected to port 1, 2 or 3/IPTV.
		Off	Ports 1, 2 and 3/IPTV are disconnected or connected improperly.
WiFi	WiFi / WPS LED indicator	Solid on	At least the 2.4 GHz or 5 GHz WiFi network is enabled.
		Fast blinking	Data is being transmitted wirelessly.
		Slow blinking	The router is performing WPS negotiation.
		Off	The WiFi network is disabled.

1.2.2 Rear panel

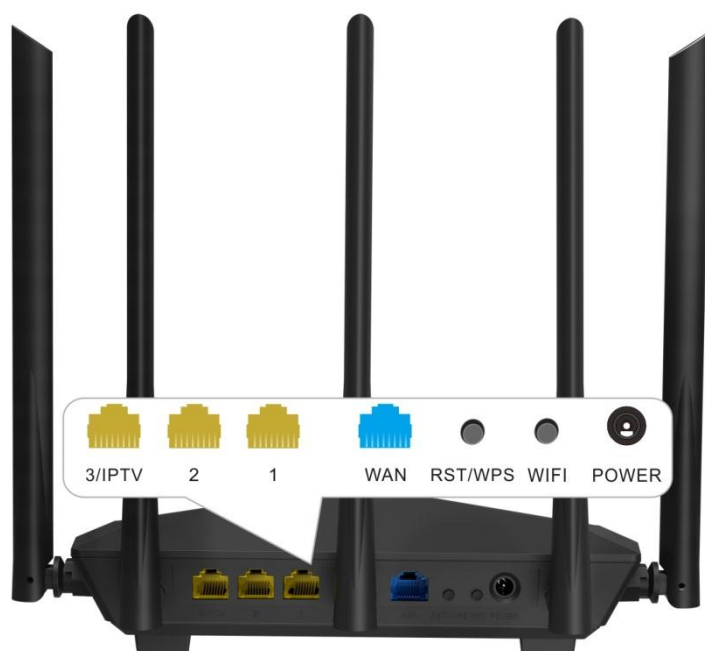


AC7

Port / Button	Description
POWER	Used to connect to the power adapter included in the package.
WIFI	Used to enable/disable the WiFi network of the router.
RST/WPS	Used to start the WPS negotiation process of the router, or to reset the router. – WPS: Press the button of the router, and enable the WPS function of another device within 2 minutes to establish a WPS connection. – Reset: When the SYS indicator blinks, hold the button down for about 8 seconds. The router is reset successfully when all the LED indicators blink once.
WAN	Used to connect this router to the internet.
1/2	They are LAN ports used to connect to devices such as computers and switches.
3/IPTV	– It is a default LAN port. – But if the IPTV function of the router is enabled, it serves only as an IPTV port used to connect to a set-top box.

1.2.3 Label on the top panel

The top label shows the default SSID (WiFi name), WiFi password of the router. See the following figures:

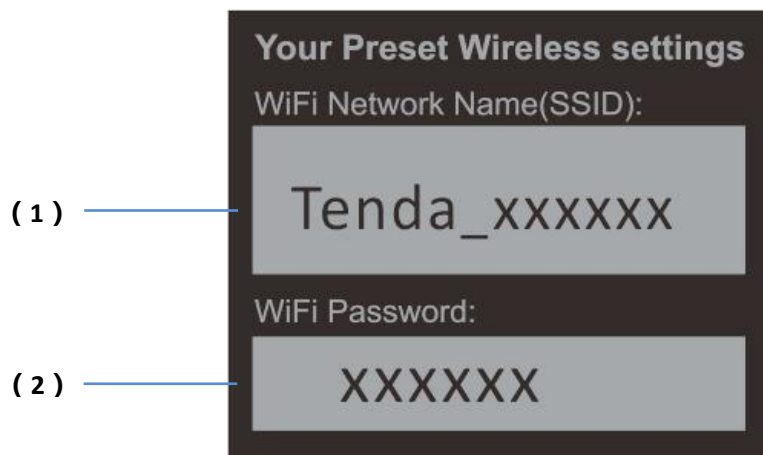

(1): It specifies the default SSID of the router's WiFi network.


- When you use AC7 for the first time, connect smart phones or other wireless devices to this SSID to set up your router.
- After you complete internet setup on this router, if this SSID is not changed, wireless devices (such as smart phones) can connect to this SSID to access the internet. Otherwise, use the SSID and password you set to connect to access the internet.

(2): It specifies the default WiFi password of the router's WiFi network.

- When you use AC7 for the first time, connect your wireless devices to the router's WiFi network using this WiFi password.
- After you complete internet setup on this router, if this password is not changed, wireless devices (such as smart phones) can connect to the router's WiFi network using this WiFi password. Otherwise, use the SSID and password you set to access the internet.

1.2.4 Label on the bottom panel

The bottom label shows the default SSID (WiFi name), WiFi password, login IP address / domain name, pin code and serial number of the router. See the following figure:

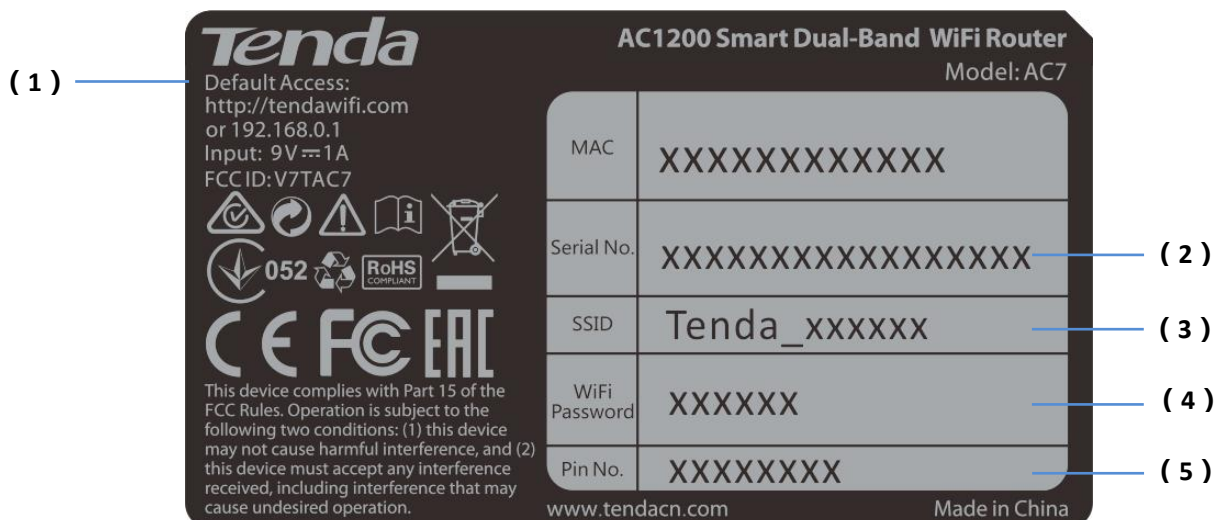

- (1) Default Access: It specifies the login IP address / domain name of the router. Enter this IP address/domain name to access the web UI for managing the router.
- (2) Serial NO.: It specifies the serial number of the router. If the router is faulty, you need to provide this serial number for repair.
- (3) SSID: It specifies the default SSID of the router's WiFi network.
- (4) WiFi Password: It specifies the default WiFi password of the router's WiFi network.
- (5) Pin No.: It specifies the pin code of the router. When you connect a device to the router by WPS, this pin code is required.

2

Quick Internet Setup

2.1 Setting the new router to access the internet

2.1.1 Setting up on a phone


Step 1 Connect to the internet.

1. Power off your modem, and remove its battery (if any).
2. Connect the WAN port of the router to your modem's LAN port using an Ethernet cable.
3. Reinstall your modem's battery (if any), and power on your router and modem.



TIP

If you access the internet without a modem, connect the WAN port of the router to your Ethernet jack using an Ethernet cable.

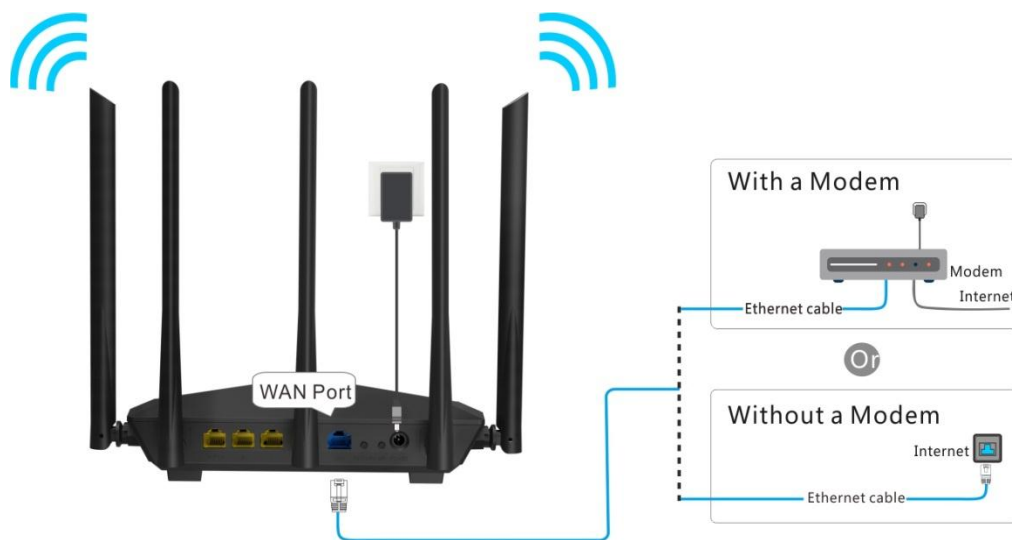


4. Connect your smart phone to the WiFi network of the router using the WiFi name and password labeled on the top / bottom of the router.




Step 2 Set up the router.

 1. Start a web browser on the phone that has connected to the router, and visit **tendawifi.com**.



2. Tap **Start**.

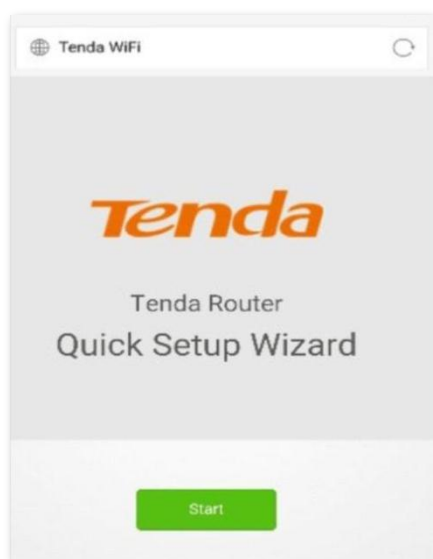

3. The system detects your connection type automatically. Set the parameters based on your situation.
 - If your connection type is **PPPoE**, enter the ISP user name and password provided by your ISP, and tap **Next**.

Tenda WiFi

Please select your connection type.

As detected, your connection type may be: **PPPoE**

Connection Type: **PPPoE** ▼

ISP User Name:

ISP Password:

[Import PPPoE user name and password from the original router.](#)

Next

[Skip](#)

- If your connection type is **Static IP Address**, enter the IP address, subnet mask, default gateway, primary DNS server and secondary DNS server (optional) provided by your ISP, and tap **Next**.

Tenda WiFi

Please select your connection type.

As detected, your connection type may be: **Static IP Address**

Connection Type: **Static IP Address** ▼

IP Address:

Subnet Mask:

Default Gateway:


Primary DNS Server:

Secondary DNS Server:

Next

[Skip](#)

- If your connection type is **Dynamic IP Address**, tap **Next** directly.

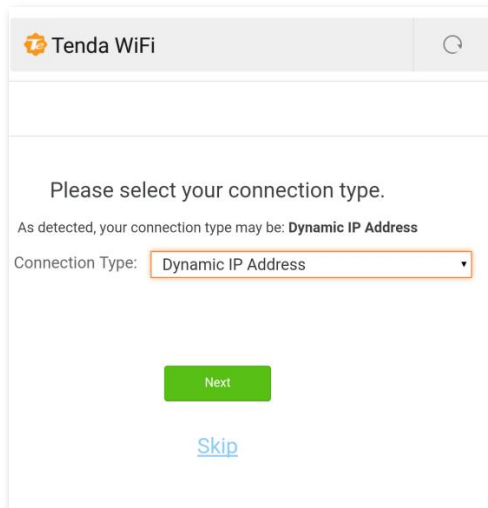

Tenda WiFi

Please select your connection type.

As detected, your connection type may be: **Dynamic IP Address**


Connection Type: Dynamic IP Address

Next

[Skip](#)

4. Set WiFi name, WiFi password, and login password for your router.

Note: The WiFi password is used to connect to the WiFi network, and the login password is used to log in to the web UI to manage the router.

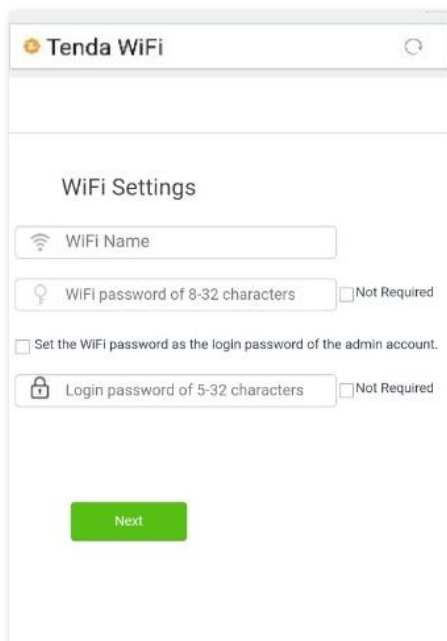

Tenda WiFi

WiFi Settings

WiFi Name

WiFi password of 8-32 characters ☐ Not Required

☐ Set the WiFi password as the login password of the admin account.

Login password of 5-32 characters ☐ Not Required

Next

5. Tap **Next**.

--End

Wait a moment. Then connect wireless devices to the WiFi network of the router again using the WiFi name and password you set to access the internet. Wired devices can access the internet directly if they have connected to port 1, 2 or 3/IPTV.



For more functions, refer to relevant contents in this user guide.

2.1.2 Setting up on a computer

Step 1 Connect to the internet.

1. Power off your modem, and remove its battery (if any).
2. Connect the WAN port of the router to your modem's LAN port using an Ethernet cable.
3. Reinstall your modem's battery (if any), and power on your router and modem.



If you access the internet without a modem, connect the WAN port of the router to your Ethernet jack using an Ethernet cable.



4. Connect your computer to port 1, 2 or 3/IPTV of the router using an Ethernet cable.



TIP


A desktop computer can connect to the WiFi network of the router only when it is installed with a wireless adapter.

Step 2 Set up the router.

1. Start a web browser on the computer that has connected to the router. Enter **tendawifi.com** in the address bar and press **Enter**.



2. Click **Start**.

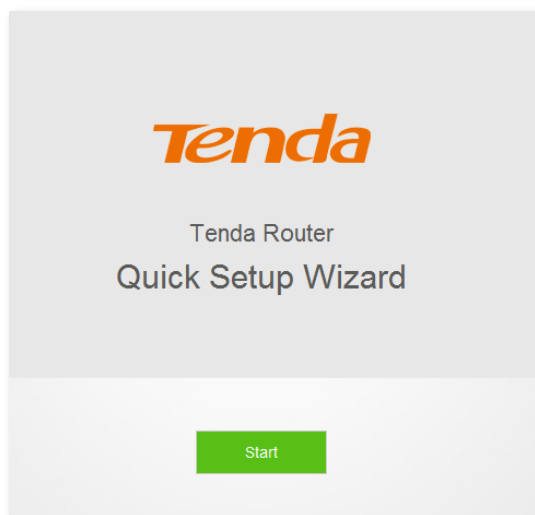

3. The system detects your connection type automatically.
 - If your connection type is **PPPoE**, enter the ISP user name and password provided by your ISP, and click **Next**.

Please select your connection type.

As detected, your connection type may be: **PPPoE**

Connection Type:

ISP User Name:

ISP Password:

[Import PPPoE user name and password from the original router.](#)

- If your connection type is **Static IP Address**, enter the IP address, subnet mask, default gateway, primary DNS server and secondary DNS server (optional) provided by your ISP, and click **Next**.

Please select your connection type.

As detected, your connection type may be: **Static IP Address**

Connection Type:

IP Address:

Subnet Mask:

Default Gateway:

Primary DNS Server:

Secondary DNS Server:

- If your connection type is **Dynamic IP Address**, click **Next** directly.

Please select your connection type.

As detected, your connection type may be: **Dynamic IP Address**

Connection Type: Dynamic IP Address ▼

[Next](#)

[Skip](#)

4. Set WiFi name (SSID), WiFi password and login password for your router.

Note: The WiFi password is used to connect to the WiFi network, and the login password is used to log in to the web UI to manage the router.

WiFi Settings

WiFi Name

WiFi password of 8-32 characters ☐ Not Required

☐ Set the WiFi password as the login password of the admin account.


Login password of 5-32 characters ☐ Not Required

[Next](#)

5. Click **Next**.

--End

Wait a moment. Then connect wireless devices to the WiFi network of the router again using the WiFi name and password you set to access the internet. Wired devices can access the internet directly if they have connected to port 1, 2 or 3/IPTV.

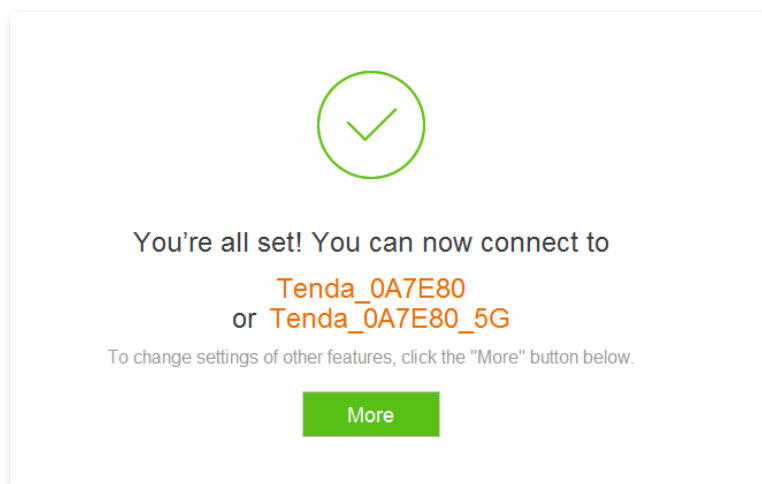

For more functions of the router, click **More**.

2.2 Replacing your original router with AC7

This setup method applies to users who use new routers to replace their original routers with PPPoE user names and passwords, migrating user names and passwords from original routers your new routers quickly.


2.2.1 Setting up on a phone

Step 1 Migrate your PPPoE user name and password from your original router.

1. Power on your original and new routers.
2. Connect the WAN port of the original router to port 1, 2 or 3/IPTV of the new router using an Ethernet cable.

Wait about 6 seconds. The migration succeeds when the WAN and LAN indicators of the new router turn solid on after blinking fast.

3. Remove the original router.

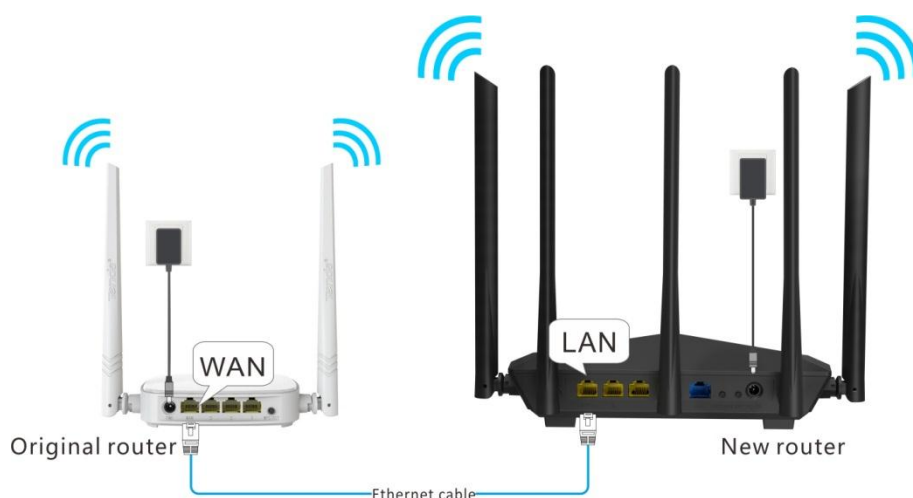


Step 2 Connect to the internet.

1. Power off your modem, and remove its battery (if any).

2. Connect the WAN port of the router to your modem's LAN port using an Ethernet cable.
3. Reinstall your modem's battery (if any), and power on your modem.



If you access the internet without a modem, connect the WAN port of the router to your Ethernet jack using an Ethernet cable.

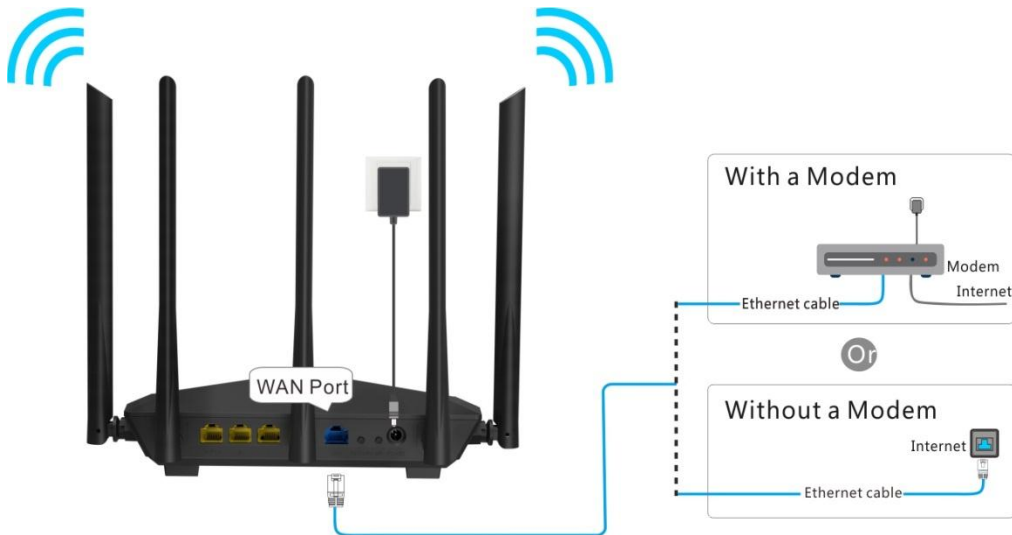

4. Connect your wireless device such as a smart phone to the new router's WiFi network using the WiFi name and password on the top / bottom label.



Step 3 Set up the new router.

1. Start a web browser on the phone that has connected to the router, and visit **tendawifi.com**.



2. Tap **Start**.



3. The system populates your PPPoE user name and password automatically. Tap **Next**.

This screenshot shows the second step of the Tenda WiFi setup wizard. The header bar is identical to the previous screen. The main content area has a white background. It starts with the text 'Please select your connection type.' followed by a smaller line 'As detected, your connection type may be: PPPoE'. Below this is a dropdown menu labeled 'Connection Type:' with 'PPPoE' selected. Underneath are two input fields: 'ISP User Name:' containing 'chenhao' and 'ISP Password:' containing a series of dots. A green message box states: 'The PPPoE user name and password have been imported from the original router.' At the bottom, there is a green 'Next' button and a blue 'Skip' link.

4. Set WiFi name (SSID), WiFi password and login password for your router.

Note: The WiFi password is used to connect to the WiFi network, and the login password is used to log in to the web UI to manage the router.

5. Tap **Next**.

--End

Wait a moment. Then connect wireless devices to the WiFi network of the router again using the WiFi name and password you set to access the internet. Wired devices can access the internet directly if they have connected to port 1, 2 or 3/IPTV.



For more functions, refer to relevant contents in this user guide.

2.2.2 Setting up on a computer


Step 1 Migrate your PPPoE user name and password from your original router.

1. Power on your original and new routers.
2. Connect the WAN port of the original router to port 1, 2 or 3/IPTV of the new router using an Ethernet cable.

Wait about 6 seconds. The migration succeeds when the WAN and LAN indicators of the new router

turn solid on after blinking fast.

3. Remove the original router.

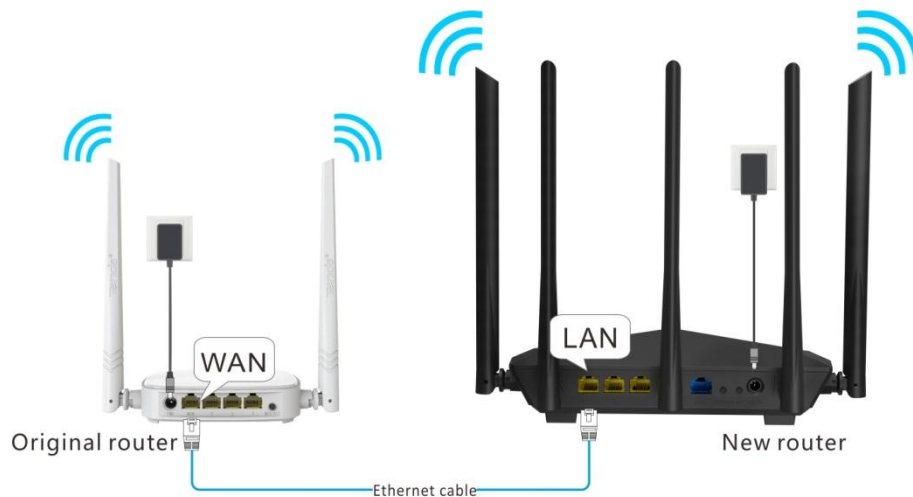


Step 2 Connect to the internet.

1. Power off your modem, and remove its battery (if any).
2. Connect the WAN port of the router to your modem's LAN port using an Ethernet cable.
3. Reinstall your modem's battery (if any), and power on your modem.



If you access the internet without a modem, connect the WAN port of the router to your Ethernet jack using an Ethernet cable.

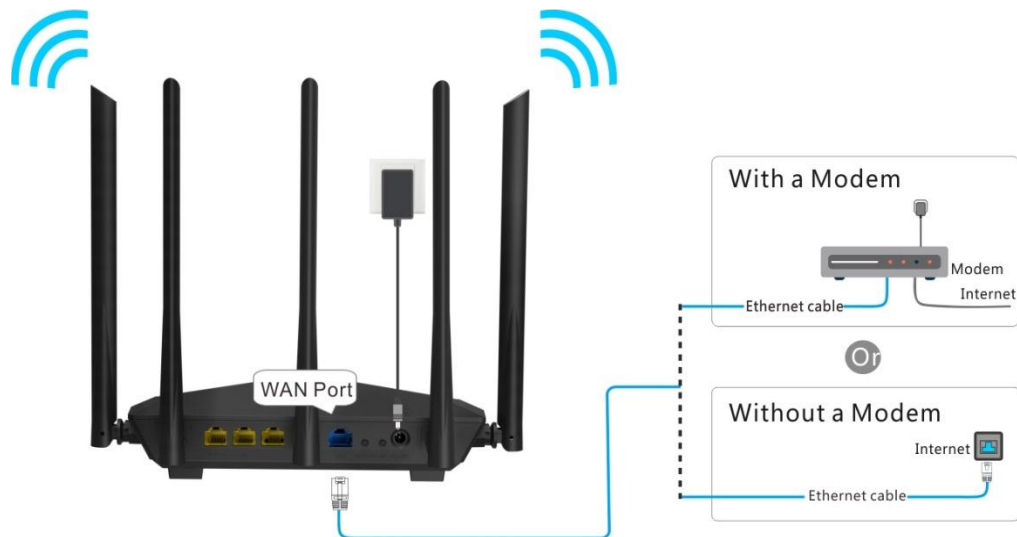

4. Connect your computer to port 1, 2 or 3/IPTV of the new router using an Ethernet cable.



TIP


A desktop computer can connect to the WiFi network of the router only when it is installed with a wireless adapter.

Step 3 Set up the router.

1. Start a web browser on the computer that has connected to the router. Enter **tendawifi.com** in the address bar and press **Enter**.



2. Click **Start**.

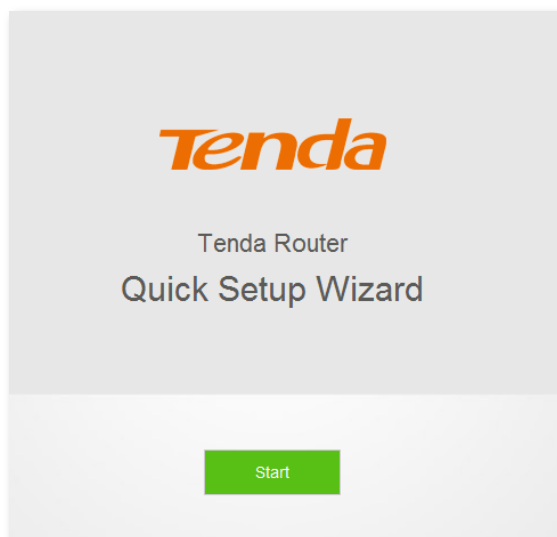

3. The system populates your PPPoE user name and password automatically. Click **Next**.

Please select your connection type.

As detected, your connection type may be: **PPPoE**

Connection Type:

ISP User Name:

ISP Password:

The PPPoE user name and password have been imported from the original router.

4. Set WiFi name (SSID), WiFi password and login password for your router.

Note: The WiFi password is used to connect to the WiFi network, and the login password is used to log in to the web UI to manage the router.

WiFi Settings

☐ Not Required

☐ Set the WiFi password as the login password of the admin account.

☐ Not Required

5. Click **Next**.

--End

Wait a moment. Then connect wireless devices to the WiFi network of the router again using the WiFi name and password you set to access the internet. Wired devices can access the internet directly if they have connected to port 1, 2 or 3/IPTV.



You're all set! You can now connect to

Tenda_0A7E80
or **Tenda_0A7E80_5G**

To change settings of other features, click the "More" button below.

More

If you want to configure more functions of the router, click **More**.

3

Web UI Description


3.1 Logging in to the web UI of the router

This section describes how to log in to the web UI of the router to manage your router. If you want to know internet setup for your router for the first time, refer to [Chapter 2 Quick Internet Setup](#) for instructions.

1. Start a web browser on the computer connected to your router. Enter **tendawifi.com** in the address bar, and press **Enter**.



2. Enter the login password of your router, and click **Login**.

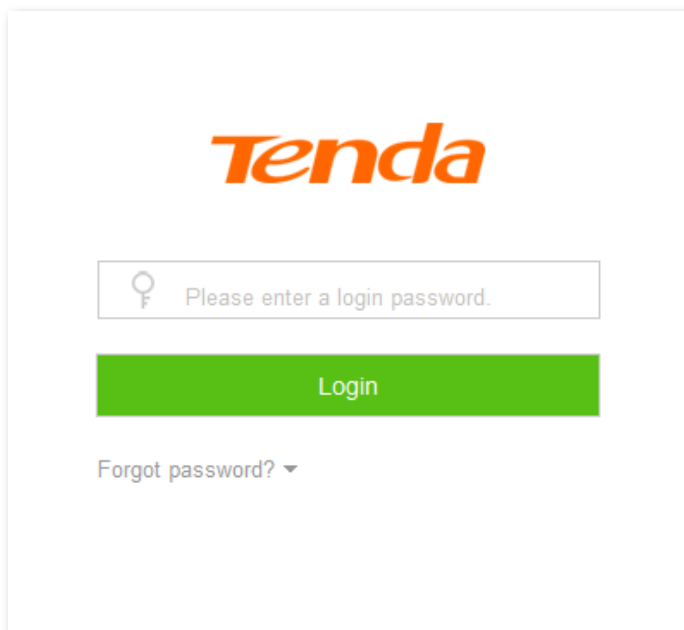


--End



If the figure above does not appear, set the **Local Area Connection** of your computer to **Obtain an IP address automatically** and **Obtain DNS server address automatically**. For detailed setting steps, refer to **A.1 Setting the IP address of your computer** in appendixes. Then try logging in again.

Log in to the web UI of the router successfully. See the following figure:

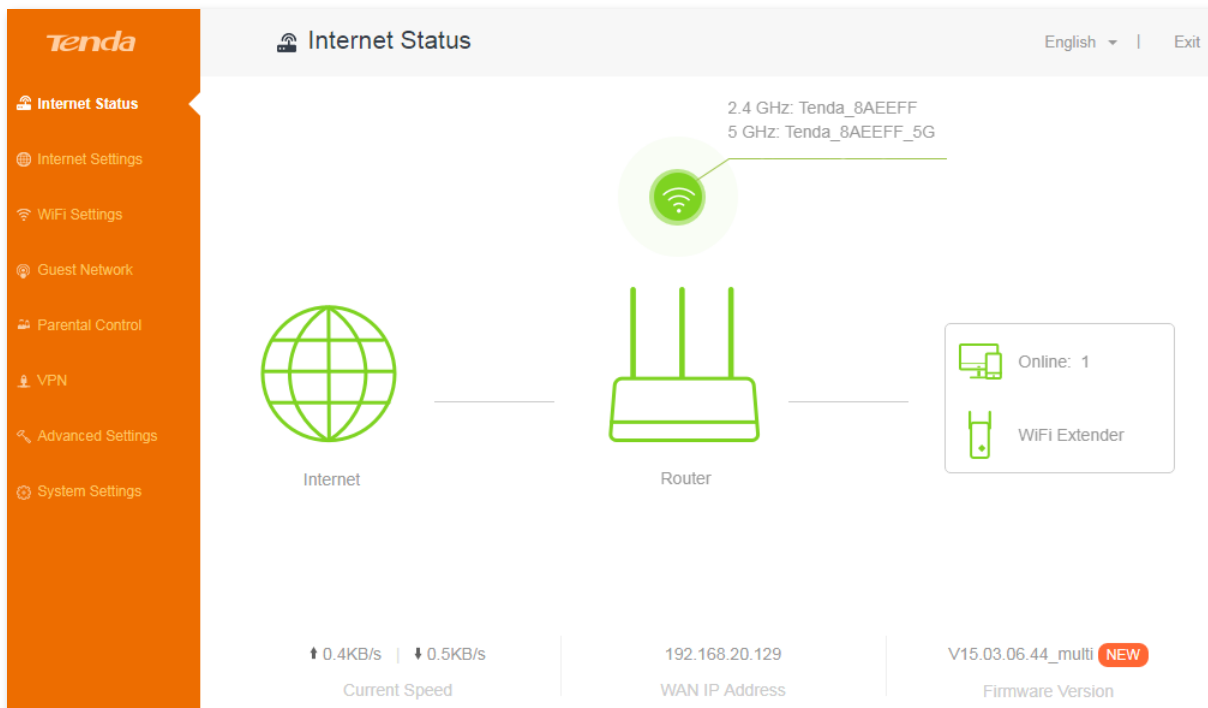

3.2 Logging out of the web UI of the router

If you log in to the web UI of the router and perform no operation within 5 minutes, the router logs you out. In addition, click **Exit** on the upper right corner of the web UI can log out as well.

4


Internet Status

The **Internet Status** page allows you to view the network status of the router and online devices, WiFi information and other status information.

4.1 Network status

This page shows the current network status of the router.


When **Connection failed** does not appear between the internet icon and router icon, the router is connected to the internet successfully and devices can access the internet through the router. See the following figure:

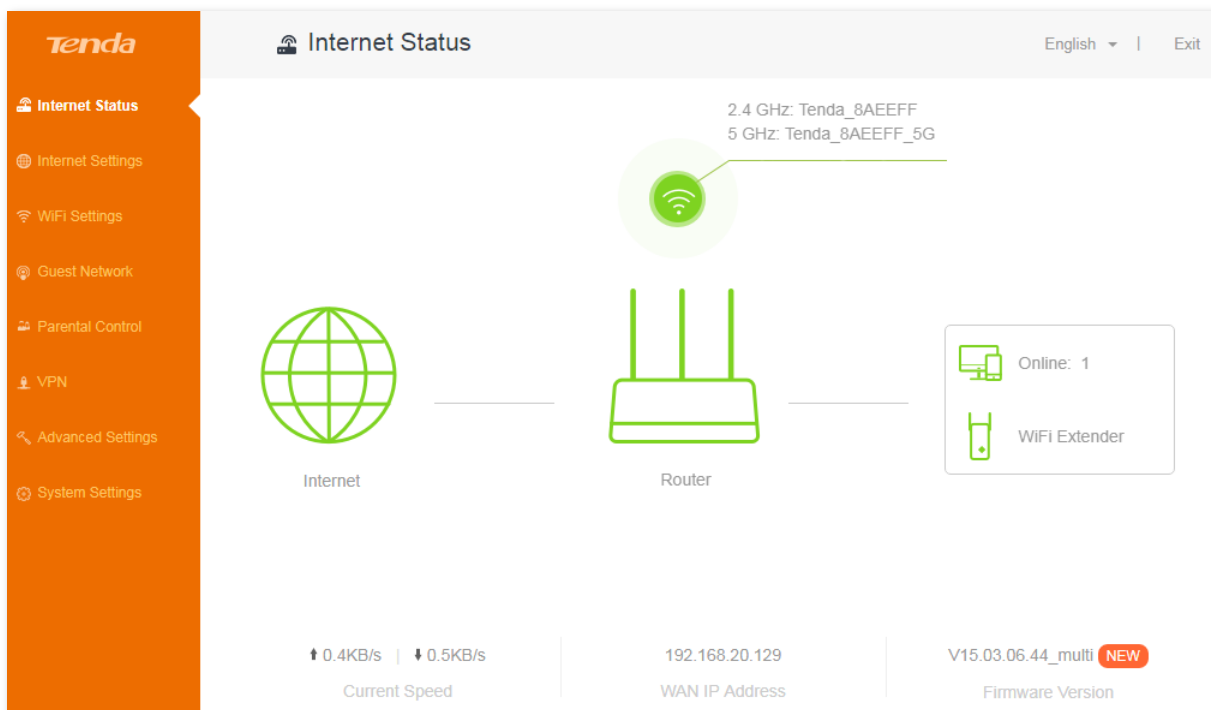

Parameter description:


Parameter	Description
Current Speed	The upload and download rates of the WAN port.
WAN IP Address	The IP address of the WAN port.
Firmware Version	It specifies the current firmware version of the router. After upgrading the firmware version of the router, you can view the current firmware version here to check whether the upgrade is successful.

When **Connection failed** is displayed, click **Connection failed** to access the **Internet Settings** page, and perform according to the onscreen instructions to solve the issue. See the following figure:

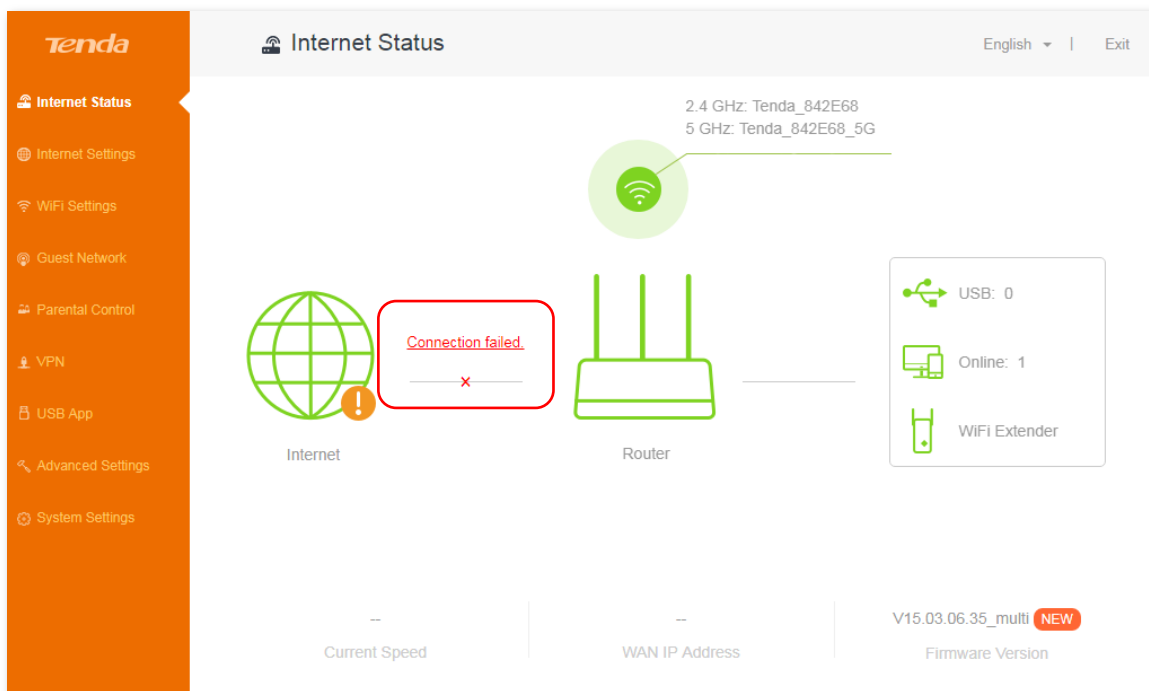

4.2 Online device/WiFi extender

The right part of the **Internet Status** page shows online devices of the router, and gets you to know using WiFi extender A9 to extend your router's WiFi coverage.

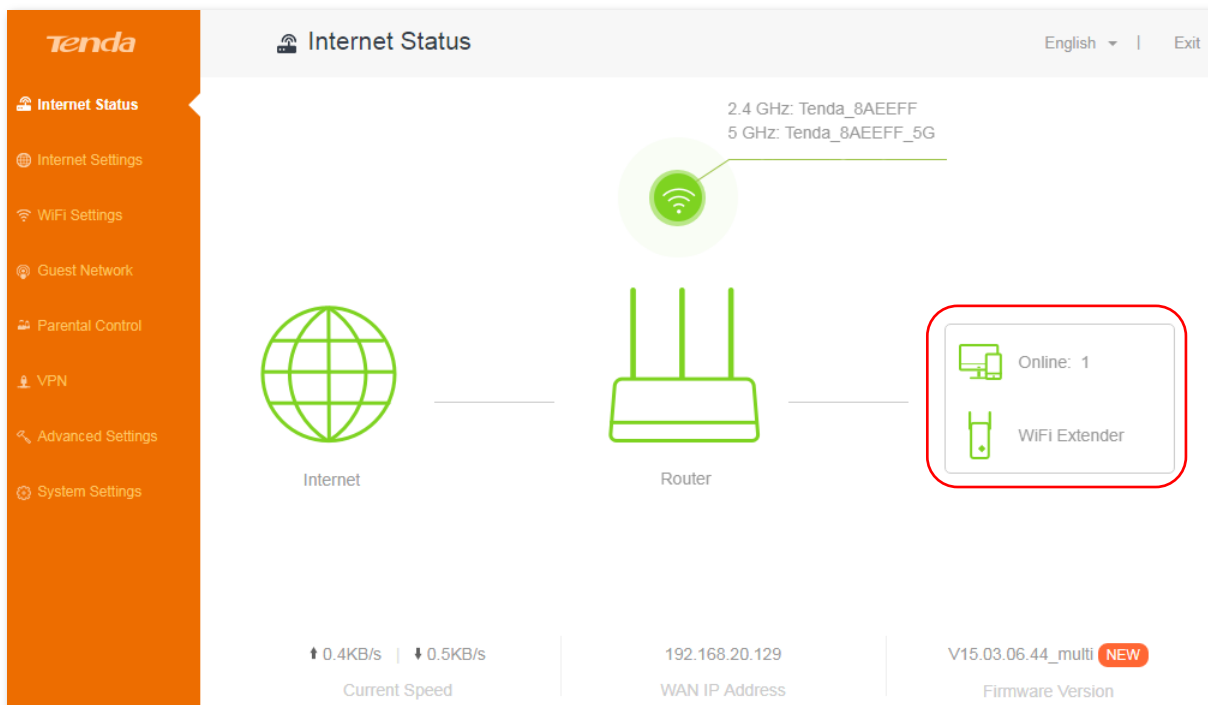

4.2.1 Online device

Click **Online** to find detailed information about devices that have connected to your router. See the following figure:

Manage Device					
Attached Devices (2) Blacklist					
Device Name		Upload Speed	Download Speed	Access Type	Add to Blacklist
 Iguilan-PC 192.168.0.129		0.0KB/s	0.0KB/s	Wired	Local Host
 RedmiNote4X-ho... 192.168.0.189		0.0KB/s	0.0KB/s	5G	<button>Add to Blacklist</button>

Add to Blacklist

Click **Add to Blacklist** to add unknown devices to the blacklist. Devices in the blacklist cannot access the internet through the router.

Manage Device					
Attached Devices (2) Blacklist					
Device Name		Upload Speed	Download Speed	Access Type	Add to Blacklist
 Iguilan-PC 192.168.0.129		0.0KB/s	0.0KB/s	Wired	Local Host
 RedmiNote4X-ho... 192.168.0.189		0.0KB/s	0.0KB/s	5G	<button>Add to Blacklist</button>

Remove from Blacklist


To remove a device from the blacklist, click **Online** on the **Internet Status** page. Then click **Blacklist** on the **Manage Device** page and locate the corresponding device. Click **Remove**.

Devices removed from the blacklist can access the internet through the router.


Manage Device		
Attached Devices (1) Blacklist		
Device Name	MAC Address	Remove from Blacklist
RedmiNote4X-hongmish	C4:0B:CB:81:5D:11	<button>Remove</button>

4.3 WiFi information

The upper-right part of **Internet Status** page displays WiFi names (SSIDs) of 2.4 GHz and 5 GHz WiFi networks of the router. After the router accesses the internet, you can connect wireless devices to 2.4 GHz and 5 GHz WiFi network with these SSIDs to access the internet.

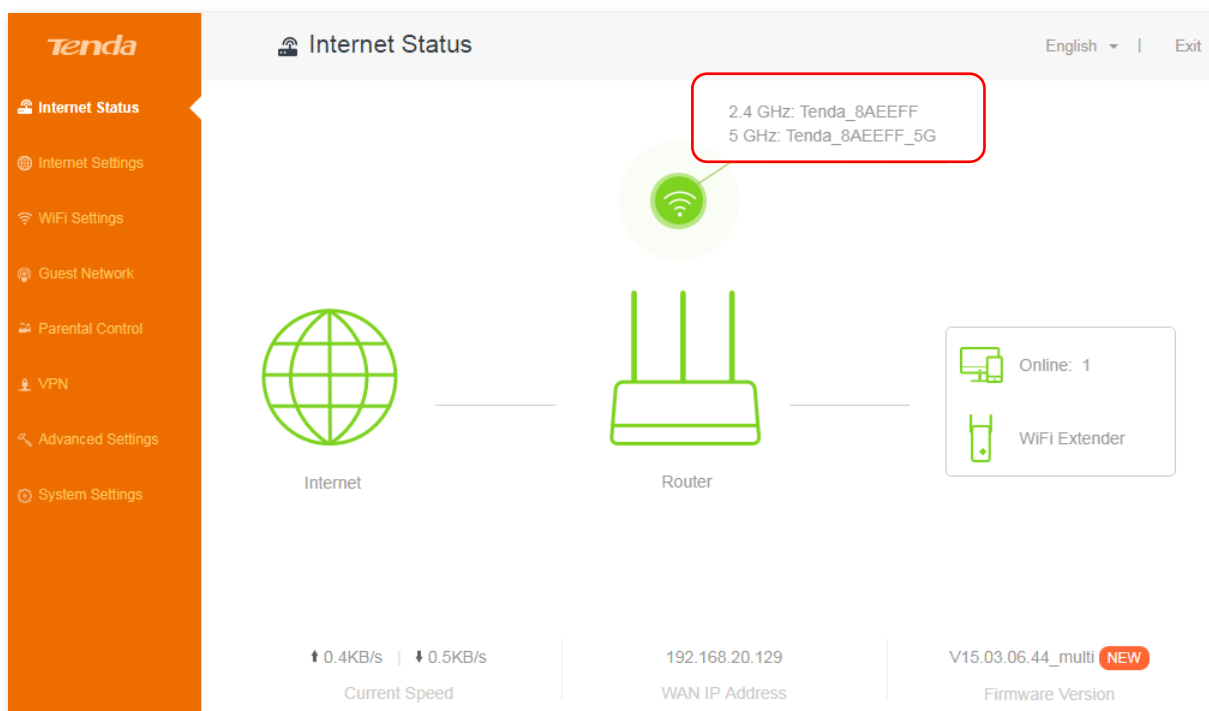

To change WiFi names or passwords of 2.4 / 5 GHz WiFi networks, click  on the **Internet Status** page, and configure the parameters on **WiFi Settings** page. See the following figure:

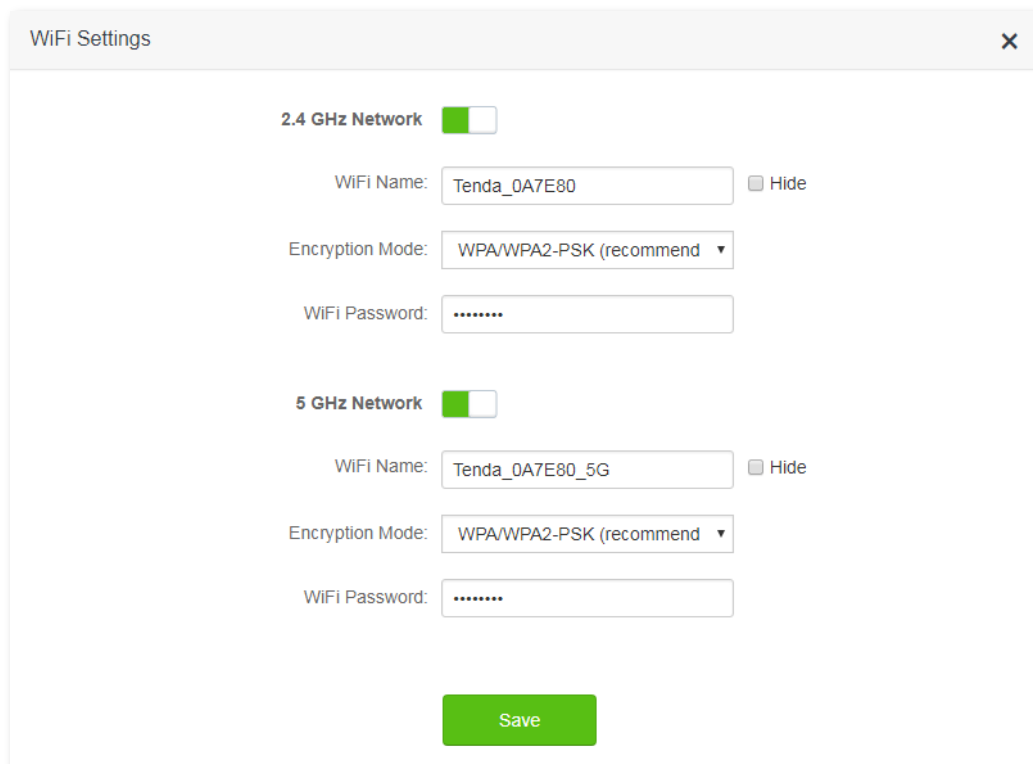

Set your WiFi names and passwords. If WiFi password is not set before, you need to select the encryption mode

first then set the WiFi password. After configuring the parameters, click **Save**. Refer to [6.1 WiFi Name & Password](#) for detailed instructions.




Only devices supporting 5 GHz signal can scan and connect to the 5 GHz WiFi network of the router. You are recommended to encrypt your wireless network for higher network security.

4.4 Other information



Click the router icon on **Internet Status** page. You can know more about basic information, WAN port status, LAN port status and WiFi status of the router. Refer to [Chapter 11 System Settings](#) for detailed parameter information.

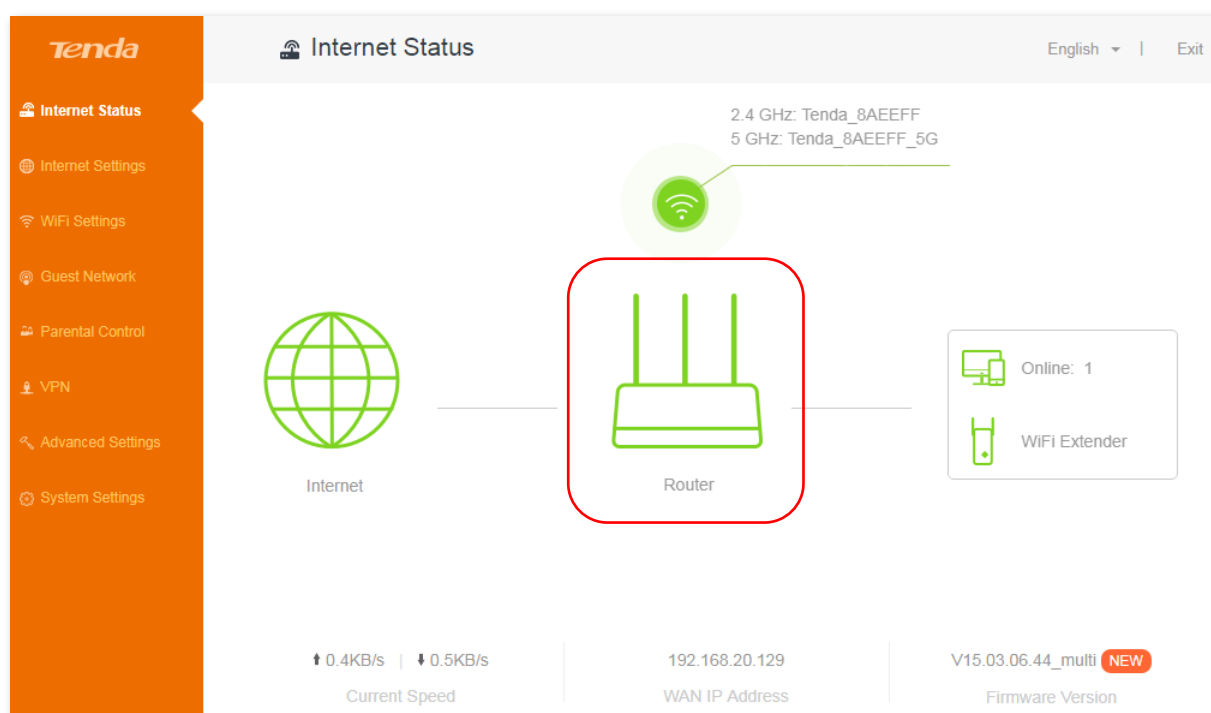

5

Internet Settings

5.1 Overview

This page allows you to set internet parameters of the router. Generally, the router detects your internet connection type automatically when you use the router for the first time or after you reset the router. You are recommended to select the detected connection type and follow the onscreen instructions to finish internet setup.

The following table may help you understand your internet connection type. If you are still uncertain about your internet connection type, consult your ISP.

Connection Type	Description
PPPoE	In this connection type, ISP user name and password are provided by your ISP.
Dynamic IP Address	In this connection type, your ISP does not provide ISP user name, password or other IP address information.
Static IP Address	In this connection type, your ISP provides IP address, subnet mask, default gateway, DNS server(s).

To access the configuration page, click **Internet Settings**. PPPoE is used as an example here.

Internet Settings

English | Exit

WAN Port: ☒ Ethernet cable connected

Connection Type:

PPPoE

ISP User Name:

chenhao

ISP Password:

.....

DNS Settings:

Automatic

Connection Status:

Connected. You can access the internet now.

Connection Duration: 35s

Disconnect

Parameter description:

Parameter	Description
WAN Port	It specifies the current status of the WAN port of the router, including Ethernet cable connected and Ethernet cable disconnected .
Connection Type	It specifies how the router is connected to the internet. This router supports three connection types: PPPoE, dynamic IP address, and static IP address. Please select your connection type according to your actual situation.
ISP User Name	Enter the user name provided by your ISP.
ISP Password	Enter the password provided by your ISP.
DNS Settings	It specifies how the router obtains DNS information. This item is only needed when you choose to connect the router to the internet by PPPoE or dynamic IP address. – Automatic: The router obtains DNS information from upstream device automatically. – Manual: You need to enter correct DNS information manually.
IP Address	The information is required only when you choose to connect the router to internet by static IP address. Enter the IP address and other information provided by your ISP manually.
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server	
Connection Status	It specifies whether the router is connected to the internet. If the “Connected. You can access the internet now.” message appears, the router is connected to the internet successfully and you can access the internet through your router. Otherwise, the router fails to connect to the internet.
Connection Duration	It specifies how long the router is connected to the internet successfully this time.

5.2 Setting up an internet connection with PPPoE

Procedures:

1. Click **Internet Settings**.
2. **Connection Type:** Select **PPPoE** from the drop-down list box.
3. **ISP User Name:** Enter the user name provided by your ISP.
4. **ISP Password:** Enter the password provided by your ISP.
5. Click **Connect**.

WAN Port: ☒ Ethernet cable connected

Connection Type:

ISP User Name:

ISP Password:

DNS Settings:

--End

Verification

Assume that the ISP user name is chenhao, and password is 1234567. If the “Connected. You can access the internet now.” message appears, you can access the internet through the router in a wired or wireless manner.

WAN Port: ☒ Ethernet cable connected

Connection Type:

ISP User Name:

ISP Password:

DNS Settings:


Connection Status: Connected. You can access the internet now.

Connection Duration: 9s

5.3 Setting up an internet connection with a dynamic IP address

Procedures:

1. Click **Internet Settings**.
2. **Connection Type**: Select **Dynamic IP**.
3. Click **Connect**.

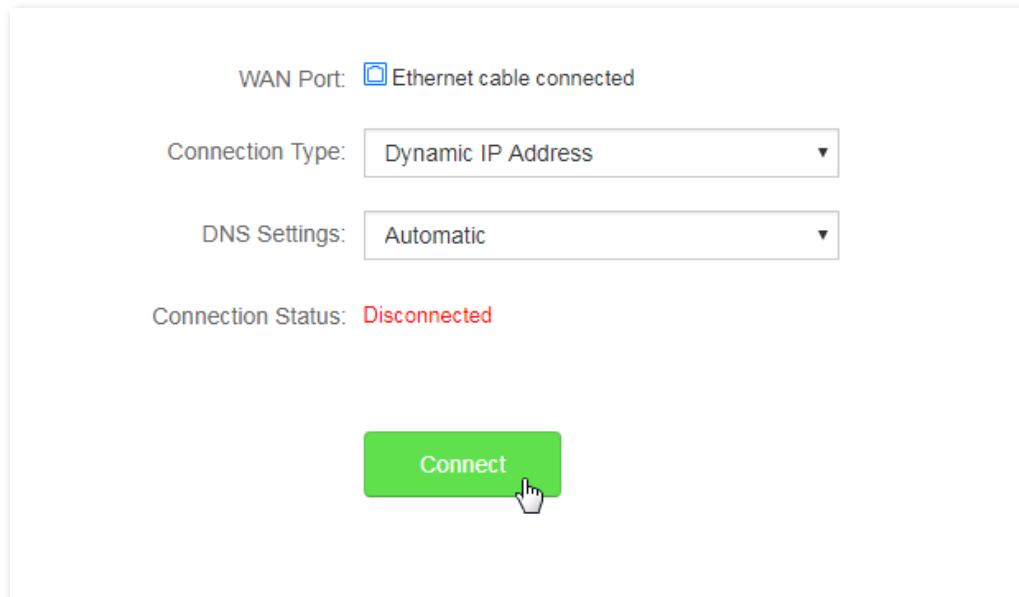

WAN Port: ☒ Ethernet cable connected

Connection Type:

DNS Settings:


Connection Status: **Disconnected**

Connect

--End

Verification

If the “Connected. You can access the internet now.” message appears, you can access the internet through the router in a wired or wireless manner.

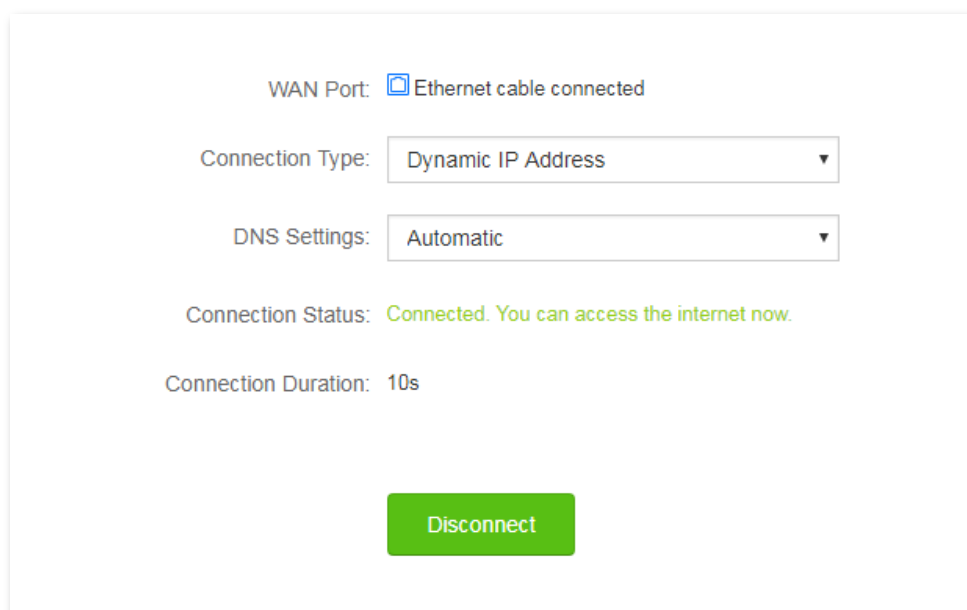

WAN Port: ☒ Ethernet cable connected

Connection Type:

DNS Settings:

Connection Status: **Connected. You can access the internet now.**

Connection Duration: 10s


Disconnect

5.4 Setting up an internet connection with a static IP address

Procedures:

To access the configuration page, click **Internet Settings** first.

1. **Connection Type:** Click **Static IP Address**.
2. **IP Address, Subnet Mask, Default Gateway and Primary/Secondary DNS Server:** Enter the relevant information provided by your ISP. Assume that the IP address in this example is 192.168.20.1, subnet mask 255.255.255.0, default gateway and primary DNS server 192.168.20.100.
3. Click **Connect**.

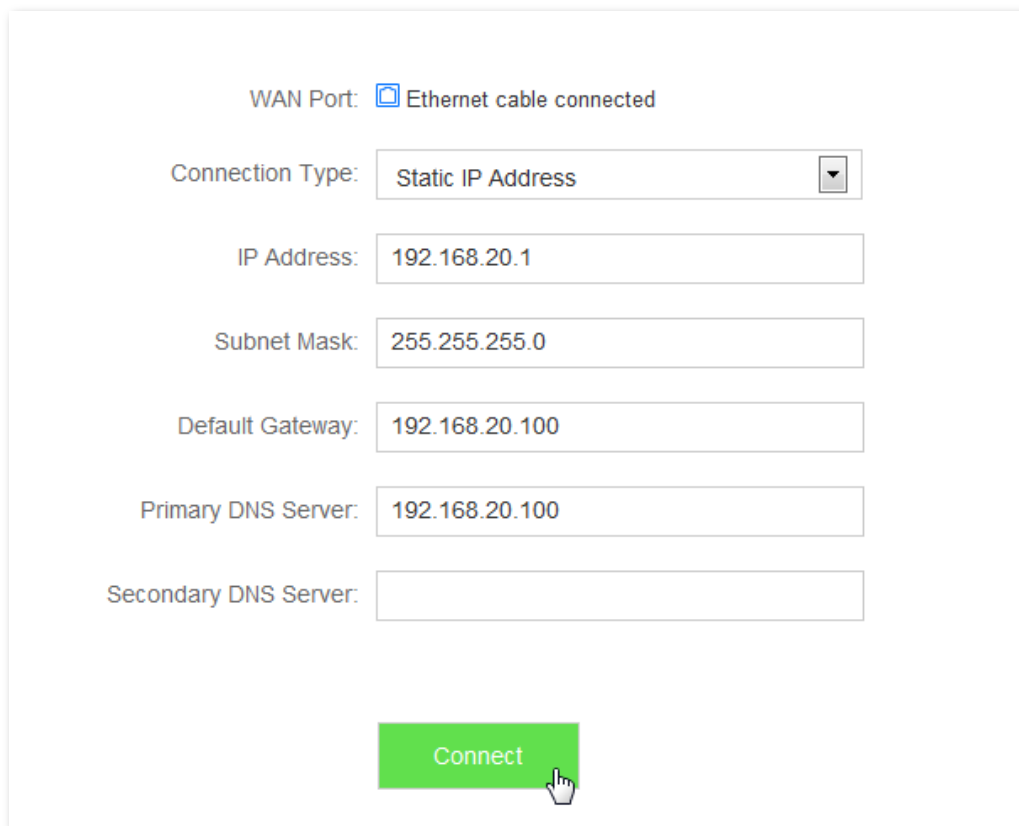

The screenshot shows a configuration window for WAN settings. At the top, it says 'WAN Port: ☒ Ethernet cable connected'. Below this is a 'Connection Type' dropdown menu set to 'Static IP Address'. There are input fields for 'IP Address' (192.168.20.1), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.20.100), 'Primary DNS Server' (192.168.20.100), and 'Secondary DNS Server' (empty). At the bottom is a green 'Connect' button with a mouse cursor pointing at it.

--End

Verification

If the “Connected. You can access the internet now.” message appears, you can access the internet through the router in a wired or wireless manner.

WAN Port: ☒ Ethernet cable connected

Connection Type: Static IP Address ▼

IP Address: 192.168.20.1

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.20.100

Primary DNS Server: 192.168.20.100

Secondary DNS Server:

Connection Status: **Connected.** You can access the internet now.

Connection Duration: 1min 16s

Disconnect

6

WiFi Settings

This module includes the following functions: [WiFi Name & Password](#), [WiFi Schedule](#), [Wireless Repeating](#), [Channel & Bandwidth](#), [Transmit Power](#), [WPS](#), [Beamforming+](#), [AP Mode](#), and [Anti-interference](#).

6.1 WiFi Name & Password

6.1.1 Overview

This router supports 2.4 GHz and 5 GHz WiFi signals. Features of these two signals are listed as follows:

- 2.4 GHz signal has longer wireless transmission distance than 5 GHz signal.
- 2.4 GHz signal has better wall penetration capacity than 5 GHz signal.
- 5 GHz signal has higher wireless transmission speed than 2.4 GHz signal.
- Comparing with 5 GHz, 2.4 GHz signal is more crowded, interrupted, and with worse stability.

You can set the WiFi names, encryption modes, and WiFi passwords for two WiFi networks on **WiFi Name & Password** page. To access the configuration page, click **WiFi Settings > WiFi Name & Password**.

WiFi Name & Password

2.4 GHz Network ☒

WiFi Name: Tenda_0A7E80 ☐ Hide

Encryption Mode: WPA/WPA2-PSK (recommend)

WiFi Password:

5 GHz Network ☒

WiFi Name: Tenda_0A7E80_5G ☐ Hide

Encryption Mode: WPA/WPA2-PSK (recommend)

WiFi Password:

Save

Parameter description:

Parameter	Description
2.4 GHz/5 GHz Network	Used to enable / disable the 2.4 GHz / 5 GHz WiFi network of your router.
WiFi Name	It specifies the name of 2.4 GHz / 5 GHz WiFi network. You can change it if needed. After the router connects to the internet, wireless devices can surf the internet by connecting to the

	WiFi name.
Encryption Mode	It specifies the encryption modes supported by the router, including: – None: It indicates that the wireless network is not encrypted so that any wireless devices can connect to it. This option is not recommended as it leads to low network security. – WPA-PSK: It indicates that the WiFi network uses WPA-PSK/AES as its authentication method. – WPA2-PSK: It indicates that the WiFi network uses WPA2-PSK/AES as its authentication method. – WPA/WPA2-PSK (Recommended): It indicates that the WiFi network uses the mixed authentication method of WPA-PSK/AES and WPA2-PSK/AES as its authentication method.
WiFi Password	It specifies the required WiFi password when wireless devices try connecting to the WiFi network.
Hide	It specifies whether to prevent the WiFi name from being detected by wireless devices. – If the box beside Hide is checked, the router does not broadcast WiFi signal. The WiFi name does not appear in the devices' lists of available networks, either. When wireless devices try connecting to the WiFi network, users should enter the WiFi name manually. – If the box beside Hide is not checked, the router broadcasts WiFi signal normally and the WiFi name appears in devices' lists of available networks.

6.1.2 Changing WiFi name & WiFi password

Assume to change the 2.4 GHz WiFi name to Tenda_2.4G, WiFi password to 12345678; 5 GHz WiFi name to Tenda_5G, WiFi password to 87654321.

Procedures:

Step 1 Click **WiFi Settings > WiFi Name & Password**.

Step 2 Change 2.4 GHz WiFi network information.

1. **WiFi Name:** Set **Tenda_2.4G** as the WiFi Name.
2. **Encryption Mode:** Keep the default setting, which is **WPA/WPA2-PSK** in this example. You can change it if needed.
3. **WiFi Password:** Set **12345678** as the WiFi password.

Step 3 Change 5 GHz WiFi network information.

1. **WiFi Name:** Set **Tenda_5G** as the WiFi Name.
2. **Encryption Mode:** Keep the default setting, which is **WPA/WPA2-PSK** in this example. You can change it if needed.
3. **WiFi Password:** Set **87654321** as the WiFi password.
4. Click **Save**.

WiFi Name & Password

2.4 GHz Network

WiFi Name:

Tenda_2.4G

Hide

Encryption Mode:

WPA/WPA2-PSK (recommend)

WiFi Password:

••••••••

5 GHz Network

WiFi Name:

Tenda_5G

Hide

Encryption Mode:

WPA/WPA2-PSK (recommend)

WiFi Password:


••••••••

Save

--End

Verification

Wait a moment for the modification to complete successfully. You can find the WiFi names have been changed on the **Internet Status** page.

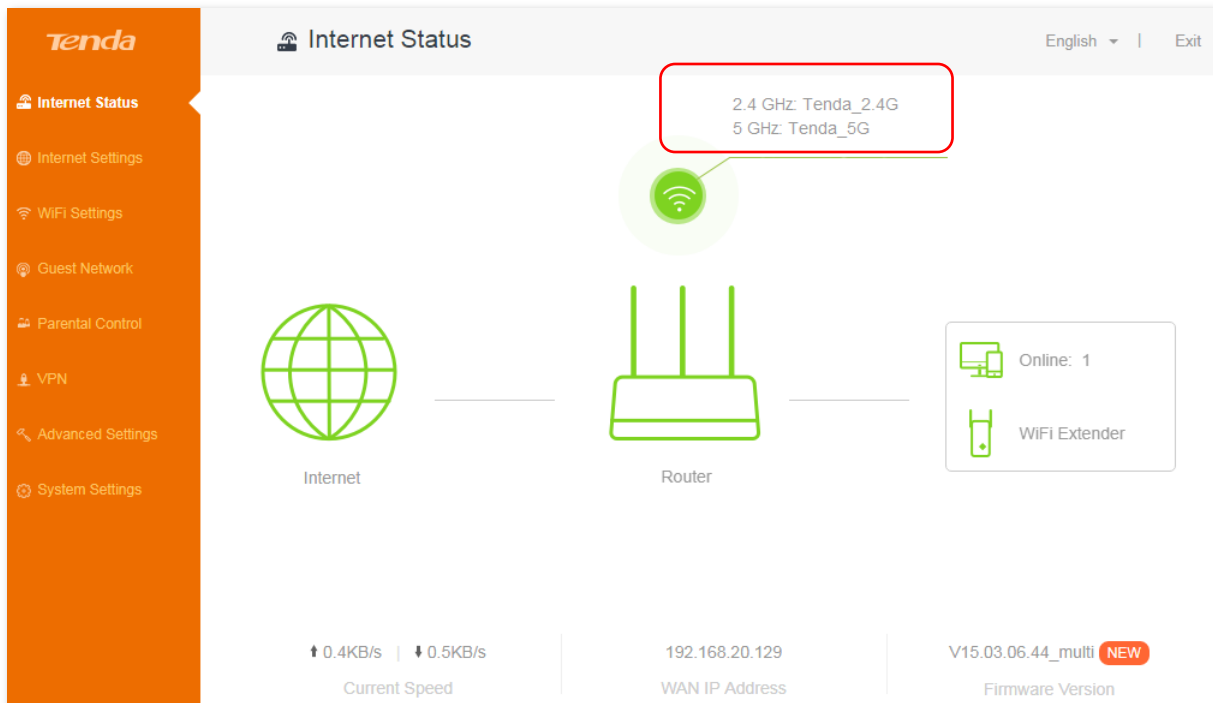


6.2 WiFi Schedule

6.2.1 Overview


This WiFi Schedule function allows you to disable the WiFi network of the router at specified period. By default, this function is disabled.

To access the configuration page, click **WiFi Settings** > **WiFi Schedule**.

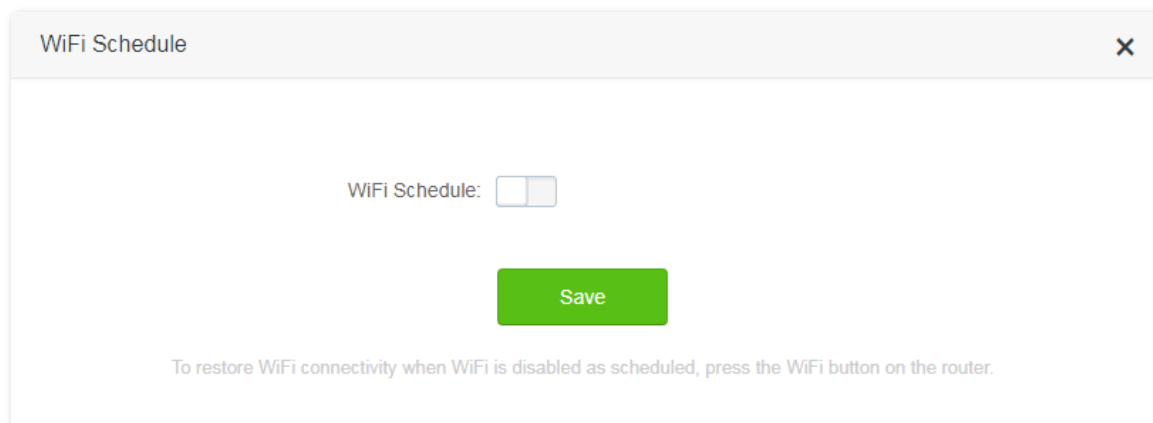

The screenshot shows the 'WiFi Schedule' configuration window. At the top, the title 'WiFi Schedule' is on the left and a close button 'X' is on the right. In the center, there is a label 'WiFi Schedule:' followed by a toggle switch that is currently in the 'off' position. Below the toggle is a green 'Save' button. At the bottom, a note reads: 'To restore WiFi connectivity when WiFi is disabled as scheduled, press the WiFi button on the router.'

The following figure appears when the WiFi Schedule function is enabled:

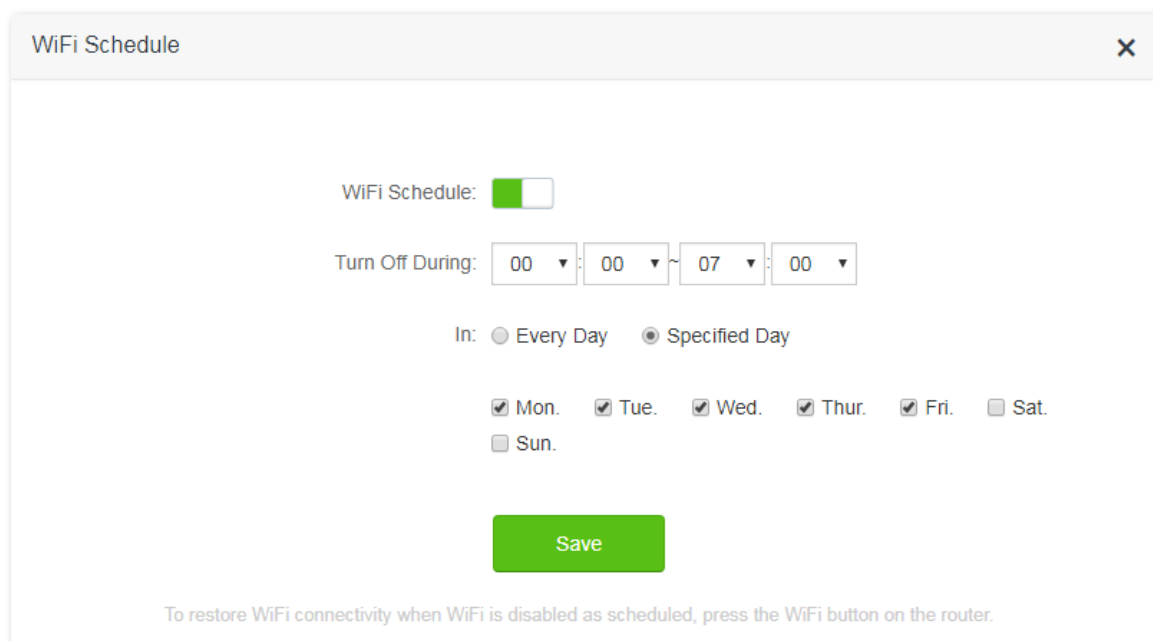

The screenshot shows the 'WiFi Schedule' configuration window with the function enabled. The toggle switch is now green and in the 'on' position. Below it, the 'Turn Off During:' section shows a time range from 00:00 to 07:00. The 'In:' section has two radio buttons: 'Every Day' and 'Specified Day', with 'Specified Day' selected. Below the radio buttons, there are checkboxes for each day of the week: Mon., Tue., Wed., Thur., Fri., Sat., and Sun. The checkboxes for Mon. through Fri. are checked, while Sat. and Sun. are unchecked. A green 'Save' button is at the bottom. The same note about restoring connectivity is at the bottom.

Parameter description:

Parameter	Description
WiFi Schedule	Used to enable/disable the WiFi Schedule function.
Turn Off During	It specifies the period when the WiFi network is disabled. In that period, wireless devices cannot search the router's WiFi networks, but out of that period they can search and connect to the WiFi networks.
In	It allows you to customize your WiFi schedule. See the following:

- **Every Day:** The router disables its WiFi networks at the specified time you set every day.
- **Specified Day:** The router disables its WiFi networks at the specified time you set on specified days.


6.2.2 Example

Scenario

Michael bought an AC7 for network coverage. For a healthier sleeping environment, he wants to disable the WiFi networks every day during 23:00 to 7:00.

Procedures:

1. Click **WiFi Settings > WiFi Schedule**.
2. Set the WiFi schedule button  to .
3. **Turn Off During:** Set the period as needed, which is **23:00~07:00** in this example.
4. **In:** Select the schedule type as needed, which is **Every Day** in this example.
5. Click **Save**.

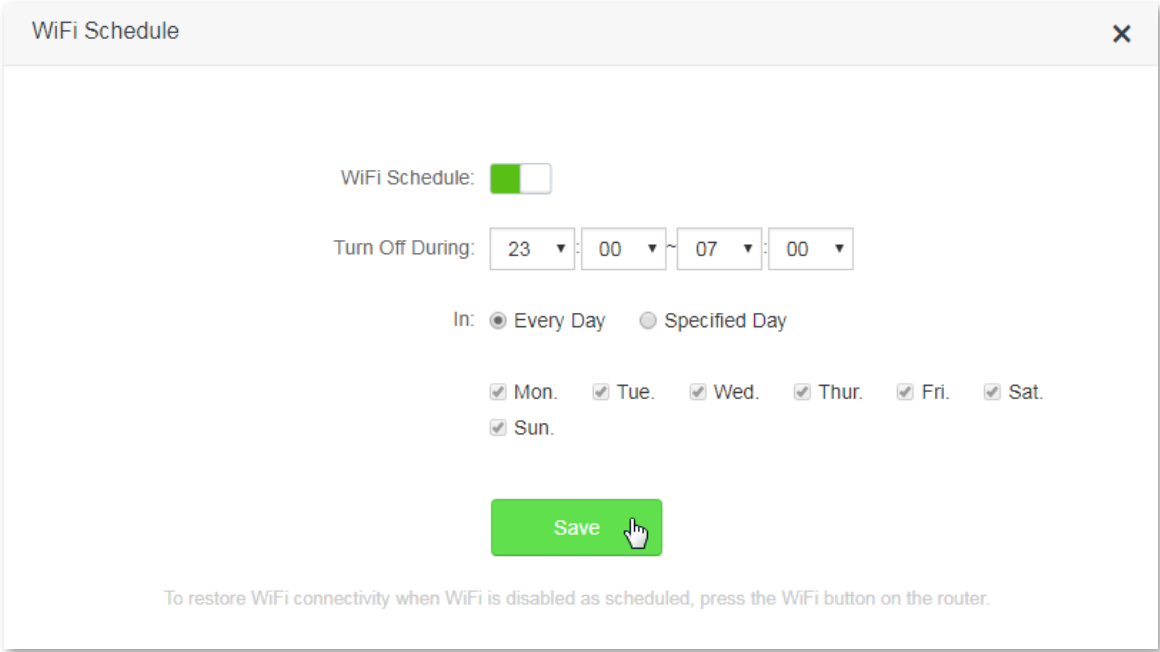

--End

Verification

The WiFi networks are disabled from 23:00 to 07:00 every day.

6.3 Wireless Repeating

6.3.1 Overview

The Wireless Repeating function enables the router to expand upstream router's WiFi coverage by connecting to the WiFi network of an upstream router. This router supports two wireless repeating modes: WISP and Client+AP.



If repeating the WiFi hotspot provided by ISP, you are recommended to select WISP. Otherwise, select WISP or Client+AP.

To access the configuration page, click **WiFi Settings > Wireless Repeating**. By default, the Wireless Repeating function is disabled.

The screenshot shows the 'Wireless Repeating' configuration window. At the top, the title 'Wireless Repeating' is displayed with a close button (X). Below the title, the 'Wireless Repeating' toggle switch is in the 'off' position. A green 'Save' button is located at the bottom center of the window.

Set the wireless repeating button  to . Then the following figure appears:

The screenshot shows the 'Wireless Repeating' configuration window with the function enabled. The 'Wireless Repeating' toggle switch is now in the 'on' position. Below it, the 'Repeating Mode' section has two radio buttons: 'WISP' (selected) and 'Client+AP'. Underneath, the 'Upstream WiFi Name' is shown as a dropdown menu with '--Select--' and a refresh icon. A green 'Save' button is at the bottom center.

If wireless repeating is enabled, the Sleeping Mode, IPTV Function, Guest Network, WPS, and WiFi Schedule functions become unavailable. You can find their icons disappear on web UI of the router.

Parameter description:

Parameter	Description
Wireless Repeating	Used to enable/disable the Wireless Repeating function.
Repeating Mode	It specifies how the router repeats the upstream WiFi network.

- **WISP**: The router repeats WiFi hotspot provided by ISP or ordinary WiFi network.
- **Client+AP**: The router repeats ordinary WiFi network.

Upstream WiFi Name	It specifies the name of the WiFi network you decide to repeat. You can select it from the drop-down list box.
Upstream WiFi Password	It specifies the password of the WiFi network you decide to repeat. This parameter appears after you select the upstream WiFi name.


6.3.2 Example

Scenario

Michael bought a wireless router for network after having broadband service. The router is placed in the living room. WiFi signals are strong in the living room and master bedroom, but too poor in the other bedrooms and restrooms to access the internet. Now he wants to expand the WiFi coverage, ensuring devices to access the internet everywhere at home.


Solution

Michael can buy an AC7, and set the wireless repeating function on it to expand the WiFi network coverage of the original router. Thus, devices in dead zones can access the internet through WiFi signal of AC7. See the following figure:

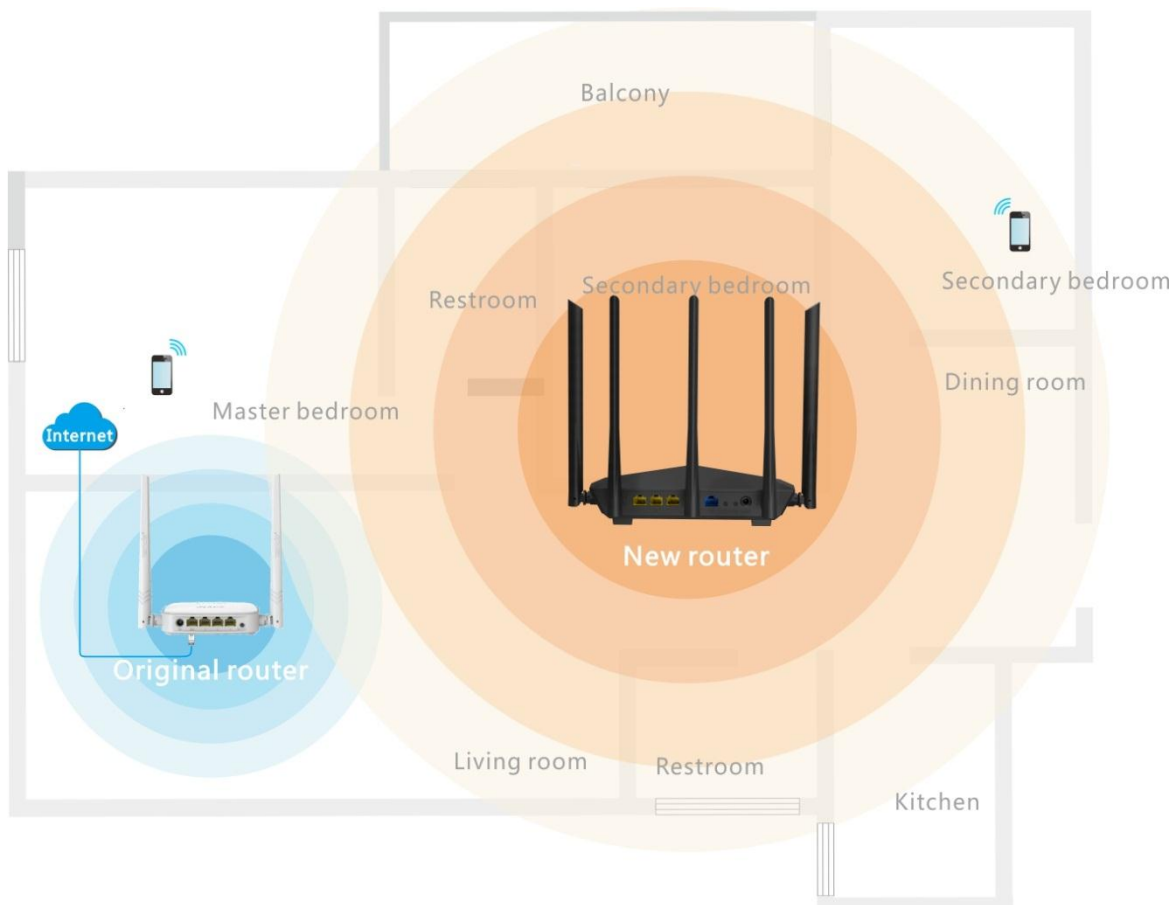


Procedures:

1. Click **WiFi Settings > Wireless Repeating**.
2. Set the wireless repeating button from  to .
3. Select **WISP** or **Client+AP**.
4. **Upstream WiFi Name:** Select the WiFi name of the original router from the drop-down list box, which is **majianwei** in this example.
5. **Upstream WiFi Password:** Enter the password of the WiFi network of the original router, which is **12345678** in this example. (If the wireless network of the upstream router is unencrypted, leave this box blank.)
6. Click **Save**.

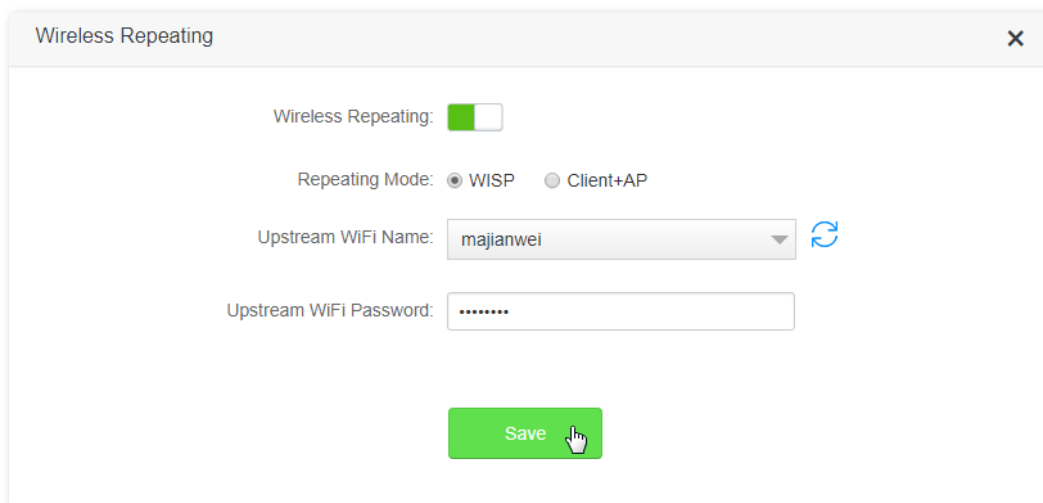

The image shows a 'Wireless Repeating' configuration window. It has a title bar with a close button. Inside, there is a 'Wireless Repeating' toggle switch that is turned on (green). Below it is a 'Repeating Mode' section with two radio buttons: 'WISP' (selected) and 'Client+AP'. Underneath is an 'Upstream WiFi Name' dropdown menu showing 'majianwei' with a refresh icon to its right. Below that is an 'Upstream WiFi Password' text field filled with dots. At the bottom is a green 'Save' button with a mouse cursor icon over it.

7. Click **OK**.

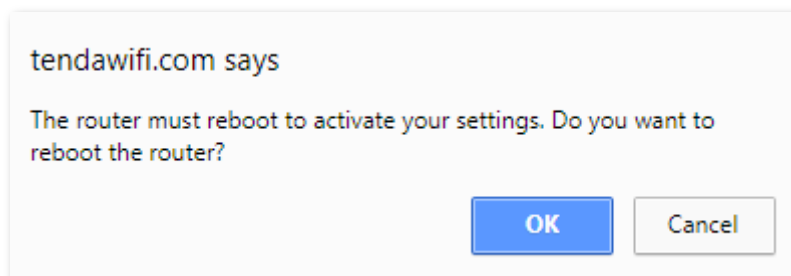

The image shows a dialog box with the text 'tendawifi.com says' in a blue font. Below it, the text reads 'The router must reboot to activate your settings. Do you want to reboot the router?'. At the bottom are two buttons: 'OK' (blue) and 'Cancel' (white with a grey border).

--End

Verification

After the message "Connected. You can access the internet now." appears on the **Internet Settings** page and the **Internet Status** page appears as the second figure, devices can access the internet through the WiFi network of AC7. You can refer to the upper-right part of the **Internet Status** for WiFi name.

Internet Settings
English | Exit

WAN Port: ☐ Ethernet cable disconnected


Connection Type: Dynamic IP Address

DNS Settings: Automatic

Connection Status: Connected. You can access the internet now.

Connection Duration: 15s

Disconnect

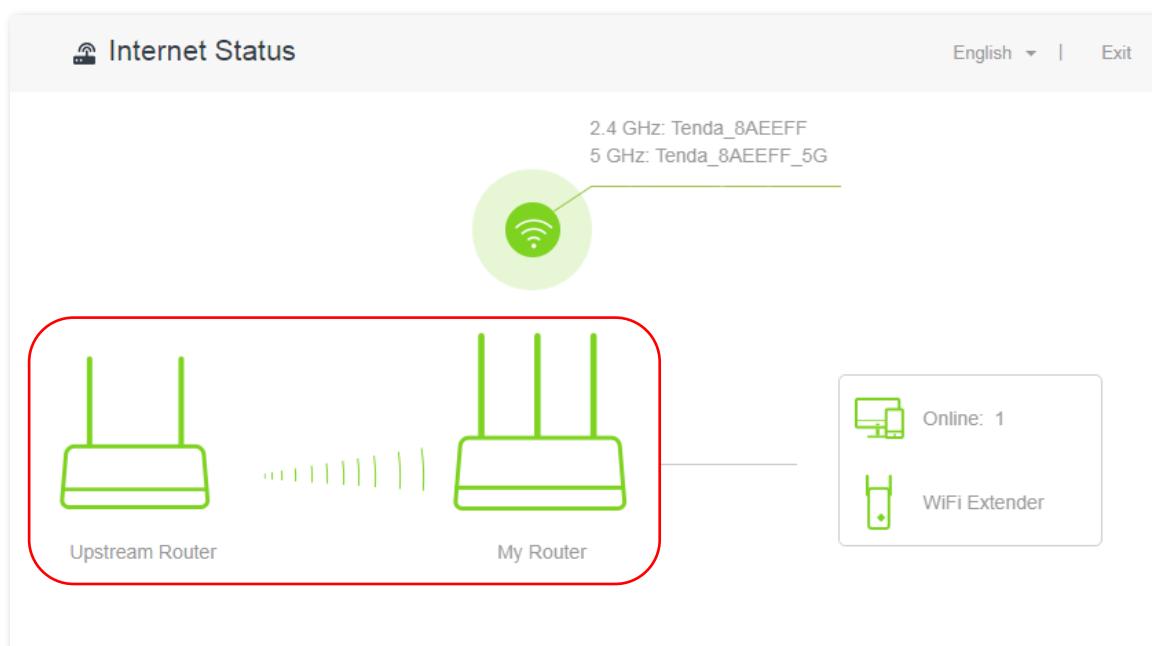

NOTE

If the connection type provided by the upstream router is dynamic IP address, the new router obtains connection information from the upstream router automatically. If the connection type is static IP address, you need to set the connection information manually.

In WISP mode, if the LAN IP address of the new router is in the same network segment as that of the upstream router, an IP conflict occurs. In this case, the new router replaces its LAN IP address with an IP address which belongs to another network segment automatically. Then you can log in to the web UI of the new router using **tendawifi.com**.

In Client+AP mode, the LAN IP address of AC7 changes and you can log in to the router using **tendawifi.com** or using the new LAN IP address. Refer the DHCP client list of the upstream router for the new IP address.

6.4 Channel & Bandwidth

6.4.1 Overview

This module allows you to change network mode, WiFi channel, and WiFi bandwidth of either 2.4 GHz or 5 GHz WiFi network. Please retain the default channel and bandwidth settings if you set without professional guidance. To access the configuration page, click **WiFi Settings > Channel & Bandwidth**.

Channel & Bandwidth

2.4 GHz Network

Network Mode:

11b/g/n mixed

WiFi Channel:

Auto

WiFi Bandwidth:

20/40

5 GHz Network

Network Mode:

11a/n/ac mixed

WiFi Channel:

Auto

WiFi Bandwidth:

20/40/80

Save

Parameter description:

Parameter	Description
	It specifies various protocols adopted for wireless transmission. You are recommended to keep the default settings. For 2.4 GHz networks, 11b/g mixed, 11b/g/n mixed, and 11n protocols are available. For 5 GHz networks, the 11ac and 11a/n/ac protocols mixed are available.
Network Mode	– 11b/g mixed : It indicates that devices compliant with 802.11b or 802.11g protocol can connect to the router.
	– 11b/g/n mixed : It indicates that all devices working at 2.4 GHz and compliant with 802.11b, 802.11g, or 802.11n protocol can connect to the router.
	– 11n : It indicates that devices working at 2.4 GHz and compliant with 802.11n can connect to the router.
	– 11ac : It indicates that devices complaint with 802.11ac protocol can connect to the router.
	– 11a/n/ac mixed : It indicates that devices working at 5 GHz and compliant with 802.11a, 802.11n or 802.11ac protocol can connect to the router.

Parameter	Description
WiFi Channel	It specifies the operating channel of a WiFi network. By default, the WiFi channel is Auto, which indicates that the router selects a proper channel based on the utilization rate it detected. But you can change it as required. A channel different from nearby channels and with less interference are recommended to use because of better wireless transmission efficiency. You can use a third-party tool to identify the channels different from nearby channels and with less interference.
WiFi Bandwidth	It specifies the bandwidth of the WiFi channel of a WiFi network. Change the default settings only when necessary. – 20: It indicates that the channel bandwidth of a router is to 20 MHz. – 40: It indicates that the channel bandwidth of a router is 40 MHz. – 80: It indicates that the channel bandwidth of a router is 80 MHz. This option is available only at 5 GHz. – 20/40: It specifies that a router can switch its channel bandwidth between 20 MHz and 40 MHz based on the ambient environment. This option is available only at 2.4 GHz. – 20/40/80: It specifies that a router can switch its channel bandwidth among 20 MHz, 40 MHz, and 80 MHz based on the ambient environment. This option is available only at 5 GHz.

6.4.2 Changing WiFi channel

Assume that the channel at 2.4 GHz WiFi network is required to change to channel 11, and 5 GHz WiFi network to channel 157.

Procedures:

1. Click **WiFi Settings > Channel & Bandwidth**.
2. Change the channel of 2.4 GHz WiFi network to **Channel 11**.
3. Change the channel of 5 GHz WiFi network to **Channel 157**. (If there is no special requirement, retain the other default settings.)
4. Click **Save**.

Channel & Bandwidth

2.4 GHz Network

Network Mode:

11b/g/n mixed

WiFi Channel:

Channel 11

WiFi Bandwidth:

20/40

5 GHz Network

Network Mode:

11a/n/ac mixed

WiFi Channel:

Channel 157

WiFi Bandwidth:

20/40/80


Save

--End

6.5 Transmit Power

This router supports three WiFi signal strength modes: Low, Medium, and High. By default, 2.4 GHz and 5 GHz WiFi signal is in the High mode. You can adjust the WiFi coverage and wall penetration capacity of the router's WiFi network through changing its WiFi signal strength mode.

To access the configuration page, click **WiFi Settings > Transmit Power**.

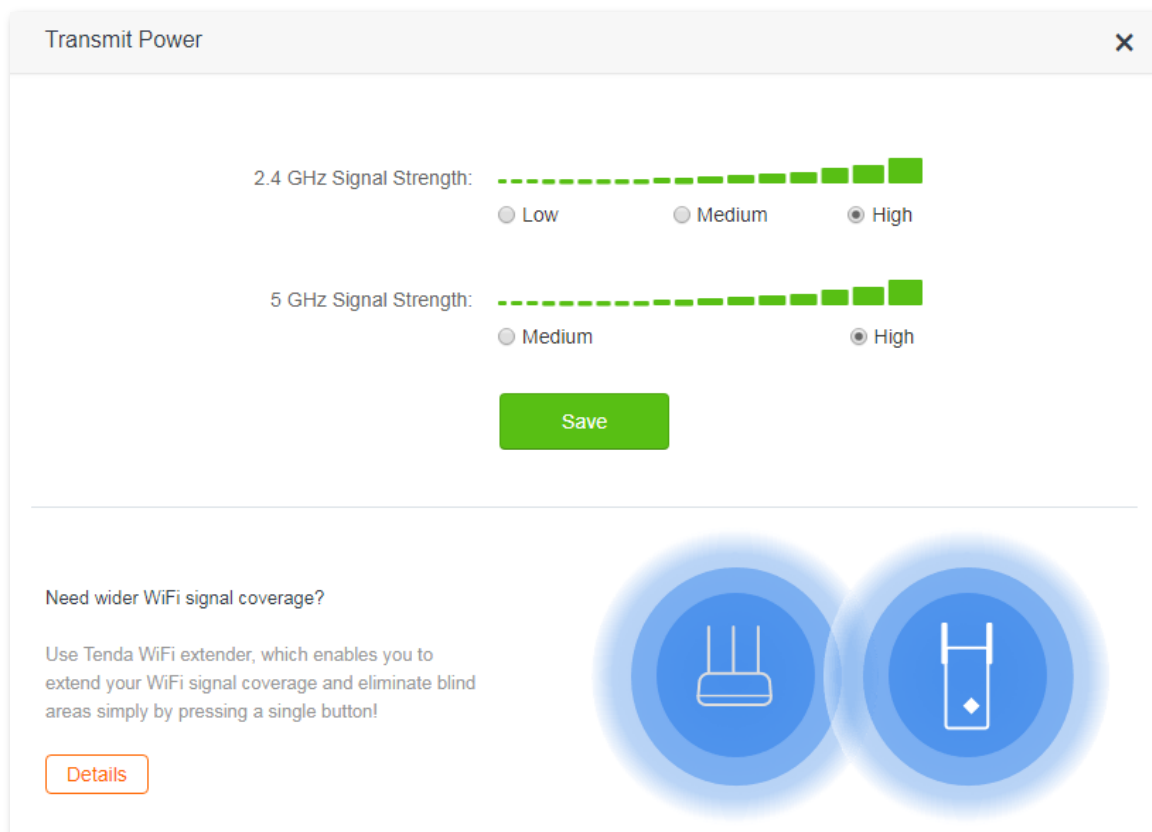

Descriptions about WiFi signal strength modes:

- **Low:** WiFi transmit power in this mode is relatively weak, which is suitable for small-area or barrier-free WiFi coverage environment.
- **Medium:** WiFi transmit power in this mode is relatively strong, which is suitable for medium-area WiFi coverage environment or environment with few barriers.
- **High:** WiFi transmit power in this mode is strong, which is suitable for large-area WiFi coverage environment or environment with many barriers.

If WiFi network experience is excellent in Low mode, you are recommended to set your router in Low mode.

If you want to improve your network experience in some areas with poor WiFi signal, you are recommended to have a Tenda WiFi extender to get your WiFi coverage wider. Click **Details** to know more about the recommended Tenda WiFi extender. For instructions about how to extend WiFi coverage using WiFi extender, refer to the installation guide or user guide of your WiFi extender.

[illegible]

2.4 GHz Signal Strength:



● Low

☐ Medium

☒ High

5 GHz Signal Strength:



● Medium


● High

Save

Need wider WiFi signal coverage?

Use Tenda WiFi extender, which enables you to extend your WiFi signal coverage and eliminate blind areas simply by pressing a single button!

Details

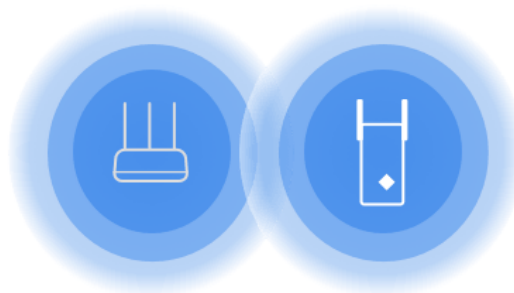

WPS

WPS: ☒

Method 1:

Press the WPS button on the router or [Click Here](#). Then, press the WPS button on the wireless network adapter within 2 minutes.

Method 2:

Enter this pin on receiver: 57039336

6.6.2 Connect devices to WiFi network using WPS




Smart phones can connect to the WiFi network of the router through WPS only when they support WPS function.

Desktops or laptops can connect to the WiFi network of the router through WPS only when they are installed with wireless adapters. For detailed information, please refer to the user guide of relevant wireless adapter.

Method 1: Setting through the web UI of the router

1. Click **WiFi Settings** > **WPS**.
2. Click **Click Here**.

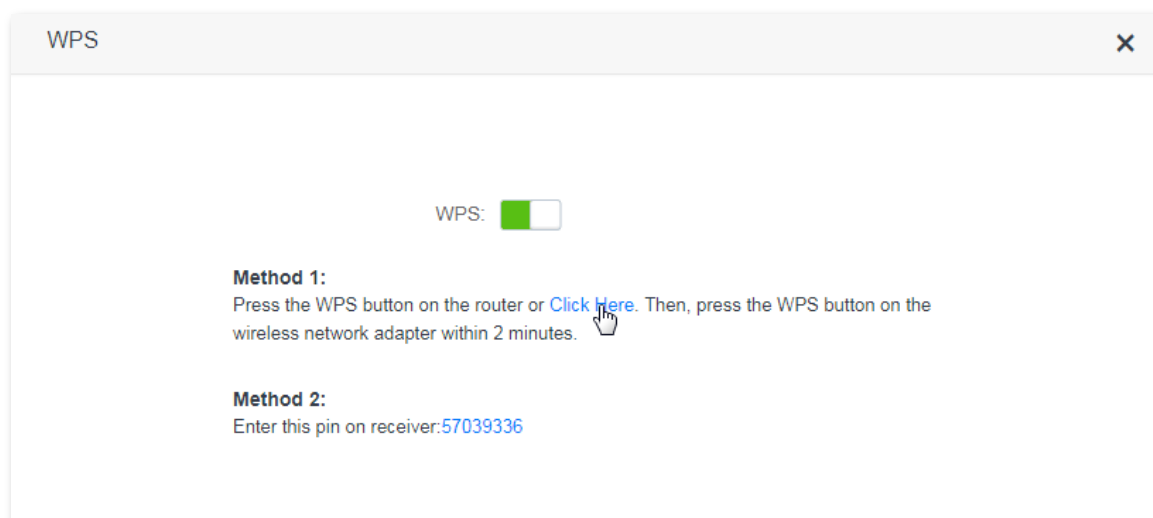

Then the router's WiFi LED indicator on the front panel is blinking slowly.

Set WPS function on a smart phone or computer installed with wireless network adapter within 2 minutes

--End

Smart phones or computers are connected to the WiFi network of the router successfully after a while.

Method 2: Setting via the WPS button on the router

1. Press the WPS button on the router.
2. Set WPS on a smart phone or computer installed with wireless adapter within two minutes.

--End


The smart phone or computer is connected to the WiFi network of the router successfully after a while.

Method 3: Setting through pin code of the router



WPS connection using pin code is generally applied on computer with wireless adapter. Please refer to relevant adapter's user guide for detailed instructions.

1. Record the router's pin code labeled on the bottom of the router.

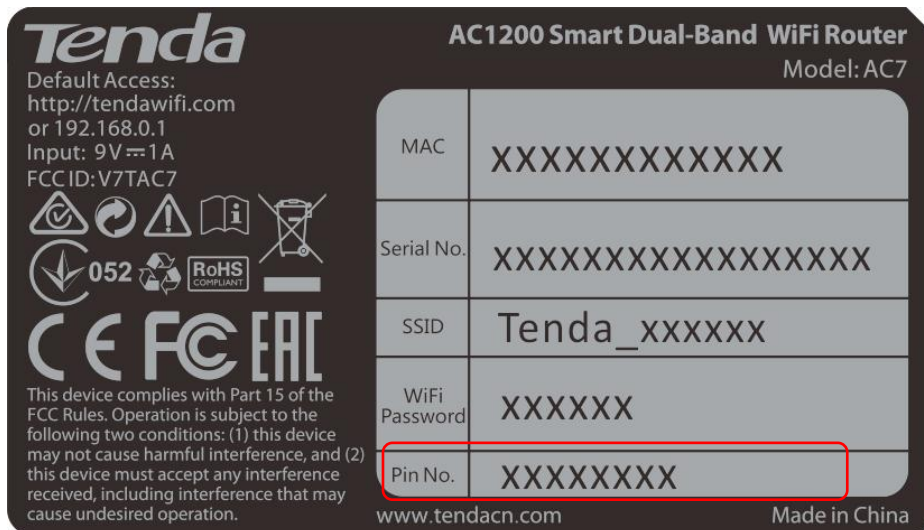

2. Enter the pin code on the device for connection.

--End

The device is connected to the router's WiFi network successfully after a while.

6.6.3 Example

Scenario


Michael bought an AC7 for network and he has set the WiFi password. He hopes to connect devices to the router's WiFi network without entering WiFi password. Assume that the WiFi name of his router is Tenda_XXXXXX.

The WPS function can address this requirement.

Procedures:

Step 1 Set up the router.


1. Click **WiFi Settings** > **WPS** > **Click Here**.

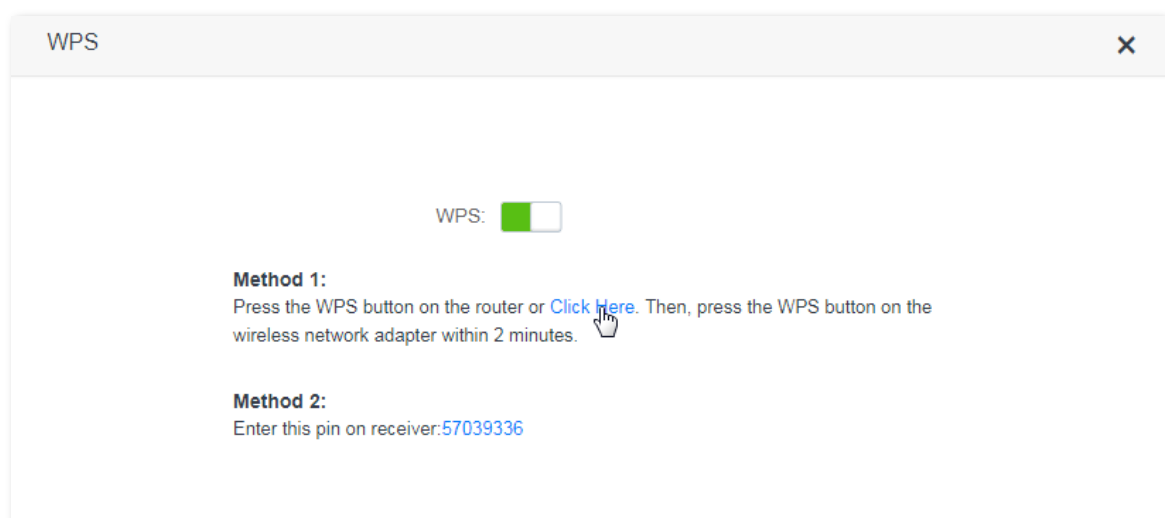


Step 2 Set WPS on a smart phone. Smart phone Redmi Note 4X is used as an example here.

1. Click **Settings** on the phone's homepage.

2. Click **Advanced settings** > **Connect WPS**.

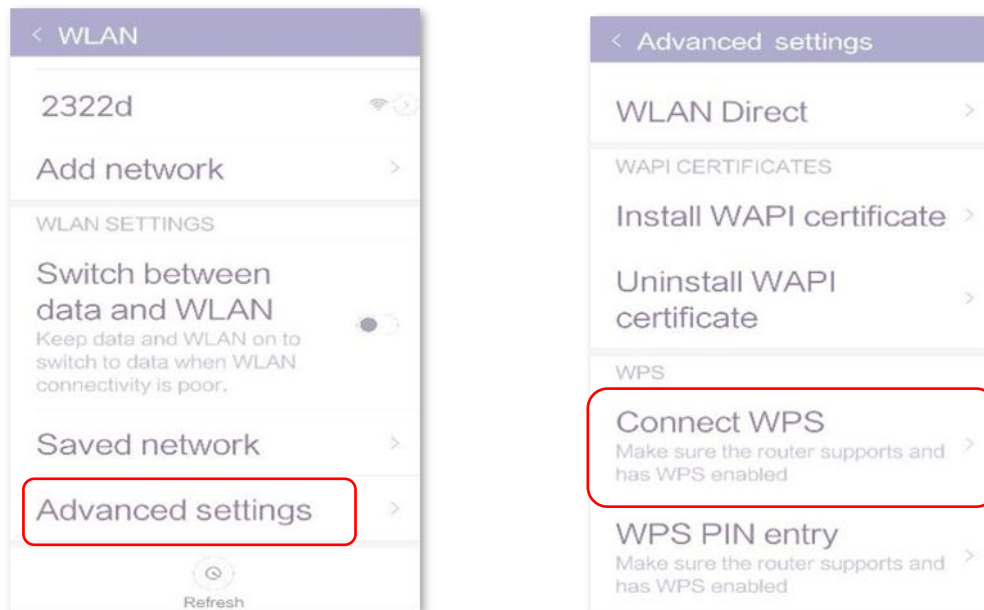


3. The smart phone is performing WPS negotiation with the router.

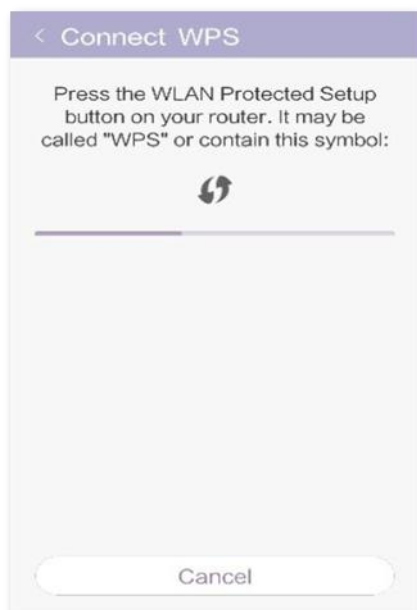

--End

Wait a moment for the negotiation to complete. Then the smart phone connects to the router's WiFi network successfully.

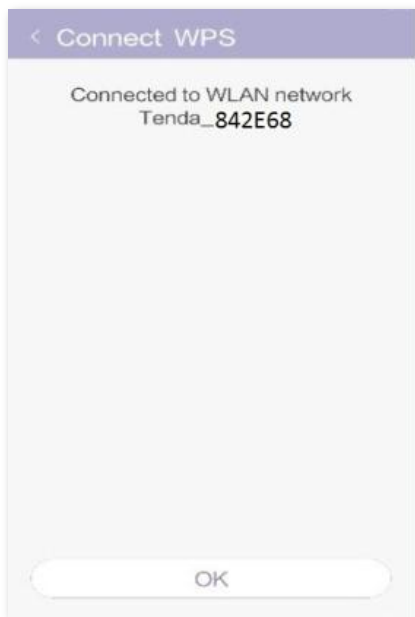

Verification

The smart phone accesses the internet through the router's WiFi network successfully.

6.7 Beamforming+

6.7.1 Overview

As a wireless signal optimization technology, the location-oriented Beamforming could transmit wireless signals to wireless devices precisely, offering users with better internet connection, such as higher download speed or smooth playback of HD videos. Wireless routers supporting Beamforming+ transmits wireless signals toward the location of connected devices, improving users' internet experiences.

The following figure shows the wireless transmission when Beamforming+ is disabled.




The following figure shows the wireless transmission when Beamforming+ is enabled.



6.7.2 Setting Beamforming+

To access the configuration page, click **WiFi Settings** > **Beamforming+**. By default, Beamforming+ function is enabled. You are recommended to retain the default settings.

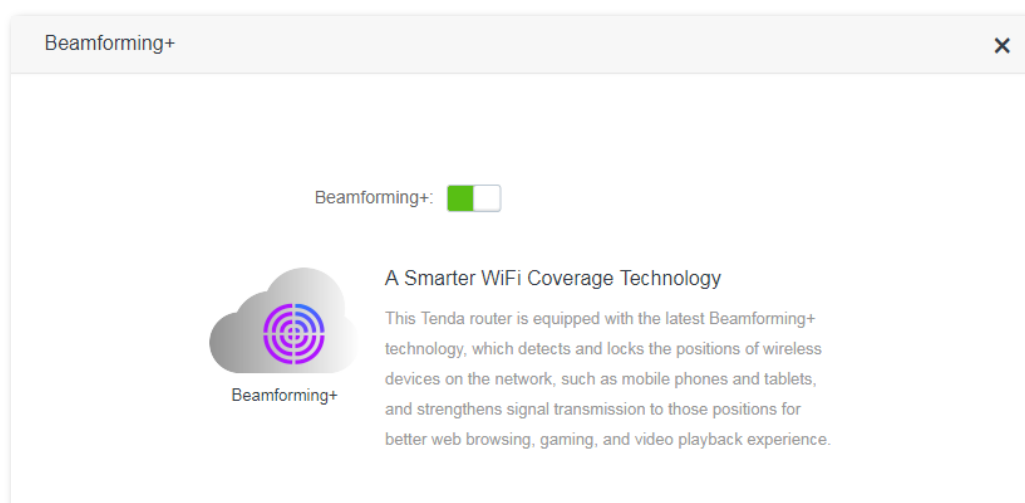


6.8 AP Mode

6.8.1 Overview


In AP mode, the router implements the functions of wireless access point (AP), and WAN port of the router functions as a LAN port. Usually, in AP mode, when the router connects to the upstream router using an Ethernet cable, the router extends the wireless network coverage of the upstream router, or transforms the wired signal to wireless one.

To access the configuration page, click **WiFi Settings** > **AP Mode**. By default, AP mode is disabled.

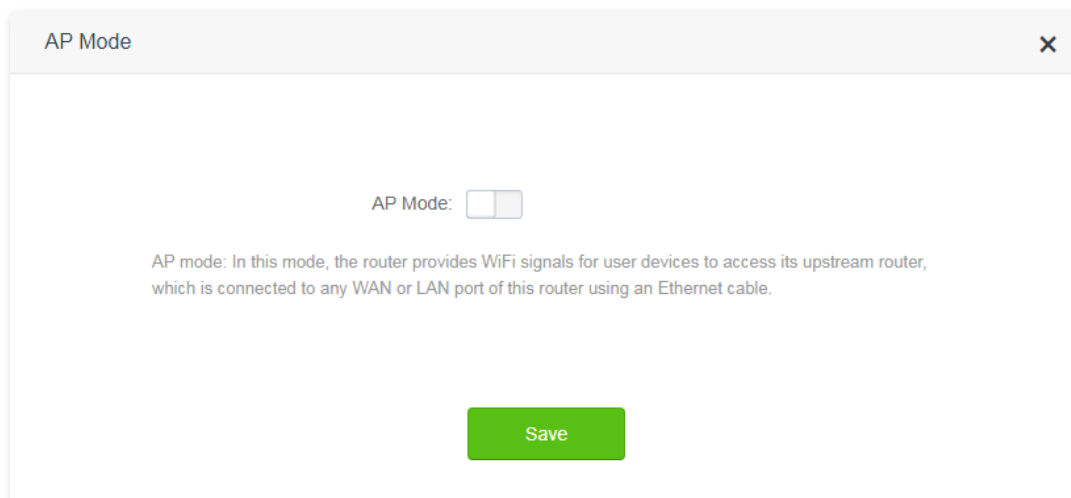

6.8.2 Enabling AP mode

1. Click **WiFi Settings > AP Mode**.
2. Set the AP mode button  to . Click **Save**.

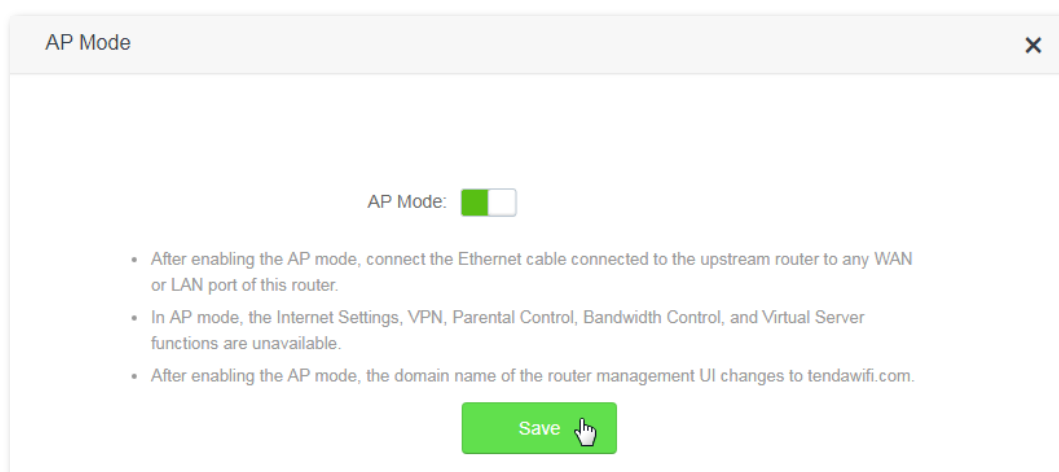

--End



If AP mode is enabled, Internet Settings, VPN, Parental Control, Bandwidth Control, and Virtual Server functions become unavailable.

The LAN IP address of the router will be changed since AP mode is enabled. Please log in to the router's web UI by domain name **tendawifi.com**, or check the new LAN IP address from the client list of the upstream router, and log in to the router through the new IP address.


6.8.3 Example

Scenario

Michael could access the internet through his optical modem only in a wired manner. Now he wants to access the internet by WiFi network.


Solution

He is recommended to purchase an AC7 and enable its AP mode. After setting up the router successfully, his wireless devices like smart phones could access the internet through WiFi network of the router. Connect a LAN port of the optical modem to any port of the router using an Ethernet cable. Then connect your computer to the router using an Ethernet cable and your smart phones to the router's WiFi network. See the following figure:

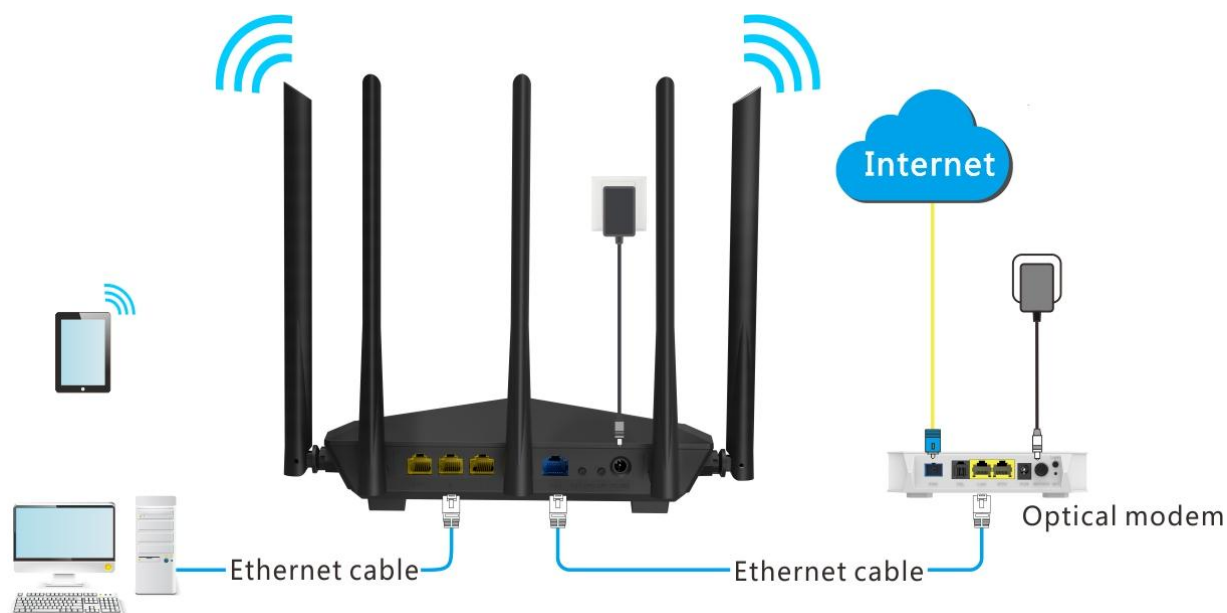


Procedures:

1. Click **WiFi Settings > AP Mode**.
2. Set the AP mode button ☐ to ☒.
3. Click **Save**.

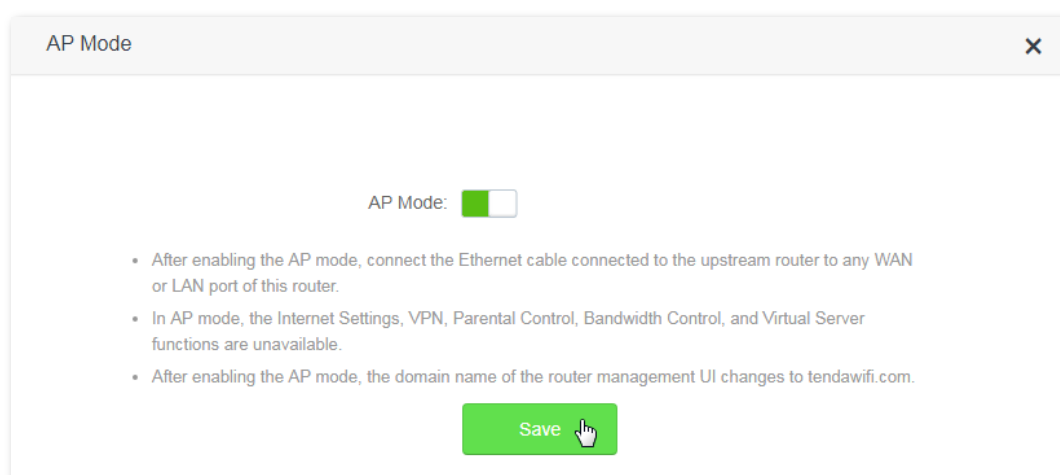

4. Click **OK** in the following window that appears:

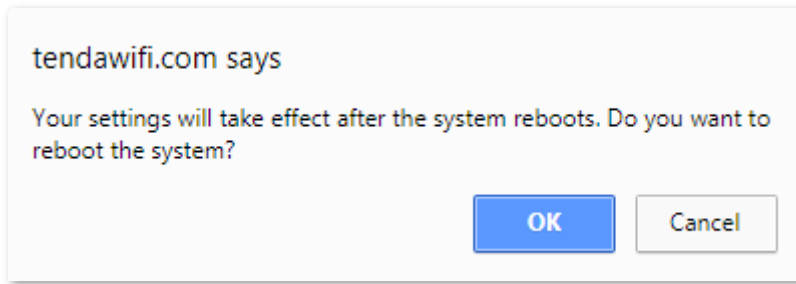

--End


Verification

Wired devices like computers could access the internet successfully if they connect to the router using Ethernet cables, and wireless devices like smart phones are also available to the internet if they connect the router's WiFi network. The WiFi network's SSID and password keep the same as what they were before you set the router to AP mode.

6.9 Anti-interference

This router supports the Anti-interference function. When having bad internet experience, you can try modifying the Anti-interference settings.

To access the configuration page, click **WiFi Settings > Anti-interference**. By default, this function is in **Auto** status.

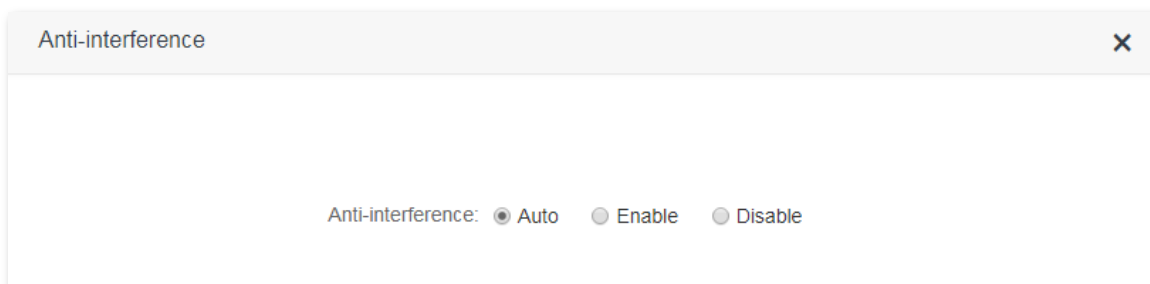

- When you choose **Auto**, the router will adjust receiving sensitivity automatically based on the current interference. Please keep **Auto** if you do not have any special requirement.
- When you choose **Enable**, the router has better anti-interference ability but smaller WiFi coverage.
- When you choose **Disable**, the router has wider WiFi coverage. But if the interference is strong in your environment, you are recommended to choose **Auto** or **Enable**.

7

Guest Network

7.1 Overview

This module makes you be able to enable/disable the Guest Network function and change guest network's WiFi name and password.

Devices connected to the guest network can access to the internet and communicate with each other, but cannot access the router's web UI or the master network. This function not only enables guests to access the internet but also ensures the security of the master network.

To access the configuration page, click **Guest Network**. By default, the Guest Network function is disabled.

Guest Network

English | Exit

Guest Network: ☐

2.4 GHz WiFi Name: Tenda_VIP

5 GHz WiFi Name: Tenda_VIP_5G

Guest Network Password: Blank means no password.

Validity: 8 hours

Shared Bandwidth for Guests: Unlimited Mbps

Save


Parameter description:

Parameter	Description
Guest Network	Used to enable the Guest Network function. By default, this function is disabled.
2.4 GHz / 5 GHz WiFi Name	It specifies the WiFi name of the router's guest network. By default, Tenda_VIP is for 2.4 GHz WiFi network and Tenda_VIP_5G for 5 GHz WiFi network. You can change the SSIDs if required. To distinguish the guest network from the master network, you are recommended not to set the same name for these two networks.
Guest Network Password	It specifies the password for the router's two guest networks. Please set the password according to your requirements.

Parameter	Description
Validity	It specifies the validity of the guest networks. The Guest Network function will be disabled automatically out of the specified time so wireless devices will not search it. Please set the validity as needed.
Shared Bandwidth for Guests	It specifies the downloading speed of guest network devices, with a unit Mbps. By default, the speed is not limited. You can set it as needed.

7.2 Setting guest network

1. Click **Guest Network**.
2. Set the Guest Network button  to .
3. **2.4 GHz WiFi Name:** Change the WiFi name, such as to **Michael**.
4. **5 GHz WiFi Name:** Change the WiFi name, such as to **Michael_5G**.
5. **Guest Network Password:** Set the password for guest networks, such as to **987654321**.
6. **Validity:** Click the drop-down box, and choose **4 hours**.
7. **Shared Bandwidth for Guests:** Click the drop-down box, and choose **2**.
8. Click **Save**.

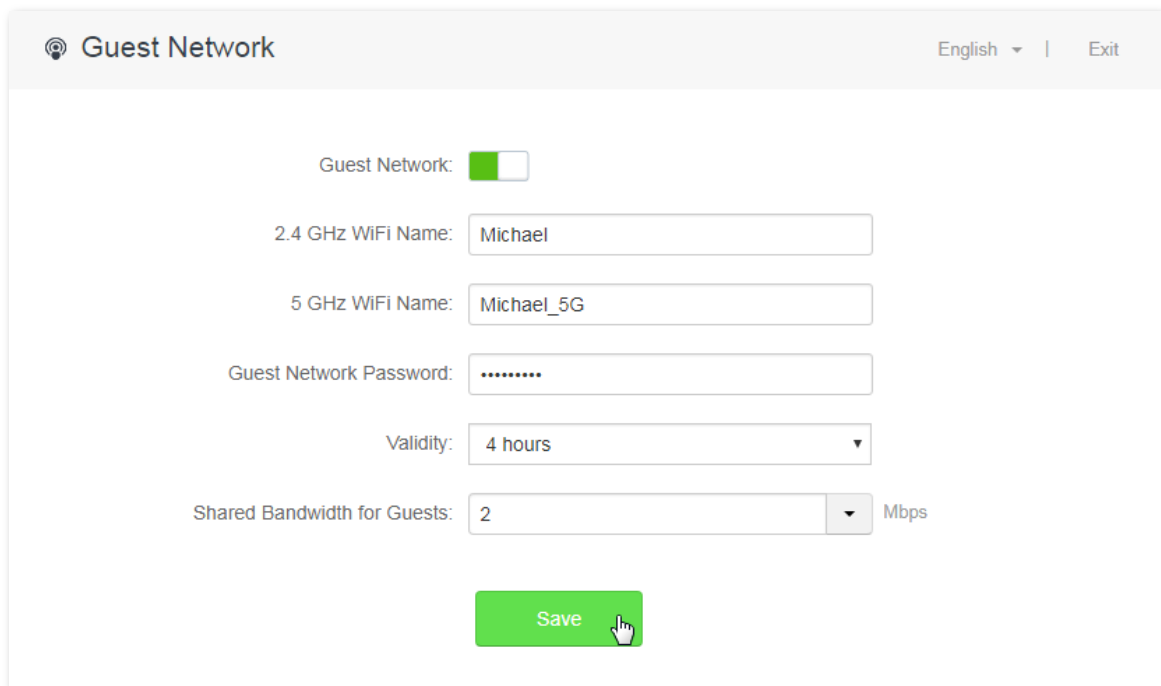

Guest Network

Guest Network: 

2.4 GHz WiFi Name:

5 GHz WiFi Name:

Guest Network Password:

Validity:

Shared Bandwidth for Guests: Mbps

Save

--End

After configuration, wireless devices such as smart phones, connected to **Michael** or **Michael_5G** share a downloading speed up to 2 Mbps, and can access the internet consecutively for 4 hours.

8

Parental Control

8.1 Overview

This module enables you to set the internet accessibility of devices in the router's LAN network, including specified time for surfing the internet, websites allowed or banned to visit.

To access the configuration page, click **Parental Control**. The **Parental Control** page shows devices which are connected to the router currently.

Parental Control			
		English ▾	Exit
Device Name	MAC Address	Uptime	Operation
 RedmiNote4X-hongmish 192.168.0.189	c4:0b:cb:81:5d:11	29 s	
 liguilan-PC 192.168.0.129	4c:cc:6a:ad:14:53	1 hour(s) 28 min 59 s	
+New			


Parameter description:

Parameter	Description
Device Name	It specifies names of the devices connected to the router.
MAC Address	It specifies MAC addresses of the devices connected to the router.
Uptime	It specifies the time that has elapsed since the device is connected to the router currently.
Operation	Click  to set limits for devices to access the internet through the router.
+New	Click +New to add devices and set limits for them.


8.2 Setting parental control rules

8.2.1 Scenario 1: The device has been connected to the router

1. Click **Parental Control**.
2. In device list, locate the device you want to set rules on and click .

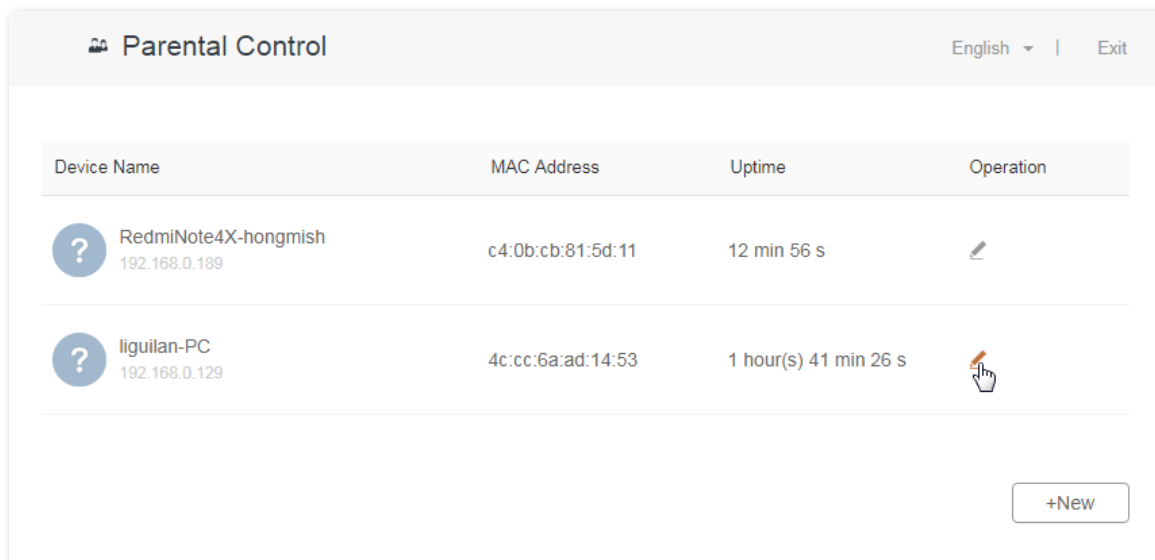


3. Set valid time for internet connection, and websites banned or allowed to visit.
4. Click **Save**.

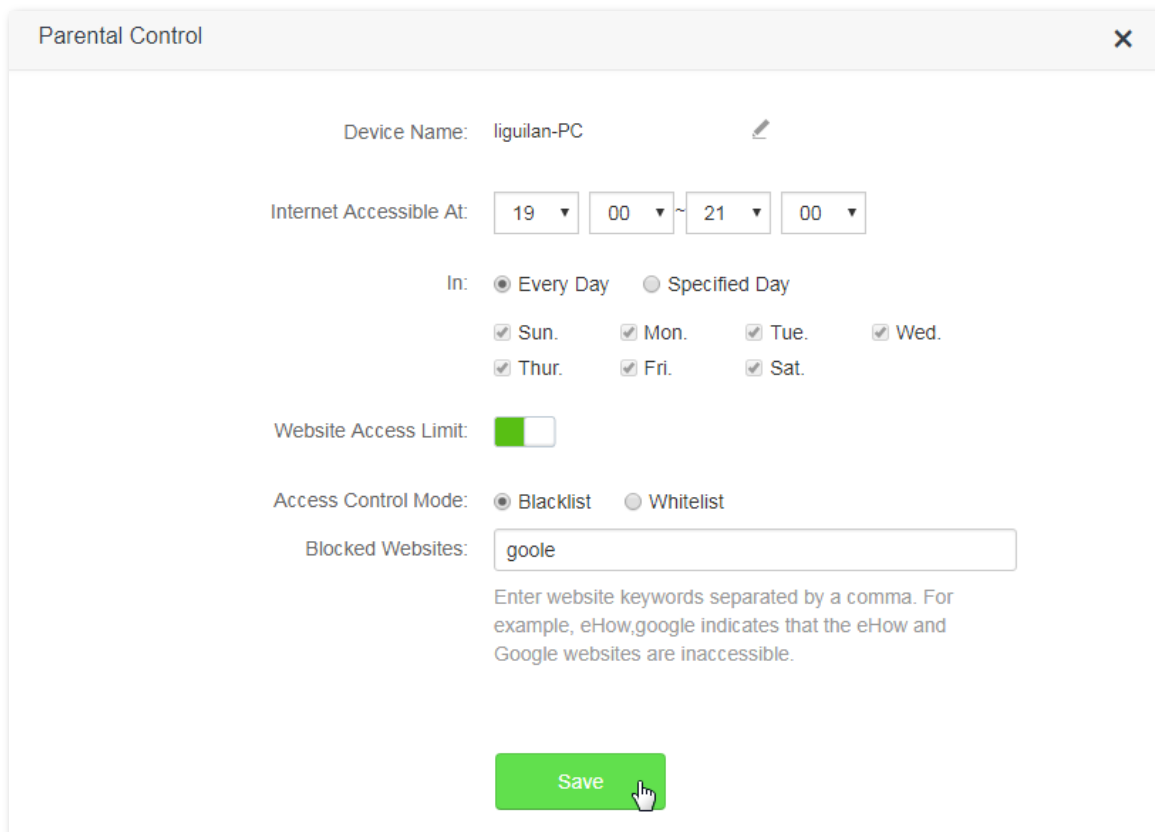

--End

8.2.2 Scenario 2: The device has not been connected to the router

1. Click **Parental Control**.
2. Click **+New**.

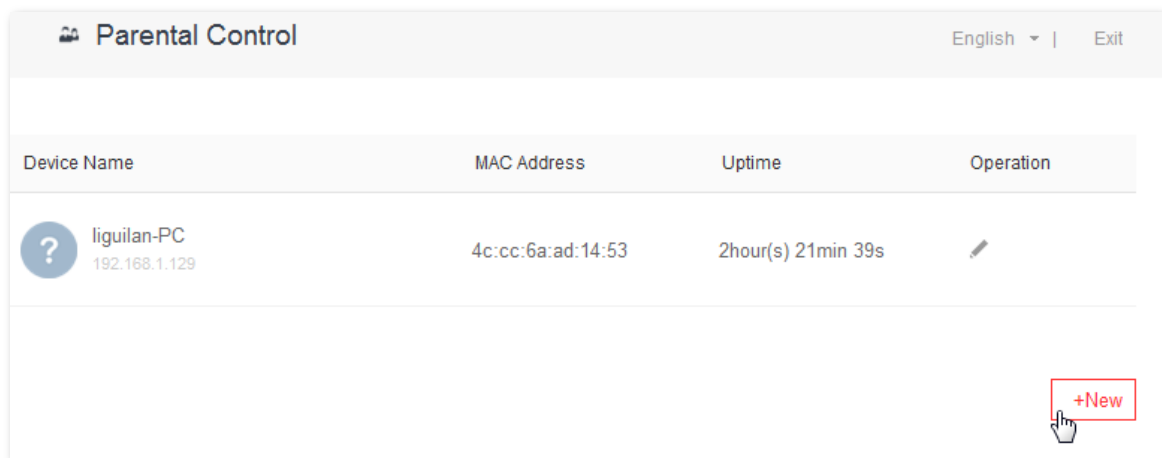

3. Set device name, MAC address, time limit to internet access and limit to website access as required.
4. Click **Save**.

The screenshot shows the 'Parental Control' configuration form. It includes fields for 'Device Name' (Cindy), 'MAC Address' (c4:0b:4b:81:5d:11), and 'Internet Accessible At' (19:00 ~ 21:00). There are radio buttons for 'Every Day' (selected) and 'Specified Day'. Below are checkboxes for days of the week: Sun., Mon., Tue., Wed., Thur., Fri., and Sat. There is a 'Website Access Limit' slider set to a low value. The 'Access Control Mode' has radio buttons for 'Blacklist' and 'Whitelist' (selected). The 'Unblocked Websites' field contains 'baidu'. A green 'Save' button is at the bottom, with a mouse cursor pointing at it. A note at the bottom explains that website keywords should be separated by a comma, using 'eHow,google' as an example.

Device Name: Cindy

MAC Address: c4:0b:4b:81:5d:11

Internet Accessible At: 19:00 ~ 21:00

In: ☒ Every Day ☐ Specified Day

☒ Sun. ☒ Mon. ☒ Tue. ☒ Wed.
☒ Thur. ☒ Fri. ☒ Sat.

Website Access Limit:

Access Control Mode: ☐ Blacklist ☒ Whitelist

Unblocked Websites: baidu

Enter website keywords separated by a comma. For example, eHow,google indicates that only the eHow and Google websites are accessible.

Save

--End

Parameter description:

Parameter	Description
Device Name	It specifies the name of the device you want to apply the rule to.
MAC Address	It specifies the MAC address of the device you want to apply the rule to.
Internet Accessible At	It specifies the specific time for the device to access the internet through the router.
In	It specifies dates for the device to access the internet through the router.
Website Access Limit	Used to enable / disable the website access limit function. By default, this function is enabled.
Access Control Mode	It specifies modes for website access limit in a parental control rule. – Blacklist: The device under the rule is not allowed to visit the website(s) below. – Whitelist: The device under the rule is only allowed to visit the website(s) below.
Blocked / Unblocked Websites	It specifies the websites that the device under the rule is banned / allowed to visit during Internet Accessible At .

8.2.3 Example

Scenario

Michael bought an AC7 for network. His children always surf the internet on smart phones through the router. For the good of his children' learning, he intends to allow his children to access Google during 8:00 to 20:00 from Monday to Friday.

Solution

The Parental Control function of AC7 could fulfill his requirements.

Procedures:

1. Click **Parental Control**.
2. In device list, locate the device you want to set a rule on and click .

Parental Control			
		English ▾	Exit
Device Name	MAC Address	Uptime	Operation
 RedmiNote4X-hongmish 192.168.1.189	c4:0b:cb:81:5d:11	12min 33s	
 liguilan-PC 192.168.1.129	4c:cc:6a:ad:14:53	3hour(s) 17min 42s	
			<button>+New</button>

- Internet Accessible At:** Set time limit for the device to access the internet, which is **08:00~20:00** in this example.
- In:** Select **Specified Day** and then **Monday to Friday**.
- Access Control Mode:** Click **Whitelist**.
- Unblocked Websites:** Enter the website accessible for the device, which is **google** in this example.
- Click **Save**.

Parental Control

Device Name: RedmiNote4X-hongmish

Internet Accessible At: 08 00 ~ 20 00

In:
☐ Every Day
☒ Specified Day

☐ Sun.
☒ Mon.
☒ Tue.
☒ Wed.
☒ Thur.
☒ Fri.
☐ Sat.

Website Access Limit: ☐

Access Control Mode: ☐ Blacklist ☒ Whitelist

Unblocked Websites: google

Enter website keywords separated by a comma. For example, eHow.google indicates that only the eHow and Google websites are accessible.

Save

--End

Verification

Google is only accessible for the device under the rule during 8:00-20:00 on weekdays.

9

VPN

The VPN module includes the following functions: [PPIP Server](#), [Online PPTP Users](#), and [PPTP/L2TP Client](#).

VPN (Virtual Private Network) is a dedicated network across the shared or public network (usually the internet). However, since this dedicated network does not have physical lines but only exists logically, it is called the virtual private network. The VPN technology allows people in different LAN networks to exchange resources conveniently without exposing these resources to other internet users.


9.1 PPTP Server

9.1.1 Overview

The **PPTP Server** page allows you to set the router as PPTP server.

PPTP server allows the specified VPN users to dial in. For example, you can allow staffs on business trip to access the headquarter's resources through VPN dialing up on a router whose PPTV server function is enabled.

To access the configuration page, click **VPN > PPTP Server**.

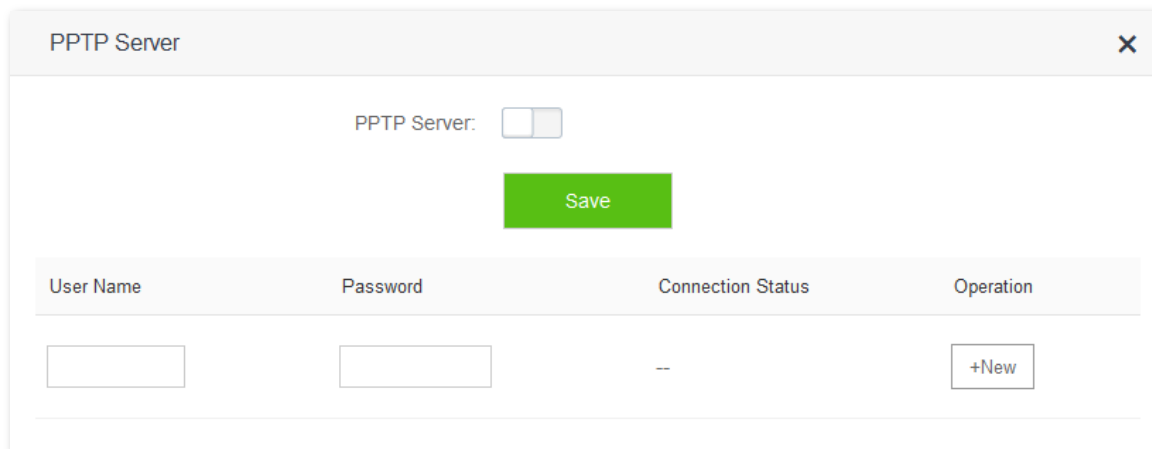

User Name	Password	Connection Status	Operation
		--	<button>+New</button>

After enabling the PPTP Server function, the figure below appears:

PPTP Server

PPTP Server: ☒

IP Address Pool: ~10.0.0.

MPPE Encryption: ☐

Save

User Name	Password	Connection Status	Operation
		--	+New

Parameter description:

Parameter	Description
PPTP Server	Used to enable/disable the PPTP server function. If the function is enabled, the router functions as a PPTP server.
IP Address Pool	It specifies the range of IP addresses that the PPTP server can assign to users.
MPPE Encryption	Used to enable / disable the MPPE encryption function.
User Name	Set user name and password that is allowed to dial in the PPTP server. This name and password are needed when a device connects to the PPTP server.
Password	
Connection Status	It specifies the status of a VPN connection.
Operation	The following operations can be performed on the PPTP user rules:
	– +New : It is used to add a PPTP user rule. User can access the PPTP server successfully after the rule is added.
	–  : It is used to disable the PPTP user rule.
	–  : It is used to enable the PPTP user rule again if it was disabled before.
	–  : It is used to delete a PPTP user rule.

9.1.2 Example

Scenario

Michael bought an AC7 for network. And he needs to access the resources of his FTP server at home.

Solution

The PPTP server function of AC7 can address this requirement. Set PPTP Server function on the router. He can access the resources on the computer's FTP server by VPN dialing up on business trip.

Assume that the IP address of the FTP server is 192.168.0.104, and the WAN IP address of the router is 113.88.112.220. After the PPTP server function of the router is enabled, the WAN IP address becomes the address of the PPTP server.

Procedures:

1. To access the configuration page, choose **VPN > PPTP Server**.
2. **PPTP Server**: set ☐ to ☒.
3. **IP Address Pool**: Set the range of IP addresses that the PPTP server assigns to devices. You are recommended to keep the default settings.
4. **MPPE Encryption**: Set ☐ to ☒, and configure the number of MPPE encryption bits, which is **128** in this example.
5. **User Name, Password**: Set user names and passwords that devices use for VPN dialing up, which are **admin1** in this example.
6. Click **+New**.
7. Click **Save**.

PPTP Server: ☒

IP Address Pool: ~

MPPE Encryption: ☒

Number of MPPE Encryption Bits: ☐ 40 ☒ 128


User Name	Password	Connection Status	Operation
		--	+New
admin1	admin1		

--End


Verification (Example: Windows 7)

On business trip, Michael succeeds in accessing resources on his computer's FTP server at home. The following describes the steps:


1. Click  at the lower-right corner of the desktop, and click **Open Network and Sharing Center**.

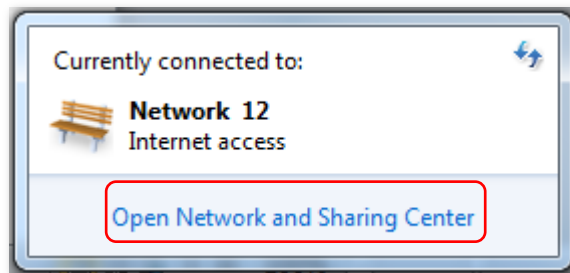

2. Click **Set up a new connection or network**.

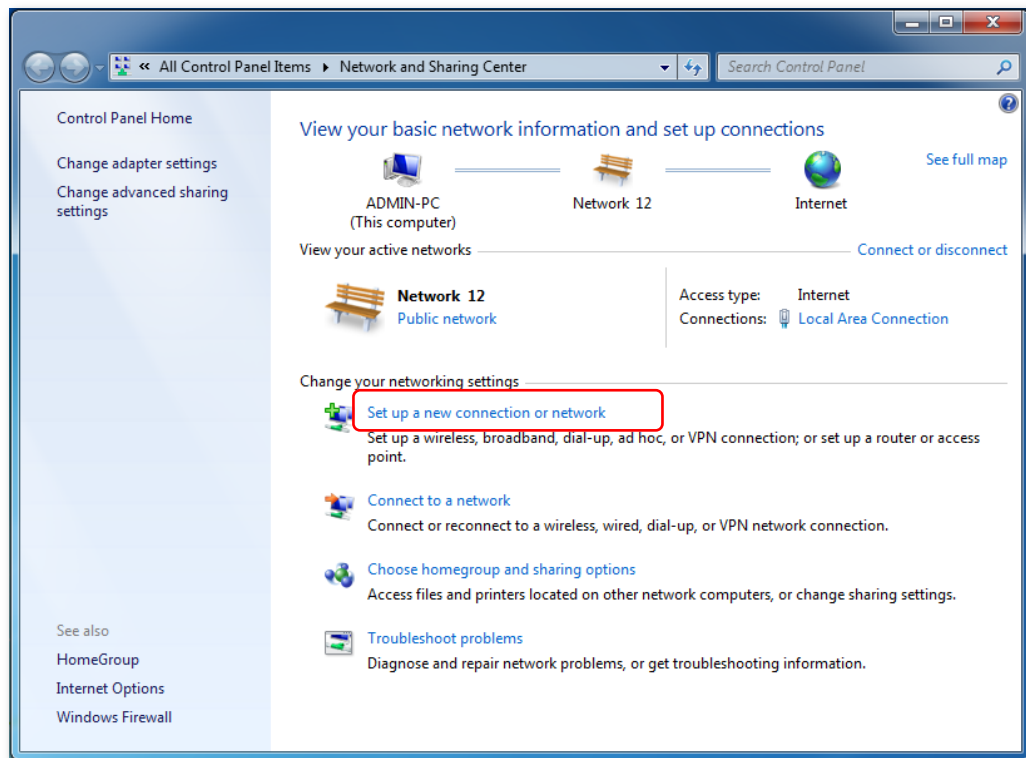

3. Click **Connect to a workplace > Next**.

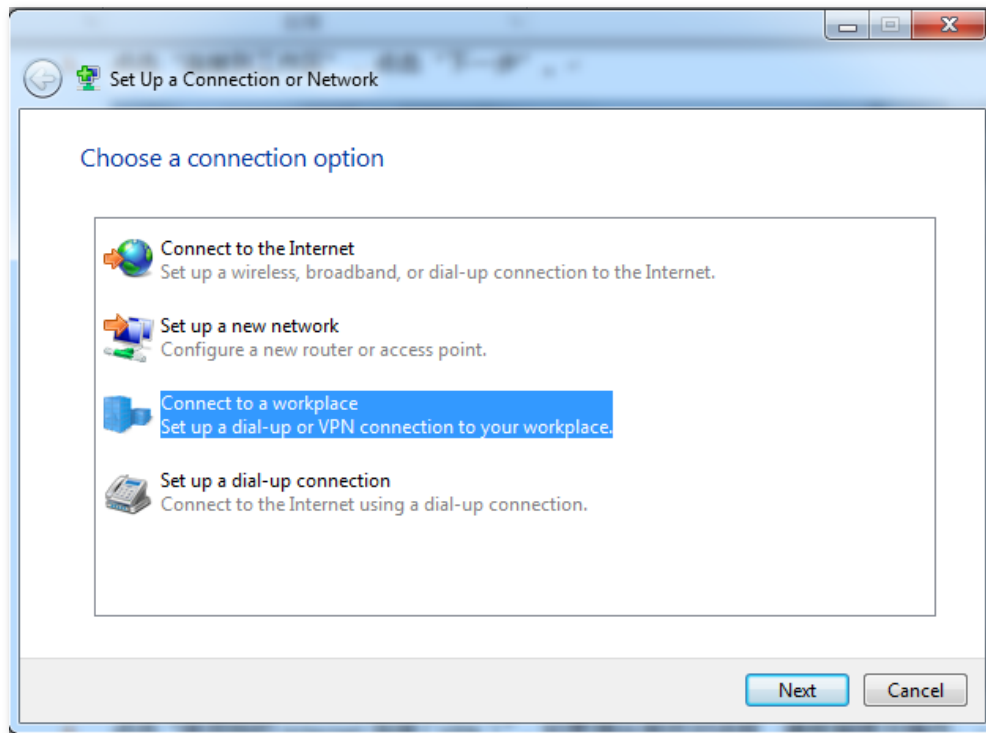

4. Click **Use my Internet connection (VPN)**. If a dialog box appears, you can follow the onscreen instructions to perform operations.



5. Enter the IP address of the PPTP server in the Internet address text box, which is **113.88.112.220** in this example. Then click **Next**.

Connect to a Workplace

Type the Internet address to connect to

Your network administrator can give you this address.

Internet address: 113.88.112.220

Destination name: VPN Connection

☐ Use a smart card

☒ Allow other people to use this connection
This option allows anyone with access to this computer to use this connection.

☒ Don't connect now; just set it up so I can connect later

Next Cancel

6. Enter the user name and password for connecting to the PPTP server, which are **admin1** in this example. Click **Create**.

Connect to a Workplace

Type your user name and password

User name: admin1

Password: •••••


☐ Show characters

☐ Remember this password

Domain (optional):


Create Cancel

7. Click **Click Now** after a while.

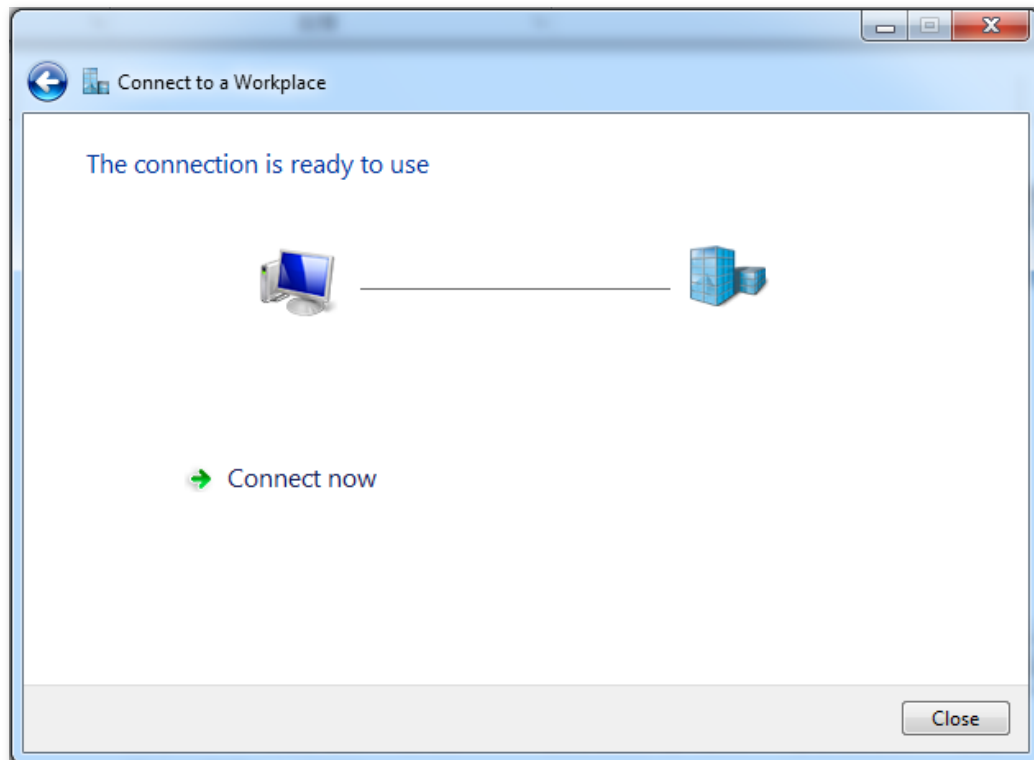


8. Access the resources on the FTP Server at home by the server or **My Computer**.

Method: "ftp: //Server IP address: Service port number", which is **ftp: //192.168.0.104:21** in this example.

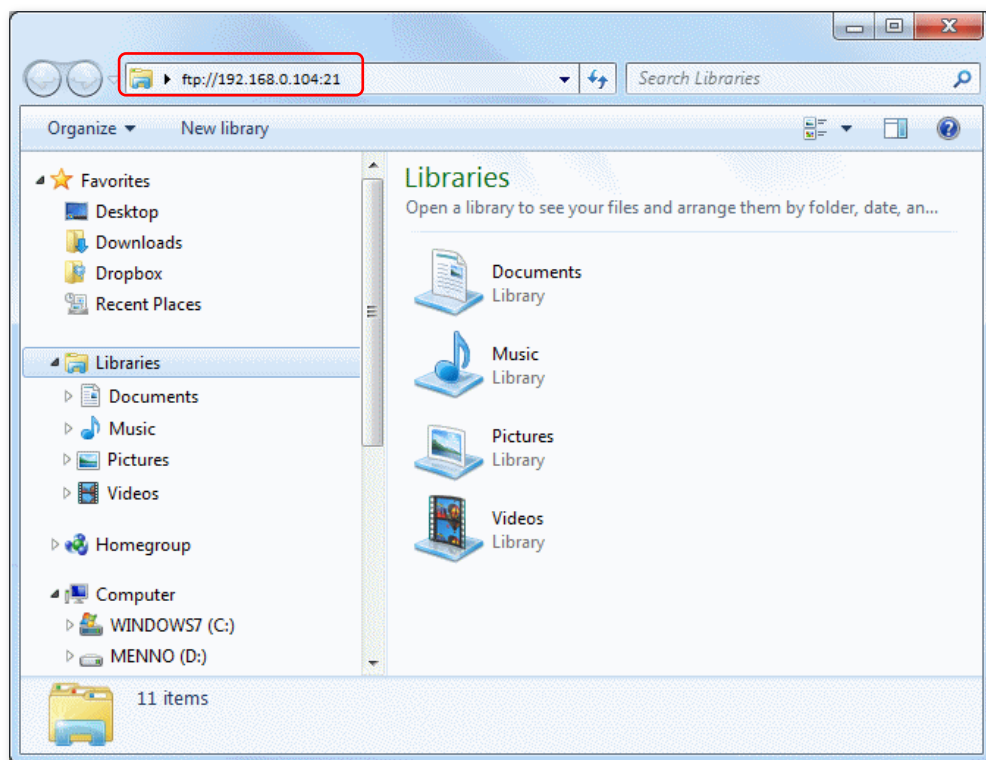


Access successfully. See the following figure:

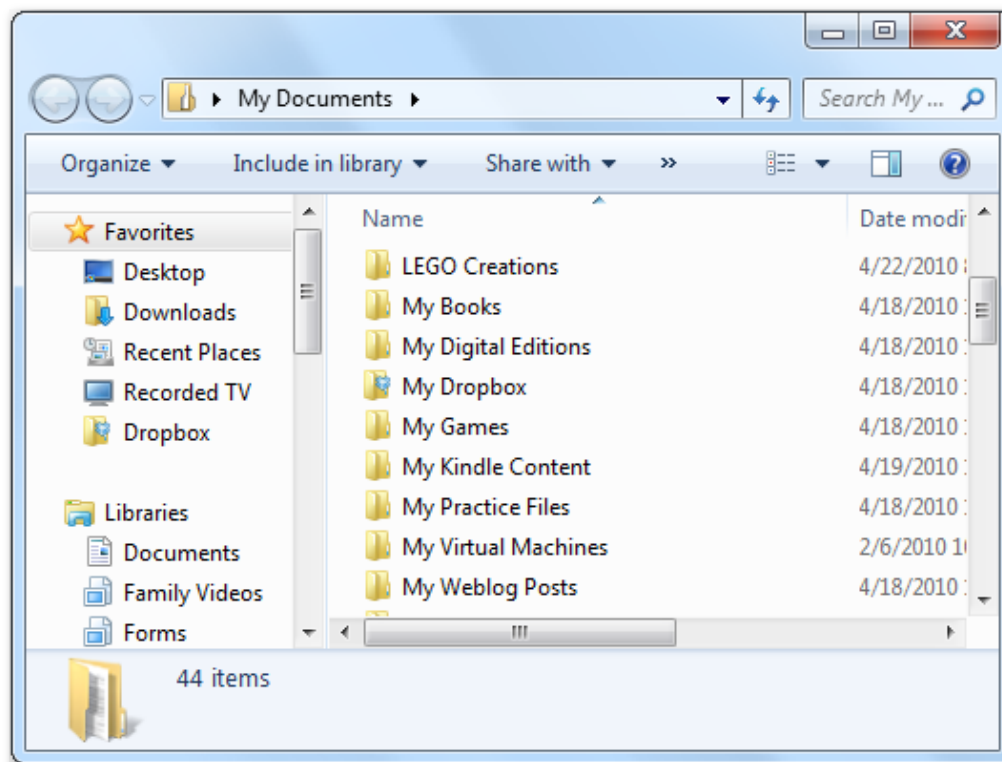

9.2 Online PPTP Users

This page enables you to have detailed information about the VPN devices dialed up to the PPTP server.

To access the page, select **VPN > Online PPTP Users**.

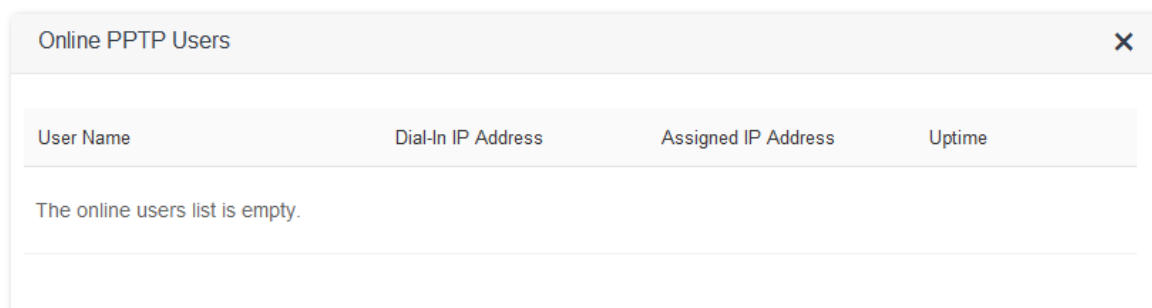

Parameter description:

Parameter	Description
User Name	It specifies the user name for a user to dial in the PPTP server.
Dial-in IP Address	It specifies the IP address of the device dialing in the PPTP server. If the device is a router, the WAN IP address which enables VPN function will be displayed.
Assigned IP Address	It specifies the IP address that the PPTP server assigns to a device.
Uptime	It specifies the time that has elapsed since the PPTP device dials in the server successfully this time.

9.3 PPTP/L2TP Client


9.3.1 Overview

You are allowed to set the router as a PPTP/L2TP client on the **PPTP/L2TP Client** page.

The router can connect to PPTP/L2TP server after the PPTP/L2TP Client function is enabled.


Example: If users subscribe to VPN service provided by their ISP when having broadband, they can dial in their ISP's VPN network through the PPTP/L2TP Client function of the router.

To access the configuration page, click **VPN > PPTP/L2TP Client**.

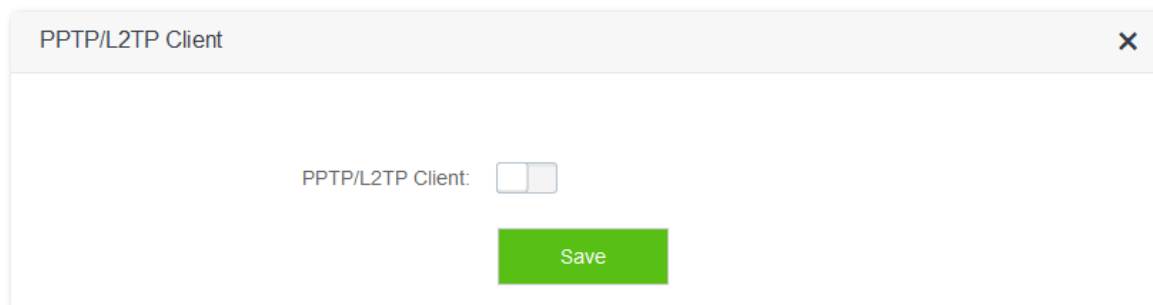

The screenshot shows a web interface window titled "PPTP/L2TP Client" with a close button (X) in the top right corner. Inside the window, the text "PPTP/L2TP Client:" is followed by a toggle switch that is currently in the "off" position. Below the toggle switch is a green button labeled "Save".

The following figure appears after enabling the PPTP/L2TP Client function:

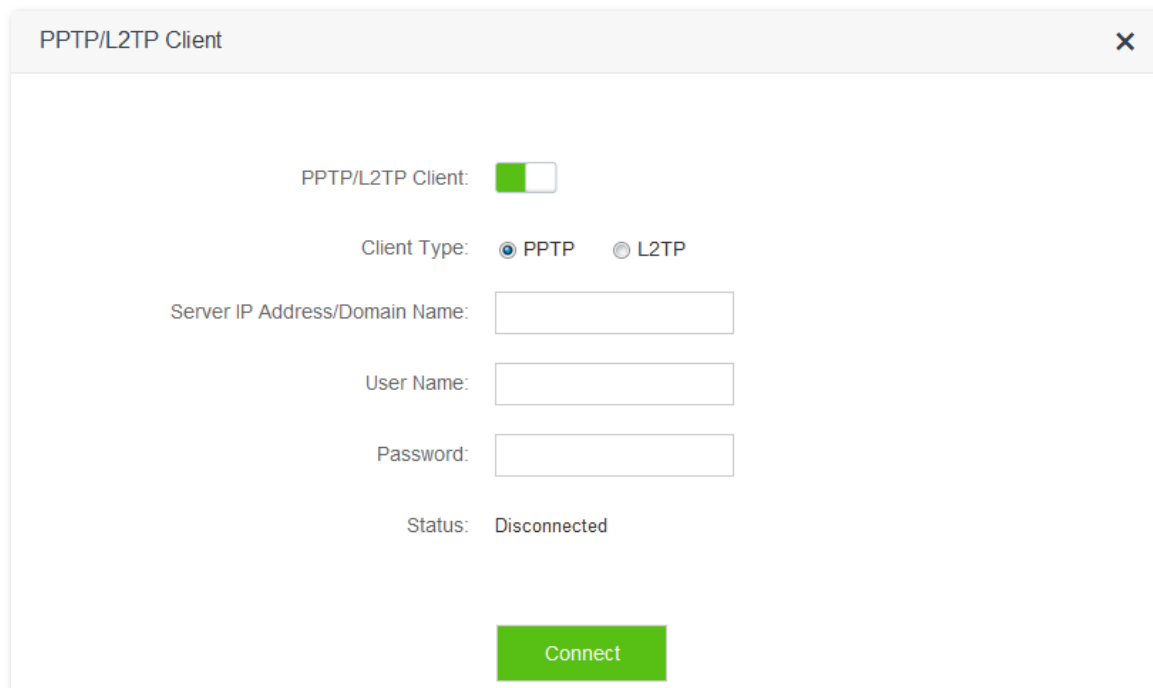

The screenshot shows the same "PPTP/L2TP Client" window, but now the toggle switch is in the "on" position (colored green). Below the toggle switch, the "Client Type:" section has two radio buttons: "PPTP" (which is selected) and "L2TP". Below this are three input fields: "Server IP Address/Domain Name:", "User Name:", and "Password:". Below the input fields, the "Status:" is displayed as "Disconnected". At the bottom of the window is a green button labeled "Connect".

Parameter description:

Parameter	Description
PPTP/L2TP Client	Used to enable/disable the PPTP/L2TP Client function. After the function is enabled, the router works as a PPTP/L2TP client.
Client Type	It specifies whether the router is a PPTP client or an L2TP client.
Server IP Address/Domain Name	It specifies the IP address or domain name of the PPTP/L2TP server to which the router is to be connected.
User Name Password	It specifies the user name and password assigned by the PPTP/L2TP server to the PPTP/L2TP client.
Status	It specifies the current connection status of a VPN client.

9.3.2 Example

Scenario

Michael subscribed to PPTP service provided by ISP when he had broadband. Assume that the VPN service information provided by his ISP is as follows:

- PPTP Server Address: 1.1.1.1
- User name/Password: 123

Michael bought an AC7 for network. Now he wants to access VPN resources provided by his ISP.

Solution

The PPTP Client function could address this requirement. Set the PPTP Client function on his router. Then clients in LAN network could access the VPN resources provided by the ISP.

Procedures:

1. Click **VPN > PPTP/L2TP Client**.
2. **PPTP/L2TP Client**: Switch the button  to .
3. **Client Type**: Select client type, which is **PPTP** in this example.
4. **Server IP/Domain Name**: Enter the PPTP server's IP address or domain name, which is **1.1.1.1** in this example.
5. **User Name, Password**: Set user name and password that client uses for VPN dialing up, which are **123** in this example.
6. Click **Connect**.

PPTP/L2TP Client: ☒

Client Type: ☒ PPTP ☐ L2TP

Server IP Address/Domain Name:

User Name:

Password:

Status: Disconnected

--End

Verification

Clients in LAN network could access the VPN resources provided by the ISP.

10 Advanced Settings

This module includes: [Bandwidth Control](#), [Tenda App](#), [Sleeping Mode](#), [LED Control](#), [Filter MAC Address](#), [Firewall](#), [IPTV](#), [Static Route](#), [DDNS](#), [Virtual Server](#), [DMZ Host](#), [UPnP](#).

10.1 Bandwidth Control

10.1.1 Overview

This page allows you to view information about online devices, and set upload limits or download limits for devices if needed.

To access the configuration page, click **Advanced Settings > Bandwidth Control**.

Device Name	Upload Speed	Download Speed	Upload Limit	Download Limit
liguilan-PC 192.168.0.129	1.0KB/s	5.0KB/s	Unlimited	Unlimited
RedmiNote4X-hon... 192.168.0.189	0.0KB/s	0.0KB/s	Unlimited	Unlimited

Save

Parameter description:

Parameter	Description
Device Name	It presents information about a device that has connected to the router, including name, and IP address. You can change the device name by clicking
Upload/Download Speed	It specifies the current upload and download speeds of a device.
Upload/Download Limit	It specifies the maximum upload/download speed of a device. You can select your preferred maximum upload/download from the drop-down box, or enter the speed manually.


10.1.2 Example

Scenario

Michael bought an AC7 for network after having broadband. He needs to set download limit for every device to ensure all family members can have good internet experience.

Procedures:

1. Click **Advanced Settings > Bandwidth Control**.
2. **Download Limit:** Set download limit to a value for devices in the list, which is **2.0Mbps (For SD Video)** in this example.
3. Click **Save**.

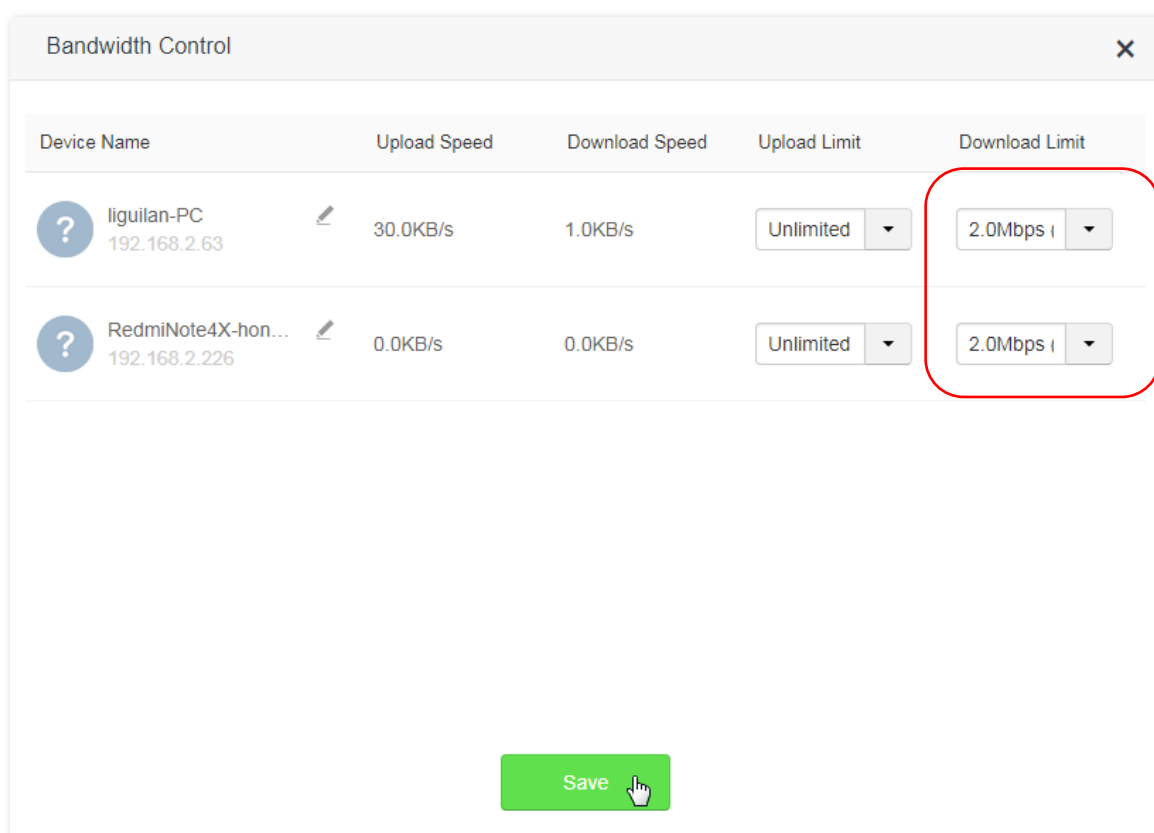

Device Name	Upload Speed	Download Speed	Upload Limit	Download Limit
liguilan-PC 192.168.2.63	30.0KB/s	1.0KB/s	Unlimited	2.0Mbps
RedmiNote4X-hon... 192.168.2.226	0.0KB/s	0.0KB/s	Unlimited	2.0Mbps

Save

--End

Verification

The maximum download speed for each device in the list is 2 Mbps, allowing smooth playback of HD videos and fast internet speed.

10.2 Tenda App

10.2.1 Overview

App management allows you to manage your router anytime anywhere. You can use **Tenda WiFi** app to:

- Manage your router in LAN.
- Manage your router remotely over the internet.

To access the Tenda App page, click **Advanced Settings > Tenda App**.

10.2.2 Example

The following figure may help you understand how to manage the router remotely using **Tenda WiFi**.




Procedures:

Step 1 Install Tenda WiFi app.


1. Download **Tenda WiFi** in app store of your smart phone.

Step 2 Register a Tenda account.


1. Open Tenda WiFi and enter the login password of your router (if any) in the password box. Click **Login**.

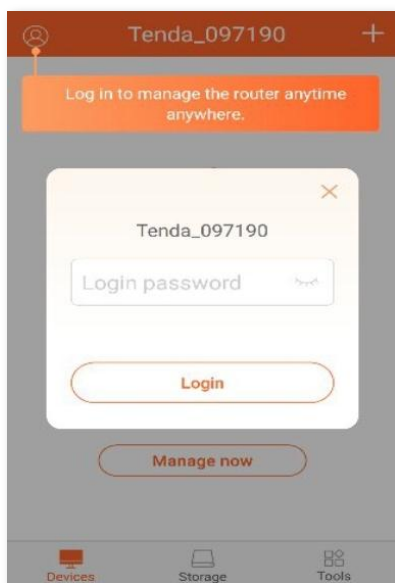

2. Click  for to register. (Example: Email address)

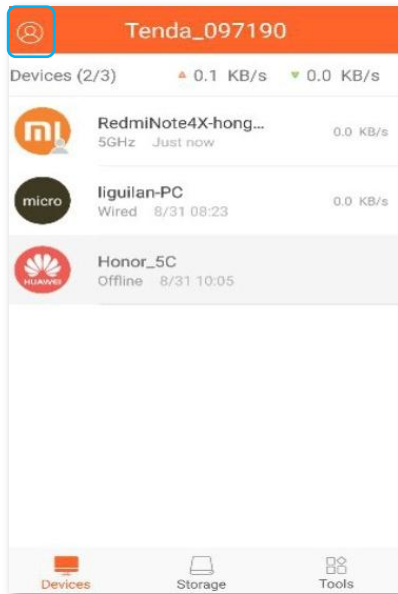

3. Choose your registration type, which is **Email address** in this example.

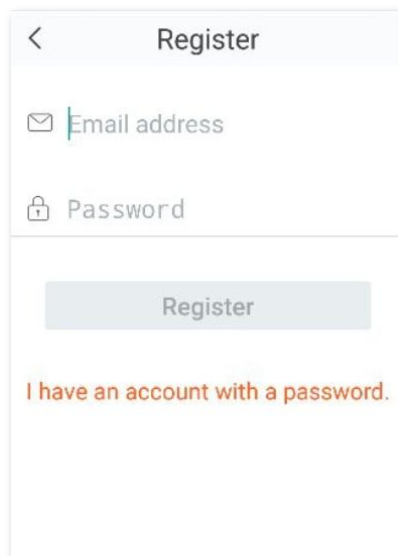

4. **Email address:** Enter the email address you want to set as an account name, which is **12345678901@163.com** in this example.
5. **Password:** Set a password for your Tenda account.
6. Click **Register**.
7. The activation email has been sent to your email address. Please tap **click here to confirm** to activate in valid time.

To initiate the Account confirmation process for your

1[redacted]@163.com, Tenda Account, [click here to confirm](#)

If clicking the link above doesn't work, please copy and paste the URL below in a new browser window instead. The link is valid in 24 hours.

<http://182.254.218.214:8081/mail/regist/v1?encry=20e7d54fc04c1f3fa19b4ba08aa96fc8&lang=en&path=account>


If you've received this mail in error, it's likely that another user entered your email address by mistake while trying to register an account. If you didn't initiate the request, you don't need to take any further action and can safely disregard this email.

Sincerely,
The Tenda Cloud Team

Your account is activated successfully.

Step 3 Log in to the web UI of the router, and enable the Tenda App function.


1. Log in to the web UI of the router. Then click **Advanced Settings > Tenda App**.
2. **Manage with Tenda App**: Switch the button ☐ to ☒.
3. **Cloud Account**: Enter the account registered in your **Tenda WiFi** app.
4. Click **Save**.

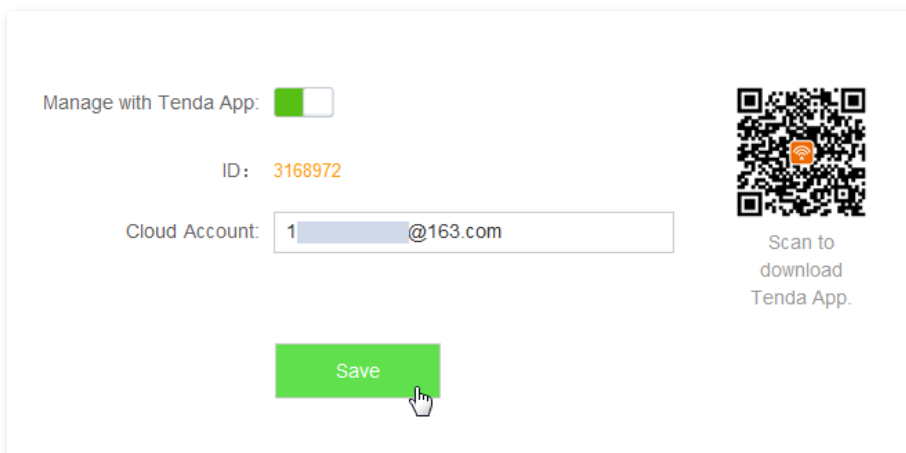

--End

Verification

When you are not at home, you can use **Tenda WiFi** app to manage the router by connecting your smart phone to WiFi network or traffic.

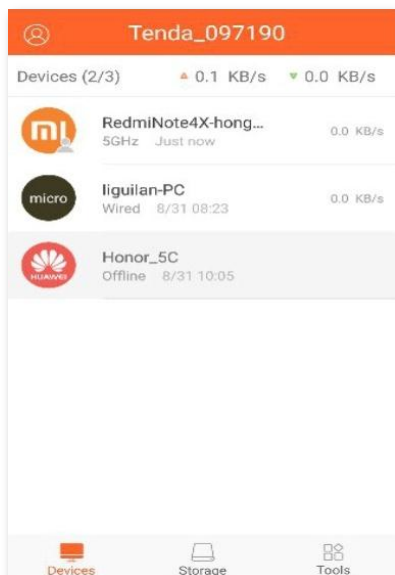


10.3 Sleeping Mode

This router supports Sleeping Mode. When this function is enabled, LED indicators and WiFi network of this router will be disabled.



The Sleeping Mode function works based on time settings. If the system time of the router is not synchronized with the internet time, this function cannot work properly.

To access the configuration page, click **Advanced Settings** > **Sleeping Mode**. By default, the Sleeping Mode function is disabled.

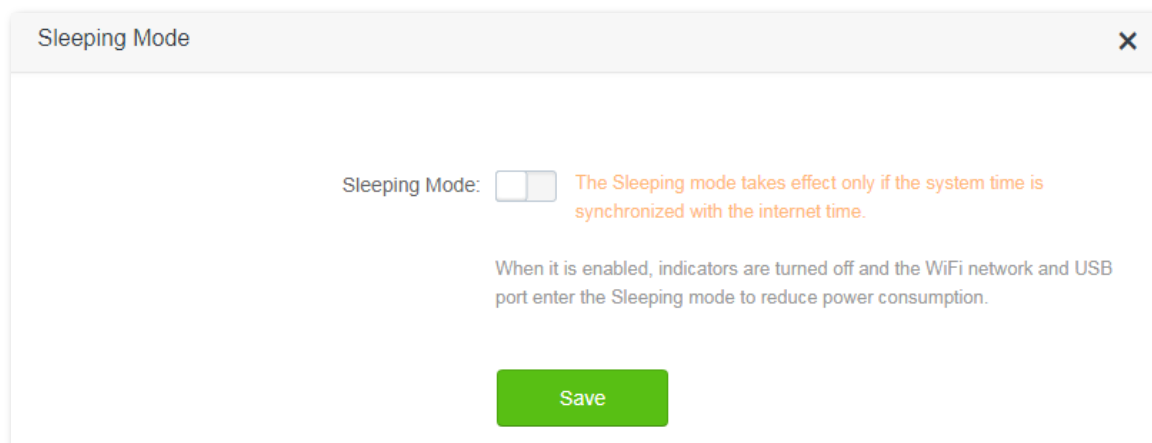

The following figure appears after the Sleeping Mode function is enabled:

Sleeping Mode

×

Sleeping Mode:

☐

The Sleeping mode takes effect only if the system time is synchronized with the internet time.

Sleeping Time:

00

:

00

~

07

:

00

Delay:

☒

Delay enabling the Sleep mode when there is an online user.

Save

How to use the WiFi network when the router is in Sleeping mode?

Method 1: Press the WiFi button on the router.

Method 2: Wake up the router using Tenda App. (To download Tenda App, choose Advanced Settings > Tenda App and scan the QR code.)

Parameter description:

Parameter	Description
	Used to enable / disable the Sleeping Mode function.
Sleeping Mode	When the router is in Sleeping mode, you can enable the WiFi network function by pressing the WiFi button on the rear panel of the router or using Tenda WiFi app.
Sleeping Time	It specifies the time when the Sleeping Mode function is effective.
Delay	- When Delay enabling the Sleep mode when there is an online user option is selected, if device (s) exchange(s) data with the router in a WAN speed of no more than 3 KB/s within 30 minutes, the router enters Sleeping mode; if no device exchanges data with the router, and the traffic is less than 3 KB/s within 3 minutes, the router enters Sleeping mode. - When the Sleeping Mode function is enabled and the Delay enabling the Sleep mode when there is an online user option is not selected, the router enters Sleeping mode during Sleeping Time automatically.

10.4 LED Control

This page allows you to turn on/off the router's LED indicators.

To access the configuration page, click **Advanced Settings > LED Control**.

LED Control
×

LED Control:
☒ Always on
☐ Always off
☐ Schedule

Save

Parameter description:

Parameter	Description
Always on	It indicates that all the LED indicators light normally.
Always off	It indicates that all the indicators are off even the router is working.
Schedule	It specifies that all the LED indicators are turned off at the duration of Turn Off During , but light normally when the periods expire.

10.5 Filter MAC Address

10.5.1 Overview

Computers and smart phones have their own MAC addresses.

The **Filter MAC Address** page allows you to add a filter rule and set internet limit for devices with specific MAC addresses, including **To disallow listed devices to access the internet** and **To allow only the listed devices to access the internet**.

To access the configuration page, click **Advanced Settings > Filter MAC Address**.

Filter MAC Address
✕

MAC Address Filter Mode:
☒ Blacklist (To disallow listed devices to access the internet)
☐ Whitelist (To allow only the listed devices to access the internet)

Blacklisted Device	MAC Address	Operation
		<button>+New</button>

The blacklist is empty.

Save

Parameter description:

Parameter	Description
MAC Address Filter Mode	It specifies whether the listed devices are allowed to access the internet through the router. – Whitelist: It specifies that only the listed devices can access the internet through the router. – Blacklist: It specifies that the listed devices cannot access the internet through the router.
Blacklisted/Whitelisted Device	Enter names of devices that you want to add in blacklist or whitelist.
MAC Address	Enter MAC addresses of devices that you want to add in blacklist or whitelist.
Operation	Click +New to add the device to blacklist or whitelist.
<u>Add all online devices to the whitelist</u>	Click this link to add all online devices to the whitelist. This link is only available for Whitelist.  NOTE This link appears only when you set the whitelist for the first time.

10.5.2 Adding a MAC address filter rule

1. To access the configuration page, click **Advanced Settings > Filter MAC Address**.
2. **MAC Address Filter Mode:** Select your MAC address filter mode, which is **Blacklist** in this example.

3. **Blacklisted Device:** Set the device that you disallow to access the internet through your router, which is **Michael's phone** in this example.
4. **MAC Address:** Enter the MAC address of the blacklisted device, which is **C8:3A:35:13:05:18** in this example.
5. Click **+New**.
6. Click **Save**.

Blacklisted Device	MAC Address	Operation
Michael's phone	C8:3A:35:13:05:18	+New

--End

10.5.3 Deleting a MAC address filter rule

1. To access the configuration page, click **Advanced Settings > Filter MAC Address**.
2. Select the rule you want to delete, and click .
3. Click **Save** on the bottom of the page.

Filter MAC Address

MAC Address Filter Mode:

☒ Blacklist (To disallow listed devices to access the internet)
 ☐ Whitelist (To allow only the listed devices to access the internet)

Blacklisted Device	MAC Address	Operation
		+New
Michael's phone	C8:3A:35:13:05:18	

Save

--End

10.5.4 Example

Scenario

Michael bought an AC7 for network. He finds unknown devices in module **Attached Devices** of the router. He hopes that only devices owned by his family members can access the internet through the router.

Solution

The Filter MAC Address function of the router can address this requirement.


Assume that the devices owned by his family members have following MAC addresses:

- 4C:CC:6A:AD:14:53
- 14:5F:94:BC:FC:81
- 1C:5C:F2:B4:40:01

Procedures:

1. To access the configuration page, click **Advanced Settings > Filter MAC Address**.
2. **MAC Address Filter Mode:** Select **Whitelist**.
3. **Whitelisted Device:** Enter name of the device allowed to connect to the router, which is **Phone-1** in this example.
4. **MAC Address:** Enter MAC address of the device allowed to connect to the router, which is **14:5F:94:BC:FC:81** in this example.
5. Click **+New**.
6. Refer to step 3-5 for adding MAC address 4C:CC:6A:AD:14:53.

7. Click **Save**.

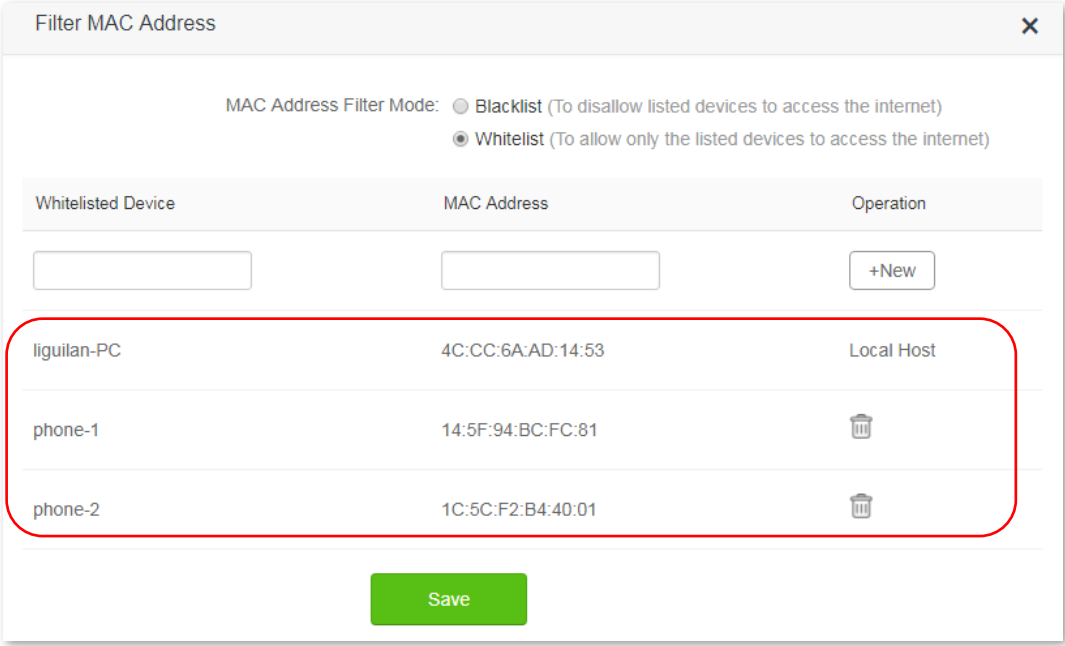

The dialog box titled "Filter MAC Address" has a close button (X) in the top right corner. It contains a "MAC Address Filter Mode" section with two radio buttons: "Blacklist (To disallow listed devices to access the internet)" and "Whitelist (To allow only the listed devices to access the internet)". Below this is a table with three columns: "Whitelisted Device", "MAC Address", and "Operation". The table has three rows: "liguilan-PC" with MAC address "4C:CC:6A:AD:14:53" and operation "Local Host"; "phone-1" with MAC address "14:5F:94:BC:FC:81" and a trash icon; and "phone-2" with MAC address "1C:5C:F2:B4:40:01" and a trash icon. A "+New" button is located to the right of the table. At the bottom center is a green "Save" button.

Whitelisted Device	MAC Address	Operation
liguilan-PC	4C:CC:6A:AD:14:53	Local Host
phone-1	14:5F:94:BC:FC:81	
phone-2	1C:5C:F2:B4:40:01	

--End


Verification

Only devices with MAC address 4C:CC:6A:AD:14:53, 14:5F:94:BC:FC:81 or 1C:5C:F2:B4:40:01 can access the internet through the router.

10.6 Firewall

The firewall can protect the router against DoS attacks such as ICMP Flood Attack, TCP Flood Attack, and UDP Flood Attack. It ignores Ping packets from the WAN port as well, securing your network.

To access the configuration page, click **Advanced Settings > Firewall**. By default, the Firewall function is enabled. You are recommended to retain the default settings.

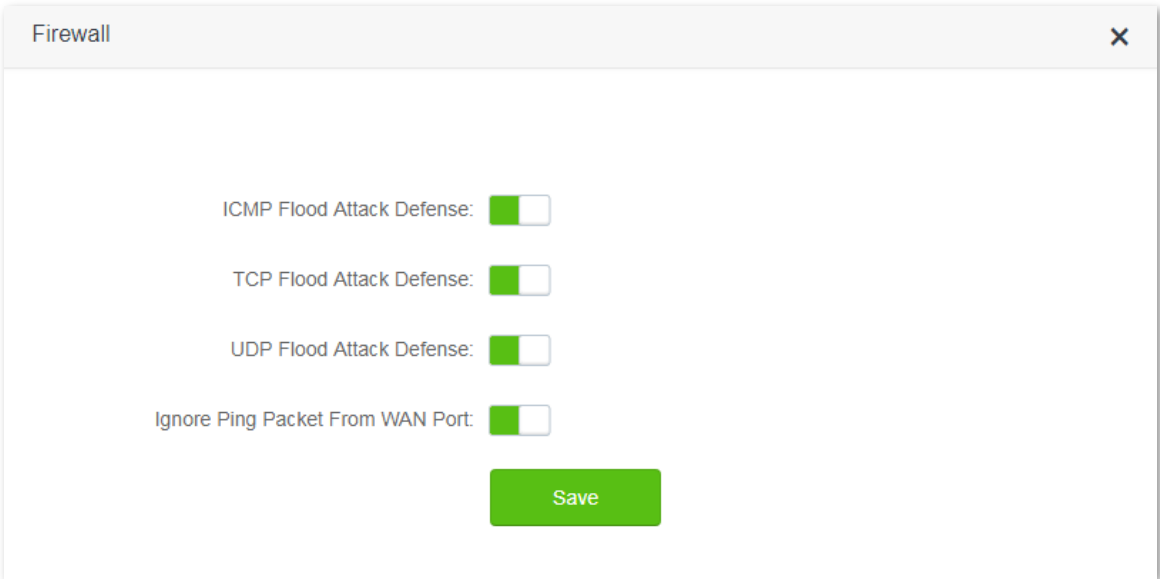

The "Firewall" configuration page has a close button (X) in the top right corner. It contains four toggle switches, all of which are turned on (green): "ICMP Flood Attack Defense", "TCP Flood Attack Defense", "UDP Flood Attack Defense", and "Ignore Ping Packet From WAN Port". At the bottom center is a green "Save" button.

Parameter description:


Parameter	Description
ICMP Flood Attack Defense	Used to enable / disable the ICMP flood attack defense.
	ICMP Flood Attack uses ICMP packets to launch attacks.
	Quantities of ICMP ECHO packets sent to the destination host leads to ICMP flood attack. Under the attack, the destination host is busy with ICMP ECHO packets and fails to handle normal requests or corresponding, which achieves attack against destination host.
TCP Flood Attack Defense	Used to enable / disable the TCP flood attack defense.
	In TCP protocol, when the client sends requests to the server and initializes, the server protocol stack leaves a Backlog Queue to handle the information exchange during the handshake process.
	With special programs, attackers use the Backlog Queue to send several-fold SYN requests for TCP connection. The server recognizes these requests as sessions to be established and adds them to the Backlog queue. If those SYN requests exceed the server's capacity, this server will not accept new request so that other legal connection will be refused.
UDP Flood Attack Defense	Used to enable / disable the UDP flood attack defense.
	UDP Flood Attack works on the similar principle as ICMP Flood Attack. If an attacker sends many UDP packets to destination host, the destination host pays much time and resources on UDP packets but nothing on normal packet requests or responses, which achieves attack against the destination host.
Ignore Ping Packet From WAN Port	It specifies whether to block pings to your WAN IP address.
	When host in the internet tries to ping WAN IP address of the router, the router will block that ping request automatically, protecting itself from exposure to the internet and external Ping attack.

10.7 IPTV


10.7.1 Overview

Integrated with the internet service, multimedia, telecommunications and other technologies, IPTV (Internet Protocol Television) provides rich interactive services to a family, such as digital TV. This ISP-provided service also allows you to watch various IPTV programs using set-top-box and television.

To access the configuration page, click **Advanced Settings > IPTV**.

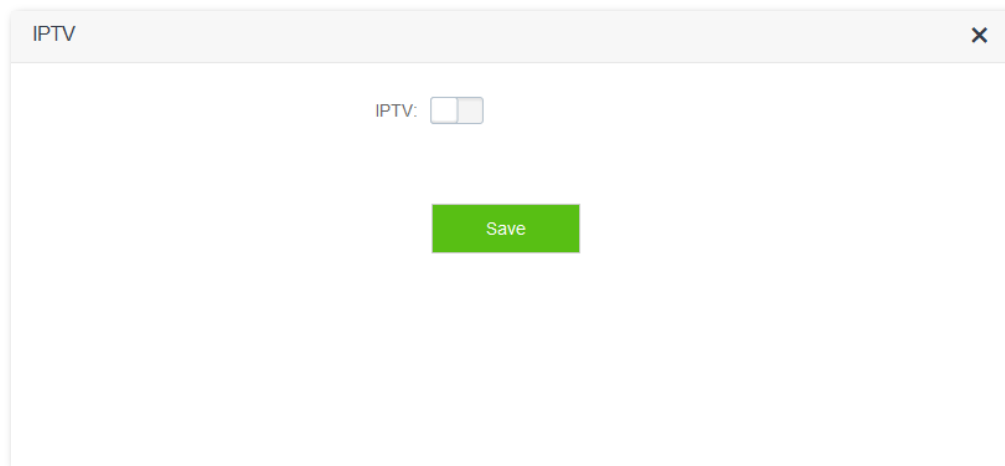

The following figure appears after IPTV is enabled:

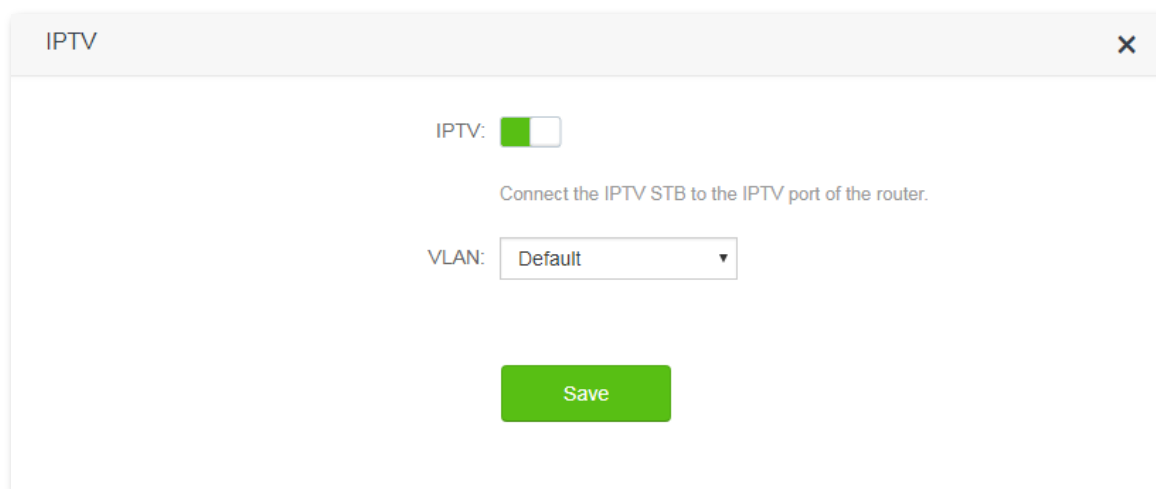

Parameter description:

Parameter	Description
IPTV	Used to enable / disable the IPTV function of the router. When this function is enabled, the 3/IPTV port can be used only as IPTV port and connect to the IPTV set-top-box, but cannot access other devices such as computer.
VLAN	It specifies the VLAN ID of your IPTV service. – If you do not have any information about VLAN provided by your ISP when having IPTV service, please keep Default. – If you have VLAN ID from your ISP when having IPTV service, please choose Custom VLAN and enter the VLAN value. – If you have IPTV service in Shanghai, please choose Shanghai VLAN and click VLAN value.

10.7.2 Example


Scenario

Michael subscribed to IPTV service when he had broadband. His ISP provided IPTV account and password but

no information about VLAN. After buying an AC7 for network, he wants to have IPTV program.

Solution


The IPTV function of the router can address this requirement. Network topology is shown as follows:

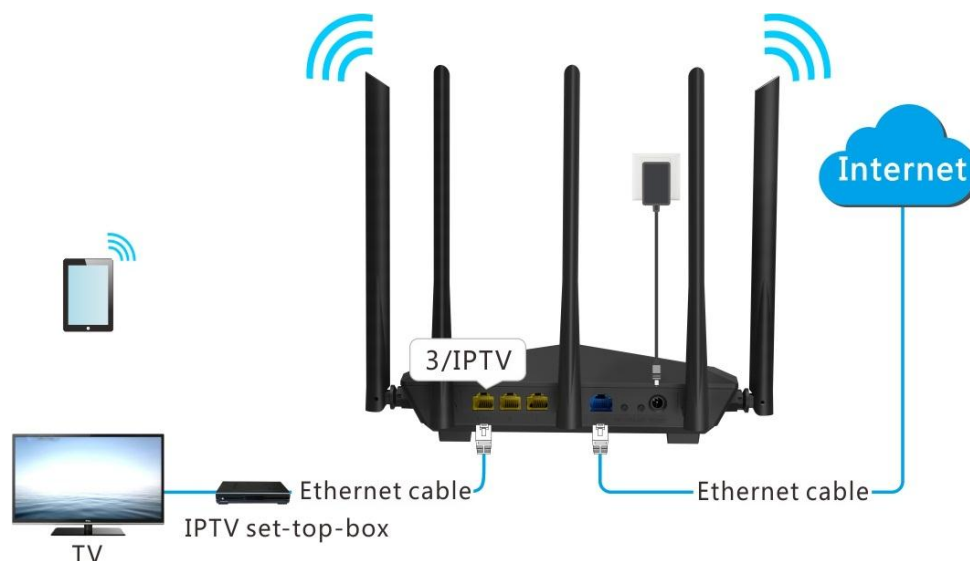

Procedures:

Step 1 Set you router.

1. To access the configuration page, click **Advanced Settings > IPTV**.
2. **IPTV**: Switch the button ☐ to ☒.
3. Click **Save**.

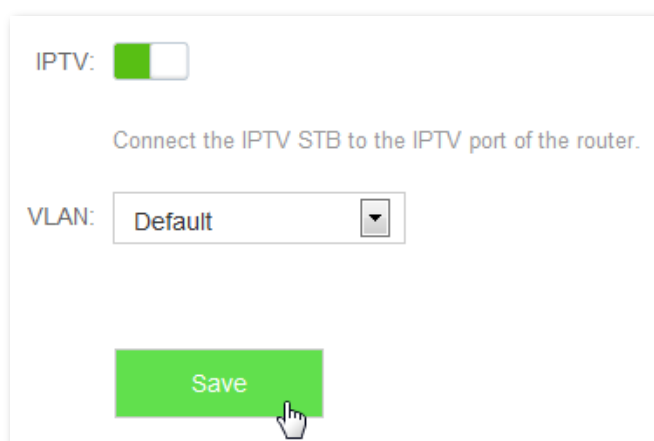

Step 2 Set your set-top-box.

Dial up on set-top-box with the account and password provided by ISP.

--End

Verification

Michael can enjoy IPTV programs on television.

10.8 Static Route

10.8.1 Overview

Routing is performed to select the best route for delivering data from a source address to a destination address. A static route is a manually configured route which is simple, efficient, and reliable. Appropriate static routes help reduce route selection problems and data overload of route selection, improving the packet forwarding speed.

To access the configuration page, click **Advanced Settings > Static Route**.

Static Route

Destination Network	Subnet Mask	Gateway	WAN	Operation
			WAN1	<button>+New</button>
0.0.0.0	0.0.0.0	192.168.20.100	WAN1	System
192.168.0.0	255.255.255.0	0.0.0.0	br0	System
192.168.20.0	255.255.255.0	0.0.0.0	WAN1	System
224.0.0.0	240.0.0.0	0.0.0.0	br0	System

Parameter description:

Parameter	Description
Destination Network	It specifies the destination IP address of a packet.
Subnet mask	It specifies the subnet mask of a packet's destination IP address.
Gateway	It specifies the IP address of the next hop of packet transmitted from the router.
WAN	It specifies router's WAN port where packets leave the router.
Operation	It allows you to add/delete a static route rule.


10.8.2 Example

Scenario

Michael used wired router and switch for network in the past. Now he purchases an AC7 for wireless coverage and establishes an office intranet. He demands that devices connected to AC7 can both access the internet and the intranet.

Solution

The following figure shows a network topology for reference:

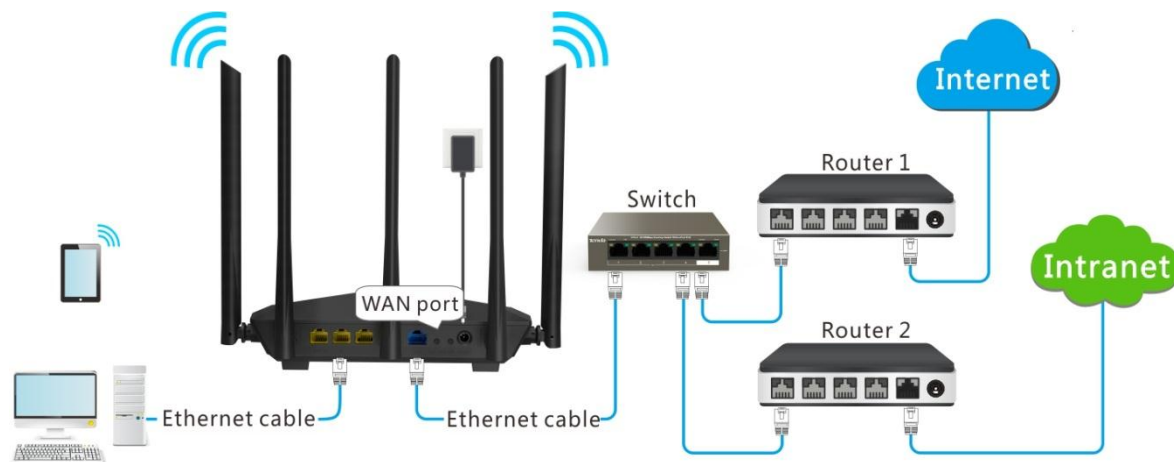

Connect Router 1 to the internet and Router 2 to the intranet. AC7 gets IP address to access the internet from Router 1 automatically. To make both the internet and the intranet be accessible to devices on the LAN network, set static router on AC7.

Assume that the devices have following MAC addresses:

- AC7 LAN IP Address: 192.168.0.1
- Router 1 LAN IP Address: 192.168.1.10
- Router 2 LAN IP Address: 192.168.1.20

Assume that the intranet has following information:

- Address: 172.16.105.10
- Subnet Mask: 255.255.255.0

Procedures:

- Step 1** Set Router 1 to access the internet. Please refer to the quick installation guide/user guide of the router for detailed steps. Set Router 2 to access the intranet and disable the DHCP function of this router. Please refer to the installation guide / user guide of the router for detailed steps.
- Step 2** Set AC7 to access the internet by dynamic IP address. Please refer to [Setting up an internet connection with a dynamic IP address](#) in this user guide for detailed steps.

WAN Port: ☒ Ethernet cable connected

Connection Type:

DNS Settings:

Connection Status: Connected. You can access the internet now.

Connection Duration: 10s

Step 3 Set a static route rule on AC7.

1. To access the configuration page, click **Advanced Settings > Static Route**.
2. **Destination Network:** Enter IP address of the destination network, which is **172.16.105.0** in this example.
3. **Subnet mask:** Enter subnet mask of the destination IP address, which is **255.255.255.0** in this example.
4. **Gateway:** Set Gateway to the LAN IP address of Router 2, which is **192.168.1.20** in this example.
5. Click **+New**.

Static Route ✕				
Destination Network	Subnet Mask	Gateway	WAN	Operation
172.16.105.0	255.255.255.0	192.168.1.20	WAN1	+New
0.0.0.0	0.0.0.0	192.168.1.10	WAN1	System
192.168.0.0	255.255.255.0	0.0.0.0	br0	System
192.168.1.0	255.255.255.0	0.0.0.0	WAN1	System
224.0.0.0	240.0.0.0	0.0.0.0	br0	System

--End

Done.

Static Route				
Destination Network	Subnet Mask	Gateway	WAN	Operation
			WAN1	+New
0.0.0.0	0.0.0.0	192.168.1.10	WAN1	System
192.168.0.0	255.255.255.0	0.0.0.0	br0	System
192.168.1.0	255.255.255.0	0.0.0.0	WAN1	System
224.0.0.0	240.0.0.0	0.0.0.0	br0	System
172.16.105.0	255.255.255.0	192.168.1.20	WAN1	

Verification

Devices connected to the router can access both the internet and the intranet.

10.9 DDNS

10.9.1 Overview

WAN IP address is required when Virtual Server, DMZ Host, and Tenda App function are enabled. If router's WAN IP address changes, these functions will not work properly. The DDNS function allows you to map a dynamic WAN IP address (public IP address) of the router to a static domain name, helping internet users (WAN side) access the router by static domain name.

If you dislike complex IP addresses, enable the DDNS function. To access the configuration page, click **Advanced Settings > DDNS**.

DDNS

DDNS:

☐

Save

The following figure appears after DDNS is enabled:

DDNS
×

DDNS:
☒

Service Provider:
no-ip.com
Register

User Name:

Password:

Domain Name:

Connection Status:
Disconnected

Save

Parameter description:

Parameter	Description
DDNS	Used to enable/disable the DDNS function. By default, this function is disabled.
Service Provider	It specifies a DDNS service provider. The router supports no-ip.com, 3322.org, dyndns.org, 88ip.cn, and oray.com.
User Name	It specifies the user name registered on a DDNS service provider's website for logging into the DDNS service.
Password	It specifies the password registered on a DDNS service provider's website for logging into the DDNS service.
Domain Name	It specifies the DDNS domain name registered on a DDNS service provider's website. If this item does not appear after you select service provider, you do not need to enter a domain name manually.
Connection Status	It specifies whether the DDNS service is configured successfully.

10.9.2 Adding a DDNS rule

- To access the configuration page, click **Advanced Settings** > **DDNS**.
- DDNS**: Switch ☐ to ☒.
- Service Provider**: Choose your DDNS service provider.



If you do not have a DDNS account, please select a service provider and click **Register** to have one on the website of the service provider. After successful registration, log in to the DDNS configuration page to configure again.

4. Set **User Name**, **Password**, and **Domain Name** (if required)..
5. Click **Save**.

The screenshot shows a window titled "DDNS" with a close button (X) in the top right corner. Inside the window, there is a "DDNS:" label followed by a green toggle switch. Below this, the "Service Provider:" is set to "oray.com" with a dropdown arrow and a "Register" link. The "User Name:" field contains "Tenda". The "Password:" field is masked with six dots. The "Connection Status:" is displayed as "Disconnected" in red text. At the bottom, there is a green "Save" button with a mouse cursor hovering over it.

--End

When the Connection Status displays **Connected**, the configuration succeeds.

This screenshot shows the same "DDNS" configuration window as above, but the "Connection Status:" is now "Connected" in green text. The "Save" button remains at the bottom.

10.9.3 Example

Scenario

Michael bought an AC7 for network after having broadband. He wants to make a web server built on LAN accessible to the internet, and internet users can visit that server by static domain name.

The following figure shows the scenario:



Solution

This requirement can be addressed by Virtual Server function and DDNS function. Assume that the intranet web server has following information:

- Server IP Address: 192.168.0.110
- MAC Address of the Server Host: C8:3A:35:13:05:18
- User Name/Password: admin/admin
- Server Port: 80

Procedures:

Step 1 Register a domain name.

1. To access the configuration page, click **Advanced Settings** > **DDNS**.
2. **DDNS**: Switch ☐ to ☒.
3. **Service Provider**: Select a DDNS service provider, which is **dyndns.org** in this example, and click **Register**.

DDNS: ☒

Service Provider: dyndns.org [Register](#)

User Name:

Password:

Domain Name:

Connection Status: **Disconnected**

Save

4. Register on the website of the selected DDNS service provider. Assume the registered information are listed as follows:

- Service Provider: dyndns.org
- User Name: Tenda
- Password: 12345678
- Domain Name: tenda.dyndns.org

Step 2 Set DDNS

1. To access the configuration page, click **Advanced Settings > DDNS**.
2. **DDNS**: Switch ☐ to ☒.
3. **Service Provider**: Select dyndns.org from drop-down list.
4. **User Name**: Enter the user name registered on DDNS service provider's website, which is **Tenda** in this example.
5. **Password**: Enter the password registered on DDNS service provider's website, which is **12345678** in this example.
6. **Domain Name**: Enter the domain name registered on DDNS service provider's website, which is **tenda.dyndns.org** in this example.
7. Click **Save**.

DDNS: ☒

Service Provider: [Register](#)

User Name:

Password:

Domain Name:

Connection Status: **Disconnected**

Wait until the connection status changes to **Connected**.

DDNS: ☒

Service Provider: [Register](#)

User Name:

Password:

Domain Name:


Connection Status: **Connected**

Step 3 Set Virtual Server function. For detailed steps, please refer to [10.10 Virtual Server](#) in this guide.

--End

Verification

The visit path for internet users to access intranet resources is: http://domain name: server port, which is http:// **tenda.dyndns.org.net:80** in this example. Then perform according to onscreen instruction.

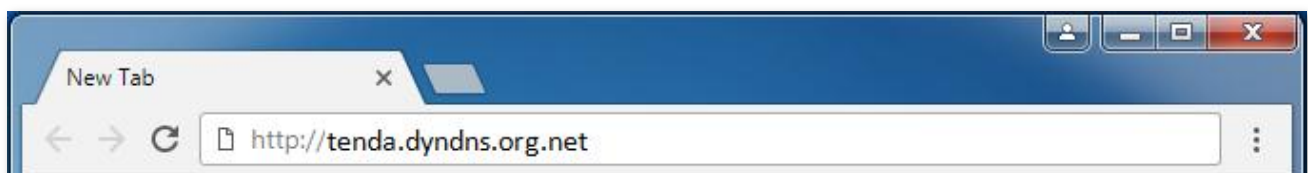

10.10 Virtual Server

Usually, internet users cannot access LAN through router, but internet users can visit LAN resources on router by enabling virtual server. When the Virtual Server is enabled, a host on one LAN network installed with Web or FTP server can be accessed by the internet users.

To access the configuration page, click **Advanced Settings > Virtual Server**.

Virtual Server

Internal IP Address	LAN Port	WAN Port	Protocol	Operation
	21		TCP	+New

Parameter description:

Parameter	Description
Internal IP Address	It specifies the IP address of an internal server.
LAN Port	It specifies the service port number of a server that resides on the LAN of the router. Click drop-down list box, and select corresponding service port number; or enter service port number manually. See the following figure: LAN Port 21 21 (FTP) 23 (TELNET) 25 (SMTP) 53 (DNS) 80 (HTTP) 110 (pop3) 1723 (PPTP) 3389 (remote desktop) 9000 Manual
WAN Port	It specifies a router port accessible to internet users. WAN port will be populated automatically after you select a LAN port.
Protocol	It specifies the protocol of a service. If you are uncertain about which service protocol is used, TCP/UDP is recommended.
Operation	It allows you to add/delete a virtual server rule.

10.10.1 Adding a virtual server rule

1. To access the configuration page, click **Advanced Settings > Virtual Server**.
2. **Internal IP Address:** Enter IP address of the internal sever, which is **192.168.0.110** in this example.
3. **LAN Port:** Click drop-down list box and select internal service port number or enter the number manually, which is **21** in this example.
4. **Protocol:** Select protocol of a service from the drop-down list box, which is **TCP&UDP** in this example.
5. Click **+New**.

Internal IP Address	LAN Port	WAN Port	Protocol	Operation
192.168.0.110	21	21	TCP&UDP	+New

--End

The rule is added successfully. See the following figure:

Virtual Server				
Internal IP Address	LAN Port	WAN Port	Protocol	Operation
	21		TCP&UDP	+New
192.168.0.110	21	21	TCP&UDP	

10.10.2 Deleting a virtual server rule

1. To access the configuration page, click **Advanced Settings > Virtual Server**.
2. Select the rule you want to delete, and click .

Virtual Server				
Internal IP Address	LAN Port	WAN Port	Protocol	Operation
	21		TCP&UDP	+New
192.168.0.110	21	21	TCP&UDP	


--End

10.10.3 Example

Scenario

Michael bought an AC7 for network after having broadband. He wants to make the web server built on LAN accessible to internet users.

The following figure shows the scenario:

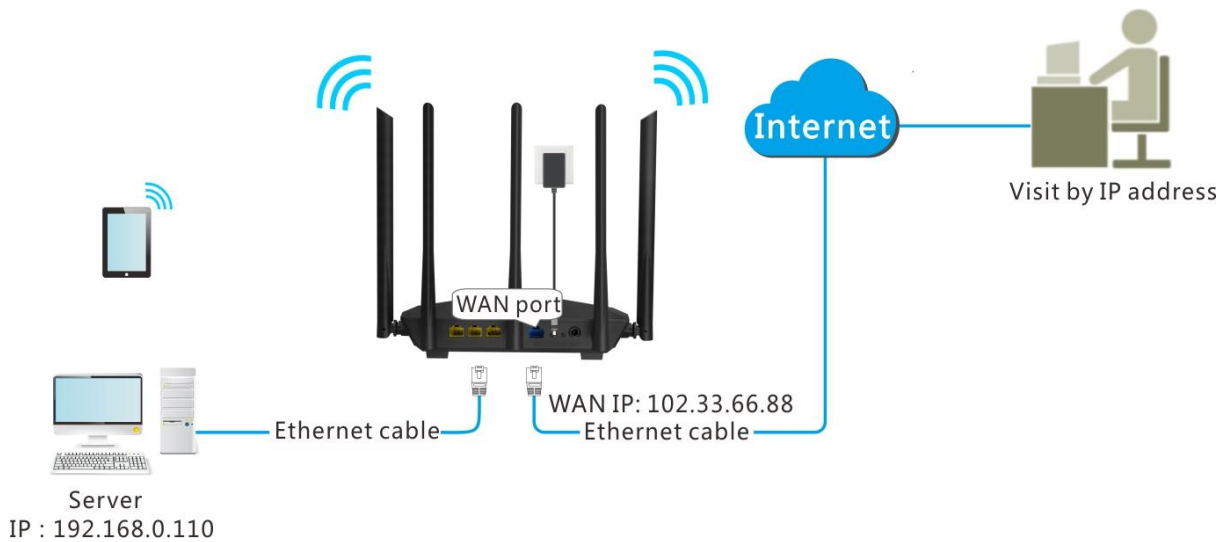

Solution

This requirement can be addressed by the Virtual Server function.

Assume that the internal web server information is listed as follows:

- Server IP Address: 192.168.0.110
- MAC Address of the Server Host: C8:3A:35:13:05:18
- User Name/Password: admin/admin
- Server Port: 80

Procedures:

Step 1 Configure the Virtual Server function.

1. To access the configuration page, click **Advanced Settings > Virtual Server**.
2. **Internal IP Address:** Enter IP address of the internal web server, which is **192.168.0.110** in this example.
3. **LAN Port:** Click drop-down list box and select internal service port number, which is **80(HTTP)** in this example.
4. **Protocol:** Select protocol of a service from the drop-down list box, which is **TCP&UDP** in this example.
5. Click **+New**.

Internal IP Address	LAN Port	WAN Port	Protocol	Operation
192.168.0.110	80	80	TCP&UDP	+New

The rule is added successfully, see the following figure:

Virtual Server
✕

Internal IP Address	LAN Port	WAN Port	Protocol	Operation
	80		TCP&UDP	+New
192.168.0.110	80	80	TCP&UDP	

Step 2 Assign static IP address to the host on which the server is built.

1. Choose **System Settings > DHCP Reservation**.
2. **Device Name:** Set a name for the host, which is **Web Server** in this example.
3. **MAC Address:** Enter the MAC address of the host, which is **C8:3A:35:13:05:18** in this example.
4. **IP Address:** Enter the static IP address assigned to the host, which is **192.168.0.110** in this example.
5. Click **+New**.

DHCP Reservation
✕

Device Name	MAC Address	IP Address	Status	Operation
Web Server	C8:3A:35:13:05:18	192.168.0.110	---	+New

--End


The DHCP reservation rule is added successfully. See the following figure:

DHCP Reservation
✕

Device Name	MAC Address	IP Address	Status	Operation
			---	+New
liguilan-PC	4c:cc:6a:ad:14:53	192.168.0.129		
Web Server	C8:3A:35:13:05:18	192.168.0.110		

Verification

Internet users visit this web server in the form of “Protocol: //WAN IP address: external port”, which is **http://102.33.66.88:80** in this example. Then perform according to onscreen instructions.

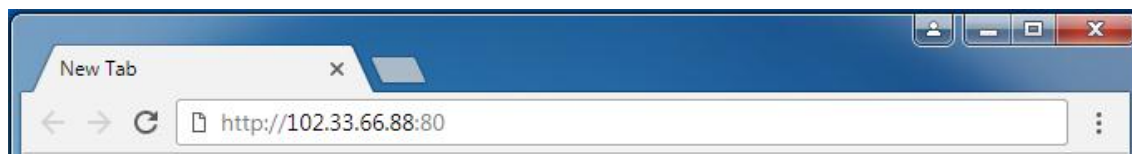


If you want to visit that server by domain name, try the Virtual Server + DDNS method.

10.11 DMZ Host

If you can set a computer in LAN as DMZ host, that computer will be exposed to the internet completely, which achieves unlimited bidirectional communication. When you play games or have video meeting on some computer, you can set it as DMZ host for better user experience.

To access the configuration page, click **Advanced Settings > DMZ Host**. By default, the DMZ Host function is disabled.

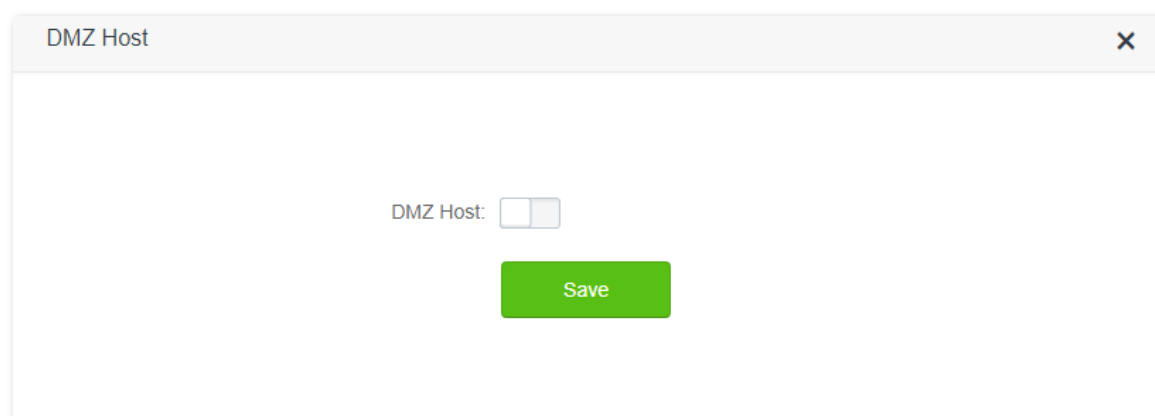

A hacker may leverage the DMZ host to attack your LAN. Therefore, enable the DMZ function only when necessary. A DMZ host is exposed to the internet completely and no longer protected by the firewall.

To prevent dynamic IP addresses from disabling the DMZ function, you are recommended to manually set a static IP address for a DMZ host.

Security software, antivirus software, and the built-in OS firewall of the computer may cause DMZ function failures. Disable them when using the DMZ function. If the DMZ function is not required, it is recommended that you disable it and enable your firewall, security, and antivirus software.

10.11.1 Setting a computer to DMZ host

1. To access the configuration page, click **Advanced Settings > DMZ Host**.
2. DMZ Host: Set ☐ to ☒.

3. **DMZ Host IP Address:** Enter the last three digits of the IP address of the computer to be set to DMZ host, which is **110** in this example.
4. Click **Save**.

DMZ Host: ☒

DMZ Host IP Address: 192.168.0.

--End

10.12 UPnP

Universal Plug and Play (UPnP) is a set of networking protocols. This function enables the router to open ports for LAN applications supporting UPnP, which improves user experience.

To access the configuration page, click **Advanced Settings > UPnP**.

UPnP: ☒

Remote Host	Internet Port	Local Host	Internal Port	Protocol
-------------	---------------	------------	---------------	----------

After UPnP is enabled, port transfer information displays on the configuration page when UPnP application, such as Thunder, is running in the LAN network. Port transfer information is provided when apps make requests. See the following figure:

UPnP: ☒

Remote Host	Internet Port	Local Host	Internal Port	Protocol
anywhere	54321	192.168.0.23	12345	UDP
anywhere	54321	192.168.0.23	54321	TCP

11 System Settings

This module includes the following functions: [LAN Settings](#), [DHCP Reservation](#), [WAN Settings](#), [Time Settings](#), [Login Password](#), [Reboot and Reset](#), [Firmware Upgrade](#), [Backup/Restore](#), [Remote Management](#), [System Status](#), [System Log](#), and [Automatic Maintenance](#).


11.1 LAN Settings

11.1.1 Overview

This module enables you to do the followings:

- Change the LAN IP address of the router. The LAN IP address is the management IP address of the router. By default it is **192.168.0.1**, but you can modify it if necessary.
- Modify parameters of DHCP server. If the DHCP Server function is enabled, the DHCP server can automatically assign IP addresses, subnet mask, gateway and other internet parameters to the devices connected to the router. If this function is disabled, you have to manually set the IP address settings on your devices to access the internet. You are recommended to retain the DHCP Server function enabled.
- Configure the DNS information assigned to devices.

To access the configuration page, click **System Settings** > **LAN Settings**.

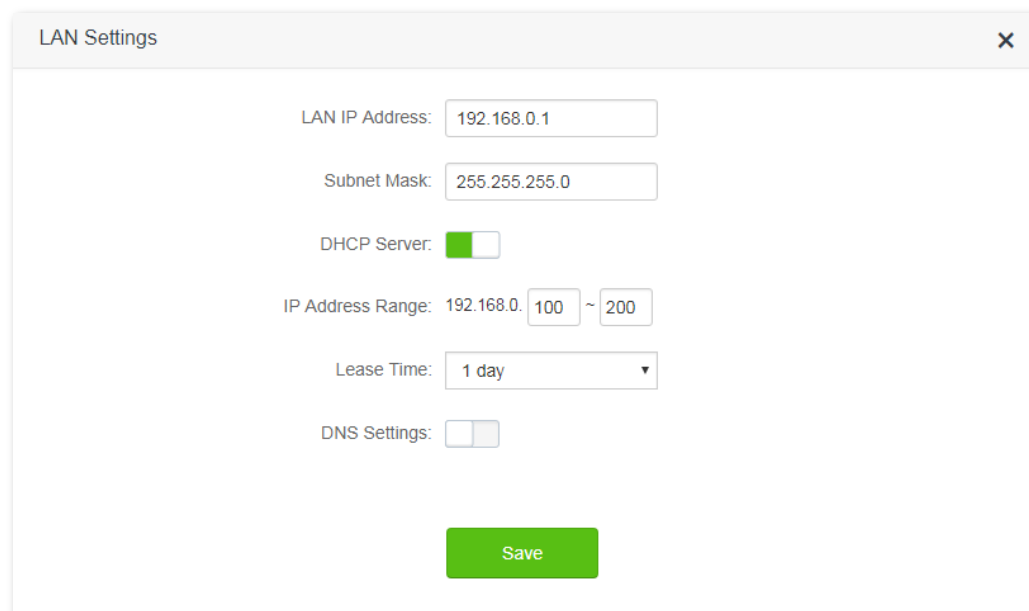

Parameter description:

Parameter	Description
LAN IP Address	It specifies the LAN IP address of the router, which is the IP address used to log in to the web UI of the router.

Parameter		Description	
		You can log in to the web UI of the router through either IP address (default: 192.168.0.1) or the domain name (tendawifi.com).	
Subnet Mask		It specifies the subnet mask of the IP address of the router.	
DHCP Server	IP Address Range	It specifies the IP addresses assigned by the DHCP server to devices, which ranges from 192.168.0.100 to 192.168.0.200 by default.	
	Lease Time	It specifies the validity period of an IP address assigned by the DHCP server to a device. When the lease time expires: – If the device is still connected to the router, the device automatically extends the lease time and continues to use this IP address. – If the device has been disconnected (shutdown, or the Ethernet cable between the device and the router has been removed) from the router, the router recycles the IP address. The router assigns this IP address to other devices requested for IP addresses.	
		You are recommended to retain the default value.	
DNS Settings	Primary DNS Server	It specifies the primary DNS server IP address assigned by the DHCP server to LAN devices.  NOTE Generally, you are recommended to retain the default configuration. If it is necessary to change the default configuration, please set this parameter to a correct DNS server IP address or DNS proxy IP address, to enable devices to access the internet.	
	Secondary DNS Server	It specifies the secondary DNS server IP address assigned by the DHCP server to devices. This parameter is optional. If it is empty, the DHCP server does not assign it to devices.	

11.1.2 Changing the LAN IP address

1. To access the configuration page, click **System Settings > LAN Settings**.
2. **LAN IP Address**: Change the **LAN IP Address**, which is **192.168.3.1** in this example.
3. Click **Save** in the bottom of the page.

LAN IP Address: 192.168.3.1

Subnet Mask: 255.255.255.0

DHCP Server: ☒

IP Address Range: 192.168.3.1 ~ 254

Lease Time: 1 day

DNS Settings: ☐

Save

--End

Wait till the modification completes successfully, you will be redirected to the login page. If you fail to log in to the web UI of the router, ensure that the local connection of your computer is set to **Obtain an IP address automatically**. Then release the current IP address of your computer and try to log in again after your computer get new IP address. If the problem still persists, please try logging in again using **tendawifi.com**. For details about how to set local area connection of your computer, please refer to **A1 Setting the IP address of your computer** in the appendixes. To release the current IP address of your computer, disconnect the Ethernet cable between your router and computer for a while, and reconnect it.

11.2 DHCP Reservation

This function allows the device to obtain the same IP address all the time, ensuring the Virtual Server and DMZ Host functions that requires fixed IP address take effect normally.

To access the configuration page, click **System Settings > DHCP Reservation**.

DHCP Reservation

Device Name	MAC Address	IP Address	Status	Operation
Optional			---	+New

Parameter description:

Parameter	Description
Device Name	It specifies the name of the device to be bound with a fixed IP address.
MAC Address	It specifies the MAC address of a device.
IP Address	It specifies the IP address to be bound with the device indicated by the corresponding MAC

Parameter	Description
	address.
Status	It indicates whether a device is connected to the router or not.
	It is used to edit a DHCP Reservation rule, including four operations:
	– +New : It is used to add a DHCP Reservation rule.
Operation	–  : It is used to bind a device with a static IP.
	–  : It is used to unbind a device with a static IP.
	–  : It is used to delete a DHCP Reservation rule.

11.2.1 Adding a DHCP reservation rule

1. To access the configuration page, click **System Settings > DHCP Reservation**.
2. **Device Name**: Enter the device name used to assign static IP addresses, which is **Web Server** in this example.
3. **MAC Address**: Enter the MAC address of the device, which is **C8:3A:35:13:05:18** in this example.
4. **IP Address**: Enter the static IP address assigned to the device, which is **192.168.0.110** in this example.
5. Click **+New**.

Device Name	MAC Address	IP Address	Status	Operation
Web Server	C8:3A:35:13:05:1	192.168.0.110	---	+New

--End

The DHCP reservation rule is added successfully. See the following figure:

×

Device Name	MAC Address	IP Address	Status	Operation
Optional			---	+New

Web Server	C8:3A:35:13:05:18	192.168.0.110	  
------------	-------------------	---------------	--

11.2.2 Deleting a DHCP reservation rule

1. To access the configuration page, click **System Settings > DHCP Reservation**.
2. Locate the rule you want to delete, and click .

DHCP Reservation

Device Name	MAC Address	IP Address	Status	Operation
Optional			---	+New
Web Server	C8:3A:35:13:05:18	192.168.0.110		Delete

--End

11.3 WAN Settings

11.3.1 Overview

This module enables you to modify MTU, speed and MAC address of the WAN port. If you cannot access the internet after configuring the internet settings, try modifying the WAN parameters.

To access the configuration page, click **System Settings > WAN Settings**.

WAN Settings

MTU: 1500

Speed: 1000 Mbps auto-negotiation

MAC Address: Default

Default: C8:3A:35:84:2E:71

Save

Parameter description:

Parameter	Description
MTU	Maximum transmission unit (MTU). It specifies the size of the largest data packet that can be transmitted across the network devices. You are recommended to retain the default value.
Speed	It specifies the speed of the WAN port of the router. If the LED indicator of the WAN port is off, or does not turn on until 5 seconds later under the circumstance that the quality Ethernet cable has been connected correctly, you can select 10 Mbps FDX or 10 Mbps HDX from the drop-down list box of Speed. Otherwise, you are recommended to retain the default configuration 1000 Mbps Auto-negotiation.

Parameter	Description
	It is used to clone the MAC address accessible to the internet to the WAN port of the router. If the router cannot access the internet after you configure the internet settings, it is perhaps that the ISP has bound the connection information with a MAC address. In this case, you can try to clone the MAC address, and try to access the internet again.
MAC Address	– Default: It is used to restore the MAC address of the WAN port of the router to factory settings. – Clone local MAC address: It is used to set the MAC address of the WAN port to the MAC address of the current device managing the router. – Set MAC address: It is used to set the MAC address of the WAN port manually.

11.3.2 Changing MTU value

You are recommended to retain the default value of MTU, unless the following cases happen:

- Websites are inaccessible, or you cannot log in to some secure websites (such as PayPal login page).
- Email service fails, or FTP, POP and other servers are inaccessible.

In these cases, you can try to decrease the MTU value from the maximum one (recommended range: 1400-1500), till the problem is resolved.


MTU	Description
1500	It is commonly used for ADSL and non-VPN dial-up connections.
1492	It is used for PPPoE dial-up connections.
1472	It is the maximum value for the ping command. (A packet with a size larger than 1472 is splitted.)
1468	It is used for DHCP connections.
1436	It is used for VPN or PPTP connections.

11.3.3 Changing the MAC address of the WAN port



Ensure that the MAC address to be cloned is correct! Before you have AC7, the MAC address of your computer that can access the internet through the Ethernet jack, or the WAN MAC address of your original router that can access the internet, is the correct MAC address to be cloned.

1. To access the configuration page, click **System Settings > WAN Settings**.
2. **MAC Address:** Select **Clone local MAC address** or **Set MAC address** from the drop-down list. If you select **Set MAC address**, enter the MAC address that you want to clone. If you select **Clone local MAC address**, configure this function on the computer with a correct MAC address.
3. Click **Save**.

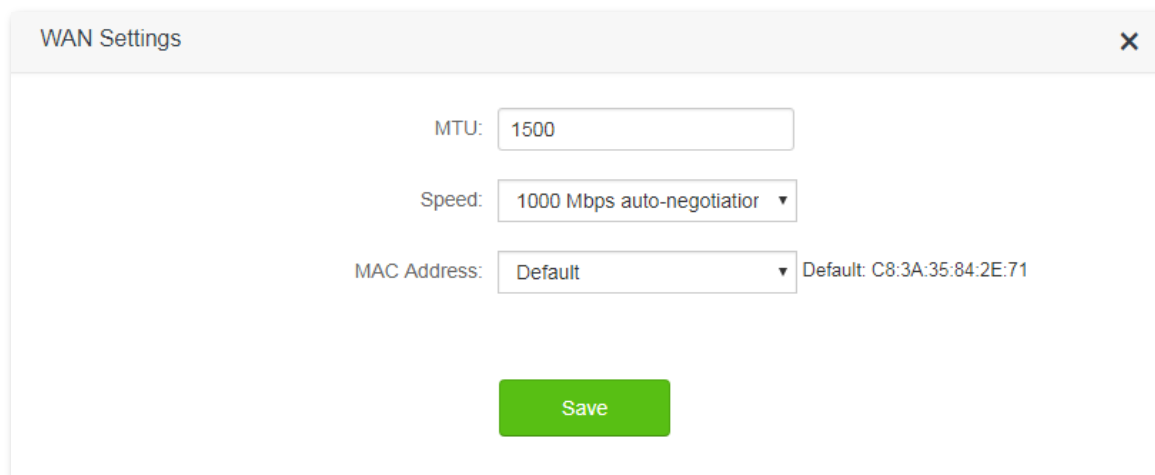

WAN Settings

MTU:

Speed:

MAC Address: Default: C8:3A:35:84:2E:71

--End


To verify if cloning MAC address is successful, choose **System Settings > System Status**, if the MAC address under the WAN Status is same as the MAC address you select to clone, MAC address cloning succeeds. If the internet is inaccessible after you clone the MAC address successfully, contact your ISP to resolve this issue.

11.4 Time Settings

This module enables you to set the system time of the router. Correct system time of the router makes time-based functions take effect successfully, such as the WiFi Schedule, Parental Control, LED Control, Sleeping Mode, and Automatic Maintenance. Please keep the system time of your router correct.

To access the configuration page, click **System Settings > Time Settings**.

The default time zone of the router is **(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi, Taipei**. After connected, the router automatically synchronizes its system time with the time zone you select.

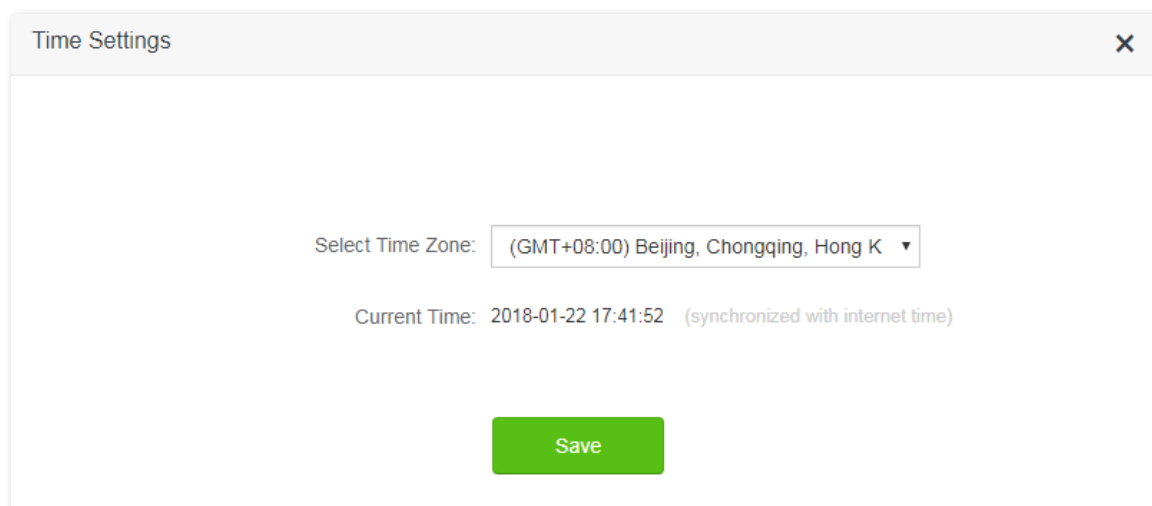

Time Settings

Select Time Zone:


Current Time: 2018-01-22 17:41:52 (synchronized with internet time)

11.5 Login Password

11.5.1 Overview

This module enables you to modify the login password of the router. The login password is used to log in to the web UI of the router. By default, the router has no login password. You are recommended to configure a login password when you set up the router for the first time.


To access the configuration page, click **System Settings > Login Password**.

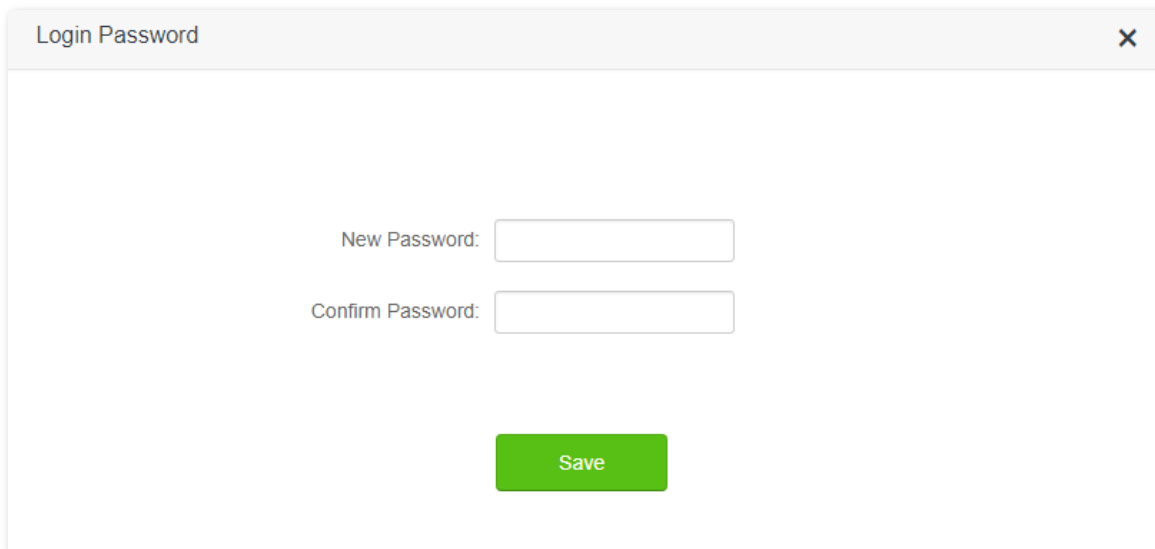

The screenshot shows a web browser window titled "Login Password" with a close button (X) in the top right corner. The window contains two text input fields: "New Password:" and "Confirm Password:". Below these fields is a green "Save" button.

11.5.2 Changing the login password

1. To access the configuration page, click **System Settings > Login Password**.
2. **New Password:** Set a new login password.
3. **Confirm Password:** Enter the new login password again.
4. Click **Save**.

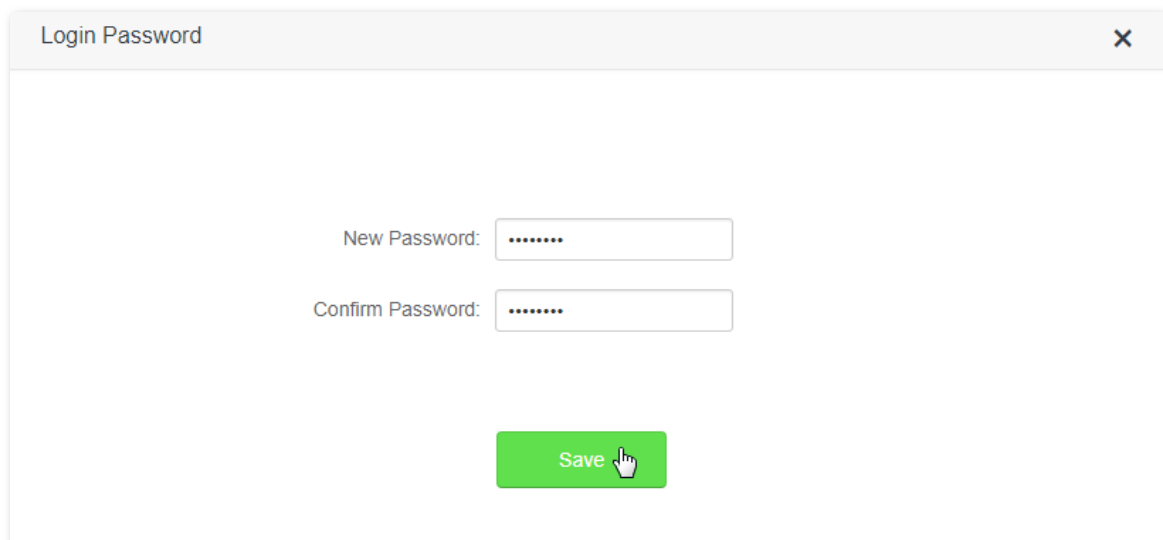


The screenshot shows the same "Login Password" configuration window. The "New Password:" and "Confirm Password:" fields are now filled with dots, indicating that the password has been entered. A mouse cursor is hovering over the green "Save" button.

--End

You will be redirected to the login page. Enter the new login password, and click **Login** to log in to the web

UI of the router.

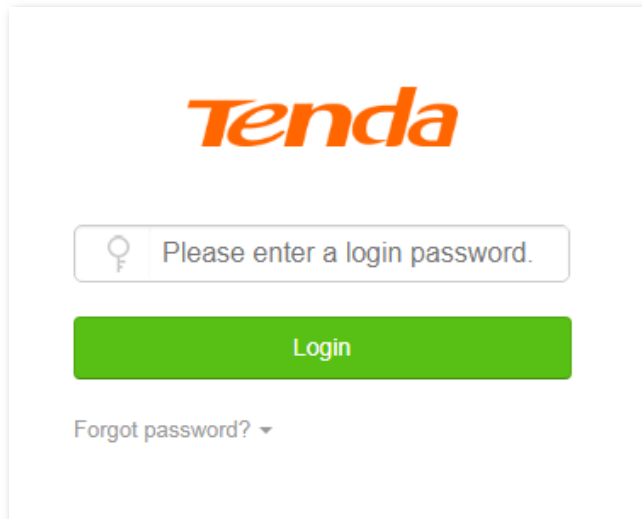

The image shows the login page of a Tenda router. At the top is the Tenda logo in orange. Below it is a login form with a password input field containing the placeholder text "Please enter a login password." and a green "Login" button. At the bottom of the form is a link that says "Forgot password?" with a downward arrow.


11.6 Reboot and Reset

11.6.1 Overview

This module enables you to reboot the router or restore the router to factory settings.

- If a setting does not take effect or the router does not work properly, you can try rebooting the router.
- If the internet is inaccessible for unknown reasons, or you forget the login password, you are recommended to restore the router to factory settings and reconfigure it. The router can be reset through the web UI or holding down the **RST/WPS** button on the rear panel of the router for 8 seconds. After resetting the router, refer to [Chapter 2 Quick Internet Setup](#) to configure your router for internet connection.

To access the configuration page, click **System Settings > Reboot and Reset**.

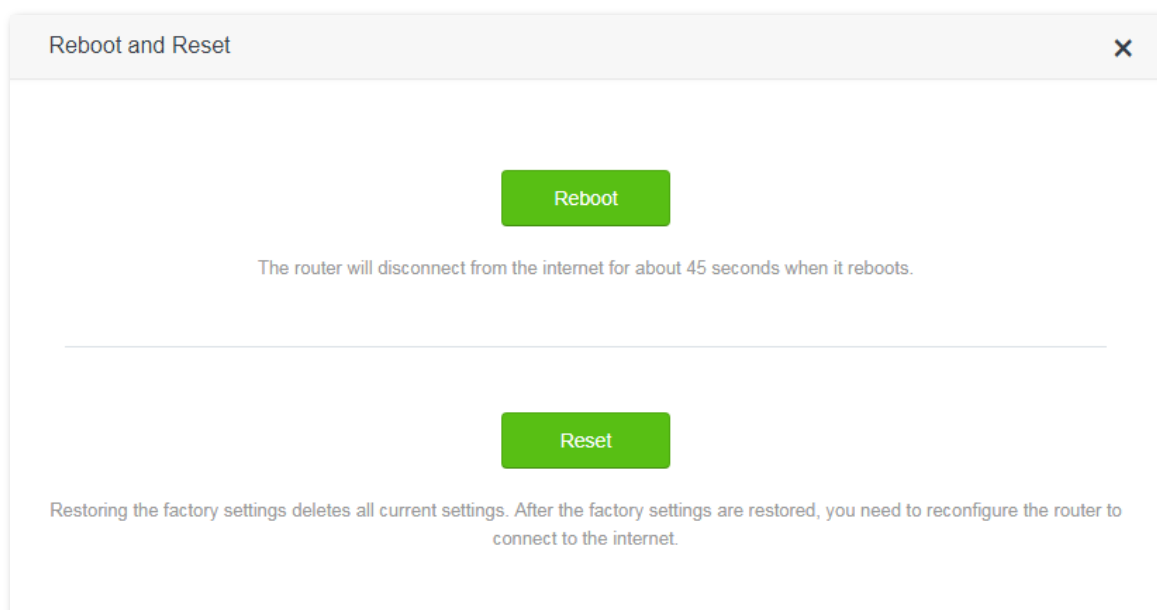


The image shows the "Reboot and Reset" configuration page. It has a title bar with the text "Reboot and Reset" and a close button (X). The main content area contains two green buttons: "Reboot" and "Reset". Below the "Reboot" button is a warning message: "The router will disconnect from the internet for about 45 seconds when it reboots." Below the "Reset" button is a warning message: "Restoring the factory settings deletes all current settings. After the factory settings are restored, you need to reconfigure the router to connect to the internet."

11.6.2 Rebooting the router

1. To access the configuration page, click **System Settings > Reboot and Reset**.

2. Click **Reboot**.

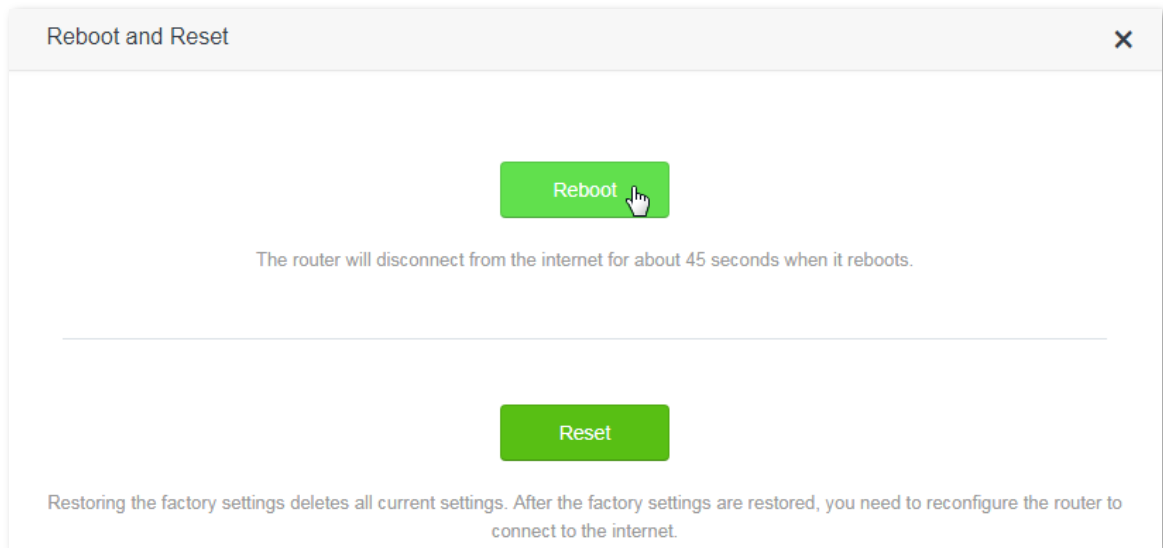

--End


11.6.3 Resetting the router



Resetting the router deletes all your current configuration. You need to reconfigure the router to access the internet. Ensure that the power supply of the router is properly when resetting the router.

Resetting the router via the web UI

1. To access the configuration page, click **System Settings > Reboot and Reset**.
2. Click **Reset**. Your router is reset successfully when all the indicators blink once. Then wait for the router to restart.

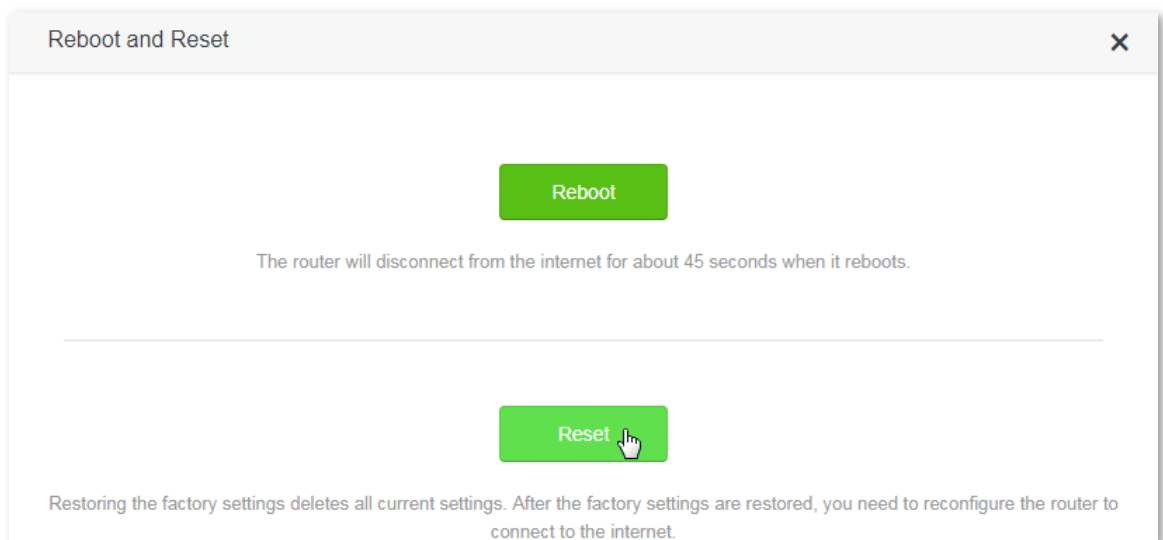

--End

Resetting the router via the RST/WPS button

Power on your router. When the SYS indicator blinks, hold the **RST/WPS** button down for about 8 seconds. Your

router is reset successfully when all the indicators blink once.


11.7 Firmware Upgrade

11.7.1 Overview

This module enables you to upgrade the firmware of the router.

Firmware upgrade offers the router with more stable performance and new functions. The router supports **Online Upgrade** and **Local Upgrade**, and the default setting is **Online Upgrade**, which means the router automatically detects whether the new firmware is available or not and displays its information if any.

To access the configuration page, click **System Settings > Firmware Upgrade**.

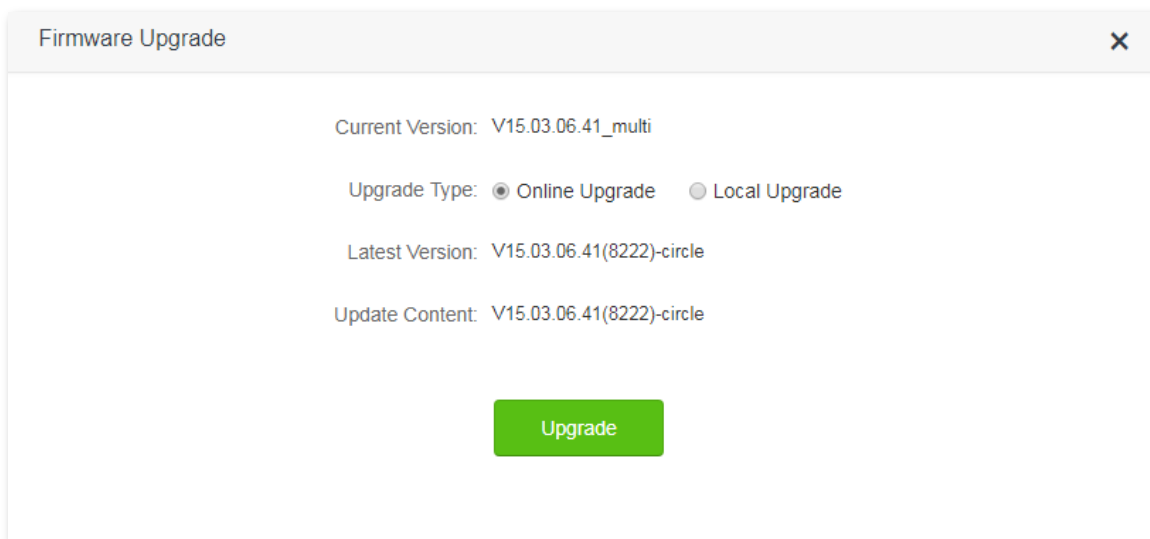

11.7.2 Steps for local upgrade



Before an upgrade, check if the firmware is accurate. Erroneous firmware will damage the router.

Do not power off the router during an upgrade. Otherwise, the router may be damaged.

After the firmware is upgraded, you are recommended to restore the factory settings of the router and configure the router again, so as to ensure stability of the new firmware and proper operation of its new functions.

1. Log in to the official website of Tenda <http://www.tendacn.com> and download the latest firmware to your computer.
2. Log in to the web UI of the router, and choose **System Settings > Firmware Upgrade**.
3. **Upgrade Type:** Click **Local Upgrade**.
4. **Select Upgrade File:** Click **Choose File**, and select the firmware that has been downloaded to your computer.

Firmware Upgrade

Current Version: V15.03.06.41_multi

Upgrade Type: ☐ Online Upgrade ☒ Local Upgrade

Select Upgrade File: No file chosen

5. Click **Upgrade**.

Firmware Upgrade

Current Version: V15.03.06.41_multi

Upgrade Type: ☐ Online Upgrade ☒ Local Upgrade

Select Upgrade File: US_AC7V1.0...i_TD01.bin

--End

Wait a second for the upgrade to complete. You can go to the **Internet Status** page to see whether the upgrade succeeds. If it does, reset your router and configure it again to access the internet.


11.7.3 Checking your firmware version

1. Log in to the web UI of the router, restore the router to the factory settings, and reconfigure the router.
2. After login to the web UI, click **System Settings > Firmware Upgrade**.
3. Check whether the current firmware version of the router is the same as the one you used for upgrade just now.

11.7.4 Steps for online upgrade

After connecting to the internet, the router detects firmware version automatically. If new firmware is available, you can choose **Online Upgrade** to upgrade.

1. To access the configuration page, click **System Settings > Firmware Upgrade**.
2. Click **Upgrade**.

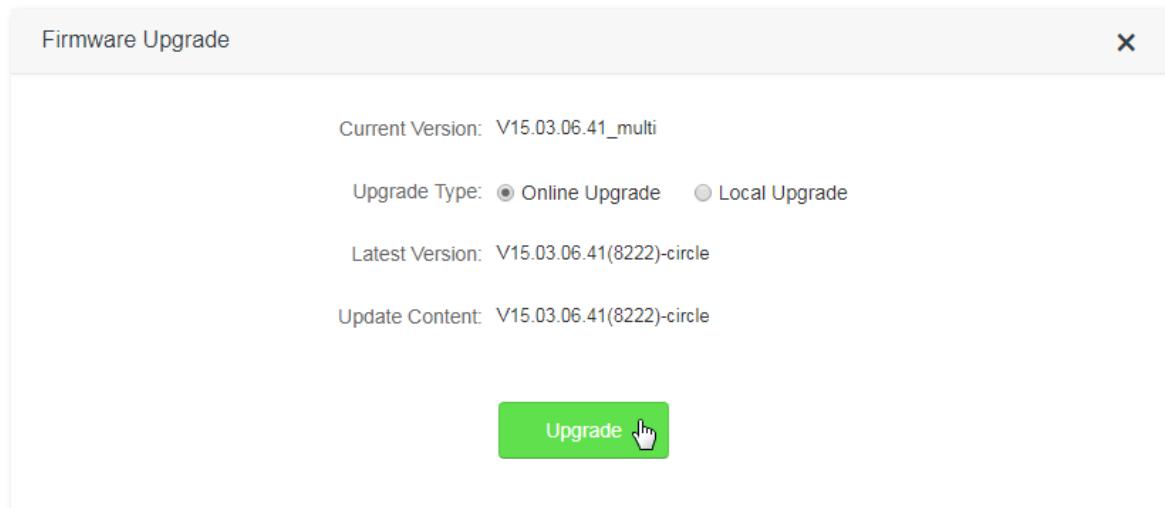

--End

Wait for the upgrade to complete. You will be redirected to the login page of the router after successful upgrade.


11.8 Backup/Restore

11.8.1 Overview

This module enables you to back up the current configuration of your router to your computer, or restore your router to a previous configuration by importing the configuration file on your computer to the router.

The module enables you to back up the router's configuration in case that you lost the configuration after resetting the router. After you clicking **Backup**, the system generates a configuration file. If the router is restored to factory settings, importing the configuration file can restore the router to the previous settings.

To access the configuration page, click **System Settings > Backup/Restore**.

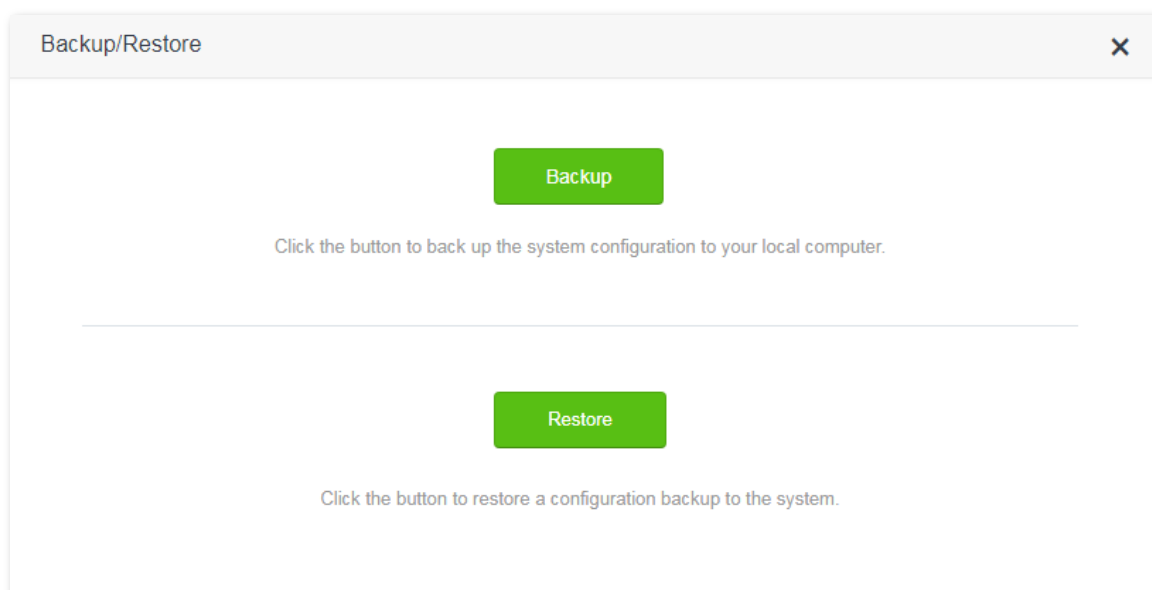

- **Backup:** It is used to back up the current configuration of the router.
- **Restore:** It is used to restore the router to previous settings by importing the backup configuration file.

11.8.2 Steps for backup

1. To access the configuration page, click **System Settings > Backup/Restore**.
2. Click **Backup**.
3. Follow the onscreen instructions to back up the configuration.

--End

11.8.3 Steps for restore

1. To access the configuration page, click **System Settings > Backup/Restore**.
2. Click **Restore**, and select the configuration file to be restored.
3. Wait for the router to reboot.

--End


11.9 Remote Management

11.9.1 Overview

This module enables you to log in to the web UI of the router over the internet.

Generally, only devices connected to the router can log in to the web UI of the router. But if necessary, you can to log in to the web UI of the router remotely over the internet.

To access the configuration page, click **System Settings > Remote Management**.

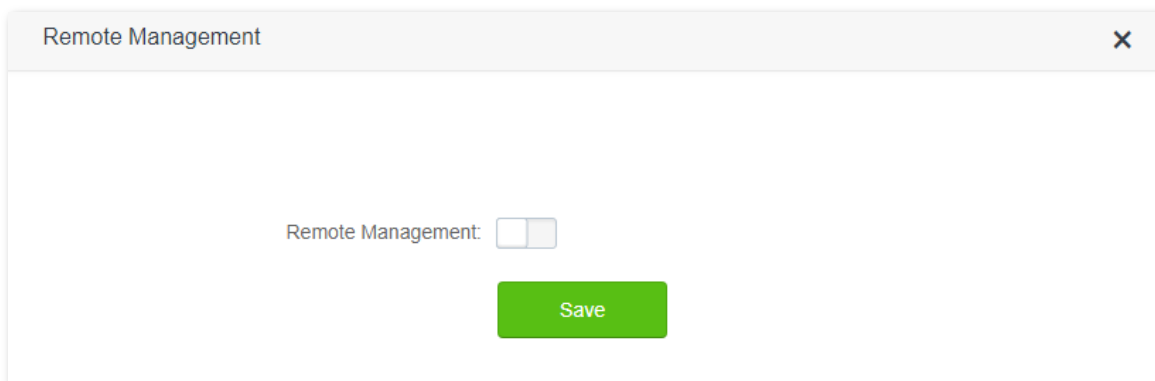

The following figure appears after this function is enabled:

Remote Management

Remote Management:

Remote IP Address:

0.0.0.0

Port:

8080

Save

Parameter description:

Parameter	Description
Remote Management	Used to enable/disable the remote management function. By default, this function is disabled.
Remote IP Address	It specifies the IP address that can access the router remotely.
Port	It specifies the port number needed when you manage the router remotely. The default port number is 8080, which can be modified if necessary.  TIP Generally, you are recommended to retain the default configuration. If it is necessary to change the default configuration, please set this parameter to a correct DNS server IP address or DNS proxy IP address, to enable devices to access the internet.

11.9.2 Configuring remote management

- To access the configuration page, click **System Settings > Remote Management**.
- Remote Management:** Set  to .
- Remote IP Address:** Set the IP address allowed to access the router remotely.
- Port:** Set the port number used for remote access. You are recommended to keep the default value if you do not have special requirement.
- Click **Save**.

Remote Management

Remote Management: ☒

Remote IP Address:

Port:

Save


--End

Scenario

Michael bought an AC7 for network after having broadband. The WAN IP address of the router is 202.105.106.55. Michael needs to log in to the web UI of the router on business trip.

Solution


The remote management function can address this requirement. The following figure shows a network topology for reference:

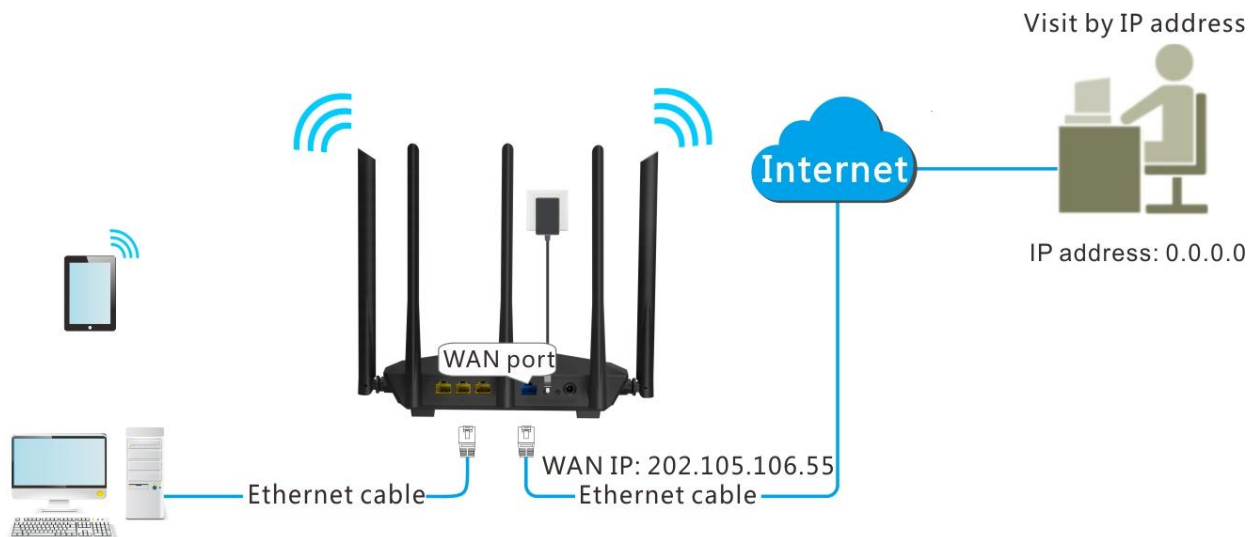

Procedures:

1. To access the configuration page, click **System Settings > Remote Management**.
2. **Remote Management:** Set ☐ to ☒.
3. **Remote IP Address:** Enter remote IP address, which is **0.0.0.0** in this example.

4. **Port:** Keep the default settings.
5. Click **Save**.

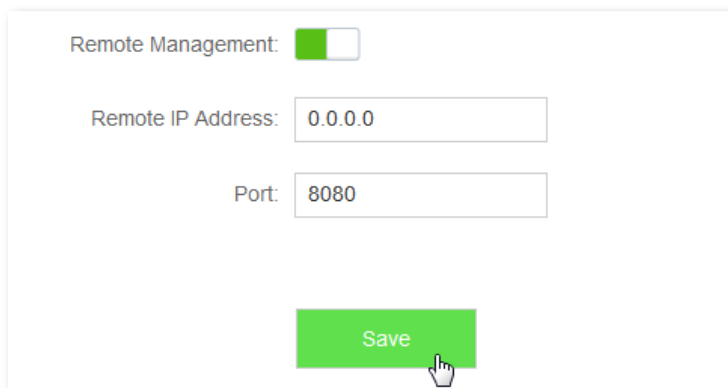

Remote Management: ☒

Remote IP Address:

Port:

Save

--End

Verification

You can log into the web UI of the router to manage it by accessing **http://202.105.106.55:8080** on the remote computer with the IP address **0.0.0.0**.


11.10 System Status

This module enables you to view the basic information of the router, including the **Information**, **WAN Status**, **LAN Status**, and **WiFi Status** sections.

To access the configuration page, click **System Settings > System Status**.

11.10.1 Information

This module enables you to view system time, uptime, firmware version, and hardware version. See the following figure:

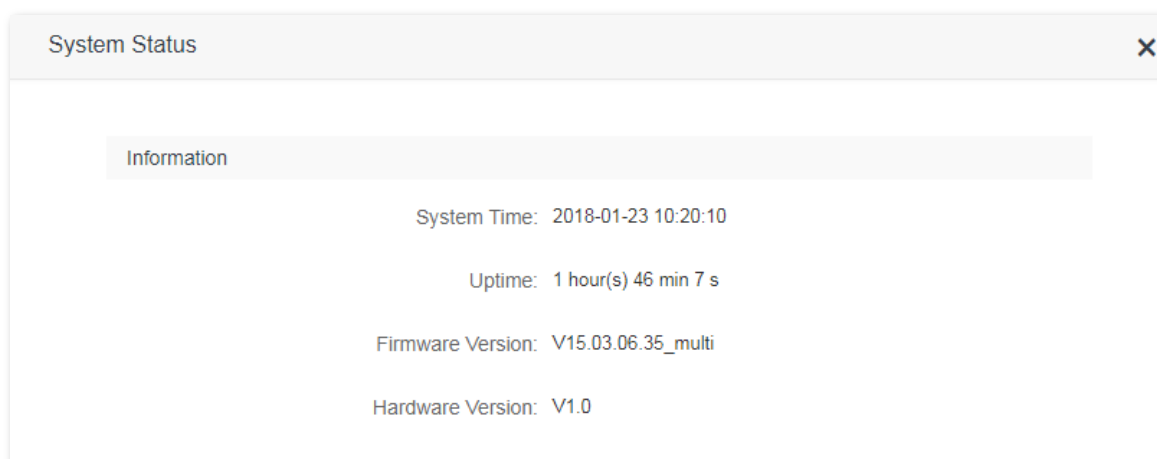

System Status

Information

System Time: 2018-01-23 10:20:10

Uptime: 1 hour(s) 46 min 7 s

Firmware Version: V15.03.06.35_multi


Hardware Version: V1.0

Parameter description:

Parameter	Description
System Time	It specifies the current system time of the router. Ensure that the router is connected to the internet properly.
Uptime	It specifies the time that has elapsed since the router was previously started.
Firmware Version	It specifies the current firmware version of the router. You can check whether the firmware upgrade configured in Firmware Upgrade succeeded or not here.
Hardware Version	It specifies the current hardware version of the router.

11.10.2 WAN Status

This module enables you to view the WAN status of the router. See the following figure:

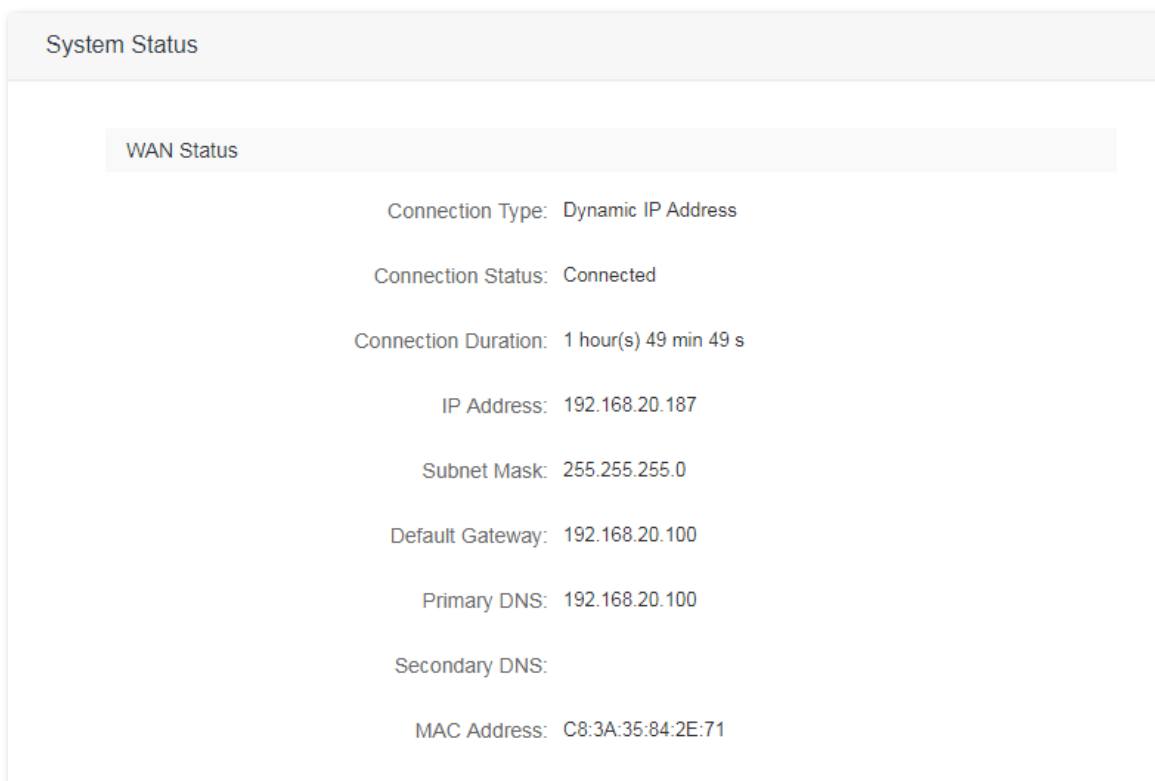

Parameter description:

Parameter	Description
Connection Type	It specifies the current connection type of the router.
Connection Status	It specifies the current connection status of the router.
Connection Duration	It specifies the time that has elapsed since the router was connected to the internet previously.

IP Address	It specifies the WAN IP address of the router. This parameter is needed when you use functions like Virtual Server or Remote Management.
Subnet Mask	It specifies the subnet mask of the WAN IP address of the router.
Default Gateway	It specifies the gateway assigned to the router.
Primary DNS	It specifies the primary DNS assigned to the router.
Secondary DNS	It specifies the secondary DNS assigned to the router.
MAC Address	It specifies the MAC address of the WAN port of the router. You can check whether the MAC clone configured in WAN Settings is succeeded or not here.

11.10.3 LAN Status

This module enables you to view the LAN IP address (the login IP address) of the router.



Parameter description:

Parameter	Description
IP Address	It specifies the LAN IP address of the router used to log in to the web UI of the router. You can log in to the web UI of the router through either IP address (default: 192.168.0.1) or the domain name (default: tendawifi.com).
Subnet Mask	It specifies the subnet mask of the LAN IP address of the router.
MAC Address	It specifies the MAC address of the LAN port of the router.

11.10.4 WiFi Status

This module allows you to view the WiFi status of the router, such as WiFi name, whether the WiFi network is enabled or not. See the following figure:

System Status

WiFi Status

2.4 GHz Network: Visible

Hotspot Name: Tenda_842E68

Encryption Mode: None

WiFi Channel: 4

WiFi Bandwidth: 20

MAC Address: C8:3A:35:84:2E:69

5 GHz Network: Visible

Hotspot Name: Tenda_842E68_5G

Encryption Mode: None

WiFi Channel: 157

WiFi Bandwidth: 80

MAC Address: C8:3A:35:84:2E:6D

Parameter description:

Parameter	Description
	It specifies the WiFi status over 2.4 GHz/5 GHz network of the router.
2.4 GHz / 5 GHz Network	– Disable: It indicates that the WiFi network is disabled. – Visible: It indicates that the WiFi network is enabled and users access the internet using the Hotspot Name of the WiFi network.
Hotspot Name	It specifies the current WiFi name of the router. After the 2.4 GHz/5 GHz WiFi network is enabled, smart devices can scan and connect to it to access the internet.
Encryption Mode	It specifies the encryption mode of the WiFi network of the router.
WiFi Channel	It specifies the current wireless data transmission channel of the router.
WiFi Bandwidth	It specifies the bandwidth of the operating channel of the router's WiFi network, with a unit MHz.
MAC Address	It specifies the MAC address of the WiFi network of the router.

11.11 System Log

This module enables you to view the system log information. The system logs can be used for troubleshooting

when the router is faulty.

To access the configuration page, click **System Settings > System Log**.

System Log			
Note: If the router is not connected to the internet, the default logging time is 2000-X-X XX:XX:XX.			
Number	Time	Type	Log Content
1	2018-02-01 19:25:17	wan	DHCP_ack Received From (192.168.20.100)
2	2018-02-01 19:25:17	wan	Sending DHCP_renew for 192.168.20.187 to 192.168....
3	2018-02-01 19:11:37	wan	DHCP_ack Received From (192.168.20.100)
4	2018-02-01 19:11:37	wan	Sending DHCP_renew for 192.168.20.187 to 192.168....
5	2018-02-01 18:58:09	wan	DHCP_ack Received From (192.168.20.100)
6	2018-02-01 18:58:09	wan	Sending DHCP_renew for 192.168.20.187 to 192.168....
7	2018-02-01 18:49:08	system	LAN3 up

Clicking **Export** can export the system log to your local computer.

11.12 Automatic Maintenance

11.12.1 Overview

This module enables you to set the router to reboot at a specified time, improving the system stability and service life of the router.

To access the configuration page, click **System Settings > Automatic Maintenance**. By default, the Automatic Maintenance function is enabled.

Automatic Maintenance

System Reboot Schedule:

Reboot At:

02

:

00

Delay:
☒ Delay rebooting the router when it is exchanging data with a device at a speed higher than 3 KB/s.

Save

Parameter description:

Parameter	Description
System Reboot Schedule	Used to enable or disable the system reboot schedule function.
Reboot At	It specifies the time for the router to reboot.
Delay	It specifies the premise for the router to delay a reboot. – Selected: The router reboots automatically when there are devices connected to the router, and the traffic over the WAN port is less than 3 KB/s for 30 minutes; or there are no device connected to the router, and the traffic over the WAN port is less than 3 KB/s for 3 minutes. – Unselected: The router reboots automatically when the time for the router to reboot is up.

11.12.2 Configuring system reboot schedule

1. To access the configuration page, click **System Settings > Automatic Maintenance**.
2. **Reboot At:** Select the time to reboot from the drop-down list box, which is **23:30** in this example.
3. Click **Save**.

Automatic Maintenance ✕

System Reboot Schedule: ☐

Reboot At:

23 ▾

 :

30 ▾

Delay: ☒ Delay rebooting the router when it is exchanging data with a device at a speed higher than 3 KB/s.

Save

--End

After the configuration above, the router reboots automatically at 23:30 every day if there are devices connected to the router, and the traffic over the WAN port is less than 3 KB/s for 30 minutes; or there are no devices connected to the router, and the traffic over the WAN port is less than 3 KB/s for 3 minutes.


Appendixes

A.1 Setting the IP address of your computer


The following describes the configuration steps for Win8 and Win7. Choose the proper instructions according to your computer system. A computer installed with a wired network adapter is used as an example here to describe the procedures. Steps for configuring a computer installed with a wireless adapter are similar.

A.1.1 Windows 8


1. Right-click  in the lower-right corner of the desktop and choose **Open Network and Sharing Center**.

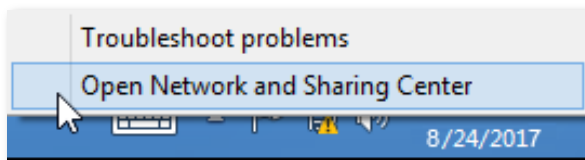


2. Click **Ethernet** and **Properties**.

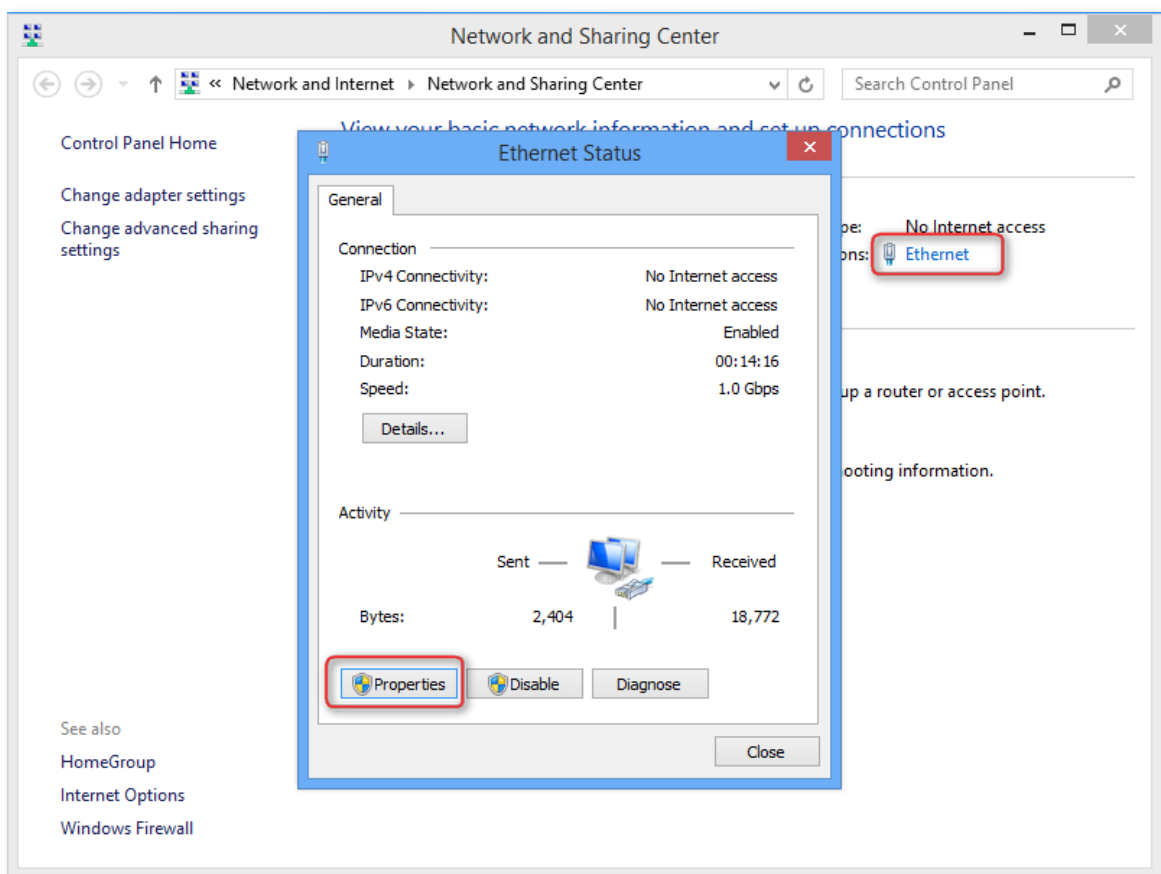

3. Double-click **Internet Protocol Version 4 (TCP/IPv4)**.

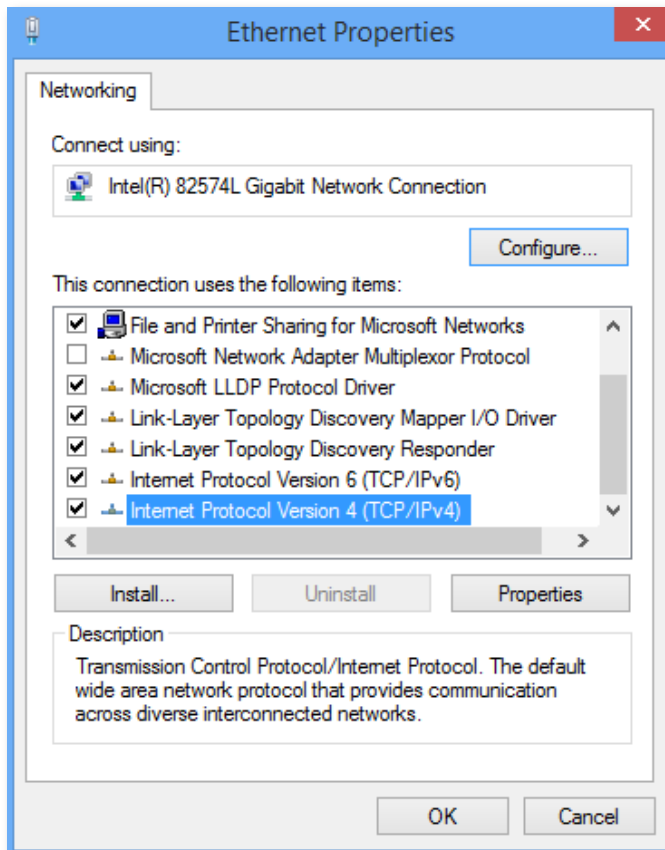


4. Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**, and click **OK**.

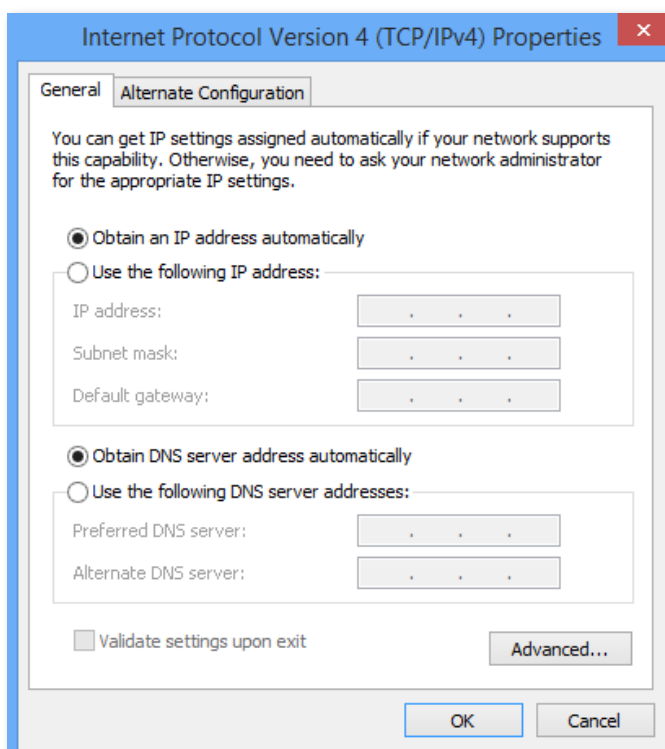


5. You are redirected to the **Ethernet Properties** box, and click **OK**.

A.1.2 Windows 7


1. Right-click  in the lower-right corner of the desktop and choose **Open Network and Sharing Center**.

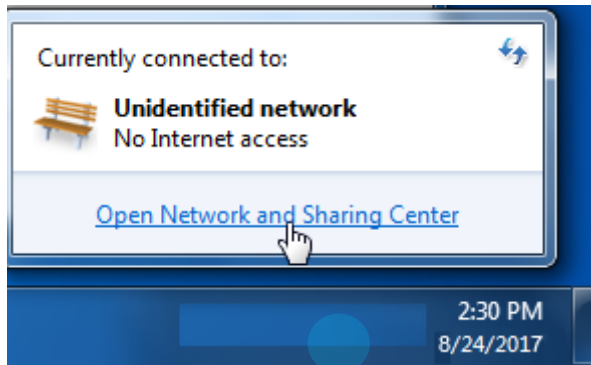


2. Click **Local Area Connection > Properties**.

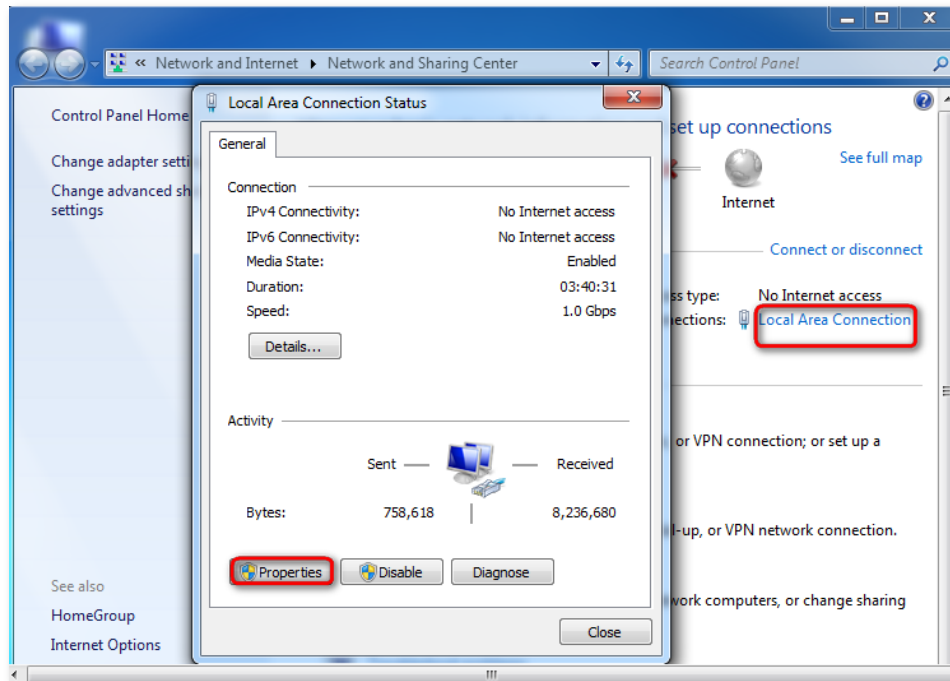

3. Double-click **Internet Protocol Version 4 (TCP/IPv4)**.

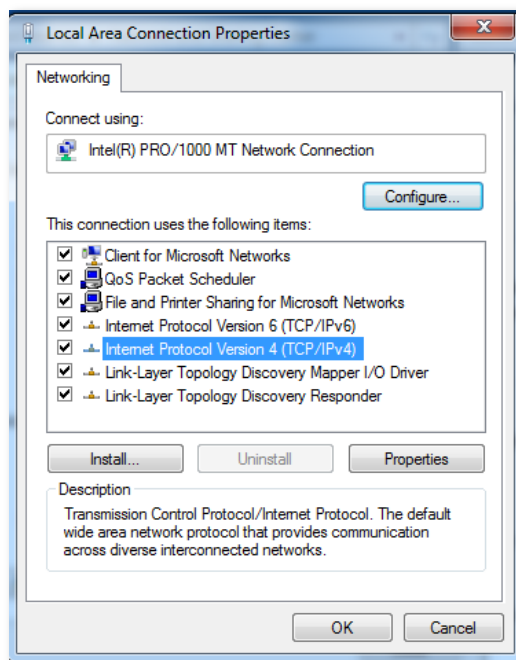

4. Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**, and click **OK**.

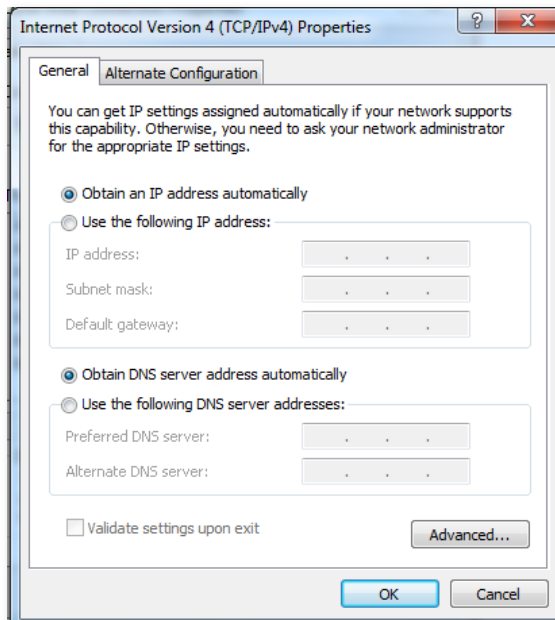

5. You are redirected to the **Internet Properties** box, and click **OK**.

A.2 FAQ

Q1: I cannot access the web UI of the router after entering **tendawifi.com** or **192.168.0.1**. What should I do?

A1: Try the following solutions and log in again:

- Ensure that your Ethernet cable with internet connectivity is plugged into the WAN port of the router rather than a LAN port.
- Ensure that your wireless device is connected to the router's SSID. Ensure that your wired device is connected to port 1, 2 or 3/IPTV of the router properly by Ethernet cable. And the device is also set to **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
- Ensure that **tendawifi.com** is entered correctly, or you can try logging by entering **192.168.0.1**.
- Clear the cache of your web browser or replace the web browser, and try logging in again.
- Disable the firewall of your computer or replace the computer, and try logging in again.
- If the problem persists, reset your router and try logging in again.

Q2: How to choose my connection type?

A2: You can choose your internet connection type based on the following table or by consulting your internet service provider (ISP).


Internet connection media	Internet connection type	Description
Telephone line/Ethernet cable	PPPoE	You need to double-click  and enter a PPPoE user name and password to set up a dial-up connection.
TV cable/Ethernet cable	Dynamic IP address	You can access the internet after connecting to an upstream router or a cable TV.
Ethernet cable/Optical fiber	Static IP address	You are assigned a static IP address, a subnet mask, a default gateway address, and DNS server address for accessing the internet.

Q3: I cannot access the internet after configuring internet settings. What should I do?

A3: Try the following solutions and log in again:

Log in to the web UI of the router, and check your router's connection status on the **Internet Status** page.

- If your router is connected to the internet successfully as the figure shown below, try the following solutions:

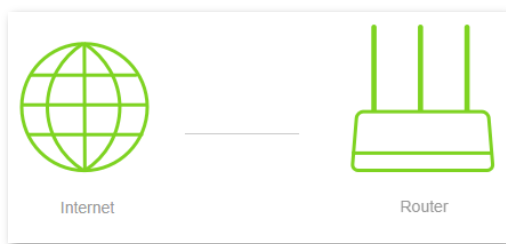

Connect your wireless devices to the WiFi network of the router using the new WiFi name and password you set.

– If **Connection failed** appears on the page:

- Click **Internet Settings** on the web UI to check whether the connection type and parameters you entered are correct.

Connection type	Information provided by your ISP
PPPoE	ISP user name and ISP password
Dynamic IP address	None
Static IP address	IP address, subnet mask, gateway, DNS server and other parameters

- Connect the Ethernet cable with internet connectivity to your computer directly.
 - ◆ If your computer cannot access the internet, consult your ISP.
 - ◆ Otherwise, reconnect the Ethernet cable with internet connectivity to your router, reset your router and configure it again.

Q4: How to reset the router if I cannot access the web UI of the router?

A4: Power on your router. When the **SYS** indicator blinks, hold down the **RST/WPS** button for about 8 seconds. The router is reset successfully when all the LED indicators blink once.

Q5: An IP address conflict message appears after a computer which is connected to the router starts. What should I do?

A5: Try checking the following items:

- Ensure that there is no other DHCP server in your LAN or the other DHCP server is disabled.
- Verify that the IP address of your router is not used by another device in your LAN. The default IP address of the router is 192.168.0.1.
- Ensure that the static IP address assigned to the computer in your LAN is not used by other devices.

Q6: I forget the login password of the router. What should I do?

A6: Reset the router and log in the router's web UI.

Method to reset: Power on your router. When the **SYS** indicator blinks, hold down the **RST/WPS** button for about 8 seconds. The router is reset successfully when all the LED indicators blink once



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Operations in the 5.15-5.25 GHz band are restricted to indoor use only.

This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type AC7 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
<http://www.tendacn.com/en/service/download-cata-101.html>

Operate Frequency:

2.4 GHz: EU/2400-2483.5 MHz (CH1-CH13)

5 GHz: EU/5150-5250 MHz (CH36-CH48)

EIRP Power (Max.):

2.4 GHz: 19.86 dBm

5 GHz: 22.96 dBm

Software Version: V15.03.06.XX



Caution:

Adapter Model: BN052-A09009E/BN052-A09009B

Manufacture: SHENZHEN HEWEISHUN NETWORK TECHNOLOGY CO., LTD.

Input: 100 - 240 V AC, 50/60 Hz 0.3A

Output: 9 V  1.0 A

 : DC Voltage



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device is for indoor usage only.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Operating Temperature: 0 °C - 40 °C

Operating Humidity: (10 – 90)% RH, non-condensing



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys new electrical or electronic equipment.

Producto	NOMBRE DEL PRODUCTO:
	Router inteligente de banda dual WiFi AC1200
	MODELO: AC7
Alimentador de Energía:	
Alimentación: 100 – 240 V ca 50/60 Hz, 0.3 A	
Salida: 9 V cc 1.0 A	
PAIS DE ORIGEN: CHINA	
	

LA OPERACIÓN DE ESTE DISPOSITIVO ESTA SUJETA A LAS SIGUIENTES CONDICIONES:

- a) Es posible que este equipo o dispositivo no cause interferencia perjudicial.
- b) Este equipo o dispositivo debe aceptar cualquier tipo de interferencia, incluyendo la que pueda causar su operación no deseada.

Estimado usuario: Antes de utilizar este producto lo invitamos a leer el siguiente manual para que conozca todas sus funciones y características.

EAC

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	UK

Copyright © 2018 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

Technical Support

USA hotline: 1-800-570-5892

Toll Free: Daily - 9 am to 6 pm EST

Canada hotline: 1-888-998-8966

Toll Free: Mon - Fri 9 am - 6 pm PST

Email: support.usa@tenda.com.cn

Hong Kong Hotline: 00852-81931998

Website: <http://www.tendacn.com>

E-mail: support@tenda.com.cn

Global Hotline: +86 755-2765 7180 (China Time Zone)

Toll Free: Daily - 9 am to 6 pm EST