



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Ulefone Armor 26 Ultra](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Ulefone Armor 26 Ultra](#) o cerca il tuo prodotto tra le [migliori offerte di Cellulari e Smartphone](#)

uleFone

Walkie Talkie User Guide

Armor 26 Ultra Walkie-Talkie Version



Assemble/Replace the Antenna

- Unfold the cover of the antenna port and screw in the antenna.
- Screw out the UHF/VHF antenna to replace each other as needed.

Step 1



Step 2



UHF




VHF




Default Channel Setup

- Long press the PTT button or click the Intercom app to enter.
- Enter Device > click Device Area, select the common use channel according to your location.

Step 1

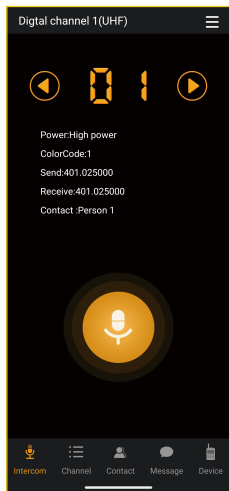

Step 2

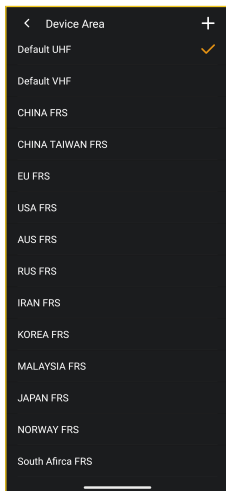





Default Channel Setup

- Back to the Channel, select the aligned channel with the partner. To check whether you are both in the same mode and frequency band, digital or analog modes, UHF or VHF band.
- Press PTT button to send message.

Step 3

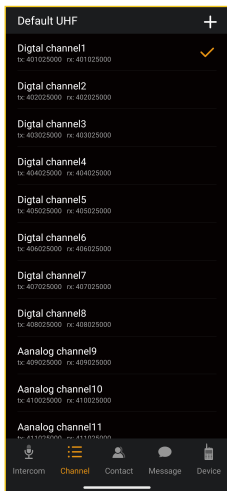

Step 4

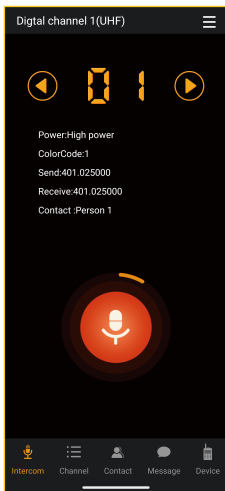





Customized Channel Setup

- Long press the PTT button or click the Intercom app to enter.
- Enter Device > click Device Area, select the common use channel according to your location.

Step 1

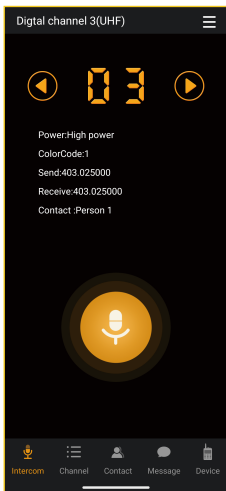

Step 2


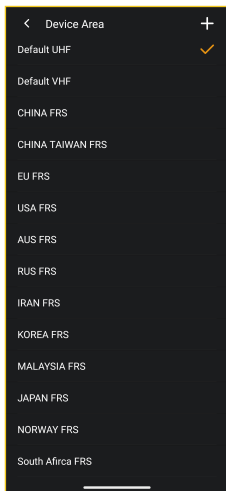




Customized Channel Setup

- Back to the Channel, click + on the top right corner to enter the customized channel interface, and fill in the information according to the prompts or options (please refer to the reference).

Step 3

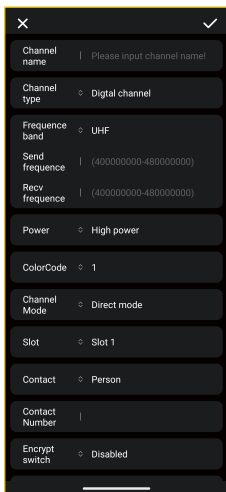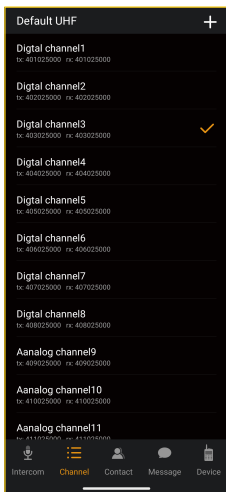





Customized Channel Setup

- Check the customized channel after setup.
- Press the PTT button to send messages.

Step 4

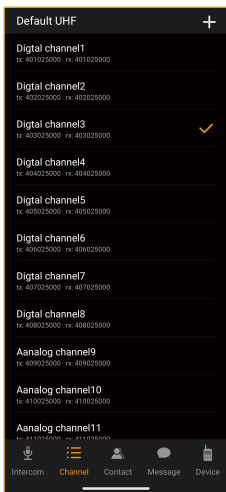

Step 5

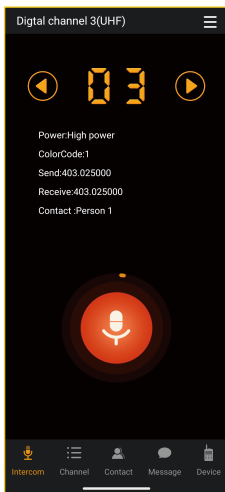

Customized Channel Interface Reference

Channel name: Support user setup (Should be within 32 characters)

Channel type: Support two modes, Digital Channel and Analog Channel, should be aligned with the need-to-be-connected device.

Frequency band: Support two frequency bands, UHF band and VHF band, should be aligned with the need-to-be-connected device.

Send frequency: Support customized input, frequency should be aligned with the need to receive device.

Receive frequency: Support customized input, frequency should be aligned with the need to send device.

Power: Support Low Power and High Power; High Power send stronger signal but consume more power.

Color code: Support to select 0-15 code, the code need to be aligned with the connecting device.

Squelch level: Scale 0-9 to select, 0 is monitor mode. The less the number, the more sensitive the receiving signal. And suggest to setup 4 scale above.

Customized Channel Interface Reference

Channel mode: Direct Mode (TDD Mode) is suitable for short distance communication without the assistance of repeater. /Double Mode(Dual-slot Mode) function allows two sets of walkie-talkies to communicate simultaneously on the same frequency.

Slot: You can choose to communicate in Slot 1 or Slot 2.

Contact type: Support Person, Group and All mode. Person is end to end mode and Group and All are end to more. Both Person and Group are limited mode that need to setup Contact Number, only communicated between Armor 26 Ultra Walkie Talkie Version. And All is open mode can be compatibility with any other devices.

Encrypt switch: Open this mode any Contact type need password to join in the channel, only can be used between Armor 26 Ultra Walkie Talkie Version.

Relay disconnection: Enable the relay off-network mode, that is, switch to the pass-through mode; disable the relay off-network mode. The walkie-talkie will be able to use the signal amplification and coverage expansion functions of the repeater station to achieve longer-distance communication.

Transmission interruption: It is allowed to turn on , turn off or transmit.

Group list: Set up multiple group chats.



Follow us on Facebook

www.ulefone.com