



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Yealink UVC40](#) o cerca il tuo prodotto tra le [migliori offerte di Macchine per Ufficio](#)




Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Yealink UVC40](#) o cerca il tuo prodotto tra le [migliori offerte di Macchine per Ufficio](#)

Yealink

USB Video Conferencing Endpoint

 UVC40



English | 简体中文

Quick Start Guide(V1.1)

Package Contents



UVC 40



VCR20
Remote Control



 
AAA Battery×2



7m
USB Cable



Cable Ties×5



Power Adapter



Mounting Bracket
and Accessories



Silicone Pad×2




Quick Start Guide

- 💡 We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.
- 💡 Use the Yealink original power adapter (48V/0.7A) to charge the endpoint only. The use of the third-party power adapter may cause the damage to the endpoint.
- 💡 The USB cable in the MVC400/ZVC400 package is 2.5 meters long.


UVC40 Installation

• Put on a Flat Surface

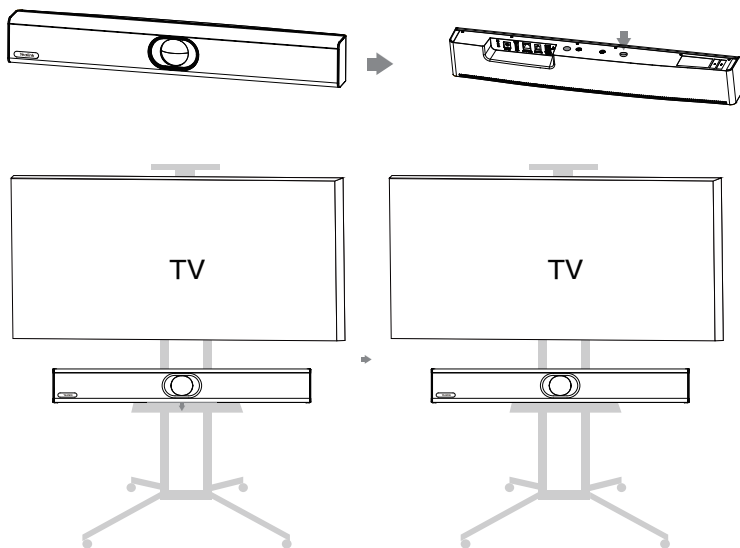


● Mount on a Wall

Placing UVC40

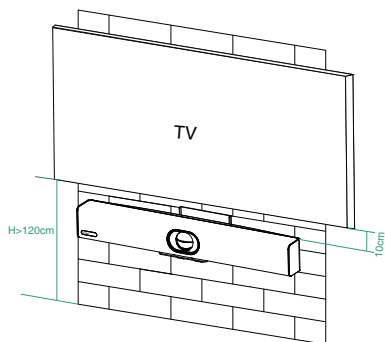

Mount the UVC40 below the TV when the mounting height of the TV is higher than 120cm.

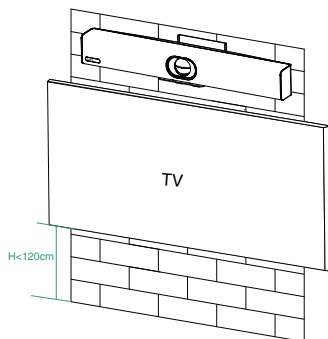


Mount the UVC40 above the TV when the mounting height of the TV is lower than 120cm.


Wall Mounting

Use the bracket to mount your endpoint on a wall. The mounting height affects your camera view. The recommended height is 1.1m above the ground.


Step1: Assemble the mounting bracket

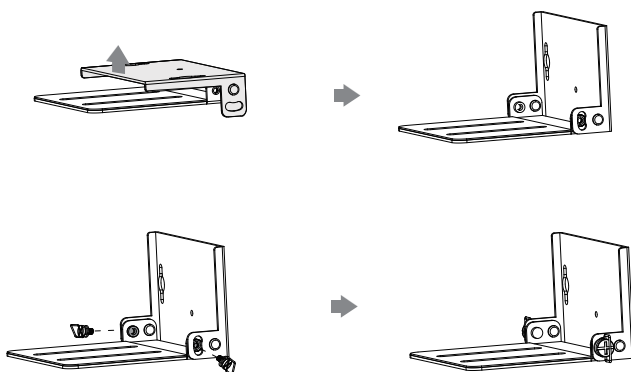

Step2: Mount the UVC40 to the wall

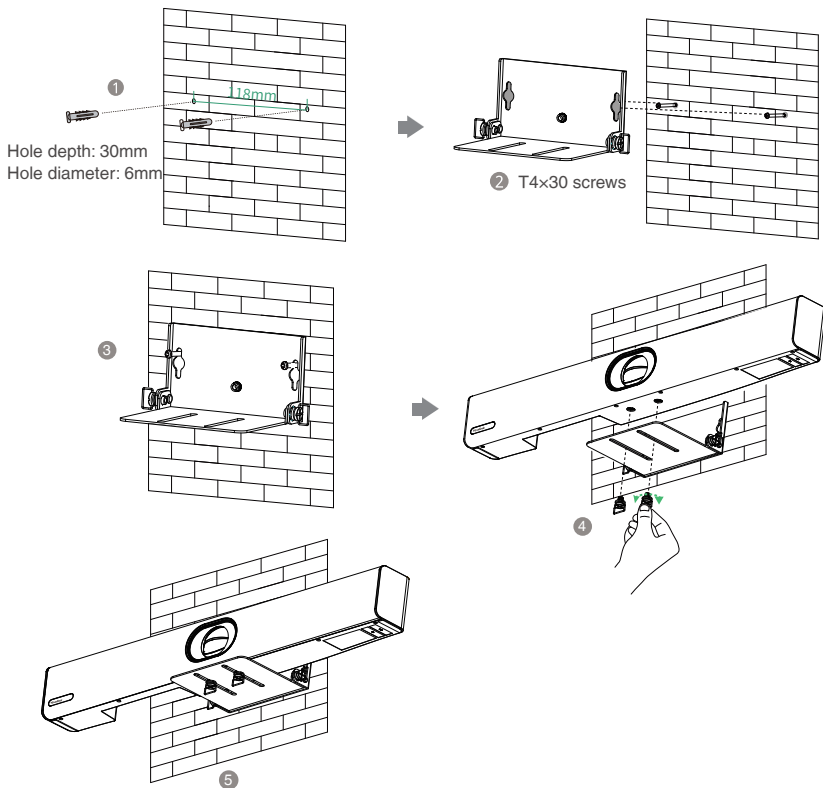


Adjusting the Camera Tilt

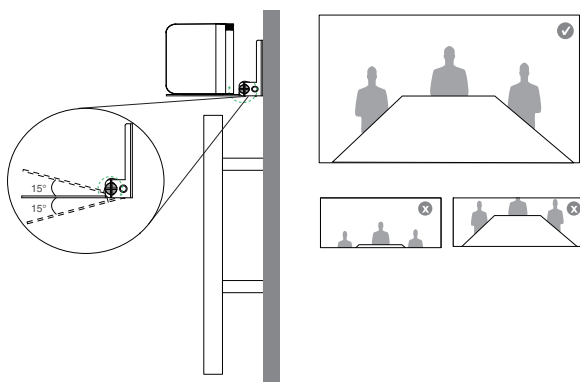


Remote Control and Cable Ties Installation


Remote Control Installation

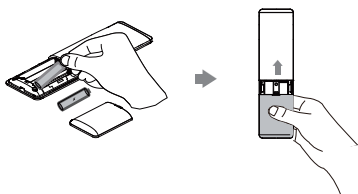

Cable Ties Installation

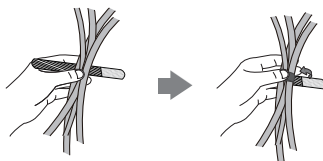


Hardware Interface Instructions

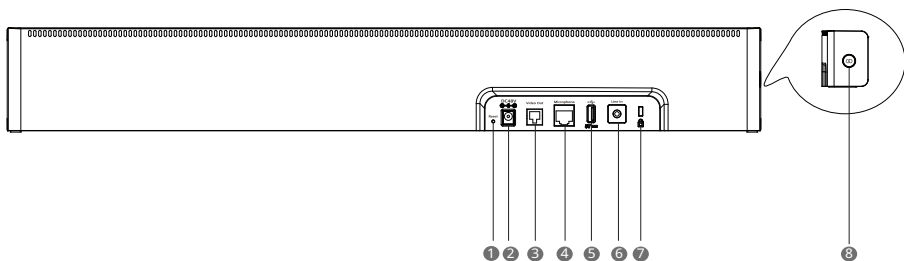

- ❶ Reset: reset the UVC40 to factory defaults.
- ❷ DC48V: connect to the power adapter.
- ❸ Video Out: connect to a PC as video output.
- ❹ Microphone: connect to the microphone (for example, VCM34).
- ❺ USB: insert DD10 to connect to CPW90 if needed.
- ❻ Line In: connect a 3.5mm audio connector to use the UVC40 as an audio output device.
- ❼ Security slot: connect a universal security cable to the UVC40 so that you can lock the UVC40 down.
- ❽ Pairing key: press the pairing key to pair the CPW90 wireless microphone.

UVC40 Connection

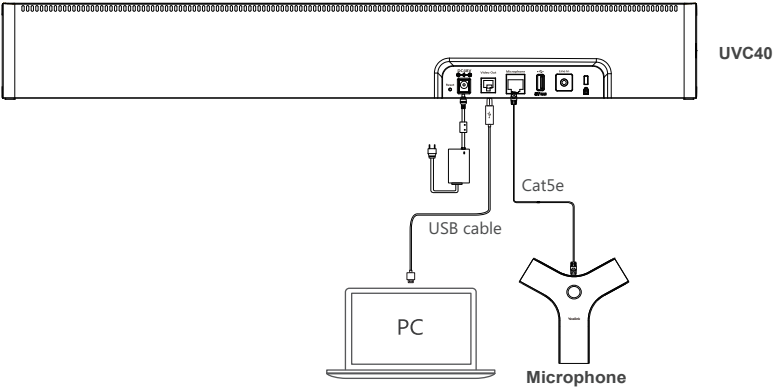

- 💡 The priority of audio input channel is: Microphone(VCM34) > USB(CPW90).
- 💡 The cable should be replaced at once if its skin is broken.

LED Indicator Instructions

LED indicators on the UVC40:

LED Status	Description
Off	The UVC40 is not properly connected to the mini-PC.
Flashing green	There is an incoming call.
Solid green	The UVC40 is active.
Solid red	The UVC40 is muted.
Solid orange	The UVC40 is initializing or in sleep mode.
Flashing orange	The UVC40 is upgrading firmware.
Flashing red and green alternately	The UVC40 is paired with the CPW90.
Flashing red	The UVC40 is in recovery mode and the firmware has not been upgraded.

包装清单



UVC40



VCR20遥控器




7号电池x2



7米USB线



 束线带x5



电源适配器



支架配件
(用于安装主机)



硅胶垫x2



UVC40
快速入门指南

💡 此为A级产品。在生活环境中, 该产品可能会造成无线电干扰。在这种情况下, 可能需要用户对干扰采取切实可行的措施。


💡 我们推荐使用由Yealink提供或经Yealink认可的配件和线缆, 使用未经认可的第三方配件和线缆可能会导致性能的下降。

💡 使用HDMI线前, 请套上磁环用于抗电磁干扰。

💡 MVC400/ZVC400产品组合包中标配的USB线长为2.5米。


安装UVC40

● 平放安装

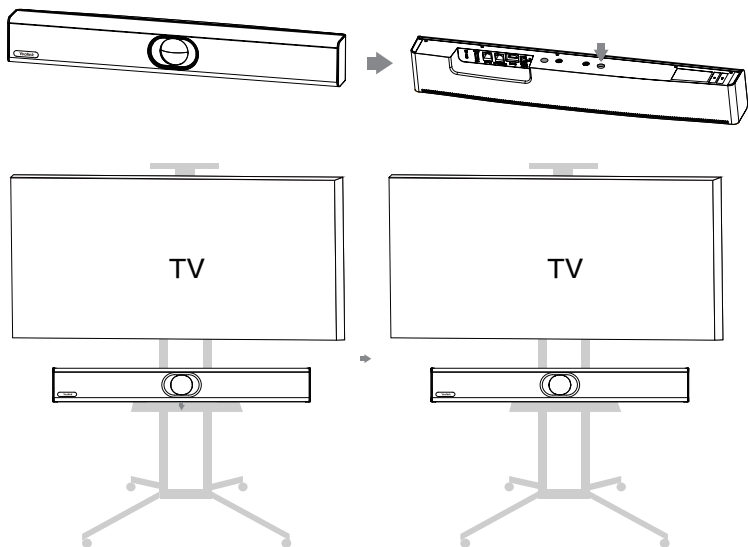


● 墙装

放置UVC40

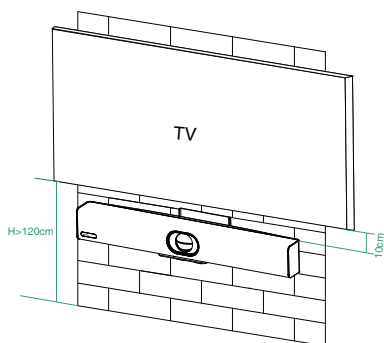

当电视高度高于120cm时,终端安装在电视下方。

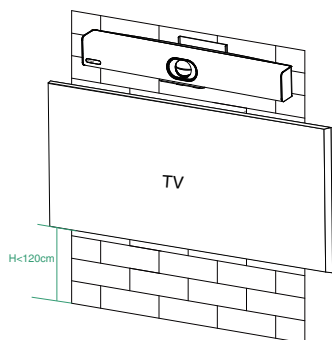


当电视高度低于120cm时,终端安装在电视上方。


墙装


使用支架将终端安装在墙上。安装高度会影响你的视野,建议的高度为离地面1.1m。

步骤1:安装支架

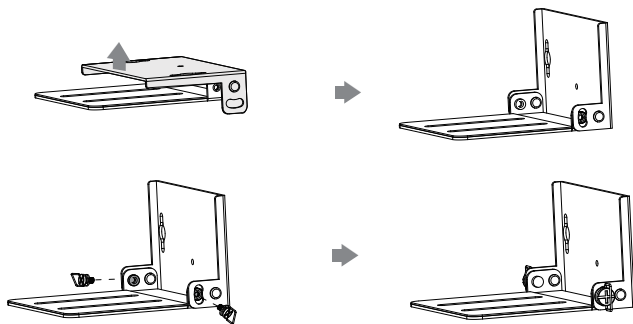


步骤2:墙装

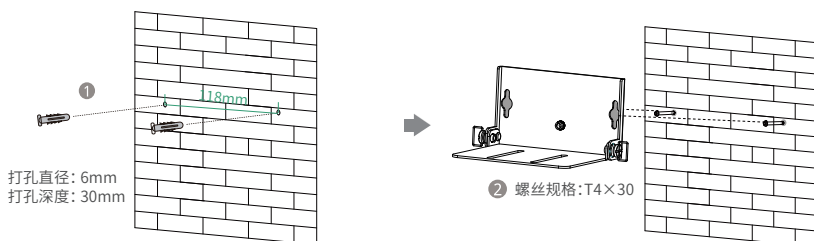

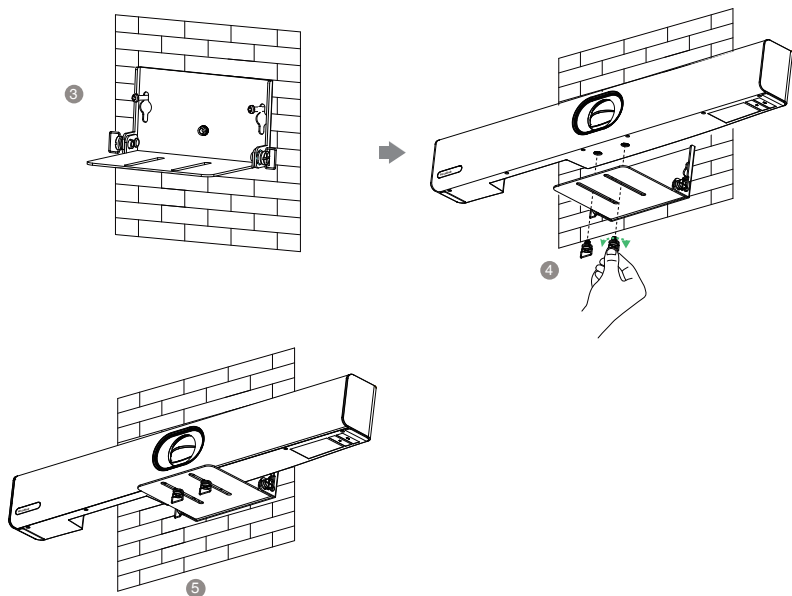


调整倾斜角度

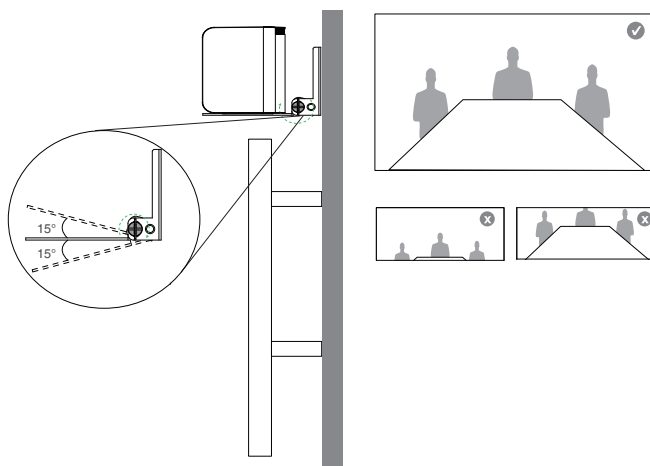


安装遥控器和束线带


安装遥控器电池

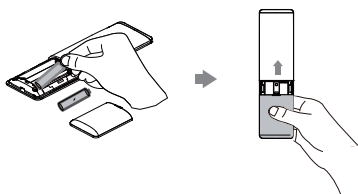

安装束线带

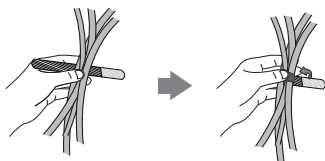


硬件接口介绍

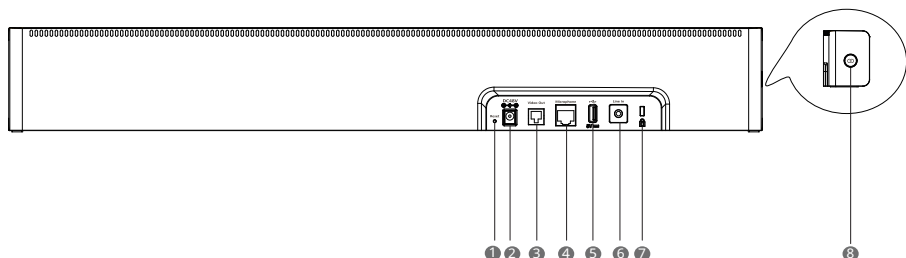

- ❶ 重置键:重置设备到出厂设置。
- ❷ 电源接口: 连接电源适配器。
- ❸ 视频输出: 连接电脑作为视频输出。
- ❹ 麦克风: 连接麦克风 (例如:VCM34)。
- ❺ USB: 可插入BT42, 搭配CPW90-BT蓝牙麦使用。
- ❻ 音频线性输入: 连接3.5mm音频接头, 将UVC40作为音频输出设备。
- ❼ 安全锁孔: 将主机锁在固定位置。
- ❽ 配对键: 按配对键, 进入配对蓝牙麦状态。

连接UVC40

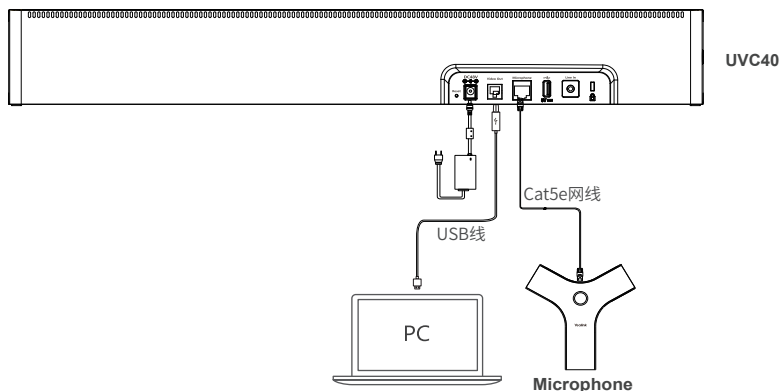

💡 音频输入通道优先级顺序: 麦克风 (VCM34) > USB (CPW90-BT)。

💡 更多关于如何使用CPW90-BT蓝牙无线麦, 请参阅
Yealink CPW90-BT Bluetooth Wireless Microphones Quick Start Guide(CN, EN)。

💡 如果使用过程中发现线缆破皮, 请立即更换。

指示灯介绍

UVC40 指示灯介绍如下:

指示灯状态	说明
关闭	UVC40没有正确连接到mini-PC上或未处于正常工作状态。
绿灯闪烁	来电中状态。
绿灯常亮	UVC40处于工作中状态。
红灯常亮	UVC40处于静音状态。
橙色灯常亮	UVC40启动或等待状态。
橙色灯闪烁	UVC40固件更新中。
红绿灯交替	UVC40和CPW90-BT配对状态。
红灯闪烁	UVC40进入恢复模式, 还未固件更新。

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +32 to 104°F (0 to 40°C)
- Relative humidity: 5% to 90%, noncondensing
- Storage temperature: -22 to +160°F (-30 to +70°C)

Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product.

Explanation of the symbols

- DC symbol

⎓ is the DC voltage symbol.

- WEEE Warning symbol

 To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, and users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU RoHS Directive.

Statements of compliance can be obtained by contacting support@yealink.com.

Safety Instructions

Save these instructions. Read these safety instructions before use!

⚠ General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation.
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair.
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should be respected as well.

⚠ Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

⚠ Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.

About Yealink

Yealink is a global leading provider of enterprise communication and collaboration solutions, offering video conferencing service to worldwide enterprises. Focusing on research and development, Yealink also insists on innovation and creation. With the outstanding technical patents of cloud computing, audio, video and image processing technology, Yealink has built up a panoramic collaboration solution of audio and video conferencing by merging its cloud services with a series of endpoints products. As one of the best providers in more than 140 countries and regions including the US, the UK and Australia, Yealink ranks No.1 in the global market share of SIP phones shipments.

Technical Support

Visit Yealink Wiki (<http://support.yealink.com/>) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (<https://ticket.yealink.com>) to submit all your technical issues.

- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

⚠ Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

Troubleshooting

The unit cannot supply power to device other than Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth.
2. Connect it to another wall outlet.

The usage environment is out of operating temperature range.

1. Use in the operating temperature range.

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly.

You cannot connect the cable properly.

1. You may have connected a wrong Yealink device.

2. Use the correct power supply.

Some dust, etc., may be in the port.

1. Clean the port.

Contact your dealer or authorized service facility for any further questions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause interference; and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. NMB-3(B)

Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

Contact Information

YEALINK NETWORK TECHNOLOGY CO.,LTD.

309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fujian, P.R. C


YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

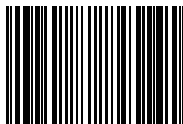

430104001347

YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com

Copyright©2020 YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.All rights reserved.