

Epson Perfection™ V600 Photo


Start Here • Démarrez ici • Hier starten • Hier beginnen • Inizia qui • Para empezar • Começar por aqui • Buradan Başlayın • Ξεκινήστε εδώ




Printed in XXXXXX



1.

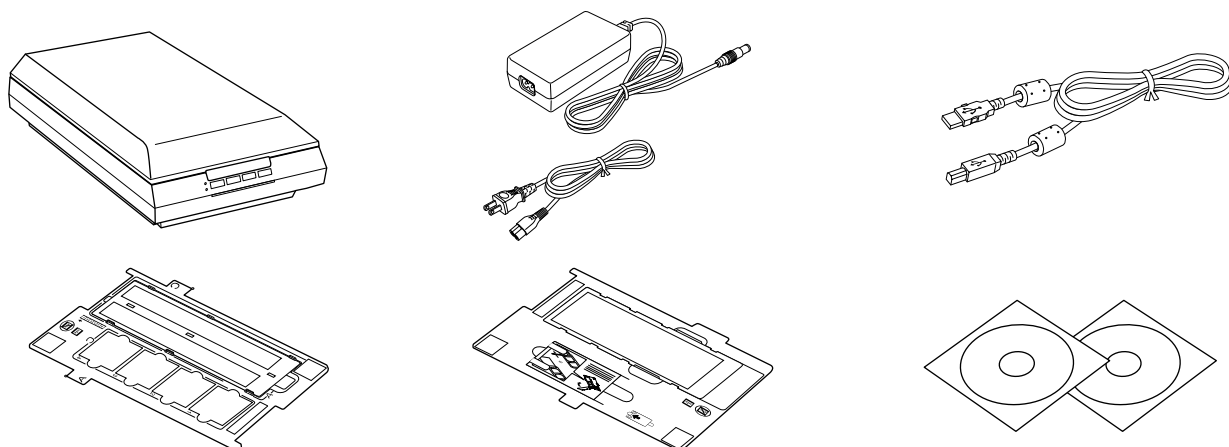

2.

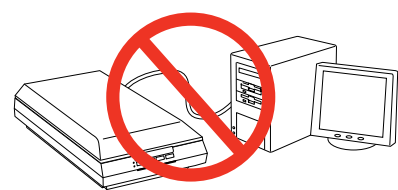


Do not connect the USB cable yet.
Ne raccordez pas encore le câble USB.
Schließen Sie das USB-Kabel noch nicht an.
Sluit de USB-kabel nog niet aan.
Non collegare adesso il cavo USB.

No conecte todavía el cable USB.
Não ligue ainda o cabo USB.
USB kablosunu henüz takmayın.
Μην συνδέσετε ακόμα το καλώδιο USB.

If the Firewall alert appears, allow access for Epson applications.
Si une alerte Pare-feu apparaît, autorisez l'accès aux applications Epson.
Wenn das Firewall-Warnfenster erscheint, gestatten Sie Epson-Anwendungen zugriff.
Als een waarschuwing van de firewall verschijnt, staat u toegang voor Epson-toepassingen toe.
Se viene visualizzato un avviso del Firewall, consentire l'accesso alle applicazioni Epson.


Si aparece la alerta del firewall, permita el acceso de las aplicaciones Epson.
Se aparecer o alerta de Firewall, permita o acesso às aplicações Epson.
Güvenlik Duvarı uyarısı çıkarsa, Epson uygulamalarına erişim izni verin.
Εάν εμφανιστεί προειδοποίηση από το Τείχος προστασίας (firewall), επιτρέψτε στις εφαρμογές Epson να έχουν πρόσβαση.

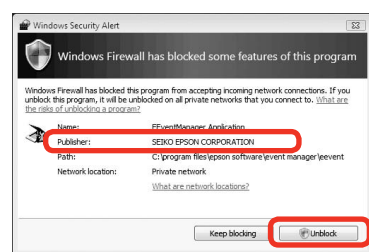




Mac OS X



Windows

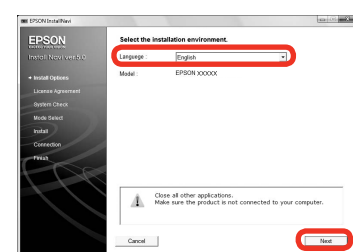

3.

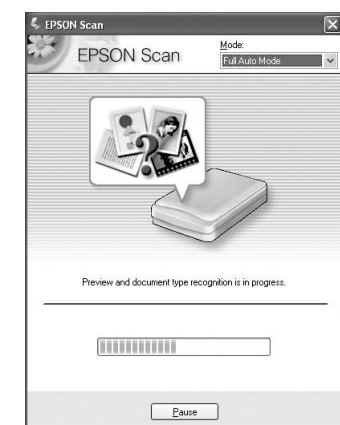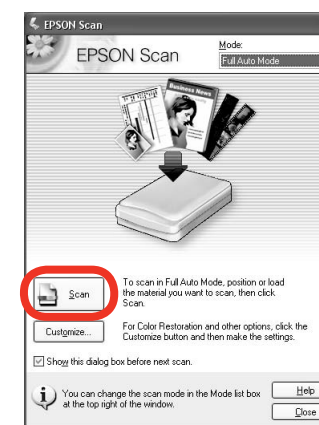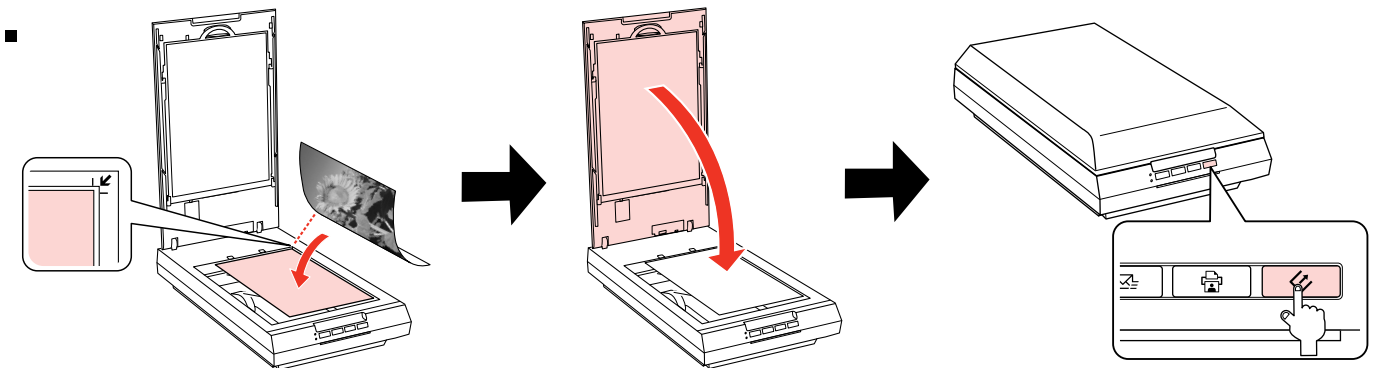

Getting More Information • Obtenir des informations complémentaires • Weitere Informationsquellen • Meer informatie • Ulteriori informazioni • Más información • Obter Mais Informações • Daha Fazla Bilgi Alma • Περισσότερες πληροφορίες

