

Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Fujifilm X-S20 + 16-50mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Fujifilm X-S20 + XF 16-80mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Fujifilm X-S20 + XC15-45mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere

FUJ!FILM

DIGITAL CAMERA



FF220002

Owner's Manual



Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the camera. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:

https://fujifilm-dsc.com/en/manual/



The website can be accessed not only from your computer but also from smartphones and tablets. It also contains information on the software license.





For information on firmware updates, visit: https://fujifilm-x.com/support/download/firmware/cameras/

Chapter Index

Menu List	iv
1 Before You Begin	1
2 First Steps	31
3 Basic Photography and Playback	47
4 Movie Recording and Playback	55
5 Taking Photographs	67
6 The Shooting Menus	127
7 Playback and the Playback Menu	219
8 Network/USB Features and Settings	245
9 The Setup Menus	269
10 Shortcuts	307
11 Peripherals and Optional Accessories	329
12 Technical Notes	349

iii



Menu List

Camera menu options are listed below.

Shooting Menus

Adjust settings when shooting photos or movies.



See page 127 for details.

Photo Menus



Name of the still literal state of the photography and movie shooting menus. Changes to these items in either menu also apply to the item in the remaining menu.

I.Q.	IMAGE QUALITY SETTING	
	IMAGE SIZE	128
	IMAGE QUALITY	129
	RAW RECORDING	130
1/2	SELECT JPEG/HEIF	131
1/4	FILM SIMULATION	132
	MONOCHROMATIC COLOR	134
	GRAIN EFFECT	134
	COLOR CHROME EFFECT	135
	COLOR CHROME FX BLUE	135
	WHITE BALANCE	136
	DYNAMIC RANGE	140
2⁄4	D RANGE PRIORITY	140
Z /4	TONE CURVE	141
	COLOR	141
	SHARPNESS	141
	HIGH ISO NR	142

IMAGE QUALITY SETTING	
CLARITY	142
LONG EXPOSURE NR	142
LENS MODULATION OPTIMIZER	143
COLOR SPACE	143
PIXEL MAPPING	143
■ EDIT/SAVE CUSTOM SETTING	144
AUTO UPDATE CUSTOM SETTING	144
CUSTOM MODE SETTING	144
MOUNT ADAPTOR SETTING	145
	CLARITY LONG EXPOSURE NR LENS MODULATION OPTIMIZER COLOR SPACE PIXEL MAPPING DEDIT/SAVE CUSTOM SETTING AUTO UPDATE CUSTOM SETTING CUSTOM MODE SETTING

AF MF	AF/MF SETTING		Ò	SHOOTING SETTING	
	FOCUS AREA	148		FILM SIMULATION BKT	171
1⁄₃	FOCUS MODE	148		FOCUS BKT SETTING	171
	AF MODE	148		PHOTOMETRY	171
	AF-C CUSTOM SETTINGS	149		SHUTTER TYPE	172
I/3	STORE AF MODE BY ORIENTATION	153	2 / ₃	INTERVAL TIMER SHOOTING	173
	AF POINT DISPLAY [1]	153		INTERVAL TIMER SHOOTING	174
	WRAP FOCUS POINT WRAP FOCUS P	153		EXPOSURE SMOOTHING	
	NUMBER OF FOCUS POINTS	154		INTERVAL PRIORITY MODE	175
	PRE-AF	154		FLICKER REDUCTION	175
	🗗 🕰 AF ILLUMINATOR	155		FLICKERLESS S.S. SETTING	176
	□ FACE/EYE DETECTION SETTING	156		IS MODE	176
2/	SUBJECT DETECTION SETTING	158	3 / ₃		177
2 /3	AF+MF	160			177
	MF ASSIST	161		☆ ☆ WIRELESS COMMUNICATION	177
	FOCUS CHECK	161	4	FLASH SETTING	
	INTERLOCK SPOT AE & FOCUS AREA	162		LASH FUNCTION SETTING	178
	INSTANT AF SETTING	162	R	ED EYE REMOVAL	178
	DEPTH-OF-FIELD SCALE	162	Т	TL-LOCK MODE	179
3 /3	RELEASE/FOCUS PRIORITY	163	LI	ED LIGHT SETTING	179
	▲ AF RANGE LIMITER	164	C	OMMANDER SETTING	180
	TOUCH SCREEN MODE	165	C	H SETTING	180
				MOVIE SETTING	
Ó	SHOOTING SETTING				181
		167	_	IGH SPEED REC	181
		167			181
		168	_		182
1 /3	· · =	169	-		
V3	SELF-TIMER	169	-		182
		170	_		182
		170	_	IIC/REMOTE RELEASE	185
	AE BKT SETTING	170	×	REC FRAME INDICATOR	185

Movie Menus



Name of the still literal was a second with both the still literal was a second with the second was a second was a second with the second was a second with the second was a second was a second with the second was a second with the second was a second was a second with the second was a second was a second with the second was a second was a second was a second with the second was a second with the second was a second was a second was a second with the second was a second was a second was a second with the second was a second w photography and movie shooting menus. Changes to these items in either menu also apply to the item in the remaining menu.

,22	MOVIE SETTING	
	MOVIE SETTING LIST	186
	SHOOTING MODE	186
	MOVIE MODE	187
1/4	BACKGROUND DEFOCUS MODE	188
V4	HIGH SPEED REC	189
	SELF-TIMER	190
	MEDIA REC SETTING	190
	HDMI OUTPUT SETTING	193
	FIX MOVIE CROP MAGNIFICATION	194
	F-Log/HLG RECORDING	195
	DATA LEVEL SETTING	196
2/4	₽ PHOTOMETRY	196
2/4	₽ FLICKERLESS S.S. SETTING	196
	№ IS MODE	197
	№ IS MODE BOOST	197
	₽ ISO	197
	ZEBRA SETTING	198
	ZEBRA LEVEL	198
	MOVIE OPTIMIZED CONTROL	199
3/4	REC FRAME INDICATOR	199
3/4	TALLY LIGHT	200
	COOLING FAN SETTING	201
	₽ EDIT/SAVE CUSTOM SETTING	201
	AUTO UPDATE CUSTOM SETTING	201
4/4	CUSTOM MODE SETTING	201
74	🗖 🕿 WIRELESS COMMUNICATION	201

I.Q.	IMAGE QUALITY SETTING	
	FILM SIMULATION	202
	MONOCHROMATIC COLOR	202
	₩ WHITE BALANCE	203
1/2	M DYNAMIC RANGE	203
V2	TONE CURVE	203
	COLOR	203
	SHARPNESS	204
	🗯 HIGH ISO NR	204
	INTERFRAME NR	204
2 /2	PERIPHERAL LIGHT CORRECTION	205
	MOUNT ADAPTOR SETTING	205

AF MF	AF/MF SETTING	
	₽ FOCUS AREA	206
	FOCUS MODE	206
	₽ AF MODE	206
	♣ AF-C CUSTOM SETTING	207
1/3		207
	▲ 🕰 AF ILLUMINATOR	208
	PRODUCT PRIORITY MODE	208
	♣ 🖳 FACE/EYE DETECTION SETTING	208
	SUBJECT DETECTION SETTING	209
	♣ AF+MF	209
	MF ASSIST	209
2/3	₽ FOCUS CHECK	210
	🗖 🕰 INSTANT AF SETTING	210
	➡ 🕿 DEPTH-OF-FIELD SCALE	210
	♣ AF RANGE LIMITER	210
	TOUCH SCREEN MODE	211
3 / ₃	FOCUS CHECK LOCK	213

	0	AUDIO SETTING	
ĺ		INTERNAL MIC LEVEL ADJUSTMENT	214
		EXTERNAL MIC LEVEL ADJUST- MENT	214
		MIC JACK SETTING	214
	1/2	MIC LEVEL LIMITER	215
		WIND FILTER	215
		LOW CUT FILTER	215
		HEADPHONES VOLUME	215
		MIC/REMOTE RELEASE	215
	2 /2	XLR MIC ADAPTER SETTING	216
	TC	TIME CODE SETTING	
	TI	ME CODE DISPLAY	217
	Sī	TART TIME SETTING	217
	C	DUNT UP SETTING	217
	D	ROP FRAME	218
	Н	DMI TIME CODE OUTPUT	218

The Playback Menu

Adjust playback settings.



See page 225 for details.

Þ	PLAY BACK MENU	
	RAW CONVERSION	225
	HEIF TO JPEG/TIFF CONVERSION	228
	ERASE	229
1/2	CROP	231
1/2	RESIZE	232
	PROTECT	233
	IMAGE ROTATE	234
	VOICE MEMO SETTING	235

Þ	PLAY BACK MENU	
	RATING	236
	TRANSFER IMAGE TO SMARTPHONE	237
	★ WIRELESS COMMUNICATION	239
2 /2	SLIDE SHOW	239
4 /2	PHOTOBOOK ASSIST	240
	PRINT ORDER (DPOF)	242
	instax PRINTER PRINT	243
	DISP ASPECT	244

Setup Menus

Adjust basic camera settings.



See page 269 for details.

۶	USER SETTING	
	FORMAT	270
	♠ AREA SETTING	271
	DATE/TIME	271
1/2	TIME DIFFERENCE	272
V2	■ 言語/LANG.	272
	MY MENU SETTING	273
	MY MENU SETTING	273
	SENSOR CLEANING	273
	BATTERY AGE	273
2/2	SOUND & FLASH	274
4/2	RESET	274
	REGULATORY	274
۶	SOUND SETTING	
	AF BEEP VOL.	275
	SELF-TIMER BEEP VOL.	275
	OPERATION VOL.	275
1/2	REC START/STOP VOLUME	276
V2	MS ELECTRONIC SHUTTER VOLUME	276
	MS ELECTRONIC SHUTTER SOUND	276
	ES ELECTRONIC SHUTTER VOLUME	277
	ES ELECTRONIC SHUTTER SOUND	277
2/2	PLAYBACK VOLUME	277
42	4ch AUDIO PLAYBACK	277

	۶	SCREEN SETTING	
		VIEW MODE SETTING	278
		EVF BRIGHTNESS	278
		EVF COLOR	278
	4/	EVF COLOR ADJUSTMENT	279
	1/4	LCD BRIGHTNESS	279
		LCD COLOR	279
		LCD COLOR ADJUSTMENT	279
		IMAGE DISP.	280
		AUTOROTATE DISPLAYS	280
		PREVIEW EXP./WB IN MANUAL MODE	281
		NATURAL LIVE VIEW	281
	3/	F-Log VIEW ASSIST	282
	2/4	ELECTRONIC LEVEL SETTING	282
		FRAMING GUIDELINE	282
		AUTOROTATE PB	283
		FOCUS SCALE UNITS	283
Ī		APERTURE UNIT FOR CINEMA LENS	283
		DISP. CUSTOM SETTING	283
		LARGE INDICATORS MODE(EVF)	284
3	3/4	LARGE INDICATORS MODE(LCD)	285
	3 /4	LARGE INDICATORS DISP. SETTING	286
		INFORMATION CONTRAST ADJ.	287
		LOCATION INFO	287
		Q MENU BACKGROUND	288
	4 ⁄ ₄	Republication of the property	288

۶	BUTTON/DIAL SETTING	
	FOCUS LEVER SETTING	289
	EDIT/SAVE QUICK MENU	290
	EDIT/SAVE QUICK MENU	290
	FUNCTION (Fn) SETTING	290
1 /3	POWER ZOOM LENS FUNCTION (Fn) SETTING	290
	COMMAND DIAL SETTING	291
	S.S OPERATION	291
	COMMAND DIAL DIRECTION	291
	SHUTTER AF	292
	SHUTTER AE	292
	SHOOT WITHOUT LENS	293
2 /3	SHOOT WITHOUT CARD	293
4 /3	LENS ZOOM/FOCUS SETTING	294
	AE/AF-LOCK MODE	296
	AWB-LOCK MODE	296
	▶ ISO BUTTON SETTING	297
3 ∕₃	TOUCH SCREEN SETTING	298
	LOCK	300

POWER MANAGEMENT	
AUTO POWER OFF	301
PERFORMANCE	301
EVF/LCD BOOST SETTING	302
AUTO POWER OFF TEMP.	302
SAVE DATA SETTING	
SAVE DATA SETTING FRAME NO.	303
FRAME NO.	303
FRAME NO. EDIT FILE NAME	303 304

The Network/USB Settings Menu

Adjust settings for network and USB connections.



See page 262 for details.

™ NETWORK/USB SETTING	
Bluetooth/SMARTPHONE SETTING	262
AIRPLANE MODE	265
NETWORK SETTING	265
instax PRINTER CONNECTION SETTING	265
CONNECTION MODE	266
USB POWER SUPPLY/ COMM SETTING	268
INFORMATION	268
RESET WIRELESS SETTING	268

Table of Contents Introduction......ji For the Latest Information.....ii Menu List.....iv Shooting Menus.....iv The Playback Menu.....viii Setup Menus.....ix The Network/USB Settings Menu....xi Supplied Accessoriesxxv About This Manual.....xxvi Symbols and Conventions.....xxvi Terminologyxxvi **Before You Begin** Parts of the Camera..... The Mode Dial..... The Focus Stick (Focus Lever)..... 💁 (Drive) Button..... The Command Dials......6 The Fn (Function) Dial......7 The Indicator Lamp......8 The LCD Monitor......9 Focusing the Viewfinder.....9 Camera Displays10 The LCD Monitor......12 Choosing a Display Mode......14 Adjusting Display Brightness......16 Display Rotation......16 The DISP/BACK Button......17 Customizing the Standard Display......19 Virtual Horizon21 Using the Menus22 The Menus......22 Selecting a Menu Tab......24

Touch Screen Mode	25
Shooting Touch Controls	25
Playback Touch Controls	30
Pirst Steps	31
Attaching the Strap	32
Attaching a Lens	33
Inserting the Battery and a Memory Card	34
Compatible Memory Cards	36
Charging the Battery	
Turning the Camera On and Off	41
Checking the Battery Level	42
Basic Setup	43
Choosing a Different Language	
Changing the Time and Date	45
Doc's Discount and Discount	4-
Basic Photography and Playback	47
Taking Photographs	
Viewing Pictures	
HDMI Output	
Deleting Pictures	53
A Marria Danaudiu u au d Dlauba da	
Movie Recording and Playback	55
Recording Movies	
Recording Movies	
Adjusting Movie Settings	
Viewing Movies	
Viewing Movies During Playback	
Viewing Movies During Vlag Recording	64

5 laking Photographs	6/
Choosing a Shooting Mode	68
AUTO (AUTO)	
Program AE (P)	71
Shutter-Priority AE (S)	73
Aperture-Priority AE (A)	75
Manual Exposure (M)	77
FILTER	81
Custom Modes	
The Command and Function Dials	90
Autofocus	
Focus Mode	
Autofocus Options (AF Mode)	
Focus-Point Selection	
Manual Focus	
Checking Focus	
Sensitivity	
AUTO	
Metering	
Exposure Compensation	
Focus/Exposure Lock	
Other Controls	
Bracketing	
ISO BKT	
WBJ WHITE BALANCE BKT	
BKT Bracketing	
Continuous Shooting (Burst Mode)	
HDR	
Panoramas	
Multiple Exposures	
Flash PhotographyFlash Settings	
1 10311 JEIII 193	123

6 The Shooting Menus	127
IMAGE QUALITY SETTING (Still Photography)	128
IMAGE SIZE	128
IMAGE QUALITY	129
RAW RECORDING	130
SELECT JPEG/HEIF	131
FILM SIMULATION	
MONOCHROMATIC COLOR	134
GRAIN EFFECT	
COLOR CHROME EFFECT	
COLOR CHROME FX BLUE	
WHITE BALANCE	
DYNAMIC RANGE	
D RANGE PRIORITY	
TONE CURVE	
COLOR	
SHARPNESS	
HIGH ISO NR	
CLARITY	
LONG EXPOSURE NRLENS MODULATION OPTIMIZER	
COLOR SPACE	
PIXEL MAPPING	
■ EDIT/SAVE CUSTOM SETTING	
AUTO UPDATE CUSTOM SETTING	
CUSTOM MODE SETTING	
MOUNT ADAPTOR SETTING	
AF/MF SETTING (Still Photography)	
FOCUS AREA	
FOCUS MODE	
AF MODE	148
AF-C CUSTOM SETTINGS	149
STORE AF MODE BY ORIENTATION	153
AF POINT DISPLAY 💶 🔲	153
★ WRAP FOCUS POINT	153

	NUMBER OF FOCUS POINTS	154
	PRE-AF	
	♣ AF ILLUMINATOR	
	♀ FACE/EYE DETECTION SETTING	156
	SUBJECT DETECTION SETTING	158
	AF+MF	160
	MF ASSIST	161
	FOCUS CHECK	
	INTERLOCK SPOT AE & FOCUS AREA	162
		162
	Ď₽ DEPTH-OF-FIELD SCALE	
	RELEASE/FOCUS PRIORITY	
	▲ AF RANGE LIMITER	164
	TOUCH SCREEN MODE	
SH	HOOTING SETTING (Still Photography)	
	AUTO MODE SETTING	167
	FILTER SETTING	
	SPORTS FINDER MODE	
	PRE-SHOT ES	
	SELF-TIMER	
	SAVE SELF-TIMER SETTING	
	SELF-TIMER LAMP	
	AE BKT SETTING	
	FILM SIMULATION BKT	
	FOCUS BKT SETTING	
	PHOTOMETRY	
	SHUTTER TYPE	
	INTERVAL TIMER SHOOTING	
	INTERVAL TIMER SHOOTING EXPOSURE SMOOTHING	
	INTERVAL PRIORITY MODE	
	FLICKER REDUCTION	
	FLICKERLESS S.S. SETTING	
	IS MODE	
	ISO	
	COOLING FAN SETTING	
	★ WIRELESS COMMUNICATION	177

FLASH SETTING (Still Photography)1	78
FLASH FUNCTION SETTING	178
RED EYE REMOVAL	178
TTL-LOCK MODE	179
LED LIGHT SETTING	179
COMMANDER SETTING	180
CH SETTING	180
MOVIE SETTING (Still Photography)1	81
MOVIE MODE	181
HIGH SPEED REC	181
MEDIA REC SETTING	181
IS MODE	
IS MODE BOOST	
AUDIO SETTING	
MIC/REMOTE RELEASE	185
REC FRAME INDICATOR	
MOVIE SETTING (Movie Recording)1	
MOVIE SETTING LIST	
SHOOTING MODE	186
MOVIE MODE	
BACKGROUND DEFOCUS MODE	
HIGH SPEED REC	
SELF-TIMER	
MEDIA REC SETTING	
HDMI OUTPUT SETTING	
FIX MOVIE CROP MAGNIFICATION	
F-Log/HLG RECORDING	
DATA LEVEL SETTING	
₽HOTOMETRY	196
₽ FLICKERLESS S.S. SETTING	
₽ IS MODE	
₽ ISO	
ZEBRA SETTING	
ZEBRA LEVEL	
MOVIE OPTIMIZED CONTROL	199

	REC FRAME INDICATOR	199
	FALLY LIGHT	
	₫ 🕰 COOLING FAN SETTING	201
	EDIT/SAVE CUSTOM SETTING	201
	AUTO UPDATE CUSTOM SETTING	201
	₫₽ CUSTOM MODE SETTING	201
	★ WIRELESS COMMUNICATION	201
MΑ	AGE QUALITY SETTING (Movie Recording)	202
	📽 FILM SIMULATION	202
	MONOCHROMATIC COLOR	202
•	♥ WHITE BALANCE	203
	P DYNAMIC RANGE	203
	TONE CURVE	203
	Strandschape Color	
	SHARPNESS	204
-	😭 HIGH ISO NR	
	NTERFRAME NR	
	PERIPHERAL LIGHT CORRECTION	
	🏝 🕰 MOUNT ADAPTOR SETTING	
	MF SETTING (Movie Recording)	
	₽ FOCUS AREA	
	₽ FOCUS MODE	
Þ	😭 AF MODE	206
	AF-C CUSTOM SETTING	
	Takan Procus Point	
	♣ 🕰 AF ILLUMINATOR	
	PRODUCT PRIORITY MODE	
	FACE/EYE DETECTION SETTING	
	SUBJECT DETECTION SETTING	
	≌ AF+MF	
	MF ASSIST	
-	POCUS CHECK	
_	₫ 🕰 INSTANT AF SETTING	
	₫ 🛱 DEPTH-OF-FIELD SCALE	
	♣ AF RANGE LIMITER	
	TOUCH SCREEN MODE	
	FOCUS CHECK LOCK	212

AUDIO SETTING (Movie Recording)	214
INTERNAL MIC LEVEL ADJUSTMENT	214
EXTERNAL MIC LEVEL ADJUSTMENT	214
MIC JACK SETTING	214
MIC LEVEL LIMITER	
WIND FILTER	215
LOW CUT FILTER	215
HEADPHONES VOLUME	215
MIC/REMOTE RELEASE	215
XLR MIC ADAPTER SETTING	216
TIME CODE SETTING (Movie Recording)	217
TIME CODE DISPLAY	217
START TIME SETTING	217
COUNT UP SETTING	217
DROP FRAME	218
HDMI TIME CODE OUTPUT	218
7 Playback and the Playback Menu	219
The Playback Display	220
The DISP/BACK Button	221
Viewing Pictures	223
Playback Zoom	
Multi-Frame Playback	224
The Playback Menu	
RAW CONVERSION	
HEIF TO JPEG/TIFF CONVERSION	
ERASE	229
CROP	
RESIZE	
PROTECT	
IMAGE ROTATE	
VOICE MEMO SETTING	
RATING	
TRANSFER IMAGE TO SMARTPHONE	
★ WIRELESS COMMUNICATION	239
SLIDE SHOW	
PHOTOBOOK ASSIST	240

PRINT ORDER (DPOF)	
instax PRINTER PRINT	243
DISP ASPECT	244
Retwork/USB Features and Settings	245
Overview	246
Supported Features	
Connecting to Smartphones (Bluetooth)	247
Installing Smartphone Apps	247
Connecting to a Smartphone	247
Using the Smartphone App	249
Connecting to Smartphones (USB)	250
Copying Pictures to a Smartphone	
Connecting the Camera and Computer	
Using the Camera as a Webcam	255
instax SHARE Printers	
Establishing a Connection	
Printing Pictures	257
Tethered Photography	
Tethered Photography via USB	
Tethered Photography via Wireless LAN	259
RAW Processing	
Saving and Loading Settings	
Saving and Loading Settings Using a Computer	
Network/USB Setting Menus	
Bluetooth/SMARTPHONE SETTING	
AIRPLANE MODE	
NETWORK SETTING	
instax PRINTER CONNECTION SETTING	
CONNECTION MODE	
USB POWER SUPPLY/COMM SETTING	
INFORMATION	
RESET WIRELESS SETTING	268

The Setup Menus	269
USER SETTING	270
FORMAT	270
AREA SETTING	271
DATE/TIME	271
TIME DIFFERENCE	272
€9 言語/LANG	
MY MENU SETTING	273
MY MENU SETTING	273
SENSOR CLEANING	273
BATTERY AGE	
SOUND & FLASH	274
RESET	274
REGULATORY	274
SOUND SETTING	275
AF BEEP VOL	
SELF-TIMER BEEP VOL.	275
OPERATION VOL	
REC START/STOP VOLUME	
MS ELECTRONIC SHUTTER VOLUME	
MS ELECTRONIC SHUTTER SOUND	
ES ELECTRONIC SHUTTER VOLUME	
ES ELECTRONIC SHUTTER SOUND	277
PLAYBACK VOLUME	
4ch AUDIO PLAYBACK	
SCREEN SETTING	
VIEW MODE SETTING	278
EVF BRIGHTNESS	
EVF COLOR	
EVF COLOR ADJUSTMENT	
LCD BRIGHTNESS	279
LCD COLOR	
LCD COLOR ADJUSTMENT	279

IMAGE DISP	280
AUTOROTATE DISPLAYS	280
PREVIEW EXP./WB IN MANUAL MODE	281
NATURAL LIVE VIEW	281
F-Log VIEW ASSIST	282
ELECTRONIC LEVEL SETTING	282
FRAMING GUIDELINE	282
AUTOROTATE PB	283
FOCUS SCALE UNITS	
APERTURE UNIT FOR CINEMA LENS	283
DISP. CUSTOM SETTING	283
LARGE INDICATORS MODE(EVF)	284
LARGE INDICATORS MODE(LCD)	285
LARGE INDICATORS DISP. SETTING	286
INFORMATION CONTRAST ADJ	287
LOCATION INFO	287
🗖 Q MENU BACKGROUND	288
🚅 Q MENU BACKGROUND	
BUTTON/DIAL SETTING	
FOCUS LEVER SETTING	
■ EDIT/SAVE QUICK MENU	
₽ EDIT/SAVE QUICK MENU	
FUNCTION (Fn) SETTING	
POWER ZOOM LENS FUNCTION (Fn) SETTING	
COMMAND DIAL SETTING	291
S.S OPERATION	
COMMAND DIAL DIRECTION	
SHUTTER AF	
SHUTTER AE	
SHOOT WITHOUT LENS	
SHOOT WITHOUT CARD	
LENS ZOOM/FOCUS SETTING	
AE/AF-LOCK MODE	296
AWB-LOCK MODE	
▶ ISO BUTTON SETTING	
TOUCH SCREEN SETTING	
LOCK	300

POWER MANAGEMENT	301
AUTO POWER OFF	301
PERFORMANCE	
EVF/LCD BOOST SETTING	
AUTO POWER OFF TEMP	302
SAVE DATA SETTING	303
FRAME NO	303
EDIT FILE NAME	304
SELECT FOLDER	304
COPYRIGHT INFO	305
GEOTAGGING	305
1 Shortcuts	307
Shortcut Options	308
MY MENU	
MY MENU SETTING	309
The Quick Menu	311
The Quick Menu Display	
Viewing and Changing Settings	313
Editing the Quick Menu	314
Function Controls	317
The Function Buttons	317
The Function Dial	
Touch-Function Gestures	
Lens Function Buttons	325
Peripherals and Optional Accessories	329
Lenses	330
Lens Parts	330
Lens Care	331
Removing Lens Caps	331
Attaching Lens Hoods	332
Lenses with Aperture Rings	333
Lenses with No Aperture Rings	334
Lenses with O.I.S. Switches	334
Manual Focus Lenses	335
Power Zoom Lenses	336

External Flash Units	
Using an External Flash	338
SYNC TERMINAL	339
SHOE MOUNT FLASH	340
COMMANDER(OPTICAL)	343
Cooling Fans	347
Attaching a Cooling Fan	347
Using the Fan	348
Technical Notes	349
Accessories from Fujifilm	
Software for Use with Your Camera	352
Smartphone Apps	
RAW FILE CONVERTER EX powered by SILKYPIX	
Capture One Express for Fujifilm	
Capture One for Fujifilm	
FUJIFILM Tether Shooting Plug-in (Exclusively for Lightro	
FUJIFILM X Acquire	
FUJIFILM X RAW STUDIO	354
For Your Safety	355
Product Care	
Cleaning the Image Sensor	367
Firmware Updates	368
Checking the Firmware Version	
Troubleshooting	369
Warning Messages and Displays	
Memory Card Capacity	387
Specifications	388

Supplied Accessories

The following are included with the camera:

- NP-W235 rechargeable battery
 - Tor reasons of safety, the battery is not charged at shipment. The camera will not function if the battery is not charged; be sure to charge the battery before use (\$\equiv 37)\$.
- AC-5VJ AC power adapter
- Plug adapter
- USB cable (approx. 0.6 m/2 ft.)
- Body cap (comes attached to camera)
- Shoulder strap
- Cooling fan connector cover (comes attached to camera)
- If you purchased a lens kit, check that a lens is included.
 - The plug adapter supplied varies with the country or region.
 - For information on compatible computer software, see "Software for Use with Your Camera" (352).

About This Manual

This manual contains instructions for your FUJIFILM X-S20 digital camera. Be sure you have read and understood its contents before proceeding.

Symbols and Conventions

The following symbols are used in this manual:



Information that should be read to prevent damage to the product.



Additional information that may be helpful when using the product.



Pages on which related information may be found.


Menus and other text in the displays are shown in **bold**. Illustrations are for explanatory purposes only; drawings may be simplified, while photographs are not necessarily taken with the model of camera described in this manual.

Terminology

The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as "memory cards". The electronic viewfinder may be referred to as the "EVF" and the LCD monitor as the "LCD". Smartphones and tablets are referred to as "smartphones".




Parts of the Camera

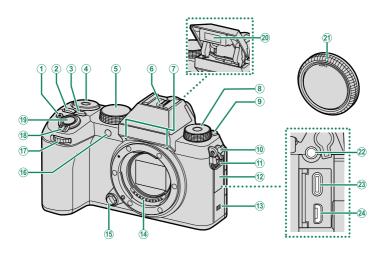

	⊙ (movie recording) button56	
2	Q (quick menu) button311	15 Lens release button33
3	ISO button317	15 AF-assist illuminator
4	Rear command dial6, 223	Self-timer lamp 169
(5)	Mode dial	Tally light200
6	Hot shoe338	17) Front command dial6
7	Microphone	18 ON/OFF switch41
(8)	Fn (function) dial7, 320	19 Shutter button49
9	\$ (flash pop-up) lever123	20 Flash 123
	Microphone/remote release connector	
	cover	22 Microphone/remote release connector
11)	<i>Strap clip</i> 32	(ø3.5 mm)61, 215
	Connector cover	23 USB connector (Type-C)
13	Speaker	24 HDMI Micro connector (Type D)51

① ② Use of an optional RR-100 remote release requires a third-party adapter to convert the three-pin, Ø2.5 mm connector to a three-pin, Ø3.5 mm connector.

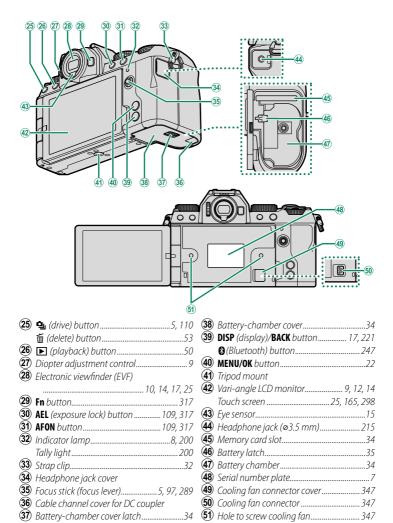

The Mode Dial

To select a shooting mode, rotate the dial until the icon for the desired mode aligns with the index.



Mode	Description	
① AUTO (AUTO)	The camera automatically optimizes settings to the scene. You also have the option of choosing the desired scene mode yourself.	48
② P (PROGRAM AE)	Aperture and shutter speed can be adjusted using program shift.	71
3 S (SHUTTER PRIORITY AE) A (APERTURE PRIORITY AE) M (MANUAL)	Select for full control over camera settings, including aperture (M and A) and/or shutter speed (M and S).	73 75 77
4 C1/C2/C3/C4 (CUSTOM 1/2/3/4)	Take pictures using previously-stored settings.	82
5 FILTER (FILTER)	Take photos with filter effects.	81
6 😫 (MOVIE)	Record movies.	57
7 Vlog (Video blog)	Record movies at settings suitable for vlogs (video blogs).	58

The Focus Stick (Focus Lever)

Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.



- To choose the role played by the focus stick, press and hold the center of the stick or use BUTTON/DIAL SETTING > FOCUS LEVER SETTING.
 - Use MAF/MF SETTING > → WRAP FOCUS POINT to choose whether focus-area selection is bounded by the borders of the display or "wraps around" from one edge of the display to another.

힠 (Drive) Button

Pressing the **(drive)** button displays drive-mode menu, where you can choose from the following the drive modes.



Mode		
	Single frame	68
ΗĐ	High-speed burst	115
رق	Low-speed burst	115
ISO	ISO BKT	111
WB	WHITE BALANCE BKT	111

	Mode	
BKT	Bracketing	112
HDR	HDR	116
	Panorama	118
	Multiple exposure	121

The Command Dials

The rear and front command dials are used for the operations below.

Rear command dial

Front command dial

Shooting ¹	AUTO	Choose an auto/scene mode.		
	P	Choose the desired combination of shutter speed and aperture (program shift).	Adjust exposure compensation.	
	S	Choose a shutter speed.		
	A	Adjust aperture. 2		
	M	Adjust aperture. 2	Choose a shutter speed.	
	FILTER	Program shift.	Adjust exposure compensation.	
Menus		Select menu tabs or page through menus.	Highlight menu items.	
Q Menu		Select items in the quick menu.	Adjust settings in the quick menu.	
Playback		View other pictures.	 Zoom in or out (full-frame playback). Zoom in or out (multi-frame playback). 	

¹ Can be changed using **BUTTON/DIAL SETTING** > **COMMAND DIAL SETTING**.

 
² Applies if the lens has no aperture ring or if an aperture ring with an "A" position is in the A position.



The rotation direction for the command dials can be selected using BUTTON/DIAL SETTING > COMMAND DIAL DIRECTION.

The Fn (Function) Dial

Rotate the function dial to quickly adjust settings for the assigned function during shooting.



At shipment, the dial is assigned the **DEFAULT** role. At this setting, the function performed by the dial varies with the position of the mode dial.


Mode	Description
FILTER (FILTER)	Filter selection
P (PROGRAM AE) S (SHUTTER PRIORITY AE) A (APERTURE PRIORITY AE) M (MANUAL) AUTO (AUTO) Vlog (Video blog) (MOVIE)	Film simulation
C1/C2/C3/C4 (CUSTOM)	



The role performed by the function dial can be chosen using **BUTTON/DIAL SETTING** > **FUNCTION (Fn) SETTING** (**□** 320).

The Serial Number Plate

 Do not remove the serial number plate, which provides the CMIIT ID, serial number, and other important information.



The Indicator Lamp

Camera status is shown by the indicator lamp.



Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Focus or slow shutter speed warning. Pictures can be taken.
Blinks green and orange	Camera on: Recording pictures, or picture displayed for confirmation after being taken with option other than OFF selected for SCREEN SET-UP > IMAGE DISP. (additional pictures can be taken). Camera off: Uploading pictures to a smartphone or tablet.*
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.

 
^{*} Displayed only if pictures are selected for upload.

 


- Warnings may also appear in the display.
 - The indicator lamp remains off while your eye is to the viewfinder.
 - The **MOVIE SETTING** > **TALLY LIGHT** option can be used to choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.
 - The indicator lamp blinks green whenever the displays are off during interval-timer photography.

The LCD Monitor

You can adjust the angle of the LCD monitor when framing shots, but be careful not to trap your fingers or other objects.






- Do not apply excessive force to the hinge when rotating the LCD monitor, as this could damage the hinge.
 - Be careful that the corners of the monitor do not contact the camera body, as this could leave marks.
- The LCD monitor also functions as a touch screen that can be used for:
 - Touch photography (226)
 - Focus area selection (DE 25)
 - Function selection (1 28)

 - Playback (30)

Focusing the Viewfinder

 If the indicators displayed in the viewfinder are blurred, put your eye to the viewfinder and rotate the diopter adjustment control until the display is in sharp focus.




Camera Displays

This section lists the indicators that may be displayed during shooting.

• For illustrative purposes, displays are shown with all indicators lit.

The Electronic Viewfinder

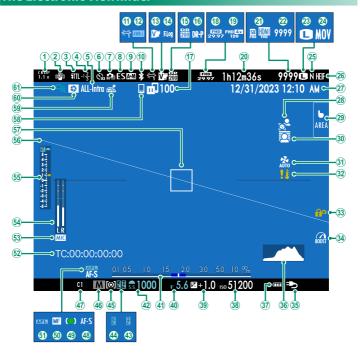


(1)	Crop factor19	4 (31)	Cooling fan settings	177, 347
2	IS mode ² 17		Temperature warning	
3	Flash (TTL) mode34	10 33	Control lock ³	300
4	Flash compensation34	10 34	Boost mode	302
(5)	Movie compression19	1 35	Power supply	39
6	Self-timer indicator169, 19	0 36	Histogram	20
7	Continuous mode17	5 37	Battery level	42
8	Shutter type17	72 38	Sensitivity	104
9	AF+MF indicator ² 16	io 39	Exposure compensation	107
10	Bluetooth ON/OFF	40	Aperture	71, 75, 77
11)	White balance 13	6 (41)	Distance indicator ²	101
12	AWB lock29	6 42	Shutter speed	71, 73, 77
13	Film simulation13	2 43	TTL lock	179, 320
14)	F-Log/HLG recording19	5 (44)	AE lock	109, 296
15)	Dynamic range14	10 (45)	Metering	106
16)	D-range priority14	10 (46)	Shooting mode	68
17)	Image transfer status247, 26	2 47	Custom modes	82
18)	Movie mode 56, 18	7 48	Focus mode ²	92
19	High-speed recording indicator18	19 (49)	Focus indicator ²	93
20	Recording time available/	50	Manual focus indicator ²	92, 100
	elapsed recording time	6 51	AF lock	109, 296
21)	Destination for movie recording19	0 52	Time code	217
22	Number of available frames 1	7 (53)	Microphone input channel	184, 216
23)	Image size12	18 54	Recording level ²	214
24)	File format	1 (55)	Exposure indicator	77, 107
25)	Image quality12	9 56	Virtual horizon	21
26)	HEIF format	1 (57)	Focus frame	96, 108
27)	Date and time43, 45, 27		Bluetooth host	247
28	Product priority mode20	18 59	Location data download status.	247, 305
	Touch screen mode25, 16		Depth-of-field preview	76, 101
(30)	Rackaround defocus mode 18	28 (61)	Focus check	102 161

¹ Shows "9999" if there is space for over 9999 frames.

² Not displayed when **ON** is selected for **☑ SCREEN SET-UP** > **LARGE INDICATORS MODE(EVF)**.

³ Displayed when controls have been locked by pressing and holding the **MENU/OK** button. Control lock can be ended by pressing and holding the **MENU/OK** button again.

The LCD Monitor

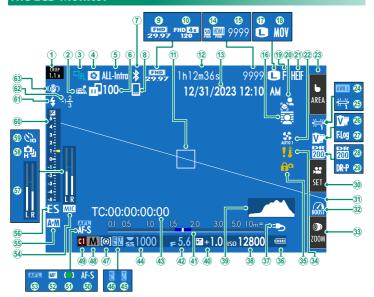

1	<i>Crop factor194</i>	32	Boost mode	302
2	Location data download status247, 305	33	Touch zoom ³	29
3	Focus check102, 161	34)	Temperature warning	35, 386
4	Depth-of-field preview76, 101	35	Control lock ⁴	300
(5)	Movie compression	36	Battery level	42
6	Image transfer status247, 262	37)	Power supply	39
(7)	Bluetooth ON/OFF	38)	Sensitivity	104
(8)	Bluetooth host247	39	Histogram	20
(9)	Movie mode 56, 187	40	Exposure compensation	107
(10)	High-speed recording indicator 189	(41)	Distance indicator ²	
(11)	Focus frame	42)	Aperture	71, 75, 77
(12)		(43)	•	
_	elapsed recording time56	(44)	Shutter speed	71, 73, 77
(13)	Date and time43, 45, 271	$\overline{}$	TTL lock	
(14)	Destination for movie recording190	\sim	AE lock	
(15)	Number of available frames 1	(47)	Metering	106
(16)	Background defocus mode188	(48)	Shooting mode	68
(17)	Image size128	\sim	Custom modes	
(18)	File format	(50)	Focus mode ²	92
(19)	Image quality129	(51)	Focus indicator ²	93
(20)	3 , ,	\sim	Manual focus indicator ²	
(21)	HEIF format131	(53)	AF lock	109, 296
(22)	Cooling fan settings177, 347	\sim	Microphone input channel	
(23)	3 3		AF+MF indicator ²	
(24)		\sim	Shutter type	
(25)	White balance 136	(57)	,,	
(26)	Film simulation132	(58)	~	
(27)	F-Log/HLG recording195	(59)	Self-timer indicator	
(28)	-	\simeq	Exposure indicator	
(29)	,	\sim	Flash (TTL) mode	
(30)	Movie optimized control ³ 27	\sim	Flash compensation	
\simeq	Virtual horizon 21	\sim	IS mode ²	176

- 3 Camera functions can also be accessed via touch controls.
- 4 Displayed when controls have been locked by pressing and holding the **MENU/OK** button. Control lock can be ended by pressing and holding the **MENU/OK** button again.

¹ Shows "9999" if there is space for over 9999 frames.

² Not displayed when **ON** is selected for **☑ SCREEN SET-UP** > **LARGE INDICATORS MODE(LCD)**.

Choosing a Display Mode

Use SCREEN SET-UP > VIEW MODE SETTING to choose from the following display modes. You can choose separate display modes for shooting and playback.



Nou can also assign **VIEW MODE SETTING** to a function button and use it to switch between the EVF and LCD monitor.

SHOOTING

Option	Description
SARISAN EYE SENSOR	Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.
LCD ONLY	LCD monitor on, viewfinder off.
EVF ONLY	Viewfinder on, LCD monitor off.
EVF ONLY + SERSOR	Putting your eye to the viewfinder turns the viewfinder on; taking it away turns the viewfinder off. The LCD monitor remains off.
EYE SENSOR + LCD IMAGE DISP.	Putting your eye to the viewfinder during shooting turns the viewfinder on, but the LCD monitor is used for the display of images once you remove your eye from the viewfinder after shooting. The options selected for SCREEN SET-UP > IMAGE DISP. apply to display in the LCD monitor.




So to Screen Set-UP > VIEW MODE SETTING in the setup menu and press the **Q** button to choose the view modes available.

PLAYBACK

Option	Description
SERISOR EYE SENSOR	Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.
LCD ONLY	LCD monitor on, viewfinder off.
EVF ONLY	Viewfinder on, LCD monitor off.

-The Eye Sensor-

 The eye sensor may respond to objects other than your eye or to light shining directly on the sensor.



Adjusting Display Brightness

The brightness and saturation of the viewfinder and LCD monitor can be adjusted using the items in the SCREEN SET-UP menu. Choose EVF BRIGHTNESS or EVF COLOR to adjust viewfinder brightness or saturation, LCD BRIGHTNESS or LCD COLOR to do the same for the LCD monitor.

Display Rotation

When **ON** is selected for **ESCREEN SET-UP** > **AUTOROTATE DISPLAYS**, the indicators in the viewfinder and LCD monitor automatically rotate to match camera orientation.

The DISP/BACK Button

The DISP/BACK button controls the display of indicators in the viewfinder and LCD monitor.



Noticators for the EVF and LCD must be selected separately. To choose the EVF display, place your eye to the viewfinder while using the DISP/BACK button.



Viewfinder

Standard indicators







Full screen

Standard indicators



No indicators





Info display (still photography only)

Customizing the Standard Display

To choose the items shown in the standard indicator display:

- Display standard indicators.
 Use the DISP/BACK button to display standard indicators.
- 2 Select DISP. CUSTOM SETTING. Select SCREEN SET-UP > DISP. CUSTOM SETTING in the setup menu.
- 3 Choose items.
 Highlight items and press MENU/OK to select or deselect.

gg				
ltem	Default	ltem	Default	
FRAMING GUIDELINE		DUAL IS MODE	✓	
FOCUS FRAME	✓	TOUCH SCREEN MODE	✓	
FOCUS INDICATOR	✓	WHITE BALANCE	✓	
AF DISTANCE INDICATOR		FILM SIMULATION	✓	
MF DISTANCE INDICATOR	✓	DYNAMIC RANGE	✓	
HISTOGRAM		BOOST MODE	✓	
LIVE VIEW HIGHLIGHT ALERT		COOLING FAN SETTING	✓	
SHOOTING MODE	✓	FRAMES REMAINING	✓	
APERTURE/S-SPEED/ISO	✓	IMAGE SIZE/QUALITY	✓	
INFORMATION BACKGROUND	✓	MOVIE MODE & REC. TIME	✓	
Expo. Comp. (Digit)		COMMUNICATION STATUS	✓	
Expo. Comp. (Scale)	✓	MIC LEVEL	✓	
FOCUS MODE	✓	GUIDANCE MESSAGE	✓	
PHOTOMETRY	✓	NO MEMORY CARD WARNING	✓	
SHUTTERTYPE	✓	DATE/TIME	✓	
FLASH	✓	BATTERY LEVEL	✓	
CONTINUOUS MODE	✓	FRAMING OUTLINE		

 
- 4 Press DISP/BACK to save changes.
- 5 Press DISP/BACK as needed to exit the menus and return to the shooting display.

-Framing Outline

Enable **FRAMING OUTLINE** to make the borders of the frame easier to see against dark backgrounds.

-Histograms -

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.



- **Optimal exposure**: Pixels are distributed in an even curve throughout the tone range.
- Overexposed: Pixels are clustered on the right side of the graph.
- **Underexposed**: Pixels are clustered on the left side of the graph.




To view separate RGB histograms and a display showing areas of the frame that will be overexposed at current settings superimposed on the view through the lens, press the function button to which **HISTOGRAM** is assigned (1290, 317).

- 1 Overexposed areas blink
- RGB histograms



Virtual Horizon

Check whether the camera is level. The display type can be chosen using SCREEN SET-UP > ELECTRONIC LEVEL SETTING. Use the virtual horizon to level the camera when mounting it on a tripod or the like.

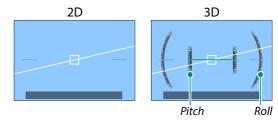

- OFF: The virtual horizon is not displayed.
- 2D: A white line shows the amount the camera is tilted left or right. The line turns green when the camera is level. The line may vanish if the camera is tilted forward or back.
- **3D**: The display shows whether the camera is tilted left or right and forward or back.



Using the Menus

To display the menus, press MENU/OK.



The Menus

Different menus are displayed during still photography, movie recording, and playback.

Still Photography (All Modes Except 📽 (Movie) and Vlog)

Pressing MENU/OK during still photography displays the photo menus.









In modes (1 through (4, photo menus will be displayed if STILL) is selected for the chosen bank using either **MIMAGE QUALITY** SETTING > → CUSTOM MODE SETTING in the photo menus or MOVIE SETTING >
☐
☐ CUSTOM MODE SETTING in the movie menus (## 82).

Movie Recording (😭 (Movie) and Vlog Modes)

Pressing MENU/OK in movie mode displays the movie menus.



 




In modes (1 through (4, photo menus will be displayed if # MOVIE is selected for the chosen bank using either IMAGE QUALITY SETTING > ⚠ # CUSTOM MODE SETTING in the photo menus or MOVIE SETTING > ⚠ # CUSTOM MODE SETTING in the movie menus (■ 82).

Playback

Pressing MENU/OK during playback displays the playback menu.







1

Selecting a Menu Tab

To navigate the menus:

1 Press MENU/OK to display the menus.





2 Press the focus stick (focus lever) left to highlight the tab for the current menu.



- 3 Press the focus stick up or down to highlight the tab containing the desired item.
- 4 Press the focus stick right to place the cursor in the menu.
- Use the front command dial to select menu tabs or page through menus and the rear command dial to highlight menu items.



Touch Screen Mode

The LCD monitor also functions as a touch screen.


Shooting Touch Controls

To enable touch controls, select ON for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > **★** TOUCH SCREEN SETTING.



EVF

The LCD monitor can be used to select the focus area while pictures are being framed in the electronic viewfinder (EVF). Use BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > EVE TOUCH SCREEN AREA SETTINGS to choose the area of the monitor employed for touch controls.

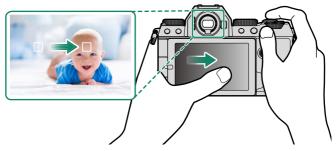

- FACE/EYE DETECTION SETTING, you can choose the face used for focus
 - You can choose the type of subject on which the camera preferential-Iv focuses when **SUBJECT DETECTION ON** is selected for **MAF/MF SETTING > SUBJECT DETECTION SETTING**

LCD Monitor

The operation performed can be selected by tapping the touch screen mode indicator in the display. Touch controls can be used for the following operations:



Mode	Description
TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.
AF AF OFF	 If SINGLE AF is selected for focus mode, the camera will focus when you tap your subject in the display. Focus locks at the current distance until you tap the AF OFF icon. If CONTINUOUS AF is selected for focus mode, the camera will initiate focus when you tap your subject in the display. The camera will continue to adjust focus for changes in the distance to the subject until you tap the AF OFF icon. When MANUAL FOCUS is selected for focus mode, you can tap the display to focus on the selected subject using autofocus.
AREA AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.
OFF OFF	Touch screen mode off.



- The behavior of the touch screen varies with the AF mode.
 - Different touch controls are used during focus zoom (🗐 166).



- To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > TOUCH SCREEN SETTING.
 - Touch control settings can be adjusted using AF/MF SETTING > **TOUCH SCREEN MODE**. For information on the touch controls available during movie recording, see "Movie Recording (TOUCH SCREEN MODE; = 211)".

MOVIE OPTIMIZED CONTROL

Selecting ON for

☐ MOVIE SETTING > MOVIE OPTIMIZED CONTROL → b or tapping the movie-optimized mode button in the shooting display optimizes the command dials and touch controls for movie recording. This can be used to prevent camera sounds being recorded with movie footage.



Movie-optimized mode button

- SHUTTER SPEED
- APFRTURF
- EXPOSURE COMPENSATION
- ISO
- INTERNAL MIC LEVEL ADJUSTMENT/EXTERNAL MIC LEVEL ADJUSTMENT
- WIND FILTER
- HEADPHONES VOLUME
- FILM SIMULATION
- WHITE BALANCE
- IS MODE
- S MODE BOOST
- ♣ FOCUS MODE

 


- Enabling movie-optimized controls disables the aperture ring.
 - When movie-optimized control is enabled, the movie-optimized mode button can be used to change shooting settings or disable movie-optimized control.

Touch Function

Functions can be assigned to the following flick gestures in much the same way as function buttons (322):

• Flick up: T-Fn1 Flick left: T-Fn2 • Flick right: T-Fn3 • Flick down: T-Fn4





 In some cases, touch-function flick gestures display a menu; tap to select the desired option.




• Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **☑ BUTTON/DIAL SETTING** > TOUCH SCREEN SETTING > IIII TOUCH FUNCTION.

Touch Zoom

If the lens supports touch zoom, you can zoom in and out by touching the display. Tap the touch zoom button in the display to enable touch zoom.

Touch zoom is controlled using the buttons in the display.

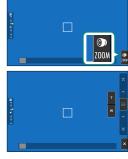

Button	Description
Touch zoom	Enable touch zoom.
▼ Zoom in	Zoom in or out. Touch and hold to zoom in or out at a constant
w Zoom out	speed.
Rocker switch	The camera zooms in or out at a speed corresponding to the position of the rocker switch.
× Disable	Disable touch zoom.



Playback Touch Controls

When ON is selected for ■ BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > ■ TOUCH SCREEN SETTING, touch controls can be used for the following playback operations:

• **Swipe**: Swipe a finger across the display to view other images.



 Pinch-out: Place two fingers on the display and spread them apart to zoom in.



• **Pinch-in**: Place two fingers on the display and slide them together to zoom out.



Pictures can be zoomed out until the entire image is visible but no further

 Double-tap: Tap the display twice to zoom in on the focus point.



• **Drag**: View other areas of the image during playback zoom.









Attaching the Strap

Attach the strap.

Attach the strap to the two strap clips as shown below.

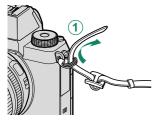

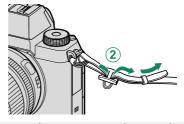



To avoid dropping the camera, be sure the strap is correctly secured.



Attaching a Lens

The camera can be used with lenses for the FUJIFILM X-mount.

Remove the body cap from the camera and the rear cap from the lens. Place the lens on mount, keeping the marks on the lens and camera aligned (1), and then rotate the lens until it clicks into place ((2)).



 
- When attaching lenses, ensure that dust or other foreign matter does not enter the camera
 - Be careful not to touch the camera's internal parts.
 - Rotate the lens until it clicks securely into place.
 - Do not press the lens release button while attaching the lens.

-Removing Lenses-

To remove the lens, turn the camera off, then press the lens release button (1) and rotate the lens as shown (2).



To prevent dust accumulating on the lens or inside the camera, replace the lens caps and camera body cap when the lens is not attached



Lenses and Other Optional Accessories

The camera can be used with lenses and accessories for the FUJIFILM X-mount.

- ① Observe the following precautions when attaching or removing (exchanging) lenses.
 - Check that the lenses are free of dust and other foreign matter.
 - Do not change lenses in direct sunlight or under another bright light source. Light focused into the interior of the camera could cause it to malfunction.
 - Attach the lens caps before exchanging lenses.
 - See the manual provided with the lens for information on use.

Inserting the Battery and a Memory Card

Insert the battery and memory card as described below.


- 1 Open the battery-chamber cover. Slide the battery-chamber cover latch as shown and open the battery-chamber cover.
 - Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could damage image files or memory cards.
 - Do not use excessive force when handling the battery-chamber cover.





2 Insert the battery as shown.

- Insert the battery in the orientation shown. Do not use force or attempt to insert the battery upside down or backwards.
 - Confirm that the battery is securely latched.

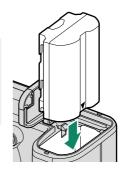

3 Insert the memory card.



4 Close the battery-chamber cover and slide the battery-chamber latch closed.



If the cover does not close, check that the battery is in the correct orientation. Do not attempt to force the cover shut.



Removing the Battery

Before removing the battery, turn the camera off and open the battery-chamber cover.

 
To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.



The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

Removing Memory Cards


To remove the memory card, press it in and release it slowly. The card can then be removed by hand.




- Press the center of the card.
 - Suddenly removing your finger from the card could cause the card to fall from the slot. Remove your finger slowly.
 - If the camera displays a ! icon, the memory card may be hot to the touch. Wait for the card to cool before removing it.

Compatible Memory Cards

 - The camera can be used with SD, SDHC, and SDXC memory cards. Both the UHS-I and UHS-II bus interfaces are supported.
- UHS-II cards are recommended for high-speed burst photography.
- The types of memory cards suitable for movie recording vary with the settings selected (\$\equiv\$ 62).
- A list of supported memory cards is available on the Fujifilm website. For details, visit:
 - https://fujifilm-x.com/support/compatibility/cameras/.



 • Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.



- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- miniSD or microSD adapters that are larger or smaller than memory cards may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels or other objects to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of memory card.
- Formatting a memory card in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals. Renaming the files on the camera can cause problems during playback.

Charging the Battery

 
For reasons of safety, the battery is not charged at shipment. The camera will not function if the battery is not charged; be sure to charge the battery before use. Before charging the battery, turn the camera off.

- An NP-W235 rechargeable battery is supplied with the camera.
 - Charging takes about 180 minutes.
 - 1 Attach the plug adapter to the AC power adapter.

Attach the plug adapter as shown, making sure that it is fully inserted and clicks into place on the AC power adapter terminals.




- The supplied plug adapter is for use exclusively with the AC-5VJ AC power adapter. Do not use it with other devices.
 - The shape of the plug adapter varies with the country of sale.



Charge the battery.

Connect the camera to the supplied AC power adapter using the supplied USB cable. Then plug the AC power adapter into an indoor power outlet.

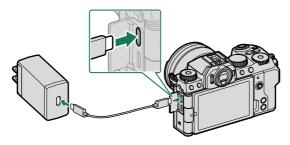

- Connect the cable to the camera's USB connector (Type-C).
 - Be sure the connectors are fully inserted.

Charge StatusThe indicator lamp shows battery charge status as follows:

Indicator lamp	Battery status
On	Battery charging
Off	Charging complete
Blinks	Charging error



- The supplied AC power adapter is compatible with power supplies of 100 to 240 V (a plug adapter may be needed for overseas use).
 - Do not use the AC power adapter or USB cable with other devices, as this could cause malfunction.
 - Do not affix labels or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera
 - Do not short the battery terminals. The battery could overheat.
 - Read the cautions in "The Battery and Power Supply".
 - Use only genuine Fujifilm rechargeable batteries designated for use in this camera. Failure to observe this precaution could result in product malfunction
 - Do not remove the labels from the battery or attempt to split or peel the outer casing.
 - The battery gradually loses its charge when not in use. Charge the battery one or two days before use.
 - If the battery fails to hold a charge, it has reached the end of its charging life and must be replaced.
 - Unplug the AC power adapter from the power outlet when it is not in use
 - If the battery is left for long periods without charging, you may find that its quality degrades or that it no longer holds a charge. Charge the battery regularly.
 - Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
 - Note that charging times increase at low or high temperatures.
 - Selecting ON for Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF in the network/USB settings menu increases the drain on the battery.




 If the camera is turned on during charging, charging will end and the USB connection will instead be used to power the camera. The battery level will begin to gradually decline (268).



• The camera will display a "power supply" icon when powered via USB.

Charging via Computer-

The camera can be charged via USB. USB charging is available with computers with a manufacturer-approved operating system and USB interface.

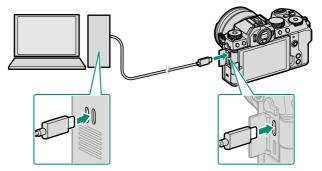

Leave the computer on during charging.



- The battery will not charge while the camera is on.
 - Connect the supplied USB cable.
 - Connect the camera directly to the computer; do not use a USB hub or keyboard.
 - Charging stops if the computer enters sleep mode. To resume charging, activate the computer and disconnect and reconnect the USB cable
 - Charging may not be supported depending on the model of computer, computer settings, and the computer's current state.
 - The battery takes about 600 minutes to charge with a charging input of 5 V/500 mA.



Turning the Camera On and Off

Use the ON/OFF switch to turn the camera on and off.

Slide the switch to **ON** to turn the camera on, or to **OFF** to turn the camera off.



- Fingerprints and other marks on the lens or viewfinder can affect pictures or the view through the viewfinder. Keep the lens and viewfinder clean
- Pressing the D button during shooting starts playback.
 - Press the shutter button halfway to return to shooting mode.
 - The camera will turn off automatically if no operations are performed for the length of time selected for **POWER MANAGEMENT** > AUTO POWER OFF. To reactivate the camera after it has turned off automatically, press the shutter button halfway or turn the ON/OFF switch to **OFF** and then back to **ON**



Checking the Battery Level

After turning the camera on, check the battery level in the display.

Battery level is shown as follows:



Indicator	Description
411111	Battery partially discharged.
4	Battery about 80% full.
	Battery about 60% full.
	Battery about 40% full.
	Battery about 20% full.
(red)	Low battery. Charge as soon as possible.
(blinks red)	Battery exhausted. Turn camera off and recharge battery.

Basic Setup

When you turn the camera on for the first time, you can choose a language and set the camera clock. Follow the steps below when turning the camera on for the first time.

 
1 Turn the camera on.

A language-selection dialog will be displayed.



2 Choose a language.

Highlight a language and press MENU/OK.



3 Choose a time zone.

When prompted, choose a time zone and turn daylight savings time on or off using the focus stick (focus lever), then highlight SET and press MENU/OK.





To skip this step, press DISP/BACK.

4 Set the clock.



5 View information on the smartphone app.

- The camera will display a QR code you can scan with your smartphone to open a website where you can download the smartphone app.
- Press MENU/OK to proceed to the next step.



Use the smartphone app to download pictures from the camera or control the camera remotely (≥ 247).

6 Choose an AUTO POWER OFF TEMP.

- The selected setting determines the temperature at which the camera will turn off automatically.
- Press MENU/OK to exit to the shooting display.



7 Format the memory card (**270**).

- Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device.
- If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.

Choosing a Different Language

To change the language:

- 1 Display language options.
 Select ☑ USER SETTING > 壓 言語/LANG..
- 2 Choose a language. Highlight the desired option and press MENU/OK.

Changing the Time and Date

To set the camera clock:

- 1 Display DATE/TIME options.
 Select ☑ USER SETTING > DATE/TIME.
- 2 Set the clock.
 Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. Press MENU/OK to set the clock.

MEMO

Basic Photography and Playback

Taking Photographs

This section explains basic photography.

1 Rotate the mode dial to **AUTO** to view the **w** shooting display.



The camera will display the type of scene and focus target detected.



- In (AUTO) mode, the camera continuously adjusts focus and searches for eyes, increasing the drain on the battery; in addition, the sound of the camera focusing may be audible.
- 2 Ready the camera.

Hold the camera steady with both hands—shaking or unsteady hands can blur your shots.



To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and AF-assist illuminator.



3 Frame the picture.

Lenses with Zoom Rings-

Use the zoom ring to frame the picture in the display. Rotate the ring left to zoom out, right to zoom in.



4 Focus.

Press the shutter button halfway to focus.



Focus frame

- If the camera is able to focus, the focus frame and focus indicator will glow green.
- If the camera is unable to focus, the focus frame will turn red, !AF will be displayed, and the focus indicator will blink white.



- ▶ If the subject is poorly lit, the AF-assist illuminator may light to assist the focus operation.
 - Focus and exposure will lock when the shutter button is pressed halfway. Focus and exposure remain locked while the button is kept in this position (AF/AE lock).
 - The camera will focus on subjects at any distance in the macro and standard focus ranges for the lens.

5 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



Viewing Pictures

Pictures can be viewed in the viewfinder or LCD monitor.

To view pictures full frame, press **▶**.



Additional pictures can be viewed by pressing the focus stick (focus lever) left or right or rotating the front command dial. Press the focus stick or rotate the dial right to view pictures in the order recorded, left to view pictures in reverse order. Keep the focus stick pressed to scroll rapidly to the desired frame.



Pictures taken using other cameras are marked with a ## ("gift image") icon to warn that they may not display correctly and that playback zoom may not be available.


HDMI Output

Camera shooting and playback displays can be output to HDMI devices.

Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- 2 Connect the cable as shown below.

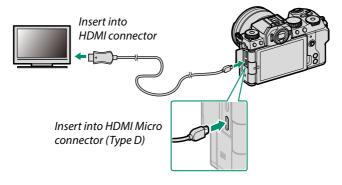

- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- 4 Turn the camera on. The contents of the camera display will be shown on the HDMI device. The camera display turns off in playback mode (52).
- Making sure the connectors are fully inserted.
 - Use an HDMI cable no more than 1.5 m (4.9 ft.) long.

Shooting

Display live view or movie footage on a TV or save it to an external recorder that supports HDMI input.

Playback

To start playback, press the camera **b** button. The camera monitor turns off and pictures and movies are output to the HDMI device. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

 


Some televisions may briefly display a black screen when movie playback begins.

Deleting Pictures

Use the 面 button to delete pictures.

- Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.
 - 1 With a picture displayed full frame, press the fi button and select FRAME.



- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press MENU/OK to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.
- Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete (<a> 233).
 - Pictures can also be deleted from the menus using the PLAY BACK MENU > ERASE option (■ 229).

MEMO

Movie Recording and Playback



Recording Movies

Record movies with sound.

Recording Movies

Movies can be recorded by pressing the • (movie recording) button or rotating the mode dial to **#** (movie) or **Vlog**.

 
The (Movie Recording) Button

Use the • (movie recording) button to quickly and easily record movies while in still photography mode.




The camera automatically selects **CONTINUOUS AF** for focus mode.

1 Press • to start recording.



- A recording indicator (

 ) is displayed while recording is in progress.
- The borders of the display turn red during movie recording, green during high-speed recording.
- The time remaining is shown by a Recording time countdown display, while another display counts up to show the recording time.




Time remaining

Press • again to end recording. Recording ends automatically when the maximum length is reached or the memory card is full.


🗯 (Movie) Mode

For more control over camera settings, rotate the mode dial to movie) and record movies using the shutter button.

 1 Rotate the mode dial to 🕰 (movie).



 - 2 Press the shutter button to start recording.
 - A recording indicator (
) is displayed while recording is in progress.
 - The borders of the display turn red during movie recording, green during high-speed recording.
 - The time remaining is shown by a Recording time countdown display, while another display counts up to show the recording time.




Time remaining

3 Press the shutter button again to end recording. Recording ends automatically when the maximum length is reached or the memory card is full.

Vlog

When the mode dial is rotated to **Vlog**, the shutter button can be used to record movies at settings appropriate for vlogs (video blogs). Settings can be adjusted using touch controls.

 - Settings for **Vlog** mode are stored separately from those used when movies are recorded in ♣ mode or via the ⊙ (movie) button.
 - 1 Rotate the mode dial to Vlog.



Vlog will appear in the display.



To view shooting settings, tap the Viog button.


- Tap 5 to return to the shooting display.
- To exit to full-frame playback, tap **□** (**□** 64).





- Selecting ON for BACKGROUND DEFOCUS MODE fixes aperture at the widest value for the lens.
 - To maintain focus on an object in the foreground, as for example when filming a product review, select **ON** for **PRODUCT** PRIORITY MODE.

- **2** Press the shutter button to start recording.
 - A recording indicator (●) is displayed while recording is in progress.
 - The borders of the display turn red during movie recording, green during high-speed recording.
 - The time remaining is shown by a Recording time countdown display, while another display counts up to show the recording time.

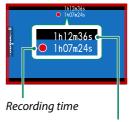

Time remaining

3 Press the shutter button again to end recording. Recording ends automatically when the maximum length is reached or the memory card is full.

- Sound is recorded via the built-in microphone or an optional external microphone. Do not cover the microphone during recording.
 - Note that the microphone may pick up lens noise and other sounds made by the camera during recording.
 - Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.



- To maximize recording time:
 - keep the camera out of direct sunlight as much as possible, and
 - turn the camera off any time it is not in use.
 - The indicator lamp lights while recording is in progress (the **MOVIE SETTING** > **TALLY LIGHT** option can be used to choose the lamp indicator or AF-assist—that lights during movie recording and whether the lamp blinks or remains steady). During recording, you can change exposure compensation by up to ± 2 EV and adjust zoom using the zoom ring on the lens (if available).
 - To prevent the borders of the display changing color during movie recording, select OFF for
 ☐ MOVIE SETTING >
 ☐ REC FRAME INDICATOR
 - While recording is in progress, you can:
 - Adjust sensitivity
 - Refocus using any of the following methods:
 - Press the shutter button halfway
 - Press a function button to which **AF-ON** is assigned
 - Use touch screen controls
 - Display a histogram or artificial horizon by pressing the button to which HISTOGRAM or ELECTRONIC LEVEL SWITCH has been assigned
 - Recording may be unavailable at some settings, while in other cases settings may not apply during recording.
 - To choose the focus area for movie recording, select AF/MF **SETTING** > **FOCUS AREA** and use the focus stick (focus lever) and rear command dial (148).

-Temperature Warnings-

The camera automatically turns off to protect itself when its temperature or the temperature of the battery rises. If a temperature warning is displayed, image noise may increase. Turn the camera off and wait for it to cool before turning it on again.

-Using an External Microphone

Sound can be recorded with external microphones that connect using jacks 3.5 mm in diameter; microphones that require plug-in power cannot be used. See the microphone manual for details.



XLR Microphone Adapters

The camera can be used with TEAC TASCAM CA-XLR2d-F XLR microphone adapters. For more information, visit the TASCAM website.

https://tascam.jp/int/product/ca-xlr2d/#CA-XLR2d_Website

Adjusting Movie Settings

Movie settings can be adjusted from the movie menus or using the **MOVIE SETTING** item in the photo menus (**1** 22).

- Use the MOVIE SETTING item in the photo menus to quickly adjust settings when recording movies via the • (movie recording) button (181).
- The movie menus contain options for use when recording movies via the shutter button in # (movie) mode (# 186).
- Settings such as frame rate and frame size can be adjusted using MOVIE MODE.
- Use MEDIA REC SETTING for such tasks as choosing the file type, bit rate, and destination.
- MODE in the movie menus. Regardless of the option selected, the camera will automatically switch to CONTINUOUS AF when FACE DETECTION ON or SUBJECT DETECTION ON is chosen or SUBJECT DETECTION SETTING. Note, however, that choosing MANUAL FOCUS when FACE DETECTION ON or SUBJECT **DETECTION ON** is selected disables face and subject detection.
- Changes made using the **MOVIE SETTING** item in the photo menus also apply to the movie menus. Changes made in one set of menus automatically apply in the other.
 - The type of memory card supported varies with the option select for **™** MOVIE SETTING > MEDIA REC SETTING.
 - Movies with a bit rate of 360 Mbps can be recorded to cards with a Video Speed Class of V60 or better.
 - Movies with a bit rate of 100 or 200 Mbps can be recorded to cards with a UHS Speed Class of 3 or better.

Depth of Field

Choose low f-numbers to soften background details. Aperture can be adjusted when APERTURE PRIORITY AE or MANUAL is selected for MOVIE SETTING > SHOOTING MODE.

Viewing Movies

 
View movies on the camera.

Viewing Movies During Playback

Any movie selected after the ▶ button is pressed to begin playback will be indicated by a 🔁 icon. Press the focus stick (focus lever) down to start movie playback.



The following operations can be performed while a movie is displayed:



Focus stick (focus lever)	Full-frame playback	Playback in progress (►)	Playback paused (
Up	View photo information	End pl	ayback
Down	Start playback	Pause playback	Start/resume playback
Left/right	View other pictures	Adjust speed	Single frame rewind/ advance

Progress is shown in the display during playback.



Do not cover the speaker during playback.





- Press MENU/OK to pause playback and display volume controls. Press the focus stick (focus lever) up or down to adjust the volume; press MENU/OK again to resume playback. Volume can also be adjusted using SOUND SET-UP > PLAYBACK VOLUME.
 - To view movies on a television connected via HDMI instead of in the camera monitor, press the **b** button.

Playback Speed-

Press the focus stick (focus lever) left or right to adjust playback speed during playback. Speed is shown by the number of arrows (\triangleright or \triangleleft).




Viewing Movies During Vlog Recording

When the mode dial is rotated to Vlog, you can view your most recent shot by pressing the Viog button and then tapping **i**n the display.



- Tap the display to begin playback.
- To delete the current shot, tap .
- If you have viewed other items since your last shot, the most-recently viewed item will be displayed.

Playback controls can be displayed by tapping **a** during playback.

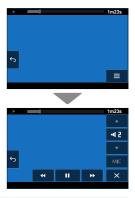

Control		Function	
Pause Pa		Pause playback. Tap again to resume.	
» / «	Rewind/advance	Rewind or advance the movie. When playback paused, you can tap these buttons to rewind or advance a frame at a time.	
_ / T	Volume	Adjust playback volume.	
MIC	Channel selection	Adjust audio settings for use when viewing 4ch movies.	
×	Close	Hide movie playback controls.	
6	Back	End playback and return to the shooting display.	

Volume adjustment and channel selection are not available while playback is in progress. Pause playback to use these controls.

MEMO

Taking Photographs



 
Choosing a Shooting Mode

Choose a shooting mode according to the scene or type of subject.


AUTO (AUTO)

The camera automatically detects the subject and adjusts focus and chooses a scene mode appropriately.

Rotate the mode dial to **AUTO** to view the shooting display for **MID** mode.



The camera automatically displays icons showing the selected scene and the type of subject selected for focus.

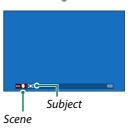

lcon		Description
Scene	LANDSCAPE LANDSCAPE	 PORTRAIT BACKLIT PORTRAIT MOVING OBJECT PORTRAIT&MOTION BACKLIT PORTRAIT&MOTION TION
Subject	• 🛂 💽 : PORTRAIT • 😸 : ANIMAL • 📡 : BIRD • 😝 : AUTOMOBILE	• \$: MOTORCYCLE&BIKE • > : AIRPLANE • ⊋ : TRAIN

- The mode selected may vary with shooting conditions. The camera may also choose different modes for the same scene depending on shooting conditions. If the mode chosen by the camera does not match the actual scene, you can choose a different mode.
 - The additional processing time required in some scene modes may increase save times.
- No icon will be displayed if the camera is unable to determine the type of scene.

Choosing a Scene Mode

After rotating the mode dial to AUTO, you can rotate the front command dial to choose from the scene modes listed below, optimizing camera settings for the selected subject type.

Description
The camera automatically optimizes settings to suit the
scene and subject.
Choose for portraits.
Processes portraits to give the subject a smooth, natu-
ral-looking complexion.
Choose for daylight shots of buildings and landscapes.
Choose when photographing moving subjects.
Choose for poorly lit twilight or night scenes.
Choose this mode for slow shutter speeds when shoot-
ing at night.
Slow shutter speeds are used to capture the expanding
burst of light from a firework.
Choose this mode to record the vivid colors in sunrises
and sunsets.
Choose for crisp, clear shots that capture the brightness
of scenes dominated by shining white snow.
Choose for crisp, clear shots that capture the brightness
of sunlit beaches.
Reduces the blue cast typically associated with under-
water lighting.
Capture indoor background lighting under low-light
conditions.
Effective for taking more vivid shots of flowers.
Take clear pictures of text or drawings in print.

 


Nou can also choose the scene mode via ☐ SHOOTING SETTING > **AUTO MODE SETTING.**

Program AE (P)

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.

Rotate the mode dial to P.




P will appear in the display.



If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "- - -".

-Program Shift-

If desired, you can rotate the front command dial to select other combinations of shutter speed and aperture without altering exposure (program shift).

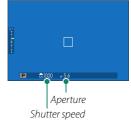

- Program shift is not available in any of the following circumstances:
 - When TTL is selected for FLASH SETTING > FLASH FUNCTION SETTING

 - In movie mode
- To cancel program shift, turn the camera off.

Shutter-Priority AE (S)

Choose a shutter speed and let the camera adjust aperture for optimal exposure.

1 Rotate the mode dial to S.



S will appear in the display.



2 Rotate the front command dial to choose a shutter speed.



- The roles played by the front command dial can be changed using BUTTON/DIAL SETTING > COMMAND DIAL SETTING.
- If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.
 - If the subject is outside the metering range of the camera, the aperture display will show "- -".



- Shutter speed can be adjusted while the AFON button is pressed or the shutter button is pressed halfway.
 - At shutter speeds slower than 1 second, a count-down timer will be displayed while the exposure is in progress.
 - To reduce "noise" (mottling) in long time-exposures, select **ON** for **MAGE QUALITY SETTING > LONG EXPOSURE NR.** Note that this may increase the time needed to record images after shooting.
 - The picture will go out of focus if the camera is moved during a long time-exposure; use of a tripod is recommended.

Time (T)

Shutter speeds of 1 s or slower are referred to as "long time-exposures". Use of a tripod is recommended to prevent the camera moving during the exposure.



A count-down timer will be displayed while the exposure is in progress.

Aperture-Priority AE (A)

Choose an aperture and let the camera adjust shutter speed for optimal exposure.

1 Rotate the mode dial to A.



A will appear in the display.



- **?** Rotate the lens aperture ring to choose an aperture.

 - If the lens is not equipped with an aperture ring or if the aperture ring is in the A position, aperture can be adjusted by rotating the front command dial.
 - The roles played by the front command dial can be changed using **BUTTON/DIAL SETTING** > **COMMAND DIAL SETTING**.
- If the correct exposure cannot be achieved at the selected aperture, shutter speed will be displayed in red.
 - If the subject is outside the metering range of the camera, the shutter speed display will show "---".
- Nerture can be adjusted even while the shutter button is pressed halfway.

-Previewing Depth of Field-

 
When **PREVIEW DEPTH OF FIELD** is assigned to a function button, pressing the button displays a sicon and stops aperture down to the selected setting, allowing depth of field to be previewed in the display (\$\square\$ 317).



Manual Exposure (M)

In manual mode, the user controls both shutter speed and aperture. Shots can be deliberately overexposed (brighter) or underexposed (darker), opening the door for a variety of individual creative expression. The amount the picture would be under- or over-exposed at current settings is shown by the exposure indicator; adjust shutter speed and aperture until the desired exposure is reached.


1 Rotate the mode dial to M.



M will appear in the display.



 2 Rotate the rear command dial to choose a shutter speed and the lens aperture ring to choose an aperture.




- The manual exposure display includes an exposure indicator that shows the amount the picture would be under- or over-exposed at current settings.
 - If the lens is not equipped with an aperture ring or if the aperture ring is in the A position, aperture can be adjusted by rotating the front command dial.
 - The roles played by the front and rear command dials can be changed using BUTTON/DIAL SETTING > COMMAND DIAL SETTING.

Bulb (B)

Select a shutter speed of BULB for long time-exposures in which you open and close the shutter manually. Use of a tripod is recommended to prevent the camera moving during the exposure.

 
1 Set shutter speed to **BULB**.



- 2 Press the shutter button all the way down.
 - The shutter will remain open for up to 60 minutes while the shutter button is pressed.
 - The display shows the time elapsed since the exposure started.
 - Releasing the shutter button closes the shutter, ending the exposure. Processing will begin, and the camera will display the processing time remaining.
- Bulb photography is not available in drive modes other than STILL IMAGE or multiple exposure or when the electronic shutter is selected for ■ SHOOTING SETTING > SHUTTER TYPE.
- To reduce "noise" (mottling) in long time-exposures, select **ON** for **IMAGE QUALITY SETTING** > **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

-Using a Remote Release

 A remote release can be used for long time-exposures. When using an optional RR-100 remote release or an electronic release from third-party suppliers, connect it to the camera's microphone/remote release connector via a third-party ø2.5 mm to 3.5 mm adapter.



A confirmation dialog will be displayed if a remote release is connected while the mode dial is rotated to # (movie) or **Vlog**: press **MENU/OK** and select **PREMOTE** for MIC/REMOTE RELEASE.



Exposure Preview

To preview exposure in the LCD monitor, select PREVIEW EXP./WB for SCREEN SET-UP > PREVIEW EXP./WB IN MANUAL MODE.





Select an option other than **PREVIEW EXP./WB** when using the flash or on other occasions on which exposure may change when the picture is taken

FILTER

Take photos with filter effects.

1 Rotate the mode dial to FILTER.



2 Choose a filter via SHOOTING SETTING > FILTER SETTING.

Filter	Description	
₩ TOY CAMERA	Choose for a retro toy camera effect.	
MINIATURE	The tops and bottoms of pictures are blurred for a diorama effect.	
🙉 POP COLOR	Create high-contrast images with saturated colors.	
₩ HIGH-KEY	Create bright, low-contrast images.	
LOW-KEY	Create uniformly dark tones with few areas of emphasized highlights.	
MIC DYNAMIC TONE	Dynamic tone expression is used for a fantasy effect.	
ଲେ SOFT FOCUS	Create a look that is evenly soft throughout the whole image.	
A PARTIAL COLOR (RED)		
A PARTIAL COLOR (ORANGE)		
A PARTIAL COLOR (YELLOW)	Areas of the image that are the selected color are recorded in that color. All other areas of the image are recorded in black-and-white.	
A PARTIAL COLOR (GREEN)		
A PARTIAL COLOR (BLUE)	inlege die recorded in black and milite.	
A PARTIAL COLOR (PURPLE)		

① Depending on the subject and camera settings, images may in some cases be grainy or vary in brightness or hue.

Custom Modes

Rotate the mode dial to any of modes C1 (CUSTOM 1) through C4 (CUSTOM 4) to take pictures using previously-saved shooting menu settings.



Mode Selection: Still Photography or Movie

Choose whether the selected custom settings bank (C1 through C4) is for still photography (STILL) or movie recording (MOVIE).

- 1 Navigate to IMAGE QUALITY SETTING in the photo menus, highlight CUSTOM MODE SETTING, and press MENU/OK.
 - Nou can also use MOVIE SETTING > ♣ CUSTOM MODE SETTING in the movie menus.
- 2 Highlight the desired custom settings bank and press MENU/OK.



3 Highlight ▲ STILL or 🏖 MOVIE and press MENU/OK.

The selected custom settings bank can now be used for still photography or movie recording.



Saving Current Settings

Save current settings in a custom settings bank.

- Navigate to MIMAGE QUALITY SETTING in the photo menus, highlight EDIT/SAVE CUSTOM SETTING, and press MENU/OK.
 - To save settings for movie recording, navigate to

 MOVIE

 SETTING in the movie menus and select

 EDIT/SAVE CUSTOM

 SETTING
- 2 Highlight a destination bank for current settings (C1 through C4) and press MENU/OK.



3 Highlight SAVE CURRENT SETTINGS and press MENU/OK.



4 Highlight OK and press MENU/OK. Current settings will be saved to the selected bank.



Editing Custom Settings

Edit existing custom settings banks.

- Navigate to MIMAGE QUALITY SETTING in the photo menus, highlight EDIT/SAVE CUSTOM SETTING, and press MENU/OK.
 - To save settings for movie recording, navigate to

 MOVIE SETTING in the movie menus and select

 EDIT/SAVE CUSTOM SETTING.
- 2 Highlight the desired custom settings bank and press MENU/OK.



3 Highlight EDIT/CHECK and press MENU/OK.



4 The camera will display a list of shooting menu items; highlight an item you wish to edit and press MENU/OK. Adjust the selected item as desired.



5 Press MENU/OK to save the changes and return to the shooting menu list.

Adjust additional items as desired.

- If DISABLE is selected for In IMAGE QUALITY SETTING > AUTO UPDATE CUSTOM SETTING in the photo menu or for IN IMAGE SETTING > IN AUTO UPDATE CUSTOM SETTING in the movie menu, red dots will appear next to the edited items but the changes will not be saved automatically.
 - \bullet To save the changes for selected items, highlight the items in the list and press Q.
 - To save changes for all items, return to Step 3 and select SAVE THE CHANGES. To cancel all changes and restore the previous settings, select RESET THE CHANGES.
 - If you copy an item marked by a red dot, the item will be copied with the changes intact.

Copying Custom Settings

Copy custom settings from one bank to another, overwriting the settings in the destination bank. If the source bank has been renamed, the name will also be copied to the destination bank.

 
- Navigate to MIMAGE QUALITY SETTING in the photo menus, highlight ■ EDIT/SAVE CUSTOM SETTING, and press MENU/OK.
 - To copy settings for a movie custom settings bank, navigate to
 ☐ MOVIE SETTING in the movie menus and select ☐ EDIT/
 SAVE CUSTOM SETTING.
- 2 Highlight the source bank and press MENU/OK.



3 Highlight COPY and press MENU/OK.



4 Highlight the destination bank (C1 through C4) and press MENU/OK.
A confirmation dialog will be displayed.



- Any changes to custom settings in the destination bank will be overwritten.
- 5 Highlight OK and press MENU/OK. The selected settings will be copied to the destination bank, overwriting any existing settings.



Resetting Custom Settings

Reset selected custom settings banks.

- 1 Select IMAGE QUALITY SETTING > → EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
 - This assumes that you wish to reset settings for still photography. To reset movie settings, navigate to

 MOVIE SETTING in the movie menus and select

 EDIT/SAVE CUSTOM SETTING.
- **2** Highlight the desired custom settings bank and press **MENU/OK**.



3 Highlight RESET CUSTOM SETTING and press MENU/OK.
A confirmation dialog will be displayed.



4 Highlight **OK** and press **MENU/OK**.
The selected bank will be reset.



Renaming Custom Settings Banks

Rename selected custom settings banks.

- 1 Select IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
 - This assumes that you wish to rename settings for still photography. To rename movie settings, navigate to ☐ MOVIE SETTING in the movie menus and select ☐ EDIT/SAVE CUSTOM SETTING.
- 2 Highlight the desired custom settings bank and press MENU/OK.



3 Highlight EDIT CUSTOM NAME and press MENU/OK.



4 Enter a new name for the custom settings bank and select SET.

The selected bank will be renamed.

The Command and Function Dials

The roles of the command and Function dials vary with the mode.

	Front command dial	Rear command dial	Fn (function) dial
AUTO (AUTO)	Auto/ Scene Position		
P (PROGRAM AE)	Program shift		
S (SHUTTER PRIORITY AE)	Shutter speed	Exposure compensation	Film simulation
A (APERTURE PRIORITY AE)	Aperture		
M (MANUAL)		Shutter speed	
FILTER (FILTER)	Program shift	Exposure compensation	Filter selection
Vlog			
C1/C2/C3/C4 (CUSTOM)	Varies with exposure mode		
(MOVIE)			

 


The role performed by the function dial can be chosen using **☑** BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING (■ 320).

Autofocus

Take pictures using autofocus.

- 1 Select single or continuous AF for MAF/MF SETTING > FOCUS MODE in the shooting menu (■ 92).
- 2 Use MAF/MF SETTING > AF MODE to choose an AF mode (1994).
- 3 Select **MAF/MF SETTING** > **FOCUS AREA** and choose the position and size of the focus frame (■ 96).



4 Take pictures.


Focus Mode

Choose how the camera focuses.

- 1 Press MENU/OK to display the menus.
- 2 Select AF/MF SETTING > FOCUS MODE in the shooting menu.
- **3** Choose from the following options:

Mode	Description
	Focus manually using the lens focus ring. Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus (E 100).
	Focus is continually adjusted to reflect changes in the distance to the subject while the shutter button is pressed halfway. Use for subjects that are in motion.
	Focus locks while the shutter button is pressed halfway. Choose for stationary subjects.

- Regardless of the option selected, manual focus will be used when the lens is in manual focus mode.
 - If ON is selected for AF/MF SETTING > PRE-AF, focus will be adjusted continuously in modes III and III even when the shutter button is not pressed.

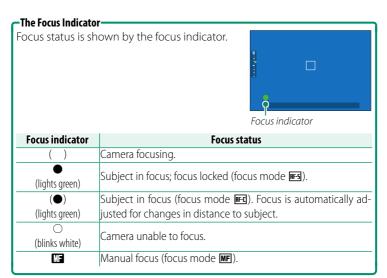

Autofocus Options (AF Mode)

Focus can be adapted to a variety of subjects by changing the combination of settings selected for focus and AF modes.

- 1 Press MENU/OK and go to the shooting menu.
- 2 Select M AF/MF SETTING > AF MODE.
- 3 Choose an AF mode.

How the camera focuses depends on the focus mode.

Focus Mode F (SINGLE AF)

Option	Description	Sample image
SINGLE POINT	Camera focuses on subject in selected focus point. Use for pinpoint focus on selected subject.	
ZONE	Camera focuses on subject in selected focus zone. Focus zones include multiple focus points, making it easier to focus on subjects in motion.	
[] WIDE	Camera focuses automatically on high-contrast subjects; display shows areas in focus.	
ALL ALL	Rotate the rear command dial in t play (1995) 97, 98) to cycle through order: SINGLE POINT, 20 ZO	AF modes in the following

Focus Mode **FC** (CONTINUOUS AF)

Option	Description	Sample image
SINGLE POINT	Focus tracks subject at selected focus point. Use for subjects moving toward or away from camera.	
ZONE	Camera tracks focus in selected fo- cus zone. Use for subjects that are moving fairly predictably.	
[] Tracking	Focus tracks subjects moving through wide area of frame.	
ALL ALL	Rotate the rear command dial in to play (🗎 97, 98) to cycle through order: • SINGLE POINT, 🗓 ZO	AF modes in the following

Focus-Point Selection

 
Choose a focus point for autofocus.

Viewing the Focus-Point Display

- 1 Press MENU/OK and go to the shooting menu.
- 2 Select MAF/MF SETTING > FOCUS AREA to view the focus-point display.
- **3** Use the focus stick (focus lever) and rear command dial to choose a focus area.
- The focus point can also be selected using touch controls (🗒 25).

Selecting a Focus Point

Use the focus stick (focus lever) to choose the focus point and the rear command dial to choose the size of the focus frame. The procedure varies with the option selected for AF mode.



	Focus stick		Rear command dial	DISP/BACK button
AF mode				
	Tilt	Press	Rotate	
[-]			Choose from 6	
		Select	frame sizes	
[1]	Select focus	highlighted focus	Choose from 3	Select center
	point	point	frame sizes	focus point
		point	_	




- Manual focus-point selection is not available when □ WIDE/ **TRACKING** is selected in focus mode FS.
 - If ALL is selected for AF mode, you can rotate the rear command dial in the focus-point selection display to cycle through AF modes in the following order: • SINGLE POINT (6 frame sizes), • ZONE (3 frame sizes), and either **WIDE** (focus mode **MS**) or **TRACKING** (focus mode FG).

The Focus-Point Display

The focus-point display varies with the option selected for AF mode.



 \bigcirc Focus frames are shown by small squares (\square), focus zones by the large squares.

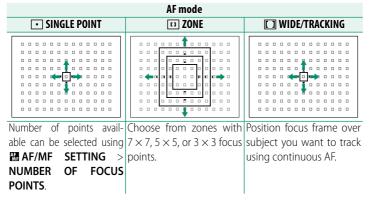

-Autofocus-

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below.

- Very shiny subjects such as mirrors or car bodies.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background.
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

Checking Focus-

To zoom in on the current focus area for precise focus, press the center of the focus stick (focus lever). Use the focus stick (focus lever) to choose another focus area. Press again to cancel zoom







Normal display

Focus zoom



- ◆ In focus mode 🖭, zoom can be adjusted by rotating the rear command dial.
 - In focus mode Fig. select SINGLE POINT for AF MODE.
 - Focus zoom is not available in focus mode

 or when

 AF/MF **SETTING** > **PRE-AF** is on.
 - Use **BUTTON/DIAL SETTING** > **FOCUS LEVER SETTING** to change the function performed by the center of the focus stick (focus lever). **BUTTON/DIAL SETTING** > **FUNCTION (Fn) SETTING** can also be used to assign focus zoom to other controls (12 317).

Manual Focus

Adjust focus manually.

1 Select MANUAL FOCUS for MAF/MF SETTING > FOCUS MODE.



2 Focus manually using the lens focus ring. Rotate the ring left to reduce the focus distance, right to increase.



- 3 Take pictures.
- Use BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING to reverse the direction of rotation of the focus ring.
 - Regardless of the option selected, manual focus will be used when the lens is in manual focus mode.

 
Checking Focus

A variety of options are available for checking focus in manual focus mode.

The Manual Focus Indicator

The white line indicates the distance to the subject in the focus area (in meters or feet according to the option selected for SCREEN SET-UP > FOCUS SCALE UNITS in the setup menu), the blue bar the depth of field, or in other words the distance in front of and behind the subject that appears to be in focus.







- If both **AF DISTANCE INDICATOR** and **MF DISTANCE INDICATOR** are selected in the SCREEN SET-UP > DISP. CUSTOM SETTING list, the manual focus indicator can also be viewed using the depthof-field indicator in the standard display. Use the DISP/BACK button to display standard indicators.
 - Use the M AF/MF SETTING > → M DEPTH-OF-FIELD SCALE option to choose how depth of field is displayed. Choose FILM FORMAT BASIS to help you make practical assessments of depth of field for pictures that will be viewed as prints and the like, PIXEL BASIS to help you assess depth of field for pictures that will be viewed at high resolutions on computers or other electronic displays.

Focus Zoom

If ON is selected for AF/MF SETTING > FOCUS CHECK, the camera will automatically zoom in on the selected focus area when the focus ring is rotated. Press the center of the focus stick (focus lever) to exit zoom.



- You can also initiate focus zoom by pressing the center of the focus stick (focus lever).
 - Use the focus stick (focus lever) to choose another focus area.
 - Zoom can be adjusted by rotating the rear command dial. Zoom cannot, however, be adjusted when DIGITAL SPLIT IMAGE or DIGITAL **MICROPRISM** is selected for MF assist.

 
MF Assist

 
Use MAF/MF SETTING > MF ASSIST (■ 161) in the photo menus or MAF/MF SETTING > MAF ASSIST (■ 209) in the movie menus to choose a focus check option.



The focus check options for movies differ from those for still photography.

- **DIGITAL SPLIT IMAGE**: Displays a split image in the center of the frame. Frame the subject in the split-image area and rotate the focus ring until the four parts of the split image are correctly aligned.
- DIGITAL MICROPRISM: A grid pattern that emphasizes blur is displayed when the subject is out of focus, disappearing to be replaced by a sharp image when the subject is in focus.





• FOCUS PEAK HIGHLIGHT: Highlights high-contrast outlines. Rotate the focus ring until the subject is highlighted.



• FOCUS METER: A meter is displayed below the focus point indicating whether focus is in front of or behind the subject. The needle swings left when focus is in front of the subject and right when it is behind the subject. Adjust focus so the needle is pointing straight up.



The display reverses when OCCW is selected for BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING > FOCUS RING ROTATE.



Sensitivity

Adjust the camera's sensitivity to light.

To view sensitivity settings, press the ISO button.



Option	Description
AUTO1 AUTO2 AUTO3	Sensitivity is automatically adjusted in response to shooting conditions according to combination of standard and maximum sensitivity and minimum shutter speed chosen for SHOOTING SETTING > ISO . Choose from AUTO1 , AUTO2 , and AUTO3 (🗎 105).
160-12800	Adjust sensitivity manually. Selected value is shown in display.
L (80/100/125) H (25600/51200)	Choose for special situations. Note that mottling may appear in pictures taken at H , while L reduces dynamic range.



- Sensitivity is not reset when the camera is turned off.
 - Pressing the **ISO** button while the mode dial is rotated to **2** (movie) or **Vlog** displays the **MOVIE SETTING** > **ISO** item in the movie menus.

Adjusting Sensitivity-

High values can be used to reduce blur when lighting is poor, while lower values allow slower shutter speeds or wider apertures in bright light; note, however, that mottling may appear in pictures taken at high sensitivities.

AUTO

Choose the base sensitivity, maximum sensitivity, and minimum shutter speed for AUTO1, AUTO2, and AUTO3.

ltem	Options	Default		
iteiii	Options	AUT01	AUTO2	AUT03
DEFAULT SENSITIVITY	160-12800		160	
MAX. SENSITIVITY	400-12800	800	3200	12800
MIN. SHUTTER SPEED	1/4000-30 SEC, AUTO	AUTO		

The camera automatically chooses a sensitivity between the default and maximum values; sensitivity is only raised above the default value if the shutter speed required for optimal exposure would be slower than the value selected for MIN. SHUTTER SPEED.



- If the value selected for **DEFAULT SENSITIVITY** is higher than that selected for MAX. SENSITIVITY, DEFAULT SENSITIVITY will be set to the value selected for MAX. SENSITIVITY
 - The camera may select shutter speeds slower than MIN. SHUTTER **SPEED** if pictures would still be underexposed at the value selected for MAX. SENSITIVITY
 - If AUTO is selected for MIN. SHUTTER SPEED, the camera will choose the minimum shutter speed automatically. The minimum shutter speed is not affected by the option selected for image stabilization.



Choose how the camera meters exposure.

■ SHOOTING SETTING > **PHOTOMETRY** offers a choice of the following metering options:

The selected option will only take effect if OFF is selected for
☐ FACE/ EYE DETECTION SETTING and SUBJECT DETECTION SETTING in the **爾 AF/MF SETTING** menu.

Mode	Description
[©] Multi	The camera instantly determines exposure based on an analysis of composition, color, and brightness distribution. Recommended in most situations.
[⊛] Center- Weighted	The camera meters the entire frame but assigns the greatest weight to the area at the center.
[•] SPOT	The camera meters lighting conditions in an area equivalent to 2% of the frame. Recommended with backlit subjects and in other cases in which the background is much brighter or darker than the main subject.
[] AVERAGE	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.



 
To meter the subject in the selected focus area, choose **ON** for **AF**/ MF SETTING > INTERLOCK SPOT AE & FOCUS AREA (162).



Exposure Compensation

Adjust exposure.

Rotate the rear command dial to adjust exposure.





- The command dial used in this role can be chosen using
 BUTTON/ **DIAL SETTING > COMMAND DIAL SETTING.**
 - If assigned **DEFAULT (** WHEN SET TO M), the function dial can be used to adjust exposure when auto ISO sensitivity control is enabled in manual mode. Exposure can also be adjusted by rotating the front or rear command dial after pressing a control to which WHEN SET TO M (ON/OFF SWITCH) is assigned.



 
- The amount of compensation available varies with the shooting mode.
 - Exposure compensation can be previewed in the shooting display, although the display may not accurately reflect its effects if:
 - the exposure compensation amount exceeds ±3 EV,
 - R200 200% or R400 400% is selected for DYNAMIC RANGE, or
 - STRONG or WEAK is selected for D RANGE PRIORITY.

Exposure compensation can still be previewed in the viewfinder or LCD monitor by pressing the shutter button halfway. In movie mode, the display may not accurately reflect the effects of exposure compensation during F-log recording or when 200 200% or 400% is selected for **P** DYNAMIC RANGE. An accurate preview can be obtained by selecting mode M and adjusting exposure directly.

Focus/Exposure Lock

Focus and exposure lock when the shutter button is pressed halfway.

1 Position the subject in the focus frame and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).



- 2 Press the button all the way down.
- Focus and exposure lock via the shutter button is only available when **ON** is selected for **BUTTON/DIAL SETTING** > **SHUTTER AF**, **SHUTTER AE**.

Other Controls

Focus and exposure can also be locked using the AEL and AFON buttons. At default settings, you can use the **AEL** button to lock exposure without locking focus. If the AFON button is assigned AF LOCK ONLY, it can similarly be used to lock focus without locking exposure.



AEL button (exposure lock)

- While the assigned control is pressed, pressing the shutter button halfway will not end the lock.
- If AE&AF ON/OFF SWITCH is selected for BUTTON/DIAL SETTING > AE/ AF-LOCK MODE, the lock can only be ended by pressing the control a second time.



AFON button



- The focus lever (focus stick) can be used to reposition the focus point during exposure lock.
 - The **AEL** and **AFON** buttons can be assigned other roles using **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING.** Exposure and focus lock can also be assigned to other buttons (\$\square\$ 317).



Bracketing

Automatically vary settings over a series of pictures.

1 Press the **(drive)** button to display drive-mode menu.



2 Press the focus stick (focus lever) up or down to highlight one of the following:

Option		Option	
SO ISO BKT	111	BKT Bracketing	112
WBJ WHITE BALANCE BKT	111		

- **3** Press the focus stick left or right to highlight the desired bracketing settings.
- 4 Press MENU/OK to select.
- 5 Take pictures.

ISO BKT

Select a bracketing amount $(\pm \frac{1}{2}, \pm \frac{2}{3}, \text{ or } \pm 1)$ in the drive mode display. Each time the shutter is released, the camera will take a picture at the current sensitivity and process it to create two additional copies, one with sensitivity raised and the other with sensitivity lowered by the selected amount.

WBI WHITE BALANCE BKT

Select a bracketing amount $(\pm 1, \pm 2, \text{ or } \pm 3)$ in the drive mode display. Each time the shutter is released, the camera takes one shot and processes it to create three copies: one at the current white balanced setting, one with fine-tuning increased by the selected amount, and another with fine-tuning decreased by the selected amount.

BKT Bracketing

🔁 AE BKT

Use SHOOTING SETTING > AE BKT SETTING to choose the bracketing amount, bracketing order, and number of shots. The camera will take the specified number of shots in sequence: one using the metered value for exposure and the others over- or under-exposed by multiples of the selected bracketing amount.



Regardless of the bracketing amount, exposure will not exceed the limits of the exposure metering system.

FILM SIMULATION BKT

Each time the shutter is released, the camera takes one shot and processes it to create copies with different film simulation settings, chosen using **■ SHOOTING SETTING** > **FILM SIMULATION BKT**.

DRI DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots with different dynamic ranges: 100% for the first, 200% for the second, and 400% for the third.



While dynamic range bracketing is in effect, sensitivity will be restricted to a minimum of ISO 640; the sensitivity previously in effect is restored when bracketing ends.

FOCUS BKT

Each time the shutter button is pressed, the camera takes a series of photos, varying focus with each shot. The SHOOTING SETTING > FOCUS BKT SETTING item offers a choice of MANUAL and AUTO bracketing.



- Do not adjust zoom during shooting.
 - Use of a tripod is recommended.


MANUAL

In MANUAL mode, you choose the following.

Option	Description
FRAMES	Choose the number of shots.
STEP	Choose the amount focus changes with each shot.
INTERVAL	Choose the interval between shots.

Focus and FRAMES/STEP

The relation between focus and the options chosen for **FRAMES** and **STEP** is shown in the illustration

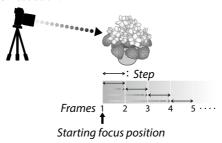

- Focus proceeds from the starting position toward infinity.
- Small **STEP** values translate to small changes in focus, larger values to larger changes.
- Regardless of the option chosen for **FRAMES**, shooting ends when focus reaches infinity.

AUTO

In AUTO mode, the camera calculates FRAMES and STEP automatically.

- 1 Select SHOOTING SETTING in the shooting menu, highlight FOCUS BKT SETTING, and press MENU/OK.
- 2 Select AUTO and choose an INTERVAL. The view through the lens will be displayed.
- 3 Focus on the nearest end of the subject and press MENU/OK.
 The selected focus distance appears as A on the focus distance indicator.



- The same focus range can be chosen by focusing on the farthest end of the subject first.
- 4 Focus on the farthest end of the subject and press DISP/BACK.
 The selected focus distance (B) and focus range (A to B) appear on the focus distance indicator.



- Instead of pressing the **DISP/BACK** button, you can press **MENU/OK** and select **A** again.
- 5 Take photographs. The camera will calculate values for FRAMES and STEP automatically. The number of frames will appear in the display.



Continuous Shooting (Burst Mode)

Capture motion in a series of pictures.

1 Press the (drive) button to display drive-mode menu and select CH HIGH SPEED BURST or CL LOW SPEED BURST.



- 2 Choose the frame advance rate and press the shutter button to start shooting.
 Shooting ends when the shutter button is released or the memory card is full.
- High frame-advance rates are available only when ES ELECTRONIC SHUTTER is selected for SHOOTING SETTING > SHUTTER TYPE.
 - If file numbering reaches 9999 before shooting is complete, the remaining pictures will be recorded to a new folder.
 - Shooting ends when the memory card is full; the camera will record all photos shot to that point. Burst shooting may not begin if the space available on the memory card is insufficient.
 - Frame rates may slow as more shots are taken.
 - Frame rate varies with the scene, shutter speed, sensitivity, and focus mode.
 - Depending on shooting conditions, frame rates may slow or the flash may not fire.
 - Recording times may increase during burst shooting.

 
-Focus and Exposure-

- Select focus mode **CONTINUOUS AF** to vary focus with shot.
- To vary exposure with each shot, select OFF for BUTTON/DIAL SETTING > SHUTTER AE.
- Exposure and focus tracking performance may vary with such factors as aperture, sensitivity, and exposure compensation.

HDR

Each time the shutter button is pressed, the camera takes three shots, varying exposure each time, and combines them into a single picture. The resulting photograph preserves details in highlights and shadows.

1 Press the **(drive)** button and select **HDR** in the drive-mode menu.



2 Choose the amount the brightnesses of the exposures vary.

Option	Description
HDR AUTO	Dynamic range is automatically set to a value of from 200%
IIDK AUTU	to 800%.
HDR200	Dynamic range is set to 200%.
HDR400	Dynamic range is set to 400%.
HDR800	Dynamic range is set to 800%.
HDR800+	Camera settings are adjusted for maximum variation in dy-
пипооот	namic range.

3 Take photographs.
The camera will create a combined image.

- Keep the camera steady.
 - The desired results may not be achieved in the subject moves or the composition or lighting changes during shooting.
 - The picture will be cropped a very small amount and the resolution will drop slightly.
 - Mottling may appear in pictures taken at higher values. Choose a value according to the scene.
 - "Extended" sensitivity values are not supported.
 - Depending on the options selected for HDR and sensitivity, pictures may not be taken at the selected shutter speed.
 - The flash does not fire.

 


Name of the HDR images are indicated by a Image are indicated by a Images are indicated by a Image are indicate


Panoramas

Follow an on-screen guide to create a panorama.

1 Press the (drive) button and select PANORAMA in the drive-mode menu.



- 2 To select the size of the angle through which you will pan the camera while shooting, press the focus stick (focus lever) left. Highlight a size and press MENU/OK.
- 3 Press the focus stick right to view a choice of pan directions. Highlight a pan direction and press MENU/OK.
- 4 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.
- 5 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the camera is panned to the end of the guides and the panorama is complete.

 

For Best Results

 
- Move the camera slowly in a small circle at a steady speed
- Keep the camera parallel or at right angles to the horizon and be sure to pan only in the direction shown by the guides
- Try panning at a different speed if the desired results are not achieved
- Prop your elbows against your sides
- Use a tripod
- For best results, use a lens with a focal length of 35 mm or less (50 mm or less in 35 mm format).
- If the shutter button is pressed all the way down before the panorama is complete, shooting will end and no panorama may be recorded.
 - The last part of the panorama may not be recorded if shooting ends before the panorama is complete.
 - Panoramas are created from multiple frames, and the camera may in some cases be unable to stitch the frames together perfectly.
 - Panoramas may be blurred if the subject is poorly lit.
 - Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.
 - The camera may in some cases record a greater or lesser angle than selected.
 - The desired results may not be achieved with:
 - Moving subjects
 - Subjects close to the camera
 - Unvarying subjects such as the sky or a field of grass
 - Subjects that are in constant motion, such as waves and waterfalls
 - Subjects that undergo marked changes in brightness
 - If ON is selected for BUTTON/DIAL SETTING > SHUTTER AE, exposure for the entire panorama is determined by the first frame.

-Viewing Panoramas-

With the panorama displayed full frame, press the focus stick (focus lever) down to start panorama playback. Vertical panoramas will scroll vertically, horizontal panoramas horizontally.







- In full-frame playback, you can use the rear command dial to zoom panoramas in or out.
- Panorama playback is controlled using the focus stick.

Focus stick (focus lever)	Full-frame playback	Panorama playback	Panorama playback paused
Up	_	End pla	ayback
Down	Start playback	Pause playback	Resume playback
Left/right	View other pictures	Choose pan direction	Scroll panorama manually

Multiple Exposures

Create a photograph that combines multiple exposures.



1 Press the (drive) button and select MULTIPLE EXPOSURE in the drive-mode menu.



2 Choose a blend mode.

Option	Description
ADDITIVE	The camera adds the exposures together. You may need to lower exposure compensation depending on the number of shots.
AVERAGE	The camera automatically optimizes exposure for the final picture. The background in series shot without changing the composition will be optimally exposed.
BRIGHT	The camera compares the exposures and chooses only the brightest pixel at each location. Colors may be mixed depending on their brightness and hue.
DARK	The camera compares the exposures and chooses only the darkest pixel at each location. Colors may be mixed depending on their brightness and hue.

3 Take the first shot.

4 Press MENU/OK. The first shot will be shown superimposed on the view through the lens and you will be prompted to take the second shot.



- To return to the previous step and retake the first shot, press the focus stick (focus lever) left.
 - To save the first shot and exit without creating a multiple exposure, press DISP/BACK.
- 5 Take the second shot, using the first frame as a guide.



6 Press MENU/OK. The combined exposures will be displayed as a guide to composing the next shot.



- To return to the previous step and retake the second shot, press the focus stick left.
 - To end shooting and create a multiple exposure from the shots taken to this point, press DISP/BACK.
- 7 Make additional exposures. Each photograph can contain up to nine exposures.
- **R** Press **DISP/BACK** to end shooting. The camera will create the combined image and multiple exposure shooting will end.

Flash Photography

Use the built-in flash for additional lighting when shooting at night or indoors under low light.

1 Slide the **4** lever as shown to raise the flash.



2 Select FLASH FUNCTION SETTING in the FLASH SETTING menu. The camera will display options for the built-in flash.



① Sync terminal options will be displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe (■ 339). Raise the flash before adjusting settings.


3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting (125).



- 4 Press DISP/BACK to put the changes into effect.
- Depending on the distance to the subject, some lenses may cast shadows in photos taken with the flash.
 - Be careful not to injure yourself on the edges of the raised flash.
 - The flash will not fire at some settings, for example in panorama mode or when the electronic shutter is used.
 - Choose shutter speeds slower than 1/80 s when using the flash in exposure mode **S** (shutter-priority AE) or manual (**M**).
- In TTL mode, the flash may fire several times with each shot. Do not move the camera until shooting is complete.
 - The flash will not fire if **OFF** is selected for **SOUND & FLASH** in the **DUSER SETTING** menu.

Flash Settings

The following settings are available with the built-in flash.

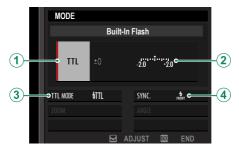

Setting	Description
① Flash control mode	Choose from the following options: • TTL: TTL mode. Adjust flash compensation (②) and choose a flash mode (③). • M: The flash fires at the selected output (②) regardless of subject brightness or camera settings. Output is expressed in fractions of full power, from ½ to ½4. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results. • ME (primary flash): Choose if the flash is being used as a primary flash controlling secondly flash units, for example as part of a studio flash system. • ①OFF (OFF): The flash does not fire.
	Adjust flash level. The options available vary with the flash
output	control mode ((1)).

Setting	Description
(3) Flash mode (TTL)	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P, S, A, or M) selected. • 知识 (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A gicon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken. • 和 (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released. • 知 (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.
(4) Sync	Choose whether the flash is timed to fire immediately after the shutter opens (** / 1ST CURTAIN) or immediately before it closes (** / 2ND CURTAIN). 1ST CURTAIN is recommended in most circumstances.

-Red-Eye Removal-

Red-eye removal is available when **FLASH** is selected for **II FLASH SETTING** > **RED EYE REMOVAL**. Red-eye removal minimizes "red-eye" caused when light from the flash is reflected from the subject's retinas.

-Flash Sync Speed-

The flash will synchronize with the shutter at shutter speeds of $1\!\!/\!\!so$ s or slower.

Optional Flash Units from Fujifilm

The camera can be used with optional Fujifilm shoe-mounted flash units.

-Third-Party Flash Units-

Do not use third-party flash units that apply over 300 V to the camera hot shoe.

The Shooting Menus



IMAGE QUALITY SETTING (Still Photography)

Adjust image quality settings for still photography.

To display image quality settings, press MENU/OK in the photo shooting display and select the (IMAGE QUALITY SETTING) tab.





The options available vary with the shooting mode selected.

IMAGE SIZE

§ 16:9

Choose the size and aspect ratio at which still pictures are recorded.

Option	lmage size	Option	lmage size
3:2	6240 × 4160	1:1	4160 × 4160
16:9	6240 × 3512		
		•	
Option	lmage size	Option	lmage size
M 3:2	4416 × 2944	M 1:1	2944 × 2944
M 16:9	4416 × 2488		
Option	lmage size	Option	lmage size
8 3:2	3120×2080	\$ 1:1	2080 × 2080

The following options are available in SPORTS FINDER MODE and when 1.25X CROP is selected in burst mode:

 3120×1760

Option	lmage size	Option	lmage size
M 3:2	4992×3328	M 1:1	3328×3328
M 16:9	4992×2808		



NAGE SIZE is not reset when the camera is turned off or another shooting mode is selected.

IMAGE QUALITY

Choose a file format and compression ratio.

Option	Description
FINE	Low compression ratios are used for higher-quality images.
NORMAL	Higher compression ratios are used to increase the number of images that can be stored.
FINE + RAW	Record both RAW and fine-quality JPEG or HEIF images.
NORMAL + RAW	Record both RAW and normal-quality JPEG or HEIF images.
RAW	Record RAW images only.

The Function Buttons

To toggle RAW image quality on or off for a single shot, assign **RAW** to a function button (🗎 317). Press the button once to select the option in the right column, again to return to the original setting (left column).

Option currently selected for IMAGE QUALITY	Option selected by pressing function button to which RAW is assigned
FINE	FINE + RAW
NORMAL	NORMAL + RAW
FINE + RAW	FINE
NORMAL + RAW	NORMAL
RAW	FINE

RAW RECORDING

Choose whether to compress RAW images.

Option	Description
UNCOMPRESSED	RAW images are not compressed.
LOSSLESS COMPRESSED	RAW images are compressed using a reversible algorithm that reduces file size with no loss of image data. The images can be viewed in Capture One Express for Fujifilm ¹ , Capture One for Fujifilm ¹ , Capture One ¹ , RAW FILE CONVERTER EX powered by SILKYPIX ² , FUJIFILM X RAW STUDIO, or other software that supports "lossless" RAW compression. Quality is the same as UNCOMPRESSED , but the resulting files are anywhere from about 30 to 90 percent of their uncompressed size.
COMPRESSED	RAW images are compressed using a "lossy", non-reversible algorithm. Quality is about the same as UNCOMPRESSED , but the resulting files are anywhere from about 25 to 35 percent of their uncompressed size.

¹ For information on when support will be available, visit: https://www.captureone.com/

² For information on when support will be available, visit: https://fujifilm-x.com/support/compatibility/software/raw-file-converter-ex-poweredby-silkypix/

SELECT JPEG/HEIF

Choose whether pictures are recorded in JPEG or HEIF.

Option	Description
JPEG	Pictures are recorded in the widely-supported JPEG format.
HFIL	Pictures are recorded in HEIF, a format with excellent compression but limited options for viewing and sharing.

- JPEG is automatically selected in place of HEIF during filter-effect, panorama, multiple-exposure, and HDR photography.
 - Selecting **HEIF** disables **CLARITY** and sets **COLOR SPACE** to **sRGB**.
 - HEIF pictures are stored on the memory card as files with the extension ".HIF". Before the pictures can be viewed on a computer, the extension must be changed to ".HEIC". This occurs automatically when HEIF pictures are uploaded from the camera to a computer via USB.

FILM SIMULATION

Simulate the effects of different kinds of film, including blackand-white (with or without color filters). Choose a palette according to your subject and creative intent.

Option	Description
AUTO	The camera will automatically select the best film simulation mode according to the scene. This option is available when the mode dial is set to AUTO .
PROVIA/STANDARD	ldeal for a wide range of subjects.
V Velvia/VIVID	Vibrant reproduction, ideal for landscape and nature.
S ASTIA/SOFT	Softer color and contrast for a more subdued look.
CC CLASSIC CHROME	Soft color and enhanced shadow contrast for a calm look.
NH PRO Neg. Hi	ldeal for portrait with slightly enhanced contrast.
Ñ≣ PRO Neg. Std	Ideal for portrait with soft gradations and skin tones.
ÑՇ CLASSIC Neg.	Enhanced color with hard tonality to increase image depth.
NOSTALGIC Neg.	Amber tinted highlights and rich shadow tone for printed photo look.
E ETERNA/CINEMA	Soft color and rich shadow tone suitable for film look movie.
EB ETERNA BLEACH BYPASS	Unique color with low saturation and high contrast. Suitable for still and movie.

Option	Description
ACROS	Shoot in Black and White In rich details with sharpness. Available with yellow (Ye), red (R), and green (G) filters, which deepen shades of gray corresponding to hues complementary to the selected color. • AT ACROS+YE FILTER: Slightly enhances contrast and darkens skies. • AT ACROS+R FILTER: Enhances contrast and darkens skies considerably.
B MONOCHROME	Shoots in black and white. Available with yellow (Ye), red (R), and green (G) filters, which deepen shades of gray corresponding to hues complementary to the selected color. • By MONOCHROME+Ye FILTER: Slightly enhances contrast and darkens skies. • By MONOCHROME+R FILTER: Enhances contrast and darkens skies considerably. • By MONOCHROME+G FILTER: Produces pleasing skin tones in portrait.
SEPIA SEPIA	Shoots in sepia tone.



- Film simulation options can be combined with tone and sharpness settings.
 - Film simulation settings can also be accessed via shortcuts (🕮 308).
 - For more information, visit: https://fujifilm-x.com/global/tag/the-world-of-film-simulation/?post_type=xstories

MONOCHROMATIC COLOR

Add a reddish or bluish tinge (warm or cool color cast) to the ACROS and MONOCHROME monochrome film simulations. Color can be adjusted on the WARM-COOL and G (Green)-M (Magenta) axes.



GRAIN EFFECT

Add a film grain effect.

ROUGHNESS

Option	Description					
STRONG	Choose for rougher grains.					
WEAK	noose for smoother grains.					
OFF	urn the effect off.					

SIZE

Option	Description				
LARGE	Choose for coarser grains.				
SMALL	Choose for finer grains.				

COLOR CHROME EFFECT

Increase the range of tones available for rendering colors that tend to be highly saturated, such as reds, yellows, and greens.

Option	Description					
STRONG	Choose for a strong effect.					
WEAK	oose for a weak effect.					
OFF	ırn the effect off.					

COLOR CHROME FX BLUE

Increase the range of tones available for rendering blues.

Option	Description					
STRONG	Choose for a strong effect.					
WEAK	pose for a weak effect.					
OFF	rn the effect off.					

WHITE BALANCE

For natural colors, choose a white balance option that matches the light source.

Option	Description						
AUTO WHITE PRIORITY	White balance is adjusted automatically. Choose for whiter whites in scenes lit by incandescent bulbs.						
AUTO	White balance is adjusted automatically.						
AUTO AMBIENCE PRIORITY	White balance is adjusted automatically. Choose for warmer						
	whites in scenes lit by incandescent bulbs.						
Q ₁ CUSTOM 1							
□ Q₂ CUSTOM 2	Measure a value for white balance.						
Q₃ CUSTOM 3							
COLOR TEMPERATURE	Choose a color temperature.						
* DAYLIGHT	For subjects in direct sunlight.						
* ⊵ SHADE	For subjects in the shade.						
⊭ FLUORESCENT LIGHT-1	Use under "daylight" fluorescent lights.						
∺ FLUORESCENT LIGHT-2	Use under "warm white" fluorescent lights.						
岩 FLUORESCENT LIGHT-3	Use under "cool white" fluorescent lights.						
-A- INCANDESCENT	Use under incandescent lighting.						
UNDERWATER	Reduces the blue cast typically associated with underwate lighting.						

- In conditions in which **AUTO** fails to produce the desired results—for example, under certain types of lighting or in close-ups of portrait subjects—use custom white balance or choose a white balance option suited to the light source.
 - White balance is adjusted for flash lighting only in AUTO, W AUTO WHITE PRIORITY, AUTO AMBIENCE PRIORITY, and modes. Turn the flash off using other white balance options.
 - White balance options can also be accessed via shortcuts (1 308).

Fine-Tuning White Balance

Pressing MENU/OK after selecting a white balance option displays a fine-tuning dialog; use the focus stick (focus lever) to fine-tune white balance.





- To exit without fine-tuning white balance, press DISP/BACK after selecting a white balance option.
 - You cannot tilt the focus stick diagonally when fine-tuning white balance.

Custom White Balance

Choose Ω_1 , Ω_2 , or Ω_3 to adjust white balance for unusual lighting conditions using a white object as a reference (colored objects can also be used to lend photos a color cast). A white balance target will be displayed; position and size



the target so that it is filled by the reference object and press the shutter button all the way down to measure white balance (to select the most recent custom value and exit without measuring white balance, press DISP/BACK, or press MENU/OK to select the most recent value and display the fine-tuning dialog).

- If "COMPLETED!" is displayed, press MENU/OK to set white balance to the measured value
- If "UNDER" is displayed, raise exposure compensation and try again.
- If "OVER" is displayed, lower exposure compensation and try again.



IX: Color Temperature

Adjust white balance to match the color temperature of the light source.



Color temperature can be adjusted to make pictures "warmer" or "colder" or deliberately produce colors that differ radically from those in real life.

1 Select K in the white balance menu. The option currently selected for color temperature will be displayed.



2 Edit the color temperature using the focus stick (focus lever) and press MENU/OK.

A fine-tuning dialog will be displayed.



- You can also adjust color temperature in increments of 10 K by rotating the rear command dial.
 - Choose from values of from 2500 to 10000 K
 - To exit without fine-tuning white balance, press **DISP/BACK** after choosing a color temperature.
- 3 Highlight a fine-tuning amount using the focus stick.
- 4 Press MENU/OK. The changes will be applied. The selected color temperature will appear in the display.



Color Temperature

Color temperature is an objective measure of the color of a light source, expressed in Kelvin (K). Light sources with a color temperature close to that of direct sunlight appear white; light sources with a lower color temperature have a yellow or red cast, while those with a higher color temperature are tinged with blue.

DYNAMIC RANGE

Adjust dynamic range. Wide dynamic ranges reduce loss of detail in highlights for more natural results with high-contrast or backlit scenes.

Option		Description		
AUTO	₽ <mark>100</mark> 100%	Choose for increased contrast.		
AU10				
R400 400%		Reduce loss of detail in highlights.		

- Mottling may appear in pictures taken at higher values. Choose a value according to the scene.
- If AUTO is selected, the camera will automatically choose either 100 100% or 200 200% according to the subject and shooting conditions. Shutter speed and aperture will be displayed when the shutter button is pressed halfway.
 - 200 200% is available at sensitivities of from ISO 320 to ISO 12800, **400%** at sensitivities of from ISO 640 to 12800

D RANGE PRIORITY

Reduce loss of detail in highlights and shadows for natural-looking results when photographing high-contrast scenes.

Option	Description					
AUTO Contrast is adjusted automatically in response to li						
AUIU	ditions.					
STRONG Adjust dynamic range by a large amount for very high						
SIKUNU	scenes.					
WEAK Adjust dynamic range by a smaller amount for mode high-contrast scenes.						
					OFF	Contrast reduction off.

- **♦ WEAK** is available at sensitivities of from ISO 320 to ISO 12800, **STRONG** at sensitivities of from ISO 640 to 12800
 - When an option other than **OFF** is selected, **TONE CURVE**, and **DYNAMIC RANGE** will be adjusted automatically; if you wish to adjust these settings manually, choose OFF.

TONE CURVE

With reference to a tone curve, adjust the appearance of highlights or shadows, making them harsher or softer. Choose higher values to make shadows and highlights harsher, lower values to make them softer.



Option	Description
HIGHLIGHTS	-2 to +4
SHADOWS	-2 to +4

COLOR

Adjust color density.



SHARPNESS

Sharpen or soften outlines.



HIGH ISO NR

Reduce noise in pictures taken at high sensitivities. Choose higher values to reduce noise and smooth outlines, lower values to leave outlines visible.

Options								
-4	-3	-2	-1	0	+1	+2	+3	+4

CLARITY

Increase definition while altering tones in highlights and shadows as little as possible. Choose higher values for increased definition, lower values for a softer effect.

Options										
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5

- (1) The additional processing required at settings other than 0 increases the time need to save each shot.
- Clarity is adjusted automatically when the mode dial is in the **AUTO** position.

LONG EXPOSURE NR

Select **ON** to reduce mottling in long time-exposures.

Options				
ON	OFF			

The additional processing required when ON is selected increases save times.

LENS MODULATION OPTIMIZER

Select ON to improve definition by adjusting for diffraction and the slight loss of focus at the periphery of the lens.

Opt:	ions
ON	OFF

COLOR SPACE

Choose the gamut of colors available for color reproduction.

Option	Description	
sRGB	Recommended in most situations.	
Adobe RGB	For commercial printing.	

PIXEL MAPPING

Use this option if you notice bright spots in your pictures.

- 1 Press MENU/OK in the shooting display and select the ID IMAGE **QUALITY SETTING** tab.
- Highlight PIXEL MAPPING and press MENU/OK to perform pixel mapping.
- Results are not quaranteed.
 - Be sure the battery is fully charged before beginning pixel mapping.
 - Pixel mapping is not available when the camera temperature is elevated.
 - Processing may take a few seconds.

★ EDIT/SAVE CUSTOM SETTING

Save custom camera settings for commonly-encountered situations. Saved settings can be recalled by rotating the mode dial to positions (1 (CUSTOM 1) through (4 (CUSTOM 4) (1) 82).

AUTO UPDATE CUSTOM SETTING

Choose whether changes to saved custom settings apply automatically.

Option	Description		
	Changes to custom settings banks CUSTOM 1 through CUSTOM 4 apply automatically.		
	Changes do not apply automatically. Any changes to custom settings must be applied manually (🕮 84).		

CUSTOM MODE SETTING

Choose whether the current custom settings bank is to be used for still photography or movie recording (1982).

™ MOUNT ADAPTOR SETTING

Adjust settings for lenses attached via a mount adapter. The camera can store settings for multiple lenses (LENS 1 through LENS 6).

- DISTORTION CORRECTION, COLOR SHADING CORRECTION, and PERIPHERAL ILLUMINATION CORRECTION are available with lenses connected via an M mount adapter.
 - Any changes made using this item also apply in movie mode (EE 205).

FOCAL LENGTH SETTING

Enter the lens's true focal length.



DISTORTION CORRECTION

 
Choose from STRONG, MEDIUM, WEAK options to correct BARREL or **PINCUSHION** distortion.



COLOR SHADING CORRECTION

Color (shading) variations between the center and edges of the frame can be adjusted separately for each corner.


To use color shading correction, follow the steps below.



- 1 Rotate the rear command dial to choose a corner. The selected corner is indicated by a triangle.
- 2 Use the focus stick (focus lever) to adjust shading until there is no visible difference in color between the selected corner and the center of the image.
 - Press the focus stick left or right to adjust colors on the cyan-red axis.
 - Press the focus stick up or down to adjust colors on the blue-yellow axis.
- To determine the amount required, adjust color shading correction while taking photos of blue sky or a sheet of gray paper.

PERIPHERAL ILLUMINATION CORRECTION

 Choose from values between -5 and +5. Choosing positive values increases peripheral illumination, while choosing negative values reduces peripheral illumination. Positive values are recommended for vintage lenses, negative val-



ues to create the effect of images taken with an antique lens or a pinhole camera.



To determine the amount required, adjust peripheral illumination correction while taking photos of blue sky or a sheet of gray paper.

EDIT LENS NAME

Change the lens name.



AF/MF SETTING (Still Photography)

Adjust focus settings for still photography.

To display AF/MF settings, press MENU/OK in the photo shooting display and select the M (AF/MF SETTING) tab.





The options available vary with the shooting mode selected.

FOCUS AREA

Choose the focus area for autofocus, manual focus, and focus zoom (96).

FOCUS MODE

Choose how the camera focuses (22).

AF MODE

Choose how the camera focuses in modes FS and FC (1994).

AF-C CUSTOM SETTINGS

Select focus-tracking options for CONTINUOUS AF focus mode. Choose from Sets 1 (SET 1) through 5 (SET 5) according to your subject or select SET 6 CUSTOM for custom focus-tracking options.



Option	Description
SET 1 MULTI PURPOSE	A standard tracking option that works well with the typical range of moving subjects.
SET 2 IGNORE OBSTACLES & CONTINUE TO TRACK SUBJECT	The focus system attempts to track the chosen subject. Choose with subjects that are hard to keep in the focus area or if other objects are likely to enter the focus area with the subject.
SET 3 FOR ACCELERATING/ DECELERATING SUBJECT	The focus system attempts to compensate for subject acceleration or deceleration. Choose for subjects prone to rapid changes in velocity.
SET 4 FOR SUDDENLY APPEARING SUBJECT	The focus system attempts to focus quickly on subjects entering the focus area. Choose for subjects that appear abruptly or when rapidly switching subjects.
SET 5 FOR ERRATICALLY MOVING & ACCEL./DECEL. SUBJECT	Choose for hard-to-track subjects prone not only to sudden changes in velocity but also to large movements front to back and left to right.
SET 6 CUSTOM	Adjust TRACKING SENSITIVITY, SPEED TRACKING SENSITIVITY, and ZONE AREA SWITCHING to suit your preferences based on the values for Sets 1–5 (150, 152).

Focus Tracking Options

The individual parameters that are part of a focus tracking set are described below.

TRACKING SENSITIVITY

This parameter determines how long the camera waits to switch focus when an object enters the focus area behind or in front of the current subject. The higher the value, the longer the camera will wait.



Options				
0	1	2	3	4

- The higher the value, the longer it takes the camera to refocus when you attempt to switch subjects.
 - The lower the value, the more likely the camera is to switch focus from your subject to other objects in the focus area.

SPEED TRACKING SENSITIVITY

This parameter determines how sensitive the tracking system is to changes in subject velocity. The higher the value, the greater the precision with which the system attempts to respond to sudden movement.



Options		
0	1	2

The higher the value, the more difficulty the camera will have focusing in situations in which autofocus does not perform well, such as when the subject is highly reflective or low in contrast.

ZONE AREA SWITCHING

This parameter determines the focus area given priority in zone AF.



Option	Description
FRONT	Zone AF assigns priority to the subjects closest to the camera.
	The camera locks focus on the subject at the center of the zone and then switches focus areas as necessary to track it.
CENTER	Zone AF assigns priority to subjects in the center of the zone.

① This option takes effect only when ② **ZONE** is selected for AF mode.

-Set Values-

Parameter values for the different sets are listed below.

	TRACKING SENSITIVITY	SPEED TRACKING SENSITIVITY	ZONE AREA SWITCHING
SET 1	2	0	AUTO
SET 2	3	0	CENTER
SET 3	2	2	AUTO
SET 4	0	1	FRONT
SET 5	3	2	AUTO

Custom Focus Tracking Options

Follow the steps below to adjust settings for Set 6.

1 Select AF-C CUSTOM SETTINGS > SET 6 CUSTOM.



- 3 Press DISP/BACK when settings are complete.

STORE AF MODE BY ORIENTATION

Choose whether the AF mode used when the camera is in portrait orientation is stored separately from that used when the camera is in landscape orientation.

Option	Description
OFF The same settings are used in both orientations.	
FOCUS AREA ONLY	The focus area for each orientation can be selected separately.
ON	The focus mode and focus area can be selected separately.

AF POINT DISPLAY 🔟 🔲

Choose whether individual focus frames are displayed when **ZONE** or **WIDE/TRACKING** is selected for **MAF/MF SETTING** > **AF MODE**.

Options	
ON	OFF

Choose whether focus-area selection is bounded by the borders of the display or "wraps around" from one edge of the display to another.

Option	Description	
FNAKIF	Focus-area selection "wraps around" from one edge of the display to another.	
DISABLE	Focus-area selection is bounded by the borders of the display.	

NUMBER OF FOCUS POINTS

Choose the number of focus points available for focus-point selection in manual focus mode or when **SINGLE POINT** is selected for AF MODE.

Option	Description
117 POINTS (9 × 13)	Choose from 117 focus points arranged in a 9- by 13-point grid.
	Choose from 425 focus points arranged in a 17- by 25-point grid.

PRE-AF

If ON is selected, the camera will continue to adjust focus even when the shutter button is not pressed halfway. The camera adjusts focus continuously, allowing it to focus faster when the shutter button is pressed halfway. Choosing this option helps prevent missed shots.

Options			
		ON	OFF



(1) Choosing **ON** increases the drain on the battery.

🗖 📽 AF ILLUMINATOR

If **ON** is selected, the AF-assist illuminator will light to assist autofocus.

Options	
ON	OFF

- The camera may be unable to focus using the AF-assist illuminator in some cases.
 - If the camera is unable to focus, try increasing the distance to the subject.
 - Avoid shining the AF-assist illuminator directly into your subject's eyes.
- Any changes made using this item also apply in movie mode (🕮 208).

I FACE/EYE DETECTION SETTING

If the camera detects human faces, it will assign them priority over the background and adjust settings appropriately for portraits when setting focus and exposure. You can also choose whether the camera focuses on the left or right eye when face detection is on.



Option	Description
	Adjust settings for Intelligent Face Detection. You can also adjust eye detection settings. •
OFF	Intelligent Face Detection and eye priority off.



- If the subject moves as the shutter button is pressed, the face may not be in the area indicated by the green border when the picture is taken.
 - In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.
 - Enabling Intelligent Face Detection via FACE DETECTION ON automatically selects **OFF** for **SUBJECT DETECTION SETTING**.



- If MACO Selected for AUTO MODE SETTING, the camera will automatically select the face (of if eye detection is enabled, the eye) when the mode dial is in the **AUTO** position.
 - A single face detected in or near the focus area will be marked with a white frame.
 - If multiple faces are detected in the focus area, the camera will select one automatically.
 - You can choose a different subject by tapping the display to reposition the focus area. The focus stick (focus lever) can also be used if **WIDE** is selected for **AF MODE**.
 - When DIRECT AF POINT SELECTION or EDIT FOCUS AREA is chosen for BUTTON/DIAL SETTING > FOCUS LEVER SETTING > **TILT** . you can also switch subjects using the focus stick (focus lever) or (during viewfinder photography) touch controls (12).
 - When the camera is focused on an eye, you can switch from one eye to the other using a function button to which RIGHT/LEFT EYE **SWITCH** has been assigned.
 - If the selected subject leaves the frame, the camera will wait a set time for its return and consequently the white frame may sometimes appear in locations where no face is seen.
 - Depending on shooting conditions, face selection may be suspended at the close of burst shooting.
 - Faces can be detected with the camera in vertical or horizontal orientation
 - If the camera is unable to detect the subject's eyes because they are hidden by hair, glasses, or other objects, the camera will instead focus on faces
 - Face/eye detection options can also be accessed via shortcuts (308).

SUBJECT DETECTION SETTING

Choose whether the camera prioritizes subjects of a selected type, such as animals or vehicles, when setting focus.

Option	Description	
SUBJECT DETECTION ON	Select one of the subject types listed below to enable subject detection. Selection. ANIMAL: The camera detects and tracks focus on dogs and cats. BIRD: The camera detects and tracks focus on birds. AUTOMOBILE: The camera detects and tracks focus on the body or front ends of cars, primarily those of types used for motor sports. MOTORCYCLE&BIKE: The camera detects and tracks focus on the riders of motorcycles and bicycles. AIRPLANE: The camera detects and tracks focus on the cockpits, noses, or bodies of airplanes. TRAIN: The camera detects and tracks focus on the driver	
OFF	compartments or front ends of trains. Subject detection off.	
VFF	pubject detection on.	



• Enabling subject detection via **SUBJECT DETECTION ON** automatically selects **OFF** for **P FACE/EYE DETECTION SETTING**.



- If **MODE SETTING**, the camera will automatically select the subject when the mode dial is in the AUTO position.
 - A single subject of the chosen type detected in or near the focus area will be marked with a white frame.
 - If multiple subjects are detected in the focus area, the camera will select one automatically.
 - You can choose a different subject by tapping the display to reposition the focus area. The focus stick (focus lever) can also be used if **WIDE** is selected for **AF MODE**.
 - When DIRECT AF POINT SELECTION or EDIT FOCUS AREA is chosen for BUTTON/DIAL SETTING > FOCUS LEVER SETTING > **TILT** . you can also switch subjects using the focus stick (focus lever) or (during viewfinder photography) touch controls (25).
 - If the selected subject leaves the frame, the camera will wait a set time for its return and consequently the white frame may sometimes appear in locations where no subject of the chosen type is seen.
 - Depending on shooting conditions, subject detection may be suspended at the close of burst shooting.
 - Subjects can be detected with the camera in vertical or horizontal orientation
 - Subject detection options can also be accessed via shortcuts (308).

AF+MF

If **ON** is selected and focus has been locked (whether by pressing the shutter button halfway or by other means), focus lock can be ended and focus adjusted manually by rotating the focus ring.

Options ON **OFF**

- Lenses with a focus distance indicator must be set to manual focus mode (MF) before this option can be used. Selecting MF disables the focus distance indicator
 - If the lens is equipped with a focus distance indicator, set the focus ring to the center, as the camera may fail to focus if the ring is set to infinity or the minimum focus distance.
- The previously-selected focus mode will be restored if no operations are performed for a set period after the focus ring is rotated.
 - DIGITAL SPLIT IMAGE and DIGITAL MICROPRISM focus assist options selected via **MF ASSIST** cannot be used

-AF + MF Focus Zoom-

Selecting **ON** for **MAF/MF SETTING** > **FOCUS CHECK** when **SINGLE POINT** is chosen for **AF MODE** lets you zoom in on the current focus area by rotating the focus ring. The zoom ratio can be selected using the rear command dial.

MF ASSIST

Choose how focus is displayed in manual focus mode (1121).

Option	Description
DIGITAL SPLIT IMAGE	Displays a black-and-white (MONOCHROME) or color (COLOR) split image in the center of the frame. Frame the subject in the split-image area and rotate the focus ring until the four parts of the split image are correctly aligned.
DIGITAL MICROPRISM	A grid pattern that emphasizes blur is displayed when the subject is out of focus, disappearing to be replaced by a sharp image when the subject is in focus.
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose a color and peaking level.
OFF	Focus is displayed normally (MF assist cannot be used).

FOCUS CHECK

If ON is selected, the display will automatically zoom in on the selected focus area when the focus ring is rotated in manual focus mode.

Options	
ON	OFF



- Press the focus stick (focus lever) to cancel focus zoom.
 - The zoom position is centered on the current focus area and changes when the focus area is changed.

INTERLOCK SPOT AE & FOCUS AREA

Choose ON to meter the current focus frame when SPOT or **MULTI** metering is selected.

Options	
ON	OFF

INSTANT AF SETTING

Chooses how the camera focuses when a button to which focus lock or AF-ON is assigned is pressed with MANUAL FOCUS selected for FOCUS MODE.

Option	Description	
AF-S	The camera focuses when the button is pressed.	
AF-C	The camera focuses while the button is pressed.	



Any changes made using this item also apply in movie mode (🕮 210).

☆☆ DEPTH-OF-FIELD SCALE

Choose the basis for the depth-of-field scale.

Option	Description
PIXEL BASIS	Provides a precision reference for use when assessing depth of field for pictures that will be viewed at high resolutions on computers or other electronic displays.
FILM FUKMAI RASIS	Provides a practical reference for use when assessing depth of field for pictures that will be viewed at lower resolutions, for example as prints.



Any changes made using this item also apply in movie mode (🕮 210).

RELEASE/FOCUS PRIORITY

Choose how the camera focuses when the shutter button is pressed all the way down with SINGLE AF or CONTINUOUS AF selected for FOCUS MODE.

Option	Description	
	Shutter response is prioritized over focus. Pictures can be taken when the camera is not in focus.	
	Focus is prioritized over shutter response. Pictures can be only taken when the camera is in focus.	

Regardless of the option selected, pictures can still be taken when the camera is not in focus if **ON** is selected for **AF+MF**.

AF RANGE LIMITER

Limit the range of available focus distances for increased focus speed.

Option	Description	
OFF	Focus limiter disabled.	
CUSTOM	Limit focus to a range of distances defined by a minimum and maximum. • OK: Limit focus to the selected range. • SET: Choose two objects and limit focus to the distance between them.	
PRESET1	Limit focus to a preset range.	
PRESET2		

- Choosing a focus range that includes distances shorter than the minimum focus distance of the lens disables the focus limiter.
 - The values listed and displayed for the focus limiter may differ from the actual focus distance.
 - Focus range can be set independently on lenses equipped with focus range selectors. Be sure that the option selected in the camera menus overlaps with that chosen with the lens.
- The following additional operations can be performed when CUSTOM is selected:
 - You can tap objects in the touch screen display to choose the focus range.
 - Instead of tapping an object in the display, you set the maximum focus distance to infinity by rotating the focus ring.
 - Any changes made using this item also apply in movie mode (210).

TOUCH SCREEN MODE

Choose the shooting operations performed using touch controls.

Mode	Description	
TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.	
AF AF OFF	 In focus mode (SINGLE AF), the camera focuses when you tap your subject in the display. Focus locks at the current distance until you tap the AF OFF icon. In focus mode (CONTINUOUS AF), the camera initiates focus when you tap your subject display. The camera will continue to adjust focus for changes in the distance to the subject until you tap the AF OFF icon. In manual focus mode (MANUAL FOCUS), you can tap the display to focus on the selected subject using autofocus. 	
AREA AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.	
OFF OFF	Touch screen mode off.	



 
- The behavior of the touch screen varies with the AF mode.
 - To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > **★** TOUCH SCREEN SETTING.

-Touch Controls for Focus Zoom-

Different touch controls are used during focus zoom (focus check enabled).

Central Area


Tapping the center of the display performs the operations below.



Mode	Operation performed
TOUCH SHOOTING	SINGLE AF/MANUAL FOCUS: Take a picture
AF	SINGLE AF: AF
AF	MANUAL FOCUS: Instant AF
AREA	SINGLE AF: AF
AREA	MANUAL FOCUS: Instant AF
OFF	SINGLE AF/MANUAL FOCUS: OFF

Other Areas

 Tapping other areas simply scrolls the display, whether during still photography or movie recording and regardless of the option selected for touch screen mode.





SHOOTING SETTING (Still Photography)

Adjust shooting options for still photography.

To display shooting settings, press MENU/OK in the photo shooting display and select the (SHOOTING SETTING) tab.



The options available vary with the shooting mode selected.



AUTO MODE SETTING

Choose the scene selected when the mode dial is rotated to AUTO (68).

FILTER SETTING

Choose the filter used when the mode dial is rotated to FILTER (2 81).

SPORTS FINDER MODE

Take pictures using the crop in the center of the display. Choose this option for pictures of athletes, birds, and other moving subjects.



0pti	ion	Description
10	N	Pictures are taken using a 1.29× crop, reducing the picture angle by an amount equivalent to increasing lens focal length by 1.29×; the crop is shown by a frame in the display.
OFF The 1.29× crop is disabled.		The 1.29× crop is disabled.



- ing menu is fixed at M.
 - The sports finder is not available in modes that offer an electronic shutter.

PRE-SHOT ES A

To reduce the lag between your pressing the shutter button all the way down and the resulting picture being recorded to the memory card, the camera starts shooting with the electronic shutter when the shutter button is pressed halfway and saves a series shots starting just before the shutter button is pressed the rest of the way down.

Options		
ON	OFF	




- Pre-shot photography is available only when **ESELECTRONIC SHUTTER** is selected in **CH** (high speed burst) drive mode (172).
 - Flash photography is disabled.

SELF-TIMER

Choose a shutter release delay.

Option	Description	
© 2 SEC	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter button is pressed. The self-timer lamp blinks as the timer counts down.	
The shutter is released ten seconds after the shutter button is pre Use for photographs in which you wish to appear yourself self-timer lamp blinks immediately before the picture is taken.		
OFF	Self-timer off.	

 If an option other than **OFF** is selected, the timer will start when the shutter button is pressed all the way down. The display shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press DISP/BACK.



- Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.
 - The self-timer turns off automatically when the camera is turned off.

SAVE SELF-TIMER SETTING

If **ON** is selected, the setting chosen for **SELF-TIMER** will remain in effect after the camera is turned off.

Options		
ON	OFF	

SELF-TIMER LAMP

If **ON** is selected, the self-timer lamp will light during self-timer photography. Select **OFF** when shooting night scenes or in other situations in which you would prefer that the lamp remain unlit.

Options		
ON	OFF	

AE BKT SETTING

Adjust exposure bracketing settings.

Option	Description
FRAMES/STEP SETTING	Choose the number of shots in the bracketing sequence and the amount exposure is varied with each shot. • FRAMES: Choose the number of shots in the bracketing sequence. • STEP: Choose the amount exposure is varied with each shot.
• 1 FRAME: The shots in the bracketing sequer one at a time. • CONTINUOUS: The shots in the bracketing staken in a single burst.	
SEQUENCE SETTING	Choose the order in which the shots are taken.

FILM SIMULATION BKT

Choose the three film simulation types used for film simulation bracketing (1 132).

FOCUS BKT SETTING

Choose from **AUTO** and **MANUAL** focus bracketing modes (113).

PHOTOMETRY

Choose how the camera meters exposure (1106).

SHUTTER TYPE

Choose the shutter type. Choose the electronic shutter to mute the shutter sound.

Option	Description
MS MECHANICAL SHUTTER Take pictures with the mechanical shutter.	
ES ELECTRONIC SHUTTER	Take pictures with the electronic shutter.
M+E MECHANICAL +	The camera chooses the mechanical or electronic
ELECTRONIC	shutter according to shooting conditions.



- When using the electronic shutter, note the following:
 - Distortion may be visible in shots of moving subjects.
 - Distortion may also be visible in hand-held shots taken at high shutter speeds; use of a tripod is recommended.
 - Banding and fog may occur in shots taken under fluorescent lights or other flickering or erratic illumination.
 - When taking pictures with the shutter muted (■ 277), respect your subjects' image rights and right to privacy.
- The following restrictions apply when the electronic shutter is used:
 - Sensitivity is restricted to values of ISO 160-12800
 - Long exposure noise reduction has no effect
 - The flash cannot be used

INTERVAL TIMER SHOOTING

Configure the camera to take photos automatically at a preset interval.



 
2 Highlight WITH IN-CAMERA TIMER and press MENU/OK. Interval-timer settings will be displayed.



- If you are using a remote release with its own timer, select **WITH EXTERNAL TIMER**. You will be returned to the shooting display, where you can start interval-timer photography using the remote release.
- 3 Use the focus stick (focus lever) to choose the interval and number of shots. Press MENU/OK to proceed.



4 Use the focus stick to choose the starting time and then press MENU/OK. Shooting will start automatically.



Interval timer photography cannot be used at a shutter speed of "bulb" or with multiple exposure photography. In burst mode, only one picture will be taken each time the shutter is released.



- Use of a tripod is recommended.
 - We recommend using an AC-5VJ AC power adapter.
 - To view the pictures taken so far, press the **D** button during interval-timer photography. To return to the shooting display, press the **b** button again or wait until the start of the next interval.
 - The display turns off between shots and lights a few seconds before the next shot is taken
 - The display can be activated at any time by pressing the shutter button.
 - The indicator lamp blinks green whenever the displays are off during interval-timer photography.
 - To continue shooting until the number of shots taken equals the number of exposures remaining at the time interval-timer photography started, set the number of shots to ∞ .

INTERVAL TIMER SHOOTING EXPOSURE SMOOTHING

Select **ON** to automatically adjust exposure during interval-timer photography to prevent it changing dramatically between shots.

Options		
ON	OFF	



- Large changes in subject brightness may make exposure appear erratic. We recommend that you choose shorter values for INTERVAL **TIMER SHOOTING** > **INTERVAL** with subjects that brighten or dim dramatically during shooting.
 - In manual mode (mode **M**), exposure smoothing is only available if an AUTO option is selected for ISO.

INTERVAL PRIORITY MODE

If ON is selected, the camera will adjust shutter speed during interval-timer photography to ensure that exposures are not longer than the interval between photographs.

Options	
ON	OFF

This option takes effect only when the camera selects the shutter speed automatically.

FLICKER REDUCTION

Reduce flicker in pictures and the display when shooting under fluorescent lighting and other similar light sources.

Option	Description
ALL FRAMES	Flicker reduction is applied to all frames continuous
ALL FRAMES	shooting frame rate reduces.
	Flicker measurement is taken prior to the first frame only
FIRST FRAME	and the same reduction amount is applied to all subse-
	quent frames that flicker may occur.
OFF	Flicker reduction disabled.



- Flicker reduction increases the time needed to record pictures.
 - OFF is selected for FLICKER REDUCTION when the electronic shutter is used.
 - Flicker reduction is not available during movie recording.

FLICKERLESS S.S. SETTING

Select ON to allow shutter speed to be fine-tuned to reduce flicker caused by LED lighting and the like.

Options		
ON	OFF	



This option takes effect only in modes S and M.

IS MODE

Reduce blur caused by camera shake or subject motion.

Option	Description
(♠))1•>>> CONTINUOUS + MOTION	Image stabilization on. If + MOTION is selected, the camera will adjust shutter speed to reduce motion blur when mov-
«₩»₁ CONTINUOUS	ing objects are detected.
(∰)≥•>> SHOOTING + MOTION	As above, except that image stabilization is performed only when the shutter button is pressed halfway (focus mode FG only) or the shutter is released. If + MOTION is selected,
《◆》≥ SHOOTING ONLY	the camera will adjust shutter speed to reduce motion blur when moving objects are detected.
OFF	Image stabilization off. Choose this option when using a tripod.



- + MOTION has no effect when sensitivity is set to a fixed value, and may also be unavailable at some other combinations of settings. The effect may vary with lighting conditions and the speed at which the object is moving.
 - The setting selected with the lens image stabilization switch, if any, takes priority over the setting chosen with IS MODE.
 - Note that vibration or camera sounds may be noticeable as image stabilization takes effect

ISO

Adjust the camera's sensitivity to light (104).

📩 📽 COOLING FAN SETTING

Adjust settings for optional cooling fans (\$\equiv 347\$).

Option	Description	
AUT01	The fan turns on automatically as required when camera	
	temperature rises and runs at slow speed.	
	The fan turns on automatically as required when camera	
AUTO2	temperature rises and runs at high speed. The increased	
	fan noise may be audible in movies.	
LOW	Run the fan continuously at low speed.	
HIGH	Run the fan continuously at high speed. The increased fan	
пічп	noise may be audible in movies.	
OFF	Turn the fan off.	

☆ ☆ WIRELESS COMMUNICATION

Connect to smartphones running the latest version of apps. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera



For more information, visit: https://app.fujifilm-dsc.com/



FLASH SETTING (Still Photography)

Adjust flash-related settings for still photography.

To display flash settings, press MENU/OK in the photo shooting display and select the [3] (FLASH SETTING) tab.



FLASH FUNCTION SETTING

Choose a flash control mode, flash mode, or sync mode or adjust the flash level. The options available vary with the flash.



For more information on flash settings, see "External Flash Units" (\$\Peripherals and Optional Accessories".

RED EYE REMOVAL

Remove red-eye effects caused by the flash.

Option	Description	
FLASH	Flash red-eye reduction only.	
OFF	Flash red-eye reduction and digital red-eye removal off.	



Flash red-eye reduction can be used in TTL flash control mode.

TTL-LOCK MODE

Instead of adjusting flash level with each shot, TTL flash control can be locked for consistent results across a series of photographs.

Option	Description
IOCK WITH LAST FLASH	Flash output is locked at the value metered for the most recent photo.
	The camera emits a series of pre-flashes and locks flash output at the metered value.



- To use TTL lock, assign **TTL-LOCK** to a camera control and then use the control to enable or disable TTL lock (III 317).
 - Flash compensation can be adjusted while TTL lock is in effect.
 - Selecting LOCK WITH LAST FLASH displays an error message if no previously metered value exists.

LED LIGHT SETTING

Choose whether to use the flash unit's LED video light (if available) as a catchlight or AF-assist illuminator when taking photos.

Option	Role of LED video light in still photography	
CATCHLIGHT	Catchlight	
AF ASSIST	AF-assist illuminator	
AF ASSIST+CATCHLIGHT	AF-assist illuminator and catchlight	
OFF	None	



In some cases, this option can also be accessed via the **FLASH FUNCTION SETTING** menu.

COMMANDER SETTING

Choose groups when using the camera flash unit as a commander for Fujifilm optical wireless remote flash control. This option is available when the camera is used with clip-on flash units that support Fujifilm optical wireless flash control.

Options			
Gr A	Gr B	Gr C	OFF



In some cases, this option can also be accessed via the **FLASH FUNCTION SETTING** menu.

CH SETTING

Choose the channel used for communication between the commander and remote flash units. Separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.

Options			
CH1	CH2	CH3	CH4



MOVIE SETTING (Still Photography)

Adjust options for movies shot during still photography using the • (movie recording) button.

To display movie settings, press MENU/OK in the photo shooting display and select the **MOVIE SETTING**) tab.





The options available vary with the shooting mode selected.

MOVIE MODE

This item is also found in the movie menus (11 187). Changes here also apply to the item in the movie menus.

HIGH SPEED REC

This item is also found in the movie menus (1991). Changes here also apply to the item in the movie menus.

MEDIA REC SETTING

This item is also found in the movie menus (\$\equiv\$ 190). Changes here also apply to the item in the movie menus.

S IS MODE

This item is also found in the movie menus (\$\equiv 197\$). Changes here also apply to the item in the movie menus.

SE IS MODE BOOST

This item is also found in the movie menus (1971). Changes here also apply to the item in the movie menus.

AUDIO SETTING

Adjust audio-related settings for movie recording.

INTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in microphone.

Option	Description
AUTO	The camera adjusts the recording level automatically.
MANUAL	Adjust the recording level manually. Choose from 25 recording levels.
OFF	Turn the built-in microphone off.

EXTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for external microphones.

Option	Description
AUTO	The camera adjusts the recording level automatically.
MANUAL	Adjust the recording level manually. Choose from 25 recording levels.
OFF	Disable recording using external microphones.

MIC JACK SETTING

Specify the type of hardware connected via the microphone/remote release connector.

Option	Description
MIC	Choose this option for direct connection to an external micro-
	phone.
LINE	Choose this option for external audio devices connected via
	line output.

MIC LEVEL LIMITER

Reduces distortion caused by input that exceeds the limits of the microphone's audio circuits.

Options	
ON	OFF

WIND FILTER

Choose whether to enable wind noise reduction during movie recording.

Options	
ON	OFF

LOW CUT FILTER

Choose whether to enable the low-cut filter, reducing low-frequency noise during movie recording.

Options		
ON	OFF	

HEADPHONES VOLUME

Adjust the headphone volume.

Option	Description
0	Mute output to the headphones.
1—10	Choose a volume of from 1 to 10.

XLR MIC ADAPTER SETTING

Adjust microphone input channel settings and the like for use with XLR microphone adapters.

Option	Description
MIC INPUT CHANNEL	Record four-channel (quadraphonic) sound with the help of the camera's built-in microphone, or two-channel (stereo) sound using only a microphone connected via the XLR microphone adapter. • 4ch XLR+CAMERA: Record four-channel sound with the help of the camera's built-in microphone. • 2ch XLR ONLY: Record two-channel sound using only an external microphone connected via the XLR microphone adapter.
4ch AUDIO MONITORING	Choose the source of sound output to headphones or other audio monitors during movie recording. • XLR: Monitor sound from external microphones connected via the XLR microphone adapter. • CAMERA: Monitor sound from camera's built-in microphone.
HDMI 4ch AUDIO OUTPUT	Choose source of audio output to the HDMl connector. • XLR: Audio from external microphones connected via the XLR microphone adapter is output to the HDMl connector. • CAMERA: Audio from camera's built-in microphone is output to the HDMl connector.



- If an external microphone is connected to the camera's microphone jack, audio will be recorded not via the camera's built-in microphone but via the external microphone instead.
 - Four-channel recording is available only when MOV is selected for movie file format

MIC/REMOTE RELEASE

This item is also found in the movie menus (E 215). Changes here also apply to the item in the movie menus.

REC FRAME INDICATOR

This item is also found in the movie menus (1991). Changes here also apply to the item in the movie menus.



MOVIE SETTING (Movie Recording)

Adjust movie-recording options.

To display options for movie recording, press MENU/OK in the movie shooting display and select the **(MOVIE SETTING)** tab.



MOVIE SETTING LIST

View current movie recording settings.



These options can also be viewed by pressing the **DISP/BACK** button while the movie quick menu is displayed.

SHOOTING MODE

Choose a shooting mode for movies.

Options				
PROGRAM AE	SHUTTER PRIORITY AE	APERTURE PRIORITY AE	MANUAL	

MOVIE MODE

Before shooting movies, choose the frame rate and the frame size and aspect ratio.



- 1 In the shooting menu, select MOVIE SETTING, then highlight MOVIE MODE and press MENU/OK.
- 2 Press the focus stick (focus lever) up or down to highlight the desired frame size and aspect ratio (1) and press the stick right.
 - Choose 3:2 for 6.2 K movies with an aspect ratio of 3:2.
 - Choose **213 16:9** or **DCI 17:9** for 4K movies with aspect ratios of 16 or 17 to 9.
 - Choose 116:9 or 117:9 for Full HD movies with aspect ratios of 16 or 17 to 9. 129 16:9 and 129 17:9 permit longer movies than do 120 16:9 and 120 17:9.
- 3 Highlight a frame rate (2) and press MENU/OK.

Options					
23.98P	24P	25P	29.97P	50P	59.94P

The choice of frame rates varies with the movie mode.

BACKGROUND DEFOCUS MODE

If ON is selected, the camera will automatically set aperture to the lowest f-stop (maximum aperture) regardless of the setting selected by the user. This option takes effect only when the mode dial is in the **Vlog** position.

Options		
ON	OFF	



PRIORITY AE for **SHOOTING MODE** to ensure consistent exposure.

HIGH SPEED REC

Record high-frame-rate movies. High-frame-rate movies can be played back in slow motion, giving you time to view fast-moving subjects or details too fleeting for the naked eye. Select ON to choose the recording and playback rates separately.



Choose **ON HDMI ONLY** to record footage only to external recorders connected via HDMI. Note that this option does not support playback frame-rate selection.

Frame Size

Options		
EED 16:9	FID: 17:9	

Recording

Options			
100P	120P	200P	240P

Playback

Options					
23.98P	24P	25P	29.97P	50P	59.94P



- High-speed movies are recorded with no sound.
 - The footage recorded to the memory card is compressed with the goal of maintaining the selected bit rate.
 - The options available for playback rate vary with the option selected for rate of recording.

SELF-TIMER

Choose the delay between the shutter button being pressed all the way down and the start of recording.

- The display shows the number of seconds remaining before recording begins.
- To stop the timer before recording begins, press DISP/BACK.



Options				
3 SEC	5 SEC	10 SEC	OFF	

MEDIA REC SETTING

Choose movie file settings, including destination, file type, compression, and bit rate.

MEDIA REC SETTING

Choose movie file settings, including destination, file type, and compression.

Destination

Choose save options and save and output destinations for movies.

Option	Description
50	Movies are saved solely to the memory card.
HDMI	Movies are recorded only to devices connected via HDMI.

File Type and Compression

Choose the movie file type and compression.

Option	Description		
H.264 ALL-I 420 MOV	A highly-portable compressed format. Footage is recorded at a depth of 8 bits using All-I interframe compression and 4:2:0 chroma sub-sampling.		
H.264 LongGOP 420 MOV	A highly-portable compressed format. Footage is recorded at a depth of 8 bits using Long GOP interframe compression and 4:2:0 chroma sub-sampling.		
H.264 LongGOP 420 MP4	A format suitable for movies that will be uploaded to the web.		
H.265 ALL-I 420 MOV	A format with a higher compression ratio than H.264. Footage is recorded at a depth of 10 bits using All-I interframe compression and 4:2:0 chroma sub-sampling.		
H.265 LongGOP 420 MOV	A format with a higher compression ratio than H.264. Footage is recorded at a depth of 10 bits using Long GOP interframe compression and 4:2:0 chroma sub-sampling.		
H.265 ALL-I 422 MOV	A format with a higher compression ratio than H.264. Footage is recorded at a depth of 10 bits using All-I interframe compression and 4:2:2 chroma sub-sampling.		
H.265 LongGOP 422 MOV	A format with a higher compression ratio than H.264. Footage is recorded at a depth of 10 bits using Long GOP interframe compression and 4:2:2 chroma sub-sampling.		



- 4:2:2 chroma sub-sampling is used for footage output to external devices connected via HDMI; H.264 footage is output at a bit depth of 8 bits and footage in other formats at a depth of 10 bits.
 - All-I compresses each frame separately. Files are larger, but the fact that the data for each frame are saved separately makes this a good choice for footage that will be further processed.
 - Long GOP balances good image quality with high compression. Files are smaller, making it a good choice for longer movies.
 - The options available for file type and compression vary with the options selected for MOVIE MODE, HIGH SPEED REC, and F-Log/HLG RECORDING

Bit Rate

Choose the movie bit rate.

Options			
50Mbps	100Mbps	200Mbps	360Mbps



The options available for bit rate vary with the settings chosen for highspeed movie recording and compression. The actual bit rate may be slower than the selected value depending on the subject.

HDMI OUTPUT SETTING

Adjust settings for use when the shooting display is output to an HDMI device.

HDMI OUTPUT INFO DISPLAY

If **ON** is selected, HDMI devices to which the camera is connected will mirror the information in the camera display.

Options	
ON	OFF

HDMI REC CONTROL

Choose whether the camera sends movie start and stop signals to the HDMI device when the shutter button is pressed to start and stop movie recording.

Options	
ON	OFF

RAW OUTPUT SETTING

Choose whether to output RAW footage to external recorders connected via HDMI.

Option	Description	
RAW OUTPUT SETTING ATOMOS	Output RAW footage to ATOMOS video recorders.	
RAW OUTPUT SETTING Blackmagic	Output RAW footage to Blackmagic Design video recorders.	
OFF	Do not output RAW footage to external recorders.	



- RAW footage output to external devices is not saved to the memory cards inserted in the camera
 - In-camera image enhancements are not applied to the **RAW** output.
 - ISO sensitivity is restricted to values between ISO 1000 and ISO 12800.
 - Footage output to external devices is generated from the original RAW data and its quality, which varies with device specifications, may not be equal to that achieved as the end result of post-production or the like.
 - Focus zoom is not available when **RAW** is selected for HDMl output.
 - RAW footage output via HDMI to incompatible devices will not display correctly but will instead will display as a mosaic.
 - RAW output is disabled in some movie and high-speed recording modes.

FIX MOVIE CROP MAGNIFICATION

Fix the movie crop ratio at 1.29:1. This makes it easier to match crops after changing movie settings.

Options	
ON	OFF

F-Log/HLG RECORDING

Choose the destination for F-Log and HLG (Hybrid Log-Gamma) movies shot while the camera is connected to an HDMI device.

Option	Description
SO BU HOM BU	The footage is processed using film simulation and both
	saved to the memory card and output to the HDMI device.
SN FLOG HDM FLOG	The footage is recorded to the memory card and output to
20 eroð MWI eroð	the HDMI device in F-Log format.
50 FLog2 HDMI FLog2	The footage is recorded to the memory card and output to
	the HDMI device in F-Log2 format.
SOHLG HDMIHLG	The footage is recorded to the memory card and output to
	the HDMI device in HLG format.

- F-Log and FLog2 offer gentle gamma curves with wide gamuts suitable for further processing post-production. Sensitivity is restricted to values between ISO 640 and ISO 12800 (F-Log) or between ISO 1250 and ISO 12800 (FLog2).
 - The **HLG** (Hybrid Log-Gamma) recording format conforms to the international ITU-R BT2100 standard. When viewed on HLG-compatible displays, high-quality HLG footage faithfully captures high-contrast scenes and vivid colors. Sensitivity is restricted to values between ISO 1000 and ISO 12800.
 - Film simulation () footage is recorded using the option selected for **MIMAGE QUALITY SETTING** > **MFILM SIMULATION** in the shooting menu.

DATA LEVEL SETTING

Choose a signal range for movie recording.

Option	Description
VIDEO RANGE	The signal range for 8-bit movies is limited to 16–235 and that
VIDEO KANGE	for 10-bit movies to 64–940.
FULL RANGE	The signal ranges for 8-bit and 10-bit movies are respectively
FULL NAMUE	0–255 and 0–1023.

PHOTOMETRY

Options are the same as those for still photography, but settings must be adjusted separately (1991) 106).

FLICKERLESS S.S. SETTING

Options are the same as those for still photography, but settings must be adjusted separately (1991) 176).

Options	
ON	OFF

S IS MODE

Choose the image stabilization mode.

Option	Description
IBIS/OIS	Enable in-body (IBIS) and optical (OIS) image stabilization. IBIS
	is used with lenses that do not support OIS.
IRI2/012 + NI2	Enable in-body (IBIS), optical (OIS), and digital (DIS) image sta-
	bilization. The crop is adjusted according to the option select-
	ed for MOVIE MODE. This setting can compensate for more
	severe camera shake.
OFF	Image stabilization off; 🐠 appears in the display.



- The setting selected with the lens image stabilization switch, if any, takes priority over the setting chosen with the IS mode.
 - Note that vibration or camera sounds may be noticeable as image stabilization takes effect.

IS MODE BOOST

Choose the image stabilization level.

Option	Description
ON	Suitable for shots with no panning.
OFF	Suitable for shots with panning.



Assigning **IS MODE BOOST** to a function button allows the image stabilization level to be changed while recording is in progress (\$\equiv\$ 317).

S ISO

Adjust the camera's sensitivity to light.

Option	Description
H (25600)	Choose for special situations. Note that dynamic range may be reduced and that pictures may be mottled.
160-12800	Adjust sensitivity manually. Selected value is shown in display.
AUTO	Sensitivity is automatically adjusted in response to shooting conditions.

ZEBRA SETTING

Highlights that may be overexposed are shown by zebra stripes in the movie mode display.

Option	Description
ZEBRA RIGHT	/// Right-slanting stripes.
ZEBRA LEFT	Eeft-slanting stripes.
OFF	Stripes off.

ZEBRA LEVEL

Choose the brightness threshold for the zebra stripe display.

Options										
50	55	60	65	70	75	80	85	90	95	100

MOVIE OPTIMIZED CONTROL

Select **ON** to allow movie settings to be adjusted using only the command dials and touch-screen controls. You may find this helpful in preventing the sounds of camera controls being recorded with movies (27).

Options				
ON	OFF			

REC FRAME INDICATOR

If **ON** is selected, the borders of the display will turn red during movie recording.

Options				
ON	OFF			



The borders are displayed in green during high-speed movie recording.

TALLY LIGHT

Choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.





Indicator lamp

AF-assist illuminator

Option	Description
FRONT OFF REAR <u></u>	The indicator lamp lights during movie recording.
FRONT OFF REAR <u>a</u>	The indicator lamp blinks during movie recording.
FRONT REAR	The indicator and AF-assist lamps light during movie recording.
FRONT REAR OFF	The AF-assist lamp lights during movie recording.
FRONT <u>o</u> rear <u>o</u>	The indicator and AF-assist lamps blink during movie recording.
FRONT <u>i</u> Rear off	The AF-assist lamp blinks during movie recording.
FRONT OFF REAR OFF	The indicator and AF-assist lamps remain off during movie recording.

☆ ☆ COOLING FAN SETTING

This item is also found in the photo menus (11) 177).

EDIT/SAVE CUSTOM SETTING

Options are the same as those for still photography, but settings must be adjusted separately (1911) 144).

AUTO UPDATE CUSTOM SETTING

Options are the same as those for still photography, but settings must be adjusted separately (1911) 144).

☆ # CUSTOM MODE SETTING

Choose whether the current custom settings bank is to be used for still photography or movie recording (\$\equiv 82\$).

☆☆ WIRELESS COMMUNICATION

This item is also found in the photo menus (11) 177).



IMAGE QUALITY SETTING (Movie Recording)

Adjust image quality settings for movies.

To display image quality settings, press MENU/OK in the movie shooting display and select the (IMAGE QUALITY SETTING) tab.





The options available vary with the shooting mode selected.

FILM SIMULATION

Options are the same as those for still photography, but settings must be adjusted separately (132).

MONOCHROMATIC COLOR

Options are the same as those for still photography, but settings must be adjusted separately (1994).

WHITE BALANCE

Options are the same as those for still photography, but settings must be adjusted separately (136).

M DYNAMIC RANGE

Choose a dynamic range for movie recording.

Option	Description			
R100 100%				
R200 200%	ee "DYNAMIC RANGE" (🕮 140).			
R400 400%				



- AUTO (automatic dynamic range control) is not available during movie recording.
 - R200 200% is available at sensitivities of from ISO 320 to ISO 12800. **400 400%** at sensitivities of from ISO 640 to 12800.
 - This item is available when The item is selected for MOVIE **SETTING** > **F-Log/HLG RECORDING**.

TONE CURVE

Options are the same as those for still photography, but settings must be adjusted separately (1991).

COLOR

Options are the same as those for still photography, but settings must be adjusted separately (11).

SHARPNESS

Options are the same as those for still photography, but settings must be adjusted separately (11).

HIGH ISO NR

Options are the same as those for still photography, but settings must be adjusted separately (112).

INTERFRAME NR

Select AUTO to automatically adjust interframe noise reduction according to shooting conditions.

Options				
AUTO	OFF			



Make the camera is moved "Ghosting" may occur with moving subjects or if the camera is moved during shooting.

PERIPHERAL LIGHT CORRECTION

Select **ON** to enable peripheral illumination correction during movie recording.

Options				
ON	OFF			



- If **ON** is selected when a lens that does not transmit data to the camera is attached, peripheral illumination will be adjusted according to the option selected for **IMAGE QUALITY SETTING** > **IMAGE QUALITY SETTING** ADAPTER SETTING > PERIPHERAL ILLUMINATION CORRECTION in the shooting menu (\$\Pi\$ 147).
 - Select **OFF** if you notice banding in movies recorded using this option

☆ ☆ MOUNT ADAPTOR SETTING

This item is also found in the photo menus (11) 145). Changes to one apply to the other.



AF/MF SETTING (Movie Recording)

Adjust focus settings for movies.

To display AF/MF settings, press MENU/OK in the movie shooting display and select the M (AF/MF SETTING) tab.





The options available vary with the shooting mode selected.

🞥 FOCUS AREA

Choose the focus area for autofocus, manual focus, and focus zoom (96).



The focus area cannot be resized while recording is in progress.

FOCUS MODE

Choose the focus mode for movie recording.

Option	Description		
MF MANUAL FOCUS	Focus manually.		
IF CONTINUOUS AF	The camera focuses using AF-C.		
⊞ SINGLE AF	The camera focuses using AF-S.		

AF MODE

Choose how the camera selects the focus point for movie recording.

Option	Description
MULTI	The camera selects the focus area automatically.
AREA	The camera focuses on the subject in the selected focus area.

AF-C CUSTOM SETTING

Select focus-tracking options when recording movies with **CONTINUOUS AF** selected for **FOCUS MODE**.

TRACKING SENSITIVITY

Choose how long the camera waits to switch focus when an object enters the focus area behind or in front of the current subject. See "TRACKING SENSITIVITY" (1992) 150).

Options							
0	1	2	3	4			

- The higher the value, the longer it takes the camera to refocus when you attempt to switch subjects.
 - The lower the value, the more likely the camera is to switch focus from your subject to other objects in the focus area.

AF SPEED

Adjust the autofocus response speed. Choose higher values for faster response times, lower values for slower response times.

Options										
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5

™ WRAP FOCUS POINT

This item is also found in the photo menus (1153). Changes to one apply to the other.

AF ILLUMINATOR

This item is also found in the photo menus (1155). Changes to one apply to the other.

PRODUCT PRIORITY MODE

Selecting **ON** automatically optimizes settings for filming product reviews and the like. This option takes effect only when the mode dial is in the **Vlog** position.

Options		
ON	OFF	

Select **OFF** to adjust settings manually.

FACE/EYE DETECTION SETTING

Enable or disable Intelligent Face Detection when recording movies.

Option	Description	
FACE DETECTION ON	See "P FACE/EYE DETECTION SETTING" (1999).	
OFF	Intelligent Face Detection and eye priority off.	



SUBJECT DETECTION SETTING

Options are the same as those for still photography, but settings must be adjusted separately (1991).



The camera automatically switches to continuous AF when **SUBJECT DETECTION ON** is selected for **MAF/MF SETTING** > **MSSUBJECT DETECTION SETTING.** even if **SINGLE AF** is selected for **FOCUS** MODE. Subject detection is not available during manual focus, even when **SUBJECT DETECTION ON** is selected for **SUBJECT DETECTION SETTING.**

S AF+MF

Select ON to enable manual focus in SINGLE AF and CONTINUOUS AF modes. Manual focus can be suspended by pressing the AFON button.

Options	
ON	OFF

MF ASSIST

Choose how focus is displayed when MANUAL FOCUS is selected for FOCUS MODE (102).

Option	Description	
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose a	
FOCUS PEAK HIGHLIGHT	color and peaking level.	
FOCUS METER	A needle indicates whether focus is in front of or behind	
FOCUS MILTER	the subject.	
FOCUS METER + PEAK		
HIGHLIGHT	Focus is indicated by both a meter and peak highlights.	
OFF	Focus is displayed normally (MF assist cannot be used).	

FOCUS CHECK

Options are the same as those for still photography, but settings must be adjusted separately (11 161).

This item is also found in the photo menus (1991). Changes to one apply to the other.



Instant AF is disabled during movie recording. Use instant AF to focus before recording begins.

☆☆ DEPTH-OF-FIELD SCALE

This item is also found in the photo menus (1998). Changes to one apply to the other.

AF RANGE LIMITER

This item is also found in the photo menus (1991). Changes to one apply to the other.

TOUCH SCREEN MODE

Choose the shooting operations performed using touch controls.

Mode	Description	
Mode	Tapping the display focuses the camera on the selected point. Use the shutter button to start and stop recording. • When SINGLE AF is selected for FOCUS MODE, you can	
AF AF	refocus at any time by tapping your subject in the display. • When CONTINUOUS AF is chosen for FOCUS MODE, the camera will continuously adjust focus for changes in the distance to the subject at point selected by tapping the display. • When MANUAL FOCUS is selected for FOCUS MODE, the camera will focus using autofocus if you tap the display before recording begins; during recording, you can tap the display	
again to move the focus area to a new location. Tap to position the focus area. <i>Use the shutter button and stop recording.</i> • When SINGLE AF is selected for FOCUS MODE , reposition the focus area at any time by tapping you in the display. To focus, use the button to which AF-C signed. • When CONTINUOUS AF is chosen for FOCUS MC camera will continuously adjust focus for changes in tance to the subject at point selected by tapping the • When MANUAL FOCUS is selected for FOCUS you can tap the display to position the focus area of subject.		
OFF OFF	Touch screen mode off.	



 
- The behavior of the touch screen varies with the AF mode.
 - To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > TOUCH SCREEN SETTING.

-Touch Controls for Focus Zoom-

Different touch controls are used during focus zoom (focus check enabled).

Central Area


Tapping the center of the display performs the operations below.



Mode	Operation performed
AF	SINGLE AF: AF
Ar	MANUAL FOCUS: Instant AF
AREA	SINGLE AF: AF
AREA	MANUAL FOCUS: Instant AF
OFF	SINGLE AF/MANUAL FOCUS: OFF

Other Areas

 Tapping other areas simply scrolls the display, whether during still photography or movie recording and regardless of the option selected for touch screen mode.



FOCUS CHECK LOCK

Choose whether focus zoom remains in effect once movie recording begins.

Options	
ON	OFF



AUDIO SETTING (Movie Recording)

Adjust settings for audio recorded during filming.

To display audio settings, press MENU/OK in the movie shooting display and select the ▲ (AUDIO SETTING) tab.



INTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in microphone.

Option	Description	
AUTO The camera adjusts the recording level automatically.		
MANUAL	Adjust the recording level manually. Choose from 25 recording levels.	
OFF Turn the built-in microphone off.		

EXTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for external microphones.

Option	Description	
AUTO	The camera adjusts the recording level automatically.	
MANUAL	Adjust the recording level manually. Choose from 25 recording levels.	
OFF Disable recording using external microphones.		

MIC JACK SETTING

Specify the type of hardware connected via the microphone/remote release connector.

Option	Description	
MIC	Choose this option for direct connection to an external microphone.	
IINF	Choose this option for external audio devices connected via line output.	

MIC LEVEL LIMITER

Reduces distortion caused by input that exceeds the limits of the microphone's audio circuits.

Options	
ON	OFF

WIND FILTER

Choose whether to enable wind noise reduction during movie recording.

Options	
ON	OFF

LOW CUT FILTER

Choose whether to enable the low-cut filter, reducing low-frequency noise during movie recording.

Options	
ON	OFF

HEADPHONES VOLUME

Adjust the headphone volume.

	Option	Description	
Mute output to the headphones.			
1—10 Choose a volume of from 1 to 10.			

MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
≪ MIC	₽ REMOTE

XLR MIC ADAPTER SETTING

Adjust microphone input channel settings and the like for use with XLR microphone adapters.

Option Description	
MIC INPUT CHANNEL	Record four-channel (quadraphonic) sound with the help of the camera's built-in microphone, or two-channel (stereo) sound using only a microphone connected via the XLR microphone adapter. • 4ch XLR+CAMERA: Record four-channel sound with the help of the camera's built-in microphone. • 2ch XLR ONLY: Record two-channel sound using only an external microphone connected via the XLR microphone adapter.
4ch AUDIO MONITORING	Choose the source of sound output to headphones or other audio monitors during movie recording. • XLR: Monitor sound from external microphones connected via the XLR microphone adapter. • CAMERA: Monitor sound from camera's built-in microphone.
HDMI 4ch AUDIO OUTPUT	Choose source of audio output to the HDMl connector. • XLR: Audio from external microphones connected via the XLR microphone adapter is output to the HDMl connector. • CAMERA: Audio from camera's built-in microphone is output to the HDMl connector.



- If an external microphone is connected to the camera's microphone jack, audio will be recorded not via the camera's built-in microphone but via the external microphone instead.
 - Four-channel recording is available only when MOV is selected for movie file format



TIME CODE SETTING (Movie Recording)

Adjust time code (hour, minute, second, and frame number) display settings for movie recording.

To display time code settings, press MENU/OK in the movie shooting display and select the (TIME CODE SETTING) tab.



TIME CODE DISPLAY

Select **ON** to display time codes during movie recording and playback.

Options	
ON	OFF

START TIME SETTING

Choose the time code starting time.

Option		Description	
	MANUAL INPUT	Choose a start time manually.	
CURRENT TIME Set the start time to the current time. RESET Set the start time to 00:00:00.		Set the start time to the current time.	
		Set the start time to 00:00:00.	

COUNT UP SETTING

Choose whether time is clocked continuously or only during movie recording.

Option	Description	
REC RUN	Time is clocked only during movie recording.	
FREE RUN	Time is clocked continuously.	

DROP FRAME

At frame rates of 59.94P, and 29.97P, a discrepancy will gradually develop between the time code (measured in seconds) and the actual recording time (measured in fractions of a second). Choose whether the camera drops frames as necessary to match the recording time to the time code.

Option	Description	
ON	The camera drops frames as necessary to maintain a strict	
UN	match between the time code and the actual recording time.	
OFF	Prames are not dropped.	



The time code display varies with the option selected.



TC:00:00:0@0 ON TC:00:00:0(!)0

• Selecting a frame rate of 23.98P disables frame drop.

HDMI TIME CODE OUTPUT

Choose whether time codes are output to HDMI devices.


Options		
ON OFF		

Playback and the Playback Menu

The Playback Display

This section lists the indicators that may be displayed during playback.




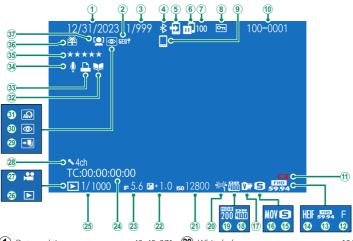


	200 100 100 100 100 100 100 100 100 100
1 Date and time43, 45, 271	20 White balance
2 Location data305	21 Sensitivity104
3 Frame-number display	22 Exposure compensation
Bluetooth ON/OFF	23 Aperture72, 75, 77
5 Image transfer order	24 Time code217
6 Image transfer status	25 Shutter speed72, 73, 77
7 Number of frames selected for upload	26 Playback mode indicator50
8 Protected image233	27) Movie icon63
9 Bluetooth host247	28 Four-channel (quadrophonic) audio
(10) Frame number303	184, 216
(11) Low battery42	29 HDR image116
(12) Image quality	30 Red-eye removal indicator
(13) Movie mode	31) Filter81
131	32) Photobook assist indicator240
(15) Image size128	33 DPOF print indicator242
(16) Film format	34 Voice memo
7 Film simulation	35 Rating236
18 Dynamic range140	36 Gift image50
(19) HDR116	37) Face detection indicator156

The DISP/BACK Button

 
The **DISP/BACK** button controls the display of indicators during playback.




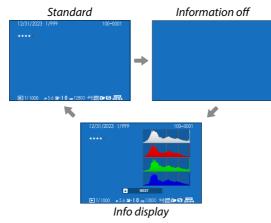

-Viewing Photo Information-

The photo information display changes each time the focus stick (focus lever) is pressed up.

 

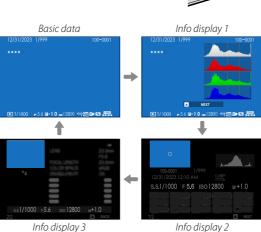

Zooming in on the Focus Point

Press the center of the focus stick (focus lever) to zoom in on the focus point. Press again to return to full-frame playback.



 
Viewing Pictures

Read this section for information on playback zoom and multi-frame playback.

Use the rear command dial to go from full-frame playback to playback zoom or multi-frame playback.



Press DISP/BACK or MENU/OK to exit playback zoom or multi-frame playback and return to full-frame playback.



Full-frame playback



Multi-frame playback



Nine-frame view





Hundred-frame view



Playback zoom



Medium zoom





Maximum zoom



Playback Zoom

Rotate the rear command dial right to zoom in on the current picture, left to zoom out. To exit zoom, press DISP/BACK or MENU/OK.



The maximum zoom ratio varies with the option selected for 🔟 IMAGE **OUALITY SETTING > IMAGE SIZE.**

Scroll-

When the picture is zoomed in, the focus stick (focus lever) can be used to view areas of the image not currently visible in the display.



Navigation window

Multi-Frame Playback

To change the number of images displayed, rotate the rear command dial left when a picture is displayed full frame.



- Use the focus stick (focus lever) to highlight images and press MENU/OK to view the highlighted image full frame.
 - In the nine- and hundred-frame displays, press the focus stick up or down to view more pictures.



The Playback Menu

Adjust playback settings.

The playback menu is displayed when you press **MENU/OK** in playback mode.



RAW CONVERSION

 
Even if you don't have a computer, you can use the camera to modify RAW pictures and save them in other formats.

Saving RAW Pictures in Another Format

- 1 Display a RAW picture.
- **)** Highlight **RAW CONVERSION** in the playback menu.
- 3 Press MENU/OK.
 A list of settings will be displayed.



- 4 Press the focus stick (focus lever) up or down to highlight a setting.
- 5 Press the focus stick right to display options.



- 6 Press the focus stick up or down to highlight the desired option.
- 7 Press MENU/OK to select the highlighted option. The settings list shown in Step 3 will be displayed. Repeat Steps 4 to 7 to adjust additional settings.
- 8 Press the Q button.
 A preview of the copy will be displayed.
- 9 Press MENU/OK. The copy will be saved.
- RAW conversion options can also be displayed by pressing the **Q** button when a RAW pictures is displayed during playback.

The settings that can be adjusted when converting pictures from RAW to another format are:

Setting	Description	
REFLECT SHOOTING COND.	Create a copy using the settings in effect at the time the photo was taken.	
FILE TYPE	Choose a file format.	
IMAGE SIZE	Choose an image size.	
IMAGE QUALITY	TY Adjust image quality.	
PUSH/PULL PROCESSING	Adjust exposure.	
DYNAMIC RANGE	Enhance details in highlights for natural contrast.	
D RANGE PRIORITY	Reduce loss of detail in highlights and shadows for natural-looking results when photographing high-con- trast scenes.	
FILM SIMULATION	Simulate the effects of different types of film.	
MONOCHROMATIC COLOR	Choose a monochrome tint for photographs taken using FILM SIMULATION > AP ACROS and BP MONOCHROME .	
GRAIN EFFECT	Add a film grain effect.	
COLOR CHROME EFFECT	Increase the range of tones available for rendering colors that tend to be highly saturated, such as reds, yellows, and greens.	

Setting	Description	
COLOR CHROME FX BLUE	Increase the range of tones available for rendering blues.	
WHITE BALANCE	Adjust white balance.	
WB SHIFT	Fine-tune white balance.	
TONE CURVE	Adjust highlights and shadows.	
COLOR	Adjust color density.	
SHARPNESS	Sharpen or soften outlines.	
HIGH ISO NR	Process the copy to reduce mottling.	
CLARITY	Increase definition.	
LENS MODULATION OPTIMIZER	Improve definition by adjusting for diffraction and th slight loss of focus at the periphery of the lens.	
COLOR SPACE	Choose the color space used for color reproduction.	
HDR MODE	Reduce loss of detail in highlights and shadows.	

① Some settings may be unavailable depending on the options chosen when the picture was taken.

HEIF TO JPEG/TIFF CONVERSION

Convert HEIF pictures to JPEG or TIFF.

SELECT IMAGES

Select HEIF pictures for conversion.

FILE FORMAT

Choose a format for the converted pictures.

Options			
JPEG	TIFF 8bit	TIFF 16bit	

ERASE

Delete individual pictures, multiple selected pictures, or all pictures.

Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

Option	Description
FRAME	Delete pictures one at a time.
SELECTED FRAMES	Delete multiple selected pictures.
ALL FRAMES	Delete all unprotected pictures.

FRAME

- 1 Select FRAME for ERASE in the playback menu.
- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press MENU/OK to delete.
- A confirmation dialog is not displayed before pictures are deleted; be sure the correct picture is selected before pressing **MENU/OK**.
 - Additional pictures can be deleted by pressing MENU/OK. Press the focus stick left or right to scroll through pictures and press MENU/OK to delete.

SELECTED FRAMES

- 1 Select **SELECTED FRAMES** for **ERASE** in the playback menu.
- 2 Highlight pictures and press MENU/OK to select.
 - Selected pictures are indicated by check marks (
 - To deselect a highlighted picture, press MENU/OK again.
- 3 When the operation is complete, press DISP/BACK to display a confirmation dialog.
- 4 Highlight OK and press MENU/OK to delete the selected pictures.
- Pictures in photobooks or printer orders are shown by **1**.

ALL FRAMES

- 1 Select ALL FRAMES for ERASE in the playback menu.
- **2** A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK** to delete all unprotected pictures.
- Pressing DISP/BACK cancels deletion; note that any pictures deleted before the button was pressed cannot be recovered.
 - If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

CROP

Create a cropped copy of the current picture.

- 1 Display the desired picture.
- 2 Select CROP in the playback menu.
- 3 Use the rear command dial to zoom in and out and press the focus stick (focus lever) up, down, left, or right to scroll the picture until the desired portion is displayed.
- 4 Press MENU/OK to display a confirmation dialog.
- 5 Press MENU/OK again to save the cropped copy to a separate file.
- The higher the zoom ratio, the smaller the number of pixels in the cropped copy.
 - If the size of the final copy will be 640, YES will be displayed in yellow.
 - All copies have an aspect ratio of 3:2.

RESIZE

Create a small copy of the current picture.

- 1 Display the desired picture.
- 2 Select **RESIZE** in the playback menu.
- 3 Highlight a size and press MENU/OK to display a confirmation dialog.
- 4 Press MENU/OK again to save the resized copy to a separate file.
- The sizes available vary with the size of the original image.

PROTECT

Protect pictures from accidental deletion. Highlight one of the following options and press **MENU/OK**.

Option	Description
FRAME	Protect selected pictures. Press the focus stick (focus lever) left or right to view pictures and press MENU/OK to select or deselect.
	Press DISP/BACK when the operation is complete. Protect all pictures.
RESET ALL	Remove protection from all pictures.

- ① Protected pictures will be deleted when the memory card is formatted.
- Protecting images currently selected for upload to paired smartphones or tablets removes upload marking.

IMAGE ROTATE

Rotate pictures.

- 1 Select ON for **☑** SCREEN SET-UP > AUTOROTATE PB.
- 2 Display the desired picture.
- 3 Select IMAGE ROTATE in the playback menu.
- 4 Press the focus stick (focus lever) down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 5 Press MENU/OK. The picture will automatically be displayed in the selected orientation whenever it is played back on the camera.
- Protected pictures cannot be rotated. Remove protection before rotating pictures.
 - The camera may not be able to rotate pictures created with other devices. Pictures rotated on the camera will not be rotated when viewed on a computer or on other cameras.
 - Pictures taken with SCREEN SET-UP > AUTOROTATE PB are automatically displayed in the correct orientation during playback.

VOICE MEMO SETTING

Add a voice memo to the current photograph.

- 1 Select **ON** for **VOICE MEMO SETTING** in the playback menu.
- 2 Display a photo to which you wish to add a voice memo.
- **3** Press and hold the **AFON** button to record a voice memo. Recording ends after 30 s or when you release the button.
- The new memo will be recorded over any existing memos.
 - Voice memos cannot be added to protected pictures.
 - Deleting the picture also deletes the memo.

-Playing Voice Memos-

Pictures with voice memos are indicated by 🗣 icons during playback.

- To play the memo, press the AFON button.
- A progress bar will be displayed while the memo plays back.
- Volume can be adjusted by pressing MENU/OK to pause playback and then
 pressing the focus stick (focus lever) up or down to adjust the volume.
 Press MENU/OK again to resume playback. Volume can also be adjusted using SOUND SET-UP > PLAYBACK VOLUME.

RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").
- The focus stick (focus lever) can be used in place of the front command dial to choose a picture.
 - The rating dialog can also be displayed by pressing the AEL button in single-frame, nine-frame, or hundred-frame playback.
 - Use touch controls to zoom in or out.
 - Ratings cannot be applied to:
 - Protected pictures
 - Movies
 - "Gift" pictures (pictures taken with other cameras)

TRANSFER IMAGE TO SMARTPHONE

Select photos for upload to a paired smartphone or tablet via Bluetooth (1992) 247).

- 1 Select TRANSFER IMAGE TO SMARTPHONE > SELECT IMAGE & TRANSFER.
 - Select **RESET ORDER** to remove "upload to smartphone" marking from all pictures before proceeding.
- 2 Mark pictures for upload. Highlight pictures and press MENU/OK to mark them for upload.
 - To display only pictures that meet selected criteria, press DISP/BACK before marking begins.
 - To select all pictures, press the Q button.
 - Selecting any two pictures with the AEL button also selects all pictures between them.
- 3 Press DISP/BACK and select START TRANSFER.

 
The selected pictures will be uploaded.





-Filtering Pictures-

To display only pictures that meet selected criteria, press DISP/BACK in the picture-selection dialog and select **FILTERING**.





Selecting FILTERING removes any existing upload marking.



- Image transfer orders can contain a maximum of 999 pictures.
 - The following cannot be selected for upload:
 - Protected pictures
 - Movies
 - RAW images
 - "Gift" pictures (pictures taken with other cameras)
 - If ON is selected for both IMAGE TRANSFER WHILE POWER OFF and Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF in the network/USB settings menu, upload to the paired device will continue even while the camera is off.
 - When SELECT & SMARTPHONE TRANSFER ORDER is selected for **■ BUTTON/DIAL SETTING** > **■ ISO BUTTON SETTING**, the picture-selection dialog can be displayed by pressing the **ISO** button.

☆ ☆ WIRELESS COMMUNICATION

Connect to smartphones running the latest apps. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera



- For downloads and other information, visit: https://app.fujifilm-dsc.com/
 - If **? WIRELESS COMMUNICATION** is selected for **☑ BUTTON**/ **DIAL SETTING** > **ISO BUTTON SETTING**, you can connect to the smartphone using the ISO button.

SLIDE SHOW

View pictures in an automated slide show. Press MENU/OK to start and press the focus stick (focus lever) right or left to skip ahead or back. Press DISP/BACK at any time during the show to view onscreen help. The show can be ended at any time by pressing MENU/OK.



The camera will not turn off automatically while a slide show is in progress

PHOTOBOOK ASSIST

Create books from your favorite photos.

Creating a Photobook

- 1 Select NEW BOOK for Declar Back Menu > PHOTOBOOK ASSIST.
- 2 Scroll through the images and press the focus stick (focus lever) up to select or deselect. Press MENU/OK to exit when the book is complete.
 - Neither photographs [40] or smaller nor movies can be selected for photobooks.
 - The first picture selected becomes the cover image. Press the focus stick down to select the current image for the cover instead.
- 3 Highlight COMPLETE PHOTOBOOK and press MENU/OK (to select all photos for the book, choose SELECT ALL). The new book will be added to the list in the photobook assist menu.
- Books can contain up to 300 pictures.
 - Books that contain no photos are automatically deleted.

Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the focus stick (focus lever) left or right to scroll through the pictures.

Editing and Deleting Photobooks


Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the onscreen instructions.

- EDIT: Edit the book as described in "Creating a Photobook".
- ERASE: Delete the book.

PRINT ORDER (DPOF)

Create a digital "print order" for DPOF-compatible printers.

- 1 Select PLAY BACK MENU > PRINT ORDER (DPOF).
- **>** Select WITH DATE to print the date of recording on pictures, WITHOUT DATE to print pictures without dates, or **RESET ALL** to remove all pictures from the print order before proceeding.
- 3 Display a picture you wish to include in or remove from the print order.
- 4 Press the focus stick (focus lever) up or down to choose the number of copies (up to 99).

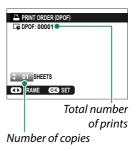

- To remove a picture from the order, press the focus stick down until the number of copies is 0.
 - Repeat steps 3–4 to complete the print order.
- 5 The total number of prints is displayed in the monitor. Press MENU/OK to exit.
- The pictures in the current print order are indicated by a A icon during playback.
 - Print orders can contain a maximum of 999 pictures from a single memory card.
 - If a memory card is inserted containing a print order created by another camera, you will need to delete the order before creating as described above

instax PRINTER PRINT

To print pictures to optional Fujifilm instax SHARE printers, first select instax PRINTER CONNECTION SETTING in the network/ USB settings menu and enter the instax SHARE printer name (SSID) and password, then follow the steps below.

- 1 Turn the printer on.
- **>** Select **□ PLAY BACK MENU** > **instax** PRINTER PRINT. The camera will connect to the printer.



3 Use the focus stick (focus lever) to instax Printer Print display the picture you want to print, then press MENU/OK. The picture will be sent to the printer and printing will start.

 




- Pictures taken with other cameras cannot be printed.
 - The area printed is smaller than the area visible in the LCD monitor
 - The displays may vary depending on the printer connected.

DISP ASPECT

Choose the aspect ratio used for the display of still pictures on High Definition (HD) devices (this option is available only when an HDMI cable is connected).







Choose **16:9** to display photos with an aspect ratio of 3:2 full screen. The pictures will be displayed full screen with tops and bottoms cropped out.

Network/USB Features and Settings

Overview

This chapter outlines features that can among other things be used to upload pictures to, or control the camera and take pictures remotely from, a smartphone or computer.

Supported Features

This camera supports the following features:

Feature	Description	
Connecting to the smartphone app	Connect to smartphones via Bluetooth® and upload pictures or control the camera remotely while the smartphone displays the view through the lens.	
USB card readers	Connect a card reader to a computer or smartphone via USB and copy pictures from memory cards.	250
Web camera	Connect the camera to a computer via USB for use as a webcam.	255
instax printers	Print pictures on connected instax printers.	256
Tethered photography	Take pictures from a computer to which the camera is connected ("tethered") via wireless LAN or USB.	258
RAW processing	Harness the power of the camera's image processing engine when processing RAW pictures on a computer.	
Saving and Loading Settings	Save camera settings to, or load existing settings from, a computer.	261

Connecting to Smartphones (Bluetooth)

Connect the camera with a smartphone via Bluetooth® to copy pictures to the smartphone or control the camera remotely while previewing the view through the lens in the smartphone display.



The camera automatically switches to a wireless LAN connection when copying pictures to the smartphone.

Installing Smartphone Apps

Before establishing a connection between the smartphone and camera, you will need to install at least one dedicated smartphone app. Visit the following website and install the desired apps on your phone.

https://app.fujifilm-dsc.com/





The apps available vary with the smartphone operating system.

Connecting to a Smartphone

Pair the camera with the smartphone and connect via Bluetooth[®].

1 Press the (Bluetooth) button when the camera is in shooting mode.



You can also proceed directly to Step 3 by holding the 🛭 button during playback.

2 Highlight Bluetooth and press MENU/OK.



3 Highlight PAIRING and press MENU/OK.



4 Launch the app on the smartphone and pair the smartphone with the camera.

More information is available at the following website: https://app.fujifilm-dsc.com/

When pairing is complete, the camera and smartphone will automatically connect via Bluetooth. A smartphone icon and a white Bluetooth icon will appear in the camera display when a connection is established.



- Once the devices have been paired, the smartphone will automatically connect to the camera when the app is launched.
 - Disabling Bluetooth when the camera is not connected to a smartphone reduces the drain on the battery.

Using the Smartphone App

Read this section for information on the options available for downloading pictures to your smartphone using the smartphone app.

Before proceeding, select **ON** for Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF

Selecting and Downloading Pictures Using the Smartphone App

You can download selected pictures to a smartphone using the smartphone app.

More information is available from the following website:

https://app.fujifilm-dsc.com/

Uploading Pictures as They Are Taken

Pictures taken with ON selected for Bluetooth/SMARTPHONE SETTING > AUTO IMAGE TRANSFER ORDER in the network/USB setting menu will automatically be uploaded to the paired device.



- If ON is selected for both IMAGE TRANSFER WHILE POWER OFF and Bluetooth/SMARTPHONE SETTING > Bluetooth ON/OFF in the network/USB settings menu, upload to the paired device will continue even while the camera is off.
 - Selecting ON for Bluetooth/SMARTPHONE SETTING > RESIZE **IMAGE FOR SMARTPHONE** in the network/USB setting menu enables compression, reducing file size for upload (\$\equiv 264)\$.
 - Pictures are uploaded in the format chosen for **Bluetooth/ SMARTPHONE SETTING > SELECT FILE TYPE** in the network/USB setting menu.

Selecting Pictures for Upload in the Playback Menu

Use TRANSFER IMAGE TO SMARTPHONE > SELECT IMAGE & TRANSFER to select pictures for upload to a paired smartphone or tablet via Bluetooth® (2237).



Connecting to Smartphones (USB)

Connect to smartphones and computers via USB to upload pictures from the camera.

Copying Pictures to a Smartphone

 
Before connecting to the smartphone to upload pictures via USB, select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.

For Customers Using Android Devices

How you will connect the camera depends on the type of USB connector with which your smartphone is equipped.


Type-C

Use the supplied USB cable.



Micro-B


Use a USB on-the-go (OTG) cable.

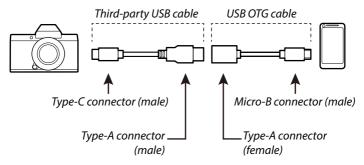

- The smartphone must support USB OTG.
 - The desired results cannot be achieved with a USB Type-C-to-Mirco-B cable. Use an OTG cable.
 - 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
 - 2 Select USB CARD READER for CONNECTION MODE.
 - **3** Connect the camera and smartphone using a USB cable.
 - If the smartphone asks for permission for an app other than the "Camera Importer" to access the camera, tap "Cancel" and move on to the next step.
 - 4 On your smartphone, tap the notification "Connected to USB PTP".
 - 5 From the recommended apps, select "Camera Importer". The app will automatically start and allow you to import photos and movies to your smartphone.
 - If the message "There is no MTP device connected" appears on the app, please try again from step 3.

For Customers Using iOS


Use a camera adapter. Given that the camera is equipped with a USB Type-C connector, you will need to supply a cable with a USB Type-A connector for connection to the camera adapter.

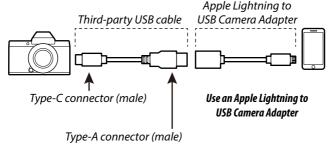

- 1 Select POWER SUPPLY OFF/COMM ON for USB POWER **SUPPLY/COMM SETTING** in the network/USB setting menu.
- Select USB CARD READER for CONNECTION MODE.
- **?** Connect the camera and smartphone using a USB cable. Launch the Photos app to import photos and movies to your smartphone.
- A Type-C to Type-C USB cable is required for connection to iPad and other devices equipped with USB Type-C connectors.
 - The desired results cannot be achieved with a USB Type-C-to-Lightning cable. Use a camera adapter.

Connecting the Camera and Computer

- 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- Select USB CARD READER for CONNECTION MODE.
- **3** Turn the camera off.
- 4 Turn the computer on.
- 5 Connect a USB cable.

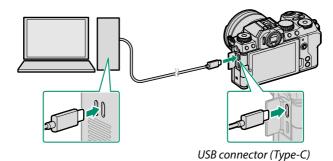

- The USB cable must be no more than 1 m (3.3 ft.) long and be suitable for data transfer
- 6 Turn the camera on.
- **7** Copy pictures to your computer.
 - Mac 05 X/05 X/mac05: Pictures can be copied to your computer using Image Capture (supplied with your computer) or other er software. Use a card reader to copy files over 4 GB in size.
 - **Windows**: Pictures can be copied to your computer using apps supplied with the operating system.

- Turn the camera off before disconnecting the USB cable.
 - When connecting USB cables, be sure the connectors are fully inserted in the correct orientation. Connect the camera directly to the computer; do not use a USB hub or keyboard.
 - Loss of power during transfer could result in loss of data or damage to the memory card. Insert a fresh or fully-charged battery before connecting the camera.
 - If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
 - Make sure that the indicator lamp is off or lit green before turning the camera off.
 - Do not disconnect the USB cable while transfer is in progress. Failure to observe this precaution could result in loss of data or damage to the memory card.
 - Disconnect the camera before inserting or removing memory cards.
 - In some cases, it may not be possible to access pictures saved to a network server using the software in the same way as on a standalone computer.
 - Do not immediately remove the camera from the system or disconnect the USB cable once the message stating that copying is in progress clears from the computer display. If the number of images copied is very large, data transfer may continue after the message has ceased to be displayed.
 - The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

Using the Camera as a Webcam

The camera can be connected to a computer for use as a webcam.

- 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- Select USB WEBCAM for CONNECTION MODE.
- 3 Connect the camera to the computer via USB and then turn the camera on (➡ 253).
- 4 Select the camera in the app where it will be used as a webcam.



instax SHARE Printers

 
Print pictures from your digital camera to instax SHARE printers.

Establishing a Connection

Select **instax PRINTER CONNECTION SETTING** in the network/USB setting menu and enter the instax SHARE printer name (SSID) and password.

-The Printer Name (SSID) and Password-

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



Printing Pictures

- 1 Turn the printer on.
- Select □ PLAY BACK MENU > instax
 Instax Instance PRINTER PRINTER PRINTER PRINTER PRINTER PRINTER PRINTER PRINT. The camera will connect to the printer.



3 Use the focus stick (focus lever) to instance printer print display the picture you want to print, then press MENU/OK.



- Pictures taken with other cameras cannot be printed.
 - The area printed is smaller than the area visible in the LCD monitor.
 - The displays may vary depending on the printer connected.
- 4 The picture will be sent to the printer and printing will start.

Tethered Photography

Computers connected via USB or wireless LAN can be used to control the camera and take photographs remotely or to download pictures from the camera for storage.

Tethered Photography via USB

Connect the camera to a computer via USB for tethered photography.

- 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- 2 Select USB TETHER SHOOTING AUTO or USB TETHER SHOOTING FIXED for CONNECTION MODE.
 - If **USB TETHER SHOOTING AUTO** is selected, tethered photography will be enabled automatically when the computer to which the camera is connected is turned on. When the computer is off or not connected, tethered photography will be suspended and pictures will be saved to the camera memory card.
 - If the camera is disconnected from the computer while USB TETHER SHOOTING FIXED is selected, it will continue to function in tethered mode and no pictures will be recorded.
- 3 Connect the camera to the computer via USB and then turn the camera on (■ 253).

- 4 Take pictures via tethered photography. Use software such as "Adobe Lightroom Classic + FUJIFILM Tether Shooting Plug-in", "FUJIFILM X Acquire", or "Capture One".
- To take pictures when using X Acquire, use the shutter button on the camera.
 - For more information on tethered photography, visit the website below.
 - https://app.fujifilm-dsc.com/en/tether/
 - Visit the website below for information on the software used. https://fujifilm-x.com/products/software/

Tethered Photography via Wireless LAN

Connect the camera to a computer via wireless LAN for tethered photography.

- 1 Connect the camera to a wireless LAN using **NETWORK SETTING** in the network/USB setting menu.
- 2 Select WIRELESSTETHER SHOOTING FIXED for CONNECTION MODE.
- 3 Take pictures via tethered photography.
 Use software such as "Adobe Lightroom Classic + FUJIFILM Tether Shooting Plug-in" or "FUJIFILM X Acquire".
- To take pictures when using X Acquire, use the shutter button on the camera
 - For more information on tethered photography, visit the website below.
 - https://app.fujifilm-dsc.com/en/tether/
 - Visit the website below for information on the software used. https://fujifilm-x.com/products/software/

RAW Processing

Using X RAW STUDIO, you can harness the power of the camera's image processing engine when processing RAW pictures on a computer.

- 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- 2 Select USB RAW CONV./BACKUP RESTORE for CONNECTION MODE.
- 3 Connect the camera to the computer via USB and then turn the camera on (■ 253).
- 4 Launch X RAW STUDIO.
 RAW processing can be performed using X RAW STUDIO.
- Visit the website below for information on the software used. https://fujifilm-x.com/products/software/

Saving and Loading Settings

Camera settings can be saved to or loaded from computers using FUJIFILM X Acquire.

Saving and Loading Settings Using a Computer

- 1 Select either AUTO or POWER SUPPLY OFF/COMM ON for USB POWER SUPPLY/COMM SETTING in the network/USB setting menu.
- 2 Select USB RAW CONV./BACKUP RESTORE for CONNECTION MODE.
- 3 Connect the camera to the computer via USB and then turn the camera on (■ 253).
- 4 Launch FUJIFILM X Acquire. Camera settings can be saved or loaded using FUJIFILM X Acquire.
- Visit the website below for information on the software used. https://fujifilm-x.com/products/software/



Network/USB Setting Menus

Adjust camera network and USB settings.

To access network/USB settings from the shooting or playback display, press MENU/OK and select the

✓ (network/USB) setting) tab.



Bluetooth/SMARTPHONE SETTING

Adjust Bluetooth-related settings as well as a variety of smartphone-related settings.



Be sure your smartphone or tablet is running the latest version of the smartphone app.

PAIRING REGISTRATION

Pair the camera with a smartphone or tablet to which the smartphone app has been installed.

SELECT PAIRING DESTINATION

Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION. Select NO **CONNECTION** to exit without connecting.

DELETE PAIRING REG.

Delete existing pairing information for a smartphone or tablet.



The selected device will be removed from the pairing list.

Bluetooth DEVICE LIST

List the devices with which the camera is paired (other than the smartphone) or end pairing with selected devices.

Bluetooth ON/OFF

If **ON** is selected, the camera will automatically connect with paired smartphones or tablets running the smartphone app.

Options	
ON	OFF

AUTO IMAGE TRANSFER ORDER

Select **ON** to upload pictures automatically as they are taken.

Options	
ON	OFF

SMARTPHONE LOCATION SYNC.

Select **ON** to enable ongoing download of location data from paired smartphones or tablets.

Options	
ON	OFF

① Location data will only be downloaded while the smartphone app is running. Download will be interrupted if pairing is ended. The camera location data icon will be displayed in red if location data have not been updated for over 30 minutes.

NAME

Choose a name (**NAME**) to identify the camera on the wireless network (the camera is assigned a unique name by default).

IMAGE TRANSFER WHILE POWER OFF

If **ON** is selected, the camera will continue to upload pictures to paired smartphones or tablets even while off.

Options	
ON	OFF

RESIZE IMAGE FOR SMARTPHONE

Select ON (recommended) to enable compression, reducing file size for upload.

Options	
ON	OFF



- The pictures on the camera memory card are not affected.
 - Compression is used only for pictures taken at a size of L.

WIRELESS COM. FREQUENCY SETTING

Choose the band for wireless LAN connections.

Options	
2.4GHz (IEEE802.11 b/g/n)	5GHz (IEEE802.11 a/n/ac)



- Some countries and regions prohibit outdoor use of certain channels in the 5 GHz band. Check whether use of the 5.2 GHz (W52) band is permitted before selecting the 5 GHz option.
 - The options available vary with the country or region of sale.

SELECT FILE TYPE

Choose the format or formats used for upload. Pictures can be uploaded in JPEG format and/or HEIF.

AIRPLANE MODE

Select **ON** to disable the camera's wireless LAN and Bluetooth features.

Options	
ON	OFF

NETWORK SETTING

Adjust settings for connection to wireless networks.

Option	Description
	• SIMPLE SETUP: Connect to an access point using simple
	settings.
ACCESS POINT	• MANUAL SETUP: Manually adjust settings for connec-
SETTING	tion to a wireless network. Choose the network from a list
	(SELECT FROM NETWORK LIST) or enter the name manu-
	ally (ENTER SSID).
	AUTO: The IP address is assigned automatically.
IP ADDRESS	• MANUAL: Assign an IP address manually. Manually choose
SETTING	the IP address (IP ADDRESS), subnet mask (SUBNET
	MASK), and gateway address (GATEWAY ADDRESS).

instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers (256).

CONNECTION MODE

Adjust settings for connection to external devices.

Option	Description
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.
USB WEBCAM	Connect the camera to a computer via USB for use as a webcam.
USB TETHER SHOOTING AUTO	The camera can be controlled from computers, gimbals, drones, or other devices connected via USB. The camera automatically enters "tethered shooting" (i.e., remote-control) mode when the external device is turned on and returns to normal operation when the external device turned off or disconnected. • Photographs can be taken remotely and automatically downloaded to computers running Capture One, Adobe® Photoshop® Lightroom® + Tether Plugin, or FUJIFILM X Acquire. FUJIFILM X Acquire can also be used to save and load camera settings. • Remote photography and movie recording are available when the camera is connected to a compatible device such as a gimbal or drone. Use camera controls to switch between still photography and movie recording. The features available vary with the device connected.

Option	Description
USB TETHER SHOOTING FIXED	As for USB TETHER SHOOTING AUTO , except that the camera remains in "tethered shooting" (remote-control) mode when the external device is off or not connected, allowing the device to resume control when the connection is re-established after an accidental disconnection or other disruption. At default settings, pictures are not recorded to the memory card.
WIRELESS TETHER SHOOTING FIXED	Choose this option for wireless remote photography. Select an access point using NETWORK SETTING in the network/ USB setting menu.
USB RAW CONV./ BACKUP RESTORE	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. • USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to other formats while maintaining image quality. • BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.

- For information on compatible computer software, see "Software for Use with Your Camera" (352).

USB POWER SUPPLY/COMM SETTING

Choose whether USB connections to computers, smartphones, or other devices are used for power delivery or data transfer.

Option	Description
AUTO	The camera switches between power delivery and data trans-
AUIU	fer automatically.
POWER SUPPLY ON/	The camera draws power from the connected device, reducing
COMM OFF	the drain on the battery. Data transfer is disabled.
POWER SUPPLY	The camera can exchange data with, but not draw power from,
OFF/COMM ON	the connected device.

- The camera cannot draw power from Lightning connections or from devices that do not supply power. Select POWER SUPPLY OFF/COMM ON before connecting the camera to such devices. The connection may not be available for data transfer or the like when POWER SUPPLY ON/COMM OFF is selected.
- Regardless of the option selected, the battery will charge while the camera is off

INFORMATION

View the camera's MAC, Bluetooth, and wireless network IP addresses.

RESET WIRELESS SETTING

Restore wireless settings to their default values.

The Setup Menus



USER SETTING

Adjust basic camera settings.

To access basic camera settings, press MENU/OK, select the (SET UP) tab, and choose USER SETTING.



FORMAT

To format a memory card:

- 1 Select **Z** USER SETTING > FORMAT in the **Z** (SET UP) tab.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight OK and press MENU/OK.



- To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.
- All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
 - Do not open the battery-chamber cover during formatting.

AREA SETTING

Adjust settings for your current time zone.

AREA SETTING

Choose your time zone from a map.

DAYLIGHT SAVINGS

Turn daylight saving time on or off.

Option	Description
ON	Daylight saving time on.
OFF	Daylight saving time off.

DATE/TIME

To set the camera clock:

- 1 Select **USER SETTING** > **DATE/TIME** in the **(SET UP)** tab.
- 2 Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the focus stick up or down.
- **3** Press **MENU/OK** to set the clock.

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

- - 1 Highlight + LOCAL and press MENU/OK.
 - 2 Use the focus stick (focus lever) to choose the local time zone. Press MENU/OK when settings are complete.
 - Select **ON** to enable daylight saving time.

To set the camera clock to local time, highlight ← LOCAL and press MENU/OK. To set the clock to the time in your home time zone, select ♠ HOME.



If ← LOCAL is selected, ← will be displayed in yellow for about three seconds when the camera is turned on.

■● 言語/LANG.

Choose a language.

MY MENU SETTING

Edit the items listed in the M (MY MENU) tab, a personalized custom menu of frequently-used photo menu options (22 309).

MY MENU SETTING

Edit the items listed in the **M** (MY MENU) tab, a personalized custom menu of frequently-used movie menu options (\$\equiv 309)\$.

SENSOR CLEANING

Remove dust from the camera image sensor.

Option	Description		
OK	Clean the sensor immediately.		
WHEN SWITCHED ON	Sensor cleaning will be performed when the camera is		
	turned on.		
WHEN SWITCHED OFF	Sensor cleaning will be performed when the camera turns		
	off (sensor cleaning is not however performed if the camera turns off in playback mode)		
	era turns off in playback mode).		



Dust that cannot be removed using sensor cleaning can be removed using a blower (## 367).

BATTERY AGE

Check battery age. Age is expressed as a number between 0 and 4. The higher the number, the older the battery.





The older the battery, the faster it loses its charge. We recommend that batteries be replaced as they wear out.

SOUND & FLASH

Select **OFF** to disable the speaker, flash, illuminator, and self-timer lamp in situations in which camera sounds and lights may be unwelcome.

Options	
ON	OFF

RESET

Reset shooting or setup menu options to default values.

1 Highlight the desired option and press MENU/OK.

Option	Description
	Reset all photo menu settings other than custom white
STILL MENU RESET	balance and custom settings banks created using
	▲ EDIT/SAVE CUSTOM SETTING to default values.
	Reset all movie menu settings other than custom white
MOVIE MENU RESET	balance and custom settings banks created using
	EDIT/SAVE CUSTOM SETTING to default values.
	Reset all setup menu settings other than DATE/TIME ,
SET-UP RESET	⚠ AREA SETTING, TIME DIFFERENCE, and
	COPYRIGHT INFO to default values.
INITIALIZE	Reset all settings other than custom white balance to
	default values.

2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.

REGULATORY

To view electronic copies of the product model number, and other certificates, select **DUSER SETTING** > **REGULATORY** in the setup menu.



SOUND SETTING

Make changes to camera sounds.

To access sound settings, press MENU/OK, select the (SET UP) tab, and choose SOUND SET-UP.



AF BEEP VOL.

Choose the volume of the beep that sounds when the camera focuses. The beep can be muted by selecting **4OFF**.



 
SELF-TIMER BEEP VOL.

Choose the volume of the beep that sounds while the self-timer is active. The beep can be muted by selecting **•(OFF**.



OPERATION VOL.

Adjust the volume of the sounds produced when camera controls are operated. Choose **4OFF** to disable control sounds.



REC START/STOP VOLUME

Choose the volume at the start and end of movie recording.

Options			
(high)	■ (medium)	• (• (low)	■ (OFF (mute)

MS ELECTRONIC SHUTTER VOLUME

Adjust the volume of the sounds produced by the mechanical shutter.

	0pt	ions	
• (•1) (high)	• 【•1 (medium)	■【・ (low)	■ 40FF (mute)

MS ELECTRONIC SHUTTER SOUND

Choose the sound made by the mechanical shutter.

	Options	
♪ 1 SOUND 1	♪ 2 SOUND 2	♪ 3 SOUND 3

ES ELECTRONIC SHUTTER VOLUME

Adjust the volume of the sounds produced by the electronic shutter. Choose **4OFF** to disable the shutter sound.

	Opt	ions	
•(•1) (high)	■ (medium)	■【• (low)	■ (OFF (mute)

ES ELECTRONIC SHUTTER SOUND

Choose the sound made by the electronic shutter.

	Options	
♪ 1SOUND 1	♪ 2 SOUND 2	♪ 3 SOUND 3

PLAYBACK VOLUME

Adjust the volume for movie playback.

					Options					
0	1	2	3	4	5	6	7	8	9	10

4ch AUDIO PLAYBACK

Adjust audio settings for use when viewing 4ch movies.

Option	Description
	The camera plays audio recorded via external micro- phones connected via the XLR microphone adapter.
CAMERA	The camera plays audio recorded via the camera's built-in microphone or external microphones connected via the microphone jack.

You can also switch sources while viewing the playback display by pressing the center of the focus stick (focus lever).



SCREEN SETTING

Make changes to display settings.

To access display settings, press MENU/OK, select the (SET UP) tab, and choose SCREEN SET-UP.



VIEW MODE SETTING

Adjust settings for eye sensor, EVF (electronic viewfinder), or LCD monitor view modes (🗎 14).


EVF BRIGHTNESS

Adjust the brightness of the display in the electronic viewfinder.

Option	Description
	The camera automatically adjusts brightness around a selected
AUIU	level in response to changes in ambient lighting conditions.
MANUAL	Adjust brightness manually; choose from options between -7
MANUAL	and +5.

EVF COLOR

 Adjust the saturation of the display in the electronic viewfinder.



EVF COLOR ADJUSTMENT

Adjust the color of the display in the electronic viewfinder.

 
1 Adjust colors using the focus stick (focus lever).



? Press MENU/OK.

LCD BRIGHTNESS

Adjust monitor brightness.



LCD COLOR

Adjust monitor saturation.



LCD COLOR ADJUSTMENT

Adjust the color of the display in the LCD monitor.

- 1 Adjust colors using the focus stick (focus lever).
- ? Press MENU/OK.

IMAGE DISP.

Choose how long images are displayed after shooting.

Option	Description
CONTINUOUS	Pictures are displayed until the MENU/OK button is pressed or the shutter button is pressed halfway. To zoom in on the active focus point, press the center of the focus stick (focus lever); press again to cancel zoom.
1.5 SEC	Pictures are displayed for the selected time or until the shutter
0.5 SEC	button is pressed halfway.
OFF	Pictures are not displayed after shooting.



- Colors may differ slightly from those in the final image.
 - "Noise" mottling may be visible at high sensitivities.

AUTOROTATE DISPLAYS

Choose whether the indicators in the viewfinder and LCD monitor rotate to match camera orientation.

Options	
ON OFF	

PREVIEW EXP./WB IN MANUAL MODE

Choose whether to enable exposure and/or white balance preview in manual exposure mode.

Option	Description
PREVIEW EXP./WB	Enable exposure and white balance preview.
	Preview white balance only. Choose this option in situations in
PREVIEW WB	which exposure is likely to change during shooting, as may be
	the case when you use a flash during daylight.
	Disable exposure and white balance preview. Choose this op-
OFF	tion in situations in which both exposure and white balance
v	are likely to change during shooting, as may be the case when
	you use a flash with an incandescent monitoring lamp.

NATURAL LIVE VIEW

Choose whether the effects of film simulation, white balance, and other settings are visible in the monitor.

Option	Description
	The effects of camera settings are not visible in the monitor,
	but shadows in low-contrast, back-lit scenes and other hard-
ON	to-see subjects more visible. Colors and tone will differ from
	those in the final picture. The display will however be adjusted
	to show the effects of monochrome and sepia settings.
OFF	The effects of film simulation, white balance, and other settings
UFF	can be previewed in the monitor.

F-Log VIEW ASSIST

Select ON to display a tone-corrected preview (equivalent to BT.709) when recording or viewing F-log movies.


Options	
ON	OFF

ELECTRONIC LEVEL SETTING

Adjust settings for use when taking pictures using the virtual horizon display (III 21).

FRAMING GUIDELINE

Choose a framing grid for shooting mode.

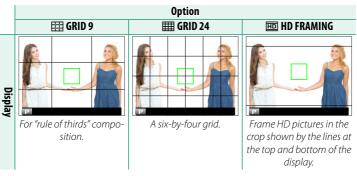

Framing guides are not shown at default settings but can be displayed using **Z** SCREEN SET-UP > DISP. CUSTOM SETTING (■ 19).

AUTOROTATE PB

Choose **ON** to automatically rotate "tall" (portrait-orientation) pictures during playback.

Options	
ON	OFF

FOCUS SCALE UNITS

Choose the units used for the focus distance indicator.

Options	
METERS	FEET

APERTURE UNIT FOR CINEMA LENS

Choose whether the camera displays aperture as a T-number (used for movie camera lenses) or an f/-number (used for still camera lenses) when an optional FUJINON MKX-series lens is attached. For information on using cinema lenses, see the documentation provided with the lens.

Option	Description
T NUMBER	A measure of lens aperture commonly used by cinematogra- phers. Lens transmittance is taken into account to better cal- culate exposure.
F NUMBER	A measure of lens aperture commonly used by photographers. Lens transmittance is assumed to be 100%, meaning that the same aperture may produce different exposures depending on the lens.

DISP. CUSTOM SETTING

Choose the items shown in the standard indicator display (11).

LARGE INDICATORS MODE(EVF)

Select **ON** to display large indicators in the electronic viewfinder. The indicators displayed can be selected using **Z SCREEN SET-UP** > **LARGE INDICATORS DISP. SETTING.**






- Some icons are not displayed when ON is selected for LARGE INDICATORS MODE(EVF) (■ 11).
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS MODE on (ON) and off (OFF) (ℍ 317).

LARGE INDICATORS MODE(LCD)

 Select **ON** to display large indicators in the LCD monitor. The indicators displayed can be selected using **SCREEN SET-UP** > **LARGE INDICATORS DISP. SETTING.**






- ① Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)** (■ 13).
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS MODE on (ON) and off (OFF) (■ 317).

LARGE INDICATORS DISP. SETTING

 Choose the indicators displayed when ON is selected for ■ SCREEN SET-UP > LARGE INDICATORS MODE(EVF) or LARGE INDICATORS MODE(LCD).



Option	Description	
① Expo. DISP.	Choose the items listed at the bottom of the display. Selected items are indicated by check marks (☑); to deselect, highlight the check marks and press MENU/OK.	
② ⅓ Scale	Select ON to display the exposure indicator.	
③L1, L2, L3, L4	Choose up to four large icons for display on the left side of the screen.	
④ R1, R2, R3, R4	Choose up to four large icons for display on the right side of the screen.	

INFORMATION CONTRAST ADJ.

Adjust display contrast.

Option	Description	
HIGH CONTRAST	High contrast.	
STANDARD	Normal contrast.	
LOW CONTRAST	Low contrast.	
DARK AMBIENT LIGHTING	Contrast adjusted for dim ambient lighting.	

LOCATION INFO

Select **ON** to display location info downloaded from a smart-phone.

Options	
ON	OFF

Q MENU BACKGROUND

Choose the background color used for the quick menu when it is displayed during still photography.

Options	
TRANSPARENT	BLACK

PORTON OF THE PROPERTY OF THE

Choose the background color used for the quick menu when it is displayed during movie recording.

Options	
TRANSPARENT	BLACK

BUTTON/DIAL SETTING

Access options for camera controls.

To access control options, press MENU/OK, select the (SET UP) tab, and choose BUTTON/DIAL SETTING.



FOCUS LEVER SETTING

Choose the functions performed by pressing the center of the focus stick (focus lever) or by pressing the stick up, down, left, or right.

PUSH

Option Description					
OFF	Pressing the center of the stick has no effect.				
EDIT FOCUS AREA	Press the center of the stick to choose the focus area size. If PACE/EYE DETECTION SETTING or SUBJECT DETECTION SETTING is on, you can instead position the focus frame over the desired face, eye, animal, or object.				
ZOOM	Press the center of the stick to zoom in on the active focus area (
RESET TO CENTER	Press the center of the stick to select the center focus area.				

TILT 🌣

Option	Description				
OFF	Pressing the stick up, down, left, or right has no effect.				
DIRECT AF POINT SELECTION	Choose the focus area without leaving the shooting display.				
	Press the stick up, down, left, or right to view a focus-area display and choose the focus area.				

D EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu during still photography (1 311).

EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu when filming movies (1) 311).

FUNCTION (Fn) SETTING

Choose the roles played by the function buttons (\$\equiv 317).

POWER ZOOM LENS FUNCTION (Fn) SETTING

Choose the roles played by the function buttons available on some power zoom lenses (1992).

COMMAND DIAL SETTING

Choose whether to reverse the roles played by the front and rear command dials in each of the following modes.

Option	Description					
Р	Reverse the dials used for program shift and exposure compen-					
r	sation in mode P (program AE).					
•	Reverse the dials used for shutter-speed selection and exposure					
3	compensation in mode S (shutter-priority AE).					
А	Reverse the dials used for aperture selection and exposure					
A	compensation in mode A (aperture-priority AE).					
М	Reverse the dials used for shutter-speed and aperture selection					
	in mode M (manual).					

S.S OPERATION

Select **OFF** to disable shutter-speed fine-tuning using the command dials.

Options				
ON	OFF			

COMMAND DIAL DIRECTION

Choose the direction in which the command dials are rotated to choose values. Settings for the front and rear command dials can be adjusted separately.

Option	Description
	Rotate the dial right for higher values or to move to the next
+	item.
+	Rotate the dial left for higher values or to move to the next item.

SHUTTER AF

Choose whether the camera focuses when the shutter button is pressed halfway.

Option	Description
	• ON : Focus locks when the shutter button is pressed halfway.
AF-S	• OFF: No focus operation is performed when the shutter but-
	ton is pressed halfway.
	• ON: The camera focuses while the shutter button is pressed
AF-C	halfway.
Ar-C	• OFF: No focus operation is performed when the shutter but-
	ton is pressed halfway.

SHUTTER AE

If ON is selected, exposure will lock while the shutter button is pressed halfway. The setting for focus mode CONTINUOUS AF (AF-C) can be adjusted separately from that for modes SINGLE AF (AF-S) and MANUAL FOCUS.

Options				
ON OFF				



Select **OFF** to allow the camera to adjust exposure before each shot taken in burst mode

SHOOT WITHOUT LENS

Choose \mathbf{ON} to enable the shutter release when no lens is attached.

Options				
ON OFF				

SHOOT WITHOUT CARD

Choose whether the shutter can be released without a memory card inserted in the camera.

Option	Description
ON	When no memory card is inserted, the shutter can be released to test camera function and the shooting and setup menus can be displayed.
OFF	The shutter is disabled if no memory card is inserted, preventing accidental loss of pictures taken without a memory card.

LENS ZOOM/FOCUS SETTING

Adjust settings for compatible lenses with focus rings or power zoom.

FOCUS RING ROTATE

Choose the direction in which the focus ring is rotated to increase the focus distance.

Options			
C CW (clockwise)	• CCW (counterclockwise)		

FOCUS RING OPERATION

Choose how the camera adjusts focus in response to the movement of the focus ring.

Option	Description				
NONLINEAR	Focus is adjusted at the same rate as the ring is rotated.				
	Focus is adjusted linearly according to the amount the ring is rotated, but the focusing speed is unaffected by the speed the ring is rotated.				

ME CONSTANT SPEED FOCUS (Fn)

Choose the rate at which the focus distance changes when adjusted using function buttons during manual focus with compatible power zoom lenses. The higher the number, the higher the rate.

Options							
1(SLOW)	2	3	4	5	6	7	8(FAST)

CONSTANT SPEED ZOOM (Fn)

Choose the rate at which compatible power zoom lenses can be zoomed in or out using function buttons. The higher the number, the higher the rate.

Options							
1(SLOW)	2	3	4	5	6	7	8(FAST)

CONSTANT SPEED ZOOM/FOCUS (Fn) OPERATION

Choose whether the function buttons on compatible power zoom lenses need only be pressed once to start and stop power focus or power zoom.

Option	Description
START/STOP	The operation starts when the button is pressed and stops when
SWITCH	it is pressed a second time.
ACTIVE WHILE	The operation continues while the button is pressed and stops
PRESSING	when the button is released.

ZOOM RING ROTATE

Choose whether to reverse the rotation of the zoom ring on compatible power zoom lenses.

Options		
CW (clockwise)	• CCW (counterclockwise)	

ZOOM/FOCUS CONTROL RING

Choose role played by the zoom/focus control ring on compatible power zoom lenses.

Opti	ions
ZOOM	FOCUS

AE/AF-LOCK MODE

This option determines the behavior of the button to which exposure and/or focus lock is assigned.

Option	Description
AE&AF ON WHEN PRESSING	Exposure and/or focus will lock while the button is pressed.
	Exposure and/or focus will lock when the button is pressed and remain locked until it is pressed again.

AWB-LOCK MODE

Choose the behavior of function buttons assigned auto white balance (AWB) lock. Auto white balance lock is used to lock white balance at the value metered by the camera when The AUTO WHITE PRIORITY, AUTO, or THE AUTO AMBIENCE PRIORITY is selected for white balance.

Option	Description
AWB ON WHEN PRESSING	Auto white balance locks while the button is pressed.
AWB ON/OFF	Press the button once to lock auto white balance and again to end
SWITCH	the lock.

► ISO BUTTON SETTING

Choose the role performed by the ISO button during playback.

Option	Description
SMARTPHONE TRANSFER ORDER	Pressing the button marks the current picture for transfer. If the
	camera is not currently paired with a smartphone, Bluetooth/
	SMARTPHONE SETTING options will be displayed.
	Pressing the button displays a dialog where pictures can be
□□ SELECT &	selected for upload to a smartphone with which the camera
SMARTPHONE	is paired (🕮 237). If the camera is not currently paired with
TRANSFER ORDER	a smartphone, Bluetooth/SMARTPHONE SETTING options
	will be displayed instead (🕮 262).
	The button can be used for wireless connections.

TOUCH SCREEN SETTING

Enable or disable touch-screen controls.

■ TOUCH SCREEN SETTING

Option	Description
ON	The LCD monitor functions as a touch screen during shooting.
OFF	Touch controls disabled.

DOUBLE TAP SETTING

Option	Description
ON	Tap the LCD monitor twice to zoom in on your subject during shooting.
OFF	Touch zoom disabled.

TOUCH FUNCTION

Option	Description
ON	Enable touch-function gestures.
OFF	Disable touch-function gestures.

TOUCH ZOOM

Option	Description
	If the lens supports touch zoom, you can zoom in and out by touching the LCD monitor (🗐 29).
OFF	Touch zoom disabled.

► TOUCH SCREEN SETTING

Option	Description	
ON	The LCD monitor functions as a touch screen during playback.	
OFF	Touch controls disabled.	

EVF TOUCH SCREEN AREA SETTINGS

Select the area of the LCD monitor used for touch controls while the viewfinder is active. The area used for touch controls can be selected from:

Option	Description
	All.
	Right half.
	Top right quarter.
	Bottom right quarter.
	Left half.
	Top left quarter.
	Bottom left quarter.
OFF	Touch controls disabled.

LOCK

Lock selected controls to prevent unintended operation.

Option	Description	
	Choose from the following:	
	UNLOCK: Reset lock options.	
LOCK SETTING	• ALL FUNCTION: Lock all controls in the FUNCTION	
LOCK SETTING	SELECTION list.	
	• SELECTED FUNCTION : Lock only the controls selected in	
	the FUNCTION SELECTION list.	
FUNCTION	Choose the controls locked when SELECTED FUNCTION is	
SELECTION	chosen for LOCK SETTING .	



The controls selected using **SELECTED FUNCTION** can be locked at any time during shooting by pressing and holding MENU/OK. To unlock the controls, press and hold the button again.



POWER MANAGEMENT

Adjust power management settings.

To access power management settings, press MENU/OK, select the (SET UP) tab, and choose POWER MANAGEMENT.



AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually.

Options					
5 MIN	2 MIN	1 MIN	30 SEC	15 SEC	OFF

PERFORMANCE

Select **BOOST** to improve focus and viewfinder display performance.

Option	Description
BOOST	Boost camera focus and viewfinder display performance.
DOODI	The battery drains faster than when is NORMAL selected.
NORMAL	Choose for standard focus and viewfinder display perfor-
NONWAL	mance and battery endurance.
ECONOMY	Limit autofocus and viewfinder performance. This option
ECONOMY	offers better battery endurance than does NORMAL .

EVF/LCD BOOST SETTING

Adjust the behavior of the EVF and LCD monitor when **BOOST** is selected for **PERFORMANCE**.

Option	Description
	Display brightness is adjusted to make subjects in shad-
PRIORITY	ows easier to see. Motion blur may cause ghosting.
EVF/LCD RESOLUTION	Display resolution is increased to make details easier to
PRIORITY	see.
EVF FRAME RATE	The refresh rate for the EVF is increased, smoothing mo-
PRIORITY (100P)	tion.

AUTO POWER OFF TEMP.

If its temperature rises beyond a certain point, the camera will first display a message and then, if the temperature rise continues, automatically end shooting and power down. Choose the temperature at which the camera turns off automatically.

Option	Description	
STANDARD	The camera turns off automatically when its temperature	
SIANDARD	reaches the STANDARD value.	
	Shooting can continue at temperatures higher than	
	the STANDARD value, extending the time available to	
	record movies and the like. Because remaining in contact	
HIGH	with the camera at these high temperatures could result	
	in low-temperature burns, this option should only be	
	used after mounting the camera on a tripod or taking	
	other steps to avoid prolonged contact with the camera.	

SAVE DATA SETTING

 
Make changes to file management settings.

To access file management settings, press MENU/OK, select the (SET UP) tab, and choose SAVE DATA SET-UP.



FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown. FRAME NO. controls whether file num-



bering is reset to 0001 when a new memory card is inserted or the current memory card is formatted.

Option	Description	
	Numbering continues from the last file number used or the first	
CONTINUOUS	available file number, whichever is higher. Choose this option to	
	reduce the number of pictures with duplicate file names.	
KENEW	Numbering is reset to 0001 after formatting or when a new	
	memory card is inserted.	



- If the frame number reaches 999-9999, the shutter release will be disabled. Turn the camera off and insert a formatted memory card before resuming shooting.
 - Selecting **ZUSER SETTING** > **RESET** sets **FRAME NO.** to **CONTINUOUS** but does not reset the file number
 - Frame numbers for pictures taken with other cameras may differ.

EDIT FILE NAME

Change the file name prefix. sRGB images use a four-letter prefix (default "DSCF"), Adobe RGB images a three-letter prefix ("DSF") preceded by an underscore.

Option	Default prefix	Sample file name
sRGB	DSCF	ABCD0001
AdobeRGB	_DSF	_ABC0001

SELECT FOLDER

Create folders and choose the folder used to store subsequent pictures.

Option	Description	
	To choose the folder in which subsequent pictures will be	
SELECT FOLDER	stored, press the focus stick (focus lever) up or down to	
	highlight an existing folder and press MENU/OK.	
	Enter a five-character folder name. The new folder will be	
CREATE FOLDER	created with the next picture you take and subsequent	
	pictures will be stored in that folder.	

COPYRIGHT INFO

Copyright information, in the form of Exif tags, can be added to new images as they are taken. Changes to copyright information are reflected only in images taken after the changes are made.

Option	Description		
DISP COPYRIGHT INFO	View the current copyright information.		
	Enter the creator's name.		
ENTER COPYRIGHT INFO	Enter the name of the copyright holder.		
	Delete the current copyright information. This change applies		
DELETE COPYRIGHT INFO	only to images taken after this option is selected; copyright		
	information recorded with existing images is not affected.		

GEOTAGGING

If **ON** is selected, location data downloaded from a smartphone will be embedded in pictures as they are taken.

Options		
ON	OFF	

MEMO

Shortcuts



Shortcut Options

Customize camera controls to suit your style or situation.

Frequently-used options can be added to the Q menu or a custom "my" menu or assigned to a function button or touch-function gesture for direct access:

Shortcut Option	Description	
"My menu"	Add frequently-used options to this custom menu, which can be viewed by pressing MENU/OK and selecting the M ("MY MENU") tab.	309
The Quick Menu	The ${\bf Q}$ menu is displayed by pressing the ${\bf Q}$ button. Use the ${\bf Q}$ menu to view or change the options selected for frequently-used menu items.	311
The function buttons	Use the function buttons for direct access to selected features.	317
Touch-function gestures	Use touch function button flick gestures (T-Fn1 , T-Fn2 , T-Fn3 , and T-Fn4) for direct access to selected features.	322
Lens function buttons	Use the function buttons on the lens (if any) for direct access to selected features.	325



Access a personalized menu of frequently-used options.

To display "my menu", press MENU/OK in the shooting display and select the MENU) tab.



The tab is only available if options have been assigned to MY MENU.

MY MENU SETTING

To choose the items listed in the **M** (MY MENU) tab:

1 In the setup menu, select ☑ USER SETTING > MY MENU SETTING or MY MENU SETTING.



- To reorder items, select **RANK ITEMS**. To delete items, select **REMOVE ITEMS**.
- 2 Press the focus stick (focus lever) up or down to highlight ADD ITEMS and press MENU/OK. Options that can be added to "my menu" are highlighted in blue.



ltems currently in "my menu" are indicated by check marks.

3 Choose a position for the item and press MENU/OK. The item will be added to "my menu".



- 4 Press MENU/OK to return to the edit display.
- **5** Repeat Steps 3 and 4 until all the desired items have been added.
- My menu" can contain up to 16 items.




Use the quick menu for quick access to selected options. To view the quick menu, press the **Q** button.

The Quick Menu Display


The quick menu offers different options in photo and movie modes. At default settings, it contains the following items:

Still photography

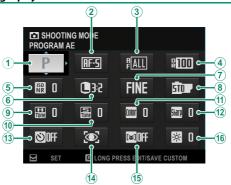

Default		
① SHOOTING MODE	HIGHLIGHT TONE	
2 FOCUS MODE	10 SHADOW TONE	
3 AF MODE	① COLOR	
4 DYNAMIC RANGE	¹² SHARPNESS	
5 HIGH ISO NR	(3) SELF-TIMER	
6 IMAGE SIZE	♠ FACE/EYE DETECTION SETTING SETITUR SETTING SET	
7 IMAGE QUALITY	(5) SUBJECT DETECTION SETTING	
8 FILM SIMULATION	16 EVF/LCD BRIGHTNESS	

The quick menu shows the options currently selected for items (2)–(16), which can be changed.

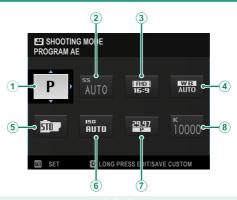

Default		
1 SHOOTING MODE	⑤ ₱ FILM SIMULATION	
② S.S. (MOVIE OPTIMIZED	⑥ ISO (MOVIE OPTIMIZED	
CONTROL ← ►)	CONTROL ← ►)	
3 MOVIE MODE RESOLUTION/ ASPECT RATIO	7 MOVIE MODE FRAME RATE	
④ ₩ WHITE BALANCE	8 ■ WHITE BALANCE COLOR TEMP. (WHEN ■ SELECTED)	

The quick menu shows the options currently selected for items (2)–(8), which can be changed.

 
Viewing and Changing Settings

1 Press **Q** to display the quick menu during shooting.



2 Use the focus stick (focus lever) to highlight items and rotate the rear command dial to change.





- To jump to the **EDIT/SAVE CUSTOM SETTING** or **EDIT/SAVE CUSTOM SETTING** menu, press and hold the **Q** button when the quick menu is displayed.
- 3 Press **Q** to exit when settings are complete.
- The quick menu can also be edited using touch controls.
 - Using BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING, you can assign the **Q** button roles normally reserved for the function buttons or assign the **Q** button's default role to a function button (■ 317).
 - To disable the **Q** (quick menu) button, select **NONE** for **☑ BUTTON/ DIAL SETTING** > **FUNCTION** (**Fn**) **SETTING** > **Q BUTTON SETTING**.

Editing the Quick Menu

To choose the items displayed in the quick menu:

1 Press and hold the **Q** button during shooting.



- Whether the camera displays the photo or movie quick menu depends on the position of the mode dial.
- 2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press MENU/OK.
- 3 Highlight the item you wish to change and press **MENU/OK**. The following can be assigned to the quick menu.
- The quick menus can also be edited using **B BUTTON/DIAL SETTING** >
 EDIT/SAVE QUICK MENU or
 EDIT/SAVE QUICK MENU.

Available Items (Still Photography)

Choose from:

- IMAGE SIZE
- IMAGE OUALITY
- FILM SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME EX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- WHITE BALANCE COLOR TEMP (WHEN K SELECTED)
- HIGHLIGHT TONE
- SHADOW TONE
- COLOR
- SHARPNESS
- CLARITY
- HIGH ISO NR
- FOCUS MODE
- AF MODE
- AF-C CUSTOM SETTINGS
- 🔁 FACE/EYE DETECTION SETTING
- SUBJECT DETECTION SETTING

- MF ASSIST
- TOUCH SCREEN MODE
- SELF-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- FLASH FUNCTION SETTING
- FLASH COMPENSATION
- MOVIE MODE RESOLUTION/ASPECT RATIO
- MOVIE MODE FRAME RATE
- BIT RATE
- HIGH SPEED REC
- 🚅 IS MODE
- IS MODE BOOST
- INTERNAL/EXTERNAL MICLEVEL **ADJUSTMENT**
 - SOUND & FLASH
 - FVF/I CD BRIGHTNESS
- FVF/I CD COLOR
- NONE



To disable the function button, choose **NONE**.

Available Items (Movies)

- FII M SIMULATION
- DYNAMIC RANGE
- WHITE BALANCE
- WHITE BALANCE COLOR TEMP. (WHEN K SELECTED)
- HIGHLIGHT TONE
- SHADOW TONE
- COLOR
- SHARPNESS
- HIGH ISO NR
- PRODUCT PRIORITY MODE
- FACE/FYE DETECTION SETTING
- SUBJECT DETECTION SETTING
- MF ASSIST
- TOUCH SCREEN MODE
- PHOTOMETRY
- MOVIF ISO
- MOVIE MODE RESOLUTION/ASPECT
 FVF/I CD COLOR RATIO

- MOVIE MODE FRAME RATE
- BIT RATE
- HIGH SPEED REC
- SELF-TIMER
- BACKGROUND DEFOCUS MODE
- FOCUS MODE
- MOVIF AF MODE
- FIX MOVIE CROP MAGNIFICATION
- 🕰 IS MODE
- S MODE BOOST
- SHUTTER SPEED
- APERTURE (MOVIE OPTIMIZED CONTROL)

 INTERNAL/EXTERNAL MICLEVEL **ADJUSTMENT**

- SOUND & FLASH
- FVF/I CD BRIGHTNESS
- NONE



To disable the function button, choose **NONE**.



Function Controls


Assign roles to the function buttons, function dial, or touch-function gestures for quick access to the selected features.

The Function Buttons

Assign a role to the function buttons for quick access to the selected feature.

Function Button Defaults

The default assignments are:

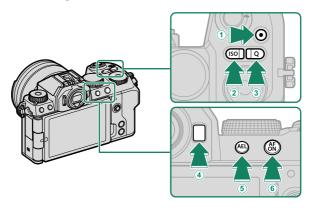


Function buttons	Default
 ● (movie recording) button 	MOVIE RECORDING RELEASE
② ISO button	ISO
③ Q (quick menu) button	QUICK MENU
④ Fn button	WHITE BALANCE
(5) AEL (exposure lock) button	AE LOCK ONLY
6 AFON button	AF-ON

Assigning Roles to the Function Buttons

Pressing and holding the DISP/BACK button displays a dialog where you can choose the roles assigned to the function buttons.

 1 Press and hold the DISP/BACK button until a control selection menu is displayed.





Nou can also assign roles to function buttons using **EBUTTON DIAL SETTING > FUNCTION (Fn) SETTING.**

- 2 Highlight the desired control and press MENU/OK.
- 3 Highlight any of the following options and press MENU/OK to assign it to the selected control.

Roles That Can Be Assigned to the Function Buttons

Choose from:

- ₩HEN SETTO M (ON/OFF SWITCH)
 FOCUS MODE
- IMAGE SIZE
- IMAGE OUALITY
- RAW
- FILM SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME EX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- RECALL CUSTOM 1 SETTING
- FOCUS AREA
- FOCUS CHECK

- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- RIGHT/I FFT FYF SWITCH
- SUBJECT DETECTION ON/OFF
- AF RANGE LIMITER
- FOCUS CHECK LOCK
- SPORTS FINDER MODE
- PRF-SHOT FS ₽
- SFI F-TIMFR
- AF BKT SFTTING
- FOCUS BKT SETTING
- PHOTOMETRY
- SHUTTER TYPE

- FLICKER REDUCTION
- FLICKERI ESS S S SETTING
- ISO
- IS MODE
- WIRFLESS COMMUNICATION
- FLASH COMPENSATION
- FLASH FUNCTION SETTING
- TTI -I OCK
- MODELING FLASH
- MOVIE RECORDING RELEASE
- HIGH SPEED REC
- SFI F-TIMFR
- BACKGROUND DEFOCUS MODE
- FIX MOVIE CROP MAGNIFICATION
- S MODE BOOST
- PRODUCT PRIORITY MODE
- ZEBRA SETTING
- COOLING FAN SETTING
- INTERNAL/EXTERNAL MIC LEVEL **ADJUSTMENT**
- 4ch AUDIO PI AYBACK
- MOVIE OPTIMIZED CONTROL → OUICK MENU
- VIEW MODE SETTING
- PREVIEW DEPTH OF FIELD

- PREVIEW FXP./WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- FLECTRONIC LEVEL SWITCH
- I ARGE INDICATORS MODE
- F-Log VIEW ASSIST
- COMMAND DIAL LOCK
- 700M/FOCUS CONTROL RING.
- CONSTANT SPEED ZOOM (T)
- CONSTANT SPEED ZOOM (W)
- ME CONSTANT SPEED FOCUS (N)
- ME CONSTANT SPEED FOCUS (F)
- AE LOCK ONLY
- AF LOCK ONLY
- AF/AF LOCK
- AF-ON
- AWB LOCK ONLY
- LOCK SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER ORDER
- Bluetooth ON/OFF
- PLAYBACK
 - NONE



To disable the function button, choose **NONE**.

AF-ON

Controls to which AF-ON is assigned can be used for autofocus.

MODELING FLASH

If MODELING FLASH is selected when a compatible shoe-mounted flash unit is attached, you can press the control to test-fire the flash and check for shadows and the like (modeling flash).

TTL-LOCK

 
If TTL-LOCK is selected, you can press the control to lock flash output according to the option selected for **I** FLASH SETTING > TTL-LOCK MODE (**I** 179).

RECALL CUSTOM 1 SETTING

Controls to which **RECALL CUSTOM 1 SETTING** has been assigned can be pressed to temporarily recall the settings saved to **C1** (CUSTOM 1). Pressing the button a second time restores the previous settings.

The Function Dial

Rotate the **Fn** (function) dial for direct access to selected features.



The role played by the function dial can be selected using **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING.**

- EXPO. COMP.
- IMAGE SIZE
- IMAGE OUALITY
- FILM SIMULATION
- GRAIN FFFFCT
- COLOR CHROME EFFECT
- COLOR CHROME EX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- FOCUS MODE
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- AF RANGE LIMITER
- SPORTS FINDER MODE
- PRE-SHOT **ES ₽**
- SELF-TIMER
- PHOTOMETRY

- SHUTTER TYPE
- FLICKER REDUCTION
- FLICKERI ESS S S SETTING
- ISO
- IS MODE
- FLASH COMPENSATION
- FLASH FUNCTION SETTING
 - HIGH SPEED REC
- SELF-TIMER
- BACKGROUND DEFOCUS MODE
- FIX MOVIE CROP MAGNIFICATION
- S MODE BOOST
- PRODUCT PRIORITY MODE
- 7FBRA SETTING
- INTERNAL/EXTERNAL MICLEVEL **ADJUSTMENT**
- MOVIF OPTIMIZED CONTROL
- DFFAUIT
- NONF



- To disable the function dial, select NONE.
 - If **DEFAULT** is selected, the role played by the function dial will be tailored to the mode currently chosen with the mode dial (\$\exists 7\$).
 - If **DEFAULT (WHEN SET TO M**) is selected, the control will be assigned EXPO. COMP. instead of FILM SIMULATION when an AUTO option is selected for ISO sensitivity in mode M (manual).

Touch-Function Gestures


Assign roles to touch-function gestures (T-Fn1, T-Fn2, T-Fn3, or T-Fn4) for quick access to selected features.



Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **BUTTON/DIAL SETTING** > **TOUCH** SCREEN SETTING > THE TOUCH FUNCTION.

Touch-Function Gesture Defaults

The default assignments for the different gestures are:

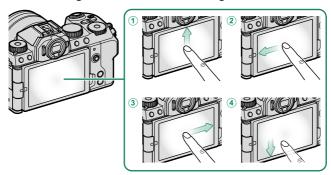

Touch-Function Gestures	Default
1 T-Fn1 (flick up)	HISTOGRAM
② T-Fn2 (flick left)	PREVIEW DEPTH OF FIELD
③ T-Fn3 (flick right)	LARGE INDICATORS MODE
④ T-Fn4 (flick down)	ZEBRA SETTING

Assigning Roles to Touch Function Gestures

Pressing and holding the **DISP/BACK** button displays a dialog where you can choose the roles assigned to touch function gestures.

 Press and hold the DISP/BACK button until a control selection menu is displayed.



- Button assignments can also be selected using BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING.
- 2 Highlight a touch function gesture and press MENU/OK.
- **3** Highlight any of the following options and press **MENU/OK** to assign it to the selected control.

Roles That Can Be Assigned to Touch Function Gestures

Choose from:

- IMAGE SIZE
- IMAGE QUALITY
- RAW
- FILM SIMULATION
- GRAIN EFFECT
- COLOR CHROME EFFECT
- COLOR CHROME FX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- RECALL CUSTOM 1 SETTING
- FOCUS AREA
- FOCUS CHECK
- FOCUS MODE
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- RIGHT/LEFT EYE SWITCH
- SUBJECT DETECTION ON/OFF
- AF RANGE LIMITER
- FOCUS CHECK LOCK
- SPORTS FINDER MODE
- PRF-SHOT **FS** ♣
- SFI F-TIMER
- AF BKT SFTTING
- FOCUS BKT SETTING
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- FLICKERI ESS S.S. SETTING

- ISO
- IS MODE
- WIRELESS COMMUNICATION
- FLASH COMPENSATION
- FLASH FUNCTION SETTING
 - TTL-LOCK
- MODFLING FLASH
- HIGH SPEED REC.
- 🕿 SELF-TIMFR
 - BACKGROUND DEFOCUS MODE
- FIX MOVIE CROP MAGNIFICATION
- IS MODE BOOST
 - PRODUCT PRIORITY MODE
 - 7FBRA SETTING
- COOLING FAN SETTING
- INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- 4ch AUDIO PLAYBACK
 - MOVIF OPTIMIZED CONTROL
 ■
- VIFW MODE SETTING
 - PREVIEW DEPTH OF FIELD
 - PREVIEW EXP./WB IN MANUAL MODE
 - NATURAL LIVE VIEW
 - HISTOGRAM
 - FI FCTRONIC LEVEL SWITCH
 - I ARGE INDICATORS MODE
 - F-Log VIEW ASSIST
 - COMMAND DIAL LOCK
 - 700M/FOCUS CONTROL RING
 - LOCK SETTING
- PERFORMANCE

- AUTO IMAGE TRANSFER ORDER
- Bluetooth ON/OFF

- PLAYBACK
- NONE

QUICK MENU



To disable touch-function gestures, choose **NONE**.

Lens Function Buttons

 
Choose the roles played by the function buttons on the lens (where applicable).

Lens Function Button Defaults

The default assignments are:



A XF18-120mmF4 LM PZ WR lens is used here for illustrative purposes.



Lens function button	Default	
① Z/F	ZOOM/FOCUS CONTROL RING	
② L-Fn1 (rocker zoom button pressed up)	CONSTANT SPEED ZOOM (T)	
3 L-Fn2 (rocker zoom button pressed down)	CONSTANT SPEED ZOOM (W)	

Assigning Roles to the Lens Function Buttons

The roles played by the lens function buttons can be selected using the BUTTON/DIAL SETTING > POWER ZOOM LENS FUNCTION (Fn) SETTING option in the setup menu.

- ■ WHEN SETTO M (ON/OFF SWITCH) FLICKER REDUCTION
- IMAGE SIZE
- IMAGE OUALITY
- RAW
- FILM SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME FX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- RECALL CUSTOM 1 SETTING
- FOCUS AREA
- FOCUS CHECK
- FOCUS MODE
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- RIGHT/I FFT FYF SWITCH
- SUBJECT DETECTION ON/OFF
- AF RANGE I IMITER
- FOCUS CHECK LOCK
- SPORTS FINDER MODE
- PRE-SHOT **ES ₽**
- SFI F-TIMFR
- AF BKT SFTTING
- FOCUS BKT SETTING
- PHOTOMETRY
- SHUTTER TYPE

- FLICKERI ESS S.S. SETTING.
- ISO
- IS MODE
- WIRFLESS COMMUNICATION
- FLASH COMPENSATION
 - FLASH FUNCTION SETTING
 - TTI-I OCK
 - MODELING FLASH
- MOVIE RECORDING RELEASE
 - HIGH SPEED REC
 - SFI F-TIMFR
- BACKGROUND DEFOCUS MODE
 - FIX MOVIF CROP MAGNIFICATION
 - S MODE BOOST
- PRODUCT PRIORITY MODE
- 7FBRA SETTING
 - COOLING FAN SETTING
 - INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- 4ch AUDIO PLAYBACK
 - MOVIE OPTIMIZED CONTROL ➡
 - VIEW MODE SETTING
 - PREVIEW DEPTH OF FIELD
 - PREVIEW EXP/WB IN MANUAL MODE
 - NATURAL LIVE VIEW
 - HISTOGRAM
 - FLECTRONIC LEVEL SWITCH
 - LARGE INDICATORS MODE
 - F-Log VIEW ASSIST

- COMMAND DIAL LOCK
- ZOOM/FOCUS CONTROL RING
- CONSTANT SPEED 700M (T)
- CONSTANT SPEED ZOOM (W)
- MF CONSTANT SPEED FOCUS (N)
- MF CONSTANT SPEED FOCUS (F)
- AF LOCK ONLY
- AF LOCK ONLY
- AE/AF LOCK

- AF-ON
- AWB LOCK ONLY
- LOCK SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER ORDER
- Bluetooth ON/OFF
- OUICK MENU
- PLAYBACK
- NONE



- To disable the function button, choose **NONE**.
 - Selected function lock is not available when **CONSTANT SPEED** ZOOM (T) or CONSTANT SPEED ZOOM (W) is assigned to a lens function button (\$\Pi\$ 300).


MEMO

 
Peripherals and Optional Accessories

 
Lenses

The camera can be used with lenses for the FUJIFILM X-mount.

Lens Parts

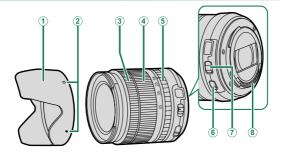





- (1) Lens hood
- (2) Mounting marks
- (3) Focus ring
- (4) Zoom ring
- (5) Aperture ring

 
- (6) O.I.S. switch
- (7) Aperture mode switch
- (8) Lens signal contacts
- Front lens cap
- (10) Rear lens cap
- A XF18-55mmF2.8-4 R LM OIS lens is used here for illustrative purposes.

 
Lens Care

- Use a blower to remove dust, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied.
- Replace the front and rear caps when the lens is not in use.

Removing Lens Caps

Remove lens caps as shown.






① Lens caps may differ from those shown.


Attaching Lens Hoods

 When attached, lens hoods reduce glare and protect the front lens element.



Lenses with Aperture Rings

 At settings other than A, you can adjust aperture by rotating the lens aperture ring (exposure modes A and M).




Aperture ring



- Selecting ON for MOVIE OPTIMIZED CONTROL → b disables the aperture ring.
 - When the aperture ring is set to **A**, rotate the command dials to adjust aperture.

The Aperture Mode Switch-


If the lens has an aperture mode switch, aperture can be adjusted manually by sliding the switch to \$ and rotating the aperture ring.

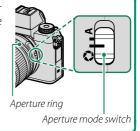

333

Lenses with No Aperture Rings

 
Aperture can be adjusted using the front command dial in modes A (aperture-priority AE) and M (manual).



Aperture control can be reassigned to the rear command dial using BUTTON/DIAL SETTING > COMMAND DIAL SETTING.

Lenses with O.I.S. Switches

 If the lens supports optical image stabilization (O.I.S.), the image stabilization mode can be chosen in the camera menus. To activate image stabilization, slide the O.I.S. switch to ON.



Manual Focus Lenses

Slide the focus ring to the front for autofocus.



For manual focus, slide the focus ring to the back and rotate it while checking the results in the camera display. The focus distance and depth-of-field indicators can be used to assist manual focus.



Note that manual focus may not be available in all shooting modes.

-The Depth-of-Field Indicator-


The depth-of-field indicator shows the approximate depth of field (the distance in front of and behind the focus point that appears to be in focus). The indicator is displayed in film format.



Power Zoom Lenses

Zoom can be adjusted on power zoom lenses using the zoom/ focus control ring, zoom button, or zoom ring.

- Adjusting zoom while the lens is wet makes it easier for water to find its way inside the lens. Wipe any water from the lens before adjusting zoom.
- A XF18-120mmF4 LM PZ WR lens is used here for illustrative purposes.

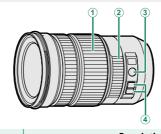

Control	Description
1 Zoom ring	Rotate the zoom ring to zoom in or out manually.
② Zoom/focus control ring	Rotate the zoom/focus control ring to zoom in or out using powered zoom. The zoom speed is proportional to the speed with which the ring is rotated.
③ Z/F (zoom/focus) button	Switch the role of zoom/focus control ring from focus to zoom or <i>vice versa</i> .
Zoom buttons	Press a zoom button to zoom in or out at a steady speed using powered zoom. Zoom ends when the button is pressed a second time.

- The Z/F and zoom buttons can be assigned other roles using BUTTON/DIAL SETTING > POWER ZOOM LENS FUNCTION (Fn) SETTING
 - The speed at which zoom can be adjusted via the zoom buttons can be chosen using ■ BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING.

External Flash Units

Use optional external flash units for flash photography. Some units support high-speed sync (FP) and can be used at shutter speeds faster than the flash sync speed, while others can function as commanders controlling remote units via optical wireless flash control.

You may be unable to test-fire the flash in some circumstances, for example when a setup menu is displayed on the camera.

·Red-Eye Removal·

Red-eye removal is available when **FLASH** is selected for **SETTING** > **RED EYE REMOVAL**. Red-eye removal minimizes "red-eye" caused when light from the flash is reflected from the subject's retinas.

Flash Sync Speed

The flash will synchronize with the shutter at shutter speeds of 1/180 s or slower.

-Optional Flash Units from Fujifilm-

The camera can be used with optional Fujifilm shoe-mounted flash units.

-Third-Party Flash Units-

Do not use third-party flash units that apply over 300 V to the camera hot shoe.

Using an External Flash

- 1 Connect the unit to the camera.
- 2 In shooting mode, select FLASH FUNCTION SETTING in the ☑ (FLASH SETTING) menu tab. The options available vary with the flash unit.



Menu	Description	
Built-In Flash	Displayed when the built-in flash is raised.	123
IFRMINAL	Sync terminal options will be displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.	
SHOE MOUNT FLASH	Displayed when an optional flash unit other than the EF-X8 is mounted on the hot shoe and turned on.	340
(OPTICAL)	Displayed if an optional flash unit functioning as a com- mander for Fujifilm optical wireless remote flash control is connected and turned on.	343

3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting.



4 Press DISP/BACK to put the changes into effect.

SYNC TERMINAL

SYNC TERMINAL is displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.



Description
Choose from the following options:
• M : A trigger signal is transmitted via the hot shoe X contacts
when a picture is taken. Choose a shutter speed slower than
the sync speed; even slower speeds may be required if the
unit uses long flashes or has a slow response time.
• ③0FF (0FF) : The trigger signal is disabled.
Choose whether the flash is timed to fire immediately after
the shutter opens (#\$\frac{4}{RONT}/1ST CURTAIN) or immediately before
it closes (REAR / 2ND CURTAIN). 1ST CURTAIN is recommended in
most circumstances.

SHOE MOUNT FLASH

The following options are available when an optional shoe-mounted flash unit is attached and turned on.



Setting	Description
1 Flash control mode	The flash control mode selected with the flash unit. This can in some cases be adjusted from the camera; the options available vary with the flash. • TTL: TTL mode. Adjust flash compensation (②). • M: The flash fires at the selected output regardless of subject brightness or camera settings. Output in some cases can be adjusted from the camera (②). • MULTI: Repeating flash. Compatible shoe-mounted flash units will fire multiple times with each shot. • ③OFF (OFF): The flash does not fire. Some flash units can be turned off from the camera.

Cattin	Desminstern
Setting	Description
② Flash compensation/output	The options available vary with flash control mode. • TTL: Adjust flash compensation (the full value may not be applied if the limits of the flash control system are exceeded). In the cases of the EF-X20, EF-20, and EF-42, the selected value is added to the value selected with the flash unit. • M/MULTI: Adjust flash output (compatible units only). Choose from values expressed as fractions of full power, from ¼ (mode M) or ¼ (MULTI) down to ½12 in increments equivalent to ½ EV. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results.
③ Flash mode (TTL)	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P, S, A, or M) selected. • 知 (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A let icon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken. • 知 (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released. • 知 (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.

Setting	Description
4 Sync	Control flash timing. • RÓMT (1ST CURTAIN): The flash fires immediately after the shutter opens (generally the best choice). • RÉAR (2ND CURTAIN): The flash fires immediately before the shutter closes. • \$ (AUTO FP(HSS)): High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to 1ST CURTAIN when MULTI is selected for flash control mode.
(5) Zoom	The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If AUTO is selected, zoom will automatically be adjusted to match coverage to lens focal length.
(6) Lighting	If the unit supports this feature, choose from: ■ (FLASH POWER PRIORITY): Gain range by slightly reducing coverage. ■ (STANDARD): Match coverage to picture angle. ■ (EVEN COVERAGE PRIORITY): Slightly increase coverage for more even lighting.
(7) LED light	Choose how the built-in LED light functions during still photography (compatible units only): as a catchlight (へんなて出しられ), as an AF-assist illuminator (AF/AF ASSIST), or as both a catchlight and an AF-assist illuminator (答/AF ASSIST+CATCHLIGHT). Choose OFF to disable the LED during photography.
7 Number of flashes *	Choose the number of times the flash fires each time the shutter is released in MULTI mode.
8 Frequency*	Choose the frequency at which the flash fires in MULTI mode.

^{*} Full value may not be applied if limits of flash control system are exceeded.

 
COMMANDER(OPTICAL)

The options will be displayed if the unit is currently functioning as a commander for Fujifilm optical wireless remote flash control.



Fujifilm optical wireless remote flash control offers a choice of four channels (Channels 1 through 4) for the exchange of optical signals between the commander and remote flash units. Separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.

The flash units can also be placed in up to three groups (A, B, and C) and flash mode and flash level adjusted separately for each group.



Setting	Description
1 Flash control mode (group A)	 Choose flash control modes for groups A, B, and C. TTL9 is available for groups A and B only. TTL: The units in the group fire in TTL mode. Flash compensation can be adjusted separately for each group. TTL%: If TTL% is selected for either group A or B, you can
(2) Flash control mode (group B)	specify the output of the selected group as a percentage of the other and adjust overall flash compensation for both groups. • M: In mode M, the units in the group fire at the selected output (expressed as a fraction of full power) regardless
(group C)	of subject brightness or camera settings. • MULTI: Choosing MULTI for any group sets all the units in all groups to repeating flash mode. All units will fire multiple times with each shot. • ©OFF (OFF): If OFF is selected, the units in the group will not fire.
Flash compensation/ output (group A)	Adjust flash level for the selected group according to option selected for flash control mode. Note that the full value may not be applied if the limits of the flash control
5 Flash compensation/ output (group B)	system are exceeded. • TTL: Adjust flash compensation.
6 Flash compensation/ output (group C)	 M/MULTI: Adjust flash output. TTL%: Choose the balance between groups A and B and adjust overall flash compensation.

Setting	Description
7 Flash mode (TTL)	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P , S , A , or M) selected.
	• ★★ (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A icon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken. • ★★ (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject bright-
	ness. The flash will not fire if not fully charged when the shutter is released. • 氯脲 (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.
8 Sync	Control flash timing. • #ốnt (1ST CURTAIN): The flash fires immediately after the shutter opens (generally the best choice). • #ćar (2ND CURTAIN): The flash fires immediately before the shutter closes. • # (AUTO FP(HSS)): High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to 1ST CURTAIN when MULTI is selected for flash control mode.
(9) Zoom	The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If AUTO is selected, zoom will automatically be adjusted to match coverage to lens focal length.
(1) Lighting	If the unit supports this feature, choose from: ■ (FLASH POWER PRIORITY): Gain range by slightly reducing coverage. ■ (STANDARD): Match coverage to picture angle. ■ (EVEN COVERAGE PRIORITY): Slightly increase coverage for more even lighting.

Cotting	Description
Setting	Description
	Choose the group for units functioning as a command-
	er for Fujifilm optical wireless remote flash control in TTL ,
	TTL%, or M mode. This option is available only with clip-
	on flash units that support Fujifilm optical wireless remote
(11) Commander	flash control.
Commanuel	• Gr A : Assign the commander to group A.
	• Gr B : Assign the commander to group B.
	• Gr C : Assign the commander to group C.
	• 0FF : Output from the commander is held to a level that
	does not affect the final picture.
(11) Number of flashes	Choose the number of times the flash fires each time the
11) INUITIDEI OI HASHES	shutter is released in MULTI mode.
	Choose the channel used by the commander for commu-
	nication with the remote flash units. Separate channels
(12) Channel	can be used for different flash systems or to prevent in-
	terference when multiple systems are operating in close
	proximity.
12 Fraguancy	Choose the frequency at which the flash fires in MULTI
(12) Frequency	mode.


Cooling Fans

Cooling fans help keep the camera cool, allowing longer periods of non-stop movie recording.

Attaching a Cooling Fan


Open the monitor and attach an FAN-001 cooling fan.

- 1 Turn the camera off before attaching or removing the fan.
 - 1 Open the monitor.

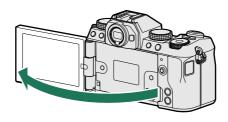


2 Remove the camera cooling fan connector cover and the fan connector cap.

After removing the cooling fan connector cover (A), attach it to the fan for safe-keeping. Keep the fan connector cap (B) in a safe place.

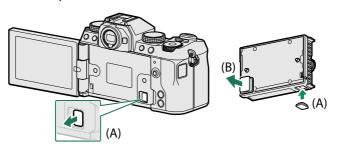

3 Place the fan on the camera, making sure the screws and connectors are correctly aligned.

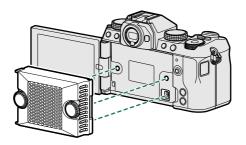

4 Tighten the screws.



The cooling fan may fall off if the screws are not sufficiently tightened.

Using the Fan

Fan speed can be adjusted using the SHOOTING SETTING > COOLING FAN SETTING and MOVIE SETTING > COOLING FAN SETTING options in the photo and movie menus, respectively. Select OFF to turn the fan off.

(1) At some speeds, the noise of the fan may be audible in movies recorded with the camera.

Technical Notes

Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit https://fujifilm-x.com/support/compatibility/cameras/.

Rechargeable Li-ion batteries

NP-W235: Additional high-capacity NP-W235 rechargeable batteries can be purchased as required.

Dual battery chargers

BC-W235: The BC-W235 can charge up to two NP-W235 batteries at a time. At +25 °C/+77 °F, the batteries will charge in about 200 minutes. Using a device that supplies power with an outputs of 30 W or above reduces charging times to as little as 150 minutes.

Remote releases

RR-100: Use to reduce camera shake. A third-party adapter that converts a female three-pin, Ø2.5 mm connector to a male three-pin, Ø3.5 mm connector is required for connection to the camera.

Stereo microphones

MIC-ST1: An external microphone for movie recording.

FUJINON lenses

XF-/XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount

FUJINON MKX-series lenses: Cinema lenses for the FUJIFILM X-mount.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4×. **XF2X TC WR**: Increases the focal length of the compatible lenses by about 2.0×.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

Shoe-mounted flash units

EF-X500: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a commander or remote flash unit for remote wireless flash photography.

EF-BP1: A battery pack for EF-X500 flash units. Takes up to 8 AA batteries.

EF-60: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 60/197 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. It can also be used as remote flash under the control of an optional EF-W1 wireless commander

EF-W1: With support for the NAS* wireless communication standard developed by Nissin Japan, this wireless flash commander can be used with optional EF-60 clip-on flash units and other NAS-compliant units.

* NAS is a registered trademark of Nissin Japan Ltd.

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Cooling fans

FAN-001: See "Cooling Fans" (■ 347).

Tripod grips

TG-BT1: Record movies, take photographs, or adjust zoom on compatible power zoom lenses while holding this Bluetooth tripod grip.

Grip belts

GB-001: Improves grip. Combine with a hand grip for more secure handling.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

Software for Use with Your Camera

The camera can be used with the following software. For the latest information on software available from Fujifilm, visit https://fujifilm-x.com/support/compatibility/cameras/.

Smartphone Apps

Establish a wireless connection between your camera and a smartphone or tablet.

https://app.fujifilm-dsc.com/

RAW FILE CONVERTER EX powered by SILKYPIX

RAW FILE CONVERTER EX powered by SILKYPIX is RAW conversion software from Ichikawa Soft Laboratory Co., Ltd. View RAW pictures on your computer and convert them into other formats. RAW FILE CONVERTER EX powered by SILKYPIX is available free of charge from the Fujifilm website.

https://fujifilm-x.com/support/download/software/raw-file-converterex-powered-by-silkypix/



- "RAW FILE CONVERTER EX powered by SILKYPIX" is supplied by Ichikawa Soft Laboratory Co., Ltd.
 - For information on when support will be available, visit: https://fujifilm-x.com/support/compatibility/software/raw-file-converter-expowered-by-silkypix/

Capture One Express for Fujifilm

View RAW pictures on your computer and convert them into other formats. Capture One Express for Fujifilm is available free of charge from Capture One A/S.

https://www.captureone.com/products-plans/capture-one-express/fujifilm



Visit the website above for information on when support will be available.

Capture One for Fujifilm

Capture One for Fujifilm workflow software from Capture One A/S supports tethered shooting and the conversion of RAW pictures into other formats.

https://www.captureone.com/explore-features/fujifilm



Visit the website above for information on when support will be available.

FUJIFILM Tether Shooting Plug-in (Exclusively for Lightroom

A plug-in for Adobe Lightroom Classic.

 FUJIFILM Tether Shooting Plug-in PRO/FUJIFILM Tether Shooting Plug-in https://fujifilm-x.com/products/software/adobe-photoshop-lightroomtether-plugin/

FUJIFILM X Acquire

This computer application lets you connect to the camera via USB or Wi-Fi and automatically download photos to a specified folder as they are taken, or backup and restore the camera via USB.

https://fujifilm-x.com/products/software/x-acquire/

FUJIFILM X RAW STUDIO

When the camera is connected to a computer via USB, FUJIFILM X RAW STUDIO can use the camera's unique image processing engine to rapidly convert RAW files to create high-quality images in other formats.

https://fujifilm-x.com/products/software/x-raw-studio/

For Your Safety

IMPORTANT SAFETY INSTRUCTIONS

- should be read before the appliance is operated.
- Retain Instructions: The safety and operating instructions should be retained for future reference.
- Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions: All operating and use instructions should be followed

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by Power Service Grounding Electrode the video product manufacturer as they may cause hazards. System (NEC ART 250. PART H)

Water and Moisture: Do not use this video product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

• Read Instructions: All the safety and operating instructions Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.


> Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufac-

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

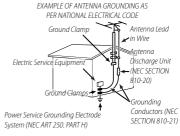

Power Lines: An outside antenna system should not be locat- Damage Requiring Service: Unplug this video product from ed in the vicinity of overhead power lines or other electric the wall outlet and refer servicing to qualified service personlight or power circuits, or where it can fall into such power nel under the following conditions: lines or circuits. When installing an outside antenna system, • When the power-supply cord or plug is damaged extreme care should be taken to keep from touching such • If liquid has been spilled, or objects have fallen into the power lines or circuits as contact with them might be fatal.

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance — this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

Be sure to read these notes before use

Safety Notes

 Make sure that you use your camera correctly. Read these safety notes and your Basic Manual carefully before use.

After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result



This icon indicates that death or serious injury can result if the information is ignored



This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information reguires attention ("Important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark indicate an action that must be performed ("Required")

The symbols on the product (including the accesories) represent the following:





Class II equipment (The construction of the product is double-insulated.)

∕N WARNING



If a problem arises, turn the camera off, remove the battery, disconnect the USB cable, and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor,

or is in any other abnormal state can cause a fire or electric shock. Contact your Fujifilm dealer. Do not allow water or foreign objects to enter the cam-

era or connectina cables. Do not use the camera or

connecting cables following ingress of fresh or salt



water, milk, beverages, detergents, or other liquids. Should liquid find its way into the camera or connectina cables, turn the camera off, remove the battery, disconnect the USB cable, and disconnect and unplua the AC adapter. Continued use of the camera can cause a fire or electric shock. Contact your Fujifilm dealer.

WARNING



Do not use the camera in the bathroom or shower. This can cause a fire or electric shock.



Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution can cause fire or electric shock.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and

cause a fire or electric shock. If the cord is damaged. contact your Fujifilm dealer. Do not use cables with bent connectors.



Do not place the camera on an unstable surface. This can cause the camera to fall or tip over and cause



Never attempt to take pictures while in motion. Do not use the camera while walking or driving. This can result in you falling down or being involved in a traffic accident.



Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge.



Do not use the battery except as specified. Load the battery as shown by the indicator.

Do not disassemble, modify, or heat batteries. Do not drop, strike, or throw batteries or otherwise subject them to strong impacts. Do not use batteries that show signs of leaking, deformation, discoloration, or other abnormalities. Use only designated chargers to recharge rechargeable batteries and do not attempt to recharge non-rechargeable Li-ion or alkaline batteries. Do not short batteries or store them with metallic objects. Failure to observe these precautions could result in the batteries overheating, igniting, rupturing, or leaking, causing fire, burns, or other injury.



Use only batteries or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire.

♠ WARNING



If the battery leaks and fluid gets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number riaht away.



Do not use the charger to charge batteries other than those specified here. The supplied charger is for use only with batteries of the type supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak, overheat or burst.



Usina a flash too close to a person's eves may cause visual impairment. Take particular care when photographing infants and young children. Do not remain in prolonged contact with hot surfaces.

Do not leave one part of the body in contact with the product for prolonged periods while the product is on. Failure to observe this precaution could result in low-temperature burns, particularly during prolonged use, at high ambient temperatures, when HIGH is selected for AUTO POWER OFF TEMP. or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.



Do not use in the presence of flammable objects, explosive aases, or dust. When carrying the battery, install it in a digital camera



or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape. Contact with other metallic objects or batteries could cause the battery to ignite or burst.



Keep memory cards, hot shoes, and other small parts out of the reach of small children. Children may swallow small parts; keep out of reach of children. Should a child swallow a small part, seek medical attention or call emergency.



Keep out of reach of small children. Among the elements that could cause injury are the strap, which could become entangled about a child's neck, causing strangulation, and the flash, which could cause visual impairment.



Follow the directions of airline and hospital personnel. This product generates radio-frequency emissions that could interfere with navigational or medical equipment.



Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or electric shock



Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.



Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock



Do not cover or wrap the camera or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.



Do not use the plug if it is damaged or if it does not fit securely into the outlet. Failure to observe this precaution could result in fire or electric shock.



When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.
Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.



When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card. Injury could result to those struck by the ejected card.



Do not handle the memory card immediately after shooting. The memory card may be hot, resulting in burns. Wait for the card to cool before removing it from the camera.



Request regular internal testing and cleaning for your camera. Build-up of dust in your camera can cause a fire or electric shock. Contact your Fujifilm dealer to request internal cleaning every two years. Please note that this service is not free of charge.



Dispose of the product in accord with location regulations.



Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.



Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

The Battery and Power Supply

Note: Check the type of battery used in your camera and read ■ Cautions: Handling the Battery the appropriate sections.

NARNING: Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

■ Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted ACPowerAdapters battery may not function when cold. Keep a fully charged • The AC power adapter is for indoor use only. spare battery in a warm place and exchange as necessary. • Be sure the cable is securely connected to the camera. or keep the battery in your pocket or other warm place and • Turn the camera off before disconnecting the adapter. Disinsert it in the camera only when shooting. Do not place the connect the adapter by the plug, not the cable. battery in direct contact with hand warmers or other heating • Do not disassemble. devices.

■ Charging the Battery

The battery can be charged using the camera and supplied AC adapter or an optional BC-W235 dual battery charger. Charging times will increase at ambient temperatures below • If the adapter causes radio interference, reorient or relocate +10°C (+50°F) or above +35°C (+95°F). Do not attempt to charge the battery at temperatures above +40 °C (+104 °F); at temperatures below +5 °C (+41 °F), the battery will not charge. Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

■ Battery Life

A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

If the battery is left for long periods without charging, you may find that its quality degrades or that it no longer holds a charge. Charge the battery regularly.

■ Storage

If the camera will not be used for an extended period, store it at room temperature with the battery charged to approximately one half to 3/3 capacity.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15 °C to +25 °C (+59 °F to +77 °F). Do not store in locations exposed to extremes of temperature.

- · Do not transport or store with metal objects such as necklaces or hairpins.
- Do not expose to flame or heat.
- Do not disassemble or modify.
- Do not expose to low atmospheric pressures.
- Use with designated chargers only.
- Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- . Do not expose to water.
- Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

■ Caution: Disposal

Dispose of used batteries in accord with local regulations. Attention should be drawn to the environmental aspects of battery disposal. Use the apparatus under moderate climate. Do not mechanically crush or split batteries.

- Do not expose to high heat and humidity.
- . Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- the receiving antenna.

Using the Camera

- · Do not aim the camera at extremely bright light sources, precaution could damage the camera image sensor.
- · Strong sunlight focused through the viewfinder may damthe electronic viewfinder at the sun.

Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the results to ensure that the camera is functioning normally. FUJIFILM Corporation cannot accept liability for damages or lost profits incurred as a result of product malfunction.

Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways by Fujifilm is under license. The SDHC and SDXC logos are that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing (CompactFlash Association). The HDMI logo is a trademark or of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images Type-C° and USB-C° are registered trademarks of USB Imor data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Handlina

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

Liquid Crystal

In the event that the display is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- . If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely Direct or indirect export, in whole or in part, of licensed softhigh-precision technology, it may contain pixels that are ware without the permission of the applicable governing always lit or that do not light. This is not a malfunction, and bodies is prohibited. images recorded with the product are unaffected.

Trademark Information

including artificial light sources or natural light sources. Digital Split Image is a trademark or registered trademark of such as the sun in a cloudless sky. Failure to observe this FUJIFILM Corporation. Digital Micro Prism is a trademark or registered trademark of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiage the panel of electronic viewfinder (EVF). Do not aim wan Inc. Apple, iPhone, iPad, Mac, Mac OS X, OS X, macOS, Lightning and Apple ProRes are registered trademarks of Apple Inc. in the U.S.A. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S.A. and other countries. Android is a trademark or registered trademark of Google LLC. Adobe, the Adobe logo, Photoshop, and Lightroom are trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and other countries. Wi-Fi®, the Wi-Fi CERTIFIED logo, and Wi-Fi Protected Setup® are registered trademarks of the Wi-Fi Alliance®. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks trademarks of SD-3C, LLC. CFexpress is a trademark of the CFA registered trademark of HDMI Licensing LLC, OR Code is a registered trademark of DENSO WAVE INCORPORATED, USB plementers Forum. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and

Exif Print (Exif Version 2.32)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

IMPORTANT NOTICE: Read Before Using the Software

Lenses and Other Accessories

- · Use a screw 4.5 mm or shorter when attaching a tripod.
- Fuiifilm will not be held liable for performance issues or damage caused by the use of third-party accessories.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See: http://www.dtsc.ca.gov/hazardouswaste/perchlorate

For Customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE



Contains IC: 10293A-WMBACBM25 Contains FCC ID: COF-WMBACBM25

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Notes on the Grant: To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.



California Code of Regulations, Title 20, Division 2, Chapter 4, Article 4, Appliance Efficiency Regulations, Sections 1601 through 1609

For Customers in Canada

CAN ICES-003 (B)/NMB-003(B)

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

Industry Canada statement: This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios. The County Code Selection feature is disabled for products marketed in the US/ Canada.

Radiation Exposure Statement: The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while The recycling of materials will help to conserve natural rebeing used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested been tested and found to comply with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

Operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems

Disposal of Electrical and Electronic Equipment in Private Households

In the European Union, Norway, Iceland and Liechtenstein: This symbol on the product, or in

the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of



electrical and electronic equipment. By ensuring this product is disposed of correctly, you will

help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.



If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

sources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the

In Countries Outside the European Union, Norway, Iceland and that some biological effects might occur, but such findings Liechtenstein: If you wish to discard this product, including have not been confirmed by additional research. X-S20 has the batteries or accumulators, please contact your local authorities and ask for the correct way of disposal.

> In Japan: This symbol on the batteries indicates that they are to be disposed of separately.



Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are-

- · exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- · subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- · in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

Wireless Network and Bluetooth Devices: Cautions

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- RE Directive 2014/53/EU

Hereby, FUJIFILM Corporation declares that the radio equipment type FF220002 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://dl.fujifilm-x.com/qlobal/products/cameras/x-s20/pdf/x-s20_doc-bkk.pdf

The full text of the UK declaration of conformity is available at the following internet address: https://dl.fujifilm-x.com/en-ab/products/cameras/x-s20/pdf/x-s20_doc-bkk.pdf

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth®).

Maximum radio-frequency power (EIRP):

WLAN 2.4 GHz: 14.74 dBm WLAN 5 GHz: 9.94 dBm

Bluetooth: 6.08 dBm

IMPORTANT: Read the following notices before using the camera's built-in wireless transmitter.

- This product, which contains encryption function developed in the United States, is controlled by the United States Export Administration Regulations and may not be exported or re-exported to any country to which the United States embaraoes goods.
- Use only a wireless network or Bluetooth device. Fujifilm does not accept liability for damages resulting from unauthorized
 use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other systems that
 may directly or indirectly impact human life. When using the device in computer and other systems that demand a greater
 degree of reliability than offered by wireless network or Bluetooth devices, be sure to take all necessary precautions to
 ensure safety and prevent malfunction.
- Use only in the country in which the device was purchased. This device conforms to regulations governing wireless network
 and Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the device.
 Fujifilm does not accept liability for problems arising from use in other jurisdictions.
- Do not use the device in locations subject to magnetic fields, static electricity, or radio interference.
 Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.
- The wireless transmitter operates in the 2.4 GHz and 5 GHz bands using DSSS, OFDM and GFSK modulation.
- Security: Wireless network and Bluetooth devices transmit data via radio and consequently their use requires greater attention to security than applies in the case of wired networks.
 - Do not connect to unknown networks or networks to which you do not have access rights, even if they are displayed
 on your device, as such access may be considered unauthorized. Connect only to networks to which you have access
 rights.
 - Be aware that wireless transmissions may be vulnerable to interception by third parties.
 - Do not connect this device directly to telecommunications networks (including public wireless LANs) operated by providers or mobile, landline, Internet, or other telecommunications services.

• The following may be punishable by law:

- Disassembly or modification or this device
- Removal of device certification labels
- This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters. It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in RFID tracking systems for assembly lines and in other similar applications.
- To prevent interference with the above devices, observe the following precautions.
 Confirm that the RFID transmitter is not in operation before using this device. Should you observe that the device causes interference in licensed transmitters used for RFID tracking, immediately stop using the affected frequency or move the device to another location. If you notice that this device causes interference in low-voltage RFID tracking systems, contact a Fujifilm representative.

- Do not use this device on board an aircraft. When on an aircraft, follow the instructions of airline personnel. Note that this product may emit radio-frequency radiation even when off. This can be prevented by selecting ON for AIRPLANE MODE in the network/USB setting menu before boarding.
- Requirements in AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/ UK/HR. 5150 MHz–5350 MHz is for indoor use only.

Specific Absorption Rate (SAR) Information

SAR is measured with the device at 0 mm to the body, while transmitting at the highest certified output power level in all frequency bands of the device. The maximum SAR value is 0.26 W/kg (head/body) averaged over 10 gram of tissue.

U.K. Importer:

FUJIFII M UK Limited

Fujifilm House, Whitbread Way, Bedford, Bedfordshire, MK42 0ZE, United Kingdom

EU Importer:

FUJIFILM Electronic Imaging Europe GmbH Fujistrasse 1 47533 Kleve, Germany

Be sure to read these notes before using the lens

Safety Notes

- Make sure that you use the lens correctly. Read these safety notes and the camera Basic Manual carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious WARNING injury can result if the information is ignored.



This icon indicates that personal injury or material damage can result if the information is ignored

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information reguires attention ("Important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark indicate an action that must be performed ("Required").

∕!\ WARNING



Do not immerse in or expose to water. Failure to observe this precaution can cause a fire or electric shock.



Do not disassemble (do not open the case). Failure to observe this precaution can cause fire, electric shock, or injury due to product malfunction.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not place on unstable surfaces. The product may fall, causing injury.



Do not view the sun through the lens or camera viewfinders. Failure to observe this precaution can cause permanent visual impairment.

CAUTION



Do not use or store in locations that are exposed to steam, or smoke or are very humid or extremely dusty. Failure to observe this precaution can cause fire or electric shock.



Do not leave in direct sunlight or in locations subject to very high temperatures, such as in a closed vehicle on a sunny day. Failure to observe this precaution can cause fire.



Keep out of the reach of small children. This product could cause injury in the hands of a child.



Do not handle with wet hands. Failure to observe this precaution can cause electric shock.



Keep the sun out of the frame when shooting backlit subjects. Sunlight focused into the camera when the sun is in or close to the frame can cause fire



When the product is not in use, replace the lens caps and store out of direct sunlight. Sunlight focused by the lens can cause fire or burns.



Do not carry the camera or lens while they are attached to a tripod. The product can fall or strike other objects, causing injury.

Product Care

To ensure continued enjoyment of the product, observe the following precautions.

Camera body: Use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth. Use a blower to remove dust from the monitor, taking care to avoid scratches, and then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. To prevent dust entering the camera, replace the body cap when no lens is in place.

Image sensor: Multiple photographs marred by spots or blotches in identical locations may indicate the presence of dust on the image sensor. Clean the sensor using ☑ USER SETTING > SENSOR CLEANING.

Cleaning the Image Sensor

Dust that cannot be removed using **ZUSER SETTING** > **SENSOR CLEANING** can be removed manually as described below.

- Note that there will be a charge to repair or replace the image sensor if it is damaged during cleaning.
 - 1 Use a blower (not a brush) to remove dust from the sensor.
 - Do not use a brush or blower brush. Failure to observe this precaution could damage the sensor.



- 2 Check whether the dust has been successfully removed. Repeat Steps 1 and 2 as necessary.
- 3 Replace the body cap or lens.

Firmware Updates

Updates to product firmware may result in changes not described in the manual. For more information, visit: https://fujifilm-x.com/support/download/firmware/cameras/

Checking the Firmware Version

- The camera will only display the firmware version if a memory card is inserted.
 - 1 Turn the camera off and check that a memory card is inserted.
 - 2 Turn the camera on while pressing the DISP/BACK button. The current firmware version will be displayed; check the firmware version.
 - 3 Turn the camera off.
- To view the firmware version or update firmware for optional accessories such as interchangeable lenses, shoe-mounted flash units, and mount adapters, mount the accessories on the camera.

Troubleshooting

Consult the table below should you encounter problems using your camera. If you don't find the solution here, contact your local Fujifilm distributor.

Power and Battery

Problem	Solution
The camera does not turn on.	 • The battery was not charged before first use: The battery is not charged at shipment. Charge the battery before first use (■ 37). • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (■ 37). • The battery is inserted incorrectly: Reinsert in the correct orientation (■ 34). • The battery-chamber cover is not latched: Latch the battery-chamber cover (■ 34).
The monitor does not turn on.	The monitor may not turn on if the camera is turned off and then on again very quickly. Keep the shutter button pressed halfway until the monitor activates.

Problem	Solution
The battery runs down quickly.	 The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture. There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth. ON is selected for AF/MF SETTING > PRE-AF: Turn PRE-AF off (□ 154). The camera is in AUTO mode: To extend battery endurance, we recommend that you choose a different mode (□ 68). The battery has been charged many times: Select BATTERY AGE to view the battery age; if the battery is old, replace it with a new battery (□ 273).
The camera turns off suddenly.	The battery is exhausted: Charge the battery or insert a fully-charged spare battery (1998).
The camera does not turn off.	The camera may be busy. Check the indicator lamp (1998).

Problem	Solution
Charging does not start.	 Make sure that the AC power adapter is correctly plugged in (37). Ensure that the plug adapter is correctly connected to the AC power adapter (37). The battery has not been recharged for an extended period. If the battery has not been charged for an extended period, charging will be disabled to ensure safety. Replace it with
Charging does not start (USB).	a new battery. Insert the camera battery (■ 34). Reinsert the camera battery in the correct orientation (■ 34). Confirm that the camera is connected to the computer (■ 40). If the computer is off or in sleep mode, turn on or wake the computer and disconnect and reconnect the USB cable (■ 40).
Charging does not start (battery charger).	 Insert the battery. Reinsert the battery in the correct orientation. The AC adapter is not correctly connected to the charger: Check that adapter is correctly connected to the charger.
Charging is slow.	Charge the battery at room temperature.

Problem	Solution
The indicator lamp blinks, but the battery does not charge.	 There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth (34). The battery has been charged many times: Select BATTERY AGE to view the battery age; if the battery is old, replace it with a new battery (273). If the battery still fails to charge, contact your Fujifilm dealer (350).
The power supply icon is not displayed.	Confirm that POWER SUPPLY ON/COMM OFF is selected for USB POWER SUPPLY/COMM SETTING (1) 268).

Menus and Displays

Problem	Solution
Display is not in English.	Select ENGLISH for ☑ USER SETTING > 氫 言語/LANG . (圓 45, 272).

Shooting

Problem	Solution
No picture is taken when the shutter button is pressed.	 The memory card is full: Insert a new memory card or deleted pictures (□ 34, 229). The memory card is not formatted: Format the memory card in the camera (□ 270). There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth. The memory card is damaged: Insert a new memory card (□ 34). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (□ 37). The camera has turned off automatically: Turn the camera on (□ 41). You are using a third-party mount adapter: Select ON for SHOOT WITHOUT LENS (□ 293).
Mottling ("noise") appears in the monitor or viewfinder when the shutter button is pressed halfway.	Gain is increased to aid composition when the subject is poorly lit and aperture is stopped down, which may result in noticeable mottling when images are previewed in the displays. Images taken with the camera are unaffected.
The camera does not focus.	The subject is not suited to autofocus: Use focus lock or manual focus (■ 108). The focus area is too small for the intended subject: Increase the size of the focus area by a couple of steps (■ 98).

Problem	Solution
No panorama is recorded when the shutter button is pressed.	The indicator lamp was orange when you attempted to record a panorama: Wait until the indicator lamps turns off (🗎 8).
No face is detected.	The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions (■ 156). The subject's face occupies only a small area of the frame: Change the composition so that the subject's face occupies a larger area of the frame (■ 156). The subject's face is turned away from the camera: Ask the subject to face the camera (■ 156). Face/Eye detection setting is off: Turn Face/Eye Detection setting on (■ 156). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in better light.
No subject is detected.	The subject is partially hidden: Choose a vantage point where you can see as much of the subject as possible (☐ 158). The subject occupies only a small portion of the frame: Get closer to your subject so it occupies more of the frame (☐ 158). OFF is selected for SUBJECT DETECTION SETTING: Select SUBJECT DETECTION ON (☐ 158). The subject is poorly lit: Shoot in better light.

nical Not
cal No
No
I Not
Not
Qt.
_
S
•

Problem	Solution
The flash does not fire.	 The flash is disabled: Adjust settings (■ 178). The electronic shutter is enabled: Choose a SHUTTER TYPE that does not use the electronic shutter (■ 172). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (■ 37). The camera is in bracketing or continuous mode: Select single frame mode (■ 5). The flash is lowered: Raise the flash (■ 123).
Some flash modes are not available.	OFF is selected for SOUND & FLASH: Select ON (19 274).
The flash does not fully light the subject.	 The subject is not in range of the flash: Position the subject in range of the flash. The flash window is obstructed: Hold the camera correctly. Shutter speed is faster than the sync speed: Choose a slower shutter speed () 73, 77, 391).

Problem	Solution
Pictures are blurred.	The lens is dirty: Clean the lens. The lens is blocked: Keep objects away from the lens (☐ 48). In the lens is displayed during shooting and the focus frame is displayed.
Pictures are mottled.	played in red: Check focus before shooting (■ 49). Shutter speed is slow and the ambient temperature is high: This is normal and does not indicate a malfunction.* Use pixel mapping (■ 143). * X-rays, cosmic rays, and other forms of radiation interacting with the image sensor may cause bright spots of various colors such as white, red, and blue. Pixel mapping helps reduce the occurrence of such bright spots.
	 The camera has been used continuously at high temperatures: Turn the camera off and wait for it to cool down (\$\equiv 41\$, 386). A temperature warning is displayed: Turn the camera off and wait for it to cool down (\$\equiv 41\$, 386).

Playback

1 layback	
Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom is unavailable.	The pictures were created using RESIZE or with a different make or model of camera.
No sound in movie playback.	 Playback volume is too low: Adjust playback volume (277). The microphone was obstructed: Hold the camera correctly during recording. The speaker is obstructed: Hold the camera correctly during playback. OFF is selected for SOUND & FLASH: Select ON (274).
Selected pictures are not deleted. Pictures remain after ERASE > ALL FRAMES is selected.	Some of the pictures selected for deletion are protected. Remove protection using the device with which it was originally applied (閏 233).
File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (1998).

Connections

Problem	Solution
The monitor is blank.	The camera is connected to a TV: Pictures will be displayed on the TV instead of in the camera monitor (■ 51).
Both the TV and camera monitor are blank.	EVIF ONLY + (2002) is selected for VIEW MODE SETTING: Put your eye to the viewfinder or choose a different VIEW MODE SETTING option (1991) 14).
No picture or sound on TV.	 The camera is not properly connected: Connect the camera properly (□ 51). Input on the television is set to "TV": Set input to "HDMI" (□ 51). The volume on the TV is too low: Use the controls on the television to adjust the volume (□ 51).
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (19) 253).
FUJIFILM X RAW STUDIO or FUJIFILM X Acquire fails to correctly detect the camera.	Check the option selected for CONNECTION MODE on the camera. Select USB RAW CONV./BACKUP RESTORE before connecting the USB cable (🗎 266).

 Note
S

Problem	Solution
Cannot connect to iPhones or iPads.	POWER SUPPLY ON/COMM OFF is selected for USB POWER SUPPLY/COMM SETTING. Select POWER SUPPLY OFF/COMM ON when the camera is connected via a Lightning connection to a device that do not supply power (12) 268).
	Confirm that the camera is correctly connected : The procedure for connecting the camera varies with the type of connector with which the smartphone is equipped (\$\square\$ 250).

Wireless Transfer

For additional information on troubleshooting wireless connections, visit:

https://digitalcamera-support-en.fujifilm.com/

Problem	Solution
Cannot connect to smartphone. The camera is slow to connect or upload pictures to the smartphone. Upload fails or is interrupted.	 The smartphone is too far away: Move the devices closer (■ 247). Nearby devices are causing radio interference: Move the camera and smartphone away from microwave ovens or cordless phones (■ 247).
Cannot upload images.	 The smartphone is connected to another device: The smartphone and camera can connect to only one device at a time. End the connection and try again (■ 247). There are several smartphones in the vicinity: Try connecting again. The presence of multiple smartphones can make connection difficult (■ 247). The image was created on another device: The camera may not be able to upload images created on other devices. The image is a movie: Uploading movies takes some time. In addition, smartphones may not accept upload of movies in formats they do not support.
Smartphone will not display pictures.	Select ON for Bluetooth/SMARTPHONE SETTING > RESIZE IMAGE FOR SMARTPHONE . Selecting OFF increases upload times for larger images; in addition, some phones may not display images over a certain size (£ 264).

Miscellaneous

Problem	Solution			
	• Temporary camera malfunction: Remove and reinsert the			
	battery (🕮 34).			
	• The battery is exhausted: Charge the battery or insert a ful-			
The camera is unre-	ly-charged spare battery (🗐 37).			
sponsive.	• The camera is connected to a wireless LAN: End the connec-			
	tion.			
	• The controls are locked: Press and hold the MENU/OK buttor			
	to unlock the controls (🕮 11, 13).			
The camera does not	Remove and reinsert the battery (🕮 34). If the problem			
function as expected.	persists, contact your Fujifilm dealer.			
	• Adjust the volume (🕮 275).			
No sound.	• OFF is selected for SOUND & FLASH: Select ON			
	(EE 274).			
Pressing the Q button				
does not display the	TTL-LOCK is active: End TTL-LOCK (🕮 179).			
quick menu.				

Warning Messages and Displays

The following warnings appear in the display.

Warning	Description			
red)	Low battery. Charge the battery or insert a fully-charged spare battery.			
(blinks red)	Battery exhausted. Charge the battery or insert a fully-charged spare battery.			
! AF (displayed in red with red focus frame)	The camera cannot focus. Use focus lock to focus on an- other subject at the same distance, then recompose the picture.			
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. Use the flash for additional light ling when taking photographs of poorly-lit subject.			
FOCUS ERROR LENS CONTROL ERROR	Camera malfunction. Turn the camera off, remove the lens, and check for foreign matter between the lens and the			
TURN OFF THE CAMERA AND TURN ON AGAIN	camera body, then replace the lens and turn the camera on. If the problem persists, contact a Fujifilm dealer.			
CARD NOT INITIALIZED	 The memory card is not formatted or the memory card has been formatted in a computer or other device: Format the memory card using USER SETTING > FORMAT. The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card. Camera malfunction: Contact a Fujifilm dealer. 			

5	Ψ
0	ō
0	D C

Warning	Description
LENS ERROR	Turn the camera off, remove the lens, and check for for- eign matter between the lens and the camera body, then replace the lens and turn the camera on. If the problem persists, contact a Fujifilm dealer.
	• The memory card is not formatted for use in the camera: For-
	mat the card.
CARD ERROR	 The memory card contacts require cleaning or the memory card
	is damaged : Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card.
	 Incompatible memory card: Use a compatible card.
	Camera malfunction: Contact a Fujifilm dealer.
PROTECTED CARD	The memory card is locked. Unlock the card.
BUSY	The memory card is incorrectly formatted. Use the camera
	to format the card.
	The memory card is full and pictures cannot be recorded.
SD MEMORY FULL	Delete pictures or insert a memory card with more free
	space.

Warning	Description
WRITE ERROR	 Memory card error or connection error: Reinsert the card or turn the camera off and then on again. If the message persists, contact a Fujifilm dealer. Not enough memory remaining to record additional pictures: Delete pictures or insert a memory card with more free space. The memory card is not formatted: Format the memory card. The memory card was removed while data were being recorded: Do not remove the memory card during recording. The memory card write speed is slow: When recording movies, be sure the memory card write speed is fast enough.
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Insert a formatted memory card and select RENEW for SAVE DATA SET-UP > FRAME NO. . Take a picture to reset frame numbering to 100-0001, then select CONTINUOUS for FRAME NO. .

Z	
0	
E	
S	
40	

Warning	Description		
	The file is corrupt or was not created with the camera: The file cannot be viewed. The promoner and contacts require despite: Close the contact in the contact in the contact in the contact.		
READ ERROR	 The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card. Camera malfunction: Contact a Fujifilm dealer. 		
PROTECTED FRAME	An attempt was made to delete or rotate to a protected picture. Remove protection and try again.		
CAN NOT CROP	The picture is damaged or was not created with the camera.		
DPOF FILE ERROR	Print orders can contain no more than 999 pictures. Copy any additional pictures you wish to print to another memory card and create a second print order.		
CAN NOT SET DPOF	The picture cannot be printed using DPOF.		
CAN NOT SET DPOF	Movies cannot be printed using DPOF.		
CAN NOT ROTATE	The selected picture cannot be rotated.		
🕰 CAN NOT ROTATE	Movies cannot be rotated.		

Warning	Description		
CANNOT EXECUTE	The selected operation is not supported: Check whether the		
≅ CANNOT EXECUTE	picture was recorded with a different model of camera.		
! ! (yellow)	The camera is approaching the maximum temperature al-		
CAMERA IS APPROACHING	lowed when STANDARD is selected for AUTO POWER		
STANDARD	OFF TEMP. and will shortly turn off automatically. Turn the		
TEMPERATURE LIMIT	camera off and wait for it to cool.		
! (yellow) CAMERA IS APPROACHING HIGH TEMPER- ATURE LIMIT.DO NOT HOLD CAMERA FOR LONG PERIODS OF TIME	The camera is approaching the maximum temperature allowed when HIGH is selected for AUTO POWER OFF TEMP. and will shortly turn off automatically. Remaining in contact with the camera could result in low-temperature burns; mount the camera on a tripod or take other steps to avoid prolonged contact with the camera. The camera will shortly turn off automatically. Turn the camera off and wait for it to cool. Mottling may increase in pictures taken when this warning is displayed.		
!	The camera temperature has reached the cutoff point and the camera is about to turn off automatically. Turn the camera off and wait for it to cool. Mottling may increase in pictures taken when this warning is displayed.		

Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

Capacity		SD memory cards 64 GB	
H		FINE	NORMAL
	■ 3:2	4080	6040
Photos	RAW (UNCOMPRESSED)	1090	
FIIULUS	RAW (LOSSLESS COMPRESSED)	1990	
	RAW (COMPRESSED)	2760	
Movies*	4K 2160	158 minutes	inutes
Movies	IIID 1080	158 minutes	

^{*} Assumes default bit rate



- The types of memory cards suitable for movie recording vary with the settings selected (# 62).
 - Shots over an hour in length may be recorded across multiple files without interruption. In addition, movies over 4 GB in size will be recorded uninterrupted across multiple files to SD memory cards with capacities 32 GB or less.

Specifications

System			
Model	FUJIFILM X-S20		
Product Number	FF220002		
Effective pixels	Approx. 26.1 million		
lmage sensor	23.5 mm × 15.6 mm (APS-C), X-Trans CMOS 4 sensor with		
	primary color filter		
Storage media	Fujifilm-recommended SD/SDHC/SDXC memory cards		
Memory card slots	SD memory card slot (UHS-II compliant)		
File system	Still pictures: Compliant with DCF 2.0		
	• Compressed: Exif 2.32 JPEG-baseline compliant; DPOF compli-		
	ant; HEIF compliant (4:2:2, 10-bit)		
	 Uncompressed or compressed using a reversible or non-reversible 		
	algorithm: RAW (original RAF format; special-purpose software		
	required); RAW+JPEG available; TIFF (RGB)		
	 Movies: Compliant with HEVC/H.265, and H.264 		
	Audio (including voice memos):		
	- LPCM (two channels: 24-bit, 48 kHz sampling)		
	- AAC (MP4 recordings only)		
	Audio (via XLR microphone adapter):		
	- LPCM (two channels: 24-bit, 48 kHz sampling; four channels: 24 bit, 48 kHz sampling)		
	nels: 24-bit, 48 kHz sampling) - AAC (MP4 recordings only; two channels: 16-bit, 48 kHz		
	sampling)		
lmage size	3:2 (6240 × 4160) 1:1 (4160 × 4160)		
	16:9 (6240 × 3512)		
	M 3:2 (4416 × 2944) M 1:1 (2944 × 2944)		
	M 16:9 (4416 × 2488)		
	§ 3:2 (3120 × 2080) § 1:1 (2080 × 2080)		
	§ 16:9 (3120 × 1760)		
	RAW (6240 × 4160)		
	■ panorama : vertical (2160 × 9600)/horizontal (9600 × 1440)		
	M panorama: vertical (2160 \times 6400)/horizontal (6400 \times 1440)		
Lens mount	FUJIFILM X mount		

-
W.
0
7
3
Ξ.
0
а
_
7
-
0
_
P
S

System	
Sensitivity	• Still pictures : Standard output sensitivity equivalent to ISO 160–12800 in increments of ½ EV; AUTO 1–3; extended output sensitivity equivalent to ISO 80, 100, 125, 25600, or 51200
	 Movies: Standard output sensitivity equivalent to ISO 160–12800 in increments of ½ EV; AUTO; extended output sensitivity equivalent to ISO 25600
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT, AVERAGE, CENTER WEIGHTED
Exposure control	Programmed AE (with program shift); shutter-priority AE; aperture-priority AE; manual exposure
Exposure compensation	• Still pictures: −5 EV−+5 EV in increments of ⅓ EV • Movies: −2 EV−+2 EV in increments of ⅓ EV
Shutter speed	MECHANICAL SHUTTER Modes P and A: 30 s to 1/4000 s Modes S and M: 15 min. to 1/4000 s Bulb: Max. 60 min. ELECTRONIC SHUTTER Modes P and A: 30 s to 1/32000 s Modes S and M: 15 min. to 1/32000 s Bulb: Fixed at 1 s MECHANICAL + ELECTRONIC Modes P and A: 30 s to 1/32000 s Modes S and M: 15 min. to 1/32000 s Modes P and A: 30 s to 1/32000 s Modes S and M: 15 min. to 1/32000 s Modes S and M: 15 min. to 1/32000 s Bulb: Max. 60 min.

Continuous		Available frame advance rates
	CONTINUOUS MODE	(JPEG)
	30fps(1.25X CROP)*	30
	20fps(1.25X CROP)*	20
	10fps(1.25X CROP)*	10
	20fps*	20
	10fps*	10
	8.0fps	8.0
	5.0fps	5.0
	4.0fps	4.0
	3.0fps	3.0
	* Available with electronic shutte	er only.
Focus	card used.	ditions and type of memory
	 Autofocus system: Intelligent phase-detection AF) 	hybrid AF (TTL contrast-detect/
White balance	 Autofocus system: Intelligent phase-detection AF) Focus-area selection: SINGLE P Auto (WHITE PRIORITY, AUTO, Custom 2, Custom 3, color te 	AF; manual focus with focus ring hybrid AF (TTL contrast-detect/OINT, ZONE, WIDE/TRACKING, ALL AMBIENCE PRIORITY), Custom 1 mperature selection, direct sunscent, warm white fluorescent descent, underwater
White balance Self-timer	 Autofocus system: Intelligent phase-detection AF) Focus-area selection: SINGLE P Auto (WHITE PRIORITY, AUTO, Custom 2, Custom 3, color te light, shade, daylight fluore 	hybrid AF (TTL contrast-detect/ OINT, ZONE, WIDE/TRACKING, ALL AMBIENCE PRIORITY), Custom 1 mperature selection, direct sun- scent, warm white fluorescent descent, underwater
Self-timer	 Autofocus system: Intelligent phase-detection AF) Focus-area selection: SINGLE P Auto (WHITE PRIORITY, AUTO, Custom 2, Custom 3, color te light, shade, daylight fluore cool white fluorescent, incand Still pictures: Off, 2 sec., 10 sec., Movies: Off, 3 sec., 5 sec., 10 Type: Manual pop-up flash to 	hybrid AF (TTL contrast-detect, OINT, ZONE, WIDE/TRACKING, ALL AMBIENCE PRIORITY), Custom 1 mperature selection, direct sunscent, warm white fluorescent descent, underwater ec. sec. unit
	 Autofocus system: Intelligent phase-detection AF) Focus-area selection: SINGLE P Auto (WHITE PRIORITY, AUTO, Custom 2, Custom 3, color te light, shade, daylight fluore cool white fluorescent, incand Still pictures: Off, 2 sec., 10 sec., Movies: Off, 3 sec., 5 sec., 10 	hybrid AF (TTL contrast-detect, OINT, ZONE, WIDE/TRACKING, ALL AMBIENCE PRIORITY), Custom 1 mperature selection, direct sun- scent, warm white fluorescent descent, underwater ec. sec. unit (ISO 100, m/ft.)), STANDARD, SLOW SYNC.),

n	
7	
\supset	
Ę.	
Ü	
<u>w</u>	
=	
_	
0	
0	
m	
S	

Custom	
System	
Hot shoe	Provided (supports TTL flash control); supports sync speeds
	as fast as 1/180 s
Sync contact	X contact; supports sync speeds as fast as 1/180 s
Sync terminal	-
Electronic viewfinder	r 0.39-in., 2360k-dot OLED viewfinder; magnification 0.62× with
(EVF)	50 mm lens (35 mm format equivalent) at infinity and diopter
	set to -1.0 m ⁻¹ ; diagonal angle of view approximately 31°
	(horizontal angle of view approximately 26°)
	• Diopter adjustment: -4 to +2 m ⁻¹
	• Eyepoint: Approximately 17.5 mm
LCD monitor	3.0-in/7.6 cm, 1840k-dot color touch screen LCD monitor,
	Vari-angle LCD monitor
Movies	• Movie size: 62K 3:2, 4K 16:9, DCI 17:9, FHD 16:9, FHD 17:9,
(with stereo sound)	맫 16:9, 만 17:9
	• Frame rate: 59.94P, 50P, 29.97P, 25P, 24P, 23.98P
	Recording/output format:
	- H.265 (10-bit MOV 4:2:2/4:2:0; 360, 200, 100, or 50 Mbps)
	- H.264 (8-bit MOV/MP4 4:2:0; 360, 200, 100, or 50Mbps)
	- HDMI output supported (RAW output supported with
	Atomos and Blackmagic Design external recorders; 8-bit
	4:2:2/10-bit 4:2:2)
High-speed movies	• Movie size: FHD 16:9, FHD 17:9
J	• Frame advance rate: 240P, 200P, 120P, 100P

Input/output terminals		
Microphone connector	ø3.5 mm mini-stereo jack	
Headphone jack socket	ø3.5 mm mini-stereo jack	
Remote release connector	ø3.5 mm 3-pole mini jack	
Digital input/output	USB connector: USB Type-C® USB 10 Gbps	
HDMI output	HDMI Micro connector (type D)	

Power supply/other	
Power supply	NP-W235 rechargeable battery (supplied with camera)
Battery life	Battery type: NP-W235
	• Lens: XF35mmF1.4 R
	External flash units: Disabled

• Shooting mode: Mode P

Number of shots		
PERFORMANCE	LCD	EVF
B00ST ¹	Approx. 570	Approx. 530
NORMAL	Approx. 750	Approx. 750
ECONOMY	Approx. 800	Approx. 750

Total length of footage that can be recorded on a single charge Continuance battery life of **Actual battery life** Mode of movie capture movie capture 6.2K ² Approx. 85 minutes Approx. 120 minutes 4K 3 Approx. 80 minutes Approx. 110 minutes 1 D 3 Approx. 95 minutes Approx. 150 minutes High-speed movies⁴ Approx. 95 minutes

1 EVF FRAME RATE PRIORITY (100P) selected EVF/LCD BOOST SETTING

- 2 At a frame rate of 29.97 fps.
- 3 At a frame rate of 59.94 fps.
- 4 At a frame rate of 120 fps.

CIPA standard. Measured using battery supplied with camera and SD memory card.

Note: Battery endurance varies with battery charge level and the figures given above are not guaranteed. Battery endurance will decline at low temperatures.

_
Φ'
$\overline{\Box}$
_
3
-
D.
ש
_
Z
$\overline{}$
٧.
7
עו
S

Power supply/other	
Camera size	127.7 mm \times 85.1 mm \times 65.4 mm (32.9 mm excluding projections,
$(W \times H \times D)$	measured at thinnest part)/5.03 in. \times 3.35 in. \times 2.57 in. (1.30 in.)
Camera weight	Approx. 410 g/14.5 oz., excluding battery, accessories, and
	memory card
Shooting weight	Approx. 491 g/17.3 oz., including battery and memory card
Operating conditions	• Temperature : 0 °C to +40 °C/+32 °F to +104 °F
	• Humidity : 10% to 80% (no condensation)

Windows tuon and then	
Wireless transmitter	
Wireless LAN	
Standards	IEEE 802.11a/b/g/n/ac (standard wireless protocol)
Operating frequency	• Israel, Indonesia
(center frequency)	: 2,412 MHz–2,462 MHz (11 channels)
	 USA, Canada, Brazil, China, India, Korea, Malaysia
	: 2,412 MHz–2,462 MHz (11 channels)
	: 5,180 MHz-5,320 MHz (W52, W53)
	: 5,745 MHz-5,825 MHz (UNII-3)
	• European Union, Japan, United Kingdom, Australia, Norway, New
	zealand, Turkey, Hong Kong, Philippines, Vietnam, Singapore,
	Thailand, UAE, Russia, Taiwan, Saudi Arabia, Qatar, Bahrain,
	Oman, Egypt, Iran, Kuwait, Lebanon, Uzbekistan
	: 2,412 MHz–2,462 MHz (11 channels)
	: 5,180 MHz-5,320 MHz (W52, W53)
	: 5,500 MHz-5,700 MHz (W56)
Access protocols	Infrastructure
Bluetooth®	
Standards	Bluetooth version 4.2 (Bluetooth Low Energy)
Operating frequency	2,402 MHz-2,480 MHz
(center frequency)	

NP-W235 rechargeable battery	
Nominal voltage	7.2 V
Nominal capacity	2350 mAh
Rating capacity	2200 mAh
Operating	0 °C to +40 °C/+32 °F to +104 °F
temperature	
Dimensions	38.92 mm × 22.8 mm × 52.26 mm/
$(W \times H \times D)$	1.5 in. \times 0.9 in. \times 2.1 in.
Weight	Approx. 79 g/2.8 oz.

AC-5VJ AC power adapter	
Manufacturer	Dongguan Yingiu Power Co.,Ltd.
Address	No.6 Yongxing Road, Shayao Village, Shijie Town,
	523292 Dongguan City, Guangdong Province, PEOPLE'S REPUBLIC OF CHINA
Model name	AC-5VJ
Rated input	100 V – 240 V AC, 50/60 Hz
Input capacity	Max. 50 VA
Rated output	DC5.0V 3.0A 15.0W
Average active efficiency	84.8 %
Efficiency at load 10%	84.2 %
No-load power consumption	0.02 W
Operating temperature	0 °C to +40 °C/+32 °F to +104 °F
Weight	Approx. 45 g \pm 2 g/1.6 oz. \pm 0.1 oz.

① Specifications and performance are subject to change without notice. Fujifilm will not be held liable for any errors this manual may contain. The appearance of the product may differ from that described in this manual.

MEMO

MEMO

MEMO

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN https://fujifilm-x.com













