

FUJIFILM

DIGITAL CAMERA <-T100

Owner's Manual



Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the camera. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:

http://fujifilm-dsc.com/en/manual/



The site can be accessed not only from your computer but also from smartphones and tablets.





For information on firmware updates, visit: http://www.fujifilm.com/support/digital_cameras/software/

Chapter Index

Menu List	iv
1 Before You Begin	1
2 First Steps	23
3 Basic Photography and Playback	39
4 Movie Recording and Playback	45
5 Taking Photographs	51
6 The Shooting Menus	101
7 Playback and the Playback Menu	127
8 The Setup Menus	145
9 Shortcuts	163
10 Peripherals and Optional Accessories	171
11 Connections	177
12 Technical Notes	189

iii



Camera menu options are listed below.

Shooting Menus

Adjust settings when shooting photos or movies.

See page 101 for details.

SHOO	TING MENU	
	SCENE POSITION	102
	ADVANCED FILTER	102
	■ AF/MF SETTING	102
01	TELEASE TYPE	105
	ISO ISO	106
	● IMAGE SIZE	107
	Ⅲ IMAGE QUALITY	108
	DRng DYNAMIC RANGE	109
	FILM SIMULATION	110
	FILM SIMULATION BKT	111
	SELF-TIMER	111
a 2	M INTERVAL TIMER SHOOTING	112
	TIME-LAPSE MOVIE MODE	113
	WB WHITE BALANCE	114
	Color COLOR	114
	SHARPNESS	114
	₩ HIGHLIGHT TONE	114
	■ SHADOW TONE	115
a 3	NR NOISE REDUCTION	115
	LONG EXPOSURE NR	115
	ae BKT Setting	116
	■ TOUCH SCREEN MODE	117

5H00	TING MENU	
	TOUCH ZOOM	117
	MOUNT ADAPTOR SETTING	117
	SHOOT WITHOUT LENS	119
a 4	MF ASSIST	119
	ID PHOTOMETRY	119
	INTERLOCK SPOT AE & FOCUS AREA	120
	FLASH SET-UP	120
	№ MOVIE SET-UP	121
	IS MODE	124
a 5	■ DIGITAL IMAGE STABILIZER	124
09	WIRELESS COMMUNICATION	125
	SHUTTER TYPE	125
	ELECTRONIC ZOOM SETTING	126

Playback Menus

Adjust playback settings.



See page 133 for details.

PLAY	BACK MENU	
	■ IMAGE TRANSFER ORDER	133
	WIRELESS COMMUNICATION	134
	RAW RAW CONVERSION	134
≥ 1	m ERASE	136
	CROP	138
	RESIZE	138
	o PROTECT	139

PLAY	BACK MENU	
	☑ IMAGE ROTATE	139
		140
	■ SLIDE SHOW	140
≥ 2	PHOTOBOOK ASSIST	141
	PC AUTO SAVE	142
	PRINT ORDER (DPOF)	143
	instax PRINTER PRINT	144
≥ 3	DISP ASPECT	144

Setup Menus

Adjust basic camera settings.



See page 145 for details.

SET-U	P	
	DATE/TIME	146
	TIME DIFFERENCE	146
	■ 言語/LANG.	146
£ 1	RESET	147
	SOUND & FLASH	147
	▶ SOUND SET-UP	148
	SCREEN SET-UP	149

SET-U	P	
	BUTTON SETTING	153
	◯ I FOCUS RING	153
	■ TOUCH SCREEN SETTING	154
£ 2	POWER MANAGEMENT	155
	SENSOR CLEANING	155
	SAVE DATA SET-UP	156
	COLOR SPACE	157
£ 3	CONNECTION SETTING	158
<i>γ</i> 3	■ FORMAT	161

Table of Contents Introduction......ji For the Latest Information.....ii Menu List.....iv Shooting Menus.....iv Playback Menusv Setup Menus.....v Supplied Accessoriesxiv About This Manual.....xv Symbols and Conventions.....xv Terminology.....xv **Before You Begin** Parts of the Camera..... The Mode Dial..... The Selector..... The Serial Number Plate..... The Command Dials The Indicator Lamp8 The LCD Monitor......9 Focusing the Viewfinder......9 Camera Displays10 Electronic Viewfinder/LCD Monitor......10 Choosing a Display Mode12 Adjusting Display Brightness......13 The Viewfinder Display......13 The DISP/BACK Button14 Customizing the Standard Display15 Using the Menus17 Touch Screen Mode......18 Shooting Touch Controls18 Playback Touch Controls22 First Steps 23

Attaching the Shoulder Strap.....24

Attaching a Lens	25
Inserting the Battery and a Memory Card	26
Compatible Memory Cards	
Charging the Battery	30
Turning the Camera On and Off	33
Checking the Battery Level	34
Basic Setup	35
Choosing a Different Language	37
Changing the Time and Date	37
Basic Photography and Playback	39
Taking Photographs	40
Viewing Pictures	
Deleting Pictures	
4 Movie Recording and Playback	45
Recording Movies	46
Adjusting Movie Settings	
Viewing Movies	
5 Taking Photographs	51
Choosing a Shooting Mode	52
st + ADVANCED SR AUTO	
Program AE (P)	
Shutter-Priority AE (S)	
Aperture-Priority AE (A)	56
Manual Exposure (M)	57
PANORAMA	
SP SCENE POSITION / \$ / A / * / C	63
Adv. ADVANCED FILTER	
Autofocus	68
Focus Mode	69
Autofocus Options (AF Mode)	
Focus-Point Selection	73
Manual Focus	77
Checking Focus	78
Exposure Compensation	79

Focus/Exposure Lock	80
The AF-L and AE-L Buttons	80
White Balance	81
WHITE BALANCE	
Custom White Balance	83
K: Color Temperature	84
Using the Self Timer	85
2 SEC/10 SEC	
FACE AUTO SHUTTER	86
SMILE	
BUDDY	87
GROUP	88
Bracketing	89
🔁 AE BKT	
ISO BKT	90
FILM SIMULATION BKT	90
WBJ WHITE BALANCE BKT	90
DYNAMIC RANGE BKT	
HDR	91
Continuous Shooting (Burst Mode)	92
💁 CONTINUOUS	93
4K 4K	94
Using the Flash	98
Self-Portraits (Selfies)	100
The Shooting Menus	101
SHOOTING MENU (fai / fai / fai / fai / fai / fai)	
SCENE POSITION	
ADVANCED FILTER	102
AF/MF SETTING	102
FOCUS AREA	102
FOCUS MODE	102
AF MODE	
RELEASE/FOCUS PRIORITY	103
AF+MF	
FACE/EYE DETECTION SETTING	104
PRE-AF	105

	AF ILLUMINATOR	1	05
4K	RELEASE TYPE	1	05
ISO	ISO	1	06
(#	IMAGE SIZE	10	07
±	IMAGE QUALITY	1	30
D-Rng	DYNAMIC RANGE	10	09
	FILM SIMULATION	1	10
ir	FILM SIMULATION BKT	1	11
৩	SELF-TIMER	1	11
01	INTERVAL TIMER SHOOTING	1	12
** ©	TIME-LAPSE MOVIE MODE	1	13
WB	WHITE BALANCE	1	14
Color	COLOR	1	14
Sharp	SHARPNESS	1	14
14 1011:	HIGHLIGHT TONE	1	14
S	SHADOW TONE	1	15
NR	NOISE REDUCTION	1	15
	LONG EXPOSURE NR		
18**	AE BKT SETTING	1	16
	FRAMES/STEP SETTING		
	1 FRAME/CONTINUOUS		
	SEQUENCE SETTING		
	TOUCH SCREEN MODE		
	TOUCH ZOOM		
	MOUNT ADAPTOR SETTING		
	SHOOT WITHOUT LENS		
	MF ASSIST		
	PHOTOMETRY		
	INTERLOCK SPOT AE & FOCUS AREA		
4	FLASH SET-UP		
	FLASH MODE		
	FLASH COMPENSATION		
	RED EYE REMOVAL		
"	MOVIE SET-UP		
	MOVIE MODE		
	HD HIGH SPEED VIDEO	Ι.	2

MOVIE ISO	122
FOCUS MODE	122
AF MODE	
HDMI OUTPUT INFO DISPLAY	
4K MOVIE OUTPUT	
HDMI REC CONTROL	
MIC LEVEL ADJUSTMENT	
MIC/REMOTE RELEASE	
IS MODE	
☑ DIGITAL IMAGE STABILIZER ☐ DIGITAL IMAGE ST	
	125
SHUTTER TYPE	
ELECTRONIC ZOOM SETTING	126
District of the District of Manage	427
7 Playback and the Playback Menu	127
The Playback Display	
The DISP/BACK Button	
Viewing Pictures	
Playback Zoom	
Multi-Frame Playback	132
The Playback Menu (1 / 12 / 13)	
IMAGE TRANSFER ORDER	
WIRELESS COMMUNICATION	
RAW RAW CONVERSION	
iii ERASE	
CROP	
RESIZE	
PROTECT	
2 IMAGE ROTATE	
▼ RED EYE REMOVAL	
SLIDE SHOW	
PHOTOBOOK ASSIST	
PC AUTO SAVE	
PRINT ORDER (DPOF)	
instax PRINTER PRINT	
■ DISP ASPECT	144

The Setup Menus	145
The Setup Menu (1/2 / 2)	146
OATE/TIME	146
TIME DIFFERENCE	146
■ 言語/LANG	
RESET	
\$\$ SOUND & FLASH	
▶ SOUND SET-UP	148
OPERATION VOL.	148
SHUTTER VOLUME	148
SHUTTER SOUND	148
PLAYBACK VOLUME	
SCREEN SET-UP	
IMAGE DISP	
EVF AUTOROTATE DISPLAYS	
PREVIEW EXP. IN MANUAL MODE	
EVF BRIGHTNESS	
EVF COLOR	
LCD BRIGHTNESS	
LCD COLOR	
PREVIEW PIC. EFFECT	
FRAMING GUIDELINE	
AUTOROTATE PB	
FOCUS CHECK	
FOCUS SCALE UNITS	
DISP. CUSTOM SETTING	
BUTTON SETTINGFUNCTION (Fn) SETTING	
EDIT/SAVE QUICK MENU	
OI FOCUS RING	
TOUCH SCREEN SETTING	
TOUCH SCREEN ON/OFF	
EVF TOUCH SCREEN AREA SETTINGS	
25 POWER MANAGEMENT	
AUTO POWER OFF	
HIGH PERFORMANCE	
THOLLI CITIVALING	1))

SENSOR CLEANING	155
◆■ SAVE DATA SET-UP	156
FRAME NO	156
SAVE ORG IMAGE	156
EDIT FILE NAME	157
DATE STAMP	157
COLOR SPACE	157
○ CONNECTION SETTING	158
Bluetooth SETTINGS	
PC AUTO SAVE SETTINGS	
instax PRINTER CONNECTION SETTING	
GENERAL SETTINGS	160
INFORMATION	
RESET WIRELESS SETTING	160
FORMAT	161
9 Shortcuts	163
Shortcut Options	164
The Q (Quick Menu) Button	
The Quick Menu Display	
Viewing and Changing Settings	
Editing the Quick Menu	
The Fn (Function) Button	
Assigning a Role to the Function Button	
Assigning a Role to the Function Dial	
1 Peripherals and Optional Accessories	171
10 Peripherals and Optional Accessories Lenses	
Lens Parts	
Power Zoom	
Removing Lens Caps	
Lenses with Lens Hoods	
Lenses with Aperture Rings	
Lenses with O.I.S. Switches	
Manual Focus Lenses	
Lens Care	

11 Connections	177
HDMI Output	178
Connecting to HDMI Devices	178
Shooting	179
Playback	179
Wireless Transfer	
Smart Phones and Tablets: FUJIFILM Camera Remote	
Smart Phones and Tablets: Bluetooth® Pairing	
Smartphones and Tablets: Wi-Fi	
Computers: FUJIFILM PC AutoSave	
Computers: Wireless Connections	
Connecting to Computers via USB	
Windows (MyFinePix Studio)	
Mac OS X/macOS	
RAW FILE CONVERTER EX 2.0	
Connecting the Camera	
instax SHARE Printers	
Establishing a Connection	
Printing Pictures	187
12 Technical Notes	189
Accessories from Fujifilm	190
Software from Fujifilm	
FUJIFILM Camera Remote	
FUJIFILM PC AutoSave	194
MyFinePix Studio	194
RÁW FILE CONVERTER EX 2.0	
For Your Safety	195
Product Care	204
Cleaning the Image Sensor	205
Firmware Updates	
Checking the Firmware Version	
Troubleshooting	
Warning Messages and Displays	
Memory Card Capacity	
Specifications	217

Supplied Accessories

The following are included with the camera:


- NP-W126S rechargeable battery
- AC-5VG AC power adapter
- Plug adapter (Shape of adapter varies with region of sale.)
- Detachable Grip
- Fixing screw (×2, including one already attached to detachable grip)
- Screw cap (×2, including one already attached to camera)
- Body cap
- USB cable
- Shoulder strap
- Owner's Manual (this manual)



If you purchased a lens kit, check that a lens is included.

The Detachable Grip-

Remove the screw cap attached to the supplied detachable grip (1) and attach the grip as shown ((2)).

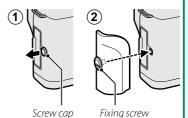


- Attach the grip if you find the camera hard to hold.
- Store the screw caps and fixing screws in a safe place when not in use.
- Forcibly overtightening the fixing screws could damage the product.

About This Manual

This manual contains instructions for your FUJIFILM X-T100 digital camera. Be sure you have read and understood its contents before proceeding.

Symbols and Conventions

The following symbols are used in this manual:

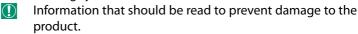

Additional information that may be helpful when using the product.

Pages on which related information may be found.

Menus and other text in the displays are shown in **bold**. Illustrations are for explanatory purposes only; drawings may be simplified, while photographs are not necessarily taken with the model of camera described in this manual.


Terminology

The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as "memory cards". The electronic viewfinder may be referred to as the "EVF" and the LCD monitor as the "LCD".

MEMO




Parts of the Camera

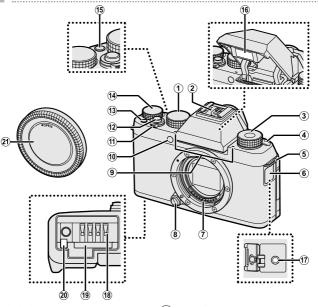

(1) Mode dial	4, 40, 52	(12) Sh
2 Hot shoe	192	13 •
3 Fn (function) dial	7	14) Ma
(4) 4 (flash pop-up) lever	98	(15) Fn
5 Strap eyelet	24	16) Flo
6 Connector cover	46, 55, 59	17) Mi
7 Lens signal contacts	25, 172	(0
8 Lens release button	25	18) Ba
Microphone	46, 123	19 Me
10 AF-assist illuminator		
Self-timer lamp	85, 111	21) Bo
11) ON/OFF switch	33	

(12) Shutter button	41
(movie recording) button	46
(14) Main command dial	6
15 Fn (function) button	168
16 Flash	98, 120
(17) Microphone/remote release cor	nnector
(ø2.5 mm)	46, 55, 59
18 Battery chamber	26
(19) Memory card slot	26
20 Battery latch	28
21 Body cap	25
=	

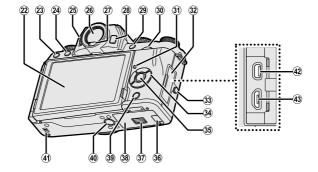

(22) LCD monitor
Touch screen18, 117, 154
23 m Delete button
24 ► (playback) button42
25 Diopter adjustment control9
26 Electronic viewfinder (EVF)10, 12, 13
27 Eye sensor
28 VIEW MODE <i>button</i> 12
29 Q (quick menu) button165
RAW conversion button (playback mode)
134
30 Sub-command dial
31) Indicator lamp8
(32) Connector cover55, 59, 178, 184

_
33 Screw capxiv
34 Selector5
35 MENU/OK button5, 17
♠ (control lock) button (press and hold)
5, 11
36 Cable channel cover for DC coupler
37) Battery-chamber cover latch26
38 Battery-chamber cover26
(39) DISP (display)/BACK button14, 129
(40) Tripod mount
49, 148
42 HDMI Micro connector (Type D)178
(43) Micro USB (Micro-B) USB 2.0 connector
55, 59, 184

The Mode Dial

To select a shooting mode, rotate the dial until the icon for the desired mode aligns with the index.




Mode	Description	
1 Sta+ (ADVANCED SR AUTO)	AUTO) The camera automatically optimizes settings	
	to the scene.	52
2 P (PROGRAM AE)	Aperture and shutter speed can be adjusted	53
	using program shift.))
3 S (SHUTTER PRIORITY AE)	Select for full control over camera settings,	54
A (APERTURE PRIORITY AE)	including aperture (M and A) and/or shutter	56
M (MANUAL)	speed (M and S).	57
4 🖂 (PANORAMA)	Follow an on-screen guide to create a pan-	60
	orama.	00
5 SP (SCENE POSITION)	Choose a scene suited to the subject or shoot-	63
9/ ▲/%/୯	ing conditions and let the camera do the rest.	03
6 Adv. (ADVANCED FILTER)	Take photos with filter effects.	66

The Selector

Use the ▲▼◀▶ buttons to highlight items or access camera functions.

 Move cursor up (▲)
AF (autofocus) button73
(2) Move cursor right (►)
WB (white balance) button81
3 Move cursor down (▼)
(burst shooting) button89, 92
Move cursor left (◄)
♂ (self-timer) button85
(5) MENU/OK button

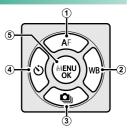


Control Lock-

To prevent accidental operation of the selector and **Q** button during shooting, press **MENU/OK** until **♀** is displayed. The controls can be unlocked by pressing **MENU/OK** until **♀** is no longer displayed.

The Serial Number Plate

Do not remove the serial number plate, which provides the FCC ID, KC mark, serial number, and other important information.

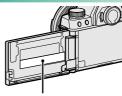

Serial number plate

The Command Dials

The main and sub-command dials are used for the operations listed below.

Main Command Dial




- Exposure compensation
- Choose a shutter speed
- Adjust settings in the quick menu
- View other pictures during playback

Sub-Command Dial



Program shift

- Choose a shutter speed
- Adjust aperture ¹

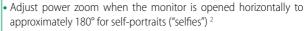

Rotate

- Adjust settings in the quick menu
- Zoom in or out in full frame playback
- Zoom in or out in multi-frame playback



Zoom in on selected focus point


In manual focus mode, press and hold to choose MF ASSIST options

Press

- Release the shutter when the monitor is opened horizontally to approximately 180° for self-portraits ("selfies")
- Zoom in on the active focus point during playback
- 1 Use aperture ring to adjust aperture.
- 2 Power zoom lens attached and **ON** selected for **ELECTRONIC ZOOM SETTING**.

Fn (function) dial

Rotate the function dial to quickly adjust settings for the assigned function during shooting.

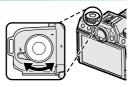

At shipment, the dial is assigned the **DEFAULT** role. At this setting, the function performed by the dial varies with the position of the mode dial.

Mode	Description
Adv. (ADVANCED FILTER)	Filter selection
SP (SCENE POSITION)	Scene selection
Sta+ (ADVANCED SR AUTO) /▲/※/C+	Self-timer
9	Portrait enhancer level selection
P (PROGRAM AE)	
S (SHUTTER PRIORITY AE)	
A (APERTURE PRIORITY AE)	Film simulation
M (MANUAL)	
(PANORAMA)	



The role performed by the function dial can be chosen using **BUTTON SETTING** > **FUNCTION (Fn) SETTING** (**170**).

The Indicator Lamp

The indicator lamp shows camera status as follows:




Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Focus or slow shutter speed warning. Pictures can be taken.
Blinks green and orange	 Camera on: Recording pictures. Additional pictures can be taken. Camera off: Uploading pictures to a smartphone or tablet.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.



Warnings may also appear in the display.

The LCD Monitor

The LCD monitor can be reversed for self-portraits (100) or tilted for ease of viewing, but be careful that your fingers and other objects do not get caught between the monitor and the camera body and avoid touching the wires behind the display. Touching the wires could cause camera malfunction.

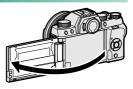




The LCD monitor also functions as a touch screen (18).

Focusing the Viewfinder

If the indicators displayed in the viewfinder are blurred, put your eye to the viewfinder and rotate the diopter adjustment control until the display is in sharp focus.

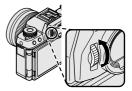


Camera Displays

This section lists the indicators that may be displayed during shooting.

For illustrative purposes, displays are shown with all indicators lit.

Electronic Viewfinder/LCD Monitor

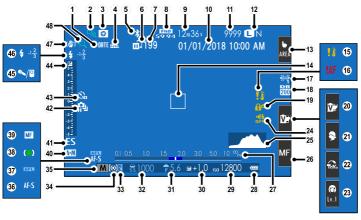

lcons that are displayed in both the electronic viewfinder (EVF) and LCD monitor have the same meaning in both displays.

Item (13) in the electronic viewfinder shows the current touch screen mode only. Other touch controls are not displayed.

	D -tt 157	ρο Γ d. ?	20.00
\sim	Date stamp	$\overline{\mathcal{L}}$	
	Focus check78, 152		
(3)	Depth-of-field preview56		
4	Location data download status160	29 Sensitivity	106
(5)	Bluetooth ON/OFF158	30 Exposure compensation	79
(6)	Image transfer status133	(31) Aperture	53, 56, 57
	Number of frames selected for upload	32) Shutter speed	53, 54, 57
_	133	(33) AE lock	
(8)	Movie mode46, 121	(34) Metering	
(9)	Time remaining46	(35) Shooting mode	
(10)	Date and time35, 146	(36) Focus mode	69
<u>(11)</u>	Number of available frames 1216	(37) AF lock	80
12	Image quality and size107, 108	38 Focus indicator	70
(13)	Touch screen mode ² 18	(39) Manual focus indicator	77
(14)	Focus frame73, 80	(40) AF+MF indicator	10
(15)	Temperature warning215	(41) Shutter type	125
16)	Focus warning41	(42) Continuous mode	92
(17)	White balance81, 114	(43) Self-timer indicator	85, 11
(18)	Dynamic range109	(44) Exposure indicator	57, 79
(19)	Control lock5	(45) Microphone/remote release	
(20)	Film simulation ²	,	46, 55, 59, 12.
(21)	Scene position ² 20, 63	46) Flash mode	98
	Advanced filter ² 20, 66	Flash compensation	120
23	Portrait enhancement level ² 20	47) IS mode	124
24)	Sound and flash indicator147	48 Touch zoom	
25	Lictogram 16	-	

- 1 Shows "9999" if there is space for over 9999 frames.
- 2 Camera functions can also be accessed via touch controls.


Control Lock-

Pressing a locked control displays a 🧌 icon.



Choosing a Display Mode


Press the **VIEW MODE** button to cycle through the following display modes.

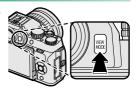

Option	Description	
	Putting your eye to the viewfinder turns the viewfinder on and	
SENSOR EYE SENSOR	the LCD monitor off; taking your eye away turns the viewfinder	
	off and LCD monitor on.	
EVF ONLY	Viewfinder on, LCD monitor off.	
LCD ONLY	LCD monitor on, viewfinder off.	
EVF ONLY + STRISTOR	Putting your eye to the viewfinder turns the viewfinder on; tak-	
	ing it away turns the viewfinder off. The LCD monitor remains off.	
LED IMAGE DISD	Putting your eye to the viewfinder during shooting turns the view-	
	finder on, but the LCD monitor is used for the display of images	
	once you remove your eye from the viewfinder after shooting.	

The Eye Sensor-

- The eye sensor may respond to objects other than your eye or to light shining directly on the sensor.
- The eye sensor is disabled when the display in the monitor is reversed (100).

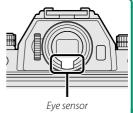

Adjusting Display Brightness

The brightness and hue of the viewfinder and LCD monitor can be adjusted using the items in the SCREEN SET-UP menu. Choose EVF BRIGHTNESS or EVF COLOR to adjust viewfinder brightness or hue, LCD BRIGHTNESS or LCD COLOR to do the same for the LCD monitor.

The Viewfinder Display

When ON is selected for SCREEN SET-UP > EVF AUTOROTATE **DISPLAYS**, the indicators in the viewfinder automatically rotate to match camera orientation.



The display in the LCD monitor is unaffected.

The DISP/BACK Button

Press DISP/BACK to cycle through display modes as follows.




Indicators for the EVF and LCD must be selected separately. To choose the EVF display, place your eye to the viewfinder while using the DISP/BACK button.



Viewfinder



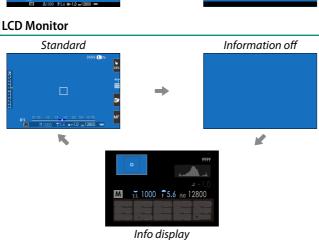

Customizing the Standard Display

To choose the items shown in the standard display:

Display standard indicators.
 Use the DISP/BACK button to display standard indicators.

2 Select DISP. CUSTOM SETTING. Select SCREEN SET-UP > DISP. CUSTOM SETTING in the setup menu.

3 Choose items.

Highlight items and press MENU/OK to select or deselect.

ltem	Default	ltem	Default
FRAMING GUIDELINE		SHUTTER TYPE	V
ELECTRONIC LEVEL		FLASH	V
FOCUS FRAME	✓	CONTINUOUS MODE	✓
AF DISTANCE INDICATOR		DUAL IS MODE	✓
MF DISTANCE INDICATOR	✓	WHITE BALANCE	✓
HISTOGRAM		FILM SIMULATION	✓
SHOOTING MODE	✓	DYNAMIC RANGE	✓
APERTURE/S-SPEED/ISO	✓	FRAMES REMAINING	V
INFORMATION BACKGROUND	✓	IMAGE SIZE/QUALITY	✓
Expo. Comp. (Digit)	✓	MOVIE MODE & REC. TIME	✓
Expo. Comp. (Scale)	✓	AUTO IMAGE TRANSFER	V
FOCUS MODE	✓	BATTERY LEVEL	V
PHOTOMETRY	V	_	•

4 Save changes.

Press DISP/BACK to save changes.

5 Exit the menus.

Press **DISP/BACK** as needed to exit the menus and return to the shooting display.


Virtual Horizon-

Selecting **ELECTRONIC LEVEL** displays a virtual horizon. The camera is level when the two lines overlap. Note that the virtual horizon may not be displayed if the camera lens is pointed up or down.



Histograms-

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.

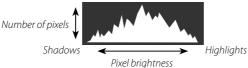

- **Optimal exposure**: Pixels are distributed in an even curve throughout the tone range.
- **Overexposed**: Pixels are clustered on the right side of the graph.



• **Underexposed**: Pixels are clustered on the left side of the graph.





Using the Menus

To display the menus, press MENU/OK.



To navigate the menus:

1 Press MENU/OK to display the menus.



? Press the selector left to highlight the tab for the current menu.



Таb

- 3 Press the selector up or down to highlight the tab (1, 2, lacktriangledown 3, lacktriangledown 4, lacktriangledown 5, lacktriangledown 1, lacktriangledown 2, lacktriangledown 2desired item.
- 4 Press the selector right to place the cursor in the menu.

Touch Screen Mode

The camera's LCD monitor can be used as a touch screen.

Shooting Touch Controls

To enable touch controls, select ON for TTOUCH SCREEN SETTING > TOUCH SCREEN ON/OFF.

EVF

The LCD monitor can be used to select the focus area while pictures are being framed in the electronic viewfinder (EVF). Use TTOUCH SCREEN SETTING > EVF TOUCH SCREEN AREA **SETTINGS** to choose the area of the monitor employed for touch controls.

LCD Monitor

Touch controls can be used for such operations as choosing the focus area and taking photographs. The operation performed can be selected by tapping the touch screen mode indicator in the display to cycle through the following options.





The touch screen mode indicator is not displayed and touch controls cannot be used when **OFF** is selected for **TT TOUCH SCREEN SETTING** > **TOUCH SCREEN ON/OFF** in the setup menu.

Touch control settings can be adjusted using the **TOUCH SCREEN MODE** option in the shooting menu.

Still Photography

Mode	Description
TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.
AF AF	Tap to select a focus point and lock focus. The shutter can be released by pressing the shutter button all the way down.
AREA AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.
OFF OFF	Touch focus and shooting disabled.

Movie Recording

Mode	Description			
TOUCH SHOOTIN	Tap your subject in the display to focus. In focus mode CONTINUOUS AF (AF-C), the camera will continually adjust focus in response to changes in the distance to the subject; to refo-			
AF AF	cus in focus mode SINGLE AF (AF-S) or to focus on a new subject in focus mode CONTINUOUS AF , tap the subject in the monitor.			
AREA AREA	Tap to select a focus point. If SINGLE AF (AF-S) is selected for focus mode, the camera will focus on the subject in the selected focus point when the shutter button is pressed halfway. In focus mode CONTINUOUS AF (AF-C), the camera will continually adjust focus in response to changes in the distance to the subject in the selected focus point.			
OFF OFF	Touch focus disabled.			



We recommend that you select AREA for ■ MOVIE SET-UP > AF MODE in the shooting menu before recording movies using touch controls (in some movie modes, AREA will be selected automatically).

Adjusting Settings

The touch screen can be used to adjust settings. The settings available vary with the shooting mode.



	Mode	Description
V	FILM SIMULATION	Choose a film simulation type. Available in 🚮 +, P, S, A , and M modes.
•	SCENE POSITION	Choose a scene. Available in SP mode.
ToY.	ADVANCED FILTER	Choose an advanced filter. Available in Adv. mode.
(6) Lv.1	PORTRAIT ENHANCER	Choose the portrait enhancement level. Available in PORTRAIT ENHANCER (@) mode.

Choosing a Focus Mode

The touch screen can be used to choose the focus mode (69).



Touch Function

Functions can be assigned to the following flick gestures in much the same way as function buttons (168):

Flick up: T-Fn1
Flick left: T-Fn2
Flick right: T-Fn3
Flick down: T-Fn4



Touch Zoom

Touch controls can be used for digital zoom, regardless of the mode selected for **TOUCH SCREEN MODE** in the shooting menu.

- 1 Select **ON** for **TOUCH ZOOM** in the shooting menu.
- 2 Use pinch-out and pinch-in gestures (22) to zoom in and out using digital zoom.





Regardless of where you place your fingers, the camera will zoom in on and out from the center of the frame.

The camera will focus on the area selected for TOUCH SCREEN MODE, you can select the focus area by tapping the display.

3 Take pictures.

Playback Touch Controls

When ON is selected for TOUCH SCREEN SETTING > TOUCH SCREEN ON/OFF in the setup menu, touch controls can be used for the following playback operations:

• Swipe: Swipe a finger across the display to view other images.



 Pinch-out: Place two fingers on the display and spread them apart to zoom in.



• Pinch-in: Place two fingers on the display and slide them together to zoom out.



Pictures can be zoomed out until the entire image is visible but no further.



• Double-tap: Tap the display twice to zoom in on the focus point.



• Drag: View other areas of the image during playback zoom.








Attaching the Shoulder Strap

Attach the strap to the two strap eyelets as shown below.

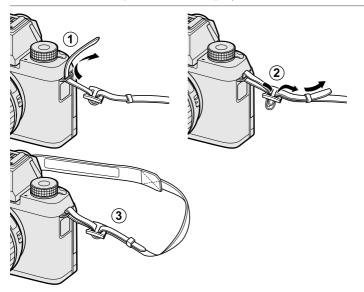




Attach the strap as shown.

To avoid dropping the camera, be sure the strap is correctly secured.

Attaching a Lens

The camera can be used with lenses for the FUJIFILM X-mount.

Remove the body cap from the camera and the rear cap from the lens. Place the lens on mount, keeping the marks on the lens and camera aligned (1), and then rotate the lens until it clicks into place ((2)).

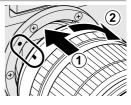


When attaching lenses, ensure that dust or other foreign matter does not enter the camera and be careful not to touch the camera's internal parts. Do not press the lens release button while attaching the lens and be sure the latch has securely clicked into place.

Removing Lenses-

To remove the lens, turn the camera off, then press the lens release button (1) and rotate the lens as shown ((2)).



To prevent dust accumulating on the lens or inside the camera, replace the lens caps and camera body cap when the lens is not attached

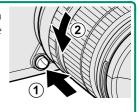

Lenses and Other Optional Accessories

The camera can be used with lenses and accessories for the FUJIFILM X-mount.



Before attaching or removing (exchanging) lenses, attach the lens. caps and check that the lenses are free of dust and other foreign matter. Do not change lenses in direct sunlight or under another bright light source, as light focused into the interior of the camera could cause it to malfunction.

Inserting the Battery and a Memory Card


Insert the battery and memory card as described below.

1 Open the battery-chamber cover. Slide the battery-chamber latch as shown and open the battery-cham-

ber cover.

 Do not remove the battery when the camera is on. Failure to observe this precaution could damage image files or memory cards.


Do not use excessive force when handling the battery-chamber cover.

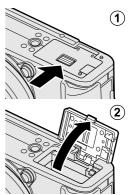

) Insert the battery.


Using the battery to keep the battery latch pressed to one side, insert the battery contacts first in the direction shown by the arrow. Confirm that the battery is securely latched.

Insert the battery in the orientation shown. Do not use force or attempt to insert the battery upside down or backwards. The battery will slide in easily in the correct orientation.

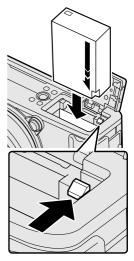


3 Insert the memory card.

Holding the card in the orientation shown, slide it in until it clicks into place at the back of the slot.

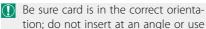


tion; do not insert at an angle or use force.

Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device.

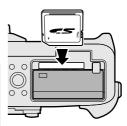

4 Close the battery-chamber cover. Close and latch the cover.


If the cover does not close, check that the battery is in the correct orientation. Do not attempt to force the cover shut.

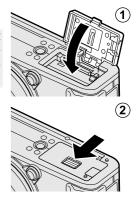

Removing the Battery and Memory Card-

Before removing the battery or memory card, turn the camera off and open the battery-chamber cover.

To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.

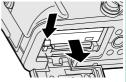

① The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

To remove the memory card, press it in and release it slowly. The card can then be removed by hand. When a memory card is removed, the card could be ejected too quickly. Use your finger to hold it and gently release the card.



Press the center of the card when ejecting it.


Compatible Memory Cards

Fujifilm and SanDisk SD, SDHC, and SDXC memory cards have been approved for use in the camera; UHS-I cards are supported, while cards with a UHS speed class of 3 or better are recommended for 4K burst, multi-focus, and movie modes. A complete list of approved memory cards is available at http://www.fujifilm.com/ support/digital_cameras/compatibility/. Operation is not guaranteed with other cards. The camera cannot be used with xD-Picture Cards or MultiMediaCard (MMC) devices.



Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.

Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.

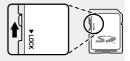

Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.

miniSD or microSD adapters that are larger or smaller than memory cards may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.

Do not affix labels or other objects to memory cards. Peeling labels can cause camera malfunction

Movie recording may be interrupted with some types of memory card.


When you first take a picture after formatting a memory card in the camera, the camera will create a folder in which the new shot and subsequent. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals. Renaming the files on the camera can cause problems during playback.

Charging the Battery

The battery is not charged at shipment. Turn the camera off and charge the battery before use. The camera charges the battery internally.


- An NP-W126S rechargeable battery is supplied with the camera. Charging takes about 210 minutes.
 - 1 Attach the plug adapter to the AC power adapter. Attach the plug adapter as shown, making sure that it is fully inserted and clicks into place on the AC power adapter terminals.
 - The supplied plug adapter is for use exclusively with the AC-5VG AC power adapter. Do not use it with other devices.

The shape of the plug adapter varies with the country of sale.

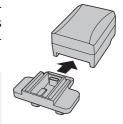

2 Charge the battery.

Connect the camera to the supplied AC power adapter using the supplied USB cable. Then plug the AC power adapter into an indoor power outlet.

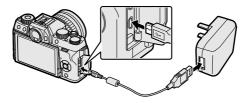

① Connect the cable to the camera's Micro USB (Micro-B) connector.

Be sure the connectors are in the correct orientation and then insert them fully.

Charge Status

The indicator lamp shows battery charge status as follows:

Indicator lamp	Battery status	
On	Battery charging.	
Off	Charging complete.	
Blinks	Battery fault.	



The battery will not charge while the camera is on.

Use the AC power adapter with the plug adapter for your country or region.

Do not affix labels or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera

Do not short the battery terminals. The battery could overheat.

Read the cautions in "The Battery and Power Supply".

Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.

Do not remove the labels from the battery or attempt to split or peel the outer casing.

The battery gradually loses its charge when not in use. Charge the battery one or two days before use. If the battery fails to hold a charge, it has reached the end of its charging life and must be replaced.


Unplug the AC power adapter from the power outlet when it is not in use

Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.

Charging times may increase at very low or very high temperatures.

Charging via Computer-

The battery can be charged by connecting the camera to a computer. Connect the supplied USB cable as shown, making sure the connectors are fully inserted.

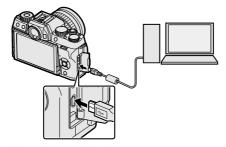


- The battery will not charge while the camera is on.
- Connect the cable to the camera's Micro USB (Micro-B) connector.
- Connect the camera directly to the computer; do not use a USB hub or keyboard.
- Charging stops if the computer enters sleep mode; to resume charging, activate the computer and disconnect and reconnect the USB cable.
- Charging may not be supported depending on the model of computer, computer settings, and the computer's current state.



Turning the Camera On and Off

Use the **ON/OFF** switch to turn the camera on and off.

Rotate the switch to **ON** to turn the camera on, or to **OFF** to turn the camera off.

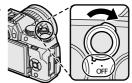

- Fingerprints and other marks on the lens or viewfinder can affect pictures or the view through the viewfinder. Keep the lens and viewfinder clean.
- Press the button to start playback. Press the shutter button halfway to return to shooting mode.

The camera will turn off automatically if no operations are performed for the length of time selected for **27 POWER MANAGEMENT** > **AUTO POWER OFF.** To reactivate the camera after it has turned off automatically, press the shutter button halfway or turn the **0N/0FF** switch to **0FF** and then back to **0N**.

Selecting **HIGH PERFORMANCE** for **POWER MANAGEMENT** reduces startup time.



Checking the Battery Level

After turning the camera on, check the battery level in the display.

Battery level is shown as follows:




Indicator	Description	
(white)	Battery partially discharged.	
(white)	Battery about two-thirds charged.	
(white)	Battery about one-third charged. Charge as soon as possible.	
(red)	Low battery. Charge battery.	
(blinks red)	Battery exhausted. Turn camera off and recharge battery.	


Basic Setup

When you turn the camera on for the first time, you can choose a language and set the camera clock. At default settings, you can also pair the camera with a smartphone or tablet so that you can later synchronize the clocks or download pictures. Follow the steps below when turning the camera on for the first time.


- If you intend to pair the camera with a smartphone or tablet, install and launch the latest version of the FUJIFILM Camera Remote App on the smart device before proceeding. For more information, visit: http://app.fujifilm-dsc.com/en/camera_remote/
 - 1 Turn the camera on.
 A language-selection dialog will be displayed.

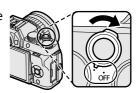

2 Choose a language. Highlight a language and press MENU/OK.

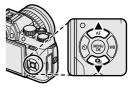

Press MENU/OK to pair the camera with a smartphone or tablet running the FUJIFILM Camera Remote app.

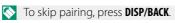



4 Check the time.

When pairing is complete, you will be prompted to set the camera clock to the time reported by the smartphone or tablet. Check that the time is correct.



5 Synchronize the camera settings with the settings configured on your smartphone or tablet.





6 Set the clock. Press MENU/OK to set the camera clock to the time reported by the smartphone or tablet and exit to shooting mode.



If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.

Skipping the Current Step-

Press DISP/BACK to skip the current step. A confirmation dialog will be displayed; select NO to avoid repeating any steps you skipped the next time the camera is turned on.

Choosing a Different Language

To change the language:

- Display language options.
 Display the setup menu and select 型言語/LANG..
- 2 Choose a language. Highlight the desired option and press MENU/OK.

Changing the Time and Date

To set the camera clock:

- 1 Display DATE/TIME options.
 Display the setup menu and select DATE/TIME.
- 2 Set the clock.
 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. Press MENU/OK to set the clock.

MEMO


Basic Photography and Playback

Taking Photographs


This section explains basic photography.

1 Select st mode.

Rotate the mode dial to \$\sigma\$ (ADVANCED SR AUTO). The following information will be displayed in the LCD monitor.

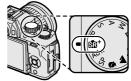

- **1 Scene label**: The camera automatically selects the appropriate scene.
- The [o] Icon: Shows that the camera is focusing on the subjects' eyes.

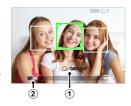

- In sat mode, the camera continuously adjusts focus and searches for eyes, increasing the drain on the battery; in addition, the sound of the camera focusing may be audible.
- 2 Ready the camera.

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.




To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens, flash, and AF-assist illuminator.



3 Frame the picture.

Lenses with Zoom Rings-

Use the zoom ring to frame the picture in the display. Rotate the ring left to zoom out, right to zoom in.

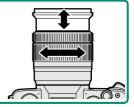


4 Focus.

Press the shutter button halfway to focus.



If the subject is poorly lit, the AF-assist illuminator may light.

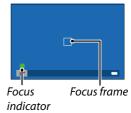

If the camera is able to focus, it will beep twice and focus area and focus indicator will glow green. Focus and exposure will lock while the shutter button is pressed halfway.

If the camera is unable to focus, the focus frame will turn red, !AF will be displayed, and the focus indicator will blink white.

5 Shoot.


Smoothly press the shutter button the rest of the way down to take the picture.



► Viewing Pictures

Pictures can be viewed in the LCD monitor.

To view pictures full frame, press **▶**.

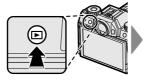



Additional pictures can be viewed by pressing the selector left or right or rotating the main command dial. Press the selector or rotate the dial right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.




Pictures taken using other cameras are marked with a ## ("gift image") icon to warn that they may not display correctly and that playback zoom may not be available.



Deleting Pictures

Use the fi button to delete pictures.

- Deleted pictures cannot be recovered. Copy important pictures to a computer or other storage device before proceeding.
 - 1 With a picture displayed full frame, press the fi button and select FRAME.

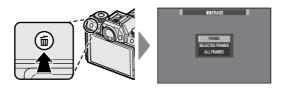

- **2** Press the selector left or right to scroll through pictures and press **MENU/OK** to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.
- Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete (1) 139).

Pictures can also be deleted by **ERASE** from playback menu (E 136).

MEMO


Movie Recording and Playback



Recording Movies

Record movies with sound.

1 Press ● to start recording.

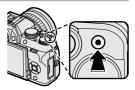


A recording indicator (**()**) and the time remaining are displayed while recording is in progress.



2 To end recording, press the ● button again. Recording ends automatically when the maximum length is reached or the memory card is full.

Using an External Microphone-

Sound can be recorded with external microphones that connect using jacks 2.5 mm in diameter; microphones that require plug-in power cannot be used. See the microphone manual for details.

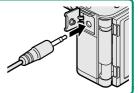

Use a memory card with a UHS speed class of 3 or better when recording movies.

Touch zoom is not available during movie recording.

The area recorded when **ON** is selected for **EIDIGITAL IMAGE STABILIZER** is smaller than that shown in the LCD monitor or electronic viewfinder (EVF).

Sound is recorded via the built-in microphone or an optional external microphone. Do not cover the microphone during recording. Note that the microphone may pick up lens noise and other sounds made by the camera during recording.

Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

The indicator lamp lights while recording is in progress. During recording, you can change exposure compensation by up to ±2 EV and adjust zoom using the zoom ring on the lens (if available).

Recording may be unavailable at some settings, while in other cases settings may not apply during recording.

Adjusting Movie Settings

- Adjust movie settings in the **MOVIE SET-UP** menu.
- The movie type, frame size, and frame rate can be selected using

 MOVIE SET-UP > MOVIE MODE.
- The AF-area mode for movie recording is selected using MOVIE SET-UP > AF MODE; choose from MULTI and AREA.
- Focus mode is selected using MOVIE SET-UP > FOCUS MODE; for continuous focus adjustment, select CONTINUOUS AF or choose SINGLE AF and enable Intelligent Face Detection. Intelligent Face Detection is not available in manual focus mode.

Depth of Field

Manual aperture adjustment is available in shooting modes $\bf A$ and $\bf M$; adjust aperture before recording begins. Choose low f-numbers to soften background details. The effect can be heightened by increasing the distance between your subject and the background.


| Viewing Movies

View movies on the camera.

In full-frame playback, movies are identified by a 🔁 icon. Press the selector down to start movie playback.



The following operations can be performed while a movie is displayed:

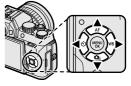

Selector	Full-frame playback	Playback in progress (▶)	Playback paused (■■)
A	_	End playback	
▼	Start playback	Pause playback	Start/resume playback
45	View other pictures	Adjust speed	Single frame rewind/
◆▶	view other pictures		advance

Progress is shown in the display during playback.



Do not cover the speaker during playback.

Sound is not played back if OFF is selected for SOUND & FLASH.





Press **MENU/OK** to pause playback and display volume controls. Press the selector up or down to adjust the volume; press MENU/OK again to resume playback. Volume can also be adjusted from the setup menu (**148**).

Playback Speed-

Press the selector left or right during playback to adjust playback speed. Speed is shown by the number of arrows (▶ or ◄).




Taking Photographs

Choosing a Shooting Mode

Choose a shooting mode according to the scene or type of subject.

₫ ADVANCED SR AUTO

When the mode dial is rotated to \$\mathbb{G}^+\$, the camera automatically optimizes settings to suit the scene.

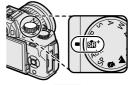

The scene is shown by a label in the display.

Scene label
AUTO
PORTRAIT
LANDSCAPE
NIGHT

Scene label MACRO NIGHT PORTRAIT **BACKLIT PORTRAIT**



Scene label



The mode selected may vary with shooting conditions. If the mode and subject do not match, select mode P or choose SP and select a scene manually.




Subjects detected by the camera are indicated by green frames; press the shutter button halfway to focus on the subject in the frame.

Program AE (P)

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.

Rotate the mode dial to P.

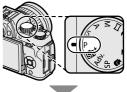


P will appear in the display.



Program Shift

Rotate the sub-command dial to choose the desired combination of shutter speed and aperture (program shift).

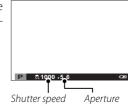


- Program shift is not available if:
 - The attached flash supports TTL auto
 - AUTO is selected for DYNAMIC RANGE
 - Movie recording is in progress
- To cancel program shift, turn the camera off.

Shutter-Priority AE (S)

Choose a shutter speed and let the camera adjust aperture for optimal exposure.


1 Rotate the mode dial to S.

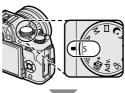

S will appear in the display.



2 Use the sub-command dial to choose a shutter speed.

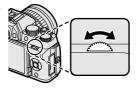

If the correct exposure cannot be achieved at the selected shutter speed, aperture will be displayed in red.

Time (T)

Shutter speeds of 1 s or slower are referred to as "long time-exposures". Use of a tripod is recommended to prevent the camera moving during the exposure.






A count-down timer will be displayed while the exposure is in progress

To reduce "noise" (mottling) in long time-exposures, select **ON** for LONG EXPOSURE NR. Note that this may increase the time needed to record images after shooting.

Using a Remote Release-

An optional RR-90 remote release can be used for long time-exposures. The RR-90 connects via the Micro USB (Micro-B) USB 2.0 connector.

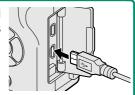

Alternatively, electronic releases from third-party suppliers can be connected via the remote release connector (ø2.5 mm 3-pole mini jack).






A confirmation dialog will be displayed when a third-party release is connected; press MENU/OK and select REMOTE for MOVIE SET-UP > MIC/REMOTE RELEASE



Aperture-Priority AE (A)

Choose an aperture and let the camera adjust shutter speed for optimal exposure.


1 Rotate the mode dial to A.

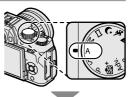

A will appear in the display.



2 Use the sub-command dial to choose an aperture.

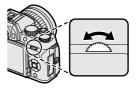

If the correct exposure cannot be achieved at the selected aperture, shutter speed will be displayed in red.

Previewing Depth of Field-


When **PREVIEW DEPTH OF FIELD** is assigned to a function button, pressing the button displays a sicon and stops aperture down to the selected setting, allowing depth of field to be previewed when the view through the lens appears in the display.




Manual Exposure (M)

Alter exposure from that selected by the camera.


1 Rotate the mode dial to M.

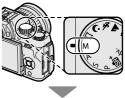


M will appear in the display.

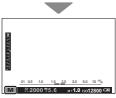

- 2 Rotate the main command dial to choose a shutter speed and the sub-command dial to choose the aperture.
 - The manual exposure display includes an exposure indicator that shows the amount the picture would be underor over-exposed at current settings.

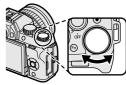

Shutter speed

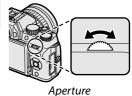


Exposure Preview-

To preview exposure in the LCD monitor, select **ON** for **SCREEN SET-UP** > **PREVIEW EXP. IN MANUAL MODE**. Select **OFF** when using the flash or on other occasions on which exposure may change when the picture is taken.



Bulb (B)

For bulb photography, rotate the main command dial to select a shutter speed of BULB. Use of a tripod is recommended to prevent the camera moving during the exposure.

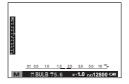




The shutter will remain open for up to 60 minutes, or for 1 second when the electronic shutter is used

A count-down timer will be displayed while the exposure is in progress


To reduce "noise" (mottling) in long time-exposures, select **ON** for **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

Using a Remote Release-

An optional RR-90 remote release can be used for long time-exposures. The RR-90 connects via the Micro USB (Micro-B) USB 2.0 connector.

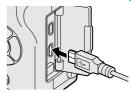

Alternatively, electronic releases from third-party suppliers can be connected via the remote release connector (ø2.5 mm 3-pole mini jack).

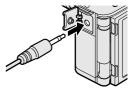




A confirmation dialog will be displayed when a third-party release is connected; press MENU/OK and select REMOTE for MOVIE SET-UP > MIC/REMOTE RELEASE.




PANORAMA

Follow an on-screen guide to create a panorama.

Rotate the mode dial to ☐
 (PANORAMA).

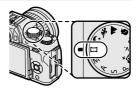

- 2 To select the size of the angle through which you will pan the camera while shooting, press the selector left. Highlight a size and press MENU/OK.
- 3 Press the selector right to view a choice of pan directions. Highlight a pan direction and press MENU/OK.
- 4 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.
- 5 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the camera is panned to the end of the guides and the panorama is complete.

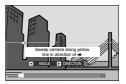

For Best Results-

For best results, use a lens with a focal length of 35 mm or less (50 mm or less in 35 mm format). Prop your elbows against your sides and move the camera slowly in a small circle at a steady speed, keeping the camera parallel or at right angles to the horizon and being careful only to pan in the direction shown by the guides. Use a tripod for best results. If the desired results are not achieved, try panning at a different speed.

Shooting ends if the shutter button is pressed all the way down during shooting. No panorama may be recorded if the shutter button is pressed before the panorama is complete.

Panoramas are created from multiple frames; exposure for the entire panorama is determined by the first frame. The camera may in some cases record an greater or lesser angle than selected or be unable to stitch the frames together perfectly. The last part of the panorama may not be recorded if shooting ends before the panorama is complete.

Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.


The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.

Viewing Panoramas

In full-frame playback, you can use the sub-command dial to zoom panoramas in or out. Alternatively, you can play the panorama back using the selector.





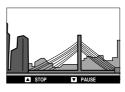


Press the selector down to start playback and press again to pause. Press the selector left or right to choose the pan direction while playback is in progress or to scroll the panorama manually while playback is paused; vertical panoramas will scroll vertically, horizontal panoramas horizontally. To exit to full-frame playback, press the selector up. To view other images, exit to full-frame playback and press the selector left or right.

SP SCENE POSITION /多/▲/ペ/୯

The camera offers a choice of "scenes," each adapted to particular shooting conditions or a specific type of subject.

1 Rotate the mode dial to SP (SCENE POSITION).

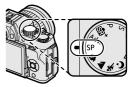

The following scenes can be selected directly using the mode dial:

Scene	Description
PORTRAIT ENHANCER ()	Choose for a smooth skin effect when shooting portraits. If ON is selected for TOUCH SCREEN SETTING > TOUCH SCREEN ON/OFF , you can choose the portrait enhancement level using touch controls.
▲ LANDSCAPE	Choose for daylight shots of buildings and land- scapes.
≫ SPORT	Choose when photographing moving subjects.
C NIGHT	Choose for poorly lit twilight or night scenes.

2 Press **MENU/OK** while the mode description is displayed.



If the view through the lens is displayed in the LCD monitor, press MENU/OK and select SCENE POSITION in the shooting menu.

3 Highlight the desired scene.

Scene	Description				
PORTRAIT	Choose for portraits.				
AC NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when				
	shooting at night.				
* FIREWORKS	Slow shutter speeds are used to capture the expand-				
	ing burst of light from a firework.				
🛎 SUNSET	Choose this mode to record the vivid colors in sun-				
	rises and sunsets.				
SNOW	Choose for crisp, clear shots that capture the bright-				
	ness of scenes dominated by shining white snow.				
≜ ≇ BEACH	Choose for crisp, clear shots that capture the bright-				
	ness of sunlit beaches.				
Y PARTY	Capture indoor background lighting under low-light				
	conditions.				
☆ FLOWER	Effective for taking more vivid shots of flowers.				
TEXT TEXT	Take clear pictures of text or drawings in print.				
MULTIPLE	Create a photograph that combines two exposures				
EXPOSURE	() 65).				

4 Press MENU/OK to select the highlighted scene.

■ Multiple Exposures

Create a photograph that combines two exposures.



- 1 Select MULTIPLE EXPOSURE in the scene position menu.
- 2 Take the first shot.
- 3 Press MENU/OK. The first shot will be shown superimposed on the view through the lens and you will be prompted to take the second shot.



- To return to Step 2 and retake the first shot, press the selector left. To save the first shot and exit without creating a multiple exposure, press **DISP/BACK**.
- **4** Take the second shot, using the first frame as a guide.




5 Press MENU/OK to create the multiple exposure, or press the selector left to return to Step 4 and retake the second shot.



Adv. ADVANCED FILTER

Take photos with filter effects.

1 Rotate the mode dial to Adv. (ADVANCED FILTER).

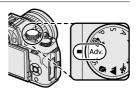

2 Press MENU/OK while the mode description is displayed.



- If the view through the lens is displayed in the LCD monitor, press **MENU/OK** and select **ADVANCED FILTER** in the shooting menu.
- 3 Highlight one of the following options and press MENU/OK.

Filter	Description			
₩ TOY CAMERA	Choose for a retro toy camera effect.			
₽ POP COLOR	Create high-contrast images with saturated			
***Op I OI COLOIL	colors.			
HIGH-KEY	Create bright, low-contrast images.			
LOW-KEY	Create uniformly dark tones with few areas of			
	emphasized highlights.			
	Create a distorting effect of a fisheye lens.			
A DYNAMIC TONE	Dynamic tone expression is used for a fantasy			
MANU DINAMIC TONE	effect.			
A HDR ART	Create artistic effect by emphasizing tone re-			
HDR IIDILAILI	production and dynamic range.			
MINIATURE	The tops and bottoms of pictures are blurred			
MINIMI OVE	for a diorama effect.			

Filter	Description			
	Create a star pattern where lines radiate out from bright objects. The effects of the cross screen filter can be viewed after shooting.			
A PARTIAL COLOR (RED) A PARTIAL COLOR (ORANGE) A PARTIAL COLOR (YELLOW) A PARTIAL COLOR (GREEN) A PARTIAL COLOR (BLUE) A PARTIAL COLOR (PURPLE)	Areas of the image that are the selected colorer recorded in that color. All other areas of the image are recorded in black-and-white.			
	Create clearer image by removing fog factor. Create a look that is evenly soft throughout the whole image.			




Depending on the subject and camera settings, images may in some cases be grainy or vary in brightness or hue.

Autofocus

Take pictures using autofocus.



- 1 Use **AF/MF SETTING** > **FOCUS MODE** to choose a focus mode (**§§§** 69).
- 2 Use **AF/MF SETTING** > **AF MODE** to choose an AF mode (**1** 71).
- 3 Choose the position and size of the focus frame (73).

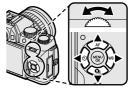

- 4 Take pictures.
- For information on the autofocus system, visit: http://fujifilm-x.com/af/en/index.html

Focus Mode

Use the **FOCUS MODE** option in the **AF/MF SETTING** menu to choose how the camera focuses.

- 1 Press MENU/OK to display the menus.
- 2 Select AF/MF SETTING > FOCUS MODE in the shooting menu.
- 3 Choose from the following options:


Mode	Description		
MFI MANIIAI EOCIIS	Focus manually using the lens focus ring. Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus () 77).		
AF-C	Focus is continually adjusted to reflect changes in the distance to the subject while the shutter button is pressed halfway. Use for subjects that are in motion. Eye-detection AF is not available.		
	Focus locks while the shutter button is pressed halfway. Choose for stationary subjects.		



If **ON** is selected for **AF/MF SETTING** > **PRE-AF**, focus will be adjusted continuously in modes **AF** and **AF** even when the shutter button is not pressed.

The Focus Indicator-

The focus indicator turns green when the subject is in focus and blinks white when the camera is unable to focus. Brackets ("()") indicate that the camera is focusing and are displayed continuously in mode . III is displayed in manual focus mode.

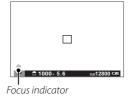

Autofocus Options (AF Mode)

Choose how the camera focuses in modes sand sand sand.

- 1 Press MENU/OK and go to the shooting menu.
- **>** Select **■** AF/MF SETTING > AF MODE.
- 3 Choose an AF mode.

How the camera focuses depends on the focus mode.

Focus Mode F (SINGLE AF)

Option	Description	Sample image
SINGLE POINT	Camera focuses on subject in selected focus point. Use for pinpoint focus on selected subject.	
ZONE	Camera focuses on subject in selected focus zone. Focus zones include multiple focus points, making it easier to focus on subjects in motion.	
() WIDE	Camera focuses automatically on high-contrast subjects; display shows areas in focus.	
ALL ALL	Rotate the sub-command dial in toplay (74, 75) to cycle through the cycle through t	gh AF modes in the follow-

ing order: • SINGLE POINT, • ZONE, and • WIDE.

Focus Mode FC (CONTINUOUS AF)


rocus mode <u>mru (continuous ar)</u>				
Option	Description	Sample image		
SINGLE POINT	Focus tracks subject at selected focus point. Use for subjects moving toward or away from camera.			
T1 ZONE	Focus tracks subject in selected focus zone. Use for subjects that are moving fairly predictably.			
TRACKING	Focus tracks subjects moving through wide area of frame.			
ALL ALL	Rotate the sub-command dial in t play (国 74, 75) to cycle throug ing order: SINGLE POINT, II	gh AF modes in the follow-		

Focus-Point Selection


Choose a focus point for autofocus.

■ Viewing the Focus-Point Display

1 Press the selector up (AF) to view the focus-point display.

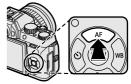


2 Use the selector and sub-command dial to position the focus frame over the desired focus point.

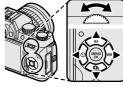

Focus-area selection can also be accessed via the shooting menu.

Selecting a Focus Point

Use the selector to choose the focus point and the sub-command dial to choose the size of the focus frame. The procedure varies with the option selected for AF mode.

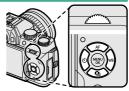

	Selector	DISP/BACK button	Sub-command dial	
AF mode		DISP BACK	<u></u>	<u>Francis</u>
	Press	Press	Rotate	Press
			Choose from 5	
Ŀ			frame sizes	Restore origi-
[]	Select focus point	Select center	Choose from 3	nal size
[1]		focus point	frame sizes	
			_	_



Manual focus-point selection is not available when **WIDE**/ **TRACKING** is selected in focus mode Fig.


If ALL is selected for AF MODE, you can rotate the sub-command dial in the focus-point selection display (75) to cycle through AF modes in the following order: • SINGLE POINT (5 frame sizes), **III ZONE** (3 frame sizes), and either **II WIDE** (focus mode **III**) or TRACKING (focus mode IFI).

The Focus-Point Display

The focus-point display varies with the option selected for AF mode.




Focus frames are shown by small squares (\square), focus zones by the large squares.

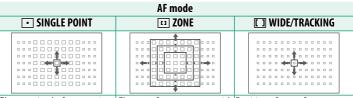

Choose single focus point. Choose from zones with Position focus frame over 7×7 , 5×5 , or 3×3 focus subject and press **MENU/OK**. points.

Available Focus Points

TTL contrast-detect AF offers more focus points (1) than intelligent hybrid AF ((2)), which combines phase-detection with TTL contrast-detect AF.

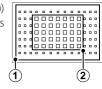

Burst Mode Focus-Frame Selection

When continuous high-speed () is selected for drive mode, the number of focus frames available in focus mode **E** drops.



000000 000000 000000 000000 000000



Single point 7one


Autofocus-

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below.

- Very shiny subjects such as mirrors or car bodies.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background.
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

Checking Focus

To zoom in on the current focus area for precise focus, press the center of the sub-command dial. Press again to cancel zoom.

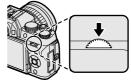





Normal display



N In focus mode 🖪, zoom can be adjusted by rotating the sub-command dial. Focus zoom is not available in focus mode en or when

AF/MF SETTING > **PRE-AF** is on or an option other than **SINGLE POINT** is selected for **AF MODE**


Manual Focus

Adjust focus manually.



- 1 Select MANUAL FOCUS for AF/MF SETTING > FOCUS MODE.
 - **III** will appear in the display.
- 2 Focus manually using the lens focus ring. Rotate the ring left to reduce the focus distance, right to increase.



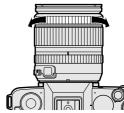

- 3 Take pictures.
- Use the **TOCUS RING** option in the setup menu to reverse the direction of rotation of the focus ring.

Regardless of the option selected, manual focus will be used when the lens is in manual focus mode.


INSTANT AF can be assigned to the **Fn** button, allowing the button to be used to quickly focus on the subject in the selected focus frame when the camera is in manual focus mode.

Checking Focus

A variety of options are available for checking focus in manual focus mode.

The Manual Focus Indicator

The manual focus indicator indicates how closely the focus distance matches the distance to the subject in the focus brackets. The white line indicates the distance to the subject in the focus area (in meters or feet according to the option selected

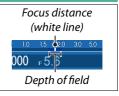

for SCREEN SET-UP > FOCUS SCALE UNITS in the setup menu), the blue bar the depth of field, or in other words the distance in front of and behind the subject that appears to be in focus.



If both **AF DISTANCE INDICATOR** and **MF DISTANCE INDICATOR** are selected in the **SCREEN SET-UP** > **DISP. CUSTOM SETTING** list, depth of field can also be previewed using the depth-of-field indicator in the standard display. Use the **DISP/BACK** button to display standard indicators.

Focus Zoom

If **ON** is selected for **SCREEN SET-UP** > **FOCUS CHECK**, the camera will automatically zoom in on the selected focus area when the focus ring is rotated. Zoom can be adjusted by rotating the sub-command dial. Press the center of the sub-command dial to exit zoom.

Focus Peaking

Select **FOCUS PEAK HIGHLIGHT** for **MF ASSIST** to highlight high-contrast outlines. When focusing, rotate the focus ring until the subject is highlighted.




MF ASSIST options can be accessed by pressing and holding the center of the sub-command dial.

Exposure Compensation

Adjust exposure.



Rotate the main command dial to adjust exposure.

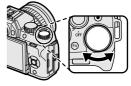




The amount of compensation available varies with the shooting mode.

Focus/Exposure Lock

Compose photographs with off-center subjects.



1 Focus: Position the subject in the focus frame and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).

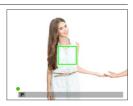


2 Recompose: Keep the shutter button pressed halfway.



3 Shoot: Press the button all the way down.

The AF-L and AE-L Buttons

If AE-LOCK, AF-LOCK, or AE/AF LOCK is assigned to the Fn button, the focus and/or exposure will lock while the Fn button is pressed and remain locked even when the shutter button is pressed halfway.

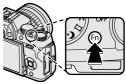


White Balance


For natural colors, choose a white balance option that matches the light source.



1 Press the selector right (WB) to display white balance options.

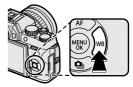

Highlight the desired option and either press MENU/OK to select the highlighted option and view a display where white balance can be finetuned using the selector, or press DISP/BACK to select the highlighted option with no fine tuning.

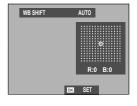



White balance options can also be accessed from the shooting menu.

WHITE BALANCE

The following white balance options are available.

Option	Description
AUTO	White balance is adjusted automatically.
Q	Measure a value for white balance.
K	Choose a color temperature.
*	For subjects in direct sunlight.
*	For subjects in the shade.
₩í	Use under "daylight" fluorescent lights.
岩	Use under "warm white" fluorescent lights.
岩	Use under "cool white" fluorescent lights.
-Д-	Use under incandescent lighting.
044	Reduces the blue cast typically associated with underwater light-
	ing.



Results vary with shooting conditions. Play pictures back after shooting to check colors.

White balance is adjusted for flash lighting only in AUTO and modes. Turn the flash off using other white balance options.

Custom White Balance


Choose to adjust white balance for unusual lighting conditions. White balance measurement options will be displayed; frame a white object so that it fills the display and press the shutter button all the way down to measure white balance (to select the most recent system).



ance (to select the most recent custom value and exit without measuring white balance, press **DISP/BACK**, or press **MENU/OK** to select the most recent value and display the fine-tuning dialog).

- If "COMPLETED!" is displayed, press MENU/OK to set white balance to the measured value.
- If "UNDER" is displayed, raise exposure compensation and try again.
- If "OVER" is displayed, lower exposure compensation and try again.

Selecting in the white balance menu displays a list of color temperatures; highlight a color temperature and press MENU/OK to select the highlighted option and display the fine-tuning dialog.

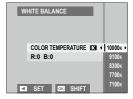

Color Temperature

Color temperature is an objective measure of the color of a light source, expressed in Kelvin (K). Light sources with a color temperature close to that of direct sunlight appear white; light sources with a lower color temperature have a yellow or red cast, while those with a higher color temperature are tinged with blue. You can match color temperature to the light source, or choose options that differ sharply from the color of the light source to make pictures "warmer" or "colder."


Ö

Using the Self Timer

Use the timer for group- or self-portraits, to prevent blur caused by camera shake, or to release the shutter automatically when selected conditions are met.



1 Press the selector left (じ) to display self-timer options.

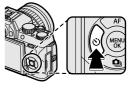

2 Highlight one of the following options and press MENU/OK.

Option		Option	
☼ 2 SEC	86	ℰ ❤ BUDDY	87
්බ 10 SEC	86	© <u>•</u> GROUP	88
🗞 FACE AUTO SHUTTER	86	OFF	_
୯ ≽ SMILE	87		

Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.

The self-timer turns off automatically when the camera is turned off.

To stop the timer before the picture is taken, press DISP/BACK.

Selecting **Second Face Auto Shutter**, **Second Face Auto Shutter**, **Setting** > **FACE/EYE DETECTION SETTING** to **FACE ON/EYE OFF**. The original setting is restored when the self timer is turned off.

Self-timer options can also be selected in the shooting menu.

2 SEC/10 SEC

The shutter is released 2 or 10 seconds after the shutter button is pressed.

1 Highlight either of the following options in the self-timer menu and press MENU/OK.

Option	Description
☼ 2 SEC	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter button is pressed. The self-timer lamp blinks as the timer counts down.
്പ് 10 SEC	The shutter is released ten seconds after the shutter button is pressed. Use for photographs in which you wish to appear yourself. The self-timer lamp blinks immediately before the picture is taken.

2 Press the shutter button all the way down to start the timer. A count-down timer will appear in the display; the picture will be taken when the timer expires.

FACE AUTO SHUTTER

The picture will be taken when the camera detects a portrait subject facing the lens.

- 1 Highlight & (FACE AUTO SHUTTER) in the self-timer menu and press MENU/OK.
- **2** Frame a portrait subject in the display. The camera will initiate face detection and release the shutter when the subject is facing the lens.



The camera may fail to detect subjects who are not facing the camera or whose eyes are hidden.

SMILE

The camera releases the shutter when the subject smiles.

- 1 Highlight 🗞 (SMILE) in the self-timer menu and press MENU/OK
- **7** Frame portrait subjects in the display. The camera will initiate face detection and release the shutter when any of the subjects smiles.



The camera may fail to detect subjects who are not facing the camera or whose eyes are obscured by hair or other objects.

BUDDY

The camera takes a picture when it detects two subjects close together.

- 1 Highlight 💝 (BUDDY) in the self-timer menu and press MENU/OK.
- **)** When prompted to choose how close the subjects must be together before the timer starts, highlight the desired option and press MENU/OK (the required degree of closeness is shown by heart icons in the shooting display: the more



hearts, the closer together the subjects must be).

- LV.1 (NEAR): The timer starts when the subjects are close enough to link hands.
- LV.2 (CLOSE UP): The timer starts when the subjects are shoulder-to-shoulder.
- LV.3 (SUPER CLOSE): The timer starts when the subjects are cheek-to-cheek.
- The timer starts only when the subjects are sufficiently close together; the shutter is released one second later.

GROUP

The camera takes a picture when it detects the selected number of portrait subjects.

- 1 Highlight № (GROUP) in the self-timer menu and press MENU/OK.
- 2 Highlight the desired number of subjects (1 to 4) and press MENU/OK (the number of subjects is indicated by ≜ icons in the shooting display). The timer starts only when the selected number of subjects is in the frame; the

shutter is released two seconds later.






Bracketing

Automatically vary settings over a series of pictures.



1 Press the selector down (to display bracketing options.

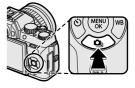

? Press the selector up or down to highlight one of the following:

Option		Option	
₽ AE BKT	90	WBJ WHITE BALANCE BKT	90
ISO BKT	90	DE DYNAMIC RANGE BKT	91
FILM SIMULATION BKT	90	HDR HDR	91

3 Press the selector left or right to highlight the desired bracketing settings and press MENU/OK to select the highlighted option.



Bracketing settings for AE and film simulation bracketing are selected using the **AE BKT SETTING** and **III FILM SIMULATION BKT** options in the shooting menu.

4 Take pictures.

🔁 AE BKT

Use **AE BKT SETTING** to choose the bracketing amount and number of shots. Each time the shutter button is pressed, the camera will take the specified number of shots: one using the metered value for exposure and the others over- or under-exposed by multiples of the selected bracketing amount.



Regardless of the bracketing amount, exposure will not exceed the limits of the exposure metering system.

ISO BKT

Select a bracketing amount $(\pm 1, \pm \frac{1}{3})$, or $\pm \frac{1}{3}$). Each time the shutter is released, the camera will take a picture at the current sensitivity and process it to create two additional copies, one with sensitivity raised and the other with sensitivity lowered by the selected amount.

□ FILM SIMULATION BKT

Each time the shutter is released, the camera takes one shot and processes it to create a total of three copies with different film simulation settings, chosen using the FILM SIMULATION BKT option in the shooting menu.

WII WHITE BALANCE BKT

Select a bracketing amount $(\pm 1, \pm 2, \text{ or } \pm 3)$. Each time the shutter is released, the camera takes one shot and processes it to create three copies: one at the current white balanced setting, one with fine-tuning increased by the selected amount, and another with fine-tuning decreased by the selected amount.

DEI DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots with different dynamic ranges: 100% for the first, 200% for the second, and 400% for the third.



While dynamic range bracketing is in effect, sensitivity will be restricted to a minimum of ISO 800 (or to a minimum of ISO 200 to 800 when an auto option is selected for sensitivity); the sensitivity previously in effect is restored when bracketing ends.

HDR HDR

Each time the shutter button is pressed, the camera takes multiple shots at different exposures and combines them into a single high-dynamic-range image, reducing loss of detail in highlights and shadows. Choose the amount the camera varies exposure from AUTO, 1.0 EV, 1.5 EV, 2.0 EV, 2.5 EV, and 3.0 EV.


- (1) Keep the camera steady. If the camera is moved or the subject change es during shooting, the shots may be recorded separately instead of being combined into a single image. The camera may fail to record an image if the subject moves during shooting.
- The camera displays the combined image after shooting. Press MENU/OK to save the image or DISP/BACK to end HDR shooting without recording the image.



Continuous Shooting (Burst Mode)

Capture motion in a series of pictures.

1 Press the selector down (to display continuous shooting options.

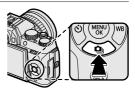

- Press the selector up or down to highlight CONTINUOUS (93) or **4K** (94).
- 3 Press the selector left or right to highlight the desired option and press MENU/OK to select. The frame rate for continuous shooting can be selected from A HIGH or LOW and the shooting mode for 4K recording from 4K BURST or **MULTI FOCUS MODE.**
- 4 Take pictures.

CONTINUOUS

The camera takes pictures at the selected frame rate (A HIGH or LOW) while the shutter button is pressed. Shooting ends when the shutter button is released or the memory card is full.





If file numbering reaches 999 before shooting is complete, the remaining pictures will be recorded to a new folder.


Burst shooting may not begin if the space available on the memory card is insufficient

Frame rate varies with the subject, shutter speed, sensitivity, and focus mode. Frame rates may slow and recording times increase as more shots are taken. The flash cannot be used.

4K 4K

Shoot a burst of 4K pictures and choose which shots to save.

With 4K highlighted in the drive mode menu, press the selector left or right to highlight 4K BURST or 4MULTI FOCUS MODE.

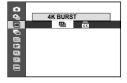

Use a memory card with a UHS speed class of 3 or better.
Selecting 4K burst or multi-focus mode reduces the picture angle.

■ 4K BURST


Choose the frames you wish to save from a thumbnail list.



- 1 Shoot a burst of pictures with **4K > 4K BURST** selected for drive mode.
 - The function performed by the shutter button can be selected using the **B RELEASE TYPE** option in the shooting menu.
- 2 In full-frame playback, display a picture taken with 4K BURST. Press the selector down to view the pictures in the burst as a thumbnail list.



3 Press the selector left or right to highlight frames and press Q to save the highlighted frame as a separate image.

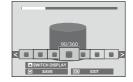

- 4 After saving the desired frames, press DISP/BACK to exit the thumbnail list.
- (1) If the subject moves during shooting, the image may be distorted, while banding may occur in images taken under flickering or transient light sources such as fluorescent lights.
- To prevent motion blur, choose mode **S** or **M** and select a fast shutter speed.

If **CONTINUOUS** is selected for **SCREEN SET-UP** > **IMAGE DISP**, the most recent picture will be displayed when shooting ends, allowing you to select the frames to be saved without exiting to playback mode.

The flash cannot be used.

MULTI FOCUS MODE

Take a series of pictures at different focus distance and create a composite image from selected shots.



- 1 Shoot a burst of pictures with 4K > MULTI FOCUS MODE selected for drive mode.
 - The camera will shoot a burst of pictures each time the shutter button is pressed. There is no need to keep the shutter button pressed during shooting.
- 2 In full-frame playback, display a picture taken with MULTI FOCUS MODE.



3 Press the selector down and choose the shots that will be used to create a composite image.

Option	Description			
	The area in focus in any given frame is indicated by a			
SELECT FOCUS	square (□). Highlight a focus point using the selec-			
	tor and press Q to create a composite image from the			
	frames for which the selected area is in focus.			
AUTO	The camera creates a composite image from the areas			
AUTU	that are in focus.			
SELECT RANGE	Create a composite image from the frames in which a			
JEECT RANGE	selected area is in focus.			

- A tripod is recommended; if no tripod is available, hold the camera steady during shooting. If the subject moves during shooting, the image may be distorted or unnatural, while banding may occur in images taken under flickering or transient light sources such as fluorescent lights. The process of creating a composite image reduces the angle of view. The desired results may not be achieved with moving subjects, distant landscapes, or subjects that lack depth. When shooting with macro lenses, note that the camera may require some time to create a composite image, and that the desired results may not be achieved if the subject is at some distance from the background.
- If **CONTINUOUS** is selected for **SCREEN SET-UP** > **IMAGE DISP.**, the most recent picture will be displayed when shooting ends, allowing you to create a composite image without exiting to playback mode.


The flash cannot be used.

Using the Flash

Use the built-in flash for additional lighting when shooting at night or indoors under low light.



1 Slide the **4** (flash pop-up) lever as shown.

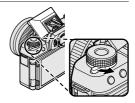

- 2 Press MENU/OK to display the shooting menu.
- 3 Highlight **₹** FLASH SET-UP > FLASH MODE in the shooting menu and press MENU/OK to view flash options.
- 4 Highlight one of the following options and press MENU/OK.

	Mode	Description	
AUTO	AUTO FLASH	The flash fires when required. Recommended	
RED EYE REDUCTION* in most situations.			
L	FORCED FLASH	The flash fires whenever a picture is taken. Use	
•	FORCED FLASH*	for backlit subjects or for natural coloration	
₩¥ FURCED FLASH	when shooting in bright light.		
04	SLOW SYNCHRO	Capture both the main subject and the back-	
® RED EYE & SLOW*		ground under low light (note that brightly lit	
		scenes may be overexposed).	
\$ REAR	2ND CURTAIN SYNC.	The flash fires immediately before the shutter	
REAR	2ND CURTAIN SYNC.*	closes.	

Mode	Description	
#	The built-in flash can be used to control op-	
C COMMANDER	tional remote flash units.	
③ SUPPRESSED FLASH	The flash does not fire even when the subject is	
3 SUPPRESSED FLASH	poorly lit. A tripod is recommended.	

^{*} Red-eye removal is available in these modes when Intelligent Face Detection is active and red-eye removal is on. Red-eye removal minimizes "red-eye" caused when light from the flash is reflected from the subject's retinas.

① Depending on the distance to the subject, some lenses may cast shadows in photos taken with the flash.

The flash may contact accessories mounted on the hot shoe. If necessary, remove accessories before raising the flash.

If **3** is displayed when the shutter button is pressed halfway, the flash will fire when the photo is taken.

Except in commander mode, the flash may fire several times with each shot. Do not move the camera until shooting is complete.

Flash Sync Speed-

The flash will synchronize with the shutter at shutter speeds of $1\!\!/\!\!s$ s or slower.

Optional Flash Units from Fujifilm-

The camera can be used with optional Fujifilm shoe-mounted flash units.


Third-Party Flash Units-

Do not use third-party flash units that apply over 300 V to the camera hot shoe.

Self-Portraits (Selfies)

To shoot a self-portrait, rotate the LCD monitor as shown.



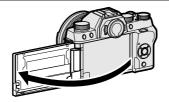




- When the monitor is opened to approximately 180°:
 - **III** AF/MF SETTING > FACE/EYE DETECTION SETTING is automatically set to FACE ON/EYE AUTO
 - Pictures will automatically be displayed for 1.5 seconds after shooting, regardless of the option selected for SCREEN SET-UP > IMAGE DISP.
 - Pictures can be taken by pressing the center of the sub-command dial
 - If **ON** is selected for **ELECTRONIC ZOOM SETTING** and a power zoom lens is attached, zoom can be adjusted by rotating the sub-command dial

Mirror Display-

When the monitor is opened horizontally to approximately 180°, the monitor shows a mirror image of the view through the lens.

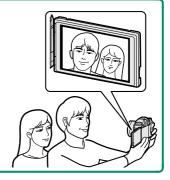

The Shooting Menus



SHOOTING MENU (a1 /a2 /a3 /a4 /a5)

Adjust shooting settings.

The shooting menu is displayed when you press MENU/OK in shooting mode. Choose from tabs 1, 2, 3, 4, or **₫**5.





The options available vary with the shooting mode selected.

SCENE POSITION

Choose a scene for **SP** mode (63).

ADVANCED FILTER

Choose an advanced filter for **Adv.** mode (66).

■ AF/MF SETTING

Adjust focus settings.

FOCUS AREA

Choose the focus area for autofocus, manual focus, and focus zoom (73).

FOCUS MODE

Choose how the camera focuses (69).

AF MODE

Choose the AF mode for focus modes FS and FC (FE 71).

RELEASE/FOCUS PRIORITY

Choose how the camera focuses in focus mode $AF-S(\mathbb{F}_3)$ or $AF-C(\mathbb{F}_3)$.

Option	Description			
RELEASE	Shutter response is prioritized over focus. Pictures can be taken			
RELEASE	when the camera is not in focus.			
FOCUS	Focus is prioritized over shutter response. Pictures can be only			
10003	taken when the camera is in focus.			

AF+MF

If **ON** is selected in focus mode **M**, focus can be adjusted manually by rotating the focus ring while the shutter button is pressed halfway.

Options				
ON OFF				

- Lenses with a focus distance indicator must be set to manual focus mode (MF) before this option can be used. Selecting MF disables the focus distance indicator. Set the focus ring to the center of the focus distance indicator, as the camera may fail to focus if the ring is set to infinity or the minimum focus distance.
- Focus peaking can be used to check focus. To enable focus peaking, select FOCUS PEAK HIGHLIGHT for MR ASSIST.

AF+MF Focus Zoom-

When **ON** is selected for **SCREEN SET-UP** > **FOCUS CHECK** and **SINGLE POINT** selected for **AF MODE**, focus zoom can be used to zoom in on the selected focus area.

FACE/EYE DETECTION SETTING

Intelligent Face Detection sets focus and exposure for human faces anywhere in the frame, preventing the camera from focusing on the background in group portraits. Choose for shots that emphasize portrait subjects. Faces can be detected with the camera in vertical or



horizontal orientation; if a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders. You can also choose whether the camera detects and focuses on eyes when Intelligent Face Detection is on. Choose from the following options:

Option	Description		
FACE ON/EYE OFF	Intelligent Face Detection only.		
FACE ON/EYE AUTO	The camera automatically chooses which eye to fo-		
FACE UN/ETE AUTU	cus on when a face is detected.		
FACE ON/RIGHT EYE PRIORITY	The camera focuses on the right eye of subjects de-		
FACE ON/ KIGHT ETE PRIORITT	tected using Intelligent Face Detection.		
FACE ON/LEFT EYE PRIORITY	The camera focuses on the left eye of subjects de-		
FACE ON/LEFT ETE PRIORITT	tected using Intelligent Face Detection.		
FACE OFF/EYE OFF	Intelligent Face Detection and eye priority off.		
FACE OFF/EYE OFF	Intelligent Face Detection and eye priority off.		



In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.

If the subject moves as the shutter button is pressed, the face may not be in the area indicated by the green border when the picture is taken.



If the camera is unable to detect the subject's eyes because they are hidden by hair, glasses, or other objects, the camera will instead focus on faces.

PRE-AF

If **ON** is selected, the camera will continue to adjust focus even when the shutter button is not pressed halfway. Note that this increases the drain on the battery.

Options			
ON OFF			

AF ILLUMINATOR

If **ON** is selected, the AF-assist illuminator will light to assist autofocus.

Options				
ON OFF				



The AF-assist illuminator turns off automatically when **OFF** is selected for SOUND & FLASH in the setup menu.

The camera may be unable to focus using the AF-assist illuminator in some cases. If the camera is unable to focus, try increasing the distance to the subject.

Avoid shining the AF-assist illuminator directly into your subject's eyes.

RELEASE TYPE

Choose how the shutter button functions when

■ 4K > ■ 4K BURST is selected as the drive mode.

Option	Description				
	ESSING Pictures are taken while the shutter button is pressed.				
ON/OFF SWITCH	Shooting starts when the shutter button is pressed and ends				
ON/OFF SWITCH	when the button is pressed a second time.				
	The camera starts saving frames to a memory buffer when the				
	shutter button is pressed halfway. When the shutter button				
PRE RECORD	is pressed the rest of the way down, the camera transfers the				
	frames shot in the previous second to the memory card and con-				
	tinues shooting until the shutter button is released.				

ISO ISO

Adjust the camera's sensitivity to light.

Option	Description			
AUT01	Sensitivity is automatically adjusted in response to shooting			
AUTO2	conditions. Choose the base sensitivity, maximum sensitivity,			
AUT03	and minimum shutter speed for AUTO1 , AUTO2 , and AUTO3 .			
	Adjust sensitivity manually. Selected value is shown in display.			
H (25600/51200),	Choose for special situations. Note that mottling may appear in			
L (100)	pictures taken at ${f H}$, while ${f L}$ reduces dynamic range.			



Sensitivity is not reset when the camera is turned off.

If a **RAW** option is selected for image quality, pictures taken with **L** selected for 180 ISO will be recorded at ISO 200, while those taken with H selected will be recorded at ISO 12800.

-Adiustina Sensitivity-

High values can be used to reduce blur when lighting is poor, while lower values allow slower shutter speeds or wider apertures in bright light; note, however, that mottling may appear in pictures taken at high sensitivities.

AUTO

Choose the base sensitivity, maximum sensitivity, and minimum shutter speed for AUTO1, AUTO2, and AUTO3. Defaults are shown below.

		Default		
ltem	Options	AUTO1 AUTO2 AUTO3		AUT03
DEFAULT SENSITIVITY	6400-200	200		
MAX. SENSITIVITY	6400-400	800 1600 3200		
MIN. SHUTTER SPEED	1/500-1/4 SEC, AUTO	AUTO		

The camera automatically chooses a sensitivity between the default and maximum values; sensitivity is only raised above the default value if the shutter speed required for optimal exposure would be slower than the value selected for MIN. SHUTTER SPEED.



If the value selected for **DEFAULT SENSITIVITY** is higher than that selected for MAX. SENSITIVITY, DEFAULT SENSITIVITY will be set to the value selected for MAX. SENSITIVITY.

The camera may select shutter speeds slower than MIN. SHUTTER **SPEED** if pictures would still be underexposed at the value selected for MAX. SENSITIVITY. If AUTO is selected for MIN. SHUTTER SPEED. the camera will automatically choose a minimum shutter speed approximately equal to the inverse of the lens' focal length, in seconds (for example, if the lens has a focal length of 50 mm, the camera will choose a minimum shutter speed in the neighborhood of 1/50 s). The minimum shutter speed is not affected by the option selected for image stabilization.

IMAGE SIZE

Choose the size and aspect ratio at which still pictures are recorded.

Option	lmage size	Option	lmage size	Option	lmage size
3:2	6000×4000	16:9	6000×3376	1:1	4000×4000
M 3:2	4240 × 2832	M 16:9	4240 × 2384	M 1:1	2832 × 2832
S 3:2	3008 × 2000	§ 16:9	3008 × 1688	§ 1:1	2000×2000



MAGE SIZE is not reset when the camera is turned off or another shooting mode is selected.

Aspect Ratio-

Pictures with an aspect ratio of 3:2 have the same proportions as a frame of 35 mm film, while an aspect ratio of 16:9 is suited to display on High Definition (HD) devices. Pictures with an aspect ratio of 1:1 are square.

MAGE QUALITY

Choose a file format and compression ratio. Select **FINE** or **NORMAL** to record JPEG images, **RAW** to record RAW images, or **FINE+RAW** or **NORMAL+RAW** to record both JPEG and RAW images. **FINE** and **FINE+RAW** use lower JPEG compression ratios for higher-quality JPEG images, while **NORMAL** and **NORMAL+RAW** use higher JPEG compression ratios to increase the number of images that can be stored.

The Fn (Function) Button

To toggle RAW image quality on or off for a single shot, assign **RAW** to the **Fn** button (E 168). If a JPEG option is currently selected for image quality, pressing the **Fn** button temporarily selects the equivalent JPEG+RAW option. If a JPEG+RAW option is currently selected, pressing the **Fn** button temporarily selects the equivalent JPEG option, while if **RAW** is selected, pressing the **Fn** button temporarily selects **FINE**. Taking a picture or pressing the **Fn** button again restores the previous setting.

DRII DYNAMIC RANGE

Control contrast. Choose lower values to increase contrast when shooting indoors or under overcast skies, higher values to reduce loss of detail in highlights and shadows when photographing high-contrast scenes. Higher values are recommended for scenes that include both sunlight and deep shade, for such high-contrast subjects as sunlight on water, brightly-lit autumn leaves, and portraits taken against a blue sky, and for white objects or people wearing white; note, however, that mottling may appear in pictures taken at higher values.

Options			
AUTO	R100 100%	R200 200%	₽ <mark>400 400</mark> %

If **AUTO** is selected, the camera will automatically choose either 100 100% or 200 200% according to the subject and shooting conditions. Shutter speed and aperture will be displayed when the shutter button is pressed halfway.

200% is available at sensitivities of ISO 400 and above, 400 400% at sensitivities of ISO 800 and above

FILM SIMULATION

Simulate the effects of different kinds of film, including blackand-white (with or without color filters). Choose a palette according to your subject and creative intent.

Option	Description
PROVIA/STANDARD	Standard color reproduction. Suited to a wide range of
STD PROVIA/STANDARD	subjects, from portraits to landscapes.
V Velvia/VIVID	A high-contrast palette of saturated colors, suited to
V velvia/VIVID	nature photos.
	Enhances the range of hues available for skin tones in
ASTIA/SOFT	portraits while preserving the bright blues of daylight
	skies. Recommended for outdoor portrait photography.
Em CLASSIC CUROME	Soft color and enhanced shadow contrast for a calm
CLASSIC CHROME	look.
TTIER DDA Now Ui	Offers slightly more contrast than M (PRO Neg. Std).
N# PRO Neg. Hi	Recommended for outdoor portrait photography.
	A soft-toned palette. The range of hues available for skin
📆 PRO Neg. Std	tones is enhanced, making this a good choice for studio
	portrait photography.
B MONOCHROME	Take pictures in standard black and white.
	Take black-and-white pictures with slightly increased
B♥ MONOCHROME+ Ye FILTER	contrast. This setting also slightly tones down the
ie filita	brightness of the sky.
□ MONOCHROME +	Take black-and-white pictures with increased contrast.
R FILTER	This setting also tones down the brightness of the sky.
B MONOCHROME +	Soften skin tones in black-and-white portraits.
G FILTER	porten skin tories in piack-and-writte portfalls.
SEPIA SEPIA	Take pictures in sepia.



Film simulation options can be combined with tone and sharpness settings.

For more information, visit: http://fujifilm-x.com/en/x-stories/the-worldof-film-simulation-episode-1/

FILM SIMULATION BKT

Choose the three film simulation types used for film simulation bracketing (90,110).

Options			
STD PROVIA/STANDARD	V ₩ Velvia/VIVID		ASTIA/SOFT
CLASSIC CHROME	N₩ PRO Neg. Hi		頂置 PRO Neg. Std
MONOCHROME	∰ MONOCHROME + Ye FILTER		国電 MONOCHROME + R FILTER
E MONOCHROME + G FILTER			SEPIA SEPIA

SELF-TIMER

Use the timer for group- or self-portraits, to prevent blur caused by camera shake, or to release the shutter automatically when selected conditions are met (\$\infty\$ 85).

M INTERVAL TIMER SHOOTING

Configure the camera to take photos automatically at a preset interval. If desired, frames shot using interval timer shooting can be joined to form a time-lapse movie.

- 1 Highlight INTERVAL TIMER SHOOTING in the shooting menu and press MENU/OK.
- 2 Use the selector to choose the interval and number of shots. Press MENU/OK to proceed.



- 3 Highlight one of the following recording types and press MENU/OK.
 - STILL: Each photo is recorded separately.
 - STILL+TIME-LAPSE MOVIE: Each photo is recorded separately; in addition, the entire sequence is recorded as a time-lapse movie.



- The frame size and rate for the time-lapse movie can be selected using TIME-LAPSE MOVIE MODE before shooting begins.
- 4 Use the selector to choose the starting time and then press MENU/OK.



5 Shooting will start automatically.



- Use of a tripod is recommended.

Check the battery level before starting. We recommend using an optional AC-9V AC power adapter and CP-W126 DC coupler.

The display sometimes turns off between shots and lights a few seconds before the next shot is taken. The display can be activated at any time by pressing the shutter button.

TIME-LAPSE MOVIE MODE

Choose the frame size and rate for time-lapse movies.

Option	Frame size	Rate
4K 2160/30P*	3840×2160 (4K)	30 fps
4K 2160/15P*	3040 X 2100 (4N)	15 fps
1080/59.94P		59.94 fps
1080/50P	1920×1080 (Full HD)	50 fps
1080/24P	1920 × 1000 (1 uli 11D)	24 fps
1080/23.98P		23.98 fps
11D 720/59.94P		59.94 fps
11D 720/50P	1280×720 (HD)	50 fps
11D 720/24P	1200 × 720 (110)	24 fps
TD 720/23.98P		23.98 fps

^{*}Use a memory card with a UHS speed class of 3 or better when recording time-lapse movies that will be viewed on the camera.

WB WHITE BALANCE

For natural colors, choose a white balance option that matches the light source (81).

Color COLOR

Adjust color density. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

SHARPNESS

Sharpen or soften outlines. Choose from 5 options between +2 and -2.

Options				
+2	+1	0	-1	-2

Adjust the appearance of highlights. Choose from 5 options between +2 and -2.

		Options		
+2	+1	0	-1	-2

温 SHADOW TONE

Adjust the appearance of shadows. Choose from 5 options between +2 and -2.

		Options		
+2	+1	0	-1	-2

III NOISE REDUCTION

Reduce noise in pictures taken at high sensitivities. Choose from 5 options between +2 and -2.

		Options		
+2	+1	0	-1	-2

■ LONG EXPOSURE NR

Select **ON** to reduce mottling in long time-exposures.

Opt	ions
ON	OFF

AE BKT SETTING

Adjust exposure bracketing settings (90).

FRAMES/STEP SETTING

Choose the number of shots and exposure step width for exposure bracketing.

Option	Description
FRAMES	Choose the number of shots in the bracketing sequence.
STEP	Choose the amount exposure changes with each shot.

1 FRAME/CONTINUOUS

Choose the operation performed by pressing the shutter button during exposure bracketing.

Option	Description
1 FRAME	One photo is taken each time the shutter button is pressed.
	Each time the shutter button is pressed, the camera takes the
CONTINUOUS number of shots chosen using FRAMES/STEP SETTI	
	crementing exposure by the selected amount with each shot.

SEQUENCE SETTING

Choose the order in which the shots are taken.

Opt	tion	Description
		The first shot is taken at current exposure settings and exposure
0 → -		compensation is then modified over the succeeding shots, pro-
		ceeding in order from the highest to the lowest value.
		The first shot is taken at current exposure settings and exposure
0 → -	- → +	compensation is then modified over the succeeding shots, pro-
		ceeding in order from the lowest to the highest value.
- → (0 → +	Shooting proceeds in order from the lowest to the highest value.
+ → (0 → –	Shooting proceeds in order from the highest to the lowest value.

TOUCH SCREEN MODE

Choose whether touch controls can be used to select the focus area or release the shutter (18).

TOUCH ZOOM


Enable touch digital zoom (21).

IIII MOUNT ADAPTOR SETTING

Adjust settings for M-mount lenses connected using an optional FUJIFILM M MOUNT ADAPTER.

Choosing a Focal Length

If the lens has a focal length of 21, 24, 28, or 35 mm, choose a matching option in the **MOUNT ADAPTOR SETTING** menu.

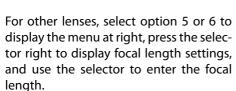





Distortion Correction


Choose from **STRONG**, **MEDIUM**, or **WEAK** options to correct **BARREL** or **PINCUSHION** distortion.



Color Shading Correction

Color (shading) variations between the center and edges of the frame can be adjusted separately for each corner.


To use color shading correction, follow the steps below.

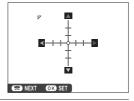

- 1 Rotate the sub-command dial to choose a corner. The selected corner is indicated by a triangle.
- 2 Use the selector to adjust shading until there is no visible difference in color between the selected corner and the center of the image. Press the selector left or right to adjust colors on the cyan–red axis. Press the selector up or down to adjust colors on the blue–yellow axis.
- To determine the amount required, adjust color shading correction while taking photos of blue sky or a sheet of gray paper.

Peripheral Illumination Correction

Choose from values between –5 and +5. Choosing positive values increases peripheral illumination, while choosing negative values reduces peripheral illumination. Positive values are recommended for vintage lenses, negative values to create the effect of images taken with an antique lens or a pinhole camera.

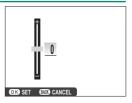



To determine the amount required, adjust peripheral illumination correction while taking photos of blue sky or a sheet of gray paper.

SHOOT WITHOUT LENS

Choose **ON** to enable the shutter release when no lens is attached.

Options		
ON	OFF	

MF ASSIST

Choose how focus is displayed in manual focus mode.

Option	Description
STANDARD	Focus is displayed normally.
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose
FOCUS FEAR HIGHLIGHT	a color and peaking level.

© PHOTOMETRY

Choose how the camera meters exposure.

The selected option will only take effect when AF/MF SETTING > FACE/EYE DETECTION SETTING is FACE OFF/EYE OFF.

Mode		Description
⊚ Multi		The camera instantly determines exposure based on an analysis of composition, color, and brightness distribution. Recommended in most situations.
[●] SPOT		The camera meters lighting conditions in an area at the center of the frame equivalent to 2% of the total. Recommended with backlit subjects and in other cases in which the background is much brighter or darker than the main subject.
[] AVERAG	E	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

INTERLOCK SPOT AE & FOCUS AREA

Select **ON** to meter the current focus frame when **SINGLE POINT** is selected for **AF/MF SETTING** > **AF MODE** and **SPOT** is selected for **PHOTOMETRY**.

Options		
ON	OFF	

FLASH SET-UP

Adjust flash settings.

FLASH MODE

Choose a flash mode (98).

FLASH COMPENSATION

Adjust flash brightness. Choose from values between +2 EV and -2 EV. Note that the desired results may not be achieved depending on shooting conditions and the distance to the subject.

RED EYE REMOVAL

Choose **ON** to remove red-eye effects caused by the flash.

Options		
ON	OFF	

(

Red-eye reduction is performed only when a face is detected.

Red-eye removal is not available with RAW images.

MOVIE SET-UP

Adjust movie-recording options.

MOVIE MODE

Choose a frame size and rate for movie recording.

Option	Frame size	Rate
4K 2160/15P*	3840×2160 (4K)	15 fps
間 1080/59.94P 間 1080/24P 間 1080/50P 間 1080/23.98P	1920×1080 (Full HD)	59.94 fps, 50 fps,
ID 720/59.94P ID 720/24P ID 720/23.98P	1280×720 (HD)	24 fps, 23.98 fps

^{*}Use a memory card with a UHS speed class of 3 or better when recording time-lapse movies that will be viewed on the camera.

HD HIGH SPEED VIDEO

Record high-frame-rate HD movies that play back in slow motion, giving you time to view fast-moving subjects or details too fleeting for the naked eye: a batter's swing, darting insects, or swiftly-flowing waters.

Option	Description	
1.6× ▶ 59.94P 📽 100P	Pacard HD (1280 × 720) maying at 1.6 × 2 × 3.3 × or 4 ×	
2× ▶ 50P 📽 100P	Record HD (1280 \times 720) movies at 1.6 \times , 2 \times , 3.3 \times , or 4 \times speed and a frame rate of 100 fps. The movies play back at $\frac{1}{12}$, $\frac{1}{12}$, or $\frac{1}{14}$ speed, respectively.	
4× ▶ 25P 📽 100P		
OFF	High-speed recording off.	

High-speed movies are recorded at a reduced frame size with no sound. Focus, exposure, zoom, and white balance are fixed at the values in effect at the start of recording. Movies shot under low light may be underexposed due to the high recording speeds; we recommend shooting outdoors in daylight or in other brightly-lit locations. If desired, high-speed movies can also be viewed in slow-motion on a computer.

MOVIE ISO

Choose the sensitivity for movie recording from AUTO or from settings between ISO 400 and 6400.



This setting has no effect on photographs.

FOCUS MODE

Choose the focus mode for movie recording.

Option	Description
MANUAL FOCUS	Focus manually.
CONTINUOUS AF	The camera focuses using AF-C.
SINGLE AF	The camera focuses using AF-S.

AF MODE

Choose how the camera selects the focus point for movie recording.

Option	Description
MULTI	Automatic focus-point selection.
AREA	The camera focuses on the subject in the selected focus area.

HDMI OUTPUT INFO DISPLAY

If ON is selected, HDMI devices to which the camera is connected will mirror the information in the camera display.

Options		
ON	OFF	

4K MOVIE OUTPUT

Choose the destination for 4K movies shot while the camera is connected to an HDMI recorder or other device that supports 4K.

Option	Description
SD CARD	4K movies are recorded to a camera memory card and output to the HDMI device in 4K.
HDMI	4K movies are output to the HDMI device in 4K. The camera does not record 4K movies to a memory card.

HDMI REC CONTROL

Choose whether the camera sends movie start and stop signals to the HDMI device when the

(movie recording) button is pressed to start and stop movie recording.

Options	
ON	OFF

MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in and external microphones.

Options			
4	3	2	1

MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
∞ MIC	₽ REMOTE

IS MODE

Choose from the following image stabilization options:

Option	Description
(₩)1•>> CONTINUOUS	Image stabilization on. If +MOTION is selected, the cam-
+MOTION	era will adjust shutter speed to reduce motion blur when a
«₩»₁ CONTINUOUS	moving objects are detected.
《∰》≥●》 SHOOTING +MOTION	As above, except that image stabilization is performed only when the shutter button is pressed halfway (focus mode only) or the shutter is released. If +MOTION is selected,
(�)= SHOOTING ONLY	the camera will adjust shutter speed to reduce motion blur when a moving objects are detected.
OFF	Image stabilization off. Choose this option when using a tripod.



+MOTION has no effect when sensitivity is set to a fixed value, and may also be unavailable at some other combinations of settings. The effect may vary with lighting conditions and the speed at which the object is moving.

This option is available only with lenses that support image stabilization.

□ DIGITAL IMAGE STABILIZER

Choose whether to enable digital image stabilization during movie recording.

Options	
ON	OFF

WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can be used to browse the images on the camera, download selected images, control the camera remotely, or upload location data to the camera.



For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/

SHUTTER TYPE

Choose the shutter type. Choose the electronic shutter to mute the shutter sound

Option	Description
MS MECHANICAL SHUTTER	Take pictures with the mechanical shutter.
ES ELECTRONIC SHUTTER	Take pictures with the electronic shutter.
MS MECHANICAL+ES ELECTRONIC	The camera chooses the shutter type according
MIS MECHANICAL + E3 ELECTRONIC	to shooting conditions.

- When the electronic shutter is used, distortion may be visible in shots of moving subjects and in hand-held shots taken at high shutter speeds, while banding and fog may occur in shots taken under fluorescent lights or other flickering or erratic illumination. When taking pictures with the shutter muted, respect your subjects' image rights and right to privacy.
- When the electronic shutter is used, the flash is disabled, sensitivity is restricted to values of ISO 12800-200, and long exposure noise reduction has no effect.

ELECTRONIC ZOOM SETTING

Select **ON** to enable power zoom when the LCD monitor is opened horizontally to approximately 180°. Zoom can be adjusted by rotating the sub-command dial.


Options	
ON	OFF

Playback and the Playback Menu

The Playback Display

This section lists the indicators that may be displayed during playback.

For illustrative purposes, displays are shown with all indicators lit.

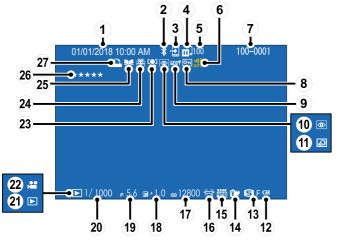


(1) Date and time35, 146	14) Film simulation110
(2) Bluetooth ON/OFF158	(15) Dynamic range109
(3) Image transfer order133	(16) White balance114
(4) Image transfer status133	(17) Sensitivity106
(5) Number of frames selected for upload	(18) Exposure compensation79
133	19 Aperture53, 56, 57
6 Sound and flash indicator147	20 Shutter speed53, 54, 57
(7) Frame number156	(21) Playback mode indicator
(8) Protected image139	(22) Movie icon
9 Location data158, 160	23) Face detection indicator104
(10) Red-eye removal indicator140	24) Gift image42
(11) Advanced filter	25 Photobook assist indicator141
	26 Rating129
(3) Image size/quality107, 108	27 DPOF print indicator143

The DISP/BACK Button

The **DISP/BACK** button controls the display of indicators during playback.



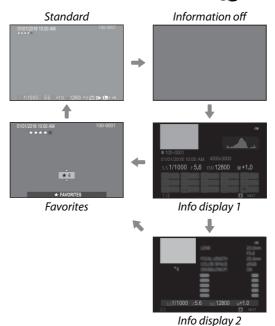


Favorites: Rating Pictures-

To rate the current picture, press **DISP/BACK** and press the selector up and down to select from zero to five stars.

Zooming in on the Focus Point-


Press the center of the sub-command dial to zoom in on the focus point. Press the center of the sub-command dial again to return to full-frame playback.

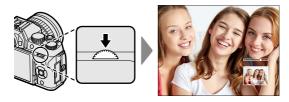

Viewing Pictures

Read this section for information on playback zoom and multi-frame playback.

Use the sub-command dial to go from full-frame playback to playback zoom or multi-frame playback.

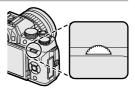

Full-frame playback



Multi-frame playback



Nine-frame view



Hundred- frame view



Playback zoom



Medium zoom





Maximum zoom



Playback Zoom

Rotate the sub-command dial right to zoom in on the current picture, left to zoom out. To exit zoom, press DISP/BACK, MENU/OK, or the center of the sub-command dial.



The maximum zoom ratio varies with the option selected for **★ IMAGE SIZE**. Playback zoom is not available with cropped or resized copies saved at a size of 640.

Scroll-

When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.



Navigation window

Multi-Frame Playback

To view multiple images, rotate the sub-command dial left when a picture is displayed full frame. Use the sub-command dial to choose the number of images displayed.



Use the selector to highlight images and press MENU/OK to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.



The Playback Menu (□1/□2/□3)

Adjust playback settings.

The playback menu is displayed when you press MENU/OK in playback mode. Choose from tabs [1], [2], or [3].



■ IMAGE TRANSFER ORDER

Select photos for upload to a paired smartphone or tablet.

- 1 Select IMAGE TRANSFER ORDER > SELECT FRAMES in the playback menu.
- 2 Highlight photos and press MENU/OK to select or deselect. Repeat until all the desired photos have been selected.
- **3** Press **DISP/BACK** to exit to playback.
 - If ON is selected for ☐ CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF, upload will begin shortly after you exit to playback or turn the camera off.
- Image transfer orders can contain a maximum of 999 pictures. Protected pictures, RAW images, "gift" pictures, and movies cannot be selected for upload.

When WIRELESS COMMUNICATION is assigned to the Fn button and PAIRING/TRANSFER ORDER is selected for CONNECTION SETTING > GENERAL SETTINGS > BUTTON SETTING, the Fn button can be used to select pictures for upload. To deselect all images, select RESET ORDER for IMAGE TRANSFER ORDER. To upload pictures as they are taken, select ON for CONNECTION SETTING > Bluetooth SETTINGS > AUTO IMAGE TAGGING.

WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can be used to browse the images on the camera, download selected images, control the camera remotely, or upload location data to the camera.



For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/

RAW RAW CONVERSION

RAW pictures store information on camera settings separately from the data captured by the camera image sensor. Using RAW CONVERSION, you can create JPEG copies of RAW pictures using different options for the settings listed on page 135. The original image data are unaffected, allowing a single RAW image to be processed in a multitude of different ways.


- 1 With a RAW picture displayed, press MENU/OK to display the playback menu.
- Press the selector up or down to highlight RAW CONVERSION in the playback menu and press MENU/OK to display settings.



These options can also be displayed by pressing the **Q** button during playback.



3 Press the selector up or down to highlight a setting and press the selector right to display options. Press the selector up or down to highlight the desired option and press MENU/OK to select and return to the settings list. Repeat this step to adjust additional settings.

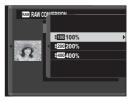

4 Press the Q button to preview the JPEG copy and press MENU/OK to save.

The settings that can be adjusted when converting pictures from RAW to JPEG are:

Setting	Description
REFLECT SHOOTING COND.	Create a JPEG copy using the settings in effect at the time the photo was taken.
PUSH/PULL PROCESSING	Adjust exposure.
DYNAMIC RANGE	Enhance details in highlights for natural contrast.
FILM SIMULATION	Simulate the effects of different types of film.
WHITE BALANCE	Adjust white balance.
WB SHIFT	Fine-tune white balance.
COLOR	Adjust color density.
SHARPNESS	Sharpen or soften outlines.
HIGHLIGHT TONE	Adjust highlights.
SHADOW TONE	Adjust shadows.
NOISE REDUCTION	Process the copy to reduce mottling.
COLOR SPACE	Choose the color space used for color reproduction.

ERASE

Delete individual pictures, multiple selected pictures, or all pictures.



Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

Option	Description			
FRAME	Delete pictures one at a time.			
SELECTED FRAMES	Delete multiple selected pictures.			
ALL FRAMES	Delete all unprotected pictures.			

FRAME

- 1 Select **FRAME** for **ERASE** in the playback menu.
- **?** Press the selector left or right to scroll through pictures and press MENU/OK to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.

SELECTED FRAMES

- 1 Select **SELECTED FRAMES** for **ERASE** in the playback menu.
- 2 Highlight pictures and press MENU/OK to select or deselect (pictures in photobooks or printer orders are shown by ■). Selected pictures are indicated by check marks (▼).
- **3** When the operation is complete, press **DISP/BACK** to display a confirmation dialog.
- 4 Highlight OK and press MENU/OK to delete the selected pictures.

ALL FRAMES

- 1 Select ALL FRAMES for ERASE in the playback menu.
- 2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK** to delete all unprotected pictures.
- Pressing **DISP/BACK** cancels deletion; note that any pictures deleted before the button was pressed cannot be recovered.

If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

CROP

Create a cropped copy of the current picture.

- 1 Display the desired picture.
- 2 Select CROP in the playback menu.
- 3 Use the sub-command dial to zoom in and out and press the selector up, down, left, or right to scroll the picture until the desired portion is displayed.
- 4 Press MENU/OK to display a confirmation dialog.
- 5 Press MENU/OK again to save the cropped copy to a separate file.
- Starger crops produce larger copies; all copies have an aspect ratio of 3:2. If the size of the final copy will be ♠, YES will be displayed in yellow.

RESIZE

Create a small copy of the current picture.

- 1 Display the desired picture.
- 2 Select RESIZE in the playback menu.
- 3 Highlight a size and press MENU/OK to display a confirmation dialog.
- 4 Press MENU/OK again to save the resized copy to a separate file.
- The sizes available vary with the size of the original image.

⊶ PROTECT

Protect pictures from accidental deletion. Highlight one of the following options and press **MENU/OK**.

- FRAME: Protect selected pictures. Press the selector left or right to view pictures and press MENU/OK to select or deselect. Press DISP/BACK when the operation is complete.
- SET ALL: Protect all pictures.
- RESET ALL: Remove protection from all pictures.
- Protected pictures will be deleted when the memory card is formatted.

IMAGE ROTATE

Rotate pictures.

- 1 Display the desired picture.
- 2 Select 2 IMAGE ROTATE in the playback menu.
- **3** Press the selector down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 4 Press MENU/OK. The picture will automatically be displayed in the selected orientation whenever it is played back on the camera.
- Protected pictures cannot be rotated. Remove protection before rotating pictures.

The camera may not be able to rotate pictures created with other devices. Pictures rotated on the camera will not be rotated when viewed on a computer or on other cameras.

Pictures taken with **SCREEN SET-UP** > **AUTOROTATE PB** are automatically displayed in the correct orientation during playback.

RED EYE REMOVAL

Remove red-eye from portraits. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select RED EYE REMOVAL in the playback menu.
- 3 Press MENU/OK.
- Results vary depending on the scene and the camera's success in detecting faces. Red eye cannot be removed from pictures that have already been processed using red-eye removal, which are indicated by a locon during playback.

The amount of time needed to process the image varies with the number of faces detected.

Red eye removal cannot be performed on RAW images.

■ SLIDE SHOW

View pictures in an automated slide show. Press **MENU/OK** to start and press the selector right or left to skip ahead or back. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.

The camera will not turn off automatically while a slide show is in progress.

PHOTOBOOK ASSIST

Create books from your favorite photos.

Creating a Photobook

- 1 Select NEW BOOK for PHOTOBOOK ASSIST in the playback menu.
- 2 Scroll through the images and press the selector up to select or deselect. Press MENU/OK to exit when the book is complete.
 - Neither photographs 🚳 or smaller nor movies can be selected for photobooks.

The first picture selected becomes the cover image. Press the selector down to select the current image for the cover instead.

- 3 Highlight COMPLETE PHOTOBOOK and press MENU/OK (to select all photos for the book, choose SELECT ALL). The new book will be added to the list in the photobook assist menu.
- Books can contain up to 300 pictures. Books that contain no photos are automatically deleted.

Photobooks-

Photobooks can be copied to a computer using MyFinePix Studio software.

Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the selector left or right to scroll through the pictures.

Editing and Deleting Photobooks

Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the onscreen instructions.

- EDIT: Edit the book as described in "Creating a Photobook".
- ERASE: Delete the book.

PC AUTO SAVE

Upload pictures from the camera to a computer running the latest version of FUJIFILM PC AutoSave (note that you must first install the software and configure the computer as a destination for images copied from the camera).




For downloads and other information, visit: http://app.fujifilm-dsc.com/en/pc_autosave/

PRINT ORDER (DPOF)

Create a digital "print order" for DPOF-compatible printers.

- 1 Select PRINT ORDER (DPOF) in the playback menu.
- **)** Select WITH DATE to print the date of recording on pictures, WITHOUT DATE to print pictures without dates, or **RESET ALL** to remove all pictures from the print order before proceeding.
- 3 Display a picture you wish to include in or remove from the print order.
- 4 Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.

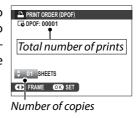

- 5 Repeat steps 3–4 to complete the print order.
- 6 The total number of prints is displayed in the monitor. Press MENU/OK to exit.
- Note in the current print order are indicated by a 🚨 icon during playback.

Print orders can contain a maximum of 999 pictures.


If a memory card is inserted containing a print order created by another camera, you will need to delete the order before creating as described above.

instax PRINTER PRINT

Print pictures on optional Fujifilm instax SHARE printers (E 186).

DISP ASPECT

Choose how High Definition (HD) devices display pictures with an aspect ratio of 3:2 (this option is available only when an HDMI cable is connected). Select 16:9 to display the image so that it fills the screen with its top and bottom cropped out, 3:2 to display the entire image with black bands at either side.

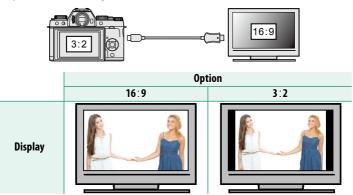

The Setup Menus



The Setup Menu (🛂 🖊 🖊 🖊)

Adjust basic camera settings.

To access basic camera settings, press MENU/OK and select tab [4], [42], or [43].



DATE/TIME

Set the camera clock (37).

TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

- 1 Highlight + LOCAL and press MENU/OK.
- 2 Use the selector to choose the time difference between local time and your home time zone. Press MENU/OK when settings are complete.

Options				
← LOCAL	☆ HOME			

■ 言語/LANG.

Choose a language (37).

RESET

Reset shooting or setup menu options to default values.

1 Highlight the desired option and press MENU/OK.

Option	Description					
SHOOTING MENU RESET	Reset all shooting menu settings other than custom white balance to default values.					
	white balance to default values.					
	Reset all setup menu settings other than					
SET-UP RESET	⑤ DATE/TIME , ₺ TIME DIFFERENCE , and					
	CONNECTION SETTING to default values.					

2 A confirmation dialog will be displayed; highlight **OK** and press MENU/OK.

Ⅲ SOUND & FLASH

Select OFF to disable the speaker, flash, and illuminator in situations in which camera sounds or lights may be unwelcome.

Options						
ON	OFF					
appears in the display when	OFF is selected.					

▶ SOUND SET-UP

Adjust sound settings.

OPERATION VOL.

Adjust the volume of the sounds produced when camera controls are operated. Choose **••OFF** to disable control sounds.



SHUTTER VOLUME

Adjust the volume of the sounds produced by the electronic shutter. Choose **4OFF** to disable the shutter sound.



SHUTTER SOUND

Choose the sound made by the electronic shutter.

Options					
♪1SOUND1	♪ 2 SOUND 2	♪ 3 SOUND 3			

PLAYBACK VOLUME

Adjust the volume for movie playback. Choose from 10 options between 10 (high) and 1 (low) or select **0** to mute audio during movie playback.

Options									
10	10 9 8 7 6 5 4 3 2 1 0								

SCREEN SET-UP

Adjust display settings.

IMAGE DISP.

Choose how long images are displayed after shooting. Colors may differ slightly from those in the final image and "noise" mottling may be visible at high sensitivities. Note that at some settings, the camera will display pictures after shooting regardless of the option selected.

Option	Description
CONTINUOUS	Pictures are displayed until the MENU/OK button is pressed or the shutter button is pressed halfway. To zoom in on the active focus point, press the center of the sub-command dial; press again to cancel zoom.
1.5 SEC	Pictures are displayed for the selected time or until the shutter
0.5 SEC	button is pressed halfway.
OFF	Pictures are not displayed after shooting.

EVF AUTOROTATE DISPLAYS

Choose whether the indicators in the viewfinder rotate to match camera orientation.

Options				
ON	OFF			



The display in the LCD monitor is unaffected.

PREVIEW EXP. IN MANUAL MODE

Select **ON** to enable exposure preview in manual exposure mode.

Options				
ON	OFF			



Select **OFF** when using the flash or on other occasions on which exposure may change when the picture is taken.

EVF BRIGHTNESS

Adjust the brightness of the display in the electronic viewfinder. Select MANUAL to choose from 11 options from +5 (bright) to −5 (dark), or select **AUTO** for automatic brightness adjustment.

Options				
MANUAL	AUTO			

EVF COLOR

Adjust the hue of the display in the electronic viewfinder.



LCD BRIGHTNESS

Adjust monitor brightness.



LCD COLOR

Adjust monitor hue.

Options										
+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5

PREVIEW PIC. EFFECT

Choose ON to preview the effects of film simulation, white balance, and other settings in the monitor, OFF to make shadows in low-contrast, back-lit scenes and other hard-to-see subjects more visible

Options		
ON	OFF	




If **OFF** is selected, the effects of camera settings will not be visible in the monitor and colors and tone will differ from those in the final picture. The display will however be adjusted to show the effects of advanced filters and of monochrome and sepia settings.

display.

FRAMING GUIDELINE

Choose a framing grid for shooting mode.

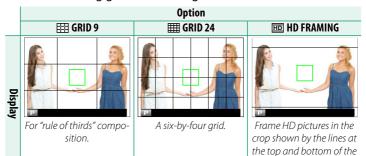



Framing guides are not shown at default settings but can be displayed using SCREEN SET-UP > DISP. CUSTOM SETTING () 15).

AUTOROTATE PB

Choose **ON** to automatically rotate "tall" (portrait-orientation) pictures during playback.

Options	
ON	OFF

FOCUS CHECK

If ON is selected, the display will automatically zoom in on the selected focus area when the focus ring is rotated in manual focus mode.

Options		
ON	OFF	



Pressing the center of the sub-command dial cancels focus zoom.

FOCUS SCALE UNITS

Choose the units used for the focus distance indicator.

Options	
METERS	FEET

DISP. CUSTOM SETTING

Choose items for the standard display (15).

BUTTON SETTING

Choose the roles played by camera controls.

FUNCTION (Fn) SETTING

Choose the roles played by the function button, touch function gestures, and function dial (169).



Role selection can also be accessed by pressing and holding the function or **DISP/BACK** button

EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu (1992) 167).



The quick menu can also be accessed in shooting mode by holding the Q button.

OI FOCUS RING

Choose the direction in which the focus ring is rotated to increase the focus distance.

Options	
CW (clockwise)	• CCW (counterclockwise)

TOUCH SCREEN SETTING

Adjust touch control settings.

TOUCH SCREEN ON/OFF

Enable or disable touch controls.

Option	Description	
ON	Enable touch controls.	
OFF	Disable touch controls.	

EVF TOUCH SCREEN AREA SETTINGS

Select the area of the LCD monitor used for touch controls while the viewfinder is active. The area used for touch controls can be selected from.

Option	Description
	The entire screen can be used.
	Only the right half of the screen can be used.
	Only the top right quarter of the screen can be used.
	Only the bottom right quarter of the screen can be used.
	Only the left half of the screen can be used.
	Only the top left quarter of the screen can be used.
	Only the bottom left quarter of the screen can be used.
OFF	Touch controls cannot be used.

B POWER MANAGEMENT

Adjust power management settings.

AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually.

Options		
5 MIN	2 MIN	OFF

HIGH PERFORMANCE

Select **ON** for faster focus and to reduce the time needed to restart the camera after it has been turned off.

Options	
ON	OFF

SENSOR CLEANING

Remove dust from the camera image sensor.

Option	Description
OK	Clean the sensor immediately.
WHEN SWITCHED ON	Sensor cleaning will be performed when the camera
WHEN SWITCHED ON	is turned on.
	Sensor cleaning will be performed when the camera
WHEN SWITCHED OFF	turns off (sensor cleaning is not however performed if
	the camera turns off in playback mode).




Dust that cannot be removed using sensor cleaning can be removed manually.

SAVE DATA SET-UP

Adjust file management settings.

FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown. FRAME NO. controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card is formatted.

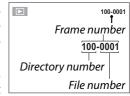

Option	Description
	Numbering continues from the last file number used or the first
	available file number, whichever is higher. Choose this option to
	reduce the number of pictures with duplicate file names.
RENEW Numbering is reset to 0001 after formatting or when a r	
VEINEAA	ory card is inserted.



If the frame number reaches 999-9999, the shutter release will be disabled. Format the memory card after transferring to a computer any pictures you wish to keep.

Selecting RESET sets FRAME NO. to CONTINUOUS but does not reset the file number.

Frame numbers for pictures taken with other cameras may differ.

SAVE ORG IMAGE

Choose **ON** to save unprocessed copies of pictures taken using F1 FLASH SET-UP > RED EYE REMOVAL.

Options	
ON	OFF

EDIT FILE NAME

Change the file name prefix. sRGB images use a four-letter prefix (default "DSCF"), Adobe RGB images a three-letter prefix ("DSF") preceded by an underscore.

Option	Default prefix	Sample file name
sRGB	DSCF	ABCD0001
AdobeRGB	_DSF	_ABC0001

DATE STAMP

Stamp the time and/or date of recording on photographs as they are taken.

Option	Description
31+4	Stamp new photographs with the date and time of recording.
31	Stamp new photographs with the date of recording.
OFF	Do not stamp the time and date on new photographs.

Time and date stamps cannot be deleted. Turn **DATE STAMP** off to prevent time and date stamps appearing on new photographs.

If the camera clock is not set, you will be prompted to set the clock to the current date and time ($\equiv 35, 37$).

We recommend that you turn the DPOF "print date" option off when printing images with a time and date stamp (1) 143).

Time and date stamps do not appear on movies or RAW images or on shots taken using 4K burst or multi-focus.

COLOR SPACE

Choose the gamut of colors available for color reproduction.

Option	Description
sRGB	Recommended in most situations.
Adobe RGB	For commercial printing.

© CONNECTION SETTING

Adjust settings for connection to wireless devices, including smartphones, computers, and Fujifilm instax SHARE printers.



For more information on wireless connections, visit: http://fujifilm-dsc.com/wifi/

Bluetooth SETTINGS

Adjust Bluetooth settings.

Option	Description		
орион	•		
PAIRING REGISTRATION	To pair the camera with a smartphone or tablet, select		
	this option, then launch FUJIFILM Camera Remote on the		
	smart device and tap PAIRING REGISTRATION .		
DELETE PAIRING REG.	End pairing.		
Bluetooth ON/OFF	• ON : The camera automatically establishes a Bluetooth		
	connection with paired devices when turned on.		
	OFF: The camera does not connect via Bluetooth.		
AUTO IMAGE TAGGING	• ON : Mark JPEG images for upload as they are taken.		
	• OFF : Photos are not marked for upload as they are taken.		
SEAMLESS TRANSFER	• ON : Pictures are uploaded to paired devices after shooting.		
	• OFF : Pictures are uploaded to paired devices only when		
	the camera is off or starting shortly after you exit to play-		
	back.		
SMARTPHONE SYNC. SETTING	Choose whether to synchronize the camera to the time		
	and/or location provided by a paired smartphone.		
	• LOCATION&TIME : Synchronize the time and location.		
	• LOCATION: Synchronize the location.		
	• TIME: Synchronize the time.		
	OFF: Synchronization off.		
	a.r.synconeadon on		



Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.

When ON is selected for both Bluetooth ON/OFF and AUTO IMAGE **TAGGING** and **OFF** is chosen for **SEAMLESS TRANSFER**, upload to paired devices will begin when the camera is turned off or shortly after you exit to playback.

If AUTO IMAGE TAGGING is off, pictures can be marked for transfer using the MIMAGE TRANSFER ORDER option in the playback menu.

PC AUTO SAVE SETTINGS

Adjust settings for connection to computers via wireless LAN.

Option	Description	
PC AUTO SAVE SETTING PC AUTO SAVE SETTING SIMPLE SETUP: Connect using WPS. MANUAL SETUP: Choose the network from (SELECT FROM NETWORK LIST) or enter the manually (ENTER SSID).		
DELETE REGISTERED DESTINATION PC	Remove selected destinations.	
DETAILS OF PREVIOUS CONNECTION	View computers to which the camera has recently connected.	

instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers.

The Printer Name (SSID) and Password-

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



GENERAL SETTINGS

Adjust settings for connection to wireless networks.

Option	Description	
NAME	Choose a name (NAME) to identify the camera on the wireless network (the camera is assigned a unique name by default).	
RESIZE IMAGE FOR SMARTPHONE (S)	Choose ON (the default setting, recommended in most circumstances) to resize larger images to for upload to smartphones, OFF to upload images at their original size. Resizing applies only to the copy uploaded to the smartphone; the original is not affected.	
GEOTAGGING	Choose whether location data downloaded from a smart- phone are embedded in pictures as they are taken.	
LOCATION INFO	Display the location data last downloaded from a smart- phone.	
Choose the role played by the Fn button when it is assigned the WIRELESS COMMUNICATION function. • PAIRING/TRANSFER ORDER: The Fn button can be used for pairing and selecting images for transfer. • WIRELESS COMMUNICATION: The Fn button can be used for wireless connections.		

INFORMATION

View the camera's MAC and Bluetooth address.


RESET WIRELESS SETTING

Restore wireless settings to their default values.

■ FORMAT

To format a memory card:

- 1 Highlight FORMAT in the setup menu and press MENU/OK.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight OK and press MENU/OK. To exit without formatting the memory card, select CANCEL or press DISP/BACK.

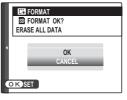

All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.

Do not open the battery-chamber cover during formatting.

MEMO

Shortcuts



Shortcut Options

Customize camera controls to suit your style or situation.

Frequently-used options can be added to the **Q** menu or assigned to the **Fn** (function) button for direct access:

- The Q menu (165): The Q menu is displayed by pressing the Q button. Use the Q menu to view or change the options selected for frequently-used menu items.
- The function button (168): Use the function button for direct access to selected features.




The Q (Quick Menu) Button

Press **Q** for quick access to selected options.

The Quick Menu Display

At default settings, the quick menu contains the following items:

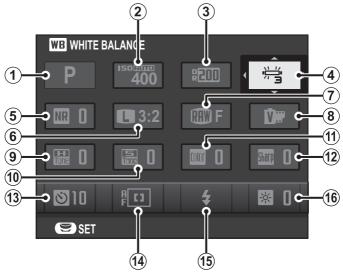


- (1) SHOOTING MODE
- **(2)** ISO
- 3 DYNAMIC RANGE
- (4) WHITE BALANCE
- (5) NOISE REDUCTION
- (6) IMAGE SIZE
- (7) IMAGE QUALITY
- (8) FILM SIMULATION

- **9** HIGHLIGHT TONE
- (10) SHADOW TONE
- 11 COLOR
- 12 SHARPNESS
- (13) SELF-TIMER
- (14) AF MODE
- 15 FLASH MODE
- 16 EVF/LCD BRIGHTNESS


Viewing and Changing Settings


1 Press **Q** to display the quick menu during shooting.

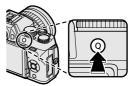

2 Use the selector to highlight items and rotate the main/sub-command dial to change.



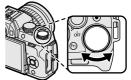

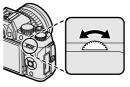


- 3 Press **Q** to exit when settings are complete.
- The shooting mode is the current shooting mode and cannot be changed from the quick menu.
 - \square **CUSTOM** and \square **COLOR TEMPERATURE** white balance options cannot be accessed using the $\mathbb Q$ button. Use a function button or the shooting menu.

Editing the Quick Menu

To choose the items displayed in the quick menu:

1 Press and hold the **Q** button during shooting.

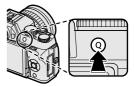

- 2 The current quick menu will be displayed; use the selector to highlight the item you wish to change and press MENU/OK.
- **3** Highlight any of the following options and press **MENU/OK** to assign it to the selected position.
 - ISO
 - DYNAMIC RANGE
 - WHITE BALANCE
 - NOISE REDUCTION
 - IMAGE SIZE
 - IMAGE QUALITY
 - FILM SIMULATION
 - HIGHLIGHT TONE
 - SHADOW TONE
 - COLOR
 - SHARPNESS
 - SFI F-TIMER
 - FACE/EYE DETECTION SETTING
 - PHOTOMETRY

- AF MODE
- FOCUS MODE
- FLASH MODE
- FLASH COMPENSATION
- IS MODE
- ME ASSIST
- MOVIE MODE
- MOVIF ISO
- MIC LEVEL ADJUSTMENT
- SOUND & FLASH
- FVF/I CD BRIGHTNESS
- FVF/I CD COLOR
- SHUTTER TYPE
- NONE
- Select **NONE** to assign no option to the selected position.
- The quick menu can also be edited using the BUTTON SETTING > EDIT/SAVE QUICK MENU option in the setup menu.

The Fn (Function) Button


Assign a role to the function button for quick access to the selected feature.





The functions assigned to **T-Fn1** through **T-Fn4** can be accessed by flicking the monitor.


Pre-assigned roles can be accessed using the function dial (7).


The default assignments are:

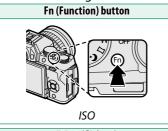


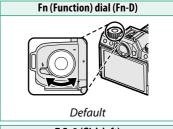

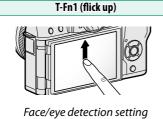

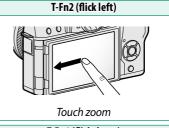

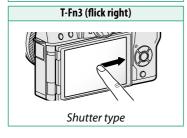

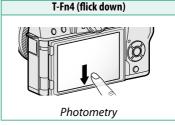

Assigning a Role to the Function Button

The roles assigned to the Fn (Function) button and touch function gestures can be selected using **BUTTON SETTING** > **FUNCTION (Fn) SETTING.**

- PREVIEW DEPTH OF FIELD
- ISO
- SFI F-TIMFR
- IMAGE SIZE
- IMAGE QUALITY
- DYNAMIC RANGE
- FILM SIMULATION
- WHITE BALANCE
- PHOTOMETRY
- TOUCH700M
- AF BKT SFTTING
- AF-LOCK
- AF-LOCK
- AF/AF LOCK
- INSTANT AF
- AF MODE

- FOCUS MODE
- FOCUS ARFA
- RFI FASE TYPE
- FLASH MODE
- FLASH COMPENSATION
- MOVIE MODE
- FACE/EYE DETECTION SETTING.
- RAW
- WIRFLESS COMMUNICATION
- AUTO IMAGE TAGGING
- Bluetooth ON/OFF
- SHUTTER TYPE
- PREVIEW EXP IN MANUAL MODE
- PREVIEW PIC. FFFFCT
- NONE



To disable the **Fn** button, choose **NONE**.

AE-LOCK, AF-LOCK, AE/AF LOCK, and INSTANT AF cannot be assigned touch function gestures (T-Fn1 through T-Fn4).

Role selection can also be accessed by pressing and holding the function or **DISP/BACK** button

Assigning a Role to the Function Dial

The following functions can be assigned to the function dial using BUTTON SETTING > FUNCTION (Fn) SETTING:

- ISO
- SELF-TIMER
- IMAGE SIZE
- IMAGE OUALITY
- DYNAMIC RANGE
- FII M SIMULATION
- WHITE BALANCE
- PHOTOMETRY
- AF MODE
- FOCUS MODE

- RELEASE TYPE
- FLASH MODE
- FLASH COMPENSATION
- MOVIE MODE
- FACE/EYE DETECTION SETTING.
- SHUTTER TYPE
- FXPO. COMP.
- DEFAULT
- NONE



To disable the function dial, choose **NONE**.


When **DEFAULT** is selected, the function performed by the dial varies with the position of the mode dial (7).

Peripherals and Optional Accessories

Lenses

The camera can be used with lenses for the FUJIFILM X-mount.

Lens Parts

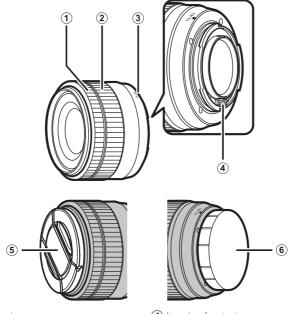

- (1) Focus ring
- (2) Zoom ring
- (3) Mounting marks

- 4 Lens signal contacts
- (5) Front lens cap
- **(6)** Rear lens cap



A XC15-45mmF3.5-5.6 OIS PZ is used here for illustrative purposes.


Power Zoom


When **ON** is selected for **ELECTRONIC ZOOM SETTING**, the sub-command dial can be used to adjust zoom when the monitor is opened horizontally to approximately 180°.

The focus ring can be used to adjust zoom when autofocus is enabled.

Removing Lens Caps

Remove lens caps as shown.

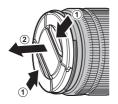


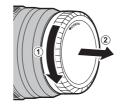

Lens caps may differ from those shown.


Lenses with Lens Hoods

When attached, lens hoods reduce glare and protect the front lens element.

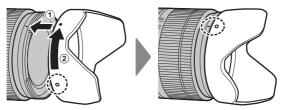

Lenses with Aperture Rings


At settings other than A, you can adjust aperture by rotating the lens aperture ring (exposure modes A and M).

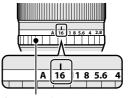

Aperture ring

The Aperture Mode Switch-

If the lens has an aperture mode switch, aperture can be adjusted manually by sliding the switch to \$\square\$ and rotating the aperture ring.

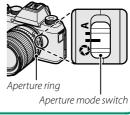




When the aperture ring is set to **A**, rotate the sub-command dial to adjust aperture.

Lenses with O.I.S. Switches

If the lens supports optical image stabilization (O.I.S.), the image stabilization mode can be chosen in the camera menus. To activate image stabilization, slide the O.I.S. switch to ON.

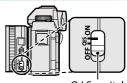

O.I.S. switch

Manual Focus Lenses

Slide the focus ring to the front for autofocus.



For manual focus, slide the focus ring to the back and rotate it while checking the results in the camera display. The focus distance and depth-of-field indicators can be used to assist manual focus.



Note that manual focus may not be available in all shooting modes.

The Depth-of-Field Indicator-

The depth-of-field indicator shows the approximate depth of field (the distance in front of and behind the focus point that appears to be in focus). The indicator is displayed in film format.



Lens Care

Use a blower to remove dust, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Replace the front and rear caps when the lens is not in use.

Connections


HDMI Output

Camera shooting and playback displays can be output to HDMI devices.

Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- 2 Connect the cable as shown below, making sure the connectors are fully inserted.

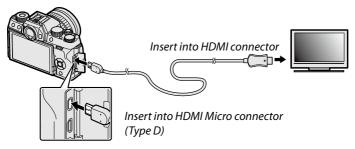

- Use an HDMI cable no more than 1.5 m (4.9 ft.) long.
- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- **4** Turn the camera on. You can now shoot and play back pictures while viewing the television display and save pictures to the HDMI device.
- The USB cable cannot be used while an HDMI cable is connected.

Shooting

Shoot photos and record movies while viewing the scene through the camera lens on or saving footage to the HDMI device.



This feature can be used to save 4K and Full HD movies to an HDMI recorder.

Playback

To start playback, press the camera **▶** button. The camera monitor turns off and pictures and movies are output to the HDMI device. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.



Some televisions may briefly display a black screen when movie playback begins.

Wireless Transfer

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit: http://fujifilm-dsc.com/wifi/

Smart Phones and Tablets: FUJIFILM Camera Remote

Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet to connect to the camera via Bluetooth® or Wi-Fi. For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/

Smart Phones and Tablets: Bluetooth® Pairing

Use CONNECTION SETTING > Bluetooth SETTINGS > PAIRING REGISTRATION to pair the camera with smartphones or tablets. Pairing offers a simple method for downloading photos from the camera.



Photos are downloaded via a wireless connection.

Smartphones and Tablets: Wi-Fi

Use the WIRELESS COMMUNICATION options in the shooting menu or the playback menu to connect to a smartphone or tablet via Wi-Fi. Once connected, you can browse the images on the camera, download selected images, control the camera remotely, or copy location data to the camera.





Computers: FUJIFILM PC AutoSave

Install the latest version of FUJIFILM PC AutoSave to your computer to upload pictures from the camera over wireless networks. For downloads and other information, visit:

http://app.fujifilm-dsc.com/en/pc_autosave/

Computers: Wireless Connections

You can upload pictures from the camera using the AUTO SAVE option in the playback menu.





You can also upload pictures by pressing and holding the **Fn** button in playback mode.

Connecting to Computers via USB

Connect the camera to a computer to download pictures.

Windows (MyFinePix Studio)

Use MyFinePix Studio to copy pictures to your computer, where they can be stored, viewed, organized, and printed. MyFinePix Studio is available for download from the following website:

http://fujifilm-dsc.com/mfs/

Once download is complete, double-click the downloaded file ("MFPS Setup.EXE") and follow the on-screen instructions to complete installation.

Mac OS X/macOS

Pictures can be copied to your computer using Image Capture (supplied with your computer) or other software.

RAW FILE CONVERTER EX 2.0


To view RAW files on your computer, use RAW FILE CONVERTER EX 2.0, available for download from:

http://fujifilm-dsc.com/rfc/

Connecting the Camera

Connect the camera and computer using the supplied USB cable.

- 1 Find a memory card containing pictures you want to copy to the computer and insert the card into the camera.
 - Loss of power during transfer could result in loss of data or damage to the memory card. Insert a fresh or fully-charged battery before connecting the camera.
- 2 Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted.

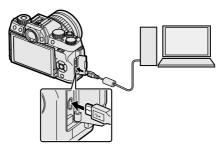

- The camera is equipped with a Micro USB (Micro-B) USB 2.0 connector.
- 3 Turn the camera on.
- 4 Copy pictures to the computer using MyFinePix Studio or applications provided with your operating system.
- 5 When transfer is complete, turn the camera off and disconnect the USB cable.

(I) If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.

Connect the camera directly to the computer; do not use a USB hub or keyboard.

Do not disconnect the USB cable while data are being exchanged between the camera and computer or insert or remove memory cards while transfer is in progress. Failure to observe this precaution could result in loss of data or damage to the memory card.

In some cases, it may not be possible to access pictures saved to a network server using the software in the same way as on a standalone computer.

The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

instax SHARE Printers

Print pictures from your digital camera to instax SHARE printers.

Establishing a Connection

Select CONNECTION SETTING > instax PRINTER CONNECTION SETTING in the camera setup menu and enter the instax SHARE printer name (SSID) and password.

The Printer Name (SSID) and Password-

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



Printing Pictures

- 1 Turn the printer on.
- 2 Select instax PRINTER PRINT in the camera playback menu. The camera will connect to the printer.
 □ instax-12345678 □ connecting to pr



3 Use the selector to display the picture you want to print, then press MENU/OK.



- Pictures taken with other cameras cannot be printed.
 The area printed is smaller than the area visible in the LCD monitor.
 The displays may vary depending on the type of printer connected.
- 4 The picture will be sent to the printer and printing will start.

MEMO

Technical Notes

Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit http://www.fujifilm.com/products/digital_cameras/index.html.

Rechargeable Li-ion batteries

NP-W126S: Additional high-capacity NP-W126S rechargeable batteries can be purchased as required.



Battery chargers

BC-W126: Replacement battery chargers can be purchased as required. At +20 °C/+68 °F, the BC-W126 charges an NP-W126S in about 150 minutes.



AC power adapters

AC-9V (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

DC couplers

CP-W126: Connect the AC-9V to the camera.

Remote releases

RR-90: Use to reduce camera shake or keep the shutter open during a time exposure.



Stereo microphones

MIC-ST1: An external microphone for movie recording.



FUJINON lenses

XF-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.



XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.



Shoe-mounted flash units

EF-X500: This clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and is powered by four AA batteries or an optional EF-BP1 battery pack. The flash head can be rotated 90° up, 10° down, 135° left, or 180° right for bounce lighting.



EF-42: This clip-on flash unit (powered by four AA batteries) has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control and auto power zoom in the range 24–105 mm (35 mm format equivalent). The flash head can be rotated 90° up, 180° left, or 120° right for bounce lighting.



EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.). Powered by two AAA batteries, this light, compact unit features a dial for adjusting TTL flash compensation or manual flash output.



EF-20: This clip-on flash unit (powered by two AA batteries) has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported). The flash head can be rotated upwards 90° for bounce lighting.



Grip belts

GB-001: Offers an enhanced grip.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4×. **XF2X TC WR**: Increases the focal length of the compatible lenses by about 2.0×.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

Software from Fujifilm

The camera can be used with the following Fujifilm software.

FUJIFILM Camera Remote

Establish a wireless connection between your camera and a smartphone or tablet (180).

http://app.fujifilm-dsc.com/en/camera_remote/

FUJIFILM PC AutoSave

Download pictures from your camera over wireless networks (19 182).

http://app.fujifilm-dsc.com/en/pc_autosave/

MyFinePix Studio

Manage, view, print, and edit the many images downloaded from your digital camera (1991) 183).

http://fujifilm-dsc.com/mfs/

RAW FILE CONVERTER EX 2.0

View RAW pictures on your computer and convert them into other formats (1991) 183).

http://fujifilm-dsc.com/rfc/

For Your Safety

IMPORTANT SAFETY INSTRUCTIONS

- should be read before the appliance is operated.
- Retain Instructions: The safety and operating instructions should be retained for future reference.
- Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions: All operating and use instructions should be followed

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by System (NEC ART 250. PART H) the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

• Read Instructions: All the safety and operating instructions Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

> Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.


An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Antennas

Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL

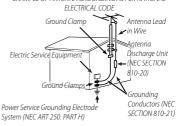

Power Lines: An outside antenna system should not be locat- Damage Requiring Service: Unplug this video product from ed in the vicinity of overhead power lines or other electric the wall outlet and refer servicing to qualified service personlight or power circuits, or where it can fall into such power nel under the following conditions: lines or circuits. When installing an outside antenna system, • When the power-supply cord or plug is damaged extreme care should be taken to keep from touching such . If liquid has been spilled, or objects have fallen into the power lines or circuits as contact with them might be fatal.

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance — this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

Be sure to read these notes before use

Safety Notes

 Make sure that you use your camera correctly. Read these safety notes and your Owner's Manual carefully before use. After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result



This icon indicates that death or serious injury can result if the information is ignored.



This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Important").

Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited")

Filled circles with an exclamation mark indicate a action that must be performed ("Required").

The symbols on the product (including the accesories) represent the following:





Class II equipment (The construction of the product is double-insulated.)

/!\ WARNING



If a problem arises, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your Fuiifilm dealer.

Do not allow water or foreign objects to enter the camera. If water or foreign objects get inside the cam-

era, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. Contact your Fujifilm dealer.



Do not use the camera in the bathroom or shower. This can cause a fire or electric shock.

WARNING



Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution car cause fire or electric shock.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your Fujifilm dealer.



Do not place the camera on an unstable surface. This can cause the camera to fall or tip over and cause



Never attempt to take pictures while in motion. Do not use the camera while walking or driving. This can result in you falling down or being involved in a traffic accident.




Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge



Do not use the battery except as specified. Load the battery as shown by the indicator.

Do not disassemble, modify, or heat batteries, Do not drop, strike, or throw batteries or otherwise subject them to strong impacts. Do not use batteries that show sians of leaking, deformation, discoloration, or other abnormalities. Use only designated chargers to recharge rechargeable batteries and do not attempt to recharge non-rechargeable Li-ion or alkaline batteries. Do not short batteries or store them with metallic objects. Failure to observe these precautions could result in the batteries overheating, igniting, rupturing, or leaking

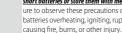

Use only batteries or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire.



If the battery leaks and fluid aets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here. The supplied charger is for use only with batteries of the type supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak, overheat or burst.

\ WARNING



Using a flash too close to a person's eyes may cause visual impairment. Take particular care when photograph ing infants and young children.



Do not remain in prolonged contact with hot surfaces. Failure to observe this precaution could result in low-temperature burns, particularly at high ambient temperatures or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.

Do not leave one part of the body in contact with the



product for prolonged periods while the product is on. Failure to observe this precaution could result in low-temperature burns, particularly during prolonged use, at high ambient temperatures, or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.



Do not use in the presence of flammable objects, explosive gases, or dust. When carrying the battery, install it in a digital camera



or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape. Contact with other metallic objects or batteries could cause the battery to ignite or burst.

Keep memory cards, hot shoes, and other small parts out



of the reach of small children. Children may swallow small parts; keep out of reach of children. Should a child swallow a small part, seek medical attention or call emergency.



Keep out of reach of small children. Among the elements that could cause injury are the strap, which could become entangled about a child's neck, causing strangulation, and the flash, which could cause visual impairment. Follow the directions of airline and hospital personnel.



This product generates radio-frequency emissions that could interfere with navigational or medical equipment.


∕N CAUTION



Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or elec-



Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight This can cause a fire

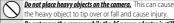

Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock

CAUTION



Do not cover or wrap the camera or the AC power adapter in a doth or blanket. This can cause heat to build up and distort the casing or cause a fire



Do not use the plug if it is damaged or if it does not fit securely into the outlet. Failure to observe this precaution could result in fire or electric shock When you are cleaning the camera or you do not plan to



use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter. Failure to do so can cause a fire or electric shock



When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.

CAUTION



When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card. Injury could result to those struck by the ejected card.



Request regular internal testing and cleaning for your camera. Build-up of dust in your camera can cause a fire or electric shock. Contact your Fujifilm dealer to request internal cleaning every two years. Please note that this service is not free of charge



Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

The Battery and Power Supply

Note: Check the type of battery used in your camera and read ■ Battery Life the appropriate sections.

such as sunshine, fire or the like,

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

■ Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when • Do not expose to flame or heat. not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

■ Charging the Battery

Charge the battery in the supplied battery charger. Charging times will increase at ambient temperatures below +10°C (+50 °F) or above +35 °C (+95 °F). Do not attempt to charge the battery at temperatures above +40 °C (+104 °F); at temperatures below 0 °C (+32 °F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

At normal temperatures, the battery can be recharged about MARNING: Battery shall not be exposed to excessive heat 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

■ Storage

Performance may be impaired if the battery is left unused for extended periods when fully charged. Run the battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15 °C to +25 °C (+59 °F to +77 °F). Do not store in locations exposed to extremes of temperature.

■ Cautions: Handling the Battery

- . Do not transport or store with metal objects such as necklaces or hairpins.
- Do not disassemble or modify.
- . Use with designated chargers only.
- · Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- Do not expose to water.
- Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

■ Caution: Disposal

Dispose of used batteries in accord with local regulations. Attention should be drawn to the environmental aspects of battery disposal. Use the apparatus under moderate climate.

AC Power Adapters

Use only Fujifilm AC power adapters designated for use with this camera. Other adapters could damage the camera.

- . The AC power adapter is for indoor use only.
- · Be sure the DC plug is securely connected to the camera.
- Turn the camera off before disconnecting the adapter. Dis If the adapter causes radio interference, regrient or relocate connect the adapter by the plug, not the cable.
- · Do not use with other devices.

Do not disassemble.

- . Do not expose to high heat and humidity.
- · Do not subject to strong physical shocks.
- . The adapter may hum or become hot to the touch during use. This is normal.
- the receiving antenna.

Using the Camera

- . Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this Digital Split Image is a trademark or registered trademark precaution could damage the camera image sensor.
- Strong sunlight focused through the viewfinder may damage the panel of electronic viewfinder (EVF). Do not aim the electronic viewfinder at the sun.

Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the results to ensure that the camera is functioning normally. FUJIFILM Corporation cannot accept liability for damages or lost profits incurred as a result of product malfunction.

Notes on Copyriaht

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

Liquid Crystal

In the event that the display is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- . If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- . If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

Trademark Information

of FUJIFILM Corporation, xD-Picture Card and are trademarks of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiwan Inc. Macintosh, Mac OS, and macOS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S.A. and other countries. Wi-Fi® and Wi-Fi Protected Setup® are registered trademarks of the Wi-Fi Alliance. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Fujifilm is under license. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark or registered trademark of HDMI Licensing LLC. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

Exif Print (Exif Version 2.3)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See: http://www.dtsc.ca.gov/hazardouswaste/perchlorate

For Customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE



Contains IC: 7736B-02100005 Contains FCC ID: W27-02100005

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Notes on the Grant: To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

For Customers in Canada

CAN ICES-3 (B)/NMB-3(B)

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

Industry Canada statement: This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios. The County Code Selection This symbol on the batteries or accumulators feature is disabled for products marketed in the US/ Canada.

Radiation Exposure Statement: The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested In Countries Outside the European Union, Norway, Iceland and that some biological effects might occur, but such findings Liechtenstein: If you wish to discard this product, including been tested and found to comply with IC radiation exposure thorities and ask for the correct way of disposal. limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

Disposal of Electrical and Electronic Equipment in Private Households

In the European Union, Norway, Iceland and Liechtenstein: This symbol on the product, or in

the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should

be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

indicates that those batteries shall not be treated as household waste.



If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

have not been confirmed by additional research. X-T100 has the batteries or accumulators, please contact your local au-

In Japan: This symbol on the batteries indicates that they are to be disposed of separately.



Wireless Network and Bluetooth Devices: Cautions

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- RE Directive 2014/53/EU

Hereby, FUJIFILM Corporation declares that the radio equipment type FF180001 is in compliance with Directive 2014/53/FU

The full text of the EU declaration of conformity is available at the following internet address: http://www.fujifilm.com/products/digital_cameras/xfujifilm_x_t100/pdf/index/fujifilm_x_t100_cod.pdf

This compliance is indicated by the following conformity marking placed on the product:

ϵ

This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth®).

IMPORTANT: Read the following notices before using the camera's built-in wireless transmitter.

- ① This product, which contains encryption function developed in the United States, is controlled by the United States Export Administration Regulations and may not be exported or re-exported to any country to which the United States embarqoes goods.
- Use only a wireless network or Bluetooth device. Fujifilm does
 not accept liability for damages resulting from unauthorized use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other
 systems that may directly or indirectly impact human life.
 When using the device in computer and other systems that
 demand a greater degree of reliability than offered by wireless network or Bluetooth devices, be sure to take all necessary precautions to ensure safety and prevent malfunction.
- Use only in the country in which the device was purchased. This
 device conforms to regulations governing wireless network
 and Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the
 device. Fujifilm does not accept liability for problems arising from use in other jurisdictions.
- Do not use the device in locations subject to magnetic fields, static electricity, or radio interference. Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.

- The wireless transmitter operates in the 2.4 GHz band using DSSS, OFDM and GFSK modulation.
- Security: Wireless network and Bluetooth devices transmit data via radio and consequently their use requires greater attention to security than applies in the case of wired networks.
 - Do not connect to unknown networks or networks to which you do not have access rights, even if they are displayed on your device, as such access may be considered unauthorized. Connect only to networks to which you have access rights.
 - Be aware that wireless transmissions may be vulnerable to interception by third parties.

. The following may be punishable by law:

- Disassembly or modification or this device
- Removal of device certification labels
- This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters. It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in RFID tracking systems for assembly lines and in other similar applications.
- To prevent interference with the above devices, observe the following precautions. Confirm that the RFID transititer is not in operation before using this device. Should you observe that the device causes interference in licensed transmitters used for RFID tracking, immediately stop using the affected frequency or move the device to another location. If you notice that this device causes interference in low-voltage RFID tracing systems, contact a Fujifilm representative.
 - **<u>No not use this device on board an aircraft.</u>** Note that Bluetooth may remain on even when the camera is off. Bluetooth can be disabled by selecting **OFF** for **○ CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF.**

Be sure to read these notes before using the lens

Safety Notes

- Make sure that you use the lens correctly. Read these safety notes and the camera Owner's Manual carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



CAUTION

This icon indicates that death or serious injury can result if the information is ignored. This icon indicates that personal injury or material damage can result if the informa tion is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited"). Filled circles with an exclamation mark indicate an action that must be performed ("Required").



∕Ñ WARNING



Do not immerse in or expose to water. Failure to observe this precaution can cause a fire or electric shock.



Do not disassemble (do not open the case). Failure to observe this precaution can cause fire, electric shock, or injury due to product malfunction.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of nurchase for consultation



Do not place on unstable surfaces. The product may fall, causing injury.



Do not view the sun through the lens or camera viewfinders. Failure to observe this precaution can cause permanent visual impairment.

CAUTION



Do not use or store in locations that are exposed to steam, or smoke or are very humid or extremely dusty. Failure to observe this precaution can cause fire or electric shock.



Do not leave in direct sunliaht or in locations subject to very high temperatures, such as in a closed vehicle on a sunny day. Failure to observe this precaution car cause fire



Keep out of the reach of small children. This product could cause injury in the hands of a child.



Do not handle with wet hands. Failure to observe this precaution can cause electric shock



Keep the sun out of the frame when shooting backlit subjects. Sunlight focused into the camera when the sun is in or close to the frame can cause fire or burns



When the product is not in use, replace the lens caps and store out of direct sunlight. Sunlight focused by the lens can cause fire or burns.



Do not carry the camera or lens while they are attached to a tripod. The product can fall or strike other objects, causing injury.

Product Care

To ensure continued enjoyment of the product, observe the following precautions.

Camera body: Use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth. Use a blower to remove dust from the monitor, taking care to avoid scratches, and then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. To prevent dust entering the camera, replace the body cap when no lens is in place.

Image sensor: Multiple photographs marred by spots or blotches in identical locations may indicate the presence of dust on the image sensor. Dust can be removed from the image sensor using the SENSOR CLEANING option in the setup menu.

Cleaning the Image Sensor

Dust that cannot be removed using the **SENSOR CLEANING** option in the setup menu can be removed manually as described below.

- Note that there will be a charge to repair or replace the image sensor if it is damaged during cleaning.
 - 1 Use a blower (not a brush) to remove dust from the sensor.
 - Do not use a brush or blower brush. Failure to observe this precaution could damage the sensor.



- 2 Check whether the dust has been successfully removed. Repeat Steps 1 and 2 as necessary.
- 3 Replace the body cap or lens.

Firmware Updates

Updates to product firmware may result in changes not described in the manual. For more information, visit: http://www.fujifilm.com/support/digital_cameras/software

Checking the Firmware Version

- The camera will only display the firmware version if a memory card is inserted.
 - 1 Turn the camera off and check that a memory card is inserted.
 - 2 Turn the camera on while holding the DISP/BACK button. The current firmware version will be displayed; check the firmware version.
 - 3 Turn the camera off.
- To view the firmware version or update firmware for optional accessories such as interchangeable lenses, shoe-mounted flash units, and mount adapters, mount the accessories on the camera.

Troubleshooting

Consult the table below should you encounter problems using your camera. If you don't find the solution here, contact your local Fujifilm distributor.

Power and Battery

Problem	Solution
The camera does not turn on.	 The battery is exhausted: Charge the battery or insert a fully-charged spare battery (30). The battery is inserted incorrectly: Reinsert in the correct orientation (26). The battery-chamber cover is not latched: Latch the battery-chamber cover (26).
The monitor does not turn on.	The monitor may not turn on if the camera is turned off and then on again very quickly. Keep the shutter button pressed halfway until the monitor activates.
The battery runs down quickly.	 The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture. There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth. ON is selected for PRE-AF: Turn PRE-AF off (105). The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery.
The camera turns off	The battery is exhausted: Charge the battery or insert a ful-
suddenly.	ly-charged spare battery (🗐 30).
Charging does not start.	Reinsert the battery in the correct orientation and make sure that the AC Power Adapter is plugged in (26, 30).
Charging is slow.	Charge the battery at room temperature.

Problem	Solution
	• There is dirt on the battery terminals: Clean the terminals
The charging lamp	with a soft, dry cloth (🕮 26).
blinks, but the battery	• The battery has been charged many times: The battery has
does not charge.	reached the end of its charging life. Purchase a new bat-
does not charge.	tery. If the battery still fails to charge, contact your Fujifilm
	dealer (=== 190).

Menus and Displays

Problem	Solution
Display is not in English.	Select ENGLISH for 言語/LANG. () 37, 146).

Shooting

Problem	Solution
No picture is taken when the shutter button is pressed.	 The memory card is full: Insert a new memory card or delete pictures (□ 26, 136). The memory card is not formatted: Format the memory card (□ 161). There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth. The memory card is damaged: Insert a new memory card (□ 26). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (□ 30). The camera has turned off automatically: Turn the camera on (□ 33). You are using a third-party mount adapter: Select ON for SHOOT WITHOUT LENS (□ 119). The indicator lamp was orange when you attempted to record a panorama: Wait until the indicator lamps turns off (□ 60).
Mottling ("noise") appears in the monitor or viewfinder when the shutter button is pressed halfway.	Gain is increased to aid composition when the subject is poorly lit and aperture is stopped down, which may result in noticeable mottling when images are previewed in the displays. Images taken with the camera are unaffected.

The subject is not suited to autofocus: Use focus lock or manua focus (☐ 80). • The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions (☐ 104). • The subject's face occupies only a small area of the frame Change the composition so that the subject's face occupies a larger area of the frame (☐ 104). • The subject's head is tilted or horizontal: Ask the subject to hold their head straight (☐ 104). • The camera is tilted: Keep the camera level. • The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (☐ 80).
The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions (□□ 104). The subject's face occupies only a small area of the frame Change the composition so that the subject's face occupies a larger area of the frame (□□ 104). The subject's head is tilted or horizontal: Ask the subject to hold their head straight (□□ 104). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turr face detection off and frame the picture using focus lock(□□ 80).
other objects: Remove the obstructions (104). The subject's face occupies only a small area of the frame Change the composition so that the subject's face occupies a larger area of the frame (104). The subject's head is tilted or horizontal: Ask the subject to hold their head straight (104). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (104).
 The subject's face occupies only a small area of the frame Change the composition so that the subject's face occupies a larger area of the frame (====================================
Change the composition so that the subject's face occupies a larger area of the frame (104). The subject's head is tilted or horizontal: Ask the subject to hold their head straight (104). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (80).
pies a larger area of the frame (104). The subject's head is tilted or horizontal: Ask the subject to hold their head straight (104). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (80).
 The subject's head is tilted or horizontal: Ask the subject to hold their head straight (104). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (80).
hold their head straight (104). • The camera is tilted: Keep the camera level. • The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock (80).
 The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turr face detection off and frame the picture using focus lock (EE 80).
• The subject's face is poorly lit: Shoot in bright light. The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turr face detection off and frame the picture using focus lock (ES 80).
The selected subject is closer to the center of the frame than the main subject. Recompose the picture or turr face detection off and frame the picture using focus lock (E 80).
than the main subject. Recompose the picture or turn face detection off and frame the picture using focus lock () 80).
face detection off and frame the picture using focus lock () 80).
(■ 80).
- 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
The memory card write speed is too slow: Use a memory card
with a UHS speed class of 3 or better (📖 29, 46
94).
 The battery is exhausted: Charge the battery or insert a ful-
ly-charged spare battery (🕮 30).
 The camera is in bracketing or continuous mode: Select single
frame mode (🗐 89, 92).
 OFF is selected for SOUND & FLASH: Select ON
(1 47).
• The flash is lowered: Raise the flash (🗐 98).
 The subject is not in range of the flash: Position the subject in
range of the flash.
• The flash window is obstructed: Hold the camera correctly.
 Shutter speed is faster than the sync speed: Choose a slowe
shutter speed (🗐 54, 57, 218).
• The lens is dirty: Clean the lens (🗐 176).
 The lens is blocked: Keep objects away from the lens
(■ 40).
 !AF is displayed during shooting and the focus frame is dis
played in red: Check focus before shooting (🗐 41).

Problem	Solution
	• Shutter speed is slow and the ambient temperature is high: This
	is normal and does not indicate a malfunction.
Pictures are mottled.	• The camera has been used continuously at high temperatures or
	a temperature warning is displayed: Turn the camera off and
	wait for it to cool down (33, 215).

Playback

Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom is unavailable.	The pictures were created using RESIZE or with a different make or model of camera.
No sound in movie playback.	 Playback volume is too low: Adjust playback volume (148). The microphone was obstructed: Hold the camera correctly during recording. The speaker is obstructed: Hold the camera correctly during playback. OFF is selected for SOUND & FLASH: Select ON (147).
Selected pictures are not deleted.	Some of the pictures selected for deletion are protected. Remove protection using the device with which it was originally applied (1991).
File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (156).

Connections

Connections	
Problem	Solution
	The display mode selected with the VIEW MODE button is
Both the TV and camera	EVF ONLY + SENSOR : Put your eye to the viewfinder or use
monitor are blank.	the VIEW MODE button to choose another display mode
	(1 2).
The monitor is blank.	The camera is connected to a TV: Pictures will be displayed on
THE HIGHION IS DIGITA.	the TV instead of in the camera monitor (🗐 178).

Problem	Solution
	• The camera is not properly connected: Connect the camera
	properly (🗐 178).
No picture or sound	Input on the television is set to "TV": Set input to "HDMI"
on TV.	(🕮 178).
	• The volume on the TV is too low: Use the controls on the tele-
	vision to adjust the volume (🗐 178).
The computer does not	Be sure the camera and computer are correctly connected
recognize the camera.	(183).
Cannot transfer RAW or	Use MyFinePix Studio to transfer pictures (Windows only;
JPEG files to computer.	183).

Wireless Transfer

For additional information on troubleshooting wireless connections, visit: http://digital-cameras.support.fujifilm.com/app?pid=x

Problem	Solution
Problem	55120.511
	• The smartphone is too far away: Move the devices closer
Problem connecting or	(🗐 180).
uploading pictures to	• Nearby devices are causing radio interference: Move the cam-
smartphone.	era and smartphone away from microwave ovens or cord-
•	less phones (180).
	• The smartphone is connected to another device: The smart-
	phone and camera can connect to only one device at a
	time. End the connection and try again.
	• There are several smartphones in the vicinity: Try connecting
	again. The presence of multiple smartphones can make
	connection difficult.
Cannot upload images.	• The image was created on another device: The camera may
ammor aproau magasi	not be able to upload images created on other devices.
	• The image is a movie: Uploading movies takes some time.
	Movies intended for display on a smartphone or tablet
	1 / 1
	should be recorded at a frame size of 1280×720 (HD) or
	smaller. For information on viewing the pictures on the cam-
	era, visit: http://app.fujifilm-dsc.com/en/camera_remote/

Problem	Solution
	Select ON for RESIZE IMAGE FOR SMARTPHONE 311 .
Smartphone will not	Selecting OFF increases upload times for larger images; in
	addition, some phones may not display images over a certain size (160).

Miscellaneous

Problem	Solution
The camera is unresponsive.	 Temporary camera malfunction: Remove and reinsert the battery (26). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (20). The camera is connected to a wireless LAN: End the connection. The controls are locked: Press and hold the MENU/OK but-
The camera does not function as expected.	ton to unlock the controls (三 5). Remove and reinsert the battery (三 26). If the problem persists, contact your Fujifilm dealer.
No sound.	• Adjust the volume (148). • Select ON for SOUND & FLASH (147).
Time and date stamps.	 Time and date stamps are not correct: Set the camera clock (== 37, 146). Time and date stamps appear on photographs: Time and date stamps cannot be deleted. To prevent stamps appearing on new photographs, select OFF for SAVE DATA SET-UP > DATE STAMP (== 157).

Warning Messages and Displays

The following warnings appear in the display.

Warning	Description
(red)	Low battery. Charge the battery or insert a fully-charged
(leu)	spare battery.
(blinks red)	Battery exhausted. Charge the battery or insert a ful-
(billiks icu)	ly-charged spare battery.
!AF (displayed in red with	The camera cannot focus. Use focus lock to focus on an-
red focus frame)	other subject at the same distance, then recompose the
	picture.
Aperture or shutter	The subject is too bright or too dark and the picture will be
speed displayed in red	over- or under-exposed. Use the flash for additional light-
	ing when taking photographs of poorly-lit subject.
FOCUS ERROR	 Camera malfunction. Turn the camera off and then on
LENS CONTROL ERROR TURN OFF THE CAMERA	again. If the message persists, contact a Fujifilm dealer.
AND TURN ON AGAIN	agam. If the message persists, contact a rujillim dealer.
NO CARD	The shutter can only be released when a memory card is
NO CARD	inserted. Insert a memory card.
	The memory card is not formatted or the memory card has been
	formatted in a computer or other device : Format the memory
	card using 👪 FORMAT.
CARD NOT INITIALIZED	• The memory card contacts require cleaning: Clean the con-
	tacts with a soft, dry cloth. If the message is repeated,
	format the card. If the message persists, replace the card.
	Camera malfunction: Contact a Fujifilm dealer.
	Turn the camera off, remove the lens, and clean the mount-
LENS ERROR	ing surfaces, then replace the lens and turn the camera on.
	If the problem persists, contact a Fujifilm dealer.

Warning	Description
	• The memory card is not formatted for use in the camera: For-
	mat the card.
	 The memory card contacts require cleaning or the memory card
	is damaged: Clean the contacts with a soft, dry cloth. If the
CAND ENNON	message is repeated, format the card. If the message per-
sists, replace	sists, replace the card.
	 Incompatible memory card: Use a compatible card.
	Camera malfunction: Contact a Fujifilm dealer.
PROTECTED CARD	The memory card is locked. Unlock the card.
BUSY	The memory card is incorrectly formatted. Use the camera
DUST	to format the card.
	The memory card is full and pictures cannot be recorded.
MEMORY FULL	Delete pictures or insert a memory card with more free
	space.
	• Memory card error or connection error: Reinsert the card or
	turn the camera off and then on again. If the message
	persists, contact a Fujifilm dealer.
WRITE ERROR	 Not enough memory remaining to record additional pictures:
	Delete pictures or insert a memory card with more free
	space.
	• The memory card is not formatted: Format the memory card.
	The camera has run out of frame numbers (current frame
	number is 999-9999). Format the memory card and select
FRAME NO. FULL	RENEW for FRAME NO. . Take a picture to reset frame
	numbering to 100-0001, then select CONTINUOUS for
	FRAME NO.

⊇.
Ŭ.
<u>=</u>
ž
2
es es
•

Warning	Description
	• The file is corrupt or was not created with the camera: The file
	cannot be viewed.
DEAD EDDAD	• The memory card contacts require cleaning: Clean the con-
READ ERROR	tacts with a soft, dry cloth. If the message is repeated,
	format the card. If the message persists, replace the card.
	Camera malfunction: Contact a Fujifilm dealer.
PROTECTED FRAME	An attempt was made to delete or rotate to a protected pic-
PROTECTED FRANCE	ture. Remove protection and try again.
CAN NOT CROP	The picture is damaged or was not created with the camera.
	Print orders can contain no more than 999 pictures. Copy
DPOF FILE ERROR	any additional pictures you wish to print to another memo-
	ry card and create a second print order.
CAN NOT ROTATE	The selected picture cannot be rotated.
CAN NOT ROTATE	Movies cannot be rotated.
CAN NOT SET DPOF	The picture cannot be printed using DPOF.
CAN NOT SET DPOF	Movies cannot be printed using DPOF.
CANNOT EXECUTE	Red-eye removal cannot be applied to movies.
SE CANNOT EVECUTE	Red-eye removal cannot be applied to pictures created
≅ CANNOT EXECUTE	with other devices.
!#	Turn the camera off and wait for it to cool. Mottling may
••	increase in pictures taken when this warning is displayed.

Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

	Capa	acity	8	GB	16	GB
	±		FINE	NORMAL	FINE	NORMAL
Photos	L 3:2		660	1060	1330	2120
tos	RAW (UNCOMPRESSED)		18	30	37	70
×	4K 2160/15P		9 mii	nutes	20 mi	inutes
Movies	間 1080/59.94P, 50P, 24P, 23.98P		26 m	nutes	54 mi	inutes
1,2	110 720/59.94P, 50P, 24P, 23.98P		51 m	nutes	105 m	inutes

¹ Use a UHS speed class 3 card or better.

² Individual movies cannot exceed 30 minutes in length.



Although movie recording will continue without interruption when the file size reaches 4GB, subsequent footage will be recorded to a separate file which must be viewed separately.

Specifications

System	
Model	FUJIFILM X-T100
Product Number	FF180001
Effective pixels	Approx. 24.2 million
Image sensor	23.5 mm × 15.7 mm (APS-C format), CMOS (complementary
_	metal-oxide semiconductor) image sensor with square pixels
	and primary color filter
Storage media	Fujifilm-recommended SD/SDHC/SDXC memory cards
Memory card slots	SD memory card slot (UHS-1)
File system	Compliant with Design Rule for Camera File System (DCF),
·	Exif 2.3, and Digital Print Order Format (DPOF)
File format	• Still pictures: Exif 2.3 JPEG (compressed); RAW (original RAF for-
	mat, special purpose software required); RAW+JPEG available
	 Movies: H.264 standard with stereo sound (MOV)
Image size	3:2 (6000 × 4000) 16:9 (6000 × 3376) 1:1 (4000 × 4000)
	$M3:2 (4240 \times 2832)$ $M16:9 (4240 \times 2384)$ $M1:1 (2832 \times 2832)$
	S 3:2 (3008×2000) S 16:9 (3008×1688) S 1:1 (2000×2000)
	RAW (6000×4000)
	Panorama : vertical (2160 \times 9600)/horizontal (9600 \times 1440)
	M panorama: vertical (2160 \times 6400)/horizontal (6400 \times 1440)
Lens mount	FUJIFILM X mount
Sensitivity	• Still pictures: Standard output sensitivity equivalent to
	ISO 200-12800 in increments of 1/3 EV; AUTO; extended out-
	put sensitivity equivalent to ISO 100, 25600, or 51200
	• Movies: Standard output sensitivity equivalent to ISO 400-6400
	in increments of ⅓ EV; AUTO
Metering	256-segment through-the-lens (TTL) metering; MULTI, SPOT,
	AVERAGE
Exposure control	Programmed AE (with program shift); shutter-priority AE;
	aperture-priority AE; manual exposure
Exposure compensatio	n • Still pictures: −5 EV−+5 EV in increments of ⅓ EV
	 Movies: −2 EV−+2 EV in increments of ⅓ EV

System					
Shutter speed	 Mechanica 	al shutter			
	- Mode P: 4 s to 1/4000 s				
	- Other modes: 30 s to 1/4000 s				
	- Bulb: Ma	ax. 60 min.			
	 Electronic 	shutter			
	- Mode P:	4 s to 1/16000 s			
	- Mode A:	30 s to 1/16000 s			
	- Mode S/	M : 30 s to 1/32000 s			
	 Mechanica 	al+electronic			
	- Mode P:	4 s to 1/16000 s			
	- Mode A: 30 s to ⅓6000 s				
	- Mode S/	M : 30 s to 1/32000 s			
	- Bulb: Ma	ax. 60 min.			
Continuous	Mode	Frame rate (fps)	Frames per burst		
	₽ª	6.0	Up to approximately 20		
	و	3.0	Up to approximately 50		
	the fram	number of images e rate and numbe	th shooting conditions and recorded. In addition, the r of frames per burst may type of memory card used.		
Focus	• Mode: Sin AF+MF	gle or continuous AF	; manual focus with focus ring		
	• Focus-area selection: SINGLE POINT, ZONE, WIDE/TRACKING,				
	ALL				
	• Autofocus system: Intelligent hybrid AF (TTL contrast-detect/				
	phase-detection AF) with AF-assist illuminator				
White balance	Custom, co	olor temperature sele	ction, auto, direct sunlight,		
	shade, day	light fluorescent, war	m white fluorescent, cool		
	white fluor	escent, incandescent	, underwater		
Self-timer			itter, Smile, Buddy, Group		
Flash	• Type: Mar	nual pop-up flash uni	t		
	 Guide nur 	nber: Approx. 7/23 (I	SO 200, m/ft.), 5/16 (ISO 100		
	/C. \				

m/ft.)

System	
Flash mode	Auto, fill flash, off, slow sync, rear-curtain sync, commander (red-eye removal off); auto with red-eye removal, fill flash with red-eye removal, off, slow sync with red-eye removal, rear-curtain sync with red-eye removal, commander (red-eye removal on)
Hot shoe	Accessory shoe with TTL contacts
Sync contact	X contact; supports sync speeds as fast as 1/180 s
Sync terminal	-
Viewfinder	0.39-in., 2,360k-dot color OLED viewfinder with diopte adjustment (–4 to +2 m ⁻¹); magnification 0.62× with 50 mm lens (35 mm format equivalent) at infinity and diopter se to –1.0 m ⁻¹ ; diagonal angle of view approximately 30.0 (horizontal angle of view approximately 25.0°); eye poin approx. 17.5 mm
LCD monitor	Fixed 3.0-in/7.6 cm, 1040k-dot color touch screen LCD monitor, tilting
Movies	● Movies with stereo sound ALC 2160/15P 簡 1080/59.94P
	 Silent HD high-speed movies
	1.6× ▶ 59.94P № 100P
	2× ▶ 50P № 100P
	3.3× ≥29.97P 2 100P 4× ≥25P 2 100P
Input/output ter	minals

Input/output termin	nals
Digital input/output	USB 2.0 High-Speed
	Micro USB connector (Micro-B)
HDMI output	HDMI Micro connector (Type D)
Microphone/remote	ø2.5 mm 3-pole mini jack
release connector	

Power supply/other	
Power supply	NP-W126S rechargeable battery
Camera size	121.0 mm \times 83.0 mm \times 47.4 mm (33.4 mm excluding projections,
$(W \times H \times D)$	measured at thinnest part)/4.8 in. \times 3.3 in. \times 1.9 in. (1.3 in.)
Camera weight	Approx. 399 g/14.1 oz., excluding battery, accessories, and
	memory card
Shooting weight	Approx. 448 g/15.8 oz., including battery and memory card
Operating conditions	• Temperature : 0 °C to +40 °C/+32 °F to +104 °F
	• Humidity: 10% to 80% (no condensation)
Battery life	• Battery type: NP-W126S (type supplied with camera) (approximate
	number of frames that can be taken with a fully-charged battery and
	XF35 mm f/1.4 R lens)

Approximate number of frames

430

Mode	Actual Battery life of movie capture	Continuance Battery life of movie capture
4K	Approx. 90 minutes	Approx. 150 minutes
HD	Approx. 100 minutes	Approx. 170 minutes

CIPA standard, measured using battery supplied with camera and SD memory card.

Note: Number of shots that can be taken with battery varies with battery charge level and will decline at low temperatures.

Vireless transmitter		
Vireless LAN		
Standards	IEEE 802.11b/g/n (standard wireless protocol)	
Operating frequency	• Japan, China: 2,412 MHz–2,472 MHz (13 channels)	
(center frequency)	• Other countries: 2,412 MHz–2,462 MHz (11 channels)	
Maximum radio-	-0.06 dBm	
frequency power (EIRP)		
Access protocols	Infrastructure	
Bluetooth®		
Standards	Bluetooth version 4.1 (Bluetooth Low Energy)	
Operating frequency	2,402 MHz-2,480 MHz	
(center frequency)		
Maximum radio-	-1.06 dBm	
frequency power (EIRP)		

12

NP-W126S rechargeable battery	
Nominal voltage	7.2 V DC
Nominal capacity	1,260 mAh
Operating	0 °C to +40 °C/+32 °F to +104 °F
temperature	
Dimensions	36.4 mm × 47.1 mm × 15.7 mm/1.4 in. × 1.8 in. × 0.6 in.
$(W \times H \times D)$	
Weight	Approx. 47 g/1.7 oz.

AC-5VG AC power adapter	
Rated input	100 V – 240 V AC, 50/60 Hz
Input capacity	10.5 VA (100 V), 11.9 VA (240 V)
Rated output	5.0 V DC, 1000 mA
Operating	0 °C to +40 °C/+32 °F to +104 °F
temperature	
Weight	Approx. 26 g \pm 15%/0.9 oz. \pm 15% (AC power adapter only)

Weight and dimensions vary with the country or region of sale. Labels, menus, and other displays may differ from those on the actual camera.



Specifications and performance are subject to change without notice. Fujifilm will not be held liable for any errors this manual may contain. The appearance of the product may differ from that described in this manual.

MEMO

MEMO

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital_cameras/index.html











