

FUJIFILM



FF210005 Owner's Manual



Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the camera. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:

http://fujifilm-dsc.com/en/manual/



The site can be accessed not only from your computer but also from smartphones and tablets. It also contains information on the software license.





For information on firmware updates, visit: https://fujifilm-x.com/support/download/firmware/cameras/

Chapter Index

Menu List	iv
1 Before You Begin	1
2 First Steps	27
3 Basic Photography and Playback	41
4 Movie Recording and Playback	47
5 Taking Photographs	53
6 The Shooting Menus	103
7 Playback and the Playback Menu	183
8 The Setup Menus	209
9 Shortcuts	245
10 Peripherals and Optional Accessories	261
11 Connections	279
12 Technical Notes	295

iii



Camera menu options are listed below.

Shooting Menus

Adjust settings when shooting photos or movies.



See page 103 for details.

Photo Menus

Name of the still literal strain of the stra photography and movie shooting menus. Changes to these items in either menu also apply to the item in the remaining menu.

I.Q.	IMAGE QUALITY SETTING	
	IMAGE SIZE	104
	IMAGE QUALITY	105
	RAW RECORDING	106
1/3	FILM SIMULATION	106
I/3	MONOCHROMATIC COLOR	108
	GRAIN EFFECT	108
	COLOR CHROME EFFECT	108
	COLOR CHROME FX BLUE	109
	WHITE BALANCE	109
	DYNAMIC RANGE	113
	D RANGE PRIORITY	114
2 /3	TONE CURVE	114
4 3	COLOR	115
	SHARPNESS	115
	HIGH ISO NR	115
	CLARITY	116
	LONG EXPOSURE NR	116
	LENS MODULATION OPTIMIZER	116
	COLOR SPACE	117
3 /3	PIXEL MAPPING	117
	SELECT CUSTOM SETTING	118
	EDIT/SAVE CUSTOM SETTING	118
	AUTO UPDATE CUSTOM SETTING	122
	MOUNT ADAPTOR SETTING	123

AF MF	AF/MF SETTING	
	FOCUS AREA	126
	AF MODE	126
	AF-C CUSTOM SETTINGS	127
1/4	STORE AF MODE BY ORIENTATION	131
1/3	AF POINT DISPLAY [1]	131
	NUMBER OF FOCUS POINTS	131
	PRE-AF	132
	AF ILLUMINATOR	132
	FACE/EYE DETECTION SETTING	133
	AF+MF	135
	MF ASSIST	136
2 / ₃	FOCUS CHECK	136
2 /3	INTERLOCK SPOT AE & FOCUS AREA	137
	INSTANT AF SETTING	137
	□ □ DEPTH-OF-FIELD SCALE	137
3 /3	RELEASE/FOCUS PRIORITY	138
	AF RANGE LIMITER	138
	★ TOUCH SCREEN MODE	139

ů	SHOOTING SETTING	
	SCENE POSITION	141
	DRIVE SETTING	141
	HDR	142
1/4	SPORTS FINDER MODE	144
1/2	PRE-SHOT ES 🔁	144
	SELF-TIMER	145
	SAVE SELF-TIMER SETTING	145
	SELF-TIMER LAMP	146
	INTERVAL TIMER SHOOTING	146
	INTERVAL TIMER SHOOTING EXPOSURE SMOOTHING	147
	PHOTOMETRY	147
2/2	SHUTTER TYPE	148
	FLICKER REDUCTION	149
	IS MODE	150
	ISO	150
	📇 😂 WIRELESS COMMUNICATION	151

₹ FLASH SETTING	
FLASH FUNCTION SETTING	152
RED EYE REMOVAL	152
TTL-LOCK MODE	153
LED LIGHT SETTING	153
COMMANDER SETTING	154
CH SETTING	154
™ MOVIE SETTING	
MOVIE SETTING MOVIE MODE	155
MOVIE MODE	155
MOVIE MODE FILE FORMAT	155 155
MOVIE MODE FILE FORMAT FULL HD HIGH SPEED REC	155 155 155

Movie Menus



Name of the still literal marked with both the still literal marked with literal marked with both the still literal marked with literal photography and movie shooting menus. Changes to these items in either menu also apply to the item in the remaining menu.

œ	MOVIE SETTING	
	MOVIE MODE	158
	FILE FORMAT	159
	FULL HD HIGH SPEED REC	160
1/3	FIX MOVIE CROP MAGNIFICATION	161
1/3	F-Log RECORDING	161
	4K MOVIE OUTPUT	162
	FULL HD MOVIE OUTPUT	162
	HDMI OUTPUT INFO DISPLAY	163
	4K HDMI STANDBY QUALITY	163
	HDMI REC CONTROL	163
	₽ PHOTOMETRY	163
2/3	🚅 IS MODE	164
2/3	S ISO	164
	ZEBRA SETTING	165
	ZEBRA LEVEL	165
	MOVIE OPTIMIZED CONTROL 👄 🖢	165
3/3	TALLY LIGHT	166
J /3		166

I.Q.	IMAGE QUALITY SETTING	
	FILM SIMULATION	167
	MONOCHROMATIC COLOR	167
	₩ WHITE BALANCE	167
1/2	₽ DYNAMIC RANGE	168
V2	TONE CURVE	168
	COLOR	168
	SHARPNESS	169
	😭 HIGH ISO NR	169
2 /2	4K INTERFRAME NR	169
	PERIPHERAL LIGHT CORRECTION	170
	MOUNT ADAPTOR SETTING	170

182

182

AF MF	AF/MF SETTING	
	FOCUS AREA	171
	⇔ AF MODE	171
	AF-C CUSTOM SETTING	172
1/2	♣ AF ILLUMINATOR	172
V2	₽ FACE/EYE DETECTION SETTING	173
	MF ASSIST	173
	₽ FOCUS CHECK	174
		174
		174
2 /2	AF RANGE LIMITER	174
	TOUCH SCREEN MODE	175
	FOCUS CHECK LOCK	177

AUDIO SETTING	
INTERNAL MIC LEVEL ADJUSTMENT	178
EXTERNAL MIC LEVEL ADJUSTMENT	178
MIC JACK SETTING	179
MIC LEVEL LIMITER	179
WIND FILTER	179
LOW CUT FILTER	179
HEADPHONES VOLUME	179
MIC/REMOTE RELEASE	180
TIME CODE SETTING	
TIME CODE DISPLAY	181
START TIME SETTING	181
COUNT UP SETTING	181

DROP FRAME

HDMI TIME CODE OUTPUT

The Playback Menu

Adjust playback settings.



See page 189 for details.

Þ	PLAY BACK MENU	
	RAW CONVERSION	189
	ERASE	192
	CROP	194
1/3	RESIZE	195
V3	PROTECT	196
	IMAGE ROTATE	197
	RED EYE REMOVAL	198
	VOICE MEMO SETTING	199

Þ	PLAY BACK MENU	
	RATING	200
	IMAGE TRANSFER ORDER	201
	★ WIRELESS COMMUNICATION	202
2 /3		202
	PHOTOBOOK ASSIST	203
	PC AUTO SAVE	204
	PRINT ORDER (DPOF)	205
	instax PRINTER PRINT	206
3/3	DISP ASPECT	207

Setup Menus

Adjust basic camera settings.



See page 209 for details.

۶	USER SETTING	
	FORMAT	210
	DATE/TIME	211
	TIME DIFFERENCE	211
1/2	■ 言語/LANG.	212
I/2	MY MENU SETTING	212
	MY MENU SETTING	212
	SENSOR CLEANING	213
	SOUND & FLASH	213
2/2	RESET	214
42	REGULATORY	214
عر	SOUND SETTING	
A	F BEEP VOL.	215
S	ELF-TIMER BEEP VOL.	215
0	PERATION VOL.	216
S	HUTTER VOLUME	216
S	HUTTER SOUND	216
P	LAYBACK VOLUME	216

۶	SCREEN SETTING	
1 ⁄3	VIEW MODE SETTING	217
	EVF BRIGHTNESS	217
	EVF COLOR	217
	EVF COLOR ADJUSTMENT	218
	LCD BRIGHTNESS	218
	LCD COLOR	218
	LCD COLOR ADJUSTMENT	218
	IMAGE DISP.	219
	AUTOROTATE DISPLAYS	219
	PREVIEW EXP./WB IN MANUAL MODE	220
	NATURAL LIVE VIEW	220
2/3	F-Log VIEW ASSIST	221
2 /3	FRAMING GUIDELINE	221
	AUTOROTATE PB	222
	FOCUS SCALE UNITS	222
	APERTURE UNIT FOR CINEMA LENS	222
	DISP. CUSTOM SETTING	222
	LARGE INDICATORS MODE(EVF)	223
3 /3	LARGE INDICATORS MODE(LCD)	223
	LARGE INDICATORS DISP. SETTING	224
	INFORMATION CONTRAST ADJ.	224
	🗖 Q MENU BACKGROUND	225
	🕰 Q MENU BACKGROUND	225

۶	BUTTON/DIAL SETTING	
	FOCUS LEVER SETTING	226
	EDIT/SAVE QUICK MENU	227
	₽ EDIT/SAVE QUICK MENU	227
4/	FUNCTION (Fn) SETTING	227
1/2	COMMAND DIAL SETTING	228
	SHUTTER AF	229
	SHUTTER AE	229
	SHOOT WITHOUT LENS	230
	SHOOT WITHOUT CARD	230
	FOCUS RING	230
	FOCUS RING OPERATION	230
2/2	AE/AF-LOCK MODE	231
4/2	AWB-LOCK MODE	231
	APERTURE RING SETTING (A)	231
	APERTURE SETTING	232
	TOUCH SCREEN SETTING	232
۶	POWER MANAGEMENT	
A	UTO POWER OFF	234
P	ERFORMANCE	235
В	OOST SETTING	235
۶	SAVE DATA SETTING	
F	RAME NO.	236
S	AVE ORG IMAGE	237
E	DIT FILE NAME	237
S	ELECT FOLDER	238
C	OPYRIGHT INFO	238

☑ CONNECTION SETTING	
Bluetooth SETTINGS	239
PC AUTO SAVE	240
instax PRINTER CONNECTION SETTING	241
CONNECTION MODE	242
USB POWER SUPPLY SETTING	243
GENERAL SETTINGS	244
INFORMATION	244
RESET WIRELESS SETTING	244

Table of Contents Introduction For the Latest Informationii Menu List..... Shooting Menus.....iv The Playback Menuviii Setup Menusix Supplied Accessoriesxxiii About This Manualxxiv Symbols and Conventions.....xxiv Terminology.....xxiv **Before You Begin** The Focus Stick (Focus Lever)......4 The Shutter Speed Dial The Drive Dial.....5 The Exposure Compensation Dial.....5 The Auto Mode Selector Lever.......6 The Indicator Lamp......8 The LCD Monitor.....9 Focusing the Viewfinder.....9 Camera Displays......10 The Flectronic Viewfinder......10 The LCD Monitor......12 Adjusting Display Brightness......14 Display Rotation14 Choosing a Display Mode14 The DISP/BACK Button......16 Customizing the Standard Display......17 Using the Menus......19 The Menus19

Selecting a Menu Tab......20

	Touch Screen Mode	21
2	First Steps	27
	Attaching the Strap	28
	Attaching a Lens	29
	Inserting the Battery and a Memory Card	
	Compatible Memory Cards	
	Charging the Battery	
	Turning the Camera On and Off	
	Checking the Battery Level	
	Basic Setup	
	Choosing a Different Language	
	Changing the Time and Date	.39
3	Basic Photography and Playback	41
	Taking Photographs	42
	Viewing Pictures	
	Deleting Pictures	
4	Movie Recording and Playback	47
4	Movie Recording and Playback Recording Movies	47 48
	Movie Recording and Playback Recording Movies	47 48
	Movie Recording and Playback Recording Movies	47 48
	Movie Recording and Playback Recording Movies	47 48
5	Movie Recording and Playback Recording Movies Adjusting Movie Settings Viewing Movies Taking Photographs	47 48 50 51
5	Movie Recording and Playback Recording Movies	47 48 50 51 53
5	Movie Recording and Playback Recording Movies Adjusting Movie Settings Viewing Movies Taking Photographs Choosing a Shooting Mode	47 48 50 51 53 54
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 54 56
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59 60 61
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59 60 61 64
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59 60 61 64 65
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59 60 61 64 65 67
5	Movie Recording and Playback Recording Movies	47 48 50 51 53 54 56 59 60 61 64 65 67

Manual Focus	73
Checking Focus	75
Exposure Compensation	77
C (Custom)	78
Sensitivity	79
AUTO	80
Metering	
Focus/Exposure Lock	82
Other Controls	83
Bracketing	84
🖶 AE BKT	85
ISO BKT	
FILM SIMULATION BKT	
WBJ WHITE BALANCE BKT	
DRI DYNAMIC RANGE BKT	86
FOCUS BKT	
Continuous Shooting (Burst Mode)	89
Panoramas	91
Multiple Exposures	
Advanced Filters	
Advanced Filter Options	97
Flash Photography	98
Flash Settings	100
7 The Shooting Menus	103
IMAGE QUALITY SETTING (Still Photography)	104
IMAGE SIZE	104
IMAGE QUALITY	105
RAW RECORDING	106
FILM SIMULATION	106
MONOCHROMATIC COLOR	108
GRAIN EFFECT	
COLOR CHROME EFFECT	108
COLOR CHROME FX BLUE	109
WHITE BALANCE	109

	DYNAMIC RANGE	1	13
	D RANGE PRIORITY	1	14
	TONE CURVE	1	14
	COLOR	1	15
	SHARPNESS	1	15
	HIGH ISO NR	1	15
	CLARITY		
	LONG EXPOSURE NR		
	LENS MODULATION OPTIMIZER	1	16
	COLOR SPACE	1	17
	PIXEL MAPPING		
	SELECT CUSTOM SETTING		
	EDIT/SAVE CUSTOM SETTING		
	AUTO UPDATE CUSTOM SETTING		
	MOUNT ADAPTOR SETTING	1.	23
٩F	F/MF SETTING (Still Photography)		
	FOCUS AREA	1.	26
	AF MODE		
	AF-C CUSTOM SETTINGS	1.	27
	STORE AF MODE BY ORIENTATION		
	AF POINT DISPLAY [1]		
	NUMBER OF FOCUS POINTS	1.	31
	PRE-AF		
	▲ AF ILLUMINATOR		
	FACE/EYE DETECTION SETTING		
	AF+MF		
	MF ASSIST		
	FOCUS CHECK		
	INTERLOCK SPOT AE & FOCUS AREA		
	Ď № DEPTH-OF-FIELD SCALE		
	RELEASE/FOCUS PRIORITY		
	▲ AF RANGE LIMITER		
	↑ COUCH SCREEN MODE	13	39

SHOOTING SETTING (Still Photography)	141
SCENE POSITION	
DRIVE SETTING	141
HDR	142
SPORTS FINDER MODE	
PRE-SHOT ES 🕰	144
SELF-TIMER	
SAVE SELF-TIMER SETTING	145
SELF-TIMER LAMP	
INTERVAL TIMER SHOOTING	
INTERVAL TIMER SHOOTING EXPOSURE SMOOTHING	147
PHOTOMETRY	147
SHUTTER TYPE	148
FLICKER REDUCTION	149
IS MODE	150
ISO	
★ WIRELESS COMMUNICATION	151
FLASH SETTING (Still Photography)	
FLASH FUNCTION SETTING	152
RED EYE REMOVAL	
TTL-LOCK MODE	153
LED LIGHT SETTING	
COMMANDER SETTING	154
CH SETTING	
MOVIE SETTING (Still Photography)	155
MOVIE MODE	
FILE FORMAT	
FULL HD HIGH SPEED REC	
IS MODE	
AUDIO SETTING	
MIC/REMOTE RELEASE	
MOVIE SETTING (Movie Recording)	158
MOVIE MODE	
FILE FORMAT	
FULL HD HIGH SPEED REC	160

FIX MOVIE CROP MAGNIFICATION	161
F-Log RECORDING	
4K MOVIE OUTPUT	162
FULL HD MOVIE OUTPUT	162
HDMI OUTPUT INFO DISPLAY	163
4K HDMI STANDBY QUALITY	163
HDMI REC CONTROL	163
PHOTOMETRY	163
S MODE	164
₽ ISO	164
ZEBRA SETTING	165
ZEBRA LEVEL	
MOVIE OPTIMIZED CONTROL	165
TALLY LIGHT	
★ WIRELESS COMMUNICATION	
IMAGE QUALITY SETTING (Movie Recording)	
₽ FILM SIMULATION	
MONOCHROMATIC COLOR	167
₩ WHITE BALANCE	
₽ DYNAMIC RANGE	
₽ TONE CURVE	168
₽ COLOR	168
SHARPNESS	
₽ HIGH ISO NR	169
4K INTERFRAME NR	
₽ PERIPHERAL LIGHT CORRECTION	
MOUNT ADAPTOR SETTING	
AF/MF SETTING (Movie Recording)	
₽ FOCUS AREA	
₽ AF MODE	
♣ AF-C CUSTOM SETTING	
♣ AF ILLUMINATOR	
₽ FACE/EYE DETECTION SETTING	
MF ASSIST	
FOCUS CHECK	174

	174
□ M DEPTH-OF-FIELD SCALE	174
▲ AF RANGE LIMITER	174
☐ ★ TOUCH SCREEN MODE	175
FOCUS CHECK LOCK	177
AUDIO SETTING (Movie Recording)	
INTERNAL MIC LEVEL ADJUSTMENT	
EXTERNAL MIC LEVEL ADJUSTMENT	178
MIC JACK SETTING	179
MIC LEVEL LIMITER	179
WIND FILTER	179
LOW CUT FILTER	
HEADPHONES VOLUME	179
MIC/REMOTE RELEASE	180
TIME CODE SETTING (Movie Recording)	181
TIME CODE DISPLAY	181
START TIME SETTING	
COUNT UP SETTING	
DROP FRAME	
HDMI TIME CODE OUTPUT	182
	183
Tiayback and the Flayback mena	103
The Playback Display	
The DISP/BACK Button	
Viewing Pictures	
Playback Zoom	
Multi-Frame Playback	
The Playback Menu	
RAW CONVERSION	
ERASE	
CROP	
RESIZE	
PROTECT	
IMAGE ROTATE	
RED EYE REMOVAL	198

VOICE MEMO SETTING	199
RATING	
IMAGE TRANSFER ORDER	
★ WIRELESS COMMUNICATION	
SLIDE SHOW	202
PHOTOBOOK ASSIST	203
PC AUTO SAVE	
PRINT ORDER (DPOF)	
instax PRINTER PRINT	
DISP ASPECT	207
The Setup Menus	209
USER SETTING	
FORMAT	
DATE/TIME	211
TIME DIFFERENCE	211
■ 言語/LANG	212
MY MENU SETTING	212
MY MENU SETTING	212
SENSOR CLEANING	213
SOUND & FLASH	213
RESET	
REGULATORY	
SOUND SETTING	215
AF BEEP VOL	
SELF-TIMER BEEP VOL	
OPERATION VOL	
SHUTTER VOLUME	
SHUTTER SOUND	
PLAYBACK VOLUME	
SCREEN SETTING	
VIEW MODE SETTING	
EVF BRIGHTNESS	
EVF COLOR	
EVF COLOR ADJUSTMENT	218

LCD BRIGHTNESS	218
LCD COLOR	218
LCD COLOR ADJUSTMENT	218
IMAGE DISP	219
AUTOROTATE DISPLAYS	219
PREVIEW EXP./WB IN MANUAL MODE	
NATURAL LIVE VIEW	220
F-Log VIEW ASSIST	221
FRAMING GUIDELINE	221
AUTOROTATE PB	222
FOCUS SCALE UNITS	222
APERTURE UNIT FOR CINEMA LENS	222
DISP. CUSTOM SETTING	222
LARGE INDICATORS MODE(EVF)	223
LARGE INDICATORS MODE(LCD)	
LARGE INDICATORS DISP. SETTING	224
INFORMATION CONTRAST ADJ	224
🗖 Q MENU BACKGROUND	225
₽ Q MENU BACKGROUND	225
BUTTON/DIAL SETTING	226
FOCUS LEVER SETTING	226
₫ EDIT/SAVE QUICK MENU	227
	227
FUNCTION (Fn) SETTING	227
COMMAND DIAL SETTING	228
SHUTTER AF	229
SHUTTER AE	229
SHOOT WITHOUT LENS	230
SHOOT WITHOUT CARD	230
FOCUS RING	
FOCUS RING OPERATION	230
AE/AF-LOCK MODE	
AWB-LOCK MODE	
APERTURE RING SETTING (A)	231
APERTURE SETTING	232
TOUCH SCREEN SETTING	232

AUTO POWER OFF	POWER MANAGEMENT	234
BOOST SETTING 235 SAVE DATA SETTING 236 FRAME NO 236 SAVE ORG IMAGE 237 EDIT FILE NAME 237 SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 Instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 243 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 244 MY MENU 245 MY MENU SETTING 245 The Quick Menu 246 The Quick Menu 247 Viewing and Changing Settings 255 Editing the Quick Menu 255 Function Controls 255 The Function Buttons 255	AUTO POWER OFF	234
SAVE DATA SETTING 236 FRAME NO. 236 SAVE ORG IMAGE 237 EDIT FILE NAME 237 SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 243 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 244 MY MENU 245 MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu 249 Viewing and Changing Settings 250 Editing the Quick Menu 255 Function Controls 255 The Function Buttons 255	PERFORMANCE	235
FRAME NO. 236 SAVE ORG IMAGE 237 EDIT FILE NAME 237 SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 244 INFORMATION 244 INFORMATION 244 RESET WIRELESS SETTING 244 MY MENU 245 MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu 249 Viewing and Changing Settings 250 Editing the Quick Menu 255 Function Controls 255 The Function Buttons 255	BOOST SETTING	235
SAVE ORG IMAGE 237 EDIT FILE NAME 238 SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 Instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 243 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 245 Shortcut Options 246 MY MENU 247 MY MENU 247 The Quick Menu 249 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	SAVE DATA SETTING	236
EDIT FILE NAME 237 SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 244 INFORMATION 244 INFORMATION 244 RESET WIRELESS SETTING 245 Shortcuts 245 Shortcut Options 246 MY MENU 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	FRAME NO	236
SELECT FOLDER 238 COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 242 INFORMATION 244 RESET WIRELESS SETTING 244 Shortcuts 245 Shortcut Options 246 MY MENU 247 MY MENU 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	SAVE ORG IMAGE	237
COPYRIGHT INFO 238 CONNECTION SETTING 239 Bluetooth SETTINGS 239 PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 243 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 245 Shortcut 246 MY MENU 247 MY MENU 247 The Quick Menu 245 The Quick Menu 245 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	EDIT FILE NAME	237
CONNECTION SETTING	SELECT FOLDER	238
Bluetooth SETTINGS		
PC AUTO SAVE 240 instax PRINTER CONNECTION SETTING 241 CONNECTION MODE 242 USB POWER SUPPLY SETTING 243 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 245 Shortcut Options 246 MY MENU 247 MY MENU 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	CONNECTION SETTING	239
instax PRINTER CONNECTION SETTING 24 CONNECTION MODE 242 USB POWER SUPPLY SETTING 245 GENERAL SETTINGS 244 INFORMATION 244 RESET WIRELESS SETTING 245 Shortcut Options 246 MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 255	Bluetooth SETTINGS	239
CONNECTION MODE USB POWER SUPPLY SETTING GENERAL SETTINGS. INFORMATION. 244 RESET WIRELESS SETTING. 245 Shortcut Options. 246 MY MENU. 247 MY MENU. 247 The Quick Menu. 249 The Quick Menu Display. Viewing and Changing Settings. 249 Function Controls. 250 The Function Buttons. 250		
USB POWER SUPPLY SETTING		
GENERAL SETTINGS		
INFORMATION	USB POWER SUPPLY SETTING	243
RESET WIRELESS SETTING. 244 9 Shortcuts 245 Shortcut Options 246 MY MENU 247 MY MENU SETTING. 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 255 Editing the Quick Menu 255 Function Controls 255 The Function Buttons 255	GENERAL SETTINGS	244
9 Shortcuts 245 Shortcut Options .246 MY MENU .247 MY MENU SETTING .247 The Quick Menu .249 The Quick Menu Display .249 Viewing and Changing Settings .252 Editing the Quick Menu .252 Function Controls .253 The Function Buttons .253		
Shortcut Options 246 MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 250 Editing the Quick Menu 250 Function Controls 250 The Function Buttons 250	RESET WIRELESS SETTING	244
MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 253 The Function Buttons 253	9 Shortcuts	245
MY MENU 247 MY MENU SETTING 247 The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 253 The Function Buttons 253	Shortcut Options	246
The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 259		
The Quick Menu 249 The Quick Menu Display 249 Viewing and Changing Settings 257 Editing the Quick Menu 252 Function Controls 255 The Function Buttons 259	MY MENU SETTING	247
Viewing and Changing Settings		
Editing the Quick Menu	The Quick Menu Display	249
Function Controls255 The Function Buttons	Viewing and Changing Settings	251
The Function Buttons255	Editing the Quick Menu	252
	Function Controls	255
Touch-Function Gestures258	The Function Buttons	255
	Touch-Function Gestures	258

1 (Peripherals and Optional Accessories	261
Lenses	262
Lens Parts	262
Removing Lens Caps	263
Attaching Lens Hoods	263
Lenses with Aperture Rings	
Lenses with No Aperture Rings	
Lenses with O.I.S. Switches	265
Manual Focus Lenses	
Lens Care	
External Flash Units	
Using an External Flash	
SYNC TERMINAL	
SHOE MOUNT FLASH	
COMMANDER(OPTICAL)	274
11 Connections	279
HDMI Output	
Connecting to HDMI Devices	
Shooting	
Playback	
Wireless Connections (Bluetooth®, Wireless LAN/Wi-Fi)	
Smartphones and Tablets: FUJIFILM Camera Remote	
Copying Pictures to a Computer: PC AutoSave	
Connecting via USB	
Connecting to Computers	
Copying Pictures from a Memory Card to a Computer	
Using Your Camera as a Webcam (FUJIFILM X Webcam)	
Tethered Movie Recording	
Converting RAW Images (FUJIFILM X RAW STUDIO)	289
Backing up and Restoring Camera Settings	200
(FUJIFILM X Acquire)	
Connecting to Smartphones	
instax SHARE Printers	
Establishing a Connection	
Printing Pictures	294

2 Technical Notes	295
Accessories from Fujifilm	296
Software for Use with Your Camera	298
FUJIFILM Camera Remote	298
FUJIFILM PC AutoSave	298
RAW FILE CONVERTER EX powered by SILKYPIX	298
Capture One Express Fujifilm	298
Capture One Pro Fujifilm	299
FUJIFILM X Acquire	299
FUJIFILM X RAW STUDIO	299
FUJIFILM X Webcam	299
For Your Safety	300
Product Care	
Cleaning the Image Sensor	312
Firmware Updates	313
Checking the Firmware Version	313
Troubleshooting	314
Warning Messages and Displays	323
Memory Card Capacity	327
Specifications	328

Supplied Accessories

The following are included with the camera:

- NP-W126S rechargeable battery
- Body cap (comes attached to camera)
- USB cable (approx. 0.6 m/2 ft.)
- Shoulder strap
- Basic Manual
- ① The battery is not charged at shipment. Charge the battery before use (■ 33).
- If you purchased a lens kit, check that a lens is included.
 - For information on compatible computer software, see "Software for Use with Your Camera" (🗎 298).

About This Manual

This manual contains instructions for your FUJIFILM X-T30 II digital camera. Be sure you have read and understood its contents before proceeding.

Symbols and Conventions

The following symbols are used in this manual:



Information that should be read to prevent damage to the product.



Additional information that may be helpful when using the product.



Pages on which related information may be found.

Menus and other text in the displays are shown in **bold**. Illustrations are for explanatory purposes only; drawings may be simplified, while photographs are not necessarily taken with the model of camera described in this manual.


Terminology

The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as "memory cards". The electronic viewfinder may be referred to as the "EVF" and the LCD monitor as the "LCD". Smartphones and tablets are referred to as "smartphones".




Parts of the Camera

The parts of the camera are listed below.

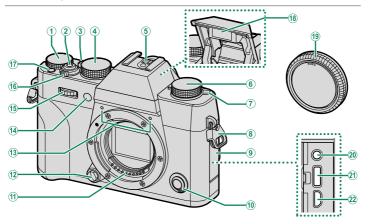

Exposure compensation dial5, 77	13	Microphone	49, 178
Shutter button43	(14)	AF-assist illuminator	132
Auto mode selector lever6		Self-timer lamp	145
Shutter speed dial		Tally light	166
Hot shoe269	16	ON/OFF switch	35
\$ (flash pop-up) lever98	18)	Flash	98
<i>Strap clip</i> 28			
Connector cover	20	Microphone/remote relea	ase connector
		(ø2.5 mm)	49, 58, 157
Lens signal contacts	21)	USB connector (Type-C).	33, 285
Lens release button29	22	HDMI Micro connector (7	Type D)280
	Shutter button 43 Auto mode selector lever 6 Shutter speed dial 4, 54, 56, 59, 60 Hot shoe 269 Drive dial 5 ♣ (flash pop-up) lever 98 Strap clip 28 Connector cover 65 Lens signal contacts 65	Shutter button 43 (1) Auto mode selector lever 6 Shutter speed dial	



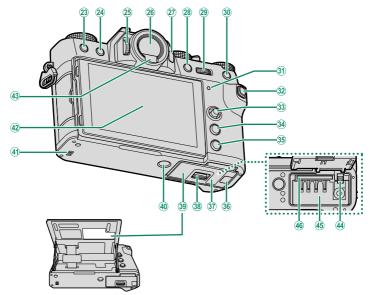

24) 25)	 (delete) button	36 37 38	Cable channel cover for DC coupler 296
(27)	VIEW MODE button14		Tripod mount
	AE-L (exposure lock) button83, 255	41	Speaker51, 216
	Rear command dial		
30	AF-L (focus lock) button83, 255		Touch screen21, 139, 175, 232
31)	Indicator lamp8	43	<i>Eye sensor15</i>
	<i>Tally light</i> 166	44	Battery latch31
32	Q (quick menu) button249	45	Battery chamber30
	Focus stick (focus lever)4, 70, 226		
	MENU/OK button19		,

① 39 Do not remove the serial number plate, which provides the CMIIT ID, serial number, and other important information.

The Focus Stick (Focus Lever)

Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.





 Use ■ BUTTON/DIAL SETTING > FOCUS LEVER SETTING to choose the role played by the focus stick (226).

 
The Shutter Speed Dial

The shutter speed dial is used to choose the shutter speed.



The Drive Dial

Rotate the dial to choose from the following the drive modes.



Mode		Mode	
Movie		S Single frame	42
BKT1 BKT2 Bracketing	84	Adv.1 Advanced filter	96
CH High-speed burst	89	■ Multiple exposure	94
CL Low-speed burst	89	☐ Panorama	91

 
The Exposure Compensation Dial

Rotate the dial to choose an exposure compensation amount.



The Auto Mode Selector Lever

Switch between auto and manual modes.



	-
Position	Mode
S AUTO	Select from P (program AE), S (shutter-priority AE), A (aperture-priority AE), and M (manual) modes (🗐 54, 56, 59, 60). Adjust shutter speed and aperture using program shift (mode P) or set shutter speed and/or aperture manually (modes S , A , and M).
o o o o o o o o o o o o o o o o o o o	Auto mode. The camera adjusts settings automatically according to the option selected by rotating the front command dial. Choose from modes suited to specific subject types, or select AUTO to let the camera automatically match the mode to the subject (1966). Scene selection is not available in drive modes Adv.1 , Adv.2 , a , and 1 .

Restrictions may apply to camera settings depending on the mode and shooting conditions.

The Command Dials


Rotate or press the command dials to:

	Front command dial	Rear command dial
Rotate	 Select menu tabs or page through menus Adjust aperture^{1,2} Choose a scene (auto mode) Adjust exposure compensation⁴ Adjust sensitivity² View other pictures during playback 	 Highlight menu items Choose the desired combination of shutter speed and aperture (program shift) Choose a shutter speed² Adjust settings in the quick menu Choose the size of the focus frame Zoom in or out in full frame playback Zoom in or out in multi-frame playback
Press	aperture and exposure compensation ^{2,5}	 Zoom in on the active focus point³ Press and hold to choose the manual focus mode focus display³ Zoom in on the active focus

- 1 Aperture set to **A** (auto) and lens equipped with aperture ring or **COMMAND** selected for **BUTTON/DIAL SETTING** > **APERTURE RING SETTING** (A).
- 2 Can be changed using BUTTON/DIAL SETTING > COMMAND DIAL SETTING.
- 3 Available only if **FOCUS CHECK** is assigned to a function button.
- 4 Exposure compensation dial rotated to C.
- 5 Can be used to switch back and forth between aperture, sensitivity, and exposure compensation when exposure compensation dial is rotated to **C**.

The Indicator Lamp

 Camera status is shown by the indicator lamp.



Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Focus or slow shutter speed warning. Pictures can be taken.
Blinks green and orange	 Camera on: Recording pictures, or picture displayed for confirmation after being taken with option other than OFF selected for SCREEN SET-UP > IMAGE DISP. (additional pictures can be taken). Camera off: Uploading pictures to a smartphone or tablet.*
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.

^{*} Displayed only if pictures are selected for upload.



- Warnings may also appear in the display.
 - The indicator lamp remains off while your eye is to the viewfinder.
 - The **MOVIE SETTING** > **TALLY LIGHT** option can be used to choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.

The LCD Monitor

The LCD monitor can be tilted for easier viewing, but be careful not to touch the wires or trap fingers or other objects behind the monitor. Touching the wires could cause camera malfunction.



 


The LCD monitor also functions as a touch screen that can be used for:

- Touch photography (DE 22)
- Focus area selection (EE 21)
- Function selection (24)
- Movie optimized control
 □ (
 □ 23)
- Playback (## 25)

Focusing the Viewfinder

If the indicators displayed in the viewfinder are blurred, put your eye to the viewfinder and rotate the diopter adjustment control until the display is in sharp focus.




Camera Displays

This section lists the indicators that may be displayed during shooting.

• For illustrative purposes, displays are shown with all indicators lit.


The Electronic Viewfinder

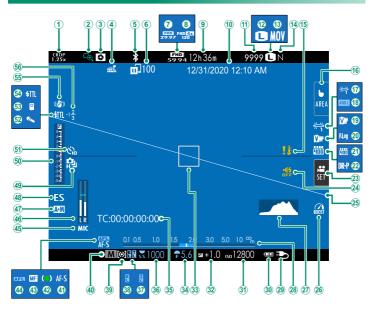

(1)	<i>Crop factor144</i>	29	Power supply	34
2	Focus check		Battery level	
3	Depth-of-field preview59, 75	31)	Sensitivity	79
4	Location data download status244, 282	32	Exposure compensation	77
5	Bluetooth ON/OFF239	33	Focus frame	69, 82
6	Image transfer status239, 282	34)	Aperture	55, 59, 60
7	Movie mode 48, 158	35	Time code	18
8	Full HD high-speed recording160	36	Shutter speed	55, 56, 60
9	Recording time available/	37)	TTL lock	153, 257
	elapsed recording time48	38	AE lock	83, 23
	Date and time37, 39, 211		Metering	
11)	Number of available frames 1327	40	Shooting mode	54
(12)	Image size104	(41)	Focus mode ²	6
13	File format159		Focus indicator ²	
(14)	Image quality105	43	Manual focus indicator ²	65, 73
(15)	Temperature warning326		AF lock	
(16)	Touch screen mode21, 139, 175	(45)	Mic jack setting	179
(17)	White balance 109	(46)	Recording level ²	178
(18)	AWB lock231	47)	AF+MF indicator ²	13:
(19)	Film simulation106	(48)	Shutter type	148
(20)	F-Log recording161	(49)	Continuous mode	8
(21)	<i>Dynamic range</i> 113	\sim	Exposure indicator	
(22)	D-range priority114	(51)	Self-timer indicator	14
(23)	Movie optimized control23	(52)	Microphone	49
\simeq	Sound and flash indicator213	\sim	Remote release	
25	Virtual horizon18		Flash (TTL) mode	
26	Boost mode235	\sim	IS mode ²	
27)	Histogram18	(56)	Flash compensation	27
(28)	Dictanco indicator ² 75			

¹ Shows "9999" if there is space for over 9999 frames. 2 Not displayed when **ON** is selected for **□ SCREEN SET-UP** > **LARGE INDICATORS** MODE(EVF).

The LCD Monitor

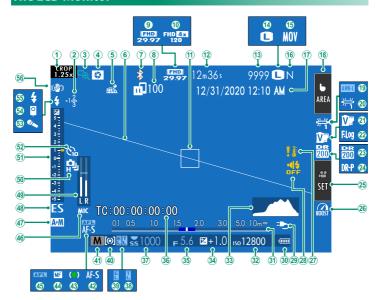

(1)	Crop factor144	29	Power supply	34
2	Flash compensation271	30	Battery level	36
3	Focus check	31)	Distance indicator ²	75
4	Depth-of-field preview59, 75	32	Sensitivity	79
(5)	Location data download status244, 282	33	Histogram	18
6	Virtual horizon18	34)	Exposure compensation	77
7	Bluetooth ON/OFF239	35	Aperture	55, 59, 60
8	Image transfer status239, 282	36	Time code	18
9	Movie mode 48, 158	37)	Shutter speed	55, 56, 60
10	Full HD high-speed recording160	38	TTL lock	153, 257
	Focus frame69, 82		AE lock	83, 23
12	Recording time available/	40	Metering	8
	elapsed recording time48	41)	Shooting mode	54
13	Number of available frames 1		Focus mode ²	
14)	Image size104	43	Focus indicator ²	66
15)	File format159	44	Manual focus indicator ²	65, 73
16	Image quality105	45	AF lock	83, 23
17)	Date and time37, 39, 211	46	Mic jack setting	179
18	Touch screen mode ³ 21, 139, 175	47)	AF+MF indicator ²	13
19	AWB lock231	48	Shutter type	148
20	White balance 109	49	Recording level ²	178
21)	Film simulation106	(50)	Continuous mode	89
22	F-Log recording161	(51)	Exposure indicator	60, 77
23	<i>Dynamic range</i> 113	(52)	Self-timer indicator	14
24)	D-range priority114	(53)	Microphone	49
25	Movie optimized control23	54	Remote release	58
26	Boost mode	55	Flash (TTL) mode	27
27)	Temperature warning326	56	IS mode ²	150
(28)	Sound and flash indicator 213			

¹ Shows "9999" if there is space for over 9999 frames.

² Not displayed when **ON** is selected for **☑ SCREEN SET-UP** > **LARGE INDICATORS MODE(LCD)**.

³ Camera functions can also be accessed via touch controls.

Adjusting Display Brightness

The brightness and saturation of the viewfinder and LCD monitor can be adjusted using the items in the SCREEN SET-UP menu. Choose EVF BRIGHTNESS or EVF COLOR to adjust viewfinder brightness or saturation, LCD BRIGHTNESS or LCD COLOR to do the same for the LCD monitor.

Display Rotation

When **ON** is selected for **SCREEN SET-UP** > **AUTOROTATE DISPLAYS**, the indicators in the viewfinder and LCD monitor automatically rotate to match camera orientation.

Choosing a Display Mode

Press the **VIEW MODE** button to cycle through the following display modes. You can choose separate display modes for shooting and playback.



SHOOTING

Option	Description
	Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.
LCD ONLY	LCD monitor on, viewfinder off.
EVF ONLY	Viewfinder on, LCD monitor off.
EVF ONLY + SERSOR	Putting your eye to the viewfinder turns the viewfinder on; taking it away turns the viewfinder off. The LCD monitor remains off.

Option	Description
	Putting your eye to the viewfinder during shooting turns the viewfinder on, but the LCD monitor is used for
	the display of images once you remove your eye from
	the viewfinder after shooting. The options selected for
	SCREEN SET-UP > IMAGE DISP. apply to display
	in the LCD monitor.


PLAYBACK

Option	Description	
SERISOR EYE SENSOR	Putting your eye to the viewfinder turns the viewfinder on and the LCD monitor off; taking your eye away turns the viewfinder off and LCD monitor on.	
LCD ONLY	LCD monitor on, viewfinder off.	
EVF ONLY	Viewfinder on, LCD monitor off.	

Displays modes for the EVF and LCD monitor can also be selected using ■ SCREEN SET-UP > VIEW MODE SETTING in the setup menu (■ 217).

The Eye Sensor-

 The eye sensor may respond to objects other than your eye or to light shining directly on the sensor.



The DISP/BACK Button

The DISP/BACK button controls the display of indicators in the viewfinder and LCD monitor.



Noticators for the EVF and LCD must be selected separately. To choose the EVF display, place your eye to the viewfinder while using the DISP/BACK button.




Viewfinder (EVF)





LCD Monitor

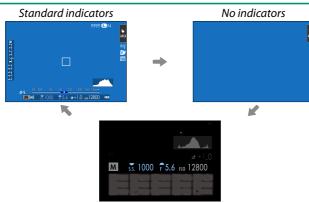

Info display (still photography only)

Customizing the Standard Display

To choose the items shown in the standard indicator display:


- Display standard indicators.
 Use the DISP/BACK button to display standard indicators.
- 2 Select DISP. CUSTOM SETTING. Select SCREEN SET-UP > DISP. CUSTOM SETTING in the setup menu.
- 3 Choose items.
 Highlight items and press MENU/OK to select or deselect.

5 5	•		
ltem	Default	ltem	Default
FRAMING GUIDELINE		CONTINUOUS MODE	V
ELECTRONIC LEVEL		DUAL IS MODE	V
FOCUS FRAME	V	TOUCH SCREEN MODE	V
AF DISTANCE INDICATOR		WHITE BALANCE	V
MF DISTANCE INDICATOR	V	FILM SIMULATION	V
HISTOGRAM		DYNAMIC RANGE	V
LIVE VIEW HIGHLIGHT ALERT		BOOST MODE	V
SHOOTING MODE	V	FRAMES REMAINING	V
APERTURE/S-SPEED/ISO	V	IMAGE SIZE/QUALITY	V
INFORMATION BACKGROUND	V	MOVIE MODE & REC. TIME	V
Expo. Comp. (Digit)		IMAGE TRANSFER ORDER	V
Expo. Comp. (Scale)	V	MIC LEVEL	V
FOCUS MODE	V	GUIDANCE MESSAGE	V
PHOTOMETRY	V	BATTERY LEVEL	V
SHUTTER TYPE	V	FRAMING OUTLINE	
FLASH	V	-	

- 4 Press DISP/BACK to save changes.
- 5 Press DISP/BACK as needed to exit the menus and return to the shooting display.

Virtual Horizon-

 Selecting **ELECTRONIC LEVEL** displays a virtual horizon. The camera is level when the two lines overlap. Note that the virtual horizon may not be displayed if the camera lens is pointed up or down. For a 3D display (shown), press the function button to which **ELECTRONIC LEVEL** is assigned (III 255).




Framing Outline


Fnable **FRAMING OUTLINE** to make the borders of the frame easier to see against dark backgrounds.

Histograms.

 Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.



 - Optimal exposure: Pixels are distributed in an even curve throughout the tone range.
- Overexposed: Pixels are clustered on the right side of the graph.
- **Underexposed**: Pixels are clustered on the left side of the graph.



- (1) Overexposed areas blink
- (2) RGB histograms




Using the Menus

To display the menus, press MENU/OK.



The Menus

Different menus are displayed during still photography, movie recording, and playback.

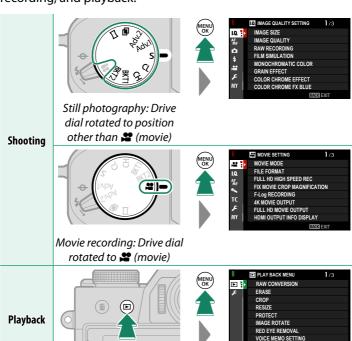

During playback

BACK EXIT

Selecting a Menu Tab

 
To navigate the menus:

1 Press MENU/OK to display the menus.





2 Press the focus stick (focus lever) left to highlight the tab for the current menu.



- 3 Press the focus stick up or down to highlight the tab containing the desired item.
- 4 Press the focus stick right to place the cursor in the menu.
- Use the front command dial to select menu tabs or page through menus and the rear command dial to highlight menu items.

 


Touch Screen Mode

The LCD monitor also functions as a touch screen.


Shooting Touch Controls

To enable touch controls, select **ON** for
■ BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > TOUCH SCREEN SETTING.



EVF

The LCD monitor can be used to select the focus area while pictures are being framed in the electronic viewfinder (EVF). Use BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > EVF TOUCH SCREEN AREA SETTINGS to choose the area of the monitor employed for touch controls.

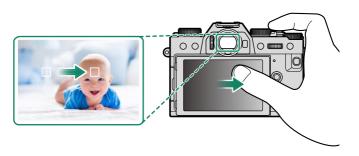

When FACE DETECTION ON is selected for ■ AF/MF SETTING > FACE/EYE DETECTION SETTING, you can choose the face used for focus.

LCD Monitor

The operation performed can be selected by tapping the touch screen mode indicator in the display. Touch controls can be used for the following operations:



Mode	Description
TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.
AF AF OFF	 In focus mode S (AF-S), the camera focuses when you tap your subject in the display. Focus locks at the current distance until you tap the AF OFF icon. In focus mode C (AF-C), the camera initiates focus when you tap your subject display. The camera will continue to adjust focus for changes in the distance to the subject until you tap the AF OFF icon. In manual focus mode (MF), you can tap the display to focus on the selected subject using autofocus.
AREA AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.
OFF OFF	Touch controls disabled.

- 🚺 Different touch controls are used during focus zoom (🕮 140).
- To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > TOUCH SCREEN SETTING.

MOVIE OPTIMIZED CONTROL

Selecting ON for

☐ MOVIE SETTING > MOVIE OPTIMIZED CONTROL → b or tapping the movie-optimized mode button in the shooting display optimizes the command dials and touch controls for movie recording. This can be used to prevent camera sounds being recorded with movie footage.



Movie-optimized mode button

- SHUTTER SPEED
- APFRTURF
- EXPOSURE COMPENSATION
- ISO
- INTERNAL MIC I EVEL ADJUSTMENT/FXTERNAL MIC LEVEL ADJUSTMENT
- WIND FILTER
- HEADPHONES VOLUME
- FILM SIMULATION
- ₩ WHITE BALANCE

 


- Enabling movie-optimized controls disables the aperture ring.
 - When movie-optimized control is enabled, the movie-optimized mode button can be used to change shooting settings or disable movie-optimized control.

Touch Function

Functions can be assigned to the following flick gestures in much the same way as function buttons (258):

• Flick up: T-Fn1 • Flick left: T-Fn2 • Flick right: T-Fn3 • Flick down: T-Fn4





- In some cases, touch-function flick gestures display a menu; tap to select the desired option.
 - Touch-function gestures are disabled by default. To enable touch-function gestures, select ON for BUTTON/DIAL **SETTING > TOUCH SCREEN SETTING > IIII** TOUCH FUNCTION.



Playback Touch Controls

When ON is selected for BUTTON/DIAL SETTING > TOUCH **SCREEN SETTING** > **IN TOUCH SCREEN SETTING**, touch controls can be used for the following playback operations:

 Swipe: Swipe a finger across the display to view other images.



• Pinch-out: Place two fingers on the display and spread them apart to zoom in.



• Pinch-in: Place two fingers on the display and slide them together to zoom out.



Pictures can be zoomed out until the entire image is visible but no further.

• Double-tap: Tap the display twice to zoom in on the focus point.



• Drag: View other areas of the image during playback zoom.



MEMO






Attaching the Strap

Attach the strap.

Attach the strap to the two strap clips as shown below.



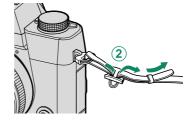

① To avoid dropping the camera, be sure the strap is correctly secured.

Attaching a Lens

The camera can be used with lenses for the FUJIFILM X-mount

Remove the body cap from the camera and the rear cap from the lens. Place the lens on mount, keeping the marks on the lens and camera aligned (1), and then rotate the lens until it clicks into place (2).





- When attaching lenses, ensure that dust or other foreign matter does not enter the camera.
 - Be careful not to touch the camera's internal parts.
 - Rotate the lens until it clicks securely into place.
 - Do not press the lens release button while attaching the lens.

Removing Lenses-

To remove the lens, turn the camera off, then press the lens release button ((1)) and rotate the lens as shown (2).



To prevent dust accumulating on the lens or inside the camera, replace the lens caps and camera body cap when the lens is not attached



Lenses and Other Optional Accessories

The camera can be used with lenses and accessories for the EUJIEILM X-mount



- ① Observe the following precautions when attaching or removing (exchanging) lenses.
 - Check that the lenses are free of dust and other foreign matter.
 - Do not change lenses in direct sunlight or under another bright light source. Light focused into the interior of the camera could cause it to malfunction
 - Attach the lens caps before exchanging lenses.

Inserting the Battery and a Memory Card

Insert the battery and memory card as described below.

 
 Slide the battery-chamber latch as shown and open the battery-chamber cover.





2 Insert the battery.

Using the battery to keep the battery latch pressed to one side, insert the battery contacts first in the direction shown by the arrow.



3 Insert the memory card.

The optional SD, SDHC, and SDXC memory cards the camera uses to store pictures are referred to as "memory cards".



4 Close the battery-chamber cover and slide the battery-chamber cover latch closed.

Removing the Battery-

Before removing the battery or memory card, turn the camera off and open the battery-chamber cover.

To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.





The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

Removing Memory Cards

To remove the memory card, press it in and release it slowly. The card can then be removed by hand.

 




- Press the center of the card when ejecting it.
 - When a memory card is removed, the card could be ejected too quickly. Use your finger to hold it and gently release the card.

Compatible Memory Cards

- The camera can be used with SD, SDHC, and SDXC memory cards.
- The camera supports UHS-I memory cards.
- To record movies, use cards with a UHS speed class of 3 or better or a video speed class of V30 or better.
- A list of supported memory cards is available on the Fujifilm website. For details, visit: https://fujifilm-x.com/support/compatibility/cameras/.
- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
 - Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.




- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- miniSD or microSD adapters that are larger or smaller than memory cards may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card
- Do not affix labels or other objects to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of memory card.
- Formatting a memory card in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals. Renaming the files on the camera can cause problems during playback.



The battery is not charged at shipment. Charge the battery before use.

- An NP-W126S rechargeable battery is supplied with the camera.
 - Turn the camera off for charging.
- The camera can be charged via USB. USB charging is available with computers with a manufacturer-approved operating system and USB interface.

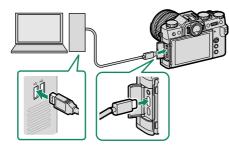


Leave the computer on during charging.



- The battery will not charge while the camera is on.
 - Connect the supplied USB cable.
 - Connect the camera directly to the computer; do not use a USB hub or keyboard.
 - Charging stops if the computer enters sleep mode. To resume charging, activate the computer and disconnect and reconnect the USB cable
 - Charging may not be supported depending on the model of computer, computer settings, and the computer's current state.
 - The battery takes about 5 hours to charge with a charging input of 5 V/500 mA.
- To charge the battery from a household AC power outlet, use a BC-W126S battery charger (available separately).

Charge Status

 The indicator lamp shows battery charge status as follows:



Indicator lamp	Battery status
On	Battery charging.
Off	Charging complete.
Blinks	Charging error.



- Do not affix labels or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera
 - Do not short the battery terminals. The battery could overheat.
 - Read the cautions in "The Battery and Power Supply".
 - Use only genuine Fujifilm rechargeable batteries designated for use in this camera. Failure to observe this precaution could result in product malfunction
 - Do not remove the labels from the battery or attempt to split or peel the outer casing.
 - The battery gradually loses its charge when not in use. Charge the battery one or two days before use.
 - If the battery fails to hold a charge, it has reached the end of its charging life and must be replaced.
 - Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
 - Note that charging times increase at low or high temperatures.



 If the camera is turned on during charging, charging will end and the USB connection will instead be used to power the camera. The battery level will begin to gradually decline (1 243).



 
• The camera will display a "power supply" icon when powered via USB.



Turning the Camera On and Off

Use the ON/OFF switch to turn the camera on and off.

Slide the switch to **ON** to turn the camera on, or to **OFF** to turn the camera off.



- (I) Fingerprints and other marks on the lens or viewfinder can affect pictures or the view through the viewfinder. Keep the lens and viewfinder clean.
- Pressing the Dutton during shooting starts playback.
 - Press the shutter button halfway to return to shooting mode.
 - The camera will turn off automatically if no operations are performed for the length of time selected for POWER MANAGEMENT > AUTO POWER OFF. To reactivate the camera after it has turned off automatically, press the shutter button halfway or turn the ON/OFF switch to OFF and then back to ON.



Checking the Battery Level

After turning the camera on, check the battery level in the display.

Battery level is shown as follows:




Indicator	Description
411111	Battery partially discharged.
(IIII)	Battery about 80% full.
	Battery about 60% full.
—	Battery about 40% full.
	Battery about 20% full.
(red)	Low battery. Charge as soon as possible.
(blinks red)	Battery exhausted. Turn camera off and recharge battery.


Basic Setup

When you turn the camera on for the first time, you can choose a language and set the camera clock. At default settings, you can also pair the camera with a smartphone or tablet so that you can later synchronize the clocks or download pictures. Follow the steps below when turning the camera on for the first time.

 - If you intend to pair the camera with a smartphone or tablet, install and launch the latest version of the FUJIFILM Camera Remote App on the smart device before proceeding. For more information, visit: http://app.fujifilm-dsc.com/en/camera remote/
 - 1 Turn the camera on. A language-selection dialog will be displayed.



 Choose a language. Highlight a language and press MENU/OK.



Pair the camera with the smartphone or tablet. Press MENU/OK to pair the camera with a smartphone or tablet running the FUJIFILM Camera Remote app.



To skip pairing, press DISP/BACK.



4 Check the time.

When pairing is complete, you will be prompted to set the camera clock to the time reported by the smartphone or tablet. Check that the time is correct.



- To set the clock manually, press **DISP/BACK** (1993).
- 5 Synchronize the camera settings with the settings configured on your smartphone or tablet.



- The option selected can be changed at any time using CONNECTION SETTING > Bluetooth SETTINGS.
- 6 Set the clock.

Press **MENU/OK** to set the camera clock to the time reported by the smartphone or tablet and exit to shooting mode.

- 7 Format the memory card (210).
 - Format memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device.
- If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.

Skipping the Current Step-

If you skip a step, a confirmation dialog will be displayed; select **NO** to avoid repeating any steps you skipped the next time the camera is turned on.

Choosing a Different Language

To change the language:

- 1 Display language options.
 Select ☑ USER SETTING > 壓 言語/LANG..
- 2 Choose a language. Highlight the desired option and press MENU/OK.

Changing the Time and Date

To set the camera clock:

- 1 Display DATE/TIME options.
 Select ☑ USER SETTING > DATE/TIME.
- 2 Set the clock.
 Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. Press MENU/OK to set the clock.

 
MEMO

Basic Photography and Playback


Taking Photographs

This section explains basic photography.

1 Rotate the drive dial to **S** (single frame).



 2 Rotate the auto mode selector lever to ●AUTO.



- 3 Ready the camera.
 - Hold the camera steady with both hands—shaking or unsteady hands can blur your shots.



 To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and AF-assist illuminator.



 
4 Frame the picture.

Lenses with Zoom Rings-

Use the zoom ring to frame the picture in the display. Rotate the ring left to zoom out, right to zoom in.



5 Press the shutter button halfway to set focus and exposure.



- If the camera is able to focus, it will beep twice and focus frame and focus indicator will glow green.
- If the camera is unable to focus, the focus frame will turn red. ! AF will be displayed, and the focus indicator will blink white.



- If the subject is poorly lit, the AF-assist illuminator may light to assist the focus operation.
 - Focus and exposure will lock when the shutter button is pressed halfway. Focus and exposure remain locked while the button is kept in this position (AF/AE lock).
 - The camera will focus on subjects at any distance in the macro and standard focus ranges for the lens.
- 6 Smoothly press the shutter button the rest of the way down to take the picture.



Viewing Pictures

Pictures can be viewed in the viewfinder or LCD monitor.

To view pictures full frame, press **▶**.



Press the focus stick (focus lever) left to page through pictures in reverse order. Press it right to page through pictures in the order recorded. Keep the stick pressed to scroll rapidly to the desired frame.

 


- You can also page through pictures using the front command dial or swipe gestures.
 - age") icon to warn that they may not display correctly and that playback zoom may not be available.

Deleting Pictures

Use the 前 (delete) button to delete pictures.

- Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.
 - 1 With a picture displayed full frame, press the 面 button and select FRAME.



- 2 Choose a picture and press MENU/OK to delete it.
 - The picture will be deleted when the MENU/OK button is pressed; a confirmation dialog is not displayed. Be careful not to accidentally delete pictures you wish to keep.
 - Additional pictures can be deleted using the MENU/OK button. Display the desired pictures and press MENU/OK to delete them one by one.
- Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete (■ 196).
 - Pictures can also be deleted from the menus using the ☐ PLAY BACK MENU > ERASE option (☐ 192).

MEMO

 
Movie Recording and Playback




Recording Movies

Record movies with sound.

1 Rotate the drive dial to 🕿 (movie).



 2 Rotate the auto mode selector lever to ●AUTO.



- 3 Press the shutter button to start recording.
 - A recording indicator (
) is displayed while recording is in progress.
 - The display shows the elapsed recording time.



 
4 Press the button again to end recording. Recording ends automatically when the movie reaches 29 minutes 59 seconds or the memory card is full.

Temperature Warnings-

The camera automatically turns off to protect itself when its temperature or the temperature of the battery rises. If a temperature warning is displayed, image noise may increase. Turn the camera off and wait for it to cool before turning it on again (🗎 326).

Using an External Microphone

Sound can be recorded with external microphones that connect using jacks 2.5 mm in diameter; microphones that require plug-in power cannot be used. See the microphone manual for details.



- Use a memory card with a UHS speed class of 3 or better when recording movies.
 - Sound is recorded via the built-in microphone or an optional external microphone. Do not cover the microphone during recording.
 - Note that the microphone may pick up lens noise and other sounds made by the camera during recording.
 - Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.
- The indicator lamp lights while recording is in progress (the **MOVIE SETTING** > **TALLY LIGHT** option can be used to choose the lamp indicator or AF-assist—that lights during movie recording and whether the lamp blinks or remains steady).
 - In the case of zoom lenses, zoom can be adjusted during recording using the zoom ring (if available).
 - If the lens is equipped with an aperture mode switch, select the aperture mode before beginning recording. If an option other than A is selected, shutter speed and aperture can be adjusted while recording is in progress.
 - While recording is in progress, you can:
 - Adjust sensitivity
 - Use the **VIEW MODE** button and the eye sensor to switch between the EVF and LCD monitor displays
 - Refocus using any of the following methods:
 - Press the shutter button halfway
 - Press a function button to which **AF-ON** is assigned
 - Use touch screen controls
 - Display a histogram or artificial horizon by pressing the button to which **HISTOGRAM** or **ELECTRONIC LEVEL** has been assigned



- Exposure compensation can be adjusted during recording, but only by a maximum of ±2 EV.
 - Recording may be unavailable at some settings, while in other cases settings may not apply during recording.
 - To choose the focus area for movie recording, select AF/MF **SETTING** > **Procus Area** and use the focus stick (focus lever) and rear command dial (1996).

Adjusting Movie Settings

Movie settings can be adjusted from the movie menus or using the **MOVIE SETTING** item in the photo menus (**19**).

- Use the MOVIE SETTING item in the photo menus to quickly adjust settings when recording movies via a button to which MOVIE RECORDING RELEASE has been assigned (## 155).
- The movie menus contain options for use when recording movies via the shutter button while the drive dial is rotated to # (movie) (158).
- Changes made using the **MOVIE SETTING** item in the photo menus also apply to the movie menus. Changes made in one set of menus automatically apply in the other.

Depth of Field

To soften backgrounds, set aperture as wide as possible. Aperture can be adjusted manually at settings other than A.

 
Viewing Movies

View movies on the camera.

In full-frame playback, movies are identified by a icon. Press the focus stick (focus lever) down to start movie playback.



The following operations can be performed while a movie is displayed.



Focus stick (focus lever)	Full-frame playback	Playback in progress (▶)	Playback paused (111)	
Up	_	End playback		
Down	Start playback	Pause playback	Start/resume playback	
Left/right	View other pictures	Adjust speed	Single frame rewind/ advance	

Progress is shown in the display during playback.



- ① Do not cover the speaker during playback.
 - Sound is not played back if OFF is selected for
 ☐ USER SETTING > SOUND & FLASH.
- Press MENU/OK to pause playback and display volume controls. Press the focus stick (focus lever) up or down to adjust the volume; press MENU/OK again to resume playback. Volume can also be adjusted using SOUND SET-UP > PLAYBACK VOLUME.

Playback Speed-

Press the focus stick (focus lever) left or right to adjust playback speed during playback. Speed is shown by the number of arrows (▶ or ◄).



Taking Photographs

Choosing a Shooting Mode

Modes P, S, A, and M can be selected via adjustments to shutter speed and/or aperture. In auto mode, you can let the camera adjust settings to suit the scene (AUTO) or choose the scene yourself.

Mode P: Program AE

Let the camera choose shutter speed and aperture for optimal exposure. Other values that produce the same exposure can be selected with program shift.



Setting				
 Auto mode selector lever 				
2 Shutter speed	A (auto)			
3 Aperture	A (auto)			




Confirm that **P** appears in the display.



If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "---".

Program Shift-

If desired, you can rotate the rear command dial to select other combinations of shutter speed and aperture without altering exposure (program shift).

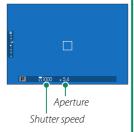

- Program shift is not available in any of the following circumstances:
 - With flash units that support TTL auto
 - When a flash mode other than **⑤**0FF is selected for **☑** FLASH SETTING > FLASH FUNCTION SETTING


 - In movie mode
- To cancel program shift, turn the camera off.

Mode S: Shutter-Priority AE

Choose a shutter speed and let the camera adjust aperture for optimal exposure.



Setting			
Auto mode selector lever	•	_	
2 Shutter speed	User-selected	-	Г
3 Aperture	A (auto)	S	_
Confirm that S appears i	n the display	S	

 


- If the subject is outside the metering range of the camera, the aperture display will show "---".
- At settings other than **180X**, shutter speed can also be adjusted in increments of ½ EV by rotating the rear command dial.
 - Shutter speed can be adjusted while the shutter button is pressed halfway.


Time (T)

Rotate the shutter speed dial to T (time) to choose slow shutter speeds for long time-exposures. Use of a tripod is recommended to prevent the camera moving during the exposure.

 1 Rotate the shutter speed dial to T.



 2 Rotate the rear command dial to choose a shutter speed.




- 3 Press the shutter button all the way down to take a picture at the selected shutter speed. At speeds of 1 s or slower, a count-down timer will be displayed while the exposure is in progress.
- To reduce "noise" (mottling) in long time-exposures, select **ON** for **IMAGE QUALITY SETTING** > **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

Bulb (B)

Select a shutter speed of **B** (bulb) for long time-exposures in which you open and close the shutter manually. Use of a tripod is recommended to prevent the camera moving during the exposure.

 
1 Rotate the shutter speed dial to B.



- 2 Press the shutter button all the way down. The shutter will remain open for up to 60 minutes while the shutter button is pressed; the display shows the time elapsed since the exposure started.
- Selecting an aperture of A fixes shutter speed at 30 s.
 - To reduce "noise" (mottling) in long time-exposures, select **ON** for **IMAGE QUALITY SETTING** > **LONG EXPOSURE NR**. Note that this may increase the time needed to record images after shooting.

Using a Remote Release

 A remote release can be used for long time-exposures. When using an optional RR-100 remote release or an electronic release from third-party suppliers, connect it to the camera's remote release connector.



A confirmation dialog will be displayed when a remote release is connected; press MENU/OK and select ♥ REMOTE for MIC/ REMOTE RELEASE



Mode A: Aperture-Priority AE

Choose an aperture and let the camera adjust shutter speed for optimal exposure.



Setting						
1 Auto mode selector lever	•					
2 Shutter speed	A (auto)					
3 Aperture	♦ (user-selected)					



Confirm that A appears in the display.

- If the correct exposure cannot be achieved at the selected aperture, shutter speed will be displayed in red.
 - If the subject is outside the metering range of the camera, the shutter speed display will show "---".
- Rotate the lens aperture ring to adjust aperture.
 - Aperture can be adjusted even while the shutter button is pressed halfway.


Previewing Depth of Field-

When **PREVIEW DEPTH OF FIELD** is assigned to a function button, pressing the button displays a sicon and stops aperture down to the selected setting, allowing depth of field to be previewed in the display (E 255).



Mode M: Manual Exposure

In manual mode, the user controls both shutter speed and aperture. Shots can be deliberately overexposed (brighter) or underexposed (darker), opening the door for a variety of individual creative expression. The amount the picture would be under- or over-exposed at current settings is shown by the exposure indicator; adjust shutter speed and aperture until the desired exposure is reached.

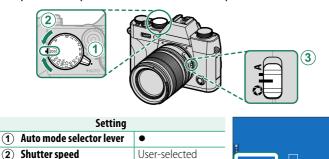

(user-selected)

Confirm that **M** appears in the display.



- Rotate the lens aperture ring to adjust aperture.
 - At settings other than 180X, shutter speed can also be adjusted in increments of 1/3 EV by rotating the rear command dial.

Exposure Preview-

(3) Aperture

To preview exposure in the LCD monitor, select PREVIEW EXP./WB for


SCREEN SET-UP > PREVIEW EXP,/WB IN MANUAL MODE.



Select an option other than **PREVIEW EXP./WB** when using the flash or on other occasions on which exposure may change when the picture is taken.

Auto Mode

To take pictures in auto mode, rotate the auto mode selector lever to • AUTO and rotate the front command dial to choose a scene.

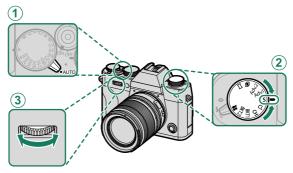

Jetting	
1 Auto mode selector lever	●AUTO
2 Drive dial	S (single frame)
3 Front command dial	Scene selection



Confirm that **AUTO** appears in the display.



Nou can also choose a scene using the ■ SHOOTING SETTING > **SCENE POSITION** item in the shooting menu.

Choose from the following options:

Mode	Description
mouc	The camera automatically optimizes settings to suit the
AUTO	scene (19 63).
PORTRAIT	
₱ PURIKAII	Choose for portraits.
PORTRAIT ENHANCER	Processes portraits to give the subject a smooth, natu-
(5)	ral-looking complexion.
▲ LANDSCAPE	Choose for daylight shots of buildings and landscapes.
ॐ SPORT	Choose when photographing moving subjects.
C NIGHT	Choose for poorly lit twilight or night scenes.
-(* NICHT (TRIROD)	Choose this mode for slow shutter speeds when shoot-
x ^{C*} NIGHT (TRIPOD)	ing at night.
da FIDEWODVC	Slow shutter speeds are used to capture the expanding
☀ FIREWORKS	burst of light from a firework.
₩ CHNCET	Choose this mode to record the vivid colors in sunrises
🚢 SUNSET	and sunsets.
- 65. CNOW	Choose for crisp, clear shots that capture the brightness
* SNOW	of scenes dominated by shining white snow.
- 20 DEACH	Choose for crisp, clear shots that capture the brightness
≜ ₹ BEACH	of sunlit beaches.
- IINDEDWATED	Reduces the blue cast typically associated with under-
■ UNDERWATER	water lighting.
₩ DADEV	Capture indoor background lighting under low-light
₹ PARTY	conditions.
☆ FLOWER	Effective for taking more vivid shots of flowers.
TEXT TEXT	Take clear pictures of text or drawings in print.
	1



Scene selection is available only when the drive dial is set to **S**, **CH** (highspeed burst), or **CL** (low-speed burst).

AUTO

If **AUTO** is chosen via scene selection, the scene chosen by the camera will be shown by an icon in the display.



▲: LANDSCAPE

C:NIGHT

: NIGHT (TRIPOD)

:MACRO

👛 : SUNSET

*≈:SKY

♠ : GREENERY

: PORTRAIT

: BACKLIT PORTRAIT

•)) : MOVING OBJECT

🛼 : PORTRAIT&MOTION

 
■ : BACKLIT PORTRAIT&MOTION

- The mode selected may vary with the subject, and the camera may select different scenes for the same subject depending on shooting conditions. If the mode and subject do not match, select a scene manually.
 - The additional processing time required in some scene modes may increase save times.
- No icon will be displayed if the camera is unable to determine the type of scene.


Autofocus

Take pictures using autofocus.


 Rotate the auto mode selector lever to ● (□ 6).



 2 Rotate the focus mode selector to S or C (■ 65).



 - 3 Use MAF/MF SETTING > AF MODE to choose an AF mode (□ 67).
- 4 Select MAF/MF SETTING > FOCUS AREA and choose the position and size of the focus frame (■ 69).



5 Take pictures.

Focus Mode

Use the focus mode selector to choose how the camera focuses.



Choose from the following options:

M	lode	Description
	S	Single AF : Focus locks while the shutter button is pressed halfway.
(A	\F-S)	Choose for stationary subjects.
	(E ()	Continuous AF : Focus is continually adjusted to reflect changes in the distance to the subject while the shutter button is pressed halfway. Use for subjects that are in motion.
	IVI Duudl	Manual : Focus manually using the lens focus ring. Choose for manual control of focus or in situations in which the camera is unable to focus using autofocus (■ 73).



- Regardless of the option selected, manual focus will be used when the lens is in manual focus mode.
 - If **ON** is selected for **MAF/MF SETTING** > **PRE-AF**, focus will be adjusted continuously in modes **S** and **C** even when the shutter button is not pressed.

ME

The Focus Indicator Focus status is shown by the focus indicator. Focus indicator () Camera focusing. () Gubject in focus; focus locked (focus mode S). Subject in focus (focus mode C). Subject in focus (focus mode C). Focus is automatically adjusted for changes in distance to subject. () (blinks white) Camera unable to focus.

Manual focus (focus mode **M**).

Autofocus Options (AF Mode)

Focus can be adapted to a variety of subjects by changing the combination of settings selected for focus and AF modes.

- 1 Press MENU/OK and go to the shooting menu.
- 2 Select M AF/MF SETTING > AF MODE.
- 3 Choose an AF mode.

How the camera focuses depends on the focus mode.

Focus Mode S (AF-S)

Option	Description	Sample image
SINGLE POINT	Camera focuses on subject in selected focus point. Use for pinpoint focus on selected subject.	A STATE OF THE STA
ZONE	Camera focuses on subject in selected focus zone. Focus zones include multiple focus points, making it easier to focus on subjects in motion.	
[] WIDE	Camera focuses automatically on high-contrast subjects; display shows areas in focus.	
ALL	Rotate the rear command dial in t play (70, 71) to cycle through order: SINGLE POINT 20	AF modes in the following

Focus Mode C (AF-C)

Option	Description	Sample image
орион	Description	Jumple image
SINGLE POINT	Focus tracks subject at selected focus point. Use for subjects moving toward or away from camera.	
ZONE	Focus tracks subject in selected focus zone. Use for subjects that are moving fairly predictably.	
[] Tracking	Focus tracks subjects moving through wide area of frame.	
ALL ALL	Rotate the rear command dial in t play (■ 70, 71) to cycle through order: • SINGLE POINT, • ZO	n AF modes in the following

Focus-Point Selection

 
Choose a focus point for autofocus.

Viewing the Focus-Point Display

- 1 Press MENU/OK and go to the shooting menu.
- 2 Select AF/MF SETTING > FOCUS AREA to view the focus-point display.
- 3 Use the focus stick (focus lever) and rear command dial to choose a focus area.
- The focus point can also be selected using touch controls (121).

Selecting a Focus Point

Use the focus stick (focus lever) to choose the focus point and the rear command dial to choose the size of the focus frame. The procedure varies with the option selected for AF mode.



	Focus stick		DISP/BACK button	Rear command dial	
AF mode			(DISP) BACK		
	Tilt	Press		Rotate	Press
•		Select		Choose from 6 frame sizes	Restore
[23]	Select focus	highlighted	Select center	Choose from	original size
[]	point	focus point	focus point	3 frame sizes	
		locus point		_	_


- Manual focus-point selection is not available when □ WIDE/TRACK-**ING** is selected in focus mode **S**.
 - If ALL is selected for AF mode, you can rotate the rear command dial in the focus-point selection display to cycle through AF modes in the following order: • SINGLE POINT (6 frame sizes), • ZONE (3 frame sizes), and either **[7] WIDE** (focus mode **S**) or **[7] TRACKING** (focus mode C).

The Focus-Point Display

The focus-point display varies with the option selected for AF mode.



 \bigcirc Focus frames are shown by small squares (\square), focus zones by the large squares.

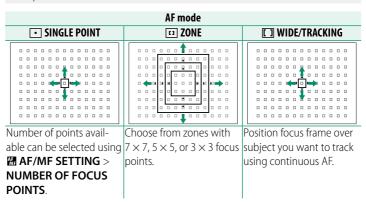

Autofocus-

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below.

- Very shiny subjects such as mirrors or car bodies.
- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background.
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

Checking Focus

To zoom in on the current focus area for precise focus, press the center of the rear command dial. Use the focus stick (focus lever) to choose another focus area. Press the center of the rear command dial again to cancel zoom.







Normal display

 


- In focus mode **S**, zoom can be adjusted by rotating the rear command dial.
 - The focus stick can be used to select the focus area while zoom is in effect.
 - In focus mode S, select SINGLE POINT for ₩ AF/MF SETTING > AF MODE
 - Focus zoom is not available in focus mode C or when MAF/MF **SETTING** > **PRE-AF** is on
 - Use BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING to change the function performed by the center of the rear command dial. You can also assign its default function to other controls (1992).

Manual Focus

Adjust focus manually.

1 Rotate the focus mode selector to M.



will appear in the display.



2 Focus manually using the lens focus ring. Rotate the ring left to reduce the focus distance, right to increase.



- 3 Take pictures.
- Use BUTTON/DIAL SETTING > FOCUS RING to reverse the direction of rotation of the focus ring.
 - Regardless of the option selected, manual focus will be used when the lens is in manual focus mode.

Quick Focus-

- To use autofocus to focus on the subject in the selected focus area, press the button to which focus lock or **AF-ON** has been assigned (the size of the focus area can be chosen with the rear command dial).
- In manual focus mode, you can use this feature to quickly focus on a chosen subject using either single or continuous AF according to the option chosen for

 AF/MF SETTING >

 N

 INSTANT AF SETTING.

 
Checking Focus

A variety of options are available for checking focus in manual focus mode.

The Manual Focus Indicator

The white line indicates the distance to the subject in the focus area (in meters or feet according to the option selected for SCREEN SET-UP > FOCUS SCALE UNITS in the setup menu), the blue bar the depth of field, or in other words the distance in front of and behind the subject that appears to be in focus.







- If both **AF DISTANCE INDICATOR** and **MF DISTANCE INDICATOR** are selected in the SCREEN SET-UP > DISP. CUSTOM SETTING list, the manual focus indicator can also be viewed using the depthof-field indicator in the standard display. Use the DISP/BACK button to display standard indicators.
 - Use the MAF/MF SETTING > → MEPTH-OF-FIELD SCALE option to choose how depth of field is displayed. Choose FILM FORMAT **BASIS** to help you make practical assessments of depth of field for pictures that will be viewed as prints and the like, PIXEL BASIS to help you assess depth of field for pictures that will be viewed at high resolutions on computers or other electronic displays.

Focus Zoom

If ON is selected for AF/MF SETTING > FOCUS CHECK, the camera will automatically zoom in on the selected focus area when the focus ring is rotated (\$\equiv 69\$). Press the center of the rear command dial to exit zoom.



- Use the focus stick (focus lever) to choose another focus area.
 - If STANDARD or FOCUS PEAK HIGHLIGHT is selected for M AF/MF **SETTING** > **MF ASSIST**, zoom can be adjusted by rotating the rear command dial. Zoom cannot be adjusted when **DIGITAL SPLIT IMAGE** or **DIGITAL MICROPRISM** is selected

MF Assist

Use M AF/MF SETTING > MF ASSIST to choose a focus check option.



The MF ASSIST menu can be displayed by pressing and holding the center of the rear command dial.

The following options are available:

- **DIGITAL SPLIT IMAGE**: Displays a split image in the center of the frame. Frame the subject in the split-image area and rotate the focus ring until the four parts of the split image are correctly aligned.
- DIGITAL MICROPRISM: A grid pattern that emphasizes blur is displayed when the subject is out of focus, disappearing to be replaced by a sharp image when the subject is in focus.
- FOCUS PEAK HIGHLIGHT: Highlights high-contrast outlines. Rotate the focus ring until the subject is highlighted.





 




Exposure Compensation

Adjust exposure.

Rotate the exposure compensation dial.



- The amount of compensation available varies with the shooting mode.
 - Exposure compensation can be previewed in the shooting display, although the display may not accurately reflect its effects if:
 - the exposure compensation amount exceeds ±3 EV,
 - R200 200% or R400 400% is selected for DYNAMIC RANGE, or
 - STRONG or WEAK is selected for D RANGE PRIORITY.

Exposure compensation can still be previewed in the viewfinder or LCD monitor by pressing the shutter button halfway. In movie mode, the display may not accurately reflect the effects of exposure compensation during F-log recording or when 200 200% or 400 400% is selected for **DYNAMIC RANGE**. An accurate preview can be obtained by selecting mode M and adjusting exposure directly.

C (Custom)

When the exposure compensation dial is rotated to C, exposure compensation can be adjusted by first pressing the center of the front command dial and then rotating the dial.







- The front command dial can be used to set exposure compensation to values between -5 and +5 EV.
 - The front command dial can be used to set aperture or exposure compensation. Press the center of the dial to toggle between the two.



Sensitivity

Adjust the camera's sensitivity to light.

Set sensitivity using **■ SHOOTING SETTING** > **ISO**.

Option	Description
AUTO1 AUTO2 AUTO3	Sensitivity is automatically adjusted in response to shooting conditions according to combination of standard and maximum sensitivity and minimum shutter speed chosen for SHOOTING SETTING > ISO . Choose from AUTO1 , AUTO2 , and AUTO3 (1 80).
160-12800	Adjust sensitivity manually. Selected value is shown in display.
L (80) L (100) L (125) H (25600) H (51200)	Choose for special situations. Note that mottling may appear in pictures taken at H , while L reduces dynamic range.



- Sensitivity is not reset when the camera is turned off.
 - When the drive dial is rotated to # (movie), the movie menu **™ MOVIE SETTING** > **№ ISO** item will be displayed.
 - If desired, you can use **BUTTON/DIAL SETTING** > **COMMAND DIAL SETTING** to configure the camera so that ISO sensitivity can be adjusted using the front or rear command dial.

Adiusting Sensitivity—

High values can be used to reduce blur when lighting is poor, while lower values allow slower shutter speeds or wider apertures in bright light; note, however, that mottling may appear in pictures taken at high sensitivities.

AUTO

Choose the base sensitivity, maximum sensitivity, and minimum shutter speed for AUTO1, AUTO2, and AUTO3.

		Default		
ltem	Options	AUT01	AUTO2	AUT03
DEFAULT SENSITIVITY	160-12800		160	
MAX. SENSITIVITY	400-12800	800	3200	12800
MIN. SHUTTER SPEED	1/500-1/4 SEC, AUTO		AUTO	

The camera automatically chooses a sensitivity between the default and maximum values; sensitivity is only raised above the default value if the shutter speed required for optimal exposure would be slower than the value selected for MIN. SHUTTER SPEED.



- If the value selected for **DEFAULT SENSITIVITY** is higher than that selected for MAX. SENSITIVITY. DEFAULT SENSITIVITY will be set to the value selected for MAX. SENSITIVITY.
 - The camera may select shutter speeds slower than MIN. SHUTTER **SPEED** if pictures would still be underexposed at the value selected for MAX. SENSITIVITY
 - If AUTO is selected for MIN. SHUTTER SPEED, the camera will automatically choose a minimum shutter speed fast enough to prevent blur caused by subject motion or camera shake (the minimum shutter speed is not affected by the option selected for image stabilization)

Metering

Choose how the camera meters exposure.

■ SHOOTING SETTING > PHOTOMETRY offers a choice of the following metering options:

① The selected option will only take effect when █ AF/MF SETTING > FACE/EYE DETECTION SETTING is OFF.

Mode	Description
[[] Multi	The camera instantly determines exposure based on an analysis of composition, color, and brightness distribution. Recommended in most situations.
[⊙] CENTER WEIGHTED	The camera meters the entire frame but assigns the greatest weight to the area at the center.
[•] SPOT	The camera meters lighting conditions in an area equivalent to 2% of the frame. Recommended with backlit subjects and in other cases in which the background is much brighter or darker than the main subject.
[] AVERAGE	Exposure is set to the average for the entire frame. Provides consistent exposure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

To meter the subject in the selected focus area, choose **ON** for **M AF/ MF SETTING** > **INTERLOCK SPOT AE & FOCUS AREA** (■ 137).

Focus/Exposure Lock

Focus and exposure lock when the shutter button is pressed halfway.

 
1 Position the subject in the focus frame and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).



- 2 Press the button all the way down.
- Focus and exposure lock via the shutter button is only available when **ON** is selected for **BUTTON/DIAL SETTING** > **SHUTTER AF**, **SHUTTER AE**.

Other Controls

Focus and exposure can also be locked with the AF-L and AE-L buttons. At default settings, the AF-L button locks focus, the **AE-L** button exposure.




- While the assigned control is pressed, pressing the shutter button halfway will not end the lock.
- If AE&AF ON/OFF SWITCH is selected for BUTTON/DIAL **SETTING** > **AE/AF-LOCK MODE**, the lock can only be ended by pressing the control a second time.
- The focus lever (focus stick) can be used to reposition the focus point during exposure lock.
 - The AE-L and AF-L buttons can be assigned other roles using **BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING.** Exposure and focus lock can also be assigned to other buttons (\$\equiv 255)\$.



Bracketing

Automatically vary settings over a series of pictures.

 1 Rotate the drive dial to BKT1 or BKT2.



2 Navigate to DRIVE SETTING in the ■ SHOOTING SETTING menu and select the desired bracketing option using BKT1 SETTING/BKT2 SETTING > BKT SELECT (■ 141).

Bracketing type	
™ AE BKT	85
SSSI ISO BKT	85
☐ FILM SIMULATION BKT	85
WBJ WHITE BALANCE BKT	86
DEI DYNAMIC RANGE BKT	86
FOCUS BKT	87

- 3 Adjust bracketing settings as desired.
- 4 Take pictures.

AE BKT

Choose the number of shots in the bracketing sequence and the order in which the shots are taken. Settings can be adjusted using **SHOOTING SETTING > DRIVE SETTING > BKT1 SETTING/** RKT2 SETTING > AF RKT

Option	Description
FRAMES/STEP SETTING	Choose the number of shots in the bracketing sequence and the amount exposure is varied with each shot. • FRAMES: Choose the number of shots in the bracketing
	sequence. • STEP: Choose the amount exposure is varied with each shot.
1 FRAME/CONTINUOUS	• CONTINUOUS : The shots in the bracketing sequence are tak-
SEQUENCE SETTING	en in a single burst. Choose the order in which the shots are taken.



Regardless of the bracketing amount, exposure will not exceed the limits of the exposure metering system.

ISO ISO BKT

Each time the shutter is released, the camera will take a picture at the current sensitivity and process it to create two additional copies, one with sensitivity raised and the other with sensitivity lowered by a selected amount. The amount can be chosen using **SHOOTING SETTING > DRIVE SETTING > BKT1 SETTING/** BKT2 SETTING > ISO BKT.

Options				
±1/ ₃ ±2/ ₃ ±1				

III FILM SIMULATION BKT

Each time the shutter is released, the camera takes one shot and processes it to create copies with different film simulation settings (\$\equiv 106\$). Film simulation settings can be chosen using SHOOTING SETTING > DRIVE SETTING > BKT1 SETTING/ BKT2 SETTING > FILM SIMULATION BKT.

WBI WHITE BALANCE BKT

Each time the shutter is released, the camera will take a picture at the current white balance setting and process it to create two additional copies, one with fine-tuning increased and the other with fine-tuning decreased by a selected amount. The amount can be chosen using SHOOTING SETTING > DRIVE SETTING > BKT1 SETTING/BKT2 SETTING > WHITE BALANCE BKT.

Options			
±1 ±2 ±3			

DRI DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots with different dynamic ranges: 100% for the first, 200% for the second, and 400% for the third.



While dynamic range bracketing is in effect, sensitivity will be restricted to a minimum of ISO 640; the sensitivity previously in effect is restored when bracketing ends.

FOCUS BKT

Each time the shutter button is pressed, the camera takes a series of photos, varying focus with each shot. Settings can be adjusted using SHOOTING SETTING > DRIVE SETTING > BKT1 SETTING/BKT2 SETTING > FOCUS BKT.

Options		
MANUAL	AUTO	



- Do not adjust zoom during shooting.
 - Use of a tripod is recommended.


MANUAL

In MANUAL mode, you choose the following.

Option	Description	
FRAMES	Choose the number of shots.	
STEP	Choose the amount focus changes with each shot.	
INTERVAL	Choose the interval between shots.	

Focus and FRAMES/STEP

The relation between focus and the options chosen for FRAMES and **STEP** is shown in the illustration.

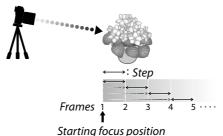

- Focus proceeds from the starting position toward infinity.
- Small **STEP** values translate to small changes in focus, larger values to larger changes.
- Regardless of the option chosen for **FRAMES**, shooting ends when focus reaches infinity.

AUTO

In **AUTO** mode, the camera calculates **FRAMES** and **STEP** automatically.

- Select AUTO and choose an INTERVAL.
 The view through the lens will be displayed.
- 2 Focus on the nearest end of the subject and press MENU/OK.
 The selected focus distance appears as A on the focus distance indicator.



- The same focus range can be chosen by focusing on the farthest end of the subject first.
- 3 Focus on the farthest end of the subject and press DISP/BACK.
 The selected focus distance (B) and focus range (A to B) appear on the focus distance indicator.



- Instead of pressing the **DISP/BACK** button, you can press **MENU/OK** and select **A** again.
- 4 Take photographs. The camera will calculate values for FRAMES and STEP automatically. The number of frames will appear in the display.

 


BKT1 SETTING and BKT2 SETTING use the same values for A and B.

Continuous Shooting (Burst Mode)

Capture motion in a series of pictures.

1 Rotate the drive dial to select **CH** (highspeed burst) or **CL** (low-speed burst).



2 Navigate to DRIVE SETTING > CH HIGH SPEED BURST or CL LOW SPEED BURST in the SHOOTING SETTING menu and choose a frame advance rate.

Option	Description			
	Select the frame rate used when the drive dial is rotated to CH (high-speed burst). The display frame rate when the electronic shutter is used is 40 fps, or 60 fps			
	in 1.25× crop mode.			
CH HIGH SPEED BURST		0pti	ions	
	30fps(1.25X CROP) 🐼 * 20fps(1.25X CROP) 🐼 *		1.25X CROP) S *	
	10fps(1.25X CROP) ⑤ * 20fps ⑥ *		20fps 基 3 *	
	10fps ≦ 3 * 8.0fps		8.0fps	
	* Available with electronic shutter only.			
	Select the frame rate used when the drive dial is rotat-			
CL LOW SPEED BURST	ed to CL (low-speed burst).			
	Options			
	5.0fps	4.0	fps	3.0fps

3 The camera will take pictures continuously while the shutter-release button is pressed.

Shooting ends when the shutter button is released or the memory card is full.



- Frame advance rates of 10 fps or faster are available only when **ES ELECTRONIC SHUTTER** is selected for **SHOOTING SETTING** > SHUTTER TYPE.
 - If file numbering reaches 999 before shooting is complete, the remaining pictures will be recorded to a new folder.
 - Shooting ends when the memory card is full; the camera will record all photos shot to that point. Burst shooting may not begin if the space available on the memory card is insufficient.
 - Frame rates may slow as more shots are taken.
 - Frame rate varies with the scene, shutter speed, sensitivity, and focus mode
 - Depending on shooting conditions, frame rates may slow or the flash may not fire.
 - Recording times may increase during burst shooting.

Focus and Exposure -

- Select focus mode **C** to vary focus with shot.
- To vary exposure with each shot, select OFF for BUTTON/DIAL SETTING > SHUTTER AE.

 


Exposure and focus tracking performance may vary with such factors as aperture, sensitivity, and exposure compensation.


Panoramas

Follow an on-screen guide to create a panorama.

1 Rotate the drive dial to ☐ (Panorama).



- 2 To select the size of the angle through which you will pan the camera while shooting, press the focus stick (focus lever) left. Highlight a size and press MENU/OK.
- 3 Press the focus stick right to view a choice of pan directions. Highlight a pan direction and press MENU/OK.
- 4 Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.
- 5 Pan the camera in the direction shown by the arrow. Shooting ends automatically when the camera is panned to the end of the guides and the panorama is complete.

 

For Best Results

 
- Move the camera slowly in a small circle at a steady speed
- Keep the camera parallel or at right angles to the horizon and be sure to pan only in the direction shown by the guides
- Try panning at a different speed if the desired results are not achieved
- Prop your elbows against your sides
- Use a tripod
- For best results, use a lens with a focal length of 35 mm or less (50 mm or less in 35 mm format).
- If the shutter button is pressed all the way down before the panorama is complete, shooting will end and no panorama may be recorded.
 - The last part of the panorama may not be recorded if shooting ends before the panorama is complete.
 - Panoramas are created from multiple frames, and the camera may in some cases be unable to stitch the frames together perfectly.
 - Panoramas may be blurred if the subject is poorly lit.
 - Shooting may be interrupted if the camera is panned too guickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.
 - The camera may in some cases record a greater or lesser angle than selected
 - The desired results may not be achieved with:
 - Moving subjects
 - Subjects close to the camera
 - Unvarying subjects such as the sky or a field of grass
 - Subjects that are in constant motion, such as waves and waterfalls
 - Subjects that undergo marked changes in brightness
 - If ON is selected for BUTTON/DIAL SETTING > SHUTTER AE, exposure for the entire panorama is determined by the first frame.

Viewing Panoramas-

With the panorama displayed full frame, press the focus stick (focus lever) down to start panorama playback. Vertical panoramas will scroll vertically, horizontal panoramas horizontally.







- In full-frame playback, you can use the rear command dial to zoom panoramas in or out.
- Panorama playback is controlled using the focus stick.


Focus stick (focus lever)	Full-frame playback	Panorama playback	Panorama playback paused
Up	_	End playback	
Down	Start playback	Pause playback	Resume playback
Left/right	View other pictures	Choose pan direction	Scroll panorama manually

Multiple Exposures

Create a photograph that combines multiple exposures.



 1 Rotate the drive dial to (Multiple exposure).



2 Choose a blend mode using **SHOOTING SETTING** > **DRIVE SETTING** > **MULTIPLE EXPOSURE CTRL**.

Option	Description
ADDITIVE	The camera adds the exposures together. You may need to lower exposure compensation depending on the number of shots.
AVERAGE	The camera automatically optimizes exposure for the final picture. The background in series shot without changing the composition will be optimally exposed.
LIGHT	The camera compares the exposures and chooses only the brightest pixel at each location. Colors may be mixed depending on their brightness and hue.
DARK	The camera compares the exposures and chooses only the darkest pixel at each location. Colors may be mixed depending on their brightness and hue.

3 Take the first shot.

4 Press MENU/OK. The first shot will be shown superimposed on the view through the lens and you will be prompted to take the second shot.



- To return to the previous step and retake the first shot, press the focus stick (focus lever) left.
 - To save the first shot and exit without creating a multiple exposure, press DISP/BACK.
- 5 Take the second shot, using the first frame as a guide.



6 Press MENU/OK.

The combined exposures will be displayed as a guide to composing the next shot.

 


- To return to the previous step and retake the second shot, press the focus stick left.
 - To end shooting and create a multiple exposure from the shots taken to this point, press DISP/BACK.
- 7 Make additional exposures. Each photograph can contain up to nine exposures.
- **R** Press **DISP/BACK** to end shooting. The camera will create the combined image and multiple exposure shooting will end.

Advanced Filters

Take photos with filter effects.

1 Rotate the drive dial to Adv.1 or Adv.2 (Advanced filter).



- 2 Navigate to DRIVE SETTING > Adv. FILTER 1 SELECT or Adv. FILTER 2 SELECT in the ■ SHOOTING SETTING menu and choose the desired filter effect.
- 3 Take photographs.

Advanced Filter Options

Choose from the following filters:

Filter	Description		
₩ TOY CAMERA	Choose for a retro toy camera effect.		
MINIATURE	The tops and bottoms of pictures are blurred for a		
MINIATORE	diorama effect.		
R POP COLOR	Create high-contrast images with saturated colors.		
Æ HIGH-KEY	Create bright, low-contrast images.		
LOW-KEY	Create uniformly dark tones with few areas of em-		
COVER LOVV-RLI	phasized highlights.		
CONTRACTOR DYNAMIC TONE	Dynamic tone expression is used for a fantasy effect.		
€ SOFT FOCUS	Create a look that is evenly soft throughout the		
SOFT SUFT FUCUS	whole image.		
A PARTIAL COLOR (RED)			
A PARTIAL COLOR (ORANGE)	Areas of the image that are the selected color are		
A PARTIAL COLOR (YELLOW)	recorded in that color. All other areas of the image		
A PARTIAL COLOR (GREEN)	are recorded in black-and-white.		
A PARTIAL COLOR (BLUE)	are recorded in black and write.		
A PARTIAL COLOR (PURPLE)			




Depending on the subject and camera settings, images may in some cases be grainy or vary in brightness or hue.

Flash Photography

Use the built-in flash for additional lighting when shooting at night or indoors under low light.

1 Slide the 4 lever as shown to raise the flash.

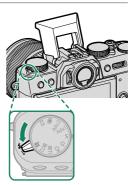

2 Select FLASH FUNCTION SETTING in the FLASH SETTING menu. The camera will display options for the built-in flash.



① Sync terminal options will be displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe (■ 270). Raise the flash before adjusting settings.

3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting (100).



- 4 Press DISP/BACK to put the changes into effect.
- Depending on the distance to the subject, some lenses may cast shadows in photos taken with the flash.
 - Be careful not to injure yourself on the edges of the raised flash.
 - The flash will not fire at some settings, for example in panorama mode or when the electronic shutter is used.
 - Choose shutter speeds slower than 180X when using the flash in exposure mode S (shutter-priority AE) or manual (M).
- In TTL mode, the flash may fire several times with each shot. Do not move the camera until shooting is complete.
 - The flash will not fire if OFF is selected for SOUND & FLASH in the USER SETTING menu.

Flash Settings

The following settings are available with the built-in flash.



Setting	Description			
1 Flash control mode	Choose from the following options: • TTL: TTL mode. Adjust flash compensation (②) and choose a flash mode (③). • M: The flash fires at the selected output (②) regardless of subject brightness or camera settings. Output is expressed in fractions of full power, from ⅓ to ⅙4. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results. • M€ (primary flash): Choose if the flash is being used as a primary flash controlling secondly flash units, for example as part of a studio flash system. • ③OFF (OFF): The flash does not fire.			
	Adjust flash level. The options available vary with the flash control mode (\bigcirc).			

Setting	Description
③ Flash mode (TTL)	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P, S, A, or M) selected. • 無 (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A icon displayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken. • 無 (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released. • 無 (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.
Sync	Choose whether the flash is timed to fire immediately after the shutter opens ($_{REAR}^{\bullet}/2ND$ CURTAIN) or immediately before it closes ($_{REAR}^{\bullet}/2ND$ CURTAIN). 1ST CURTAIN is recommended in most circumstances.

Red-Eye Removal

Red-eye removal is available when an option other than **OFF** is selected for **\(\) FLASH SETTING** > **RED EYE REMOVAL** and **\(\) AF/MF SETTING** > **FACE/EYE DETECTION SETTING** is **FACE DETECTION ON**. Red-eye removal minimizes "red-eye" caused when light from the flash is reflected from the subject's retinas.

Flash Sync Speed-

The flash will synchronize with the shutter at shutter speeds of %80 s or slower.

Optional Flash Units from Fujifilm

The camera can be used with optional Fujifilm shoe-mounted flash units.

Third-Party Flash Units

Do not use third-party flash units that apply over 300 V to the camera hot shoe.

MEMO

The Shooting Menus



IMAGE QUALITY SETTING (Still Photography)

Adjust image quality settings for still photography.

To display image quality settings, press MENU/OK in the photo shooting display and select the (IMAGE QUALITY SETTING) tab.





The options available vary with the shooting mode selected.

IMAGE SIZE

Choose the size and aspect ratio at which still pictures are recorded.

Option	lmage size	Option	lmage size
3:2	6240 × 4160	1:1	4160 × 4160
1 6:9	6240 × 3512		
Option	lmage size	Option	lmage size
M 3:2	4416 × 2944	M 1:1	2944 × 2944
M 16:9	4416 × 2488		
Option	lmage size	Option	lmage size
§ 3:2	3120 × 2080	§ 1:1	2080 × 2080
\$ 16:9	3120 × 1760		

The following options are available in SPORTS FINDER MODE and when 1.25X CROP is selected in CH HIGH SPEED BURST mode:

Option	lmage size	Option	lmage size
M 3:2	4992×3328	M 1:1	3328×3328
M 16:9	4992×2808		•



IMAGE SIZE is not reset when the camera is turned off or another shooting mode is selected.

IMAGE QUALITY

Choose a file format and compression ratio.

Option	Description
FINE	Low compression ratios are used for higher-quality images.
NORMAL	Higher compression ratios are used to increase the number of
	images that can be stored.
FINE + RAW	Record both RAW and fine-quality JPEG images.
NORMAL + RAW	Record both RAW and normal-quality JPEG images.
RAW	Record RAW images only.

The Function Buttons

To toggle RAW image quality on or off for a single shot, assign **RAW** to a function button (№ 255). Press the button once to select the option in the right column, again to return to the original setting (left column).

Option selected by pressing function button to which RAW is assigned
FINE + RAW
NORMAL + RAW
FINE
NORMAL
FINE

RAW RECORDING

Choose whether to compress RAW images.

Option	Description
UNCOMPRESSED	RAW images are not compressed.
LOSSLESS COMPRESSED	RAW images are compressed using a reversible algorithm that reduces file size with no loss of image data. The images can be viewed in Capture One Express Fujifilm (1999), RAW FILE CONVERTER EX powered by SILKYPIX (1999), FUJIFILM X RAW STUDIO (1999), or other software that supports "lossless" RAW compression. Quality is the same as UNCOMPRESSED , but the resulting files are anywhere from about 30 to 90 percent of their uncompressed size.
COMPRESSED	RAW images are compressed using a "lossy", non-reversible algorithm. Quality is about the same as UNCOMPRESSED , but the resulting files are anywhere from about 25 to 35 percent of their uncompressed size.

FILM SIMULATION

Simulate the effects of different kinds of film, including blackand-white (with or without color filters). Choose a palette according to your subject and creative intent.

Option	Description
AUTO	The camera chooses the film simulation. This option is available when the auto mode selector lever is rotated to • AUTO.
PROVIA/STANDARD	Ideal for a wide range of subjects.
V Velvia/VIVID	Vibrant reproduction, ideal for landscape and nature.
S ASTIA/SOFT	Softer color and contrast for a more subdued look.
CC CLASSIC CHROME	Soft color and enhanced shadow contrast for a calm look.

Option	Description
NH PRO Neg. Hi	Ideal for portrait with slightly enhanced contrast.
Ns PRO Neg. Std	Ideal for portrait with soft gradations and skin tones.
ÑՇ CLASSIC Neg.	Enhanced color with hard tonality to increase image depth.
E ETERNA/CINEMA	Soft color and rich shadow tone suitable for film look movie.
EB ETERNA BLEACH BYPASS	Unique color with low saturation and high contrast. Suitable for still and movie.
Ā ₩ ACROS	Shoot in Black and White In rich details with sharpness. Available with yellow (Ye), red (R), and green (G) filters, which deepen shades of gray corresponding to hues complementary to the selected color. • AT ACROS+Ye FILTER: Slightly enhances contrast and darkens skies. • AT ACROS+R FILTER: Enhances contrast and darkens skies considerably. • AT ACROS+G FILTER: Produces pleasing skin tones in portrait.
B MONOCHROME	Shoots in black and white. Available with yellow (Ye), red (R), and green (G) filters, which deepen shades of gray corresponding to hues complementary to the selected color. • By MONOCHROME+Ye FILTER: Slightly enhances contrast and darkens skies. • By MONOCHROME+R FILTER: Enhances contrast and darkens skies considerably. • By MONOCHROME+G FILTER: Produces pleasing skin tones in portrait.
SEPIA SEPIA	Shoots in sepia tone.



- Film simulation options can be combined with tone and sharpness settings.
 - Film simulation settings can also be accessed via shortcuts (🕮 246).
 - For more information, visit: https://fujifilm-x.com/global/tag/the-world-of-film-simulation/?post_type=xstories

MONOCHROMATIC COLOR

Add a reddish or bluish tinge (warm or cool color cast) to the ACROS and MONOCHROME monochrome film simulations. Color can be adjusted on the WARM-COOL and G (Green)-M (Magenta) axes.



GRAIN EFFECT

Add a film grain effect.

ROUGHNESS

Option	Description
STRONG	Choose for rougher grains.
WEAK	Choose for smoother grains.
OFF	Turn the effect off.

SIZE

Option	Description	
LARGE	Choose for coarser grains.	
SMALL	Choose for finer grains.	

COLOR CHROME EFFECT

Increase the range of tones available for rendering colors that tend to be highly saturated, such as reds, yellows, and greens.

Option	Description
STRONG	Choose for a strong effect.
WEAK	Choose for a weak effect.
OFF	Turn the effect off.

COLOR CHROME FX BLUE

Increase the range of tones available for rendering blues.

Option	Description
STRONG	Choose for a strong effect.
WEAK	Choose for a weak effect.
OFF	Turn the effect off.

WHITE BALANCE

For natural colors, choose a white balance option that matches the light source.

Option	Description	
₩ AUTO WHITE	White balance is adjusted automatically. Choose for whiter	
PRIORITY	whites in scenes lit by incandescent bulbs.	
AUTO	White balance is adjusted automatically.	
AUTO AMBIENCE	White balance is adjusted automatically. Choose for warmer	
PRIORITY	whites in scenes lit by incandescent bulbs.	
₽₁ CUSTOM 1		
₽2 CUSTOM 2	Measure a value for white balance.	
Q₃ CUSTOM 3		
K COLOR	Choose a color temperature.	
TEMPERATURE		
* DAYLIGHT	For subjects in direct sunlight.	
₹ SHADE	For subjects in the shade.	
岩 FLUORESCENT	Use under "daylight" fluorescent lights.	
LIGHT-1	ose under daylight habiescent lights.	
岩 FLUORESCENT	Use under "warm white" fluorescent lights.	
LIGHT-2		
岩 FLUORESCENT	Use under "cool white" fluorescent lights.	
LIGHT-3		
-∴ INCANDESCENT	Use under incandescent lighting.	
UNDERWATER	Reduces the blue cast typically associated with underwater lighting.	



- In conditions in which **AUTO** fails to produce the desired results—for example, under certain types of lighting or in close-ups of portrait subjects—use custom white balance or choose a white balance option suited to the light source.
 - White balance is adjusted for flash lighting only in AUTO, W AUTO WHITE PRIORITY, AUTO AMBIENCE PRIORITY, and modes. Turn the flash off using other white balance options.
 - White balance options can also be accessed via shortcuts (12) 246).

Fine-Tuning White Balance

Pressing MENU/OK after selecting a white balance option displays a fine-tuning dialog; use the focus stick (focus lever) to fine-tune white balance.





- To exit without fine-tuning white balance, press DISP/BACK after selecting a white balance option.
 - You cannot tilt the focus stick diagonally when fine-tuning white balance

Custom White Balance

Choose Ω_1 , Ω_2 , or Ω_3 to adjust white balance for unusual lighting conditions using a white object as a reference (colored objects can also be used to lend photos a color cast). A white balance target will be displayed; position and size



the target so that it is filled by the reference object and press the shutter button all the way down to measure white balance (to select the most recent custom value and exit without measuring white balance, press **DISP/BACK**, or press **MENU/OK** to select the most recent value and display the fine-tuning dialog).

- If "COMPLETED!" is displayed, press MENU/OK to set white balance to the measured value.
- If "UNDER" is displayed, raise exposure compensation and try again.
- If "OVER" is displayed, lower exposure compensation and try again.



K: Color Temperature

Adjust white balance to match the color temperature of the light source.

- Olor temperature can be adjusted to make pictures "warmer" or "colder" or deliberately produce colors that differ radically from those in real life.
 - 1 Select K in the white balance menu. The option currently selected for color temperature will be displayed.



? Edit the color temperature using the focus stick (focus lever) and press MFNU/OK

A fine-tuning dialog will be displayed.



- You can also adjust color temperature in increments of 10 K by rotating the rear command dial.
 - Choose from values of from 2500 to 10000 K.
 - To exit without fine-tuning white balance, press DISP/BACK after choosing a color temperature.
- 3 Highlight a fine-tuning amount using the focus stick.
- Press MENU/OK. The changes will be applied. The selected color temperature will appear in the display.



Color Temperature

Color temperature is an objective measure of the color of a light source, expressed in Kelvin (K). Light sources with a color temperature close to that of direct sunlight appear white; light sources with a lower color temperature have a yellow or red cast, while those with a higher color temperature are tinged with blue.

DYNAMIC RANGE

Adjust dynamic range. Wide dynamic ranges reduce loss of detail in highlights for more natural results with high-contrast or backlit scenes.

Opt	tion	Description
AUTO	R100 100%	Choose for increased contrast.
AUIU	R200 200%	‡
R400 400%		Reduce loss of detail in highlights.

- Mottling may appear in pictures taken at higher values. Choose a value according to the scene.
- If AUTO is selected, the camera will automatically choose either 100% or 200% according to the subject and shooting conditions. Shutter speed and aperture will be displayed when the shutter button is pressed halfway.
 - 200 200% is available at sensitivities of from ISO 320 to ISO 12800, 400 400% at sensitivities of from ISO 640 to 12800.

D RANGE PRIORITY

Reduce loss of detail in highlights and shadows for natural-looking results when photographing high-contrast scenes.

Option	Description				
AUTO	Contrast is adjusted automatically in response to lighting con-				
AUIU	ditions.				
STRONG	Adjust dynamic range by a large amount for very high-contrast				
JINUNU	scenes.				
WEAK	Adjust dynamic range by a smaller amount for moderately				
WEAR	high-contrast scenes.				
OFF	Contrast reduction off.				



- **♦ WEAK** is available at sensitivities of from ISO 320 to ISO 12800, **STRONG** at sensitivities of from ISO 640 to 12800.
 - When an option other than OFF is selected, TONE CURVE, and **DYNAMIC RANGE** will be adjusted automatically.

TONE CURVE


With reference to a tone curve, adjust the appearance of highlights or shadows, making them harsher or softer. Choose higher values to make shadows and highlights harsher, lower values to make them softer.



Option	Description		
HIGHLIGHTS	-2 to +4		
SHADOWS	-2 to +4		

COLOR

 Adjust color density. Choose higher values to increase saturation, lower values to reduce it.



SHARPNESS

Sharpen or soften outlines. Choose higher values for sharper outlines, lower values for softer outlines.



HIGH ISO NR

Reduce noise in pictures taken at high sensitivities. Choose higher values to reduce noise and smooth outlines, lower values to leave outlines visible.

Options								
-4	-3	-2	-1	0	+1	+2	+3	+4

CLARITY

Increase definition while altering tones in highlights and shadows as little as possible. Choose higher values for increased definition, lower values for a softer effect.



- The additional processing required at settings other than 0 increases the time need to save each shot.
- Clarity is adjusted automatically when the auto mode selector lever is rotated to ● AUTO.

LONG EXPOSURE NR

Select **ON** to reduce mottling in long time-exposures.

Options			
ON	OFF		

The additional processing required when ON is selected increases save times.

LENS MODULATION OPTIMIZER

Select **ON** to improve definition by adjusting for diffraction and the slight loss of focus at the periphery of the lens.

Options			
ON	OFF		

COLOR SPACE

Choose the gamut of colors available for color reproduction.

	Option	Description		
	sRGB	Recommended in most situations.		
_	Adobe RGB	For commercial printing.		

PIXEL MAPPING

Use this option if you notice bright spots in your pictures.

- 1 Press MENU/OK in the shooting display and select the III IMAGE QUALITY SETTING tab.
- 2 Highlight PIXEL MAPPING and press MENU/OK to perform pixel mapping.
- Results are not guaranteed.
 - Be sure the battery is fully charged before beginning pixel mapping.
 - Pixel mapping is not available when the camera temperature is elevated.
 - Processing may take a few seconds.

SELECT CUSTOM SETTING

Recall settings saved to custom settings banks 1 through 7 (CUSTOM 1 through CUSTOM 7) using EDIT/SAVE CUSTOM SETTING

Banks					
NOTHING SELECTED	CUSTOM 1	CUSTOM 2	CUSTOM 3		
CUSTOM 4	CUSTOM 5	CUSTOM 6	CUSTOM 7		



If you would prefer not to recall saved settings, select **NOTHING** SELECTED.

EDIT/SAVE CUSTOM SETTING

Adjust settings as desired and save them to a custom settings bank. Saved settings can be recalled using IMAGE QUALITY SETTING > SELECT CUSTOM SETTING.

Saving Custom Settings

Create a new custom settings bank.

- 1 Select IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM **SETTING** in the shooting menu and press **MENU/OK**.
- **)** Highlight a destination bank for the new settings (CREATE NEW C1 through C7) and press MENU/OK. A confirmation dialog will be displayed.
- 3 Highlight OK and press MENU/OK. Current camera settings will be saved to the selected bank.





 
Editing Custom Settings

Edit existing custom settings banks.

- 1 Select MIMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
- 2 Highlight the desired custom settings bank and press MENU/OK.



3 Highlight EDIT/CHECK and press MENU/OK.



4 The camera will display a list of shooting menu items; highlight an item you wish to edit and press MENU/OK. Adjust the selected item as desired.



5 Press MENU/OK to save the changes and return to the shooting menu list.

Adjust additional items as desired.

- If **DISABLE** is selected for **IMAGE QUALITY SETTING** > **AUTO UPDATE CUSTOM SETTING**, red dots will appear next to the edited items but the changes will not be saved automatically.
 - To save the changes for selected items, highlight the items in the list and press **Q**.
 - To save changes for all items, return to Step 3 and select SAVE THE CHANGES. To cancel all changes and restore the previous settings, select RESET THE CHANGES.
 - If you copy an item marked by a red dot, the item will be copied with the changes intact.

Copying Custom Settings

Copy custom settings from one bank to another, overwriting the settings in the destination bank. If the source bank has been renamed, the name will also be copied to the destination bank.

- 1 Select IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
- **7** Highlight the source bank and press MENU/OK.



3 Highlight COPY and press MENU/OK.



4 Highlight the destination bank (C1 through C7) and press MENU/OK. A confirmation dialog will be displayed.



Any changes to custom settings in the destination bank will be overwritten.

5 Highlight OK and press MENU/OK. The selected settings will be copied to the destination bank, overwriting any existing settings.





 
Deleting Custom Settings

Delete settings from selected custom settings banks.

- 1 Select IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
- 2 Highlight the desired custom settings bank and press MENU/OK.



3 Highlight ERASE and press MENU/OK. A confirmation dialog will be displayed.



4 Highlight OK and press MENU/OK. Any custom settings saved to the selected bank will be deleted.



Renaming Custom Settings Banks

Rename selected custom settings banks.

- 1 Select ☑ IMAGE QUALITY SETTING > EDIT/SAVE CUSTOM SETTING in the shooting menu and press MENU/OK.
- **2** Highlight the desired custom settings bank and press **MENU/OK**.



3 Highlight EDIT CUSTOM NAME and press MENU/OK.



4 Enter a new name for the custom settings bank and select SET.

The selected bank will be renamed.

AUTO UPDATE CUSTOM SETTING

Choose whether changes to saved custom settings apply automatically.

Option	Description
	Changes to custom settings banks CUSTOM 1 through CUSTOM 7 apply automatically.
	Changes do not apply automatically. Any changes to custom settings must be applied manually (🗎 119).

™ MOUNT ADAPTOR SETTING

Adjust settings for lenses attached via a mount adapter. The camera can store settings for multiple lenses (LENS 1 through LENS 6).



Any changes made using this item also apply in movie mode (🕮 170).

 
Choosing a Focal Length

Enter the lens's true focal length.



Distortion Correction


Choose from STRONG, MEDIUM, WEAK options to correct BARREL or **PINCUSHION** distortion.



Color Shading Correction

Color (shading) variations between the center and edges of the frame can be adjusted separately for each corner.

 To use color shading correction, follow the steps below.



- 1 Rotate the rear command dial to choose a corner. The selected corner is indicated by a triangle.
- 2 Use the focus stick (focus lever) to adjust shading until there is no visible difference in color between the selected corner and the center of the image.
 - Press the focus stick left or right to adjust colors on the cyan-red axis.
 - Press the focus stick up or down to adjust colors on the blue-yellow axis.
- To determine the amount required, adjust color shading correction while taking photos of blue sky or a sheet of gray paper.

Peripheral Illumination Correction

Choose from values between -5 and +5. Choosing positive values increases peripheral illumination, while choosing negative values reduces peripheral illumination. Positive values are recommended for vintage lenses, negative val-



ues to create the effect of images taken with an antique lens or a pinhole camera.



To determine the amount required, adjust peripheral illumination correction while taking photos of blue sky or a sheet of gray paper.

EDIT LENS NAME

Change the lens name.



AF/MF SETTING (Still Photography)

Adjust focus settings for still photography.

To display AF/MF settings, press MENU/OK in the photo shooting display and select the M (AF/MF SETTING) tab.





The options available vary with the shooting mode selected.

FOCUS AREA

Choose the focus area for autofocus, manual focus, and focus zoom (69).

AF MODE

Choose the AF mode for focus modes **S** and **C** (🕮 67).

AF-C CUSTOM SETTINGS

Select focus-tracking options for focus mode **C**. Choose from Sets 1 (**SET 1**) through 5 (**SET 5**) according to your subject or select **SET 6 CUSTOM** for custom focus-tracking options.



Option	Description
SET 1 MULTI PURPOSE	A standard tracking option that works well with the typical range of moving subjects.
SET 2 IGNORE OBSTACLES & CONTINUE TO TRACK SUBJECT	The focus system attempts to track the chosen subject. Choose with subjects that are hard to keep in the focus area or if other objects are likely to enter the focus area with the subject.
SET 3 FOR ACCELERATING/ DECELERATING SUBJECT	The focus system attempts to compensate for subject acceleration or deceleration. Choose for subjects prone to rapid changes in velocity.
SET 4 FOR SUDDENLY APPEARING SUBJECT	The focus system attempts to focus quickly on subjects entering the focus area. Choose for subjects that appear abruptly or when rapidly switching subjects.
SET 5 FOR ERRATICALLY MOVING & ACCEL./DECEL. SUBJECT	Choose for hard-to-track subjects prone not only to sudden changes in velocity but also to large movements front to back and left to right.
SET 6 CUSTOM	Adjust TRACKING SENSITIVITY , SPEED TRACKING SENSITIVITY , and ZONE AREA SWITCHING to suit your preferences based on the values for Sets 1–5 (🕮 128, 130).

Focus Tracking Options

The individual parameters that are part of a focus tracking set are described below.

TRACKING SENSITIVITY

This parameter determines how long the camera waits to switch focus when an object enters the focus area behind or in front of the current subject. The higher the value, the longer the camera will wait.



Options				
0	1	2	3	4


- The higher the value, the longer it takes the camera to refocus when you attempt to switch subjects.
 - The lower the value, the more likely the camera is to switch focus from your subject to other objects in the focus area.

SPEED TRACKING SENSITIVITY

This parameter determines how sensitive the tracking system is to changes in subject velocity. The higher the value, the greater the precision with which the system attempts to respond to sudden movement.



Options		
0	1	2

 

ZONE AREA SWITCHING

This parameter determines the focus area given priority in zone AF.



Option	Description
FRONT	Zone AF assigns priority to the subjects closest to the camera.
	The camera locks focus on the subject at the center of the zone
AUTU	and then switches focus areas as necessary to track it.
CENTER	Zone AF assigns priority to subjects in the center of the zone.

This option takes effect only when **TONE** is selected for AF mode.

Set Values-

Parameter values for the different sets are listed below.

	TRACKING SENSITIVITY	SPEED TRACKING SENSITIVITY	ZONE AREA SWITCHING
SET 1	2	0	AUTO
SET 2	3	0	CENTER
SET 3	2	2	AUTO
SET 4	0	1	FRONT
SET 5	3	2	AUTO

Custom Focus Tracking Options

Follow the steps below to adjust settings for Set 6.

1 Select AF-C CUSTOM SETTINGS > SET 6 CUSTOM.



- 2 Highlight items using the focus stick (focus lever) and rotate the front command dial to change. To reset settings to their original values, press m.
- 3 Press DISP/BACK when settings are complete.

STORE AF MODE BY ORIENTATION

Choose whether the AF mode used when the camera is in portrait orientation is stored separately from that used when the camera is in landscape orientation.

Option	Description
OFF	The same settings are used in both orientations.
FOCUS AREA ONLY	The focus area for each orientation can be selected sep-
FOCOS ARLA UNLI	arately.
ON	The focus mode and focus area can be selected separately.

AF POINT DISPLAY 🔟 🔲

Choose whether individual focus frames are displayed when **ZONE** or **WIDE/TRACKING** is selected for **MAF/MF SETTING** > **AF MODE**.

Options	
ON	OFF

NUMBER OF FOCUS POINTS

Choose the number of focus points available for focus-point selection in manual focus mode or when **SINGLE POINT** is selected for **AF MODE**.

Option	Description
117 POINTS (9 × 13)	Choose from 117 focus points arranged in a 9- by 13-point
117 TOINTS (5 × 13)	grid.
425 POINTS (17 × 25)	Choose from 425 focus points arranged in a 17- by 25-point
	grid.

PRE-AF

If **ON** is selected, the camera will continue to adjust focus even when the shutter button is not pressed halfway. The camera adjusts focus continuously, allowing it to focus faster when the shutter button is pressed halfway. Choosing this option helps prevent missed shots.

Options	
ON	OFF

① Choosing **ON** increases the drain on the battery.

AF ILLUMINATOR

If **ON** is selected, the AF-assist illuminator will light to assist autofocus.

Options		
ON	OFF	

- The camera may be unable to focus using the AF-assist illuminator in some cases.
 - If the camera is unable to focus, try increasing the distance to the subject.
 - Avoid shining the AF-assist illuminator directly into your subject's eyes.
- Any changes made using this item also apply in movie mode (🗐 172).

FACE/EYE DETECTION SETTING

If the camera detects human faces, it will assign them priority over the background and adjust settings appropriately for portraits when setting focus and exposure. You can also choose whether the camera focuses on the left or right eye when face detection is on



Option	Description
	Adjust settings for Intelligent Face Detection. You can also adjust eye detection settings. • 😰 EYE OFF: Intelligent Face Detection only.
FACE DETECTION ON	• EYE AUTO: The camera automatically chooses which eye to focus on when a face is detected.
	• R RIGHT EYE PRIORITY : The camera focuses on the right eye of subjects detected using Intelligent Face Detection.
	• L LEFT EYE PRIORITY: The camera focuses on the left eye of subjects detected using Intelligent Face Detection.
OFF	Intelligent Face Detection and eye priority off.

- If the subject moves as the shutter button is pressed, the face may not be in the area indicated by the green border when the picture is taken.
 - In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.
 - FACE DETECTION ON is selected automatically if the AUTO scene is chosen when the auto mode selector lever is rotated to • ALITO



- The face selected by the camera is indicated by a green border. Any other faces detected by the camera are indicated by gray borders. To have the camera focus on a different subject, tap inside the gray border. The 🔁 icon will change from white to green.
 - When **DIRECT AF POINT SELECTION/FACE SELECT** is chosen for can also switch subjects using the focus stick (focus lever) or (during viewfinder photography) touch controls (12).
 - To switch from face detection to manual focus-area selection, press the center of the focus stick (focus lever). Press again to re-enable face detection.
 - If the selected subject leaves the frame, the camera will wait a set time for its return and consequently the green frame may sometimes appear in locations where no face is seen.
 - You cannot switch subjects during burst photography.
 - Depending on shooting conditions, face selection may be suspended at the close of burst shooting.
 - Faces can be detected with the camera in vertical or horizontal orientation
 - If the camera is unable to detect the subject's eyes because they are hidden by hair, glasses, or other objects, the camera will instead focus on faces
 - Face/eye detection options can also be accessed via shortcuts (**246**).

AF+MF

If **ON** is selected in focus mode **S** and focus has been locked (whether by pressing the shutter button halfway or by other means), focus lock can be ended and focus adjusted manually by rotating the focus ring.

Options	
ON	OFF

- Lenses with a focus distance indicator must be set to manual focus mode (MF) before this option can be used. Selecting MF disables the focus distance indicator.
 - If the lens is equipped with a focus distance indicator, set the focus ring to the center, as the camera may fail to focus if the ring is set to infinity or the minimum focus distance.
- STANDARD and FOCUS PEAK HIGHLIGHT MF assist options can be selected using MF ASSIST.

AF + MF Focus Zoom-

When **ON** is selected for **AF/MF SETTING** > **FOCUS CHECK** and **SINGLE POINT** selected for **AF MODE**, focus zoom can be used to zoom in on the selected focus area. The zoom ratio can be selected using the rear command dial.

MF ASSIST

Choose how focus is displayed in manual focus mode.

Option	Description
STANDARD	Focus is displayed normally (focus peaking, digital split image, and
JIANVANU	digital microprism are not available).
	Displays a black-and-white (MONOCHROME) or color (COLOR)
DIGITAL SPLIT	split image in the center of the frame. Frame the subject in the
IMAGE	split-image area and rotate the focus ring until the four parts of
	the split image are correctly aligned.
DIGITAL	A grid pattern that emphasizes blur is displayed when the subject
MICROPRISM	is out of focus, disappearing to be replaced by a sharp image when
MICRUPRISM	the subject is in focus.
FOCUS PEAK	The camera heightens high-contrast outlines. Choose a color and
HIGHLIGHT	peaking level.



You can also choose MF assist options by holding the center of the rear command dial

FOCUS CHECK

If ON is selected, the display will automatically zoom in on the selected focus area when the focus ring is rotated in manual focus mode.

Options	
ON	OFF



- Pressing the center of the rear command dial cancels focus zoom.
 - The zoom position is centered on the current focus area and changes when the focus area is changed.

INTERLOCK SPOT AE & FOCUS AREA

Choose ON to meter the current focus frame when SPOT or **MULTI** metering is selected.

Options	
ON	OFF

☆ ☆ INSTANT AF SETTING

Choose whether the camera focuses using single AF (AF-S) or continuous AF (AF-C) when a button to which focus lock or AF-ON is assigned is pressed in manual focus mode.

Options	
AF-S	AF-C

Any changes made using this item also apply in movie mode (🕮 174).

Choose FILM FORMAT BASIS to help you make practical assessments of depth of field for pictures that will be viewed as prints and the like, PIXEL BASIS to help you assess depth of field for pictures that will be viewed at high resolutions on computers or other electronic displays.

Options	
PIXEL BASIS	FILM FORMAT BASIS



Any changes made using this item also apply in movie mode (1911).

RELEASE/FOCUS PRIORITY

Choose how the camera focuses in focus mode AF-S or AF-C

Option	Description
KFIFV	Shutter response is prioritized over focus. Pictures can be taken
NELLAJE	when the camera is not in focus.
FOUL	Focus is prioritized over shutter response. Pictures can be only taken when the camera is in focus.

Regardless of the option selected, pictures can still be taken when the camera is not in focus if **ON** is selected for **AF+MF**.

🗖 📽 AF RANGE LIMITER

Limit the range of available focus distances for increased focus speed.

Option	Description
OFF	Focus limiter disabled.
CUSTOM	Limit focus to a range of distances defined by a minimum and maximum. • OK: Limit focus to the selected range. • SET: Choose two objects and limit focus to the distance between them.
PRESET1	Limit focus to a preset range.
PRESET2	Little locus to a preser range.

- Choosing a focus range that includes distances shorter than the minimum focus distance of the lens disables the focus limiter.
 - The values listed and displayed for the focus limiter may differ from the actual focus distance
- The following additional operations can be performed when CUSTOM is selected:
 - You can tap objects in the touch screen display to choose the focus range.
 - Instead of tapping an object in the display, you set the maximum focus distance to infinity by rotating the focus ring.
 - Any changes made using this item also apply in movie mode (174).

☆ ☆ TOUCH SCREEN MODE

Choose the shooting operations performed using touch controls.

Mode	Description	
TOUCH SHOOTING	Tap your subject in the display to focus and release the shutter. In burst mode, pictures will be taken while you keep your finger on the display.	
AF AF OFF	 In focus mode S (AF-S), the camera focuses when you tap your subject in the display. Focus locks at the current distance until you tap the AF OFF icon. In focus mode C (AF-C), the camera initiates focus when you tap your subject display. The camera will continue to adjust focus for changes in the distance to the subject until you tap the AF OFF icon. In manual focus mode (MF), you can tap the display to focus on the selected subject using autofocus. 	
AREA AREA	Tap to select a point for focus or zoom. The focus frame will move to the selected point.	
OFF OFF	Touch controls disabled.	



 
- To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > **★** TOUCH SCREEN SETTING.
 - Any changes made using this item also apply in movie mode (**175**).

Touch Controls for Focus Zoom-

Different touch controls are used during focus zoom (focus check enabled).

Central Area


Tapping the center of the display performs the operations below.



Mode	Operation performed
TOUCH SHOOTING	AF-S/MF : Take a picture
AF	AF-S: AF
AF	MF : Instant AF
AREA	AF-S: AF
	MF : Instant AF
OFF	AF-S/MF: OFF

Other Areas

 Tapping other areas simply scrolls the display, whether during still photography or movie recording and regardless of the option selected for touch screen mode.





SHOOTING SETTING (Still Photography)

Adjust shooting options for still photography.

To display shooting settings, press MENU/OK in the photo shooting display and select the ☑ (SHOOTING SETTING) tab.



SCENE POSITION

Choose a scene for use when the auto mode selector lever is rotated to \bullet AUTO (\boxplus 62).

DRIVE SETTING


Adjust settings for the various drive modes.

Option	Description
BKT1 SETTING	Choose the settings used when the drive dial is rotated to
BKT2 SETTING	BKT1 or BKT2 (■ 84).
CH HIGH SPEED BURST	Select the frame rate used when the drive dial is rotated to
כח חומח ארבנט סטאאו	CH (high-speed burst) (🕮 89).
CL LOW SPEED BURST	Select the frame rate used when the drive dial is rotated to
	CL (low-speed burst) (🗐 89).
MULTIPLE EXPOSURE	Adjust multiple exposure options for use when the drive
CTRL	dial is rotated to 🖶 (multiple exposure) (🕮 94).
Adv. FILTER 1 SELECT	Choose the filter used when the drive dial is rotated to
Adv. FILTER 2 SELECT	Adv.1 or Adv.2 (🕮 96).


HDR

Each time the shutter button is pressed, the camera takes three shots, varying exposure each time, and combines them into a single picture. The resulting photograph preserves details in highlights and shadows. Follow the steps below to take HDR photos.

  Rotate the auto mode selector lever to ●.



 2 Rotate the drive dial to S (Single frame).



- 3 Select SHOOTING SETTING > HDR in the shooting menu and press MENU/OK.
- 4 Choose the amount the brightnesses of the exposures vary.

Option	Description
OFF	HDR disabled.
AUTO	Dynamic range is automatically set to a value of from 200%
AUTU	to 800%.
200%	Dynamic range is set to 200%.
400%	Dynamic range is set to 400%.
800%	Dynamic range is set to 800%.
800% +	Camera settings are adjusted for maximum variation in dy-
600% +	namic range.


5 Take photographs.
The camera will create a combined image.

- ① Keep the camera steady.
 - The desired results may not be achieved in the subject moves or the composition or lighting changes during shooting.
 - The picture will be cropped a very small amount and the resolution will drop slightly.
 - Mottling may appear in pictures taken at higher values. Choose a value according to the scene.
 - "Extended" sensitivity values are not supported.
 - Depending on the options selected for HDR and sensitivity, pictures may not be taken at the selected shutter speed.
 - The flash does not fire.



SPORTS FINDER MODE

Take pictures using the crop in the center of the display. Choose this option for pictures of athletes, birds, and other moving subjects.

 

Optio	n Description
ON	Pictures are taken using a 1.25× crop, reducing the picture angle by an amount equivalent to increasing lens focal length by 1.25×; the crop is shown by a frame in the display.
OFF	The 1.25× crop is disabled.



- The
 IMAGE QUALITY SETTING > IMAGE SIZE item in the shooting menu is fixed at M.
 - The sports finder is not available in modes that offer an electronic shutter

PRE-SHOT ES tale

To reduce the lag between your pressing the shutter button all the way down and the resulting picture being recorded to the memory card, the camera starts shooting with the electronic shutter when the shutter button is pressed halfway and saves a series shots starting just before the shutter button is pressed the rest of the way down.

Options		
ON	OFF	



Pre-shot photography is available only when **ES ELECTRONIC SHUTTER** is selected in **CH** (high speed burst) drive mode (148).

SELF-TIMER

Choose a shutter release delay.

Option	Description
☼ 2 SEC	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter button is pressed. The self-timer lamp blinks as the timer counts
down. The shutter is released ten seconds after the shutter button is pressed. Use for photographs in which you wish to appear yourself. To self-timer lamp blinks immediately before the picture is taken.	
OFF	Self-timer off.

If an option other than OFF is selected, the timer will start when the shutter button is pressed all the way down. The display shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press DISP/BACK.





- Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.
 - The self-timer turns off automatically when the camera is turned off.

SAVE SELF-TIMER SETTING

If **ON** is selected, the chosen self-timer setting will remain in effect after a picture is taken or the camera is turned off.

Options	
ON	OFF

SELF-TIMER LAMP

If **ON** is selected, the self-timer lamp will light during self-timer photography. Select **OFF** when shooting night scenes or in other situations in which you would prefer that the lamp remain unlit.

Options	
ON	OFF

INTERVAL TIMER SHOOTING

Configure the camera to take photos automatically at a preset interval.

 Select SHOOTING SETTING in the shooting menu, highlight INTERVAL TIMER SHOOTING, and press MENU/OK.



2 Use the focus stick (focus lever) to choose the interval and number of shots. Press MENU/OK to proceed.



3 Use the focus stick to choose the starting time and then press MENU/OK. Shooting will start automatically.



- Interval timer photography cannot be used at a shutter speed of **B** (bulb) or with multiple exposure photography. In burst mode, only one picture will be taken each time the shutter is released.
- Use of a tripod is recommended.
 - Check the battery level before starting. We recommend using USB power source (#243).
 - The display turns off between shots and lights a few seconds before the next shot is taken.
 - The display can be activated at any time by pressing the shutter button.
 - To continue shooting until the number of shots taken equals the number of exposures remaining at the time interval-timer photography started, set the number of shots to ∞ .

INTERVAL TIMER SHOOTING EXPOSURE SMOOTHING

Select **ON** to automatically adjust exposure during interval-timer photography to prevent it changing dramatically between shots.

Options	
ON	OFF

- Large changes in subject brightness may make exposure appear erratic. We recommend that you choose shorter values for INTERVAL TIMER SHOOTING > INTERVAL with subjects that brighten or dim dramatically during shooting.
 - In manual mode (mode M), exposure smoothing is only available if an AUTO option is selected for sensitivity.

PHOTOMETRY

Choose how the camera meters exposure (\$\omega\$ 81).

SHUTTER TYPE

Choose the shutter type. Choose the electronic shutter to mute the shutter sound.

Option	Description
MS MECHANICAL SHUTTER	Take pictures with the mechanical shutter.
	Take pictures with the electronic shutter.
M-E MECHANICAL + ELECTRONIC	The camera chooses the mechanical or electronic shutter according to shooting conditions.

If ES ELECTRONIC SHUTTER or ME MECHANICAL + ELECTRONIC is selected, shutter speeds faster than 1/4000 s can be chosen by rotating the shutter speed dial to 4000 and then rotating the rear command dial.

- When using the electronic shutter, note the following:
 - Distortion may be visible in shots of moving subjects.
 - Distortion may also be visible in hand-held shots taken at high shutter speeds; use of a tripod is recommended.
 - Banding and fog may occur in shots taken under fluorescent lights or other flickering or erratic illumination.
 - When taking pictures with the shutter muted (\$\equiv 216\$), respect your subjects' image rights and right to privacy.
- The following restrictions apply when the electronic shutter is used:
 - "Extended" sensitivity values are not supported
 - Long exposure noise reduction has no effect
 - The flash cannot be used

FLICKER REDUCTION

Reduce flicker in pictures and the display when shooting under fluorescent lighting and other similar light sources.

Option	Description
	Flicker reduction is performed for all frames. Compared to when flicker reduction is performed only on the first
ALL FRAMES	frame, the frame advance rate for burst photography will drop.
FIRST FRAME	Flicker reduction is performed for the first frame only; in burst photography, the value measured for the first frame in each burst will be used for all subsequent shots. Flicker may be visible during burst photography.
OFF	Flicker reduction disabled.



- Flicker reduction increases the time needed to record pictures.
 - OFF is selected for FLICKER REDUCTION when the electronic shutter is used.
 - Flicker reduction is not available during movie recording.

IS MODE

Reduce blur caused by camera shake or subject motion.

Option	Description	
(♠)₁•>> CONTINUOUS + MOTION	Image stabilization on. If + MOTION is selected, the camera will adjust shutter speed to reduce motion blur when mov-	
	ing objects are detected.	
	As above, except that image stabilization is performed only when the shutter button is pressed halfway (focus mode C only) or the shutter is released. If + MOTION is selected,	
(SHOOTING ONLY	the camera will adjust shutter speed to reduce motion blu when moving objects are detected.	
OFF	Image stabilization off. Choose this option when using a tripod.	



- + MOTION has no effect when sensitivity is set to a fixed value, and may also be unavailable at some other combinations of settings. The effect may vary with lighting conditions and the speed at which the object is moving.
 - This option is available only with lenses that support image stabilization.
 - The setting selected with the lens image stabilization switch, if any, takes priority over the setting chosen with the IS mode.
 - Note that vibration or camera sounds may be noticeable as image stabilization takes effect

ISQ

Adjust the camera's sensitivity to light (# 79).

★ WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera



For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/



FLASH SETTING (Still Photography)

Adjust flash-related settings for still photography.

To display flash settings, press MENU/OK in the photo shooting display and select the [3] (FLASH SETTING) tab.



FLASH FUNCTION SETTING

Choose a flash control mode, flash mode, or sync mode or adjust the flash level. The options available vary with the flash.



For more information on flash settings, see "External Flash Units" (\$\ooldow{1}\$ 268) in "Peripherals and Optional Accessories".



RED EYE REMOVAL

Remove red-eye effects caused by the flash.

Option	Description
FLASH+REMOVAL	A red-eye reduction pre-flash is combined with digital red-eye
I LAJIITILIMOVAL	removal.
FLASH	Flash red-eye reduction only.
REMOVAL	Digital red-eye removal only.
OFF	Flash red-eye reduction and digital red-eye removal off.



- Flash red-eye reduction can be used in TTL flash control mode.
 - Digital red-eye removal is performed only when a face is detected.
 - Digital red-eye removal is not available with RAW images.

TTL-LOCK MODE

Instead of adjusting flash level with each shot, TTL flash control can be locked for consistent results across a series of photographs.

Option	Description
LOCK WITH LAST FLASH	Flash output is locked at the value metered for the most
LOCK WITH LAST I LASH	recent photo.
LOCK WITH METERING	The camera emits a series of pre-flashes and locks flash
FLASH	output at the metered value.



- To use TTL lock, assign **TTL-LOCK** to a camera control and then use the control to enable or disable TTL lock (@255).
 - Flash compensation can be adjusted while TTL lock is in effect.
 - Selecting LOCK WITH LAST FLASH displays an error message if no previously metered value exists.

LED LIGHT SETTING

Choose whether to use the flash unit's LED video light (if available) as a catchlight or AF-assist illuminator when taking photos.

Option	Role of LED video light in still photography
CATCHLIGHT	Catchlight
AF ASSIST	AF-assist illuminator
AF ASSIST+CATCHLIGHT	AF-assist illuminator and catchlight
OFF	None



In some cases, this option can also be accessed via the FLASH FUNCTION **SETTING** menu.

COMMANDER SETTING

Choose groups when using the camera flash unit as a commander for Fujifilm optical wireless remote flash control. This option is available when the camera is used with clip-on flash units that support Fujifilm optical wireless flash control.

Options			
Gr A	Gr B	Gr C	OFF



In some cases, this option can also be accessed via the FLASH FUNCTION **SETTING** menu

CH SETTING

Choose the channel used for communication between the commander and remote flash units. Separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.

Options			
CH1	CH2	CH3	CH4



MOVIE SETTING (Still Photography)

Adjust options for movies shot during still photography using function buttons that have been assigned MOVIE RECORDING RELEASE.

To display movie settings, press MENU/OK in the photo shooting display and select the **(MOVIE SETTING)** tab.



The options available vary with the shooting mode selected.



MOVIE MODE

This item is also found in the movie menus (11) 158). Changes here also apply to the item in the movie menus.

FILE FORMAT

This item is also found in the movie menus (111 159). Changes here also apply to the item in the movie menus.

FULL HD HIGH SPEED REC

This item is also found in the movie menus (111 160). Changes here also apply to the item in the movie menus.

S IS MODE

This item is also found in the movie menus (1991). Changes here also apply to the item in the movie menus.

AUDIO SETTING

Adjust audio-related settings for movie recording.

INTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in microphone.

Option	Description	
AUTO	The camera adjusts the recording level automatically.	
MANUAL	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.	
OFF	Turn the built-in microphone off.	

EXTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for external microphones.

Option	Description
AUTO	The camera adjusts the recording level automatically.
MANUAL	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.
OFF	Disable recording using external microphones.

MIC JACK SETTING

Specify the type of hardware connected to the microphone jack.

Option	Description
MIC	Choose this option for direct connection to an external micro-
	phone.
LINE	Choose this option for external audio devices connected via
	line output.

MIC LEVEL LIMITER

Reduces distortion caused by input that exceeds the limits of the microphone's audio circuits.

Options		
ON	OFF	

WIND FILTER

Choose whether to enable wind noise reduction during movie recording.

Options	
ON	OFF

LOW CUT FILTER

Choose whether to enable the low-cut filter, reducing low-frequency noise during movie recording.

Options	
ON	OFF

HEADPHONES VOLUME

Adjust the headphone volume.

Option	Description	
0	Mute output to the headphones.	
1—10	Choose a volume of from 1 to 10.	

MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
∞ MIC	₽ REMOTE



MOVIE SETTING (Movie Recording)

Adjust options for movies shot with the drive dial rotated to 🕰 (movie).

To display options for movie recording, press MENU/OK in the movie shooting display and select the **(MOVIE SETTING)** tab.



 
MOVIE SETTING



The options available vary with the shooting mode selected.

MOVIE MODE

Before shooting movies, choose the frame rate, bit rate, and frame size and aspect ratio.



In the shooting menu, select **MOVIE SETTING**, then highlight MOVIE MODE and press MENU/OK.

- 2 Press the focus stick (focus lever) up or down to highlight the desired frame size and aspect ratio (1) and press the stick right.
 - Choose 4K 16:9 or 17:9 for 4K movies with aspect ratios of 16 or 17 to 9.
 - Choose 110 16:9 or 110 17:9 for Full HD movies with aspect ratios of 16 or 17 to 9.
- 3 Press the focus stick (focus lever) up or down to highlight a frame rate (2) and press the stick right.

Options					
23.98P	24P	25P	29.97P	50P	59.94P

4 Press the focus stick up or down to highlight a bit rate (3) and press MENU/OK.

Options		
50Mbps	100Mbps	200Mbps

The choice of frame and bit rates varies with the movie mode.

FILE FORMAT

Choose a movie format.

Option	Description
MOV/H.264 LPCM	High picture and sound quality.
MP4/H.264 AAC	A format suitable for movies that will be uploaded to the web.

Movies are recorded to the memory card in 8-bit 4:2:0 and output to HDMI in 10-bit 4:2:2.

FULL HD HIGH SPEED REC

Record high-frame-rate Full HD movies. High-frame-rate movies can be played back in slow motion, giving you time to view fast-moving subjects or details too fleeting for the naked eye. Select **ON** to choose the recording and playback rates separately.

Playback

Options				
23.98P 24P 25P 29.97P 50P 59.94P				59.94P

Recording

Options			
100P	120P	200P	240P



- High-speed movies are recorded with no sound.
 - Maximum recording length is 6 minutes, but varies with camera settings.
 - The footage recorded to the memory card is compressed with the goal of keeping the amount of data recorded to 200 Mbps per second.
 - The options available for playback rate vary with the option selected for rate of recording.

FIX MOVIE CROP MAGNIFICATION

Fix the movie crop ratio at 1.29:1. This makes it easier to match crops when filming in different formats.

Options	
ON	OFF

F-Log RECORDING

Select **ON** to record movies using a soft gamma curve with a wide gamut suitable for further processing post-production. Sensitivity is restricted to values between ISO 640 and 12800.

Options	
ON	OFF

4K MOVIE OUTPUT

Choose the destination for 4K movies shot while the camera is connected to an HDMI recorder or other device that supports 4K.

Option	Description
SD 4K HOW 4K	4K movies are recorded to the camera memory card and out-
50 4K 110M 4K	put to the HDMI device in 4K.
SD 4K HOM FHD	4K movies are recorded to a camera memory card in 4K and
SU 4R IIIM FHU	output to the HDMI device in Full HD.
SD FHD HOM 4K	4K movies are output to the HDMI device in 4K and recorded to
SU FRU WW 4K	the camera memory card in Full HD.
SD — HDMI 4K	4K movies are output to the HDMI device in 4K. The camera
<u>50</u> — <u>100</u> 4K	does not record 4K movies to a memory card.

This option is only available when **4K 16:9** or **DQ 17:9** is selected for ☑ MOVIE SETTING > MOVIE MODE in the shooting menu.

FULL HD MOVIE OUTPUT

Choose the destination for Full HD movies shot while the camera is connected to an HDMI device.

Option	Description
SD FHD HOM FHD	Full HD movies are output to the HDMI device and recorded to
SU FRID IIIM FRID	the camera memory card.
SD — HOM FHD	Full HD movies are not recorded to the camera memory card
<u> </u>	but are output to the HDMI device.

- 🚫 This option is only available when 🎟 16:9 or 🎟 17:9 is selected for **MOVIE SETTING** > **MOVIE MODE** in the shooting menu.
 - When OFF is selected for HDMI OUTPUT INFO DISPLAY, movies will be output to the HDMI device in 4:2:2 10-bit format.

HDMI OUTPUT INFO DISPLAY

If ON is selected, HDMI devices to which the camera is connected will mirror the information in the camera display.

Options			
ON OFF			

4K HDMI STANDBY QUALITY

Choose whether output to connected HDMI devices switches from 4K to Full HD during standby.

Option	Description
4K	Output to HDMI devices continues at 4K during standby.
HEIDH	Output to HDMI devices switches to Full HD during standby, reducing the drain on the battery.

HDMI REC CONTROL

Choose whether the camera sends movie start and stop signals to the HDMI device when the shutter button is pressed to start and stop movie recording.

Options			
ON OFF			

PHOTOMETRY

Options are the same as those for still photography, but settings must be adjusted separately (\$\equiv 81).



The photometry option selected in the photo menus applies to movies recorded using function buttons that have been assigned MOVIE RECORDING RELEASE

IS MODE

Enable or disable image stabilization.

Option	Description	
(₩) 1 CONTINUOUS	lmage stabilization on.	
OFF	Image stabilization off; 论 appears in the display. Choose when the camera is mounted on a tripod or otherwise fixed in place.	



- Image stabilization is available with compatible lenses only.
 - The setting selected with the lens image stabilization switch, if any, takes priority over the setting chosen with the IS mode.
 - Note that vibration or camera sounds may be noticeable as image stabilization takes effect.

₩ ISO

Adjust the camera's sensitivity to light.

Option	Description
	Choose for special situations. Note that dynamic range may be reduced and that pictures may be mottled.
160-12800	Adjust sensitivity manually. Selected value is shown in display.
ΔΗΙΟ	Sensitivity is automatically adjusted in response to shooting conditions.

ZEBRA SETTING

Highlights that may be overexposed are shown by zebra stripes in the movie mode display.

Option	Description	
ZEBRA RIGHT	/// Right-slanting stripes.	
ZEBRA LEFT	∭ Left-slanting stripes.	
OFF	Stripes off.	

ZEBRA LEVEL

Choose the brightness threshold for the zebra stripe display.

Options										
50	55	60	65	70	75	80	85	90	95	100


MOVIE OPTIMIZED CONTROL

Select **ON** to allow movie settings to be adjusted using only the command dials and touch-screen controls. You may find this helpful in preventing the sounds of camera controls being recorded with movies (1) 23).

Options		
ON OFF		

TALLY LIGHT

 Choose the lamp (indicator or AF-assist) that lights during movie recording and whether the lamp blinks or remains steady.



Option	Description
FRONT OFF REAR	The indicator lamp lights during movie recording.
FRONT OFF REAR <u>a</u>	The indicator lamp blinks during movie recording.
FRONT <u></u> REAR <u></u>	The indicator and AF-assist lamps light during movie recording.
FRONT REAR OFF	The AF-assist lamp lights during movie recording.
FRONT <u>a</u> rear <u>a</u>	The indicator and AF-assist lamps blink during movie recording.
FRONT <u>i</u> Rear off	The AF-assist lamp blinks during movie recording.
FRONT OFF REAR OFF	The indicator and AF-assist lamps remain off during movie recording.

☆☆ WIRELESS COMMUNICATION

This item is also found in the photo menus (151).



IMAGE QUALITY SETTING (Movie Recording)

Adjust image quality settings for movies.

To display image quality settings, press MENU/OK in the movie shooting display and select the (IMAGE QUALITY SETTING) tab.





The options available vary with the shooting mode selected.

FILM SIMULATION

Options are the same as those for still photography, but settings must be adjusted separately (1106).

MONOCHROMATIC COLOR

Options are the same as those for still photography, but settings must be adjusted separately (1108).

W WHITE BALANCE

Options are the same as those for still photography, but settings must be adjusted separately (111 109).

DYNAMIC RANGE

Choose a dynamic range for movie recording.

Option	Description
₽ <mark>100</mark> 100%	
R200 200%	See "DYNAMIC RANGE" (🗐 113).
R400 400%	

- movie recording.
 - R200 200% is available at sensitivities of from ISO 320 to ISO 12800, **400 400%** at sensitivities of from ISO 640 to 12800.
 - when **OFF** is selected for **MOVIE SETTING** > **F-Log RECORDING**.

TONE CURVE

Options are the same as those for still photography, but settings must be adjusted separately (114).

COLOR

Options are the same as those for still photography, but settings must be adjusted separately (115).

SHARPNESS

Options are the same as those for still photography, but settings must be adjusted separately (115).

HIGH ISO NR

Options are the same as those for still photography, but settings must be adjusted separately (115).

INTERFRAME NR

Select **ON** to enable interframe noise reduction.

Options		
ON	OFF	



- Interframe noise reduction is available only when frame rates of **29.97P** or slower are selected at a frame size of **4K** or **DCI**.
 - "Ghosting" may occur with moving subjects or if the camera is moved during shooting.

PERIPHERAL LIGHT CORRECTION

Select ON to enable peripheral illumination correction during movie recording.

Options	
ON	OFF

- If **ON** is selected when a lens that does not transmit data to the camera is attached using a FUJIFILM M MOUNT ADAPTER (available separately), peripheral illumination will be adjusted according to the option selected for **ID IMAGE QUALITY SETTING** > **ID IMAGE QUALITY SETTIN** ADAPTOR SETTING > PERIPHERAL ILLUMINATION CORRECTION in the shooting menu (# 125).
 - Select **OFF** if you notice banding in movies recorded using this option.

This item is also found in the photo menus (123). Changes to one apply to the other.



AF/MF SETTING (Movie Recording)

Adjust focus settings for movies.

To display AF/MF settings, press MENU/OK in the movie shooting display and select the M (AF/MF SETTING) tab.





The options available vary with the shooting mode selected.

FOCUS AREA

Options are the same as those for still photography, but settings must be adjusted separately (\$\equiv 69\$).

AF MODE

Choose how the camera selects the focus point for movie recording.

Option	Description		
MULTI	The camera selects the focus area automatically.		
AREA	The camera focuses on the subject in the selected focus area.		

AF-C CUSTOM SETTING

Select focus-tracking options when recording movies in focus mode C.

TRACKING SENSITIVITY

Choose how long the camera waits to switch focus when an object enters the focus area behind or in front of the current subject. See "TRACKING SENSITIVITY" (128).

		Options		
0	1	2	3	4

- The higher the value, the longer it takes the camera to refocus when you attempt to switch subjects.
 - The lower the value, the more likely the camera is to switch focus from your subject to other objects in the focus area.

AF SPEED

Adjust the autofocus response speed. Choose higher values for faster response times, lower values for slower response times.

					Options					
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5

AF ILLUMINATOR

This item is also found in the photo menus (1991). Changes to one apply to the other.

₽ FACE/EYE DETECTION SETTING

Enable or disable Intelligent Face Detection when recording movies.

Option	Description
FACE DETECTION ON	See "FACE/EYE DETECTION SETTING" (■ 133).
OFF	Intelligent Face Detection and eye priority off.

If the focus mode selector is rotated to **S** when **FACE DETECTION ON** is selected for MR AF/MF SETTING > FACE/EYE DETECTION SETTING during movie recording, the camera will automatically switch to C (continuous AF). Selecting M (manual focus) when FACE DETECTION ON is selected for FACE/EYE DETECTION SETTING disables Intelligent Face Detection.

MF ASSIST

Choose how focus is displayed in manual focus mode.

Option	Description
STANDARD	Focus is displayed normally (focus peaking is not available).
FOCUS PEAK HIGHLIGHT	The camera heightens high-contrast outlines. Choose a
rocos reak midneidmi	color and peaking level.

FOCUS CHECK

Options are the same as those for still photography, but settings must be adjusted separately (1991) 136).

This item is also found in the photo menus (\blacksquare 137). Changes to one apply to the other.

☆☆ DEPTH-OF-FIELD SCALE

This item is also found in the photo menus (137). Changes to one apply to the other.

🗖 📽 AF RANGE LIMITER

This item is also found in the photo menus (138). Changes to one apply to the other.

☆ ☆ TOUCH SCREEN MODE

Choose the shooting operations performed using touch controls.

Mode	Description
TOUCH SHOOTING	Instead of pressing the shutter button, you can tap your subject in the display to focus and start recording. During recording, you can tap the display to focus as described below. <i>To end recording, press the shutter button</i> .
AF AF	Tapping the display focuses the camera on the selected point. Use the shutter button to start and stop recording. In focus mode S (AF-S), you can refocus at any time by tapping your subject in the display. In focus mode C (AF-C), the camera will continuously adjust focus for changes in the distance to the subject at point selected by tapping the display. When shooting movies in focus mode M (MF), you can tap the display before recording begins to focus on the selected point using Instant AF, and tap the display during recording to position the focus point.
AREA AREA	 Tap to position the focus area. Use the shutter button to start and stop recording. In focus mode S (AF-S), you can reposition the focus area at any time by tapping your subject in the display. To focus, use the button to which AF-ON is assigned. In focus mode C (AF-C), the camera will continuously adjust focus for changes in the distance to the subject at point selected by tapping the display. In manual focus mode (MF), you can tap the display to position the focus area over your subject.
OFF OFF	Touch controls disabled.



 
- To disable touch controls and hide the touch screen mode indicator, select OFF for BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > **♣** TOUCH SCREEN SETTING.
 - This item is also found in the photo menus (🕮 139). Changes to one apply to the other.

Touch Controls for Focus Zoom-

Different touch controls are used during focus zoom (focus check enabled).

Central Area


Tapping the center of the display performs the operations below.



Mode	Operation performed
TOUCH SHOOTING	AF-S: AF
TOUCH SHOUTING	MF : Instant AF
AF	AF-S: AF
AF	MF : Instant AF
ADEA	AF-S: AF
AREA	MF : Instant AF
OFF	AF-S/MF: OFF

Other Areas

 Tapping other areas simply scrolls the display, whether during still photography or movie recording and regardless of the option selected for touch screen mode.



FOCUS CHECK LOCK

Choose whether focus zoom remains in effect once movie recording begins.

Options	
ON	OFF



AUDIO SETTING (Movie Recording)

Adjust settings for audio recorded during filming.

To display audio settings, press MENU/OK in the movie shooting display and select the ▲ (AUDIO SETTING) tab.



INTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for the built-in microphone.

Option	Description
AUTO	The camera adjusts the recording level automatically.
MANUAL	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.
OFF	Turn the built-in microphone off.

EXTERNAL MIC LEVEL ADJUSTMENT

Adjust the recording level for external microphones.

Option	Description
AUTO	The camera adjusts the recording level automatically.
MANUAL	Adjust the recording level manually. Press the focus stick (focus lever) right to choose from 25 recording levels.
OFF	Disable recording using external microphones.

MIC JACK SETTING

Specify the type of hardware connected to the microphone jack.

Option	Description
MIC	Choose this option for direct connection to an external micro-
MIC	phone.
LINE	Choose this option for external audio devices connected via
LINE	line output.

MIC LEVEL LIMITER

Reduces distortion caused by input that exceeds the limits of the microphone's audio circuits.

Options	
ON	OFF

WIND FILTER

Choose whether to enable wind noise reduction during movie recording.

Options	
ON	OFF

LOW CUT FILTER

Choose whether to enable the low-cut filter, reducing low-frequency noise during movie recording.

Options	
ON	OFF

HEADPHONES VOLUME

Adjust the headphone volume.

Option	Description	
0	Mute output to the headphones.	
1—10	Choose a volume of from 1 to 10.	

MIC/REMOTE RELEASE

Specify whether the device connected to the microphone/remote release connector is a microphone or a remote release.

Options	
∞ MIC	₽ REMOTE



TIME CODE SETTING (Movie Recording)

Adjust time code (hour, minute, second, and frame number) display settings for movie recording.

To display time code settings, press MENU/OK in the movie shooting display and select the (TIME CODE SETTING) tab.



TIME CODE DISPLAY

Select **ON** to display time codes during movie recording and playback.

Options	
ON	OFF

START TIME SETTING

Choose the time code starting time.

Option	Description	
MANUAL INPUT	Highlight this option and press the focus stick (focus lever)	
MANUALINFUI	right to choose a start time manually.	
CURRENT TIME	Set the start time to the current time.	
RESET	Set the start time to 00:00:00.	

COUNT UP SETTING

Choose whether time is clocked continuously or only during movie recording.

Option	Description
REC RUN	Time is clocked only during movie recording.
FREE RUN	Time is clocked continuously.

DROP FRAME

At frame rates of 59.94P, and 29.97P, a discrepancy will gradually develop between the time code (measured in seconds) and the actual recording time (measured in fractions of a second). Choose whether the camera drops frames as necessary to match the recording time to the time code.

Option	Description
ON	The camera drops frames as necessary to maintain a strict
UN	match between the time code and the actual recording time.
OFF	Frames are not dropped.



The time code display varies with the option selected.



TC:00:00:0@0 ON TC:00:00:0(!)0

• Selecting a frame rate of 23.98P disables frame drop.

HDMI TIME CODE OUTPUT

Choose whether time codes are output to HDMI devices.


Options	
ON	OFF

Playback and the Playback Menu

The Playback Display

This section lists the indicators that may be displayed during playback.




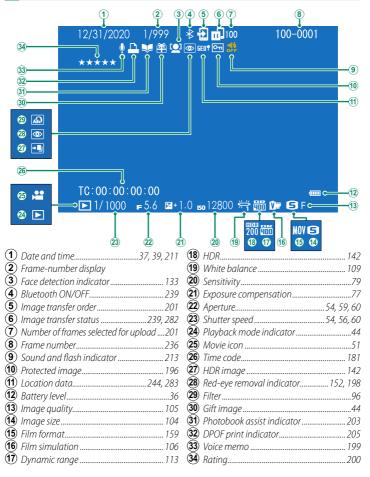

The DISP/BACK Button


The **DISP/BACK** button controls the display of indicators during playback.




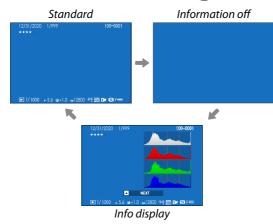

Viewing Photo Information-

The photo information display changes each time the focus stick (focus lever) is pressed up.

 

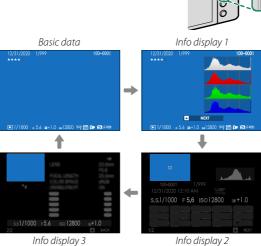

Zooming in on the Focus Point -

Press the center of the rear command dial to zoom in on the focus point. Press again to return to full-frame playback.



Viewing Pictures

Read this section for information on playback zoom and multi-frame playback.

Use the rear command dial to go from full-frame playback to playback zoom or multi-frame playback.



Full-frame playback



Multi-frame playback



+1

Nine-frame view





Hundred-frame view



Playback zoom



Medium zoom





Maximum zoom



Playback Zoom

Rotate the rear command dial right to zoom in on the current picture, left to zoom out. To exit zoom, press DISP/BACK or MENU/OK, or the center of the rear command dial.



- The maximum zoom ratio varies with the option selected for **IMAGE QUALITY SETTING > IMAGE SIZE.**
 - Playback zoom is not available with cropped or resized copies saved at a size of 640.

Scroll-

When the picture is zoomed in, the focus stick (focus lever) can be used to view areas of the image not currently visible in the display.



Navigation window

Multi-Frame Playback

To change the number of images displayed, rotate the rear command dial left when a picture is displayed full frame.



- Use the focus stick (focus lever) to highlight images and press MENU/OK to view the highlighted image full frame.
 - In the nine- and hundred-frame displays, press the focus stick up or down to view more pictures.



The Playback Menu

Adjust playback settings.

The playback menu is displayed when you press **MENU/OK** in playback mode.



RAW CONVERSION

Even if you don't have a computer, you can use the camera to modify RAW pictures and save them in other formats.

Saving RAW Pictures in Another Format

- 1 Display a RAW picture.
- 2 Highlight RAW CONVERSION in the playback menu.
- 3 Press MENU/OK.
 A list of settings will be displayed.



- 4 Press the focus stick (focus lever) up or down to highlight a setting.
- 5 Press the focus stick right to display options.

- 6 Press the focus stick up or down to highlight the desired option.
- 7 Press MENU/OK to select the highlighted option. The settings list shown in Step 3 will be displayed. Repeat Steps 4 to 7 to adjust additional settings.
- **8** Press the **Q** button. A preview of the copy will be displayed.
- 9 Press MENU/OK. The copy will be saved.
- RAW conversion options can also be displayed by pressing the **Q** button when a RAW pictures is displayed during playback.

The settings that can be adjusted when converting pictures from RAW to another format are:

Setting	Description
REFLECT SHOOTING COND.	Create a copy using the settings in effect at the time
REFLECT SHOOTING COND.	the photo was taken.
IMAGE SIZE	Choose an image size.
IMAGE QUALITY	Adjust image quality.
PUSH/PULL PROCESSING	Adjust exposure.
DYNAMIC RANGE	Enhance details in highlights for natural contrast.
	Reduce loss of detail in highlights and shadows
D RANGE PRIORITY	for natural-looking results when photographing
	high-contrast scenes.
FILM SIMULATION	Simulate the effects of different types of film.
	Choose a monochrome tint for photographs tak-
MONOCHROMATIC COLOR	en using FILM SIMULATION > AT ACROS and
	B MONOCHROME.
GRAIN EFFECT	Add a film grain effect.
	Increase the range of tones available for rendering
COLOR CHROME EFFECT	colors that tend to be highly saturated, such as reds,
	yellows, and greens.
COLOR CHROME FX BLUE	Increase the range of tones available for rendering
	blues.
WHITE BALANCE	Adjust white balance.
WB SHIFT	Fine-tune white balance.
TONE CURVE	Adjust highlights and shadows.
COLOR	Adjust color density.
SHARPNESS	Sharpen or soften outlines.
HIGH ISO NR	Process the copy to reduce mottling.
CLARITY	Increase definition.
LENS MODULATION OPTIMIZER	Improve definition by adjusting for diffraction and
	the slight loss of focus at the periphery of the lens.
COLOR SPACE	Choose the color space used for color reproduction.
HDR	Reduce loss of detail in highlights and shadows.

① Some settings may be unavailable depending on the options chosen when the picture was taken.

ERASE

Delete individual pictures, multiple selected pictures, or all pictures.

Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

Option	Description	
FRAME	Delete pictures one at a time.	
SELECTED FRAMES	Delete multiple selected pictures.	
ALL FRAMES	Delete all unprotected pictures.	

FRAME

- 1 Select **FRAME** for **ERASE** in the playback menu.
- Press the focus stick (focus lever) left or right to scroll through pictures and press MENU/OK to delete.
- A confirmation dialog is not displayed before pictures are deleted; be sure the correct picture is selected before pressing MENU/OK.
 - Additional pictures can be deleted by pressing **MENU/OK**. Press the focus stick left or right to scroll through pictures and press MENU/OK to delete.

SELECTED FRAMES

- 1 Select **SELECTED FRAMES** for **ERASE** in the playback menu.
- Highlight pictures and press MENU/OK to select.
 - Selected pictures are indicated by check marks (
 - To deselect a highlighted picture, press MENU/OK again.
- 3 When the operation is complete, press DISP/BACK to display a confirmation dialog.
- 4 Highlight OK and press MENU/OK to delete the selected pictures.
- Pictures in photobooks or printer orders are shown by **1**.

ALL FRAMES

- 1 Select ALL FRAMES for ERASE in the playback menu.
- 2 A confirmation dialog will be displayed; highlight **OK** and press MENU/OK to delete all unprotected pictures.
- Pressing **DISP/BACK** cancels deletion; note that any pictures deleted before the button was pressed cannot be recovered.
 - If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

CROP

Create a cropped copy of the current picture.

- 1 Display the desired picture.
- 2 Select CROP in the playback menu.
- 3 Use the rear command dial to zoom in and out and press the focus stick (focus lever) up, down, left, or right to scroll the picture until the desired portion is displayed.
- 4 Press MENU/OK to display a confirmation dialog.
- 5 Press MENU/OK again to save the cropped copy to a separate file.
- The higher the zoom ratio, the smaller the number of pixels in the cropped copy.
 - If the size of the final copy will be 640, YES will be displayed in yellow.
 - All copies have an aspect ratio of 3:2.

RESIZE


Create a small copy of the current picture.

- 1 Display the desired picture.
- 2 Select **RESIZE** in the playback menu.
- 3 Highlight a size and press MENU/OK to display a confirmation dialog.
- 4 Press MENU/OK again to save the resized copy to a separate file.
- The sizes available vary with the size of the original image.

PROTECT

Protect pictures from accidental deletion. Highlight one of the following options and press **MENU/OK**.

Option	Description
FRAME	Protect selected pictures. Press the focus stick (focus lever) left or right to view pictures and press MENU/OK to select or deselect. Press DISP/BACK when the operation is complete.
SET ALL	Protect all pictures.
RESET ALL	Remove protection from all pictures.

 

 


IMAGE ROTATE

Rotate pictures.

- 1 Select ON for **☑** SCREEN SET-UP > AUTOROTATE PB.
- 2 Display the desired picture.
- 3 Select IMAGE ROTATE in the playback menu.
- 4 Press the focus stick (focus lever) down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- 5 Press MENU/OK. The picture will automatically be displayed in the selected orientation whenever it is played back on the camera.
- Protected pictures cannot be rotated. Remove protection before rotating pictures.
 - The camera may not be able to rotate pictures created with other devices. Pictures rotated on the camera will not be rotated when viewed on a computer or on other cameras.
 - Pictures taken with SCREEN SET-UP > AUTOROTATE PB are automatically displayed in the correct orientation during playback.

RED EYE REMOVAL

Remove red-eye from portraits. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select RED EYE REMOVAL in the playback menu.
- 3 Press MENU/OK.
- Recults vary d
- Results vary depending on the scene and the camera's success in detecting faces.
 - The amount of time needed to process the image varies with the number of faces detected.
 - Red eye cannot be removed from pictures that have already been processed using red-eye removal, which are indicated by a loop during playback.
 - Red eye removal cannot be performed on RAW images.

VOICE MEMO SETTING

Add a voice memo to the current photograph.

- 1 Select ON for VOICE MEMO SETTING in the playback menu.
- Display a photo to which you wish to add a voice memo.
- **?** Press and hold the center of the front command dial to record the memo. Recording ends after 30 s or when you release the dial.
- The new memo will be recorded over any existing memos.
 - Voice memos cannot be added to protected pictures.
 - Deleting the picture also deletes the memo.

Playing Voice Memos-

Pictures with voice memos are indicated by **Q** icons during playback.

- To play a memo, select the picture and press the center of the front command dial.
- A progress bar will be displayed while the memo plays back.
- Volume can be adjusted by pressing **MENU/OK** to pause playback and then pressing the focus stick (focus lever) up or down to adjust the volume. Press MENU/OK again to resume playback. Volume can also be adjusted using SOUND SET-UP > PLAYBACK VOLUME.

RATING

Rate pictures using stars.

- 1 Select **RATING** in the playback menu.
- 2 Rotate the front command dial to choose a picture and the rear command dial to choose a rating of from 0 to 5 stars ("★").
- The focus stick (focus lever) can be used in place of the front command dial to choose a picture.
 - The rating dialog can also be displayed by pressing the **AE-L** button in single-frame, nine-frame, or hundred-frame playback.
 - Use touch controls to zoom in or out.
 - Ratings cannot be applied to:
 - Protected pictures
 - Movie
 - "Gift" pictures (pictures taken with other cameras)

IMAGE TRANSFER ORDER

Select photos for upload to a paired smartphone or tablet.

- 1 Select IMAGE TRANSFER ORDER > SELECT FRAMES in the playback menu.
- **1** Highlight photos and press **MENU/OK** to select or deselect. Repeat until all the desired photos have been selected.
- 3 Press DISP/BACK to exit to playback.
 - Note: If ON is selected for both CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF and AUTO IMAGE TRANSFER. upload will begin shortly after you exit to playback or turn the camera off.
- Image transfer orders can contain a maximum of 999 pictures.
 - The following cannot be selected for upload:
 - Protected pictures
 - Movies
 - RAW images
 - "Gift" pictures (pictures taken with other cameras)
 - If PAIRING/TRANSFER ORDER is selected for CONNECTION SETTING > GENERAL SETTINGS > SUTTON SETTING, the IMAGE **TRANSFER ORDER** dialog can be displayed by pressing the **Fn1** button.
 - To remove upload marking from all pictures in the current order, select IMAGE TRANSFER ORDER > RESET ORDER.
 - If ON is selected for CONNECTION SETTING > Bluetooth **SETTINGS** > **AUTO IMAGE TRANSFER**, photos will automatically be marked for upload as they are taken.

☆ ☆ WIRELESS COMMUNICATION

Connect to smartphones running the latest version of the FUJIFILM Camera Remote app. The smartphone can then be used to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera



- For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/
 - If WIRELESS COMMUNICATION is selected for **CONNECTION** SETTING > GENERAL SETTINGS > F BUTTON SETTING, you can connect to the smartphone by pressing the Fn1 button.

SLIDE SHOW

View pictures in an automated slide show. Press MENU/OK to start and press the focus stick (focus lever) right or left to skip ahead or back. Press DISP/BACK at any time during the show to view onscreen help. The show can be ended at any time by pressing MENU/OK.



The camera will not turn off automatically while a slide show is in progress

PHOTOBOOK ASSIST

Create books from your favorite photos.

Creating a Photobook

- 1 Select NEW BOOK for Delay BACK MENU > PHOTOBOOK ASSIST.
- 2 Scroll through the images and press the focus stick (focus lever) up to select or deselect. Press MENU/OK to exit when the book is complete.
 - Neither photographs 60 or smaller nor movies can be selected for photobooks.
 - The first picture selected becomes the cover image. A different picture can be selected at any time.
- 3 Highlight COMPLETE PHOTOBOOK and press MENU/OK (to select all photos for the book, choose SELECT ALL). The new book will be added to the list in the photobook assist menu.
- Books can contain up to 300 pictures.
 - Books that contain no photos are automatically deleted.

Viewing Photobooks

Highlight a book in the photobook assist menu and press MENU/OK to display the book, then press the focus stick (focus lever) left or right to scroll through the pictures.

Editing and Deleting Photobooks

Display the photobook and press MENU/OK. The following options will be displayed; select the desired option and follow the onscreen instructions.

- **EDIT**: Edit the book as described in "Creating a Photobook".
- ERASE: Delete the book.

PC AUTO SAVE

Upload pictures from the camera to a computer running the latest version of FUJIFILM PC AutoSave (note that you must first install the software and configure the computer as a destination for images copied from the camera).




For downloads and other information, visit: http://app.fujifilm-dsc.com/en/pc_autosave/

PRINT ORDER (DPOF)

Create a digital "print order" for DPOF-compatible printers.

- 1 Select PLAY BACK MENU > PRINT ORDER (DPOF).
- **)** Select WITH DATE **to** print the date of recording on pictures, WITHOUT DATE to print pictures without dates, or **RESET ALL** to remove all pictures from the print order before proceeding.
- 3 Display a picture you wish to include in or remove from the print order.
- 4 Press the focus stick (focus lever) up or down to choose the number of copies (up to 99).

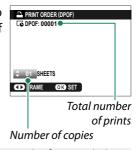


- To remove a picture from the order, press the focus stick down until the number of copies is 0.
 - Repeat steps 3–4 to complete the print order.
- 5 The total number of prints is displayed in the monitor. Press MENU/OK to exit.
- The pictures in the current print order are indicated by a 🚨 icon during playback.
 - Print orders can contain a maximum of 999 pictures from a single memory card.
 - If a memory card is inserted containing a print order created by another camera, you will need to delete the order before creating as described above.

instax PRINTER PRINT

To print pictures to optional Fujifilm instax SHARE printers, first select
☐ CONNECTION SETTING > instax PRINTER CONNECTION **SETTING** and enter the instax SHARE printer name (SSID) and password, then follow the steps below.

 - 1 Turn the printer on.
- 2 Select PLAY BACK MENU > instax PRINTER PRINT. The camera will connect to the printer.



3 Use the focus stick (focus lever) to display the picture you want to print, then press MENU/OK. The picture will be sent to the printer and printing will start.

 




- Pictures taken with other cameras cannot be printed.
 - The area printed is smaller than the area visible in the LCD monitor
 - The displays may vary depending on the printer connected.

DISP ASPECT


Choose the aspect ratio used for the display of still pictures on High Definition (HD) devices (this option is available only when an HDMI cable is connected).





Choose **16:9** to display photos with an aspect ratio of **16:9** full screen. The pictures will be displayed full screen with tops and bottoms cropped out.

MEMO

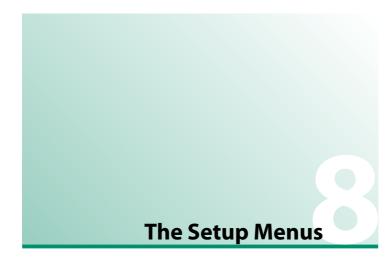



USER SETTING

Adjust basic camera settings.

To access basic camera settings, press MENU/OK, select the (SET UP) tab, and choose USER SETTING.



FORMAT

To format a memory card:

- 1 Select ☑ USER SETTING > FORMAT in the ☑ (SET UP) tab.
- 2 A confirmation dialog will be displayed. To format the memory card, highlight OK and press MENU/OK.



- To exit without formatting the memory card, select **CANCEL** or press **DISP/BACK**.
- All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
 - Do not open the battery-chamber cover during formatting.
- The format menu can also be displayed by pressing the center of the rear command dial while pressing and holding the ⋒ button.

DATE/TIME

To set the camera clock:

- 1 Select ☑ USER SETTING > DATE/TIME in the ☑ (SET UP) tab.
- 2 Press the focus stick (focus lever) left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the focus stick up or down.
- 3 Press MENU/OK to set the clock.


TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between your local and home time zone:

- 1 Highlight + LOCAL and press MENU/OK.
- 2 Use the focus stick (focus lever) to choose the time difference between local time and your home time zone. Press MENU/OK when settings are complete.

To set the camera clock to local time, highlight ← LOCAL and press MENU/OK. To set the clock to the time in your home time zone, select ♠ HOME.

Options			
→ LOCAL	☆ HOME		

 

■ 言語/LANG.

Choose a language.

MY MENU SETTING

Edit the items listed in the **(MY MENU)** tab, a personalized custom menu of frequently-used photo menu options (**1)** 247).

MY MENU SETTING

Edit the items listed in the **(MY MENU)** tab, a personalized custom menu of frequently-used movie menu options (**247**).

SENSOR CLEANING

Remove dust from the camera image sensor.

Option	Description					
OK	lean the sensor immediately.					
WHEN SWII(HED ON	Sensor cleaning will be performed when the camera is turned on.					
WHEN SWITCHED OFF	Sensor cleaning will be performed when the camera turns off (sensor cleaning is not however performed if the camera turns off in playback mode).					



Dust that cannot be removed using sensor cleaning can be removed using a blower (## 312).

SOUND & FLASH

Select OFF to disable the speaker, flash, illuminator, and self-timer lamp in situations in which camera sounds and lights may be unwelcome.

Options		
ON	OFF	

RESET

Reset shooting or setup menu options to default values.

1 Highlight the desired option and press MENU/OK.

Option	Description					
	Reset all photo menu settings other than custom white					
STILL MENU RESET	balance and custom settings banks created using EDIT/					
	SAVE CUSTOM SETTING to default values.					
MOVIE MENU RESET	Reset all settings other than custom white balance op-					
MOVIL MENO RESEI	tions selected using 📽 WHITE BALANCE.					
	Reset all setup menu settings other than DATE/TIME ,					
SET-UP RESET	TIME DIFFERENCE, COPYRIGHT INFO, and con-					
JEI-UF NEJEI	nection-related CONNECTION SETTING options to					
	default values.					

2 A confirmation dialog will be displayed; highlight **OK** and press **MENU/OK**.

REGULATORY

 
To view electronic copies of the product model number, and other certificates, select **Z** USER SETTING > REGULATORY in the setup menu.



SOUND SETTING

Make changes to camera sounds.

To access sound settings, press MENU/OK, select the (SET UP) tab, and choose SOUND SET-UP.



AF BEEP VOL.

Choose the volume of the beep that sounds when the camera focuses. The beep can be muted by selecting **4OFF**.



SELF-TIMER BEEP VOL.

Choose the volume of the beep that sounds while the self-timer is active. The beep can be muted by selecting **•OFF**.



OPERATION VOL.

Adjust the volume of the sounds produced when camera controls are operated. Choose **4OFF** to disable control sounds.

Options					
•(•1) (high)	■ (medium)	• ● • (low)	■ (OFF (mute)		

SHUTTER VOLUME

Adjust the volume of the sounds produced by the electronic shutter. Choose **4OFF** to disable the shutter sound.



SHUTTER SOUND

Choose the sound made by the electronic shutter.

Options					
♪ 1 SOUND 1	♪ 2 SOUND 2	♪3 SOUND 3			

PLAYBACK VOLUME

Adjust the volume for movie playback.


	Options									
0	1	2	3	4	5	6	7	8	9	10



SCREEN SETTING

Make changes to display settings.

 To access display settings, press MENU/OK, select the (SET UP) tab, and choose SCREEN SET-UP.



VIEW MODE SETTING

Adjust settings for eye sensor, EVF (electronic viewfinder), or LCD monitor view modes (14).



Menus are not displayed in the LCD monitor when **EVF ONLY** is selected; to change settings, put your eye to the viewfinder.

EVF BRIGHTNESS

Adjust the brightness of the display in the electronic viewfinder.

Option	Description					
AUTO	Automatic brightness adjustment.					
MANUAI	Adjust brightness manually; choose from options between -7 and $+5$.					

EVF COLOR

Adjust the saturation of the display in the electronic viewfinder.

Options										
-5	-4	-3	-2	-1	0	+1	+2	+3	+4	+5

EVF COLOR ADJUSTMENT

Adjust the color of the display in the electronic viewfinder.

1 Adjust colors using the focus stick (focus lever).



2 Press MENU/OK.

LCD BRIGHTNESS

Adjust monitor brightness.



LCD COLOR

Adjust monitor saturation.



LCD COLOR ADJUSTMENT

Adjust the color of the display in the LCD monitor.

- 1 Adjust colors using the focus stick (focus lever).
- ? Press MENU/OK.

IMAGE DISP.

Choose how long images are displayed after shooting.

Option	Description			
CONTINUOUS	Pictures are displayed until the MENU/OK button is pressed or the shutter button is pressed halfway. To zoom in on the active focus point, press the center of the rear command dial; press again to cancel zoom.			
1.5 SEC	ictures are displayed for the selected time or until the shutte			
0.5 SEC	button is pressed halfway.			
OFF	Pictures are not displayed after shooting.			



- Colors may differ slightly from those in the final image.
 - "Noise" mottling may be visible at high sensitivities.

AUTOROTATE DISPLAYS

Choose whether the indicators in the viewfinder and LCD monitor rotate to match camera orientation.

Options		
ON	OFF	

PREVIEW EXP./WB IN MANUAL MODE

Choose whether to enable exposure and/or white balance preview in manual exposure mode.

Option	Description
PREVIEW EXP./WB	Enable exposure and white balance preview.
	Preview white balance only. Choose this option in situations in
PREVIEW WB	which exposure and white balance are likely to change during
	shooting, as may be the case when you use a flash with an
	incandescent monitoring lamp.
	Disable exposure and white balance preview. Choose this op-
OFF	tion when using a flash or on other occasions on which expo-
	sure may change when the picture is taken.

NATURAL LIVE VIEW

Choose whether the effects of film simulation, white balance, and other settings are visible in the monitor.

Option	Description
ON	The effects of camera settings are not visible in the monitor, but shadows in low-contrast, back-lit scenes and other hard-to-see subjects more visible. Colors and tone will differ from those in the final picture. The display will however be adjusted to show the effects of advanced filters and of monochrome and sepia settings.
OFF	The effects of film simulation, white balance, and other settings can be previewed in the monitor.


F-Log VIEW ASSIST

Select ON to display a tone-corrected preview (equivalent to BT.709) when recording or viewing F-log movies.

Options	
ON	OFF

FRAMING GUIDELINE

Choose a framing grid for shooting mode.

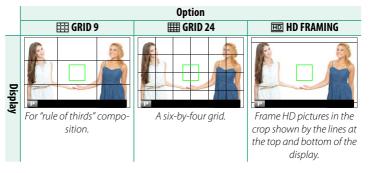

Framing guides are not shown at default settings but can be displayed using **Z** SCREEN SET-UP > DISP. CUSTOM SETTING (■ 17).

AUTOROTATE PB

Choose **ON** to automatically rotate "tall" (portrait-orientation) pictures during playback.

Options	
ON	OFF

FOCUS SCALE UNITS

Choose the units used for the focus distance indicator.

Options	
METERS	FEET

APERTURE UNIT FOR CINEMA LENS

Choose whether the camera displays aperture as a T-number (used for movie camera lenses) or an f/-number (used for still camera lenses) when an optional FUJINON MKX-series lens is attached. For information on using cinema lenses, see the documentation provided with the lens.

Option	Description
	A measure of lens aperture commonly used by cinematogra- phers. Lens transmittance is taken into account to better cal-
	culate exposure.
F NUMBER	A measure of lens aperture commonly used by photographers.
	Lens transmittance is assumed to be 100%, meaning that the
	same aperture may produce different exposures depending on
	the lens.

DISP. CUSTOM SETTING

Choose the items shown in the standard indicator display (11).

LARGE INDICATORS MODE(EVF)

Select **ON** to display large indicators in the electronic viewfinder. The indicators displayed can be selected using **Z SCREEN SET-UP** > **LARGE INDICATORS DISP. SETTING.**





- ① Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(EVF)** (№ 11).
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS MODE on (ON) and off (OFF) (■ 255).

LARGE INDICATORS MODE(LCD)

Select **ON** to display large indicators in the LCD monitor. The indicators displayed can be selected using **SCREEN SET-UP** > **LARGE INDICATORS DISP. SETTING.**





- ① Some icons are not displayed when **ON** is selected for **LARGE INDICATORS MODE(LCD)** (№ 13).
- If LARGE INDICATORS MODE is assigned to a function button, the button can be used to toggle LARGE INDICATORS MODE on (ON) and off (OFF) (■ 255).

LARGE INDICATORS DISP. SETTING

Choose the indicators displayed when ON is selected for ■ SCREEN SET-UP > LARGE INDICATORS MODE(EVF) or LARGE INDICATORS MODE(LCD).



Option	Description
① Expo. DISP.	Choose the items listed at the bottom of the display. Selected items are indicated by check marks (☑); to deselect, highlight the check marks and press MENU/OK.
② ⅓ Scale	Select ON to display the exposure indicator.
③L1, L2, L3, L4	Choose up to four large icons for display on the left side of the screen.
④ R1, R2, R3, R4	Choose up to four large icons for display on the right side of the screen.

INFORMATION CONTRAST ADJ.

Adjust display contrast.

Option	Description
HIGH CONTRAST	High contrast.
STANDARD	Normal contrast.
LOW CONTRAST	Low contrast.
DARK AMBIENT LIGHTING	Contrast adjusted for dim ambient lighting.

Q MENU BACKGROUND

Choose the background color used for the quick menu when it is displayed during still photography.

Options	
TRANSPARENT	BLACK

PORTON OF THE PROPERTY OF THE

Choose the background color used for the quick menu when it is displayed during movie recording.

Options	
TRANSPARENT	BLACK



BUTTON/DIAL SETTING

Access options for camera controls.

To access control options, press MENU/OK, select the ☑ (SET UP) tab, and choose BUTTON/DIAL SETTING.



FOCUS LEVER SETTING

Choose the functions performed by pressing the center of the focus stick (focus lever) or by pressing the stick up, down, left, or right.

PUSH

Option	Description
OFF	Pressing the center of the stick has no effect.
EDIT FOCUS AREA	Press the center of the stick to view a focus-area display where you can choose the focus area. If FACE DETECTION ON is selected for FACE/EYE DETECTION SETTING , Intelligent Face Detection will be temporarily disabled.
ZOOM	Press the center of the stick to zoom in on the active focus area (© 72). If FACE DETECTION ON is selected for FACE/EYE DETECTION SETTING , Intelligent Face Detection will be temporarily disabled.

TILT 🌣

Option	Description
OFF	Pressing the stick up, down, left, or right has no effect.
DIRECT AF POINT SELECTION	Choose the focus area without leaving the shooting display.
EDIT FOCUS AREA	Press the stick up, down, left, or right to view a focus-area display and choose the focus area.
DIRECT AF POINT SELECTION/FACE SELECT	Choose the focus area without leaving the shooting display. If FACE DETECTION ON is selected for FACE/EYE DETECTION SETTING , you can also choose the face used for focus.

D EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu during still photography (12) 252).

EDIT/SAVE QUICK MENU

Choose the items displayed in the quick menu when filming movies (\$\equiv 252\$).

FUNCTION (Fn) SETTING

Choose the roles played by the function buttons (12) 255).

COMMAND DIAL SETTING

Choose the roles played by the command dials.

Option	Description
FRONT COMMAND	Assign shutter speed (S.S. (PROGRAM SHIFT)) or aper-
DIAL 1	ture (APERTURE) 1 to FRONT COMMAND DIAL 1.
FRONT COMMAND	Assign shutter speed (S.S. (PROGRAM SHIFT)), ap-
DIAL 2	erture (APERTURE) ¹ , exposure compensation (EXP.
FRONT COMMAND DIAL 3	COMPENSATION) ² , sensitivity (ISO), or no role (NONE)
	to FRONT COMMAND DIAL 2 or FRONT COMMAND
	DIAL 3.
	Assign shutter speed (S.S. (PROGRAM SHIFT)), ap-
REAR COMMAND	erture (APERTURE) ¹ , exposure compensation (EXP.
DIAL	COMPENSATION) ² , sensitivity (ISO), or no role (NONE)
	to the rear command dial.

1 Aperture set to **A** (auto) and lens equipped with aperture ring or **COMMAND** selected for BUTTON/DIAL SETTING > APERTURE RING SETTING (A). 2 Exposure compensation dial rotated to **C**.



- COMMAND DIAL SETTING can also be accessed by pressing and holding the center of the front command dial.
 - You can also press the center of the front command dial to cycle through settings in the order FRONT COMMAND DIAL 1, FRONT **COMMAND DIAL 2.** and **FRONT COMMAND DIAL 3**.

SHUTTER AF

Choose whether the camera focuses when the shutter button is pressed halfway.

Option	Description
AF-S	 ON: Focus locks when the shutter button is pressed halfway. OFF: No focus operation is performed when the shutter button is pressed halfway.
AF-C	 ON: The camera focuses while the shutter button is pressed halfway. OFF: No focus operation is performed when the shutter button is pressed halfway.

SHUTTER AE

If **ON** is selected, exposure will lock while the shutter button is pressed halfway. The setting for focus mode (AF-C) can be adjusted separately from that for modes **S** (AF-S) and **M** (manual focus).





Select **OFF** to allow the camera to adjust exposure before each shot taken in burst mode.

SHOOT WITHOUT LENS

Choose **ON** to enable the shutter release when no lens is attached.

Options	
ON	OFF

SHOOT WITHOUT CARD

Choose whether the shutter can be released without a memory card inserted in the camera.

Option	Description
ON	When no memory card is inserted, the shutter can be released to test camera function and the shooting and setup menus can be displayed.
()++	The shutter is disabled if no memory card is inserted, preventing accidental loss of pictures taken without a memory card.

FOCUS RING

Choose the direction in which the focus ring is rotated to increase the focus distance.

Options	
CW (clockwise)	• CCW (counterclockwise)

FOCUS RING OPERATION

Choose how the camera adjusts focus in response to the movement of the focus ring.

Option	Description
NONLINEAR	Focus is adjusted at the same rate as the ring is rotated.
LINEAR	Focus is adjusted linearly according to the amount the ring is rotated, but the focusing speed is unaffected by the speed the ring is rotated.

AE/AF-LOCK MODE

This option determines the behavior of the button to which exposure and/or focus lock is assigned.

Option	Description
AE&AF ON WHEN PRESSING	Exposure and/or focus will lock while the button is pressed.
	Exposure and/or focus will lock when the button is pressed and remain locked until it is pressed again.

AWB-LOCK MODE

Choose the behavior of function buttons assigned auto white balance (AWB) lock. Auto white balance lock is used to lock white balance at the value metered by the camera when MINO WHITE PRIORITY, AUTO, or MINIO AMBIENCE PRIORITY is selected for white balance.

Option	Description	
AWB ON WHEN PRESSING	Auto white balance locks while the button is pressed.	
AWB ON/OFF	Press the button once to lock auto white balance and again to end	
SWITCH	the lock.	

APERTURE RING SETTING (A)

Choose whether the front command dial can be used to adjust aperture when aperture is set to **A** (auto).

Option	Description
AUTO	The camera adjusts aperture automatically.
COMMAND	Aperture can be adjusted using the front command dial.

APERTURE SETTING

Choose the method used to adjust aperture when using lenses with no aperture rings.

Option	Description
AUTO+	Rotate the front command dial to choose the aperture. Rotate
MANUAL	past minimum aperture to choose A (auto).
AUTO	Aperture is selected automatically; camera functions in exposure
AUTU	mode P (program AE) or S (shutter-priority AE).
	Rotate the front command dial to choose the aperture; camera
MANUAL	functions in exposure mode A (aperture-priority AE) or M (man-
	ual).

TOUCH SCREEN SETTING

Enable or disable touch-screen controls.

★ TOUCH SCREEN SETTING

Option	Description
ON	The LCD monitor functions as a touch screen during shooting.
OFF	Touch controls disabled.

DOUBLE TAP SETTING

Option	Description
ON	Tap the LCD monitor twice to zoom in on your subject during shooting.
OFF	Touch zoom disabled.

TOUCH FUNCTION

Option	Description
ON	Enable touch-function gestures.
OFF	Disable touch-function gestures.

► TOUCH SCREEN SETTING

Option Description		Description
ON		The LCD monitor functions as a touch screen during playback.
OFI	F	Touch controls disabled.

EVF TOUCH SCREEN AREA SETTINGS

Select the area of the LCD monitor used for touch controls while the viewfinder is active. The area used for touch controls can be selected from:

Option	Description
	All.
	Right half.
	Top right quarter.
	Bottom right quarter.
	Left half.
	Top left quarter.
	Bottom left quarter.
OFF	Touch controls disabled.



POWER MANAGEMENT

Adjust power management settings.

To access power management settings, press MENU/OK, select the (SET UP) tab, and choose POWER MANAGEMENT.



AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually.

		0pt	ions		
5 MIN	2 MIN	1 MIN	30 SEC	15 SEC	OFF

PERFORMANCE

Select **BOOST** to improve focus and EVF display performance.

Option	Description
	Boost camera focus and EVF display performance. The battery drains faster than when is NORMAL selected.
NORMAI	Choose for standard focus and EVF display performance and battery endurance.

BOOST SETTING

Adjust the behavior of the EVF and LCD monitor when **BOOST** is selected for **PERFORMANCE**.

Option	Description
	Display brightness is adjusted to make subjects in shadows
LOW LIGHT I MONITI	easier to see. Motion blur may cause ghosting.
RESOLUTION PRIORITY	Display resolution is increased to make details easier to see.
FRAME RATE PRIORITY	The refresh rate for the EVF is increased, smoothing motion.



SAVE DATA SETTING

 
Make changes to file management settings.

To access file management settings, press MENU/OK, select the (SET UP) tab, and choose SAVE DATA SET-UP.



FRAME NO.

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown, FRAME NO, controls whether file num-



bering is reset to 0001 when a new memory card is inserted or the current memory card is formatted.

Option	Description
	Numbering continues from the last file number used or the first
	available file number, whichever is higher. Choose this option to
	reduce the number of pictures with duplicate file names.
RENEW	Numbering is reset to 0001 after formatting or when a new
KLINLW	memory card is inserted.



- If the frame number reaches 999-9999, the shutter release will be disabled. Turn the camera off and insert a formatted memory card before resuming shooting.
 - Selecting **USER SETTING** > **RESET** does not reset the file number.
 - Frame numbers for pictures taken with other cameras may differ.

SAVE ORG IMAGE

Choose **ON** to save unprocessed copies of pictures taken using **RED EYE REMOVAL**.

0pt	ions
ON	OFF

EDIT FILE NAME

Change the file name prefix. sRGB images use a four-letter prefix (default "DSCF"), Adobe RGB images a three-letter prefix ("DSF") preceded by an underscore.

Option	Default prefix	Sample file name
sRGB	DSCF	ABCD0001
AdobeRGB	_DSF	_ABC0001

SELECT FOLDER

Create folders and choose the folder used to store subsequent pictures.

Option	Description
	To choose the folder in which subsequent pictures will be
SELECT FOLDER	stored, press the focus stick (focus lever) up or down to
	highlight an existing folder and press MENU/OK.
	Enter a five-character folder name. The new folder will be
CREATE FOLDER	created with the next picture you take and subsequent
	pictures will be stored in that folder.

COPYRIGHT INFO

Copyright information, in the form of Exif tags, can be added to new images as they are taken. Changes to copyright information are reflected only in images taken after the changes are made.

Option	Description		
DISP COPYRIGHT INFO	View the current copyright information.		
ENTER AUTHOR'S INFO	Enter the creator's name.		
ENTER COPYRIGHT INFO	Enter the name of the copyright holder.		
	Delete the current copyright information. This change applies		
DELETE COPYRIGHT INFO	only to images taken after this option is selected; copyright		
	information recorded with existing images is not affected.		



CONNECTION SETTING

Adjust settings for connection to other devices.

To access connection settings, press MENU/OK, select the (SET UP) tab, and choose CONNECTION SETTING.





For more information on wireless connections, visit: http://fujifilm-dsc.com/wifi/

Bluetooth SETTINGS

Adjust Bluetooth settings.

• • •	D		
Option	Description		
PAIRING	Pair the camera with a smartphone running the FUJIFILM Camera		
REGISTRATION	Remote app.		
SELECT PAIRING DESTINATION	Choose a connection from a list of devices with which the camera has been paired using PAIRING REGISTRATION .		
	Select NO CONNECTION to exit without connecting. Delete pairing information for selected devices. Choose the de-		
DELETE PAIRING REG.	vice in the device list. The selected device will also be removed		
	from the devices listed in SELECT PAIRING DESTINATION .		
Bluetooth ON/OFF	• ON : The camera automatically establishes a Bluetooth connection with paired devices when turned on.		
	OFF: The camera does not connect via Bluetooth.		
AUTO IMAGE Transfer	• ON : Mark photos for upload as they are taken. Mark JPEG photos for upload as they are taken.		
IKANSFEK	OFF: Photos are not marked for upload as they are taken.		
	Choose whether to synchronize the camera to the time and/or		
	location provided by a paired smartphone.		
SMARTPHONE	• LOCATION&TIME : Synchronize the time and location.		
SYNC. SETTING	LOCATION: Synchronize the location.		
	• TIME: Synchronize the time.		
	OFF: Synchronization off.		



- Install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet before pairing the device with your camera or uploading images.
 - When ON is selected for both Bluetooth ON/OFF and AUTO IMAGE **TRANSFER** or images are currently selected for upload using the **IMAGE** TRANSFER ORDER option in the (playback) menu, upload to paired devices will begin shortly after you exit to playback or turn the camera off. IMAGE TRANSFER ORDER can also be used to select pictures for upload when AUTO IMAGE TRANSFER is off.

PC AUTO SAVE

Adjust settings for connection to computers via wireless LAN.

Option	Description	
PC AUTO SAVE SETTING	Choose the method used for connection to computers via a wireless LAN. • SIMPLE SETUP: Connect using WPS. • MANUAL SETUP: Choose the network from a list (SELECT FROM NETWORK LIST) or enter the name manually (ENTER SSID).	
DELETE REGISTERED DESTINATION PC	Remove selected destinations.	
DETAILS OF PREVIOUS CONNECTION	View computers to which the camera has recently connected.	



 
These settings also apply when pictures are downloaded to a computer using "FUJIFILM PC AutoSave" software.

instax PRINTER CONNECTION SETTING

Adjust settings for connection to optional Fujifilm instax SHARE printers.

The Printer Name (SSID) and Password-

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



CONNECTION MODE

Adjust settings for connection to external devices.

Option	Description	
USB CARD READER	Connecting the camera to a computer via USB automatically enables data transfer mode, allowing data to be copied to the computer. The camera functions normally when not connected.	
X WEBCAM	The camera can be used as a webcam when connected to a computer running FUJIFILM X Webcam.	
USB MOVIE Shooting auto [*]	The camera's movie-recording features can be controlled from gimbals, drones, or other devices connected via USB. The camera automatically enters "tethered shooting" (i.e., remote-control) mode when the external device is turned on and returns to normal operation when the external device turned off or disconnected. The features available vary with the type of device connected.	
USB MOVIE SHOOTING FIXED*	As for USB MOVIE SHOOTING AUTO , except that the camera remains in "tethered shooting" (remote-control) mode when the external device is off or not connected, allowing the device to resume control when the connection is re-established after an accidental disconnection or other disruption.	
USB RAW CONV./ BACKUP RESTORE	Connecting the camera to a computer via USB automatically enables USB RAW conversion/backup restore mode. The camera functions normally when not connected. • USB RAW CONV. (requires FUJIFILM X RAW STUDIO): Use the camera's image processing engine to rapidly convert RAW files to high-quality JPEG images. • BACKUP RESTORE (requires FUJIFILM X Acquire): Save and load camera settings. Reconfigure the camera in an instant or share settings with other cameras of the same type.	

^{*} Rotate the drive dial to # (movie).



For information on compatible computer software, see "Software for Use with Your Camera" (298).

USB POWER SUPPLY SETTING

Choose whether power is supplied to the camera when it is connected to a computer or other device via a USB cable.

Option	Description
ON	The camera draws power from the connected device, reducing
	the drain on the camera battery.
OFF	The camera does not draw power from the connected device.

- ① The camera cannot draw power from Lightning connections or from devices that do not supply power. Select **OFF** before connecting the camera to such devices. The connection may not be available for data transfer or the like when **ON** is selected.
- Regardless of the option selected, the battery will charge while the camera is off.

GENERAL SETTINGS

Adjust settings for connection to wireless networks.

Option	Description	
NAME	Choose a name (NAME) to identify the camera on the wireless	
	network (the camera is assigned a unique name by default).	
	Choose whether to resize images for upload to smartphones.	
RESIZE IMAGE FOR	Resizing applies only to the copy uploaded to the smartphone;	
SMARTPHONE	the original is not affected.	
3M	• ON: Larger images are resized to IIII for upload.	
	OFF: Images are uploaded at their original size.	
GEOTAGGING	Choose whether location data downloaded from a smartphone	
	are embedded in pictures as they are taken.	
LOCATION INFO	Display the location data last downloaded from a smartphone.	
	Choose the role played by the Fn1 button during playback.	
	• * PAIRING/TRANSFER ORDER: The Fn1 button can be	
🛜 BUTTON	used for pairing and selecting images for transfer during play-	
SETTING	back.	
	• THE WIRELESS COMMUNICATION : The Fn1 button can be	
	used during playback to establish wireless connections.	

INFORMATION

View the camera's MAC and Bluetooth address.

RESET WIRELESS SETTING

Restore wireless settings to their default values.

Shortcuts



Shortcut Options

Customize camera controls to suit your style or situation.

Frequently-used options can be added to the **Q** menu or a custom "my" menu or assigned to a function button or touch-function gesture for direct access:

Shortcut Option	Description	
"My menu"	Add frequently-used options to this custom menu, which can be viewed by pressing MENU/OK and selecting the M ("MY MENU") tab.	
The Quick Menu	The Q menu is displayed by pressing the Q button. Use the Q menu to view or change the options selected for frequently-used menu items.	
The function button	Use the function buttons for direct access to selected features.	
Touch-function gestures Use touch function button flick gestures (T-Fn1, T-Fn2, T-Fn3, and T-Fn4) for direct access to selected features.		258

MY MENU

Access a personalized menu of frequently-used options.

To display "my menu", press MENU/OK in the shooting display and select the MENU) tab.

 


The material tab is only available if options have been assigned to material material material.

MY MENU SETTING

To choose the items listed in the **M** (MY MENU) tab:

- 1 In the setup menu, select ☑ USER SETTING > MY MENU SETTING or MY MENU SETTING.
 - To reorder items, select **RANK ITEMS**. To delete items, select **REMOVE ITEMS**.
- 2 Press the focus stick (focus lever) up or down to highlight ADD ITEMS and press MENU/OK. Options that can be added to "my menu" are highlighted in blue.





Name of the state of the state

3 Choose a position for the item and press MENU/OK. The item will be added to "my menu".



- 4 Press MENU/OK to return to the edit display.
- **5** Repeat Steps 3 and 4 until all the desired items have been added.
- My menu" can contain up to 16 items.


The Quick Menu

Use the quick menu for quick access to selected options. To view the quick menu, press the **Q** button.

The Quick Menu Display


The quick menu offers different options in photo and movie modes. At default settings, it contains the following items:

Still photography

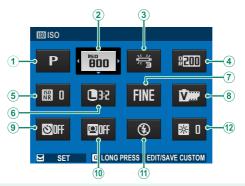

Default		
1 SHOOTING MODE/ SELECT CUSTOM SETTING	① IMAGE QUALITY	
② ISO	8 FILM SIMULATION	
3 WHITE BALANCE	SELF-TIMER	
4 DYNAMIC RANGE	10 FACE/EYE DETECTION SETTING	
5 HIGH ISO NR	① FLASH FUNCTION SETTING	
6 IMAGE SIZE	12 EVF/LCD BRIGHTNESS	

The quick menu shows the options currently selected for items (2)–(2), which can be changed.

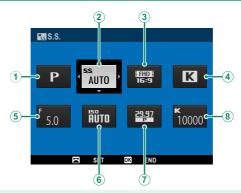

Default		
① SHOOTING MODE	(5) APERTURE (MOVIE OPTIMIZED CONTROL → ▶)	
② S.S. (MOVIE OPTIMIZED CONTROL ■ •)	⑥ 🕰 ISO	
3 MOVIE MODE RESOLUTION/ ASPECT RATIO	7 MOVIE MODE FRAME RATE	
④ ₩ WHITE BALANCE	® WHITE BALANCE COLOR TEMP. (WHEN SELECTED)	

The quick menu shows the options currently selected for items (2)–(8), which can be changed.

 
Viewing and Changing Settings

1 Press Q to display the quick menu during shooting.



) Use the focus stick (focus lever) to highlight items and rotate the rear command dial to change.





- To jump to the EDIT/SAVE CUSTOM SETTING menu, press and hold the **Q** button when the quick menu is displayed.
- 3 Press **Q** to exit when settings are complete.



- The guick menu can also be edited using touch controls.
 - Using **☑ BUTTON/DIAL SETTING** > **FUNCTION (Fn) SETTING**, you can assign the Q button roles normally reserved for the function buttons or assign the **Q** button's default role to a function button (255).
 - To disable the **Q** (quick menu) button, select **NONE** for **☑ BUTTON**/ DIAL SETTING > FUNCTION (Fn) SETTING > Q BUTTON SETTING.

Editing the Quick Menu

To choose the items displayed in the quick menu:

1 Press and hold the **Q** button during shooting.



- The camera displays the photo quick menu during still photography and the movie quick menu when in movie mode.
- 2 The current quick menu will be displayed; use the focus stick (focus lever) to highlight the item you wish to change and press MENU/OK.
- 3 Highlight the item you wish to change and press **MENU/OK**. The following can be assigned to the quick menu.
- The quick menus can also be edited using **BUTTON/DIAL SETTING** > **BUT**

Available Items (Still Photography)

Choose from:

- IMAGE SIZE
- IMAGE QUALITY
- FILM SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME EX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- WHITE BALANCE COLOR TEMP. (WHEN K SELECTED)
- HIGHLIGHT TONE
- SHADOW TONE
- COLOR
- SHARPNESS
- CLARITY
- HIGH ISO NR
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE/EYE DETECTION SETTING
- MF ASSIST

- TOUCH SCREEN MODE
- HDR
- SFI F-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- FLASH FUNCTION SETTING
- FLASH COMPENSATION
- MOVIE MODE RESOLUTION/ ASPECT RATIO
- MOVIE MODE FRAME RATE
- MOVIE MODE BIT RATE
- FULL HD HIGH SPEED REC.
- INTERNAL/EXTERNAL MICLEVEL **ADJUSTMENT**
- SOUND & FLASH
- FVF/I CD BRIGHTNESS
- FVF/I CD COLOR
- NONE



To disable the function button, choose **NONE**.

Available Items (Movies)

- FII M SIMULATION
- DYNAMIC RANGE
- WHITE BALANCE
- WHITE BALANCE COLOR TEMP. (WHEN K SELECTED)
- HIGHLIGHT TONE
- SHADOW TONE
- COLOR
- SHARPNESS
- HIGH ISO NR
- FACE/EYE DETECTION SETTING
- MF ASSIST
- TOUCH SCREEN MODE
- PHOTOMETRY
- MOVIF ISO
- MOVIE MODE RESOLUTION/ ASPECT RATIO

- MOVIE MODE FRAME RATE
- MOVIE MODE BIT RATE
- FULL HD HIGH SPEED REC
- MOVIE AF MODE
- FIX MOVIE CROP MAGNIFICATION
- S.S. (MOVIE OPTIMIZED CONTROL ● **b**)
- APERTURE (MOVIE OPTIMIZED CONTROL (CONTROL)
- INTERNAL/EXTERNAL MICLEVEL **ADJUSTMENT**
- SOUND & FLASH
- EVF/LCD BRIGHTNESS
- FVF/I CD COLOR
- NONF



To disable the function button, choose **NONE**.

Function Controls


Assign a role to each function button or touch-function gesture for quick access to the selected feature.

The Function Buttons

Assign a role to the function buttons for quick access to the selected feature.

Function Button Defaults

The default assignments are:

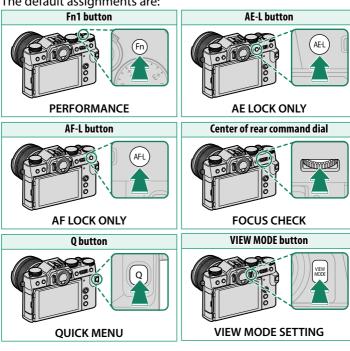

Assigning Roles to the Function Buttons

The roles played by the function buttons can be selected using the BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING option in the setup menu.

- IMAGE SIZE
- IMAGE OUALITY
- RAW
- FII M SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME FX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- SELECT CUSTOM SETTING
- FOCUS ARFA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- AF RANGE LIMITER
- FOCUS CHECK LOCK
- DRIVE SETTING
- HDR
- SPORTS FINDER MODE
- PRE-SHOT **ES ₽**
- SFI F-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO
- IS MODE
- WIRFI_ESS COMMUNICATION
- FLASH COMPENSATION

- FLASH FUNCTION SETTING
- TTI-LOCK
- MODELING FLASH
- MOVIE RECORDING RELEASE
- FULL HD HIGH SPEED REC
- FIX MOVIE CROP MAGNIFICATION
 - 7FBRA SETTING
 - INTERNAL/EXTERNAL MIC LEVEL ADJUSTMENT
- MOVIF OPTIMIZED CONTROL
- VIEW MODE SETTING PREVIEW DEPTH OF FIELD
- PREVIEW EXP./WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- FLECTRONIC LEVEL
- I ARGE INDICATORS MODE
 - F-Log VIEW ASSIST
 - AF LOCK ONLY
 - AF LOCK ONLY
 - AF/AFIOCK
 - AF-ON
- AWB LOCK ONLY
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SFI FCT PAIRING DESTINATION
- Bluetooth ON/OFF
- OUICK MENU
- PLAYBACK
 - NONE



To disable the function button, choose **NONE**.

AF-ON

Controls to which AF-ON is assigned can be used for autofocus.

MODELING FLASH

If **MODELING FLASH** is selected when a compatible shoe-mounted flash unit is attached, you can press the control to test-fire the flash and check for shadows and the like (modeling flash).

TTL-LOCK

If TTL-LOCK is selected, you can press the control to lock flash output according to the option selected for ■ FLASH SETTING > TTL-LOCK MODE (■ 153).

Touch-Function Gestures


Assign roles to touch-function gestures (T-Fn1, T-Fn2, T-Fn3, or T-Fn4) for quick access to selected features.



Touch-function gestures are disabled by default. To enable touch-function gestures, select **ON** for **BUTTON/DIAL SETTING** > **TOUCH** SCREEN SETTING > THE TOUCH FUNCTION.

Touch-Function Gesture Defaults

The default assignments for the different gestures are:

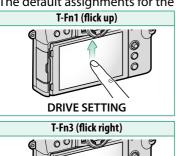







Assigning Roles to Touch-Function Gestures

The roles played by touch-function gestures can be selected using the BUTTON/DIAL SETTING > FUNCTION (Fn) SETTING option in the setup menu.

- IMAGE SIZE
- IMAGE OUALITY
- RAW
- FII M SIMULATION
- GRAIN FFFFCT
- COLOR CHROME FEFECT
- COLOR CHROME EX BLUE
- DYNAMIC RANGE
- D RANGE PRIORITY
- WHITE BALANCE
- CLARITY
- SELECT CUSTOM SETTING
- FOCUS ARFA
- FOCUS CHECK
- AF MODE
- AF-C CUSTOM SETTINGS
- FACE DETECTION ON/OFF
- AF RANGE I IMITER
- FOCUS CHECK LOCK
- DRIVE SETTING
- HDR
- SPORTS FINDER MODE
- PRE-SHOT **ES ₽**
- SFI F-TIMER
- PHOTOMETRY
- SHUTTER TYPE
- FLICKER REDUCTION
- ISO

- IS MODE
- WIRELESS COMMUNICATION
- FLASH COMPENSATION
- FLASH FUNCTION SETTING
- TTI-LOCK
- MODELING FLASH
- FULL HD HIGH SPEED REC.
- FIX MOVIE CROP MAGNIFICATION
- 7FBRA SETTING
- INTERNAL/EXTERNAL MIC LEVEL **ADJUSTMENT**
- MOVIE OPTIMIZED CONTROL ➡
- VIEW MODE SETTING PREVIEW DEPTH OF FIELD
- PREVIEW FXP./WB IN MANUAL MODE
- NATURAL LIVE VIEW
- HISTOGRAM
- FLECTRONIC LEVEL
- I ARGE INDICATORS MODE
- F-Log VIEW ASSIST
- APERTURE SETTING
- PERFORMANCE
- AUTO IMAGE TRANSFER
- SFI FCT PAIRING DESTINATION
- Bluetooth ON/OFF
- OUICK MENU
- PLAYBACK
- NONE



To disable touch-function gestures, choose **NONE**.


MEMO

 
Peripherals and Optional Accessories

 
Lenses

The camera can be used with lenses for the FUJIFILM X-mount.

Lens Parts

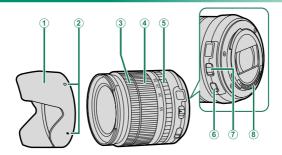





- (1) Lens hood
- 2 Mounting marks
- 3 Focus ring
- (4) Zoom ring
- (5) Aperture ring

 
- 6 O.I.S. switch
- **7** Aperture mode switch
- 8 Lens signal contacts
- Front lens cap
- (10) Rear lens cap



Removing Lens Caps

Remove lens caps as shown.







① Lens caps may differ from those shown.

Attaching Lens Hoods

  
When attached, lens hoods reduce glare and protect the front lens element.





Lenses with Aperture Rings

 At settings other than A, you can adjust aperture by rotating the lens aperture ring (exposure modes A and M).




Aperture ring



- Selecting **ON** for **MOVIE OPTIMIZED CONTROL →** b disables the aperture ring.
 - When the aperture ring is set to **A**, rotate the command dials to adjust aperture.


The Aperture Mode Switch-

If the lens has an aperture mode switch, aperture can be adjusted manually by sliding the switch to \$\square\$ and rotating the aperture ring.

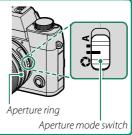

Lenses with No Aperture Rings

 
The method used to adjust aperture can be selected using BUTTON/DIAL **SETTING** > **APERTURE SETTING**. When an option other than AUTO is selected, aperture can be adjusted using the front command dial.



Aperture control defaults to the front command dial, but can be reassigned to the rear command dial using BUTTON/DIAL SETTING > COMMAND DIAL SETTING

Lenses with O.I.S. Switches

 If the lens supports optical image stabilization (O.I.S.), the image stabilization mode can be chosen in the camera menus. To activate image stabilization, slide the O.I.S. switch to ON.



Manual Focus Lenses

Slide the focus ring to the front for autofocus.



For manual focus, slide the focus ring to the back and rotate it while checking the results in the camera display. The focus distance and depth-of-field indicators can be used to assist manual focus.



Note that manual focus may not be available in all shooting modes.

The Depth-of-Field Indicator—

The depth-of-field indicator shows the approximate depth of field (the distance in front of and behind the focus point that appears to be in focus). The indicator is displayed in film format.



Lens Care

- Use a blower to remove dust, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied.
- Replace the front and rear caps when the lens is not in use.

External Flash Units

Use optional external flash units for flash photography. Some units support high-speed sync (FP) and can be used at shutter speeds faster than the flash sync speed, while others can function as commanders controlling remote units via optical wireless flash control.



1 You may be unable to test-fire the flash in some circumstances, for example when camera menus are displayed.

Red-Eve Removal-

Red-eye removal is available when an option other than **OFF** is selected for ■ FLASH SETTING > RED EYE REMOVAL and MAF/MF SETTING > FACE/EYE DETECTION SETTING is FACE DETECTION ON. Red-eye removal minimizes "red-eye" caused when light from the flash is reflected from the subject's retinas.

Flash Sync Speed

The flash will synchronize with the shutter at shutter speeds of 1/80 s or slower.

Optional Flash Units from Fuiifilm

The camera can be used with optional Fujifilm shoe-mounted flash units.

Third-Party Flash Units

Do not use third-party flash units that apply over 300 V to the camera hot shoe.

Using an External Flash

- 1 Connect the unit to the camera.
- 2 In shooting mode, select FLASH FUNCTION SETTING in the ☑ (FLASH SETTING) menu tab. The options available vary with the flash unit.



Menu	Description	
Built-In Flash	Displayed when the built-in flash is raised.	98
SYNC TERMINAI	Sync terminal options will be displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.	
SHOE MOUNT FLASH	Displayed when an optional flash unit other than the EF-X8 is mounted on the hot shoe and turned on.	271
(OPTICAL)	Displayed if an optional flash unit functioning as a com- mander for Fujifilm optical wireless remote flash control is connected and turned on.	274

3 Highlight items using the focus stick (focus lever) and rotate the rear command dial to change the highlighted setting.



4 Press DISP/BACK to put the changes into effect.

SYNC TERMINAL

SYNC TERMINAL is displayed if the built-in flash is lowered and either no flash unit, or an incompatible flash unit, is mounted on the hot shoe.



Setting	Description
1 Flash control mode	Choose from the following options: • M: A trigger signal is transmitted via the hot shoe X contacts when a picture is taken. Choose a shutter speed slower than the sync speed; even slower speeds may be required if the unit uses long flashes or has a slow response time. • **OFF* (OFF): The trigger signal is disabled.
② Sync	Choose whether the flash is timed to fire immediately after the shutter opens ($_{\rm REAR}^4/{\rm 2ND}$ CURTAIN) or immediately before it closes ($_{\rm REAR}^4/{\rm 2ND}$ CURTAIN). 1ST CURTAIN is recommended in most circumstances.

SHOE MOUNT FLASH

The following options are available when an optional shoe-mounted flash unit is attached and turned on.



Setting	Description
1 Flash control mode	The flash control mode selected with the flash unit. This can in some cases be adjusted from the camera; the options available vary with the flash. • TTL: TTL mode. Adjust flash compensation (②). • M: The flash fires at the selected output regardless of subject brightness or camera settings. Output in some cases can be adjusted from the camera (②). • MULTI: Repeating flash. Compatible shoe-mounted flash units will fire multiple times with each shot. • ③OFF (OFF): The flash does not fire. Some flash units can be turned off from the camera.

Setting	Description
② Flash compensation/output	The options available vary with flash control mode. • TTL: Adjust flash compensation (the full value may not be applied if the limits of the flash control system are exceeded). In the cases of the EF-X20, EF-20, and EF-42, the selected value is added to the value selected with the flash unit. • M/MULTI: Adjust flash output (compatible units only). Choose from values expressed as fractions of full power, from 1/4 (mode M) or 1/4 (MULTI) down to 1/512 in increments equivalent to 1/3 EV. The desired results may not be achieved at low values if they exceed the limits of the flash control system; take a test shot and check the results.
(3) Flash mode (TTL)	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P, S, A, or M) selected. • 知 (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A condisplayed when the shutter button is pressed halfway indicates that the flash will fire when the photo is taken. • 知 (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released. • 知 (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.

Setting	Description
(4) Sync	Control flash timing. • RÔNT (1ST CURTAIN): The flash fires immediately after the shutter opens (generally the best choice). • RÊAR (2ND CURTAIN): The flash fires immediately before the shutter closes. • \$ (AUTO FP(HSS)): High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to 1ST CURTAIN when MULTI is selected for flash control mode.
(5) Zoom	The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If AUTO is selected, zoom will automatically be adjusted to match coverage to lens focal length.
(6) Lighting	If the unit supports this feature, choose from: ■ (FLASH POWER PRIORITY): Gain range by slightly reducing coverage. ■ (STANDARD): Match coverage to picture angle. ■ (EVEN COVERAGE PRIORITY): Slightly increase coverage for more even lighting.
(7) LED light	Choose how the built-in LED light functions during still photography (compatible units only): as a catchlight (へんなて出しられ), as an AF-assist illuminator (AF/AF ASSIST), or as both a catchlight and an AF-assist illuminator (答/AF ASSIST+CATCHLIGHT). Choose OFF to disable the LED during photography.
Number of flashes *	Choose the number of times the flash fires each time the shutter is released in MULTI mode.
8 Frequency*	Choose the frequency at which the flash fires in MULTI mode.

^{*} Full value may not be applied if limits of flash control system are exceeded.

 
COMMANDER(OPTICAL)

The options will be displayed if the unit is currently functioning as a commander for Fujifilm optical wireless remote flash control.



Fujifilm optical wireless remote flash control offers a choice of four channels (Channels 1 through 4) for the exchange of optical signals between the commander and remote flash units. Separate channels can be used for different flash systems or to prevent interference when multiple systems are operating in close proximity.

The flash units can also be placed in up to three groups (A, B, and C) and flash mode and flash level adjusted separately for each group.



Setting	Description
1 Flash control mode (group A)	Choose flash control modes for groups A, B, and C. TTL% is available for groups A and B only. TTL: The units in the group fire in TTL mode. Flash compensation can be adjusted separately for each group. TTL%: If TTL% is selected for either group A or B, you can
(group B)	specify the output of the selected group as a percentage of the other and adjust overall flash compensation for both groups. • M: In mode M, the units in the group fire at the selected output (expressed as a fraction of full power) regardless.
(3) Flash control mode (group C)	of subject brightness or camera settings. • MULTI: Choosing MULTI for any group sets all the units in all groups to repeating flash mode. All units will fire multiple times with each shot. • ③OFF (OFF): If OFF is selected, the units in the group will not fire.
Flash compensation/ output (group A)	Adjust flash level for the selected group according to option selected for flash control mode. Note that the full value may not be applied if the limits of the flash control
5 Flash compensation/ output (group B)	system are exceeded. • TTL: Adjust flash compensation.
6 Flash compensation/ output (group C)	 M/MULTI: Adjust flash output. TTL%: Choose the balance between groups A and B and adjust overall flash compensation.

Setting	Description
	Choose a flash mode for TTL flash control. The options available vary with the shooting mode (P , S , A , or M) selected.
(7) Flash mode (TTL)	• III (FLASH AUTO): The flash fires only as required; flash level is adjusted according to subject brightness. A classification of the shutter button is pressed halfway indicates that the flash will fire when the photo is taken.
(1) ridsii illoue (11L)	• 4TIL (STANDARD): The flash fires with every shot if possible; flash level is adjusted according to subject brightness. The flash will not fire if not fully charged when the shutter is released.
	• IIII (SLOW SYNC.): Combine the flash with slow shutter speeds when photographing portrait subjects against a backdrop of night scenery. The flash will not fire if not fully charged when the shutter is released.
(8) Sync	Control flash timing. • RÓNT (1ST CURTAIN): The flash fires immediately after the shutter opens (generally the best choice). • RÉAR (2ND CURTAIN): The flash fires immediately before the shutter closes. • \$ (AUTO FP(HSS)): High-speed sync (compatible units only). The camera automatically engages front-curtain high-speed sync at shutter speeds faster than the flash sync speed. Equivalent to 1ST CURTAIN when MULTI is selected for flash control mode.
(9) Zoom	The angle of illumination (flash coverage) for units that support flash zoom. Some units allow the adjustment to be made from the camera. If AUTO is selected, zoom will automatically be adjusted to match coverage to lens focal length.
10 Lighting	If the unit supports this feature, choose from: ■ (FLASH POWER PRIORITY): Gain range by slightly reducing coverage. ■ (STANDARD): Match coverage to picture angle. ■ (EVEN COVERAGE PRIORITY): Slightly increase coverage for more even lighting.

Setting	Description
	Choose the group for units functioning as a commander for Fujifilm optical wireless remote flash control in TTL ,
	TTL%, or M mode. This option is available only with clip-
(11) Commander	on flash units that support Fujifilm optical wireless remote flash control.
Communicer	• Gr A: Assign the commander to group A.
	• Gr B : Assign the commander to group B.
	• Gr C : Assign the commander to group C.
	• 0FF : Output from the commander is held to a level that
	does not affect the final picture.
(11) Number of flashes	Choose the number of times the flash fires each time the
III) MUITIDEI OI HASHES	shutter is released in MULTI mode.
	Choose the channel used by the commander for commu-
	nication with the remote flash units. Separate channels
(12) Channel	can be used for different flash systems or to prevent in-
	terference when multiple systems are operating in close
	proximity.
(12) Frequency	Choose the frequency at which the flash fires in MULTI
requeries	mode.

MEMO

Connections


HDMI Output

Camera shooting and playback displays can be output to HDMI devices.

Connecting to HDMI Devices

Connect the camera to TVs or other HDMI devices using a third-party HDMI cable.

- 1 Turn the camera off.
- 2 Connect the cable as shown below.

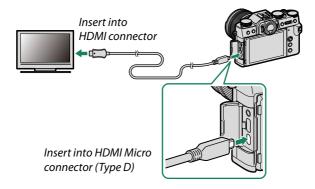

- 3 Configure the device for HDMI input as described in the documentation supplied with the device.
- 4 Turn the camera on. The contents of the camera display will be shown on the HDMI device. The camera display turns off in playback mode (1992) 281).
- Making sure the connectors are fully inserted.
 - Use an HDMI cable no more than 1.5 m (4.9 ft.) long.
 - The USB cable cannot be used while an HDMI cable is connected.

Shooting

Shoot photos and record movies while viewing the scene through the camera lens on or saving footage to the HDMI device.



This feature can be used to save 4K and Full HD movies to an HDMI recorder.

Playback

To start playback, press the camera **b** button. The camera monitor turns off and pictures and movies are output to the HDMI device. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.



- Some televisions may briefly display a black screen when movie playback begins.
 - An adapter cable (sold separately; 🕮 331) is required when using headphones.

Wireless Connections (Bluetooth®, Wireless LAN/Wi-Fi)

Access wireless networks and connect to computers, smartphones, or tablets. For more information, visit: http://fujifilm-dsc.com/wifi/

Smartphones and Tablets: FUJIFILM Camera Remote

Connect to the camera via Bluetooth or wireless LAN.



To establish a wireless connection to the camera, you will need to install the latest version of the FUJIFILM Camera Remote app on your smartphone or tablet.

FUJIFILM Camera Remote

Once a connection has been established, you can use FUJIFILM Camera Remote to:

- Control the camera and take pictures remotely
- Receive pictures uploaded from the camera
- Browse the pictures on the camera and download selected pictures
- Upload location data to the camera
- Release the camera shutter
- Update camera firmware

For downloads and other information, visit: http://app.fujifilm-dsc.com/en/camera_remote/

SmartPhones and Tablets: Bluetooth® Pairing

Use CONNECTION SETTING > Bluetooth SETTINGS > PAIRING **REGISTRATION** to pair the camera with smartphones or tablets. Pairing offers a simple method for downloading photos from the camera.





- Photos are downloaded via a wireless connection.
 - Once pairing is complete, you will be able to synchronize the camera clock and location data with the smartphone or tablet (1239).
 - You can choose a connection from up to 7 paired smartphones or tablets

Smartphones and Tablets: Wireless LAN

Establish wireless LAN connections to smartphones or tablets using WIRELESS COMMUNICATION in the SHOOTING SETTING, MOVIE SETTING, or ☐ PLAY BACK MENU.





Copying Pictures to a Computer: PC AutoSave

Install the latest version of FUJIFILM PC Autosave to your computer to upload pictures from the camera over wireless networks (Wi-Fi).

FUJIFILM PC AutoSave

For downloads and other information, visit: http://app.fujifilm-dsc.com/en/pc_autosave/

Computers: Wireless Connections

You can upload pictures from the camera using the **PC AUTO SAVE** option in the playback menu.




Connecting via USB

The camera can be connected to computers and smartphones via USB.

Connecting to Computers

- Before downloading pictures or taking pictures remotely, connect the camera to a computer and check that it functions normally.
 - 1 Turn the computer on.
 - 2 Adjust settings according to how the camera will be used.
 - "Copying Pictures from a Memory Card to a Computer"
 - "Using Your Camera as a Webcam (FUJIFILM X Webcam)" (288)
 - "Converting RAW Images (FUJIFILM X RAW STUDIO)" (289)
 - "Backing up and Restoring Camera Settings (FUJIFILM X Acquire)" (289)
 - 3 Turn the camera off.
 - 4 Connect a USB cable.

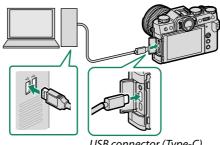

USB connector (Type-C)

The USB cable must be no more than 1.5 m (4.9 ft.) long and be suitable for data transfer.

- 5 Turn the camera on.
- 6 Copy pictures to your computer.
 - Image transfer: Use applications provided with your operating system.
 - Using your camera as a webcam: Launch FUJIFILM X Webcam.
 - RAW conversion: Process RAW images using FUJIFILM X RAW STUDIO. The power of the camera's image processing engine is used for rapid processing.
 - Saving and loading camera settings: Use FUJIFILM X Acquire to save or load camera settings. Save your preferred settings to a file in a single operation and copy them to multiple cameras.

- Turn the camera off before disconnecting the USB cable.
 - When connecting USB cables, be sure the connectors are fully inserted in the correct orientation. Connect the camera directly to the computer; do not use a USB hub or keyboard.
 - Loss of power during transfer could result in loss of data or damage to the memory card. Insert a fresh or fully-charged battery before connecting the camera.
 - If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
 - Make sure that the indicator lamp is off or lit green before disconnecting the camera.
 - Do not disconnect the USB cable while transfer is in progress. Failure to observe this precaution could result in loss of data or damage to the memory card.
 - Disconnect the camera before inserting or removing memory cards.
 - In some cases, it may not be possible to access pictures saved to a network server using the software in the same way as on a standalone computer.
 - Do not immediately remove the camera from the system or disconnect the USB cable once the message stating that copying is in progress clears from the computer display. If the number of images copied is very large, data transfer may continue after the message has ceased to be displayed.
 - The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

Copying Pictures from a Memory Card to a Computer

- Before copying pictures to a computer, select USB CARD READER for CONNECTION SETTING > CONNECTION MODE.
- The software that can be used to copy pictures varies with your computer operating system.



Mac OS X/macOS

Pictures can be copied to your computer using Image Capture (supplied with your computer) or other software.



Use a card reader to copy files over 4 GB in size.

Windows

Pictures can be copied to your computer using applications supplied with the operating system.

Using Your Camera as a Webcam (FUJIFILM X Webcam)

- Before proceeding, select X WEBCAM for **☑** CONNECTION SETTING > CONNECTION MODE in the camera menus.
- Launch FUJIFII M X Webcam.





Normation on FUJIFILM X Webcam, see "Software for Use" with Your Camera" (298).

Tethered Movie Recording

- Before proceeding, select USB MOVIE SHOOTING AUTO for CONNECTION **SETTING > CONNECTION MODE** in the camera menus.
- Use this option when the camera is connected to gimbals, drones, or other devices.





- Notate the drive dial to 🕿 (movie).
 - The features available vary with the type of device connected.
 - Choose USB MOVIE SHOOTING FIXED if the camera will be used solely for tethered movie recording. Note that if the USB cable is disconnected, the camera will continue to function in tethered mode and pictures will not be saved to the camera memory card.

Converting RAW Images (FUJIFILM X RAW STUDIO)

- Before proceeding, select USB RAW CONV./ BACKUP RESTORE for CONNECTION **SETTING** > **CONNECTION MODE** in the camera menus.
- FUJIFILM X RAW STUDIO can be used to convert RAW images to JPEG or TIFF images.





For more information on FUJIFILM X RAW STUDIO, see "Software for Use with Your Camera" (298).

Backing up and Restoring Camera Settings (FUJIFILM X Acquire)

- Before proceeding, select USB RAW CONV./ BACKUP RESTORE for CONNECTION **SETTING** > **CONNECTION MODE** in the camera menus.
- FUJIFILM X Acquire can be used to backup and restore camera settings.
- USB CARD READER USB MOVIE SHOOTING AUTO USB MOVIE SHOOTING FIXED ISB RAW CONV /RACKLIP RESTORE GEN



For more information on FUJIFILM X Acquire, see "Software for Use with Your Camera" (298).

Connecting to Smartphones

 
To copy pictures to a smartphone, select **OFF** for **CONNECTION SETTING** > **USB POWER SUPPLY SETTING** and connect the camera to the phone using a USB cable.

For Customers Using Android Devices

How you will connect the camera depends on the type of USB connector with which your smartphone is equipped.


Type-C

Ready a cable equipped with connectors matching the USB (Type-C) connector on the camera.



Micro-B

Use a USB on-the-go (OTG) cable.

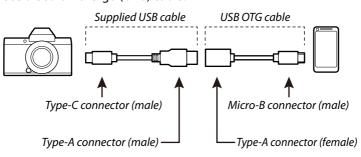


- The smartphone must support USB OTG.
 - The desired results cannot be achieved with a USB Type-C-to-Mirco-B cable. Use an OTG cable.

- 1 Set the camera's ☑ CONNECTION SETTING > USB POWER SUPPLY SETTING to OFF.
- 2 Connect the camera and smartphone using a USB cable.
 - If the smartphone asks for permission for an application other than the "Camera Importer" to access the camera, tap "Cancel" and move on to the next step.
- 3 On your smartphone, tap the notification "Connected to USB PTP".
- **4** From the recommended applications, select "Camera Importer".
 - The app will automatically start and allow you to import photos and movies to your smartphone.
 - If the message "There is no MTP device connected" appears on the app, please try again from step 2.

For Customers Using iOS

An Apple Lightning to USB Camera Adapter is required.

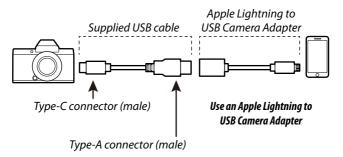

- 1 Set the camera's CONNECTION SETTING > USB POWER SUPPLY SETTING to OFF.
- 2 Connect the camera and smartphone using a USB cable. Launch the Photos app to import photos and movies to your smartphone.
- A Type-C to Type-C USB cable is required for connection to iPad Pro and iPad Air devices equipped with USB Type-C connectors.
 - The desired results cannot be achieved with a USB Type-C-to-Lightning cable. Use a camera adapter.

instax SHARE Printers

Print pictures from your digital camera to instax SHARE printers.

Establishing a Connection

Select **CONNECTION SETTING** > **instax PRINTER CONNECTION SETTING** and enter the instax SHARE printer name (SSID) and password.

 
The Printer Name (SSID) and Password-

The printer name (SSID) can be found on the bottom of the printer; the default password is "1111". If you have already chosen a different password to print from a smartphone, enter that password instead.



Printing Pictures

- 1 Turn the printer on.
- Select □ PLAY BACK MENU > instax instax PRINTER PRINT PRINTER PRINT. The camera will connect to the printer.



3 Use the focus stick (focus lever) to
■ instax PRINTER PRINT display the picture you want to print, then press MENU/OK.



- Pictures taken with other cameras cannot be printed.
 - The area printed is smaller than the area visible in the LCD monitor.
 - The displays may vary depending on the printer connected.
- 4 The picture will be sent to the printer and printing will start.

Technical Notes

Accessories from Fujifilm

The following optional accessories are available from Fujifilm. For the latest information on the accessories available in your region, check with your local Fujifilm representative or visit https://fujifilm-x.com/support/compatibility/cameras/.

Rechargeable Li-ion batteries

NP-W1265: Additional high-capacity NP-W126S rechargeable batteries can be purchased as required.

Battery chargers

BC-W1265: Replacement battery chargers can be purchased as required. At +20 °C/+68 °F, the BC-W126S charges an NP-W126S in about 150 minutes.

AC power adapters

AC-9V (requires CP-W126 DC coupler): Use this 100–240 V, 50/60 Hz AC power adapter for extended shooting and playback or when copying pictures to a computer.

DC couplers

CP-W126: For extended shooting or playback or when using the camera with a computer, use the CP-W126 to connect the camera to the AC-9V power adapter.

Remote releases

RR-100: Use to reduce camera shake or keep the shutter open during a time exposure (\emptyset 2.5 mm).

Stereo microphones

MIC-ST1: An external microphone for movie recording.

FUJINON lenses

XF-/XC-series lenses: Interchangeable lenses for use exclusively with the FUJIFILM X-mount.

FUJINON MKX-series lenses: Cinema lenses for the FUJIFILM X-mount.

Macro extension tubes

MCEX-11/16: Attach between the camera and the lens to shoot at high reproduction ratios.

Teleconverters

XF1.4X TC WR: Increases the focal length of the compatible lenses by about 1.4×. **XF2X TC WR**: Increases the focal length of the compatible lenses by about 2.0×.

Mount adapters

FUJIFILM M MOUNT ADAPTER: Allows the camera to be used with a wide selection of M-mount lenses.

Body caps

BCP-001: Cover the camera lens mount when no lens is attached.

Shoe-mounted flash units

EF-X500: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 50/164 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. Featuring support for the optional EF-BP1 battery pack and Fujifilm optical wireless flash control, it can be used as a commander or remote flash unit for remote wireless flash photography.

EF-BP1: A battery pack for EF-X500 flash units. Takes up to 8 AA batteries.

EF-60: In addition to manual and TTL flash control, this clip-on flash unit has a Guide Number of 60/197 (ISO 100, m/ft.) and supports FP (high-speed sync), allowing it to be used at shutter speeds that exceed the flash sync speed. It can also be used as remote flash under the control of an optional EF-W1 wireless commander.

EF-W1: With support for the NAS* wireless communication standard developed by Nissin Japan, this wireless flash commander can be used with optional EF-60 clip-on flash units and other NAS-compliant units.

* NAS is a registered trademark of Nissin Japan Ltd.

EF-42: This clip-on flash unit has a Guide Number of 42/137 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-X20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports manual and TTL flash control.

EF-20: This clip-on flash unit has a Guide Number of 20/65 (ISO 100, m/ft.) and supports TTL flash control (manual flash control is not supported).

Grip belts

GB-001: Improves grip. Combine with a hand grip for more secure handling.

instax SHARE printers

SP-1/SP-2/SP-3: Connect via wireless LAN to print pictures on instax film.

Software for Use with Your Camera

The camera can be used with the following software. For the latest information on software available from Fujifilm, visit https://fujifilm-x.com/support/compatibility/cameras/.

FUJIFILM Camera Remote

Establish a wireless connection between your camera and a smartphone or tablet (\$\Pi\$ 282).

http://app.fujifilm-dsc.com/en/camera remote/

FUJIFILM PC AutoSave

Download pictures from your camera over wireless networks (284).

http://app.fujifilm-dsc.com/en/pc_autosave/

RAW FILE CONVERTER EX powered by SILKYPIX

RAW FILE CONVERTER EX powered by SILKYPIX is RAW conversion software from Ichikawa Soft Laboratory Co., Ltd. View RAW pictures on your computer and convert them into other formats. RAW FILE CONVERTER EX powered by SILKYPIX is available free of charge from the Fujifilm website.

https://fujifilm-x.com/support/download/software/raw-file-converterex-powered-by-silkypix/



TRAW FILE CONVERTER EX powered by SILKYPIX" is supplied by Ichikawa Soft Laboratory Co., Ltd.

Capture One Express Fujifilm

Capture One Express Fujifilm is image edit software from Capture One A/S. View RAW pictures on your computer and convert them into other formats. Capture One Express Fujifilm is available free of charge from Capture One.

https://www.captureone.com/products-plans/capture-one-express/fujifilm



Visit the Capture One A/S website for the latest support information.

Capture One Pro Fujifilm

Capture One Pro Fujifilm is workflow software from Capture One A/S. Capture One Pro Fujifilm supports tethered shooting and the conversion of RAW pictures into other formats.

https://www.captureone.com/explore-features/fujifilm

- Auto download (tethered shooting) is not supported with some cameras.
- Visit the Capture One A/S website for the latest support information.

FUJIFILM X Acquire

This application for Windows and macOS lets you connect to the camera via USB or Wi-Fi and automatically download photos to a specified folder as they are taken, or backup and restore the camera via USB.

https://fujifilm-x.com/products/software/x-acquire/

 Auto download (tethered shooting) is not supported with some cameras.

FUJIFILM X RAW STUDIO

When the camera is connected to a computer via USB, FUJIFILM X RAW STUDIO can use the camera's unique image processing engine to rapidly convert RAW files to create high-quality images in other formats.

https://fujifilm-x.com/products/software/x-raw-studio/

FUJIFILM X Webcam

Connect the camera to a computer via USB to turn it into a webcam.

https://fujifilm-x.com/products/software/x-webcam/

For Your Safety

IMPORTANT SAFETY INSTRUCTIONS

- should be read before the appliance is operated.
- should be retained for future reference.
- . Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions: All operating and use instructions should be followed.

Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

Overloading: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by Power Service Grounding Electrode the video product manufacturer as they may cause hazards. System (NEC ART 250. PART H)

Water and Moisture: Do not use this video product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.


• Read Instructions: All the safety and operating instructions Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by • Retain Instructions: The safety and operating instructions items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

> Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod. bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufac-

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Antennas Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

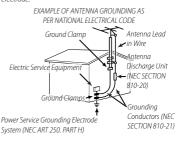

Power Lines: An outside antenna system should not be locat- Damage Requiring Service: Unplug this video product from ed in the vicinity of overhead power lines or other electric the wall outlet and refer servicing to qualified service personlight or power circuits, or where it can fall into such power nel under the following conditions: lines or circuits. When installing an outside antenna system, • When the power-supply cord or plug is damaged extreme care should be taken to keep from touching such . If liquid has been spilled, or objects have fallen into the power lines or circuits as contact with them might be fatal.

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate normally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance — this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

Be sure to read these notes before use

Safety Notes

- Make sure that you use your camera correctly. Read these safety notes and your Basic Manual carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious injury can result if the information is ignored.



This icon indicates that personal injury or material damage can result if the information is ignored

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information reguires attention ("Important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark indicate an action that must be performed ("Required").

The symbols on the product (including the accesories) represent the following:





Class II equipment (The construction of the product is double-insulated.)

∕N WARNING



If a problem arises, turn the camera off, remove the battery, disconnect the USB cable, and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor,

or is in any other abnormal state can cause a fire or electric shock. Contact your Fujifilm dealer. Do not allow water or foreign objects to enter the cam-



era or connecting cables. Do not use the camera or connecting cables following ingress of fresh or salt water, milk, beverages, detergents, or other liquids. Should liquid find its way into the camera or connecting cables, turn the camera off, remove the battery, disconnect the USB cable, and disconnect and unplug the AC adapter. Continued use of the camera can cause a fire or electric shock. Contact vour Fuiifilm dealer.

₩ARNING



Do not use the camera in the bathroom or shower. This can cause a fire or electric shock.



Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution can cause fire or electric shock.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged. contact your Fujifilm dealer. Do not use cables with bent connectors



Do not place the camera on an unstable surface. This can cause the camera to fall or tip over and cause



Never attempt to take pictures while in motion. Do not use the camera while walking or driving. This can result in you falling down or being involved in a traffic accident.



Do not touch any metal parts of the camera during a thunderstorm. This can cause an electric shock due to induced current from the lightning discharge.



Do not use the battery except as specified. Load the battery as shown by the indicator.

Do not disassemble, modify, or heat batteries. Do not drop, strike, or throw batteries or otherwise subject them to strong impacts. Do not use batteries that show signs of leaking, deformation, discoloration, or other abnormalities. Use only designated chargers to recharge rechargeable batteries and do not attempt to recharae non-recharaeable Li-ion or alkaline batteries. Do not short batteries or store them with metallic objects. Failure to observe these precautions could result in the batteries overheating, igniting, rupturing, or



Use only batteries or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire

leaking, causing fire, burns, or other injury.

WARNING



If the battery leaks and fluid gets in contact with your eyes, skin or clothing, flush the affected area with clean water and seek medical attention or call an emergency number riaht awav.



Do not use the charger to charge batteries other than those specified here. The supplied charger is for use only with batteries of the type supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak, overheat or burst.



Using a flash too close to a person's eves may cause visual impairment. Take particular care when photographing infants and young children.



Do not remain in prolonged contact with hot surfaces. Failure to observe this precaution could result in low-temperature burns, particularly at high ambient temperatures or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.



product for prolonged periods while the product is on. Failure to observe this precaution could result in low-temperature burns, particularly during prolonged use, at high ambient temperatures, or with users who suffer from poor circulation or reduced sensation, in which case use of a tripod or similar precautions are recommended.

 
Do not leave one part of the body in contact with the



Do not use in the presence of flammable objects, explosive gases, or dust. When carrying the battery, install it in a digital camera



or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape. Contact with other metallic objects or batteries could cause the battery to ignite or burst.



out of the reach of small children. Children may swallow small parts; keep out of reach of children. Should a child swallow a small part, seek medical attention or call emergency.



Keep out of reach of small children. Among the elements that could cause injury are the strap, which could become entangled about a child's neck, causing strangulation, and the flash, which could cause visual impairment.



equipment.

Follow the directions of airline and hospital personnel. This product generates radio-frequency emissions that could interfere with navigational or medical

♠ CAUTION



Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or electric shock



Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.



Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock



Do not cover or wrap the camera or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.



Do not use the plug if it is damaged or if it does not fit
securely into the outlet. Failure to observe this precaution could result in fire or electric shock



When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter.

Failure to do so can cause a fire or electric shock



When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.



When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card. In jury could result to those struck by the ejected card.



Request regular internal testing and cleaning for your camera. Build-up of dust in your camera can cause a fire or electric shock. Contact your Fujifilm dealer to request internal cleaning every two years. Please note that this service is not free of charge.



Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.



Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

The Battery and Power Supply

Note: Check the type of battery used in your camera and read ■ Cautions: Handling the Battery the appropriate sections.

MARNING: Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion

before use. Keep the battery in its case when not in use.

■ Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted ACPower Adapters battery may not function when cold. Keep a fully charged • The AC power adapter is for indoor use only. spare battery in a warm place and exchange as necessary. • Be sure the cable is securely connected to the camera. or keep the battery in your pocket or other warm place and • Turn the camera off before disconnecting the adapter. Disinsert it in the camera only when shooting. Do not place the connect the adapter by the plug, not the cable. battery in direct contact with hand warmers or other heating • Do not disassemble. devices.

■ Charging the Battery

The battery can be charged using a BC-W126S battery charger (available separately). Charging times will increase at ambient temperatures below +10°C (+50°F) or above +35°C (+95 °F). Do not attempt to charge the battery at temperatures above +40°C (+104°F); at temperatures below +5°C (+41 °F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

■ Battery Life

A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

■ Storage

If the camera will not be used for an extended period, store it at room temperature with the battery charged to approximately one half to 3/3 capacity.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from +15°C to +25°C (+59°F to +77°F). Do not store in locations exposed to extremes of temperature.

- · Do not transport or store with metal objects such as necklaces or hairpins.
- Do not expose to flame or heat.
- Do not disassemble or modify.
- Do not expose to low atmospheric pressures.
- Use with designated chargers only.
- · Dispose of used batteries promptly.
- Do not drop or subject to strong physical shocks.
- Do not expose to water.
- Keep the terminals clean.
- The battery is not charged at shipment. Charge the battery The battery and camera body may become warm to the touch after extended use. This is normal.

■ Caution: Disposal

Dispose of used batteries in accord with local regulations. Attention should be drawn to the environmental aspects of battery disposal. Use the apparatus under moderate climate. Do not mechanically crush or split batteries.

- Do not expose to high heat and humidity.
- · Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- If the adapter causes radio interference, reorient or relocate the receiving antenna.

Using the Camera

- · Do not aim the camera at extremely bright light sources, precaution could damage the camera image sensor.
- · Strong sunlight focused through the viewfinder may damthe electronic viewfinder at the sun

Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the results to ensure that the camera is functioning normally. FUJIFILM Corporation cannot accept liability for damages or lost profits incurred as a result of product malfunction.

Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Handlina

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

Liquid Crystal

In the event that the display is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- . If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

Trademark Information

including artificial light sources or natural light sources. Digital Split Image is a trademark or registered trademark of such as the sun in a cloudless sky. Failure to observe this FUJIFILM Corporation. Digital Micro Prism is a trademark or registered trademark of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware age the panel of electronic viewfinder (EVF). Do not aim Taiwan Inc. Apple, iPhone, iPad, Mac, OS X, macOS and Lightning are registered trademarks of Apple Inc. in the U.S.A. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S.A. and other countries. Android is a trademark or registered trademark of Google LLC. Adobe, the Adobe logo, Photoshop, and Lightroom are trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and other countries. Wi-Fi CERTIFIED Logo and Wi-Fi Protected Setup® are registered trademarks of Wi-Fi Alliance®. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Fuiifilm is under license. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark or registered trademark of HDMI Licensing LLC. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and

Exif Print (Exif Version 2.32)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

Lenses and Other Accessories

- Use a screw 4.5 mm or shorter when attaching a tripod.
- Fujifilm will not be held liable for performance issues or damage caused by the use of third-party accessories.

NOTICES

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Please read the "Safety Notes" and make sure you understand them before using the camera.

Perchlorate Material—special handling may apply. See: http://www.dtsc.ca.gov/hazardouswaste/perchlorate

For Customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE



Contains IC: 10293A-WMBNBM26A Contains FCC ID: COF-WMBNBM26A

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Notes on the Grant: To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.



California Code of Regulations, Title 20, Division 2, Chapter 4, Article 4, Appliance Efficiency Regulations, Sections 1601 through 1609

For Customers in Canada

CAN ICES-3 (B)/NMB-3(B)

CAUTION: This Class B digital apparatus complies with Canadian ICES-003.

Industry Canada statement. This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter, except tested built-in radios. The County Code Selection feature is disabled for products marketed in the US/ Canada.

Radiation Exposure Statement: The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. X-T30 II has been tested and found to comply with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

Disposal of Electrical and Electronic Equipment in Private Households

In the European Union, Norway, Iceland and

Liechtenstein: This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste. Instead it should

be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol on the batteries or accumulators indicates that those batteries shall not be treated as household waste.



If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

found any biological effects. Some studies have suggested that some biological effects might occur, but such findings liethetenstein: If you wish to discard this product, including have not been confirmed by additional research. X-T30 II has been tested and found to comply with IC radiation exposure thorities and ask for the correct way of disposal.

In Japan: This symbol on the batteries indicates that they are to be disposed of separately.



Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- · very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

Wireless Network and Bluetooth Devices: Cautions

This product complies with the following EU Directives:

- RoHS Directive 2011/65/EU
- RE Directive 2014/53/EU

Hereby, FUJIFILM Corporation declares that the radio equipment type FF210005 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://dl.fujifilm-x.com/global/products/cameras/x-t30-ii/pdf/x-t30-ii_doc-olg.pdf

This compliance is indicated by the following conformity marking placed on the product:



This marking is valid for non-Telecom products and EU harmonized Telecom products (e.g. Bluetooth®).

Maximum radio-frequency power (EIRP):

WLAN: 3.35 dBm

Bluetooth: -3.92 dBm

IMPORTANT: Read the following notices before using the camera's built-in wireless transmitter.

- Use only a wireless network or Bluetooth device. Fujifilm does not accept liability for damages resulting from unauthorized
 use. Do not use in applications requiring a high degree of reliability, for example in medical devices or other systems that
 may directly or indirectly impact human life. When using the device in computer and other systems that demand a greater
 degree of reliability than offered by wireless network or Bluetooth devices, be sure to take all necessary precautions to
 ensure safety and prevent malfunction.
- Use <u>only in the country in which the device was purchased.</u> This device conforms to regulations governing wireless network
 and Bluetooth devices in the country in which it was purchased. Observe all location regulations when using the device.
 Fuifilm does not accept liability for problems arising from use in other jurisdictions.
- Do not use the device in locations subject to magnetic fields, static electricity, or radio interference. Do not use the transmitter in
 the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that
 may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of
 other wireless devices operating in the 2.4 GHz band.
- The wireless transmitter operates in the 2.4 GHz band using DSSS, OFDM and GFSK modulation.
- Security: Wireless network and Bluetooth devices transmit data via radio and consequently their use requires greater attention to security than applies in the case of wired networks.
 - Do not connect to unknown networks or networks to which you do not have access rights, even if they are displayed
 on your device, as such access may be considered unauthorized. Connect only to networks to which you have access
 rights
 - Be aware that wireless transmissions may be vulnerable to interception by third parties.
 - This device cannot be directly connected to telecommunications networks (including public wireless LANs) operated by providers or mobile, landline, Internet, or other telecommunications services.

· The following may be punishable by law:

- Disassembly or modification or this device
- Removal of device certification labels
- This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters. It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in RFID tracking systems for assembly lines and in other similar applications.
- To prevent interference with the above devices, observe the following precautions.
 Confirm that the RFID transmitter is not in operation before using this device. Should you observe that the device causes interference in licensed transmitters used for RFID tracking, immediately stop using the affected frequency or move the device to another location. If you notice that this device causes interference in low-voltage RFID tracking systems, contact a Fujifilm representative.
- Do not use this device on board an aircraft. Note that Bluetooth may remain on even when the camera is off. Bluetooth can be disabled by selecting OFF for **2** CONNECTION SETTING > Bluetooth SETTINGS > Bluetooth ON/OFF.

U.K. Importer:

FUJIFILM UK Limited

Unit 10A, St Martins Business Centre, St Martins Way, Bedford MK42 0LF, United Kingdom

EU Importer:

FUJIFILM Electronic Imaging Europe GmbH Fujistrasse 1 47533 Kleve, Germany

Be sure to read these notes before using the lens

Safety Notes

- Make sure that you use the lens correctly. Read these safet notes and the camera Basic Manual carefully before use.
- After reading these safety notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious WARNING injury can result if the information is ignored.



This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark indicate an action that must be performed ("Required").

∕!\ WARNING



Do not immerse in or expose to water. Failure to observe this precaution can cause a fire or electric shock.



Do not disassemble (do not open the case). Failure to observe this precaution can cause fire, electric shock, or injury due to product malfunction.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not place on unstable surfaces. The product may fall, causing injury.



Do not view the sun through the lens or camera viewfinders. Failure to observe this precaution can cause permanent visual impairment.

CAUTION



Do not use or store in locations that are exposed to steam, or smoke or are very humid or extremely dusty. Failure to observe this precaution can cause fire or electric shock.



Do not leave in direct sunlight or in locations subject to very high temperatures, such as in a closed vehicle on a sunny day. Failure to observe this precaution can cause fire.



Keep out of the reach of small children. This product could cause injury in the hands of a child.



Do not handle with wet hands. Failure to observe this precaution can cause electric shock. Keep the sun out of the frame when shooting backlit



subjects. Sunlight focused into the camera when the sun is in or close to the frame can cause fire



When the product is not in use, replace the lens caps and store out of direct sunlight. Sunlight focused by the lens can cause fire or burns.



Do not carry the camera or lens while they are attached to a tripod. The product can fall or strike other objects, causing injury.

Product Care

To ensure continued enjoyment of the product, observe the following precautions.

Camera body: Use a soft, dry cloth to clean the camera body after each use. Do not use alcohol, thinner, or other volatile chemicals, which could discolor or deform the leather on the camera body. Any liquid on the camera should be removed immediately with a soft, dry cloth. Use a blower to remove dust from the monitor, taking care to avoid scratches, and then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of Fujifilm lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. To prevent dust entering the camera, replace the body cap when no lens is in place.

Image sensor: Multiple photographs marred by spots or blotches in identical locations may indicate the presence of dust on the image sensor. Clean the sensor using ☑ USER SETTING > SENSOR CLEANING.

Cleaning the Image Sensor

Dust that cannot be removed using **ZUSER SETTING** > **SENSOR CLEANING** can be removed manually as described below.

- Note that there will be a charge to repair or replace the image sensor if it is damaged during cleaning.
 - 1 Use a blower (not a brush) to remove dust from the sensor.
 - Do not use a brush or blower brush. Failure to observe this precaution could damage the sensor.



- 2 Check whether the dust has been successfully removed. Repeat Steps 1 and 2 as necessary.
- 3 Replace the body cap or lens.

Firmware Updates

Updates to product firmware may result in changes not described in the manual. For more information, visit: https://fujifilm-x.com/support/download/firmware/cameras/

Checking the Firmware Version

- The camera will only display the firmware version if a memory card is inserted.
 - 1 Turn the camera off and check that a memory card is inserted.
 - 2 Turn the camera on while pressing the DISP/BACK button. The current firmware version will be displayed; check the firmware version.
 - 3 Turn the camera off.
- To view the firmware version or update firmware for optional accessories such as interchangeable lenses, shoe-mounted flash units, and mount adapters, mount the accessories on the camera.

Troubleshooting

Consult the table below should you encounter problems using your camera. If you don't find the solution here, contact your local Fujifilm distributor.

Power and Battery

Problem	Solution
The camera does not turn on.	 • The battery is exhausted: Charge the battery or insert a fully-charged spare battery (■ 33). • The battery is inserted incorrectly: Reinsert in the correct orientation (■ 30). • The battery-chamber cover is not latched: Latch the battery-chamber cover (■ 30).
The monitor does not turn on.	The monitor may not turn on if the camera is turned off and then on again very quickly. Keep the shutter button pressed halfway until the monitor activates.
The battery runs down quickly.	The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert it in the camera immediately before taking a picture. There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth. ON is selected for MAF/MF SETTING > PRE-AF: Turn PRE-AF off (□ 132). The auto mode selector lever is rotated to ◆AUTO: To extend battery endurance, we recommend that you choose a different mode (□ 61). The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery.
The camera turns off	The battery is exhausted: Charge the battery or insert a
suddenly.	fully-charged spare battery (🕮 33).

Problem	Solution
Charging does not start (USB).	 Insert the camera battery (□ 30). Reinsert the camera battery in the correct orientation (□ 30). Confirm that the camera is connected to the computer (□ 33). If the computer is off or in sleep mode, turn on or wake the computer and disconnect and reconnect the USB cable (□ 33).
Charging does not start (battery charger).	 Insert the battery. Reinsert the battery in the correct orientation. Make sure that the charger is correctly plugged in. Ensure that the plug adapter is correctly connected to the charger.
Charging is slow.	Charge the battery at room temperature.
The indicator lamp blinks, but the battery does not charge.	 There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth (\$\equiv 30\$). The battery has been charged many times: The battery has reached the end of its charging life. Purchase a new battery. If the battery still fails to charge, contact your Fujifilm dealer (\$\equiv 296\$).
The power supply icon is not displayed.	Confirm that ON is selected for USB POWER SUPPLY SETTING (1) 243).

Menus and Displays

Problem	Solution
Display is not in English.	Select ENGLISH for ☑ USER SETTING > 氫 言語/LANG. (⊜ 39, 212).

Shooting

Problem	Solution
No picture is taken when the shutter button is pressed.	 The memory card is full: Insert a new memory card or delete pictures (□ 30, 192). The memory card is not formatted: Format the memory card in the camera (□ 210). There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth. The memory card is damaged: Insert a new memory card (□ 30). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (□ 33). The camera has turned off automatically: Turn the camera on (□ 35). You are using a third-party mount adapter: Select ON for SHOOT WITHOUT LENS (□ 230).
Mottling ("noise") appears in the monitor or viewfinder when the shutter button is pressed halfway.	Gain is increased to aid composition when the subject is poorly lit and aperture is stopped down, which may result in noticeable mottling when images are previewed in the displays. Images taken with the camera are unaffected.
The camera does not focus.	The subject is not suited to autofocus: Use focus lock or manual focus (82).

Problem	Solution
No panorama is recorded when the shutter button is pressed.	
No face is detected.	 The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions (\$\equiv 133\$). The subject's face occupies only a small area of the frame: Change the composition so that the subject's face occupies a larger area of the frame (\$\equiv 133\$). The subject's face is turned away from the camera: Ask the subject to face the camera (\$\equiv 133\$). The camera is tilted: Keep the camera level. The subject's face is poorly lit: Shoot in bright light.
The flash does not fire.	 The flash is disabled: Adjust settings (152). The electronic shutter is enabled: Choose a SHUTTER TYPE that does not use the electronic shutter (148). The battery is exhausted: Charge the battery or insert a fully-charged spare battery (133). The camera is in bracketing or continuous mode: Select single frame mode (15). The flash is lowered: Raise the flash (198).
Some flash modes are not available.	OFF is selected for SOUND & FLASH: Select ON (1998) 213).
The flash does not fully light the subject.	 The subject is not in range of the flash: Position the subject in range of the flash. The flash window is obstructed: Hold the camera correctly. Shutter speed is faster than the sync speed: Choose a slower shutter speed (\$\square\$ 56, 60, 330).
Pictures are blurred.	 The lens is dirty: Clean the lens. The lens is blocked: Keep objects away from the lens (42). !AF is displayed during shooting and the focus frame is displayed in red: Check focus before shooting (43).

Problem	Solution
Problem Pictures are mottled.	Solution Shutter speed is slow and the ambient temperature is high: This is normal and does not indicate a malfunction.* Use pixel mapping (■ 117). * X-rays, cosmic rays, and other forms of radiation interacting with the image sensor may cause bright spots of various colors such as white, red, and blue. Pixel mapping helps reduce the occurrence of such bright spots. The camera has been used continuously at high temperatures: Turn the camera off and wait for it to cool down (■ 35, 326).
	• A temperature warning is displayed: Turn the camera off and wait for it to cool down (🗐 35, 326).

Playback

,	
Problem	Solution
Pictures are grainy.	The pictures were taken with a different make or model of camera.
Playback zoom is unavailable.	The pictures were created using RESIZE or with a different make or model of camera.
No sound in movie playback.	 Playback volume is too low: Adjust playback volume (216). The microphone was obstructed: Hold the camera correctly during recording. The speaker is obstructed: Hold the camera correctly during playback. OFF is selected for SOUND & FLASH: Select ON (213).
Selected pictures are not deleted. Pictures remain after ERASE > ALL FRAMES is selected.	Some of the pictures selected for deletion are protected. Remove protection using the device with which it was originally applied (🗐 196).
File numbering is	The battery-chamber cover was opened while the camera was on. Turn the camera off before opening the battery-chamber cover (⊯ 236).

Connections

Problem	Solution
The monitor is blank.	The camera is connected to a TV: Pictures will be displayed on the TV instead of in the camera monitor (🗎 280).
Both the TV and camera monitor are blank.	EVF ONLY + (2) is selected for VIEW MODE : Put your eye to the viewfinder or choose a different VIEW MODE option (12) 14, 217).
No picture or sound on TV.	 The camera is not properly connected: Connect the camera properly (□ 280). Input on the television is set to "TV": Set input to "HDMI" (□ 280). The volume on the TV is too low: Use the controls on the television to adjust the volume (□ 280).
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (12) 285).
FUJIFILM X RAW STUDIO or FUJIFILM X Acquire fails to correctly detect the camera.	Check the option selected for CONNECTION MODE on the camera. Select USB RAW CONV./BACKUP RESTORE before connecting the USB cable (1) 289).
Cannot connect to iPhones or iPads.	ON is selected for USB POWER SUPPLY SETTING. Select OFF when the camera is connected via a Lightning connection to a device that do not supply power (\$\equiv 243\$).
Cannot connect to smartphone.	Confirm that the camera is correctly connected: The procedure for connecting the camera varies with the type of connector with which the smartphone is equipped (1) 290).

Wireless Transfer

For additional information on troubleshooting wireless connections, visit:

https://digitalcamera-support-en.fujifilm.com/

Problem	Solution
Cannot connect to smartphone. The camera is slow to connect or upload pictures to the smartphone. Upload fails or is interrupted.	The smartphone is too far away: Move the devices closer (■ 282). Nearby devices are causing radio interference: Move the camera and smartphone away from microwave ovens or cordless phones (■ 282).
Cannot upload images.	 The smartphone is connected to another device: The smartphone and camera can connect to only one device at a time. End the connection and try again (■ 282). There are several smartphones in the vicinity: Try connecting again. The presence of multiple smartphones can make connection difficult (■ 282). The image was created on another device: The camera may not be able to upload images created on other devices. The image is a movie: Uploading movies takes some time. In addition, smartphones may not accept upload of movies in formats they do not support.
Smartphone will not display pictures.	Select ON for GENERAL SETTINGS > RESIZE IMAGE FOR SMARTPHONE 1. Selecting OFF increases upload times for larger images; in addition, some phones may not display images over a certain size (1. 244).

Miscellaneous

Problem	Solution
	• Temporary camera malfunction: Remove and reinsert the
	battery (🕮 30).
The camera is unresponsive.	• The battery is exhausted: Charge the battery or insert a
The cumera is unresponsive.	fully-charged spare battery (🕮 33).
	• The camera is connected to a wireless LAN: End the con-
	nection.
The camera does not func-	Remove and reinsert the battery (\$\equiv 30\$). If the prob-
tion as expected.	lem persists, contact your Fujifilm dealer.
Motion in the viewfinder	When NORMAL is selected for PERFORMANCE , the
or monitor appears jerky	frame rate will drop if no operations are performed for a
rather than smooth.	set period. The normal frame rate will be restored after
	you operate camera controls (🕮 235).
	• Adjust the volume (🕮 215).
No sound.	• OFF is selected for SOUND & FLASH: Select ON
	(■ 213).
Pressing the Q button does	TTL-LOCK is active: End TTL-LOCK (🕮 153).
not display the quick menu.	23 CN (22 133).

Warning Messages and Displays

The following warnings appear in the display.

Warning	Description
red)	Low battery. Charge the battery or insert a fully-charged
	spare battery.
(blinks red)	Battery exhausted. Charge the battery or insert a ful-
	ly-charged spare battery.
! AF (displayed in red with	The camera cannot focus. Use focus lock to focus on an-
red focus frame)	other subject at the same distance, then recompose the
	picture.
Aperture or shutter	The subject is too bright or too dark and the picture will be
speed displayed in red	over- or under-exposed. Use the flash for additional light-
speed displayed in red	ing when taking photographs of poorly-lit subject.
FOCUS ERROR	Camera malfunction. Turn the camera off, remove the lens,
LENS CONTROL ERROR	and check for foreign matter between the lens and the
TURN OFF THE CAMERA	camera body, then replace the lens and turn the camera
AND TURN ON AGAIN	on. If the problem persists, contact a Fujifi lm dealer.
	 The memory card is not formatted or the memory card has been
	formatted in a computer or other device: Format the memory
	card using I USER SETTING > FORMAT.
CARD NOT INITIALIZED	• The memory card contacts require cleaning: Clean the con-
	tacts with a soft, dry cloth. If the message is repeated,
	format the card. If the message persists, replace the card.
	Camera malfunction: Contact a Fujifilm dealer.

Warning	Description
LENS ERROR	Turn the camera off, remove the lens, and check for for- eign matter between the lens and the camera body, then replace the lens and turn the camera on. If the problem persists, contact a Fujifi Im dealer.
	• The memory card is not formatted for use in the camera: For-
	mat the card.
	The memory card contacts require cleaning or the memory card
	is damaged: Clean the contacts with a soft, dry cloth. If the
CARD ERROR	message is repeated, format the card. If the message per-
	sists, replace the card.
	• Incompatible memory card: Use a compatible card.
	Camera malfunction: Contact a Fujifilm dealer.
PROTECTED CARD	The memory card is locked. Unlock the card.
DUCY	The memory card is incorrectly formatted. Use the camera
BUSY	to format the card.
	The memory card is full and pictures cannot be recorded.
MEMORY FULL	Delete pictures or insert a memory card with more free
	space.

=
Z
0
E
S

Warning	Description
WRITE ERROR	 Memory card error or connection error: Reinsert the card or turn the camera off and then on again. If the message persists, contact a Fujifilm dealer. Not enough memory remaining to record additional pictures: Delete pictures or insert a memory card with more free space. The memory card is not formatted: Format the memory card.
	 The memory card was removed while data were being recorded: Do not remove the memory card during recording.
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Insert a formatted memory card and select RENEW for ☑ SAVE DATA SET-UP > FRAME NO. . Take a picture to reset frame numbering to 100-0001, then select CONTINUOUS for FRAME NO. .
READ ERROR	 The file is corrupt or was not created with the camera: The file cannot be viewed. The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card. If the message persists, replace the card. Camera malfunction: Contact a Fujifilm dealer.
PROTECTED FRAME	An attempt was made to delete or rotate to a protected picture. Remove protection and try again.

Warning	Description
CAN NOT CROP	The picture is damaged or was not created with the camera.
	Print orders can contain no more than 999 pictures. Copy
DPOF FILE ERROR	any additional pictures you wish to print to another memo-
	ry card and create a second print order.
CAN NOT SET DPOF	The picture cannot be printed using DPOF.
CAN NOT SET DPOF	Movies cannot be printed using DPOF.
CAN NOT ROTATE	The selected picture cannot be rotated.
CAN NOT ROTATE	Movies cannot be rotated.
CANNOT EXECUTE	Red-eye removal cannot be applied to movies.
CANNOT EVECUTE	Red-eye removal cannot be applied to pictures created
≅ CANNOT EXECUTE	with other devices.
MISMATCH: 4K MODE	The movie mode selected with the camera is not compat-
AND EXTERNAL MONITOR	ible with the device to which the camera is connected via
CHANGE MOVIE MODE	HDMI. Try selecting a different movie mode (🕮 158).
! (yellow)	Turn the camera off and wait for it to cool. Mottling may
• (ycllow)	increase in pictures taken when this warning is displayed.
	Turn the camera off and wait for it to cool. While this warn-
! ▮ (red)	ing is displayed, movie recording may not be available,
•• (ICU)	mottling may increase, and performance, including frame
	advance rate and display quality, may drop.


Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

	Capacity	16	GB	32	GB
		FINE	NORMAL	FINE	NORMAL
	3:2	1030	1540	2060	3090
Photos	RAW (UNCOMPRESSED)	RAW (UNCOMPRESSED) 270		550	
SO	RAW (LOSSLESS COMPRESSED)	500		1010	
	RAW (COMPRESSED)	690		1400	
Movies	20 minutes		nutes	40 minutes	
es ^{1,2}	FID 1080	20 mi	nutes	40 mi	nutes

1 Use a UHS speed class 3 card or better.

 ² Assumes default bit rate.



Specifications

System				
Model	FUJIFILM X-T30 II			
Product Number	FF210005			
Effective pixels	Approx. 26.1 million	Approx. 26.1 million		
lmage sensor	23.5 mm × 15.6 mm (AP	S-C), X-Trans CMOS 4 sensor with		
	primary color filter			
Storage media		D/SDHC/SDXC memory cards		
Memory card slot	SD memory card slot (UF			
File format	 Still pictures: Complian System (DCF2.0) 	t with Design Rule for Camera File		
	- JPEG: Compliant with mat (DPOF)	Exif 2.32 and Digital Print Order For		
	Uncompressed, or co	mat; special purpose software required; ompressed using either a lossless on hm; RAW+JPEG available 264 standard with stereo sound (MOV) reo sound (WAV)		
lmage size	3:2 (6240 × 4160) 16:9 (6240 × 3512)	1:1 (4160 × 4160)		
	M 3:2 (4416×2944) M 16:9 (4416×2488)	M 1:1 (2944 × 2944)		
	S 3:2 (3120 × 2080) S 16:9 (3120 × 1760)	S 1:1 (2080 × 2080)		
	RAW (6240 × 4160)			
		\times 9600)/horizontal (9600 \times 1440)		
	•	\times 6400)/horizontal (6400 \times 1440)		
Lens mount	FUJIFILM X mount			

	Τeg
	핰
	Ę.
	٦
	õ
	es
i	

System	
Sensitivity	• Still pictures: Standard output sensitivity equivalent to
	ISO 160–12800 in increments of 1/3 EV; AUTO1; AUTO2;
	AUTO3; extended output sensitivity equivalent to ISO 80,
	100, 125, 25600, or 51200
	 Movies: Standard output sensitivity equivalent to ISO 160–12800
	in increments of 1/3 EV; AUTO; extended output sensitivity equiv-
	alent to ISO 25600
Metering	256-segment through-the-lens (TTL) metering;
	MULTI, SPOT, AVERAGE, CENTER WEIGHTED
Exposure control	Programmed AE (with program shift); shutter-priority AE;
	aperture-priority AE; manual exposure
Exposure compensati	on • Still pictures: −5 EV−+5 EV in increments of ⅓ EV
	 Movies: −2 EV−+2 EV in increments of ⅓ EV
Shutter speed	MECHANICAL SHUTTER
	- Mode P: 4 s to 1/4000 s
	- Mode A : 30 s to 1⁄4000 s
	- Modes S and M: 15 min. to 1/4000 s
	- Bulb : Max. 60 min.
	ELECTRONIC SHUTTER
	- Mode P: 4 s to ⅓2000 s
	- Mode A : 30 s to ⅓32000 s
	- Modes S and M: 15 min. to ⅓2000 s
	- Bulb: Fixed at 1 s
	 MECHANICAL + ELECTRONIC
	- Mode P: 4 s to ⅓2000 s
	- Mode A : 30 s to ⅓32000 s
	- Modes S and M: 15 min. to ⅓₂₂₀₀₀ s
	- Bulb : Max. 60 min.

Continuous		Available frame advance rates		
	CONTINUOUS MODE	(JPEG)		
	30fps(1.25X CROP)*	30		
	20fps(1.25X CROP)*	20		
	10fps(1.25X CROP)*	10		
	20fps*	20		
	10fps*	10		
	8.0fps	8.0		
	5.0fps	5.0		
	4.0fps	4.0		
	3.0fps	3.0		
	* Available with electronic shutter	only.		
		nber of frames per burst var-		
	ies with shooting conditions and type of memory card used.			
Focus	 Mode: Single or continuous AF; manual focus with focus ring Autofocus system: Intelligent hybrid AF (TTL contrast-detect, phase-detection AF) with AF-assist illuminator 			
		DINT, ZONE, WIDE/TRACKING, ALL		
White balance	Auto (WHITE PRIORITY, AUTO, AMBIENCE PRIORITY), Custom 1, Custom 2, Custom 3, color temperature selection, direct sun- light, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, incandescent, underwater			
Self-timer	Off, 2 sec., 10 sec.			
Flash	• Type: Manual pop-up flash ui			
	• Guide number: Approx. 7/22 (
Flash mode	MODE: TTL MODE (FLASH AUTO, STANDARD, SLOW SYNC.), MANUAL, COMMANDER, OFF			
	• SYNC. MODE: 1ST CURTAIN, 2ND CURTAIN, AUTO FP (high-			
	speed sync)			
	• RED EYE REMOVAL: @\$\ FLASH: O\ REMOVAL, OFF	+REMOVAL, Φ ‡ FLASH,		
Hot shoe	Accessory shoe with TTL conta	acts; supports sync speeds as		

nical
Notes
12

System	
Sync terminal	-
Electronic viewfinder	0.39-in., 2360k-dot OLED viewfinder; magnification 0.62× with
(EVF)	50 mm lens (35 mm format equivalent) at infinity and diopter
	set to -1.0 m^{-1} ; diagonal angle of view approximately 31°
	(horizontal angle of view approximately 26°)
	• Diopter adjustment : -4 to $+2$ m ⁻¹
	• Eyepoint: Approximately 17.5 mm
LCD monitor	3.0-in/7.6 cm, 1620k-dot color touch screen LCD monitor,
	tilting
Movies	• Movie size: 41K 16:9, DCI 17:9, FHD 16:9, FHD 17:9
(with stereo sound)	• Frame rate: 59.94P, 50P, 29.97P, 25P, 24P, 23.98P
	• Bit rate: 200Mbps, 100Mbps, 50Mbps
	• Recording/output format: SD card, 4:2:0, 8-bit/HDMI output,
	4:2:2, 10-bit
High-speed movies	• Movie size: FULL HD 16:9
	• Frame advance rate: 240P, 200P, 120P, 100P
Input/output termin	nals
Microphone connector	ø2.5 mm mini-stereo jack
Headphone jack socket	Requires a USB Type-C to ø3.5 mm stereo mini-pin jack
	adapter cable compatible with analog audio I/O (USB Type-C
	Audio Adapter Accessory Mode)
Remote release connecto	r ø2.5 mm 3-pole mini jack
Digital input/output	<u> </u>
HDMI output	HDMI Micro connector (type D)
•	**

Power	r supp	lv/	ot	her
I OWC	Jupp	٠,,,	•	

Power supply

NP-W126S rechargeable battery (supplied with camera)

Battery life

• Battery type: NP-W126S

• **Lens**: XF35mmF1.4 R

External flash units: Disabled
Shooting mode: Mode P

Number of shots				
PERFORMANCE LCD EVF				
BOOST	Approx. 300	Approx. 260		
NORMAL	Approx. 390	Approx. 360		

Total length of footage that can be recorded on a single charge Continuance battery life of **Actual battery life** Mode of movie capture movie capture 4K 1 Approx. 45 minutes Approx. 60 minutes FHD 2 Approx. 45 minutes Approx. 75 minutes High-speed movies³ Approx. 40 minutes

CIPA standard. Measured using battery supplied with camera and SD memory card.

Note: Battery endurance varies with battery charge level and the figures given above are not guaranteed. Battery endurance will decline at low temperatures.

¹ At a frame rate of 29.97 fps.

² At a frame rate of 59.94 fps.

³ At a frame rate of 120 fps.

nical Notes	ē	5
cal Not	٠	
Not		
Not	è	'n
ot Ot		
ᅙ	t	
_	7	╮
es	r	+
S	(D

Power supply/other	
Camera size	118.4 mm \times 82.8 mm \times 46.8 mm (31.9 mm excluding projections,
$(W \times H \times D)$	measured at thinnest part)/4.66 in. \times 3.26 in. \times 1.84 in. (1.26 in.)
Camera weight	Approx. 329 g/11.6 oz., excluding battery, accessories, and
	memory card
Shooting weight	Approx. 378 g/13.3 oz., including battery and memory card
Operating conditions	• Temperature : 0 °C to +40 °C/+32 °F to +104 °F
	• Humidity : 10% to 80% (no condensation)

Wireless transmitter	
Wireless LAN	
Standards	IEEE 802.11b/g/n (standard wireless protocol)
Operating frequency	2,412 MHz–2,462 MHz (11 channels)
(center frequency)	
Access protocols	Infrastructure
Bluetooth®	
Standards	Bluetooth version 4.2 (Bluetooth Low Energy)
Operating frequency	2,402 MHz-2,480 MHz
(center frequency)	

NP-W126S rechargeable battery		
Nominal voltage	7.2 V	
Nominal capacity	1260 mAh	
Operating	0 °C to +40 °C/+32 °F to +104 °F	
temperature		
Dimensions	36.4 mm × 47.1 mm × 15.7 mm/1.4 in. × 1.9 in. × 0.6 in.	
$(W \times H \times D)$		
Weight	Approx. 47 g/1.7 oz.	

- Weight and dimensions vary with the country or region of sale.
- Specifications and performance are subject to change without notice. Fujifilm will not be held liable for any errors this manual may contain. The appearance of the product may differ from that described in this manual.

MEMO

FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN https://fujifilm-x.com











