



Installation And Operating Manual

CHEST FREEZERS MODELS APPLICABLE
CFAP66W - 103W, 143W, 203W, 259W,
319W, 379W, 429W & 519W



**Please read these instructions carefully before attempting to install or use this appliance.
It is advisable to keep these instructions in a safe place for future reference.**

Introduction

Thank you for choosing this  appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, **do not use it**, contact your retailer immediately.

Registered Office Address:

Iceking
The Courtyard,
Harris Business Park,
Hanbury Road
Stoke Prior,
Bromsgrove,
B60 4DJ

Email: enquiries@ice-king.co.uk
service@ice-king.co.uk

Web: ice-king.co.uk

Tel: 03333 234 473

TABLE OF CONTENTS

Important Safety Instructions	- 1 -
Product Diagram	- 4 -
Before Use	- 5 -
Installation	- 6 -
Start Up	- 6 -
Temperature Setting	- 6 -
Fast Freeze Fuction	- 6 -
Freezing Food	- 6 -
Cleaning&Maintenance	- 7 -
Defrosting	- 7 -
Troubleshooting	- 8 -
Aftersales Service & Point of Contacts	- 10 -
Declaration of Conformity	- 10 -
Guarantee Details	- 11 -
Warranty Claims & Product Recycle (WEEE)	- 12 -



THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

Please read these instructions carefully before the first use of this product and save this manual for your future reference.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given super-vision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be positioned so that the plug is accessible.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Please contact the service agent to dispose the appliance because the flammable blowing gas was used.
- If the lamp is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.(except CFAP66W)

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- As flammable refrigerants are used in the freezer, please be careful when installing, handling, servicing and recycling the appliance.
- A switch is built into appliances equipped with lighting. When the appliance is opened the light goes on automatically and switches off automatically when closed. (if light is available)
- Regulations require the appliance to be earthed.
- It is recommended to check regularly the supply cord for any sign of possible deterioration, and the appliance should not be used if the cable is damaged.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- Keep the appliance and its power cord out of the reach of children under 8 years of age.
- Make sure the appliance is turned off and unplugged before performing any cleaning or maintenance operations.
- Disposal of the appliance

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.


The disposal should only be done through public collection points. Old refrigerators can contain CFC that destroy the ozone; contact the waste treatment center nearest your home for more details on the correct procedures for disposal.

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Regarding the instructions for installation, handling, maintenance, disposal of this appliance, please refer to below paragraphs from this manual


DIAGRAMS

 FIG. 1

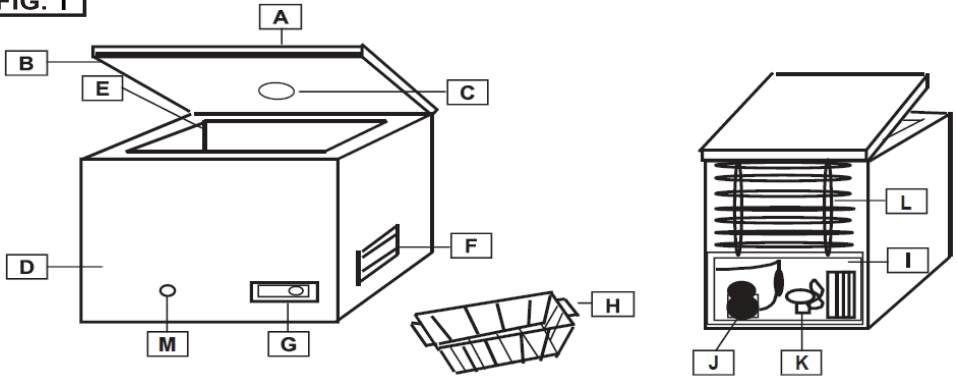

- A Lid
- B Gasket
- C Interior light (if available)
- D Cabinet
- E Storage compartment
- F Ventilation grille (except CFAP66W)
- G Control panel
- H Basket
- I Compressor chamber
- J Compressor
- K Fan (if available)
- L Back condenser (if available)
- M Water drain plug (if available)

 FIG. 2

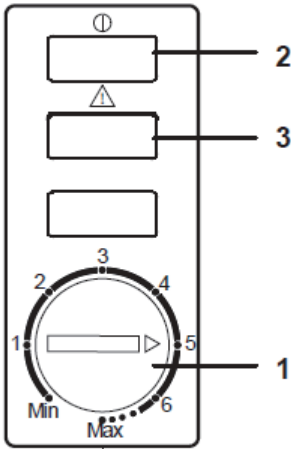

Model: CFAP66W

1 Temperature control (Thermostat)

2 Control light


3 Alarm light

Light Indicators

Green = CONTROL (The appliance is running)

Red = ALARM (Interior temperature too high)

 FIG. 3

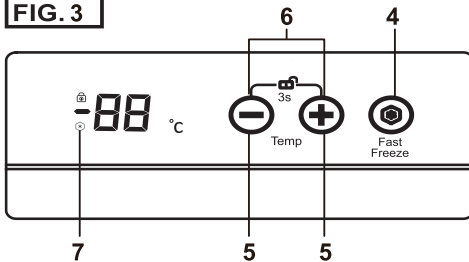

Model: CFAP103W/CFAP143W/CFAP203W/CFAP259W/
CFAP319W/CFAP379W/CFAP429W/CFAP519W

4 Fast Freezer switch

5 Temperature control

6 Press both (5)s to lock the control panel

7 Fast Freezer indicator

BEFORE USE

- This appliance is intended strictly for household use, for storing food only.
- If the appliance is damaged after unpacking, please contact your dealer.
- The mains electricity supply must conform to the rating plate of the appliance.

INSTALLATION

- Fully unpack the appliance. Please ensure that all packaging materials are removed and properly disposed prior to installation and kept out of children's reach.
- The appliance should be installed in a dry, well ventilated room, and not exposed to direct sunlight and not placed near a heat source.
- Leave at least 10cm between the appliance and surrounding for ventilation and heat dissipation.
- The electricity supply must conform to as specified on the rating plate and follow local regulations.
- It is recommended to wait at least two hours before plugging in the appliance after installation. This helps the refrigerant circuit to stabilise.

START-UP

1. Insert the plug in the socket. The green light(2) or the display goes on.
2. Allow one hour for the temperature inside the appliance to go down and then place food inside the appliance.

TEMPERATURE SETTING

For FIG.2, use (1) to adjust the temperature between Min(warmer) and Max (colder). The storage temperature decreases from Min.setting to Max. setting.

For FIG.3, use (5) to adjust the temperature between -14°C to -26°C.

FAST FREEZE FUNCTION(except CFAP66W)

Press the Fast Freeze button (4) to activate the Fast Freeze function.

Fast Freeze indicator (7) goes on. Press the button again to switch it off.

The Fast Freeze function will be switched off automatically after 50 hours to save energy. Energy consumption will increase when this function is on.

FREEZING FOOD

- Wrap or seal food in aluminium foil, air tight containers or food storage bags prior to freezing.
- Allow hot food to cool prior to placing it in the appliance.
- Smaller portion of food will be freeze faster. The recommended max portion weight is 2.5kg.

- Avoid placing warm food directly in contact with already frozen food. Frozen food could defrost and may not outlast the foreseen storage time.
- The capacity of the appliance, as shown on the rating plate, should not be exceeded.
- When filling the appliance with higher quantities of fresh food, it is recommended to turn on the Super Freeze function(if available) 24 hours in advance.
- The storage time for purchased deep-frozen products varies and depends on the type of product and its packaging. Therefore, strictly observe the producer / manufactures instructions on the packaging.

CLEANING AND MAINTENANCE

Always ensure that the power supply is switched off prior to conducting any maintenance or cleaning of the appliance.

If you leave your appliance out of use for an extended period, leave it open to prevent odour and unpleasant smells building up inside.

DEFROSTING

The appliance should be defrosted once the thickness of ice on the walls reaches 5-6 mm.

Do not use any electrical, sharp or mechanical objects to assist in defrosting the ice removal process, unless supplied or approved by manufacturer or approved service centre.

To remove ice from the inner walls, use a plastic or wood scraper without sharp edges. Never use a metal scraper.

Proceed as follows:

1. Make sure to unplug the appliance.
2. Dry your hands thoroughly to prevent skin damage by contact with ice (it is advised to use gloves).
3. Remove all frozen food from the appliance, put it into a container, cool box, put the frozen cool blocks on top of the frozen food to help keep it very cold, and place the container or cool box in a cool, dry room.
4. Pull out the water drain plug(if available)located at the bottom of the appliance. Otherwise you must wipe up the melted water at the bottom of the appliance compartment with a sponge or towel.

5. Scrape the ice carefully from the inner of appliance and put it into your kitchen sink, for defrosting.
6. Thoroughly clean the inside of the appliance compartment, rinse it with warm water and remove any spilt food or liquids.
7. Wipe the appliance with an absorbent cloth or sponge thoroughly dry and allow to air for about 3 to 4 minutes.
8. Replace the drain-plug (if available).
9. Close the appliance door, replace the plug in the socket and turn the appliance on.
10. Now re-fill the frozen food.

To prevent frozen food from defrosting, carry out the defrosting procedure within a maximum of two hours to reduce significant rise in temperature of the frozen food that would shorten the storage life.

TROUBLESHOOTING

1.No operation (appliance not running/getting cold)

- Is there a power failure?
- Is the plug in good condition and properly plugged into the socket?

2.Appliance not working sufficiently / (3) is on or 'HH' is displayed

- Is the lid of the appliance closed properly?
- Is there heavy ice formation on the inner walls?
- Is the appliance exposed to direct sunlight or heat source?
- Has too much warm food been put in the appliance?
- The climatic class can be found on the rating label in the back of the appliance. It specifies the ambient temperatures at which the appliance will operate correctly.

Climatic class	Ambient temperature
SN	+10 °C to 32 °C
N	+16 °C to 32 °C
ST	+18 °C to 38°C
T	+18 °C to 43°C

3.The appliance makes noise.

This noise is produced when the motor in the compressor operates and also by refrigerant flowing in the cooling system circuit. These noises are normal.

4.Condensation build up on external walls

Under certain atmospheric conditions, condensation can form on external walls of the appliance. This is normal and won't affect the function of the appliance.

After Sales Service, Guarantee and Points of Contact:

1. Resolving faults by yourself:

If you suspect any fault, before contacting Icking Product Support directly or via your retailer, make sure you have observed all instructions and advice in this instruction manual. If you have, please follow the next steps.....

2. After sales service:

Consult the enclosed warranty card within your appliance for further details or continue to the next page for contact numbers and procedures.

In order to receive immediate help, make sure you have ready the following essential data to identify your appliance.

- ✓ Brand and Model Number
- ✓ Serial Number (Located on the rating plate of your appliance – Normally on the back)
- ✓ Details of Fault
- ✓ Date of Purchase
- ✓ Place of Purchase

Precautions:

If the appliance is to be discarded/recycled, you must remove the lid. This will reduce the possibility of danger to children. The flammable foaming needs to be disposed of by a professional company/person or your local council.

Declaration of Conformity:

The manufacturers of the product(s) described herein, to which this description refers, declares on its sole responsibility that the product(s) meet the relevant fundamental safety, health and protection requirements of the relevant **UK, ROI & EU** laws and that the corresponding test reports are available for examination by the relevant authorities and can be requested from the seller of the appliance, especially with regard to CE Declaration of Conformity issued by the manufacturers approval.

Moreover, the manufacturer declares that the parts of the appliance described in this instruction manual, which comes into contact with fresh or frozen food, do not contain any toxic substances.

The manufacturer works constantly at the further development of all products. Please therefore bear this in mind as the form, set up and technology are subject to change, without prior notice.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Icking appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexperienced repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder. Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Icking/Repairtech and/or carried out by a non-approved Icking/Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK & ROI.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or Alternatively you can Register online at www.ice-king.co.uk/register-your-product/

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Icking Service Helpline on:

03333 234 473

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

! Insurance ! Any warranty provided with this product does not cover loss of fridge/freezer content.

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded. We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice.