

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German, Italian, Polish
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 OR Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable)
Battery Life	Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	2402MHz-2480MHz
Max. Radio Frequency Power Transmitted	-0.5dBm

15

SETTINGS

Device Name, Remote Control, Parental Control

Tobi™2 Device Name:

- Your device is named Tobi™2 by default, but you can add onto Tobi's name to customize it!
- Should you choose a new name, press the minus and plus icons to select a letter.
- Press the letter to set it.
- Press the X to clear the letter you've selected.
- Press the green check mark to save your new device name.

NOTE: Your device name will always start with TOBI2. The first four letters and one number 1-0-8-1-2 cannot be erased.

Remote Control:

- Connect to either Tobi™2 Director's Camera or Tobi™2 Interactive Karaoke Machine (**sold separately**).
- To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Blue] position).

PARENTAL CONTROL

After entering the passcode, press the check mark and cycle through each setting by swiping left or right on the screen. Then, make the appropriate changes.

Create Passcode:

Creating a passcode is optional.

- To create a passcode, tap on the star keys to change the numbers. Then, press the check mark to set the passcode.

NOTE: To reset the passcode, press and hold the lock icon for five seconds.

16

Wireless Connectivity:

- Use the toggle button to turn wireless connectivity on (blue) or off (red).
- To allow another Tobi™2 Robot Smartwatch to connect, enter the passcode and press the check mark when the device's name displays on the screen.

Screentime:

- To set a time limit, follow the below steps.
- By default, there is no time limit set.
- Use the toggle button to turn screentime on (blue) or off (red).
- Tap on the time bar. It will cycle between 00:30, 1:00, 1:30, 2:00, 2:30, 3:00, 3:30, 4:00, 4:30, 5:00, 5:30 and 6:00.
- Screentime will lock Tobi™2's Mode and Games, but you will still be able to access Watch Screen Mode when the time is up.

NOTE: When the time is up, it will ask for the passcode in order to allow additional time. Tap the time bar and press the check mark to allow more time.

ACTIVITY TRACKER

Activity Tracker:

- View your daily activity steps.
- Set a step goal by clicking on the target icon.
- Set a target step goal by pressing the + and - icons.
- Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps.
- Press the green check mark to set your goal.

REMEMBER: Always consult a doctor before starting new physical activities.

17

CAMERA

REMEMBER: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

Forward Facing

Take selfies when the device's touchscreen is facing you.

Outward Facing (P.O.V.)

Hold the device parallel to the ground to shoot objects in front of you. Hold the device upright to shoot objects above you.

Camera:

- Take selfies or point of view (P.O.V.) photos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the shutter button to take your picture.

Hand Gestures:

Selfie: Activate the selfie and timer with a simple hand gesture. While wearing the watch, extend your arm and then tap on your shoulder 2 to 3 times with your hand. Look at the smartwatch's Forward Facing lens to take a selfie.

Lens Switch: Slightly twist your wrist 3 to 4 times to change from the Outward Facing lens to the Forward Facing lens or vice versa.

NOTE: The Lens Switch gesture only works if the camera is open.

Video Camera:

- To access the video camera, swipe left or right.
- Record selfies or P.O.V. videos with your device!
- Use the arrow icon to change the view between Selfie and P.O.V.
- Press the record button screen to start and stop recording your video.

18

CAMERA

Image Gallery:

- View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the pencil icon to add a sticker your image. Stickers include ice cream cone, cupcake, pizza, glasses and so many more.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image. You can add frames and stickers at the same time.
- Press the stamp icon to remove the border.
- Press the green check mark to save your edited image as a new picture.
- Press the trash can icon to delete your photo. Then, press the green check to delete or the X to cancel.

Video Gallery:

- View all videos that you've taken on your device.
- Tap on a video to enlarge and watch it.
- Press the play button over the video to play it.
- Press the gallery button to return to the gallery.
- Press the trash can icon to delete the video. Then, press the green check to delete or the X to cancel.

19

CALENDAR & TIMER

Calendar:

- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

Timer:

- Set a custom timer by swiping on the minutes and seconds numbers to set the desired duration of time.
- Select a preset timer by pressing the icon in the top left. By default these times are:
 - Hourglass: 1 Minute
 - Moon and Stars: 30 Minutes
 - Book: 15 Minutes
 - Broom: 15 Minutes
 - Meditation: 2 Minutes
 - Music: 30 Minutes
 - Phone: 15 Minutes
 - Brushing Teeth: 2 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the green check to set the timer.
- Press the play button to start the timer.
- Press pause to pause the timer.
- Tobi™ will appear when the timer is done.

STOPWATCH & ALARM CLOCK

Stopwatch:

Time yourself doing various activities and having fun!

- Press the play button to start the stopwatch.
- Press the stop button to stop the stopwatch.
- Press the X button to reset the stopwatch.

Alarm Clock:

Set up to three different alarms with custom wake up sounds.

- Press the X icon next to the time to select that timer.
- Press the X icon next to the timer again to make the numbers appear.
- Next, press the numbers to select that alarm.
- Press the hour and minute numbers to change the selection.
- Continue changing the hour numbers to switch between AM and PM.
- Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
- Cycle back to the X icon to delete the alarm.
- When your alarm goes off, Tobi™ will appear.
- Press the stop icon to turn the alarm off.

NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

20

WATCH SCREEN MODE

WATCH SCREEN MODE

Press the home button to rotate the display to **WATCH SCREEN MODE**.

Swipe left or right on the touchscreen smartwatch screen to select from over 50 watch faces. Stop swiping to set the watch face that you like.

WATCH SCREEN MODE

Press the home button to rotate the display to **WATCH SCREEN MODE**.

Swipe left or right on the touchscreen smartwatch screen to select from over 50 watch faces. Stop swiping to set the watch face that you like.

WATCH SCREEN MODE

WATCH SCREEN MODE

Press the home button to rotate the display to **WATCH SCREEN MODE**.

Swipe left or right on the touchscreen smartwatch screen to select from over 50 watch faces. Stop swiping to set the watch face that you like.

21

TROUBLESHOOTING

WARNING

WARNING

This toy produces flashes that may trigger epilepsy in sensitized individuals. A very small percentage of people, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain light patterns or flashing lights. While this product does not contribute any additional risks, it is recommended that parental supervision is enforced during play. If you experience any dizziness or altered vision, disorientation or convulsions, IMMEDIATELY discontinue use and consult a physician. Focus on screens in close proximity for an extended amount of time may cause fatigue or discomfort. For every one hour of play, take a 15 minute break, or take breaks more frequently as needed.

CARE AND MAINTENANCE

CARE AND MAINTENANCE

- Always keep the port cover closed during use to prevent water or debris from entering the device. Only open the port cover to connect the device to your computer.
- Keep the device clean by wiping it off with a slightly damp cloth and drying it thoroughly. Do not place the device under running water or use harsh chemicals or abrasive materials to clean.
- Remove the device from the watchband and clip/stand to clean. Wipe the accessories with a damp cloth regularly to keep them clean. Always air dry; do not subject to heat.
- Keep the device and accessories out of direct sunlight for long periods of time. Do not expose the device or accessories to direct heat sources.
- Do not drop the device on a hard surface to prevent damage.
- Keep the camera lens clean. If pictures are blurry, it could be because dust or dirt is covering the camera lens. Wipe clean with a dry, soft cloth and/or blow gently on the lens to remove any debris.
- If you do not plan to use the device for an extended period, it is recommended that you turn the device off. Regularly charge the battery when not in use to ensure the battery accepts a charge. See **BATTERY LIFE AND MAINTENANCE** on page 24.

SPLASHPROOF

SPLASHPROOF

While your device can withstand splashes from washing your hands or dancing in the rain, it is not recommended to submerge the device in water.

To prevent water damage:

- Always ensure the cover over the Micro-USB port is completely closed to prevent water from getting inside the smartwatch.
- Do not place the device under running water.
- Do not submerge in water or wear while showering, bathing or swimming.

RESTARTING TOBI™2 ROBOT SMARTWATCH

If your device is unresponsive or if you wish to reset the watch to the way it was upon unboxing, press and hold the home button for 8 seconds to reset the watch.

NOTE: You may need to reset all custom settings.

22

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

BATTERY LIFE AND MAINTENANCE

USAGE	BATTERY LIFE
Low Usage	5 Days
Typical Usage	2 Days
Heavy Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn't regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period.

This chart is only an estimate of the projected battery life before charging is needed.

24

BATTERY DISPOSAL

'Let's care for the environment!'

The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

BATTERY REMOVAL INSTRUCTIONS

This toy contains a battery that is non-replaceable. Do not attempt to open the device unless you are permanently disposing the device. Opening the device for any other reason could void the warranty. Battery removal is permanent, and the device will no longer work after removing the battery.

CAUTION:

An ADULT must remove the battery for proper disposal. Always wear protective safety goggles in case of battery leakage.

BATTERY REMOVAL INSTRUCTIONS

- Use a small Phillips's screwdriver (not included) to remove the five screws on the back of Tobi™.
- Remove Tobi's arms and legs. Then, use a small Phillips's screwdriver to remove the five remaining screws on the middle panel.
- Remove the middle panel to reveal the battery.
- Lift out the battery. Use scissors to carefully cut the black and red wires **ONE AT A TIME**. Cover the wires/terminals with electrical tape and properly dispose of the battery.

25

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

This warranty is applicable only to the original purchaser, is non-transferable and applies only to The Little Tikes Company products or parts. This product is covered by a 6-month warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This warranty does not apply to:

- Consumable parts, such as batteries
- Cosmetic damage, including but not limited to scratches and dents
- Damage caused by use with non-Little Tikes® products
- Damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes
- Damage caused by operating this product outside the permitted or intended uses described by The Little Tikes Company in this manual
- A product or part that has been modified
- Defects caused by normal wear and tear or otherwise due to the normal aging of the product
- If any Little Tikes® serial number has been removed or defaced

26

LIMITED WARRANTY (CONT.)

LIMITED WARRANTY (CONT.)

For assistance, please contact consumer service:

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson, OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

United Kingdom: For warranty service or replacement part information, please visit our website at: littletikes.co.uk, and/or call +0800 521 558 or write to 50 Presley Way, Crownhill, Milton Keynes MK8 0ES, Bucks UK. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Australia: For warranty service or replacement part information, please visit our website at: littletikes.com.au, and/or call 1300 059 676 or write to Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Benelux Region: For warranty service or replacement part information, please visit our website at: littletikes.nl, and/or call +31(0) 172 758038 or write to klantenservice@mgae.com. Some replacement parts may be available for purchase after the warranty expires – contact us for details.

Outside of these countries: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

LIMITED WARRANTY (CONT.)

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under warranty. Return of the product under warranty must adhere to the following rules:

If The Little Tikes Company believes that there may a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF THE LITTLE TIKES COMPANY CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY THE LITTLE TIKES COMPANY IN ITS SOLE DISCRETION. ANY DISPUTES RESULTING FROM THIS WARRANTY SHALL BE SUBJECT TO THE FINAL AND CONCLUSIVE DETERMINATION OF THE LITTLE TIKES COMPANY.

To the extent permitted by law, The Little Tikes Company will not be responsible for direct, special, incidental or consequential damages resulting from any breach of warranty.

LIMITED WARRANTY (CONT.)

Little Tikes Consumer Service
2180 Barlow Road Hudson,
Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment, Inc.
9220 Winnetka Ave. Chatsworth, CA 91311
U.S.A. 800-222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill,
Milton Keynes,
MK8 0ES, Bucks, UK
0800 521 558

27

TOBI™2

ROBOT SMARTWATCH

Comes to Life Before Your Eyes™

USER GUIDE

Illustrations are for reference only. Styles may vary from actual contents.

657573, 659140, 487231

28

For more information including the latest instructions, visit:

WWW.LITTLETIKES.COM/TOBI2

© 2021 MGA Entertainment, Inc.
Tobi™ is a trademark of MGA in the U.S. and other countries.
All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries.
Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

PRINTED IN CHINA
0721-1-E/INT

Little Tikes Consumer Service
2180 Barlow Road Hudson,
Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment, Inc.
9220 Winnetka Ave. Chatsworth, CA 91311
U.S.A. 800-222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill,
Milton Keynes,
MK8 0ES, Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404XG
Alphen a/d Rijn, The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

29