



# ARTYMIS Series LCD Monitor

MPG ARTYMIS 343CQR (3DB2)

# Contents

Getting Started
Package Contents
Installing the Monitor Stand
Adjusting the Monitor
Monitor Overview
Connecting the Monitor to PC
DSD Setup
Navi Key
Hot Key
DSD Menus
Gaming10
Professional
Image
Input Source
PIP/PBP
Navi Key 17
Specifications
Preset Display Modes
Froubleshooting
Safety Instructions
ΓÜV Rheinland Certification26
Regulatory Notices

#### Revision

V1.0, 2020/10

# **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

### **Package Contents**

Monitor	MPG ARTYMIS 343CQR (3DB2)		
	Quick Start Guide		
Documentation	Registration Card		
	Warranty Card		
	Stand with Screw(s)		
	Stand Base with Screw(s)		
Accessories	Stand Cover		
Accessories	Screw(s) for Wall Mount Bracket		
	Power Cord		
	Mouse Bungee		
	HDMI Cable (Optional)		
	DisplayPort Cable (Optional)		
Cables	Y-Type Audio Cable (for audio jacks on the monitor) (Optional)		
	USB Upstream Cable (for USB Type-B Upstream Port) (Optional)		

# Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.

## Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the latches of the stand to the monitor. Tighten the stand with screws.
- 2. Connect the stand base to the stand and tighten the screw to secure the stand base.
- **3.** Align the latches to place the stand cover.
- **4.** Adjust the angle of the stand, make sure the stand assembly is properly installed before setting the monitor upright.

# Important

- Remove the screws on the monitor groove if needed before installing the stand.
- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.



# Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.

# Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.



## **Monitor Overview**



0	Headset Hanger
2	Масго Кеу
	To activate Gaming OSD Application.
3	Navi Key
6	Power Button
6	Cable Routing Hole
6	Kensington Lock
1	Power Jack
8	
9	DisplayPort
0	USB Type-C Port
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery. It only carries video signals and doesn't support data transmission function.
0	Headphone Jack
Ð	USB 3.2 Gen 1 Type-A Port
ß	USB 3.2 Gen 1 Type-B Upstream Port
	For USB Upstream Cable.
	Check the package for USB Upstream Cable and
	connect it to the PC and monitor. Once this cable is connected, the USB Type-A Downstream Ports on To PC
	the monitor will be ready for use.

# **Connecting the Monitor to PC**

- 1. Turn off your computer.
- 2. Connect the HDMI/ DisplayPort cable from the monitor to your computer.
- 3. Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- 5. Turn on the monitor. (Figure C)
- 6. Power on the computer and the monitor will auto detect the signal source.



# **OSD** Setup

This chapter provides you with essential information on OSD Setup.

# Important

All information is subject to change without prior notice.

# Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.



#### Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

#### Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

# Hot Key

- Users may enter into Game Mode, Screen Assistance, Alarm Clock and Input Source function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

# **OSD Menus**

1	<b>MSI</b> 3440 X14	40 165 HZ HDR OFF	Adaptive Sync DP OFF	
	Gaming	Game Mode	✓ User	
☆	Professional	Night Vision	FPS	
5	Image	Response Time	Racing	Exit
Ð	Input Source	Anti Motion Blur	RTS	
6	PIP/PBP	Zero Latency	RPG	Move
ල	Navi Key	Refresh Rate		
ŵ	Setting	Alarm Clock		Enter
				Enter

# Gaming

1st Level Menu	2nd/3rd Level Menu	Description	
Game Mode	User	• All items can be adjusted by users.	
	FPS	• Use Up or Down Button to select and preview mode effects.	
	Racing	• Press the OK Button to confirm and	
	RTS	apply your mode type.	
	RPG		
Night Vision	OFF	• This function optimizes background	
	Normal	<ul> <li>brightness and is recommended for FPS games.</li> </ul>	
	Strong		
	Strongest		
	A.I.		
Response Time	Normal	• Users can adjust Response Time in any mode.	
	Fast	Response Time will be grayed out     while MPRT is enabled	
	Fastest	<ul> <li>Response Time have to set to Fast after MPRT is disabled.</li> </ul>	

1st Level Menu	2nd/3rd L	evel Menu	Description
MPRT	OFF ON		• Brightness cannot be adjusted when MPRT is set to ON.
			<ul> <li>When MPRT is enabled, HDCR and Brightness cannot be enabled and will be grayed out.</li> </ul>
			<ul> <li>Response time will be grayed out while MPRT is enabled.</li> </ul>
			<ul> <li>MPRT have to set to OFF while Adaptive Sync is set to ON.</li> </ul>
			<ul> <li>PIP/PBP will be disabled while MPRT set to ON.</li> </ul>
			• Screen Size will set to Auto if 1:1 is selected.
Zero Latency	OFF		• Zero Latency default is ON.
	ON		<ul> <li>Zero Latency helps to reduce the signal throughput timing.</li> </ul>
Refresh Rate	Location	Left Top	• Users can adjust Refresh Rate in any
		Right Top	mode. • Default Refresh Rate Location is
	Left Bottom Right Bottom Customize		<ul> <li>Default for Contract Execution is Left Top. Location is adjustable in OSD Menu. Press the OK Button to confirm and apply your Refresh Rate Location.</li> <li>This monitor follows and works at the Operating System's preset Screen Refresh Rate.</li> </ul>
	ON		

1st Level Menu	2nd/3rd L	evel Menu	Description		
Alarm Clock	Location	Left Top	• Users can adjust Alarm Clock in any		
		Right Top	<ul><li>Mode.</li><li>After setting the time, press the OK</li></ul>		
		Left Bottom	<ul> <li>Default Alarm Clock Location is</li> </ul>		
		Right Bottom	Left Top. Users can select their own location.		
		Customize			
	OFF				
	15:00	00:01 ~			
	30:00	99:59			
	45:00				
	60:00				
Screen	None		• Users can adjust Screen Assistance		
Assistance	lcon				<ul> <li>In any mode.</li> <li>Screen Assistance default is None.</li> </ul>
	Position				
	Reset	н <sup>т</sup> н ~ , ¬			
Optix Scope	Scope	Small	• Default is OFF.		
	Size	Medium	• The center point will zoom in when Optix Scope is enabled, user can		
		Large	adjust the details through the "Scope Size" and "Scope Ratio" settings.		
	Scope	x1.5	Screen Assisance and Optix Scope		
Ratio		x2	can be enabled at the same time.		
		x4	<ul> <li>PIP/PBP, Adaptive Sync, Zero Latency and MPRT should set to OFF</li> </ul>		
	OFF	Х	while Optix Scope function is enabled.		
	ON		• Screen Size 1:1 has to be set to Auto while Optix Scope function is enabled.		

1st Level Menu	2nd/3rd Level Menu	Description
Adaptive-Sync	OFF	Adaptive-Sync prevents screen
	ON	<ul> <li>tearing.</li> <li>DisplayPort or HDMI default is ON and can be adjusted ON/OFF in any mode, any resolution, any input source and any screen refresh rate.</li> </ul>
		<ul> <li>MPRT will be disabled if Adaptive Sync is enabled.</li> </ul>
		<ul> <li>PIP/PBP will be disabled if Adaptive Sync is enabled.</li> </ul>
		• Screen Size will set to Auto if 1:1 is selected.

# Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	User	• Default mode is User.
	Reader	• All items can be adjusted by users.
	Cinema	<ul> <li>Use Up or Down Button to select and preview mode effects.</li> </ul>
	Designer	• Press the OK Button to confirm and apply
	sRGB	your mode type.
	Anti-Blue	
	Movie	
	Office	
Low Blue Light	OFF	• Default is OFF.
	ON	<ul> <li>Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.</li> </ul>
		<ul> <li>Users can adjust Low Blue Light in any mode.</li> </ul>
		• When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.

1st Level Menu	2nd Level Menu	Description
HDCR	OFF	• Users can adjust HDCR in any mode.
	ON	<ul> <li>HDCR enhances image quality by increasing the contrast of images.</li> </ul>
		<ul> <li>When HDCR is set to ON, Brightness will be grayed out.</li> </ul>
		<ul> <li>HDCR and MPRT cannot be enabled simultaneously.</li> </ul>
MPRT	OFF	<ul> <li>Brightness cannot be adjusted when MPRT is set to ON</li> </ul>
	ON	<ul> <li>When MPRT is enabled, HDCR and Brightness cannot be enabled and will be grayed out.</li> </ul>
		<ul> <li>Response time will be grayed out while MPRT is enabled.</li> </ul>
		<ul> <li>MPRT have to set to OFF while Adaptive Sync is set to ON.</li> </ul>
		<ul> <li>PIP/PBP will be disabled while MPRT set to ON.</li> </ul>
		<ul> <li>Screen Size will set to Auto if 1:1 is selected.</li> </ul>
Image	OFF	Image Enhancement enhances image
Enhancement	Weak	edges to improve their acutance. • Users can adjust Image Enhancement in
	Medium	any mode.
	Strong	
	Strongest	

# Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	• Users can adjust Brightness in User, RTS, RPG and Reader mode.
		<ul> <li>Brightness will be grayed out when MPRT or HDCR are enabled.</li> </ul>
Contrast	0-100	• Users can adjust Contrast in any mode.

1st Level Menu	2nd/3rd Level N	lenu	Description
Sharpness	0-5		<ul> <li>Users can adjust Sharpness in any mode.</li> </ul>
			<ul> <li>Sharpness improves clarity and details of images.</li> </ul>
Color Temperature	Cool		Color Temperature default is     Normal
remperature	Normal		Use Up or Down Button to select
	Warm		and preview mode effects.
	Customization	R (0-100)	<ul> <li>Press the OK Button to confirm and apply your mode type.</li> </ul>
		G (0-100)	• Users can adjust Color
		B (0-100)	Temperature in Customization mode.
Screen Size	Auto		• Users can adjust Screen Size in
	4:3		any mode, any resolution and any screen refresh rate.
	16:9		• Default is Auto.
	21:9		• If 1:1 is selected then PIP or PBP is enabled, Screen Size have to
	1:1		set to Auto.
			<ul> <li>If MPRT is enabled then 1:1 is selectred, MPRT will be turned OFF.</li> </ul>
			• If 1:1 is selected, Adaptive Sync will be set to OFF.

# Input Source

1st Level Menu	2nd Level Menu	Description	
HDMI1		• Users can adjust Input Source in any mode.	
HDMI2			
DP			
Туре-С			
Auto Scan	OFF	• Users can use the Navi Key to select Input	
	ON	Source at below status:	
		<ul> <li>While "Auto Scan" is set to "OFF" with the monitor at power saving mode;</li> </ul>	
		<ul> <li>While "No Signal" message box is shown on the monitor.</li> </ul>	

# PIP/PBP

1st Level Menu	2nd/3rd Leve	l Menu	Description	
OFF			• PIP (Picture in Picture) allows	
PIP	Source	HDMI1	users to simultaneously display multiple video sources on one	
		HDMI2	screen. One program is displayed	
		DP	on the full screen at the same	
		Туре-С	time as one or more other programs are displayed in inset	
	PIP Size	Small	windows.	
		Medium	• PBP (Picture by Picture) is a	
		Large	similar feature that displays two input sources side-by-side on the	
	Location	Left Top	screen.	
		Right Top	• PIP/PBP default is OFF.	
		Left Bottom	• Display Switch allows users to	
		Right Bottom	switch between primary and secondary input sources.	
		Customize	While User choose Audio Switch,     the Audio Source will be shanged	
	Display Switch	ו	the Audio Source will be changed to Digital .	
	Audio	HDMI1	<ul> <li>If there is only one signal input,</li> </ul>	
	Switch	HDMI2	the Display Switch and Audio	
		DP	Switch will be grayed out.	
		Туре-С	• While Display Switch is selected in PBPx3 or PBPx4, the source	
PBP (X2)	Mode 1	Х	will exchange clockwise.	
	Mode 2			
	Source 1	HDMI1		
		HDMI2		
		DP		
		Туре-С		
	Source 2	HDMI1		
		HDMI2		
		DP		
		Туре-С		
	Display Switch	х		
	Audio	HDMI1		
	Switch	HDMI2		
		DP		
		Туре-С		

# Navi Key

1st Level Menu	2nd Level Menu	Description
Up / Down / Left	OFF	• Up Button default is Game Mode.
/ Right	Brightness	• Down Button default is Screen Assistance.
	Game Mode	<ul> <li>Left Button default is Alarm Clock.</li> </ul>
		<ul> <li>Right Button default is Input Source.</li> </ul>
	Screen Assistance	<ul> <li>All Navi Key items can be adjusted via OSD Menus.</li> </ul>
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Information on Screen	
	Night Vision	
	Optix Scope	

# Setting

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	• Language factory default is English.
	English	• Users have to press the OK Button to
	Français	confirm and apply the Language setting.
	Deutsch	<ul> <li>Language is an independent setting. Users' own language setting will override</li> </ul>
	Italiano	the factory default. When users set Reset
	Español	to Yes, Language will not be changed.
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	ไทย	
	Bahasa Indonesia	
हन्दि		
	Türkçe	
	(More languages coming soon)	

2nd Level Menu	Description
0~5	<ul> <li>Users can adjust Transparency in any mode.</li> </ul>
5~30	<ul> <li>Users can adjust OSD Time Out in any mode.</li> </ul>
OFF	• Users can adjust RGB LED to ON or OFF.
ON	• Default is ON.
OFF	• When set to OFF, users can press the power button to turn off the monitor.
Standby	<ul> <li>When set to Standby, users can press the power button to turn off the panel and backlight.</li> </ul>
OFF ON	• The information of the monitor status will be shown on the right side of the screen.
	<ul> <li>Users can enable or disable the Information on Screen. Default is OFF.</li> </ul>
OFF	• Default is OFF.
ON	<ul> <li>HDMI CEC (Consumer Electronics Control) supports Sony PlayStation<sup>®</sup>, Nintendo<sup>®</sup> Switch<sup>™</sup>, and various audio-visual devices that are CEC-capable.</li> </ul>
	• If HDMI CEC is set to ON:
	• The monitor will automatically power on when the CEC device is turned on.
	• The CEC device will enter power saving mode when the monitor is turned off.
	<ul> <li>When Sony PlayStation<sup>®</sup> or Nintendo<sup>®</sup> Switch<sup>™</sup> is connected, Game and Pro Mode will be automatically set to User mode (Default) and can be adjusted to users' preferred modes later.</li> </ul>
YES	<ul> <li>Users can Reset and restore settings to original OSD Default in any mode.</li> </ul>
	5~30 OFF ON OFF Standby OFF ON OFF ON

# **Specifications**

Model	MPG ARTYMIS 343CQR (3DB2)
Size	34 inch
Curvature	1000R
Panel Type	VA
Resolution	3440 x 1440 (QHD+)
Aspect Ratio	21:9
Brightness (nits)	400
Contrast Ratio	3000:1
Refresh Rate	165Hz
Response Time	1ms
MPRT	1ms
Input Interface	<ul> <li>HDMI Port x 2</li> <li>DisplayPort x 1</li> <li>USB Type-C Port x 1</li> </ul>
I/O	<ul> <li>USB 3.2 Gen 1 Type-A Port x 2</li> <li>USB 3.2 Gen 1 Type-B Upstream Port x 1</li> <li>Headphone Jack x 1</li> </ul>
View Angles	178°(H) , 178°(V)
DCI-P3*/ sRGB	92.7% / 117.8%
Surface Treatment	Anti-glare
Display Colors	1.07B (8 bit +FRC)
Power Type	Internal Power
Power Consumption (Typical)	Power On < 160W Standby < 0.5W Power Off < 0.5W
System Rating	100~240Vac, 50/60Hz, 2A
Adjustment (Tilt)	-5° ~ 20°
Adjustment (Height)	0 ~ 100mm
Adjustment (Swivel)	-30° ~ 30°

Model		MPG ARTYMIS 343CQR (3DB2)	
Kensington Lock		Yes	
		• Plate Type: 100 x 100 mm	
		• Screw Type: M4 x 10 mm	
VESA Mounting		• Thread Diameter: 4 mm	
		• Thread Pitch: 0.7 mm	
		<ul> <li>Thread Length: 10 mm</li> </ul>	
Dimension (W x H x D)		795.3 x 422.5 x 315.6 mm	
Weight		9.17 Kg (Net) / 12.9 Kg (Gross)	
		• Temperature: 0°C to 40°C	
	Operating	• Humidity: 20% to 90%, non-condensing	
Environment		• Altitude: 0 ~ 5000m	
		• Temperature: -20°C to 60°C	
	Storage	• Humidity: 10% to 90%, non-condensing	

\* Based on CIE1976 test standards.

# **Preset Display Modes**

Desclation	MPG ARTYMIS 343CQR (3DB2)		
Resolution	ндмі	DP/ Type-C	
640x480 @60Hz	V	V	
640x480 @67Hz	V	V	
640x480 @72Hz	V	V	
640x480 @75Hz	V	V	
720×400 @70Hz	V	V	
800x600 @56Hz	V	V	
800x600 @60Hz	V	V	
800x600 @72Hz	V	V	
800x600 @75Hz	V	V	
1024x768	V	V	
1024x768  ര70Hz	V	V	
1024x768 @75Hz	V	V	
1280x720 @60Hz	V	V	
1280x960 @60Hz	V	V	
1280x1024 @60Hz	V	V	
1152x864 @75Hz	V	V	
1440x900 ര60Hz	V	V	
1680x1050 @60Hz	V	V	
1920x1080 @60Hz	V	V	
1920x1080 @120Hz	V	V	
2560x1080 @60Hz	V	V	
2560x1080 @120Hz	V	V	
2560x1440 @60Hz	V	V	
2560x1440 @120Hz	V	V	
3440X1440 @50Hz	V	Х	
3440X1440 @100Hz	V	Х	
3440X1440 @120Hz	Х	V	
3440X1440 @144Hz	Х	V	
3440X1440 @165Hz	X	V	

Video timing Poselution	MPG ARTYMIS 343CQR (3DB2)		
Video timing Resolution	HDMI	DP/ Type-C	
480p	V	V	
576p	V	V	
720p	V	V	
1080p	V	V	

# Troubleshooting

### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

### The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

### The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

# Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

# Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

#### Taiwan:



#### 廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

### Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

# **TÜV Rheinland Certification**

# **TÜV Rheinland Low Blue Light Certification**

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Use the Reader/Anti-Blue mode or turn on the optional Low Blue Light function.

# TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on

internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)





Low Blue Light (Software Solution)

www.tuv.com

# **Regulatory Notices**

# **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

# FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if



[ F

not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

## WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



# **Chemical Substances Information**

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://storage-asset.msi.com/html/popup/csr/evmtprtt\_pcm.html

# **RoHS Statement**

### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://storage-asset.msi.com/html/popup/csr/cemm\_jp.html

### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

### **Turkey EEE Regulation**

Conforms to the EEE Regulations of the Republic Of Turkey.

### **Ukraine Restriction of Hazardous Substances**

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of December 3, 2008 N $^{o}$  1057, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

# **Green Product Features**

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

## **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

## Warning!

Overuse of screens is likely to affect eyesight.

### **Recommendations:**

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

## **Copyright and Trademarks Notice**

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

# **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

