

Panasonic

LUMIX

S9

Operating Instructions / Owner's Manual <Complete Guide>
Digital Camera
DC-S9

Please read these instructions carefully before using this product.

Register online at http://shop.panasonic.com/support/register

(U.S. customers only)

A firmware update has been made available to improve camera capabilities and to add functionality.

• For information about functions that have been added or modified, refer to the pages for "Firmware Update".

DVQP3138ZB F0524KN1104

About Operating Instructions

This document, "Operating Instructions / Owner's Manual <Complete Guide>", includes detailed explanations of all the functions and operations of the camera.

• Images and illustrations used in this document are for explaining the functions.

Symbols Used in This Document

Black icons show conditions in which functions can be used, and gray icons show conditions in which functions cannot be used.

Example:


Pictures/Videos



Recording mode iA P A S M = S&Q

Operating symbols

In this document, camera operation is explained using the following symbols:

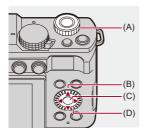

(A) ===::

Front dial

(B) ▲▼◀►:

Cursor button up/down/left/right

(C) (E):

[MENU/SET] button

(D) 🚳 :

 
Control dial

- Other symbols, such as icons shown on the camera screen, are also used in explanations.
- This document describes the procedure for selecting menu items as follows: Example) Set [Picture Quality] of the [Photo] ([Image Quality]) menu to [STD.].



Notification classification symbols

In this document, notifications are classified and described using the following symbols:



: Hints for better use of the camera and tips for recording

Representations and supplementary items regarding specifications

: Related functions and information

• Description in this document is based on the interchangeable lens (S-R2060).

Contents

About Ope	rating Instructions	2
About Operating Instructions Introduction Before Use		17
Befo	re Use	18
Stan	dard Accessories	20
Lens	ses That Can Be Used	22
Mem	nory Cards That Can Be Used	23
Nam	es of Parts	26
	Camera	27
;	Supplied Lens	31
I	Monitor Displays	34
Getting Sta	arted	36
Attac	ching a Shoulder Strap	37
Chai	ging the Battery	39
1	Battery Insertion	40
	Inserting a Battery into the Camera for Charging	42
	Using the Camera While Supplying It with Power (Supplying Power)	15
	Notifications Regarding Charging/Power Supply	
	[Power Save Mode]	
· ·	rting Cards (Optional)	
Attac	ching a Lens	54
	How to Extend/Retract the Lens [When the Interchangeable Le (S-R1840) Is Attached]	
	Removing a Lens	
	Attaching a Lens Hood	
	sting the Monitor Direction and Angle	
•	ng the Clock (When Turning On for the First Time)	

Basic Operations	67
How to Hold the Camera	68
Selecting the Recording Mode	70
Camera Setting Operations	71
Monitor Display Settings	77
Switching the Display Information	77
Quick Menu	80
Control Panel	82
Menu Operation Methods	84
[Reset]	89
Entering Characters	90
Intelligent Auto Mode	91
Recording Using Touch Functions	97
Touch AF/Touch Shutter	97
Touch AE	100
Taking Pictures	102
Basic Picture Operations	103
[Aspect Ratio]	106
[Picture Size]	108
[Picture Quality]	110
Recording Videos	112
Basic Video Operations	113
[System Frequency]	120
[Rec. File Format]	122
[Rec Quality]	123
[Image Area of Video]	136

Focus	s / Zoom	138
	Selecting the Focus Mode	139
	Using AF	141
	[AF-Point Scope]	
	[AF Custom Setting(Photo)]	
	[Focus Limiter]	
	[AF Assist Light]	
	[Focus Frame Moving Speed]	154
	[AF Micro Adjustment]	155
	Selecting the AF Mode	159
	Automatic Detection	162
	[Tracking]	167
	[Full Area AF]	168
	[Zone(Horizontal/Vertical)]/[Zone]	171
	[1-Area+]/[1-Area]	173
	[Pinpoint]	175
	AF Area Operations	177
	Move the Position of the AF Area	177
	Changing the Size of the AF Area	179
	Resetting the AF Area	180
	Focus on and Adjust Brightness for the Touched Position	
	([AF+AE])	181
	[Focus Switching for Vert / Hor]	182
	Record Using MF	183
	[Focus Peaking]	188
	Recording with Zoom	190
	[Crop Zoom(Photo)]	191
	[Hybrid Zoom(Photo)]	194
	[Crop Zoom(Video)]	197
	[Hybrid Zoom(Video)]	201

Drive	/ Shutter / Image Stabilizer	204
	Selecting the Drive Mode	205
	Taking Burst Pictures	207
	High Resolution mode	215
	Recording with Time Lapse Shot	221
	Recording with Stop Motion Animation	229
	Time Lapse Shot/Stop Motion Animation Videos	234
	Recording Using the Self-timer	236
	Bracket Recording	241
	[Silent Mode]	249
	[Synchro Scan(Photo)]	251
	[Min. Shutter Speed]	253
	[Shutter Delay]	254
	Image Stabilizer	255
	Image Stabilizer Settings	258
Meter	ring / Exposure / ISO Sensitivity	266
	[Metering Mode]	267
	Program AE Mode	269
	Program Shift	271
	Aperture-Priority AE Mode	273
	Shutter-Priority AE Mode	276
	Manual Exposure Mode	279
	Available Shutter Speeds (Sec.)	
	[T] (Time)	
	Preview Mode	
	Exposure Compensation	
	[i.Dynamic Range]	289

Locking Focus and Exposure (AF/AE Lock)	290
ISO Sensitivity	292
[Dual Native ISO Setting]	296
[ISO Sensitivity (photo)]	297
White Balance / Image Quality	298
White Balance (WB)	299
Adjusting the White Balance	305
[Photo Style]	307
[Filter Settings]	320
[Simultaneous Record w/o Filter]	325
[REAL TIME LUT]	326
[LUT Library]	328
Base Photo Style of LUT files	332
Lens Compensation	334
[Vignetting Comp.]	334
[Color Shading Compensation]	335
[Diffraction Compensation]	339
Video Settings	340
Recording Modes Specifically for Video	
(Creative Video/S&Q)	341
Displays Suited to Video Recording	342
Setting the Exposure for Recording Videos	343
Separating Settings for Recording Video and Pictures	347
Using AF (Video)	349
[Continuous AF]	349
[AF Custom Setting(Video)]	351
[Enlarged Live Display(Video)]	352
Video Brightness and Coloring	354

	[Luminance Levei]	354
	[Master Pedestal Level]	356
	Recording While Controlling Overexposure (Knee)	357
	[ISO Sensitivity (video)]	359
	Audio Settings	360
	[Sound Rec Level Disp.]	361
	[Mute Sound Input]	362
	[Sound Rec Gain Level]	363
	[Sound Rec Level Adj.]	364
	[Sound Rec Quality]	365
	[Sound Rec Level Limiter]	366
	[Wind Noise Canceller]	367
	External Microphones (Optional)	368
	Setting the Sound Pickup Range (DMW-MS2: Optional)	371
	Reduction of Wind Noise	372
	Time Code	373
	Setting the Time Code	374
	Main Assist Functions	376
	[Flicker Decrease (Video)]	377
	[SS/Gain Operation]	378
	[WFM/Vector Scope]	380
	[Luminance Spot Meter]	384
	[Zebra Pattern]	386
	[Frame Marker]	388
	Color Bars/Test Tone	390
Spec	ial Video Recording	392
	Slow & Quick Video	393
	High Frame Rate Video	
	•	
	[Focus Transition]	402

	[Live Cropping]	407
	Log Recording	412
	[Log View Assist]	416
	HLG Videos	417
	[HLG View Assist]	420
	Anamorphic Recording	421
	[Anamorphic Desqueeze Display]	423
	[Synchro Scan(Video)]	425
	[Segmented File Recording]	427
	List of Recording Qualities That Enable Special Video	os to be
	Recorded	428
HDMI	Output (Video)	434
	Connecting HDMI Devices	435
	HDMI Output Image Quality	436
	Images Output via HDMI	436
	HDMI Output Settings	439
	Outputting the Camera Information Display via HDMI	440
	Outputting Control Information to an External Recorder	441
	Outputting Audio via HDMI	
	Outputting the Enlarged Live Display (Video) via HDMI	442
Playin	g Back and Editing of Images	443
	Playing Back Pictures	444
	Playing Back Videos	446
	Video Repeat Playback	450
	Extracting a Picture	452
	[Video Divide]	453
	Switching the Display Mode	455

	Enlarged Display	430
	Thumbnail Screen	458
	Calendar Playback	460
	Group Images	461
	Deleting Images	463
	[RAW Processing]	465
	[Video Repair]	474
	[Playback] Menu	477
	How to Select an Image(s) in the [Playback] Menu	477
	[Playback] ([Playback Mode])	479
	[Playback] ([Process Image])	482
	[Playback] ([Add/Delete Info.])	483
	[Playback] ([Edit Image])	484
	[Playback] ([Others])	486
am	era Customization	487
	era oustonnization	+01
	Fn Buttons	
		488
	Fn Buttons	488
	Fn Buttons	488490501
	Fn Buttons	488 490 501
	Fn Buttons Register Functions to the Fn Buttons Use the Fn Buttons [Dial Operation Switch]	488 490 501 502
	Fn Buttons	

	[Custom] menu ([Focus/Shutter])	524
	[Custom] menu ([Operation])	530
	[Custom] menu ([Monitor / Display (Photo)])	535
	[Custom] menu ([Monitor / Display (Video)])	546
	[Custom] menu ([IN/OUT])	550
	[Custom] menu ([Lens / Others])	551
	[Setup] Menu	554
	[Setup] menu ([Card/File])	555
	[Setup] menu ([Monitor / Display])	559
	[Setup] menu ([IN/OUT])	561
	[Setup] menu ([Setting])	566
	[Setup] menu ([Others])	568
	My Menu	572
	Registration in My Menu	572
	Edit My Menu	573
l ist of	Menu	574
		5/4
LISCOI	monu	5/4
List of	[Photo] menu	
LIST OF		575
LIST OF	[Photo] menu	575
LIST OF	[Photo] menu[Video] menu	575
LISTO	[Photo] menu	575
<u> </u>	[Photo] menu	
	[Photo] menu	

Import images	598
[Auto Transfer]	600
[Location Logging]	602
Connecting to "LUMIX Sync"	604
Installing "LUMIX Sync"	605
Connecting to a Smartphone (Bluetooth Connection)	606
Connecting to a Smartphone ([Wi-Fi connection])	612
Sending Images on the Camera to a Smartphone with Sir	nple
Operations	618
Using "LUMIX Sync"	620
[Remote shooting]	622
[Shutter Remote Control]	624
[Import images]	627
[Auto Transfer]	629
[Location Logging]	631
[Remote Wakeup]	633
[Auto Clock Set]	635
[Camera settings copy]	636
Sending Images from the Camera to a PC	637
Wi-Fi Connections	641
[Via Network]	642
[Direct]	646
Connect to Wi-Fi Using Previously Saved Settings	648
Fn Button Assigned with [Wi-Fi]	650
Send Settings and Selecting Images	651
Image Send Settings	651
Selecting Images	652
[Wi-Fi Setup] Menu	653
Connecting to Other Devices	655
Connecting	656

	Viewing on a TV	658
	Importing Images to a PC	662
	Copying Images to a PC	663
	Installing Software	666
	Storing on a Recorder	667
	Tethered Recording	668
	Installing Software	669
	Operating the Camera from a PC	670
late	erials	671
	Digital Camera Accessory System	672
	Using Optional Accessories	673
	Tripod Grip (Optional)	674
	DC Coupler (Optional)	675
	Monitor Displays	676
	Recording Screen	676
	Playback Screen	689
	Message Displays	694
	Troubleshooting	698
	Power, Battery	698
	Recording	699
	Video	704
	Playback	705
	Monitor	706
	Wi-Fi Function	707
	TV, PC	
	Others	712
	Cautions for Use	713
	Number of Pictures That Can Be Taken and Available I	•
	Time with the Battery	722

Number of Pictures That Can Be Taken and Video Recording	Time
with Cards	.728
List of Default Settings/Custom Saving/Settings Available for	
Copying	.736
List of Functions That Can Be Set in Each Recording Mode	.758
Specifications	.765
Trademarks and Licenses	.784

Introduction

This chapter describes information you should know before starting.

• Before Use: 18

• Standard Accessories: 20

• Lenses That Can Be Used: 22

Memory Cards That Can Be Used: 23

Names of Parts: 26

Before Use

Firmware of Your Camera/Lens

Firmware updates may be provided in order to improve camera capabilities or to add functionality.

Make sure that the firmware of the camera/lens you purchased is the latest version. We recommend using the latest firmware version.

- To check the firmware version of the camera/lens, attach the lens to the camera and select [Firmware Version] in the [Setup] ([Others]) menu. You can also update the firmware in [Firmware Version]. (→ [Firmware Version]: 571)
- For the latest information on the firmware or to download/update the firmware, visit the following support site:

https://panasonic.jp/support/global/cs/dsc/download/index4.html (English only)

Handling of the Camera

When using the camera, take care not to drop it, bump it, or apply undue force. These may cause malfunction or damage to the camera and lens.

The camera is not dust resistant, splash resistant, or waterproof.

Avoid using the camera in places with excessive dust or sand, or where water can come into contact with the camera.

If sand, dust, or liquid gets on the monitor, wipe it off with a dry soft cloth.

- Touch operations may be incorrectly recognized.

Do not place a hand inside the camera mount.

This may cause a failure or damage because the sensor is a precision device.

If you shake the camera while turning the camera off, a sensor may operate or a rattling sound may be heard. This is caused by the image stabilizer mechanism in the body. It is not a malfunction.

Condensation (When the Lens or Monitor is Fogged Up)

- Condensation occurs when there are temperature or humidity differences. Take care
 as this may lead to soiling, mold, and malfunctions in the lens and monitor.
- If condensation occurs, turn off the camera and leave it for approx. 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

Be Sure to Perform Trial Recording in Advance

Perform trial recording in advance of an important event (wedding, etc.) to check that recording can be performed normally.

No Compensation Regarding Recording

Please note that compensation cannot be provided in the event that recording could not be performed due to a problem with the camera or a card.

Be Careful with Regard to Copyrights

Under copyright law, you may not use the images and audio you have recorded for other than personal enjoyment without the permission of the copyright holder. Be careful because there are cases where restrictions apply to recording even for the purpose of personal enjoyment.

Also Read "Cautions for Use" (→ Cautions for Use: 713)

Standard Accessories

Check that all the accessories are supplied before using the camera.

 The accessories and their shape will differ depending on the country or area where the camera was purchased.

For details on the accessories, refer to "Operating Instructions / Owner's Manual <Quick Start Guide>" (supplied).

Digital camera body

(This is referred to as camera in this document.)

Battery pack

(This is referred to as battery pack or battery in this document.)

- Charge the battery before use.
- Shoulder strap
- Body cap*1
- Accessory shoe cover*1

Items Supplied with DC-S9K (Lens Kit Product)

• 35 mm full-frame interchangeable lens:

S-R2060 "LUMIX S 20-60mm F3.5-5.6"

- Dust and splash resistant
- Lens hood
- Lens cap*2
- Lens rear cap*2

^{*1} This is attached to the camera at the time of purchase.

Items Supplied with DC-S9H (Lens Kit Product)

- 35 mm full-frame interchangeable lens:
 - S-R28200 "LUMIX S 28-200mm F4-7.1 MACRO O.I.S."
 - · Dust and splash resistant
- Lens hood
- Lens cap*2
- Lens rear cap*2

Items Supplied with DC-S9N (Lens Kit Product)

- 35 mm full-frame interchangeable lens:
 - S-R1840 "LUMIX S 18-40mm F4.5-6.3"
 - Dust and splash resistant
- Lens cap*2
- Lens rear cap*2
- *2 This is attached to the lens at the time of purchase.
- The memory card is optional.
- Consult the dealer or Panasonic if you lose the supplied accessories. (You can purchase the accessories separately.)

Lenses That Can Be Used

The lens mount of this camera is compliant with the L-Mount standard of Leica Camera AG

It can be used with 35 mm full-frame interchangeable lenses and APS-C size interchangeable lenses of this standard.

- The interchangeable lenses used in the explanations are designated as follows in this document.
 - 35 mm full-frame interchangeable lens: full-frame lens
 - APS-C-size interchangeable lens: APS-C lens
- When there is no distinguishing the type of lens, the explanation will use lens.
- Refer to catalogs/websites for information regarding supported lenses. https://panasonic.jp/support/global/cs/dsc/connect/index.html (English only)



- The angle of view while recording with an APS-C lens is equivalent to the angle
 of view of a focal length of 1.5× when converted to the focal length of a 35 mm
 film camera. (If a 50 mm lens is used, the angle of view will be equivalent to a
 75 mm lens.)
- As the image area narrows, the following function is not available when using an APS-C lens:
 - High Resolution Mode
- Attaching commercially available accessories that do not comply with the L-Mount standard may lead to operation failure or malfunction of the camera.
 - If a failure or malfunction occurs due to this cause, the warranty will be void.

Memory Cards That Can Be Used

This section describes the memory cards that can be used with this camera. (As of May 2024)

SD memory card/SDHC memory card/SDXC memory card (Maximum 512 GB)

 The camera supports UHS-I/UHS-II UHS Speed Class 3 standard and UHS-II Video Speed Class 90 standard SD cards.



- SD memory cards, SDHC memory cards, and SDXC memory cards are referred to by the generic name of SD cards or cards in this document.
- For information on memory cards with confirmed operation, check the following support site:

https://panasonic.jp/support/global/cs/dsc/connect/index.html (English only)

SD Cards That Can Be Used with This Camera

When using the following functions, use cards that have the correct SD Speed Class, UHS Speed Class, and Video Speed Class.

 Speed classes are standards to guarantee the minimum speed necessary for continuous writing.

[Video Record]

Bit rate of the recording quality	Speed Class	Example of indication
72 Mbps or less	Class 10	CLASS® ®
	UHS Speed Class 1 or higher	U
	Video Speed Class 10 or higher	V 10
200 Mbps or less	UHS Speed Class 3	[3]
	Video Speed Class 30 or higher	V 30



 You can prevent the writing and deleting of data by setting the write-protect switch (A) on the SD card to "LOCK".




- The data stored on a card may be damaged due to electromagnetic waves, static electricity or a failure of the camera or card. We recommend backing up important data.
- Keep the memory card out of reach of children to prevent swallowing.


Names of Parts

- Camera: 27
- Supplied Lens: 31
- Monitor Displays: 34

Camera

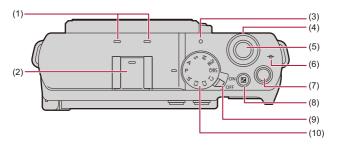


- (1) Stereo microphone (→Audio Settings: 360)
 - Do not block the microphone with a finger. Audio will be difficult to record.
- (2) Accessory shoe (Accessory shoe cover) (→External Microphones (Optional): 368)
 - Keep the Accessory shoe cover out of reach of children to prevent swallowing.
- (3) Charging light (→Charging Light Indications: 43)/ Network connection light (→Checking operation of the Wi-Fi and Bluetooth functions: 588)
- (4) Front dial (→Front Dial: 72)
- (5) Shutter button (→Basic Picture Operations: 103)
- (6) [→] (Recording distance reference mark) (→Operations on the MF Assist Screen: 185)
- (7) Video rec. button (→Basic Video Operations: 113)
- (8) [★] (Exposure compensation) button (→Exposure Compensation: 286)
- (9) Camera on/off switch (→Setting the Clock (When Turning On for the First Time):63)
- (10) Mode dial (→Selecting the Recording Mode: 70)

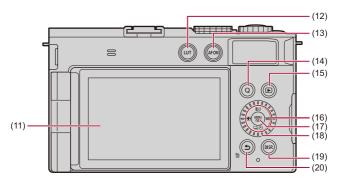


- (11) Monitor (→Monitor Displays: 34, Monitor Displays: 676)/ Touch screen (→Touch Screen: 74)
- (12) [LUT] button (→[REAL TIME LUT]: 326)
- (13) [AF ON] button (→[AF ON] button: 143)
- (14) [Q] (Quick menu) button (→Quick Menu: 80)
- (15) [▶] (Playback) button (→Playing Back and Editing of Images: 443)
- (16) Cursor buttons (→Cursor Buttons: 73)
 - [ISO] (ISO sensitivity) button (▲) (→ISO Sensitivity: 292)
 - [] (Drive mode) button (▼) (→Selecting the Drive Mode: 205)
 - [•••] (AF mode) button (◄) (→Selecting the AF Mode: 159)
 - [WB] (White balance) button (►) (→White Balance (WB): 299)

Fn buttons (→Fn Buttons: 488)

- **∆**: Fn7, **▶**: Fn8, **▼**: Fn9, **◄**: Fn10
- (17) [MENU/SET] button (→[MENU/SET] Button: 73, Menu Operation Methods: 84)
- (18) Control dial (→Control Dial: 72)
- (19) [DISP.] button (→Switching the Display Information: 77)
- (20) [♠] (Cancel) button (♠Menu Operation Methods: 84)/
 [♠] (Delete) button (♠Deleting Images: 463)/
 Fn button (Fn1) (♠Fn Buttons: 488)

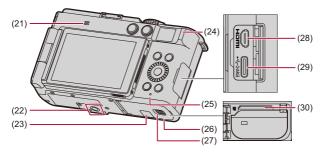


- (21) Speaker (→[Beep]: 561)
- (22) Tripod mount (→Tripod: 721)
 - If you attempt to attach a tripod with a screw length of 5.5 mm (0.22 inch) or more, you may not be able to securely fix it in place or it may damage the camera.
- (23) DC Coupler cover (→DC Coupler (Optional): 675)
- (24) Grip
- (25) Card access light (→Card Access Indications: 52)
- (26) Card/Battery door (→Battery Insertion: 40, Inserting Cards (Optional): 51)
- (27) Release lever (→Battery Insertion: 40, Inserting Cards (Optional): 51)
- (28) HDMI socket (→Connecting HDMI Devices: 435, HDMI socket: 656)
- (29) USB port (→Inserting a Battery into the Camera for Charging: 42, USB port: 657)
- (30) Card slot (→Inserting Cards (Optional): 51)

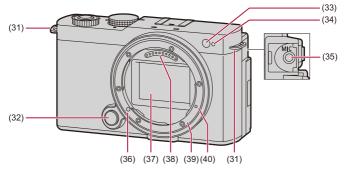

- (31) Shoulder strap eyelet (→Attaching a Shoulder Strap: 37)
- (32) Lens release button (→Removing a Lens: 57)
- (33) Illumination sensor
- (34) Self-timer light (→Recording Using the Self-timer: 236)/ AF assist light (→[AF Assist Light]: 153)
- (35) [MIC] socket (→External Microphones (Optional): 368)
- (36) Lens lock pin (Lens fitting mark) (→Attaching a Lens: 54)
- (37) Sensor
- (38) Contact points
- (39) Mount
- (40) Screw hole for function expansion

Supplied Lens

S-R2060

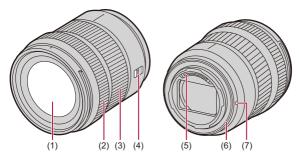


- (1) Lens surface
- (2) Focus ring (→Record Using MF: 183)
- (3) Zoom ring (→Recording with Zoom: 190)
- (4) [AF/MF] switch (→Using AF: 141, Record Using MF: 183)
 - You can switch between AF and MF.
 If [MF] is set on either the lens or camera, operation will be with MF.
- (5) Contact points
- (6) Lens mount rubber
- (7) Lens fitting mark (→Attaching a Lens: 54)



 Recording at or near the closest focusing distance at wide angle will degrade image quality around the edges of the image. We recommend checking each picture after you have taken it when recording.

S-R28200

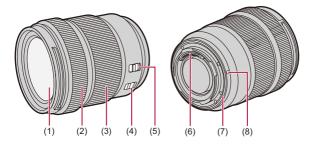


- (1) Lens surface
- (2) Focus ring (→Record Using MF: 183)
- (3) Zoom ring (→Recording with Zoom: 190)
- (4) O.I.S. switch (→Image Stabilizer: 255)
- (5) [AF/MF] switch (→Using AF: 141, Record Using MF: 183)
 - You can switch between AF and MF.
 If [MF] is set on either the lens or camera, operation will be with MF.
- (6) Contact points
- (7) Lens mount rubber
- (8) Lens fitting mark (→Attaching a Lens: 54)



 Recording at or near the closest focusing distance at wide angle will degrade image quality around the edges of the image. We recommend checking each picture after you have taken it when recording.

S-R1840

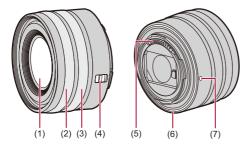

- (1) Lens surface
- (2) Focus ring (→Record Using MF: 183)
- (3) Zoom ring (→Recording with Zoom: 190)
- (4) [AF/MF] switch (→Using AF: 141, Record Using MF: 183)
 - You can switch between AF and MF.
 If [MF] is set on either the lens or camera, operation will be with MF.
- (5) Contact points
- (6) Lens mount rubber
- (7) Lens fitting mark (→Attaching a Lens: 54)




- Attach and remove the lens only when the lens barrel is retracted.
- A message is displayed if the lens barrel is retracted and recording is not
 possible. Rotate the zoom ring to extend it. (→How to Extend/Retract the Lens
 [When the Interchangeable Lens (S-R1840) Is Attached]: 56)
- Recording at or near the closest focusing distance at wide angle will degrade image quality around the edges of the image. We recommend checking each picture after you have taken it when recording.

Monitor Displays

At the time of purchase, the monitor displays the following icons.

• For information about the icons other than those described here (→Monitor Displays: 676)

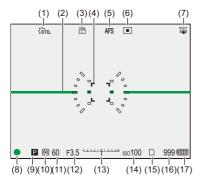

- (1) Photo Style (→[Photo Style]: 307)
- (2) Level gauge (→[Level Gauge]: 544)
- (3) Picture quality (→[Picture Quality]: 110)/ Picture size (→[Picture Size]: 108)
- (4) AF area (→AF Area Operations: 177)
- (5) Focus mode (→Selecting the Focus Mode: 139, Using AF: 141, Record Using MF: 183)
- (6) AF mode (→Selecting the AF Mode: 159)
- (7) Image stabilizer (→ Image Stabilizer: 255)
- (8) Focus (green) (→Basic Picture Operations: 103, Using AF: 141)/ Recording state (red) (→Basic Video Operations: 113, High Resolution mode: 215)
- (9) Recording mode (→Selecting the Recording Mode: 70)
- (10) Metering mode (→[Metering Mode]: 267)
- (11) Shutter speed (→Basic Picture Operations: 103, Shutter-Priority AE Mode: 276)
- (12) Aperture value (→ Basic Picture Operations: 103, Aperture-Priority AE Mode: 273)
- (13) Exposure compensation value (→Exposure Compensation: 286)/ Manual Exposure Assist (→Manual Exposure Assist: 281)
- (14) ISO sensitivity (→ISO Sensitivity: 292)
- (15) Card slot (→Inserting Cards (Optional): 51)
- (16) Number of pictures that can be taken (→Number of Pictures That Can Be Taken and Video Recording Time with Cards: 728)/
 Number of pictures that can be taken continuously (→Number of Pictures That Can Be Taken Continuously: 212)
- (17) Battery indication (→Power Indications: 46)



• Press [5] to switch between display/hide of the level gauge.


Getting Started

Before recording, read this chapter to prepare the camera.

- Attaching a Shoulder Strap: 37
- Charging the Battery: 39
- Inserting Cards (Optional): 51
- Attaching a Lens: 54
- Adjusting the Monitor Direction and Angle: 61
- Setting the Clock (When Turning On for the First Time): 63

Attaching a Shoulder Strap

Attach a shoulder strap to the camera with the following procedure to prevent it from dropping.

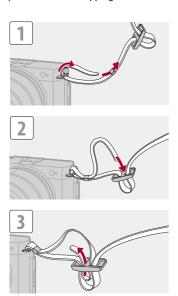





- Pull the shoulder strap and check that it will not come out.
- Attach the opposite end of the shoulder strap with the same procedure.
- Use the shoulder strap around your shoulder.
 - Do not wrap the strap around your neck.
 It may result in injury or accident.
- Do not leave the shoulder strap where an infant can reach it.
 - It may result in an accident by mistakenly wrapping around the neck.

Charging the Battery

- Battery Insertion: 40
- Inserting a Battery into the Camera for Charging: 42
- Using the Camera While Supplying It with Power (Supplying Power): 45
- Notifications Regarding Charging/Power Supply: 46
- [Power Save Mode]: 48

You can charge the battery in the camera body.

You can also turn on the camera and supply power from an electrical outlet.

You can also use the Battery Charger (DMW-BTC15: optional).

 The battery that can be used with the camera is DMW-BLK22. (As of May 2024)



 The battery is not charged at the time of purchase. Charge the battery before use.

 
Battery Insertion

- Always use genuine Panasonic batteries (DMW-BLK22).
- If you use other batteries, we cannot guarantee the quality of this product.



• Check that the camera on/off switch is set to [OFF].





• Check that the lever (A) is holding the battery in place.



Removing the Battery

- Set the camera on/off switch to [OFF].
- 2 Open the battery door.
- 3 Push the lever (A) in the direction of the arrow and then remove the battery.
 - Check that the card access lights are off before removing the battery. (→ Card Access Indications: 52)





- Ensure that no foreign objects are adhering to the inner side of the battery door.
- Remove the battery after use.

(The battery will drain if left inserted in the camera for a long period of time.)

 The battery becomes warm after use, during charging, and immediately after charging.

The camera also becomes warm during use. This is not a malfunction.

• Be careful when removing the battery as the battery will jump out.

Inserting a Battery into the Camera for Charging




- It is recommended to use the Panasonic AC Adaptor (DMW-AC11: optional) or the supplied accessories of the Panasonic Battery Charger (DMW-BTC15: optional) for charging.
- You can charge with the camera body using a commercially available AC adaptor and a USB connection cable.

*Recommended specifications for the commercially available AC adaptor

- -Supports 5 V/3 A (15 W) DC output
- -USB Type-C terminal

*Use a USB connection cable with 15 W output or better for charging.

- You can also use an AC adaptor with 5 V/500 mA or better for charging.
 However, charging time may be longer than with the recommended AC adaptor.
- Operation is not guaranteed with all commercially available devices.

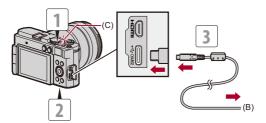

- (B) To the AC adaptor
 - Set the camera on/off switch to [OFF].
 - Insert the battery into the camera.

 
3 Connect the camera USB port and the AC adaptor using the USB connection cable.

- Check the direction of the terminals and plug in/out straight holding onto the plug.
 - (Inserting these at an angle may cause deformation or malfunction.)

4 Connect the AC adaptor to an electrical outlet.

• The charging light (C) turns red and charging begins.

Charging Light Indications



Charging light (red)

On: Charging.

Off: Charging has completed.

Blinking: Charging error.

Charging time: Approx. 240 min

- Using either the camera body and the optional AC Adaptor (DMW-AC11) or the camera body and the supplied accessories of the optional Battery Charger (DMW-BTC15).
- The indicated charging time is for when the battery has been discharged completely.
 The charging time may vary depending on how the battery has been used.
 The charging time for the battery in hot/cold environments or a battery that has not been used for a long time may be longer than normal.



 You can also charge the battery by connecting a USB device (PC, etc.) and the camera with the USB connection cable.
 In that case, charging may take a while.



- After charging, disconnect the connection to the power source.
- While the charging light is blinking red, charging is not possible.
 - The temperature of the battery or surroundings is either too high or too low. Try charging at an ambient temperature between 10 $^{\circ}$ C and 30 $^{\circ}$ C (50 $^{\circ}$ F and 86 $^{\circ}$ F).
 - The terminals of the battery are dirty.
 Remove the battery and wipe off the dirt with a dry cloth.
- Using charging methods other than those specified may result in fluid leakage, overheating, combustion, rupturing, etc., and these may cause injury.
- Even when the camera on/off switch is set to [OFF] thus turning the camera off, it consumes power.

When the camera will not be used for a long time, remove the power plug from the electrical outlet in order to save power.

Using the Camera While Supplying It with Power (Supplying Power)

When the battery is inserted into the camera for charging and the camera is turned on, you can record while the camera is being supplied with power.

- It is recommended to use the Panasonic AC Adaptor (DMW-AC11: optional) or the supplied accessories of the Panasonic Battery Charger (DMW-BTC15: optional) for supplying power.
- You can supply power to the camera body using a commercially available AC adaptor and USB connection cable.

*Recommended specifications for the commercially available AC adaptor

- -Supports 5 V/3 A (15 W) DC output
- -USB Type-C terminal

*Use a USB connection cable with 15 W output or better for supplying power.

- · Operation is not guaranteed with all commercially available devices.
- [is displayed in the screen while power is being supplied.



 You can also supply power by using a USB connection cable to connect the camera and a USB device (PC. etc.).

 


- The battery cannot be charged while power is being supplied.
- Turn off the camera before connecting or disconnecting the AC adaptor.
- Remaining charge in the battery may decrease depending on usage conditions.
 When the battery level is depleted, the camera will turn off.
- Depending on the power supply capabilities of the connected device, it may not be possible to supply power.
- For information about the high temperature display (→For information about the high temperature display: 118)

Notifications Regarding Charging/Power Supply

Power Indications

Indication on monitor



- (D) USB connection cable supplying power
- (E) Battery indication

(IIIII)	80 % or higher
(IIII)	60 % to 79 %
(<u> </u>	40 % to 59 %
	20 % to 39 %
	19 % or below
Blinking in red	Low battery • Charge or replace the battery.

The battery level indicated on the screen is approximate.
 The exact level varies depending on the environment and the operating conditions.



· We recommend that genuine Panasonic batteries are used.

There is a possibility that the use of non-genuine batteries can cause accidents or malfunctions that may lead to fire or explosion.

Please be advised that we are not liable for any accident or failure resulting from the use of non-genuine batteries.

 
- Do not leave any metal items (such as clips) near the contact areas of the power plug.
 - Otherwise, a fire and/or electric shocks may be caused by short-circuiting or the resulting heat generated.
- Do not use USB extension cables or USB conversion adaptors.
- The battery can be charged even when it still has some charge left, but it is not recommended that the battery charge be frequently topped up while the battery is fully charged.
- If there is a power outage or other problem with the electrical outlet, then charging may not complete successfully.
 - Reconnect the power plug.
- Do not connect to keyboard or printer USB ports, or to USB hubs.
- If the connected PC enters sleep status, then charging/power supply may stop.

Try not to use that battery.

[Power Save Mode]

This is a function to automatically turn the camera to sleep (power save) status or turn off the monitor if no operation is performed for a set time. Reduces battery consumption.





[Sleep Mode]	Sets the amount of time until the camera is put to sleep. • The power consumption of the camera may increase when [Sleep Mode] is set to [OFF].
[Sleep Mode(Wi-Fi)]	Sets the camera to sleep 15 minutes after being disconnected from Wi-Fi. • The power consumption of the camera may increase when [Sleep Mode(Wi-Fi)] is set to [OFF].
[Auto Monitor Off]	Sets the amount of time it takes for the monitor to turn off. (The camera is not turned off.)

- To recover from [Sleep Mode] or [Sleep Mode(Wi-Fi)], perform one of the following operations:
 - Press the shutter button halfway.
 - Set the camera on/off switch to [OFF] and then [ON] again.
- To recover from [Auto Monitor Off], press any button.



- [Power Save Mode] is not available in the following cases:
 - While connected to a PC
 - During video recording/video playback
 - During a [Time Lapse Shot]
 - When recording with [Stop Motion Animation] (when [Auto Shooting] is set)
 - When recording with [Focus Transition]
 - During a [Slide Show]
 - During HDMI output for recording

Inserting Cards (Optional)



• Format the cards with the camera before use. (→[Card Format]: 555)







 Match the orientation of the cards as shown in the figure and then insert them firmly until they click.

 


• You can set the folder and file name where to save the images:

(→[Folder / File Settings]: 556)

Card Access Indications

The card access light turns on while the card is being accessed.






- The card may be warm just after the camera has been used.
- Do not perform the following operations during access.
 The camera may operate incorrectly or the card and recorded images may

The camera may operate incorrectly or the card and recorded images may be damaged.

- Turn off the camera.
- Remove the battery or card or disconnect the power plug.
- Subject the camera to vibration, impacts, or static electricity.

 * Removing a Card



- 1 Open the card door.
- 2 Push the card until it clicks and then pull the card out straight.
 - Check that the card access lights are off before removing the card.

Attaching a Lens

- How to Extend/Retract the Lens [When the Interchangeable Lens (S-R1840) Is Attached]: 56
- Removing a Lens: 57
- Attaching a Lens Hood: 58

 
You can attach the Leica Camera AG L-Mount standard lens to this camera.

For information about the lens that can be used (→Lenses That Can Be Used: 22)




- · Check that the camera on/off switch is set to [OFF].
- Change the lens in a location where there is not a lot of dirt and dust.
 If dirt or dust gets on the lens (→Dirt on the Image Sensor: 714)
- Change the lens while the lens cap is attached.






• When removing the body cap, rotate it while pressing the lens release button (A).

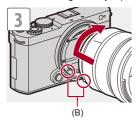

(B) Lens fitting marks

 How to Extend/Retract the Lens [When the Interchangeable Lens (S-R1840) is Attached]



- (a) Lens retracted
- (b) Ready for recording

How to Extend the Lens

Rotate the zoom ring in the direction of arrow (1) from position (A) (the lens is retracted) to position (B) (18 mm to 40 mm) to extend the lens.

• When the lens barrel is retracted, images cannot be recorded.

 
How to Retract the Lens

Rotate the zoom ring in the direction of arrow (2) from position (B) (18 mm to 40 mm) to position (A) to retract the lens.

- At the 18 mm position, you will feel a click. Keep rotating to the (A) position.
- When you are not recording images, we recommend that you retract the lens.

Removing a Lens

 While pressing the lens release button (A), rotate the lens in the direction of the arrow until it stops and then remove it.





- When you have attached a lens that does not have a communication function with this camera, after turning on the camera, a message asking for confirmation of the lens information is displayed. You can register the focal length for the lens when you select [Yes]. You can also select from amongst already registered lens information. (→[Lens Information]: 264)
- You can change the settings so that the confirmation message is not displayed:
 (→[Lens Info. Confirmation]: 553)
- Insert the lens straight in.
 Inserting this at an angle to attach it may damage the camera lens mount.
- After removing the lens, be sure to attach the body cap and the lens rear cap.

Attaching a Lens Hood

For recording against strong backlight, a lens hood can reduce the inclusion of unwanted light in images and drop in contrast resulting from the irregular reflection of light that occurs within the lens.

 
It allows you take more beautiful pictures by cutting out excess light.

When attaching the lens hood (flower shape) supplied with the interchangeable lens (S-R2060)


- Hold the lens hood by placing your fingers as shown in the figure.
- Do not hold the lens hood in such a way that it will become bent.



Align mark (C) () on the lens hood with the mark on the tip of the lens.




 - Rotate the lens hood in the direction of the arrow to align mark (D) (O) on the lens hood with the mark on the tip of the lens.
 - Attach the lens hood by rotating it until it clicks.



Removing the Lens Hood (S-R2060)

 While pressing the lens hood button (E), rotate the lens hood in the direction of the arrow and then remove it.






 The lens hood can be attached in the reverse direction when carrying the camera.


Example) S-R2060

 - 1 Align mark (D) (O) on the lens hood with the mark on the tip of the lens.
- 2 Attach the lens hood by rotating it in the direction of the arrow until it clicks.



Adjusting the Monitor Direction and Angle

At the time of purchase, the monitor is stowed in the camera body.

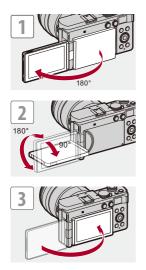



- The angles of adjustment are guides only.
- Do not apply an excessive force to the monitor. This may cause damage or malfunction.
- When not using the camera, close the monitor with the monitor surface facing in.



- You can set whether the screen flips or not depending on the facing or angle of the monitor during recording:
 - (→[Monitor Display Settings]: 539)

 
Setting the Clock (When Turning On for the First Time)

When you turn the camera on for the first time, a screen to set the time zone and clock appears.

Be sure to set these settings before use to ensure images are recorded with the correct date and time information.

1 Set the camera on/off switch to [ON].

If the language select screen is not displayed, proceed to Step 4.




- When [Please set the language] appears, press .

- Set the language.
- 4 When [Please set the time zone] appears, press (m).

Set the time zone.

- Press ◀► to select the time zone and then press ₩.
- If you are using Daylight Savings [▲ 🗱 🗓], press 🛦 . (The time will move forward by 1 hour.)

 To return to the normal time, press ▲ again.



- (A) Time difference from GMT (Greenwich Mean Time)
- 6 When [Please set the clock] appears, press .

7 Set the clock.

 
◄►: Select an item (year, month, day, hour, minute, or second).

▲ ▼: Select a value.



To set the display order and time display format

 To display the screen for setting the display order (B) and time display format (C), select [Style] by pressing ◄► and then press



8 Confirm your selection.

Press (...)



When [The clock setting has been completed.] appears, press .



- If the camera is used without setting the clock, it will be set to "0:00:00 1/1/2024".
- Clock settings are maintained for approx. 3 months using the built-in clock battery even without the battery.

(Leave the fully-charged battery in the camera for approx. 24 hours to charge the built-in battery.)



- [Time Zone] and [Clock Set] can be changed from the menu:
 - (→[Time Zone]: 568, [Clock Set]: 568)

Basic Operations

This chapter describes basic camera operations and the Intelligent Auto mode which helps you start recording immediately.

 
- How to Hold the Camera: 68
- Selecting the Recording Mode: 70
- Camera Setting Operations: 71
- Monitor Display Settings: 77
- Quick Menu: 80
- Control Panel: 82
- Menu Operation Methods: 84
- Entering Characters: 90
- Intelligent Auto Mode: 91
- Recording Using Touch Functions: 97

How to Hold the Camera

To minimize camera shake, hold the camera so that it will not move during recording.

Hold the camera with both hands, keep your arms still at your side, and stand with your feet shoulder width apart.

- Hold the camera firmly by wrapping your right hand around the camera grip.
- Support the lens from below with your left hand.
- Do not cover the AF assist light (A) or microphone (B) with your fingers or other objects.





Vertical Orientation Detection Function

This function detects when pictures were recorded with the camera held vertically orientated.

With the default settings, pictures are automatically played back vertically oriented.



• If you set [Rotate Disp.] to [OFF], pictures will be played back without being rotated. (→[Rotate Disp.]: 480)



 When the camera is tilted significantly up or down, the vertical orientation detection function may not work correctly.

 


 You can set whether or not to record the camera's vertical orientation information during video recording:

(→[Vertical Position Info (Video)]: 553)

Selecting the Recording Mode

Rotate the mode dial to select the recording mode.



ΓiΑ1

Intelligent Auto mode (→Intelligent Auto Mode: 91)

[P]

Program AE mode (→Program AE Mode: 269)

[A]

Aperture-Priority AE mode (→Aperture-Priority AE Mode: 273)

[S]

Shutter-Priority AE mode (→Shutter-Priority AE Mode: 276)

[M]

Manual Exposure mode (→Manual Exposure Mode: 279)

r₂PPM1

Creative Video mode (→Recording Modes Specifically for Video (Creative Video/S&Q): 341)

[S&Q]


Slow & Quick mode (→Slow & Quick Video: 393)

[C1]/[C2]/[C3]

Custom mode (→Custom Mode: 512)

Camera Setting Operations

When changing the camera settings, operate the camera using the following operation parts.

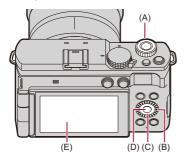


- (A) Front dial (→ Front Dial: 72)
- (B) Control dial (() () (→Control Dial: 72)
- (C) Cursor buttons (▲▼◀►) (→Cursor Buttons: 73)
- (D) [MENU/SET] button (() () (MENU/SET] Button: 73)
- (E) Touch screen (→Touch Screen: 74)

Front Dial

Rotate:

 Selects an item or numeric value.



Control Dial

Rotate:

 
Selects an item or numeric value.



Cursor Buttons

Press:

Selects an item or numeric value.



❖ [MENU/SET] Button

Press:

Confirms a setting.

• Displays the menu during recording and playback.



* Touch Screen

Operations can be performed by touching the icons, slide bars, menus, and other items displayed on the screen.

Touch

Operation of touching and then lifting your finger from the touch screen.



Drag

Operation of moving a finger while it touches the touch screen.



Pinch (widen/narrow)

Operations of widening the distance between two fingers (pinch out) and narrowing the distance between two fingers (pinch in) while they are touching the touch screen.





 If you will use a commercially available monitor protection sheet, observe the precautions for the sheet.

(Visibility and operability may be impaired depending on the type of monitor protection sheet.)



• Touch operations can be disabled:

(→[Touch Settings]: 530)

Touch Restricted Area

At the time of purchase, there is a restricted area on the touch screen that does not accept some touch operations. This is to help prevent erroneous operation of the camera while recording.

- The restriction can be lifted by setting [Touch Screen] in the [Touch Settings] menu to [ON].(→[Touch Settings]: 530)
- Even within the touch restricted area, you will still be able to perform operations with items such as touch icons in the Touch Tab.



(F) Touch restricted area (approximate)

 
Monitor Display Settings

Switching the Display Information: 77


Switching the Display Information

Press [DISP.].

• The display information is switched.



Recording Screen

 

- (A) With information
- (B) Without information
- (C) Control panel
- (D) Turned off (black)



 
• Press [5] to switch between display/hide of the level gauge.

This can also be set by using [Level Gauge]. (→[Level Gauge]: 544)



- Control panel operation (→Control Panel: 82)
- You can hide the control panel and black screen:
 - (→[Show/Hide Monitor Layout]: 545)
- The display can be changed so that live view and display information do not overlap:
 - (→[Monitor Display Settings]: 539)
- You can display the outline for the live view:
 - (→[Framing Outline]: 545)

Playback Screen




- (E) With information
- (F) Detailed information display
- ullet Pressing lacktriangle witches the display information. (ullet Detailed information display: 692)
- (G) Without information
- (H) Without blinking highlights
- This is a screen without blinking highlights display that is shown when [Blinking Highlights] of the [Custom] ([Monitor / Display (Photo)]) is set to [ON].
 In other than this screen, overexposed parts of the screen will blink. (→[Blinking Highlights]: 541)

Quick Menu

This menu enables you to quickly set functions that are frequently used during recording without calling up the menu screen. You can also change the Quick menu display method and the items to display.

1 Display the Quick menu.

 Press [Q].



2 Select a menu item.

- Rotate 🔘 .
- Selection is also possible by touching a menu item.



 
3 Select a setting item.

- Rotate
- Selection is also possible by touching a setting item.



4 Close the Quick menu.

- Press the shutter button halfway.
- You can also close the menu by pressing [Q].





• Some items cannot be set depending on the recording mode or camera settings.



• The Quick menu can be customized:

(→Quick Menu Customization: 505)

Control Panel

This screen allows you to view the current recording settings on the monitor. You can also touch the screen to change the settings. In the [\(\theta\)M] mode (Creative Video mode)/[S&Q] mode (Slow & Quick mode), the display changes to one especially for video.

 For information about the screen (→Control Panel: 684, Control Panel (Creative Video Mode/Slow & Quick Mode): 687)

1 Display the control panel.

• Press [DISP.] several times.



2 Touch the items.

Example) Changing the AF mode



3 Change the setting.

- Touch the setting item.
- Refer to the pages explaining each item for information on how to change the settings.



4 Touch [Set].



• Some items cannot be set depending on the recording mode or camera settings.

Menu Operation Methods

• [Reset]: 89

In this camera, the menu is used for setting a wide variety of functions and performing camera customizations.

 
Menu operations can be performed using the cursors, dial, or by touch.

Configuration and operation parts of the menu

The menu can be operated by pressing ◀▶ to move between menu screens.

Use the operation parts indicated below to operate the main tab, the sub tab, the page tab, and menu items without moving to the corresponding menu levels.


• You can also operate by touching the icons, menu items, and setting items.



- (A) Main tab ([Q] button)
- (B) Sub tab (🔐)
- (C) Menu item
- (D) Page tab (......)
- (E) Setting item

1 Display the menu.

 Press 🚇 .



2 Select a main tab.

- Press ▲▼ to select a main tab and then press ►.
- You can also perform the same operation by pressing [Q] to select the main tab and then pressing



3 Select a sub tab.

- Press ▲ ▼ to select a sub tab and then press ►.
- You can also perform the same operation by rotating to select the sub tab and then pressing .
- If there are page tabs (D), then after the page tabs have finished switching, the next sub tab is switched to.





4 Select a menu item.

- Press ▲▼ to select a menu item and then press ►.



5 Select a setting item and then confirm your selection.

- Press ▲ ▼ to select a setting item and then press



6 Close the menu.

- Press the shutter button halfway.
- You can also close the menu by pressing [5] several times.



Displaying Descriptions About Menu Items and Settings

If you press [DISP.] while a menu item or setting item is selected, a description about the item is displayed on the screen.



Grayed Out Menu Items

Menu items that cannot be set are displayed grayed out.

If you press while a grayed out menu item is selected, the reason why it cannot be set is displayed.

 
 The reason why a menu item cannot be set may not be displayed depending on the menu item.

 


[Reset]

Return each of the following settings to the default setting:

- · Recording settings
- Network settings (settings of [Wi-Fi Setup] and [Bluetooth])
- Setup and custom settings (other than [Wi-Fi Setup] and [Bluetooth])







- If the setup and custom settings are reset, the [Playback] menu is also reset.
- The [LUT Library] is returned to the default settings when setup and custom settings are reset. Registered LUTs are deleted.
- If the setup and custom settings are reset, [Lens Information] in [Image Stabilizer] in the [Photo] ([Others (Photo)]) menu/[Video] ([Others (Video)]) menu is also returned to the default setting.
- The folder numbers and clock settings are not reset.



 List of default settings and settings that can be reset (→List of Default Settings/ Custom Saving/Settings Available for Copying: 736)

Entering Characters

Follow the steps below when the character entry screen is displayed.

Enter characters.

- character to enter is displayed. (Repeat this)
- To repeatedly enter the same character, rotate we or to the right to move the entry position cursor.
- If you select an item and press , you can perform the following operations:
 - [A1]: Change the character type to [A] (upper case characters), [a] (lower case characters), [1] (numbers), and [&] (special characters)
 - [山]: Enter a blank
 - [Delete]: Delete a character
 - [<]: Move the entry position cursor to the left
 - -[>]: Move the entry position cursor to the right
- When entering a password, (A) shows the number of characters you have entered and the number of characters you can enter.



Complete entering.



Intelligent Auto Mode

 


The [iA] mode (Intelligent Auto mode) can record images using settings automatically selected by the camera.

The camera detects the scene to set the optimal recording settings automatically to match the subject and recording conditions.

1 Set the recording mode to [iA].

Set the mode dial. (→Selecting the Recording Mode: 70)



2 Aim the camera at the subject.

 
 When the camera detects the scene, the recording mode icon changes.

(Automatic Scene Detection)




3 Adjust the focus.


- Press the shutter button halfway.
- Once the subject is in focus, the focus icon lights.
 (When the subject is not in focus, the indication blinks.)
- [**[[**]] of the AF mode works and the AF area is displayed aligned to any humans.



4 Start recording.

  - Press the shutter button fully to take pictures.
- Press the video rec. button to record videos.







 Backlight compensation operates automatically to prevent subjects from appearing dark when there is a backlight.

Types of Automatic Scene Detection

		Taking pictures	Recording video
12	i-Portrait ^{*1}	✓	✓
74	i-Scenery	✓	✓
w.	i-Macro	✓	✓
72	i-Night Scenery	✓	
itol	i-Food	✓	
=	i-Sunset	✓	
: 4	i-Low Light		✓
iA	iA ^{*2}	√	√

- *1 Detected when [Detecting Subject] ([Type of Subject]) in the [Photo] ([Focus]) menu is set to [HUMAN].
- *2 Detected when [Detecting Subject] ([Type of Subject]) in the [Photo] ([Focus]) menu is set to [ANIMAL], [CAR] or [MOTORCYCLE].

 


- If none of the scenes are applicable, recording is with [¡Δ] (standard setting).
- Different scene types may be selected for the same subject depending on the recording conditions.
- When [Detecting Subject] ([Type of Subject]) is [ANIMAL], some subjects that are not animals may be detected as animals.

AF Mode

Changing the AF mode.

- Each press of [Each pres
- The mode can also be changed by touching the screen.
- [AF Detection Setting] is fixed to [ON].
- The [Detecting Subject] setting is maintained for any recording mode other than [iA] mode. (-Automatic Detection: 162)



[]/[]/[]/[]/[] ([Full Area AF])

Detects subjects for recording and focuses.



• You can switch the subject to be focused by touching one of the white AF areas.

[「[:::]] ([Tracking])

When the focus mode is set to [AFC], the AF area follows the movement of the subject, maintaining focusing.



Aim the AF area over the subject and then press and hold the shutter button halfway.

• The camera will track the subject while the shutter button is pressed halfway or fully.



• For information about AF modes (→Automatic Detection: 162, [Tracking]: 167)

Recording Using Touch Functions

- Touch AF/Touch Shutter: 97
- Touch AE: 100

Touch AF/Touch Shutter



Touch functions allow you to focus on the point that you touch, release the shutter, etc.



With the default settings, the Touch Tab is not displayed.
 Set [Touch Tab] to [ON] in [Touch Settings] in the [Custom] ([Operation]) menu.
 (>[Touch Settings]: 530)

1 Touch [<].

2 Touch the icon.

• The icon switches each time you touch it.



⊾ু (Touch AF)

Focus on the touched position.

७_ (Touch Shutter)

Record with focus on the touched position.

►× (OFF)

3 (When set to anything other than OFF) Touch the subject.





• When the Touch Shutter fails, the AF area first turns red and then disappears.



- For information about operations to move the AF area (→AF Area Operations: 177)
- It is also possible to optimize the focus and brightness on the touched position:
 (→Focus on and Adjust Brightness for the Touched Position ([AF+AE]): 181)

Touch AE



iA P A S M ≇M S&Q

This function adjusts the brightness according to a touched position. When a subject's face appears dark, you can make the screen brighter to match the face



- With the default settings, the Touch Tab is not displayed.
 Set [Touch Tab] to [ON] in [Touch Settings] in the [Custom] ([Operation]) menu.
 (→[Touch Settings]: 530)
- **1** Touch [**<**].
- 2 Touch [⋅ 1.
 - The Touch AE settings screen appears.



Touch the subject to which you wish to adjust the brightness.

 To return the position to which to adjust the brightness to the center, touch [Reset].



4 Touch [Set].

How to Disable Touch AE

Touch [FAE].



- When the following function is being used, Touch AE is not available:
 - [Live Cropping]



- You can also adjust both the focus and brightness to those of the position you touch. (At this time, Touch AE is not available):
 - (→Focus on and Adjust Brightness for the Touched Position ([AF+AE]): 181)

Taking Pictures

These are the basic operations and settings for taking pictures.

• Basic Picture Operations: 103

[Aspect Ratio]: 106[Picture Size]: 108

• [Picture Quality]: 110

Basic Picture Operations

 


- Select the recording mode ([iA]/[P]/[A]/[S]/[M]).
 - Set the mode dial. (→Selecting the Recording Mode: 70)




2 Adjust the focus.

• Press the shutter button halfway (press it gently).




 - The aperture value (A) and shutter speed (B) are displayed.
 (When the correct exposure cannot be obtained, the indications blink in red.)
- Once the subject is in focus, the focus icon (C) lights.
 (When the subject is not in focus, the indication blinks.)
- You can also perform the same operation by pressing [AF ON].



3 Start recording.

 Press the shutter button fully (press it further).





 Recorded pictures can be displayed automatically by setting [Auto Review] of the [Custom] ([Monitor / Display (Photo)]) menu. You can also change the picture display duration to your preferred setting. (>[Auto Review]: 535)



 With the default settings, you cannot take a picture until the subject is brought into focus.

If you set [Focus/Shutter Priority] in the [Custom] ([Focus/Shutter]) menu to [BALANCE] or [RELEASE], you will be able to take a picture even when the subject is not in focus. (>) [Focus/Shutter Priority]: 524)

[Aspect Ratio]



You can select the image aspect ratio.





[4:3]

Aspect ratio of a 4:3 monitor

[3:2]

Aspect ratio of a standard film camera

[16:9]

Aspect ratio of a 16:9 TV

[1:1]

Square aspect ratio

[65:24]

65:24 panoramic aspect ratio

[2:1]

2:1 panoramic aspect ratio



- [65:24] and [2:1] aspect ratios are not available when using the following functions:
 - [iA] mode
 - Taking burst pictures
 - [Time Lapse Shot]
 - [Stop Motion Animation]
 - High Resolution Mode
 - [Filter Settings]
- When using APS-C lenses, [65:24] and [2:1] are not available.



 \bullet A frame for trimming (cropping) can be displayed on the recording screen:

(→[Frame Marker]: 388)

[Picture Size]



Sets the picture's image size. The image size varies depending on the [Aspect Ratio] or the lens used.

When an APS-C lens is used, the image area switches to the one for APS-C, thereby narrowing the angle of view.





[Aspect		[Pictur	e Size]	
Ratio]	When using	full-frame lenses	When usin	g APS-C lenses
	[L] (21.5M)	5328×4000	[L] (9.5M)	3536×2656
[4:2]	[M] (10.5M)	3792×2848	[M] (5M)	2560×1920
[4:3]	[S] (5.5M)	2688×2016	[S] (2.5M)	1840×1376
	[XS] (2M)	1712×1280	[XS] (2M)	1712×1280
	[L] (24M)	6000×4000	[L] (10.5M)	3984×2656
[2:2]	[M] (12M)	4272×2848	[M] (5.5M)	2880×1920
[3:2]	[S] (6M)	3024×2016	[S] (3M)	2064×1376
	[XS] (2.5M)	1920×1280	[XS] (2.5M)	1920×1280
	[L] (20M)	6000×3368	[L] (9M)	3984×2240
[46.0]	[M] (10M)	4272×2400	[M] (4.5M)	2880×1624
[16:9]	[S] (5M)	3024×1704	[S] (2.5M)	2064×1160
	[XS] (2M)	1920×1080	[XS] (2M)	1920×1080
	[L] (16M)	4000×4000	[L] (7M)	2656×2656
[4-4]	[M] (8M)	2848×2848	[M] (3.5M)	1920×1920
[1:1]	[S] (4M)	2016×2016	[S] (2M)	1376×1376
	[XS] (1.5M)	1280×1280	[XS] (1.5M)	1280×1280
[65:24]	[L] (13M)	6000×2208		
[2:1]	[L] (18M)	6000×3000		

- When [Hybrid Zoom(Photo)] is set, [Hy] is displayed on the image size.
- When [Crop Zoom(Photo)] is set, [Cr] is displayed on the image size.

 


- When the following functions are being used, [Picture Size] is not available:
 - [RAW] ([Picture Quality])
 - High Resolution mode

[Picture Quality]



Set the compression rate used for storing pictures.





[FINE]

JPEG images that give priority to image quality.

File format: JPEG

[STD.]

JPEG images of standard image quality.

This is useful for increasing the number of recordable pictures without changing the picture size.

File format: JPFG

[RAW+FINE]/[RAW+STD.]

This records RAW and JPEG images ([FINE] or [STD.]) simultaneously.

File format: RAW+,IPFG

[RAW]

This records RAW images.

File format: RAW



Note on RAW

RAW format refers to a data format of images that have not been processed on the camera.

Playback and editing of RAW images require the camera or the dedicated software.

The color depth of RAW images recorded with this camera is 12 bits.

- You can process RAW images on the camera. (→[RAW Processing]: 465)
- Use software ("SILKYPIX Developer Studio" by Ichikawa Soft Laboratory) to process and edit RAW files on a PC. (→SILKYPIX Developer Studio SE: 666)



- RAW images are always recorded in the [L] size of the [3:2] aspect ratio.
- When you delete an image recorded with [RAW+FINE] or [RAW+STD.] on the camera, both the RAW and JPEG images will be deleted simultaneously.
- When the following function is being used, [Picture Quality] is not available:
- High Resolution mode



 You can assign the function that records a RAW image and a JPEG image simultaneously once only to an Fn button:

(→[1 Shot RAW+JPG]: 493)

• Selects a Color Space setting from [sRGB] or [AdobeRGB]:

(→[Color Space]: 522)

Recording Videos

These are the basic operations and settings for recording videos.

- Please also refer to the following chapters for more detailed information about recording videos:
 - Video Settings: 340
 - Special Video Recording: 392
 - HDMI Output (Video): 434
- Basic Video Operations: 113
- [System Frequency]: 120
- [Rec. File Format]: 122
- [Rec Quality]: 123
- [Image Area of Video]: 136

Basic Video Operations



It is possible to record video with a maximum resolution of 6K (5952×3968) on this camera.

It also supports switching of the system frequency and the [MP4(Lite)]/ [MP4]/[MOV] recording file formats.

[£M] mode (Creative Video mode) and [S&Q] mode (Slow & Quick mode) are recording modes specifically for video.

In the [S&Q] mode, you can record smooth slow motion video and quick motion video by changing the frame rate.

 
1 Select the recording mode.

Set the mode dial. (→Selecting the Recording Mode: 70)



2 Start recording.

- Press the video rec. button (A).
- Release the video rec. button right after you press it.




3 Stop recording.

• Press the video rec. button (A) again.

Screen Displays While Video Recording

The live view angle of view changes to the angle of view for video recording, and video recording time (B) and elapsed recording time (C) are displayed.

 - "h" is an abbreviation for hour, "m" for minute and "s" for second.
- The recording state indication (D) and card access indication (E) turn red while videos are being recorded.





 If maintaining focus on the subject is difficult during video recording with AF, press the shutter button halfway to re-adjust the focus.

* Exposure Control While Video Recording

Videos will be recorded using the aperture value, shutter speed, ISO sensitivity, and Dual Native ISO settings below.

Recording mode	Aperture value/shutter speed/ISO sensitivity/Dual Native ISO setting
[iA]	The camera automatically makes the settings to suit the scene. (→Types of Automatic Scene Detection: 94)
[P]/[A]/[S]/[M]	The settings vary depending on the [Auto Exposure in P/A/S/M] in the [Custom] ([Image Quality]) menu. The default setting is [ON]. (→[Auto Exposure in P/A/S/M]: 522) [ON]: Records with values set automatically by the camera. [OFF]: Records with the values set in the [P]/[A]/[S]/[M] modes.
[∰M]/[S&Q]	Records with manually set values.

Size Interval for Dividing Files

A new file will be created to continue recording if the file size exceeds the following conditions.

[Rec. File Format]	[Rec Quality]	Card used	File division File size
	[FHD]	(A)	4 GB
[MP4(Lite)]/	[FRD]	(B)	4 95
[MP4]	[4K]	(A)	96 GB
	[#K]	(B)	4 GB
[MOV]	All	(A)	192 GB
[INIOV]	All	(B)	4 GB

⁽A) Using an SDXC memory card

⁽B) Using an SDHC memory card



- If an operation such as a zoom or button operation is performed during video recording, that operation sound may be recorded.
- The lens operation sound (AF and image stabilizer) may be recorded to video.
- If the operation sound of pressing the video rec. button to end recording bothers you, try the following:
 - Record the video about 3 seconds longer, and then divide the last part of the video using [Video Divide] in the [Playback] ([Edit Image]) menu.
- Depending on the type of card, the card access indication may appear for a while after video recording. This is not a malfunction.
- Even when playback is performed on a supported device, situations may occur
 where image or sound quality is poor, recording information is not displayed
 correctly, or playback is not possible, for example.

If you experience any of these, play them back on the camera.

- Video recording is not possible while you are using the following functions:
 - [Time Lapse Shot]
- [Stop Motion Animation]
- For information about the high temperature display

When the temperature of the camera rises, [] appears blinking on the screen. If you continue to use the camera, a message indicating that the camera cannot be used is displayed on the screen and some functions, such as recording and HDMI output, will be stopped. Wait for the camera to cool down and for the message indicating that the camera can be used again. When the message indicating that it can be used again is displayed, turn the camera off then on again.



- You can switch the recording screen display to suit video recording just as with the [

 ∰M] mode:
 - (→[Video-Priority Display]: 549)
- You can display a red frame on the recording screen that indicates that video is being recorded:
 - (→[Red REC Frame Indicator]: 549)

[System Frequency]





This changes the system frequency of videos that are recorded and played back with the camera.

The default setting is for the system frequency to be set to the TV broadcast system for the region where the camera was purchased.





[59.94Hz (NTSC)]

System frequency for regions using the NTSC broadcasting system

[50.00Hz (PAL)]

System frequency for regions using the PAL broadcasting system

[24.00Hz (CINEMA)]

System frequency for producing cinema film



- After changing the setting, turn the camera off and on.
- If you record using a system frequency that differs from the broadcasting system of your region, it may not be possible for you to properly play back videos on your TV.

We recommend using the setting as it was at the time of purchase if you are unsure about broadcasting systems or if you will not be involved in producing cinema film.

- After changing the setting, it is recommended to insert another card and format it with this camera.
 - Make the [System Frequency] setting the same for when you are recording and playing back.

[Rec. File Format]





Sets the recording file format of videos to be recorded.





[MP4(Lite)]

This MP4 file format is suitable for editing with smartphone apps.

[MP4]

This file format is suitable for playback on PCs.

[MOV]

This file format is suitable for image editing.

[Rec Quality]




Sets the image quality of videos to be recorded.

The image qualities you can select depend on the recording mode,

[System Frequency], and [Rec. File Format] settings.

The [Image Area of Video] setting items you can select depend on the [Rec Quality] settings.

 [Rec Quality] settings can also be made using [Filtering] (→[Filtering]: 133) to display only items that meet your conditions and [add to list] (→[add to list]: 134) to register recording qualities you use often.



• The above shows some of the recording qualities available.





- To record video with a bit rate of 72 Mbps or more, you require an SD card with the corresponding Speed Class.
- For information about the cards that can be used (→SD Cards That Can Be Used with This Camera: 24)

* [Rec. File Format]: [MP4(Lite)]

- YUV, Bit value, Image compression: 4:2:0, 10 bit, Long GOP
- Audio format: AAC (2ch)
- (A) Recording frame rate
- (B) Bit rate (Mbps)
- (C) Video compression format (HEVC: H.265/HEVC)

[System Frequency]: [59.94Hz (NTSC)]								
[Image Area of Vid					Aspect			
[Rec Quality]	FULL	APS-C	PIXEL	Resolution	ratio	(A)	(B)	(C)
[3.8K/10bit/50M/30p]	✓	✓	✓	3840×2560	3:2	29.97p	50	HEVC

[System Frequency]: [50.00Hz (PAL)]								
ID Ovelled	[Image Area of Video]							(0)
[Rec Quality]	FULL	APS-C	PIXEL PIXEL	Resolution	ratio	(A)	(B)	(C)
[3.8K/10bit/50M/25p]	✓	✓	✓	3840×2560	3:2	25.00p	50	HEVC

* [Rec. File Format]: [MP4]

- YUV, Bit value, Image compression:
 - [10bit] recording quality: 4:2:0, 10 bit, Long GOP
 - [8bit] recording quality: 4:2:0, 8 bit, Long GOP
- Audio format: AAC (2ch)
- (A) Recording frame rate
- (B) Bit rate (Mbps)
- (C) Video compression format (HEVC: H.265/HEVC, AVC: H.264/MPEG-4 AVC)

	[Sys	tem Fre	quency]: [59.94Hz	(NTSC)]		
	[lmage	Area of	Video]		Aspect			
[Rec Quality]	FULL	APS-C	PIXEL PIXEL	Resolution	ratio	(A)	(B)	(C)
[4K/10bit/100M/60p]		✓	✓	3840×2160	16:9	59.94p	100	HEVC
[4K/10bit/72M/30p]	✓	✓	✓	3840×2160	16:9	29.97p	72	HEVC
[4K/8bit/100M/30p]	✓	✓	✓	3840×2160	16:9	29.97p	100	AVC
[4K/10bit/72M/24p]	✓	✓	✓	3840×2160	16:9	23.98p	72	HEVC
[4K/8bit/100M/24p]	✓	✓	✓	3840×2160	16:9	23.98p	100	AVC
[FHD/8bit/28M/60p]	✓	✓	✓	1920×1080	16:9	59.94p	28	AVC
[FHD/8bit/20M/30p]	✓	✓	✓	1920×1080	16:9	29.97p	20	AVC
[FHD/8bit/24M/24p]	✓	✓	✓	1920×1080	16:9	23.98p	24	AVC

	[System Frequency]: [50.00Hz (PAL)]								
	[Image	Area of	Video]		Aspect		(5)	(C)	
[Rec Quality]	FULL	APS-C	PIXEL PIXEL	Resolution	ratio	(A)	(B)		
[4K/10bit/100M/50p]		✓	✓	3840×2160	16:9	50.00p	100	HEVC	
[4K/10bit/72M/25p]	✓	✓	✓	3840×2160	16:9	25.00p	72	HEVC	
[4K/8bit/100M/25p]	√	✓	√	3840×2160	16:9	25.00p	100	AVC	
[FHD/8bit/28M/50p]	√	✓	√	1920×1080	16:9	50.00p	28	AVC	
[FHD/8bit/20M/25p]	✓	✓	✓	1920×1080	16:9	25.00p	20	AVC	

* [Rec. File Format]: [MOV]

- YUV, Bit value, Image compression:
 - [422/10-L] recording quality: 4:2:2, 10 bit, Long GOP
 - [420/10-L] recording quality: 4:2:0, 10 bit, Long GOP
- Audio format: LPCM (2ch)
- M: Only available in Creative Video mode.
- (A) Recording frame rate
- (B) Bit rate (Mbps)
- (C) Video compression format (HEVC: H.265/HEVC, AVC: H.264/MPEG-4 AVC)

	[S	ystem	Frequ	ency]	[59.94Hz	(NTSC)	l		
[Rec Quality]	ı::::М	-	age Are Video]	a of	Resolution	Aspect	(A)	(B)	(C)
		FULL	APS-C	PIXEL PIXEL		ratio			
[6K/30p/420/10-L]	✓	✓			5952×3968	3:2	29.97p	200	HEVC
[6K/24p/420/10-L]	/	V			5952×3968	3:2	23.98p	200	HEVC
[6K/30p/420/10-L]	/	V			5952×3136	17:9	29.97p	200	HEVC
[6K/24p/420/10-L]	✓	✓			5952×3136	17:9	23.98p	200	HEVC
[5.9K/30p/420/10-L]	V	V			5888×3312	16:9	29.97p	200	HEVC
[5.9K/24p/420/10-L]	✓	✓			5888×3312	16:9	23.98p	200	HEVC
[3.3K/48p/422/10-L]			✓	✓	3328×2496	4:3	47.95p	200	AVC
[3.3K/48p/420/10-L]			✓	✓	3328×2496	4:3	47.95p	200	HEVC
[3.3K/30p/422/10-L]			✓	✓	3328×2496	4:3	29.97p	150	AVC
[3.3K/30p/420/10-L]			✓	✓	3328×2496	4:3	29.97p	150	HEVC
[3.3K/24p/422/10-L]			✓	✓	3328×2496	4:3	23.98p	150	AVC
[3.3K/24p/420/10-L]			✓	✓	3328×2496	4:3	23.98p	150	HEVC

[C4K/60p/422/10-L]			✓	✓	4096×2160	17:9	59.94p	200	AVC
[C4K/60p/420/10-L]			✓	✓	4096×2160	17:9	59.94p	200	HEVC
[C4K/48p/422/10-L]			✓	✓	4096×2160	17:9	47.95p	200	AVC
[C4K/48p/420/10-L]			✓	V	4096×2160	17:9	47.95p	200	HEVC
[C4K/30p/422/10-L]		✓	V	~	4096×2160	17:9	29.97p	150	AVC
[C4K/30p/420/10-L]		✓	V	~	4096×2160	17:9	29.97p	150	HEVC
[C4K/24p/422/10-L]		✓	✓	✓	4096×2160	17:9	23.98p	150	AVC
[C4K/24p/420/10-L]		✓	V	~	4096×2160	17:9	23.98p	150	HEVC
[4K/60p/422/10-L]			V	~	3840×2160	16:9	59.94p	200	AVC
[4K/60p/420/10-L]			✓	✓	3840×2160	16:9	59.94p	200	HEVC
[4K/48p/422/10-L]			V	~	3840×2160	16:9	47.95p	200	AVC
[4K/48p/420/10-L]			V	~	3840×2160	16:9	47.95p	200	HEVC
[4K/30p/422/10-L]		✓	V	✓	3840×2160	16:9	29.97p	150	AVC
[4K/30p/420/10-L]		✓	V	~	3840×2160	16:9	29.97p	150	HEVC
[4K/24p/422/10-L]		✓	V	✓	3840×2160	16:9	23.98p	150	AVC
[4K/24p/420/10-L]		✓	V	~	3840×2160	16:9	23.98p	150	HEVC
[FHD/120p/422/10-L]	✓	✓	✓		1920×1080	16:9	119.88p	150	AVC
[FHD/120p/420/10-L]	✓	√	V		1920×1080	16:9	119.88p	150	HEVC
[FHD/60p/422/10-L]		✓	V	~	1920×1080	16:9	59.94p	100	AVC
[FHD/60p/420/10-L]		✓	V	~	1920×1080	16:9	59.94p	100	HEVC
[FHD/48p/422/10-L]		✓	✓	✓	1920×1080	16:9	47.95p	100	AVC
[FHD/48p/420/10-L]		✓	V	~	1920×1080	16:9	47.95p	100	HEVC
[FHD/30p/422/10-L]		✓	✓	✓	1920×1080	16:9	29.97p	100	AVC
[FHD/30p/420/10-L]		✓	V	✓	1920×1080	16:9	29.97p	100	HEVC
[FHD/24p/422/10-L]		√	✓	V	1920×1080	16:9	23.98p	100	AVC
[FHD/24p/420/10-L]		√	✓	1	1920×1080	16:9	23.98p	100	HEVC

	[8	ysten	ı Frequ	uency]: [50.00Hz	(PAL)]			
[Rec Quality]	₽M	[lma	ge Are Video]		Resolution	Aspect ratio	(A)	(B)	(C)
		FULL	APS-C	PIXEL		Tallo			
[6K/25p/420/10-L]	V	✓			5952×3968	3:2	25.00p	200	HEVC
[6K/25p/420/10-L]	V	√			5952×3136	17:9	25.00p	200	HEVC
[5.9K/25p/420/10-L]	✓	✓			5888×3312	16:9	25.00p	200	HEVC
[3.3K/50p/422/10-L]			✓	✓	3328×2496	4:3	50.00p	200	AVC
[3.3K/50p/420/10-L]			✓	√	3328×2496	4:3	50.00p	200	HEVC
[3.3K/25p/422/10-L]			✓	✓	3328×2496	4:3	25.00p	150	AVC
[3.3K/25p/420/10-L]			✓	✓	3328×2496	4:3	25.00p	150	HEVC
[C4K/50p/422/10-L]			✓	√	4096×2160	17:9	50.00p	200	AVC
[C4K/50p/420/10-L]			✓	✓	4096×2160	17:9	50.00p	200	HEVC
[C4K/25p/422/10-L]		✓	✓	✓	4096×2160	17:9	25.00p	150	AVC
[C4K/25p/420/10-L]		√	✓	✓	4096×2160	17:9	25.00p	150	HEVC
[4K/50p/422/10-L]			✓	✓	3840×2160	16:9	50.00p	200	AVC
[4K/50p/420/10-L]			✓	✓	3840×2160	16:9	50.00p	200	HEVC
[4K/25p/422/10-L]		✓	✓	√	3840×2160	16:9	25.00p	150	AVC
[4K/25p/420/10-L]		✓	✓	✓	3840×2160	16:9	25.00p	150	HEVC
[FHD/100p/422/10-L]	✓	✓	✓		1920×1080	16:9	100.00p	150	AVC
[FHD/100p/420/10-L]	✓	✓	V		1920×1080	16:9	100.00p	150	HEVC
[FHD/50p/422/10-L]		✓	✓	V	1920×1080	16:9	50.00p	100	AVC
[FHD/50p/420/10-L]		✓	✓	V	1920×1080	16:9	50.00p	100	HEVC
[FHD/25p/422/10-L]		√	✓	✓	1920×1080	16:9	25.00p	100	AVC
[FHD/25p/420/10-L]		✓	✓	√	1920×1080	16:9	25.00p	100	HEVC

	[Sys	stem F	reque	ncy]:	[24.00Hz (0	CINEMA	·)]		
[Rec Quality]	₽BM	-	age Are Video]		Resolution	Aspect	(A)	(B)	(C)
			APS-C	PIXEL PIXEL		ratio			
[6K/24p/420/10-L]	V	✓			5952×3968	3:2	24.00p	200	HEVC
[6K/24p/420/10-L]	V	V			5952×3136	17:9	24.00p	200	HEVC
[5.9K/24p/420/10-L]	✓	~			5888×3312	16:9	24.00p	200	HEVC
[3.3K/48p/422/10-L]			✓	✓	3328×2496	4:3	48.00p	200	AVC
[3.3K/48p/420/10-L]			✓	√	3328×2496	4:3	48.00p	200	HEVC
[3.3K/24p/422/10-L]			✓	V	3328×2496	4:3	24.00p	150	AVC
[3.3K/24p/420/10-L]			✓	✓	3328×2496	4:3	24.00p	150	HEVC
[C4K/48p/422/10-L]			✓	√	4096×2160	17:9	48.00p	200	AVC
[C4K/48p/420/10-L]			✓	✓	4096×2160	17:9	48.00p	200	HEVC
[C4K/24p/422/10-L]		~	✓	✓	4096×2160	17:9	24.00p	150	AVC
[C4K/24p/420/10-L]		V	✓	√	4096×2160	17:9	24.00p	150	HEVC
[4K/48p/422/10-L]			✓	✓	3840×2160	16:9	48.00p	200	AVC
[4K/48p/420/10-L]			✓	✓	3840×2160	16:9	48.00p	200	HEVC
[4K/24p/422/10-L]		V	✓	√	3840×2160	16:9	24.00p	150	AVC
[4K/24p/420/10-L]		~	✓	✓	3840×2160	16:9	24.00p	150	HEVC
[FHD/48p/422/10-L]		~	✓	√	1920×1080	16:9	48.00p	100	AVC
[FHD/48p/420/10-L]		V	✓	√	1920×1080	16:9	48.00p	100	HEVC
[FHD/24p/422/10-L]		~	✓	✓	1920×1080	16:9	24.00p	100	AVC
[FHD/24p/420/10-L]		~	✓	✓	1920×1080	16:9	24.00p	100	HEVC

- In this document, videos are indicated as follows according to their resolution:
 - 6K (5952×3968) video: **6K video**
 - 5.9K (5888×3312) video: 5.9K video
 3.8K (3840×2560) video: 3.8K video
 - 3.3K (3328×2496) video: 3.3K video
 - C4K (4096×2160) video: **C4K video**
 - 4K (3840×2160) video: 4K video
 - Full High Definition (1920×1080) video: FHD video



- Since the camera employs the VBR recording format, the bit rate is changed automatically depending on the subject to record. As a result, video recording time is shortened when a fast-moving subject is recorded.
- 4:2:2, 10-bit videos are intended for editing on a video production PC.
- [MP4(Lite)] videos recorded using this camera cannot be played back on Panasonic digital cameras released before April 2024.



 You can register a combination of [System Frequency], [Rec. File Format], [Image Area of Video], and [Rec Quality] to My List. (→[add to list]: 134)

Continuous Recording Time for Video

The amount of time you can record in one recording depends on the [Rec Quality].

When the recording time in one recording exceeds the following, recording will stop:

[Rec Quality]	Continuous recording time
6K video, 5.9K video	10 minutes
3.8K video, 3.3K video, C4K video, 4K video	15 minutes
FHD video	20 minutes

During video recording, recording may be stopped to protect the camera if the internal temperature gets too high, even if it has not reached to continuous recording time.

- · Conditions that cause overheating
 - Use in places with high ambient temperatures
 - Repeatedly make video recordings
 - Leave the camera in the ON state for extended periods and then trying to make video recordings, etc.

Restarting Video Recording After Stopping Due to Temperature Increase in the Camera

If video recording stops due to temperature increase in the camera, the temperature in the camera needs to be lowered before video recording can be started again.

- We recommend turning the camera off to lower the temperature in the camera.
- The continuous recording time for video after restarting depends on the standby time (the amount of time the camera was off for).

Filterinal

When [Rec. File Format] is set to [MOV], you can specify items such as frame rate, number of pixels (resolution), and compression format (YUV, bit value, image compression), and just display recording qualities that meet those conditions.

1 In the [Rec Quality] setting screen, press [DISP.].



- 2
- Settings: [Frame Rate]/[Resolution]/[Codec]
 - Press ▲ ▼ to select the filtering conditions and then press ເພ
- 4 Press [DISP.] to confirm the setting.
 - You are returned to the [Rec Quality] setting screen.

Clearing the filtering conditions

Select [ANY] in Step 3.

- The filtering conditions are also cleared when you do the following:
 - Change the [Rec. File Format]
 - Change the [System Frequency]
 - Select a recording quality from [Rec Quality (My List)]



3

 When you change recording quality using a filter, the current filtering conditions are stored.

[add to list]

Select a recording quality and register it in My List. The recording quality you register can be set in [Rec Quality (My List)].

In the [Rec Quality] setting screen, press [Q].

- The following settings are also registered at the same time:
 - [System Frequency]
 - [Rec. File Format]
 - [Image Area of Video]



Setting or deleting in My List

 
- 1 Select [Rec Quality (My List)].
 - (Rec Quality (My List)] → [Rec Quality (My List)]
- 2 Press ▲ ▼ to select a setting item and then press
 • You cannot select setting items that have different system frequencies.
 - To delete from My List, select the item and press [Q].

Setting from the control panel

It is possible to display the My List of recording qualities from the control panel in $\[\[\] \] \] \[\] \] \]$ mode or when [Video-Priority Display] is set.

Touch the recording quality item.

- When already registered in My List, the [Rec Quality (My List)] setting screen is displayed.
 - When not yet registered, the [Rec Quality] setting screen is displayed.
- [Rec Quality (My List)] and [Rec Quality] switch each time you press the [DISP.] button.
- The next time the setting screen is displayed, the screen last used is displayed.





• Up to 12 types of recording quality can be registered.

[Image Area of Video]





Set the image area during video recording. The angle of view differs depending on the image area. Narrowing the image area allows you to achieve a telescopic effect without image deterioration.





[FULL]

Records using a range corresponding to the full-frame lens image circle.

[APS-C]


Records using a range corresponding to the APS-C lens image circle.


[PIXEL/PIXEL]

Records with one pixel on the sensor, which is equal to one pixel of the video. Records a range corresponding to the resolution range in [Rec Quality]. (→[Rec Quality]: 123)

- The [Image Area of Video] settings you can select differ depending on the [Rec Quality] setting. (→ [Rec Quality]: 123)
- It is not possible to set to [FULL] in the following case.
 - When using APS-C lenses

 Image area (Ex.: FHD video)



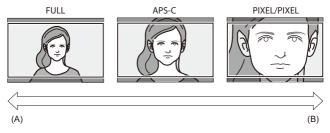

- (A) Angle of view: Wide/Telescopic effect: Not possible
- (B) Angle of view: Narrow/Telescopic effect: Possible

Focus / Zoom

Smoother focusing is possible by selecting the focus mode and AF mode most suited to the recording conditions and the subject.

• This camera supports phase detection AF and contrast AF.

• Selecting the Focus Mode: 139

• Using AF: 141

Selecting the AF Mode: 159AF Area Operations: 177

Record Using MF: 183

Recording with Zoom: 190

Selecting the Focus Mode





Select the focusing method (focus mode) to match subject movement. It is also possible to customize the AF tracking features with [AFC]. (→[AF

Set the focus mode.

Custom Setting(Photo)]: 148)



[AFS]

This is suitable for recording still subjects.

When the shutter button is pressed halfway, the camera focuses once.

The focus stays locked while the shutter button is pressed halfway.

[AFC]

This is suitable for recording moving subjects.

While the shutter button is pressed halfway, the focus is constantly adjusted according to the movement of the subject.

 This predicts the movement of the subject, maintaining focusing. (Movement prediction)

[MF]

Manual focusing. Use this when you want to fix the focus or avoid activating AF. (→Record Using MF: 183)



- In the following cases, [AFC] works the same as [AFS] when the shutter button is pressed halfway:
 - [β^MM] mode
 - [S&Q] mode
 - During video recording
 - In low light situations
- When the following functions are being used, [AFC] switches to [AFS]:
 - High Resolution mode
 - [65:24]/[2:1] ([Aspect Ratio])

Using AF

- [AF-Point Scope]: 146
- [AF Custom Setting(Photo)]: 148
- [Focus Limiter]: 151
- [AF Assist Light]: 153
- [Focus Frame Moving Speed]: 154
- [AF Micro Adjustment]: 155



iA P A S M ≇M S&Q

AF (Auto Focus) refers to automatic focusing.

 
Select the focus mode and the AF mode appropriate for the subject and scene.

- 1 Set the focus mode to [AFS] or [AFC].
- Select the AF mode.

 - In [iA] mode, each press of [] switches between [] and [¹/₁]. (→AF Mode: 95)

3 Press the shutter button halfway.

• The AF operates.



	Focus	
	In focus	Not in focus
Focus icon (A)	Lights	Blinking
AF area (B)	Green	Red
AF beep	Two beeps	_

Low illumination AF

- · Achieving focus may take more time than usual.

Starlight AF

 If the camera detects stars in the night sky after determining low illumination AF, then Starlight AF will be activated.

When focus is achieved, the focus icon will display [$^{\text{STAR}}_{lack}$], and the AF area will be displayed on the area in focus.

· Edges of the screen cannot detect Starlight AF.

(AF ON) button

You can also activate AF by pressing [AF ON].





Subjects and recording conditions that make focusing difficult with AF mode

- Fast-moving subjects
- Extremely bright subjects
- Subjects without contrast
- Subjects recorded through windows
- Subjects near shiny objects
- Subjects in very dark locations
- When recording subjects both distant and near



- When the following operations are performed while recording with [AFC], it may take some time for the camera to focus:
 - When zooming from the wide-angle end to the telephoto end
 - When the subject is suddenly changed from one far away to one close by
- If using the zoom after achieving focus, the focus may be erroneous. In that case, re-adjust the focus.



• You can restrict the range for AF to work:

```
(→[Focus Limiter]: 151)
```

• When camera shake reduces, it is possible to focus automatically:

```
(→[Quick AF]: 528)
```

 You can change the settings so that AF does not function when the shutter button is pressed halfway:

```
(→[Half-Press Shutter]: 528)
```

• The AF beep volume and sound can be changed:

```
(→[Beep]: 561)
```

 You can assign the function that makes AF work so that it prioritizes subjects close by to an Fn button.

This function is useful when the camera mistakenly focuses on the background:

```
(→[AF-ON: Near Shift]: 494)
```

 You can assign the function that makes AF work so that it prioritizes subjects far away to an Fn button.

This function is useful when taking pictures through fences or nets:

```
(→[AF-ON: Far Shift]: 494)
```

[AF-Point Scope]







This magnifies the focus point when the AF mode is [3], [1], or [1]. (In other AF modes, the center of the screen is magnified.)

You can check focus and observe an enlarged subject as with a telephoto lens

Register [AF-Point Scope] to the Fn button. (→Fn Buttons: 488)

2 Enlarge display.

- Press the Fn button set in Step 1.
- While pressing the button, the focus point is enlarged.



- When the screen is enlarged, pressing the shutter button halfway re-acquires focus in a small central AF area.
- When the screen is enlarged, turn 🛎 or 🚳 to adjust the magnification.



- When the screen is enlarged, [AFC] changes to [AFS].
- When the following function is being used, AF-Point Scope does not work:
 - Video recording/SH burst recording



• You can change the display method of the magnified screen:

(→[AF-Point Scope Setting]: 527)

[AF Custom Setting(Photo)]

 


You can select features of AF operation when taking pictures with [AFC] that are appropriate for the subject and scene.

Each of these features can be further customized.

1 Set the focus mode to [AFC].

2 Set [AF Custom Setting(Photo)].





[Set 1]

Basic general-purpose setting.

[Set 2]

Suggested for situations where the subject moves at a constant speed in one direction.

[Set 3]

Suggested when the subject moves randomly, and other objects may be in the scene.

[Set 4]

Suggested for situations where the speed of the subject changes significantly.

Adjusting AF Custom Settings

- Press ◀► to select the AF Custom setting type.
- 2 Press ▲▼ to select items and press ◀► to adjust.
 - A description of the item is displayed on the screen when you press [DISP.].
 - To reset settings to the default, press [Q].
- 3 Press 😱 .

	Sets the tracking sensitivity for the movement of subjects.		
	[+]	When the distance to the subject changes drastically,	
		the camera re-adjusts the focus immediately. You can	
		bring different subjects into focus one after another.	
[AF Sensitivity]	[-]	When the distance to the subject changes drastically,	
		the camera waits for a short period of time before	
		re-adjusting the focus. This allows you to prevent the	
		focus from being accidentally re-adjusted when, for	
		example, an object moves across the image.	
	Sets the sensitivity for switching the AF area to match subject movement.		
	(When AF mode is set to Full Area AF)		
[AF Area		When the subject moves out of the AF area, the camera	
Switching	[+]	immediately switches the AF area to keep the subject in	
Sensitivity]		focus.	
		The camera switches the AF area at a gradual pace.	
	[-]	Effects caused by a slight movement of the subject or by	
		obstacles in front of the camera will be minimized.	

[Moving Subject Prediction]	Sets the tracking method for changes in the speed of subject				
	movement.				
	At larger setting values, the camera tries to maintain focus by				
	responding even to sudden movements of the subject.				
	However, the camera becomes more sensitive to slight				
	movements of the subject, so focusing may become unstable.				
	[0]	This is suited to a subject with minimal changes in			
		speed.			
	[+1]	Th			
	[+2]	These are suited to a subject that changes its speed.			

[Focus Limiter]



iA P A S M ≇M S&Q

You can restrict the range for AF to work.

The focusing speed of AF increases when you limit the range where AF works.

- Set the focus mode to [AFS] or [AFC].
 - • [♠]/[♣] → [] → [Focus Mode] → [AFS]/[AFC]
- 2 Set [Focus Limiter].

[ON]

 
Enables the following settings.

[OFF]

Disables the following settings.

[SET]

- 1 Use the same procedure as MF (→Record Using MF: 183) to check the focus, then touch [Limit1] or [Limit2] to set the range of operation for AF.
 - [Limit1]/[Limit2] can be set from either.



- 2 Press process to confirm the setting.
 - Press [DISP.] to return the operation range to the default setting.



- This can be set when using an L-Mount lens with a focus ring.
- It cannot be set if the focusing distance range selector switch of the lens has been used to limit the operation range.
- The setting values are reset when the lens is replaced.
- When [Focus Limiter] is working, [AFS]/[AFC] is displayed on the screen.
- When the following function is being used, [Focus Limiter] is not available:
 - [AF+MF]

[AF Assist Light]

 


iA P A S M ≇M S&Q

When recording in low light conditions, the AF assist light turns on when you press the shutter button halfway, making it easier for the camera to focus



Settings: [ON]/[OFF]





- The effective range of the AF assist light is different depending on the lens used.
 - When the interchangeable lens (S-R2060) is attached and at wide-angle end.
 Approx. 1.0 m (3.3 feet) to 3.0 m (9.8 feet)
 - When the interchangeable lens (S-R28200) is attached and at wide-angle end.
 Approx. 1.0 m (3.3 feet) to 3.0 m (9.8 feet)
 - When the interchangeable lens (S-R1840) is attached and at wide-angle end.
 Approx. 1.0 m (3.3 feet) to 3.0 m (9.8 feet)
- Remove the lens hood.
- The AF assist light may be greatly blocked, and it may become harder to focus when a lens with large diameter is used.

[Focus Frame Moving Speed]



Sets the speed when moving the AF area/MF Assist.

Settings: [FAST]/[NORMAL]

[AF Micro Adjustment]



iA P A S M ≅M S&Q

You can make fine adjustments to the focus point when focusing with phase detection AF.



There is normally no need to adjust the focus point. Adjust only when necessary.
 If you adjust on a lens that has a correct focus point, there is a risk that the camera will not be able to record with the appropriate focus point.

⇒ [♣] ⇒ [♠] ⇒ Select [AF Micro Adjustment]



[ALL]

Adjust uniformly for all lenses.

Used in cases such as when you have attached lenses that are not registered in [ADJUST BY LENS].

[ADJUST BY LENS]

Adjust each lens separately and register the adjustment values on the camera. When a registered lens is attached, the adjusted value is recalled when it is set in IADJUST BY LENSI.

- When using a zoom lens, you can adjust the focus point individually at the wide-angle end and the telephoto end.
- If the lens has already been registered, the adjustment value is overwritten.

[OFF]

Registering the Adjusted Value

- Select [ALL] or [ADJUST BY LENS] and then press [DISP.].
- 2 (When [ADJUST BY LENS] is selected) Register the lens.
 - Press [DISP.] and select [Yes] to register.
 - If the lens is already registered, the screen moves to the one in Step 3.
- 3 (When [ADJUST BY LENS] is selected) Select [Wide Adjustment] or [Tele Adjustment].
 - Press ▲▼ to select, and then press



. When using a prime lens, [Adjustment] is displayed.



- Adjust the focus point. 4
 - Press ◀► to adjust the focus point and then press
 - You can also adjust by rotating 🚢 or 🚳 .
 - The focus point is moved backward when adjusted with the [+] side. The focus point is moved forward when adjusted with the [-] side.



- Record and repeat Step 4 until the suitable focus point is reached. 5
 - . Check the set focus point in an image recorded with [AFC] of the [Focus/ Shutter Priority] set to [FOCUS] and with the focus mode set to [AFC]. (→[Focus/Shutter Priority]: 524)



- We recommend making the adjustments in the same environment that will be used for recording.
- · We recommend using a tripod when adjusting.



- You can register a maximum of 40 lenses in [ADJUST BY LENS]. When the upper limit is exceeded, already registered lens information is overwritten.
- When a teleconverter is used when adjusted with [ADJUST BY LENS], the combination of the lens and teleconverter is registered.
- The focus point for the wide-angle end and the telephoto end cannot be individually adjusted in [ALL].
- The registration numbers and lens names registered in [ADJUST BY LENS] are entered automatically and cannot be changed.

Initializing

Registered lens information and adjusted values are initialized.

- Select [ALL] or [ADJUST BY LENS] and then press [Q].
- Select [Yes] to initialize.



 Irrespective of the [ALL]/[ADJUST BY LENS] selection, all of the registered lens information and adjusted values in [AF Micro Adjustment] are initialized.

Selecting the AF Mode

- Automatic Detection: 162
- [Tracking]: 167
- [Full Area AF]: 168
- [Zone(Horizontal/Vertical)]/[Zone]: 171
- [1-Area+]/[1-Area]: 173
- [Pinpoint]: 175





Select the focusing method to match the position and number of subjects. In an AF mode other than Pinpoint, you can automatically focus by detecting subjects.

• The AF mode selection screen appears.



2 Select the AF mode.

- Press ◀► to select an item and then press
- You can also select by rotating 🚢 or 🚳



[[::: [Tracking]

(→[Tracking]: 167)

[Full Area AF]

(→[Full Area AF]: 168)

[Zone(Horizontal/Vertical)]

(→[Zone(Horizontal/Vertical)]: 171)

(→[Zone]: 172)

[1-Area+]

(→[1-Area+]: 173)

[1-Area]

(→[1-Area]: 173)

+ [Pinpoint]

(→[Pinpoint]: 175)



- In [Time Lapse Shot], [[cannot be used.
- When the focus mode is set to [AFC], [+] is not available.
- When the following function is being used, the AF mode is fixed to [
 - [Live Cropping]
- When the following function is being used, the AF mode is fixed to [
 - [65:24]/[2:1] ([Aspect Ratio])



 You can set the AF mode items to be displayed on the AF mode selection screen:

(→[Show/Hide AF Mode]: 526)

Automatic Detection

When automatic detection is enabled, subjects for recording are automatically detected and the camera focuses.



- · Not all subjects can be detected according to the settings.
- When [Detecting Subject] ([Type of Subject]) is [ANIMAL], some subjects that are not animals may be detected as animals.

1 Set [AF Detection Setting] to [ON].

- • []/[♣] → [] → [AF Detection Setting] → [ON]
- You can also press ▲ in the AF mode selection screen to switch automatic detection [ON]/[OFF].


2 Select [Detecting Subject].

- • | → []/[#] | → [[□□]] → [Detecting Subject]
- Select [Type of Subject] and [Target Parts].
- It is also possible to select by pressing [DISP.] in the AF mode selection screen.

		Detects humans.				
	[HUMAN]	Select either [Eye/Face/Body] or [Eye/Face] for the				
	[HOWAN]	[Target Parts].				
		• [♠] or [♠] is displayed on the AF mode icon.				
		Detects animals.				
		Select either [Body] or [Eye/Body] for the [Target				
		Parts].				
[Type of Subject]	[ANIMAL]	Animals that can be detected are birds, canines				
		(including wolves, etc.), and felines (including				
		lions, etc.).				
		• [ᆲ] or [Ⴘ] is displayed on the AF mode icon.				
		Detects cars (mainly for motor sports).				
	[CAR]	[Target Parts] cannot be selected.				
		• [] is displayed on the AF mode icon.				
		Detects motorcycles (mainly for motor sports).				
	[MOTORCYCLE]	[Target Parts] cannot be selected.				
		• [ඎ] is displayed on the AF mode icon.				
[Townst	Select the part to be brought into focus.					
[Target	This can be set when the [Type of Subject] is either [HUMAN] or					
Parts]	[ANIMAL].					

❖ When []

 When a subject to be recorded is detected, an AF area is displayed. If multiple subjects are detected, multiple AF areas are also displayed, and you can select the subject you want to focus on from amongst these.



Yellow

AF area to be brought into focus.

The camera selects this automatically.

• A cross appears in the AF area when a human eye is detected. (A)

 
White

Displayed when multiple subjects are detected.

❖ When [[®]], [─], [♠], [☒], or [■]

If even part of a subject to be recorded enters the AF area, it is automatically detected and focused.

• If eyes are detected inside the AF area, eye detection (B) works. It is not possible to change the eye to focus on.





- [AF Detection Setting] is applied to all AF modes excluding [+].
- When a person's eyes are detected, the eye closer to the camera will be brought into focus.

The exposure will be adjusted to the face. (When [Metering Mode] is set to [6])

• Depending on [Detecting Subject], the number of subjects that can be detected at once with [[[[[[[]]]]]] of the AF mode will be different.

[HUMAN] ([Eye/Face/Body], [Eye/Face]): Maximum 15 (maximum 3 bodies detected)

[ANIMAL] ([Body]), [CAR], [MOTORCYCLE]: Maximum 3 [ANIMAL] ([Eye/Body]): Maximum 1

- Automatic detection may not be available due to the camera settings.
- When the following function is being used, [Detecting Subject] is fixed to [Eye/ Face]:
 - [Live Cropping]



- You can make it so the metering range for automatic exposure is not prioritized on the eyes and face when automatic detection works:
 - (→[Face Priority In Multi Metering]: 520)
- The cross that appears on human eyes when focused can be made to disappear:
 - (→[Human Eye Detection Display]: 528)

[Tracking]

When the focus mode is set to [AFC], the AF area follows the movement of the subject, maintaining focusing.

Start tracking.

- Aim the AF area over the subject, and press the shutter button halfway.
 The camera will track the subject while the shutter button is pressed halfway or pressed fully.
- If tracking fails, the AF area blinks red.
- When set to [AFS], the focus will be on the AF area position. Tracking will not work.



• How to manipulate the AF area (→AF Area Operations: 177)



 In [AM]/[S&Q] mode and while recording video, tracking will continue even if the shutter button is released.

To cancel tracking, press , or touch []. Tracking is also available with [AFS].



- When automatic detection is working, the detected subject is tracked.
- Set [Metering Mode] to [6] to continue to adjust the exposure as well.
- [[may not be available due to the camera settings.

[Full Area AF]

The camera selects the most optimal AF area to focus.

When multiple AF areas are selected, all selected AF areas will be brought into focus.

When the focus mode is set to [AFC], you can ensure that the focus stays on the subject by recording while keeping the subject within the Full Area AF area.

Specify the Subject to Bring into Focus

When automatic detection is [ON], multiple subjects are detected.

When the subject to be brought into focus is shown using the white AF area, you can change this to a yellow AF area.

Touch operations

Touch the subject indicated with the white AF area.

- The AF area will change to yellow.
- To cancel the setting, touch [].



Button operations

- Press ▼ in the AF mode selection screen.
- 2 Press ▲ ▼ ◀▶ to move the position of the AF area.



3 When the white AF area changes to yellow, press .



• To cancel the setting, press .



Setting the AF Area in Any Position

The [] AF area can be set in any position.

Touch operations

Touch any position on the recording screen and then touch [Set].

• Touch [] to return to [].

Button operations

- Press ▼ in the AF mode selection screen.
- 2 Press ▲▼◀▶ to move the AF area, and then press to confirm.
 - Press again to return to [____].



• You can move and change the size of the set AF area:

(→AF Area Operations: 177)

□ [Zone(Horizontal/Vertical)]/**□** [Zone]

 
[Zone(Horizontal/Vertical)]

Within the full area, vertical and horizontal zones can be focused.

Horizontal pattern




Vertical pattern



- To switch between the horizontal pattern and vertical pattern, press ▲▼ ◄► in the AF area setting screen.
- How to manipulate the AF area (→AF Area Operations: 177)

⊪[Zone]

 Within the full area, a central oval zone can be focused.



• How to manipulate the AF area (→AF Area Operations: 177)



- \bullet [$\overline{\hspace{1cm}}$] changes to [$\hspace{1cm}$] in the following cases:
 - During video recording
 - [∰M] mode
 - [S&Q] mode

 
■ [1-Area+]/ ■ [1-Area]

[1-Area+]

Emphasis within a single AF area can be focused.

Even when the subject moves out of the single AF area, the subject remains focused in a supplementary AF area (C).

• Effective when recording moving subjects that are difficult to track with [].




■ [1-Area]

Specify the point to be brought into focus.



 A dot (D) is displayed on the recording screen when a single AF area is reduced to the minimum size. The AF area can be set on the location where the dot is displayed.



How to manipulate the AF area (→AF Area Operations: 177)



- It is not possible to reduce a single AF area to the minimum when using the following function:
 - During video recording
 - [₽M] mode
 - [S&Q] mode
 - [Hybrid Zoom(Photo)]
 - [Crop Zoom(Photo)]



• Change the movement speed of a single AF area:

(→[Focus Frame Moving Speed]: 154)

⊞[Pinpoint]

You can achieve a more precise focus on a small point.

If you press the shutter button halfway, the screen that lets you check the focus will be enlarged.



- The enlarged screen is displayed when you set an AF area.
- How to manipulate the AF area (→AF Area Operations: 177)



- ullet When the focus mode is set to [AFC], [$\lceil + \rceil$] is not available.
- Automatic detection does not work in [+].



- \bullet When the following functions are being used, [$\boxed{}$] switches to [$\boxed{}$]:
 - During video recording
 - [∰M] mode
 - [S&Q] mode

Operations on the Magnification Window

Button operations	Touch operations	Description of operation
▲▼⋖ ►	Touch	Moves [+].
<u> 246.</u>	Pinch out/ pinch in	Enlarges/reduces the screen in small steps.
0	_	Enlarges/reduces the screen.
_		Switches magnification window (windowed mode/full screen mode).
[DISP.]	[Reset]	Quits the enlarged display.

- You can enlarge by approx. 3× to 6×.
- You can also take a picture by touching [1.].



• You can change the display method of the magnified screen:

(→[Pinpoint AF Setting]: 527)

AF Area Operations

- Move the Position of the AF Area: 177
- Changing the Size of the AF Area: 179
- Resetting the AF Area: 180
- Focus on and Adjust Brightness for the Touched Position ([AF+AE]): 181
- [Focus Switching for Vert / Hor]: 182



Move the Position of the AF Area

Touch operations

With the default settings, focus is on the point touched when you touch the screen. (→[Touch Settings]: 530)

Touch the recording screen.

• The AF area setting screen is displayed.

The AF area is set when you either touch [Set] or press the shutter button halfway.



- You can optimize the focus and brightness on the touched position. (→Focus on and Adjust Brightness for the Touched Position ([AF+AE]): 181)
- You can focus on the touched position and release the shutter. (→Touch AF/ Touch Shutter: 97)

Button operations

- Press ▼ in the AF mode selection screen.
 - The AF area setting screen is displayed.
- 2 Press ▲ ▼ ◀► to move the position of the AF area.
 - The AF area is set when you either press or press the shutter button halfway.



 When [Metering Mode] is [], the metering target also moves together with the AF area.



• You can set the AF area to loop when moved:

(→[Looped Focus Frame]: 529)

 You can assign the function that displays the AF area/MF Assist movement screens to an Fn button:

(→[Focus Area Set]: 494)

Changing the Size of the AF Area

Touch operations

Pinch out/pinch in the AF area in the AF area setting screen.

• Either touch [Set] or press the shutter button halfway to confirm.



Dial Operations

Rotate 🚢 or 🔘.

• Either press or press the shutter button halfway to confirm.





• In [「[:]:], [...], and [+], the size of the AF area cannot be changed.

Resetting the AF Area

Touch operations

 
Touch [Reset] in the AF area setting screen.

The first touch returns the AF area position to the center. The second touch returns
the AF area size to the default.

Button operations

Press [DISP.] in the AF area setting screen.

The first press returns the AF area position to the center. The second press returns
the AF area size to the default.



Focus on and Adjust Brightness for the Touched Position ([AF+AE])

- Set [Touch AF].
 - \P \Rightarrow [\P] \Rightarrow [\P] \Rightarrow [Touch Settings] \Rightarrow [Touch AF] \Rightarrow [AF+AE]
- Touch the subject to which you wish to adjust the brightness.
 - At the touched position, an AF area that works in the same way as [] is displayed.

This places a point to adjust brightness at the center of the AF area.

• How to manipulate the AF area (→AF Area Operations: 177)



 
- 3 Touch [Set].

[Focus Switching for Vert / Hor]

Memorizes separate positions for AF areas for when the camera is vertically aligned and for when it is horizontally aligned.

Two vertical orientations, left and right, are available.





[ON]

Memorizes separate positions for vertical and horizontal orientations.

[OFF]

Sets the same position for vertical and horizontal orientations.



• In MF, this memorizes the MF Assist position.

Record Using MF

• [Focus Peaking]: 188





MF (Manual Focus) refers to manual focusing.

Use this function when you want to fix the focus or when the distance between the lens and the subject is determined and you do not want to activate AF


- 1 Set the focus mode to [MF].
 - • | → []/[💒] → [[Focus Mode] → [MF]
- - This switches to the MF Assist screen, and shows an enlarged display.
- 3 Select the focus point.
 - Press ▲ ▼ ◀► to select the focus point.
 - To return the point to be brought into focus to the center, press [DISP.].

4 Adjust the focus.

Rotate the focus ring.



- This will display the in-focus portion highlighted with color. (Focus Peaking)
- A recording distance guideline is displayed. (MF Guide)

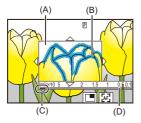

- (A) MF Assist (enlarged screen)
- (B) Focus Peaking
- (C) Indicator for ∞ (infinity)
- (D) MF Guide

Close the MF Assist screen.

- Press the shutter button halfway.



6 Start recording.

Press the shutter button fully.

Operations on the MF Assist Screen

Button operations	Touch operations	Description of operation	
▲▼ ◆►	Drag	Moves the enlarged display position.	
<u></u>	Pinch out/ pinch in	Enlarges/reduces the screen in small steps.	
	_	Enlarges/reduces the screen.	
-		Switches magnification window (windowed mode*1/full screen mode*2).	
[DISP.]	[Reset]	First time: Returns the MF Assist position to the center. Second time: Returns the MF Assist magnification to the default setting.	
[AF ON]	[AF]	The AF operates.	

^{*1} You can enlarge by approx. 3× to 6×.

^{*2} You can enlarge by approx. 3× to 20×. (Maximum 6× during video recording, when [Enlarged Live Display] in [HDMI Rec Output] is set to [OFF] during HDMI output, and when in [MM]/[S&Q] mode)



- On the recording screen, you can rotate the focus ring to display the MF Assist screen. If the focus ring has been rotated to enlarge the display, the assist screen will be exited a short time after you cease the operation.
- During MF, pressing [AF ON] will activate AF.
- The MF Assist screen can also be displayed during video recording.
- The recording distance reference mark indicates the position of the imaging surface. This becomes the reference when measuring the recording distance.





- When [Hybrid Zoom(Photo)], [Crop Zoom(Photo)], [Hybrid Zoom(Video)], or [Crop Zoom(Video)] is [ON], the MF Assist magnification rate is between about 3x to 6x. (However, during video recording or in [@M]/[S&Q] mode, this is fixed to 3x.)
- During video recording using the following functions, the MF Assist screen cannot be displayed:
 - [Rec Quality] with a high frame rate video exceeding a recording frame rate of 60.00p
 - [Live Cropping]



• You can change the Focus Peaking sensitivity and the display method:

```
(→[Focus Peaking]: 188)
```

 You can memorize the MF Assist position separately for vertical and horizontal orientations:

```
(→[Focus Switching for Vert / Hor]: 182)
```

• You can change the display method of the magnified screen:

```
(→[MF Assist]: 525)
```

• You can change the MF Guide display units:

```
(→[MF Guide]: 526)
```

• You can disable focus ring operation:

```
(→[Focus Ring Lock]: 526)
```

• You can set the movement of the MF Assist position to loop:

```
(→[Looped Focus Frame]: 529)
```

• The camera memorizes the focus point when you turn it off:

```
(→[Lens Focus Resume]: 551)
```

• The amount of focus movement can be set:

```
(→[Focus Ring Control]: 552)
```

 You can assign the function that displays the AF area/MF Assist movement screens to an Fn button:

```
(→[Focus Area Set]: 494)
```

[Focus Peaking]

During MF operation, in-focus portions (portions on the screen with clear outlines) are highlighted with color.

→ []/[**] → [....] → Select [Focus Peaking]

[ON]	Focus Peaking display is performed.		
[OFF]	_		
	[Focus Peaking Sensitivity]	If adjusted to the negative direction, portions to be highlighted are reduced, allowing you to achieve a more precise focus.	
	[Display Color]	You can set the display color of the in-focus portion.	
[SET]	[Display During AFS]	When set to [ON], the Focus Peaking display is also possible when the shutter button is pressed halfway in the [AFS] focus mode.	
[oE1]	[Display During MF]	[While In Live View]: Focus Peaking is displayed in the recording screen. [While Live View Is Enlarged]: Focus Peaking is displayed in the MF Assist screen and the video enlarged display of live view screen. [When Shutter Is Pressed]: When set to [OFF], Focus Peaking is hidden when the shutter is pressed.	



- You can display the Touch Tab (→[Touch Settings]: 530) and then touch [PEAK] in [<] to switch [ON]/[OFF].
- When [Live View Boost] is being used, [Focus Peaking] is not available.

Recording with Zoom

• [Crop Zoom(Photo)]: 191

• [Hybrid Zoom(Photo)]: 194

• [Crop Zoom(Video)]: 197

• [Hybrid Zoom(Video)]: 201

Use the optical zoom of the lens to zoom to telephoto or wide-angle.

Rotate the zoom ring.

(T): Telephoto

(W): Wide-angle



The focal length is displayed on the recording screen.





• The focal length display can be hidden:

(→[Focal Length]: 541)

[Crop Zoom(Photo)]



Cut out the central section of the image to get an enhanced telescopic effect without image quality deterioration.

It can even be used with a prime lens.

[ON]	Enables crop zoom.		
[OFF]	_		
	[Focal Length Display Setting]	Sets how focal length is displayed. [Composite Focal Length]: Result of the calculation "focal length of the optical zoom × crop zoom rate" (eg.: 180 mm) [+ Crop Magnification]: The focal length of the optical zoom and the crop zoom rate (eg.: 60 mm × 3.0)	
[SET]	[Minimum Image Size]	A higher rate of zoom is possible the smaller the [Picture Size] is. [M]: maximum 1.4x [S]: maximum 2.0x [XS]: maximum approx. 3x	
	[Set Recording Image Size]	[ON]: Always records with the [Picture Size] set in [Minimum Image Size]. [OFF]: [Picture Size] changes according to the zoom position.	
	[Zoom Speed(Photo)]	Sets the zoom speed during zoom operations. Settings: [H], [M], [L], [SL]	

Using [Crop Zoom(Photo)]

- Set [Crop Zoom(Photo)] to [ON].
 - 😭 → [🗖] → [Crop Zoom(Photo)] → [ON]
 - Zoom operations are also enabled when you press the Fn button assigned with [Zoom Control].
 - The [Touch Tab] setting changes to [ON] and you can use Touch Zoom to enlarge/reduce.
- 2 Perform the zoom operations.



Enlarge/Reduce

- Press ▲ ▼ or rotate ^{★★}.
- You can also enlarge/reduce by pressing the Fn button assigned with [Zoom In(Tele)] or [Zoom Out(Wide)].

Step zoom

You can switch the crop zoom rate ([Minimum Image Size]).

- 1.0x[L]/1.4x[M]/2.0x[S]/approx. 3.0x[XS]
- Press ◀►.
- You can also switch by pressing the Fn button assigned with [Crop Zoom Increment(Step)].
- 3 Confirm your selection.
 - Press 🚇 .
 - Touch Zoom and the Fn buttons [Zoom In(Tele)], [Zoom Out(Wide)], and [Crop Zoom Increment(Step)] can also be used in the recording screen.



• RAW images are recorded without being cropped.



- The [Focal Length Display Setting] settings work together across the following menus:
 - [Crop Zoom(Photo)]
 - [Crop Zoom(Video)]
- The [Minimum Image Size] and [Set Recording Image Size] settings work together across the following menus:
 - [Hybrid Zoom(Photo)]
 - [Crop Zoom(Photo)]
- When the following functions are being used, [Crop Zoom(Photo)] is not available:
 - The [RAW] [Picture Quality]
 - High Resolution mode

[Hybrid Zoom(Photo)]



Even higher zoom rates can be achieved just with zoom ring operations by combining the optical zoom and [Crop Zoom].

Zooming at a higher rate is possible the smaller the [Minimum Image Size] is.



[ON]	Enables hybrid zoom.
[OFF]	_

Disp Setti	[Focal Length Display Setting]	Sets how focal length is displayed. [Composite Focal Length]: Result of the calculation "focal length of the optical zoom × crop zoom rate" (eg.: 180 mm) [+ Crop Magnification]: The focal length of the optical zoom and the crop zoom rate (eg.: 60 mm × 3.0)
	[Effect at Wide Angle(Photo)]	[ON]: Crop zoom works at a constant zoom magnification across the entire optical zoom area. [OFF]: Only optical zoom is used in the area of the edges of the wide-angle, and [Picture Size] [L] pictures can be recorded.
	[Minimum Image Size]	A higher rate of zoom is possible the smaller the [Picture Size] is. [M]: maximum 1.4x [S]: maximum 2.0x [XS]: maximum approx. 3x
	[Set Recording Image Size]	[ON]: Always records with the [Picture Size] set in [Minimum Image Size]. [OFF]: [Picture Size] changes according to the zoom position.



• RAW images are recorded without being cropped.



- The [Focal Length Display Setting] settings work together across the following menus:
 - [Hybrid Zoom(Photo)]
 - [Hybrid Zoom(Video)]
- The [Minimum Image Size] and [Set Recording Image Size] settings work together across the following menus:
 - [Hybrid Zoom(Photo)]
 - [Crop Zoom(Photo)]
- [Hybrid Zoom(Photo)] cannot be used with a prime lens.
- When the following functions are being used, [Hybrid Zoom(Photo)] is not available:
 - The [RAW] [Picture Quality]
 - High Resolution mode
 - [Crop Zoom(Photo)]
- The zoom operation may not be smooth if you use a zoom lens other than a Panasonic interchangeable lens (S series).

[Crop Zoom(Video)]



Cut out the central section of the image to get an enhanced telescopic effect without image quality deterioration.

It can even be used with a prime lens.





[ON]	Enables crop zoom.		
[OFF]	_		
(SET)	[Focal Length Display Setting]	Sets how focal length is displayed. [Composite Focal Length]: Result of the calculation "focal length of the optical zoom × crop zoom rate" (eg.: 180 mm) [+ Crop Magnification]: The focal length of the optical zoom and the crop zoom rate (eg.: 60 mm × 3.0)	
	[Zoom Speed(Video)]	[During Recording Standby]: Sets the zoom speed during recording standby. [During Recording]: Sets the zoom speed during recording. Settings: [H], [M], [L], [SL]	

Using [Crop Zoom(Video)]

- Set [Crop Zoom(Video)] to [ON].

 - Zoom operations are also enabled when you press the Fn button assigned with [Zoom Control].
 - The [Touch Tab] setting changes to [ON] and you can use Touch Zoom to enlarge/reduce.
- 2 Perform the zoom operations.



Enlarge/Reduce

- Press ▲ ▼ or rotate 🚢 .
- You can also enlarge/reduce by pressing the Fn button assigned with [Zoom In(Tele)] or [Zoom Out(Wide)].
- If the zoom operation has been enabled using the Fn button assigned with [Zoom Control], you cannot enlarge/reduce using <u>w</u>.

Step zoom

You can switch the crop zoom rate ([Image Area of Video]).

FULL, APS-C, PIXEL/PIXEL

- Press ◀▶.
- You can also switch by pressing the Fn button assigned with [Crop Zoom Increment(Step)].
- 3 Confirm your selection.
 - Press 🚇 .
 - Touch Zoom and the Fn buttons [Zoom In(Tele)], [Zoom Out(Wide)], and [Crop Zoom Increment(Step)] can also be used in the recording screen.

[Rec Quality] and Crop Zoom Rate

	Maximum crop zoom rate		
[Rec Quality]	When using full-frame lenses	When using APS-C lenses	
6K video, 5.9K video, 3.3K video	_	_	
3.8K video	Approx. 1.5x	_	
C4K video/4K video (60p/50p/48p)	_	_	
C4K video/4K video (30p/25p/24p)	Approx. 1.5x	_	
FHD video (120p/100p/60p/50p/48p)	_	_	
FHD video (30p/25p/24p)	Approx. 3x	Approx. 2x	



- The [Focal Length Display Setting] settings work together across the following menus:
 - [Crop Zoom(Photo)]
 - [Crop Zoom(Video)]
- When the following functions are being used, [Crop Zoom(Video)] is not available:
 - [Rec Quality] for a high frame rate video exceeding a recording frame rate of 60.00p
 - [S&Q] video with a frame rate exceeding 60 fps
 - [Live Cropping]

 
[Hybrid Zoom(Video)]






Even higher zoom rates can be achieved just with zoom ring operations by combining the optical zoom and [Crop Zoom].

Optical zoom only



 Hybrid zoom (optical zoom and crop zoom)



⊕ → [♣] → [♣] → Select [Hybrid Zoom(Video)]



[ON]	Enables hybrid zoom.	
[OFF]		_
[SET]	[Focal Length Display Setting]	Sets how focal length is displayed. [Composite Focal Length]: Result of the calculation "focal length of the optical zoom × crop zoom rate" (eg.: 180 mm) [+ Crop Magnification]: The focal length of the optical zoom and the crop zoom rate (eg.: 60 mm × 3.0)
	[Effect at Wide Angle(Video)]	[ON]: Crop zoom works at a constant zoom magnification across the entire optical zoom area. [OFF]: Only optical zoom is used in the area of the edges of the wide-angle, and the lag during zoom is reduced.

[Rec Quality] and Crop Zoom Rate

	Maximum crop zoom rate		
[Rec Quality]	When using full-frame lenses	When using APS-C lenses	
6K video, 5.9K video, 3.3K video	_	_	
3.8K video	Approx. 1.5x	_	
C4K video/4K video (60p/50p/48p)	_	_	
C4K video/4K video (30p/25p/24p)	Approx. 1.5x	_	
FHD video (120p/100p/60p/50p/48p)	_	_	
FHD video (30p/25p/24p)	Approx. 3x	Approx. 2x	



- The [Focal Length Display Setting] settings work together across the following menus:
 - [Hybrid Zoom(Photo)]
 - [Hybrid Zoom(Video)]
- [Hybrid Zoom(Video)] cannot be used with a prime lens.
- When the following functions are being used, [Hybrid Zoom(Video)] is not available:
 - [Rec Quality] for a high frame rate video exceeding a recording frame rate of 60.00p
 - [S&Q] video with a frame rate exceeding 60 fps
 - [Live Cropping]
 - [Crop Zoom(Video)]
- The zoom operation may not be smooth if you use a zoom lens other than a Panasonic interchangeable lens (S series).

Drive / Shutter / Image Stabilizer

This chapter describes functions for recording in drive mode and the image stabilizer function.

 
- Selecting the Drive Mode: 205
- Taking Burst Pictures: 207
- High Resolution mode: 215
- Recording with Time Lapse Shot: 221
- Recording with Stop Motion Animation: 229
- Time Lapse Shot/Stop Motion Animation Videos: 234
- Recording Using the Self-timer: 236
- Bracket Recording: 241
- [Silent Mode]: 249
- [Synchro Scan(Photo)]: 251
- [Min. Shutter Speed]: 253
- [Shutter Delay]: 254
- Image Stabilizer: 255

Selecting the Drive Mode



You can switch the drive mode to Single, Burst, etc. to match the recording conditions.

1 Press [□⊗] (▼).



2 Select a drive mode.

- Press ◀► to select an item and then press
- You can also select by rotating



[] (Single)

Takes one picture each time the shutter button is pressed.

[□H] (Burst) (→Taking Burst Pictures: 207)

Takes pictures continuously while the shutter button is pressed and held.

[i] (High Resolution mode) (→ High Resolution mode: 215)

This merges pictures with a high resolution from multiple recorded images.

[Sim] (Time Lapse Shot/Stop Motion Animation) (→ Recording with Time Lapse Shot: 221, Recording with Stop Motion Animation: 229)

Takes pictures with Time Lapse Shot or Stop Motion Animation.

[(N)] (Self-timer) (→Recording Using the Self-timer: 236)

Takes pictures when the set time elapses after the shutter button is pressed.



 The detailed setting screens for each drive mode can be called up with an Fn button:

[★] → [←] → [Fn Button Set] → [Setting in REC mode] → [Drive Mode Setting]

Taking Burst Pictures



Takes pictures continuously while the shutter button is pressed and held. You can select burst recording settings to suit the recording conditions, including [H], [M], and [L] which enable burst recording with high image quality, and SH burst recording which takes burst pictures at ultra high speeds using an electronic shutter.

1 Press [□᠔] (▼).



- 2 Press ◀▶ to select [Burst] and press ▲.
 - You can also select by rotating



3 Select the burst rate.

- Press ◀► to select an item and then press
- You can also select by rotating we or ...
- This can also be set in [Burst Shot Setting] in the [Photo] menu.



[SH]

Takes burst pictures at ultra high speed, 30 frames/second.

[SH PRE]

Takes pre-burst pictures at ultra high speed, 30 frames/second.

[H]

Takes high-speed burst pictures.

[M]

Takes medium-speed burst pictures.

[L]

 
Takes low-speed burst pictures.

4 Start recording.

• Takes burst pictures while the shutter button is pressed fully.

SH Pre-burst Recording

The camera records pictures (15 frames worth) while the shutter button is pressed halfway before recording starts and for the 0.5 seconds just prior to the shutter button being pressed fully.



- (A) 0.5 seconds
- (B) Recorded range
- [PRE] is displayed on the recording screen during SH pre-burst recording.
- If the shutter button is pressed and held at halfway for approx. 1 minute, the frames before pressing fully cannot be saved. Press the shutter button halfway again.

Burst Rate

	Electronic shutter	Live View when taking burst pictures	
[SH]/[SH PRE]	30 frames/second ([AFS]/[AFC]/[MF])	None	
[H] (High speed)	9 frames/second ([AFS]/[MF]) 8 frames/second ([AFC])	None ([AFS]/[MF]) Available ([AFC])	
[M] (Medium speed)	5 frames/second ([AFS]/[AFC]/[MF])	Available	
[L] (Low speed)	2 frames/second ([AFS]/[AFC]/[MF])	Available	

The burst rate may be lower depending on the settings for recording such as [Picture Size] and focus mode.

Maximum Number of Frames Recordable

	[Picture Quality]			
	[FINE]/[STD.]	[RAW+FINE]/ [RAW+STD.]	[RAW]	
[SH]/[SH PRE]	36 frames ^{*1}			
[H] (High speed)	120 frames or more*2	35 frames or more*2	55 frames or more*2	
[M] (Medium speed)	200 frames or more*2	50 frames or more*2	200 frames or more*2	
[L] (Low speed)	200 frames or more*2	200 frames or more*2	200 frames or more*2	

- Using a Nextorage SDXC memory card compliant with UHS-II UHS Speed Class 3
- When recording under the test conditions specified by Panasonic.
 Recording conditions may reduce the maximum number of frames recordable.
- *1 Recording stops when the maximum number of frames recordable is reached. For SH pre-burst recording, this includes the number of pictures taken with pre-burst recording.
- *2 The burst rate will become lower during recording but pictures can continue to be taken until the card becomes full

Number of Pictures That Can Be Taken Continuously

When you press the shutter button halfway, the number of pictures that can be taken continuously will appear on the recording screen.

Example) When 20 frames: [r20]



- Once recording starts, the number of pictures that can be taken continuously will decrease.
 - During [H]/[M]/[L] burst recording: When [r0] appears, the burst rate decreases.
 - During SH burst recording: When [r0] appears, the burst recording stops.
- When [r99+] is displayed on the recording screen, you can take 100 or more burst pictures.

Focus when Taking Burst Pictures

Focus mode	[Focus/ Shutter Priority] (→[Focus/ Shutter Priority]: 524)	[SH]/[SH PRE]	[Н]	[M]/[L]	
	[FOCUS]				
[AFS]	[BALANCE]	Fixed to the focus of the first frame			
	[RELEASE]				
	[FOCUS]	Estimated focus Normal focus		Normal focus	
[AFC]	[AFC] [BALANCE]		Estimated focus		
	[RELEASE]	Esumated locus			
[MF]	_	Focus set with manual focus			

- When the subject is dark with [AFC], the focus is fixed to that of the first frame.
- With estimated focus, the burst rate takes priority and the focus is estimated to the extent possible.
- With normal focus, the burst rate may become slow.

Exposure when Taking Burst Pictures

Focus mode	[SH]/[SH PRE]	[H]	[M]/[L]
[AFS]	Fixed to the exposure of the first frame		The exposure is
[AFC]	The exposure is adjusted for each frame		adjusted for each
[MF]	Fixed to the exposure of the first frame		frame



• It may take a while to save burst pictures.

If you continue to take burst pictures while saving is in progress, the maximum number of frames recordable will be reduced.

When taking burst pictures, we recommend using a high-speed card.

Notes on SH burst recording

- There are limits on the shutter speed you can set during SH burst recording.
 - [SH]/[SH PRE]: To a minimum of 1/30
- The aperture will be fixed during burst recording.
- The images recorded will be saved as a set of burst group pictures. (→Group Images: 461)

Notes on SH pre-burst recording

- Pictures taken before the shutter button is pressed fully are not saved in the following cases:
 - When recording with the Touch Shutter
 - When [Half-Press Shutter] in the [Custom] ([Focus/Shutter]) menu is set to [ON]
- When the ambient temperature is high or Pre-Burst recording is performed continuously, even if you press the shutter button halfway, Pre-Burst may not operate to protect the camera from overheating. Wait until the camera cools down
- Even if you press the shutter button halfway, Pre-Burst may not operate when there is insufficient free space on the card.
- The refresh rate on the live view screen becomes 30 fps when you have selected [SH PRE] and you press the shutter button halfway.

High Resolution mode



This merges pictures with a high resolution from multiple recorded images.

This function is suitable for recording subjects that do not move.

When [Handheld High-Res] is set to on, you can record pictures with a higher resolution without using a tripod.

The picture after merging can be saved in RAW or JPEG format.



 When recording with [Handheld High-Res] set to [OFF], use a tripod to minimize camera shake.

1 Press [□⊗] (▼).



2 Press **◄►** to select [High Resolution Mode] and press

▲.

You can also select by rotating .



3 Set the recording settings.

 This can also be set in [High Resolution Mode Setting] in the [Photo] menu.



[Handheld High-Res]

You can record without using a tripod. Turn on the image stabilizer function.

• When [OFF], the image stabilizer function is not available.

[Picture Quality]

Set the compression rate at which the pictures are to be stored.

[COMBINED]/[FINE]/[RAW+FINE]/[RAW]

 When set to [COMBINED], recording is with the same settings as [Picture Quality] in the [Photo] ([Image Quality]) menu. (However, [STD.] changes to [FINE].)

[Picture Size]

Sets the image size after merging.

When the [Aspect Ratio] is [4:3].

[XL] (85 M): 10656×8000

[LL] (42.5 M): 7552×5664

When the [Aspect Ratio] is [3:2].

[XL] (96 M): 12000×8000

[LL] (48 M): 8496×5664

When the [Aspect Ratio] is [16:9].

[XL] (81 M): 12000×6736

[LL] (40.5 M): 8496×4784

When the [Aspect Ratio] is [1:1].

[XL] (64 M): 8000×8000

[LL] (32 M): 5664×5664

• RAW images are always recorded in the [3:2] (12000×8000) aspect ratio.

[Simul Record Normal Shot]

Simultaneously takes pictures that are not merged when [ON] is set. The first picture will be saved with [Picture Size] set to [L].

[Shutter Delay]

Sets the delay time from when the shutter button is pressed until the shutter is released

[30 SEC]/[15 SEC]/[8 SEC]/[4 SEC]/[2 SEC]/[1 SEC]/[1/2 SEC]/[1/4 SEC]/[1/8 SEC]/[0ff]

[Motion Blur Processing]

Sets the correction method to use when the subject moved.

[MODE1]: This gives priority to High Resolution mode, therefore subject blur appears as an afterimage in the picture.

[MODE2]: This reduces afterimage from subject blur, but cannot obtain the same High Resolution mode effect in the corrected range.

• When [Handheld High-Res] is [ON], [Motion Blur Processing] is fixed to [MODE2].

Decide on the composition and then fix the camera in place.

- If blurring is detected, the High Resolution mode icon (A) blinks.
- When [Handheld High-Res] is set to [ON], the icon changes to [



5 Start recording.

- Press the shutter button fully.
- With the default settings, [Shutter Delay] is activated, so there will be a gap in time from when the shutter button is pressed until the shutter is released.
- The screen goes dark during recording.
- The recording state indication (red) (B) blinks.
 Do not move the camera while it is blinking.
- You can continue recording when the merging process ends.





- In High Resolution mode, recording will be performed using the following settings:
 - Minimum aperture value: F16
 - Shutter speed: 1 second to 1/8000 of a second
 - ISO sensitivity: Upper limit to [3200]
- Focus mode: [AFS]/[MF]
- Hold the camera firmly during handheld recording so that the camera does not shake. Recording may fail if there is a lot of shaking.
- · Image merging can take a long time with handheld recording.
- When you record in an extremely bright location or under lighting such as fluorescent or LED lighting, the coloring or brightness of the image may change or horizontal stripes may appear on the screen.
 - Lowering the shutter speed may reduce the effect of horizontal stripes.
- Devices other than this camera may not be able to play back images recorded using High Resolution mode.
- When using APS-C lenses, recording in High Resolution Mode is not possible.

Recording with Time Lapse Shot



Pictures are taken automatically at a set recording interval.


This feature is ideal for keeping track of changes over time in subjects such as animals and plants.

The pictures taken will be saved as a set of group images that can also be combined into a video. (→ Group Images: 461)



- Check that the clock is set correctly. (→ Setting the Clock (When Turning On for the First Time): 63)
- For long recording intervals, we recommend setting [Lens Focus Resume] to [ON] in the [Custom] ([Lens / Others]) menu.

 
1 Press [□⊗] (▼).



Press ◀▶ to select [Time Lapse/Animation] and press

▲.

 You can also select by rotating



3 Set [Mode] to [Time Lapse Shot].

 This can also be set in [Time Lapse/Animation] in the [Photo] menu.



4 Set the recording settings.

[Mode]

Switches between Time Lapse Shot and Stop Motion Animation.

[Shooting Interval Setting]

[ON]: Sets the interval before the next recording takes place.

[OFF]: Takes pictures without leaving recording intervals.

[Start Time]

[Now]: Starts recording when the shutter button is pressed fully.

[After 2 Seconds]: Starts recording 2 seconds after the shutter button is pressed fully.

[Start Time Set]: Starts recording at the set time.

[Image Count]/[Shooting Interval]

Sets the number of pictures and the recording interval to be taken.

The number of pictures and the recording interval to be taken can be automatically calculated and set. (→Setting Assistant for Time Lapse Shot Recording: 225)

• [Shooting Interval] is not available when [Shooting Interval Setting] is set to [OFF].

[Exposure Leveling]

Adjusts the exposure automatically to prevent large changes in brightness between adjacent frames.

[Create New Folder At Rec]

[Create a New Folder]: When set to [ON], a new folder is created each time that Time Lapse Shot recording is started.

[File Number Reset]: When set to [ON], the file number is reset each time a new folder is created

5 Close the menu.

• Press the shutter button halfway.

6 Start recording.

- Press the shutter button fully.
- When [Start Time Set] is set, the camera will enter into sleep status until the start time is reached
- During recording standby, the camera enters into sleep status when no operation is performed for a certain period of time.
- . The recording will stop automatically.

7 Create a video. (→Time Lapse Shot/Stop Motion Animation Videos: 234)

 After the recording has stopped, select [Yes] on the confirmation screen to proceed to create a video.

Even if you select [No], you can still create a video with [Time Lapse Video] in the [Playback] ([Process Image]) menu. (→[Time Lapse Video]: 482)

Setting Assistant for Time Lapse Shot Recording

When [DISP.] is pressed in the [Image Count]/[Shooting Interval] setting screen, [Image Count] and [Shooting Interval] can be set by automatically calculating them from the frame rate, time, and recording duration of the video to be created.





[Production Frame Rate]

Sets the frame rate of videos to be created

It can be set in the range between 1 fps and 99 fps.

[Video Length]

Sets the playback time of videos to be created.

It can be set in the range between 00m01s and 99m59s.

[Time Lapse Shooting Duration]

Sets the Time Lapse Shot duration.

It can be set in the range between 00h00m01s and 99h59m59s.

- 2 Press [DISP.] to confirm.
 - The settings are reflected when you select [Yes].



- [Image Count] can be set in the range between 1 and 9999.
- [Shooting Interval] is set in the range between 00m01s and 99m59s.
 Decimal places are rounded down if the number is not evenly divisible.
- When the setting is one where recording is not possible, [Image Count] or [Shooting Interval] is displayed in red letters.
- When [Shooting Interval Setting] is [OFF], the Time Lapse Shot settings cannot be automatically calculated.

Operations during Time Lapse Shot Recording

Pressing the shutter button halfway during sleep status will turn on the camera.

 You can perform the following operations by pressing [Q] during Time Lapse Shot recording.

[Continue]

Returns to the recording. (Only during recording)

[Pause]

Pauses the recording. (Only during recording)

[Resume]

Resumes the recording. (Only while paused)

• You can also press the shutter button to resume.

[End]

Stops the Time Lapse Shot recording.



- Pictures recorded to more than one card cannot be combined into a single video.
- The camera gives priority to achieving the standard exposure, so it may not take pictures at the set interval or take the set number of pictures.

Furthermore, it may not end at the end time displayed on the screen.

- Time Lapse Shot is paused in the following cases.
 - When the charge on the battery runs out
 - When you set the camera on/off switch to [OFF]

You can set the camera on/off switch to [OFF] and replace the battery or card. Set the camera on/off switch to [ON] and then press the shutter button fully to resume recording.

- (Note that the images recorded after replacing the card will be saved as a separate set of group images.)
- [Exposure Leveling] is not available if ISO sensitivity is set to other than [AUTO] in [M] mode.

Recording with Stop Motion Animation



Take pictures while moving the subject little by little.

The pictures taken will be saved as a set of group images that can be combined into a stop motion video. (>Group Images: 461)

 
1 Press [□⊗] (▼).



Press **▼** to select [Time Lapse/Animation] and press

▲.

You can also select by rotating



3 Set [Mode] to [Stop Motion Animation].

 This can also be set in [Time Lapse/Animation] in the [Photo] menu.



4 Set the recording settings.

[Mode]

Switches between Time Lapse Shot and Stop Motion Animation.

[Add to Picture Group]

Allows you to continue recording for a set of stop motion images that have already been recorded.

• Select an image and proceed to Step 6.

[Auto Shooting]

[ON]: Takes pictures automatically at a set recording interval.

[OFF]: This is for taking pictures manually, frame by frame.

[Shooting Interval]

Sets the recording interval for [Auto Shooting].

5 Close the menu.

Press the shutter button halfway.

6 Start recording.

- Press the shutter button fully.
- Take pictures repeatedly while moving the subject little by little.
- The recording screen displays up to two pictures taken previously. Use them
 as reference for the amount of movement.
- You can play back the recorded stop motion images by pressing [] during recording.

Press [📆] to delete unnecessary images.

To return to the recording screen, press [] again.



7 Stop recording.

 Press and then select [Time Lapse/Animation] from the [Photo] menu to stop recording.



8 Create a video. (→Time Lapse Shot/Stop Motion Animation Videos: 234)

 After the recording has stopped, select [Yes] on the confirmation screen to proceed to create a video.

Even if you select [No], you can still create a video with [Stop Motion Video] in the [Playback] ([Process Image]) menu. (→[Stop Motion Video]: 482)



- Up to 9999 frames can be recorded.
- If the camera is turned off while recording, a message for resuming the recording is displayed when it is turned on. Selecting [Yes] allows you to continue the recording from the interruption point.
- A picture cannot be selected from [Add to Picture Group] when it is the only one that was taken

Time Lapse Shot/Stop Motion Animation Videos

After performing Time Lapse Shot or stop motion recording, you can proceed to create a video.

- Refer to the sections below about these recording functions.
 - Recording with Time Lapse Shot: 221
 - Recording with Stop Motion Animation: 229
- You can also create videos with [Time Lapse Video] (>[Time Lapse Video]: 482) or [Stop Motion Video] (>[Stop Motion Video]: 482) in the [Playback] menu.
 - Select [Yes] on the confirmation screen that appears after recording.
- 2 Set the options for creating a video.

3 Select [OK].

A video will be created in the [MP4] recording file format.



[OK]

Creates a video.

[Rec Quality]

Sets the video image quality.

[Frame Rate]

Sets the number of frames per second.

The larger the number is, the smoother the video will be.

[Sequence]

[NORMAL]: Splices pictures together in recording order.

[REVERSE]: Splices pictures together in reverse recording order.

 


- Videos cannot be created when the [System Frequency] is set to [24.00Hz (CINEMA)].
- Videos cannot be created if the recording time exceeds 30 minutes.
- In the following cases, videos cannot be created if the file size exceeds 4 GB:
 - When an SDHC memory card is being used and a 4K [Rec Quality] is set
 - When an FHD [Rec Quality] is set
- [Time Lapse Video] and [Stop Motion Video] are not available when using the following function:
 - [Auto Transfer] (when there is an image queued to be transferred)

Recording Using the Self-timer



1 Press [□⊗] (▼).



- Press ◀► to select [Self Timer] and press ▲.
 - You can also select by rotating .
 - When recording videos, set [Self Timer For Video] in [Self Timer Setting] of the [Video] ([Others (Video)]) menu to [ON].



3 Select the self-timer time.

- Press ◀► to select an item and then press
- You can also select by rotating we or
- This can also be set in the [Photo]/[Video] menu. (→Setting the Self-timer Time: 239)



 
4 Decide on the composition and then adjust the focus.

- Press the shutter button halfway.
- The focus and exposure are fixed when the shutter button is pressed halfway.



5 Start recording.

- Press the shutter button or video rec. button.
- After the self-timer light blinks, shooting or video recording starts.



Setting the Self-timer Time

Video:

→ [♣] → [★] → [Self Timer Setting] → Select [Self Timer]*

* This can be set by setting [Self Timer For Video] to [ON] in [Self Timer Setting] in the [Video] ([Others (Video)]) menu.

[හ ₁₀]	Takes a picture after 10 seconds.	
[\foi]	Takes 3 pictures at approx. 2 second intervals after 10 seconds. (When recording video, it will be the same operation with $[\mathfrak{V}_{10}]$.)	
[\mathcal{V}_2] to [\mathcal{V}_6]	Takes a picture after 2 seconds. • This setting is a convenient way to avoid camera shake caused by pressing the shutter button. Takes a picture after the time selected with [Custom Time].	
(Custom)	, , , , , , , , , , , , , , , , , , , ,	
[SET]	[Custom Time]	Sets the time until recording starts. [10SEC]/[9SEC]/[8SEC]/[7SEC]/[6SEC]/ [5SEC]/[4SEC]/[3SEC]/[2SEC]
	[Display Countdown]	A countdown is displayed on the recording screen when the self-timer is Custom.



• We recommend using a tripod when recording with the self-timer.



- [Self Timer] in the [Photo] ([Others (Photo)]) menu and [Self Timer] in the [Self Timer Setting] ([Video] ([Others (Video)]) menu) work together.
- When the following functions are being used, [ੴ0 is not available:
 - [Simultaneous Record w/o Filter] ([Filter Settings])
 - [Bracketing]

Bracket Recording

 


When the shutter button is pressed, the camera can record multiple images while automatically changing the setting value for exposure, aperture, focus or white balance (adjustment value or color temperature).



- Aperture Bracket can be selected in the following modes:
 - [A] mode
- [M] mode (when ISO sensitivity is set to [AUTO])
- White Balance Bracket (Color Temperature) can be selected when the white balance is set to [1/1/14], [1/1/14], or [1/1/14].

1 Set [Bracketing Type].



2 Set [More Settings].

 For information about [More Settings], refer to page for each bracketing method.



- 3 Close the menu.
 - Press the shutter button halfway.
- 4 Focus on the subject and then take pictures.

Setting Items ([Bracketing Type])

[🔁] (Exposure Bracket)

When the shutter button is pressed, the camera records while changing the exposure.

(>) [More Settings] (Exposure Bracket): 245)

[(F)] (Aperture Bracket)

When the shutter button is pressed, the camera records while changing the aperture value. (>[More Settings] (Aperture Bracket): 246)

[FOCUS] (Focus Bracket)

When the shutter button is pressed, the camera records while changing the focus point. (→[More Settings] (Focus Bracket): 247)

[WB]] (White Balance Bracket)

When the shutter button is pressed once, the camera automatically records three images with the different white balance adjustment values. (→[More Settings] (White Balance Bracket): 248)

[WBk] (White Balance Bracket (Color Temperature))

When the shutter button is pressed once, the camera automatically records three images with the different white balance color temperatures. (→[More Settings] (White Balance Bracket (Color Temperature)): 248)

[OFF]

How to Cancel Bracketing Select [OFF] in Step 1.



- When [Aspect Ratio] is set to [65:24]/[2:1], only the Exposure Bracket can be used.
- White Balance Bracket and White Balance Bracket (Color Temperature) are not available when using the following functions:
 - [iA] mode
 - Taking burst pictures
 - [RAW+FINE]/[RAW+STD.]/[RAW] ([Picture Quality])
 - [Filter Settings]
- Bracket recording is not available while you are using the following functions:
 - SH burst recording
 - [Time Lapse Shot]
 - [Stop Motion Animation] (when [Auto Shooting] is set)
 - High Resolution mode

[More Settings] (Exposure Bracket)

[Step]

Sets the image count and exposure compensation step.

[3•1/3] (record 3 images in 1/3 EV steps) to [7•1] (record 7 images in 1 EV steps)

[Sequence]

Sets the order in which images are recorded.

[Single Shot Setting]

[]: Takes only one image each time the shutter button is pressed.

[]: Takes all of the set number of images when the shutter button is pressed once.

• The [BKT] icon blinks until all of the set number of pictures is taken.



 When you record images with Exposure Bracket after setting the exposure compensation value, the images recorded are based on the selected exposure compensation value.

[More Settings] (Aperture Bracket)

[Image Count]

[3]/[5]: Records the set number of images while alternately setting the aperture value in the sequence of one before and then one after using the initial aperture value as the reference.

[ALL]: Records images using all aperture values.

Example when the initial position is set to F8.0 (S-R2060)

(1) 1st image, (2) 2nd image, (3) 3rd image ... (7) 7th image

[More Settings] (Focus Bracket)

[Step]

Sets the focus adjustment step.

 The distance that the focus point is moved becomes shorter if the initial focus point is close, and longer if it is far away.

[Image Count]

Sets the image count.


This cannot be set when taking burst pictures.
 Burst pictures are taken while the shutter button is pressed.

[Sequence]


[0/-/+]: Records while alternately moving the focus point in the sequence of forward and then backward using the initial focus point as the reference.

[0/+]: Records while moving the focus point toward the far side using the initial focus point as the reference.

Example when [Sequence]: [0/-/+] is set

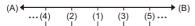

Example when [Sequence]: [0/+] is set

 

- (A) Focus: closer
- (B) Focus: more distant
- (1) 1st image, (2) 2nd image ... (5) 5th image ...



- When [Focus Limiter] is set, recording is within the set range where AF works.
- Pictures recorded with Focus Bracket are displayed as images of one group.
 Group Images: 461)

[More Settings] (White Balance Bracket)

Rotate wo or loset the correction step and then press lose.



 
Rotate to the right:

Horizontal direction ([A] - [B])

Rotate to the left:

Vertical direction ([G] - [M])

The correction step can also be set by touching [▶◀]/[◀▶]/[◀▶]/[▼]/[▼].




[More Settings] (White Balance Bracket (Color Temperature))

Rotate 🛥 or 🔘 to set the correction step and then press 😱 .



 • The correction step can also be set by touching []/[].



[Silent Mode]



This disables all operation sounds and light output at once.

The audio from the speaker will be muted and the AF assist light will be set to forced off mode

- The following settings are fixed:
 - [AF Assist Light]: [OFF]
 - [Beep Volume]: [**☼**] (OFF)
 - [AF Beep Volume]: [♪X] (OFF)
 - [Shutter Vol.]: [<u>₩</u>] (OFF)

Video:

→ [] → [] → Select [Silent Mode]

Settings: [ON]/[OFF]





- Even when [ON] is set, the following functions light/blink:
 - Charging light/Network connection light
 - Card access lights
 - Self-timer light
- Use this function at your own responsibility sufficiently considering the privacy, portrait, and other rights of subjects.

[Synchro Scan(Photo)]



The flicker or horizontal stripes of the light source can be mitigated by making fine adjustments to the shutter speed.

The shutter speed set in Synchro Scan is saved separately from the shutter speed used for normal recording. In the Synchro Scan setting screen, you can call up the current shutter speed for normal recording and adjust it.

- 1 Set the recording mode to [S] or [M].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Set [Synchro Scan(Photo)].
 - • [♠] → [Synchro Scan(Photo)] → [ON]



Set the shutter speed.

Press ▲▼◀► to select the numeric value and then press



- The shutter speed can be set in the range between 1/48.0 and 1/8192.0 of a second
- Press ▲▼ to change the shutter speed in 1/4 TV intervals. Press ◀▶ to make fine adjustments.
- You can call up the current shutter speed for normal recording by pressing [DISP.].
- Make adjustments to the shutter speed while looking at the screen until there is no noticeable flickering or horizontal stripes.





• There may be a difference between what you see on the recording screen and the actual results of recording. We recommend shooting some tests beforehand.

[Min. Shutter Speed]





Sets the minimum shutter speed when the ISO sensitivity is set to [AUTO].



[AUTO]

The camera automatically sets the minimum shutter speed.

[1/8000] to [1/1]



 The shutter speed may become slower than the set value in recording situations where correct exposure cannot be achieved.

[Shutter Delay]



To reduce camera shake and shutter-induced blur, the shutter is released after the specified time has passed since the shutter button was pressed.



Settings: [8SEC]/[4SEC]/[2SEC]/[1SEC]/[OFF]



- When the following functions are being used, [Shutter Delay] is not available:
 - Video recording/SH burst recording
 - High Resolution mode

Image Stabilizer

• Image Stabilizer Settings: 258



This camera can use both the in-body image stabilizer and the in-lens image stabilizer.

It is compatible with the Dual I.S.2 system that is an effective combination of the 2 image stabilizers.

Furthermore, during video recording, you can use the 5-Axis Hybrid Image Stabilizer that incorporates electronic stabilization.

Combinations of lenses and image stabilizers (As of May 2024) Image stabilizers that can be used will differ depending on the attached lens.

Attached lens	Available image stabilizer	Example of icon
Panasonic lenses with image	Body+Lens	DUAL2
stabilization function	(Dual I.S.2)	((\\ddash))
Other manufacturers' lenses with image stabilization function	Body or Lens	BODY / LENS
Lenses without image stabilizer function	Body	BODY (()))
Lenses without function to communicate with this camera	Body	BODY ((山))

[•] The 5-Axis Hybrid Image Stabilizer (→[E-Stabilization (Video)]: 261) can be used with any lenses.

Using the Image Stabilizer

- When using a lens with an O.I.S. switch, set the switch on the lens to [ON].
- When using a lens that does not have a communication function with this camera, after turning on the camera, a message asking for confirmation of the lens information is displayed.

Correctly operating the image stabilization function requires that the focal length be set to match the attached lens.

Set the focal length in accordance as prompted by the message.

This can also be set using the menu. (→[Lens Information]: 264)



When the shutter button is pressed halfway, the camera shake alert icon [(([O]))] may be displayed on the recording screen.

If this is displayed, we recommend using a tripod, the self timer.

• We recommend turning off the image stabilizer function when using a tripod.



 The image stabilizer may cause vibration or produce operational sound during operation, but these are not malfunctions.



 When using a lens that does not have a communication function with this camera, you can hide the message asking for confirmation of the lens information that is displayed after turning on the camera:

(→[Lens Info. Confirmation]: 553)

• You can display the reference point and check the camera shake status:

(→[I.S. Status Scope]: 543)

Image Stabilizer Settings

Set the image stabilizer operation to match the recording situation.

[Operation Mode]

Sets the stabilization movement (blur) to match the recording method (normal, panning). (→[Operation Mode]: 260)

[Body(B.I.S.) / Lens(O.I.S.)]

[((i))] ([Body]): The in-body image stabilizer corrects for vertical, horizontal, and rotational shake.

[LENS] ([Lens + Body (Roll)]): The in-lens image stabilizer corrects for vertical and horizontal shake, while the in-body image stabilizer corrects for rotational shake.

 This can be set when using other manufacturers' lenses with an image stabilization function

[When to Activate]

[ALWAYS]: The image stabilizer is always operating.

[HALF-SHUTTER]: The image stabilizer operates when the shutter button is pressed halfway.

[E-Stabilization (Video)]

Through the combined use of the in-lens, in-body, and electronic image stabilizers, corrections are made to camera shake on 5 axes during video recording along the vertical, horizontal, roll, pitch, and yaw axes, and to the peripheral distortion that readily occurs when you are using a wide-angle lens. (5-Axis Hybrid Image Stabilizer) (>[E-Stabilization (Video)]: 261)

[Boost I.S. (Video)]

Increases the effectiveness of the image stabilizer during video recording.

This effect can help provide a stable composition when you want to perform recording from a fixed perspective. (>[Boost I.S. (Video)]: 262)

[Anamorphic (Video)]

You can switch to an image stabilizer that suits anamorphic recording. (→[Anamorphic (Video)]: 263)

[Lens Information]

When using a lens that does not have a communication function with the camera, register the lens information in the camera. (**)[Lens Information]: 264)



- When the following functions are being used, [When to Activate] is fixed to [ALWAYS]:
- [(山)] ([Body(B.I.S.) / Lens(O.I.S.)])
- [☆M] mode
- [S&Q] mode
- Video recording
- When the following functions are being used, [E-Stabilization (Video)] is not available:
 - [S&Q] mode
 - [Live Cropping]
- While you are using the following functions, [HIGH] in [E-Stabilization (Video)] is not available:
 - Other than [OFF] in [Anamorphic (Video)]

[Operation Mode]

Set the stabilization movement (blur) to match the recording method (normal, panning).

((**\|**)) [Normal]

Corrects vertical, horizontal, and rotational camera shake.

This function is suitable for normal recording.

([Panning (Auto)]

Automatically detects the panning direction, and corrects vertical and horizontal camera shake.

This function is suitable for panning.

((W) [Panning (Left/Right)]

Corrects vertical camera shake.

This is suitable for horizontal panning.

([Panning (Up/Down)]

Corrects horizontal camera shake.

This is suitable for vertical panning.

[OFF]

Turns the image stabilization function OFF.

- Operation modes that can be used will differ depending on the used lenses and on [Body(B.I.S.) / Lens(O.I.S.)] settings.
- [Panning (Auto)] is not displayed when using other manufacturers' lenses with an image stabilization function with [Body(B.I.S.) / Lens(O.I.S.)] set to [(IIII)]. Set to either [Panning (Left/Right)] or [Panning (Up/Down)] to suit the panning direction.
- When using lenses with an O.I.S. switch, the camera's operation mode cannot be set to [OFF]. Set the switch on the lens to [OFF].
- When the following functions are being used, [Operation Mode] switches to [((\(\bigcup_{\text{\bigcup}}\))]
 ([Normal]):
 - [∰M] mode
 - [S&Q] mode
 - Video recording

[E-Stabilization (Video)]

Through the combined use of the in-lens, in-body, and electronic image stabilizers, corrections are made to camera shake on 5 axes during video recording along the vertical, horizontal, roll, pitch, and yaw axes, and to the peripheral distortion that readily occurs when you are using a wide-angle lens. (5-Axis Hybrid Image Stabilizer)

[HIGH]

Large shakes and peripheral distortion are corrected electronically.

The angle of view is narrower than [STANDARD].

• [[is displayed on the screen during video recording.

[STANDARD]

Shakes and peripheral distortion are corrected electronically.

The angle of view is narrower.

• [is displayed on the screen during video recording.

[OFF]

Turns the electronic image stabilizer (video) OFF.



- There will be variation in the effectiveness of the correction depending on the video mode used for recording and the recording conditions.
- Using [E-Stabilization (Video)] may cause a drop in resolution.

* [Boost I.S. (Video)]

Increase the effectiveness of the image stabilizer during video recording. This effect can help provide a stable composition when you want to perform recording from a fixed perspective.

Settings: [ON]/[OFF]

- When [Boost I.S. (Video)] is operating, [] is displayed on the recording screen.
- To change composition while recording, first set this to [OFF] before moving the camera.

To set this to [OFF] during recording, use the Fn button. (→Fn Buttons: 488)

• Longer focal lengths will result in weaker stabilization.



• When [Body(B.I.S.) / Lens(O.I.S.)] is set to [((()))], [Boost I.S. (Video)] is not available.

[Anamorphic (Video)]

You can switch to an image stabilizer that suits anamorphic recording.

Settings:

- Make settings to suit the magnification of the anamorphic lens you are using.
- While [Anamorphic (Video)] is functioning, the set magnification appears on the image stabilizer icons on the recording screen, as shown by [\(\frac{A2.0}{\(\mathcal{e}\)}\)] and [\(\frac{A2.0}{\(\mathcal{e}\)}\)].



- When [Boost I.S. (Video)] is set, [Boost I.S. (Video)] is prioritized.
- Image stabilizer functions on your lens may not work correctly. Turn off the image stabilizer function on your lens if this is the case.

[Lens Information]

Register the information for lenses that cannot communicate with the camera.

Match the in-body image stabilizer with the information of the lens you register.



 In the default setting, the lens information for 6 lenses with a focal length of between 24 mm and 135 mm is registered.

The lens information for up to 12 lenses can be registered.

Registering, modifying, and deleting lens information

- Press ▲ ▼ to select the lens information and then press [DISP.].
 - If lens information that has not been registered is selected, press which to proceed to Step 3.



Press ▲ ▼ to select [Edit], [Sorting], or [Delete] and then press 2



- You can change the display order of lens information by selecting [Sorting].
- The lens information is deleted when you select [Delete].
- You cannot delete the lens information for a lens that is being used.
- 3 Enter the lens Information.
 - The lens information changes if the lens information has already been registered.
- 4 (If lens information that has not been registered is selected) Press [DISP.] to register the lens information.

[Focal Length]

Enter the focal length.

• The live view images can be enlarged for display when you rotate 🚳 .



[I.S. Area]

You can set the range of stabilisation for the image stabiliser so that vignetting does not occur due to the image stabiliser.

[70%]/[80%]/[90%]/[100%]

- Rotate 🚳 to select the range of stabilisation, then press 😱 to confirm.
- When the four edges are selected by pressing ▲▼◀▶, the in-body image stabiliser works and you can see if there is any vignetting. If vignetting has occurred, set again to a smaller range.

[Lens Name]

Register the lens.

- How to enter characters (→Entering Characters: 90)
- Up to a maximum of 30 characters can be entered.

Metering / Exposure / ISO Sensitivity

This chapter describes recording modes for determining exposure and ISO sensitivity.

• [Metering Mode]: 267

• Program AE Mode: 269

• Aperture-Priority AE Mode: 273

• Shutter-Priority AE Mode: 276

Manual Exposure Mode: 279

• Preview Mode: 284

Exposure Compensation: 286

Locking Focus and Exposure (AF/AE Lock): 290

ISO Sensitivity: 292

[Metering Mode]









[(Multi-metering)

Method in which the most suitable exposure is measured by judging the allocation of brightness on the whole screen.

[()] (Center-weighted)

Method used to perform measuring which focuses on the center of the screen.

[•] (Spot)

Method used to measure the extremely small part around the spot-metering target (A).

• When you move the AF area, the spot metering target also moves to match.



[• '] (Highlight-weighted)

Method used to perform measuring which focuses on the highlighted parts of the screen to prevent overexposure.

This is suitable for theatre photography, etc.



- The standard value for standard exposure can be adjusted:
 - (→[Exposure Offset Adjust.]: 520)
- You can assign the function that records with the metering mode set to []
 (Spot) once only to an Fn button:

(→[1 Shot Spot Metering]: 493)

Program AE Mode

 
Program Shift: 271




In [P] mode (Program AE mode), the camera automatically sets the shutter speed and aperture value for the brightness of the subject.

You can also use Program Shift to change combinations of shutter speed and aperture values while keeping the same exposure.

- 1 Set the recording mode to [P].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- Press the shutter button halfway.
 - This displays the aperture value and shutter speed value on the recording screen.



  If the correct exposure is not achieved, the aperture value (A) and shutter speed (B) blink red.



3 Start recording.

Program Shift

 
You can change the shutter speed and aperture value combination set automatically by the camera while maintaining the same exposure. With this, you can, for example, make the background more defocused by decreasing the aperture value or capture a moving subject more dynamically by slowing the shutter speed.

1 Press the shutter button halfway.

 This displays the aperture value and shutter speed value on the recording screen. (Approx. 10 seconds)

2 Rotate wor while the values are displayed.

• This displays the Program Shift icon (C) on the recording screen.



3 Start recording.

Canceling Program Shift

- Set the camera on/off switch to [OFF].
- Rotate 🗻 or 🔘 until the Program Shift icon disappears.



• You can customize dial operations:

(→[Dial Set.]: 533)

• The recording screen can display an exposure meter indicating the relationship between aperture value and shutter speed:

(→[Expo.Meter]: 541)

Aperture-Priority AE Mode





In [A] mode (Aperture-Priority AE mode), you can set the aperture value before recording.

The shutter speed will be automatically set by the camera.



Smaller aperture values

It becomes easier to defocus the background.



Larger aperture values

 
It becomes easier to bring everything into focus including the background.

Set the recording mode to [A].

• Set the mode dial. (→ Selecting the Recording Mode: 70)

2 Set the aperture value.





3 Start recording.

 If the correct exposure is not achieved when the shutter button is pressed halfway, the aperture value and the shutter speed blink red.

Depth of Field Characteristics

Aperture value	Small	Large
Focal length of lens	Telephoto	Wide-angle
Distance to subject	Near	More distant
	Shallow (narrow)	Deep (wide)
Depth of field	Example: When you want	Example: When you want
(area in sharp focus)	to take a image with a	to take a image with focus
	defocused background.	as far as the background.



 The effects of the set aperture value and shutter speed will not be visible on the recording screen.

To check the effects on the recording screen, use [Preview]. (→Preview Mode: 284)

You can set the preview of the aperture effect to constantly operate in [A] mode to check the depth of field while recording:

(→[Constant Preview]: 535)

- The brightness of the recording screen and of actual recorded images may differ.
 Check the images on the playback screen.
- When using a lens with an aperture ring, set the position of the aperture ring to other than [A] to use the aperture value of the lens.



· You can customize dial operations:

(→[Dial Set.]: 533)

 
 The recording screen can display an exposure meter indicating the relationship between aperture value and shutter speed:

(→[Expo.Meter]: 541)

Shutter-Priority AE Mode







The aperture value will be automatically set by the camera.



Slower shutter speeds

It becomes easier to capture motion



 
Faster shutter speeds

 
It becomes easier to freeze motion

Set the recording mode to [S].

• Set the mode dial. (→ Selecting the Recording Mode: 70)

2 Set the shutter speed.





3 Start recording.

• If the correct exposure is not achieved when the shutter button is pressed halfway, the aperture value and the shutter speed blink red.



- There may be noticeable noise when recording with long exposure.
- The effects of the set aperture value and shutter speed will not be visible on the recording screen.

To check the effects on the recording screen, use [Preview]. (→ Preview Mode: 284)

The brightness of the recording screen and of actual recorded images may differ.
 Check the images on the playback screen.



· You can customize dial operations:

(→[Dial Set.]: 533)

 The recording screen can display an exposure meter indicating the relationship between aperture value and shutter speed:

(→[Expo.Meter]: 541)

Manual Exposure Mode

- Available Shutter Speeds (Sec.): 282
- [T] (Time): 283



In [M] mode (Manual Exposure mode), you can record by manually setting the aperture value and shutter speed.

In default settings, the ISO sensitivity is set to [AUTO].

As a result, the ISO sensitivity will be adjusted according to the aperture value and shutter speed.

Exposure compensation can also be used when ISO sensitivity is set to [AUTO].

 
1 Set the recording mode to [M].

Set the mode dial. (→Selecting the Recording Mode: 70)

2 Set the aperture value and shutter speed.

Rotate to set the aperture value (A), and to set the shutter speed (B).





3 Start recording.

 If the correct exposure is not achieved when the shutter button is pressed halfway, the aperture value and the shutter speed blink red.

Manual Exposure Assist

When ISO sensitivity is set to other than [AUTO], Manual Exposure Assist (example: [mat 1]) will be displayed on the recording screen.

You can check the difference between the current exposure value and the standard exposure (±0) measured by the camera.

Use Manual Exposure Assist as a guide.
 We recommend checking the images on the playback screen when recording.

Available Shutter Speeds (Sec.)

• [ELEC.]

[T] (Time, max. approx. 60 seconds*), 60* to 1/8000

* When the ISO sensitivity is higher than 1600, the shutter speed will be faster than 60 seconds.



- There may be noticeable noise when recording with long exposure.
- The effects of the set aperture value and shutter speed will not be visible on the recording screen.

To check the effects on the recording screen, use [Preview]. (→Preview Mode: 284)

You can set the preview of the aperture effect and the shutter speed effect to constantly operate in [M] mode to check the depth of field and movement of the subject while recording:

(→[Constant Preview]: 535)

- The brightness of the recording screen and of actual recorded images may differ.
 Check the images on the playback screen.
- When using a lens with an aperture ring, set the position of the aperture ring to other than [A] to use the aperture value of the lens.



· You can customize dial operations:

(→[Dial Set.]: 533)

 The recording screen can display an exposure meter indicating the relationship between aperture value and shutter speed:

(→[Expo.Meter]: 541)

[T] (Time)

If you set the shutter speed to [T] (Time) and press the shutter button fully, the shutter stays open. (max. approx. 60 seconds*)

The shutter closes when you press the shutter button again.

Use this when you want to keep the shutter open for a long time to record images of fireworks, night scenery or a starry sky.

* When the ISO sensitivity is higher than 1600, the shutter speed will be faster than 60 seconds.



- We recommend using a tripod during Time recording.
- · Time recording may create noticeable noise.



- When the following functions are being used, Time is not available:
 - SH burst recording
 - [Time Lapse Shot]
 - [Stop Motion Animation] (when set to [Auto Shooting])
 - High Resolution mode
 - [Bracketing]

Preview Mode



You can check the effects of aperture on the recording screen by physically closing the aperture blades of the lens to the aperture value set for actual recording.

In addition to the effects of aperture, you can check the effects of shutter speed at the same time.

- Register [Preview] to the Fn button. (→Fn Buttons: 488)
- 2 Check the aperture effect.
 - Press the Fn button set in Step 1.
- Each press of the button switches between the effect preview screens.

Aperture effect: OFF Shutter speed effect: OFF

↓

Aperture effect: ON

Shutter speed effect: OFF

#

Aperture effect: ON Shutter speed effect: ON



- It is possible to record in preview mode.
- Range for shutter speed effect check is 8 seconds to 1/8000 of a second.
- Depending on the [Constant Preview] setting, there are preview screens that cannot be displayed.



- You can always confirm the effects of aperture on the recording screen when in [A]/[M] mode:
 - (→[Constant Preview]: 535)
- You can assign the function that enables you to view the aperture effect just while the button is being pressed to an Fn button:
 - (→[Preview Aperture Effect]: 497)

Exposure Compensation

• [i.Dynamic Range]: 289



You can compensate the exposure when the standard exposure determined by the camera is too bright or too dark.

You can adjust the exposure in 1/3 EV steps in a range of ± 5 EV. When recording videos, the range changes to ± 3 EV.

1 Press [🔁].



2 Compensate the exposure.

● Rotate 🗻 or 🚳 .





3 Confirm your selection.

• Press the shutter button halfway.



- In [M] mode, you can compensate the exposure by setting the ISO sensitivity to [AUTO].
- When the exposure compensation value falls below or exceeds ±3 EV, the brightness of the recording screen will no longer change.
 - Press the shutter button halfway or use AE Lock to reflect the value on the recording screen.
- The set exposure compensation value is stored even if you turn off the camera.



- The standard value for standard exposure can be adjusted:
 - (→[Exposure Offset Adjust.]: 520)
- You can set the exposure compensation value to be reset when the camera is turned off:
 - (→[Exposure Comp. Reset]: 522)
- Exposure Bracket can be set on the exposure compensation screen:
 - (→[Exposure Comp. Disp. Setting]: 532)
- You can assign the function that matches the aperture value and shutter speed to the standard exposure to an Fn button:
 - (→[One Push AE]: 493)

[i.Dynamic Range]





Contrast and exposure are compensated when the brightness difference between the background and subject is great.



Settings: [AUTO]/[HIGH]/[STANDARD]/[LOW]/[OFF]



- Compensation effect may not be achieved depending on the recording conditions
- When the following functions are being used, [i.Dynamic Range] is not available:
 - [Like709]/[V-Log]/[REAL TIME LUT]/[Like2100(HLG)]/[Like2100(HLG) Full Range] ([Photo Style])
 - [Filter Settings]

Locking Focus and Exposure (AF/AE Lock)





Lock the focus and exposure in advance to take pictures with the same focus and exposure settings while changing the composition.

This is useful when you want to bring an edge of the screen into focus or there is a backlight, for example.

- Register [AE LOCK], [AF LOCK], or [AF/AE LOCK] to the Fn button. (→Fn Buttons: 488)
 - These cannot be registered to [Fn3] to [Fn7].

[AE LOCK]

The exposure is locked.

[AF LOCK]


The focus is locked.

[AF/AE LOCK]

Both focus and exposure are locked.

2 Lock focus and exposure.

- Press and hold the Fn button.
- If focus is locked, then the AF lock icon (A) will be displayed.
- If exposure is locked, then the AE lock icon (B) will be displayed.

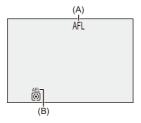

3 Hold the Fn button to decide on the composition and then perform recording.

Press the shutter button fully.



• Program Shift can be set even when AE is locked.



- You can maintain lock even without pressing and holding the Fn button:
 (→[AF/AE Lock Hold]: 524)
- You can make fine manual adjustments to the focus during AF Lock:

(→[AF+MF]: 525)

ISO Sensitivity

- [Dual Native ISO Setting]: 296
- [ISO Sensitivity (photo)]: 297



 


You can set light sensitivity (ISO sensitivity).

With the default settings, you can set 100 to 51200 in 1/3 EV increments. This camera supports Dual Native ISO which enables recording at high sensitivity with reduced noise by switching the base sensitivity.

The base sensitivity can also be fixed as necessary.


1 Press [ISO] (▲).



2 Select ISO sensitivity.

 ● Rotate 🚤 or 🔘 .





3 Confirm your selection.

Press the shutter button halfway.



Characteristics of the ISO Sensitivity

By increasing the ISO sensitivity, the shutter speed can be increased in dark places to prevent camera shake and subject blur. However, higher ISO sensitivities also increase the amount of noise in the recorded images.

Setting Items (ISO Sensitivity)

[AUTO]

The ISO sensitivity is automatically adjusted according to the brightness.

- Taking picture: Maximum [6400]^{*1}
- Video recording: Maximum [6400]*2

[100] to [51200]

The ISO sensitivity is fixed at the selected value.

- The available ISO sensitivity range changes according to the setting of [Dual Native ISO Setting] in the [Photo]/[Video] ([Image Quality]) menu. (→[Dual Native ISO Setting]: 296)
- You can extend the ISO sensitivity range in between a lower limit of [50] and an
 upper limit of [204800] by setting [Extended ISO] (→[Extended ISO]: 519) to [ON] in
 the [Custom] ([Image Quality]) menu.
- *1 Default setting. The upper limit can be changed with [ISO Sensitivity (photo)].
- *2 Default setting. The upper limit can be changed with [ISO Sensitivity (video)].
- When the following functions are being used, the ISO sensitivity that can be set is restricted.
 - High Resolution mode: Up to an upper limit of [3200]
 - [Filter Settings]: Up to an upper limit of [6400]
 - [Cinelike D2]/[Cinelike V2] ([Photo Style]): Down to a lower limit of [200]
 (The lower limit changes to [100] when [Extended ISO] is set.)
 - [Like709] ([Photo Style]): Down to a lower limit of [100]
 - [V-Log] ([Photo Style]): Down to a lower limit of [640], up to an upper limit of [51200]
 - (The lower limit changes to [320] when [Extended ISO] is set.)
 - [Like2100(HLG)]/[Like2100(HLG) Full Range] ([Photo Style]): Down to a lower limit of [400]
- When [Photo Style] is set to [REAL TIME LUT], the range of ISO sensitivity levels
 you can use depends on the base Photo Style of the applied LUT file.



- You can set upper and lower limits for ISO Auto:
 - (→[ISO Sensitivity (photo)]: 297, [ISO Sensitivity (video)]: 359)
- \bullet You can change the intervals between ISO sensitivity settings values:
 - (→[ISO Increments]: 519)
- The setting range of ISO sensitivity can be extended:
 - (→[Extended ISO]: 519)
- You can set the lower limit for shutter speed for ISO Auto:
 - (→[Min. Shutter Speed]: 253)
- \bullet You can set the upper limit for ISO Auto on the ISO sensitivity settings screen:
 - (→[ISO Displayed Setting]: 532)
- You can change the units for sensitivity to dB when recording video:
 - (→[SS/Gain Operation]: 378)

[Dual Native ISO Setting]



iA P A S M ≅M S&Q

You can set whether to switch the base sensitivity automatically or to fix it.

→ []/[:] → [. Select [Dual Native ISO Setting]

[AUTO]

The base sensitivity is automatically switched according to the brightness.

- ISO sensitivity can be set within the following ranges:
 - [AUTO] / [100] to [51200]
 - When [Extended ISO] is set: [AUTO] / [50] to [204800]

[LOW]

Sets the base sensitivity for low sensitivity.

- ISO sensitivity can be set within the following ranges:
 - [AUTO] / [100] to [800]
 - When [Extended ISO] is set: [AUTO] / [50] to [800]

[HIGH]

The base sensitivity is automatically switched according to the brightness.

- ISO sensitivity can be set within the following ranges:
 - [AUTO] / [640] to [51200]
 - When [Extended ISO] is set: [AUTO] / [320] to [204800]



- [Dual Native ISO Setting] is fixed to [AUTO] in the following cases:
 - [iA] mode
 - High Resolution Mode (When [Photo Style] is set to [V-Log] or [REAL TIME LUT] (base Photo Style is [V-Log]))

[ISO Sensitivity (photo)]







Sets the lower and upper limits for ISO sensitivity when ISO sensitivity is set to [AUTO].



♠ → [♠] → Select [ISO Sensitivity (photo)]

[ISO Auto Lower Limit Setting]

Sets the lower limit for ISO sensitivity when ISO sensitivity is [AUTO].

Set in the range between [100] and [25600].

[ISO Auto Upper Limit Setting]

Sets the upper limit for ISO sensitivity when ISO sensitivity is [AUTO].

• Set to [AUTO] or in the range between [200] and [51200].

White Balance / Image Quality

This chapter describes functions that enable you to record images how you imagine them, such as white balance and Photo Style.

White Balance (WB): 299

• [Photo Style]: 307

• [Filter Settings]: 320

• [REAL TIME LUT]: 326

• [LUT Library]: 328

Lens Compensation: 334

White Balance (WB)

Adjusting the White Balance: 305





 
White balance (WB) is a function that corrects the color cast produced by the light illuminating the subject.

It corrects the colors so that white objects appear in white to make the overall color closer to what is seen by the eye.

Normally, you can use auto ([AWB], [AWBc] or [AWBw]) to obtain the optimal white balance.

Set this function when the coloring of the image is different from what you expected, or you want to change the coloring to capture the ambience.

1 Press [WB] (►).



2 Select the white balance.





3 Confirm your selection.

• Press the shutter button halfway.

Setting Items (White Balance)

[AWB]

Auto

[AWBc]

Auto (Reduces the reddish hue under an incandescent light source)

[AWBw]

Auto (Leaves the reddish hue under an incandescent light source)

[☆]

Clear sky



Cloudy sky

[☆⊾]

Shade under a clear sky

[-़ि-]


Incandescent light

[] to []

Set mode 1 to 4 (→Registering the White Set: 304)

[1₃|K₁] to [1₃|K₄]

 Color temperatures 1 to 4 (→Color Temperature Setting: 304)



- (1) [AWB] will work within this range.
- (2) Blue sky
- (3) Cloudy sky (Rain)
- (4) Shade
- (5) Sunlight
- (6) White fluorescent light
- (7) Incandescent light bulb
- (8) Sunrise and sunset
- (9) Candlelight

K=Kelvin Color Temperature



 Under lighting such as fluorescent or LED lighting, the appropriate white balance will vary depending on the lighting type.

Use [AWB], [AWBc], [AWBw] or [] to [].



• The white balance is fixed to [AWB] while [Filter Settings] is being used.



• It is possible to temporarily lock auto white balance:

(→[AWB Lock Setting]: 521)

Registering the White Set

Take pictures of a white object under the light source of the recording location to adjust the white balance until it appears white.

- 1 Press [WB] (►) and then select any value from [♣] to [♣].
- 2 Press ▲.
- 3 Aim the camera at a white object so that it appears inside the frame at the center of the screen and then press
 - This will set the white balance and return you to the recording screen.

Color Temperature Setting

Set the numeric value for the white balance color temperature.

- 1 Press [WB] (►) and then select any value from [1 to [1 to [1 to]].
- 2 Press ▲.
 - The color temperature setting screen is displayed.
- 3 Press ▲ ▼ to select the color temperature and then press 📦 .
 - You can set the White Balance Bracket (Color Temperature) by rotating wo or (⑤) . (→[More Settings] (White Balance Bracket (Color Temperature)): 248)

 


- You can set a color temperature from [2500K] to [10000K].
- In [\(\text{\tilde{\text{\texi}\tint{\text{\text{\text{\text{\texi}\tilint{\text{\text{\text{\text{\tin}}}}}}}}}}}}}}}}} \end

Adjusting the White Balance

You can adjust the coloring even when the coloring you want to apply is not produced by the selected white balance.

- 1 Press [WB] (►).
- Select the white balance and then press ▼.
 - The adjustment screen is displayed.
- 3 Adjust the coloring.
 - ◄: [A] (AMBER: ORANGE)
 - ▲: [G] (GREEN: GREENISH)
 - ►: [B] (BLUE: BLUISH)
 - ▼: [M] (MAGENTA: REDDISH)
 - You can also touch the graph to make adjustments.
 - Press [DISP.] to return to the unadjusted state.



4 Confirm your selection.

• Press the shutter button halfway.



 When the white balance is adjusted, the color of its recording screen icon changes to the adjusted color.

Adjusting toward the [G] side will display [+], while adjusting toward the [M] side will display [-].

[Photo Style]





You can select the finishing settings of images to suit your subjects and expression styles.

The image quality can be adjusted for each Photo Style.

You can also apply the LUT file you have loaded in the camera and record pictures and videos.



STD [Standard]

The standard setting.

VIVD [Vivid]

A setting that produces a more vivid quality with higher saturation and contrast.

NAT [Natural]

A setting that produces a softer quality with lower contrast.

L.ClassicNeo]

A setting for a film-like effect that has a nostalgic, soft coloring.

Flat [Flat]

A setting that produces a flatter image quality with lower saturation and contrast.

LAND [Landscape]

A setting suited for sceneries with vivid blue skies and greens.

PORT [Portrait]

A setting suited for portraits with a healthy and beautiful skin tone.

MONO [Monochrome]

A monochrome setting with no color shades.

L.Monochrome]

A monochrome setting with rich gradation and crisp black accents.

L.Monochrome D]

A monochrome setting that creates a dynamic impression with enhanced highlights and shadows.

L.Monochrome S]

A setting for a monochrome effect with a gentle touch suited to portraits.

NONO [LEICA Monochrome]

A setting mode that realizes Leica monochrome mode, featuring deep contrasts between black and white.

CNED [Cinelike D2]

A setting that creates a film-like finishing touch using a gamma curve and gives priority to the dynamic range.

• This function is suitable for video editing processes.

\$ CNEV 2 [Cinelike V2]

A setting that creates a film-like finishing touch using a gamma curve that gives priority to the contrast.

₹7091 [Like709]

A setting that minimizes overexposure by applying a gamma curve correction equivalent to Rec.709 to perform compression (knee adjustment) of high-luminance areas. (→ Recording While Controlling Overexposure (Knee): 357)

 Rec.709 is an abbreviation of "ITU-R Recommendation BT.709", a standard for high-definition broadcasting.

VI.og [V-Log]

A gamma curve setting intended for post-production processing. (>Log Recording: 412)

• It allows you to add rich gradation to images during post-production editing.

REAL TIME LUT

You can apply the LUT file that was registered in [LUT Library]. (→ [LUT Library]: 328)

- [Sample LUT1] is applied in the default setting.
- The Photo Style acting as the base is set automatically, depending on the applied LUT file. ([V-Log] is set if there is no base Photo Style information in the LUT file.)
- Use My Photo Style when you want to change the Photo Style that will act as the base.
- The Photo Style can also be changed to [REAL TIME LUT] in the recording screen by pressing [LUT]. (→[REAL TIME LUT]: 326)

Selecting the LUT file to apply

- 1 Press ▲ ▼ to select [LUT] and then press [LUT].
- 2 Rotate we or (1) to select the LUT file to apply, then press (11).



3 Press the shutter button or video rec. button to start recording.

\$2100 [Like2100(HLG)]*1

A setting used to record HLG format video. (→HLG Videos: 417)

• [Luminance Level] is fixed to [64-940].

\$2100 Full Range]*1, 2

A setting used to record HLG format video. (→HLG Videos: 417)

• [Luminance Level] is fixed to [0-1023].

MY PHOTO STYLE 1] to [MY PHOTO STYLE 10]

Adjusts the image quality of Photo Style items to your preferred settings and registers these as My Photo Style items. (→Registering Settings in My Photo Style: 319)

• Effects up to [MY PHOTO STYLE 4] are displayed with the default settings.

Applying a LUT file

With image quality adjustments, you can apply up to 2 LUT files registered in the [LUT Library]. (→[LUT Library]: 328)

- When applying 2 LUT files, the images with [LUT1] applied have [LUT2] applied.
- The Photo Style will be the base Photo Style of the applied LUT file ([LUT1] if 2 LUT files are applied).

When applying a LUT file created with image editing software, select the [Photo Style] that is the same as the Photo Style used as the base when creating it. When you select a different [Photo Style], the images may not be displayed or recorded correctly.

- [\$\frac{*}{MY}\$] switches to [\$\frac{*}{LUT}\$] when [LUT1] or [LUT2] is applied in image quality adjustments.
- *1 Can only be selected when in the [∰M] mode and set to a 10-bit [Rec Quality].

 (→[Rec Quality]: 123)
- *2 You can set the items to display in the menu with [Show/Hide Photo Style] in [Photo Style Settings]. (→[Photo Style Settings]: 518)



- In [iA] mode, operation differs from that in other recording modes.
 - [Standard] or [Monochrome] can be set.
 - The setting will be reset to [Standard] when the camera is switched to another recording mode or it is turned off.
 - Image quality cannot be adjusted.
- The range of available ISO sensitivities is different when [Photo Style] is set to the following (->Setting Items (ISO Sensitivity): 294):
 - [Cinelike D2]/[Cinelike V2]/[Like709]/[V-Log]/[REAL TIME LUT](base Photo Style is [V-Log])/[Like2100(HLG)]/[Like2100(HLG) Full Range]

The range of available ISO sensitivities is also different for [LOW] and [HIGH] in [Dual Native ISO Setting].

Reset the exposure if necessary when ISO sensitivity changes.

- You can set the knee mode with [Like709]. (→Recording While Controlling Overexposure (Knee): 357)
- When [LUT] is set to [OFF] in the image quality adjustments of [REAL TIME LUT], [Photo Style] will operate the same as the Photo Style that acts as the base.
- When [Filter Settings] is being used, [Photo Style] is not available.

 


• You can make detailed Photo Style settings:

(→[My Photo Style Settings]: 518)

Adjusting Image Quality

- 1 Press ◀► to select the type of Photo Style.
- 2 Press ▲ ▼ to select an item and then press ◀► to adjust.
 - Adjusted items are indicated with [*].



- 3 Press 🚇 .
 - When the image quality is adjusted, the Photo Style icon on the recording screen is indicated with [*].

Settings Items (Image Quality Adjustment)

[Contrast]

Adjusts the contrast in the image.

[Highlight]

Adjusts the brightness of bright areas.

[Shadow]

Adjusts the brightness of dark areas.

[Saturation]

Adjusts the vividness of colors.

(Color Tone)

Adjusts blue and yellow tints.

(Hue)

Assuming that the reference point is red, this rotates the hue toward violet/magenta or yellow/green to adjust the coloring of the entire image.

[Filter Effect]

[Yellow]: Enhances the contrast. (Effect: weak) Records the sky with a clear blue.

[Orange]: Enhances the contrast. (Effect: medium) Records the sky with a darker blue

[Red]: Enhances the contrast. (Effect: strong) Records the sky with a much darker blue.

[Green]: Skin and lips of people appear in natural tones. Green leaves appear brighter and more enhanced.

[Off]

[Grain Effect]

[Low]/[Standard]/[High]: Sets the grain effect level.

[Off]

[Color Noise]

[On]: Adds color to the grain effect.

[Off]

S [Sharpness]

Adjusts the outlines in the image.

NR [Noise Reduction]

Adjusts the noise reduction effect.

• Increasing the effect may cause a slight drop in picture resolution.

DUAL [Dual Native ISO Setting]*3

Sets the Dual Native ISO. (→[Dual Native ISO Setting]: 296)

[SO [Sensitivity]*3

Sets the ISO sensitivity. (→ISO Sensitivity: 292)

WB [White Balance]*3

Sets the white balance. (→White Balance (WB): 299)

While [WB] is selected, press [] to display the white balance setting screen.
 Press [] again to return to the original screen.

LUT LUT 1 LUT 2 [LUT]

Applies the preset or the LUT file that was registered in [LUT Library]. (→[LUT Library]: 328)

- Select either [REAL TIME LUT] or one of [MY PHOTO STYLE 1] to [MY PHOTO STYLE 10] in [Photo Style].
- 2 Press ▲▼ to select [LUT] and then press [LUT].

LUT LUT1 LUT2 [LUT Opacity]

Adjusts the LUT file effect.

- *3 Available when the following is set while [MY PHOTO STYLE 1] to [MY PHOTO STYLE 10] are selected:
 - [★] → [♣:] → [Photo Style Settings] → [My Photo Style Settings] → [Add Effects] → [Sensitivity]/[White Balance] → [ON]

• The items that you can adjust the image quality for depend on the Photo Style type.

	SSTD. SVIVD SNAT SFLAT SLAND SPORT SCNED2 SCNEV2	\$€¢CLAS N	MONO LIMONO LIMONOD LIMONOS LIMONOS MONO	709L 2100 + LLG 2100 + HLG F 2100	>⊪, V-Log	₹ ĽUT
•	✓	✓	✓			√*4
I	✓	✓	✓			√*4
V	✓	✓	✓			√*4
([Saturation])	√	✓		✓		✓
([Color Tone])			✓			
	✓	✓		✓		
⊗			✓			
	√*7	✓	✓	√*7	√*7	✓
	√*5,7	√ *5		√ *5,7	√*5,7	√*4,5
6	✓	✓	✓	✓	✓	✓
NR	✓	✓	✓	✓	✓	✓
	√*6	√ *6	√ *6	√ *6	√*6	✓

- *4 Adjustment may not be possible depending on the base Photo Style.
- *5 Can be set when [Grain Effect] is one of [Low], [Standard], or [High].
- *6 You can set up to 2 LUT files when the [Photo Style] is My Photo Style.
- *7 Can be set when a LUT file is applied with My Photo Style.



- The effects of [Grain Effect] and [Color Noise] cannot be checked on the recording screen.
- [LUT] cannot be applied to RAW images. When [Picture Quality] is set to [RAW] for recording, a LUT file can be applied only to the live view and thumbnail displays in the playback screen.
- [Grain Effect] and [Color Noise] are not available when using the following function:
 - Video recording

Range Properties When Recording with a LUT File Applied

The following table shows the range properties for videos recorded with LUT files applied in Photo Style:

[Photo Style]	LUT file applied	[Luminance Level]		Range property
[REAL TIME LUT](base Photo	[Vlog_709]	Fixed to [16-255] ([64-1023])	⇒	Video range
Style is [V-Log])/ when [V-Log] is selected in My Photo Style	Other than [Vlog_709]	Fixed to [0-255] ([0-1023])	→	Full range
[REAL TIME LUT](base Photo Style is	[Vlog_709]		-	
[Like2100(HLG)])/ when [Like2100(HLG)] is selected in My Photo Style	Other than [Vlog_709]	Fixed to [64-940]	→	Video range
[REAL TIME LUT](base Photo Style is	[Vlog_709]		-	
[Like2100(HLG) Full Range])/when [Like2100(HLG) Full Range] is selected in My Photo Style	Other than [Vlog_709]	Fixed to [0-1023]	→	Full range

[REAL TIME LUT]		[0-255] ([0-1023])	→	Full range
(base Photo Style is other than the	[Vlog_709]	[16-235] ([64-940])/ [16-255] ([64-1023])	→	Video range
above)/ When other than the		[0-255] ([0-1023])	→	Full range
above is selected in My Photo Style Other than [Vlog_709]	[16-235] ([64-940])/ [16-255] ([64-1023])	→	Video range	



- When editing video with image editing software, we recommend using LUT files for full range.
- When generating LUT files from recorded video files using image editing software, we recommend using video files recorded with [Luminance Level] set to [0-255] ([0-1023]) or [16-235] ([64-940]).
- Use LUT files for full range when recording pictures.
 If you record with a LUT file for video range applied, it may not be possible to properly display or record the images.
- If there is a difference between the range property of the applied LUT file and the range property of the video file, it may not be possible to generate the images properly in the image editing software.
 - When loading the video files into the image editing software, select the correct range setting for each video file.
- The results of recording images with LUT files applied with this camera and the results of applying LUT files with image editing software will not match completely.

* Registering Settings in My Photo Style

 




- 1 Press ◀► to select the type of Photo Style.
- 2 Adjust the image quality.
 - My Photo Style displays the types of Photo Style at the top of image quality adjustment.

Select the base Photo Style.

- 3 Press [DISP.].
- 4 (When [MY PHOTO STYLE 1] to [MY PHOTO STYLE 10] is selected)



• A confirmation screen will be displayed.

On the confirmation screen, press [DISP.] to change the My Photo Style name. Up to 22 characters may be entered. Double-byte characters are treated as 2 characters.

How to enter characters (→Entering Characters: 90)

Changing the Registered Contents of My Photo Style

- Select any value from [MY PHOTO STYLE 1] to [MY PHOTO STYLE 10].
- 2 Press [DISP.] and then set the item.

[Load Preset Setting]

[Save Current Setting]

[Edit Title]

[Restore to Default]

[Filter Settings]

• [Simultaneous Record w/o Filter]: 325





This mode records with additional image effects (filters).

You can adjust the effect for each filter.

In addition, you can simultaneously take pictures without effects.

 
1 Set the [Filter Effect].



2 Select the filter.

- You can also select the image effect (filter) by touching the sample picture.
- Press [DISP.] to switch the screen in the order of normal display and guide display.

The guide display shows the description of each filter.



* Adjusting the Filter Effect

You can adjust the filter effect.

- Select the filter.
- 2 On the recording screen, press [WB] (▶).
- 3 Rotate a or to set.
 - To return to the recording screen, press [WB] (▶) again.
 - When the filter effect is adjusted, the filter icon on the recording screen is indicated with [*].



Filter	Items that can be adjusted
[Expressive]	Vividness
[Retro]	Coloring
[Old Days]	Contrast
[High Key]	Coloring
[Low Key]	Coloring
[Sepia]	Contrast
[Cross Process]	Coloring
[Bleach Bypass]	Contrast

Setting a Filter with Touch Operation



• The default settings are for the Touch Tab to not be displayed.

Set [Touch Tab] to [ON] in [Touch Settings] in the [Custom] ([Operation]) menu.

(→[Touch Settings]: 530)

- 1 Touch [].
- 2 Touch the item to set.

[👍]: Filter on/off

[EXPS]: Filter

[]: Filter effect adjustment





- White balance will be fixed to [AWB].
- The upper limit to ISO sensitivity is [6400].
- Depending on the filter, the recording screen may seem as if frames are missed.
- [Filter Effect] is not available when using the following function:
 - High Resolution mode
 - [Live Cropping]



 When displaying the [Filter Effect] setting screen using the Fn button, pressing [DISP.] displays the filter selection screen.

[Simultaneous Record w/o Filter]







You can simultaneously take pictures with no added filter effects.

⇒ [♠]/[♣²] ⇒ [Filter Settings] ⇒ Select [Simultaneous Record w/o Filter]

Settings: [ON]/[OFF]



- [Simultaneous Record w/o Filter] is not available when using the following functions:
 - Burst recording
 - [Time Lapse Shot]
 - [Stop Motion Animation]
 - [RAW+FINE]/[RAW+STD.]/[RAW] ([Picture Quality])
- [Bracketing]

 
[REAL TIME LUT]





Set the Photo Style to [REAL TIME LUT] and apply a LUT file.

1 Press [LUT].



When you first press [LUT], etc., after purchase, the QR code that takes you
to the site for downloading "LUMIX Lab" may be displayed.

2 Select the LUT.



- Press ◀► to select, and then press ∰.
- You can also select by rotating
 or
 o.
- The LUT file list is displayed when you press [DISP.].
- You can apply the LUT file that was registered in the [LUT Library]. (→[LUT Library]: 328)
- [Sample LUT1] is applied in the default setting.
- [\$\frac{1}{2}\sum_{\text{Log}}\$] is displayed on the recording screen when a LUT file has not been applied.
- To cancel Real Time LUT, press [Q].

[LUT Library]

• Base Photo Style of LUT files: 332





Register LUT files to the camera to use with Photo Style and LUT View Assist.

Using the "Panasonic LUMIX Lab" smartphone app, you can register LUT files on the smartphone in the [LUT Library] on the camera. (→LUT Library Operations: 596)



- The following LUT file can be used:
 - The ".vlt" format, which meets the requirements specified in the "VARICAM
 3DLUT REFERENCE MANUAL Rev 1.0"
 - The ".cube" format
- The ".cube" format LUT files are compatible with 2-point to 33-point 3D LUT.
- We recommend loading LUT files for full range onto the camera. If the range property is different, the images may not be displayed or recorded correctly.
- The number of characters that can be used in a file name differs depending on the file system of the card.

 
(Use alphanumeric characters for the file name)

FAT32 (SD memory card/SDHC memory card): Up to 8 characters (excluding extension).

exFAT (SDXC memory card): Up to 255 characters (including extension).

 Save the LUT file with a file extension of ".vlt" or ".cube" in the root directory of the card (the folder opened when the card is opened on a PC).

- Insert a card on which a LUT file is saved into the camera.
- Select [LUT Library].
 - 💮 → [🗱] → [📲] → [LUT Library]



- 3 Select the registration destination.

 - If you select a registered item, the LUT file will be registered by overwriting.



4 Select [Load].

- Press 🚇 .
- You can change the display order of LUT files by selecting [Sorting].
- You can change the registered name of LUT files by selecting [Edit Title].
- The registered LUT file is deleted when you select [Delete].



5 Select the LUT file to load.

Press ▲ ▼ to select, and then press





- The default setting is for [Vlog 709] and 3 sample LUTs to be registered.
- Up to 39 LUT files can be registered.
- [Sorting], [Delete] and [Edit Title] are not possible with [Vlog 709].
- [Sorting] and [Delete] are possible with the sample LUTs, but the default settings are restored when [Reset] is performed.
- With LUT files that have the Photo Style information (base Photo Style) set at the time of creation (".cube" format only), the base Photo Style icon is displayed.


Base Photo Style of LUT files

With Real Time LUT, the Photo Style information (base Photo Style) set in the LUT file is recognized to determine the Photo Style.

You can add the base Photo Style information to the LUT files (".cube" format only) you create yourself. Open the LUT file with a text editor and insert the Photo Style information under the title line.

 If there is a feature for selecting the character code in the text editor, select UTF-8.

 For example: LUT file (".cube" format)



- (A) Photo Style information
- (B) Identifier tag
- (C) Photo Style tag
- A half-width space is required between the identifier tag and the Photo Style tag.
- If the Photo Style information is absent or if it is not set correctly, [V-Log] is used as the base Photo Style.

List of Photo Style Information

#LUMIXPHOTOSTYLE STD: [Standard]

#LUMIXPHOTOSTYLE VIVD: [Vivid]

#LUMIXPHOTOSTYLE NAT: [Natural]

#LUMIXPHOTOSTYLE LCLASN: [L.ClassicNeo]

#LUMIXPHOTOSTYLE FLAT: [Flat]

#LUMIXPHOTOSTYLE LAND: [Landscape]

#LUMIXPHOTOSTYLE PORT: [Portrait]

#LUMIXPHOTOSTYLE MONO: [Monochrome]

#LUMIXPHOTOSTYLE LMONO: [L.Monochrome]

#LUMIXPHOTOSTYLE LMONOD: [L.Monochrome D]

#LUMIXPHOTOSTYLE LMONOS: [L.Monochrome S]

#LUMIXPHOTOSTYLE LEICAMONO: [LEICA Monochrome]

#LUMIXPHOTOSTYLE CNED2: [Cinelike D2] **#LUMIXPHOTOSTYLE CNEV2**: [Cinelike V2]

#LUMIXPHOTOSTYLE 709L: [Like709]

#LUMIXPHOTOSTYLE 2100HLG: [Like2100(HLG)]

#LUMIXPHOTOSTYLE 2100HLGF: [Like2100(HLG) Full Range]

#LUMIXPHOTOSTYLE VLOG: [V-Log]

Lens Compensation

- [Vignetting Comp.]: 334
- [Color Shading Compensation]: 335
- [Diffraction Compensation]: 339

[Vignetting Comp.]





When the screen periphery darkens as a result of the lens characteristics, you can record pictures with the brightness of the screen periphery corrected.



Settings: [ON]/[OFF]



- Compensation effect may not be achieved depending on the recording conditions.
- Noise in the periphery of the picture may stand out with higher ISO sensitivity.

[Color Shading Compensation]





Compensate for the coloring that occurs around the screen (color shading) due to the characteristics of the lens.

When using an L-Mount lens

The color shading is automatically compensated, but it is also possible to make manual fine adjustments.

- Select [Color Shading Compensation].
 - P | Color Shading Compensation
- 2 Adjust the red tint and blue tint.
 - Press ▲▼ to select [Red Tint]/[Blue Tint], then press ◀► to adjust.
 - You can also adjust by rotating 👛 or 🔘 .



- 3 Press to confirm the setting.
 - The adjusted value is not recorded.

When Using Other Than an L-Mount Lens

You can compensate for the color shading for other than L-Mount lenses and register the compensation details.

Select [Color Shading Compensation].

•

| Color Shading Compensation | → [| Color Shading Compensat

[MANUAL]

Compensate for the color shading of the attached lens.

- 1 Press ▲ ▼ to select [MANUAL] and then press ().
- 2 Press [DISP.] to execute color shading compensation.
 - Execute while the screen is filled with a subject that has no color variation, such as a white or gray one.
 - If further adjustment is required, press ▼ and make fine adjustments manually.
- 3 Press process to confirm the setting.
 - The compensation value and adjusted value are not recorded. To record them, press [DISP.] in the adjustment screen and make a preset registration.

[PRESET]

Compensate for the color shading of the attached lens and make a preset registration. (**) Registering presets: 337)

You can also call up presets that have already been registered.

[OFF]

The color shading compensation is not applied.

[ADJUST]

Fine-adjust the red tint and blue tint.

- The adjusted value is not recorded.
- If a compensation value already registered in [PRESET] is adjusted, [*] is displayed next to [PRESET].



- When [Color Shading Compensation] is operating, [CShd] is displayed on the recording screen.
- If you adjust a compensation value already registered in [PRESET], [*] is displayed next to [CShd].
- Compensation values and adjusted values that have not been registered as presets are cleared when you do the following:
 - Operating the camera on/off switch
 - Replacing the lens

Registering presets

You can register up to 12 sets of compensation settings.

- 1 Select [PRESET] in [Color Shading Compensation].
 - 💮 → [🖎]/[🎥] → [[Color Shading Compensation] → [PRESET]
- 2 Select any of [SET1] to [SET12] and press 🔞 .
- 3 Select [Compensate/Adjust] and then press ...
- 4 Press [DISP.] while the screen is filled with a subject that has no color variation, such as a white or gray one.
 - Color shading compensation is executed. Press
 - If further adjustment is required, press ▼ and make fine adjustments manually.
- 5 Select [Focal Length]/[Aperture] and then press 😱 .
 - Press ◀▶ to select the item and then press ▲▼ to enter the value.
- 6 Select [Note] and then press .
 - You can enter any information, such as a lens name, etc.
 Up to 26 characters may be entered. Double-byte characters are treated as 2 characters.
 - How to enter characters (→Entering Characters: 90)
- 7 Press [DISP.] to register the compensation settings.

Changing and deleting presets

- Select [PRESET] in [Color Shading Compensation].
 - | Color Shading Compensation | PRESET | PRE
- 2 Press ▲▼ to select a registered preset, then press [DISP.].
- - You can change the details in the registered preset when you select [Edit].
 Registering presets: 337)
 - You can change the display order of the presets by selecting [Sorting].
 - The preset is deleted when you select [Delete]. You cannot delete the preset that is being used.



- If you execute [Compensate/Adjust] from [Edit], the compensation value and adjusted value are reset and you can redo color shading compensation again.
- The information registered in [PRESET] is returned to the default settings when setup and custom settings are reset.

[Diffraction Compensation]





The camera raises the image resolution by correcting the blurriness caused by diffraction when the aperture is closed.



Settings: [AUTO]/[OFF]



- Compensation effect may not be achieved depending on the recording conditions
- · Noise may stand out with higher ISO sensitivity.

Video Settings

This chapter describes recording modes especially for videos, such as the Creative Video mode and the Slow & Quick mode, and settings available when recording videos.

- Recording Modes Specifically for Video (Creative Video/S&Q): 341
- Using AF (Video): 349
- Video Brightness and Coloring: 354
- Audio Settings: 360
- External Microphones (Optional): 368
- Time Code: 373
- Main Assist Functions: 376

Recording Modes Specifically for Video (Creative Video/S&Q)

- Displays Suited to Video Recording: 342
- Setting the Exposure for Recording Videos: 343
- Separating Settings for Recording Video and Pictures: 347



[AM] mode (Creative Video mode) and [S&Q] mode (Slow & Quick mode) are recording modes specifically for video.

In the [S&Q] mode, you can record smooth slow motion video and quick motion video by changing the frame rate.


In the recording modes specifically for video, you can start and stop video recording with the shutter button.

Change the exposure and audio settings with touch operation to prevent operation sounds from being recorded.

Settings such as exposure and white balance can be changed independent of picture taking settings.

Displays Suited to Video Recording

In the recording screen, the following parts switch to displays suited to video recording.

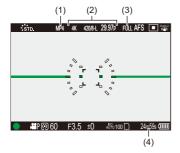

- (1) Recording file format (→ [Rec. File Format]: 122)
- (2) Recording quality (→[Rec Quality]: 123)/Slow & Quick setting (→Slow & Quick Video: 393)
- (3) Image area of video (→[Image Area of Video]: 136)
- (4) Video recording time (→Video Recording Time: 729)
- Examples of displays at the time of purchase.
 For information about the icons other than those described here (→Monitor Displays: 676)




• Even in the [iA]/[P]/[A]/[S]/[M] modes, as with the [☆M]/[S&Q] mode, you can switch to the display suited to video recording:

(→[Video-Priority Display]: 549)

Setting the Exposure for Recording Videos

- - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Set the exposure mode.
 - • → [:] → [: Exposure Mode] → [P]/[A]/[S]/[M]
 - You can perform the same exposure operations as the [P]/[A]/[S]/[M] modes.
- 3 Close the menu.
 - Press the shutter button halfway.
- 4 Start recording.
 - Press the shutter button (A) or video rec. button (B).

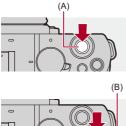



- 5 Stop recording.
 - Press the shutter button or video rec. button again.



- For information about recording slow motion video and quick motion video
 Slow & Quick Video: 393)
- You can disable the recording start/stop operations using the shutter button:
 (→[Assign REC to Shutter Button]: 528)
- You can assign the function that starts/ends video recording only in the [☐M] mode to an Fn button:
 - (→[Video Record(Creative Video)]: 496)

Operations During Video Recording

Change the exposure and audio settings with touch operation to prevent operation sounds from being recorded.



- With the default settings, the Touch Tab is not displayed.
 Set [Touch Tab] to [ON] in [Touch Settings] in the [Custom] ([Operation]) menu.
 (→[Touch Settings]: 530)
- **1** Touch [🔐] or [🕮].
- 2 Touch an icon.
 - F Aperture value
 - SS Shutter speed
 - **Exposure** compensation
 - ISO/GAIN ISO sensitivity/Gain (dB)
 - Sound recording level adjustment
 - (→[Sound Rec Level Adj.]: 364)
 - This setting is available only in [☆M] mode.
 - Slow & Quick setting
 - (→Slow & Quick Video: 393)
 - This setting is available only in [S&Q] mode. (The setting cannot be changed during recording)

3 Drag the slide bar to set the item.

[]/[]: Changes the setting slowly.

 $[\begin{tabular}{c} \begin{tabular}{c} \end{tabular} \end{tabular}]$: Changes the setting quickly.

• If you touch icon (C), the screen of Step 2 is redisplayed.



Separating Settings for Recording Video and Pictures



In default settings, settings such as exposure and white balance changed in [治]/[S&Q] mode are also reflected in picture recording in [P]/[A]/[S]/[M] modes.

From the [CreativeVideo Combined Set.] menu, you can separate settings for video recording and for picture recording.



[F/SS/ISO/Exposure Comp.]/[White Balance]/[Photo Style]/[Metering Mode]/[AF Mode]

[]: The recording settings are linked across recording modes.



[Laction of the [P]/[A]/ [S]/[M] mode.





 The [iA] mode uses the optimum recording settings for the camera automatically, so the recording settings will be independent, irrespective of the settings made with this function.

Using AF (Video)

- [Continuous AF]: 349
- [AF Custom Setting(Video)]: 351
- [Enlarged Live Display(Video)]: 352

[Continuous AF]







You can select how to set the focus in AF when recording videos.



♠ → [♣] → [♠] → Select [Continuous AF]

[MODE1]

The camera continues to automatically focus only during recording.

[MODE2]

The camera automatically keeps focusing on subjects during recording standby and during recording.

This is available in [□□M]/[S&Q] mode.

[OFF]

The camera maintains the focus point at the start of recording.



- In the [iA] mode, the camera automatically keeps focusing during recording standby, irrespective of the [Continuous AF] setting.
- Depending on the recording conditions or lens used, the AF operation sound may be recorded during video recording.
 - If the operation sound bothers you, we recommend recording with [Continuous AFI set to IOFFI.
- If the zoom is operated while recording videos, the subject may take a while to come into focus.
- [MODE1] switches to [MODE2] when outputting via HDMI in the [☆M]/[S&Q] mode.
- When set to [MODE2], the battery drains faster.

[AF Custom Setting(Video)]



iA P A S M ≇M S&Q

You can fine-adjust the focusing method for video recording using [Continuous AF].


→ [♣] → [] → Select [AF Custom Setting(Video)]

[ON]	Enables the following settings.	
[OFF]	Disables the following settings.	
[SET]	[AF Speed]	[+] side: Focus moves at a faster speed. [-] side: Focus moves at a slower speed.
	[AF Sensitivity]	[+] side: When the distance to the subject changes significantly, the camera immediately readjusts the focus. [-] side: When the distance to the subject changes significantly, the camera waits for a little before readjusting the focus.

[•] A description of the item is displayed on the screen when you press [DISP.].

 [Enlarged Live Display(Video)]





(When the AF mode is [fizia] or [iiiii], the center of the screen is enlarged for display.)

The focus point can also be enlarged for checking when recording videos.

- Register [Enlarged Live Display(Video)] to the Fn button.
 (→Fn Buttons: 488)
- 2 Enlarge display of the focus point.
 - Press the Fn button set in Step 1.
 - The operations on the enlarged display screen are the same as the MF Assist screen operations. (→Operations on the MF Assist Screen: 185)





- If you use the following functions, enlarged display magnifications is fixed at 3x:
 - [Hybrid Zoom(Video)]
 - [Crop Zoom(Video)]
- Depending on the lens used, the video enlarged display of live view screen may not be displayed.
- During video recording using the following functions, the video enlarged display of live view screen cannot be displayed:
 - [Rec Quality] with a high frame rate video exceeding a recording frame rate of 60.00p
 - [Live Cropping]



 
- You can change the display method of the enlarged display screen:
 - (→[Enlarged Live Display(Video)]: 529)
- You can set whether to output the enlarged display to an external device connected via HDMI:
 - (→Outputting the Enlarged Live Display (Video) via HDMI: 442)

Video Brightness and Coloring


- [Luminance Level]: 354
- [Master Pedestal Level]: 356
- Recording While Controlling Overexposure (Knee): 357
- [ISO Sensitivity (video)]: 359

[Luminance Level]





 You can set the luminance range to suit the purpose of video recording. You can set to [16-235] or [16-255], the standard for video, or to [0-255], which covers the entire range of luminance, the same as pictures.



[0-255]([0-1023])

Setting for video recording at full range.

[16-235]([64-940])

Setting for video recording at video range.

[16-255]([64-1023])

Setting for video recording at video range.

 The display may not show the correct gradation depending on the monitor, the video playback software, and the video editing software that you are using.



- When set to a 10-bit [Rec Quality], the setting items change to [0-1023], [64-940], and [64-1023].
- When [Photo Style] is set to [V-Log]/[REAL TIME LUT] (base Photo Style is [V-Log]), this is fixed to [0-255] ([0-1023]).

However, even if [Photo Style] is set to [REAL TIME LUT](base Photo Style is [V-Log]) or Photo Style is set to [V-Log] in My Photo Style, if the [Vlog_709] LUT file has been applied, this is fixed to [16-255] ([64-1023]).

- When [Photo Style] is set to [Like2100(HLG)], this is fixed to [64-940].
- When [Photo Style] is set to [Like2100(HLG) Full Range], this is fixed to [0-1023].

[Master Pedestal Level]





You can adjust the black level, which serves as the reference for images.

- 1 Set the recording mode to [♠M] or [S&Q].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Select [Master Pedestal Level].
 - | → [♣] → [♠] → [Master Pedestal Level]
- 3 Adjust master pedestal.
 - Rotate 🚤 or 🚳.
 - Set in the range between -15 and +15.





- [Master Pedestal Level] is not available when using the following function:
 - [V-Log]/[REAL TIME LUT](base Photo Style is [V-Log]) ([Photo Style])

Recording While Controlling Overexposure (Knee)



iA P A S M ≅M S&Q

When [Photo Style] is set to [Like709], you can adjust the knee so that recording can be performed with minimal overexposure.

- 1 Set [Photo Style] to [Like709].
 - 😭 → [💒] → [🜓] → [Photo Style] → [Like709]
- 2 Press [Q].
- 3 Select a knee setting.
 - Press ◀► to select a setting item.



[AUTO]

Adjusts the compression levels of high-luminance areas automatically.

[MANUAL]

You can set the luminance where compression starts (knee master point) and the intensity of compression (knee master slope).

Press ▲ ▼ to select an item and then press ◀▶ to adjust.

[POINT]: Master knee point

[SLOPE]: Master knee slope

- Rotate <u>w</u> to adjust the knee master point, and (1) to adjust the knee master slope.
- Values within the following ranges can be set:
 - Master knee point: 80.0 to 107.0
 - Master knee slope: 0 to 99

[Off]

4 Confirm your selection.

• Press 🚇 .



[ISO Sensitivity (video)]





Sets the lower and upper limits for ISO sensitivity when ISO sensitivity is set to [AUTO].

- - Set the mode dial. (→ Selecting the Recording Mode: 70)
- 2 Set [ISO Sensitivity (video)].
 - | → [♣] → [ISO Sensitivity (video)]
- Setting Items ([ISO Sensitivity (video)])

[ISO Auto Lower Limit Setting]

Sets the lower limit for ISO sensitivity when ISO sensitivity is [AUTO].

• Set in the range between [100] and [25600].

[ISO Auto Upper Limit Setting]

Sets the upper limit for ISO sensitivity when ISO sensitivity is [AUTO].

• Set to [AUTO] or in the range between [200] and [51200].



• The range of ISO sensitivities you can set depends on the Photo Style used.

Audio Settings

- [Sound Rec Level Disp.]: 361
- [Mute Sound Input]: 362
- [Sound Rec Gain Level]: 363
- [Sound Rec Level Adj.]: 364
- [Sound Rec Quality]: 365
- [Sound Rec Level Limiter]: 366
- [Wind Noise Canceller]: 367





 






[Sound Rec Level Disp.]

The sound recording level is displayed on the recording screen.



[ON]	Sound recording level displayed on the recording screen.		
[OFF]	_		
[SET]	Sets the display size of sound recording level.		
	[Displaying Size]	[LARGE]/[SMALL]	



• When [Sound Rec Level Limiter] is set to [OFF], [Sound Rec Level Disp.] is fixed to [ON].

[Mute Sound Input]

This mutes audio input.



Settings: [ON]/[OFF]



• [] is displayed on the recording screen.

[Sound Rec Gain Level]

This switches the gain of audio input.



⇒ [♣] ⇒ [♣] ⇒ Select [Sound Rec Gain Level]

[STANDARD]

This is the standard input gain setting. (0 dB)

[LOW]

Audio input is reduced for recording in environments with loud noises. (-12 dB)



• [Sound Rec Gain Level] is not available when [Mic Socket] is set to [LINE] and an external audio device is connected.

[Sound Rec Level Adj.]

Manually adjust the sound recording level.



Press ◀▶ to adjust the sound recording level and then press



Settings: [MUTE]/[-18dB] to [+12dB]



- You can adjust by 1 dB increments.
- This can also be set during video recording.
- Displayed dB values are approximate.
- When set to [MUTE], [🐧] is displayed in the recording screen.

[Sound Rec Quality]

Sound quality for video can be set when the [Rec. File Format] is [MOV].



⇒ [♣] ⇒ [♣] ⇒ Select [Sound Rec Quality]

[96kHz/24bit]

Audio is recorded using 96kHz/24bit high resolution audio.

• This can be set when a Stereo Shotgun Microphone (DMW-MS2: optional), or Stereo Microphone (VW-VMS10: optional) is connected. (→External Microphones (Optional): 368)

[48kHz/24bit]

Audio is recorded using 48kHz/24bit high quality audio.



- The setting is fixed to [48kHz/16bit] in the following case:
 - When [Rec. File Format] is set to [MP4(Lite)] or [MP4]

[Sound Rec Level Limiter]

The sound recording level is adjusted automatically to minimize sound distortion (crackling noise).

Settings: [ON]/[OFF]

[Wind Noise Canceller]

This reduces the wind noise coming into the built-in microphone while maintaining sound quality.



♠ → [♣] → [♣] → Select [Wind Noise Canceller]

[HIGH]

This effectively reduces the wind noise by reducing the low-pitched sound when a strong wind is detected.

[STANDARD]

This reduces wind noise without loss of sound quality by filtering out only wind noise.

[OFF]

Turns the function off.



- You may not see the full effect depending on the recording conditions.
- This function works only with the built-in microphone. When an external microphone is connected, [Wind Cut] is displayed.

(→Reduction of Wind Noise: 372)

External Microphones (Optional)

- Setting the Sound Pickup Range (DMW-MS2: Optional): 371
- Reduction of Wind Noise: 372



With a Stereo Shotgun Microphone (DMW-MS2: optional) or Stereo Microphone (VW-VMS10: optional), you can record higher-quality high resolution audio compared to the built-in microphone.

- Some optional accessories may not be available in some countries.
- Set the [Mic Socket] that suits the device to be connected.
 - 😭 → [♣] → [♣] → [Mic Socket]



MIC♥ ([Mic Input (Plug-in Power)])

When connecting an external microphone that requires a power supply from the camera [MIC] socket.

MIC ([Mic Input])

When connecting an external microphone that does not require a power supply from the camera [MIC] socket.

LINE ([Line Input])

 
When connecting an external audio device for line output.

- The setting will be fixed to [MIC♥] when a Stereo Shotgun Microphone (DMW-MS2: optional) is connected.
- When using [MIC*], if you connect an external microphone that does not require power supply, the connected external microphone may malfunction.
 Check the device before connecting.

2 Set the camera on/off switch to [OFF].

3 Connect the external microphone to the camera and then turn on the camera.

 If mounting the external microphone on the camera accessory shoe (A), remove the accessory shoe cover.




4 Make settings for the sound quality of the audio to be recorded in [Sound Rec Quality] (→ [Sound Rec Quality]: 365).



- Do not use the stereo microphone cables with the length of 3 m (9.8 feet) or more.
- While the external microphone is connected, [XXI] is displayed on the screen.
- When an external microphone is connected, [Sound Rec Level Disp.] automatically turns [ON], and the recording level is displayed on the screen.
- When the external microphone is attached, do not carry the camera by holding the external microphone. It may become detached.
- If noises are recorded when using the AC adaptor, use the battery.
- For details, refer to the operating instructions for the external microphone.

Setting the Sound Pickup Range (DMW-MS2: Optional)

 When using the Stereo Shotgun Microphone (DMW-MS2: optional), you can set the microphone sound pickup range.



[STEREO]

 
Picks up sound over a wide area.

[SHOTGUN]

Helps prevent picking up background noise, and records sound from a specific direction.

Reduction of Wind Noise

This reduces wind noise when an external microphone is connected.



Settings: [HIGH]/[STANDARD]/[LOW]/[OFF]



• Setting [Wind Cut] may alter the usual sound quality.

Time Code

• Setting the Time Code: 374





When [Rec. File Format] is set to [MOV], the time code is automatically recorded during video recording. If [MP4(Lite)] or [MP4], the time code is not recorded.

Setting the Time Code

Sets the recording, display, and output of the time code.

- 1 Set [Rec. File Format] to [MOV].
 - • P | [MOV] → [MOV] [MOV]
- 2 Select [Time Code].
 - 😭 → [🎎] → [🏥] → [Time Code]

[Time Code Display]

Displays the time code on the recording screen/playback screen.

[Count Up]

[REC RUN]: Counts the time code only when recording videos.

[FREE RUN]: Counts the time code also when video recording is stopped and when the camera is turned off.

When the following function is being used, [Count Up] is fixed to [REC RUN]:
 - [S&Q] mode

[Time Code Value]

[Reset]: Sets to 00:00:00:00 (hour: minute: second: frame)

[Manual Input]: Manually input hour, minute, second and frame.

[Current Time]: Sets hour, minute and second to current time and sets frame to 00

[Time Code Mode]

[DF]: Drop Frame. The camera modifies the difference between recorded time and time code

• Seconds and frames are separated by ".". (Example: 00:00:00.00)

[NDF]: Non-Drop Frame. Records the time code without drop frame.

- Seconds and frames are separated by ":". (Example: 00:00:00:00)
- When the following functions are being used, [Time Code Mode] is fixed to [NDF]:
 - [50.00Hz (PAL)]/[24.00Hz (CINEMA)] ([System Frequency])
 - 47.95p or 23.98p [Rec Quality]

[HDMI Time Code Output]

Time code information is added to images output via HDMI when recording with the $\lceil \frac{1}{2} \frac{1}{2} \frac{1}{2} \frac{1}{2} \frac{1}{2}$ mode.

- The device screen may go dark depending on the connected device.

Main Assist Functions

- [Flicker Decrease (Video)]: 377
- [SS/Gain Operation]: 378
- [WFM/Vector Scope]: 380
- [Luminance Spot Meter]: 384
- [Zebra Pattern]: 386
- [Frame Marker]: 388
- Color Bars/Test Tone: 390



 The [Custom] ([Monitor / Display (Video)]) menu has display assist functions such as the center marker and safety zone marker:

(→[Custom] menu ([Monitor / Display (Video)]): 546)

[Flicker Decrease (Video)]



iA P A S M ≅M S&Q

The shutter speed can be fixed to reduce the flicker or striping in the video.

→ [♣] → Select [Flicker Decrease (Video)]

[1/50]/[1/60]/[1/100]/[1/120]

[OFF]



This can be set when [Auto Exposure in P/A/S/M] is [ON]. (→[Auto Exposure in P/A/S/M]: 522)

[SS/Gain Operation]

iA P A S M ≇M S&Q







[SEC/ISO]

values.

Displays the shutter speed in seconds and the gain in ISO.

[ANGLE/ISO]

Displays the shutter speed in degrees and the gain in ISO.

The angle can be set in a range between 11° and 358°.
 (when [Synchro Scan(Video)] is set to [OFF])

[SEC/dB]

Displays the shutter speed in seconds and the gain in dB.

- 0 dB corresponds to either of the following ISO sensitivity values.
 - When [Dual Native Gain Setting] is set to [AUTO] or [LOW]: [100]
 - When [Dual Native Gain Setting] is set to [HIGH]: [640]



- The range of gains you can set depends on the Photo Style used.
- When [SS/Gain Operation] is set to [SEC/dB], menu names change as shown below:
 - [Dual Native ISO Setting] → [Dual Native Gain Setting]
 - [ISO Sensitivity (video)] → [Gain Setting]
 - [ISO Auto Lower Limit Setting] → [Auto Gain Lower Limit Setting]
 - [ISO Auto Upper Limit Setting] → [Auto Gain Upper Limit Setting]
 - [Extended ISO] → [Extended Gain Setting]
 - [ISO Displayed Setting] → [Gain Displayed Setting]

Setting Range for Gain (Sensitivity)

When [SS/Gain Operation] is set to [SEC/dB], gain (sensitivity) can be set in the following ranges.

[Dual Native Gain Setting]	[Extended Gain Setting]	Setting Range for Gain (Sensitivity)
FALITOI	[OFF]	[AUTO], [0dB] to [+54dB]
[AUTO]	[ON]	[AUTO], [-6dB] to [+66dB]
II OWI	[OFF]	[AUTO], [0dB] to [+18dB]
[LOW]	[ON]	[AUTO], [-6dB] to [+18dB]
[HICH]	[OFF]	[AUTO], [0dB] to [+38dB]
[HIGH]	[ON]	[AUTO], [-6dB] to [+50dB]

[WFM/Vector Scope]



iA P A S M ≇M S&Q

This displays the waveform monitor or the vector scope on the recording screen. You can change the size of the waveform display.

- 1 Set the recording mode to [治M] or [S&Q].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Set [WFM/Vector Scope].

[WAVE]

Displays a waveform.

 
[VECTOR]

Displays the vector scope.

[OFF]

3 Select the position to display.

- Press ▲ ▼ ◀► to select and then press
- You can also move using touch operations.
- You can rotate to change the size of the waveform.
- To return the waveform or vector scope position back to the center, press [DISP.]. With waveform, pressing [DISP.] once again returns the size to the default setting.



Screen Displays

Waveform

- The waveform displayed on the camera indicates the luminance as values based on the conversions below:
 - 0 % (IRE*): Luminance value 16 (8 bit)/64 (10 bit)
 - 100 % (IRE*): Luminance value 235 (8 bit)/940 (10 bit)
 - * IRE: Institute of Radio Engineers



- (A) 109 % (IRE) (Dotted line)
- (B) 100 % (IRE)
- (C) 50 % (IRE)
- (D) 0 % (IRE)
- (E) -4 % (IRE) (Dotted line)
- (F) The range between 0 % and 100 % shows dotted lines at intervals of 10 %.

Display example)



Vector scope



- (G) R (Red)
- (H) YL (Yellow)
- (I) G (Green)
- (J) MG (Magenta)
- (K) B (Blue)
- (L) CY (Cyan)

Display example)





- When you assign the function to an Fn button, you can switch between displaying and hiding these during recording of video. (→Fn Buttons: 488)
- You can also change the position by dragging on the recording screen.
- The waveform and vector scope are not output through HDMI.

 
[Luminance Spot Meter]



iA P A S M ≅M S&Q

Specify any spot on the subject to measure the luminance over a small area.

- Set [Luminance Spot Meter].
 - • → [♣] → [♠] → [Luminance Spot Meter] → [ON]
- Select the position where you want to measure the luminance.
 - Press ▲ ▼ ◀► to select and then press ().
 - You can also change the position by dragging the frame on the recording screen.
 - To return the position back to the center, press [DISP.].



(M) Luminance value

Measurement Range

Measuring is possible in the range -7 % to 109 % (IRE).

 When [Photo Style] is set to [V-Log], or when a LUT file has not been applied in [REAL TIME LUT] (base Photo Style is [V-Log]), this is measured with "Stop" units. (18 % gray output level is calculated as 0 Stop)

[Zebra Pattern]











Parts that are brighter than the base value are displayed with stripes. You can also set the base value and the breadth of the range so that the stripes are displayed on parts that are within the range of brightness you specify.



[ZEBRA1]



[ZEBRA2]



[ZEBRA1+2]



[ZEBRA1]	Parts that are brighter than the base value are displayed with [ZEBRA1] stripes.			
[ZEBRA2]	Parts that are brighter than the base value are displayed with [ZEBRA2] stripes.			
[ZEBRA1+2]	Both [ZEBRA1] and [ZEBRA2] are displayed.			
[OFF]	_			
	Sets the base brightness.			
[SET]	[Zebra 1]	[50%] to [105%]/[BASE/RANGE]		
	[Zebra 2]	[50%] to [105%]/[BASE/RANGE]		

When [BASE/RANGE] Was Selected with [SET]

Centered on the brightness set with [Base Level], parts with the brightness in the range set in [Range] are displayed with the stripes.

- [Base Level] can be set in the range between 0 % and 109 % (IRE).
- [Range] can be set in the range between ±1 % and ±10 % (IRE).
- When [Photo Style] is set to [V-Log], or when a LUT file has not been applied in [REAL TIME LUT] (base Photo Style is [V-Log]), this is measured with "Stop" units. (18 % gray output level is calculated as 0 Stop)



• [ZEBRA1+2] cannot be selected while you are setting [BASE/RANGE].

[Frame Marker]





A frame with the set aspect ratio is displayed on the recording screen. This allows you to see during recording the angle of view that will be achieved with trimming (cropping) in post-processing.


⇒ [♣] ⇒ [♠] ⇒ Select [Frame Marker]

[ON]	Displays the frame on the recording screen.		
[OFF]	_		
[SET]	[Frame Aspect]	Sets the aspect ratio of the frame.	
		[2.39:1]/[2.35:1]/[2.00:1]/[1.85:1]/[16:9]/	
		[4:3]/[5:4]/[1:1]/[4:5]/[9:16]/[CUSTOM]	
	[Frame Color]	Sets the color of the frame.	
	[Frame Mask]	Sets the opacity of the outside of the frame.	
		[100%]/[75%]/[50%]/[25%]/[OFF]	

When [CUSTOM] Is Selected with [Frame Aspect] in [SET]

You can freely set the aspect ratio of the frame.

 - Press ▲▼◀► to move the center position.
- You can also change the position by dragging the frame on the recording screen.
- Set the height of the frame with [_____], and the width with [@].
- You can also pinch out/pinch in the frame to change the size.



- (N) Center coordinates (0 being the center of the screen)
- (O) Height and width of the frame
- The aspect ratio can be set in the range between 1 % to 100 %.
- The first press of [DISP.] returns the frame position to the center.

The second press returns the frame size to the default.

Color Bars/Test Tone



The color bars are displayed on the recording screen.

A test tone is output while the color bars are being displayed.



Settings: [SMPTE]/[EBU]/[ARIB]

• To end the display, press ...



[SMPTE]



[EBU]



[ARIB]

* Adjusting the Test Tone

There are 4 levels ([-12dB], [-18dB], [-20dB], and [MUTE]) of test tone to select.

Rotate wo or to select the test tone level.



- The color bars and test tone will be recorded on the video if video recording is started while the color bars are being displayed.
- The brightness and coloring that appear on the camera's monitor may differ from those that appear on another device such as an external monitor.

Special Video Recording

This chapter describes advanced video recording applications such as slow motion/quick motion video and Log recording.

- Slow & Quick Video: 393
- High Frame Rate Video: 400
- [Focus Transition]: 402
- [Live Cropping]: 407
- Log Recording: 412
- HLG Videos: 417
- Anamorphic Recording: 421
- [Synchro Scan(Video)]: 425
- [Segmented File Recording]: 427
- List of Recording Qualities That Enable Special Videos to be Recorded:
 428

Slow & Quick Video





In the [S&Q] mode, the camera records at a different frame rate to the recording frame rate, enabling the creation of slow motion video and quick motion video in the MOV format.

Slow Motion Video (Overcrank Recording)

Set a number of frames that is higher than the recording frame rate of the [Rec Quality].

For example: When recording at 60 fps when set to a 29.97p [Rec Quality], the speed is halved.

Quick Motion Video (Undercrank Recording)

Set a number of frames that is lower than the recording frame rate of the [Rec Quality]. For example: When recording at 15 fps when set to a 29.97p [Rec Quality], the speed is doubled.



 The volume of data recorded increases when you use the slow motion video mode in Slow & Quick video, so if the card writing speed is insufficient, recording may stop.

- Set the recording mode to [S&Q].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
 - [Rec. File Format] changes to [MOV].
- Select a recording quality with which you can record Slow & Quick video.
 - 📦 → [🚅] → [📺] → [Rec Quality]
 - Items available for recording with Slow & Quick video are indicated as [S&Q available].
 - Recording qualities with which you can record Slow & Quick video (> List of Recording Qualities That Enable Special Videos to be Recorded: 428)



3 Set the frame rate.

- Rotate a or to select a numeric value, then press



- You can set a frame rate in the following ranges:
 - C4K/4K video: 1 fps to 60 fps
 - FHD video: 1 fps to 180 fps



Frame Rate Combinations and Playback Speeds

Frame rate	[System Frequency]: [59.94Hz (NTSC)]					
	C4K/29.97p 4K/29.97p	C4K/23.98p 4K/23.98p	FHD/59.94p	FHD/29.97p	FHD/23.98p	
1 fps	30× Quick	24× Quick	60× Quick	30× Quick	24× Quick	
2 fps	15× Quick	12× Quick	30× Quick	15× Quick	12× Quick	
5 fps	6× Quick	4.8× Quick	12× Quick	6× Quick	4.8× Quick	
10 fps	3× Quick	2.4× Quick	6× Quick	3× Quick	2.4× Quick	
15 fps	2× Quick	1.6× Quick	4× Quick	2× Quick	1.6× Quick	
30 fps	1× Normal	1.25× Slow	2× Quick	1× Normal	1.25× Slow	
60 fps	2× Slow	2.5× Slow	1× Normal	2× Slow	2.5× Slow	
100 fps			1.67× Slow	3.33× Slow	4.17× Slow	
120 fps			2× Slow	4× Slow	5× Slow	
150 fps			2.5× Slow	5× Slow	6.25× Slow	
180 fps			3× Slow	6× Slow	7.5× Slow	

Frame	[System Frequency]: [50.00Hz (PAL)]				
rate	C4K/25.00p 4K/25.00p	FHD/50.00p	FHD/25.00p		
1 fps	25× Quick	50× Quick	25× Quick		
2 fps	12.5× Quick	25× Quick	12.5× Quick		
5 fps	5× Quick	10× Quick	5× Quick		
10 fps	2.5× Quick	5× Quick	2.5× Quick		
15 fps	1.67× Quick	3.33× Quick	1.67× Quick		
30 fps	1.2× Slow	1.67× Quick	1.2× Slow		
60 fps	2.4× Slow	1.2× Slow	2.4× Slow		
100 fps		2× Slow	4× Slow		
120 fps		2.4× Slow	4.8× Slow		
150 fps		3× Slow 6× Slow			
180 fps		3.6× Slow 7.2× Slow			

Frame	[System Frequency]	[System Frequency]: [24.00Hz (CINEMA)]			
rate	C4K/24.00p	FHD/24.00p			
rato	4K/24.00p	1116/24.00p			
1 fps	24× Quick	24× Quick			
2 fps	12× Quick	12× Quick			
5 fps	4.8× Quick	4.8× Quick			
10 fps	2.4× Quick	2.4× Quick			
15 fps	1.6× Quick	1.6× Quick			
30 fps	1.25× Slow	1.25× Slow			
60 fps	2.5× Slow	2.5× Slow			
100 fps		4.17× Slow			
120 fps		5× Slow			
150 fps		6.25× Slow			
180 fps		7.5× Slow			

Shutter Speeds When Recording Slow & Quick Video

When recording Slow & Quick video, the minimum shutter speed changes depending on the frame rate of [Slow & Quick Setting].

Frame rate	Minimum shutter speed			
Frame rate	[AFS]/[AFC]	[MF]		
1 fps		1 second		
2 fps		1/2 of a second		
5 fps	1/30 of a second	1/5 of a second		
10 fps	1/30 of a second	1/10 of a second		
15 fps		1/15 of a second		
30 fps		1/30 of a second		
60 fps	1/60 of a second	1/60 of a second		
100 fps	1/100 of a second	1/100 of a second		
120 fps	1/125 of a second	1/125 of a second		
150 fps		1/160 of a second		
180 fps		1/200 of a second		



- · Audio will not be recorded during Slow & Quick recording.
- When the resolution is set to C4K/4K [Rec Quality], [Image Area of Video] is fixed to [APS-C].
- When the resolution is set to FHD [Rec Quality], [PIXEL/PIXEL] in [Image Area of Video] cannot be selected.
- The mode switches to MF when you set to a frame rate of 150 fps or more.
 (The camera automatically focuses when [AF ON] is pressed, but only before starting recording.)
- The angle of view is reduced when you set the frame rate to 180 fps.

High Frame Rate Video





[MOV] video with high frame rates can be recorded to cards. By converting it with the compatible software, it is possible to produce slow motion video. Audio recording, not possible in the Slow & Quick mode, also becomes possible.

- 1 Set [Rec. File Format] to [MOV].
 - (♣] → [♣] → [Rec. File Format] → [MOV]
- Select a recording quality for high frame rate video.
 - (Rec Quality) → [Rec Quality]
 - The following recording qualities are available in [MM] mode:
 - [Rec Quality] with a high frame rate video exceeding a recording frame rate of 60.00p
 - By filtering the [Rec Quality] by the frame rate, you can display just those recording qualities that match the frame rate conditions. (→[Filtering]: 133)
 - Recording Qualities for High Frame Rate Video (→List of Recording Qualities That Enable Special Videos to be Recorded: 428)

Shutter Speeds When Recording High Frame Rate Video

When recording high frame rate video, the minimum shutter speed changes depending on the recording frame rate of the video.

Recording frame rate of the video	Minimum shutter speed		
Recording frame rate of the video	[AFS]/[AFC]	[MF]	
47.95p	1/30 of a second		
48.00p	1/25 of a second	1/2 of a second*	
100.00p	1/100 of a second	1/2 of a second	
119.88p	1/125 of a second		

^{*} Can be set in [M] mode ([Auto Exposure in P/A/S/M] is set to [OFF]) or [AM] mode ([Exposure Mode] is set to [M])



 When outputting via HDMI, the resolution and frame rate may be down-converted for output.

[Focus Transition]



Smoothly transitions the focus position from the current position to a position registered in advance.

- 1 Set the recording mode to [MM].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- Select [Focus Transition].





3 Set focus positions.

 Check the focus using the same procedure as MF (→Record Using MF: 183), and then touch [POS1], [POS2], and [POS3] to set focus positions.



4 Register the focus positions.

 
Press m to register the focus positions.

5 Start recording.

- Press the video rec. button.
- The advanced setting screen is displayed when you press [DISP.] before recording. (→ Setting Items ([Focus Transition]): 405)
- If you have enabled [Focus Transition Rec], Focus Transition will start when you start recording a video.

6 Start Focus Transition.

- Press ◀► to select [1], [2], or [3], and then press
- When [Focus Transition Wait] is set, Focus Transition starts after the set time has elapsed.



- (A) Current focus position
- (B) Registered focus position
- 7 End Focus Transition.
 - Press [Q].
- 8 Stop recording.
 - Press the video rec. button once again.

Setting Items ([Focus Transition])

[Focus Position Setting]

Registers focus positions.

[Focus Transition Speed]

Sets the moving speed of focus.

• Moving speed: [SH] (fast) to [SL] (slow)

[Focus Transition Rec]

Starts Focus Transition when recording starts.

• Select the position registered with [Focus Position Setting].

[Focus Transition Wait]

Sets the wait time before the start of Focus Transition.

• The recording screen is displayed when you press [_____].



- Maintain the same distance to the subject after setting focus positions.
- The moving speed of focus varies depending on the lens being used.
- The moving speed of focus slows as it approaches the closest focusing distance of the lens or infinity.
- While using [Focus Transition], it is not possible to focus on anything other than one of the registered focus positions.
- Any of the operations below will clear the focus position settings.
 - Operating the camera on/off switch
- Zoom operation
- Switching the focus mode
- Switching the recording mode
- Replacing the lens
- When the following function is being used, [Focus Transition] is not available:
 - [Live Cropping]
- [Focus Transition] cannot be used when using an interchangeable lens that does not support the focus mode [AFC].

[Live Cropping]





By cropping a part of the image from the image displayed in the live view, it is possible to record 4K/FHD video that incorporates panning and zooming with the camera staying in a fixed position.



Pan



Zoom in



• Use a tripod to minimize camera shake.

- Set the mode dial to [☆M].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- Select a recording quality with which you can record [Live Cropping] video.
 - 🚇 → [🚅] → [📺] → [Rec Quality]
 - A recording quality with which you can record [Live Cropping] video (→ List of Recording Qualities That Enable Special Videos to be Recorded: 428)
- 3 Set the pan and zoom effect.
 - • | → [:] → [: | SET]

[Cropping Duration]

You can set between 2 and 40 seconds.

[Easing Settings]

Select an effect.

[LINEAR]: Moves at a constant speed.


[EASE IN]: Gradually accelerates.

[EASE OUT]: Gradually decelerates.


[EASE IN OUT]: Decelerates after accelerating.

 - Set the cropping frame.
 - Frame]
 - Select the range to start cropping and press





 - (A) Cropping start frame
- Select the range to end cropping and press (m).




- (B) Cropping end frame
- To redo the settings for the position and size of the start frame and the end frame, press ▼.
- Press [im] to check the effect you have set.

5 Enable Live Cropping recording.

- (♣) → [♣] → [♣] → [Live Cropping] → [ON]
- If you have selected a recording quality where Live Cropping recording is not available, the camera switches to a recording quality where recording is possible.

6 Start Live Cropping recording.

- Press the video rec. button.
- When the set operating time has elapsed, recording automatically ends.
 To end recording midway, press the video rec. button again.

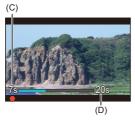

- (C) Elapsed recording time
- (D) Set operating time

Operations for Setting the Cropping Frame

Button operation	Touch operation	Description of operation	
▲▼▼	Touch	Moves the frame.	
<u></u>	Pinch out/ pinch in	Enlarges/reduces the frame in small steps.	
©		Enlarges/reduces the frame.	
[DISP.]	[Reset]	Start frame: Returns the frame position and size to the default settings. End frame: Cancels the settings for the position and size of the frame.	
MENU	[Set]	Confirms the frame position and size.	



- The AF mode switches to [].
- Brightness measurements and focusing are performed within the cropping frame.
 To lock the focus point, set [Continuous AF] to [OFF], or set the focus mode to [MF].
- [Metering Mode] will be [19] (multi-metering).
- [Image Area of Video] is fixed to [FULL]. However, the setting is fixed to [APS-C] in the following case:
- When a 59.94p or 50.00p [Rec Quality] is set
- A 4K [Rec Quality] cannot be set when using an APS-C lens.

Log Recording

• [Log View Assist]: 416





Setting [Photo Style] to [V-Log] enables Log recording.

Images finished with rich gradation can be created through post-production processing.







Post-production processing is enabled by utilizing LUT (Look-Up Table).
 You can download LUT file from the following support site:

https://panasonic.jp/support/global/cs/dsc/download/index3.html (English only)


❖ ISO Sensitivity When [V-Log] Is Set

The lower limit of available ISO sensitivity is [640] (when [Extended ISO] is set: [320]), and the upper limit is [51200].

- The range of available ISO sensitivities is also different for [LOW] and [HIGH] in [Dual Native ISO Setting].
- Reset the exposure if necessary when ISO sensitivity changes.

Exposure When [V-Log] Is Set

The [V-Log] curve characteristics comply with "V-Log/V-Gamut REFERENCE MANUAL Rev.1.0". When set to [V-Log], the standard exposure when gray with a reflectance ratio of 18 % is imaged is IRE 42 %.

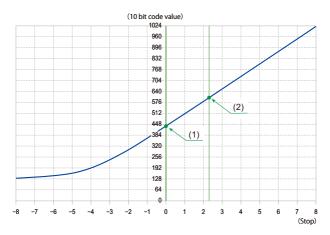

		When [Photo Style] is set to [V-Log]						
Refle	ectance ratio (%)	IRE (%)	12 bit code value					
	0	7.3	_	128	512			
(1)	18	42	0.0	433	1732			
(2)	90	61	2.3	602	2408			

When luminance is to be displayed by "Stop" units, this camera calculates IRE 42 % to "0 Stop".

 


• Luminance can be checked by "Stop" units:

(→[Luminance Spot Meter]: 384, [Zebra Pattern]: 386)

[Log View Assist]

When [Photo Style] is set to [V-Log], the recording screen and images output via HDMI will darken. Using [Log View Assist] means you can show images with LUT file applied on the monitor and output them via HDMI.



[LUT Select(V-Log)]

Selects the LUT file to apply from a preset or LUT files registered in [LUT Library]. (>[LUT Library]: 328)

[LUT View Assist (Monitor)]

Displays the images with LUT file applied on the monitor of the camera.

[LUT View Assist (HDMI)]

Applies LUT file to images output over HDMI.



- When applying the LUT file, [LUT] is displayed on the recording screen.
- You cannot apply LUT files which are a base Photo Style other than [V-Log].
- [LUT View Assist (Monitor)]/[LUT View Assist (HDMI)] are not available when [LUT] is applied in the [Photo Style] image quality adjustments.

HLG Videos

• [HLG View Assist]: 420





Record videos with the wide dynamic range of the HLG format. You can record in very bright light where overexposure can occur or in dark areas where underexposure can occur, maintaining the rich yet subtle colors you can see with your naked eye.

You can view the video that you record by outputting via HDMI to devices (TVs, etc.) that support the HLG format, or playing back directly on supporting devices.

 "HLG (Hybrid Log Gamma)" is an international standard (ITU-R BT.2100) HDR format

- 1 Set the recording mode to [MM] or [S&Q].
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- Select a recording quality with which you can record HLG video.
 - 🚇 → [🚅] → [📺] → [Rec Quality]
 - Items available for recording with HLG video are indicated as [HLG available].
 - Recording qualities with which you can record HLG video (→List of Recording Qualities That Enable Special Videos to be Recorded: 428)



- 3 Set [Photo Style] to [Like2100(HLG)] or [Like2100(HLG) Full Range].





• The monitor on this camera do not support display of HLG format images.

With [Monitor] in [HLG View Assist] in the [Custom] ([Monitor / Display (Video)])

menu, you can display the images converted for monitoring on the monitor of this

camera. (→[HLG View Assist]: 420)



HLG images are shown dark on devices that do not support the HLG format.
 With [HDMI] in [HLG View Assist] in the [Custom] ([Monitor / Display (Video)]) menu, you can set the conversion method for images displayed for monitoring.
 (→[HLG View Assist]: 420)

ISO Sensitivity When [Like2100(HLG)]/[Like2100(HLG) Full Range] Is Set

The lower limit of available ISO sensitivities will become [400].

- The range of available ISO sensitivities is also different for [LOW] and [HIGH] in [Dual Native ISO Setting].
- Reset the exposure if necessary when ISO sensitivity changes.

[HLG View Assist]

At recording or playback of HLG video, this displays images with converted color gamut and brightness on the camera monitor, or outputs these over HDMI

⇒ [♣] ⇒ [♣] ⇒ [HLG View Assist] ⇒ [Monitor] or [HDMI]

[AUTO]

Converts images before outputting them via HDMI while applying the effect of [MODE2]. This conversion setting works only when the camera is connected to a device that does not support HDR (HLG format).

[MODE1]

Converts with an emphasis on bright areas such as sky.

• [MODE1] is displayed on the recording screen.

[MODE2]

Converts with an emphasis on the brightness of a main subject.

• [MODE2] is displayed on the recording screen.

[OFF]

Displays without converting color gamut and brightness.


• HLG images appear darker on devices that do not support the HLG format.

^{*} Can only be set while [HDMI] is selected.

Anamorphic Recording

• [Anamorphic Desqueeze Display]: 423



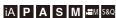

From a variety of different video formats (recording qualities), you can select and record with a recording quality that suits anamorphic recording. During anamorphic recording, it is also possible to display desqueezed images and the angle of view when cropping after desqueeze editing. It is also possible to switch to an image stabilizer that suits anamorphic recording.

For information about image stabilizers suited to anamorphic recording
 (→[Anamorphic (Video)]: 263)

- Set [Rec. File Format].
 - 📳 → [💾] → [Rec. File Format]
- Select a recording quality suited to anamorphic recording.
 - 💮 → [🎥] → [🏥] → [Rec Quality]
 - The following recording qualities are available in [□□M] mode:
 - [Rec Quality] exceeding a resolution of C4K
 - [Rec Quality] with a high frame rate video exceeding a recording frame rate of 60.00p
 - When [Rec. File Format] is set to [MOV], by filtering [Rec Quality] by the number of pixels, you can display just those recording qualities with resolutions and aspect ratios that meet the conditions. (→[Filtering]: 133)



 This camera is not compatible with desqueeze editing of video recorded with anamorphic recording. Use compatible software.

[Anamorphic Desqueeze Display]





Display the desqueezed images suited to the magnification of the anamorphic lens on this camera.

Using the [Frame Marker], it is also possible to superimpose on display the frame of the angle of view when cropping after desqueeze editing.

- - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Set [Anamorphic Desqueeze Display].

[^{2.0}_⋆] ([2.0×])

[OFF]

• Make settings to suit the magnification of the anamorphic lens you are using.



3 Set [Frame Marker].

• • → [♣] → [♣] → [Frame Marker] (→[Frame Marker]: 388)





• Images output via HDMI are not desqueezed.

[Synchro Scan(Video)]



The flicker or horizontal stripes of the light source can be mitigated by making fine adjustments to the shutter speed.

The shutter speed set in Synchro Scan is saved separately from the shutter speed used for normal recording.

In the Synchro Scan setting screen you can call up the current shutter speed for normal recording and adjust it.

- - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Set the exposure mode to [S] or [M].
 - 🔛 → [👫] → [≰-] → [Exposure Mode] → [S]/[M]
- 3 Set [Synchro Scan(Video)].



4 Set the shutter speed.



• The shutter speed can be set in the range between 1 second and 1/8192.0 of a second

(The minimum shutter speed depends on the frame rate of the video being recorded.)

- Press ▲▼ to change the shutter speed in 1/4 TV intervals. Press ◀▶ to make fine adjustments.
- You can call up the current shutter speed for normal recording by pressing [DISP.].
- Adjust the shutter speed while looking at the screen so that flickering and horizontal stripes will be minimized.





• There may be a difference between what you see on the recording screen and the actual results of recording. We recommend shooting some tests beforehand.

[Segmented File Recording]



To avoid video loss due to unforeseen interruptions to the power supply, recorded video is segmented at set intervals while being recorded.

- The segmented videos are saved as one group image. (→Group Images: 461)
- 1 Set [Rec. File Format] to [MOV].
- 2 Set [Segmented File Recording].
 - • (♣) → [♣] → [Segmented File Recording] → [10MIN.]/
 [5MIN.]/[3MIN.]/[1MIN.]



List of Recording Qualities That Enable Special Videos to be Recorded

sao: Recording qualities with which you can record Slow & Quick video

HFR: Recording qualities for High Frame Rate video

Live Crop : Recording qualities that enable use of [Live Cropping]

HLG: Recording qualities with which you can record HLG video

[Rec. File Format]: [MP4(Lite)]

[System Frequency]: [59.94Hz (NTSC)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[3.8K/10bit/50M/30p]				✓

[System Frequency]: [50.00Hz (PAL)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[3.8K/10bit/50M/25p]				✓

* [Rec. File Format]: [MP4]

[System Frequency]: [59.94Hz (NTSC)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[4K/10bit/100M/60p]				✓
[4K/10bit/72M/30p]			✓	✓
[4K/8bit/100M/30p]			✓	
[4K/10bit/72M/24p]				✓
[4K/8bit/100M/24p]				
[FHD/8bit/28M/60p]			✓	
[FHD/8bit/20M/30p]			✓	
[FHD/8bit/24M/24p]				

[System Frequency]: [50.00Hz (PAL)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[4K/10bit/100M/50p]				✓
[4K/10bit/72M/25p]			✓	✓
[4K/8bit/100M/25p]			✓	
[FHD/8bit/28M/50p]			✓	
[FHD/8bit/20M/25p]			✓	

❖ [Rec. File Format]: [MOV]

[System Frequency]: [59.94Hz (NTSC)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[6K/30p/420/10-L] (3:2)				✓
[6K/24p/420/10-L] (3:2)				✓
[6K/30p/420/10-L] (17:9)				√
[6K/24p/420/10-L] (17:9)				✓
[5.9K/30p/420/10-L]				√
[5.9K/24p/420/10-L]				✓
[3.3K/48p/422/10-L]		✓		✓
[3.3K/48p/420/10-L]		✓		✓
[3.3K/30p/422/10-L]				√
[3.3K/30p/420/10-L]				✓
[3.3K/24p/422/10-L]				√
[3.3K/24p/420/10-L]				√
[C4K/60p/422/10-L]				✓
[C4K/60p/420/10-L]				✓
[C4K/48p/422/10-L]		✓		✓
[C4K/48p/420/10-L]		✓		✓
[C4K/30p/422/10-L]				√
[C4K/30p/420/10-L]	✓			√

[C4K/24p/422/10-L]				✓
[C4K/24p/420/10-L]	✓			√
[4K/60p/422/10-L]				√
[4K/60p/420/10-L]				√
[4K/48p/422/10-L]		✓		√
[4K/48p/420/10-L]		✓		✓
[4K/30p/422/10-L]			✓	√
[4K/30p/420/10-L]	✓		✓	✓
[4K/24p/422/10-L]			✓	✓
[4K/24p/420/10-L]	✓		✓	√
[FHD/120p/422/10-L]		✓		✓
[FHD/120p/420/10-L]		✓		✓
[FHD/60p/422/10-L]			✓	√
[FHD/60p/420/10-L]	✓		✓	√
[FHD/48p/422/10-L]		✓		✓
[FHD/48p/420/10-L]		✓		√
[FHD/30p/422/10-L]			✓	√
[FHD/30p/420/10-L]	✓		✓	✓
[FHD/24p/422/10-L]			✓	✓
[FHD/24p/420/10-L]	✓		√	√

[System Frequency]: [50.00Hz (PAL)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[6K/25p/420/10-L] (3:2)				✓
[6K/25p/420/10-L] (17:9)				✓
[5.9K/25p/420/10-L]				✓
[3.3K/50p/422/10-L]				✓
[3.3K/50p/420/10-L]				✓
[3.3K/25p/422/10-L]				✓
[3.3K/25p/420/10-L]				✓
[C4K/50p/422/10-L]				✓
[C4K/50p/420/10-L]				✓
[C4K/25p/422/10-L]				✓
[C4K/25p/420/10-L]	✓			✓
[4K/50p/422/10-L]				✓
[4K/50p/420/10-L]				✓
[4K/25p/422/10-L]			✓	✓
[4K/25p/420/10-L]	✓		✓	✓
[FHD/100p/422/10-L]		✓		✓
[FHD/100p/420/10-L]		✓		✓
[FHD/50p/422/10-L]			✓	✓
[FHD/50p/420/10-L]	✓		✓	✓
[FHD/25p/422/10-L]			✓	✓
[FHD/25p/420/10-L]	✓		✓	✓

[System Frequency]: [24.00Hz (CINEMA)]

[Rec Quality]	S&Q	HFR	Live Crop	HLG
[6K/24p/420/10-L] (3:2)				✓
[6K/24p/420/10-L] (17:9)				✓
[5.9K/24p/420/10-L]				✓
[3.3K/48p/422/10-L]		✓		✓
[3.3K/48p/420/10-L]		✓		✓
[3.3K/24p/422/10-L]				✓
[3.3K/24p/420/10-L]				✓
[C4K/48p/422/10-L]		✓		✓
[C4K/48p/420/10-L]		✓		✓
[C4K/24p/422/10-L]				✓
[C4K/24p/420/10-L]	✓			✓
[4K/48p/422/10-L]		✓		✓
[4K/48p/420/10-L]		✓		✓
[4K/24p/422/10-L]			✓	✓
[4K/24p/420/10-L]	✓		✓	✓
[FHD/48p/422/10-L]		✓		✓
[FHD/48p/420/10-L]		✓		✓
[FHD/24p/422/10-L]			✓	✓
[FHD/24p/420/10-L]	✓		✓	✓

HDMI Output (Video)

You can record while outputting the camera images to an external monitor or external recorder connected with an HDMI micro cable.

HDMI output control differs between during recording and during playback.
 For HDMI output settings during playback (>[HDMI Connection]: 564)

Connecting HDMI Devices: 435

HDMI Output Image Quality: 436

• HDMI Output Settings: 439

Connecting HDMI Devices




- Check the direction of the terminals and plug in/out straight holding onto the plug.
 (Inserting at an angle can deform the terminal and cause malfunction.)
- Do not connect the cable to the wrong terminals. This may cause a malfunction.

Getting started:

Turn off the camera and the external monitor/external recorder.

Connect the camera and an external monitor or external recorder with a commercially available HDMI micro cable.

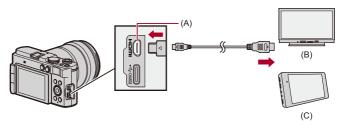

- (A) HDMI socket (Type D)
- (B) External monitor
- (C) External recorder
- Use a Premium High Speed HDMI micro cable (Type D—Type A plug) with the length less than 3 m (9.8 feet).

HDMI Output Image Quality

Images Output via HDMI: 436





Images Output via HDMI

The images output via HDMI during recording differ depending on the recording mode.

♦ [| Mode | Mode | • Mode | Mode | • Mode | •

Aspect ratio, resolution, and frame rate output is according to the [Rec Quality] settings in the [Video] ([Image Format]) menu.

The YUV and bit value are output with YUV changed to 4:2:2 as shown below.

If the connected device is not compatible with the output system, output changes to match the connected device.

Recording to card	HDMI output
4:2:2 10 bit	4:2:2 10 bit
4:2:0 10 bit	4:2:2 10 bit
4:2:0 8 bit	4:2:2 8 bit

- Video with a resolution exceeding 4K is output as C4K/4K resolution.
- When set to a [Rec Quality] for high frame rate video, the resolution and frame rate may be down-converted for output.



 When set to a [Rec Quality] other than 16:9 or 17:9, bands are added to the images and they are output with a 16:9 aspect ratio.

[iA]/[P]/[A]/[S]/[M] Mode

Output is the same as [\(\text{\tiny{\text{\tinx}\text{\ti}\text{\texitilext{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\



 When set to any [Aspect Ratio] other than 16:9, bands are added to the images and they are output with a 16:9 aspect ratio.

Notice Regarding HDMI Output

- It may take some time for the output method to change.
- When you use the HDMI output during recording, the image may be displayed with a time lag.
- Beep sounds, AF beep, and electronic shutter sounds are muted during HDMI output.
- When you check the image and audio from the TV connected to the camera, the microphone of the camera may pick up the sound from the speakers of the TV, producing an abnormal sound (audio feedback).
 - If this occurs, move the camera away from the TV or lower the volume on the TV.
- · Certain setting screens are not output via HDMI.
- For information about the high temperature display (→For information about the high temperature display: 118)

HDMI Output Settings

- Outputting the Camera Information Display via HDMI: 440
- Outputting Control Information to an External Recorder: 441
- Outputting Audio via HDMI: 442
- Outputting the Enlarged Live Display (Video) via HDMI: 442



Outputting the Camera Information Display via HDMI

Output the camera information display to an external device connected by HDMI.

Settings: [ON]/[OFF]



- There are the following restrictions when connected via HDMI and [Info Display] is set to [ON]:
 - [Touch Tab] is not available.

Outputting Control Information to an External Recorder

Recording start and stop control information is output to an external recorder connected by HDMI.

⇒ [♣] → [♣] → [HDMI Rec Output] → Select [HDMI Recording Control]

Settings: [ON]/[OFF]

- [HDMI Recording Control] can be set when [HDMI Time Code Output] is set to [ON] in [△MM]/[S&Q] mode. (→[HDMI Time Code Output]: 375)
- Control information is output when pressing the video rec. button or shutter button, even if the video cannot be recorded (such as when there is no card inserted into the camera).
- · Only compatible external devices can be controlled.

Outputting Audio via HDMI

Output audio to an external device connected by HDMI.

Settings: [ON]/[OFF]

Outputting the Enlarged Live Display (Video) via HDMI

Output the enlarged screens from [MF Assist] or [Enlarged Live Display(Video)] to an external device connected by HDMI.

[MODE1]

Enlarged display of live view is output during standby for video recording.

[MODE2]

Enlarged display of live view is output during standby for video recording and during video recording.

• The resolution and frame rate of the video output via HDMI will be FHD/60p or less.

[OFF]

Enlarged display of live view is not output.

 When the monitor of the camera is displaying the enlarged display, the camera information display is not output via HDMI.

Playing Back and Editing of Images

This chapter explains how to play back and delete pictures and videos.

 Images recorded on devices other than this one may not be played back or edited correctly on this camera.

Playing Back Pictures: 444

Playing Back Videos: 446

Switching the Display Mode: 455

Group Images: 461

• Deleting Images: 463

 
[RAW Processing]: 465[Video Repair]: 474

• [Playback] Menu: 477

Playing Back Pictures

1 Display the playback screen.

Press [▶].




2 Select a picture.

- Select the pictures by pressing ◀►.
- You can move continuously through images by pressing and holding ◀►.
- You can also move through images by dragging the screen horizontally.



3 Stop playback.

 - Press the shutter button halfway.
- You can also stop playback by pressing [].





This camera complies with the "Design rule for Camera File system" (DCF) and
"Exchangeable Image File Format" (Exif) standards established by "Japan
Electronics and Information Technology Industries Association" (JEITA).
 The camera cannot play back files that do not comply with the DCF standard.
 Exif is a file format for pictures which allows recording information, etc. to be
added



- You can assign switching of the recording screen/playback screen to an Fn button:
 - (→[Rec / Playback Switch]: 496, [Rec / Playback Switch]: 499)

Playing Back Videos

- Video Repeat Playback: 450
- Extracting a Picture: 452
- [Video Divide]: 453

Display the playback screen.

Press [▶].



2 Select a video.

- For information about how to select images (→Playing Back Pictures: 444)
- The [] video icon is displayed for a video.
- The video recording time is displayed on the screen.
 Example) When 8 minutes 30 seconds: 8m30s
- . h: hour, m: minute, s: second



(A) Video recording time

3 Play back the video.

- Press ▲.
- You can also start playback by touching [) at the center of the screen.



- (B) Elapsed playback time
- (C) Playback bar

4 Stop playback.

● Press ▼.

Operations During Video Playback

Button operations	Touch operations	Description of operation	
A	▶ / Ⅲ	Plays/pauses.	
▼	_	Stops.	
•	_	Performs fast-rewind playback. • If you press ◀ again, the fast-rewind speed increases. Performs frame-by-frame rewinding (while	
		paused).	
>	_	Performs fast-forward playback. • If you press ▶ again, the fast-forward speed increases.	
	Performs frame-by-frame forwarding (while paused).		
_		Selects the frame to display.	
	Save	Extracts a picture (while paused). (→Extracting a Picture: 452)	
(©	_	Reduces the volume.	
()	_	Increases the volume.	



- The camera can play back videos in MP4 and MOV formats.
- Video recorded with a [System Frequency] setting that is different to the current one cannot be played back.
- If the reading speed of the card is slow, playback may pause or it may not be possible to play back smoothly.



- You may be able to repair video files that cannot be played back.
 - (→[Video Repair]: 474)
- You can set the operation for when playback of video finishes:
 - (→ [Behavior After Video Playback]: 481)
- You can assign switching of the recording screen/playback screen to an Fn button:
 - (→[Rec / Playback Switch]: 496, [Rec / Playback Switch]: 499)

Video Repeat Playback

You can play back a part of a video repeatedly.

1 Display the screen for setting the part to repeat.

- Press [Q] while paused.
- The screen for setting the part to repeat is also displayed when you touch [Repeat Playback] while paused.

2 Set the position to start the repeat.

- Press ◀▶ to select the start position and then press ∰.
- Selection is also possible by rotating we or ...
- You can also select the start position by touching the playback bar.

3 Set the position to end the repeat.

- Set using the same procedure as 2.
- The position cannot be set if the position to start the repeat and the position to end the repeat are too close.



4 Start playback.

- The operations during repeat playback are the same as "Operations During Video Playback". (→Operations During Video Playback: 448)
- End repeat playback by pressing ▼ to stop playback or by pressing [Q] while paused.



- Repeat playback is not possible if the recording time is short.
- The positions set for the repeated part may shift from the position where the video is paused.

Extracting a Picture

Extract one frame of a video and save it as a JPEG image.

Pause playback at the position you wish to extract a picture.

- Press ▲.



2 Save the picture.

- Press 🚇 .
- You can also save the picture by touching [Save].



- The picture created from the video is saved with a [FINE] picture quality.
 The picture is saved with a size according to the resolution of the [Rec Quality].
- The image quality of a picture created from a video may be coarser than normal.
- [] is displayed on the detailed information display screen for a picture created from a video.
- Pictures cannot be extracted when the following function is being used:
 - [Auto Transfer] (when there is an image queued to be transferred)

[Video Divide]

Divide a recorded video into two.



- Images cannot be returned to their original state once they have been divided. Carefully confirm the images before performing the divide operation.
- Do not remove the card or battery from the camera during the divide process. The images may be lost.
- Select [Video Divide].
- 2 Select and play the image.
 - Press ◀► to select an image and then press



- 3 Pause playback at the position you wish to divide.
 - Press ▲
 - To fine-adjust the position, press ◀► (frame-by-frame rewind or frame-by-frame forward).



Divide the video.

- Press (...)
- You can also divide the video by touching [Divide].



- Dividing the video at a point close to the start or end may not be possible.
- Videos with a short recording time cannot be divided.
- [Video Divide] cannot be used on images recorded using [Segmented File Recording].
- [Video Divide] is not available when using the following function:
 - [Auto Transfer] (when there is an image queued to be transferred)

Switching the Display Mode

- Enlarged Display: 456
- Thumbnail Screen: 458
- Calendar Playback: 460

You can use features to do things like enlarge recorded images for display and switch to thumbnail display to display multiple images at once (multi-playback).

You can also switch to calendar display to show images of a selected recording date.

Enlarged Display

Playback images can be displayed enlarged (Playback Zoom).

Enlarging the playback screen.

- Rotate
 to the right.
- The playback screen is enlarged in the order of 2× □ 4× □ 8× □ 16×.
- Rotating 🚳 to the left returns to the previous display size.
- Enlarged display to 16x may not be possible with images that have a small picture size.



Operations During Enlarged Display

Button operations	Touch operations	Description of operation
0	_	Enlarges/reduces the screen.
_	Pinch out/ pinch in	Enlarges/reduces the screen in small steps.
▲▼▼	Drag	Moves the enlarged display position.
- Me	_	Forwards or rewinds images while maintaining the same zoom magnification and zoom position.



 You can display the point focused with AF. You can enlarge the display from that point:

(→[Magnify from AF Point]: 480)

Thumbnail Screen

Switch to thumbnail display.

- Rotate to the left.
- The display is switched in the order of 12-image screen □ 30-image screen.
- Rotating (3) to the left during 30-image screen display switches to calendar display. (→Calendar Playback: 460)
- Rotating 🚳 to the right returns to the previous display.
- You can also switch the display by touching an icon.

[]: 1-image screen

[: 12-image screen

[: 30-image screen

[CAL]: Calendar (→Calendar Playback: 460)



Select an image.

Press ▲ ▼ ◀► to select an image and then press





• You can scroll the screen by dragging the thumbnail display up or down.



• Images indicated with [[]] cannot be played back.

Calendar Playback

Switch to calendar playback.

- Rotate 🕲 to the left.
- The display is switched in the order of thumbnail screen (12 images) ightharpoonup
 ightharplayback.
- Rotating (to the right returns to the previous display.



Select the recording date.

Press ▲ ▼ ◀► to select a date and then press



Select an image.



• Rotating (a) to the left returns to calendar playback.



• The range that the calendar can be displayed is January 2000 to December 2099.

Group Images

Images recorded with Time Lapse Shot or Stop Motion Shooting are handled as group images in the camera, and can be deleted and edited on a group basis.

(For example, if you delete a group image, all images in the group are deleted.)

You can also delete and edit each image in a group individually.

Images Handled as Group Images by the Camera





Group images recorded with SH burst recording.



Group images recorded with Focus Bracket.



Group images recorded with Time Lapse Shot.



Group images recorded with Stop Motion Shooting.

Group images recorded with [Segmented File Recording].

Playing and Editing the Images in a Group One by One

Operations such as displaying thumbnails and deleting images are available with images in groups just as with normal playback.

 
- 1 Select the group image in the playback state. (→Playing Back Pictures: 444)
- 2 Press ▼ to display the images in the group.
 - You can also perform the same operation by touching the group image icon.
- 3 Press **◄►** to select an image.
 - To return to the normal playback screen, press ▼ or touch [▼▶] again.

Deleting Images



- Images cannot be restored once they have been deleted. Carefully confirm the images before deletion.
- If you delete a group image, all images in the group are deleted.

1 Press [前] in playback state.



Press ▲ ▼ to select the deletion method and then press



[Delete Single]

Deletes the selected image.

[Delete Multi]

Selecting and deleting multiple images.

Press ▲▼◀▶ to select the image to delete and then press ♠️ .



- [前] is displayed for the selected image.
- If you press again, the selection is canceled.
- Up to 100 images can be selected.
- Press [DISP.] to delete the selected image.



- Depending on the number of images to be deleted, it may take some time to delete them.
- Images cannot be deleted when the following function is being used:
 - [Auto Transfer] (when there is an image gueued to be transferred)

 


- You can set which of [Yes] and [No] is selected initially in the confirmation screen when deleting:
 - (→[Delete Confirmation]: 486)
- · All images on the card can be deleted:
 - (→[Delete All Images]: 486)

[RAW Processing]

This processes pictures taken in RAW format on the camera and saves them in JPFG format

1 Select [RAW Processing].





Select the RAW image.

- Press ◀► to select an image and then press
- When group images are selected, press ▼ and then select an image in the group.
 - Press ▼ again to return to the normal selection screen.
- The settings from the time of recording are reflected in displayed images.

3 Select a setting item.



4 Change the setting.

- Rotate 🗻 or 🔘.
- The image can be enlarged/reduced by pinching out/pinching in the screen.



5 Confirm the setting.

- Press 🚇 .
- The screen of Step 3 reappears.

To set another item, repeat Steps 3 to 5.

Save the image.

Press ▲ ▼ to select [Begin Processing] and then press





Setting Items ([RAW Processing])

[Begin Processing]

Saves the image.

WR[White Balance]

Selects and adjusts the white balance.

Selecting the item with [a] enables processing with the same setting as at the time of recording.

- If you press ▼ in the [White Balance] selection screen, the white balance adjustment screen appears. (→Adjusting the White Balance: 305)
- If you press ▲ while [۱/K.] to [1/K.] is selected, the color temperature setting screen appears. (→Color Temperature Setting: 304)

[Brightness correction]

Corrects the brightness.

 The [Brightness correction] effect differs from the effect of exposure compensation during recording.

Photo Style] (→[Photo Style]: 307)

Selects a Photo Style.

- If you press [Q] while [Like709] is selected, the knee setting screen appears.

 (→Recording While Controlling Overexposure (Knee): 357)
- You cannot select a Photo Style for images recorded with [V-Log]. You cannot select [V-Log] for images not recorded with [V-Log].
- You cannot select a Photo Style other than [Cinelike D2] or [Cinelike V2] for images recorded with [Cinelike D2] or [Cinelike V2]. You cannot select [Cinelike D2] or [Cinelike V2] for images not recorded with Photo Style [Cinelike D2] or [Cinelike V2].
- [REAL TIME LUT] cannot be selected. The Photo Styles that can be selected for images recoded with [REAL TIME LUT] depend on the base Photo Style.

[i.Dynamic Range]

Selects the setting of [i.Dynamic Range].

[Contrast]

Adjusts the contrast.

[Highlight]

Adjusts the brightness of bright portions.

[Shadow]

Adjusts the brightness of dark portions.

⑤ [Saturation]/[Color Tone]

Adjusts the saturation or color tone.

(Hue)

Adjusts the hue.

[Filter Effect]

Selects filter effects.

[Grain Effect]

Selects a grain effect setting.

[Color Noise]

Adds color to the grain effect.

NR [Noise Reduction]

Sets noise reduction.

S [Sharpness]

Adjusts the sharpness.

LUT 1 LUT 2 [LUT]

Selects the LUT file registered in [LUT Library]. (→[LUT Library]: 328)

LUT1 LUT2 [LUT Opacity]

Adjusts the LUT file effect.

[More Settings]

[Revert To Original]: Returns the settings to the ones from the time of recording.
[Color Space]: Selects a Color Space setting from [sRGB] or [AdobeRGB]. (→[Color Space]: 522)

[Picture Size]: Selects the size for storing images.

• The items that can be adjusted depend on the selected [Photo Style].


	FLAT FLAND FORT	\$LCLAS N	TIMONO TIMONOS TIMONO TIMONOS TIMONO	\$ 1 , \$709L	∿¶⊅ PV-Log
WB	✓	✓	✓	✓	✓
Z	✓	✓	✓	✓	✓
÷''	✓	✓	✓	✓	
Oi	✓	✓	✓		
•	✓	✓	✓		
7	✓	✓	✓		
ij	✓	✓	✓		
([Saturation])	√	✓		~	√*1
([Color Tone])			√		
0	✓	✓		✓	
⊗			✓		
	√*1	✓	✓	√*1	√*1
	√*1,2	√*2		√*1,2	√*1,2
NR	√	✓	✓	✓	✓
8	✓	✓	✓	✓	✓
LUT1/ LUT1	✓	✓	√	✓	✓

- *1 Can be set when a LUT file is applied with [LUT1] or [LUT2].
- *2 Can be set when [Grain Effect] is one of [Low], [Standard], or [High].

Displaying a Comparison Screen

You can change a setting while checking the effect by displaying images with the applied setting value side by side.

 - 1 Press [DISP.] in the screen of Step 4.
 - The image with the current setting (A) is displayed at the center.
 - Touching the image with the current setting enlarges it.
 Touching [] returns to the original display.
 - A comparison screen cannot be displayed while [Noise Reduction] or [Sharpness] is selected.



- 2 Rotate we or to change the setting.
- 3 Press to confirm the setting.



- It may take a while for the comparison screen to be displayed.
- RAW images recorded with the camera are always recorded in the [L] size of f3:21.
 - (However, RAW images recorded in High Resolution mode are recorded in the [XL] size of [3:2])
- With this function, images are processed with the aspect ratio and the angle of view of [Hybrid Zoom(Photo)]/[Crop Zoom(Photo)] from the time of recording.
- With RAW images recorded using [Hybrid Zoom(Photo)]/[Crop Zoom(Photo)],
 the [Picture Size] that can be selected during processing may be different.
- [Picture Quality] is processed as [FINE] with this function.
- The results of RAW processing with this function and with the "SILKYPIX Developer Studio" software do not completely match.
- RAW processing is not possible while you are using the following functions:
 - HDMI output
 - [Auto Transfer]

[Video Repair]

When the recording of a video could not be completed normally, a video file that cannot be played back may be generated (extension ".mdt").

You can repair the ".mdt" file with this function to make it playable.

- Possible causes for the generation of ".mdt" files are:
 - Power turns off during video recording (battery is removed, AC cable is unplugged, power outage while using the AC adaptor, etc.)
 - Card removed during video recording
 - Card removed while writing to card after video recording
 - When an unexpected freeze occurs during video recording/while writing to the card



 Videos that can be repaired are those videos recorded with the [Rec. File Format] being [MOV].

Video recorded in [MP4(Lite)] or [MP4] cannot be repaired.

 As repairs can take some time, supply with power during the operation. (→Using the Camera While Supplying It with Power (Supplying Power): 45)

Select [Video Repair].

 




· Video files that can be repaired are filtered.

Select the video file to repair.

- Press ◀► to select a file and then press
- Refer to the recording date and time (A), folder/file number (B), and video recording time (C) to help with selecting the video file.



3 Select [Yes] on the confirmation screen.

- Video repair starts. Repair takes some time.
- The video file after repair is saved in the same folder as the file before repair.

Canceling Video Repair

Even if you cancel video repair, the file is not deleted, so the procedure can be done over again later if required.

- 1 Press either in the video repair progress screen.
- 2 Select [Yes] on the confirmation screen.



- It may not be possible to repair videos with a short recording time.
- It may not be possible to repair videos in some cases due to the state of the data.
- Video repair cannot be started if there is very limited free space on the card.
- Do not turn off the power or remove the card during repair.

Otherwise, the card and recorded data may be damaged.

- Do not perform other operations during the repair.
- You cannot repair videos recorded with devices other than this camera.
- When the following function is being used, [Video Repair] is not available:
 - [Auto Transfer] (when there is an image queued to be transferred)

[Playback] Menu

- How to Select an Image(s) in the [Playback] Menu: 477
- [Playback] ([Playback Mode]): 479
- [Playback] ([Process Image]): 482
- [Playback] ([Add/Delete Info.]): 483
- [Playback] ([Edit Image]): 484
- [Playback] ([Others]): 486

How to Select an Image(s) in the [Playback] Menu

Follow the steps below when the image selection screen is displayed.

When [Single] Has Been Selected

- 1 Press **◄►** to select the image.
- 2 Press 🚇 .
 - If [Set/Cancel] is displayed at the right bottom of the screen, the setting is canceled when is pressed again.

When [Multi] Has Been Selected

- 1 Press ▲▼◀► to select the image and then press (repeat).
 - The setting is canceled when pis pressed again.



2 Press [DISP.] to execute.

When [Protect] is selected

Press ▲▼◀► to select the image, and then press to set (repeat).

• The setting is canceled when is pressed again.



[Playback] ([Playback Mode])

▶: Default settings

[Playback Mode]

▶[Normal Play] / [Picture Only] / [Video Only] / [Rating]

Filters the type of images to play back.

 When you have set [Rating], put a check mark in the rating level you want to display, then press [DISP.].

[Slide Show]

[All] / [Picture Only] / [Video Only] / [Rating]

Selects image types and plays them back at regular intervals in order.

 When you have set [Rating], put a check mark in the rating level you want to display, then press [DISP.].

[Start]: Starts slide show playback.

[Duration]: Sets repeat playback.

[Repeat]: Sets repeat playback.

Operations during slide show

- \blacktriangle : Plays/pauses (You can also perform the same operation by touching $\llbracket \bullet \rrbracket$) or $\llbracket (\overrightarrow{\mathbf{II}} \rrbracket)$
- ■: Move to the previous image
- ▶: Move to the next image
- ▼: Ends the slide show
- Adjusts the volume
- When [Video Only] is set, [Duration] is not available.

[Rotate Disp.]

▶[ON] / [OFF]

Automatically displays pictures vertically if they were recorded when holding the camera vertically.

[Picture Sort]

[FILE NAME] / ▶[DATE/TIME]

This sets the order in which the camera displays images during playback.

[FILE NAME]: Displays images by folder name/file name.

[DATE/TIME]: Displays images by recording date.

 If you insert another card, it may take some time to read all data, therefore pictures may not be displayed in the set order.

[Magnify from AF Point]

[ON] / ▶[OFF]

Displays the point focused with AF.

Enlarges the AF focus location when enlarging the image.

 The center of the image is enlarged for RAW images recorded in the High Resolution mode or when the image is not focused.

[LUT View Assist (Monitor)]

[ON] / ▶[OFF]

When playing back images recorded with [Photo Style] set to [V-Log], this displays the images with LUT file applied on the monitor.

 This functions in tandem with [LUT View Assist (Monitor)] in [Log View Assist] in the [Custom] ([Monitor / Display (Video)]) menu. (>[Log View Assist]: 416)

[HLG View Assist (Monitor)]

[MODE1] / ▶[MODE2] / [OFF]

At recording or playback of HLG video, this converts their color gamut and brightness for display.

 This functions in tandem with [Monitor] in [HLG View Assist] in the [Custom] ([Monitor / Display (Video)]) menu. (→[HLG View Assist]: 420)

[Anamorphic Desqueeze Display]

$$2.0 \times 1.8 \times 1.5 \times 1.33 \times 1.30 \times 1.4 \times 1.$$

This displays the desqueezed images suited to the magnification of the anamorphic lens on this camera.

This is linked with [Anamorphic Desqueeze Display] under the [Custom] ([Monitor / Display (Video)]) menu. (>[Anamorphic Desqueeze Display]: 423)

[Behavior After Video Playback]

▶[End Playback] / [Pause At Last Frame]

Sets the operation for when playback of video finishes.

[End Playback]: Ends video playback and returns to the image selection screen. [Pause At Last Frame]: Does not end video playback, but pauses on the final frame. To end video playback, press ▼.

[Playback] ([Process Image])

[RAW Processing]

Processes pictures taken in RAW format on the camera and saves them in JPEG format.

(→[RAW Processing]: 465)

[Time Lapse Video]

This creates videos from group images recorded with [Time Lapse Shot].

- Press ◀▶ to select a [Time Lapse Shot] group and then press ∰
- 2 Select the options for creating a video to combine the pictures into a video.
 (>Time Lapse Shot/Stop Motion Animation Videos: 234)
- When [System Frequency] is set to [24.00Hz (CINEMA)], [Time Lapse Video] is not available.

[Stop Motion Video]

This creates videos from group images recorded with [Stop Motion Animation].

- - Press $\blacktriangleleft \blacktriangleright$ to select the Stop Motion Animation group and then press \clubsuit .
- 2 Select the options for creating a video to combine the pictures into a video.
 (→Time Lapse Shot/Stop Motion Animation Videos: 234)
- When [System Frequency] is set to [24.00Hz (CINEMA)], [Stop Motion Video] is not available.

[Playback] ([Add/Delete Info.])

[Protect]

[Single] / [Multi] / [Cancel]

You can set protection for images so that they will not be deleted by mistake. However, if you format the card, the protected images will also be deleted.

- For information about how to select images (→How to Select an Image(s) in the [Playback] Menu: 477)
- Be careful because the [Protect] setting may be disabled on a device other than this camera

[Rating]

[Single] / [Multi] / [Cancel]

If you set any of the five different rating levels for images, you can do the following:

- · Deleting all images except for those with ratings.
- Use the file details view on a PC, etc., to check the rating level. (JPEG images only)
- Select an image. (>How to Select an Image(s) in the [Playback] Menu: 477)
- 2 Press ◀▶ to select a rating level (1 to 5) and then press ♠ .

 - When [Multi] is selected, repeat Steps 1 and 2.
 - . To cancel the setting, set the rating level to [OFF].

[Playback] ([Edit Image])

▶: Default settings

[Resize]

[Single] / [Multi]

Reduce the picture size of JPEG images and save them as different images to enable them to be easily used for web pages or sent as email attachments.

- For information about how to select images (→How to Select an Image(s) in the [Playback] Menu: 477)
 - When [Single] is selected, after choosing the image, press ▲ ▼ to select the size, then press
 - When [Multi] is selected, before choosing the images, press ▲▼ to select the size, then press
- You can set up to 100 images at once with [Multi].
- The image quality of the resized image becomes lower.
- [Resize] is not available for images recorded using the following functions:
 - Video recording
 - Group images
 - [65:24]/[2:1] ([Aspect Ratio])
 - [RAW] ([Picture Quality])
 - Pictures created from [C4K] video
 - [XS] ([Picture Size])

[Rotate]

Rotate images manually in 90° steps.

[]: Rotates 90° clockwise.

[]: Rotates 90° counter-clockwise.

- For information about how to select images (→How to Select an Image(s) in the [Playback] Menu: 477)
- When [Rotate Disp.] is [OFF], [Rotate] is not available.

[Video Divide]

Divide a recorded video into two.

(→[Video Divide]: 453)

[Video Repair]

When recording does not finish normally for some reason, it is possible to repair the video file. (→[Video Repair]: 474)

[Playback] ([Others])

▶: Default settings

[Delete Confirmation]

["Yes" first] / ▶["No" first]

This sets which option, [Yes] or [No], will be highlighted first when the confirmation screen for deleting an image is displayed.

["Yes" first]: [Yes] is highlighted first.

["No" first]: [No] is highlighted first.

[Delete All Images]

Deleting all images in a card.

- Images cannot be restored once they have been deleted. Carefully confirm the images before deletion.
- If you select [Delete All Non-rating], all images except those with a rating set are deleted
- [Delete All Images] can be used when [Playback Mode] is set to [Normal Play].

Camera Customization

This chapter describes the customization function with which you can configure the camera to your preferred settings.

It also describes the [Custom] menu where you can make advanced settings for the camera operations and screen displays, and the [Setup] menu where you can make basic settings for the camera.

Fn Buttons: 488

• [Dial Operation Switch]: 502

Quick Menu Customization: 505

Custom Mode: 512[Custom] Menu: 517[Setup] Menu: 554

My Menu: 572


Fn Buttons

- Register Functions to the Fn Buttons: 490
- Use the Fn Buttons: 501


You can register functions to the Fn (Function) buttons.

Different functions can be set for both during recording and playback.

Fn Button Default Settings

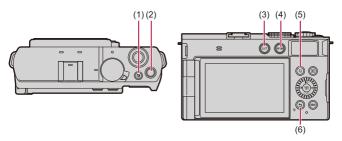


Fn buttons		[Setting in REC mode]	[Setting in PLAY mode]
(1)	[🔁]	[Exposure Comp.]	[No Setting]
(2)	Video rec. button	[Video Record]	[Video Record]
(3)	[LUT]	[REAL TIME LUT]	[No Setting]
(4)	[AF ON]	[AF-ON]	[Rating★3]
(5)	[Q]	[Q.MENU]	[Send Image (Smartphone)]
(6)	[Fn1]/[今]/ [前]	[Level Gauge]	Cannot be used as Fn buttons during playback.

 

	Fn buttons	[Setting in REC mode]	[Setting in PLAY mode]
(7) —	[Fn2]	[Preview]	
	[Fn3]	[Wi-Fi]	
	[Fn4]	[Histogram]	Cannot be used as Fn
	[Fn5]	[Boost I.S. (Video)]	buttons during playback.
	[Fn6]	[Off (Disable Press and Hold)]	
(8)	Fn7 Fn8 Fn9 Fn10	[Sensitivity] [White Balance] [Drive Mode] [AF Mode]	[No Setting]

Register Functions to the Fn Buttons

- 1 Select [Fn Button Set].
 - • | ♣ | → [←] → [Fn Button Set] → [Setting in REC mode]/
 [Setting in PLAY mode]
- Select the button.
 - Press ▲ ▼ to select the button and then press
 - Selection is also possible by rotating
 - Press [DISP.] to change the page.

 

3 Find the function to register.

- Rotate ★ to select the sub tab where the function to register is categorized (→Setting Items ([Fn Button Set]/[Setting in REC mode]): 493, Setting Items ([Fn Button Set]/[Setting in PLAY mode]): 499) and then press
- Switch the [1] to [3] tabs by pressing [Q].



4 Register the function.

- Press ▲ ▼ to select a function and then press ().
- Selection is also possible by rotating
- Select items with [>] by selecting the item again.
- Depending on the button, some functions cannot be registered.



- You can also touch [Fn†] on the control panel (→Control Panel: 684) to display the screen in Step 2.
- You can also press and hold the Fn button (2 sec.) to display the screen in Step **4**.

(This may not be displayed depending on the registered function and on the button type.)



You can assign a function to the focus button of an interchangeable lens:

(→[Lens Fn Button Setting]: 551)

Setting Items ([Fn Button Set]/[Setting in REC mode])

[1] tab

[Image Quality]

- [Exposure Comp.] (→Exposure Compensation: 286)
- [Dual Native ISO Setting] (→[Dual Native ISO Setting]: 296)
- [Sensitivity] (→ISO Sensitivity: 292)
- [White Balance] (→White Balance (WB): 299)
- [Photo Style] (→[Photo Style]: 307)
- [Apply LUT]
 - Applies the LUT file that was set in [LUT] with either [REAL TIME LUT] or [MY PHOTO STYLE]. (→Adjusting Image Quality: 312)
- [REAL TIME LUT] (→ [REAL TIME LUT]: 326)
- [Metering Mode] (→[Metering Mode]: 267)
- [Aspect Ratio] (→[Aspect Ratio]: 106)
- [Picture Quality] (→ [Picture Quality]: 110)
- [Picture Size] (→ [Picture Size]: 108)
- [1 Shot Spot Metering]
 - Records with the metering mode set to [•] (Spot metering) once only.
 (→[Metering Model: 267)
- [Min. Shutter Speed] (→[Min. Shutter Speed]: 253)
- [1 Shot RAW+JPG]
 - Records a RAW image and a JPEG image simultaneously once only. (→[Picture Quality]: 110)
- [i.Dynamic Range] (→[i.Dynamic Range]: 289)
- [Color Shading Compensation] (→[Color Shading Compensation]: 335)
- [Filter Effect] (→[Filter Settings]: 320)
- [One Push AE]
 - Adjusts the aperture value and shutter speed to the settings suited for the standard exposure determined by the camera. (**) Exposure Compensation: 286)

- [Touch AE] (→ Touch AE: 100)
- [AWB Lock] (→[AWB Lock Setting]: 521)
- [Exposure Mode] (→Setting the Exposure for Recording Videos: 343)
- [Synchro Scan(Photo)] (→[Synchro Scan(Photo)]: 251)
- [Synchro Scan(Video)] (→[Synchro Scan(Video)]: 425)

AF [Focus/Shutter]

- [Focus Mode] (→Selecting the Focus Mode: 139)
- [AF Mode] (→Selecting the AF Mode: 159)
- [AF Detection Setting] (→Automatic Detection: 162)
- [Detecting Subject] (→Automatic Detection: 162)
- [AF Custom Setting(Photo)] (→[AF Custom Setting(Photo)]: 148)
- [AF Custom Setting(Video)] (→[AF Custom Setting(Video)]: 351)
- [Focus Limiter] (→[Focus Limiter]: 151)
- [Focus Limiter Range Set] (→[Focus Limiter]: 151)
- [Focus Peaking] (→[Focus Peaking]: 188)
- [Focus Peaking Sensitivity] (→[Focus Peaking]: 188)
- [Focus Frame Moving Speed] (→[Focus Frame Moving Speed]: 154)
- [Focus Ring Lock] (→[Focus Ring Lock]: 526)
- [AE LOCK] (→Locking Focus and Exposure (AF/AE Lock): 290)
- [AF LOCK] (→Locking Focus and Exposure (AF/AE Lock): 290)
- [AF/AE LOCK] (→Locking Focus and Exposure (AF/AE Lock): 290)
- [AF-ON] (→[AF ON] button: 143)
- [AF-ON : Near Shift]
 - AF operates giving priority to close-up subjects. (→Using AF: 141)
- [AF-ON : Far Shift]
 - AF operates giving priority to distant subjects. (→Using AF: 141)
- [AF-Point Scope] (→[AF-Point Scope]: 146)
- [Focus Area Set]
 - Displays the AF area/MF Assist movement screens. (→AF Area Operations: 177, Operations on the MF Assist Screen: 185)
- [Enlarged Live Display(Video)] (→[Enlarged Live Display(Video)]: 352)

Others (Photo)]

- [Drive Mode] (→ Selecting the Drive Mode: 205)
- [Drive Mode Setting] (→Selecting the Drive Mode: 205)
- [Bracketing] (→Bracket Recording: 241)
- [Silent Mode] (→[Silent Mode]: 249)
- [Image Stabilizer] (→[Operation Mode]: 260)
- [Hybrid Zoom(Photo)] (→ [Hybrid Zoom(Photo)]: 194)
- [Crop Zoom]
 - Can be set for [Crop Zoom(Photo)], [Zoom Control], [Zoom In(Tele)], [Zoom Out(Wide)], [Crop Zoom Increment(Step)], and [Zoom Speed(Photo)]. (→[Crop Zoom(Photo)]: 191)

[Image Format]

- [Rec. File Format] (→ [Rec. File Format]: 122)
- [Rec Quality] (→ [Rec Quality]: 123)
- [Rec Quality (My List)] (→Setting or deleting in My List: 134)
- [Slow & Quick Setting] (→Slow & Quick Video: 393)
- [Time Code Display] (→Time Code: 373)

[2] tab

[Audio]

- [Sound Rec Level Disp.] (→[Sound Rec Level Disp.]: 361)
- [Mute Sound Input] (→ [Mute Sound Input]: 362)
- [Sound Rec Level Adj.] (→[Sound Rec Level Adj.]: 364)
- [Sound Rec Quality] (→[Sound Rec Quality]: 365)
- [Sound Rec Level Limiter] (→[Sound Rec Level Limiter]: 366)

[Others (Video)]

- [Image Stabilizer] (→[Operation Mode]: 260)
- [E-Stabilization (Video)] (→ [E-Stabilization (Video)]: 261)
- [Boost I.S. (Video)] (→[Boost I.S. (Video)]: 262)
- [Image Area of Video] (→[Image Area of Video]: 136)
- [Hybrid Zoom(Video)] (→ [Hybrid Zoom(Video)]: 201)
- [Crop Zoom]
 - Can be set for [Crop Zoom(Video)], [Zoom Control], [Zoom In(Tele)], [Zoom Out(Wide)], [Crop Zoom Increment(Step)], and [Zoom Speed(Video)]. (→[Crop Zoom(Video)]: 197)
- [Focus Transition] (→[Focus Transition]: 402)
- [Live Cropping] (→[Live Cropping]: 407)
- [Live Cropping Settings] (→[Live Cropping]: 407)

[Operation]

- [Q.MENU] (→Quick Menu: 80)
- [Rec / Playback Switch]
 - Switches to the playback screen. (→Playing Back Pictures: 444, Playing Back Videos: 446)
- [Video Record] (→Basic Video Operations: 113)
- [Video Record(Creative Video)]
 - Video recording is started or stopped only in the [☆M] mode. (→Setting the Exposure for Recording Videos: 343)
- [Operation Lock]
 - A certain type of operation is disabled. Set the type of operation to be disabled in [Operation Lock Setup]. (→[Operation Lock Setup]: 531)
- [Dial Operation Switch] (→Temporarily Change Dial Operation: 504)

[Monitor / Display]

- [Preview] (→Preview Mode: 284)
- [Preview Aperture Effect]
 - The aperture effect can be previewed while the Fn button is being pressed.

(→Preview Mode: 284)

- [Constant Preview] (→[Constant Preview]: 535)
- [Level Gauge] (→[Level Gauge]: 544)
- [Histogram]: 536)
- [Luminance Spot Meter] (→[Luminance Spot Meter]: 384)
- [Frame Marker] (→[Frame Marker]: 388)
- [Photo Grid Line] (→[Photo Grid Line]: 537)
- [Live View Boost] (→[Live View Boost]: 537)
- [Monochrome Live View] (→[Monochrome Live View]: 547)
- [Night Mode] (→[Night Mode]: 538)
- [Monitor Display Settings]
 - Switches the displayed monitor display style. (→[Monitor Display Settings]: 539)
- [Video-Priority Display] (→[Video-Priority Display]: 549)
- [Zebra Pattern] (→ [Zebra Pattern]: 386)
- [LUT View Assist (Monitor)] (→[LUT View Assist (Monitor)]: 416)
- [LUT View Assist (HDMI)] (→[LUT View Assist (HDMI)]: 416)
- [LUT Select(LUT View Assist)] (→[LUT Select(V-Log)]: 416)
- [HLG View Assist (Monitor)] (→[HLG View Assist]: 420)
- [HLG View Assist (HDMI)] (→[HLG View Assist]: 420)
- [Sheer Overlay] (→[Sheer Overlay]: 542)
- [I.S. Status Scope] (→[I.S. Status Scope]: 543)
- [WFM/Vector Scope] (→[WFM/Vector Scope]: 380)
- [Anamorphic Desqueeze Display] (→[Anamorphic Desqueeze Display]: 423)
- [Color Bars] (→Color Bars/Test Tone: 390)

[3] tab

[Lens / Others]

- [Focus Ring Control] (→[Focus Ring Control]: 552)
- [AF Micro Adjustment] (→[AF Micro Adjustment]: 155)
- [Lens Information] (→[Lens Information]: 264)

_⋒ [IN/OUT]

• [Wi-Fi] (→Wi-Fi / Bluetooth: 588)

🇱 [Setting]

• [Save to Custom Mode] (→ Registering Instant Customization: 513)

F [Others]

- [No Setting]
 - Set when not using as an Fn button.
- [Off (Disable Press and Hold)]
 - The button does not work as an Fn button. The function registering screen is not displayed when you press and hold (2 seconds) the Fn button.
- [Restore to Default]
 - Restore the default settings for the Fn button. (→Fn Button Default Settings: 488)

Setting Items ([Fn Button Set]/[Setting in PLAY mode])

[1] tab

[Playback Mode]

- [Magnify from AF Point] (→ [Magnify from AF Point]: 480)
- [LUT View Assist (Monitor)] (→[LUT View Assist (Monitor)]: 480)
- [HLG View Assist (Monitor)] (→[HLG View Assist (Monitor)]: 481)
- [Anamorphic Desqueeze Display] (→[Anamorphic Desqueeze Display]: 423)

[Process Image]

[RAW Processing] (→[RAW Processing]: 465)

[Add/Delete Info.]

- [Delete Single] (→Deleting Images: 463)
- [Protect] (→[Protect]: 483)
- [Rating★1] (→[Rating]: 483)
- [Rating★2] (→[Rating]: 483)
- [Rating ★3] (→ [Rating]: 483)
- [Rating ★4] (→ [Rating]: 483)
- [Rating ★5] (→ [Rating]: 483)

[Operation]

- [Rec / Playback Switch]
 - Switches to the recording screen. (→Basic Picture Operations: 103, Basic Video Operations: 113)
- [Video Record] (→Basic Video Operations: 113)
- [Video Record(Creative Video)]
 - Video recording is started or stopped only in the [☆M] mode. (→Setting the Exposure for Recording Videos: 343)

[Monitor / Display]

• [Night Mode] (→[Night Mode]: 538)

[IN/OUT]

- [Wi-Fi] (→Wi-Fi / Bluetooth: 588)
- [Send Image (Smartphone)] (→Sending Images on the Camera to a Smartphone with Simple Operations: 618)
- [LUT View Assist (HDMI)] (→[Log View Assist]: 416)
- [HLG View Assist (HDMI)] (→[HLG View Assist]: 420)

[Others]

- [No Setting]
 - Set when not using as an Fn button.
- [Off (Disable Press and Hold)]
 - The button does not work as an Fn button. The function registering screen is not displayed when you press and hold (2 seconds) the Fn button.
- [Restore to Default]
 - Restore the default settings for the Fn button. (→Fn Button Default Settings: 488)

Use the Fn Buttons

During recording, pressing the Fn buttons enables usage of the functions registered in [Setting in REC mode], and during playback, usage of the functions registered in [Setting in PLAY mode].

- Press the Fn button.
- 2 Select a setting item.
 - Press ◀► to select a setting item and then press
 - Selection is also possible by rotating we or ...
 - Display and selection methods of a setting item differ depending on the menu item.

Use [Fn2] to [Fn6] (Touch Icons)

During recording, you can use the Fn buttons within the Touch Tab.



- With the default settings, the Touch Tab is not displayed. Set [Touch Tab] to [ON] in [Touch Settings] in the [Custom] ([Operation]) menu. (→[Touch Settings]: 530)
- 1 Touch [Fn]
- 2 Touch one of [Fn2] to [Fn6].



[Dial Operation Switch]

- Register Functions to the Dials: 502
- Temporarily Change Dial Operation: 504

This temporarily changes the functions operated with (front dial) and (control dial).

Register Functions to the Dials

Select [Dial Operation Switch Setup].



- Register the function.



Functions That Can Be Registered

- [Exposure Comp.] (→Exposure Compensation: 286)
- [Sensitivity]*1 (→ISO Sensitivity: 292)
- [White Balance]*2 (→White Balance (WB): 299)
- [Photo Style] (→[Photo Style]: 307)
- [Aspect Ratio] (→[Aspect Ratio]: 106)
- [i.Dynamic Range] (→[i.Dynamic Range]: 289)
- [Filter Effect] (→[Filter Settings]: 320)
- [Focus Mode] (→Selecting the Focus Mode: 139)
- [AF Mode] (Selecting the AF Mode: 159)
- [Drive Mode] (→ Selecting the Drive Mode: 205)
- *1 🔘 default setting
- *2 default setting

Temporarily Change Dial Operation

- Set [Dial Operation Switch] to the Fn button. (→Fn Buttons: 488)
- 2 Switch dial operation.
 - Press the Fn button set in Step 1.
 - A guide will display the functions registered to <u>a</u> and
 - If no operations are performed, then several seconds later, the guide disappears.



3 Set the registered function.

Rotate a or while the guide is displayed.



- 4 Confirm your selection.
 - Press the shutter button halfway.

Quick Menu Customization

Register to the Quick Menu: 505

You can change Quick menu items depending on the recording mode.

Additionally, you can change the items to display on the Quick menu and their order to suit your preferences.

For information about Quick menu operation methods (→Quick Menu: 80)

Register to the Quick Menu

Change the menus to be displayed in the Quick menu.

These can be set separately for [\(\text{\text{\text{\text{\text{M}}}}\)/[S&Q] mode (Video) and for other recording modes (Photo).

- Select [Q.MENU Settings].
 - • | ♣ | → [♠] → [Q.MENU Settings] → [Item Customize (Photo)]/[Item Customize (Video)]
- 2 Select the item position (1 to 12).
 - Press ▲ ▼ ◀► to select the position and then press
 - Selection is also possible by rotating



3 Find the function to register.

- Rotate
 to select the sub tab where the function to register is categorized (→Menu Items That Can Be Registered: 507) and then press
- Each press of [Q] switches between tabs [1] and [2].



4 Register menu items.

- Selection is also possible by rotating
- Select items with [>] by selecting the item again.

Menu Items That Can Be Registered

[1] tab

[Image Quality]

- [Exposure Comp.] (→Exposure Compensation: 286)
- [Dual Native ISO Setting] (→[Dual Native ISO Setting]: 296)
- [Sensitivity] (→ISO Sensitivity: 292)
- [White Balance] (→White Balance (WB): 299)
- [Photo Style] (→[Photo Style]: 307)
- [Metering Mode] (→[Metering Mode]: 267)
- [Aspect Ratio] (→ [Aspect Ratio]: 106)
- [Picture Quality] (→ [Picture Quality]: 110)
- [Picture Size] (→ [Picture Size]: 108)
- [Min. Shutter Speed] (→[Min. Shutter Speed]: 253)
- [i.Dynamic Range] (→[i.Dynamic Range]: 289)
- [Color Shading Compensation] (→[Color Shading Compensation]: 335)
- [Filter Effect] (→[Filter Settings]: 320)
- [Exposure Mode] (→ Setting the Exposure for Recording Videos: 343)
- [Synchro Scan(Photo)] (→[Synchro Scan(Photo)]: 251)
- [Synchro Scan(Video)] (→[Synchro Scan(Video)]: 425)

[AF] [Focus/Shutter]

- [Focus Mode] (→Selecting the Focus Mode: 139)
- [AF Mode] (→Selecting the AF Mode: 159)
- [AF Detection Setting] (→Automatic Detection: 162)
- [Detecting Subject] (→Automatic Detection: 162)
- [AF Custom Setting(Photo)] (→[AF Custom Setting(Photo)]: 148)
- [AF Custom Setting(Video)] (→[AF Custom Setting(Video)]: 351)
- [Focus Peaking] (→[Focus Peaking]: 188)
- [Focus Peaking Sensitivity] (→[Focus Peaking]: 188)
- [Focus Frame Moving Speed] (→[Focus Frame Moving Speed]: 154)

(Photo)]

- [Drive Mode] (→Selecting the Drive Mode: 205)
- [Drive Mode Setting] (→ Selecting the Drive Mode: 205)
- [Bracketing] (→Bracket Recording: 241)
- [Silent Mode] (→[Silent Mode]: 249)
- [Image Stabilizer] (→[Operation Mode]: 260)
- [Hybrid Zoom(Photo)] (→[Hybrid Zoom(Photo)]: 194)
- [Crop Zoom(Photo)] (→[Crop Zoom(Photo)]: 191)
- [Zoom Speed(Photo)] (→[Zoom Speed(Photo)]: 191)

[Image Format]

- [Rec. File Format] (→ [Rec. File Format]: 122)
- [Rec Quality] (→[Rec Quality]: 123)
- [Rec Quality (My List)] (→[add to list]: 134)
- [Slow & Quick Setting] (→Slow & Quick Video: 393)
- [Time Code Display] (→Time Code: 373)

[Audio]

- [Sound Rec Level Disp.] (→[Sound Rec Level Disp.]: 361)
- [Sound Rec Level Adj.] (→[Sound Rec Level Adj.]: 364)
- [Sound Rec Quality] (→[Sound Rec Quality]: 365)
- [Sound Rec Level Limiter] (→[Sound Rec Level Limiter]: 366)

[Others (Video)]

- [Image Stabilizer] (→[Operation Mode]: 260)
- [E-Stabilization (Video)] (→ [E-Stabilization (Video)]: 261)
- [Boost I.S. (Video)] (→[Boost I.S. (Video)]: 262)
- [Image Area of Video] (→[Image Area of Video]: 136)
- [Hybrid Zoom(Video)] (→[Hybrid Zoom(Video)]: 201)
- [Crop Zoom(Video)] (→[Crop Zoom(Video)]: 197)
- [Zoom Speed(Video)] (→[Zoom Speed(Video)]: 198)
- [Focus Transition] (→[Focus Transition]: 402)

[2] tab

[Others (Video)]

- [Live Cropping] (→[Live Cropping]: 407)
- [Live Cropping Settings] (→[Live Cropping]: 407)

[Monitor / Display]

- [Constant Preview] (→[Constant Preview]: 535)
- [Level Gauge] (→[Level Gauge]: 544)
- [Histogram] (→[Histogram]: 536)
- [Luminance Spot Meter] (→[Luminance Spot Meter]: 384)
- [Frame Marker] (→ [Frame Marker]: 388)
- [Photo Grid Line] (→[Photo Grid Line]: 537)
- [Live View Boost] (→ [Live View Boost]: 537)
- [Monochrome Live View] (→[Monochrome Live View]: 547)
- [Night Mode] (→[Night Mode]: 538)
- [Monitor Display Settings] (→ [Monitor Display Settings]: 539)
- [Video-Priority Display] (→[Video-Priority Display]: 549)
- [Zebra Pattern] (→ [Zebra Pattern]: 386)
- [LUT View Assist (Monitor)] (→[LUT View Assist (Monitor)]: 416)
- [LUT View Assist (HDMI)] (→[LUT View Assist (HDMI)]: 416)
- [HLG View Assist (Monitor)] (→[HLG View Assist]: 420)
- [HLG View Assist (HDMI)] (→[HLG View Assist]: 420)
- [Sheer Overlay] (→[Sheer Overlay]: 542)
- [I.S. Status Scope] (→[I.S. Status Scope]: 543)
- [WFM/Vector Scope] (→[WFM/Vector Scope]: 380)
- [Anamorphic Desqueeze Display] (→[Anamorphic Desqueeze Display]: 423)
- [Color Bars] (→Color Bars/Test Tone: 390)

([Lens / Others]

- [Focus Ring Control] (→[Focus Ring Control]: 552)
- [Lens Information] (→[Lens Information]: 264)

■ [IN/OUT]

• [Wi-Fi] (→Wi-Fi / Bluetooth: 588)

[Others]

- [No Setting]
 - Set when not using.

Quick Menu Detailed Settings

Change the appearance of the Quick menu and the operation of during menu display.



[Layout Style]

Changes the appearance of the Quick menu.

[MODE1]: Displays the live view and the menu simultaneously.

[MODE2]: Displays the menu in full screen.

[Item Customize (Photo)]

Customizes the Quick menu to display when the mode dial is set to [iA]/[P]/[A]/[S]/[M].

[Item Customize (Video)]

Customizes the Quick menu to display when the mode dial is set to [M]/[S&Q].

Custom Mode

Register in Custom Mode: 513

Using Custom Mode: 515

Calling Up Settings: 516





Recording modes and menu settings that match your preferences can be registered in Custom mode. You can use registered settings by switching the mode dial to [C1] to [C3] modes.

Register in Custom Mode

You can register the currently set information of the camera.

At the time of purchase, the default settings of the [P] mode menus are registered with all Custom modes.

- Set to recording mode and menu settings of the state you wish to save.
- 2 Select [Save to Custom Mode].
 - (♣) → [♣] → [Save to Custom Mode]
- 3 Register.
 - Select the save-to number and then press (m).
 - A confirmation screen will be displayed. Press [DISP.] to change the Custom mode name.

How to enter characters (→Entering Characters: 90)

Registering Instant Customization

When you press the Fn button registered with [Save to Custom Mode] in the recording standby screen, you can quickly register the current recording settings in the Custom mode. (→Fn Buttons: 488)



You cannot register [iA] mode in Custom mode.



 List of settings that can be registered in Custom mode (→List of Default Settings/ Custom Saving/Settings Available for Copying: 736)

Custom Mode Detailed Settings

You can create additional Custom mode sets, and how long to retain temporarily changed settings details.



[Limit No. of Custom Mode]

Sets the number of Custom modes that can be registered in [C3].

A maximum of 10 sets can be registered; 3 sets are available as default settings.

[Edit Title]

Changes the Custom mode name.

A maximum of 22 characters can be entered. A two-byte character is treated as two characters.

How to enter characters (→Entering Characters: 90)

[How to Reload Custom Mode]

Sets the timing at which to return the settings that were changed temporarily while the Custom mode was being used to their registered settings.

[Change Recording Mode]/[Return from Sleep Mode]/[Turn the Power ON]

[Select Loading Details]

Sets the types of settings to call up with [Load Custom Mode].

 
[F / SS / ISO Sensitivity]: Enables calling up of aperture value, shutter speed, and ISO sensitivity settings.

[White Balance]: Enables calling up of white balance settings.

Using Custom Mode

Set the recording mode to [C1] to [C3].

- Set the mode dial. (→Selecting the Recording Mode: 70)
- If [C3], the last-used Custom mode will be called up.



[C3] Custom Mode Selection

- 1 Set the recording mode to [C3].
- 2 Press (A).
 - The Custom mode selection menu appears.
- - The selected Custom mode icon will be displayed on the recording screen.



Changing Registered Details

Registered settings do not change even if you change the camera settings temporarily with the mode dial set to [C1] to [C3].

To change the registered details, overwrite them by using [Save to Custom Mode] in the [Setup] ([Setting]) menu.

Calling Up Settings

Call up registered Custom mode settings to the selected recording mode and overwrite the current settings with these.

- 1 Set to the recording mode to be used.
 - Set the mode dial. (→Selecting the Recording Mode: 70)
- 2 Select [Load Custom Mode].
 - (♣) → [♣] → [Load Custom Mode]
- 3 Select the Custom mode to call up.
 - Select the Custom mode and then press



Calling up of Custom modes is not possible between those created from [P]/[A]/
[S]/[M] modes and those created from [β[Ω]/[S&Q] mode.

☆ [Custom] Menu

- [Custom] menu ([Image Quality]): 518
- [Custom] menu ([Focus/Shutter]): 524
- [Custom] menu ([Operation]): 530
- [Custom] menu ([Monitor / Display (Photo)]): 535
- [Custom] menu ([Monitor / Display (Video)]): 546
- [Custom] menu ([IN/OUT]): 550
- [Custom] menu ([Lens / Others]): 551

[Custom] menu ([Image Quality])

▶: Default settings

[Photo Style Settings]

	[Vivid] / [Natural] / [L.ClassicNeo] /
	[Flat] / [Landscape] / [Portrait] /
	[L.Monochrome] / [L.Monochrome D] /
	[L.Monochrome S] / [LEICA
[Show/Hide Photo Style]	Monochrome] / [Cinelike D2] / [Cinelike
	V2] / [Like709] / [V-Log] / [REAL TIME
	LUT] / [Like2100(HLG)] /
	[Like2100(HLG) Full Range] / [MY
	PHOTO STYLE 1] to [MY PHOTO
	STYLE 10]

Sets Photo Style items to be displayed on the menu.

[My Photo Style Settings]	[Add Effects]
	[Load Preset Setting]

Enables detailed image quality adjustment settings for My Photo Style.

[Add Effects]: Enables [Dual Native ISO Setting], [Sensitivity], and [White Balance] settings in image quality adjustment.

[Load Preset Setting]: Sets the timing at which image quality adjustment values changed in My Photo Style are returned to their registered state.

[Reset Photo Style]

Returns details changed in [Photo Style] and [Photo Style Settings] to their default settings.

[LUT Library]

[Vlog_709] / [Sample LUT1] / [Sample LUT2] / [Sample LUT3] / [Set4] to [Set39]

Registers LUT files to the camera.

(→[LUT Library]: 328)

[ISO Increments]

▶[1/3 EV] / [1 EV]

Changes the intervals between ISO sensitivity adjustment values.

[Extended ISO]

[ON] / ▶[OFF]

Extends the setting range of ISO sensitivity.

- The extendible range depends on the [Dual Native ISO Setting] (→[Dual Native ISO Setting]: 296).
 - When set to [AUTO]: Lower limit can be extended to [50] and the upper limit can be extended to [204800]
 - When set to [LOW]: Lower limit can be extended to [50]
 - When set to [HIGH]: Lower limit can be extended to [320] and the upper limit can be extended to [204800]

[Exposure Offset Adjust.]

[Multi Metering]	[-1EV] to [+1EV] (▶[±0EV])
[Center Weighted]	[-1EV] to [+1EV] (▶[±0EV])
[Spot]	[-1EV] to [+1EV] (▶[±0EV])
[Highlight Weighted]	[-1EV] to [+1EV] (▶[±0EV])

Adjusts the exposure level that is the standard exposure for each setting item of [Metering Mode].

Adds the adjustment value from this function to the exposure compensation value (>Exposure Compensation: 286) when recording.

 For video recording, it is not possible to add an adjustment value of a range that exceeds ±3 EV.

[Face Priority In Multi Metering]

▶[ON] / [OFF]

When [Metering Mode] is set to [[]] (Multi-metering), the metering range for automatic exposure is prioritized on the face and eyes.

When set to [OFF], the change to exposure caused by the [FACE/EYE] automatic detection function can be avoided.

[AWB Lock Setting]

[Operation Syncs With Shutter]	[WHILE PRESSING] / [DURING BURST SHOOTING] / •[OFF]
[Lock Hold With Fn Button]	▶[ON] / [OFF]

Fixes the white balance while you are pressing the shutter button or the Fn button when white balance is auto ([AWB]/[AWBc]/[AWBw]).

This prevents the white balance from changing unintentionally while pressing the shutter button halfway, during burst recording, or while recording videos.

[Operation Syncs With Shutter]

[WHILE PRESSING]: Fixes white balance while pressing the shutter button (including while pressing halfway or during burst recording).

[DURING BURST SHOOTING]: Fixes white balance during burst recording. IOFFI: White balance is not fixed.

[Lock Hold With Fn Button]

[ON]: When you press the Fn button registered with [AWB Lock], the white balance is fixed. Press again to cancel the lock.

[OFF]: While you are pressing the Fn button registered with [AWB Lock], the white balance is fixed.

- [AWBL] is displayed on the screen while white balance is locked.
- [Operation Syncs With Shutter] does not work in [☐M]/[S&Q] mode.

[Color Space]

▶[sRGB] / [AdobeRGB]

This sets the method for correcting the color reproduction of the recorded images on the screens of a PC or on a device such as a printer.

[sRGB]: This is widely used in PCs and similar devices.

[AdobeRGB]: AdobeRGB is mainly used for business purposes such as professional printing because it has a greater range of reproducible colors than sRGB

- Set to [sRGB] if you are not very familiar with AdobeRGB.
- When the following functions are being used, the setting is fixed to [sRGB]:
 - Video recording
 - [Like709]/[V-Loq]/[REAL TIME LUT](base Photo Style is [V-Loq])([Photo Style])
 - [Filter Settings]

[Exposure Comp. Reset]

[ON] / ▶[OFF]

This resets the exposure value when you change the recording mode or turn off the camera.

[Auto Exposure in P/A/S/M]

▶[ON] / [OFF]

Selects the setting method for aperture value, shutter speed, and ISO sensitivity when recording video in the [P]/[A]/[S]/[M] modes.

[ON]: Records with values set automatically by the camera.

[OFF]: Records with the values set in the [P]/[A]/[S]/[M] modes.

[CreativeVideo Combined Set.]

[F/SS/ISO/Exposure Comp.]	▶[்]/[ஃ]
[White Balance]	▶[்]/[ஃ]
[Photo Style]	▶[்]/[ஃ]
[Metering Mode]	▶ [△] / [ஃ]
[AF Mode]	▶ [△] / [ஃ]
Content set in [M] mode can be separated from when taking pictures.	

Content set in [AM] mode can be separated from when taking picture: (**) Separating Settings for Recording Video and Pictures: 347)

[Custom] menu ([Focus/Shutter])

▶: Default settings

[Focus/Shutter Priority]

[AFS]	▶[FOCUS] / [BALANCE] / [RELEASE]
[AFC]	[FOCUS] / ▶[BALANCE] / [RELEASE]

This sets whether to give priority to focus or shutter release during AF.

[FOCUS]: Disables recording when focus is not achieved.

[BALANCE]: Performs recording while controlling the balance between focusing and shutter release timing.

[RELEASE]: Enables recording even when focus is not achieved.

[Focus Switching for Vert / Hor]

[ON] / ▶[OFF]

This stores separate AF area positions (MF positions for MF Assist) for when the camera is held vertically and when it is held horizontally.

(→[Focus Switching for Vert / Hor]: 182)

[AF/AE Lock Hold]

[ON] / ▶[OFF]

This sets button operations for AF/AE Lock.

Turning this [ON] maintains the lock after releasing the button until it is pressed again.

[AF+MF]

[ON] / ▶[OFF]

When the focus mode is set to [AFS], you can fine-adjust the focus manually during AF Lock.

- · When the shutter button is pressed halfway
- When [AF ON] is pressed
- When locked using the Fn button [AF LOCK] or [AF/AE LOCK]

[MF Assist]

[Focus Ring] (When an interchangeable lens with a focus ring is attached)	▶[ON] / [OFF]
[AF Mode]	▶[ON] / [OFF]
[MF Assist Display]	[FULL] / ▶[PIP]
[Max. Magnification in "FULL"]	[6x] / ▶[20x]

This sets the display method of MF Assist (enlarged screen).

[Focus Ring]: The screen is enlarged by focusing with the lens.

[AF Mode]: The screen is enlarged by pressing [□□] (◄).

[MF Assist Display]: Sets the display method (full screen mode/windowed mode) of MF Assist (enlarged screen).

[Max. Magnification in "FULL"]: Sets the maximum magnification for the enlarged display ([FULL]). When set to [6x], the area that can be enlarged is broader.

[MF Guide]

[m]/[ft]/[OFF]

* Default setting specifications vary depending on the country or area where the camera was purchased.

During MF, MF Guide, which acts as a guide to recording distance, is displayed on the screen. You can select from meters or feet for the display unit.

[Focus Ring Lock]

[ON] / ▶[OFF]

This disables the focus ring operation during MF to lock the focus.

• [MFL] is displayed on the recording screen while the focus ring is locked.

[Show/Hide AF Mode]

[Tracking]	▶[ON] / [OFF]
[Full Area AF]	▶[ON] / [OFF]
[Zone(Horizontal/Vertical)]	▶[ON] / [OFF]
[Zone]	▶[ON] / [OFF]
[1-Area+]	▶[ON] / [OFF]
[Pinpoint]	▶[ON] / [OFF]
Sets the AE mode items to be displayed on the AE mode selection screen	

[Pinpoint AF Setting]

[Pinpoint AF Time]	[LONG] / ▶[MID] / [SHORT]
[Pinpoint AF Display]	[FULL] / ▶[PIP]

Changes enlarged screen settings displayed when AF mode is [+].

[Pinpoint AF Time]: Sets the time for which the screen is enlarged when the shutter button is pressed halfway.

[Pinpoint AF Display]: Sets the display method (full screen mode/windowed mode) of the enlarged screen.

[AF-Point Scope Setting]

[Keep Enlarged Display]	[ON] / ▶[OFF]
[PIP Display]	[FULL] / ▶[PIP]

Changes the enlarged screen settings of AF-Point Scope (→[AF-Point Scope]: 146). [Keep Enlarged Display]: Setting this to [ON] maintains the enlarged screen after pressing the Fn button until it is pressed again.

[PIP Display]: Sets the display method (full screen mode 1/windowed mode 2) of the enlarged screen.

- *1 You can enlarge by approx. 3× to 10×.
- *2 You can enlarge by approx. 3× to 6×.
- When [Hybrid Zoom(Photo)] or [Crop Zoom(Photo)] is [ON], the AF-Point Scope magnification rate is between about 3x to 6x.

[Shutter AF]

▶[ON] / [OFF]

This adjusts focus automatically when you press the shutter button halfway.

[Human Eye Detection Display]

▶[ON] / [OFF]

When set to [OFF], you can make the cross that appears on human eyes when focused disappear by pressing the shutter button halfway, etc.

[Half-Press Shutter]

[ON] / ▶[OFF]

You can release the shutter quickly by pressing the shutter button halfway.

[Assign REC to Shutter Button]

▶[ON] / [OFF]

Use the shutter button for the start/stop operation of video recording in the [$\mbox{$\mbox{$\mbox{$\mu}$}$M]}$ mode.

The start/stop operation of video recording using the shutter button can be disabled when set to [OFF].

[Quick AF]

[ON] / ▶[OFF]

When the amount of camera shake becomes small, the camera will automatically adjust the focus and focus adjustment will then be quicker when the shutter button is pressed.

- The battery will drain faster than usual.
- This function is not available in the following cases:
 - In preview mode
 - In low light situations

[Looped Focus Frame]

[ON] / ▶[OFF]

When moving the AF area, MF Assist, or video enlarged display of live view, this enables looping from one edge to the opposite edge of the screen.

[Enlarged Live Display(Video)]

[Keep Enlarged Display]	▶[ON] / [OFF]
[PIP Display]	[FULL] / ▶[PIP]

Sets the operation of the function for enlarging the video live view (→[Enlarged Live Display(Video)]: 352).

[Keep Enlarged Display]

[ON]: Enlarges display after releasing the Fn button until the button is pressed again.

[OFF]: Enlarges display just while the Fn button is being pressed.

[PIP Display]

Sets the way the enlarged screen is displayed (full screen mode/windowed mode).

[Custom] menu ([Operation])

▶: Default settings

[Q.MENU Settings]

[Layout Style]	▶[MODE1] / [MODE2]
[Item Customize (Photo)]	
[Item Customize (Video)]	
Customizes the Quick menu.	
(→Quick Menu Customization: 505)	

[Touch Settings]

[Touch Screen]	[ON] / ▶[PARTIAL] / [OFF]
[Touch Tab]	[ON] / ▶[OFF]
[Touch AF]	▶[AF] / [AF+AE]

Enables touch operation on the monitor display.

[Touch Screen]: All touch operations. [PARTIAL] sets part of the touch screen as a restricted area. (→ Touch Restricted Area: 76)

[Touch Tab]: Operations of tabs, such as **[**\(\sqrt{} \)] on the right side of the screen.

[Touch AF]: Operation to optimize the focus ([AF]) for a touched subject.

Alternatively, operation to optimize both the focus and brightness ([AF+AE]).

(→Focus on and Adjust Brightness for the Touched Position ([AF+AE]): 181)

[Operation Lock Setup]

[Cursor]	▶ [♠]/[♠]
[Touch Screen]	▶ [♠]/[♠]
[Dial]	▶ [♠]/[♠]
[DISP. Button]	▶ [♠]/[♠]

This sets the control functions to be disabled with the Fn button [Operation Lock]. (Only for recording screen)

[Cursor]: Cursor buttons, [MENU/SET] button, and

[Touch Screen]: Touch screen

[Dial]: and 🚳

[DISP. Button]: [DISP.] button

[Fn Button Set]

[Setting in REC mode]

[Setting in PLAY mode]

Registers a function to the Fn button.

(→Register Functions to the Fn Buttons: 490)

[ISO Displayed Setting]

[Front Dial]	▶[[SO] / [[SO]] / [OFF]
This sets the operations of the dial in the	setting screen for ISO sensitivity.

Assigning [] lets you change [ISO Auto Upper Limit Setting].

[Exposure Comp. Disp. Setting]

[Cursor Buttons (Up/Down)]	[☑] / ▶[OFF]	
This sets the operations of the ▲▼ buttons in the exposure compensation screen.		
Assigning [] lets you set exposure bracketing.		
[Front Dial] ▶[≱] / [OFF]		
This sets the energtions of the dial in the exposure componentian screen		

This sets the operations of the dial in the exposure compensation screen.

[Dial Set.]

Sets the operations to be assigned to the dials in [P]/[A]/[S]/[M] modes.

P: Program Shift, F: Aperture value, SS: Shutter speed

		[P]	[A]	[S]	[M]
[CET4]	344	P./	F	SS	F
[SET1]	0	P./	F	SS	SS
(CETO)	122		F	_	F
[SET2]	0	P./	_	SS	SS
(CET2)	4	1	ı	SS	SS
[SET3]	0	P./	F	_	F
(OFT4)	1446			_	F
[SET4]	0	P./	F	SS	SS
(OETE)	246	P./	F	SS	F
[SET5]	0	1		_	SS

Changes the rotational directions of the dials for aperture value and shutter speed adjustment.

[Exposure Comp.]	[<u>₩</u>] / [⊙] / ▶ [OFF]	
Assigns exposure compensation to we or . (Except in [M] mode)		
The [Assign Dial (F/SS)] setting takes priority.		
[Dial Operation Switch Setup]	[🗯]	
[Diai Operation Switch Setup]	[⊙]	
In the Fn button [Dial Operation Switch], this sets the functions to be registerd		
temporarily to <u>w</u> or ۞ . (→Register Functions to the Dials: 502)		

[Custom] menu ([Monitor / Display (Photo)])

▶: Default settings

[Auto Review]

[Duration Time (photo)]	[HOLD] / [5SEC] to [0.5SEC] / ▶[OFF]
[Playback Operation Priority]	[ON] / ▶[OFF]

This displays an image immediately after it is recorded.

[Duration Time (photo)]: Sets the Auto Review when taking pictures. [Playback Operation Priority]: When this is set to [ON], you can toggle the playback screen during Auto Review, or delete pictures.

 If you set [Duration Time (photo)] to [HOLD], the image recorded stays displayed until the shutter button is pressed halfway.

[Playback Operation Priority] will be fixed to [ON].

[Constant Preview]

[ON] / ▶[OFF]	
[SET]	[Effect]
	[Preview While MF Assist]

You can always confirm the effects of aperture on the recording screen when in [A]/ [M] mode.

You can also confirm the shutter speed at the same time when in [M] mode.

- You can set the combination of the aperture effect and the shutter speed effect in [Effect].
- Preview also operates in the MF Assist screen when [Preview While MF Assist] is set to [ON].

[Histogram]

[ON] / ▶[OFF]

This displays the histogram.

Turning this [ON] displays the histogram transition screen.

Press ▲▼◀► to set the position.

- You can also move the position by dragging the histogram on the recording screen
- A histogram is a graph that displays brightness along the horizontal axis, and the number of pixels at each brightness level on the vertical axis.

By looking at the distribution of the graph, you can determine the current exposure.



- (A) Dark
- (B) Bright
- When the recorded image and the histogram do not match each other under the following conditions, the histogram is displayed in orange:
 - During exposure compensation
- When the standard exposure is not achieved, such as in low light situations.
- When the following function is being used, the [Histogram] is not available:
 - [WFM/Vector Scope]
- The histogram is an approximation in the recording mode.

[Photo Grid Line]

[∰]/[∰]/[☐]/**▶**[OFF]

Sets the grid line pattern to be displayed on the recording screen.

When using [□], you can press ▲▼◀▶ to set the position.

 When using [], you can also drag [] on the grid lines on the recording screen to move the position.

[Live View Boost]

[MODE1] / [MODE2] / ▶[OFF]

[SET] [P/A/S/M] / ▶[M]

Displays the screen brighter to make it easier to check subjects and compositions even in low-light environment.

[MODE1]: Setting for low brightness, with priority given to a soft display.

[MODE2]: Setting for high brightness, with priority given to image visibility.

- You can change the recording mode in which [Live View Boost] works by using [SET].
- This mode does not affect recorded images.
- Noise may be more noticeable in the screen than in the recorded image.
- This function does not work in the following cases:
 - When adjusting the exposure (when the shutter button is pressed halfway, for example)
 - When recording a video
 - When using [Filter Settings]
 - When displaying the shutter speed effect of [Constant Preview]

[Night Mode]

[ON] / ▶[OFF]

Displays the monitor in red.

In dark environments, this reduces brightness of the screen that can make the surroundings difficult to see.

 
You can also set the luminance of the red display.

- 1 Press **◄►** to select [ON].
- 2 Press [DISP.] to display the brightness adjustment screen.
- 3 Press ◀▶ to adjust luminance and then press ∰ .



• This effect is not applied to images output via HDMI.

[Monitor Display Settings]




Selects whether to show the live view without covering the information display, or to display over the entire screen.

[]: Scales down images slightly so you can better review the composition of the images.



 [::::]: Scales images to fill the entire screen so you can see their details.



[Horizontal Image Flip(Monitor)]	▶[AUTO] / [ON] / [OFF]
[Vertical Image Flip(Monitor)]	▶[AUTO] / [ON] / [OFF]

You can set whether the screen flips or not depending on the facing or angle of the monitor during recording.

[Horizontal Image Flip(Monitor)]

[AUTO]: The screen automatically flips horizontally according to the angle to which the monitor is opened or closed.

[ON]: The screen is flipped horizontally all the time.

[OFF]: Screen is not flipped.

[Vertical Image Flip(Monitor)]

[AUTO]: The screen automatically flips vertically according to the angle to which the monitor is rotated.

[ON]: The screen is flipped vertically all the time.

 
[OFF]: Screen is not flipped.

• The settings for this function are not reflected in the playback screen.

[Expo.Meter]

[ON] / ▶[OFF]

This displays the exposure meter.



- Set to [ON] to display the exposure meter when performing Program Shift, setting aperture, and setting shutter speed.
- If no operations are performed for a certain period of time, the exposure meter disappears.

[Focal Length]

▶[ON] / [OFF]

Displays the focal length on the recording screen during zoom control.

[Blinking Highlights]

[ON] / ▶[OFF]

Overexposed areas appear blinking in black and white during Auto Review or playback.



 The display without the highlights is added to the display shown when [DISP.] is pressed in the playback screen.

Use this to delete the highlight display. (→Playback Screen: 79)

[Sheer Overlay]

[ON] / •[OFF]	
[SET]	[Transparency]
	[Image Select]
	[Reset at Power Off]
	[Disp. Image (shutter-press)]

A picture that has been recorded or an image extracted from a video is overlayed on the recording screen.

- 1 Use [Image Select] and select a picture or video to display.
 - Press ◀▶ to select a picture or video and then press ♠ to confirm.
- 2 (When a video is selected) Pause playback at the position you wish to extract a picture.
 - Press ▲ to pause playback.
- 3 (When a video is selected) Set a picture.
 - Press 🚇 .
- If you set [Disp. Image (shutter-press)] to [OFF], [Sheer Overlay] is canceled while the shutter button is being pressed halfway or pressed fully.
- The picture extracted from video is saved.
- When the following functions are being used, [Sheer Overlay] is not available:
 - Video recording
 - [Stop Motion Animation]
 - [Auto Transfer]

[I.S. Status Scope]

[ON] / ▶[OFF]

Displays a reference point (C) on the recording screen in order to let you check for camera shake.




- [I.S. Status Scope] does not work in the following cases:
 - When [Operation Mode] in [Image Stabilizer] is set to [OFF]
 - When the O.I.S. switch on the lens is [OFF]
- When the following function is being used, [I.S. Status Scope] is not available:
 - Video recording
 - High Resolution mode (when [Handheld High-Res] is set to [OFF])

[Level Gauge]

▶[ON] / [OFF]

Displays the level gauge which is useful in correcting camera tilt.

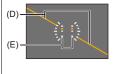



- (D) Horizontal
- (E) Vertical
- (F) Green (no tilt)
- Even after correcting the tilt, there may still be an error of approx. ±1°.
- When the camera is tilted significantly upwards or downwards, the level gauge may not be displayed correctly.
- You can adjust the level gauge and reset the adjusted values in [Level Gauge Adjust.] in the [Setup] ([Monitor / Display]) menu. (→[Level Gauge Adjust.]: 560)

[Luminance Spot Meter]

[ON] / ▶[OFF]

Specify any spot on the subject to measure the luminance over a small area.

(→[Luminance Spot Meter]: 384)

[Framing Outline]

[ON] / ▶[OFF]	
Displays the outline for the live view.	

[Show/Hide Monitor Layout]

[Control Panel]	▶[ON] / [OFF]	
[Black Screen]	▶[ON] / [OFF]	
Displays the control panel and black screen when switching between displays using		
[DISP.] button. (→Recording Screen: 77)		

[Custom] menu ([Monitor / Display (Video)])

▶: Default settings

[Log View Assist]

[LUT Select(V-Log)]	
[LUT View Assist (Monitor)]	[ON] / ▶[OFF]
[LUT View Assist (HDMI)]	[ON] / ▶[OFF]

You can show images with LUT file applied on the monitor, or output them via HDMI. (→[Log View Assist]: 416)

[HLG View Assist]

[Monitor]	[MODE1] / ▶[MODE2] / [OFF]
[HDMI]	▶[AUTO] / [MODE1] / [MODE2] / [OFF]

At recording or playback of HLG video, this displays images with converted color gamut and brightness on the camera monitor, or outputs these over HDMI. (>[HLG View Assist]: 420)

[Anamorphic Desqueeze Display]

$$2.0x$$
 $\left(\begin{array}{c} 1.8x \\ \leftarrow (\rightarrow) \end{array} \right) / \left[\begin{array}{c} 1.5x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1.30x \\ \leftarrow (\rightarrow) \end{array} \right] / \left[\begin{array}{c} 1$

This displays the desqueezed images suited to the magnification of the anamorphic lens on this camera.

(→[Anamorphic Desqueeze Display]: 423)

[Monochrome Live View]

[ON] / ▶[OFF]

You can display the recording screen in black and white.

- If you use the HDMI output during recording, the output image will not be displayed in black and white.
- [Monochrome Live View] is not available when [Night Mode] is used.

[Center Marker]

[--]/[--]/[--]/[OFF]

The center of the recording screen will be displayed as [+].

The shape of the marker can be changed.

[Safety Zone Marker]

[] / [] / ▶[OFF]		
		[95%]
[SET] [Size]	▶ [90%]	
	[80%]	

This displays the safety zone, which shows a guide to the area that would be shown on a household TV, on the recording screen.

[Frame Marker]

[ON] / ▶[OFF]	
[SET]	[Frame Aspect]
	[Frame Color]
	[Frame Mask]
A frame with the set aspect ratio is displayed on the recording screen.	

A frame with the set aspect ratio is displayed on the recording screen [Frame Aspect] can also be customized.

(→[Frame Marker]: 388)

[Zebra Pattern]

[ZEBRA1] / [ZEBRA2] / [ZEBRA1+2] / ▶[OFF]	
[SET]	[Zebra 1]
	[Zebra 2]
Parts that are brighter than the base value are displayed with stripes.	
(→[Zebra Pattern]: 386)	

[WFM/Vector Scope]

[WAVE] / [VECTOR] / ▶[OFF]
This displays the waveform monitor or the vector scope on the recording screen.
(→[WFM/Vector Scope]: 380)

[Color Bars]

[SMPTE] / [EBU] / [ARIB]

The color bars are displayed on the recording screen.

(→Color Bars/Test Tone: 390)

[Video-Priority Display]

[ON] / ▶[OFF]

When in [iA]/[P]/[A]/[S]/[M] modes, switch the recording screen display and the control panel to suit video recording, as with the [A]/[S&Q] mode.

The playback screen also switches to a display that prioritizes video.

- When set to a setting where video recording is not available, [Video-Priority Display] is fixed to [OFF].
- [Video-Priority Display] works only during video recording when using the following functions:
 - [Time Lapse Shot]
 - [Stop Motion Animation]

[Red REC Frame Indicator]

[ON] / ▶[OFF]

A red frame is displayed on the recording screen that indicates that video is being recorded.

[Custom] menu ([IN/OUT])

▶: Default settings

[HDMI Rec Output]

[Info Display] (→Outputting the Camera Information Display via HDMI: 440)	▶[ON] / [OFF]
[HDMI Recording Control] (→Outputting Control Information to an External Recorder: 441)	[ON] / ▶ [OFF]
[Sound Output (HDMI)] (→Outputting Audio via HDMI: 442)	▶[ON] / [OFF]
[Enlarged Live Display] (→Outputting the Enlarged Live Display (Video) via HDMI: 442)	[MODE1] / [MODE2] / ▶[OFF]
Sets HDMI output during recording.	

[Custom] menu ([Lens / Others])

▶: Default settings

[Lens Focus Resume]

[ON] / ▶[OFF]

The camera saves the focus position when you turn it off.

[Lens Fn Button Setting]

▶ [Focus Stop] / [AF Mode] / [Focus Mode] / [AF Detection Setting] / [Detecting Subject] / [Focus Ring Lock] / [AE LOCK] / [AF LOCK] / [AF/AE LOCK] / [AF-ON] / [AF-ON: Near Shift] / [AF-ON: Far Shift] / [AF-Point Scope] / [Focus Area Set] / [Enlarged Live Display(Video)] / [Image Stabilizer] / [Preview] / [Preview Aperture Effect] / [No Setting] / [Off (Disable Press and Hold)] / [Restore to Default]

Register a function to the focus button of an interchangeable lens.

- When [Focus Stop] is set, focus is fixed while the focus button is being pressed.
- When using an interchangeable lens that has a switch for the image stabilizer (normal/panning), [Image Stabilizer] in [Lens Fn Button Setting] is not available.

[Focus Ring Control]

▶[NON-LINEAR] / [LINEAR]

[SET] [90°] to [1080°] (▶[300°]) / [Maximum]

Sets the amount of movement for focusing using the focus ring. (When using supported lenses)

[NON-LINEAR]: Focus responds by accelerating according to rotation speed of the focus ring.

[LINEAR]: Focus responds at a constant amount according to the rotational angle of the focus ring.

 When using lenses equipped with focus clutch mechanisms, set the lens to AF and the camera to MF.

[SET]: Sets the rotational angle of the focus ring for when [LINEAR] is selected.

• Angles that cannot be set with the attached lens are not displayed.

[AF Micro Adjustment]

[ALL1 / [ADJUST BY LENS] / ▶[OFF]

You can make fine adjustments to the focus point when focusing with phase detection AF.

(→[AF Micro Adjustment]: 155)

[Lens Information]

[Lens1] to [Lens12] (▶[Lens1])

When using a lens that does not have a communication function with the camera, register the lens information in the camera.

 This is linked with [Lens Information] in [Image Stabilizer] under the [Photo] ([Others (Photo)]) menu. (→[Lens Information]: 264)

[Lens Info. Confirmation]

▶[ON] / [OFF]

When you have attached a lens that does not have a communication function with this camera, a message asking for confirmation of the lens information is displayed when you turn on the camera.

[Vertical Position Info (Video)]

▶[ON] / [OFF]

You can set whether or not to record the camera's vertical orientation information during video recording.

[ON]: Records vertical orientation information. Videos recorded with the camera held vertically will be automatically played back vertically on the PC, smartphone, etc. during playback.

[OFF]: Does not record vertical orientation information.

 On the playback screen of the camera, only the thumbnail display is played in vertical orientation

▶ [Setup] Menu

- [Setup] menu ([Card/File]): 555
- [Setup] menu ([Monitor / Display]): 559
- [Setup] menu ([IN/OUT]): 561
- [Setup] menu ([Setting]): 566
- [Setup] menu ([Others]): 568

[Setup] menu ([Card/File])

▶: Default settings

[Card Format]

Formats the card (initialization).

Format the cards with the camera before use

 When a card is formatted, all of the data stored in the card is erased and cannot be restored.

Save a backup of necessary data before formatting the card.

- Do not turn off the camera or perform another operation during formatting.
- Take care not to turn off the camera while formatting is in progress.
- If the card has been formatted with a PC or other device, format it again with the camera.
- You can format the card while keeping the camera settings information stored on the card. (>[Save/Restore Camera Setting]: 567)

[Folder / File Settings]

[Select Folder] / [Create a New Folder] / [File Name Setting]

Set the folder and file name where to save the images.

Folder name



- (1) Folder number (3 numeric characters, 100 to 999)
- (2) 5-character user-defined segment

File name



- (3) Color space ([P]: sRGB, [_]: AdobeRGB)
- (4) 3-character user-defined segment
- (5) File number (4 numeric characters, 0001 to 9999)
- (6) Extension

[Select Folder]: Selects a folder for storing images.

[Create a New Folder]: Creates a new folder with an incremented folder number.

 If there are no recordable folders in the card, a screen for resetting the folder number is displayed.

[OK]:

Increments the folder number without changing the 5-character user-defined segment ((2) above).

[Change]:

Changes the 5-character user-defined segment ((2) above). This will also increment the folder number.

[File Name Setting]

[Folder Number Link]:

Uses the 3-character user-defined segment ((4) above) to set the folder number ((1) above).

[User Setting]:

Changes the 3-character user-defined segment ((4) above).

 Follow the steps on "Entering Characters" when the character entry screen is displayed. (→Entering Characters: 90)

Available characters: alphabetic characters (upper-case), numerals, [_]

- Each folder can store up to 1000 files.
- File numbers are assigned sequentially from 0001 to 9999 in the order of recording.

If you change the storage folder, a number continuing on from the last file number will be assigned.

- In the following cases, a new folder with an incremented folder number will be created automatically when the next file is saved:
 - The number of files in the current folder reaches 1000.
 - The file number reaches 9999.
- New folders cannot be created when there are folders numbered from 100 all the way up to 999.

We recommend backing up your data and formatting the card.

[File Number Reset]

Refresh the folder number within the DCIM folder and reset the file number to 0001.

- When the folder number reaches 999, the file number cannot be reset.
 We recommend backing up your data and formatting the card.
- . To reset the folder number to 100:
 - 1 Perform [Card Format] to format the card. (→[Card Format]: 555)
 - 2 Perform [File Number Reset] to reset the file number.
 - 3 Select [Yes] on the folder number reset screen.

[Copyright Information]

[Artist]	[ON] / ▶[OFF] / [SET]
[Copyright Holder]	[ON] / ▶[OFF] / [SET]
[Display Copyright Info.]	

Records the names of the artist and the copyright holder in the image Exif data.

- You can register names from [SET] in [Artist] and [Copyright Holder].
 How to enter characters (→Entering Characters: 90)
- Up to 63 characters may be entered.
- You can confirm registered copyright information in [Display Copyright Info.].

[Setup] menu ([Monitor / Display])

▶: Default settings

[Power Save Mode]

[Sleep Mode]	[10MIN.] / [5MIN.] / [2MIN.] / ▶[1MIN.] / [0FF]
[Sleep Mode(Wi-Fi)]	▶[ON] / [OFF]
[Auto Monitor Off]	[5MIN.] / [2MIN.] / ▶[1MIN.] / [OFF]

This is a function to automatically turn the camera to sleep (power save) status or turn off the monitor if no operation is performed for a set time.

(→[Power Save Mode]: 48)

[Monitor Frame Rate]

▶[30fps] / [60fps]

Sets the display speed for live view on the monitor when recording pictures.

[30fps]: Reduces the power consumption for a longer operating time.

[60fps]: Enables smooth display of movements.

- When the following function is being used, [Monitor Frame Rate] is not available:
 - HDMI output

[Monitor Settings]

[Brightness] / [Contrast] / [Saturation] / [Red Tint] / [Blue Tint]

This adjusts the brightness, coloring, and red or blue tints of the monitor.

- Press ▲▼ to select the setting item, and press ◀▶ to adjust.
- 2 Press (to confirm the setting.

[Monitor Backlight]

▶[AUTO] / [-3] to [+3]

Adjusts monitor luminance.

[AUTO]: The brightness is adjusted automatically depending on how bright it is around the camera

- When either [AUTO] is set, or the adjusted value is set to positive side, the usage period will shorten.
- When [Night Mode] is being used, [Monitor Backlight] is not available.
- If the temperature of the camera rises, the camera may automatically lower the brightness of the monitor temporarily. The brightness is restored again when the camera temperature goes down.

[Level Gauge Adjust.]

[Adjust.]

Hold the camera in a horizontal position, and press (). The level gauge will be adjusted.



[Level Gauge Value Reset]

Restores the default level gauge setting.

[Setup] menu ([IN/OUT])

▶: Default settings

[Beep]

[Beep Volume]	[ជឿ))] (High) / ▶[ជឿ)] (Low) / [ជឿ] (Off)
[AF Beep Volume]	[^))] (High) / > [^)] (Low) / [^ ×] (Off)
[AF Beep Tone]	▶[🕦] (Pattern 1) / [🕦] (Pattern 2) /
	[🔊] (Pattern 3)
[Shutter Vol.]	[<u>᠕》</u>] (High) / ▶[<u>᠕᠈</u>] (Low) / [<u>᠕×</u>] (Off)
[Shutter Tone]	▶[🕦] (Pattern 1) / [🕦] (Pattern 2) /
	[🕦] (Pattern 3)
Sets the beep sounds, AF beep, and electronic shutter sounds.	

[Wi-Fi®]

```
[Wi-Fi Function] (→Connecting to a Smartphone ([Wi-Fi connection]): 612, Wi-Fi Connections: 641)

[Wi-Fi Setup] (→[Wi-Fi Setup] Menu: 653)
```

[Bluetooth®]

[Bluetooth Function] (→Connecting to a Smartphone (Bluetooth Connection): 606)		
[Pairing]	[Add New Device]	
	[Delete]	
[Auto Transfer] (→[Auto Transfer]: 629)		
[Location Logging] (→[Location Logging]: 631)		
[LUMIX Sync Settings]	[Send Image (Smartphone)] (→Using the menu	
	to transfer easily: 619)	
	[Remote Wakeup] (→[Remote Wakeup]: 633)	
	[Returning from Sleep Mode] (→Shortening the	
	Return Time from [Sleep Mode]: 626)	
	[Auto Clock Set] (→[Auto Clock Set]: 635)	
	[Wi-Fi network settings]	
[Wi-Fi network settings]: Registers the Wi-Fi access point. Wireless access points		
used to connect the camera to Wi-Fi networks will be registered automatically.		

[USB]

LIUSB Model	▶[•<] [Select on connection] / [⊜]
	[PC(Storage)] / [] [PC(Tether)]

This sets the communication method to be used when the USB connection cable is connected.

[•<--] [Select on connection]: Select this setting to select the USB communication system when connecting to another device. (•) USB port: 657)

[[] [PC(Storage)]: Select this setting to export images to a connected PC.

(→Importing Images to a PC: 662)

[☑] [PC(Tether)]: Select this setting to control the camera from a PC installed with "LUMIX Tether". (→Tethered Recording: 668)

[USB Power Supply] ▶[ON] / [OFF]

Provides power from the USB connection cable.

 Even if this item is set to [OFF], power will be supplied when the AC adaptor is connected

[HDMI Connection]

[Output Resolution(Playback)]	▶[AUTO] / [C4K/60p] / [C4K/50p] / [C4K/
	30p] / [C4K/25p] / [C4K/24p] / [4K/60p] /
	[4K/50p] / [4K/30p] / [4K/25p] / [4K/24p] /
	[1080/120p] / [1080/100p] / [1080p] /
	[1080i] / [720p] / [576p] / [480p]

Sets the HDMI output resolution for playback.

[AUTO]: Outputs with a resolution suited to the connected external device. When playing back pictures, output is at a maximum resolution of 8K.

- The items you can select depend on the [System Frequency] setting.
- If no image appears on the external device with [AUTO], switch to a setting other than [AUTO] to set a format supported by your external device.
 (Please also refer to the operating instructions for the external device.)
- It may not be possible to play back video, depending on the external device connected

LUT VIEW ASSIST (HDIVIT) UN / F UFF	[LUT View Assist (HDMI)]	[ON] / ▶[OFF]
--	--------------------------	---------------

Images with LUT (Look-Up Table) file applied are output when you play back videos recorded with [Photo Style] set to [V-Loq].

 This is linked with [LUT View Assist (HDMI)] in [Log View Assist] under the [Custom] ([Monitor / Display (Video)]) menu. (→[Log View Assist]: 416)

[HLG View Assist (HDMI)]

▶[AUTO] / [MODE1] / [MODE2] / [OFF]

At recording or playback of HLG video, this converts their color gamut and brightness for display.

 This is linked with [HDMI] in [HLG View Assist] under the [Custom] ([Monitor / Display (Video)]) menu. (→[HLG View Assist]: 420)

[VIERA Link (CEC)]

[ON] / ▶[OFF]

You can use the device remote control to operate the camera when it is connected to a VIERA Link compatible device using an HDMI micro cable.

(→Using VIERA Link: 660)

[Background Color(Playback)]

[**1**]/**>**[**1**]

Sets the color of the bands displayed on the top and bottom or the left and right of images output on an external device.

• We recommend setting to [] to prevent burn-in on the screen of the output destination

[Photo Luminance Level]

[0-255] / >[16-255]

Sets the level of luminance when outputting pictures to external devices.

[Network Connection Light]

▶[ON] / [OFF]

This will turn on the network connection light.

[Setup] menu ([Setting])

[Save to Custom Mode]

[C1] / [C2] / [C3-1] to [C3-10]

You can register the currently set information of the camera.

(→Register in Custom Mode: 513)

[Load Custom Mode]

[C1] / [C2] / [C3-1] to [C3-10]

Calls up registered Custom mode settings to the selected recording mode and overwrites the current settings with these.

(→Calling Up Settings: 516)

[Custom Mode Settings]

[Limit No. of Custom Mode]

[Edit Title]

[How to Reload Custom Mode]

[Select Loading Details]

Sets the ease of use of Custom mode.

(→Custom Mode Detailed Settings: 514)

[Save/Restore Camera Setting]

[Save] / [Load] / [Delete] / [Keep Settings While Format]

Saves the camera's settings information to the card.

Saved settings information can be loaded to the camera, letting you set the same settings on multiple cameras.

[Save]: Saves the camera's settings information to the card.

- If saving new data, then select [New File], and if overwriting an existing file, select that existing file.
- When [New File] is selected, a screen to select the file name to save as is displayed.

IOK1:

Saves using the file name on the screen.

[Change the file name]:

Changes the file name and saves the file.

- Available characters: alphabetic characters (upper-case), numerals, up to 8 characters
- How to enter characters (→Entering Characters: 90)

[Load]: Loads the settings information on the card and copies it to the camera.

[Delete]: Deletes settings information on the card.

[Keep Settings While Format]: When formatting the card, formats the card while keeping camera settings information stored on the card.

- Only settings information from the same model can be loaded.
- Up to 10 instances of settings information can be saved on one card.
- List of functions for which saving of settings information is possible (→List of Default Settings/Custom Saving/Settings Available for Copying: 736)

[Reset]

Returns the camera to its default settings.

(→[Reset]: 89)

[Setup] menu ([Others])

[Clock Set]

Sets the date and time

(→Setting the Clock (When Turning On for the First Time): 63)

[Time Zone]

Sets the time zone.

Press ◀▶ to select the time zone and then press ♠️ to confirm.





- (A) Current time
- (B) Time difference from GMT (Greenwich Mean Time)
- If you are using Daylight Savings [▲※②], press ▲. (The time will move forward by 1 hour.)

To return to the normal time, press ▲ again.

[System Frequency]

[59.94Hz (NTSC)] / [50.00Hz (PAL)] / [24.00Hz (CINEMA)]

 Default setting specifications vary depending on the country or area where the camera was purchased.

This changes the system frequency of videos that are recorded and played back with the camera.

(→[System Frequency]: 120)

[Pixel Refresh]

This optimizes the image sensor and image processing.

- The image sensor and image processing are optimized when the camera is purchased. Use this function when bright spots that do not exist in the subject get recorded.
- Use the body cap, etc., to shade the lens when executing Pixel Refresh.
- Turn the camera off and on after the pixels are corrected.

[Sensor Cleaning]

Dust reduction to blow off the debris and dust that have affixed to the front of the image sensor is performed.

- You can use this function when the dust is particularly noticeable.
- · Turn the camera off and on when finished.

[Language]

This set the language displayed on the screen.

• If you set a different language by mistake, select [③③] from the menu icons to set the desired language.

[Firmware Version]

[Firmware Update] / [Software info]

You can check the firmware versions of the camera and lens.

In addition, you can update the firmware, and display information about the camera software.

[Firmware Update]: Updates firmware.

- 1 Download the firmware. (→Firmware of Your Camera/Lens: 18)
- 2 Save the firmware to the root directory of the card (the first folder that appears when you access the card on your PC), and then insert the card into the camera.
- 3 Select [Firmware Update], press , and then select [Yes] to update the firmware.

[Software info]: Displays information about the camera software.

[Approved Regulations]

Displays the certification number for radio regulations.

Depending on the country or area where the camera was purchased, this is not displayed due to differences in specifications.

My Menu

- Registration in My Menu: 572
- Edit My Menu: 573

Register frequently-used menus in My Menu.

A maximum of 23 items can be registered.

Registered menus can be called up from $[\ \ \ \ \ \ \]$ to $[\ \ \ \ \ \ \ \ \ \]$.

Registration in My Menu

- Select [Add].
 - (♣) → [♣] → [Add]
- 2 Register.
 - Select the menu to register and then press



Calling up My Menu

Call up the menus registered in My Menu.

$$\Rightarrow$$
 [\triangle] \Rightarrow [\triangle ₁]/[\triangle ₂]/[\triangle ₃] \Rightarrow Registered menus

Edit My Menu

You can reorder the display order of My Menu, and delete unnecessary menus.



[Add]

Selects and registers the menus to be displayed in My Menu.

[Sorting]

Changes the order of My Menu.

Select the menu to change, then set the destination.

[Delete]

Deletes menus that are registered to My Menu.

[Delete Item]: Selects the menu, then deletes.

[Delete All]: Deletes all menus registered in My Menu.

[Display from My Menu]

Displays My Menu first when displaying a menu.

[ON]: Displays My Menu.

[OFF]: Displays the last-used menu.

List of Menu

Camera customization and many function settings are performed with menus on this camera.

This chapter introduces all of the menu items in a list format.



- For information about menu operation methods (→Menu Operation Methods: 84)
- Refer to the "Materials" chapter for the following lists:
 - List of Default Settings/Custom Saving/Settings Available for Copying: 736
 - List of Functions That Can Be Set in Each Recording Mode: 758

[Photo] menu: 575[Video] menu: 577[Custom] menu: 580[Setup] menu: 584

• [My Menu]: 586

• [Playback] menu: 587

□ [Photo] menu

• Menu items common to the [Photo] menu and [Video] menu. Their settings are synchronized.

[Image Quality]

- [Metering Mode] (→[Metering Mode]: 267)
- [Aspect Ratio] (→[Aspect Ratio]: 106)
- [Picture Quality] (→ [Picture Quality]: 110)
- [Picture Size] (→[Picture Size]: 108)
- [High Resolution Mode Setting] (→ High Resolution mode: 215)
- [Dual Native ISO Setting] (→[Dual Native ISO Setting]: 296)

 □/#
- [ISO Sensitivity (photo)] (→[ISO Sensitivity (photo)]: 297)
- [Synchro Scan(Photo)] (→[Synchro Scan(Photo)]: 251)
- [Min. Shutter Speed] (→[Min. Shutter Speed]: 253)

- [Color Shading Compensation] (→ [Color Shading Compensation]: 335)
- [Diffraction Compensation] (→[Diffraction Compensation]: 339) □/=
- [Filter Settings] (→[Filter Settings]: 320)

[Focus]

- [Focus Mode] (→ Selecting the Focus Mode: 139) ☑/🖴
- [AF Detection Setting] (→Automatic Detection: 162)
- [AF Custom Setting(Photo)] (→[AF Custom Setting(Photo)]: 148)
- [Focus Limiter] (→ [Focus Limiter]: 151) •/=
- [AF Assist Light] (→[AF Assist Light]: 153) **○/**
- [Focus Peaking] (→[Focus Peaking]: 188) o/=
- [Focus Frame Moving Speed] (→[Focus Frame Moving Speed]: 154)

0/#

Others (Photo)]

- [Bracketing] (→Bracket Recording: 241)
- [Silent Mode] (→ [Silent Mode]: 249) □/=
- [Hybrid Zoom(Photo)] (→[Hybrid Zoom(Photo)]: 194)
- [Crop Zoom(Photo)] (→[Crop Zoom(Photo)]: 191)
- [Burst Shot Setting] (→ Taking Burst Pictures: 207)
- [Shutter Delay] (→[Shutter Delay]: 254)
- [Time Lapse/Animation] (→ Recording with Time Lapse Shot: 221, Recording with Stop Motion Animation: 229)
- [Self Timer] (→Recording Using the Self-timer: 236)

 □/#

∠ [Video] menu

• Menu items common to the [Photo] menu and [Video] menu. Their settings are synchronized.

♠ [Image Quality]

- [Exposure Mode] (→Setting the Exposure for Recording Videos: 343)
- [Photo Style] (→ [Photo Style]: 307) 🗖
- [Metering Mode] (→[Metering Mode]: 267)
- [ISO Sensitivity (video)] (→[ISO Sensitivity (video)]: 359)
- [Synchro Scan(Video)] (→[Synchro Scan(Video)]: 425)
- [Flicker Decrease (Video)] (→ [Flicker Decrease (Video)]: 377)
- [Master Pedestal Level] (→[Master Pedestal Level]: 356)
- [SS/Gain Operation] (→[SS/Gain Operation]: 378)
- [Vignetting Comp.] (→ [Vignetting Comp.]: 334)
- [Color Shading Compensation] (→[Color Shading Compensation]: 335)
- [Diffraction Compensation] (→[Diffraction Compensation]: 339) •/2

[Image Format]

- [Rec. File Format] (→ [Rec. File Format]: 122)
- [Image Area of Video] (→[Image Area of Video]: 136)
- [Rec Quality] (→ [Rec Quality]: 123)
- [Rec Quality (My List)] (→ [add to list]: 134)
- [Slow & Quick Setting] (→ Slow & Quick Video: 393)
- [Time Code] (→ Setting the Time Code: 374)
- [Luminance Level] (→ [Luminance Level]: 354)

[Focus]

- [Focus Mode] (→ Selecting the Focus Mode: 139) ☑/🖴
- [AF Detection Setting] (→Automatic Detection: 162) ☑/=
- [Detecting Subject] (→Automatic Detection: 162)
- [AF Custom Setting(Video)] (→[AF Custom Setting(Video)]: 351)
- [Focus Limiter] (→ [Focus Limiter]: 151) [○/#]
- [Continuous AF] (→[Continuous AF]: 349)
- [AF Assist Light] (→[AF Assist Light]: 153) [○/2]
- [Focus Peaking] (→[Focus Peaking]: 188) ⊙/≅
- [Focus Frame Moving Speed] (→[Focus Frame Moving Speed]: 154)

O/#

[Audio]

- [Sound Rec Level Disp.] (→[Sound Rec Level Disp.]: 361)
- [Mute Sound Input] (→[Mute Sound Input]: 362)
- [Sound Rec Gain Level] (→ [Sound Rec Gain Level]: 363)
- [Sound Rec Level Adj.] (→ [Sound Rec Level Adj.]: 364)
- [Sound Rec Quality] (→[Sound Rec Quality]: 365)
- [Sound Rec Level Limiter] (→ [Sound Rec Level Limiter]: 366)
- [Wind Noise Canceller] (→ [Wind Noise Canceller]: 367)
- [Wind Cut] (→Reduction of Wind Noise: 372)
- [Mic Socket] (→External Microphones (Optional): 368)
- [Special Mic.] (*) Setting the Sound Pickup Range (DMW-MS2: Optional): 371)

[Others (Video)]

- [Silent Mode] (→ [Silent Mode]: 249) [O/22]
- [Hybrid Zoom(Video)] (→[Hybrid Zoom(Video)]: 201)
- [Crop Zoom(Video)] (→[Crop Zoom(Video)]: 197)
- [Self Timer Setting] (→ Recording Using the Self-timer: 236) [□/.2]
- [Focus Transition] (→[Focus Transition]: 402)
- [Segmented File Recording] (→[Segmented File Recording]: 427)
- [Live Cropping] (→[Live Cropping]: 407)

[Custom] menu

- **(Image Quality)** (→ [Custom] menu ([Image Quality]): 518)
- [Photo Style Settings] (→[Photo Style Settings]: 518)
- [LUT Library] (→[LUT Library]: 328)
- [ISO Increments] (→[ISO Increments]: 519)
- [Extended ISO] (→ [Extended ISO]: 519)
- [Exposure Offset Adjust.] (→ [Exposure Offset Adjust.]: 520)
- [Face Priority In Multi Metering] (→[Face Priority In Multi Metering]: 520)
- [AWB Lock Setting] (→[AWB Lock Setting]: 521)
- [Color Space] (→[Color Space]: 522)
- [Exposure Comp. Reset] (→[Exposure Comp. Reset]: 522)
- [Auto Exposure in P/A/S/M] (→[Auto Exposure in P/A/S/M]: 522)
- [CreativeVideo Combined Set.] (→[CreativeVideo Combined Set.]: 523)

[Quick AF] (→ [Quick AF]: 528)

```
[AE] [Focus/Shutter] (→[Custom] menu ([Focus/Shutter]): 524)

• [Focus/Shutter Priority] (→[Focus/Shutter Priority]: 524)

• [Focus Switching for Vert / Hor] (→[Focus Switching for Vert / Hor]: 524)

• [AF/AE Lock Hold] (→[AF/AE Lock Hold]: 524)

• [AF+MF] (→[AF+MF]: 525)

• [MF Assist] (→[MF Assist]: 525)

• [MF Guide] (→[MF Guide]: 526)

• [Focus Ring Lock] (→[Focus Ring Lock]: 526)

• [Show/Hide AF Mode] (→[Show/Hide AF Mode]: 526)

• [Pinpoint AF Setting] (→[Pinpoint AF Setting]: 527)

• [AF-Point Scope Setting] (→[AF-Point Scope Setting]: 527)

• [Shutter AF] (→[Shutter AF]: 527)

• [Human Eye Detection Display] (→[Human Eye Detection Display]: 528)

• [Half-Press Shutter] (→[Half-Press Shutter]: 528)
```

[Assign REC to Shutter Button] (→[Assign REC to Shutter Button]: 528)

[Enlarged Live Display(Video)] (→ [Enlarged Live Display(Video)]: 529)

[Looped Focus Frame] (→[Looped Focus Frame]: 529)

```
    [Operation] (→[Custom] menu ([Operation]): 530)

    [Q.MENU Settings] (→ [Q.MENU Settings]: 530)

    [Touch Settings] (→[Touch Settings]: 530)

    [Operation Lock Setup] (→[Operation Lock Setup]: 531)

• [Fn Button Set] (→[Fn Button Set]: 531)

    [ISO Displayed Setting] (→[ISO Displayed Setting]: 532)

    [Exposure Comp. Disp. Setting] (→[Exposure Comp. Disp. Setting]: 532)

• [Dial Set.] (→ [Dial Set.]: 533)
[Monitor / Display (Photo)] (→[Custom] menu ([Monitor / Display
(Photo)]): 535)
[Auto Review] (→ [Auto Review]: 535)

    [Constant Preview] (→[Constant Preview]: 535)

    [Histogram]: 536)

• [Photo Grid Line] (→ [Photo Grid Line]: 537)
• [Live View Boost] (→ [Live View Boost]: 537)
[Night Mode] (→[Night Mode]: 538)

    [Monitor Display Settings] (→[Monitor Display Settings]: 539)

[Expo.Meter] (→[Expo.Meter]: 541)

    Focal Length (→ Focal Length: 541)

    [Blinking Highlights] (→[Blinking Highlights]: 541)

[Sheer Overlay] (→[Sheer Overlay]: 542)

    [I.S. Status Scope] (→[I.S. Status Scope]: 543)

• [Level Gauge] (→ [Level Gauge]: 544)

    [Luminance Spot Meter] (→[Luminance Spot Meter]: 545)

    Framing Outline (→ Framing Outline): 545)

    [Show/Hide Monitor Layout] (→[Show/Hide Monitor Layout]: 545)
```

[Monitor / Display (Video)] (→[Custom] menu ([Monitor / Display (Video)]): 546) [Log View Assist] (→[Log View Assist]: 546) [HLG View Assist] (→[HLG View Assist]: 546) [Anamorphic Desqueeze Display] (> [Anamorphic Desqueeze Display]: 546) [Monochrome Live View] (→[Monochrome Live View]: 547) [Center Marker] (→[Center Marker]: 547) [Safety Zone Marker] (→[Safety Zone Marker]: 547) [Frame Marker] (→[Frame Marker]: 548) • [Zebra Pattern] (→ [Zebra Pattern]: 548) [WFM/Vector Scope] (→[WFM/Vector Scope]: 548) [Color Bars] (→[Color Bars]: 549) [Video-Priority Display] (→[Video-Priority Display]: 549) • [Red REC Frame Indicator] (→ [Red REC Frame Indicator]: 549) _ [IN/OUT] (→ [Custom] menu ([IN/OUT]): 550) [HDMI Rec Output] (→[HDMI Rec Output]: 550) ([Lens / Others] (→[Custom] menu ([Lens / Others]): 551) • [Lens Focus Resume] (→ [Lens Focus Resume]: 551) [Lens Fn Button Setting] (→[Lens Fn Button Setting]: 551) • [Focus Ring Control] (→ [Focus Ring Control]: 552) [AF Micro Adjustment] (→[AF Micro Adjustment]: 155) [Lens Information] (→[Lens Information]: 553) • [Lens Info. Confirmation] (→ [Lens Info. Confirmation]: 553)

[Vertical Position Info (Video)] (→[Vertical Position Info (Video)]: 553)

F[Setup] menu

```
[A] [Card/File] (→[Setup] menu ([Card/File]): 555)
[Card Format] (→[Card Format]: 555)
• [Folder / File Settings] (→ [Folder / File Settings]: 556)
• [File Number Reset] (→ [File Number Reset]: 558)

    [Copyright Information] (→ [Copyright Information]: 558)

[Monitor / Display] (→ [Setup] menu ([Monitor / Display]): 559)
[Power Save Mode] (→[Power Save Mode]: 559)

    [Monitor Frame Rate] (→[Monitor Frame Rate]: 559)

    [Monitor Settings] (→[Monitor Settings]: 560)

    [Monitor Backlight] (→ [Monitor Backlight]: 560)

    [Level Gauge Adjust.] (→[Level Gauge Adjust.]: 560)

_ [IN/OUT] (→ [Setup] menu ([IN/OUT]): 561)
[Beep] (→[Beep]: 561)

    [Wi-Fi<sup>®</sup>] (→[Wi-Fi<sup>®</sup>]: 561)

    [Bluetooth<sup>®</sup>] (→[Bluetooth<sup>®</sup>]: 562)

• [USB] (→[USB]: 563)

    [HDMI Connection] (→[HDMI Connection]: 564)

    [Network Connection Light] (→[Network Connection Light]: 565)
```


- [Save to Custom Mode] (→ [Save to Custom Mode]: 566)
- [Load Custom Mode] (→ [Load Custom Mode]: 566)
- [Custom Mode Settings] (→ [Custom Mode Settings]: 566)
- [Save/Restore Camera Setting] (→[Save/Restore Camera Setting]: 567)
- [Reset] (→ [Reset]: 567)

F [Others] (→[Setup] menu ([Others]): 568)

- [Clock Set] (→[Clock Set]: 568)
- [Time Zone] (→[Time Zone]: 568)
- [System Frequency] (→[System Frequency]: 569)
- [Pixel Refresh] (→[Pixel Refresh]: 569)
- [Sensor Cleaning] (→[Sensor Cleaning]: 570)
- [Language] (→[Language]: 570)
- [Firmware Version] (→ [Firmware Version]: 571)
- [Approved Regulations] (→[Approved Regulations]: 571)^{*}
- Depending on the country or area where the camera was purchased, this is not displayed due to differences in specifications.

▲ [My Menu]

```
1 [Page 1] (→My Menu: 572)
2 [Page 2] (→My Menu: 572)
3 [Page 3] (→My Menu: 572)
  [Edit My Menu] (→Edit My Menu: 573)
  [Add]
  [Sorting]
  [Delete]
  [Display from My Menu]
```

▶[Playback] menu

```
[Playback Mode] (→[Playback] ([Playback Mode]): 479)

    [Playback Mode] (→[Playback Mode]: 479)

[Slide Show] (→[Slide Show]: 479)

    [Rotate Disp.] (→ [Rotate Disp.]: 480)

• [Picture Sort] (→[Picture Sort]: 480)

    [Magnify from AF Point] (→[Magnify from AF Point]: 480)

• [LUT View Assist (Monitor)] (→[LUT View Assist (Monitor)]: 480)
• [HLG View Assist (Monitor)] (→ [HLG View Assist (Monitor)]: 481)
• [Anamorphic Desqueeze Display] (→[Anamorphic Desqueeze Display]:
 481)

    Behavior After Video Playback] (→ Behavior After Video Playback]: 481)

[☐ [Process Image] (→[Playback] ([Process Image]): 482)

    [RAW Processing] (→[RAW Processing]: 482)

    [Time Lapse Video] (→[Time Lapse Video]: 482)

    Stop Motion Videol (→ Stop Motion Videol: 482)

[Add/Delete Info.] (→ [Playback] ([Add/Delete Info.]): 483)

    [Protect] (→[Protect]: 483)

    [Rating] (→ [Rating]: 483)

[Edit Image] (→[Playback] ([Edit Image]): 484)

    [Resize] (→[Resize]: 484)

    [Rotate] (→ [Rotate]: 485)

• [Video Divide] (→[Video Divide]: 485)

    [Video Repair] (→[Video Repair]: 485)

[Others] (→[Playback] ([Others]): 486)
• [Delete Confirmation] (→ [Delete Confirmation]: 486)

    [Delete All Images] (→[Delete All Images]: 486)
```

Wi-Fi / Bluetooth

This chapter explains the Wi-Fi® and Bluetooth® functions of the camera.

• This document refers to both smartphones and tablets as smartphones.

Connecting to "LUMIX Lab": 590

• Using "LUMIX Lab": 596

Connecting to "LUMIX Sync": 604

• Using "LUMIX Sync": 620

Sending Images from the Camera to a PC: 637

Wi-Fi Connections: 641

Send Settings and Selecting Images: 651

• [Wi-Fi Setup] Menu: 653

Checking operation of the Wi-Fi and Bluetooth functions

Light (blue)	Monitor	Operation
Lit		The Wi-Fi function is set to on, or there is a connection.
	8	The Bluetooth function is set to on, or there is a connection.
Blinking	đ	When image data is sent using a camera operation.



(A) Network connection light



- Do not remove the card or battery or move to an area without any reception while sending images.
- The camera cannot be used to connect to a public wireless LAN connection.
- We strongly recommend that you set an encryption to maintain information security.
- We recommend that you use a sufficiently charged battery when sending images.
- When the remaining battery level is low, it may not be possible to connect to or maintain communication with other devices.
 - (A message such as [Communication error] is displayed.)
- Images may not be completely sent depending on radio wave conditions.
 If the connection is terminated while sending images, images with missing parts may be sent.



- You can set so that the network connection light does not turn on:
 - (→[Network Connection Light]: 565)

Connecting to "LUMIX Lab"

- Installing "LUMIX Lab": 591
- Connecting to a Smartphone (Bluetooth Connection): 592

Connect with a smartphone which has the "Panasonic LUMIX Lab" (below: "LUMIX Lab") smartphone app installed.

Use "LUMIX Lab" for [LUT Library] operations and image transfers.

Installing "LUMIX Lab"

"LUMIX Lab" is an application for smartphones provided by Panasonic.



Supported OS

Android™: Android 10 or higher

iOS: iOS 15 or higher

- Connect the smartphone to a network.
- 2 (Android) Select "Google Play™ Store". (iOS) Select "App Store".
- 3 Enter "LUMIX" or "panasonic lumix lab" into the search box.
- 4 Select and install the "Panasonic LUMIX Lab"





- This can also be downloaded via the QR code displayed with [REAL TIME LUT].
- Use the latest version.
- Supported OSs are current as of May 2024 and are subject to change.
- Read the [Help] in the "LUMIX Lab" menu for further details on how to operate.
- The app may not operate correctly depending on your smartphone.
 For information on the "LUMIX Lab", refer to the following support site: https://panasonic.jp/support/global/cs/dsc/ (English only)

Connecting to a Smartphone (Bluetooth Connection)

Follow a simple connection setup procedure (pairing) to connect to a smartphone that supports Bluetooth Low Energy.

For the first-time connection, pairing settings are required.
 When connecting the second and subsequent times, the connection is automatic when you turn on the camera's Bluetooth function.



Supported smartphones

Android™: Android 10 or higher with Bluetooth 4.0 or higher (excluding those that do not support Bluetooth Low Energy)

iOS: iOS 15 or higher

• Turn on the Bluetooth function on the smartphone beforehand.

On the smartphone, start up "LUMIX Lab".



- View the content in the displayed guidance and start using the app.
- 3 Switch to the [Camera] screen and select [Pair The Camera].



(A) [Pair The Camera]

- 4 Set the camera to Bluetooth pairing standby state.
 - | → [→] → [Bluetooth] → [Bluetooth Function] → [ON]
 - The camera enters the pairing standby state.
 - When the camera is detected, it is displayed in "LUMIX Lab".
- 5 Select the camera to be connected in "LUMIX Lab".
 - Pairing is executed when you select [Pairing] in the confirmation screen.



- The paired smartphone is registered as a paired device.
- Even if you set up pairing with more than one smartphone, you can only connect to one smartphone at a time.
- . When pairing takes some time, canceling the pairing settings on both the smartphone and camera and re-establishing the connection may result in the camera being detected correctly.
- During Bluetooth connection, [] is displayed in the recording screen. When the Bluetooth function is enabled, but a connection is not established with the smartphone, [**] appears translucent.
- Up to 16 smartphones can be registered. If you try to register more than 16 smartphones, the registration information will be deleted from the oldest first.
- It is not possible to connect "LUMIX Lab" and "LUMIX Sync" to the camera at the same time.

End Bluetooth Connection

To terminate the Bluetooth connection, turn off the Bluetooth function of the camera



♠ → [♣] → [♣] → [Bluetooth] → [Bluetooth Function] → Select [OFF]



 Even if you terminate the connection, the pairing information for it will not be deleted.

Canceling Pairing

- 1 Cancel the pairing setting of the camera.
- 2 Select the smartphone for which to cancel the pairing.



- Also cancel the pairing setting on the smartphone.
- When [Reset] in the [Setup] ([Setting]) menu is used to reset the network settings, the information for registered devices is deleted.

Using "LUMIX Lab"

- LUT Library Operations: 596
- Import images: 598
- [Auto Transfer]: 600
- [Location Logging]: 602

This explains the functions for operating the camera from "LUMIX Lab".

LUT Library Operations

Operate "LUMIX Lab" to update the [LUT Library] in the camera.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- . On the smartphone, start up "LUMIX Lab".

 
Select [LUT Transfer] in the [Camera] screen.

• Connect to the camera with Wi-Fi. Select [Join] to start the connection.



(A) [LUT Transfer]

- 2 Select the LUT file in the [LUT Library] screen to edit.
 - You can transfer, rename, delete or reorder your LUT files.
 - A list of LUT files saved to "LUMIX Lab" is shown in [Device].
 - A list of LUT files saved to the camera is shown in [Camera].



- Select from [Device] the LUT file to transfer.
- Select [Transfer to Camera] and update the [LUT Library] on the camera.

Import images

Operate "LUMIX Lab" to transfer images from the camera to your smartphone.

 
Getting started:

- Connect the camera to a smartphone. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- On the smartphone, start up "LUMIX Lab".
 - Select [Transfer Photo / Video] in the [Camera] screen.
 - Connect to the camera with Wi-Fi. Select [Join] to start the connection.
- 2 Select the image to transfer.
 - Touch the checkbox to select



3 Transfer the image.

● Select [±].





- It is not possible to transfer images with file sizes exceeding 4 GB.
- Images recorded using the following function cannot be transferred:
 [MOV] videos
- The transfer speed slows when the camera temperature rises.

[Auto Transfer]

You can automatically transfer images from the camera to your smartphone as they are taken.

Getting started:

 
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
 - Enable [Auto Transfer] on the camera.

 - The function can also be enabled in "LUMIX Lab".
 - · Connect to the smartphone with Wi-Fi.
- 2 Check the send settings on the camera and then press
 - ∰ .
 - To change the send setting, press [DISP.]. (→Image Send Settings: 651)
 - Automatic image transfer is possible when [] is displayed on the camera recording screen.



- Record with the camera.
 - [a] is displayed in the recording screen of the camera while a file is being sent.

To Stop the Automatic Transfer of Images



 A confirmation screen is displayed, asking you to terminate the Wi-Fi connection.



 If the [Bluetooth Function] and [Auto Transfer] settings of the camera are [ON], the camera automatically connects to the smartphone via Wi-Fi and Bluetooth when you turn on the camera.

Start up the "LUMIX Lab" on the smartphone to connect to the camera. Note that if "LUMIX Sync" is running on the smartphone, automatic image transfer may not work properly.



- When [Auto Transfer] is set to [ON], [Wi-Fi Function] cannot be used.
- Automatic image transfer is interrupted while recording or playing back videos.
 The transfer starts at the start of the file where it was interrupted when the transmission restarts.
- If the camera is turned off during image transfer, and the file sending is interrupted, then turn on the camera to restart the sending.
 - If the storage status of unsent files changes, then sending of files may no longer be possible.
 - If there are many unsent files, then sending of all files may not be possible.
- If automatic image transfer is performed in places where the ambient temperature is high, communications may be interrupted.

The camera automatically reconnects when its temperature goes down and automatic image transfer restarts.

If automatic image transfer does not restart, turn the camera off then on again to reconnect.

- Images recorded with the following function cannot be transferred automatically:
 - [MP4]/[MOV] ([Rec. File Format])

[Location Logging]

The smartphone sends its location information to the camera via Bluetooth, and the camera performs recording while writing the acquired location information

Getting started:

- Enable the GPS function on the smartphone.
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- 1 Enable [Location Logging] on the camera.
 - | → [] → [] → [Bluetooth] → [Location Logging] → [ON]
 - The function can also be enabled in "LUMIX Lab".
 - The camera will enter a mode where location information can be recorded and [GP\$] is displayed in the recording screen of the camera.
- 2 Record images with the camera.
 - · Location information will be written to the recorded images.



 When [GP\$] on the recording screen appears translucent, location information cannot be acquired, therefore data cannot be written.

Smartphone GPS positioning may not be possible if the smartphone is within a building, a bag, or similar. Move the smartphone to a position affording a wide view of the sky to improve positioning performance.

In addition, refer to the operating instructions of your smartphone.

- Images with location information are indicated with [GPS].
- Be sure to pay special attention to the privacy, the likeness rights, etc. of the subject when you use this function. Use at your own risk.
- The smartphone drains its battery faster while acquiring location information.

Connecting to "LUMIX Sync"

- Installing "LUMIX Sync": 605
- Connecting to a Smartphone (Bluetooth Connection): 606
- Connecting to a Smartphone ([Wi-Fi connection]): 612
- Sending Images on the Camera to a Smartphone with Simple Operations: 618

Connect with a smartphone which has the "Panasonic LUMIX Sync" (below: "LUMIX Sync") smartphone app installed.

Use "LUMIX Sync" for remote recording and image transfers.

Installing "LUMIX Sync"

"LUMIX Sync" is an application for smartphones provided by Panasonic.



Supported OS

Android™: Android 10 or higher

iOS: iOS 15 or higher

- Connect the smartphone to a network.
- 2 (Android) Select "Google Play™ Store". (iOS) Select "App Store".
- Enter "LUMIX" or "panasonic lumix sync" into the search box.
- 4 Select and install the "Panasonic LUMIX Sync" 🚅





- Use the latest version
- Supported OSs are current as of May 2024 and are subject to change.
- Read the [Help] in the "LUMIX Sync" menu for further details on how to operate.
- The app may not operate correctly depending on your smartphone. For information on the "LUMIX Sync", refer to the following support site: https://panasonic.jp/support/global/cs/dsc/ (English only)

Connecting to a Smartphone (Bluetooth Connection)

Follow a simple connection setup procedure (pairing) to connect to a smartphone that supports Bluetooth Low Energy.

When pairing is set up, the camera also automatically connects to the smartphone via Wi-Fi.

For the first-time connection, pairing settings are required.
 For information about connecting for the second and subsequent times
 (→Connecting to a Paired Smartphone: 610)



Supported smartphones

Android™: Android 10 or higher with Bluetooth 4.0 or higher (excluding those that do not support Bluetooth Low Energy)

iOS: iOS 15 or higher

• Turn on the Bluetooth function on the smartphone beforehand.

- On the smartphone, start up "LUMIX Sync".
 - A message regarding device (camera) registration is displayed.
 Select [Next].



 
• If you have closed the message, select [?], then register the camera using [Camera registration (pairing)].




Check the content in the displayed guide and select [Next] until the screen to register the camera is displayed.

Operating the camera in accordance with the smartphone guide.

- 3 Set the camera to Bluetooth pairing standby state.
 - → [] → [] → [Bluetooth] → [Pairing] → [Add New Device]
 - The camera enters pairing standby state and the device name (A) is displayed.




- 4 On the smartphone, select the camera's device name.
 - (iOS devices) When a message to confirm the change of destination is displayed, select [Join].

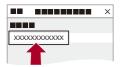

When a message indicating that device registration is complete, select [OK].

  A Bluetooth connection between the camera and the smartphone will be made





- The paired smartphone is registered as a paired device.
- During Bluetooth connection, [§] is displayed in the recording screen.
 When the Bluetooth function is enabled, but a connection is not established with the smartphone, [§] appears translucent.
- Up to 16 smartphones can be registered.

 If you try to register more than 16 smartphones, the registration information will be deleted from the oldest first.

End Bluetooth Connection

To terminate the Bluetooth connection, turn off the Bluetooth function of the camera.





 Even if you terminate the connection, the pairing information for it will not be deleted.


Connecting to a Paired Smartphone

Connect paired smartphones using the following procedure.

- 1 Enable the Bluetooth function of the camera.
 - | → [→] → [M] → [Bluetooth] → [Bluetooth Function] → [ON]
- 2 On the smartphone, start up "LUMIX Sync".
 - If a message is displayed indicating that the smartphone is searching for cameras, close the message.
- 3 Select [<u></u>].



 - 4 Select [Bluetooth Setup].
- 5 Turn Bluetooth ON.
- 6 From [Registered camera(s)] items, select the camera's device name.





- Even if you set up pairing with more than one smartphone, you can only connect to one smartphone at a time.
- When pairing takes some time, canceling the pairing settings on both the smartphone and camera and re-establishing the connection may result in the camera being detected correctly.

Canceling Pairing

- Cancel the pairing setting of the camera.
 - (♣) → [♣] → [Bluetooth] → [Pairing] → [Delete]
- 2 Select the smartphone for which to cancel the pairing.



 
- Also cancel the pairing setting on the smartphone.
- When [Reset] in the [Setup] ([Setting]) menu is used to reset the network settings, the information for registered devices is deleted.

Connecting to a Smartphone ([Wi-Fi connection])

Connect to the smartphone using Wi-Fi. The default setting is to connect with enhanced security using password authentication. It is also possible to easily connect to a smartphone without using a password.

- 1 Display the QR code (B).

 - You can also perform the same operation by pressing the Fn button assigned with [Wi-Fi]. (→Fn Buttons: 488)
 - Press m to enlarge the QR code.



- On the smartphone, start up "LUMIX Sync".
 - If a message is displayed indicating that the smartphone is searching for cameras, close the message.
- 3 Select [=].
- 4 Select [Wi-Fi connection].

 
- 5 Select [QR code].
- Scan the QR code displayed on the screen of the camera using "LUMIX Sync".
 - (iOS devices) When a message to confirm the change of destination is displayed, select [Join].

Manually entering a password to connect

- Display the screen in Step 1 (→Connecting to a Smartphone ([Wi-Fi connection]): 612).
- 2 In the setting menu of the smartphone, turn the Wi-Fi function ON.



- 3 On the Wi-Fi setup screen, select the SSID (C) displayed on the camera.
- 4 (At the first connection) Enter the password (C) displayed on the camera.



5 On the smartphone, start up "LUMIX Sync".

Connecting Without Using Password Authentication

- 1 Set [Wi-Fi Password] on the camera to [OFF].
 - () → [] → [] → [Wi-Fi] → [Wi-Fi Setup] → [Wi-Fi Password] → [OFF]
- 2 Set the camera to Wi-Fi connection standby status.

 - The SSID (D) of the camera is displayed on the screen.
 - You can also perform the same operation by pressing the Fn button assigned with [Wi-Fi]. (>Fn Buttons: 488)



- 3 In the setting menu of the smartphone, turn the Wi-Fi function ON.
- 4 Select the SSID displayed on the camera.



5 On the smartphone, start up "LUMIX Sync".



6 (At the first connection) Confirm the device name displayed on the camera and then select [Yes].



- When a device different than the one you want to connect to is displayed, the
 camera will automatically connect to that device if you select [Yes].
 If there are other Wi-Fi connection devices nearby, we recommend using either
 QR code or manual password input to connect with password authentication.
 (→Connecting to a Smartphone ([Wi-Fi connection]): 612)
- When the following function is being used, [Wi-Fi Function] is not available:
 - [Auto Transfer]

Connection Methods Other Than the Default Settings

When connecting with [Via Network], or [WPS Connection] in [Direct], follow the steps below:

- 1 Display the connection method setting screen for the camera.
 - | → [♠] → [♠] → [Wi-Fi] → [Wi-Fi Function] → [New Connection] → [Control With Smartphone]
- 2 Press [DISP.].

Connecting via network

- 1 Select [Via Network] and then press ()
 - Connect the camera to a wireless access point. (→[Via Network]: 642)
- 2 In the setting menu of the smartphone, turn the Wi-Fi function ON.
- 3 Connect the smartphone to the wireless access point that the camera is connected to.
- 4 On the smartphone, start up "LUMIX Sync".

Connecting directly

- 1 Select [Direct] and then press .
 - Select [WPS Connection] to connect the camera to a smartphone. (→[Direct]: 646)
- 2 On the smartphone, start up "LUMIX Sync".

* Terminating the Wi-Fi Connection

To end the Wi-Fi connection between the camera and smartphone, follow the steps below.

- 1 Press the shutter button halfway to put the camera in recording mode.
- 2 Terminate the Wi-Fi connection.
 - () → [) → [] → [Wi-Fi] → [Wi-Fi Function] → [Yes]
 - You can also perform the same operation by pressing the Fn button assigned with [Wi-Fi]. (>Fn Buttons: 488)
- 3 On the smartphone, close the "LUMIX Sync".

Sending Images on the Camera to a Smartphone with Simple Operations

You can transfer pictures to a smartphone connected by Bluetooth just by pressing [Q] during playback.

You can also use the menu to connect easily.

 You can also perform the same operation by pressing the Fn button registered with [Send Image (Smartphone)]. (→Fn Buttons: 488)

Getting started:

- Install "LUMIX Sync" on your smartphone. (→Installing "LUMIX Sync": 605)
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
- Press [] on the camera to display the playback screen.

Send a single image

- Press ◀► to select the image.
- 2 Press [Q].
- 3 Select [Single Select].
 - To change the send settings of images, press [DISP.]. (→Image Send Settings: 651)
- 4 On the smartphone, select [Yes] (for Android devices) or [Join] (for iOS devices).
 - This connects automatically using Wi-Fi.

Send multiple images

- 1 Press [Q].
- Select [Multi Select].
 - To change the send settings of images, press [DISP.]. (→Image Send Settings: 651)
- 3 Select the images and then transfer.
 - ◆►: Select images
 - : Set/Cancel
 - [DISP.]: Transfer
- 4 On the smartphone, select [Yes] (for Android devices) or [Join] (for iOS devices).
 - This connects automatically using Wi-Fi.

Using the menu to transfer easily

→ [→] → [→] → [Bluetooth] → [LUMIX Sync Settings] → [Send Image (Smartphone)]

Settings: [Single Select]/[Multi Select]

- If [Single Select], press ◀▶ to select the image and then press (to execute.
- If [Multi Select], use the same operation as with "Send multiple images". (→Send multiple images: 619)



- It is not possible to transfer images with file sizes exceeding 4 GB.
- Images recorded using the following function cannot be transferred:
 - [MOV] videos
- When recording, recording is prioritized so it will take time for sending to complete.
- If the camera is turned off, or the Wi-Fi is disconnected before sending is completed, then sending will not restart.
- You may not be able to delete files or use the [Playback] menu while sending.
- When the following function is being used, [Wi-Fi Function] is not available:
 - [Auto Transfer]


Using "LUMIX Sync"

- [Remote shooting]: 622
- [Shutter Remote Control]: 624
- [Import images]: 627
- [Auto Transfer]: 629
- [Location Logging]: 631
- [Remote Wakeup]: 633
- [Auto Clock Set]: 635
- [Camera settings copy]: 636

This explains the functions for operating the camera from "LUMIX Sync". Functions described in this document with the (Bluetooth) symbol require a smartphone that supports Bluetooth Low Energy.

Home Screen

When you start up "LUMIX Sync", the home screen is displayed.

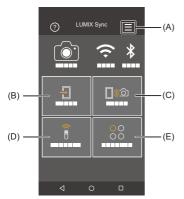

 (A) =: App settings (→Connecting to a Paired Smartphone: 610, Connecting to a Smartphone ([Wi-Fi connection]): 612, [Remote Wakeup]: 633)

This allows connection settings, camera power operations, and displays Help.

- (B) ☐ : [Import images] (→[Import images]: 627)
- (C) 🗓 🔊 🖸: [Remote shooting] (→[Remote shooting]: 622)
- (D) (Shutter Remote Control] (→[Shutter Remote Control]: 624)
- (E) ○○ : [Others] ([Camera settings copy]) (→[Camera settings copy]: 636)

[Remote shooting]

You can use the smartphone to record from a remote location while viewing the live view images from the camera.

Getting started:

 
- Connect the camera to a smartphone. (*) Connecting to a Smartphone (Bluetooth Connection): 606, Connecting to a Smartphone ([Wi-Fi connection]): 612)
- On the smartphone, start up "LUMIX Sync".

Select [☐)◎ ([Remote shooting]) in the home screen.

 (iOS devices) When a message to confirm the change of destination is displayed, select [Join].

2 Start recording.

• The recorded image is saved on the camera.



- (F) Takes a picture
- (G) Starts/ends the video recording



 When used in combination with [Auto Transfer], it is possible to automatically transfer the remotely recorded images to a smartphone. (>[Auto Transfer]: 629)



• Certain features, including some settings, may not be available.

Operation Method During Remote Recording

Set either the camera or the smartphone as the priority control device to be used during remote recording.

[Camera]

Operation is possible on both the camera and the smartphone.

• The camera's dial settings, etc. cannot be changed with the smartphone.

[Smartphone]

Operation is possible only on the smartphone.

- The camera's dial settings, etc. can be changed with the smartphone.
- To end remote recording, press any of the buttons on the camera to turn on the screen, and select [End].
- The default setting is [Camera].



• The setting of this function cannot be changed while the connection is active.

[Shutter Remote Control]

Bluetooth

You can use the smartphone as a remote control for the shutter.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
- On the smartphone, start up "LUMIX Sync".
 - Select [a] ([Shutter Remote Control]) in the home screen.
- 2 Start recording.







Starts/ends the video recording



Takes a picture

• Bulb Recording: 625

Bulb Recording

The shutter can be kept open from the start to end of recording, which is useful for recording of starry skies or night scenery.

Getting started:

- Set the camera to [M] mode. (→Manual Exposure Mode: 279)
- Set the camera shutter speed to [T] (Time). (→[T] (Time): 283)
- 1 Touch [] to start recording (keep touching, without removing your finger).
- 2 Remove your finger from [] to end recording.
 - Slide [] in the direction of [LOCK] to record with the shutter button locked in a fully-pressed state.
 - (Slide [_] back to its original position or press the camera shutter button to end recording)
 - During [B] (Bulb) recording, if the Bluetooth connection is broken, then carry
 out Bluetooth connection again, then end recording from the smartphone.

Shortening the Return Time from [Sleep Mode]

You can shorten the time it takes for the camera to return from [Sleep Mode] when the [Shutter Remote Control] is used.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
- Set [Remote Wakeup] in [LUMIX Sync Settings] to [ON]. (→[Remote Wakeup]: 633)

[]) [Import / Remote Priority]

Shortens the time to return when using [Import images] or [Remote shooting].

[Remote Shutter Priority]

Shortens the time to return when using [Shutter Remote Control].



- To use the [Shutter Remote Control] to cancel [Sleep Mode] on the camera, set [Bluetooth] in the [Setup] ([IN/OUT]) menu as follows, then connect via Bluetooth:
 - [Remote Wakeup] ([LUMIX Sync Settings]): [ON] (→ [Remote Wakeup]: 633)
 - [Auto Transfer]: [OFF] (→[Auto Transfer]: 629)
- The camera cannot be turned on by using [Shutter Remote Control].

[Import images]

Transfer an image stored on the card to the smartphone connected via Wi-Fi.

Getting started:

- Connect the camera to a smartphone. (*) Connecting to a Smartphone (Bluetooth Connection): 606, Connecting to a Smartphone ([Wi-Fi connection]): 612)
- On the smartphone, start up "LUMIX Sync".
 - Select [🚽] ([Import images]) in the home screen.
 - (iOS devices) When a message to confirm the change of destination is displayed, select [Join].
- 2 Select the image to transfer.



3 Transfer the image.

- Select [→].
- If the image is a video, you can play it back by touching [) at the center of the screen.





 When a video is played back, this has a small data size and is transmitted using "LUMIX Sync", therefore its image quality will differ from that of the actual video recording.

Depending on the smartphone and on the usage conditions, the image quality may deteriorate or the sound may skip during video or picture playback.

- It is not possible to transfer images with file sizes exceeding 4 GB.
- Images recorded using the following function cannot be transferred:
 - [MOV] videos
- The transfer speed slows when the camera temperature rises.

[Auto Transfer]

Bluetooth

You can automatically transfer recorded pictures to a smartphone as they are taken.

Getting started:

 
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
 - Enable [Auto Transfer] on the camera.
 - Auto Transfer] → [ON]
 - If a confirmation screen is displayed on the camera asking you to terminate the Wi-Fi connection, select [Yes] to terminate it.
- On the smartphone, select [Yes] (for Android devices) or [Join] (for iOS devices).
 - The camera automatically makes a Wi-Fi connection.
- 3 Check the send settings on the camera and then press
 - To change the send setting, press [DISP.]. (→Image Send Settings: 651)
 - Automatic image transfer is possible when [] is displayed on the camera recording screen.



4 Record with the camera.

• [a] is displayed in the recording screen of the camera while a file is being sent

To Stop the Automatic Transfer of Images



 A confirmation screen is displayed, asking you to terminate the Wi-Fi connection.



 If the [Bluetooth Function] and [Auto Transfer] settings of the camera are [ON], the camera automatically connects to the smartphone via Wi-Fi and Bluetooth when you turn on the camera.

Start up the "LUMIX Sync" on the smartphone to connect to the camera. Note that if "LUMIX Lab" is running on the smartphone, automatic image transfer may not work properly.



- Images are not transferred while the recording screen of the camera is displayed on the smartphone in [Remote shooting].
- When [Auto Transfer] is set to [ON], [Wi-Fi Function] cannot be used.
- Automatic image transfer is interrupted while recording or playing back videos.
 The transfer starts at the start of the file where it was interrupted when the transmission restarts.
- If the camera is turned off during image transfer, and the file sending is interrupted, then turn on the camera to restart the sending.
 - If the storage status of unsent files changes, then sending of files may no longer be possible.
 - If there are many unsent files, then sending of all files may not be possible.
- Images recorded with the following function cannot be transferred automatically:
 - Video recording

[Location Logging]

Bluetooth

The smartphone sends its location information to the camera via Bluetooth, and the camera performs recording while writing the acquired location information.

Getting started:

- Enable the GPS function on the smartphone.
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
 - Enable [Location Logging] on the camera.
 - | → [/] → [| N] → [Bluetooth] → [Location Logging] → [ON]
 - The camera will enter a mode where location information can be recorded and [GP\$] is displayed in the recording screen of the camera.
- 2 Record images with the camera.
 - · Location information will be written to the recorded images.



 When [GP\$] on the recording screen appears translucent, location information cannot be acquired, therefore data cannot be written.

Smartphone GPS positioning may not be possible if the smartphone is within a building, a bag, or similar. Move the smartphone to a position affording a wide view of the sky to improve positioning performance.

In addition, refer to the operating instructions of your smartphone.

- Images with location information are indicated with [GPS].
- Be sure to pay special attention to the privacy, the likeness rights, etc. of the subject when you use this function. Use at your own risk.
- The smartphone drains its battery faster while acquiring location information.

[Remote Wakeup]

Bluetooth

Even when the camera is turned off, the smartphone can be used to start the camera and record images, or check the recorded images.

Getting started:

- 1 Connect to a smartphone using Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
- 2 Enable [Remote Wakeup] on the camera.
- 3 Set the camera on/off switch to IOFF1.
- 4 On the smartphone, start up "LUMIX Sync".

Turning On the Camera

Select [Remote shooting] in the "LUMIX Sync" home screen.

- (iOS devices) When a message to confirm the change of destination is displayed, select [Join].
- The camera turns on, and automatically connects using Wi-Fi.

Turning Off the Camera

- Select [=] in the "LUMIX Sync" home screen.
- Select [Turn off the camera].
- 3 Select [Power OFF].



- When [Auto Transfer] is set to [ON], images recorded while remote operation is running are automatically transferred to a smartphone.
 - If [Power OFF] is selected while there are still unsent images, sending is resumed when the camera is next turned on.
- When [Remote Wakeup] has been set, the Bluetooth function continues to work even if the camera on/off switch is set to [OFF], so the battery will drain.

[Auto Clock Set]

Bluetooth

Synchronize the clock and the time zone setting of the camera with those of a smartphone.

Getting started:

 Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)

Enable [Auto Clock Set] on the camera.

•

→ [♣] → [♣] → [Bluetooth] → [LUMIX Sync Settings] → [Auto Clock Set] → [ON]

[Camera settings copy]

Bluetooth

This saves the camera's settings information to the smartphone.

Saved settings information can be loaded to the camera, letting you set the same settings on multiple cameras.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 606)
 - Select [°] ([Others]) ⇒ [☑] ([Camera settings copy]) in the "LUMIX Sync" home screen.
- 2 Save or load settings information.
 - Read the [Help] in the "LUMIX Sync" menu for further details on how to operate the "LUMIX Sync".



- . Only settings information from the same model can be loaded.
- When transferring settings information, a Wi-Fi connection is automatically created.
 - (iOS devices) When a message to confirm the change of destination is displayed, select [Join].
- You can save or load the settings information of items that are the same as those in [Save/Restore Camera Setting] under the [Setup] ([Setting]) menu. (→List of Default Settings/Custom Saving/Settings Available for Copying: 736)

Sending Images from the Camera to a PC

Send recorded images to the PC connected with Wi-Fi.



Supported OS

Windows: Windows 10, Windows 11

Mac: macOS 12.0 to 12.7, 13.0 to 13.6, 14.1 to 14.2

Getting started:

- Turn on the PC.
- · Create a destination folder for images.
- If the workgroup of the destination PC has been changed from the standard setting, change the corresponding setting of the camera in [PC Connection]. (→[PC Connection]: 654)

Create a Destination Folder for Images

When using Windows (Example for Windows 10)

- Select the destination folder and then right-click.
- 2 Select [Properties] and then enable folder sharing.

When using Mac (Example for macOS 12.0)

- 1 Select the destination folder and then click the items in the following order. [File] ⇒ [Get Info]
- 2 Enable folder sharing.



 Create a PC account name (up to 254 characters) and password (up to 32 characters) consisting of alphanumeric characters.

A destination folder may not be created if the account name includes non-alphanumeric characters.

 When the computer name (NetBIOS name for Mac) contains a space (blank character), etc., it may not be recognized.

In that case, we recommend changing the name to one consisting only of 15 or less alphanumeric characters.

 Refer to the operating instructions for your PC or Help on the OS for detailed setting procedures.

Select the method for sending images on the camera.

- | → [] → [] → [Wi-Fi] → [Wi-Fi Function] → [New Connection] → [Send Images to PC While Recording]/[Send Images Stored in the Camera to PC]
- 2 Connect the camera and PC by Wi-Fi.
 - Select [Via Network] (→[Via Network]: 642) or [Direct] (→[Direct]: 646), and then connect.
- 3 Enter the computer name of the PC you want to connect to (for Mac, the NetBIOS name).
 - How to enter characters (→Entering Characters: 90)

4 Select a folder for storing images.

- Folders sorted by sent date will be created in the selected folder, and images will be saved there
- Check the send settings and then press <a>® .
 - To change the send setting, press [DISP.]. (→Image Send Settings: 651)
- (When [Send Images to PC While Recording] is selected) Take pictures.
 - [a] is displayed in the recording screen of the camera while a file is being sent.
 - To end the connection, follow the steps below:



(When [Send Images Stored in the Camera to PC] is selected) Select an image. (→Selecting Images: 652)

• To end the connection, select [Exit].



- If the screen for a user account and password entry appears, enter the one you set on your PC.
- When the firewall of the OS, security software, etc. is enabled, connecting to the PC may not be possible.
- When recording, recording is prioritized so it will take time for sending to complete.
- If the camera is turned off, or the Wi-Fi is disconnected before sending is completed, then sending will not restart.
- You may not be able to delete files or use the [Playback] menu while sending.
- When the following function is being used, [Wi-Fi Function] is not available:
 [Auto Transfer]

Images That Can be Sent

The images that can be sent depend on the method used for sending them.

Images that can be sent	
[Send Images to PC While Recording]	[Send Images Stored in the Camera to PC]
JPEG/RAW	JPEG/RAW/MP4(Lite)/MP4/MOV



- Depending on the OS version, these may not be displayed correctly.
- Sending may not be possible depending on your device.
- It may not be possible to send images recorded with devices other than this camera, or images edited or processed on a PC.

Wi-Fi Connections

- [Via Network]: 642
- [Direct]: 646
- Connect to Wi-Fi Using Previously Saved Settings: 648
- Fn Button Assigned with [Wi-Fi]: 650

When [New Connection] has been selected in [Wi-Fi Function] in [Wi-Fi] of the [Setup] ([IN/OUT]) menu, select the connection method from either [Via Network] or [Direct] to connect.

On the other hand, when you use [Select a destination from History] or [Select a destination from Favorite], the camera connects to the selected device with the previously-used settings.

[Via Network]

Connect the camera and destination device through the wireless access point.



Select the method for connecting to a wireless access point.

Settings: [WPS (Push-Button)]/[WPS (PIN code)]/[From List] (→[WPS (Push-Button)]: 643, [WPS (PIN code)]: 643, [From List]: 644)



 
- After selecting [Via Network] once, the camera will connect to the previously-used wireless access point.
 - To change the wireless access point used for connection, press [DISP.] and change the connection destination.
- Check the operating instructions and settings of the wireless access point.

[WPS (Push-Button)]

Press the WPS button on the wireless access point to set up a connection.

Press the wireless access point WPS button until it switches to WPS mode.

Example)



❖ [WPS (PIN code)]

Enter a PIN code into the wireless access point to set up a connection.

- 1 On the camera screen, select the wireless access point you are connecting to.
- 2 Enter the PIN code displayed on the camera screen into the wireless access point.
- 3 Press of the camera.

[From List]

Searches for a wireless access point to use, and connects to this.



- Confirm the encryption key of the wireless access point.
- 1 Select the wireless access point you are connecting to.
 - Press [DISP.] to run a wireless access point search again.
 - If no wireless access point is found (→Connecting by Manual Input: 645)
- 2 (If network authentication is encrypted) Enter the encryption key.
 - How to enter characters (→Entering Characters: 90)

Connecting by Manual Input



- Check the SSID, network authentication, encryption, and encryption key of the wireless access point you are using.
- 1 In the screen in Step 1 of "[From List]", select [Manual Input]. (→[From List]: 644)
- 2 Enter the SSID of the wireless access point you are connecting to, and then select [Set].
 - How to enter characters (→Entering Characters: 90)
- 3 Select the network authentication.

[WPA3-SAE]/[WPA3/WPA2]/[WPA2-PSK]/[WPA2/WPA-PSK]

Supported encryption: [TKIP], [AES]

[No Encryption]

4 (When other than [No Encryption] is selected) Enter the encryption key and then select [Set].

[Direct]

Directly connect the camera and the destination device.



Select the method for connecting with the destination device.

[WPS Connection]

[WPS (Push-Button)]: Press the WPS button on the destination device to connect.

• On the camera, press [DISP.] to extend the connection wait time.

[WPS (PIN code)]: Enter the PIN code into the camera, and connect.

[Manual Connection]

Search for the camera on the destination device to connect.

- 1 Select the network authentication.
 - [WPA3]/[WPA3/WPA2]
 - If [Wi-Fi Password] in [Wi-Fi Setup] is [OFF], this is not displayed if the connected device is [Smartphone].
- 2 Enter the SSID and password displayed on the camera into the device.
 - If [Wi-Fi Password] in [Wi-Fi Setup] is [OFF], the password is not displayed if the connected device is [Smartphone].

Select the SSID to establish a connection. (→Connecting Without Using Password Authentication: 614)





• Please also refer to the operating instructions for the device to be connected.

Connect to Wi-Fi Using Previously Saved Settings

Use the Wi-Fi connection history to connect using the same settings as previously.

- Display the Wi-Fi connection history.
 - → [] → [] → [Wi-Fi] → [Wi-Fi Function] → [Select a destination from Historyl/[Select a destination from Favorite]
- 2 Select the History item to connect to.
 - Press [DISP.] to confirm details of the connection history.

Register to Favorite

You can register the Wi-Fi connection history to Favorite.

- Display the Wi-Fi connection history.
- 2 Select the History item to register and then press ▶.
- 3 Enter a registration name and then select [Set].
 - How to enter characters (→Entering Characters: 90)
 - A maximum of 30 characters can be entered. A two-byte character is treated as two characters.

Editing Items Registered in Favorite

- Display items registered to Favorite.
 - | → [→] → [→] → [Wi-Fi] → [Wi-Fi Function] → [Select a destination from Favorite]
- 2 Select the History item to edit in Favorite and then press ▶.

[Remove from Favorite]

[Change the Order in Favorite]

Specify the destination location of the desired item to change the display order.

[Change the Registered Name]

Enter characters to change the registered name.

How to enter characters (→Entering Characters: 90)



- The number of items that can be saved in History is limited. Register frequently-used connection settings to Favorite.
- When [Reset] in the [Setup] ([Setting]) menu is used to reset the network settings, the content registered in History and Favorite is deleted.
- If the device you want to connect to (PC, etc.) is connected to a wireless access point other than the camera, you cannot connect the device to the camera using [Direct].

Change the Wi-Fi settings of the device you want to connect to so that the access point to be used is set to the camera. You can also select [New Connection] and reconnect the devices. (→Sending Images from the Camera to a PC: 637)

- It may be difficult to connect to networks to which many devices are connected.
 In these cases, connect using [New Connection].
- When the following function is being used, [Wi-Fi Function] is not available:
 - [Auto Transfer]

Fn Button Assigned with [Wi-Fi]

You can perform the following operations by pressing the Fn button assigned with [Wi-Fi] after connecting to Wi-Fi. (→Fn Buttons: 488)



[Terminate the Connection]

Terminates the Wi-Fi connection.

[Change the Destination]

Terminates the Wi-Fi connection, and allows you to select a different Wi-Fi connection.

[Change Settings for Sending Images]

Sets the image size, file format, and other items for sending recorded images.

(→Image Send Settings: 651)

[Register the Current Destination to Favorite]

Registers the current connection destination or method so that you can easily connect with the same connection settings next time.

[Network Address]

Displays the MAC address and IP address of the camera. (→[Network Address]: 654)

 Depending on the Wi-Fi function being used or the connection destination, you may not be able to perform some of these operations.

Send Settings and Selecting Images

- Image Send Settings: 651
- Selecting Images: 652

Image Send Settings

Set the size, file format, and other items for sending the image to the destination device.

After Wi-Fi connection, the send settings confirmation screen will be displayed, so press [DISP.].



Change the send settings.

[Size]

Resize the image to send.

[Original]/[Change] ([L], [M], [S], [XS], or [VGA])

[File Format]

Sets the file format of images to send.

[MP4(Lite)]/[JPG]/[RAW]

 This setting is possible when the destination supports the sending of RAW images from this camera. (Images That Can be Sent: 640)

Selecting Images

When sending by [Send Images Stored in the Camera to PC], select the images using the following procedure.

- Select [Single Select] or [Multi Select].
- 2 Select the image.

[Single Select] setting

- 1 Press **◄►** to select an image.
- 2 Press .

[Multi Select] setting

- 1 Press ▲ ▼ ◄► to select an image and then press (Repeat this)
 - To cancel the setting, press again.



 
2 Press [DISP.] to execute.

[Wi-Fi Setup] Menu

This configures the settings required for the Wi-Fi function.

The settings cannot be changed when connected to Wi-Fi.

Displaying the [Wi-Fi Setup] menu.





[Wi-Fi Frequency Bands]

This sets the frequency band used for direct connection with a smartphone.

[2.4GHz]: Connection uses the 2.4 GHz frequency band.

[5GHz]: Connection uses the 5 GHz frequency band.

 Depending on the region, local regulations, etc. may prohibit you from using the 5 GHz frequency band outdoors. If this is the case, when outdoors, connect to the smartphone using [2.4GHz] for the Wi-Fi connection.

[Priority of Remote Device]

This sets either the camera or the smartphone as the priority control device to be used during remote recording. (*) Operation Method During Remote Recording: 623)

[Wi-Fi Password]

You can use a password to connect for enhanced security. (→Connecting to a Smartphone ([Wi-Fi connection]): 612)

[PC Connection]

You can set the workgroup.

To send images to a PC, you need to connect to the same workgroup as the destination PC.

(The default setting is "WORKGROUP".)

- To return to the default settings, press [DISP.].

[Device Name/Password]

You can change the camera name (SSID) and password.

- Press [DISP.] to change the device name and password.
 How to enter characters (→Entering Characters: 90)
- The number of characters you can enter is a maximum of 32 for the device name and between 8 and 63 for the password.

[Wi-Fi Function Lock]

To prevent incorrect operation and use of the Wi-Fi function by a third party and to protect personal information in the camera and included with images, protect the Wi-Fi function with a password.

[Setup]: Enter any 4-digit numbers as the password.

• How to enter characters (→Entering Characters: 90)

[Cancel]: Cancel the password.

- Once a password is set, you are required to enter it each time you use the Wi-Fi function
- If you forget your password, you can use [Reset] in the [Setup] ([Setting]) menu to reset the network settings and thereby reset the password.

[Network Address]

Displays the MAC address and IP address of the camera.



- When the following function is being used, [Network Address] is not available:
 - Tethered recording

Connecting to Other Devices

This chapter describes connections with other devices, for example, HDMI devices, such as TVs, and PCs.

Connect using either the HDMI socket or the USB port on the camera.

- Connecting: 656
- Viewing on a TV: 658
- Importing Images to a PC: 662
- Storing on a Recorder: 667
- Tethered Recording: 668

Connecting

 


- Check the direction of the terminals and plug in/out straight holding onto the plug.

 (Inserting these at an angle may cause deformation or malfunction)
- Do not connect the cable to the wrong terminals. This may cause a malfunction.

HDMI socket


Connect the camera and HDMI device (TV, etc.) with a commercially available HDMI micro cable.



• Use a Premium High Speed HDMI micro cable (Type D-Type A plug) with the length less than 3 m (9.8 feet).

USB port

 Use a USB connection cable (commercially available) to connect the camera to a PC or recorder.



• Use a USB connection cable that complies with the USB standards.

Viewing on a TV

You can connect the camera to a TV or external monitor to view recorded pictures and videos.

Getting started:

- . Turn off the camera and TV.
 - Connect the camera and TV with a commercially available HDMI micro cable. (→HDMI socket: 656)
- 7 Turn on the TV.
- 3 Switch the TV input to HDMI input.
- 4 Turn on the camera.
- 5 Display the playback screen.
 - Press [].
 - The recorded images are displayed on the camera and TV.



 With the default settings, pictures are output at the optimal resolution for the connected TV.

The output resolution can be changed in [Output Resolution(Playback)]. (>[Output Resolution(Playback)]: 564)

 Depending on the aspect ratio, gray bands may be displayed on the top and bottom or the left and right of images.

You can change the band color in [Background Color(Playback)] in [HDMI Connection] of the [Setup] ([IN/OUT]) menu. (→[Background Color(Playback)]: 565)

- HDMI output is not possible if you connect a USB connection cable at the same time while [USB Mode] is set to [PC(Storage)].
- Change the screen mode on your TV if images are displayed with the top or bottom cut off.
- Please also refer to the operating instructions for the TV.

Using VIERA Link

VIERA Link (HDAVI Control™) is a function that allows you to use your remote control for the Panasonic TV for easy operations when the camera has been connected to a VIERA Link compatible device using an HDMI micro cable for automatic linked operations.

(Not all operations are possible.)



- To use VIERA Link, you need to also configure the settings on the TV.
 For the setting procedure, refer to the operating instructions for the TV.
- 1 Connect the camera to a Panasonic TV compatible with VIERA Link using a commercially available HDMI micro cable. (→HDMI socket: 656)
- 2 Turn on the camera.
- 3 Turn on the VIERA Link.
 - (F) → [] → [HDMI Connection] → [VIERA Link (CEC)] → [ON]
- 4 Display the playback screen.
 - Press [▶].
 - The recorded images are displayed on the TV. (The monitor of the camera will turn off.)
- 5 Operate with the remote control for the TV.

Power off link

If you turn off the TV with its remote control, the camera will also turn off.

Automatic input switching

If you turn on the camera and then press [], the input of the TV automatically switches to input to which this camera is connected.

Furthermore, when the TV power is in the standby state, it turns on automatically. (When "Power on link" on the TV is set to "Set")



- VIERA Link is a unique Panasonic function built on an HDMI control function using the standard HDMI CEC (Consumer Electronics Control) specification.
 Linked operations with HDMI CEC compatible devices made by other companies are not guaranteed.
- The camera supports "VIERA Link Ver.5". "VIERA Link Ver.5" is the standard for Panasonic's VIERA Link compatible devices. This standard is compatible with Panasonic's conventional VIERA Link devices.
- Operation using the buttons on the camera will be limited.

Importing Images to a PC

Copying Images to a PC: 663

Installing Software: 666

If you connect the camera to a PC, you can copy the recorded images to the PC.

You will need to use software that is compatible with the recorded video format in order to play back or edit video on the PC.

You can also use software for processing and editing RAW images.

(→Installing Software: 666)

Copying Images to a PC

After connecting to the PC, you can copy the recorded images by dragging files and folders on this camera to the PC.



• The camera can be connected to a PC running any of the following OSs which can detect mass storage devices.

Supported OS

Windows: Windows 10. Windows 11

Mac: macOS 12.0 to 12.7, 13.0 to 13.6, 14.0 to 14.2

· Mac:

Supported by "Final Cut Pro X".


For details on "Final Cut Pro X", please contact Apple Inc.

Getting started:

- . Turn on the camera and PC.
 - Connect the camera and PC with the USB connection cable (commercially available). (→USB port: 657)
- Press ▲ ▼ to select [PC(Storage)] and then press 🚇. • Windows: The drive ("LUMIX") is displayed in [This PC].

 - Mac: The drive ("LUMIX") is displayed on the desktop.
- 3 Drag the files and folders from the camera to the PC.

Folder Structure Inside Card

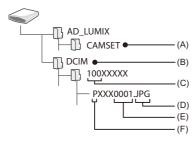

- (A) The camera's setup information
- (B) Images
- (C) Folder number
- (D) JPG: JPEG format pictures RW2: RAW format pictures

MP4: MP4(Lite) videos, MP4 videos

MOV: MOV videos

- (E) File number
- (F) Color space

P: sRGB

_: AdobeRGB



 If [USB Mode] is set to [PC(Storage)] in the [Setup] ([IN/OUT]) menu, the camera will be automatically connected to the PC without the [USB Mode] selection screen being displayed. (→[USB Mode]: 563)



- Take care not to turn off the camera while images are being imported.
- After importing of the images is completed, perform the operation to safely remove the USB connection cable on the PC.
- Turn off the camera and disconnect the USB connection cable before removing the card from the camera. Otherwise, the recorded data may be damaged.

Installing Software

Install the software to process and edit RAW images.



- To download the software, your PC needs to be able to connect to the internet.
- Supported OSs are current as of May 2024 and are subject to change.

SILKYPIX Developer Studio SE

This software processes and edits RAW images.

Edited images can be saved in a format (JPEG, TIFF, etc.) that can be displayed on a PC.

Check the following site and then download and install the software:

http://www.isl.co.jp/SILKYPIX/english/p/

Operating environment

Supported OS

Windows: Windows 10 (64 bit), Windows 11 Mac: macOS 10.13 to 10.15, 11, 12, 13, 14

 For more information such as how to use "SILKYPIX Developer Studio", refer to the Help or the Ichikawa Soft Laboratory's support site.

Storing on a Recorder

By connecting the camera to a Panasonic Blu-ray disc recorder or DVD recorder, you can store the pictures and videos.

Getting started:

- Turn on the camera and recorder.
 - Connect the camera and recorder with the USB connection cable (commercially available). (→USB port: 657)
 - 657)

 2 Press ▲ ▼ to select [PC(Storage)] and then press 📾 .
- 3 Operate the recorder to store the images.



 If [USB Mode] is set to [PC(Storage)] in the [Setup] ([IN/OUT]) menu, the camera will be automatically connected to the recorder without the [USB Mode] selection screen being displayed. (→[USB Mode]: 563)



- Take care not to turn off the camera while storage is in progress.
- Images such as 4K videos may not be supported depending on your recorder.
- Turn off the camera and disconnect the USB connection cable before removing the card from the camera. Otherwise, the recorded data may be damaged.
- For the storage and playback procedures, refer to the operating instructions for the recorder

Tethered Recording

- Installing Software: 669
- Operating the Camera from a PC: 670

If you install the "LUMIX Tether" camera control software on your PC, you can connect the camera to the PC via USB and then control the camera from the PC and record while checking the live view on the PC screen (tethered recording).

In addition, you can output via HDMI to an external monitor or TV during tethered recording.

Installing Software

"LUMIX Tether"

This software is for controlling the camera from a PC.

It allows you to change various settings and to record remotely and then save the images to the PC.

Check the following site and then download and install the software:

https://panasonic.jp/support/global/cs/soft/download/d_lumixtether.html (English only)

Operating environment

Supported OS

Windows: Windows 10 (64 bit), Windows 11

Mac: macOS 12.0 to 12.7, 13.0 to 13.6, 14.0 to 14.2

Interface

USB port (SuperSpeed USB (USB 3.1))



- Supported OSs are current as of May 2024 and are subject to change.
- To download the software, your PC needs to be able to connect to the internet.
- For how to operate the software, refer to the operation guide for "LUMIX Tether".

Operating the Camera from a PC

Getting started:

- . Turn on the camera and PC.
- Install "LUMIX Tether" on PC.
 - Connect the camera and PC with the USB connection cable (commercially available). (→USB port: 657)
 - Press ▲ ▼ to select [PC(Tether)] and then press .

 [□] is displayed on the camera's screen.
- 3 Use "LUMIX Tether" to operate the camera from the PC.



 If [USB Mode] is set to [PC(Tether)] in the [Setup] ([IN/OUT]) menu, the camera will be automatically connected to the PC without the [USB Mode] selection screen being displayed. (→[USB Mode]: 563)



 The Wi-Fi/Bluetooth functions are not available while there is a PC connection with [PC(Tether)].

Materials

This chapter describes procedures to try when there is a problem and provides information about the specifications for your reference.

- Digital Camera Accessory System: 672
- Using Optional Accessories: 673
- Monitor Displays: 676
- Message Displays: 694
- Troubleshooting: 698
- Cautions for Use: 713
- Number of Pictures That Can Be Taken and Available Recording Time with the Battery: 723
- Number of Pictures That Can Be Taken and Video Recording Time with Cards: 728
- List of Default Settings/Custom Saving/Settings Available for Copying:
 736
- List of Functions That Can Be Set in Each Recording Mode: 758
- Specifications: 765
- Trademarks and Licenses: 784

Digital Camera Accessory System

(Product numbers correct as of May 2024.)

Product name	Product number
Battery Pack	DMW-BLK22
Battery Charger	DMW-BTC15*1/DMW-BTCD15*2
AC Adaptor	DMW-AC11*3
DC Coupler	DMW-DCC18*2
LED Video Light	VW-LED1
Stereo Shotgun Microphone	DMW-MS2
Stereo Microphone	VW-VMS10
Tripod Grip	DMW-SHGR2
Tripod Adaptor	DMW-TA1*4

^{*1} Supplied with an AC adaptor, an AC cable/AC mains lead and a USB connection cable. (Charging time: Approx. 175 min)

- Some optional accessories may not be available in some countries.
- For lens-related optional accessories such as compatible lenses and filters, refer to our catalogs/website, etc.
- For the latest information on optional accessories, refer to our catalogs/website, etc.

^{*2} A separately available AC adaptor and USB connection cable are required. It is recommended to use the Panasonic AC Adaptor (DMW-AC11: optional).

^{*3} Supplied with an AC cable/AC mains lead and USB connection cable.

^{*4} Use if the attached lens interferes with the tripod head.

Using Optional Accessories

- Tripod Grip (Optional): 674
- DC Coupler (Optional): 675
 - For information on the external microphone (→External Microphones (Optional): 368)
 - Some optional accessories may not be available in some countries.

Tripod Grip (Optional)

Attach a Tripod Grip (DMW-SHGR2: optional) to use it as a grip for recording while walking, a tripod, or a Shutter Remote Control.

• Connect the grip cable to the [USB] socket on the camera.





- Always use a genuine Panasonic Tripod Grip (DMW-SHGR2: optional).
- Do not carry just by holding the hand strap when the camera is attached.
- For details, refer to the operating instructions for the Tripod Grip.

DC Coupler (Optional)

Using a DC Coupler (DMW-DCC18: optional) means you do not have to worry about the remaining battery charge.

 


- A separately available AC adaptor and USB connection cable are required. It is recommended to use the Panasonic AC Adaptor (DMW-AC11: optional).
- For details, refer to the operating instructions for the AC Adaptor and DC Coupler.

Monitor Displays

- Recording Screen: 676
- Playback Screen: 689
- The screen is an monitor display example of when [Monitor Disp. Set] is set to [[.....]].

Recording Screen



(1)



White balance (→White Balance (WB): 299)/

Color Temperature (→Color Temperature Setting: 304)

White Balance Bracket, White Balance Bracket (Color Temperature) (→ [More Settings] (White Balance Bracket): 24 AWB + AWB - AWB - AWB - AWB - AWB lock setting (→ [AWB Lock Setting]: 521) AWBL AWB lock setting (→ [AWB Lock Setting]: 521) Photo Style (→ [Photo Style]: 307) *EXPS Filter setting (→ [Filter Settings]: 320)/ Filter effect adjustment (→ Adjusting the Filter Effect: 322)
AWB+ AWB- Adjusting the white balance (→Adjusting the White Balance: 305) AWBL AWB lock setting (→[AWB Lock Setting]: 521) **STD. Photo Style (→[Photo Style]: 307) *EXPS Filter setting (→[Filter Settings]: 320)/ Filter effect adjustment (→Adjusting the Filter Effect: 322)
AWB+ AWB- 305) AWBL AWB lock setting (→[AWB Lock Setting]: 521) STD. Photo Style (→[Photo Style]: 307) *EXPS Filter setting (→[Filter Settings]: 320)/ Filter effect adjustment (→Adjusting the Filter Effect: 322)
Photo Style (→[Photo Style]: 307) *EXPS Filter setting (→[Filter Settings]: 320)/ Filter effect adjustment (→Adjusting the Filter Effect: 322)
*EXPS Filter setting (→ [Filter Settings]: 320)/ Filter effect adjustment (→ Adjusting the Filter Effect: 322)
EXPS Filter effect adjustment (→Adjusting the Filter Effect: 322)
Filter effect adjustment (→Adjusting the Filter Effect: 322)
MON LUT HDMI VLog LUT View Assist (→ [Log View Assist]: 416)
MON MODE2 HDMI HLG View Assist (→[HLG View Assist]: 420)
Picture quality (→[Picture Quality]: 110), Picture size (→[Picture Quality]: 110)
Size]: 108)
HyM HyS HyXS HyXS Hybrid Zoom (Photo) (→[Hybrid Zoom(Photo)]: 194)
Hybrid Zoom (Video) (→[Hybrid Zoom(Video)]: 201)
CrM CrS CrXS Crop Zoom (Photo) (→[Crop Zoom(Photo)]: 191)
Crop Zoom (Video) (→[Crop Zoom(Video)]: 197)
Recording file format (→[Rec. File Format]: 122)/
Recording quality (→[Rec Quality]: 123)
MOV Recording file format (→ [Rec. File Format]: 122)/
4K 420/10-L Recording quality (→ [Rec Quality]: 123)
59.94p Recording frame rate (→[Rec Quality]: 123)/
60/59.94p Slow & Quick setting (→Slow & Quick Video: 393)
AFS AFC MF Focus mode (→ Selecting the Focus Mode: 139, Record Usin
MF: 183)
AFS AFC → [Focus Limiter]: 151)
Focus Bracket (→[More Settings] (Focus Bracket): 247)
AFL AF Lock (→Locking Focus and Exposure (AF/AE Lock): 290)

Focus ring lock (→[Focus Ring Lock]: 526)
Focus Peaking (→[Focus Peaking]: 188)
Image area of video (→[Image Area of Video]: 136)
AF mode (→ Selecting the AF Mode: 159)
AF detection setting (→Automatic Detection: 162)
Drive mode (→Selecting the Drive Mode: 205)
Connected to Wi-Fi (→Checking operation of the Wi-Fi and
Bluetooth functions: 588)
Connected to Bluetooth (→Connecting to a Smartphone
(Bluetooth Connection): 606)
Location logging (→[Location Logging]: 631)
Image stabilizer (→Image Stabilizer: 255)
Camera shake alert (→ Using the Image Stabilizer: 257)

(2)

ప 10	Self-timer (→Recording Using the Self-timer: 236)
TI.	Silent mode (→[Silent Mode]: 249)
APS-C PIXEL PIXEL	Image area of video (→[Image Area of Video]: 136)
2,0x	Anamorphic Desqueeze Display (→[Anamorphic Desqueeze
2.0x + ○→	Display]: 423)
■ H	Overlay indication (→[Sheer Overlay]: 542)
MON LUT HDMI V-Log	LUT View Assist (→[Log View Assist]: 416)
C.Shd.	Color shading compensation (→[Color Shading Compensation]:
	335)

(3)

INT. EXT.	Built-in microphone, External microphone (→[Sound Rec Level
	Disp.]: 361, External Microphones (Optional): 368)
96kHz/24bit	Sound recording quality (→[Sound Rec Quality]: 365)
LMT ON LMT OFF	Sound recording level limiter (→[Sound Rec Level Limiter]: 366)
₽	Mute (→[Mute Sound Input]: 362)
Sound recording level (→[Sound Rec Level Disp.]: 361)	

Exposure meter (→[Expo.Meter]: 541)

(4)


,,,A),	Histogram (→[Histogram]: 536)
L 1	AF area (→AF Area Operations: 177)
+	Spot metering target (→[Metering Mode]: 267)
+	Center marker (→[Center Marker]: 547)
ల 10	Self-timer (→Recording Using the Self-timer: 236)
© <u>X</u>	Operation lock (→[Operation Lock Setup]: 531)
24m59s	Elapsed recording time (→Basic Video Operations: 113)
TC 00:00:00:00	Time code (→Time Code: 373)
đ	Image being sent (→[Auto Transfer]: 629)

(5)

	Focus (turns green) (→Basic Picture Operations: 103)/
•	Recording state (turns red) (→High Resolution mode: 215,
	Basic Video Operations: 113)
LOW	Focus (in low light AF situations) (→Low illumination AF: 143)
STAR	Focus (Starlight AF) (→Starlight AF: 143)
ia Pas	Recording mode (→Selecting the Recording Mode: 70)
M # Sage P	Recording mode (7 Selecting the Recording Mode: 70)
P./	Program Shift (→Program Shift: 271)

⊙ ()	Metering mode (→[Metering Mode]: 267)
AEL	AE Lock (→Locking Focus and Exposure (AF/AE Lock): 290)
60	Shutter speed (→Basic Picture Operations: 103)
F3.5	Aperture value (→Basic Picture Operations: 103)
F3.5	Aperture Bracket (→[More Settings] (Aperture Bracket): 246)
BKT +1/3	Exposure compensation value (→Exposure Compensation: 286)
	Exposure Bracket (→[More Settings] (Exposure Bracket): 245)
MM+1	Manual Exposure Assist (→Manual Exposure Assist: 281)
ıso100	ISO sensitivity (→ISO Sensitivity: 292)/ Dual Native ISO setting (→[Dual Native ISO Setting]: 296)
i	Card access indication (turns red) (→Basic Video Operations: 113)
8	No card
FULL	Card full
999	Number of pictures that can be taken (→Number of Pictures That Can Be Taken and Video Recording Time with Cards: 728)
r20	Number of pictures that can be taken continuously (→Number of Pictures That Can Be Taken Continuously: 212)
24m59s	Video recording time (→ Video Recording Time: 729)
(IIII)	Battery indication (→Power Indications: 46)
ţiiii	Power supply (→Using the Camera While Supplying It with Power (Supplying Power): 45)

 (6)



Touch Tab (→[Touch Settings]: 530)

Fn	
Fn2	Fn button (→Use [Fn2] to [Fn6] (Touch Icons): 501)
Τ.Φ.	Crop Zoom (Photo) (→[Crop Zoom(Photo)]: 191)/
₩ \$	Crop Zoom (Video) (→[Crop Zoom(Video)]: 197)
↓ AF	Touch AF, Touch Shutter (→Touch AF/Touch Shutter: 97)
7	Exposure compensation (→Exposure Compensation: 286)
L ME	Touch AE (→Touch AE: 100)
PEAK	Focus Peaking (→[Focus Peaking]: 188)

(→Setting a Filter with Touch Operation: 323)/(22) / 32 (→Operations During Video Recording: 345)	
©	Filter effect adjustment (→Adjusting the Filter Effect: 322)
ф	Filter on/off (→Setting a Filter with Touch Operation: 323)
EXPS	Filter setting (→[Filter Settings]: 320)
F	Aperture value (→Operations During Video Recording: 345)
SS	Shutter speed (→Operations During Video Recording: 345)
Z	Exposure compensation (→Operations During Video Recording: 345)
ISO	ISO sensitivity (→Operations During Video Recording: 345)
ŪdB	Sound recording level adjustment (→Operations During Video Recording: 345)
\$&Q	Slow & Quick setting (→Operations During Video Recording: 345)

Control Panel



(1)

P	Recording mode (→Selecting the Recording Mode: 70)
1/60	Shutter speed (→Basic Picture Operations: 103)
F3.5	Aperture value (→Basic Picture Operations: 103)
(IIII) †	Battery indication (→Power Indications: 46)/
	Power supply (→Using the Camera While Supplying It with
	Power (Supplying Power): 45)

(2)

100	ISO sensitivity (→ISO Sensitivity: 292)/ Dual Native ISO setting (→[Dual Native ISO Setting]: 296)
±0 T‡	Exposure compensation value (→Exposure Compensation:
	286)/
	Manual Exposure Assist (→Manual Exposure Assist: 281)


(3)

	Drive mode (→Selecting the Drive Mode: 205)
AFS	Focus mode (→ Selecting the Focus Mode: 139, Record Using MF: 183)
	AF mode (→Selecting the AF Mode: 159)
FINE	Picture quality (→[Picture Quality]: 110)
APS-C PIXEL PIXEL MOV 420/10-L 4K 30P	Image area of video (→[Image Area of Video]: 136)/ Recording file format (→[Rec. File Format]: 122)/ Recording quality (→[Rec Quality]: 123)
3:2	Picture size/Aspect ratio (→[Picture Size]: 108)
30fps	Slow & Quick setting (→Slow & Quick Video: 393)
₹8	Wi-Fi/Bluetooth connection state (→Checking operation of the
	Wi-Fi and Bluetooth functions: 588)
Fn¶	Fn button settings (→Fn Buttons: 488)

(4)

\$STD.	Photo Style (→[Photo Style]: 307)
AWB	White balance (→White Balance (WB): 299)
ioFF	i.Dynamic Range (→[i.Dynamic Range]: 289)
0	Metering mode (→[Metering Mode]: 267)
2	No card
FULL	Card full
999	Number of pictures that can be taken (→Number of Pictures
999	That Can Be Taken and Video Recording Time with Cards: 728)
r20	Number of pictures that can be taken continuously (→Number of
	Pictures That Can Be Taken Continuously: 212)
R24m59s	Video recording time (→Video Recording Time: 729)
	No card

Control Panel (Creative Video Mode/Slow & Quick Mode)

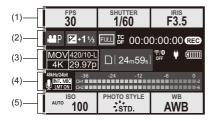

(1)

FPS 60	Frame rate (→[Rec Quality]: 123)/ Slow & Quick setting (→Slow & Quick Video: 393)
SHUTTER 1/60	Shutter speed (→ Shutter-Priority AE Mode: 276)
F3.5	Aperture value (→Aperture-Priority AE Mode: 273)

(2)

≜ ₽	Exposure mode (→Setting the Exposure for Recording Videos: 343)
2 +1 ⅓ MM+1	Exposure compensation value (→Exposure Compensation: 286)/ Manual Exposure Assist (→Manual Exposure Assist: 281)
FULL APS-C PIXEL PIXEL	Image area of video (→[Image Area of Video]: 136)
TC 00:00:00:00	Time code (→Time Code: 373)
REO	Recording state (→Screen Displays While Video Recording: 115)

(3)

MOV 420/10-L 4K 29.97p	Recording file format (→[Rec. File Format]: 122)/
	Recording quality (→[Rec Quality]: 123)
24m59s	Video recording time (→Video Recording Time: 729)
₹	Wi-Fi/Bluetooth connection state (→Checking operation of the
	Wi-Fi and Bluetooth functions: 588)
 ₩	Battery indication (→Power Indications: 46)/
	Power supply (→Using the Camera While Supplying It with
	Power (Supplying Power): 45)

(4)


INT. MIC EXT. MIC	Built-in microphone, External microphone (→[Sound Rec Level Disp.]: 361, External Microphones (Optional): 368)
96kHz/24bit	Sound recording quality (→[Sound Rec Quality]: 365)
LMT ON LMT OFF	Sound recording level limiter (→[Sound Rec Level Limiter]: 366)
<u> </u>	Mute (→[Mute Sound Input]: 362)

Sound recording level (→[Sound Rec Level Disp.]: 361)

(5)

AUTO 100	ISO sensitivity (→ISO Sensitivity: 292)/
	Dual Native ISO setting (→[Dual Native ISO Setting]: 296)
PHOTO STYLE	Photo Style (→[Photo Style]: 307)/
MON LUT HDMI V-Log	LUT View Assist (→[Log View Assist]: 416)/
MON MODE2 HDMI HLG	HLG View Assist (→[HLG View Assist]: 420)
AWB	White balance (→White Balance (WB): 299)

Playback Screen

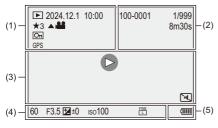

(1)

	Playback mode (→[Playback Mode]: 479)
2024.12. 1 10:00	Recording date and time (→Setting the Clock (When Turning On for the First Time): 63)
* 3	Rating (→[Rating]: 483)
A 1888	Video playback (→Playing Back Videos: 446)
Оп	Protected picture (→[Protect]: 483)
GPS	Location logging (→[Location Logging]: 631)
	Obtaining information

(2)

100-0001	Folder/file number (→[Folder / File Settings]: 556)
1/999	Image number/Total number of images
9 pic.	Number of group images/
9 files	Number of files
8m30s	Video recording time (→Playing Back Videos: 446)
➤ XXmXXs ■ XXs	Slow & Quick video (→Slow & Quick Video: 393)
MON LUT HDMI V-Log	LUT View Assist (→[Log View Assist]: 416)
MON MODE2 HDMI HLG	HLG View Assist (→[HLG View Assist]: 420)

(3)

•	Playback (video) (→Playing Back Videos: 446)
	Group images (→Group Images: 461)
TC 00:00:00:00	Time code (→Time Code: 373)
96kHz/24bit	Sound recording quality (→[Sound Rec Quality]: 365)
MOV	Recording file format (→[Rec. File Format]: 122)/
4K 420/10-L	Recording quality (→[Rec Quality]: 123)
59.94p	Frame rate (→[Rec Quality]: 123)/
60/59.94p	Slow & Quick setting (→Slow & Quick Video: 393)
FULL APS-C	Image area of video (→[Image Area of Video]: 136)
<u> </u>	Wi-Fi/Bluetooth connection state (→Checking operation of the
₹ 🕅	Wi-Fi and Bluetooth functions: 588)
I	Silent mode (→[Silent Mode]: 249)


(4)

Recording information

(5)

(IIII)	Battery indication (→Power Indications: 46)
	Power supply (→Using the Camera While Supplying It with
(IIIII	Power (Supplying Power): 45)

Detailed information display

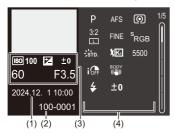

- (1) Recording date and time (→ Setting the Clock (When Turning On for the First Time): 63)
- (2) Folder/file number (→[Folder / File Settings]: 556)
- (3) Recording information (basic)
- (4) Recording information (advanced)

Histogram display


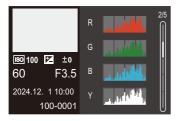



Photo Style display



White balance display

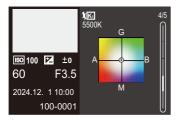

Lens information display

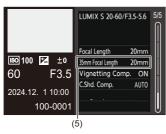

(5) The focal length corresponding to the angle of view when using a full-frame lens with the [Aspect Ratio] set to [3:2]

Message Displays

Meanings of main messages displayed on the camera screen, and response methods.



[Memory Card Error]/[Format this card?]

It is a format that cannot be used with the camera.
 Either insert another card, or back up any necessary data before formatting.
 () [Card Format]: 555)

[Memory Card Error]/[This memory card cannot be used]

Use a card compatible with the camera. (→Memory Cards That Can Be Used: 23)

[Insert memory card again.]/[Try another card]

- . Unable to access the card. Reinsert the card.
- Insert a different card

[Read Error]/[Write Error]/[Please check the card]

- · Failure to read or write data.
 - Turn off the camera, reinsert the card, and then turn it on again.
- The card may be broken.
- Insert a different card

[Recording was cancelled due to the limitation of the writing speed of the card]

- The card does not meet the writing speed requirements for recording.
 Use a card of a supported Speed Class. (→SD Cards That Can Be Used with This Camera: 24)
- If the recording stops even when you are using a card that meets the specified Speed Class rating, the data writing speed of the card is getting slow.
 We recommend backing up data, and formatting. (→[Card Format]: 555)

Lens

[The lens is not attached properly. Do not push lens release button while lens is attached.]

 Remove the lens once, and then attach it again without pressing the lens release button. (→Attaching a Lens: 54)

Turn on the camera again, and if it is still displaying, contact the dealer.

[Lens attachment failed. Please make sure the lens is attached correctly.]

 Remove the lens from the camera body and gently wipe the contacts on the lens and the camera body using a dry cotton swab.

Attach the lens, turn on the camera again, and if it is still displaying, contact the dealer.

Battery

[This battery cannot be used]

- Use a genuine Panasonic battery.
 If this message is displayed even when a genuine Panasonic battery is used, contact the dealer.
- If the terminal of the battery is dirty, remove the dirt and dust from the terminal.

[The life span of this battery is starting to decline and should be considered for replacement. To maintain reliability refrain from using this battery.]

• The battery has deteriorated. Try not to use that battery.

Others

[Some pictures cannot be deleted]/[This picture cannot be deleted]

Images that do not comply with the DCF standard cannot be deleted.
 Back up any necessary data before formatting the card. (→[Card Format]: 555)

[A folder cannot be created]

 The maximum number of folder numbers has been reached, so new folders cannot be created

After formatting the card, execute [File Number Reset] in the [Setup] ([Card/File]) menu. (→[File Number Reset]: 558)

[Please turn camera off and then on again]/[System Error]

Turn off and on the camera.
 If the message is displayed even when doing this several times, contact the dealer.

Troubleshooting

- Power, Battery: 698
- Recording: 699
- Video: 704
- Playback: 705
- Monitor: 706
- Wi-Fi Function: 707
- TV, PC: 711
- Others: 712

First, try out the following procedures.

If the problem is not resolved, it may be improved by selecting [Reset] (→[Reset]: 89) on the [Setup] ([Setting]) menu.

Power, Battery

The camera turns off automatically.

• [Power Save Mode] is enabled. (→[Power Save Mode]: 48)

The battery becomes flat too quickly.

- When connected to Wi-Fi, the battery drains quickly.
 Turn the camera off frequently such as by using [Power Save Mode] (→[Power Save Mode]: 48).
- When [Continuous AF] is set to [MODE2], the battery drains faster. Battery
 consumption can be reduced by setting to [MODE1] or [OFF]. (→[Continuous AF]:
 349)

Recording

Recording stops before finishing. Cannot record. Cannot use some functions.

- The temperature of the camera rises more readily in the following circumstances: when the ambient temperature is high, during continuous use such as when recording high-definition video or outputting via HDMI. When the temperature of the camera rises, [] appears blinking on the screen. If you continue to use the camera, a message indicating that the camera cannot be used is displayed on the screen and some functions, such as recording and HDMI output, will be stopped. Wait for the camera to cool down and for the message indicating that the camera can be used again. When the message indicating that it can be used again is displayed, turn the camera off then on again.
- If you continue to use the camera even after some functions have been stopped, depending on the ambient temperature and the operating status, the temperature of the camera may not cool down and the power may be turned off automatically.

Cannot record images. The shutter will not operate immediately when the shutter button is pressed.

 If [Focus/Shutter Priority] is set to [FOCUS], then recording will not take place until focus is achieved. (→[Focus/Shutter Priority]: 524)

The recorded image is whitish.

- Images may look whitish when the lens or image sensor gets dirty with fingerprints or similar
 - If the lens is dirty, turn the camera off, then wipe the lens surface with a soft, dry cloth.

For information about how to clean the image sensor (→Dirt on the Image Sensor: 714)

The recorded image is too bright or dark.

 Ensure AE Lock is not set where it is not appropriate. (→Locking Focus and Exposure (AF/AE Lock): 290)

Multiple images are recorded at once.

- When drive mode is set to [] (Burst Shot), pressing and holding the shutter button will take burst pictures. (*) Selecting the Drive Mode: 205)
- When [Bracketing] is set, then pressing the shutter button records multiple images while automatically changing the settings. (**) Bracket Recording: 241)

The subject is not focused properly.

- · Confirm the following details:
 - Is the subject outside of the focus range?
 - Is [Shutter AF] set to [OFF]? (→[Shutter AF]: 527)
 - Is [Focus/Shutter Priority] set to [RELEASE]? (→[Focus/Shutter Priority]: 524)
 - Is AF Lock (→Locking Focus and Exposure (AF/AE Lock): 290) set where it is not appropriate?
 - Is [Focus Limiter] set to [ON]? (→[Focus Limiter]: 151)
 - Is [AF Micro Adjustment] set? (→[AF Micro Adjustment]: 155)

Cannot focus or zoom with the lens.

- Confirm the following details:
 - Is [Focus Ring Lock] set to [ON]? (→[Focus Ring Lock]: 526)

The recorded image is blurred. The image stabilizer is not effective.

 The shutter speed will become slower and the image stabilizer function may not work properly when recording in dark places.

In these cases, use a tripod and the self-timer when recording.

The recorded image looks rough. Noise appears on the picture.

- . Try the following:
 - Reduce the ISO sensitivity. (→ISO Sensitivity: 292)
 - Increase [Noise Reduction] of [Photo Style] to the positive direction, or adjust each item other than [Noise Reduction] to the negative direction. (→Adjusting Image Quality: 312)
- When the camera is used continuously, the temperature inside the camera may rise and this may cause lower image quality. We recommend turning off the camera whenever you are not actually recording.

The subject appears distorted on the image.

When a moving subject is recorded, the subject may appear distorted in the picture.
 This is a characteristic of the CMOS sensor that is the image sensor of the camera, and is not a malfunction.

Striping or flicker may appear under lighting such as fluorescent or LED lighting.



- This is characteristic of CMOS sensors which serve as the camera's pickup sensors.
 This is not a malfunction.
- · Lowering the shutter speed may reduce the effect of the horizontal stripes.
- If flicker or horizontal stripes are noticeable when recording video, this can be
 mitigated by fixing the shutter speed.
 Either set [Flicker Decrease (Video)] (→[Flicker Decrease (Video)]: 377), or fix the
 shutter speed with the [△M]/[S&Q] mode (→Recording Modes Specifically for
 Video (Creative Video/S&Q): 341).
- You can make finer adjustments to shutter speed by using [Synchro Scan(Photo)] or [Synchro Scan(Video)]. (*)[Synchro Scan(Photo)]: 251, [Synchro Scan(Video)]: 425)

Stripes appear in high ISO sensitivity.

Stripes may appear in high ISO sensitivity or depending on the lens you use.
 Decrease the ISO sensitivity. (→ISO Sensitivity: 292)

The brightness or coloring of the recorded image is different from the actual scene.

- When recording under lighting such as fluorescent or LED lighting, increasing the shutter speed may introduce slight changes to brightness or coloring.
 These are a result of the characteristics of the light source and do not indicate a malfunction
- When recording subjects in extremely bright locations or recording under lighting such as fluorescent, LED, mercury, or sodium lighting, the coloring or screen brightness may change or horizontal striping may appear on the screen.

Bright spot not in subject is recorded.

Pixels may be missing from the image sensor.
 Perform [Pixel Refresh]: 569)

Video

Cannot record videos.

- Try again after either returning the [System Frequency] to the original setting or inserting another card.
- When using a large capacity card, you may not be able to record for a while after turning on the camera.

In videos, abnormal clicking and buzzing sounds are recorded. The recorded audio is very quiet.

- Depending on the recording conditions or the lens used, the sound of aperture and focus actions may be recorded in videos.
 - You can set the focus operation during video recording to [OFF] in [Continuous AF] (>[Continuous AF]: 349).
- · Do not block the microphone hole during video recording.

An operation sound is recorded in a video.

 We recommend setting the [☆M]/[S&Q] mode and recording with touch operation if you are bothered about the operation sounds during recording. (→Operations During Video Recording: 345)

Playback

Cannot play back. There are no recorded pictures.

- Folders and images processed on a PC cannot be played on the camera.
- Some images are not displayed when the [Playback Mode] is set. Set to [Normal Play]. (>[Playback Mode]: 479)
- Videos recorded with a different [System Frequency] setting cannot be played back.
 Return the [System Frequency] setting to the one you used during the recording.
 [System Frequency]: 120)

Monitor

The monitor turns off when the camera is turned on.

If no operations are performed during the set time period, [Auto Monitor Off] (→[Auto Monitor Off]: 49) is activated, and the monitor turns off.

It may flicker for an instant or the brightness of the screen may change significantly for an instant.

 This occurs when the shutter button is pressed halfway, or when the subject brightness changes, making the lens aperture change.
 This is not a malfunction.

Wi-Fi Function

A Wi-Fi connection cannot be established. Radio waves get disconnected. Wireless access point is not displayed.

General tips for using a Wi-Fi connection

- Use within the communication range of the device to be connected.
- Usage near devices that utilize the 2.4 GHz frequency such as microwave ovens and cordless telephones may result in the radio wave being lost.

Use the camera at a sufficient distance from these devices.

 When the remaining battery level is low, it may not be possible to connect to or maintain communication with other devices.

(A message such as [Communication error] is displayed.)

If you place the camera on a metal table or shelf, the radio waves may be adversely
affected. In such cases, you may not be able to establish a connection.
 Move the camera away from the metal surface.

Wireless access point

- Confirm that the connected wireless access point can be used.
- Confirm the radio wave conditions of the wireless access point.
 - Move the camera closer to the wireless access point.
 - Change the location and angle of the wireless access point.
- Depending on the wireless access point, the radio wave may not be displayed even though it is present.
 - Turn off and then on the wireless access point.
 - If the wireless channel of the wireless access point cannot be set automatically, manually set the channel supported by the camera.
- If the wireless access point SSID is set not to broadcast, it may not be detected.
 Enter the SSID, and then connect. (→Connecting by Manual Input: 645)
- Depending on the wireless access point, connection may be automatically disconnected after specific time has passed.
 Reconnect the connection again.

Cannot connect with a wireless access point.

- The wireless access point information set on the camera is wrong.
 Check the authentication type and encryption key. (→Connecting by Manual Input: 645)
- Radio waves from other devices may block the connection to a wireless access point.

Check the status of other devices that are connected to the wireless access point as well as the status of other wireless devices.

Wi-Fi connection on an iOS device fails.

Follow the message displayed to allow connection to the camera.

If you still cannot connect, select the SSID of the camera on the Wi-Fi setup screen of the smartphone to connect.

If the SSID is not displayed, turn off and on the camera, then perform the Bluetooth connection settings again.

Wi-Fi connection with a smartphone is not possible.

 Change the access point to connect to in the smartphone Wi-Fi settings to the camera

When trying to connect to a PC by Wi-Fi, this does not recognize the user name and password, and connection is not possible.

 Depending on the version of the OS, there are two types of user account (local account/Microsoft account).

Ensure you use the local account user name and password.

The PC is not recognized when I use a Wi-Fi connection. The camera cannot be connected to the PC using the Wi-Fi function.

- At the time of purchase, this camera is set to use a workgroup name of "WORKGROUP".
 - If you have changed the workgroup name of the PC, this will not be recognized. In the [Wi-Fi Setup] menu, [PC Connection], change the workgroup name of the PC to which to connect. (→[PC Connection]: 654)
- · Check that the login name and password are correctly typed.
- When the clock settings of the PC connected to the camera differs considerably from those of the camera, the camera cannot be connected to the PC depending on the OS.

Sending of videos/images fails midway. There are some videos/ images that cannot be sent.

- Is the size of the image too large?
 - Reduce the image size at [Size] (→[Size]: 651), and then send.
 - Transmit after dividing the video with [Video Divide] (→[Video Divide]: 453).
- File format of the video that can be sent differs depending on the destination.
 (→Images That Can be Sent: 640)
- If sending of videos/images fails, we recommend transferring them over a USB connection cable.

I have forgotten the password for the Wi-Fi.

In the [Setup] ([Setting]) menu, [Reset], reset network settings. (→ [Reset]: 89)
 However, all information set in [Wi-Fi Setup] and [Bluetooth] will also be reset.

Wi-Fi/Bluetooth function stops. Unusable.

When the temperature of the camera rises while using the Wi-Fi/Bluetooth function,
 [
] appears blinking on the screen. [
] is displayed steadily if you continue to
 use the camera and the Wi-Fi/Bluetooth function stops. (The settings cannot be
 changed either.)

You can use the Wi-Fi/Bluetooth function again when the camera temperature cools and the [) indicator disappears. If the setting for [Bluetooth] was [ON] before the function stopped, the camera automatically reconnects.

TV. PC

The TV images are displayed with gray bands.

 Depending on the [Aspect Ratio], gray bands may be displayed on the top and bottom or the left and right of the images. You can change the band color in [Background Color(Playback)] in [HDMI Connection] of the [Setup] ([IN/OUT]) menu.
 () [Background Color(Playback)]: 565)

Images cannot be imported even when connected to a PC.

- Set the [USB Mode] of the camera to [PC(Storage)]. (→[USB Mode]: 563)
- · Turn the camera off and on.

Others

When the camera is shaken, a rattling sound is heard from the camera.

• The sound is caused by the in-body stabilizer. This is not a malfunction.

There is rattling noise from the lens when the camera is turned on or off, or when the camera is swung. There is a sound from the lens when recording.

 This is the sound of the internal lenses moving or the aperture operating. It is not a malfunction.

An unreadable language was selected by mistake.

• Reselect the language from the menu using the following procedure:

$$\Rightarrow$$
 [\nearrow] \Rightarrow [\nearrow] \Rightarrow [\bigcirc \bigcirc \bigcirc Select desired language (\Rightarrow [Language]: 570)

The camera becomes warm.

The camera surface and back of the monitor may become warm during use, but this
does not indicate a problem with performance or quality.

Cautions for Use

The Camera

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens. TVs. video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- · Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation may adversely affect this unit, disturbing the pictures and/or sound
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

 If you record near radio transmitters or high-voltage lines, the recorded pictures and/ or sound may be adversely affected.

Do not extend the cords or the cables.

Do not spray the camera with insecticides or volatile chemicals.

 If the camera is sprayed with such chemicals, the body of the camera may be damaged and the surface finish may peel off.

Do not keep products made of rubber, PVC or similar materials in contact with the camera for a long period of time.

Cleaning

Before cleaning the camera, remove the battery or the DC Coupler, and disconnect the power plug from the electrical outlet. Then wipe the camera with a dry, soft cloth.

- When the camera is soiled badly, it can be cleaned by wiping the dirt off with a wrung wet cloth, and then with a dry cloth.
- Do not use solvents such as benzine, thinners, alcohol, kitchen cleansers, etc., as
 there is a possibility that these can deform the surfaces of the camera, such as those
 of the external case and the mount, or cause peeling of the coatings.
- When using a chemical cloth, be sure to follow the accompanying instructions.

Dirt on the Image Sensor

If dirt gets inside the mount when changing lenses, depending on the recording conditions, it may adhere to the image sensor and appear on the recorded picture.

To prevent debris or dust adhering to internal parts of the body, avoid changing the lens in a dusty environment and always fit the body cap or a lens when storing the camera.

Remove any dirt on the body cap before attaching it.

Dust reduction function

The camera has a dust reduction function that will blow off the dirt and dust that have affixed to the front of the image sensor.

If the dirt is particularly noticeable, from the [Setup] ([Others]) menu, perform [Sensor Cleaning]. (>[Sensor Cleaning]: 570)

Removing dirt on the image sensor

The image sensor is very precise and delicate, so be sure to observe the following when you do have to clean it yourself.

- Blow dust off the surface of the image sensor using a commercially available blower.
 Do not blow the dust off with excessive power.
- Do not put the blower further inside than the lens mount.
 The blower can scratch the image sensor if it touches.
- Do not use any objects except a blower brush to clean the image sensor.
- If you cannot remove the dirt or dust with the blower, consult the dealer or Panasonic

Monitor

• Do not push hard on the monitor.

This may cause irregular coloration or malfunction.

Extremely high precision technology is employed to produce the monitor screen.
 However there may be some dark or bright spots, or spots that light constantly (red, blue, or green) on the screen.

 
This is not a malfunction.

Though the monitor screen parts are produced with highly controlled precision technology, some pixels may be inactive or always lit.

The spots will not be recorded on images on a card.

Lens

- When using this lens, take care not to drop, bump, or apply undue force to it.
 Doing so may cause malfunction or damage to this lens and the digital camera.
- Do not aim the lens at the sun or strong light sources.
 The concentrated light may cause fire or damage.
- Do not allow strong light beams, such as laser light, to be directly exposed to this camera (lens). These can destroy the image sensor and cause the camera to malfunction
- Images may be affected by dust, dirt, and soiling (water, oil, fingerprints, etc.) on the lens surface
 - Before and after recording, use a blower to blow off dust and dirt from the surface of the lens, then lightly wipe with a soft dry cloth to remove soiling.
- When the camera is not being used, attach the lens cap and lens rear cap to prevent dust and dirt from adhering to or entering the camera.
- To protect the lens contact points (A), do not do the following.
 These may cause a malfunction.
 - Touch the lens contact points.
 - Soil the lens contact points.
 - Place the lens with its mount surface facing down.



- To improve the dust and splash resistant performance of the interchangeable lens (S-R2060/S-R28200/S-R1840), a lens mount rubber is used in the mount.
 - The lens mount rubber will leave scuff marks on the digital camera mount, but this does not impact performance.
 - To replace the lens mount rubber, contact Panasonic.

Battery

The battery is a rechargeable lithium ion battery.

It is highly sensitive to temperature and humidity, and the effect on performance increases as the temperature rises or drops.

Do not let the battery terminals (B) become soiled.

• Wipe with a dry cloth if they become soiled.



Always remove the battery after use.

 Place the removed battery in a plastic bag, etc., and keep away from metallic objects (clips, etc.) for storage or transport.

If you drop the battery accidentally, check to see if the body of the battery and the contacts are deformed.

 Damage to the camera will result if a battery with deformed contacts is inserted into the camera.

Dispose of unusable battery.

- . The battery has a limited life.
- Do not throw the battery into fire because it may cause an explosion.

Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins, etc.).

 This can cause short-circuiting or heat generation and you may be badly burned if you touch a battery.

Card

Do not leave the card in areas with high temperatures, direct sunlight, or areas prone to electromagnetic waves and static.

Do not bend or drop the card.

Do not subject the card to strong vibration.

- Otherwise, the card and recorded data may be damaged.
- Put the card in the card case or the storage bag after use and when storing or carrying the card.
- Do not allow dirt, water or other foreign objects to get into the contacts on the card.
 Additionally, do not touch the contacts with your hands.

Personal Information

Personal information is stored within the camera and in recorded images. We recommend that you enhance security by setting a Wi-Fi password and Wi-Fi function lock to protect personal information. (→[Wi-Fi Setup] Menu: 653)

 Images may contain information that can be used to identify the user, such as recording dates and times, and location information.

Disclaimer

 Information including personal information may be altered or vanish due to erroneous operation, effect of static electricity, accident, malfunction, repair, or other handlings.

Please note in advance that Panasonic is not liable in any way for any direct or indirect damage from the alteration or vanishing of information or personal information.

When requesting a repair or transferring/disposing of the camera

- After making a copy of personal information, be sure to delete information, including personal information, such as wireless LAN connection settings that you have registered or saved within the camera with [Reset] (→ [Reset]: 89).
- Reset the settings to protect the personal information. (→[Reset]: 89)
- · Remove the card from the camera.
- Settings may return to factory default when camera is repaired.
- Please contact the dealer where you purchased the camera or Panasonic if above operations are not possible due to malfunction.

Points to remember when disposing of/transferring the memory card

Format or delete using the camera or a PC will only modify the file management information, so it will not delete the data in the card completely.

We recommend physically destroying the card or using commercially available PC data deletion software to delete the card data completely when disposing of/ transferring the card.

You are responsible for handling of data on cards.

When Not Using the Camera for a Long Period of Time

- Ensure you remove the battery and card from the camera.
 If the battery is left in the camera, it may over-discharge, and be rendered unusable even after charging.
- Store the battery in a cool and dry place with a relatively stable temperature. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F); recommended humidity: 40 %RH to 60 %RH)
- If storing for a long period of time, it is recommended that the battery be charged once per year, fully drained in the camera, then removed from the camera and then stored again.
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.
- Check all the parts before recording when you have not used the camera for a long period of time.

Image Data

 Recorded data may be damaged or lost if the camera breaks down due to inappropriate handling.

Panasonic will not be liable for any damage caused due to loss of recorded data.

Tripod

- . Make sure the tripod is stable when the camera is attached to it.
- When using a tripod, removal of the battery may not be possible.
- Care is required because tightening the screw excessively may damage the camera, or cause the rating label to come off.
- Depending on the type of tripod you are using, the lens may interfere with the tripod head if the lens you are using has a large diameter.
 - Attempting to tighten the tripod screws in this case may cause damage to the camera or the lens.

We recommend using the Tripod Adaptor (DMW-TA1: optional).

• Please also refer to the operating instructions for the tripod.

Shoulder Strap

 If you attach a heavy interchangeable lens to the camera body, do not carry the camera by the shoulder strap.

Hold the camera and the lens when carrying them.

Wi-Fi Function

Use the camera as a wireless LAN device.

When using devices or computer systems that require more reliable security than wireless LAN devices, ensure that the appropriate measures are taken for safety designs and defects for the systems used.

Panasonic will not take any responsibility for any damage that arises when using the camera for any purpose other than as a wireless LAN device.

Use of the Wi-Fi function of the camera is presumed to be in countries where it is sold.

There is the risk that the camera violates the radio wave regulations if used in countries other than those where it is sold, and Panasonic takes no responsibility for any violations.

There is the risk that data sent and received via radio waves may be intercepted.

Please note that there is the risk that data sent and received via radio waves may be intercepted by a third party.

Do not use the camera in areas with magnetic fields, static electricity or interference.

- Do not use the camera in areas with magnetic fields, static electricity or interference. such as near microwave ovens.
 - These may cause the interruption of the radio waves.
- Using the camera near devices such as microwave ovens or cordless telephones that use the 2.4 GHz radio wave band may cause a decrease in performance in both devices

Do not connect to the wireless network you are not authorized to use.

When using Wi-Fi, wireless networks (SSID) that you are not allowed to use may be displayed, but you should not connect to these as it may be viewed as unauthorized access

Number of Pictures That Can Be Taken and Available Recording Time with the Battery

Listed below are the numbers of pictures that can be taken and the time lengths available for recording when the supplied battery is being used.

- The number of pictures that can be taken is according to the CIPA (Camera & Imaging Products Association) standards.
- · Using a Nextorage SDXC memory card.
- The values listed are approximate.

Recording Pictures (When Using the Monitor)

When the interchangeable lens (S-R2060) is used

Number of pictures that can be taken	470			
When the interchangeable lens (S-R28200)	is used			
Number of pictures that can be taken	430			
When the interchangeable lens (S-R1840) is used				
Number of pictures that can be taken	450			

Recording Videos (When Using the Monitor)

When the interchangeable lens (S-R2060) is used

[Rec. File	[Rec Quality]	rec	uous ava ording ti minutes	me	Actual available recording time (minutes)		
Format]		[Image	Area of	Video]	[Image	Area of	Video]
		[FULL]	[APS-C]	PIXEL PIXEL	[FULL]	[APS-C]	PIXEL PIXEL
[MP4(Lite)]	[3.8K/10bit/50M/30p] [3.8K/10bit/50M/25p]	100	120	120	50	60	60
	[4K/10bit/100M/60p] [4K/10bit/100M/50p]		100	100		50	50
[MP4]	[4K/8bit/100M/30p] [4K/8bit/100M/25p]	120	110	110	60	55	55
	[FHD/8bit/20M/30p] [FHD/8bit/20M/25p]	120	120	130	60	60	65
	[6K/30p/420/10-L] (3:2) [6K/25p/420/10-L] (3:2)	90			45		
[MOV]	[4K/30p/420/10-L] [4K/25p/420/10-L]	110	110	110	55	55	55
	[FHD/30p/420/10-L] [FHD/25p/420/10-L]	120	110	130	60	55	65

When the interchangeable lens (S-R28200) is used

			uous av		Actual available		
[Rec. File	[Rec Quality]	recording time (minutes) [Image Area of Video]			recording time (minutes)		
Format]					[Image	Area of	Video]
		[FULL]	[APS-C]	PIXEL	[FULL]	[APS-C]	PIXEL
[MP4(Lite)]	[3.8K/10bit/50M/30p] [3.8K/10bit/50M/25p]	100	110	110	50	55	55
	[4K/10bit/100M/60p] [4K/10bit/100M/50p]		100	100		50	50
[MP4]	[4K/8bit/100M/30p] [4K/8bit/100M/25p]	110	110	110	55	55	55
	[FHD/8bit/20M/30p] [FHD/8bit/20M/25p]	120	110	120	60	55	60
	[6K/30p/420/10-L] (3:2) [6K/25p/420/10-L] (3:2)	80			40		
[MOV]	[4K/30p/420/10-L] [4K/25p/420/10-L]	110	100	100	55	50	50
	[FHD/30p/420/10-L] [FHD/25p/420/10-L]	120	110	120	60	55	60

When the interchangeable lens (S-R1840) is used

[Rec. File	[Rec Quality]	rec	uous ava ording ti minutes	me	Actual available recording time (minutes)		
Format]		[Image	[Image Area of Video]			Area of	Video]
		[FULL]	[APS-C]	PIXEL	[FULL]	[APS-C]	PIXEL
[MP4(Lite)]	[3.8K/10bit/50M/30p] [3.8K/10bit/50M/25p]	100	110	110	50	55	55
	[4K/10bit/100M/60p] [4K/10bit/100M/50p]		100	100		50	50
[MP4]	[4K/8bit/100M/30p] [4K/8bit/100M/25p]	110	110	110	55	55	55
	[FHD/8bit/20M/30p] [FHD/8bit/20M/25p]	120	110	130	60	55	65
	[6K/30p/420/10-L] (3:2) [6K/25p/420/10-L] (3:2)	90			45		
[MOV]	[4K/30p/420/10-L] [4K/25p/420/10-L]	110	110	110	55	55	55
	[FHD/30p/420/10-L] [FHD/25p/420/10-L]	120	110	120	60	55	60

Actual available recording time is the time available for recording when repeating actions such as turning the camera on and off, starting/stopping recording, etc.

Playback (When Using the Monitor)

When the interchangeable lens (S-R2060) is used

Playback time (minutes)	270

When the interchangeable lens (S-R28200) is used

Playback time (minutes)	250

When the interchangeable lens (S-R1840) is used

Playback time (minutes)	260
-------------------------	-----



- The number of pictures that can be taken and the available recording time vary depending on the surrounding environment and the usage conditions.
 For example, these will reduce in the following case:
 - In low-temperature environments, such as on ski slopes.
- If the usage duration drops significantly even when the battery is fully charged, then the battery is at the end of its service life.
 Replace with a new battery.

Number of Pictures That Can Be Taken and Video Recording Time with Cards

Listed below are the numbers of pictures and the time lengths of videos that can be recorded on a card.

Using a Nextorage SDXC memory card.

Number of Pictures That Can Be Taken

The listed values are a guide to the minimum number of pictures to be taken.
 This may vary depending on the recorded subject.

• [Aspect Ratio]: [3:2]; [Picture Quality]: [FINE]

[Picture Size]	Card capacity				
[Ficture Size]	64 GB	128 GB	256 GB	512 GB	
[L] (24M)	4290	8640	17190	33720	
[M] (12M)	7870	15840	31050	60920	
[S] (6M)	13890	27960	53480	104920	
[XS] (2.5M)	24850	50030	87500	171670	

• [Aspect Ratio]: [3:2]; [Picture Quality]: [RAW+FINE]

[Dioturo Sizo]	Card capacity				
[Picture Size]	64 GB	128 GB	256 GB	512 GB	
[L] (24M)	830	1690	3410	6690	
[M] (12M)	920	1850	3740	7340	
[S] (6M)	970	1950	3940	7730	
[XS] (2.5M)	1000	2010	4060	7960	

Video Recording Time

- "h" is an abbreviation for hour, "m" for minute and "s" for second.
- Video recording time is the total time of all the videos which have been recorded.
- The values listed are approximate.
- [Rec. File Format]: [MP4(Lite)]

[System Frequency]: [59.94Hz (NTSC)]						
[Rec Quality]			apacity			
[Rec Quanty]	64 GB	128 GB	256 GB	512 GB		
[3.8K/10bit/50M/30p]	2h40m 5h25m 11h05m 21h50m					

[System Frequency]: [50.00Hz (PAL)]						
[Rec Quality]	Card capacity					
[Rec Quality]	64 GB	256 GB	512 GB			
[3.8K/10bit/50M/25p]	2h40m 5h25m 11h05m 21h50m					

• [Rec. File Format]: [MP4]

[System Frequency]: [59.94Hz (NTSC)]						
[Dec Ovelity]	Card capacity					
[Rec Quality]	64 GB	128 GB	256 GB	512 GB		
[4K/10bit/100M/60p] [4K/8bit/100M/30p] [4K/8bit/100M/24p]	1h20m	2h40m	5h30m	10h55m		
[4K/10bit/72M/30p] [4K/10bit/72M/24p]	1h50m	3h45m	7h45m	15h10m		
[FHD/8bit/28M/60p]	4h45m	9h40m	19h45m	38h50m		
[FHD/8bit/20M/30p]	6h25m	12h55m	26h20m	51h45m		
[FHD/8bit/24M/24p]	5h35m	11h20m	23h00m	45h20m		

[Sy	[System Frequency]: [50.00Hz (PAL)]					
[Rec Quality]		Card c	apacity			
[Nec Quanty]	64 GB	128 GB	256 GB	512 GB		
[4K/10bit/100M/50p] [4K/8bit/100M/25p]	1h20m	2h40m	5h30m	10h55m		
[4K/10bit/72M/25p]	1h50m	3h45m	7h45m	15h10m		
[FHD/8bit/28M/50p]	4h45m	9h40m	19h45m	38h50m		
[FHD/8bit/20M/25p]	6h25m	12h55m	26h20m	51h45m		

• [Rec. File Format]: [MOV]

[Sys	stem Frequenc	y]: [59.94Hz (I	NTSC)]		
[Rec Quality]		Card capacity			
[Rec Quanty]	64 GB	128 GB	256 GB	512 GB	
[6K/30p/420/10-L] (3:2) [6K/24p/420/10-L] (3:2) [6K/30p/420/10-L] (17:9) [6K/24p/420/10-L] (17:9) [5.9K/30p/420/10-L] [3.3K/48p/422/10-L] [3.3K/48p/422/10-L] [C4K/60p/422/10-L] [C4K/60p/422/10-L] [C4K/60p/422/10-L] [C4K/48p/422/10-L] [4K/60p/422/10-L] [4K/60p/420/10-L] [4K/68p/422/10-L] [4K/48p/422/10-L]	40m00s	1h20m	2h45m	5h25m	
[3.3K/30p/422/10-L] [3.3K/30p/420/10-L] [3.3K/24p/420/10-L] [3.3K/24p/420/10-L] [C4K/30p/420/10-L] [C4K/30p/420/10-L] [C4K/24p/420/10-L] [C4K/24p/420/10-L] [AK/30p/420/10-L] [AK/30p/422/10-L] [AK/24p/422/10-L] [AK/24p/422/10-L] [AK/24p/422/10-L] [AK/24p/422/10-L] [FHD/120p/422/10-L]	53m00s	1h45m	3h40m	7h10m	

[FHD/60p/422/10-L] [FHD/60p/420/10-L] [FHD/48p/422/10-L] [FHD/48p/420/10-L] [FHD/30p/420/10-L] [FHD/30p/420/10-L] [FHD/24p/422/10-L] [FHD/24p/420/10-L]	1h15m	2h40m	5h25m	10h40m
--	-------	-------	-------	--------

[System Frequency]: [50.00Hz (PAL)]						
[Rec Quality]	Card capacity					
	64 GB	128 GB	256 GB	512 GB		
[6K/25p/420/10-L] (3:2) [6K/25p/420/10-L] (17:9) [5.9K/25p/420/10-L] [3.3K/50p/422/10-L] [3.3K/50p/422/10-L] [C4K/50p/422/10-L] [C4K/50p/422/10-L] [4K/50p/422/10-L] [4K/50p/420/10-L]	40m00s	1h20m	2h45m	5h25m		
[3.3K/25p/422/10-L] [3.3K/25p/420/10-L] [C4K/25p/420/10-L] [C4K/25p/420/10-L] [4K/25p/422/10-L] [4K/25p/420/10-L] [FHD/100p/422/10-L] [FHD/100p/420/10-L]	53m00s	1h45m	3h40m	7h10m		
[FHD/50p/422/10-L] [FHD/50p/420/10-L] [FHD/25p/422/10-L] [FHD/25p/420/10-L]	1h15m	2h40m	5h25m	10h40m		

[System Frequency]: [24.00Hz (CINEMA)]						
[Rec Quality]	Card capacity					
[Rec Quanty]	64 GB	128 GB	256 GB	512 GB		
[6K/24p/420/10-L] (3:2) [6K/24p/420/10-L] (17:9) [5.9K/24p/420/10-L] [3.3K/48p/422/10-L] [3.3K/48p/420/10-L] [C4K/48p/422/10-L] [C4K/48p/422/10-L] [4K/48p/422/10-L] [4K/48p/420/10-L]	40m00s	1h20m	2h45m	5h25m		
[3.3K/24p/422/10-L] [3.3K/24p/420/10-L] [C4K/24p/422/10-L] [C4K/24p/420/10-L] [4K/24p/420/10-L] [4K/24p/420/10-L]	53m00s	1h45m	3h40m	7h10m		
[FHD/48p/422/10-L] [FHD/48p/420/10-L] [FHD/24p/422/10-L] [FHD/24p/420/10-L]	1h15m	2h40m	5h25m	10h40m		



- The number of pictures that can be taken and the available recording time will be shorter depending on the SD card used when recording with [Segmented File Recording].
- Depending on the recording conditions and the type of card, number of pictures that can be taken, video recording time vary.
- [9999+] is displayed on the recording screen if the remaining number of pictures that can be taken is 10000 or more.
- The continuous recordable time for videos is displayed on the screen.

List of Default Settings/Custom Saving/ Settings Available for Copying

Rs: Using [Reset], the function to return to default settings

: Using [Save to Custom Mode], the function to save settings details in the Custom mode

In: Using [Save/Restore Camera Setting], the function to copy settings details

	Menu	Default setting	R.	₊ C	<u></u>
[Photo]: 4: [I	Image Quality]	<u>'</u>			
[Photo Style]		[;std]	✓	✓	✓
[Metering Mode]		[@]	✓	✓	✓
[Aspect Ratio]		[3:2]	✓	✓	✓
[Picture Quality]		[FINE]	✓	✓	✓
[Picture Size]		[L] (24M)	V	✓	✓
	[Handheld High-Res]	[OFF]	✓	√	✓
	[Picture Quality]	[COMBINED]	✓	√	✓
[High Resolution	[Picture Size]	[XL]	✓	✓	~
Mode Setting]	[Simul Record Normal Shot]	[ON]	~	~	✓
	[Shutter Delay]	[2 SEC]	✓	✓	✓
	[Motion Blur Processing]	[MODE1]	✓	~	~
[Dual Native ISO Se	etting]	[AUTO]	✓	√	✓
[ISO Sensitivity (photo)]	[ISO Auto Lower Limit Setting]	[100]	~	✓	✓
	[ISO Auto Upper Limit Setting]	[AUTO]	~	~	~
[Synchro Scan(Phot	to)]	[OFF]	✓	✓	✓

[Min. Shutter Speed]		[AUTO]	✓	✓	✓
[i.Dynamic Range]		[OFF]	√	√	✓
[Vignetting Comp.]		[ON]	✓	✓	✓
[Color Shading Compensation]		_	✓		√
[Diffraction Compensation]		[OFF]	√	√	✓
[Filter Settings]	[Filter Effect]	[OFF]	✓	✓	✓
	[Simultaneous Record w/o Filter]	[OFF]	✓	~	~

	Menu	Default setting	R.	•C	•
[Photo]: [Foots] [F					
[Focus Mode]		[AFS]	✓	✓	✓
[AF Detection Settin	gl	[OFF]	✓	✓	✓
[Detecting Subject]	[Type of Subject]	[HUMAN]	✓	✓	✓
[Detecting Subject]	[Target Parts]	2	√	√	✓
[AF Custom Setting(Photo)]	[Set 1]	√	√	✓
[Focus Limiter]	[ON] / [OFF]	[OFF]	~	~	~
[Focus Limiter]	[SET]	_	√	√	✓
[AF Assist Light]		[ON]	✓	✓	~
[Focus Peaking]	[ON] / [OFF]	[ON]	√	√	✓
[Focus Peaking]	[SET]	_	✓	✓	✓
[Focus Frame Moving Speed]		[FAST]	✓	✓	~

	Menu	Default setting	R.	•C	5.
[Photo]: [0]	Others (Photo)]				
[Bracketing]	[Bracketing Type]	[OFF]	V	/	✓
	[More Settings]	_	✓	✓	✓
[Silent Mode]	:	[OFF]	V	V	✓
[Hybrid	[ON] / [OFF]	[OFF]	✓	V	✓
Zoom(Photo)]	[SET]	_	V	V	✓
[Crop	[ON] / [OFF]	[OFF]	V	V	✓
Zoom(Photo)]	[SET]	_	✓	V	✓
	[Operation Mode]	[((\\(\daggerap))]	V	V	✓
	[Body(B.I.S.) / Lens(O.I.S.)]	[(())]	~	~	✓
[Image Stabilizer]	[When to Activate]	[HALF-SHUTTER]	✓	V	✓
	[E-Stabilization (Video)]	[OFF]	✓	V	✓
	[Boost I.S. (Video)]	[OFF]	✓	V	~
	[Anamorphic (Video)]	[OFF]	V	V	✓
	[Lens Information]	[Lens1]	✓		✓
[Burst Shot Setting]		[H]	✓	✓	✓
[Shutter Delay]		[OFF]	✓	✓	✓
	[Mode]	[Time Lapse Shot]	✓	V	✓
	[Shooting Interval Setting]	[ON]	✓	V	✓
	[Start Time]	[Now]	✓	✓	✓
[Time Lapse/	[Image Count]	[1]	✓	V	✓
Animation]	[Shooting Interval]	[1m00s]	V	V	✓
	[Exposure Leveling]	[OFF]	V	V	✓
	[Create New Folder At Rec]	_	~	~	✓
[Self Timer]	[約10]/[210]]/[32]/ [32] to [316]	[8]	~	~	~
	[SET]	_	✓	✓	√

	Menu	Default setting	R.	₊ C	•
[Video]: • [I	mage Quality]	-			
[Exposure Mode]		[P]	V	/	~
[Photo Style]		[STD.]	✓	~	~
[Metering Mode]		[@]	✓	✓	_
[Dual Native ISO Se	etting]	[AUTO]	✓	✓	~
[ISO Sensitivity	[ISO Auto Lower Limit Setting]	[100]	1	~	~
(video)]	[ISO Auto Upper Limit Setting]	[AUTO]	~	~	~
[Synchro Scan(Vide	o)]	[OFF]	✓	~	~
[Flicker Decrease (\	/ideo)]	[OFF]	✓	✓	~
[Master Pedestal Le	vel]	[0]	V	✓	✓
[SS/Gain Operation]		[SEC/ISO]	✓	~	~
[i.Dynamic Range]		[OFF]	✓	✓	~
[Vignetting Comp.]		[ON]	✓	~	~
[Color Shading Compensation]		_	V		V
[Diffraction Compensation]		[OFF]	V	✓	✓
[Emiliana Compone	[Filter Effect]	[OFF]	✓	~	~
[Filter Settings]	[Simultaneous Record w/o Filter]	[OFF]	~	~	✓

	Menu	Default setting	R.	₊ C	.
[Video]:	mage Format]				
[Rec. File Format]		When [System Frequency] is set to [59.94Hz (NTSC)] or [50.00Hz (PAL)]: [MP4(Lite)]	✓	·	✓
		When [System Frequency] is set to [24.00Hz (CINEMA)]: [MOV]			
[Image Area of Vide	0]	[FULL]	✓	V	✓
		When [System Frequency] is set to [59.94Hz (NTSC)]: [3.8K/10bit/50M/30p]			
[Rec Quality]		When [System Frequency] is set to [50.00Hz (PAL)]: [3.8K/ 10bit/50M/25p]	✓	✓	✓
		When [System Frequency] is set to [24.00Hz (CINEMA)]: [4K/24p/420/10-L]			
[Rec Quality (My Lis	st)]	_	✓	✓	✓
[Slow & Quick Setting	ng]	[30fps]	✓	✓	✓
	[Time Code Display]	[OFF]	✓	✓	✓
	[Count Up]	[REC RUN]	✓	✓	✓
[Time Code]	[Time Code Value]	_			
	[Time Code Mode]	[DF]	✓	✓	✓
	[HDMI Time Code Output]	[OFF]	✓	✓	✓
[Luminance Level]		[64-940]	✓	✓	✓

Menu	Default setting	R.	•C	•	
[Video]: [rocus]					
	[AFS]	✓	✓	✓	
g]	[OFF]	✓	√	✓	
[Type of Subject]	[HUMAN]	V	✓	✓	
[Target Parts]	2	✓	✓	~	
[ON] / [OFF]	[OFF]	✓	√	✓	
[SET]	_	✓	√	✓	
[ON] / [OFF]	[OFF]	✓	✓	✓	
[SET]	_	✓	~	~	
	[MODE1]	✓	√	✓	
	[ON]	✓	✓	✓	
[ON] / [OFF]	[ON]	✓	✓	✓	
[SET]	-	✓	~	~	
[Focus Frame Moving Speed]		✓	✓	✓	
	ocus] [Type of Subject] [Target Parts] [ON] / [OFF] [SET] [ON] / [OFF] [SET] [ON] / [OFF]	[AFS] [OFF] [ON] / [OFF] [ON] / [OFF] [ON] [ON] / [OFF] [ON] [O	[AFS]	[AFS]	

	Menu	Default setting	R.	.C	•
[Video]: 🖖 [A	Audio]				
[Sound Rec Level Disp.]	[ON] / [OFF]	[OFF]	✓	✓	✓
	[SET]	_	V	V	✓
[Mute Sound Input]	[Mute Sound Input]		V	V	✓
[Sound Rec Gain Level]		[STANDARD]	✓	✓	✓
[Sound Rec Level Adj.]		[0dB]	V	✓	✓
[Sound Rec Quality]		[48kHz/24bit]	V	V	✓
[Sound Rec Level L	imiter]	[ON]	✓	✓	✓
[Wind Noise Cancel	ler]	[STANDARD]	V	✓	✓
[Wind Cut]		[OFF]	V	✓	✓
[Mic Socket]		[MIC#]	✓	✓	√
[Special Mic.]		[STEREO]	✓	✓	✓

	Menu	Default setting	R.	•C	5.
[Video]: [C	Others (Video)]				
[Silent Mode]		[OFF]	✓	✓	✓
[Hybrid	[ON] / [OFF]	[OFF]	V	✓	✓
Zoom(Video)]	[SET]	_	V	✓	✓
[Crop Zoom(Video)]	[ON] / [OFF]	[OFF]	✓	✓	✓
[Crop Zoom(video)]	[SET]	_	V	✓	✓
	[Operation Mode]	[((\\))]	V	✓	✓
	[Body(B.I.S.) / Lens(O.I.S.)]	[((_))]	1	~	✓
	[When to Activate]	[HALF-SHUTTER]	✓	✓	✓
[Image Stabilizer]	[E-Stabilization (Video)]	[OFF]	✓	✓	✓
	[Boost I.S. (Video)]	[OFF]	✓	✓	✓
	[Anamorphic (Video)]	[OFF]	✓	✓	✓
	[Lens Information]	[Lens1]	✓		✓
[Calf Times Catting]	[Self Timer]	[8010]	✓	~	V
[Self Timer Setting]	[Self Timer For Video]	[OFF]	✓	✓	✓
	[Focus Position Setting]	_			
[Convertion]	[Focus Transition Speed]	[M]	✓	✓	✓
[Focus Transition]	[Focus Transition Rec]	[OFF]	✓	√	✓
	[Focus Transition Wait]	[OFF]	V	√	✓
[Segmented File Red	cording]	[OFF]	✓	~	V
[Live Cropping]		[OFF]	✓	√	✓

	Menu	Default setting	R.	₽C	5.
Custom]:	[Image Quality]				
	[Show/Hide Photo Style]	-	✓	✓	✓
[Photo Style Settings]	[My Photo Style Settings]	_	V	✓	✓
Coungoj	[Reset Photo Style]	_			
[LUT Library]		_	✓		√
[ISO Increments]		[1/3 EV]	V	✓	✓
[Extended ISO]		[OFF]	V	V	V
	[Multi Metering]	[±0EV]	✓	1	√
[Exposure Offset Adjust.]	[Center Weighted]	[±0EV]	V	✓	✓
	[Spot]	[±0EV]	V	✓	✓
	[Highlight Weighted]	[±0EV]	✓	1	√
[Face Priority In Mul	ti Metering]	[ON]	V	✓	✓
[ANN/D Look Cottings]	[Operation Syncs With Shutter]	[OFF]	~	~	✓
[AWB Lock Setting]	[Lock Hold With Fn Button]	[ON]	V	~	✓
[Color Space]		[sRGB]	✓	V	✓
[Exposure Comp. Re	eset]	[OFF]	V		✓
[Auto Exposure in P.	/A/S/M]	[ON]	V	✓	✓
	[F/SS/ISO/Exposure Comp.]	[🗖]	~	~	~
[CreativeVideo	[White Balance]	[0]	V	✓	✓
Combined Set.]	[Photo Style]	[0]	V	✓	✓
	[Metering Mode]	[0]	V	✓	✓
	[AF Mode]	[0]	✓	✓	√

	Menu	Default setting	R₊	₊ C	•••
[Custom]: [AF] [Focus/Shutter]					
[Focus/Shutter	[AFS]	[FOCUS]	✓	1	_
Priority]	[AFC]	[BALANCE]	✓	✓	V
[Focus Switching for	or Vert / Hor]	[OFF]	✓	1	_
[AF/AE Lock Hold]		[OFF]	✓	1	~
[AF+MF]		[OFF]	✓	✓	~
[MF Assist]	[Focus Ring]	[ON]	✓	1	V
	[AF Mode]	[ON]	✓	1	~
	[MF Assist Display]	[PIP]	V	✓	✓
	[Max. Magnification in "FULL"]	[20x]	✓	~	~
[MF Guide]		[m]/[ft.] ¹	✓	~	~
[Focus Ring Lock]		[OFF]	✓	~	~
	[Tracking]	[ON]	✓	✓	~
	[Full Area AF]	[ON]	✓	✓	_
[Show/Hide AF	[Zone(Horizontal/Vertical)]	[ON]	✓	✓	~
Mode]	[Zone]	[ON]	✓	✓	_
	[1-Area+]	[ON]	✓	✓	_
	[Pinpoint]	[ON]	✓	✓	~
[Pinpoint AF	[Pinpoint AF Time]	[MID]	✓	~	~
Setting]	[Pinpoint AF Display]	[PIP]	✓	~	~
[AF-Point Scope	[Keep Enlarged Display]	[OFF]	✓	✓	~
Setting]	[PIP Display]	[PIP]	✓	✓	✓

[Shutter AF]		[ON]	✓	✓	✓
[Human Eye Detection Display]		[ON]	✓	√	✓
[Half-Press Shutter]		[OFF]	/	✓	✓
[Assign REC to Shutter Button]		[ON]	✓	✓	✓
[Quick AF]	[Quick AF]		✓	√	✓
[Looped Focus Fra	me]	[OFF]	/	✓	✓
[Enlarged Live Display(Video)]	[Keep Enlarged Display]	[ON]	✓	✓	✓
	[PIP Display]	[PIP]	✓	√	✓

^{*1} Default setting specifications vary depending on the country or area where the camera was purchased.

	Menu	Default setting	R.	₊ C	•••
Custom]: 🛖	[Operation]				
	[Layout Style]	[MODE1]	V	✓	✓
[Q.MENU Settings]	[Item Customize (Photo)]	_	V	√	✓
	[Item Customize (Video)]	_	V	✓	✓
	[Touch Screen]	[PARTIAL]	V	✓	✓
[Touch Settings]	[Touch Tab]	[OFF]	✓	✓	_
	[Touch AF]	[AF]	V	V	~
	[Cursor]	[📤]	✓	✓	_
[Operation Lock	[Touch Screen]	[📤]	V	✓	✓
Setup]	[Dial]	[📤]	V	V	V
	[DISP. Button]	[📤]	✓	✓	_
[Fn Button Set]	[Setting in REC mode]	_	V	✓	✓
[FII BUILOII Set]	[Setting in PLAY mode]	-	V	V	~
[ISO Displayed Setting]	[Front Dial]	[ISO]	~	~	~
[Exposure Comp.	[Cursor Buttons (Up/ Down)]	[OFF]	~	~	~
Disp. Setting]	[Front Dial]	[2]	V	✓	V
	[Assign Dial (F/SS)]	[SET1]	✓	~	~
	[Rotation (F/SS)]	[<u></u>	V	V	~
[Dial Set.]	[Exposure Comp.]	[OFF]	✓	✓	~
	[Dial Operation Switch Setup]	_	~	~	✓

	Menu	Default setting	R.	₊ C	•
(Custom):	[Monitor / Display (Photo)]				
	[Duration Time (photo)]	[OFF]	✓	V	✓
[Auto Review]	[Playback Operation Priority]	[OFF]	~	1	~
[Constant Preview]	[ON] / [OFF]	[OFF]	✓	/	V
[Constant Freview]	[SET]	_	✓	V	✓
[Histogram]		[OFF]	✓	V	✓
[Photo Grid Line]		[OFF]	✓	V	V
[Live View Boost]	[MODE1] / [MODE2] / [OFF]	[OFF]	~	1	~
	[SET]	[M]	✓	~	✓
[Night Mode]		[OFF]	V	V	✓
	[Monitor Disp. Set]	[[]]]	✓	V	~
[Monitor Display Settings]	[Horizontal Image Flip(Monitor)]	[AUTO]	~	~	~
oougej	[Vertical Image Flip(Monitor)]	[AUTO]	~	~	~
[Expo.Meter]		[OFF]	V	V	✓
[Focal Length]		[ON]	V	V	✓
[Blinking Highlights]		[OFF]	✓	/	✓
[Chan Overlay]	[ON] / [OFF]	[OFF]	V		
[Sheer Overlay]	[SET]	_	✓		
[I.S. Status Scope]		[OFF]	✓	V	V
[Level Gauge]		[ON]	V	V	✓
[Luminance Spot Me	eter]	[OFF]	✓	~	✓
[Framing Outline]		[OFF]	✓	/	V
[Show/Hide Monitor	[Control Panel]	[ON]	✓	~	✓
Layout]	[Black Screen]	[ON]	✓	/	V

	Menu	Default setting	R.	•C	5.
(Custom):	[Monitor / Display (Video)]				
[Log View Assist]	[LUT Select(V-Log)]	[Vlog_709]	V	V	~
	[LUT View Assist (Monitor)]	[OFF]	~	~	✓
	[LUT View Assist (HDMI)]	[OFF]	V	√	✓
[HLG View Assist]	[Monitor]	[MODE2]	✓	✓	✓
	[HDMI]	[AUTO]	V	✓	✓
[Anamorphic Desqu	eeze Display]	[OFF]	V	✓	✓
[Monochrome Live View]		[OFF]	✓	√	✓
[Center Marker]		[OFF]	✓	√	✓
[Safety Zone Marke	r]	[OFF]	V	✓	✓
[Frame Marker]	[ON] / [OFF]	[OFF]	✓	√	✓
[Frame Warker]	[SET]	_	✓	√	✓
[Zebra Pattern]	[ZEBRA1] / [ZEBRA2] / [ZEBRA1+2] / [OFF]	[OFF]	~	~	✓
	[SET]	_	V	✓	✓
[WFM/Vector Scope]		[OFF]	V	√	✓
[Color Bars]		[SMPTE]	~	✓	~
[Video-Priority Display]		[OFF]	V	✓	~
[Red REC Frame In	dicator]	[OFF]	✓	✓	✓

	Menu	Default setting	R.	•C	•
Custom]: 🔊	[IN/OUT]				
	[Info Display]	[ON]	✓	✓	✓
[HDMI Rec Output]	[HDMI Recording Control]	[OFF]	✓	✓	✓
[помі кес оцірці]	[Sound Output (HDMI)]	[ON]	✓	✓	✓
	[Enlarged Live Display]	[OFF]	✓	✓	✓

	Menu	Default setting	R.	•C	•		
Custom]:	Custom]: (Custom): (Custom						
[Lens Focus Resum	e]	[OFF]	✓	✓	✓		
[Lens Fn Button Set	ting]	[Focus Stop]	V	✓	✓		
[Focus Ring	[NON-LINEAR] / [LINEAR]	[NON-LINEAR]	~	✓	✓		
Control]	[SET]	[300°]	✓	✓	✓		
[AF Micro Adjustme	nt]	[OFF]	✓	√*1	√*2		
[Lens Information]		[Lens1]	V		✓		
[Lens Info. Confirmation]		[ON]	V	√	✓		
[Vertical Position Inf	o (Video)]	[ON]	✓	√	✓		

^{*1} The adjustment value for the focus point cannot be registered.

^{*2} The settings information cannot be loaded onto a camera different from the one where the camera settings were saved.

	Menu	Default setting	R.	•C	•
/ [Setup]: []	Card/File]				
[Card Format]		_			
[Folder / File Settings]	[Select Folder]	_			
	[Create a New Folder]	_			
Coungoj	[File Name Setting]	[Folder Number Link]	✓		✓
[File Number Reset]		_			
	[Artist]	[OFF]	V		√
[Copyright Information]	[Copyright Holder]	[OFF]	✓		✓
	[Display Copyright Info.]	_			

	Menu	Default setting	R.	•C	•	
/ [Setup]: 📥 [N	[Setup]: [Monitor / Display]					
[Power Save Mode]	[Sleep Mode]	[1MIN.]	✓		✓	
	[Sleep Mode(Wi-Fi)]	[ON]	✓		√	
	[Auto Monitor Off]	[1MIN.]	✓		√	
[Monitor Frame Rate		[30fps]	~		✓	
[Monitor Settings]		_	✓			
[Monitor Backlight]		[AUTO]	V		✓	
Il ovel Cougo	[Adjust.]	_	V			
[Level Gauge Adjust.]	[Level Gauge Value Reset]	_				

	Menu	Default setting	R₊	₊ C	•••
▶ [Setup]: 🔊 [I	N/OUT]	-			
[Beep]	[Beep Volume]	[년)]	✓		✓
	[AF Beep Volume]	[10]	✓		✓
	[AF Beep Tone]	[🛵]	✓		✓
	[Shutter Vol.]	[<u>*\b^_</u>]	✓		✓
	[Shutter Tone]	[]	✓		~
[Wi-Fi]		_	V		
[Bluetooth]		_	✓		
[USB]	[USB Mode]	[◆<] [Select on connection]	~		✓
	[USB Power Supply]	[ON]	✓		~
	[Output Resolution(Playback)]	[AUTO]	1		✓
	[LUT View Assist (HDMI)]	[OFF]	✓	V	✓
[HDMI Connection]	[HLG View Assist (HDMI)]	[AUTO]	V	V	✓
	[VIERA Link (CEC)]	[OFF]	✓		✓
	[Background Color(Playback)]	[~		✓
	[Photo Luminance Level]	[16-255]	V		✓
[Network Connection Light]		[ON]	V		✓

	Menu	Default setting	R.	•C	5.
[Save to Custom Mode]		_	V		✓
[Load Custom Mode]		_	V		✓
[Custom Mode Settings]	[Limit No. of Custom Mode]	[3]	~		✓
	[Edit Title]	_	V		✓
	[How to Reload Custom Mode]	_	~		✓
	[Select Loading Details]	_	V		✓
[Save/Restore Camera Setting]	[Save]	_			
	[Load]	_			
	[Delete]	_			
	[Keep Settings While Format]	[OFF]	~		✓
[Reset]		_			

Menu	Default setting	R.	₊ C	•
▶ [Setup]: ▶ [Others]				
[Clock Set]	0:00:00 1/1/2024			
[Time Zone]	1			✓
[System Frequency]	[59.94Hz (NTSC)] / [50.00Hz (PAL)]*1	✓		√
[Pixel Refresh]	_			
[Sensor Cleaning]	_			
[Language]	1	✓		✓
[Firmware Version]	_			
[Approved Regulations]*2	_			

^{*1} Default setting specifications vary depending on the country or area where the camera was purchased.

^{*2} Depending on the country or area where the camera was purchased, this is not displayed due to differences in specifications.

Menu	Default setting	R.	•C	•
[My Menu]: 🎤 [Edit My Menu]				
[Add]	_	✓		✓
[Sorting]	_			
[Delete]	_			
[Display from My Menu]	[OFF]	✓		✓

Menu	Default setting	R.	₊ C	•
[Playback]: [Playback Mode]				
[Playback Mode]	[Normal Play]	✓		V
[Slide Show]	_	✓		~
[Rotate Disp.]	[ON]	✓		~
[Picture Sort]	[DATE/TIME]	V		V
[Magnify from AF Point]	[OFF]	✓		~
[LUT View Assist (Monitor)]	[OFF]	✓	V	~
[HLG View Assist (Monitor)]	[MODE2]	V	V	V
[Anamorphic Desqueeze Display]	[OFF]	✓	V	~
[Behavior After Video Playback]	[End Playback]	V		~

Menu	Default setting	R.	•C	•
▶ [Playback]: ☑ [Process Image]				
[RAW Processing]	_			
[Time Lapse Video]	_			
[Stop Motion Video]	_			

Menu	Default setting	R.	₊ C	•
[Playback]: [Add/Delete Info.]				
[Protect]	_			
[Rating]	_			

Menu	Default setting	R.	₊ C	•
[Playback]: 🎻 [Edit Image]				
[Resize]	_			
[Rotate]	_			
[Video Divide]	_			
[Video Repair]	_			

Menu	R.	₊ C	•	
[Playback]: [Others]				
[Delete Confirmation]	["No" first]	✓		✓
[Delete All Images]	_			

List of Functions That Can Be Set in Each Recording Mode

	Menu	iA	Р	Α	S	М	₽₽M	S&Q
[Photo]: (i-	[Image Quality]							
[Photo Style]		✓	✓	✓	✓	V		
[Metering Mode]			~	V	✓	1		
[Aspect Ratio]	✓	✓	V	✓	V			
[Picture Quality]		✓	~	V	✓	1		
[Picture Size]		✓	✓	V	✓	V		
	[Handheld High-Res]		✓	1	✓	/		
	[Picture Quality]		✓	V	✓	V		
Il link Decelution	[Picture Size]		✓	V	✓	V		
[High Resolution Mode Setting]	[Simul Record Normal Shot]		~	~	~	~		
	[Shutter Delay]		~	V	✓	1		
	[Motion Blur Processing]		✓	V	V	1		
[Dual Native ISO S	etting]		√	V	V	1		
[ISO Sensitivity	[ISO Auto Lower Limit Setting]		~	~	~	~		
(photo)]	[ISO Auto Upper Limit Setting]		~	1	~	~		
[Synchro Scan(Pho	oto)]				✓	/		
[Min. Shutter Speed	[t		✓	V				
[i.Dynamic Range]			✓	V	V	V		
[Vignetting Comp.]			✓	V	✓	V		
[Color Shading Compensation]			~	V	✓	1		
[Diffraction Compensation]			✓	✓	✓	✓		
	[Filter Effect]		✓	V	V	1		
[Filter Settings]	[Simultaneous Record w/ o Filter]		~	~	~	~		

	Menu	iA	Р	Α	S	М	₽ M	S&Q
[Photo]: [FOOS] [F	ocus]							
[Focus Mode]	[Focus Mode]		✓	✓	✓	✓		
[AF Detection Setting	g]		✓	✓	✓	✓		
[Detecting Subject]	[Type of Subject]		✓	✓	✓	✓		
[Detecting Subject]	[Target Parts]		√	✓	✓	✓		
[AF Custom Setting	(Photo)]		✓	V	√	✓		
[Focus Limiter]		✓	✓	V	✓	✓		
[AF Assist Light]			✓	V	√	✓		
[Focus Peaking]	[ON] / [OFF]	✓	✓	V	✓	✓		
[Focus Peaking]	[SET]	✓	✓	V	✓	✓		
[Focus Frame Movin	ng Speed]	✓	✓	✓	✓	✓		

	Menu	iA	Р	Α	S	М	₽₽ M	S&Q
[Photo]: 🔘 [Others (Photo)]							
[Bracketing]	[Bracketing Type]	✓	✓	✓	✓	✓		
ргаскеннуј	[More Settings]	/	~	1	V	~		
[Silent Mode]		V	✓	√	✓	✓		
[Hybrid Zoom(Photo	p)]	V	V	V	V	V		
[Crop Zoom(Photo)		V	✓	√	✓	✓		
	[Operation Mode]	V	V	V	V	V		
	[Body(B.I.S.) / Lens(O.I.S.)]	~	~	~	~	~		
	[When to Activate]	V	V	V	V	V		
[Image Stabilizer]	[E-Stabilization (Video)]	/	~	1	✓	~		
	[Boost I.S. (Video)]	/	~	1	V	~		
	[Anamorphic (Video)]	V	V	V	V	V		
	[Lens Information]	/	~	1	V	~		
[Burst Shot Setting]		V	✓	√	✓	✓		
[Shutter Delay]		V	V	V	V	V		
[Time Lapse/Anima	tion]	/	~	1	✓	~		
[Self Timer]		V	✓	✓	✓	V		

	Menu	iA	Р	Α	S	M	₽ M	S&Q
[Video]: • [Image Quality]							
[Exposure Mode]							/	✓
[Photo Style]		V	✓	V	√	~	V	V
[Metering Mode]			✓	V	√	~	V	V
[Dual Native ISO Se	etting]		✓	V	✓	✓	✓	✓
[ISO Sensitivity	[ISO Auto Lower Limit Setting]						~	~
(video)]	[ISO Auto Upper Limit Setting]						~	~
[Synchro Scan(Vide	eo)]						✓	✓
[Flicker Decrease (Video)]		✓	V	✓	~		
[Master Pedestal Le	evel]						✓	✓
[SS/Gain Operation]						✓	✓
[i.Dynamic Range]			✓	V	✓	~	✓	✓
[Vignetting Comp.]			✓	✓	✓	✓	✓	
[Color Shading Cor	npensation]		V	✓	✓	V	✓	✓
[Diffraction Comper	nsation]		✓	V	√	~	V	V
	[Filter Effect]		✓	V	✓	~	✓	
[Filter Settings]	[Simultaneous Record w/ o Filter]		✓	✓	✓	~		

	Menu	iA	Р	Α	S	М	₽ M	S&Q
[Video]:	mage Format]							
[Rec. File Format]		√	✓	✓	✓	✓	✓	
[Image Area of Vide	:0]	√	✓	V	√	~	V	V
[Rec Quality]		√	✓	V	√	~	V	V
[Rec Quality (My Lis	st)]	√	✓	1	✓	~	✓	V
[Slow & Quick Setting	ng]							V
	[Time Code Display]	√	✓	1	✓	~	✓	V
	[Count Up]	~	~	V	~	V	✓	
[Time Code]	[Time Code Value]	√	✓	V	√	~	V	V
[Time Code Mode]		√	✓	V	✓	~	✓	✓
[HDMI Time Code Output]							~	~
[Luminance Level]		✓	✓	✓	✓	✓	✓	✓

	Menu	iA	Р	Α	S	M	₽ M	S&Q
[Video]: Foas [F	ocus]							
[Focus Mode]	[Focus Mode]			✓	✓	✓	✓	✓
[AF Detection Setting	g]		✓	✓	✓	✓	✓	✓
[Detecting Subject]	[Type of Subject]		✓	✓	✓	✓	✓	✓
[Detecting Subject]	[Target Parts]		√	✓	✓	✓	V	✓
[AF Custom	[ON] / [OFF]	✓	✓	V	√	✓	V	V
Setting(Video)]	[SET]	V	✓	V	✓	✓	/	✓
[Focus Limiter]	[OFF]	✓	√	✓	✓	✓	V	✓
[Continuous AF]		✓	✓	V	√	✓	V	V
[AF Assist Light]			✓	V	√	✓	V	V
[Focus Peaking]	[ON] / [OFF]	V	✓	V	✓	✓	/	✓
[SET]		✓	~	V	~	~	V	✓
[Focus Frame Movir	ng Speed]	V	✓	V	✓	✓	/	✓

Menu	iA	Р	Α	S	М	₽₽ M	S&Q
[Video]: U [Audio]							
[Sound Rec Level Disp.]	✓	✓	√	✓	✓	✓	✓
[Mute Sound Input]	V	✓	V	✓	✓	V	✓
[Sound Rec Gain Level]	V	✓	V	✓	✓	V	✓
[Sound Rec Level Adj.]	V	✓	✓	✓	✓	V	✓
[Sound Rec Quality]	V	✓	V	✓	✓	V	
[Sound Rec Level Limiter]	V	✓	✓	✓	✓	V	✓
[Wind Noise Canceller]	V	√	V	√	✓	/	✓
[Wind Cut]	V	✓	V	✓	✓	V	✓
[Mic Socket]	V	✓	1	✓	√	✓	✓
[Special Mic.]	✓	✓	✓	✓	✓	✓	✓

Menu	iA	Р	Α	S	M	₩	S&Q
Others (Video)]							
	_	✓	✓	✓	✓	V	✓
[Hybrid Zoom(Video)]			✓	V	V	V	✓
						V	✓
[Operation Mode]	✓	✓	1	✓	V	V	V
[Body(B.I.S.) / Lens(O.I.S.)]	✓	~	~	~	~	~	~
[When to Activate]	/	✓	1	V	V		
[E-Stabilization (Video)]	/	✓	1	V	V	V	
[Boost I.S. (Video)]	✓	✓	1	✓	V	V	V
[Anamorphic (Video)]	V	✓	✓	V	V	V	✓
[Lens Information]	/	✓	1	V	V	V	V
[Self Timer]	✓	✓	1	✓	V	V	V
[Self Timer For Video]	/	✓	1	V	V	V	V
						V	
cording]	✓	✓	1	✓	V	V	V
						✓	
	[Operation Mode] [Body(B.I.S.) / Lens(O.I.S.)] [When to Activate] [E-Stabilization (Video)] [Boost I.S. (Video)] [Anamorphic (Video)] [Lens Information] [Self Timer] [Self Timer For Video]	Comparison (Video) Compari	Sthers (Video)]	(Video) (Vid	V		

Specifications

The specifications are subject to change for performance enhancement.

Digital camera body (DC-S9):

Information for your safety

Power source:

9.0 V===

Power consumption:

3.9 W (when recording with the monitor), 3.3 W (when playing back with the monitor)

[When using the interchangeable lens (S-R2060)]

4.2 W (when recording with the monitor), 3.6 W (when playing back with the monitor)

[When using the interchangeable lens (S-R28200)]

4.0 W (when recording with the monitor), 3.4 W (when playing back with the monitor)

[When using the interchangeable lens (S-R1840)]

Type

Type

Digital Single Lens Mirrorless camera

Lens mount

Leica Camera AG L-Mount

Recording media

SD memory card / SDHC memory card*1 / SDXC memory card*1

*1 Compliant with UHS-I/UHS-II UHS Speed Class 3, UHS-II Video Speed Class 90

Image sensor

Image sensor

35 mm full-frame (35.6 mm×23.8 mm) CMOS sensor, a total of approx. 25,300,000 pixels, primary color filter

Effective number of pixels of the camera

Approx. 24,200,000 pixels

Latitude

14+ stops ([V-Log])

Recording format for still images

File format for still images

JPEG (DCF compliant, Exif 3.0 compliant) / RAW

Picture size (pixels)

When the aspect ratio setting is [4:3]

[L]: 5328×4000 (3536×2656)*2

[M]: 3792×2848 (2560×1920)*2

[S]: 2688×2016 (1840×1376)*2

[XS]: 1712×1280 (1712×1280)*2

High Resolution mode ([XL]): 10656×8000

High Resolution mode ([LL]): 7552×5664

When the aspect ratio setting is [3:2]

[L]: 6000×4000 (3984×2656)*2

[M]: 4272×2848 (2880×1920)*2

[S]: 3024×2016 (2064×1376)*2

[XS]: 1920×1280 (1920×1280)*2

High Resolution mode ([XL]): 12000×8000

High Resolution mode ([LL]): 8496×5664

```
When the aspect ratio setting is [16:9]
```

[L]: 6000×3368 (3984×2240)*2

[M]: 4272×2400 (2880×1624)*2

[S]: 3024×1704 (2064×1160)*2

[XS]: 1920×1080 (1920×1080)*2

High Resolution mode ([XL]): 12000×6736

High Resolution mode ([LL]): 8496×4784

When the aspect ratio setting is [1:1]

[L]: 4000×4000 (2656×2656)*2

[M]: 2848×2848 (1920×1920)*2

[S]: 2016×2016 (1376×1376)*2 [XS]: 1280×1280 (1280×1280)*2

High Resolution mode ([XL]): 8000×8000

High Resolution mode ([LL]): 5664×5664

When the aspect ratio setting is [65:24]

[L]: 6000×2208

When the aspect ratio setting is [2:1]

[L]: 6000×3000

*2 Figures in parentheses are for APS-C lenses

Image quality for pictures

Fine / Standard / RAW+Fine / RAW+Standard / RAW

Recording format for video

Video format

MP4 (H.264/MPEG-4 AVC, H.265/HEVC) MP4 (Lite) (H.265/HEVC) MOV (H.264/MPEG-4 AVC, H.265/HEVC)

Audio compression format

MP4 / MP4 (Lite): AAC (2ch, 48 kHz/16 bit)
MOV: LPCM (2ch, 48 kHz/24 bit, 96 kHz/24 bit)

System frequency

59.94 Hz / 50.00 Hz / 24.00 Hz

Image quality for video

Refer to the "[Rec Quality]" pages for information about resolution, recording frame rate, and other elements of recording quality. (→[Rec Quality]: 123)

S&Q (Slow & Quick)

[System Frequency]: [59.94Hz (NTSC)]

When [Image Area of Video] is set to [FULL]

[FHD/60p/420/10-L]*3 / [FHD/30p/420/10-L]*3 / [FHD/24p/420/10-L]*3

Frame rate: 1 fps to 180 fps

When [Image Area of Video] is set to [APS-C]

[C4K/30p/420/10-L] / [C4K/24p/420/10-L] / [4K/30p/420/10-L] / [4K/24p/420/10-L]

Frame rate: 1 fps to 60 fps

[FHD/60p/420/10-L]*3 / [FHD/30p/420/10-L]*3 / [FHD/24p/420/10-L]*3

Frame rate: 1 fps to 180 fps

[System Frequency]: [50.00Hz (PAL)]

When [Image Area of Video] is set to [FULL]

[FHD/50p/420/10-L]*3 / [FHD/25p/420/10-L]*3

Frame rate: 1 fps to 180 fps

When [Image Area of Video] is set to [APS-C]

[C4K/25p/420/10-L] / [4K/25p/420/10-L]

Frame rate: 1 fps to 60 fps

[FHD/50p/420/10-L]*3 / [FHD/25p/420/10-L]*3

Frame rate: 1 fps to 180 fps

[System Frequency]: [24.00Hz (CINEMA)]

When [Image Area of Video] is set to [FULL]

[FHD/24p/420/10-L]*3

Frame rate: 1 fps to 180 fps

When [Image Area of Video] is set to [APS-C]

[C4K/24p/420/10-L] / [4K/24p/420/10-L]

Frame rate: 1 fps to 60 fps [FHD/24p/420/10-L]*3

Frame rate: 1 fps to 180 fps

*3 There is cropping for 151 fps or more

Monitor

Type

Aspect ratio 3:2, 3.0 inches, approx. 1,840,000 dots monitor, capacitive touch screen

Field of view ratio

Approx. 100 %

Focus

AF type

TTL type based on image detection (image plane phase detection AF/contrast AF)

Focus mode

AFS / AFC / MF

AF mode

Tracking*4 / Full Area AF*4 / Zone (Horizontal/Vertical)*4 / Zone*4 /

1-Area+Supplementary*4 / 1-Area*4 / Pinpoint

Focus area selection is possible by touching

*4 Automatic detection (Human, Animal, Car, Motorcycle) can be switched ON/OFF

AF Micro Adjustment

Yes (All / Adjust By Lens)

Exposure control

Light metering system, Light metering mode

1728-zone metering, multi-metering / center-weighted metering / spot metering / highlight-weighted metering

Metering range

EV 0 to EV 18 (F2.0 lens, ISO100 conversion)

Exposure

Program AE (P) / Aperture-Priority AE (A) / Shutter-Priority AE (S) / Manual Exposure (M)

Exposure compensation

1/3 EV steps, ±5 EV

ISO sensitivity for still images (standard output sensitivity)

Normal: AUTO / 50^{*5} / 100 to 51200 / 102400^{*5} / 204800^{*5}

[V-Log]: AUTO / 320*5 / 640 to 51200

*5 When [Extended ISO] is set

Switchable between 1/3 EV and 1 EV steps

ISO sensitivity for video (standard output sensitivity)

Normal: AUTO $/50^{*6}$ /100 to 51200 $/102400^{*6}$ $/204800^{*6}$

[V-Log]: AUTO / 320*6 / 640 to 51200

HLG: AUTO / 400 to 51200 / 102400*6 / 204800*6

*6 When [Extended ISO] is set

• Switchable between 1/3 EV and 1 EV steps

Dual Native ISO setting

Normal:

[AUTO]: Base sensitivity: 100 / 640 (dB display values are based on 100)

AUTO / 50*7 / 100 to 51200 / 102400*7 / 204800*7

[LOW]: Base sensitivity: 100 AUTO / 50*7 / 100 to 800 [HIGH]: Base sensitivity: 640

AUTO / 320*7 / 640 to 51200 / 102400*7 / 204800*7

[V-Log]:

[AUTO]: Base sensitivity: 640 / 4000 (dB display values are based on 640)

AUTO / 320^{*7} / 640 to 51200 [LOW]: Base sensitivity: 640 AUTO / 320^{*7} / 640 to 5000 [HIGH]: Base sensitivity: 4000 AUTO / 2000^{*7} / 4000 to 51200

HLG:

[AUTO]: Base sensitivity: 400 / 2500 (dB display values are based on 400)

AUTO / 400 to 51200 / 102400*7 / 204800*7

[LOW]: Base sensitivity: 400

AUTO / 400 to 3200

[HIGH]: Base sensitivity: 2500

AUTO / 2500 to 51200 / 102400*7 / 204800*7

Cinelike D2/Cinelike V2:

[AUTO]: Base sensitivity: 200 / 1250 (dB display values are based on 200)

AUTO / 100*7 / 200 to 51200 / 102400*7 / 204800*7

[LOW]: Base sensitivity: 200

AUTO / 100*7 / 200 to 1600

[HIGH]: Base sensitivity: 1250

AUTO / 640^{*7} / 1250 to 51200 / 102400 *7 / 204800 *7

*7 When [Extended ISO] is set

Image stabilizer

Image stabilizer type

Compliant with Image sensor shift type, 5-axis stabilizer, Dual I.S.2

Image stabilizer effect

In-body image stabilizer: 5.0 stops

[Focal length f=60 mm, using an interchangeable lens (S-R2060)]

Dual I.S.2: 6.5 stops

[Focal length f=200 mm, using an interchangeable lens (S-E70200)]

(Based on the CIPA standard, Yaw/Pitch direction)

White balance

White balance mode

AWB / AWBc / AWBw / Daylight / Cloudy / Shade / Incandescent lights / Set mode 1, 2, 3, 4 / Color temperature 1, 2, 3, 4

AWB lock supported

Shutter

System

Electronic shutter

Shutter speed

Pictures:

Time (max. approx. 60 seconds*8), 60*8 seconds to 1/8000 of a second

*8 When the ISO sensitivity is higher than 1600, the shutter speed will be faster than 60 seconds.

Videos:

1/25*9 of a second to 1/16000 of a second

*9 When [Exposure Mode] is set to [M] in Creative Video mode and focus mode is set to [MF], this can be set up to 1/2 of a second

Burst recording

Electronic shutter

[SH] / [SH PRE]: 30 frames/second ([AFS], [AFC], [MF])

High speed: 9 frames/second ([AFS], [MF]) / 8 frames/second ([AFC])

Medium speed: 5 frames/second ([AFS], [AFC], [MF])

Low speed: 2 frames/second ([AFS], [AFC], [MF])

Maximum number of frames recordable (SH burst recording)

 $\hbox{[FINE] / [STD.] / [RAW+FINE] / [RAW+STD.] / [RAW]: 36 frames}$

Maximum number of frames recordable (High speed, medium speed, low speed)

High speed:

[FINE] / [STD.]: 120 frames or more

[RAW+FINE] / [RAW+STD.]: 35 frames or more

[RAW]: 55 frames or more

Medium speed:

[FINE] / [STD.]: 200 frames or more

[RAW+FINE] / [RAW+STD.]: 50 frames or more

[RAW]: 200 frames or more

Low speed:

[FINE] / [STD.]: 200 frames or more

[RAW+FINE] / [RAW+STD.]: 200 frames or more

[RAW]: 200 frames or more

 Using a Nextorage SDXC memory card compliant with UHS-II UHS Speed Class 3 (When recording is performed under the test conditions specified by Panasonic)

Zoom

Hybrid Zoom (Photo)/Crop Zoom (Photo)

Max. Approx. 3x ([Minimum Image Size]: when [XS] is selected)

Hybrid Zoom (Video)/Crop Zoom (Video)

Max. Approx. 3x*10 ([Rec Quality]: when FHD video is selected)

*10 Max. Approx. 2× when using APS-C lenses

Microphone / Speaker

Microphone

Stereo

Speaker

Monaural

Interface

USB

USB Type-C®, USB 10Gbps

HDMI

HDMI Type D

[MIC]

Ø3.5 mm stereo mini jack

Mic Input (Plug-in Power) / Mic Input / Line Input (Operate the menu to switch between these inputs)

Standard input level: -55 dBV (Mic Input) / -10 dBV (Line Input)

Splash Resistant

No

External dimensions / Mass (Weight)

External dimensions

Approx. 126.0 mm (W)×73.9 mm (H)×46.7 mm (D) (4.96" (W)×2.91" (H)×1.84" (D)) (excluding the projecting parts)

Mass (Weight)

Approx. 486 g/1.08 lb (camera body, with battery and card)

Approx. 403 g/0.89 lb (only camera body)

Operating environment

Recommended operating temperature

0 °C to 40 °C (32 °F to 104 °F)

Permissible relative humidity

10 %RH to 80 %RH

Wi-Fi

Compliance standard

IEEE 802.11a/b/g/n/ac (standard wireless LAN protocol)

Frequency range used (central frequency)

Specifications vary depending on the country or area where the camera was purchased.

Refer to the "Operating Instructions / Owner's Manual <Quick Start Guide>" (supplied) for details.

Encryption method

Wi-Fi compliant WPA™ / WPA2™ / WPA3™

Access method

Infrastructure mode

Bluetooth

Compliance standard

Bluetooth v5.0, Bluetooth Low Energy (BLE)

Frequency range used (central frequency)

2402 MHz to 2480 MHz

The symbols on this product (including the accessories) represent the following:

===	DC			

35 mm full-frame interchangeable Lens:

S-R2060 "LUMIX S 20-60mm F3.5-5.6"

Mount

Leica Camera AG L-Mount

Focal length

f=20 mm to 60 mm

Lens construction

11 elements in 9 groups (2 aspherical lenses, 3 ED lenses, 1 UHR lens)

Aperture type

9 diaphragm blades / circular aperture diaphragm

Maximum aperture

F3.5 (Wide) to F5.6 (Tele)

Minimum aperture value

F22

Angle of view

94° (Wide) to 40° (Tele)

In focus distance

0.15 m (0.49 feet) to ∞ (Wide to focal length 26 mm) / 0.4 m (1.31 feet) to ∞ (Tele) (from the focus distance reference line)

Maximum image magnification

0.43× (focal length 26 mm)

Optical Image Stabilizer

Nο

Filter diameter

67 mm

Maximum diameter

Ø77.4 mm (3.0")

Overall length

Approx. 87.2 mm (3.4") (from the tip of the lens to the base side of the lens mount)

Mass (Weight)

Approx. 350 g (0.77 lb)

Dust and splash resistant

Yes

Recommended operating temperature

-10 °C to 40 °C (14 °F to 104 °F)

Permissible relative humidity

10 %RH to 80 %RH

35 mm full-frame interchangeable Lens:

S-R28200 "LUMIX S 28-200mm F4-7.1 MACRO O.I.S."

Mount

Leica Camera AG L-Mount

Focal length

f=28 mm to 200 mm

Lens construction

17 elements in 13 groups (1 aspherical lens, 4 ED lenses, 1 UHR lens)

Aperture type

9 diaphragm blades / circular aperture diaphragm

Maximum aperture

F4 (Wide) to F7.1 (Tele)

Minimum aperture value

F32 (Wide) to F45 (Tele)

Angle of view

75° (Wide) to 12° (Tele)

In focus distance

0.14 m (0.46 feet) to ∞ (Wide) / 0.65 m (2.13 feet) to ∞ (Tele) (from the focus distance reference line)

Maximum image magnification

0.50× (Wide)

Optical Image Stabilizer

Yes

Filter diameter

67 mm

Maximum diameter

Ø77.3 mm (3.04")

Overall length

Approx. 93.4 mm (3.68") (from the tip of the lens to the base side of the lens mount)

Mass (Weight)

Approx. 413 g (0.91 lb)

Dust and splash resistant

Yes

Recommended operating temperature

-10 °C to 40 °C (14 °F to 104 °F)

Permissible relative humidity

10 %RH to 80 %RH

35 mm full-frame interchangeable Lens:

S-R1840 "LUMIX S 18-40mm F4.5-6.3"

Mount

Leica Camera AG L-Mount

Focal length

f=18 mm to 40 mm

Lens construction

8 elements in 7 groups (3 aspherical lenses, 2 ED lenses, 1 UHR lens)

* The protective glass is not included

Aperture type

7 diaphragm blades / circular aperture diaphragm

Maximum aperture

F4.5 (Wide) to F6.3 (Tele)

Minimum aperture value

F22 (Wide) to F32 (Tele)

Angle of view

100° (Wide) to 57° (Tele)

In focus distance

0.15 m (0.49 feet) to ∞ (Wide to focal length 21 mm) / 0.35 m (1.15 feet) to ∞ (Tele) (from the focus distance reference line)

Maximum image magnification

0.28× (focal length 21 mm)

Optical Image Stabilizer

No

Filter diameter

62 mm

Maximum diameter

Ø67.9 mm (2.67")

Overall length

Approx. 40.9 mm (1.61") (from the tip of the lens to the base side of the lens mount when the lens barrel is retracted)

Mass (Weight)

Approx. 155 g (0.34 lb)

Dust and splash resistant

Yes

Recommended operating temperature

-10 °C to 40 °C (14 °F to 104 °F)

Permissible relative humidity

10 %RH to 80 %RH

Trademarks and Licenses

- L-Mount is a trademark or registered trademark of Leica Camera AG.
- "Nextorage" is a registered trademark or trademark of Nextorage corporation.
- SDXC Logo is a trademark of SD-3C, LLC.





 The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator. Inc.



• USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

 QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.



- HDAVI Control™ is a trademark of Panasonic Holdings Corporation.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Windows is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries
- Apple, Final Cut Pro, Mac, and macOS are trademarks or registered trademarks of Apple Inc. in the United States and/or other countries.
- App Store is a service mark of Apple Inc.
- Google, Android and Google Play are trademarks of Google LLC.

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.
- "Wi-Fi®" is a registered trademark of Wi-Fi Alliance®.
- "WPA™", "WPA2™", and "WPA3™" are trademarks of Wi-Fi Alliance[®].
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Other names, company names, product names mentioned in this document are trademarks or registered trademarks of the companies concerned.



This product incorporates the following software:

- (1) the software developed independently by or for Panasonic,
- (2) the software owned by third party and licensed to Panasonic,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/ or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof displayed by selecting [MENU/SET] ⇒ [Setup] ⇒ [Others] ⇒ [Firmware Version] ⇒ [Software info].

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0 or LGPL V2.1, as well as the respective copyright notice thereof.

Contact Information: oss-cd-request@gg.jp.panasonic.com

The source code and the copyright notice are also available for free in our website below.

https://panasonic.net/cns/oss/index.html

This product is licensed under the AVC Patent Portfolio License for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA,

See http://www.mpegla.com

Disposal of Old Equipment and Batteries Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local authority.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved

Firmware Update

Firmware Ver. 1.1: F-3

A firmware update has been made available to improve camera capabilities and to add functionality.

The subsequent sections describe functions that have been added or modified.

- To check the firmware version of the camera, select [Firmware Version] in the [Setup] ([Others]) menu.
- For the latest information on the firmware or to download/update the firmware, visit the following support site:

https://panasonic.jp/support/global/cs/dsc/download/index4.html (English only)

About Applications/Software

When you have updated the firmware for the camera, use the latest version of the application for your smartphone or the software for your PC.

"LUMIX Lab"

• Install or update the application on your smartphone.

"LUMIX Sync"

• Install or update the application on your smartphone.

"LUMIX Tether"

 Check the following site and then download and install the software: https://panasonic.jp/support/global/cs/soft/download/d_lumixtether.html (English only)

Firmware Ver. 1.1

- [Video Record Limit] Menu Has Been Added: F-4
- Frame Marker Function Has Been Enhanced: F-5
- Automatic Detection Function Has Been Enhanced: F-9
- Functions Added to "LUMIX Lab": F-13
- Additions/Changes to Other Functions: F-20
- Added Menus: F-22

[Video Record Limit] Menu Has Been Added

You can now use a menu to set whether to limit continuous recording time for video or not

⇒ [≯] ⇒ [↑] ⇒ [Video Record Limit]

 When set to [ON], a single recording stops once the recording time exceeds the following:

[Rec Quality]	Continuous recording time
6K video, 5.9K video	10 minutes
3.8K video, 3.3K video, C4K video, 4K video	15 minutes
FHD video	20 minutes

 When set to [OFF], you can keep recording with no limit on continuous video recording time. However, when the camera's internal temperature becomes high, recording may stop to protect the camera.

You can record for a longer time, but the camera body will become hot.

Use a tripod, etc., because recording with a handheld camera for long periods can cause low temperature burns.

• Set to [ON] when recording with a handheld camera.

Restarting Video Recording After Stopping Due to Temperature Increase in the Camera

If video recording stops due to temperature increase in the camera, the temperature in the camera needs to be lowered before video recording can be started again.

- We recommend turning the camera off to lower the temperature in the camera.
- The continuous recording time for video after restarting depends on the standby time (the amount of time the camera was off for).

Frame Marker Function Has Been Enhanced

A maximum of 3 frames can be displayed.

You can set different aspect ratios, frame colors, and frame sizes/positions for each of the frames.

- Composition of [SET] Menus Has Been Changed: F-6
- The Setting Method for [CUSTOM] in [Frame Aspect] Has Been Changed: F-8

Composition of [SET] Menus Has Been Changed

[ON]	Displays the frame on the recording screen.		
[OFF]	_		
[SET]	[Frame 1]	Defeate #F 41/F 21/F 21	
	[Frame 2]	Refer to "[Frame 1]/[Frame 2]/[Frame 3] Settings".	
	[Frame 3]	- Settings .	
	(Frame Mook)	Sets the opacity of the outside of the frame.	
	[Frame Mask]	[100%]/[75%]/[50%]/[25%]/[OFF]	
	[Live View Frame Adjustment]	When set to [ON], the [Change Size/Position]	
		setting screen is displayed when you touch a	
		frame in the recording screen.	
		[ON]/[OFF]	


[Frame 1]/[Frame 2]/[Frame 3] Settings

[Frame Aspect]	Sets the aspect ratio of the frame. [2.39:1]/[2.35:1]/[2.00:1]/[17:9]/[1.85:1]/[16:9]/ [3:2]/[4:3]/[5:4]/[7:6]/[1:1]/[6:7]/[4:5]/[3:4]/ [2:3]/[9:16]/[9:17]/[CUSTOM]/[OFF]	
[Frame Color]	Sets the color of the frame.	
[Change Size/Position]	Sets the size and position of a frame.	

When [Change Size/Position] Is Selected

You can change the size and position of the frame while maintaining the aspect ratio of the frame.

 - You can change the height, width, and position of the frame if you select [CUSTOM] in [Frame Aspect]. (→The Setting Method for [CUSTOM] in [Frame Aspect] Has Been Changed: F-8)
- Press ▲▼◀► to move the center position.
- Set the size with [**] or [**].
- The position of the frame can be moved by dragging the center frame inside the frame in the recording screen. The size of the frame can be changed by dragging the frame at the top right of the frame.
- Press [Q] to switch the frame to be changed.




- (A) Center coordinates (0 being the center of the screen)
- (B) Frame size
- Frame size can be set in the range between 20 % and 100 %.
- The first press of [DISP.] returns the frame position to the center.
 The second press returns the frame size to the default.

The Setting Method for [CUSTOM] in [Frame Aspect] Has Been Changed

The [CUSTOM] setting in [Frame Aspect] is performed with [Change Size/Position].

 - Select [SET] in the [Frame Marker] menu.
- Select one of [Frame 1] to [Frame 3] and then select [CUSTOM] in [Frame Aspect].
- 3 Select [Change Size/Position].
- Press ▲▼◀► to move the center position.
- The position of the frame can be moved by dragging the center frame inside the frame in the recording screen. The height and width of the frame can be changed by dragging the frame at the top or right edge of the frame.
- Press [Q] to switch the frame to be changed.



- (A) Center coordinates (0 being the center of the screen)
- (B) Height and width of the frame
- Frame size can be set in the range between 20 % and 100 %.
- The first press of [DISP.] returns the frame position to the center.
 The second press returns the frame size to the default.

Automatic Detection Function Has Been Enhanced

It is now possible to set the subjects [TRAIN] and [AIRPLANE] for automatic detection.

Furthermore, you can now select the [Target Parts] for [CAR] and [MOTORCYCLE].

- How to Set Automatic Detection: F-9
- Types of Automatic Scene Detection (Intelligent Auto Mode): F-12

How to Set Automatic Detection

When automatic detection is enabled, subjects for recording are automatically detected and the camera focuses.



- Not all subjects can be detected according to the settings.
- When [Detecting Subject] ([Type of Subject]) is [ANIMAL], some subjects that are not animals may be detected as animals.

Set [AF Detection Setting] to [ON].

- You can also press ▲ in the AF mode selection screen to switch automatic detection [ON]/[OFF].

2 Select [Detecting Subject].

- • | → []/[] → [Detecting Subject]
- Select [Type of Subject] and [Target Parts].
- It is also possible to select by pressing [DISP.] in the AF mode selection screen.


		B
	[HUMAN]	Detects humans.
		Select either [Eye/Face/Body] or [Eye/Face] for the
		[Target Parts].
		• [ଛ] or [⊛] is displayed on the AF mode icon.
		Detects animals.
		Select either [Body] or [Eye/Body] for the [Target
		Parts].
	[ANIMAL]	Animals that can be detected are birds, canines
		(including wolves, etc.), and felines (including
		lions, etc.).
		• [🖁] or [😸] is displayed on the AF mode icon.
[Type of	[CAR]	Detects cars (mainly for motor sports).
		Select either [Entire Subject] or [Main Part Priority]
		for the [Target Parts].
Subject]		• [] or [ឝ] is displayed on the AF mode icon.
	[MOTORCYCLE]	Detects motorcycles (mainly for motor sports).
		Select either [Entire Subject] or [Helmet Priority] for
		the [Target Parts].
		• [⁂] or [♬] is displayed on the AF mode icon.
	[TRAIN]	Detects railroad cars.
		Select either [First Car] or [Main Part Priority] for
		the [Target Parts].
		• [✍] or [♀] is displayed on the AF mode icon.
	[AIRPLANE]	Detects aircraft and helicopters.
		Select either [Airframe] or [Nose Priority] for the
		[Target Parts].
		• [♣] or [♣] is displayed on the AF mode icon.

[Target
Parts1

Select the part to be brought into focus.

The parts you can select depend on the [Type of Subject] setting.

 m



 When a person's eyes are detected, the eye closer to the camera will be brought into focus.

The exposure will be adjusted to the face. (When [Metering Mode] is set to $\hbox{\tt [}\textcircled{\hbox{\tt op}}\hbox{\tt]})$

• Depending on [Detecting Subject], the number of subjects that can be detected at once with [IIIIII] of the AF mode will be different.

[HUMAN] ([Eye/Face/Body], [Eye/Face]): Maximum 15 (maximum 3 bodies detected)

[ANIMAL] ([Body]), [CAR], [MOTORCYCLE], [TRAIN], [AIRPLANE]: Maximum 3 [ANIMAL] ([Eye/Body]): Maximum 1

Automatic detection may not be available due to the camera settings.

Types of Automatic Scene Detection (Intelligent Auto Mode)

		Taking pictures	Recording video
i?	i-Portrait*1	✓	✓
7	i-Scenery	✓	✓
₩.	i-Macro	✓	✓
72	i-Night Scenery	✓	
iO	i-Food	✓	
=	i-Sunset	✓	
i 🗠	i-Low Light		✓
iA	iA ^{*2}	✓	✓

^{*1} Detected when [Detecting Subject] ([Type of Subject]) in the [Photo] ([Focus]) menu is set to [HUMAN].

^{*2} Detected when [Detecting Subject] ([Type of Subject]) in the [Photo] ([Focus]) menu is set to other than [HUMAN].

Functions Added to "LUMIX Lab"

The following functions have been added to "LUMIX Lab":

- [Remote shooting]: F-13
- [Shutter Remote Control]: F-16
- Sending Images on the Camera to a Smartphone with Simple Operations: F-18

[Remote shooting]

You can use the smartphone to record from a remote location while viewing the live view images from the camera.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- On the smartphone, start up "LUMIX Lab".

Select [Remote shooting] in the [Camera] screen.

 
• Connect to the camera with Wi-Fi. Select [Join] to start the connection.



(A) [Remote shooting]

2 Start recording.

• The recorded image is saved on the camera.



- (B) Takes a picture
- (C) Starts/ends the video recording



- When used in combination with [Auto Transfer], it is possible to automatically transfer the remotely recorded images to a smartphone.
- If [Auto Transfer] is set to [ON] using the setting menu for remote recording, it is enabled when you return to the camera screen from the remote recording screen.



• Certain features, including some settings, may not be available.

Operation Method During Remote Recording

Set either the camera or the smartphone as the priority control device to be used during remote recording.

Touch [] in the "LUMIX Lab" remote recording screen.

• The icon switches each time you touch it.

িতা (Camera prioritized)

Operation is possible on both the camera and the smartphone.

• The camera's dial settings, etc. cannot be changed with the smartphone.

(Smartphone prioritized)

Operation is possible only on the smartphone.

- The camera's dial settings, etc. can be changed with the smartphone.
- To end remote recording, press any of the buttons on the camera to turn on the screen, and select [End].
- The default setting is [[]] (Camera prioritized).

[Shutter Remote Control]

You can use the smartphone as a remote control for the shutter.

Getting started:

- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- On the smartphone, start up "LUMIX Lab".
 - Select [Shutter Remote Control] in the [Camera] screen.



(D) [Shutter Remote Control]

2 Start recording.







Starts/ends the video recording



Takes a picture

Bulb Recording

The shutter can be kept open from the start to end of recording, which is useful for recording of starry skies or night scenery.

Getting started:

- Set the camera to [M] mode.
- Set the camera shutter speed to [T] (Time).
- 1 Touch [] to start recording (keep touching, without removing your finger).
- 2 Remove your finger from [] to end recording.
 - Slide [] in the direction of [LOCK] to record with the shutter button locked in a fully-pressed state.
 - (Slide [_] back to its original position or press the camera shutter button to end recording)
 - During [B] (Bulb) recording, if the Bluetooth connection is broken, then carry out Bluetooth connection again, then end recording from the smartphone.



• When [Auto Transfer] is set to [ON], [Shutter Remote Control] cannot be used.

Sending Images on the Camera to a Smartphone with Simple Operations

You can transfer pictures to a smartphone connected by Bluetooth just by pressing [Q] during playback.

You can also use the menu to connect easily.

 You can also perform the same operation by pressing the Fn button registered with [Send Image (Smartphone)].

Getting started:

- Install "LUMIX Lab" on your smartphone.
- Connect the camera to a smartphone by Bluetooth. (→Connecting to a Smartphone (Bluetooth Connection): 592)
- Press [] on the camera to display the playback screen.

Send a single image

- 1 Press **◄►** to select the image.
- 2 Press [Q].

4

- 3 Select [Single Select].
 - To change the send settings of images, press [DISP.].
 - Select [OK] on the smartphone.
 - This connects automatically using Wi-Fi.

 
Send multiple images

- Press [Q].
- 2 Select [Multi Select].
 - To change the send settings of images, press [DISP.].
- 3 Select the images and then transfer.
 - ◆►: Select images
 - : Set/Cancel

[DISP.]: Transfer

- 4 Select [OK] on the smartphone.
 - This connects automatically using Wi-Fi.

Using the menu to transfer easily



Settings: [Single Select]/[Multi Select]

- If [Multi Select], use the same operation as with "Send multiple images". (->Send multiple images: F-18)



- It is not possible to transfer images with file sizes exceeding 4 GB.
- Images recorded using the following function cannot be transferred:
 - [MOV] videos
- When recording, recording is prioritized so it will take time for sending to complete.
- If the camera is turned off, or the Wi-Fi is disconnected before sending is completed, then sending will not restart.
- You may not be able to delete files or use the [Playback] menu while sending.
- When [Auto Transfer] is set to [ON], [Send Image (Smartphone)] cannot be used.

Additions/Changes to Other Functions

- Menu Name of [Priority of Remote Device] Has Been Changed: F-20
- Composition of [Bluetooth] Menus Has Been Changed: F-21

Menu Name of [Priority of Remote Device] Has Been Changed

The name of the [Priority of Remote Device] menu has been changed.

You can set whether operations with the camera or the smartphone are prioritized during remote recording using LUMIX Sync.

Composition of [Bluetooth] Menus Has Been Changed

The composition of the [Bluetooth] menus in the [Setup] ([IN/OUT]) menu has been changed.

[Bluetooth®]

[Bluetooth Function]		
[Dairing]	[Add New Device]	
[Pairing]	[Delete]	
[Send Image (Smartphone)]		
[Auto Transfer]		
[Location Logging]		
[LUMIX Sync Settings]	[Remote Wakeup]	
	[Returning from Sleep Mode]	
	[Auto Clock Set]	
	[Wi-Fi network settings]	

Added Menus

Specifications information for the menus added by the firmware update.

- List of Default Settings/Custom Saving/Settings Available for Copying
- R: Using [Reset], the function to return to default settings
- : Using [Save to Custom Mode], the function to save settings details in the Custom mode
- ■: Using [Save/Restore Camera Setting], the function to copy settings details

Menu	Default setting	R.	₊ C	•	
/ [Setup]: 🛅 [Monitor / Display]					
[Video Record Limit]	[ON]	✓			