


**Panasonic®**

**Owner's Manual  
INTERCHANGEABLE LENS FOR  
DIGITAL CAMERA**

**Manuel d'utilisation  
OBJECTIF INTERCHANGEABLE  
POUR APPAREIL PHOTO NUMÉRIQUE**  
**Instrucciones de  
funcionamiento**  
**ÓPTICA INTERCAMBIABLE PARA  
CÁMARA DIGITAL**

Model No./Modèle/Modelo N.  
**S-E100**

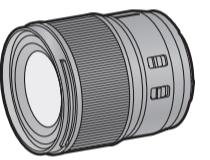

**PP**  
DVQX2443ZB  
F1123KN1123

If you have any questions, visit:  
USA : <http://shop.panasonic.com/support>  
Canada : [www.panasonic.ca/english/support](http://www.panasonic.ca/english/support)





Pour toute assistance supplémentaire, visitez :  
Pour les États-Unis seulement : [www.panasonic.ca/french/support](http://www.panasonic.ca/french/support)

Register online at  
<http://shop.panasonic.com/support/register>  
(U.S. customers only)  
Pour les États-Unis seulement

Panasonic Corporation of North America  
Two Riverfront Plaza, Newark, NJ 07102-5490  
<http://shop.panasonic.com>

Panasonic Canada Inc.  
5770 Ambler Drive, Mississauga, Ontario L4W 2T3  
[www.panasonic.com](http://www.panasonic.com)

© Panasonic Entertainment  
& Communication Co., Ltd. 2024  
Printed in China / Imprimé en Chine /  
Impreso en China

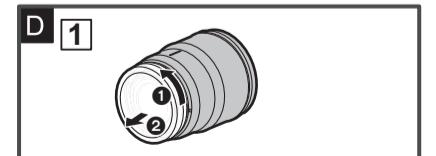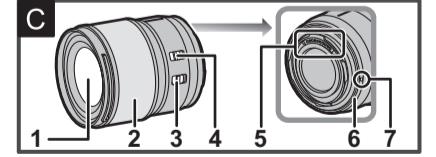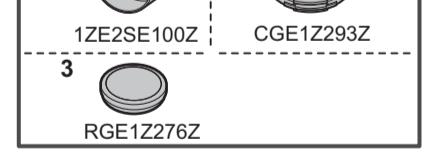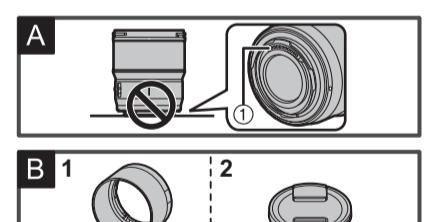

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.**  
FCC Note:  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.


FCC Caution:  
• Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity  
Trade Name: Panasonic  
Model No.: S-E100  
Responsible Party: Panasonic Corporation of North America  
Two Riverfront Plaza, Newark, NJ 07102-5490  
Support Contact: <http://shop.panasonic.com/support>

**CAN ICES-003(B) / NMB-003(B)**

**THE FOLLOWING APPLIES ONLY IN CANADA.**  
For U.S.A.]  
To dispose of your product, please recycle in accordance with local environmental regulations.  
For further recycling please visit <https://shop.panasonic.com/recycle>

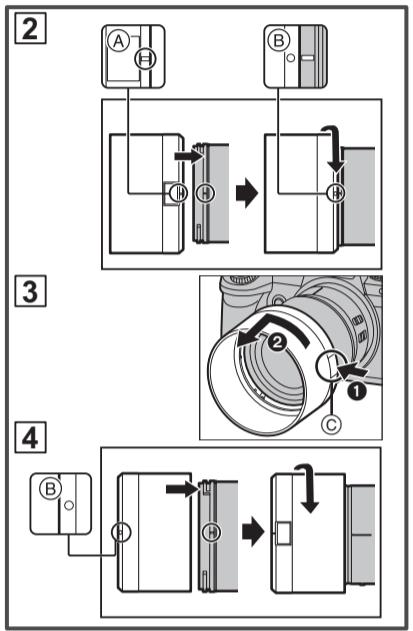

**ENGLISH**

Thank you for purchasing a Panasonic product.  
Please read these instructions carefully before using this product, and save this manual for future use.

This lens can be attached for use to a digital camera that complies with the Leica Camera AG L-Mount standard. It is compatible with a 35 mm full-frame image sensor.

• For smoother recording, we recommend updating the firmware of the digital camera/lens to the latest version.

• For the latest information on the firmware or to download/upgrade the software, visit the following website:

<https://panasonic.jp/support/global/cs/dsc/> (English only)

• L-Mount is a trademark or registered trademark of Leica Camera AG.

• Other names, company names, product names mentioned in this document are trademarks or registered trademarks of the companies concerned.

• The appearance and specifications of products described in this document may differ from the actual products you purchased due to later editions.

**Information for Your Safety**

Keep the unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games, radio transmitters, high-voltage lines etc.).

• Do not use the unit near mobile phones because doing so may affect the performance of the phone and the pictures and sound.

• If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery and/or the connected AC adaptor. Then reinsert the battery and/or the connected AC adaptor and turn the camera on.

The FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:  
• Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity

Trade Name: Panasonic

Model No.: S-E100

Responsible Party: Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

Support Contact: <http://shop.panasonic.com/support>

**CAN ICES-003(B) / NMB-003(B)**

**THE FOLLOWING APPLIES ONLY IN CANADA.**

For U.S.A.]

To dispose of your product, please recycle in accordance with local environmental regulations.

For further recycling please visit <https://shop.panasonic.com/recycle>

**Precautions**

**Handling of the lens**

- When using this lens, take care not to drop, bump, or apply undue force to it. Doing so may cause malfunction or damage.
- Images may be affected by dust, dirt, and soiling on the lens surface. Before and after recording, use a blower to blow off dust and dirt from the surface of the lens, then lightly wipe with a soft dry cloth.
- When the lens is not in use, be sure to attach the lens cap and lens rear cap to prevent dust and other particles from accumulating on or entering the lens.
- To protect the lens contact points (①), do not do the following. These may cause malfunction.

(See illustration [1])

- Touch the lens contact points.
- Place the lens with its mount surface facing down.

**Dust and splash resistant**

- Splash Resistant and Dust Resistant terms are used to describe an extra level of protection this lens offers against exposure to a minimal amount of moisture, water or dust. These do not guarantee that damage will not occur if this lens is subjected to direct contact with water or dust.
- Take the following precautions to provide satisfactory dust and splash resistant performance. If the lens is not working properly, consult the dealer or Panasonic.
- Attach to a digital camera that is dust and splash resistant.
- When attaching or removing the lens, be careful so that foreign objects such as sand, dust, and water droplets do not adhere to or leave marks on the lens mount rubber, contact points, digital camera and lens. If the lens is exposed to water droplets or other liquids, wipe them off with a soft, dry cloth.
- To improve the dust and splash resistant performance of the lens, a lens mount rubber is used in the mount.
- The lens mount rubber will leave smudges on the digital camera mount, but this does not impact performance.
- For information on changing the lens mount rubber, contact Panasonic.

**Condensation (when the lens is fogged up)**

- Condensation occurs when the ambient temperature or humidity changes. Please be careful, as it may cause lens stains, mold and malfunction.
- If condensation occurs, turn off the digital camera and leave it for approximately 2 hours. The fog will disappear when the temperature of the digital camera becomes close to the ambient temperature.

**B Supplied Accessories**

Check that all the accessories are supplied before using the product.  
Product number correct as of January 2024. These may be subject to change.

- 1 Lens hood
- 2 Lens cap\*
- 3 Lens rear cap\*

\* Fitted to the lens at the time of purchase.

**C Names and Functions of Components**

1 Lens surface

2 Focus ring  
Rotates the focus ring to focus when set to MF (Manual Focus). You can set the amount of movement for focusing using the focus ring with the menus in compatible digital cameras. Refer to the operating instructions for the digital camera for details.

3 AF/MF switch

Switches between AF (Auto Focus) and MF (Manual Focus). When the digital camera is set to MF, the operation will be MF irrespective of the setting on the AF/MF switch.

4 Focusing distance range selector switch

You can select the focusing distance range for AF. ([FULL]: 0.204 m (0.669 feet) to ∞ / [0.5m-∞]: 0.5 m (1.64 feet) to ∞ / [0.204-0.5m]: 0.204 m (0.669 feet) to 0.5 m (1.64 feet))

• The focusing range of AF increases when you limit the focusing distance range for AF.

5 Contact points

6 Lens mount rubber

7 Lens fitting mark

**Note**

• While shooting video, in some situations, AF operation of the lens may be heard. In such situations changing to MFT will improve this situation.

**D Attaching the Lens**

For information on how to attach the lens, refer to the operating instructions for your digital camera.

- Attach the lens after turning off the digital camera.
- Attach the lens after removing the lens rear cap.

(See illustration [1])

- After removing the lens from the digital camera, be sure to attach the lens cap and lens rear cap to prevent dust and other particles from accumulating on or entering the lens.

**E Attaching the lens hood**  
(See illustration [2])

- 1 Align mark ① (□) on the lens hood with the mark on the tip of the lens.

- 2 Rotate the lens hood in the direction of the arrow to align mark ② (○) on the lens hood with the mark on the tip of the lens.

- Attach the lens hood by rotating it until it clicks.

**F Removing the lens hood**  
(See illustration [3])

While pressing the lens hood button ③, rotate the lens hood in the direction of the arrow and then remove it.

**Note**

- When using this lens, take care not to drop, bump, or apply undue force to it. Doing so may cause malfunction or damage.

- Images may be affected by dust, dirt, and soiling on the lens surface. Before and after recording, use a blower to blow off dust and dirt from the surface of the lens, then lightly wipe with a soft dry cloth.

- It is recommended to remove the lens hood during flash photography as the lens hood can block the light from the flash.

- To prevent dropping of the lens, you should never carry the lens by just holding the lens hood.

**G Notes on filter use**

- It is possible to attach the lens cap or the lens hood with the filter.
- There may be some vignetting in recorded images if multiple filters are attached simultaneously.
- It is not possible to attach any items other than filters such as a conversion lens or adapter to the front of the lens. Lens damage may result if such items are attached.

**About Macro Recording**

The lens is designed to allow you to focus anywhere from the macro range (close-up distance) to infinity. For this reason, its focus lens moves a greater distance than a standard lens when focusing from close-up to take long shots. Please also note that the size of the area that can be brought into focus becomes much smaller in the macro range. When you have trouble bringing close-up subjects into focus, use a tripod or check the digital camera's focus settings.

We recommend that you take pictures with either of the following settings when using a Panasonic digital camera:

- Reduce the AF area during auto focus.
- Use manual focus (MF) to focus.

For details, refer to the operating instructions for the digital camera.

**H About the Exposure**

The difference between the nominal F value (aperture value displayed on the camera) and the effective F value (actual aperture value) may be larger when taking pictures with the macro function, which allows you to take pictures of close-up subjects enlarged. When using a commercially available distance meter, it is necessary to correct the value depending on the magnification and distance from the subject.

• When using the camera to take pictures with the macro function, it is necessary to correct the value depending on the magnification and distance from the subject.

• It is not necessary to correct the difference between the nominal F value and the effective F value with the automatic exposure of the camera, since it will determine the exposure by measuring the light coming through the lens.

**I About the Protection**

The difference between the nominal F value (aperture value displayed on the camera) and the effective F value (actual aperture value) may be larger when taking pictures with the macro function, which allows you to take pictures of close-up subjects enlarged. When using a commercially available distance meter, it is necessary to correct the value depending on the magnification and distance from the subject.

• When using the camera to take pictures with the macro function, it is necessary to correct the value depending on the magnification and distance from the subject.

• It is not necessary to correct the difference between the nominal F value and the effective F value with the automatic exposure of the camera, since it will determine the exposure by measuring the light coming through the lens.

**J About the Protection**

The difference between the nominal F value (aperture value displayed on the camera) and the effective F value (actual aperture value) may be larger when taking pictures with the macro function, which allows you to take pictures of close-up subjects enlarged. When using a commercially available distance meter, it is necessary to correct the value depending on the magnification and distance from the subject.

• When using the camera to take pictures with the macro function, it is necessary to correct the value depending on the magnification and distance from the subject.

• It is not necessary to correct the difference between the nominal F value and the effective F value with the automatic exposure of the camera, since it will determine the exposure by measuring the light coming through the lens.

**K About the Protection**

The difference between the nominal F value (aperture value displayed on the camera) and the effective F value (actual aperture value) may be larger when taking pictures with the macro function, which allows you to take pictures of close-up subjects

# Garantie limitée

POUR LE CANADA SEULEMENT

Panasonic Canada Inc.

5770, Ambler Drive, Mississauga (Ontario) L4W 2T3

PRODUIT PANASONIC – GARANTIE LIMITÉE

Panasonic Canada Inc. garantit que ce produit est exempt de défauts de matériaux et de main-d'œuvre dans un contexte d'utilisation normale pendant la période indiquée ci-après à compter de la date d'achat original et, dans l'éventualité d'une défectuosité, accepte, à sa discrétion, de (a) réparer le produit avec des pièces neuves ou remises à neuf, (b) remplacer le produit par un produit neuf ou remis à neuf d'une valeur équivalente ou (c) rembourser le prix d'achat. La décision de réparer, remplacer ou rembourser appartient à Panasonic Canada Inc.

<b>Objectif interchangeable pour appareil photo</b>	<b>Un (1) an, pièces et main-d'œuvre</b>
---	--

## Shop Accessories!

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of your Panasonic products

Accessories & Parts for your Camera, Phone, A/V products, TV, Computers & Networking, Personal Care, Home Appliances, Headphones, Batteries, Backup Chargers & more...

### Customer Services Directory

For Product Information, Operating Assistance, Parts, Owner's Manuals, Dealer and Service info go to <http://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1- 877-833-8855

As of August 2023

## ONLY FOR CANADA

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

### PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

### Interchangeable Lens for Digital Camera

One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

**IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED**

### LIMITATIONS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

### THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".

#### THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL

#### DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

#### ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America  
Consumer Affairs Department  
Two Riverfront Plaza  
Newark NJ 07102-5490

**THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL**

**DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY.**

(As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable.

This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

**WARRANTY SERVICE**  
**For product operation, repairs and information assistance, please visit our Support page:**

[www.panasonic.ca/english/support](http://www.panasonic.ca/english/support)

## Dépannage

Un cliquetis, etc., se fait entendre lorsque l'appareil photo numérique est mis en/hors marche ou lorsque l'objectif est secoué.  
Il y a un bruit provenant de l'objectif lors des prises de vues.

## Spécifications

Ces spécifications peuvent être soumises à des changements pour de meilleures performances.

### OBJECTIF INTERCHANGEABLE POUR APPAREIL PHOTO NUMÉRIQUE "LUMIX S 100mm F2.8 MACRO"

<b>Monture</b>	L-Mount de Leica Camera AG
<b>Longueur focale</b>	f=100 mm
<b>Construction de l'objectif</b>	13 éléments dans 11 groupes (3 lentilles asphériques, 2 lentilles UED, 1 lentille ED)
<b>Type de diaphragme</b>	9 lamelles de diaphragme/diaphragme à ouverture circulaire
<b>Ouverture maximale</b>	F2.8
<b>Valeur d'ouverture minimum</b>	F22
<b>Angle de vue</b>	24°
<b>Distance de mise au point</b>	[FULL]: 0,204 m (0,669 pi) à ∞ / [0,5m-∞]: 0,5 m (1,64 pi) à ∞ / [0,204-0,5m]: 0,204 m (0,669 pi) à 0,5 m (1,64 pi) (à partir de la ligne de référence de la distance de mise au point)
<b>Grossissement maximum de l'image</b>	1,0X
<b>Stabilisateur optique de l'image</b>	Non
<b>Diamètre filtre</b>	67 mm
<b>Diamètre maximum</b>	Ø73,6 mm (2,9 po)
<b>Longueur totale</b>	Environ 82,0 mm (3,2 po) (du bout de l'objectif à la base de la monture de l'objectif)
<b>Poids</b>	Environ 298 g (0,66 lb)
<b>Résistance à la poussière et aux éclaboussures</b>	Oui
<b>Température de fonctionnement recommandée</b>	-10 °C à 40 °C (14 °F à 104 °F)
<b>Humidité relative admissible</b>	10 %RH à 80 %RH

## Prevención contra las averías

### ■ Manipulación de la lente

Al utilizar esta lente, tenga cuidado de no dejarla caer, golpearla o aplicar una fuerza excesiva sobre ella. Hacerlo podría causar un mal funcionamiento o daños en la lente y la cámara digital.

Las imágenes pueden verse afectadas por el polvo y la suciedad (agua, aceite, huellas dactilares, etc.) de la superficie de la lente. Antes y después de grabar, use un soplador para eliminar el polvo y la suciedad de la superficie de la lente y luego limpie ligeramente con un paño suave y seco para eliminar la suciedad.

Cuando la lente no esté en uso, asegúrese de colocar la tapa de la lente y la tapa trasera de la lente para evitar que el polvo y otras partículas se acumulen en la lente o entren en ella. Para proteger los puntos de contacto de la lente ①, no haga lo siguiente, ya que podría causar un mal funcionamiento. (Ver ilustración A)

- Al colocar o quitar la lente, tenga cuidado de que materiales extraños como arena, polvo o gotas de agua no se adhieran a la lente o entren en la goma de montaje, los puntos de contacto, la cámara digital y la lente.  
- Si la lente quedara expuesta a gotas de agua u otros líquidos, séquela con un paño suave seco.  
- Para mejorar la resistencia al polvo y a las salpicaduras, se puede colocar la tapa de la lente o la visera de la lente con el filtro ya puesto.  
- Dejar que los puntos de contacto de la lente se ensucien. Colocar la lente con la superficie de montaje hacia abajo.

### ■ Resistencia al polvo y a las salpicaduras

Resistencia al polvo y a las salpicaduras es un término que se utiliza para describir un nivel adicional de protección que esta lente ofrece frente a la exposición a una cantidad mínima de humedad, agua y polvo. Este término no garantiza que no se produzcan daños si esta lente se somete a contacto directo con agua o infiltración de polvo. Tome las siguientes precauciones para un rendimiento satisfactorio de resistencia al polvo y a las salpicaduras. Si la lente no funciona correctamente, consulte con su distribuidor o con Panasonic.

- Montela en una cámara digital que sea resistente al polvo y a las salpicaduras.  
- Al colocar o quitar la lente, tenga cuidado de que materiales extraños como arena, polvo o gotas de agua no se adhieran a la lente o entren en la goma de montaje, los puntos de contacto, la cámara digital y la lente.  
- Si la lente quedara expuesta a gotas de agua u otros líquidos, séquela con un paño suave seco.  
- Para mejorar la resistencia al polvo y a las salpicaduras de la lente, en la montura se utiliza una goma de montaje de la lente.  
- La goma de montaje de la lente dejará marcas de roce en la montura de la cámara digital, pero esto no afecta al desempeño.  
- Para obtener información sobre cómo cambiar la goma de montaje de la lente, póngase en contacto con el Manual del usuario de la cámara digital.

### ■ Acerca de la exposición

La lente está diseñada para realizar cualquier enfoque, desde el rango macro (distancia de primer plano) hasta el infinito. Es por ello que su lente de enfoque se mueve más que una lente normal y por lo general, la operación de enfoque automático tarda más. Asimismo, tenga en cuenta que el tamaño de la zona que se puede enfocar se vuelve más pequeño en el rango macro. Cuando tenga problemas para enfocar sujetos que están en primer plano, use un trípode o compruebe los ajustes de enfoque de la cámara digital.

Le recomendamos que tome las imágenes con cualquiera de los siguientes ajustes cuando use una cámara digital Panasonic:  
- Reduzca el área AF durante el enfoque automático.  
- Use el enfoque manual (MF) para enfocar.

Para obtener más información, consulte el Manual del usuario de la cámara digital.

### ■ Acerca de la grabación macro

La lente está diseñada para realizar cualquier enfoque, desde el rango macro (distancia de primer plano) hasta el infinito. Es por ello que su lente de enfoque se mueve más que una lente normal y por lo general, la operación de enfoque automático tarda más. Asimismo, tenga en cuenta que el tamaño de la zona que se puede enfocar se vuelve más pequeño en el rango macro. Cuando tenga problemas para enfocar sujetos que están en primer plano, use un trípode o compruebe los ajustes de enfoque de la cámara digital.

Le recomendamos que tome las imágenes con cualquiera de los siguientes ajustes cuando use una cámara digital Panasonic:  
- Reduzca el área AF durante el enfoque automático.  
- Use el enfoque manual (MF) para enfocar.

Para obtener más información, consulte el Manual del usuario de la cámara digital.

### ■ Condensación (cuando las lentes están empañadas)

La condensación se produce cuando la temperatura ambiente o la humedad cambia. Tenga cuidado con la condensación, ya que podría provocar manchas y moho en la lente y producirse un mal funcionamiento.

Si se produce condensación, apague la cámara digital y déjela aprox. 2 horas. La neblina desaparecerá naturalmente cuando la temperatura de la cámara digital se acerque a la temperatura ambiente.

### ■ Accesorios suministrados

Para una grabación más uniforme, se recomienda que actualice el firmware de la cámara digital/ente con la versión más reciente.

Para la información más reciente sobre el firmware o para descargarlo/actualizarlo, visite la siguiente página de atención al cliente:  
<https://panasonic.jp/support/global/cs/dsc/> (Solo en inglés)

L-Mount es una marca comercial o marca comercial registrada de Leica Camera AG.

Otros nombres, números de empresas y nombres de producto mencionados en este documento son marcas comerciales o marcas comerciales registradas de las empresas en cuestión.

La apariencia y las especificaciones de los productos descritos en este documento pueden diferir de los productos reales comprados debido a posteriores mejoras.

### ■ Información para su seguridad

Mantenga la unidad lo más lejos que sea posible de equipos electromagnéticos (como hornos de microondas, televisores, video juegos, transmisores radio, líneas de alta tensión, etc.).

No utilice la cámara cerca de teléfonos móviles, ya que lo de hacerlo puede producir ruido que afectará negativamente a las imágenes y el sonido.

Si la cámara queda afectada negativamente por un equipo electromagnético y deja de funcionar correctamente, apague la cámara y quite la batería y/o el adaptador de CA conectado. Luego vuelva a insertar la batería y/o vuelva a conectar el adaptador de CA y encienda la cámara.

### LO SIGUIENTE SÓLO SE APLICA EN LOS E.E. UU.

Nota FCC: Este equipo se ensayó y se encontró que cumple con los límites de un dispositivo digital de la Clase B, de acuerdo con la Parte 15 de las Reglas FCC. Dichos límites se han previsto para proporcionar una razonable protección contra las interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede radiar frecuencias radio y, por si no se instala y no se utiliza según dichas instrucciones, puede causar interferencias dañinas en las comunicaciones radio. Sin embargo, no hay ninguna garantía que dichas interferencias puedan ocurrir en instalaciones especiales. Si este equipo no causa interferencias dañinas a recepción de radio o televisión, que pueden ser determinadas apagando y enciendo el equipo, se anima al usuario a intentar corregir la interferencia por medio de una o más de las medidas a continuación:

• Vuelva a orientar o colocar la antena receptora.

• Aumente el espacio separador entre el equipo y el receptor.

### ■ Goma de montaje de la lente

### ■ Marca para ajustar la lente

#### ■ Nota

• Si el sonido del funcionamiento AF le molesta durante la grabación de video, se recomienda ajustar en MF.

• Cualquier cambio o modificación no autorizada en este equipo anulará la autoridad del usuario para operar este dispositivo.

Este dispositivo cumple con la Parte 15 de las Reglas FCC. Su funcionamiento está sujeto a las dos condiciones de funcionamiento a continuación: (1) Este dispositivo no puede causar interferences dañinas y (2) este dispositivo tiene que aceptar cualquier interferencia recibida, incluyendo la que puede causar un funcionamiento no deseado.

Declaración de conformidad del proveedor

Nombre comercial: Panasonic

Modelo N.:

Parte responsable: Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ

07102-5490