

# Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per Pentax K-1 II +

24-70mm o cerca il tuo prodotto tra le migliori offerte di Fotocamere



e\_kb597\_cover\_6mm.fm Page 1 Friday, December 22, 2017 3:06 PM



1-3-6, Nakamagome, Ohta-ku, Tokyo 143-8555, JAPAN

(http://www.ricoh-imaging.co.jp)

RICOH IMAGING EUROPE S.A.S.

Parc Tertiaire SILIC 7-9, avenue Robert Schuman - B.P. 70102,

94513 Rungis Cedex, FRANCE

(http://www.ricoh-imaging.eu)

CORPORATION

RICOH IMAGING AMERICAS 5 Dedrick Place, West Caldwell, New Jersey 07006, U.S.A.

(http://www.us.ricoh-imaging.com)

RICOH IMAGING CANADA

5560 Explorer Drive Suite 100, Mississauga, Ontario, L4W 5M3, CANADA

(http://www.ricoh-imaging.ca)

RICOH IMAGING (

INC.

RICOH IMAGING CHINA CO., 23D, Jun Yao International Plaza, 789 Zhaojiabang Road, Xu Hui District,

Shanghai, 200032, CHINA

(http://www.ricoh-imaging.com.cn)

### http://www.ricoh-imaging.co.jp/english


This contact information may change without notice. Please check the latest information on our websites.

# **RICOH**

**SLR Digital Camera** 

PENTAX IC-111

**Operating Manual** 

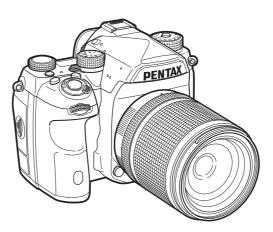



To ensure the best performance from your camera, please read the Operating Manual before using the camera.

Introduction

Getting Started 2

Shooting 3


Playback 4

Sharing 5

Settings

Appendix

 • Specifications and external dimensions are subject to change without notice.



Copyright © RICOH IMAGING COMPANY, LTD. 2018 R01DTA18 Printed in Philippines





## For Using Your Camera Safely

We have paid close attention to the safety of this camera. When using this camera, we request your special attention regarding items marked with the following symbols.



### Warning

This symbol indicates that ignoring this item could cause serious personal injuries.



#### Caution

This symbol indicates that ignoring this item could cause minor or medium personal injuries, or loss of property.

### **About the Camera**



## Warning

- Do not disassemble or modify the camera. High voltage areas are present inside the camera, with the risk of electric shock.
- If the camera interior is exposed due to dropping or otherwise damaging the camera, never touch the exposed portion. There is a risk of electric shock
- Do not aim the camera at the sun or other strong light sources when taking pictures or leave the camera sitting in direct sunlight with a lens cap off. Doing so may cause the camera to malfunction or cause a fire.
- Do not look at the sun or other strong light sources through a lens. Doing so may lead to a loss of eyesight or cause vision to be impaired.
- If any irregularities occur during use, such as smoke and a strange odor, stop using the camera immediately, remove the battery or the AC adapter, and contact your nearest service center. Continued use can cause a fire or electric shock.



### Caution

- Do not place your finger over the flash when discharging the flash. You may burn yourself.
- Do not cover the flash with clothing when discharging the flash.
   Discoloration may occur.
- Some portions of the camera heat up during use. There is a risk of low temperature burns when holding such portions for long periods.
- Should the monitor be damaged, be careful of glass fragments. Also, be careful not to allow the liquid crystal to get on your skin or in your eyes or mouth.
- Depending on your individual factors or physical condition, the use of the camera may cause itching, rashes or blisters. In case of any abnormality, stop using the camera and get medical attention immediately.

## **About the Battery Charger and AC Adapter**



- Always use the battery charger and AC adapter exclusively developed for this camera, with the specified power and voltage. Using a battery charger or AC adapter not exclusive to this camera, or using the exclusive battery charger or AC adapter with an unspecified power or voltage can cause a fire, electric shock, or camera breakdown. The specified voltage is 100 - 240V AC.
- Do not disassemble or modify the product. This can cause a fire or electric shock.
- If the generation of smoke or strange odor from the product or other abnormality occurs, immediately discontinue using and consult your nearest service center. Continued use can cause a fire or electric shock.
- If water should happen to get inside the product, consult your nearest service center. Continued use can cause a fire or electric shock.
- If you see a lightning flash or hear thunder during use of the battery charger or AC adapter, unplug the power plug and discontinue using. Continued use can cause damage to the product, fire or electric shock.
- Wipe off the power plug if it should become covered with dust. Accumulated dust may cause a fire.
- To reduce the risk of hazards, use only CSA/UL certified power supply cord set, cord is Type SPT-2 or heavier, minimum NO.18 AWG copper, one end with a molded-on male attachment plug cap (with a specified NEMA configuration), and the other is provided with a molded-on female connector body (with a specified IEC nonindustrial type configuration) or the equivalent.



### Caution

- Do not place or drop heavy objects on or forcefully bend the AC plug cord. Doing so may damage the cord. Should the AC plug cord be damaged, consult your nearest service center.
- Do not touch or short-circuit the terminal area of the AC plug cord while the cord is plugged in.
- Do not handle the power plug with wet hands. This can cause an electric shock.
- Do not drop the product, or subject it to violent impact. This can cause the product to breakdown.
- Do not use the battery charger D-BC90 to charge batteries other than the rechargeable lithium-ion battery D-LI90. Attempting to charge other types of batteries may cause an explosion or heating, or may damage the battery charger.

## About the Rechargeable Lithium-ion Battery



## /!\ Warning

 If any leakage from the battery should come in contact with your eyes, do not rub them. Flush your eyes with clean water and get medical attention immediately.



### Caution

- · Only use the specified battery with this camera. Use of other batteries may cause an explosion or fire.
- · Do not disassemble the battery. Disassembling the battery may cause an explosion or leakage.
- · Remove the battery from the camera immediately if it becomes hot or begins to smoke. Be careful not to burn yourself during removal.
- Keep wires, hairpins, and other metal objects away from the + and contacts of the battery.
- · Do not short the battery or dispose of the battery in fire. This can cause an explosion or fire.
- · If any leakage from the battery should come in contact with skin or clothing, it may cause irritation to the skin. Wash the affected areas thoroughly with water.
- Precautions for D-LI90 Battery Usage:
- USE SPECIFIED CHARGER ONLY, RISK OF FIRE AND BURNS.
- DO NOT INCINERATE.
- DO NOT DISASSEMBLE.
- DO NOT SHORT CIRCUIT.
- DO NOT EXPOSE TO HIGH TEMP. (140°F / 60°C)
- SEE MANUAL

## Keep the Camera and its Accessories out of the Reach of Small Children



### Warning

- · Do not place the camera and its accessories within the reach of small children.
- 1. If the product falls or is operated accidentally, it may cause serious personal injuries.
- 2. Wrapping the strap around a neck may cause suffocation.
- 3. To avoid the risk of a small accessory such as the battery or memory cards from being swallowed by mistake, keep them out of the reach of small children. Seek medical attention immediately if an accessory is accidentally swallowed.

Memo

1	Introducing the K-1 Mark II
2	Getting Started
3	Taking Pictures
4	Playback Functions
5	Sharing Images
6	Changing the Settings
7	Appendix

# How to Use This Manual

1
Introducing the K-1 Mark IIp.9
Gives you an overview of the K-1 Mark II.  Read this and get to know your K-1 Mark II!
☐ Checking the Contents of the Packagep.9
Names and Functions of the Working Partsp.10
☐ Display Indicatorsp.14
$\hfill \square$ How to Change Function Settingsp.22
☐ Menu Listp.25
Menu Listp.25
2 Getting Startedp.37
2
Getting Startedp.37 Explains how to get your K-1 Mark II ready for
Getting Startedp.37  Explains how to get your K-1 Mark II ready for shooting as well as basic operations.
Getting Started
Getting Started
Getting Started
Getting Started

3	
Taking Pictures	p.48
Once you've confirmed that the camera w properly, try out the camera and take lots	
Configuring the Capture Settings	p.48
Taking Still Pictures	p.49
Recording Movies	p.53
Setting the Exposure	p.55
Setting the Focus Method	p.57
Setting the Drive Mode	p.62
Setting the White Balance	p.69
Using a Flash	p.71
☐ Controlling the Image Finishing Tone	p.72
Correcting Images	p.75
Using the GPS	p.79

4
Playback Functionsp.83
Explains various operations for playing back and editing images.
☐ Playback Mode Palette Itemsp.83
☐ Changing the Playback Methodp.84
☐ Editing and Processing Imagesp.88
5
Sharing Imagesp.94
Explains how to connect your K-1 Mark II to a computer or communication device to operate the camera and use images in the camera.
☐ Using the Camera with a Computerp.94
☐ Using the Camera with a Communication
Devicep.95
6
Changing the Settingsp.97
Explains how to change other settings.
☐ Camera Settingsp.97
☐ File Management Settingsp.103

7
Appendixp.108
Provides other resources to get the most from your K-1 Mark II.
☐ Restrictions on the Combinations of Special
Functionsp.108
☐ Functions Available with Various Lenses
p.109
☐ Functions when Using an External Flash
p.112
☐ Troubleshootingp.114
☐ Main Specificationsp.117
☐ Indexp.124
☐ Care to be Taken During Handlingp.128
WARRANTY POLICYp.131

There is a possibility that the illustrations and the display screen of the monitor in this manual are different from the actual ones.

## Contents

How to Use This Manual	4
ntroducing the K-1 Mark II	9
Checking the Contents of the Package	9
Names and Functions of the Working Parts	10
Operating Controls	
Adjusting the Angle of the Monitor	13
Display Indicators	14
Monitor	
Viewfinder	
LCD Panel	
How to Change Function Settings	
Using the Direct Keys	
Using the Smart Function	
Using the Menus	
Menu List	
Rec. Mode Menus	
Movie Menus	
Playback Menu	
Set-up Menus	32
Custom Setting Menus	35
Getting Started	37
Attaching the Strap	37
Attaching a Lens	37
Using the Battery and Charger	38
Charging the Battery	38
Inserting/Removing the Battery	
Using the AC Adapter	
Inserting a Memory Card	40
Initial Settings	
Turning the Camera On	
Setting the Display Language	41

Setting the Date and Time Setting the LCD Display	
Formatting a Memory Card	
Basic Shooting Operation	4
Shooting with the Viewfinder	
Shooting while Viewing the Live View Image	4
Reviewing Images	4
Taking Pictures	48
Configuring the Capture Settings	
Memory Card Settings	
Image Capture Settings	
Movie Capture Settings	
Setting the Angle of View	
Taking Still Pictures	
Exposure Modes	
EV Compensation	
Using the Electronic Shutter	
Recording Movies  Playing Back Movies	
, ,	
Setting the Exposure	
AE Metering	
Setting the Focus Method	
Setting the Autofocus when Shooting with	
the Viewfinder	5 <sup>-</sup>
Setting the Autofocus when Shooting with	_
Live View	
AF Fine Adjustment	
Checking the Depth of Field (Preview)	
Setting the Drive Mode	
Continuous Shooting	
Remote Control	
Bracketing	
Dracketing	0、

Mirror Lock-up Shooting	66
Multi-exposure	67
Interval Shooting	68
Setting the White Balance	69
Adjusting the White Balance Manually	70
Adjusting the White Balance with Color	
Temperature	71
Using a Flash	71
Connecting a Flash	
Setting the Flash Mode	
Controlling the Image Finishing Tone	
Custom Image	
Digital Filter	
Correcting Images	
Brightness Adjustment	
Shake Reduction	
Lens Correction	
Quality Level and Texture Adjustment	
Composition Adjustment	78
Using the GPS	
Performing a Calibration	
Recording the Camera Route (GPS Logging) .	
Shooting Celestial Bodies (ASTROTRACER) .	
Playback Functions	83
Playback Mode Palette Items	
Changing the Playback Method	
Displaying Multiple Images	
Displaying Images by Folder	
Displaying Images by Shooting Date	
Playing Back Images Continuously	
Displaying Rotated Images Connecting the Camera to an AV Device	
•	
Editing and Processing Images	
Copying an Image	
Changing the Image Size	
Correcting Color Moiré	
Processing Images with Digital Filters Editing Movies	
Eululig Movies	91

Developing RAW Images	92
Sharing Images	94
Using the Camera with a Computer	94
Setting the Connection Mode	94
Copying an Image on the Memory Card	94
Operating the Camera with a Computer	95
Using the Camera with a Communication	
Device	
Enabling the Wi-Fi™ Function	95
Operating the Camera with a Communication	
Device	96
Changing the Settings	97
Camera Settings	97
Customizing the Button/E-dial Functions	
Setting the Monitor and Indicator Lamps	100
Saving Frequently Used Settings	101
Selecting Settings to Save in the Camera	102
File Management Settings	
Protecting Images from Deletion	
Specifying the Folder/File Settings	
Setting the Copyright Information	
Displaying the Local Date and Time of the Specifi	
City	106
Appendix	108
Restrictions on the Combinations of Speci	al
Functions	
Functions Available with Various Lenses	109
Using the Aperture Ring	
Performing Catch-in Focus Shooting	111
Setting the Focal Length	
Functions when Using an External Flash	112
Troubleshooting	
Sensor Cleaning	
Error Messages	

Main Specifications	117
Operating Environment for USB Connection and	
Provided Software	123
Index	124
Care to be Taken During Handling	128
WARRANTY POLICY	131

### Regarding copyrights

Images taken with this camera that are for anything other than personal enjoyment cannot be used without permission according to the rights as specified in the Copyright Act. Please take care, as there are cases where limitations are placed on taking pictures even for personal enjoyment during demonstrations, performances or of items on display. Images taken with the purpose of obtaining copyrights cannot also be used outside the scope of use of the copyright as laid out in the Copyright Act, and care should be taken here also.

#### To users of this camera

- Do not use or store this camera in the vicinity of equipment
  that generates strong electromagnetic radiation or
  magnetic fields. Strong static charges or the magnetic
  fields produced by equipment such as radio transmitters
  could interfere with the monitor, damage the stored data,
  or affect the camera's internal circuitry and cause camera
  misoperation.
- The liquid crystal panel used for the monitor is manufactured using extremely high precision technology. Although the level of functioning pixels is 99.99% or better, you should be aware that 0.01% or fewer of the pixels may not light up or may light up when they should not. However, this has no effect on the recorded image.
- The Shake Reduction (SR) mechanism of this camera uses the PENTAX original technology and moves the image sensor to an appropriate position at high speed with a magnetic force, which reduces image blurring caused by camera motion. A rattling sound is made when the camera is shaken, for example, by changing its orientation, but this is not a malfunction.
- In this manual, the generic term "computer(s)" refers to either a Windows<sup>®</sup> PC or a Macintosh.
- In this manual, the term "battery(ies)" refers to any type of batteries used for this camera and its accessories.

### Regarding User Registration

In order to better serve you, we request that you complete the user registration, which can be found on the CD-ROM supplied with the camera or on our website. Thank you for your cooperation.

http://www.ricoh-imaging.com/registration/

## **Checking the Contents of the Package**



Hot shoe cover Fk (Installed on camera)



Body mount cap K II (Installed on camera)



Eyecup F<sub>T</sub> (Installed on camera)



ME viewfinder cap



Sync socket 2P cap (Installed on camera)



Triangular ring and protective cover (Installed on camera)



Battery grip terminal cover (Installed on camera)



Rechargeable lithium-ion battery D-LI90



Battery charger D-BC90



AC plug cord



Strap O-ST162



Software (CD-ROM) S-SW171




Operating Manual (this manual)


### Lenses you can use

Lenses that can be used with this camera are D FA, DA, DA L, FA, and FA J lenses and lenses that have an **A** (Auto) position on the aperture ring. To use any other lens or accessory, see p.109.

## Names and Functions of the Working Parts

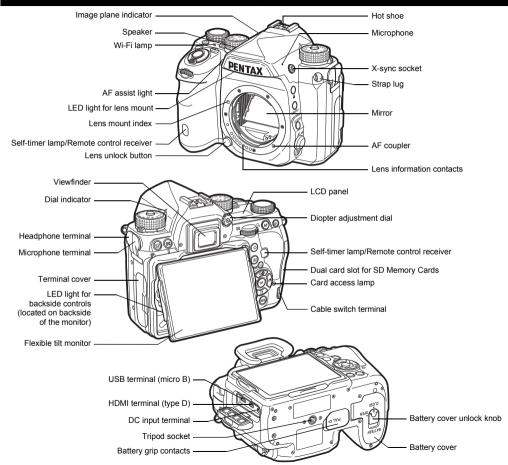

## **Operating Controls**

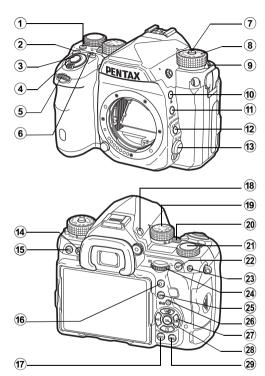

1 Illumination button ( )

Provides lighting for the LCD panel, the backside controls, the lens mount, and the card slot/connector. You can set whether to turn on the light or not for each part. (p.100)

2 ISO button (SO)

Press to change the ISO sensitivity. (p.55)

## 3 Shutter release button (SHUTTER)

Press to capture images. (p.45) In playback mode, press halfway to switch to capture mode.

(4) Main switch

Turns the power on or off, or activates the preview function. (p.41, p.61)

#### 5 Front e-dial (

Changes the values for camera settings such as exposure. (p.50)

You can change the menu category when a menu screen is displayed. (p.24)

In playback mode, use this to select a different image.

### 6 EV Compensation button (☑)

Press to change the exposure compensation value. (p.52)

### 7 Mode dial lock button

Press to allow the mode dial to be turned. (p.44)

8 Mode dial

Changes the capture mode. (p.49)

### 9 Mode dial lock release lever

Use this lever to release the mode dial lock to operate the mode dial without pressing the mode dial lock button. (p.46)

### 10 Lock button (11)

Temporarily disables dial and button operations to prevent misoperation. (p.46)

## 1 RAW/Fx1 button ( 1)

You can assign a function to this button. (p.97)

## 12 AF Mode button ( )

Press to change the autofocus mode or the focusing area. (p.58)

### 13 Focus mode switch

Changes the focus mode. (p.57)

## 

Press to change the metering method. (p.56) In playback mode, press to delete images. (p.47)

15 Live View button (Ⅳ)

Displays the Live View image. (p.45)

### 16 Green button (O)

Resets the value being adjusted.

Switches to ISO AUTO when adjusting the sensitivity.

### 17 INFO button (INFO)

Changes the style of the display on the monitor. (p.14, p.18)

## 18 GPS button (GPS)

Turns the GPS function on or off. (p.79)

### 19 Function dial

Selects the function to change its settings with the setting dial. (Smart Function, p.22)

### 20 Capture mode selector switch

Switches between (still picture) mode and (movie) mode. (p.44)

## 21 Setting dial

Changes the settings for the function selected with the function dial. (Smart Function, p.22)

### 22 AF button (AE)

Available for adjusting focus, instead of pressing **SHUTTER** halfway. (p.57)

## 23 AE Lock button (AEI)

Locks the exposure value before shooting. In playback mode, press to save the last captured JPEG image also in RAW format. (p.47)

### 24 Rear e-dial ( )

Changes the values for camera settings such as exposure. (p.50)

You can change the menu tabs when a menu screen is displayed. (p.24)

You can change camera settings when the control panel is displayed. (p.23)

In playback mode, use this to magnify the image or display multiple images at the same time. (p.47, p.84)

### 25 Playback button ( )

Switches to playback mode. (p.47) Press the button again to switch to capture mode.

## ②6 Change AF Point/Card slot switch button (██/□□2)

Enables changing the focusing area. (p.58) In playback mode, press this button to switch between the memory cards inserted in the two slots, SD1 and SD2. (p.47)

### ② Four-way controller (▲▼◀►)

Displays the Drive Mode, White Balance, or Custom Image setup menu. (p.22)

When a menu or the control panel is displayed, use this to move the cursor or change the item to set.

You can assign a function to ▼ and use it as the Fx2 button (52). (p.97)

Press ▼ in single image display of the playback mode to display the playback mode palette. (p.83)

### 28 OK button (OK)

When a menu or the control panel is displayed, press this button to confirm the selected item.

### 29 MENU button (MENU)

Displays a menu. Press this button while the menu is displayed to return to the previous screen. (p.24)

## About the Four-way Controller

In this manual, each button of the four-way controller is indicated as shown in the illustration on the right.



### **About the Indicator Lamps**

You can set the illumination settings for the Wi-Fi lamp, GPS indicator lamp, self-timer lamp, and remote control receiver lamp in [Indicator Lamps] of the  $\ref{lambda}$ 2 menu. (p.100)

## **Adjusting the Angle of the Monitor**

The monitor can be moved in four directions (up, down, left, and right).

Hold the camera with one hand and hold the both the right and left of the monitor and pull it out with the other hand.



## **2** Adjust the monitor angle.

The monitor angle can be adjusted up to approximately  $44^\circ$  upward or downward, and up to approximately  $35^\circ$  to left or right.









### Caution

- · Do not forcefully pull out or apply strong force to the monitor.
- · Keep the monitor retracted when carrying the camera.

### Memo

 The monitor can be moved in four directions with it placed on the base cradle. When the monitor is pulled up from the base cradle as shown in the illustration on the right, you can take pictures by holding the camera at the waist high position.



Base cradle

- When the monitor is pulled out, you can illuminate the backside controls
  - by pressing 

    . (Default setting: Off) Change the setting in [Backside Controls] of [Illumination Settings] in the 

    . 2 menu. (o.100)
- When retracting the monitor, place the monitor on the base cradle and then push both the right and left edges of the monitor to the camera body.

## **Display Indicators**

 
## **Monitor**

## **Capture Mode**

With this camera, you can take pictures while looking through the viewfinder or while viewing the image on the monitor. When using the viewfinder, you can take pictures while checking the status screen displayed on the monitor and looking through the viewfinder. (p.44) When not using the viewfinder. you can take pictures while viewing the Live View image displayed on the monitor, (p.45)

The camera is in "standby mode" when it is ready to shoot, such as when the status screen or Live View image is displayed. Press in standby mode to display the "control panel" and change settings. (p.23) You can change the type of information displayed in standby mode by pressing NFO while the control

panel is displayed. (p.17)





Shooting Info Display selection screen

### Memo

· You can set the display color of the status screen, control panel, and menu cursor in "Initial Settings" (p.41).

### Adjusting the Monitor Brightness

If the monitor display is difficult to see when you take pictures outdoors or in other situations. adjust the brightness of the monitor in [Outdoor View Setting] of the 1 menu. When [Outdoor View Setting] is assigned to [x1] or



2. you can adjust the brightness of the monitor by a simple button operation. (p.97) By default, [Outdoor View Setting] is assigned to Fx2 (▼).

#### Standby Mode

 
The settings for shooting are displayed.

 
### Status Screen



1	2 3	4	5678
9	10	9	11
9	12	L	18
913	14	19	20 21
15	16 17		00
2324			22
2324	25 27	28 2	9 30

#### Live View





- 1 Capture mode (p.49)
- 2 AE Lock
- 3 Flash Mode (p.71)
- 4 Clarity (p.76)/Skin Tone (p.76)/Digital Filter (p.74)/HDR Capture (p.75)/Pixel Shift Resolution (p.77)
- **5** GPS positioning status (p.79)
- 6 Wi-Fi<sup>™</sup> connection status (p.95)
- 7 Shake Reduction (p.75)/ Horizon Correction/ Movie SR
- 8 Battery level
- 9 E-dial guide
- 10 Shutter speed

- 11 Aperture value
- 12 Sensitivity (p.55)
- **13** EV Compensation (p.52)/Bracketing (p.65)
- 14 EV bar scale
- **15** Operation guide for Smart Function (p.22)
- **16** AE Metering (p.56)
- 17 Focus Method (p.57)
- **18** Drive Mode (p.62)
- 19 White Balance (p.69)
- **20** Focusing area (AF point) (p.58)
- 21 Custom Image (p.72)
- 22 Operation guide for [5x2 (p.97)
- 23 Card slot number
- **24** File Format (p.48)

- 5 Image storage capacity
- 26 Flash Exposure Compensation (p.72)
- 27 White Balance fine-tuning (p.70)28 Operation controls
- disabled (p.46)
- 29 AA Filter Simulator (p.78)
- 30 Number of shots during Multi-exposure or Interval Shooting
- 31 Electronic Shutter (p.52)
- 32 Temperature warning

- 33 Crop (p.48)
- 34 Histogram
- 35 Electronic Level (horizontal tilt) (p.21)
- 36 Electronic Level (vertical tilt) (p.21)
- 37 Operation guide
- 38 Face detection frame (when [Contrast AF] is set to [Face Detection]) (p.60)
- 39 Grid Display

### Memo

- You can display grid lines on the Live View screen using the Smart Function. (p.22)

#### Control Panel

The following functions are displayed with the default setting.

#### mode mode



	1		3	3 4
	2			3 4
5	6	7	8	9
10	11	12	13	14
15	16	17	18	19
20	21	22	23	24
	31		32	33

### anode



- 26 24 6 7 19 27 28 29 21 23 30 31 32 33
- Function name
- Settina
- Card slot number
- Number of recordable still pictures/Movie recordable time
- AUTO ISO (Maximum) (p.55)
- Highlight Correction (p.75)
- Shadow Correction (p.75)
- Slow Shutter Speed NR (p.50)
- High-ISO NR (p.55)
- Clarity (p.76)
- 11 Skin Tone (p.76)
- Digital Filter (p.74)
- 13 HDR Capture (p.75)
- 14 Pixel Shift Resolution (p.77)

- 15 Distortion Correction (p.76)
- 16 Peripheral Illumination Correction (p.76)
- 17 ASTROTRACER (p.82)
- 18 AA Filter Simulator (p.78)
- 19 Shake Reduction (p.75)/ Movie SR
- 20 Memory Card Options (p.48)
- 21 Crop (p.48)
- 22 File Format (p.48)
- 23 JPEG Recorded Pixels (p.48)/Movie Recorded Pixels (p.48)
- 24 AF Assist Light (p.58)
- 25 Contrast AF (p.60)
- 26 Focus Peaking (p.59)
- 27 Recording Sound Level (p.53)

- 28 Wind Noise Reduction (p.53)
- Playback Sound Volume
- 30 Framerate (p.48)
- 31 Current date and time 32 Destination (p.106)
- 33 Operation guide for the control panel customization (p.23)

## Memo

- Refer to "Using the Control Panel" (p.23) for how to use the control panel.
- · The functions displayed on the control panel can be customized. (p.23)

### **Shooting Info Display**

You can change the type of information displayed in standby mode by pressing ■NFO while the control panel is displayed. Use ◀▶ to select the type and press OX.



### When shooting with the viewfinder

Status Screen	Displays the settings for shooting with the				
Screen	viewfinder. (p.15)				
Electronic Level	Displays the camera angle.  A bar scale indicating the horizontal camera angle appears at the center of the screen, and a bar scale indicating the vertical camera angle appears on the right side. When the angle exceeds the range that can be displayed in each bar scale, the indicator segments of the scale are displayed in red.				
Display Off	Nothing is displayed on the monitor.				
Electronic Compass	Turns on the GPS function and displays the current latitude, longitude, altitude, lens direction, Coordinated Universal Time (UTC), capture mode, and other information.				

### When shooting with Live View

Standard Information Display	The Live View image and the settings for shooting with Live View are displayed. (p.15)
Electronic Level	The electronic level is displayed in Standard Information Display.
No Information Display	Certain icons, such as those for the capture mode and drive mode, are not displayed.

### Memo

• The screen selected on the Shooting Info Display selection screen appears when the camera is turned off and on again.

## When the Camera is Held Vertically

When the camera is rotated to the vertical position, the status screen is displayed vertically. To not display the status screen vertically, set [Auto Screen Rotation] to □ (Off) in [Other Display Settings] of the ■5 menu. (p.28)



## **Playback Mode**

The captured image and shooting information are displayed in single image display of the playback mode.

Press INFO to change the type of information displayed in single image display. Use ◀▶ to select the type and press OX.







Single image display (Standard Information Display)

Playback Info Display selection screen

Standard Information Display	Captured image, file format, exposure parameters, and operation guide indicators are displayed.
Detailed Information Display	Detailed information on how and when the image was taken is displayed. (p.18)
Histogram Display	Captured image and brightness histogram are displayed. (p.19) Not available during movie playback.
RGB Histogram Display	Captured image and RGB histogram are displayed. (p.19) Not available during movie playback.
No Information Display	Only the captured image is displayed.

### Memo

- You can set overexposed areas to blink red in Standard Information Display, Histogram Display, and No Information Display. Set in [Highlight Alert] of [Image Display] in the ►1 menu.
- The screen selected on the Playback Info Display selection screen is displayed in playback mode when the camera is turned off and on again. If [Playback Info Display] is set to (Info Display) of the (Info Display) is set to (Info Display) always appears first when the camera is turned on. (p.102)

### **Detailed Information Display**

#### Still pictures





#### Movies





#### Page 2





2	3	4 5 6
1	46	47
49 50	46	48
51 52		53
41		

- Captured image
- 2 Rotation information (p.86)
- 3 Capture mode (p.49)
- 4 Protect setting (p.103)
- Card slot number in use
- Folder number-File number (p.103)
- 7 Drive Mode (p.62)
- 8 Flash Mode (p.71)
- **9** Flash Exposure Compensation (p.72)
- 10 Focus Method (p.57)

- 11 AE Metering (p.56)
- **12** Focusing area (AF point) (p.58)
- 13 Shutter speed
- 14 Aperture value
- 15 Sensitivity (p.55)
- **16** EV Compensation (p.52)
- 17 White Balance (p.69)
- 18 White Balance finetuning (p.70)
- 19 Digital Filter (p.74)


- 20 HDR Capture (p.75)/ Pixel Shift Resolution (p.77)
- 21 Clarity (p.76)
- 22 Skin Tone (p.76)
- 23 Distortion Correction (p.76)
- 24 Peripheral Illumination Correction (p.76)
- 25 Lateral Chromatic
  Aberration Adjustment
  (p.76)
- **26** Diffraction Correction (p.76)
- 27 Color Fringe Correction (p.93)
- 28 Highlight Correction (p.75)
- 29 Shadow Correction (p.75)
- 30 AA Filter Simulator (p.78)
- 31 Shake Reduction (p.75)/ Horizon Correction/ Movie SR
- **32** Crop (p.48)
- **33** File Format (p.48)
- 34 JPEG Recorded Pixels (p.48)/Movie Recorded Pixels (p.48)

- **35** JPEG Quality (p.48)
- **36** Color Space (p.48)
- 37 Color Moiré Correction (p.89)
- 38 Lens focal length
- 39 Custom Image setting (p.72)
- 40 Custom Image parameters
- 41 Operation guide
- 42 Shooting date and time
- 43 Length of time of the recorded movie
- **44** Recording Sound Level (p.53)
- 45 Framerate (p.48)
- 46 Tampered image warning
- 47 Photographer (p.106)
- 48 Copyright Holder (p.106)
- 49 Altitude
- 50 Lens direction
- 51 Latitude
- 52 Longitude
- 53 Universal Coordinated Time

## **Histogram Display**

Use  $\blacktriangle\, \blacktriangledown$  to switch between the brightness histogram and RGB histogram.


Brightness histogram

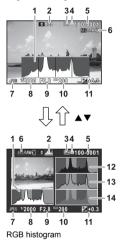

- 1 Histogram (Brightness)
- 2 RGB histogram/ Brightness histogram
- 3 Protect setting
  - 4 Card slot number in use
  - Folder number-File number
- 6 Save RAW Data
- 7 File Format
- 8 Shutter speed
- 9 Aperture value10 Sensitivity
- 11 EV Compensation
- 12 Histogram (R)
- 13 Histogram (G)
- 14 Histogram (B)

## Viewfinder

When shooting with the viewfinder, information appears in the viewfinder.

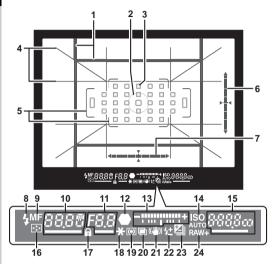

- 1 Cropping frame (p.48)2 Spot metering frame
- (p.56) **3** AF point (p.58)
- 4 Grid Display
- **5** AF frame (p.45)
- 6 Electronic Level (vertical tilt) (p.21)
- 7 Electronic Level (horizontal tilt) (p.21)
- 8 Flash indicator
- 9 Focus Method (p.57)

- 10 Shutter speed/
  Remaining processing time for Slow Shutter
  Speed NR (p.50)/AF
  Mode (p.58)/Number of shots for Bracketing
- (p.65)11 Aperture value/Bracket value (p.65)
- 12 Focus indicator
- 13 EV bar scale
- 14 ISO/ISO AUTO


- 15 Sensitivity (p.55)/ Exposure compensation value/ Image storage capacity/ AF Active Area (p.58)
  - 유구 Active Area (p.56 유- 33 Auto (33 AF Points)
  - R-9 Zone Select SEL / Select
  - SEL2 Expanded Area AF (S)
  - SE3 Expanded Area AF (M)
  - 5ELY Expanded Area AF (L)
  - 5Pat Spot

- 6 Change AF Point (p.59)
- 17 Operation controls disabled (p.46)
- 18 AE Lock
- **19** AE Metering (p.56)
- 20 Multi-exposure (p.67)
- Shake Reduction (p.75)
- 22 Flash Exposure Compensation (p.72)
- **23** EV Compensation (p.52)/Bracketing (p.65)
- 24 File Format (p.48)


### Memo

 - The information is displayed in the viewfinder when SHUTTER is pressed halfway, or during the meter operating time (default setting: 10 sec.). You can change the meter operating time in [3 Meter Operating Time] of the C1 menu. (p.35)
- The AF point in use for autofocus is emphasized when SHUTTER is pressed halfway.
- You can adjust the viewfinder image sharpness using the diopter adjustment dial.
- The display of Grid Display, Electronic Level, AF Frame, Spot Metering Frame, and AF Points can be turned on or of in

   William Country of the Texas Frame of the Country of the Country of the Texas Frame of the Country of the Country of the Texas Frame of the Country of the Country



  The viewfinder is illuminated when focusing the subject or changing the focusing area in a dark place. To change the illumination method, set in [9 Viewfinder Light] of the C2 menu. (p.35)




### **Electronic Level**

You can check whether the camera is tilted by displaying the electronic level. The electronic levels for the vertical and horizontal camera angles can be displayed in the viewfinder and on the Live View screen. (p.15)

Select whether to display the electronic level in [Viewfinder Overlay] and [Live View] of the 5 menu. (p.27)

### Memo

## **LCD Panel**

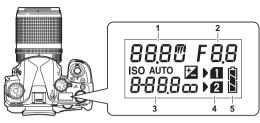

- 1 Shutter speed/Number of shots for Bracketing (p.65)/USB connection mode (p.94)/Sensor cleaning in progress (p.115)
- 2 Aperture value/Bracket value (p.65)
- 3 Sensitivity (p.55)/EV Compensation (p.52)
- 4 Card slot number
- 5 Battery level

### Memo

The LCD panel is illuminated when 
 is pressed.
 You can set the brightness of the LCD panel when 
 is pressed in [Illumination Settings] of the 
 3 menu. (p.100)

## **How to Change Function Settings**

## Using the Direct Keys

Press ▲▼◀▶ in standby mode.

 
<b>A</b>	Drive Mode	p.62
▼	Fx2 Button	p.97
-	White Balance	p.69
•	Custom Image	p.72



You can assign a function to ▼ and use it as the Fx2 button ( 2.). By default, [Outdoor View Setting] is assigned. (p.14)

## Using the Smart Function

You can easily change settings with two dials: the function dial and the setting dial. Use the function dial (①) to select the desired function, and use the setting dial (②) to change its setting value.



The following functions can be selected.


Function Dial	Function	Page
•	Disables the setting dial operation.	_
+/-	Changes the exposure compensation value.	p.52
ISO	Changes the ISO sensitivity.	p.55
CH/CL	Switches between Continuous Shooting and Single Frame Shooting and changes the shooting speed for Continuous Shooting.  Switches between Bracketing and Single Frame Shooting and changes the bracket value for Bracketing.	
вкт		
HDR	Changes the capture type of HDR Capture.	p.75
Grid	Turns the grid display in the viewfinder on or off when shooting with the viewfinder. Changes the type of grid displayed on the Live View screen when shooting with Live View.	p.27
SR	Turns the Shake Reduction and Movie SR functions on or off.	p.75
Crop	Changes the Crop setting.	p.48
Wi-Fi	Turns the Wi-Fi™ function on or off.	p.96

The operation guide for the Smart Function is displayed on the status screen and Live View screen.



## **Using the Control Panel**

Press INFO in standby mode.

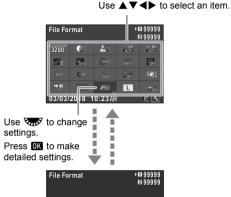

PEO RAW RAW.

MENU Cancel OK OK

Press MENU to cancel the setting operation.

Press **OK** to confirm the selected item and return to the control panel.

### Memo

- The functions that can be selected vary depending on the current camera settings.
- If no operations are made within approximately 1 minute while the control panel is displayed, the camera returns to standby mode.

## **Customizing the Control Panel**

The functions displayed on the control panel can be customized.

Some functions in the ♠, ♣, and ♣ menus can be saved as control panel items. Refer to "Menu List" (p.25) for details on the functions that can be saved.

Press INFO in standby mode.

The control panel appears.

**2** Press ᠌.

The customization screen appears.

3 Use ▲▼◀▶ to select the function to change.

Press O to reset to the default



4 Press ON.

settinas.

Selectable functions are displayed in the pop-up menu.

5 Use ▲▼ to select the function to save.

Select [--] if you do not want to save any function.




**6** Press **OK** .

The screen of Step 3 reappears.

- Press 2.
  The control panel reappears.
- rne control panel reappears
- Press MENU.
  The camera returns to standby mode.

Most functions are set from the menus.

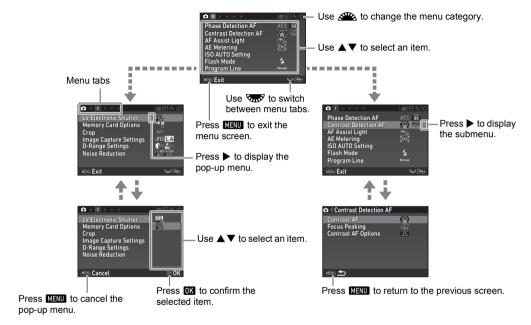

### Memo

- For the Custom Setting menus (**C** menus), you can display the setting screen of the next item in order of the menu list by turning while the submenu of the currently selected item is displayed on the monitor.
- Press MENU to display the first tab of the most appropriate menus for the camera settings at that time. To display the menu tab last selected first, set in [23 Save Menu Location] of the C4 menu.
- The settings changed with the menus, direct keys, Smart Function, control panel, and playback mode palette are returned to their
  default values with [Reset] of the 4 menu. To reset the setting values of the Custom Setting menu items to the defaults, use
  [Reset Custom Functions] of the C4 menu. (Some settings do not apply.)

## Rec. Mode Menus

		Item	Function	Default Setting	Page
		AF Mode *1	Selects the autofocus method for shooting with the viewfinder.	AF.S	p.58
		AF Active Area *1	Selects the area to adjust the focus for shooting with the viewfinder.	Auto (33 AF Points)	p.58
	Phase	AF.S Setting	Sets the action priority for when the autofocus mode is set to <b>AF.S</b> and <b>SHUTTER</b> is fully pressed.	Focus-priority	p.57
	Detection AF	1st Frame Action in AF.C	Sets the action priority for the first frame when the autofocus mode is set to <b>AF.C</b> and <b>SHUTTER</b> is fully pressed.	Auto	p.57
		Action in AF.C Cont.	Sets the action priority during Continuous Shooting when the autofocus mode is set to <b>AF.C</b> .	Auto	p.57
		Hold AF Status	Maintains the focus for a certain amount of time when the subject happens to move out of the selected focusing area after being focused.	Off	p.57
	Contrast Detection AF	Contrast AF *1	Sets the autofocus mode for shooting with Live View.	Face Detection	p.60
<b>Δ</b> 1		Focus Peaking *1	Emphasizes the outline of the subject in focus and makes it easier to check the focus.	Off	p.59
		Contrast AF Options	Sets the action priority for when SHUTTER is fully pressed.	Focus-priority	p.59
	AF Assist Light *1		Illuminates the assist light when autofocusing in dark locations.	On	p.58
	AE Metering *1		Selects the part of the sensor to use for measuring brightness and determining the exposure.	Multi-segment	p.56
		ISO Range (Maximum) *1	Sets the upper limit value for ISO AUTO.	ISO 6400	
	ISO AUTO Setting	ISO Range (Minimum)	Sets the lower limit value for ISO AUTO.	ISO 100	p.55
		AUTO ISO Parameters	Specifies the manner in which the sensitivity is increased.	Std.	
	Flash Mode	, *1	Sets the flash mode.	Flash On or Auto Flash Discharge	p.71
	Program Li	ne *1	Selects the Program Line setting.	Normal	p.51

	Item		Function	Default Setting	Page
<b>Q</b> 1	Exposure	Exposure Mode	Temporarily changes the exposure mode when the mode dial is set to one of the modes from ${\bf U1}$ to ${\bf U5}$ .	Р	p.102
	Mode *2	Program Line	Selects the Program Line setting when the mode dial is set to one of the modes from ${\bf U1}$ to ${\bf U5}$ .	Normal	p.102
	LV Electror	nic Shutter *1	Sets whether to use the electronic shutter during shooting with Live View.	Off	p.52
	1	rd Options *1	Sets the recording method for when two memory cards are inserted.	Sequential Use	p.48
	Crop *1		Sets the angle of view for shooting.	Auto	p.48
		File Format *1	Sets the file format of images.	JPEG	
	Image	JPEG Recorded Pixels *1	Sets the recording size of JPEG images.	L	- 40
	Capture Settings	JPEG Quality *1	Sets the quality of JPEG images.	***	p.48
<b>^</b> 2	Octungs	RAW File Format	Sets the RAW file format.	PEF	
		Color Space	Sets the color space to use.	sRGB	
	D-Range Settings	Highlight Correction *1	Expands the dynamic range and prevents overexposed areas from occurring.	Auto	p.75
		Shadow Correction *1	Expands the dynamic range and prevents underexposed areas from occurring.	Auto	μ.75
	Noise Reduction	Slow Shutter Speed NR *1	Sets the Noise Reduction setting when shooting with a slow shutter speed.	Auto	p.50
		Reduction	High-ISO NR *1	Sets the Noise Reduction setting when shooting with a high ISO sensitivity.	Auto
	Clarity *1		Changes the clarity of images using an image processing function.	±0	p.76
	Skin Tone *	1	Enhances the skin tone of images using an image processing function.	Off	p.76
	Digital Filte	r *1	Applies a digital filter effect when taking pictures.	No Filter	p.74
<b>△</b> 3	upp	HDR Capture *1		Off	
	HDR Capture	Bracket Value	Makes settings for high dynamic range shooting.	±2EV	p.75
	Capture	Auto Align		On	
	Pixel Shift I	Resolution *1	Merges multiple images and outputs a high-definition image.	Off	p.77
	ASTROTRA	CER *1	Makes settings to track and capture celestial bodies.	Off	p.82

		Item	Function	Default Setting	Page
	AA Filter Si	mulator *1	Applies a low-pass filter effect using the Shake Reduction mechanism.	Off	p.78
	Shake Reduction *1		Activates the Shake Reduction function.	On	p.75
	Horizon Co	rrection *1	Corrects horizontal tilt when in n mode.	Off	_
	Compositio	n Adjust. *1	Allows you to adjust the composition of your image using the Shake Reduction mechanism.	Off	p.78
<b>A</b> 4		Distortion Correction *1	Reduces distortions occurring due to lens properties.	Off	
	Lens	Peripheral Illumin. Corr. *1	Reduces peripheral light fall-off occurring due to lens properties.	Off	p.76
	Correction	Lat-Chromatic-Ab Adj <sup>*1</sup>	Reduces lateral chromatic aberrations occurring due to lens properties.	On	p.70
		Diffraction Correction *1	Corrects blur caused by diffraction when using a small aperture.	On	
	Input Focal Length *1		Sets the focal length when using a lens of which focal length information cannot be obtained.	35mm	p.112
	Viewfinder Overlay	Grid Display *1	Displays grid lines in the viewfinder.	On	
		Electronic Level *1	Displays the electronic level in the viewfinder.	On	
		AF Frame	Displays the AF frame in the viewfinder.	On	p.20
		Spot Metering Frame	Displays the spot metering frame in the viewfinder.	On	
		AF Points	Displays the AF points in the viewfinder.	On	
		Grid Display *1	Sets the type and color of the grid lines displayed during Live View.	Off, Black	
		Electronic Level *1	Displays the electronic level during Live View.	On	
<b>A</b> 5	Live View	Histogram Display	Displays the histogram during Live View.	Off	p.15
		Highlight Alert	Sets overexposed areas to blink red during Live View.	Off	
		Flicker Reduction	Cuts down on the Live View screen flicker by setting the power frequency.	50Hz	
		Display Time	Sets the Instant Review display time.	1sec.	
		Zoom Review	Displays the magnified image during Instant Review.	On	
	Instant	Save RAW Data	Saves the RAW data during Instant Review.	On	p.46
	Review	Delete	Deletes the displayed image during Instant Review.	On	ρ. <del>4</del> 0
		Histogram Display	Displays the histogram during Instant Review.	Off	
		Highlight Alert	Sets overexposed areas to blink red during Instant Review.	Off	

			Item		Function	Default Setting	Page
		Other	Guide Dis	play	Displays operation guides when the capture mode is changed.	On	p.45
		Display Settings			Displays the status screen vertically if the camera is held vertically.	On	p.17
		90	Display Co	olor	Sets the display color of the status screen, control panel, and menu cursor.	1	p.43
			Fx1 Butto	n	Sets the function for when <b>I</b> is pressed.	One Push File Format	
			Fx2 Butto	n	Sets the function for when <b>2</b> (▼) is pressed.	Outdoor View Setting	p.97
			AF Button	ı	Sets the function for when AF is pressed.	Enable AF1	
			Preview D	ial	Sets the camera action for when the main switch is turned to the ${\mathfrak Q}$ position.	Optical Preview	p.61
		Button		Р		Tv, Av, ⇒P	
		Customi-	Customi-	Sv	Sets the A / O operation for each exposure mode.  Tv. A Tv. A	-, ISO, -	p.99
П		zation		Tv		Tv, -, -	
П	<b>△</b> 5		E-Dial	Av		-, <b>Av</b> , -	
П			Program-	TAv		$\boldsymbol{Tv}, \boldsymbol{Av}, \boldsymbol{P} LINE$	
П		ming	_	М		Tv, Av, PLINE	
П				В		-, <b>Av</b> , -	
				X		-, <b>Av</b> , -	
					Rotation Direction	Reverses the effect obtained when 🕰 or 😿 is turned.	Rotate Right
			Sensitivity EV Compensation Flash Mode		Determines which settings to save when the power is turned	On	
						On	p.102
						On	
		Memory	Flash Exposure Comp.	On			
			Drive Mod	е	off.	On	
			White Bala	ance		On	
			Custom In	nage		On	
			Clarity			Off	

		Item	Function	Default Setting	Page	1
		Skin Tone		Off		1
<b>△</b> 5	Memory	Digital Filter		Off		
		HDR Capture		Off		
		Pixel Shift Resolution		Off		
		Composition Adjust.	Determines which settings to save when the power is turned off.	On	p.102	
		Playback Info Display		On		
		Operation Control Lock		On		
		Outdoor View Setting		Off		
	Save USER Mode		You can save frequently used capture settings to <b>U1</b> to <b>U5</b> of the mode dial.	_	p.101	

<sup>\*1</sup> Available as a control panel item.

<sup>\*2</sup> The function appears only when the mode dial is set to one of the modes from **U1** to **U5**.

		Item	Function	Default Setting	Page
	Contrast	Contrast AF *1	Sets the autofocus mode.	Face Detection	p.60
	Detection AF	Focus Peaking *1	Emphasizes the outline of the subject in focus and makes it easier to check the focus.	Off	p.59
	AF Assist L	ight *1	Illuminates the assist light when autofocusing in dark locations.	On	p.58
	AE Meterin	g *1	Selects the part of the sensor to use for measuring brightness and determining the exposure.	Multi-segment	p.56
<b>.22</b> 1		ard Options *1	Selects one of the memory cards inserted in the SD1 and the SD2 slots for recording movies.	SD1	p.48
'=	Crop *1		Sets the angle of view for shooting.	Auto	p.48
	Movie Capture	Recorded Pixels *1	Sets the number of recorded pixels of the movie.	FullHD	p.48
	Settings	Framerate *1	Sets the number of frame rate of the movie.	30p	p.40
	Sound Volume Setting	Recording Sound Level *1	Sets the sound volume level for recording.	Auto	
			Wind Noise Reduction *1	Reduces wind noise.	Off
		Headphone Volume *1	Sets the sound volume when a headphone is connected.	10	
	D-Range	Highlight Correction *1	Expands the dynamic range and prevents overexposed areas from occurring.	Auto	p.75
	Settings	Shadow Correction *1	Expands the dynamic range and prevents underexposed areas from occurring.	Auto	μ.73
	Digital Filte	er *1	Applies a digital filter effect when recording a movie.	No Filter	p.74
	Movie SR *	1	Activates the Shake Reduction function.	On	_
<b>1</b> 2		Grid Display *1	Sets the type and color of the grid lines displayed during Live View.	Off, Black	
		Electronic Level *1	Displays the electronic level during Live View.	On	
	Live View	Histogram Display	Displays the histogram during Live View.	Off	p.15
		Highlight Alert	Sets overexposed areas to blink red during Live View.	Off	
		Flicker Reduction	Cuts down on the Live View screen flicker by setting the power frequency.	50Hz	

	Item			Function	Default Setting	Page	
<b>,≌</b> 2	Button Customi- zation	AF Button (Movie)		Sets the function for when AE is pressed.	Enable AF1	p.97	
		mi- E-Dial Program-	•• ▶ <b>≡</b> ₽	Sets the 🌇 / 😿 / <b>○</b> operation for each exposure mode.	-, -, -		
			₽ET <sub>V</sub>		Tv, -, PLINE		
			<b>P A</b> v		-, Av, PLINE		
			<b>●●</b> <b>ÞÍTÁ</b> v		Tv, Av, PLINE	p.99	
			ming	PEM		Tv, Av, PLINE	1
			Rotation Direction	Reverses the effect obtained when A or Torrow is turned.	Rotate Right		

<sup>\*1</sup> Available as a control panel item.

## Playback Menu

	Item		Function	Default Setting	Page
	Slideshow	Display Duration	Sets an image display interval.	3sec.	p.86
		Screen Effect	Sets a transition effect when the next image is displayed.	Off	
		Repeat Playback	Starts the slideshow again from the beginning after the last image is displayed.	Off	
		Auto Movie Playback	Plays back movies during the slideshow.	On	
	Protect All Images		Protects all stored images at once.	_	p.103
	Delete All Images		Deletes all stored images at once.	_	_
<b>▶</b> 1	Quick Zoom		Sets the initial magnification when magnifying images.	Off	p.47
	Playback Sound Volume		Sets the sound volume during movie playback.	10	p.54
	Image	Auto Image Rotation	Rotates images which were captured with the camera held vertically or of which the rotation information has been changed.	On	p.86
	Display	Grid Display	Sets the type and color of grid lines.	Off, Black	p.47
		Highlight Alert	Sets overexposed areas to blink red in Standard Information Display or Histogram Display of the playback mode.	Off	p.18

	Item		Function	Default Setting	Page
	Language/言語		Changes the display language.	English	p.41
	Date Adjustment		Sets the date and time and the display format.	01/01/2018	p.42
	World Time		Switches between the date and time display of your hometown city and that of a specified city.	Hometown	p.106
	Text Size		Magnifies the text size when selecting a menu item.	Std.	p.42
	Sound Effects	Volume	Sets the sound volume of beep sounds.	3	_
		In-focus	Sets whether to make a beep sound when the subject is focused.	On	p.45
		AE Lock	Sets whether to make a beep sound when the exposure value is locked.	On	_
		Self-timer	Sets whether to make a beep sound during the countdown for Self-timer shooting.	On	p.63
		Remote Control	Sets whether to make a beep sound during Remote Control shooting.	On	p.64
<b>3</b> 1		Mirror Up	Sets whether to make a beep sound during Mirror Lock-up Shooting.	On	p.66
		AF Active Area	Sets whether to make a beep sound when the function of the arrow keys $(\blacktriangle \blacktriangledown \P \blacktriangleright)$ is switched to AF point change mode.	On	p.59
		One Push File Format	Sets whether to make a beep sound when the file format is changed with 3 or 2.	On	p.98
		Pixel Shift Resolution	Sets whether to make a beep sound when the Pixel Shift Resolution function is turned on or off with  a or 2.	On	p.77
		Shake Reduction	Sets whether to make a beep sound when the Shake Reduction function is turned on or off with $\blacksquare$ or $\blacksquare$ 2.	On	p.75
		Horizon Correction	Sets whether to make a beep sound when the Horizon Correction function is turned on or off with $\blacksquare$ or $\blacksquare$ 2.	On	_
		Electronic Level	Sets whether to make a beep sound when the Electronic Level display is turned on or off with 31 or 32.	On	p.21
	LCD Display Settings		Adjusts the brightness, saturation and the color of the monitor.	0	p.100
	Outdoor View Setting		Adjusts the brightness of the monitor for outdoor shooting.	Off	p.14

		Item	Function	Default Setting	Page
*2	Illumination Settings	LCD Panel	Sets whether to illuminate the LCD panel when 🔝 is pressed.	High	p.100
		Backside Controls	Sets whether to illuminate the backside controls when 🔝 is pressed after the monitor is pulled out.	Off	
		Lens Mount	Sets whether to illuminate the lens mount when 🔝 is pressed.	Off	
		Card Slot/ Connector	Sets whether to illuminate the card slots and connector when is pressed.	Off	
		Wi-Fi	Sets the brightness of the Wi-Fi lamp.	High	
		GPS	Sets the brightness of the GPS indicator lamp.	High	
	Indicator Lamps	Self-timer	Sets whether to light up the self-timer lamp when shooting with the self-timer.	On	p.100
		Remote Control	Sets whether to light up the self-timer lamp when shooting with remote control.	On	
	Wi-Fi *1		Activates the Wi-Fi™ function.	Off	p.96
	GPS/	GPS Logging	Sets the camera action during GPS logging.	On	p.81
	E-Compass	GPS Time Sync	Automatically adjusts the date and time settings.	On	
		Calibration	Performs a calibration of direction information.	_	
	USB Connection		Sets the USB connection mode when connecting to a computer.	MSC	p.94
	HDMI Out		Sets the output format when connecting to an AV device with an HDMI <sup>®</sup> input terminal.	Auto	p.87
	Auto Power Off		Sets the time until the camera turns off automatically if no operations are made for a certain period of time.	1min.	p.41
	Create New Folder		Creates a new folder on the memory card.	_	p.103
	Folder Name		Sets the folder name in which images are stored.	Date	p.103
	File Name		Sets the file name assigned to an image.	IMGP, _IMG	p.105
<b>4</b> 3	File No.	Sequential Numbering	Continues the sequential numbering for the file name when a new folder is created.	On	p.105
•		Reset File Number	Resets the file number setting and returns to 0001 each time a new folder is created.	_	μ.103
	Copyright Information		Sets the photographer and copyright information embedded in the Exif data.	Off	p.106
	Format		Formats a memory card.	_	p.43

	Item	Function	Default Setting	Page
	Pixel Mapping	Maps out and corrects defective pixels on the sensor.	_	p.114
	Dust Removal	Cleans the sensor by applying high-frequency (ultrasonic) vibrations.	On, On	p.114
	Sensor Cleaning	Locks the mirror in the up position for cleaning the sensor with a blower.	_	p.115
<b>3</b> 4	Select Battery	Sets the camera action for when the optional battery grip is attached to the camera.	Auto Select, Auto-detect	p.39
	Certification Marks	Displays the certification marks of conformance to wireless technical standards.	_	p.129
	Firmware Info/Options	Displays the camera's firmware version. You can check the current firmware version before running an update.	_	_
	Reset	Resets the settings of the direct keys and Smart Function and for the items of the nenus, menus, menus, menus, menus, menus, control panel, and playback mode palette.	_	_
<b>₹</b> 5	Night Vision LCD Display *1	Changes the monitor display color to red for shooting in a dark place such as night-time shooting.	Off	p.82

<sup>\*1</sup> Available as a control panel item.

# Custom Setting Menus

	Item	Function	Default Setting	Page
	1 EV Steps	Sets the adjustment steps for the exposure.	1/3 EV Steps	p.50
	2 Sensitivity Steps	Sets the adjustment steps for the ISO sensitivity.	1 EV Step	p.55
	3 Meter Operating Time	Sets the meter operating time.	10sec.	_
<b>C</b> 1	4 Auto EV Compensation	Automatically compensates the exposure when the correct exposure cannot be achieved with the current settings.	Off	_
	5 Link AE and AF Point	Sets whether to link the exposure value and the AF point in the focusing area.	Off	p.56
	6 Bulb (B) Mode Options	Sets the camera operation when <b>SHUTTER</b> is pressed in <b>B</b> mode.	Type1	
	7 Flash Sync Speed	Selects the flash sync speed.	1/200	p.113
	8 AE-L with AF Locked	Sets whether to lock the exposure value when the focus is locked.	Off	_
	9 Viewfinder Light	Sets whether to light up the viewfinder when focusing the subject or changing the focusing area.	Auto	p.20
	10 AF with Remote Control	Sets whether to use autofocus when shooting with a remote control unit.	Off	p.65
	11 Bracketing Order	Sets the order for Bracketing shooting.	0 - +	p.66
<b>C</b> 2	12 One-Push Bracketing	Shoots all frames with one release when using Bracketing.	Off	p.66
	13 Interval Shooting Options	Sets whether to start counting the time of interval from when exposure starts or when exposure ends for Interval Shooting, Interval Composite, and Interval Movie Record.	Interval	p.69
	14 AF in Interval Shooting	Sets whether to lock the focus position used when the first picture is taken or perform autofocus for each exposure for Interval Shooting, Interval Composite, Interval Movie Record, and Star Stream.	Locks focus at 1st exposure	p.69
	15 WB Adjustable Range	Sets whether to automatically fine-tune the white balance when the light source is specified for the white balance setting.	Fixed	p.70
<b>C</b> 3	16 AWB in Tungsten Light	Sets the tungsten light color tone when the white balance is set to [Auto White Balance].	Strong Correction	p.70
U	17 WB When Using Flash	Sets the white balance setting when using a flash.	Auto White Balance	p.70
	18 Color Temperature Steps	Sets the adjustment steps for the Color Temperature option of the white balance.	Kelvin	p.71

	Item	Function	Default Setting	Page
	19 Enable/Disable Control	Enables or disables operation of the selected group of buttons and dials.	Type1	p.46
<b>C</b> 3	20 Change AF Point Button	Selects the  operation when the focusing area selection mode is set to one of some select-type options.	Type1	p.59
	21 Auto SR Off	Automatically turns off the Shake Reduction function when the drive mode is set to [Self-timer] or [Remote Control].	Enable Auto SR Off	p.63
	22 Save Rotation Info	Saves rotation information when shooting.	On	p.86
	23 Save Menu Location	Saves the last menu tab displayed on the monitor and displays it again the next time MENU is pressed.	Reset Menu Location	p.24
	24 Catch-in Focus	Enables Catch-in Focus shooting when a manual focus lens is attached. The shutter is released automatically when the subject comes into focus.	Off	p.111
C4	25 AF Fine Adjustment	Allows you to precisely fine-tune your lenses with the camera's autofocus system.	Off	p.61
	26 Using Aperture Ring	Enables the shutter to release when the lens aperture ring is set to a position other than <b>A</b> (Auto).	Disable	p.111
	Reset Custom Functions	Resets the setting values of the Custom Setting menu items to the defaults.	_	_

# Attaching the Strap

Pass the end of the strap through the triangular ring.

 


2 Secure the end of the strap on the inside of the clasp.



## When the Battery Grip is Used

When the optional Battery Grip D-BG6 is used, you can attach one end of the strap to the battery grip.



# Attaching a Lens

- 1 Make sure that the camera is turned off.
- 2 Remove the body mount cap (1) and lens mount cover (2).

Turn the body mount cap counterclockwise while pressing the lens unlock button (③). After removing the cover, be sure to put the lens down with the lens mount side facing upward.



3 Align the lens mount indexes (red dots: 4) on the camera and the lens, and secure by turning the lens clockwise until it clicks.



### To remove the lens

Attach the lens cap, and then turn the lens counterclockwise while pressing the lens unlock button.



### Caution

- When attaching or removing the lens, choose an environment that is relatively free of dirt and dust.
- Keep the body mount cap attached on the camera when a lens is not attached.
- Be sure to attach the lens mount cover and lens cap to the lens after removing it from the camera.
- Do not insert your fingers inside the lens mount of the camera or touch the mirror.
- The camera body and lens mount incorporate lens information contacts. Dirt, dust, or corrosion may damage the electrical system. Please contact your nearest service center for professional cleaning.
- When a retractable lens is attached and is not extended, you
  cannot take pictures or use some functions. If the lens is
  retracted during shooting, the camera stops working. Refer to
  "How to Use a Retractable Lens" (p.46) for details.
- We assume no responsibility nor liability for accidents, damages, and malfunctions resulting from the use of lenses made by other manufacturers.

### Memo

- Refer to "Functions Available with Various Lenses" (p.109) for details on the functions of each lens.

# **Using the Battery and Charger**


Use the battery D-LI90 and battery charger D-BC90 exclusively developed for this camera.

Note: AC plug cord

UL Listed, Type SPT-2 or NISPT-2, 18/2 flexible cord, rated 125 V, 7 A, minimum 6 ft. (1.8 m)

# **Charging the Battery**

1 Connect the AC plug cord to the battery charger.

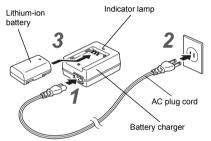

- 2 Plug the AC plug cord into the power outlet.
- Face the ▲ mark on the battery up, and insert it into the battery charger.

The indicator lamp is lit while charging and turns off when the battery is fully charged.

### Caution

- Do not use the battery charger D-BC90 to charge batteries other than the battery D-LI90. Charging other batteries may cause damage or heating.
- · Replace the battery with a new one in the following cases:
  - If the indicator lamp blinks or does not light after the battery is inserted correctly
  - If the battery starts to run down more quickly even after being charged (the battery may have reached the end of its service life)

### Memo

 The maximum charging time is approximately 390 minutes (it depends on temperature and remaining battery power).
 Charge the battery in a location where the temperature is between 0°C and 40°C (32°F and 104°F).

# Inserting/Removing the Battery

### Caution

- Insert the battery correctly. If the battery is inserted incorrectly, it may not be removed.
- Wipe the electrodes of the battery with a soft dry cloth before inserting.
- Do not open the battery cover or remove the battery while the power is on.
- Be careful as the camera or battery may become hot after the camera has been used continuously for a long period of time.
- Remove the battery when you do not use the camera for a long time. The battery may leak and damage the camera if left installed during prolonged periods of non-use. If the removed battery is not used for six months or longer, charge the battery for about 30 minutes before storing it. Be sure to recharge the battery every six to twelve months.
- Store the battery in a location where the temperature will remain at or below room temperature. Avoid locations with high temperatures.
- The date and time may be reset if you leave the battery out of the camera for long periods of time. If this happens, set the current date and time again.

# 1 Open the battery cover.

Lift the battery cover unlock knob, turn it towards OPEN to unlock, and then pull the cover open.



# 2 Face the ▲ mark on the battery towards the outside of the camera, and insert the battery until it locks into place.

To remove the battery, push the battery lock lever in the direction of ③.



# 3 Close the battery cover.

Turn the battery cover unlock knob towards CLOSE to lock, and then put it down.



 
### Memo

- The battery level may not be displayed properly if the camera is used at low temperatures or when performing Continuous Shooting for a long time.
- Battery performance temporarily decreases as the temperature decreases. When using the camera in cold climates, have extra batteries at hand and keep them warm in your pocket. Battery performance will return to normal at room temperature.
- Have extra batteries ready when traveling overseas or taking a lot of pictures.
- When the optional Battery Grip D-BG6 is used, the following settings can be made in [Select Battery] of the \$\daggeq 4\$ menu.
  - · Priority order of battery use
  - · Type of AA batteries to use


# Using the AC Adapter

We recommend the use of the optional AC adapter kit K-AC167 when using the monitor for a long time or when connecting the camera to a computer or AV device.

1 Make sure that the camera is turned off, and open the terminal cover.



 2 Align the ▲ marks on the DC terminal of the AC adapter and DC input terminal of the camera, and connect.



3 Connect the AC adapter to the AC plug cord, and plug the cord into the power outlet.

## Caution

- Make sure that the camera is turned off before connecting or disconnecting the AC adapter.
- Make sure that the connections are secure between the terminals. The memory card or data may be corrupted if the connection to the power supply is lost while the card is being accessed.
- Be sure to read the manual of the AC adapter kit before using the AC adapter.

 
# **Inserting a Memory Card**

The following memory cards can be used with this camera.


- · SD Memory Card
- · SDHC Memory Card
- SDXC Memory Card

In this manual, these cards are referred to as memory cards.


- 1 Make sure that the camera is turned off.
- 2 Slide the memory card cover in the direction of ① and then rotate it to open as shown by ②.



 
Insert a card all the way into each memory card slot with the memory card label facing toward the side with the monitor.



 Push the memory card in once and release to remove.



 4 Rotate the memory card cover as shown by ③, and slide it in the direction of ④.



### Caution

- Do not remove the memory card while the card access lamp is lift.
- If the memory card cover is opened while the power is on, the camera turns off. Do not open the cover while the camera is in use
- Use this camera to format (initialize) a memory card that is unused or has been previously used on other devices. (p.43)
- Use a high-speed memory card when recording movies. If the write speed cannot keep up with the recording speed, writing may stop during recording.

### Memo

- For details on how the data is recorded when two memory cards are inserted, refer to "Memory Card Settings" (p.48).

# **Initial Settings**

Turn the camera on and make the initial settings.

# **Turning the Camera On**

1 Turn the main switch to [ON].

The first time the camera is turned on after purchase, the [Language/言語] screen appears.



# Memo

 The power automatically turns off when you do not perform any operations within a set period of time. (Default setting: 1min.) You can change the setting in [Auto Power Off] of the \$2 menu.

# Setting the Display Language

1 Use ▲ ▼ ◀▶ to select the desired language and press ox.

The [Initial Setting] screen appears in the selected language.

Proceed to Step 6 if 
(Hometown) does not need to be changed.



- Press ▼ to move the frame to ☆ and press ▶.
  The [☆ Hometown] screen appears.
- 3 Use ◀▶ to select a city.
  Use ▼▼ to change the region.
  - Cities that can be selected as a hometown (p.122)



- 4 Press ▼ to select [DST] (daylight saving time), and use ◀▶ to select □ or ☒.
- 5 Press OK.

The camera returns to the [Initial Setting] screen.

- 6 Press ▼ to select [Text Size] and press ▶.
- Use ▲▼ to select [Std.] or [Large], and press OX.

Selecting [Large] increases the text size of the selected menu item.



Press ▼ to select [Settings complete] and press OK.

The [Date Adjustment] screen appears.



# Setting the Date and Time

1 Press ▶, and use ▲▼ to select the date format.



- 2 Press ▶, and use ▲▼ to select [24h] or [12h].
- 3 Press OK.

The frame returns to [Date Format].

4 Press ▼, and then press ►.
The frame moves to the month if the date format is set to [mm/dd/yy].

5 Use ▲▼ to set the month. Set the day, year, and time in the same manner.



6 Press ▼ to select [Settings complete] and press OK.
The [LCD Display] screen appears.



# **Setting the LCD Display**

1 Use ◀► to select a color. Select the display color of the status screen, control panel, and menu cursor from the colors 1 to 12



# **2** Press **OK**.

The camera switches to capture mode and is ready to take a picture.

## Memo

- You can change the language, text size, and date and time settings from the 1 menu, and the display color from [Other Display Settings] of the ■5 menu. (p.28, p.32)
- While the GPS is on, the date and time settings are adjusted using information obtained from satellites. (p.79)

# **Formatting a Memory Card**



- 1 Press MENU.
  - The 1 menu appears.
- 2 Use ▲ or ★ to display ≺ 3 menu.
- 3 Use ▲ ▼ to select [Format] and press ▶.
  The [Format] screen appears.
- 4 Use ▲▼ to select the memory card slot in which the memory card to format is inserted and press ▶.



5 Press ▲ to select [Format] and press OK.

Formatting starts. When formatting is completed, the screen of Step 4 reappears.



- 6 Press MENU twice.
- Caution
- Do not remove the memory card while formatting, or the card may be damaged.
- · Formatting deletes all data, both protected and unprotected.

### Memo

 When a memory card is formatted, the volume label "K-1 II" is assigned to the card. When the camera is connected to a computer, the memory card is recognized as a removable disk with the name "K-1 II".

# **Basic Shooting Operation**

Take pictures in **AUTO** (Scene Analyze Auto) mode in which the camera analyzes shooting conditions and automatically sets the optimal shooting settings.

# Shooting with the Viewfinder

 
Remove the front lens cap by pushing the top and bottom portions as indicated in the illustration.




When a retractable lens is attached, extend the lens before turning the camera on.

How to Use a Retractable Lens (p.46)


- **2** Turn the camera on.
- 3 Turn the capture mode selector switch to .



Set the focus mode switch to AF.

 

5 Set the mode dial to AUTO while pressing the mode dial lock button.

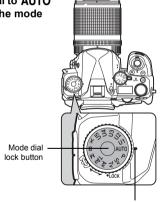

Dial indicator

The selected capture mode and functions assigned to buttons/ dials are displayed on the monitor (Guide Display).

 Guide Display settings (p.28)


Scene Analyze Au	ito
1/250	F 5.6
1600 m	
E propried propried to 1 -5 4 3 2 1 1 1 2 3 4 + 6	AWB =
<b>™</b> AES	
● AEAF1 Ext	→ RAW ○

# **6** Look through the viewfinder to view the subject. When using a zoom lens, turn the zoom ring to the right or

 left to change the angle of view.

# Position the subject inside the AF frame and press SHUMER halfway.

The focus indicator ( ) appears and you will hear a beep when the subject comes into focus.





Focus indicator

# Press Stutter fully.

The captured image is displayed on the monitor (Instant Review).

 
# Available operations during Instant Review

Í	Deletes the image.
to the right	Magnifies the image.
AEL	Saves the RAW data (only when a JPEG image was taken and the data remains in the buffer).

# Shooting while Viewing the Live View Image

Press W in Step 6 on "Shooting with the Viewfinder" (p.45).

> The Live View image is displayed on the monitor



2 Position the subject inside the AF frame on the monitor and press SHUMER halfwav.

The AF frame turns green and you will hear a beep when the subject comes into focus.



AF frame

### Available operations

OK	Magnifies the image. Use ♥ to change the magnification (up to 16×). Use ▲ ▼ ◀ ▶ to change the area to display. Press ♠ to return the display area to the center. Press ♠ to return to 1× image display.
LV	Exits shooting with Live View.

Subsequent steps are the same as shooting with the viewfinder

### Memo

- You can use AF to focus on the subject. (p.57)
- You can preview the image on the monitor and check the depth of field before shooting. (p.61)
- You can set the operation and display settings for Instant Review in [Instant Review] of the □5 menu. (p.27) When [Display Time] is set to [Hold], the Instant Review image is displayed until the next operation.
- When the function dial is set to , you can magnify the image using the setting dial.
- You can use the electronic shutter during shooting with Live View. (p.52)

### Caution

· Some functions are not available in AUTO mode.

 
### Easy Operation of the Mode Dial

Release the mode dial lock using the mode dial lock release lever to easily operate the mode dial without having to press the mode dial lock button.




### **Disabling Operation Controls**

Operation of buttons and dials can be temporarily disabled to prevent misoperation during shooting. Turning while pressing disables the operation of buttons and dials. Turning again enables the operation of them.



 
The group of buttons and dials to be disabled can be selected in [19 Enable/Disable Control] of the **C**3 menu.



Туре	Buttons and Dials Disabled
Type1	<u></u> , ₹, ∑, , ∑, , €, Æ!
Type2	⚠, ▲▼◀▶, OK, MENU

### How to Use a Retractable Lens

 If the camera is turned on when a retractable lens, such as HD PENTAX-DA 18-50mm F4-5.6 DC WR RE, is attached and is not extended, an error message is displayed on the monitor. Turn the zoom ring in the direction of ② while pressing the button on the ring ③ to extend the lens. When



retracting the lens, turn the zoom ring in the opposite direction to ② while pressing the button on the ring and align the white dot to the position ③.

# **Reviewing Images**

You can review the captured image on the monitor.

# 1 Press .



The camera enters playback mode and the most recently captured image is displayed (single image display).



# 2 Review the captured image.

# Available operations

√ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓	Displays the previous image.
►/ Æ to the right	Displays the next image.
甸	Deletes the image.
to the right	Magnifies the image (up to 16×).  Use ▲ ▼ ◆ ▶ to change the area to display.  Press ◆ to return the display area to the center.  Press ◆ to return to entire image display mode.
to the left	Switches to thumbnail display mode (p.84).
11:2	Switches between the SD1 card and the SD2 card.

AE-L	Saves the RAW data (only when a JPEG image was taken and the data remains in the buffer).
INFO	Changes the type of information displayed (p.18).
▼	Displays the playback mode palette (p.83).

### Memo

- When sturned to the right to magnify the image, the magnification is displayed at the bottom right of the screen.
   appears when the image is displayed at the actual pixel size (1× image display). You can set the initial magnification when magnifying images in [Quick Zoom] of the 1 menu.
- When RAW! is displayed on the monitor, the JPEG image that was just taken can also be saved in RAW format (Save RAW Data).
- You can display grid lines in single image display. Set in [Grid Display] of [Image Display] in the ►1 menu. (p.31)

# **Configuring the Capture Settings**

# **Memory Card Settings**

2/121

Set the recording method for when two memory cards are inserted in [Memory Card Options] of the 2 menu.

	→ <u>n</u>	Sequential Use	When the memory card in the SD1 slot becomes full, data is saved to the card in the SD2 slot.
	<b>→</b> 1	Save to Both	Saves the same data to the memory cards in both the SD1 and the SD2 slots.
Separate			Saves the RAW data to the memory card in the SD1 slot, and the JPEG data to the card in the SD2 slot.

When in Mar mode, data is saved to the card in either the SD1 slot or the SD2 slot.

# **Image Capture Settings**

**Q**2

Set the file format for still pictures in [Image Capture Settings] of the 2 menu.

File Format	JPEG, RAW, RAW+
JPEG Recorded Pixels	L, M, S, XS
JPEG Quality	<b>★★★</b> , ★★, ★
RAW File Format	PEF, DNG
Color Space	sRGB, AdobeRGB

### Caution

 When [Memory Card Options] is set to [Separate RAW/ JPEG], [File Format] is fixed to [RAW+].

# Memo

- When [File Format] is set to [RAW+], a JPEG image and a RAW image with the same file number are saved at the same time.
- You can change the setting so that you can take pictures in another file format (One Push File Format) when ☑ or ☑ is pressed. (p.98)
- [PEF] of [RAW File Format] is a PENTAX original RAW file format.

# **Movie Capture Settings**

**,22** 1


Set the file format for movies in [Movie Capture Settings] of the #1 menu.

Recorded Pixels	Frame Rate
FullHD	60i, 50i, 30p, 25p, 24p
HD	60p, 50p

# Setting the Angle of View

2/121

You can change the angle of view in [Crop] of the ♠2 and ♠ 1 menus.

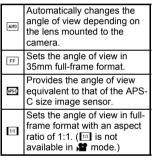



### Memo

- The angle of view can also be changed by the Smart Function. (p.22)
- Select when you want a frame corresponding to the APS-C size image sensor irrespective of the lens in use (either DA lenses or 35mm full-frame compatible lenses, such as D FA lenses). Select when you want the camera to select automatically the angle of view between the 35mm full-frame and the APS-C size depending on the lens in use.
- When changing the angle of view, the cropping frame is displayed in the viewfinder. (p.20)

## Caution

 When the drive mode is set to [Interval Movie Record] or [Star Stream] of [Interval Shooting], [III] cannot be selected.

# **Taking Still Pictures**

Select the capture mode that suits the subject and shooting conditions.

The following capture modes are available on this camera.

Capture Mode	Function	Page
AUTO (Scene Analyze Auto mode)	Automatically sets the optimal shooting settings.	p.44
P/Sv/Tv/Av/ TAv/M/B/X (Exposure modes)	Allows you to change the shutter speed, aperture value, and sensitivity.	p.49
U1 to U5 (USER modes)	Allows you to save frequently used exposure modes and capture settings together.	p.101

# **Exposure Modes**

✓: Available #: Restricted X: Not available

Mode	Change Shutter Speed	Change Aperture Value	Change Sensitivity	EV Compen- sation
P Program Automatic Exposure	# <sup>*1</sup>	# <sup>*1</sup>	~	<b>✓</b>
Sv Sensitivity Priority Automatic Exposure	×	×	<b>✓</b> *2	~
Tv Shutter Priority Automatic Exposure	<b>~</b>	×	~	~

Mode	Change Shutter Speed	Change Aperture Value	Change Sensitivity	EV Compen- sation
Av Aperture Priority Automatic Exposure	×	~	~	<b>~</b>
TAv Shutter & Aperture Priority Automatic Exposure	<b>~</b>	~	<b>×</b> *3	<b>~</b>
M Manual Exposure	<b>~</b>	~	<b>√</b> *2	<b>~</b>
B Bulb Exposure	<b>×</b> *4	~	<b>✓</b> *2	×
X Flash X-sync Speed	<b>x</b> *5	~	<b>✓</b> *2	<b>√</b>

- \*1 You can set the value to be changed in [E-Dial Programming] of [Button Customization] in the ▲5 menu. (p.99)
- \*2 [ISO AUTO] is not available.
- \*3 Fixed to [ISO AUTO].
- \*4 When the timed exposure is enabled, shutter speeds ranging from 10 seconds to 20 minutes can be set. (p.51)
- \*5 You can set the flash sync speed in [7 Flash Sync Speed] of the C1 menu.

# Set the mode dial to the desired exposure mode.

or appears on the status screen for the value that can be changed.



The value that can be changed is underlined in the viewfinder.



The values of the current camera settings are displayed on the LCD panel.

 


During Live View, ▶ appears for the value that can be changed.



# **2** Turn 😿.

The aperture value is changed in Av, TAv, M, B, or X mode. The sensitivity is changed in Sv mode.



# 3 Turn 🕰.

The shutter speed is changed in Tv, TAv, or M mode.



### Memo

- The settings for the exposure can be specified in increments of 1/3 EV steps. In [1 EV Steps] of the C1 menu, you can change the adjustment steps to 1/2 EV steps.
- In M or X mode, the difference from the correct exposure is displayed on the EV bar scale while the exposure is adjusted.

### Caution

- The correct exposure may not be obtained with the selected shutter speed and aperture value when the sensitivity is fixed at a certain sensitivity.
- In B mode, the drive mode cannot be set to [Continuous Shooting], [Bracketing], or [Interval Shooting].

# Reducing Noise when Shooting with a Slow Shutter Speed



When shooting with a slow shutter speed, you can reduce image noise in [Slow Shutter Speed NR] of [Noise Reduction] in the  $\bigcirc$ 2 menu.

Auto	Applies Noise Reduction according to the shutter speed, sensitivity, and internal temperature of the camera.
On	Applies Noise Reduction when the shutter speed is slower than 1 second.
Off	Does not apply Noise Reduction at any shutter speed.

# **Setting the Exposure Control Method**



In [Program Line] of the 1 menu, you can specify how the exposure is controlled.

AUTO	Auto	Determines the appropriate settings.
Normal	Standard	Sets to the basic program automatic exposure (all-around mode).
	Hi-speed Priority	Prioritizes high shutter speeds.
	DOF Priority (Deep)	Closes the aperture for a deep depth of field.
<b>2</b>	DOF Priority (Shallow)	Opens the aperture for a shallow depth of field.
MTF	MTF Priority	Sets the sharpest aperture of the attached lens when a D FA, DA, DA L, FA, or FA J lens is used.

### Memo

- The Program Line setting is enabled in the following situations.
  - In P or Sv mode
  - When PLINE is set for the O operation of TAV or M in [E-Dial Programming] of [Button Customization] in the □ 5 menu

# **Bulb Exposure**

- 1 Set the mode dial to B.
- 2 Use to set the aperture value.



To enable the timed exposure, press O, and then use to set the exposure time.

You can set the exposure time within the range from 10" to

4 Press SHUMER.

20'00".

While **SHUTTER** is pressed, exposure continues. If the timed exposure is enabled in Step 3, the exposure ends when the set exposure time elapses after **SHUTTER** is fully pressed.

# Memo

- You can start and end exposure also by pressing SHUTTER. Set in [6 Bulb (B) Mode Options] of the **C**1 menu.
- When performing the bulb exposure, use a tripod and mount the camera on it securely. The use of the optional cable release is recommended.

### Caution

 The drive mode cannot be set to [Continuous Shooting], [Bracketing], or [Interval Shooting].

# **EV** Compensation

The compensation value can be set between -5 and +5 EV (-2 and +2 EV in 

mm mode).

# 1

# 

☑ and the compensation value are displayed on the status screen, LCD panel, Live View screen, and in the viewfinder during adjustment.



### Available operations

4	Starts/ends adjusting the compensation value.
0	Resets the adjustment value to the default setting.

# Memo

 The compensation value can also be adjusted by the Smart Function. (p.22)

# **Using the Electronic Shutter**



A mechanical shutter has front and rear shutter curtains, which make noise and vibrate the camera when opening and closing to produce the exposure.

Use of an electronic shutter can reduce noise and vibrations during shooting with Live View.

Set in [LV Electronic Shutter] of the

2 menu.



### Caution

- [LV Electronic Shutter] cannot be selected in the following situations.
  - · In B mode
  - When the drive mode is set to [Continuous Shooting], [Bracketing], or [Interval Shooting]
  - · When HDR Capture is set
  - When [Pixel Shift Resolution] is set to [Image Stabilization On]
- The following functions are not available when [LV Electronic Shutter] is selected.
  - · Flash discharge
  - · Shake Reduction
- Distortion can be produced in captured images when shooting moving objects. Also, the flickering of a fluorescent light and other factors may cause the distortion of captured images.
- When [Pixel Shift Resolution] in the 3 menu is set to [Motion Correction On] or [Motion Correction Off], [LV Electronic Shutter] is fixed to [On].

# **Recording Movies**

Turn the capture mode selector switch to 

Live View is displayed. Sound

19999

Recordable Time

- 2 Use the mode dial to select an exposure mode. P, Tv, Av, TAv, or M can be selected.
- 3 Use a or to set the exposure.
- Focus on the subject.
  In AF mode, press SHUTTER halfway.
- 5 Press SHUTTER fully.

Movie recording starts.

In the upper left area of the monitor, "REC" blinks and the size of the recorded movie file is displayed.

6 Press SHUTTER fully again.

Movie recording stops.

### Caution

- When recording a movie with sound, camera operation sounds are also recorded.
- When recording a movie with an image processing function such as Digital Filter applied, the movie file may be saved with some frames omitted.
- If the internal temperature of the camera becomes high during recording, recording may be terminated.
- When a retractable lens is attached, recording stops if the lens is retracted during recording and an error message is displayed.
- In 
   mode, the Wi-Fi™ function is disabled.

### Memo

- When the mode dial is set to other than the modes described in Step 2, the camera operates in P mode.
- You can change the settings for movie recording in the menus. (p.30)

The sound volume for movies can be set in [Sound Volume Setting] of the #1 menu.

Recording Sound Level	Auto, 0 to 20
Wind Noise Reduction	On, Off
Headphone Volume	0 to 20

 
Activating the Wind Noise Reduction function cuts off the lowpitch sound. It is recommended to set this function to [Off] when it is not necessary.

 You can record a movie continuously up to 4 GB or 25 minutes. When the memory card is full, recording stops.

# Using a Microphone or Headphones

You can reduce the possibility of recording camera operation sounds by connecting a commercially available stereo

microphone to the microphone terminal on the camera. The following specifications are recommended for external



Headphone terminal

Microphone terminal

microphones. (A monaural microphone cannot be used with this camera.)

Plug	Stereo mini plug (ø3.5 mm)
Format	Stereo electret condenser
Power	Plug-in Power Method (operating voltage of 2.0 V or lower)
Impedance	2.2 kΩ

You can record and play back movies while listening to the sound by connecting commercially available headphones to the headphone terminal.

### Caution

- · Do not connect a microphone or other device outside the recommended specifications to the microphone terminal or headphone terminal. Also, do not use an external microphone with a 3-meter or longer cable. Doing so may cause the camera to malfunction
- · If an external microphone is used when recording a movie with the Wi-Fi™ function enabled, radio noise may be recorded depending on the compatibility with the microphone.

# **Playing Back Movies**

Display the movie to play back in single image display of the playback mode.



# Available operations

<b>A</b>	Plays back/pauses a movie.
•	Forwards a frame (when paused).
Press and hold ▶	Fast-forwards playback.
•	Reverses a frame (when paused).
Press and hold ◀	Fast-reverses playback.
▼	Stops playback.
Tank!	Adjusts the sound volume (21 levels).
AE-L	Saves the displayed frame as a JPEG file (when paused).
INFO	Switches between [Standard Information Display] and [No Information Display].

### Memo

- The sound volume at the start of movie playback can be set in [Playback Sound Volume] of the ▶1 menu. (p.31)
- In [Movie Edit] of the playback mode palette, a movie file can be divided into multiple segments or selected frames can be deleted. (p.91)

# **Setting the Exposure**

# Sensitivity

Press 50, and then turn

The sensitivity displayed on the status screen, Live View screen, LCD panel and in the viewfinder changes.



Press • to set the sensitivity to [ISO AUTO].

### Memo

- The sensitivity can also be changed by the Smart Function.
   (p.22)
- In # mode, the sensitivity can be set from ISO 100 to ISO 25600
- The adjustment steps for the sensitivity is 1 EV step. To adjust the sensitivity in accordance with the EV step setting for the exposure, set from [2 Sensitivity Steps] of the C1 menu.

## Setting the Range of ISO AUTO

**©**1

You can set the range in which the sensitivity is automatically adjusted when the sensitivity is set to [ISO AUTO]. Set in [ISO AUTO Setting] of the 1 menu.



The manner in which the sensitivity is increased can be specified in [AUTO ISO Parameters].

slow/	Increases the sensitivity as little as possible.
1/1	Increases the sensitivity at the intermediate level between and fiss.
/FAST	Actively increases the sensitivity.

### Caution

# Reducing Noise when Shooting with a High ISO Sensitivity



You can use the Noise Reduction feature when shooting with a high ISO sensitivity.

1 Select [Noise Reduction] in 2 menu and press

The [Noise Reduction] screen appears.

**2** Select [High-ISO NR] and press ▶.



Select the Noise Reduction level and press OK.

Auto	Applies Noise Reduction at optimally calculated levels throughout ISO range.
Low, Medium, High	Applies Noise Reduction at constant chosen level throughout ISO range.
Custom	Applies Noise Reduction at user-defined levels for each ISO setting.
Off	Does not apply Noise Reduction at any ISO setting.

Proceed to Step 7 when other than [Custom] is selected.

**4** Select [Setting] and press ▶.

# 5 Select the Noise Reduction level for each ISO setting.



### Available operations

E	Shows the next/previous page.
0	Resets the Noise Reduction level to the default setting.

6 Press MENU.

The screen of Step 3 reappears.

7 Press MENU twice.

# **AE Metering**

**△**1/**,≌**1

Choose the part of the sensor to use for measuring brightness and determining the exposure.

Turn while pressing





 
Ø	Multi- segment	Meters the brightness in multiple different zones of the sensor. In backlit conditions, this mode automatically adjusts the exposure.
0	Center- weighted	Meters the brightness with an emphasis on the center of the sensor. The sensitivity increases at the center and no automatic adjustment is performed even in backlit conditions.
•	Spot	Meters the brightness only within a limited area at the center of the sensor. Useful when the subject is small. No automatic adjustment is performed even in backlit conditions.

## Memo

- In [5 Link AE and AF Point] of the C1 menu, the metering point and the AF point can be linked.

# **Setting the Focus Method**

Set the focus mode switch to **AF** or **MF**.



The autofocus method for shooting with the viewfinder differs from that for shooting with Live View.


	TTL phase-matching detection AF: Select from <b>AF.S</b> or <b>AF.C</b> .
Shooting with the viewfinder	Set the focusing area by selecting an AF
Shooting with Live View	Contrast detection AF: Face Detection and Tracking are available. (p.60)

# Focusing on the Subject Using the AF Button

 You can use AF to focus on the subject. The AF button operation can be set in [Button

Customization] of the 5 and

№2 menus. (p.97)



# Setting the Autofocus when Shooting with the Viewfinder

**^**1

The autofocus operation when shooting with the viewfinder can be set in [Phase Detection AF] of the 1 menu.

 


AF Mode	AF.S, AF.C
AF Active Area	Auto (33 AF Points), Zone Select, Select, Expanded Area AF (S), Expanded Area AF (M), Expanded Area AF (L), Spot
AF.S Setting	Focus-priority, Release-priority
1st Frame Action in AF.C	Auto, Focus-priority, Release-priority
Action in AF.C Cont.	Auto, Focus-priority, FPS-priority
Hold AF Status	Off, Low, Medium, High

### Memo

- The [AF Mode] and [AF Active Area] settings can be changed by turning or while pressing (p.58)
- In [Hold AF Status], you can set whether to immediately reactivate autofocus or to maintain the focus for a certain amount of time before reactivating autofocus when the subject happens to move out of the selected focusing area after being focused.

# 1 Turn while pressing





AF.S Single mode	When SHUTTER is pressed halfway and the subject comes into focus, the focus is locked at that position.  The AF assist light turns on as necessary.
AF.C Continuous mode	The subject is kept in focus by continuous adjustment while SHUTTER is pressed halfway.  The shutter can be released even if the subject is not in focus.

# Caution

• In AUTO mode, the autofocus mode is fixed to AF.S.

# AF Active Area (AF Point)

# 1 Turn while pressing



_		
*33:-	Auto (33 AF Points)	Out of the 33 AF points, the camera automatically selects the optimum focusing area.
*i9i	Zone Select	Out of the selected 9 AF points, the camera automatically selects the optimum focusing area.
-3EE-	Select	Sets the focusing area to the user selected point from 33 points.
S.	Expanded Area AF (S)	Sets the focusing area to the user selected point from 33 points. When the subject happens to move out of the selected focusing area after being focused, 8 peripheral points are used as back-up points.  Available only in <b>AF.C</b> mode.
€M	Expanded Area AF (M)	Sets the focusing area to the user selected point from 33 points. When the subject happens to move out of the selected focusing area after being focused, 24 peripheral points are used as back-up points.  Available only in <b>AF.C</b> mode.
**************************************	Expanded Area AF (L)	Sets the focusing area to the user selected point from 33 points. When the subject happens to move out of the selected focusing area after being focused, 32 peripheral points are used as back-up points.  Available only in <b>AF.C</b> mode.
•	Spot	Sets the focusing area to the center of the 33 points.

Proceed to Step 2 when a mode other than [Auto (33 AF Points)] or [Spot] is selected.

# 2 Select the desired AF point.



### Available operations

▲▼◀▶	Changes the AF point.	
OK	Returns the AF point to the center.	
<b>32</b>	Switches the function of the arrow keys (▲▼◀►) to AF point change mode or direct key operation mode.	

# Memo

- In AUTO mode, [AF Active Area] is fixed to [Auto (33 AF Points)].
- is displayed in the viewfinder when the AF point can be changed. The selected AF point can be checked also in the viewfinder. (p.20)
- You can select the button operation when changing the focusing area in [20 Change AF Point Button] of the C3 menu.

Тур	Switches the function of the arrow keys (▲▼◀►)  1 to AF point change mode or direct key operation mode when  si pressed.
Тур	Switches the function of the arrow keys (▲▼◀▶) to direct key operation mode only when ☑ is pressed.

# Setting the Autofocus when Shooting with Live View

1/,221

The autofocus operation when shooting with Live View can be set in [Contrast Detection AF] of the □1 and □1 menus.



 


Contrast AF Face Detection, Tracking, Multiple AF Points, Select, Spot	
Focus Peaking	On, Off
Contrast AF Options	Focus-priority, Release-priority

### Memo

- When [Focus Peaking] is set to [On], the outline of the subject in focus is emphasized, and this makes it easier to check the focus. This function works in both AF and MF modes.

# 1 Turn while pressing





<b>©</b>	Face Detection	Detects and tracks faces of people. The main face detection frame for AF and AE is displayed in yellow.
ШО	Tracking	Tracks the subject in focus. The shutter can be released even if the subject is not in focus.
AUTO:	Multiple AF Points	Sets the focusing area to the desired area. The sensor is divided into 35 areas (7 horizontal by 5 vertical), and you can select a wider or narrower focusing area by using 1, 9, 15, or 25 of those 35 available areas.
4⊕>	Select	Sets the focusing area by the pixel.
0	Spot	Sets the focusing area to a limited area at the center.

Select from [Multiple AF Points], [Select], or [Spot] in # mode.

Proceed to Step 2 when [Multiple AF Points] or [Select] is selected.

# 2 Press 8.

# 3 Select the AF area.

Use the frame that appears on the monitor to change the position and size of the AF area.



# Available operations

▲▼◀▶	Changes the position of the AF area.	
E. S.	Increases/reduces the size of the AF area (when Em is selected).	
0	Returns the AF area to the center.	

# 4 Press OK.

The AF area is set.

### Memo

• In AUTO mode, [Contrast AF] is fixed to [Face Detection].

# AF Fine Adjustment

**C**4

You can precisely fine-tune your lenses with the camera's autofocus system.

1 Select [25 AF Fine Adjustment] in C4 menu and press ▶.

The [25 AF Fine Adjustment] screen appears.

2 Select [Apply All] or [Apply One] and press 📧.

Apply All	Applies the same adjustment value to all lenses.
Apply One	Saves an adjustment value for the lens being used. (Up to 20 values)

3 Select [Setting] and adjust the value.



### Available operations

►/‱ to the right	Adjusts the focus to a closer position.
√√√√√ to the left	Adjusts the focus to a farther position.
0	Resets the adjustment value to the default setting.

4 Press OK.

The adjustment value is saved.

5 Press MENU twice.

The camera returns to standby mode.

# Checking the Depth of Field (Preview)

Turn the main switch to **②** to use the preview function.

There are two preview methods.



Optical Preview	Activates the Optical Preview function to check the depth of field with the viewfinder
Digital Preview	Activates the Digital Preview function to check the composition, exposure, and focus on the monitor. You can magnify or save the preview image.

# **Setting the Preview Method**



The [Button Customization] screen appears.

2 Select [Preview Dial] and press ▶.
The [Preview Dial] screen appears.

3 Select [Optical Preview] or [Digital Preview] and press 0...

For Digital Preview, the operations and information displayed during preview can be set



 $m{4}$  Press MENU three times.

The camera returns to standby mode.

### Memo

- Optical Preview is always used in the following situations regardless of the setting.
  - When the drive mode is set to [Mirror Lock-up Shooting], [Multi-exposure], or [Interval Shooting]
  - · When using the ASTROTRACER function
  - In 🎥 mode

### Caution

 The effects of some functions cannot be checked during Digital Preview or are not applied to the saved preview image.

# **Setting the Drive Mode**

# 1 Press ▲ in standby mode.

The Drive Mode screen appears.



# 2 Select a drive mode.

Single Frame Shooting (□)	Normal capture mode
Continuous Shooting (맥/멜*/말)	Continuously takes pictures while SHUTTER is kept pressed. (p.63)
Self-timer (૽)/ⓒ/ఄఄఄ/ఄఄఄ	Releases the shutter about 12 seconds or 2 seconds after SHUTTER is pressed. (p.63)
Remote Control (m/m/ss/m/m)	Enables shooting with remote control. (p.64)
Bracketing (결/緣)/절합)	Takes consecutive pictures at different exposure levels. (p.65)
Mirror Lock-up Shooting (M.UP/№)	Takes images with the mirror raised. (p.66)
Multi-exposure (ඏ/ඓ/ல்/ங்)	Creates a composite image by taking multiple pictures and merging them into a single image. (p.67)
Interval Shooting (INT//♣️/)	Automatically takes pictures at set intervals. (p.68)

### Caution

 There are restrictions on some drive modes when used in combination with some other functions. (p.108)

### Memo

- The Drive Mode setting is saved even after the power is turned off. If [Drive Mode] is set to ☐ (Off) in [Memory] of the
   5 menu, the setting returns to [Single Frame Shooting] when the power is turned off. (p.102)
- The [Shake Reduction] of the ▲4 menu is automatically set to [Off] when the drive mode is set to [Self-timer], [Remote Control], or [Mirror Lock-up Shooting]. If you do not want to turn off the Shake Reduction function, set in [21 Auto SR Off] of the C3 menu.

### If Light Enters through the Viewfinder

When a drive mode that employs the self-timer or remote control is selected, exposure may be affected by the light entering through the viewfinder. In such a case, use the AE Lock function or attach the optional ME viewfinder



cap. Remove the eyecup before attaching the ME viewfinder cap.

# **Continuous Shooting**

1 Select □ on the Drive Mode screen and press ▼.



**2** Use **♦** to select **□**, **□**, or **□**, and press **0**.

g"	Continuous Shooting (at high speed)
⊒™	Continuous Shooting (at medium speed)
마	Continuous Shooting (at low speed)

The camera returns to standby mode.

### Memo

- □¹, □⁴, and □¹ can also be switched by the Smart Function.
   (p.22)
- When the autofocus mode is set to AF.S, the focus position is locked in the first frame.

# Self-timer

1 Select ⊗ on the Drive Mode screen and press ▼.



2 Use ◀▶ to select ᠔, ᠔, or ৩ □.

(~)	Self-timer (shutter release after about 12 seconds)
Self-timer (shutter release after about 2 secon	
రు⊒	Self-timer + Continuous Shooting

Proceed to Step 6 when 🖒 or 🗞 is selected.

3 Press INFO.

4 Set [Shooting Speed] and [Number of Shots].



5 Press OK.
The screen of Step 1 reappears.

6 Press OK.

The camera returns to standby mode.

Press SHUTTER halfway, and then fully.
The shutter is released after about 12 seconds or 2 seconds

# **Remote Control**

1 Select i on the Drive Mode screen and press ▼.

 


2 Use ◀▶ to select ¼, ¾s, or ¼s.

Ď	Remote Control
Pac .	Remote Control (shutter release after about 3 seconds)
Ĭq	Remote Control + Continuous Shooting

Proceed to Step 6 when \$\bar{\bar{b}}\$ or \$\bar{\bar{b}}\$\_{3s} is selected.

- 3 Press INFO.
- 4 Set [Shooting Speed].



5 Press OK.

The screen of Step 1 reappears.

6 Press OK.

The camera returns to standby mode.

- 7 Press SHUTTER halfway.
- Point the remote control unit towards the remote control receiver on the front of the camera, and press the shutter release button on the remote control unit.

### Memo

- The maximum operating distance of the remote control unit is approximately 4 m from the front of the camera.
- To adjust focus with remote control, set in [10 AF with Remote Control] of the C2 menu.
- When using the Remote Control Waterproof O-RC1, the autofocus system can be operated with the ¼ button on the remote control unit. The Fn button cannot be used.

# Bracketing

1 Select ② on the Drive Mode screen and press ▼.



**2** Use **◄▶** to select **②**, **③**, or **③**.

4	Bracketing
	Bracketing + Self-timer
<b>4</b> 5	Bracketing + Remote Control

Proceed to Step 6 when 2 is selected.

- 3 Press INFO.
- **4** Select the operation mode.





5 Press OK.

The screen of Step 1 reappears.

# 6 Set the number of shots and bracket value.

### Available operations

<b>€</b>	Sets the number of shots.	
Changes the bracket value.		
	Adjusts the exposure compensation value.	
0	Resets the compensation value to the default setting.	

# 7 Press OK.

The camera returns to standby mode.

# 8 Shoot.

After pictures are taken, the camera returns to standby mode.

# Memo

- The bracket value can be set in increments of 1/3 EV steps or 1/2 EV steps according to the [1 EV Steps] setting of the C1 menu.
- The following settings for Bracketing can be set in the C2 menu.

	11 Bracketing Order 12 One-Push Bracketing	Changes the shooting order of pictures.
		Takes all pictures with one release of the shutter.

 You can switch between [Single Frame Shooting] and [Bracketing] and change the bracket value for [Bracketing] using the Smart Function. (p.22)

# Mirror Lock-up Shooting

1 Select M.UP on the Drive Mode screen and press ▼.



2 Use **◄▶** to select MUP or ₩...

M.UP	Mirror Lock-up Shooting
M.UP	Mirror Lock-up Shooting + Remote Control

# 3 Press OK.

The camera returns to standby mode.

4 Press SHUTTER halfway, and then fully.

The mirror pops up and the AE Lock function is activated.

# 5 Press SHUTTER fully again.

The mirror returns to its original position after the image is taken

### Memo

 The mirror automatically returns to its original position if 1 minute elapses after the mirror pops up.

### Caution

 Mirror Lock-up Shooting cannot be selected when shooting with Live View.

# Multi-exposure

Select 

on the Drive

Mode screen and press ▼.



**2** Use **◄▶** to select **ॎ**, 🖦, 🕸, or 📭.

₽	Multi-exposure
₽0	Multi-exposure + Continuous Shooting
<b>₽</b> Ø	Multi-exposure + Self-timer
æů	Multi-exposure + Remote Control

Proceed to Step 6 if you do not need to change the shooting conditions.

- 3 Press INFO .
- 4 Set the shooting conditions.



Composite Mode	Select from [Average], [Additive], or [Bright].
Number of Shots	Select from 2 to 2000 times.
Shooting Speed/ Self-timer/ Remote Control	Specify the operation mode for the selected shooting mode.

5 Press OK.

The screen of Step 1 reappears.

Press OK.
The camera returns to standby mode.

# Shoot

The Instant Review image is displayed.

### Available operations during Instant Review

面	Discards pictures taken up to that point and takes pictures again from the first picture.
MENU	Saves pictures taken up to that point and displays the nenu.

After the specified number of shots are taken, the camera returns to standby mode.

### Memo

 A composite image is created as follows in each Composite Mode.

Ī	Average	Creates a composite image with the average exposure.	
ŀ	Additive	Creates a composite image with the cumulatively added exposure.	
	Bright	Creates a composite image replacing only the portions that are brighter compared with the fir image.	

# **Interval Shooting**

1 Select INT on the Drive Mode screen and press ▼.



**2** Use **◄►** to select **INT**, **, , , ,** or **,** or

INT	Interval Shooting Takes pictures at set intervals and saves them.
M	Interval Composite Takes pictures at set intervals and merges them into a single image.
) INII	Interval Movie Record Takes still pictures at set intervals and saves them as a single movie file (Motion JPEG, file extension: .AVI).
	Star Stream Takes still pictures at set intervals and merges them into a single movie file (Motion JPEG, file extension: .AVI) using Interval Composite.

Proceed to Step 6 if you do not need to change the shooting conditions.

- 3 Press INFO.
- 4 Set the shooting conditions.



Recorded Pixels	Select from 4K, FullHD, or HD (only for	
recorded r ixels	and 🕮).	
Interval	Select from 2 seconds to 24 hours.	
Cton dhy Interval	Select from the minimum time or 1	
Standby Interval	second to 24 hours.	
Number of Shots	Select from 2 to 2000 times (from 8 to	
Number of Shots	2000 times for 🎎 and 🕮).	
	Select when and how to take the first	
Start Interval	picture from [Now], [Self-timer],	
	[Remote Control], or [Set Time].	
04 - 4 <del>T</del>	Set the shooting start time when [Start	
Start Time	Interval] is set to [Set Time].	
	Select from [Average], [Additive], or	
Composite Mode	[Bright] (only for 📾 ).	
Save Process	Select ☑ to save images in the	
Save Flocess	middle of processing (only for 📼).	
Fade-out	Select the fade-out effect level of light	
raue-out	trails (only for 🕮).	

**5** Press OK .

The screen of Step 1 reappears.

6 Press OK.

The camera returns to standby mode.

7 Press SHUTTER.

When [Start Interval] is set to [Now], the first picture is taken. When set to [Set Time], shooting starts at the set time.

To cancel shooting, turn the main switch to [OFF]. After the specified number of shots are taken, the camera returns to standby mode.

### Memo

- For INT and , a new folder is created and the captured images are saved there.
- The shortest time that can be set for [Interval] is 10 seconds when [Digital Filter], [Clarity], or [Skin Tone] is set, and 20 seconds when [HDR Capture] is set.
- The second and later exposures start at the intervals set in [Interval]. If the exposure time is longer than the time set in [Interval], some of the pictures that are supposed to be taken at the set intervals are not actually taken. For example, if the time set in [Interval] is 2 seconds and the exposure time is 3 seconds, the first exposure has not yet finished at the time the second exposure is supposed to be started (2 seconds after shooting has started), and so the second picture is not taken. As a result, Interval Shooting ends before the specified number of shots are taken. In such cases, you can set [Standby Interval] in [13 Interval Shooting Options] of the C2 menu so that every picture is taken at the set intervals after each exposure ends. The screen displayed in Step 4 varies depending on the [13 Interval Shooting Options] setting.
- For INT, Im, Im, and Im, the focus position used when the
  first picture is taken is locked. When performing autofocus for
  each exposure, set [14 AF in Interval Shooting] to [Adjusts
  focus for each shot] in the C2 menu.
- For 
   and 
   m, set the camera on a fixed support such as a tripod during shooting.
- For , the camera operates in M mode regardless of the mode dial setting.

# **Setting the White Balance**

1 Press ◀ in standby mode.

The White Balance setting screen appears. Turn the main switch to  $\mathfrak Q$  to use Digital Preview when shooting with the viewfinder.

2 Select the desired white balance setting.

For 黨, 显, and **K**, turn **w** to select the type of white balance.



AWB	Auto White Balance	
⊞ <sub>A</sub>	Multi Auto White Balance	
*	Daylight	
♠	Shade	
එ	Cloudy	
淵	<ul><li>Fluorescent - Daylight Color</li><li>Fluorescent - Daylight White</li><li>Fluorescent - Cool White</li><li>Fluorescent - Warm White</li></ul>	
-A:-	Tungsten	
CTE	Color Temperature Enhancement	
	Manual White Balance 1 to 3	
K	Color Temperature 1 to 3	

Available operations when shooting with the viewfinder

Saves the preview image (only when the image can be saved).

Proceed to Step 5 if you do not need to fine-tune the white balance.

# 3 Press NEO

The fine-tuning screen appears.



### Available operations

$\blacktriangle \blacktriangledown$	Adjust: Green-Magenta	
<b>◆</b>	Adjust: Blue-Amber	
0	Resets the adjustment value to the default setting.	

# $m{4}$ Press $m{0}$

The screen of Step 2 reappears.

# 5 Press OK.

The camera returns to standby mode.

### Caution

- In AUTO mode, the white balance is fixed to [Auto White Balance].
- The Digital Preview operation in Step 1 is disabled when the drive mode is set to [Mirror Lock-up Shooting], [Multiexposure], or [Interval Shooting].

### Memo

- When [Multi Auto White Balance] is set, even if various light sources are present at the shooting location, the camera automatically adjusts the white balance according to the light source of each area. (Ima is not available in Ima mode.)
- The following settings for the white balance can be set in the C3 menu.

15 WB Adjustable Range	Fixed, Auto Adjustment
16 AWB in Tungsten Light	Strong Correction, Subtle Correction
17 WB When Using Flash	Auto White Balance, Multi Auto White Balance, Unchanged
18 Color Temperature Steps	Kelvin, Mired

# Adjusting the White Balance Manually

You can measure the white balance at a selected location.

- Select 
  ☐ in Step 2 of "Setting the White Balance" (p.69).
- 2 Use to select 1 to 3.

  1 to 3 are the locations where you

1 to 3 are the locations where you can store three different manual white balance settings.



3 Under the light you wish to measure the white balance of, select a white area as the subject, and press STUTTER fully.

The captured image is displayed.

4 Use ▲▼◀▶ to specify the measuring area.

Press • to return the measuring area to the center.



5 Press OK.

The White Balance setting screen reappears. [The operation could not be completed correctly] appears when measuring is unsuccessful. Press **OK** to remeasure the white balance.

### Memo

 
 You can copy the white balance settings of a captured image and save them as □1 to □3 in [Save as Manual WB] of the playback mode palette. (p.83)

# Adjusting the White Balance with Color Temperature

You can specify the white balance with the color temperature.

- 1 Select K in Step 2 of "Setting the White Balance" (p.69).
- 2 Use to select 1 to 3.
- 3 Press INFO.
- 4 Adjust the color temperature.

Set the color temperature value within the range from 2,500K to 10.000K.



# Available operations

	Changes the color temperature in increments of 100 Kelvin.
E.M.	Changes the color temperature in increments of 1,000 Kelvin.
<b>▲▼∢</b> ►	Fine-tunes the color temperature.

**5** Press **OK**.

The White Balance setting screen reappears.

# Memo

# Using a Flash

When an external flash (optional) is connected to the camera, you can discharge a flash for shooting.

# Connecting a Flash

Remove the hot shoe cover from the camera, and attach an external flash.



### Memo

 Refer to "Functions when Using an External Flash" (p.112) for details on the functions of external flashes.

# **Setting the Flash Mode**



- 1 Select [Flash Mode] in 

  1 menu and press ▶.
  The Flash Mode screen appears.
- 2 Select a flash mode.



<b>4</b> A	Auto Flash	Automatically measures the ambient light and determines whether to use the flash.
<b>5</b> ♠		Discharges a pre-flash for red-eye reduction before an automatic flash.
4	Flash On	Discharges a flash for each picture.

<b>4</b> ⊚	Flash On + Red-eye	Discharges a pre-flash for red-eye reduction before the main flash for each picture.
arôm.	Slow- speed Sync	Sets to a slow shutter speed and discharges a flash for each picture. Use this, for example, when shooting a portrait with the sunset in the background.
SLOW ⊚ <b>≯</b>	Slow Sync + Red-eye	Discharges a pre-flash for red-eye reduction before the main flash is discharged with Slow-speed Sync.

#### Available operations

E THE	Compensates the flash exposure.
0	Resets the compensation value to the
	default setting.

# 3 Press OK.

# 4 Press MENU.

The camera returns to standby mode.

# Memo

 The flash modes that can be selected vary depending on the capture mode.

Capture Mode	Selectable Flash Mode
AUTO	<b>4</b> <sup>A</sup> , <b>4</b> <sup>A</sup> , <b>4</b> , <b>4</b> <sub>∞</sub>
P. Sv. Av	<b>4</b> , <b>4</b> ⊚, <b>3</b> Low, 3Low <b>3</b>
Tv, TAv, M, B, X	<b>₺</b> , <b>₺</b> ®

- When the flash is used in Av mode, the shutter speed automatically changes over a range from 1/200 seconds to a slow shutter speed depending on the lens being used. The shutter speed is locked at 1/200 seconds when a lens other than a D FA, DA, DA L, FA, FA J, or F lens is used.
- When the flash is used in Tv, TAv, or M mode, any desired shutter speed of 1/200 seconds or slower can be set.
- When [Flash Mode] is assigned to or you can display
  the Flash Mode screen in Step 2 by a simple button operation.
  (p.97)

# Controlling the Image Finishing Tone

# **Custom Image**

# 1 Press ▶ in standby mode.

The Custom Image setting screen appears.

2 Select an image finishing tone.



Auto Select Muted
Bright Flat
Natural Bleach Bypass
Portrait Reversal Film
Landscape Monochrome
Vibrant Cross Processing
Radiant

# Available operations when shooting with the viewfinder

Main switch to 🗘	Uses Digital Preview to preview the background image with the selected setting applied.
AE-L	Saves the preview image (only when the image can be saved).

Proceed to Step 6 when [Auto Select] is selected or if you do not need to change the parameters.

# 3 Press NFO

The parameter setting screen appears.

**4** Set the parameters.



### Available operations

$\blacksquare lacktriangledown$	Selects a parameter.
<b>◆</b>	Adjusts the value.
	Switches between [Contrast], [Highlight Adjustment], and [Shadow Adjustment].
Emile .	Switches between [Sharpness], [Fine Sharpness], and [Extra Sharpness]. (Not available in ## mode.)
0	Resets the adjustment value to the default setting.

# 5 Press OK.

The screen of Step 2 reappears.
The adjustment values for parameters are displayed.

# 6 Press OK.

The camera returns to standby mode.

# Caution

- In AUTO mode, [Custom Image] is fixed to [Auto Select].
- The Digital Preview operation in Step 2 is disabled when the drive mode is set to [Mirror Lock-up Shooting], [Multiexposure], or [Interval Shooting].

# Saving the Cross Processing Settings of a Captured Image

The outcome of Cross Processing varies each time a picture is taken. If a cross processed image that you like is taken, you can save the Cross Processing settings used in the image so that you can repeatedly use the same settings.

# 1 Press ▼ in single image display of playback mode.

The playback mode palette appears.

# 2 Select [Save Cross Processing] and press OK.

The camera searches for cross processed images starting from the most recent image taken.

[No cross processed image] appears if there are no cross processed images.

3 Use 2 to select a cross processed image.



4 Select the "Favorite" number 1, 2, or 3 to save the settings, and press .

The settings of the selected image are saved as your "Favorite" settings.

# Memo

 The saved Cross Processing settings can be loaded by selecting [Cross Processing] in Step 2 of "Custom Image" (p.72), and selecting one of the Favorite settings 1 to 3 for the parameter. 1 Select [Digital Filter] in **△**3 or **№**2 menu and press **▶**.

The Digital Filter setting screen appears.

**2** Select a filter.

Select [No Filter] to not shoot with a digital filter.



Extract Color Shading
Replace Color Invert Color
Toy Camera Unicolor Bold
Retro Bold Monochrome
High Contrast

# Available operations when shooting with the viewfinder

Main switch to 🗘	Uses Digital Preview to preview the background image with the selected effect applied.
AE-L	Saves the preview image (only when the image can be saved).

Proceed to Step 6 if you do not need to change the parameters.

3 Press NEO.

The parameter setting screen appears.

**4** Set the parameters.



### Available operations

$\blacksquare \blacktriangledown$	Selects a parameter.
<b>◆</b> ►	Adjusts the value.

# 5 Press OK.

The screen of Step 2 reappears.

- 6 Press OK.
- **Press** MENU.

  The camera returns to standby mode.

#### Caution

- This function cannot be used in combination with some other functions. (p.108)
- The Digital Preview operation in Step 2 is disabled when the drive mode is set to [Mirror Lock-up Shooting], [Multiexposure], or [Interval Shooting].
- Depending on the filter used, it may take longer to save images.

#### Memo

 Still pictures can also be processed with digital filters in playback mode. (p.90)

# **Correcting Images**

# **Brightness Adjustment**

# Highlight Correction Shadow Correction

**2**/**2**2

Expands the dynamic range and enables a wider range of tones to be recorded by the CMOS sensor and reduces the occurrence of overexposed/underexposed areas.

Set the correction functions from [D-Range Settings] of the 2 or 2 menu.

#### Caution

 When the sensitivity is set to less than ISO 200, [Highlight Correction] cannot be set to [On].

# Memo

• [Highlight Correction] in man mode can be set to [Auto] or [Off].

### **HDR Capture**

**^**3

Takes three consecutive images at three different exposure levels to create a single composite image with them.

- 1 Select [HDR Capture] in 

  3 menu and press 

  The [HDR Capture] screen appears.

   3 menu and press 

   3 menu and press 

   4 menu and press 

   5 menu and press 

   6 menu and press 

   6 menu and press 

   7 menu a
- 2 Select a capture type and press **OX**.



3 Set the range in which to change the exposure in [Bracket Value].

Select from [±1EV], [±2EV], or [±3EV].

# 4 Set whether to use Auto Align or not.

Uses Auto Align.

Does not use Auto Align.

# **5** Press MENU twice.

The camera returns to standby mode.

#### Memo

 The capture type can also be changed by the Smart Function. (p.22)

#### Caution

- HDR Capture is not available in **B**. **X**. or **P** mode.
- HDR Capture cannot be used in combination with some other functions. (p.108)
- When [Auto Align] is set to (Off), [Shake Reduction] of the 4 menu is fixed to [Off].
- For HDR Capture, multiple images are combined together to create a single image, so it may take time to save the image.

# **Shake Reduction**



By using the built-in Shake Reduction unit of the camera, blurring of images can be reduced. Set in [Shake Reduction] of the **\Dachbi{1}**4 menu.

# Memo

- The Shake Reduction function can also be turned on or off by the Smart Function. (p.22)

The following features can be set in [Lens Correction] of the 4 menu.



Distortion	Reduces distortions occurring due to lens
Correction	properties.
Peripheral	Reduces peripheral light fall-off occurring
Illumin. Corr.	due to lens properties.
Lat-Chromatic-Ab	Reduces lateral chromatic aberrations
Adj	occurring due to lens properties.
Diffraction	Corrects blur caused by diffraction when
Correction	using a small aperture.

#### Memo

- Corrections can only be made when a compatible lens is attached. (p.109) The features are disabled when an accessory such as a rear converter is attached between the camera and the lens.
- When [File Format] is set to [RAW] or [RAW+] in [Image Capture Settings] of the 2 menu, correction information is saved as a RAW file parameter and you can select whether to apply the correction to the images when developing them. When developing RAW images, the correction feature [Color Fringe Correction] is also available. (RAW Development, p.92)

#### Caution

# **Quality Level and Texture Adjustment**

# **Adjusting the Texture**

**△**3

The texture and surface details of an image can be adjusted in the range of -4 to +4.

Set in [Clarity] of the **\Omega**3 menu.



# **Enhancing the Skin Tone**



The skin tone of portraits can be enhanced.

Set in [Skin Tone] of the 🗖 3 menu.



	Determines the skin tone of the subject by the Face Detection function, and creates a natural-looking skin tone. (Available only when a face is detected.)
Type2	Softens the entire image, and makes skin irregularities less noticeable.

# **Shooting High-Definition Images**



Pixel Shift Resolution is the feature that enables outputting a high-definition image of stationary objects by merging four images.

Set in [Pixel Shift Resolution] of the 
3 menu.



Motion Correction On	Corrects mosaic-pattern noise when a moving object is detected, and captures an image using the electronic shutter.
Motion Correction Off	Captures the entire range of image using the electronic shutter.
Image Stabilization On	Captures an image while performing image stabilization using the mechanical shutter when the camera cannot be set on a fixed support such as a tripod.
Off	Does not use Pixel Shift Resolution.

When shooting is performed, captured four images are displayed in turn, and then they are merged into a single image.

#### Caution

- · This function cannot be used in the following situations.
  - · In **B** or **X** mode
- This function cannot be used in combination with some other functions. (p.108)
- While this function is used, [AA Filter Simulator] of the 4 menu is fixed to [Off].

• [LV Electronic Shutter] of the ▶2 menu and [Shake Reduction] of the ▶4 menu are fixed to [On] or [Off] depending on the [Pixel Shift Resolution] setting as shown below. When the [Pixel Shift Resolution] setting is changed to [Off], [LV Electronic Shutter] and [Shake Reduction] return to original settings.

[Pixel Shift Research	-	LV Electronic Shutter	Shake Reduction
Motion Correct Motion Correct		On	Off
Image Stabiliz	ation On	Off	On

- When [Motion Correction On] or [Motion Correction Off] is selected, mount the camera on a support such as a tripod securely before shooting.
- When [Image Stabilization On] is selected, perform shooting without changing the composition until four images are captured, not using a support such as a tripod.

#### Memo

- If a moving object exists in the frame, mosaic-pattern noise may appear in the image. In such case, select [Motion Correction On].
- The use of Pixel Shift Resolution in combination with Selftimer, Remote Control, or Mirror Lock-up Shooting is recommended.
- Using [Motion Correction On] or [Motion Correction Off] with the camera set on a fixed support such as a tripod provides higher-definition images than using [Image Stabilization On].

By shaking the Shake Reduction unit, a moiré reduction effect simulating that of a low-pass filter can be achieved.

- 1 Select [AA Filter Simulator] in the 

  □ 4 menu and press 

  .
- 2 Select a capture type and press **OM**.



Type1	Takes pictures while balancing the resolution and moiré reduction.
Type2	Prioritizes the moiré reduction.
Bracketing	Takes two consecutive images in order of
(2 images)	[Off] and [Type2].
Bracketing	Takes three consecutive images in order of
(3 images)	[Off], [Type1], and [Type2].

### Caution

- This function cannot be used in some capture modes or in combination with some other functions. (p.108)
- [Bracketing] cannot be selected in the following situations.
- In **B** mode
- When the drive mode is set to other than [Single Frame Shooting], [Self-timer] (12 seconds, 2 seconds), or [Remote Control] (now, after 3 seconds)
- · When HDR Capture is set
- When the shutter speed is faster than 1/1000 seconds, the full effect of this function cannot be achieved.

# **Composition Adjustment**



By using the Shake Reduction mechanism, the composition of the image can be adjusted. Use this function when you want to adjust the composition, such as when using a tripod while shooting with Live View.

- Select [On] in [Composition Adjust.] of 4 menu.
- **2** Press MENU.

The camera returns to standby mode.

**3** Press Ⅳ.

The Live View image is displayed and the message [Adjust the composition of the image] appears.

**4** Adjust the composition.

The amount of adjustment (the number of steps) is displayed at the top right of the screen.



# Available operations

<b>AV4&gt;</b>	Moves the composition of the image (up to 24 steps).
<b>7</b>	Corrects the tilt of the composition (up to 8 steps. Not available when the amount of adjustment steps in vertical and horizontal directions is 17 or more).
0	Resets the adjustment values to the default settings.

# **5** Press OK

The camera returns to standby mode in Live View.

#### Caution

 You cannot use this function when the ASTROTRACER function is used.

#### Memo

- The adjusted composition is saved even if Live View is ended or the camera is turned off. To reset the saved adjustment value when the camera is turned off, set [Composition Adjust.] to (Off) in [Memory] of the 5 menu. (p.102)

# **Using the GPS**

The following functions are available with the camera's built-in GPS unit.

GPS Logging	Saves the GPS positioning data received periodically to the memory card. (p.81)
ASTROTRACER	Tracks and captures celestial bodies. (p.82) By matching the movement of the built-in Shake Reduction unit with the movement of celestial bodies, celestial bodies can be captured as individual points even when shooting with a long exposure setting.
GPS Time Sync	Adjusts the camera's date and time settings using information obtained from GPS satellites.

Press (GPS) to turn the GPS on. The GPS indicator lamp lights up. Press (GPS) again to turn the GPS off.



You can check the GPS positioning status on the status screen and Live View screen. The icon color tells the ongoing action.

GPS positioning status

Green	3D positioning
Yellow	2D positioning
Red	No positioning



When a picture is taken while the GPS is on, the GPS information is stored internally in the image file. The GPS information is not stored in the movie file. You can check the GPS information in Detailed Information Display in playback mode. (p.18)

#### Caution

- · While the GPS is on, the battery drains faster than normal.
- If you use the camera near objects which generate a magnetic field such as magnets, or have magnetism such as iron, the electronic compass may not work properly.
- The GPS information stored in the image file cannot be deleted. If you do not want to share the shooting location information with the public when posting the image on SNS, etc., turn the GPS off before shooting.
- You cannot use the optional GPS unit O-GPS1 with this camera.
- For other precautions on the GPS, refer to "About the GPS" (p.129).

# Memo

 When the GPS information can be obtained, Coordinated Universal Time (UTC) is recorded as the shooting date and time for images. On the Electronic Compass screen (p.17), the time is displayed after the difference between UTC and the time of the shooting location is corrected.

# Performing a Calibration



Perform a calibration to make the GPS unit operate correctly.

1 Select [GPS/E-Compass] in 3 menu and press ▶.

The [GPS/E-Compass] screen appears.

2 Select [Calibration] and press ▶.

The [Calibration] screen appears.



3 Rotate the camera according to the instruction displayed on the monitor.



**4** i

# Press OK

The screen of Step 2 reappears.

The result of calibration appears.

If [The operation could not be completed correctly] appears, change the camera direction and perform a calibration again.

#### Caution

- When performing a calibration, be careful not to drop the camera. Wrap the strap around your wrist or take other preventive measures.
- If the battery is removed, perform a calibration again after the battery is put back in.
- Changing the lens or the angle of the monitor after performing a calibration may have some effect on the magnetic field environment. In this case, perform a calibration again.

# Memo

# Recording the Camera Route (GPS Logging)



1 Select [GPS/E-Compass] in **₹**2 menu and press

The [GPS/E-Compass] screen appears.

**2** Select [GPS Logging] and press ▶.

The [GPS Logging] screen appears. The GPS automatically turns on.

3 Set the logging conditions.



Logging Interval	Select from [5sec.], [10sec.], [15sec.], [30sec.], or [1min.].
Logging Duration	Select from [1hr.] to [24hr.]. (When [Logging Interval] is set to [5sec.], select from [1hr.] to [9hr.]. When [Logging Interval] is set to [10sec.], select from [1hr.] to [18hr.].)
Memory Card Options	Select the SD1 card or the SD2 card.

**4** Select [GPS Logging] and press ▶. The confirmation screen appears.

5 Select [Start] and press 🗷.

GPS logging starts.
The screen of Step 3 reappears.

### Caution

 GPS log data cannot be recorded when the camera is connected by USB to a computer.

#### Memo

- During GPS logging, "LOG" is displayed under the GPS positioning status icon on the status screen and Live View screen. When the time set in [Logging Duration] elapses, "LOG END" is displayed and a GPS log file is saved.
- Select [Exit] in Step 5 to stop GPS logging. A GPS log file is saved.
- When the GPS is turned off by pressing GPS, GPS logging stops temporarily. (The countdown for [Logging Duration] continues.) GPS logging starts again when the GPS is turned on.
- If there is GPS log data to be saved as a log file, "LOG END" is displayed in [GPS Logging] on the screen of Step 3. Select [Save] in Step 5 to save the GPS log data as a log file. "LOG END" is displayed also when the power is turned off due to low battery level or when the battery is replaced. In this case, save the GPS log file before restarting GPS logging.
- During GPS logging, you cannot change the settings of [Logging Interval] and [Logging Duration].
- A log file (KML format) is saved in the "GPSLOG" folder on the memory card with a file name of a sequential number from 001 to 999 and month and day (example: 001\_0505).
   However, if there is no GPS log data to be saved, neither a log file nor a folder is created. In addition, if the log file "999\_\*\*\*\*" has been saved, a new log file cannot be saved.
- You can display the camera route on Google Earth, etc. by transferring a log file to a computer and importing it.

Shooting

# Setting the ASTROTRACER

- 1 Press GPS.
- 2 Select [ASTROTRACER] in 
  3 menu and press

The [ASTROTRACER] screen appears.

- 3 Select [ASTROTRACER] and press ▶.
- 4 Select [On] and press OK.



5 Select [Precise Calibration] and press ▶.

The [Precise Calibration] screen appears.

Calibration (p.80)

6 Press OK.

The [ASTROTRACER] screen reappears.

7 Press MENU twice.

The camera returns to standby mode.

#### Caution

- As the magnetic field environment varies depending on the shooting location, a precise calibration must be performed at each location when shooting images of celestial bodies with ASTROTRACER.
- Changing the lens or the angle of the monitor after performing a precise calibration may have some effect on the magnetic field environment. In this case, perform a precise calibration again.

# Shooting with the ASTROTRACER

- 1 Set the Exposure Mode to B and set the Focus Method to MF.
- 2 Set the shooting conditions.



# Available operations

0	Enables/Disables the timed exposure.
	Changes the exposure time within the range from 0'10" to 5'00" when the timed exposure is enabled.
Fine	Changes the aperture value.
2	Performs a precise calibration.

- 3 Adjust the focus and press SHUTTER fully. Shooting starts.
- 4 Press SHUTTER fully again.

Shooting stops.

When the timed exposure is enabled, shooting stops automatically after the set time has elapsed.

- Caution
- This function cannot be used in combination with some other functions. (p.108)

#### When the Monitor is too Bright

For shooing in a dark place for a long period of time, you can change the monitor display color to red by setting [Night Vision LCD Display] to [On] in the  $\$ 5 menu.

# **Playback Mode Palette Items**

Playback functions can be set from the playback mode palette as well as the 1 menu (p.31).

Press ▼ in single image display (Standard Information Display or No Information Display) of the playback mode to display the playback mode palette.



	Item	Function	Page
<b>&gt;</b>	Image Rotation*1	Changes the rotation information of an image.	p.86
0	Digital Filter *1	Processes images with digital filters.	p.90
	Color Moiré Correction *1 *2	Reduces color moiré in images.	p.89
	Resize *1 *2	Changes the number of recorded pixels of an image.	p.88
	Cropping *1	Crops out only the desired area of an image.	p.89
0-п	Protect	Protects images from being accidentally erased.	p.103
	Slideshow	Plays back images one after another.	p.86
Q	Save as Manual WB *1	Saves the white balance settings of a captured image as Manual White Balance.	p.70
<b>III</b> y	Save Cross Processing	Saves the settings used for an image captured in Cross Processing mode of Custom Image as your "Favorite" settings.	p.73
RĄW	RAW Development *3	Develops RAW images into JPEG images and saves them as new files.	p.92

	Item	Function	Page
ુ	Movie Edit *4	Divides a movie or deletes unwanted segments.	p.91
Ð	Image Copy	Copies images between cards in the SD1 and the SD2 slots.	p.88

- \*1 Not available when a TIFF image or movie is displayed.
- 2 Not available when a RAW image or TIFF image is displayed.
- \*3 Available only when a RAW image is saved.
- 4 Available only when a movie is displayed.

### Memo

The functions of the playback mode palette can be used only for the images saved on the memory card that is currently being played back. To use the functions for the images saved on the other memory card, switch to the other memory card slot by pressing 

In single image display, and then display the playback mode palette.

# **Changing the Playback Method**

# **Displaying Multiple Images**

You can display 6, 12, 20, 35, or 80 thumbnail images at the same time

Turn 5 to the left in playback mode.

> The multi-image display screen appears.



#### Available enerations

Available op	stations
<b>▲▼∢</b> ▶	Moves the selection frame.
<b>A</b>	Shows the next/previous page.
11:2	Switches between the SD1 card and the SD2 card.
INFO	Shows the display style selection screen.
Ħ	Deletes the selected images.

Press OK.

The selected image appears in single image display.

# **Deleting Selected Images**

- 1 Press in Step 1 of "Displaying Multiple Images" (p.84).
- 2 Select the images to delete



# Available operations

<b>▲▼∢</b> ▶	Moves the selection frame.
OK	Confirms/cancels the selection of the image to delete.
2	Selects the range of images to delete.
S.J.	Shows the selected image in single image display. Use  to show a different image.

In the upper left area of the monitor, the number of selected images is displayed.

3 Press 🛍.

The delete confirmation screen appears.

- Select [Delete] and press OK.
- Memo
- · You can select up to 500 images at a time.
- · Protected images cannot be selected.
- · You can delete the images selected individually along with the images selected by specifying the range to delete.
- · Use the same steps to select multiple images for the following functions
  - · Image Copy (p.88)
  - · RAW Development (p.92)
  - Protect (p.103)

# Displaying Images by Folder

Turn to the left in Step 1 of "Displaying Multiple Images" (p.84).

The folder display screen appears.



#### Available operations

▲▼◀▶	Moves the selection frame.
恒	Deletes the selected folder.

# 2 Press OK.

The images in the selected folder are displayed.

# **Deleting a Folder**

1 Select the folder to delete in Step 1 of "Displaying Images by Folder" (p.85), and press

The delete confirmation screen appears.

2 Select [Delete] and press OK.

The selected folder and all the images in it are deleted. When protected images are in the folder, select [Delete all] or [Leave all].

# **Displaying Images by Shooting Date**

Images are grouped and displayed by shooting date.

Press N=0 in Step 1 of "Displaying Multiple Images" (p.84).

The display style selection screen appears.

2 Select [Calendar Filmstrip Display].



Shooting Thumbnail date

#### Available operations

<b>▲</b> ▼	Selects a shooting date.
<b>◆</b> ►	Selects an image taken on the selected shooting date.
to the right	Shows the selected image in single image display.
ú	Deletes the selected image.

3 Press OK.

The selected image appears in single image display.

# **Playing Back Images Continuously**

Select [Slideshow] in the playback mode palette. Slideshow starts



### Available operations

OK	Pauses/resumes playback.
◀	Displays the previous image.
<b>&gt;</b>	Displays the next image.
▼	Stops playback.
Fine	Adjusts the sound volume of the movie.

After all images are played back, the camera returns to single image display mode.

# Memo

· You can change the [Display Duration1, [Screen Effect], [Repeat Playbackl, and [Auto Movie Playback] settings for slideshow in [Slideshow] of the ▶1 menu. Slideshow can also be started from the Slideshow setting screen.



When [Auto Movie Playback] is set to (Off), press (M) during slideshow to play back a movie.

# **Displaying Rotated Images**

Image rotation information is saved when you take pictures with the camera held vertically. When [Auto Image Rotation] of Ilmage Displayl in the ▶1 menu is set to ☒ (On), the image is automatically rotated based on the rotation information during playback (default setting).

The rotation information of an image can be changed by following the procedure below.

- Display the image to edit in single image display.
- Select [Image Rotation] in the playback mode palette.

The selected image is rotated in 90° increments and the four thumbnail images are displayed.

Use ▲▼◀▶ to select the desired rotation direction and press OK. The image rotation information is saved, and the camera returns to

single image display mode.



#### Caution

 
- When [22 Save Rotation Info] is set to [Off] in the C4 menu. image rotation information is not saved.
- · You cannot change image rotation information in the following cases.
  - · Protected images
  - · Images without a rotation information tag
  - When [Auto Image Rotation] of [Image Display] in the ►1 menu is set to (Off)
- Movie files cannot be rotated

# Connecting the Camera to an AV Device

Connect to an AV device, such as a TV, equipped with an HDMI<sup>®</sup> terminal to display Live View images while shooting or to play back images in playback mode.

Make sure to have a commercially available HDMI<sup>®</sup> cable equipped with an HDMI<sup>®</sup> terminal (type D).

- 1 Turn the AV device and camera off.
- 2 Open the terminal cover of the camera, and connect the cable to the HDMI<sup>®</sup> terminal.



- 3 Connect the other end of the cable to the input terminal on the AV device.
- 4 Turn the AV device and camera on.
  The camera turns on in HDMI® mode, and the camera information is displayed on the screen of the connected AV device.

#### Caution

 While the camera is connected to an AV device, nothing is displayed on the camera monitor. Also, you cannot adjust the sound volume on the camera. Adjust the volume on the AV device.

#### Memo

- Check the operating manual of the AV device and select a suitable input terminal for connecting the camera.
- By default, the maximum resolution supported by both the AV device and camera is automatically selected. If it fails to play back images properly, change the setting in [HDMI Out] of the \$2 menu.
- If you intend to use the camera continuously for a long period, the use of the optional AC adapter kit is recommended. (p.40)

# **Editing and Processing Images**

# Copying an Image

Copies images between memory cards in the SD1 and the SD2 slots.

- Select an image saved on the memory card which the images are to be copied from, and display it in single image display.
- 2 Select [Image Copy] in the playback mode palette.
- 3 Select [Select image(s)] or [Select a folder] and press or.
- 4 Select image(s) or a folder.

How to select image(s) (p.84)

- **5** Press NFO.

  The save confirmation screen appears.
- 6 Select the location to save the image(s) or folder and press **OM**.

# **Changing the Image Size**

### Caution

- Only JPEG images captured with this camera can be resized or cropped.
- Images already resized or cropped to the minimum file size cannot be processed.

# **Changing the Number of Recorded Pixels**

Changes the number of recorded pixels of the selected image, and saves it as a new file.

- Display the image to edit in single image display.
- 2 Select [Resize] in the playback mode palette. The screen to select the number of recorded pixels appears.
- 3 Use ◀▶ to select the number of recorded pixels and press ox.

You can select an image size smaller than that of the original image.



The save confirmation screen appears.

4 Select [Save to SD1] or [Save to SD2] and press

# **Cropping Out Part of the Image**

Crops out only the desired area of the selected image and saves it as a new file.

- Display the image to edit in single image display.
- 2 Select [Cropping] in the playback mode palette. The cropping frame to specify the size and position of the area to crop appears on the screen.
- 3 Specify the size and position of the area to crop by using the cropping frame.



# Available operations

E	Changes the size of the cropping frame.
<b>▲▼∢</b> ►	Moves the cropping frame.
INFO	Changes the Aspect Ratio or Image Rotation setting.
0	Rotates the cropping frame (only when possible).

4 Press OK.

The save confirmation screen appears.

5 Select [Save to SD1] or [Save to SD2] and press

# **Correcting Color Moiré**

Reduces color moiré in images.

- Display the image to edit in single image display.
- 2 Select [Color Moiré Correction] in the playback mode palette.

If the image cannot be edited, [This image cannot be processed] appears.

3 Use **♦** to select the correction level and press **○** .



The save confirmation screen appears.

- 4 Select [Save to SD1] or [Save to SD2] and press
- Caution
- The Color Moiré Correction function can only be used for JPEG images captured with this camera.

# **Processing Images with Digital Filters**

- Display the image to edit in single image display.
- 2 Select [Digital Filter] in the playback mode palette.

The screen to select a filter appears.

**3** Select a filter.

Use **to** select a different image.



Base Parameter Adj Extract Color Replace Color Toy Camera Retro High Contrast Shading Invert Color Unicolor Bold Sketch Water Color Pastel

Posterization Miniature Soft Starburst Fish-eve

Bold Monochrome Tone Expansion Monochrome

Slim

Proceed to Step 7 if you do not need to change the parameters.

4 Press INFO .

The parameter setting screen appears.

**5** Set the parameters.



## Available operations

6 Press OK.

The screen of Step 3 reappears.

7 Press OK.

The save confirmation screen appears.

Select [Apply additional filter(s)], [Save to SD1], or [Save to SD2], and press .

Select [Apply additional filter(s)] when you want to apply additional filters to the same image. The screen of Step 3 reappears.

- Caution
- Only JPEG and RAW images captured with this camera can be edited with the digital filters.
- RAW images captured using HDR Capture or Pixel Shift Resolution cannot be processed with Digital Filter.

### Memo

 Up to 20 filters, including the digital filter used during shooting (p.74), can be applied to the same image.

# **Recreating Filter Effects**

Retrieves the filter effects of the selected image and applies the same filter effects to other images.

- 1 Display a filter-processed image in single image display.
- 2 Select [Digital Filter] in the playback mode palette.
- 3 Select [Recreating filter effects] and press **OK**.

The filter effects used for the selected image appear.



To check the parameter details, press INFO.

Press INFO again to return to the



5 Press 03.

previous screen.

The image selection screen appears.

Use to select an image for applying the same filter effects, and press .



You can only select an image saved in the same memory card

that has not been processed with a filter. The save confirmation screen appears.

7 Select [Save to SD1] or [Save to SD2] and press

# Memo

 If [Searching for the original image] is selected in Step 3, the original image prior to digital filter application can be retrieved.

# **Editing Movies**

- Display the movie to edit in single image display.
- 2 Select [Movie Edit] in the playback mode palette.
  The movie editing screen appears.
- 3 Select the point where you want to divide the movie.

The frame at the dividing point is displayed at the top of the screen.

Up to four points can be selected to divide the original movie into five segments.



#### Available operations

Plays back/pauses a movie.
Forwards a frame (when paused).
Fast-forwards playback.
Reverses a frame (when paused).
Fast-reverses playback.
Adjusts the sound volume.
Confirms/cancels the selected dividing point.

Proceed to Step 7 if you do not want to delete any segment.

4 Press 📶.

The screen to select the segments to delete is displayed.

# 5 Use **◄**▶ to move the selection frame and press **O**X.

The segments to delete are specified. (Multiple segments can be deleted at once.)



Press **OK** again to cancel the selection.

# 6 Press MENU.

The screen of Step 3 reappears.

7 Press OK.

The save confirmation screen appears.

Select [Save to SD1] or [Save to SD2] and press

# Memo

 Select dividing points in chronological order from the beginning of the movie. When canceling the selected dividing points, cancel each of them in reverse order (from the end of the movie to the beginning). In an order other than specified, you can neither select dividing points nor cancel the selections of the dividing points.

# **Developing RAW Images**

You can develop RAW images into JPEG or TIFF images, and save them as new files

1 Select [RAW Development] in the playback mode palette.

The screen for selecting the processing type appears.

2 Select the desired option and press **OK**.

Select single image	Develops an image.	
Select multiple images	Develops up to 500 images with the same settings.	
Select a folder	Develops up to 500 images in the selected folder with the same settings.	

When [Select single image] is selected, proceed to Step 6. The image/folder selection screen appears.

3 Select image(s) or a folder.

Proceed to Step 5 if a folder is selected.

How to select image(s) (p.84)

4 Press INFO.

The screen for selecting the parameter setting method appears.

5 Select the parameter setting method and press



Develop images as shot	Allows you to change only File Format, Aspect Ratio, JPEG Recorded Pixels, JPEG Quality, and Color Space.
Develop images with modified settings	Allows you to change all setting items.

# 6 Select the setting item to change.



White Balance **Distortion Correction Custom Image** Peripheral Illumin, Corr. Sensitivity Lat-Chromatic-Ab Adj Diffraction Correction Clarity Skin Tone **Color Fringe Correction** Digital Filter File Format HDR Capture/ Aspect Ratio Pixel Shift Resolution JPEG Recorded Pixels Shadow Correction JPEG Quality High-ISO NR Color Space

#### Available operations

	Selects a different image (when in single image display).
▲▼◀▶	Selects a setting item.
Eng.	Changes the value.
INF0	Reviews the image.
OK	Makes detailed settings.

- 7 Use ▲▼◀▶ to select [JPEG→①] or [TIFF→①].
  Turn 🗫 to change the file format.
- Press OK.

  The save confirmation screen appears.
- 9 Select [Save to SD1] or [Save to SD2] and press

When [Select single image] is selected, select [Continue] or [Exit], and press **OK**.

#### Caution

- Only RAW images captured with this camera can be developed.
- For RAW images captured when the drive mode is set to [Multi-exposure] or [Interval Composite], the images are developed with the Lens Correction settings used during shooting. The Lens Correction settings cannot be changed when developing RAW images.
- For RAW images captured when [Crop] in the 
   <sup>1</sup> 2 menu is set to [1:1], the aspect ratio cannot be changed.

#### Memo

- When [Select multiple images] or [Select a folder] is selected in Step 2, a folder with a new number is created, and the JPEG or TIFF images are stored in it.
- For [HDR Capture] and [Pixel Shift Resolution], the setting item of which parameters can be changed varies depending on the item used during shooting. For images captured with the Pixel Shift Resolution function turned on, the Motion Correction parameters or Image Stabilization parameters can be changed depending on the setting used during shooting.
- With the provided software "Digital Camera Utility 5", you can develop RAW images on a computer.

# Using the Camera with a Computer

Connect the camera to a computer using a USB cable. Make sure to have a commercially available USB cable equipped with a micro B terminal.

# **Setting the Connection Mode**

**\**2

Set the connection mode in [USB Connection] of the  $\ 2$  menu according to the operation to be performed with a computer.

MSC	Allows you to copy the data on the memory card to a computer by making the computer recognize the camera as a removable disk. (p.94)
РТР	Allows you to perform tethered shooting by operating the camera with a computer. (p.95)

You can check the selected connection mode on the LCD panel. (p.21)

#### Memo

- Refer to "Operating Environment for USB Connection and Provided Software" (p.123) for system requirements to connect the camera to a computer and to use the software.
- If you intend to use the camera continuously for a long period, the use of the optional AC adapter kit is recommended. (p.40)

# Copying an Image on the Memory Card

- 1 Set [USB Connection] to [MSC] in the 32 menu.
- **2** Turn the camera off.
- 3 Open the terminal cover of the camera, and connect the USB cable to the USB terminal.



- 4 Connect the USB cable to the USB port of the computer.
- **5** Turn the camera on.

  The camera is recognized as a removable disk.
- **6** Save the captured images to the computer.
- 7 Disconnect the camera from the computer.

#### Caution

- The camera cannot be operated while it is connected to a computer. To operate the camera, terminate the USB connection on the computer first, then turn off the camera and remove the USB cable.
- If the "K-1 II" dialog appears on the computer screen in Step 5, select [Open folder to view files] and click the OK button.

# Operating the Camera with a Computer

You can perform tethered shooting with the camera connected to a computer using the optional "IMAGE Transmitter 2" software. Captured images can be directly saved to the computer.

- 1 Set [USB Connection] to [PTP] in the 32 menu.
- 2 Turn the camera off.
- 3 Connect the camera to a computer using a USB cable.

Connecting the camera to a computer (p.94)

- 4 Turn the camera on.
- 5 Start "IMAGE Transmitter 2" on the computer. "IMAGE Transmitter 2" is started and the computer recognizes the camera.

#### Caution

 When the capture mode selector switch is set to #, tethered shooting cannot be performed if a memory card is not inserted in the camera.

### Memo

 For details on "IMAGE Transmitter 2", download and refer to the latest version of the "User Guide [Operation]" available at the following site.

http://www.ricoh-imaging.co.jp/english/support/download\_manual.html

 During tethered shooting, the shutter release always has priority regardless of the [AF.S Setting] setting of [Phase Detection AF] and the [Contrast AF Options] setting of [Contrast Detection AF] in the 11 menu. (p.57, p.59)

# Using the Camera with a Communication Device

This camera has a built-in Wi-Fi™ function. By directly connecting to a communication device such as a smartphone and tablet via wireless LAN, the camera can be operated from the communication device and images can be shared with others via social networks or e-mail.

# **Enabling the Wi-Fi™ Function**

The Wi-Fi $^{\text{TM}}$  function is disabled when the camera is turned on. Enable the function using one of the following methods.

- Setting from the menus (p.96)
- · Setting with the Smart Function (p.96)

When the Wi-Fi™ function is enabled, the Wi-Fi lamp lights up and the � (white) icon indicating the wireless LAN status is displayed on the status screen and Live View screen. When ♠ (gray) is displayed, a connection with the communication device is not established correctly.



#### Memo

- Auto Power Off is not available while a Wi-Fi™ connection is established or images are being transferred. If Auto Power Off is activated while a connection is not established, the Wi-Fi™ function is disabled. The function is enabled when the camera recovers from Auto Power Off.
- The Wi-Fi™ function is disabled during the USB connection.

#### Caution

- Do not attempt to use the Wi-Fi<sup>™</sup> function in a location where the use of wireless LAN devices is restricted or prohibited, such as on airplanes.
- When using the Wi-Fi™ function, observe local laws and regulations governing radio communication.
- If a memory card with a built-in wireless LAN function (such as an Eye-Fi card or a Flucard) is used, radio wave interference may occur. When this occurs, disable the Wi-Fi™ function of the camera.

# 1 Select [Wi-Fi] in **3** menu and press ▶. The [Wi-Fi] screen appears.

2 Set [Action Mode] to [On]. Select [Off] to disable the Wi-Fi™



3 Press MENU twice.

# Memo

function

 In Step 2, select [Communication Info] to check the SSID, Password, and MAC Address of the wireless LAN. Or, select [Reset Settings] to reset the settings to their default values.

# **Setting with the Smart Function**

1 Set the function dial to [Wi-Fi].



**2** Turn the setting dial.

The Wi-Fi™ function is turned on or off.

# Operating the Camera with a Communication Device

The following functions can be used by connecting the camera to a communication device via Wi-Fi™ and using the dedicated application "Image Sync".

Remote Capture	Displays the Live View image of the camera on the communication device, and enables controlling exposure settings and shooting by operating the communication device.
Image View	Displays the images saved on the memory card inserted in the camera on the communication device, and imports the images to the communication device.

Image Sync supports iOS and Android™, and can be downloaded from the App Store or Google Play™. For the supported operating system and other details, refer to the download site

### Memo

 For details on how to connect the camera to a communication device and the functions of dedicated application "Image Sync", refer to the following site.

http://www.ricoh-imaging.co.jp/english/products/app/image-sync2/

• For details on how to operate the communication device, refer to the operating manual of the device.

# **Camera Settings**

# Customizing the Button/E-dial **Functions**

**5**/**2**2

# **Setting the Button Operation**

You can set the functions for when **Ex1**, **Ex2** (**▼**), or **AF** is pressed, or when the main switch is turned to  $\mathfrak{Q}$ . In mode, you can set only the function for when As is pressed.

Select [Button Customization] in **□**5 or **≌**2 menu and press .

The [Button Customization] screen appears.

2 Select the desired item and press ▶.

The screen to set the function for the selected item is displayed.



# 3 Press ▶ and use ▲▼ to select the function to assign to each part.

The following functions can be assigned to each part.

	Setting	Function	Page
	One Push File Format	Temporarily changes the file format (assigned to 1 by default).	p.98
	Outdoor View Setting	Adjusts the brightness of the monitor for outdoor shooting (assigned to by default).	p.14
	Flash Mode	Sets the flash mode.	p.71
Fx1 Button Fx2 Button	Pixel Shift Resolution	Changes the setting of the Pixel Shift Resolution function.	p.77
	Shake Reduction	Turns the Shake Reduction and Movie SR functions on or off.	p.75
	Horizon Correction	Turns the Horizon Correction function on or off.	1
	Electronic Level	Turns the Electronic Level display for the viewfinder and Live View on or off.	p.21
	Enable AF1	Autofocus is performed when AF is pressed.	
AF Button AF Button (Movie)	Enable AF2	Autofocus is performed when AF is pressed. Half press of SHUTTER is disabled.	p.57
	Cancel AF	While AF is pressed, half press of SHUTTER is disabled.	
Preview Dial	Optical Preview	Activates the Optical Preview function.	p.61
	Digital Preview	Activates the Digital Preview function.	ρ.σ1

Setting

# 4 Press OK.

5 Press MENU.

The screen of Step 2 reappears. Repeat Steps 2 to 5.

6 Press MENU twice.

# Memo

- You can check the functions assigned to the buttons while the Guide Display feature is active (p.28).
- You can assign the same function to [x] and [x2].
- When [One Push File Format] or [Electronic Level] is assigned to

x or x2, pressing the button makes a beep sound. To disable the beep sound, change the sound setting for each function in [Sound Effects] of the 1 menu. (p.32)



### Setting the One Push File Format

You can temporarily change the file format by pressing the button during shooting. Select the file format to change to when a pressed for each [File Format] setting.

- 1 Set [One Push File Format] to [Fx1 Button] or [Fx2 Button] in Step 3 of "Setting the Button Operation" (p.97).
- 2 Select ☑ or ☐ for [Cancel after 1 shot].
  - The recording format returns to the [File Format]

    Setting of [Image Capture Settings] in the 

    2 menu after a picture is taken.

The setting is retained until any of the following operations is performed:

- When x1 or x2 is pressed again
- When , MENU, or NFO is pressed, or when the mode dial or main switch is turned
- Select the file format when

  To r 2 is pressed.

  The left side is the [File Format]

The left side is the [File Format] setting and the right side is the changed file format when **1** or **1** or **1** spressed.



 $m{4}$  Press MENU three times.

The camera returns to standby mode.

#### Memo

 When the button is pressed and held, a beep sounds and the One Push File Format is enabled

### Caution

 The One Push File Format function cannot be used when [Memory Card Options] in the 

2 menu is set to [Separate RAW/JPEG]. (p.48)

# Setting the E-dial Operation

For each exposure mode, you can set the functions for when and are turned and is pressed.

1 Select [E-Dial Programming] of [Button Customization] in ♠5 or ♠2 menu and press ▶.

The [E-Dial Programming] screen appears.

2 Select an exposure mode and press ▶.

The screen for the selected exposure mode appears.

3 Press ▶ and use ▲ ▼ to select the combination of functions for when ♠ and ♠ are turned and ♠ is pressed.



Τv	Change Shutter Speed
Av	Change Aperture Value
ISO	Change Sensitivity
≇	EV Compensation
⇒P	Return to P Mode
<u> </u>	Return to <b>P</b> Mode Program Shift
<u> </u>	-

- **4** Press **0**K.
- 5 Press MENU. The [E-Dial Programming] screen reappears. Repeat Steps 2 to 5.
- 6 Press MENU twice.

#### Memo

- You can check the functions assigned to 
   AND, No. 2, and 
   while the Guide Display (p.45) is shown.

# **Setting the Monitor and Indicator Lamps**

# Adjusting the Brightness, Saturation, and Color of the Monitor



You can set the brightness, saturation, and color adjustment of the monitor

1 Select [LCD Display Settings] in the <a href="tel:4">1</a> menu and press ▶.
The [LCD Display Settings] screen appears.

2 Adjust the brightness, saturation, and color.



#### Available operations

$\blacksquare$	Selects a parameter.
<b>4</b>	Adjusts the value.
E. S	Switches between the color chart display and the image display.
0	Resets the adjustment value to the default setting.

3 Press OK.

The 1 menu reappears.

# Caution

When [Outdoor View Setting] of the 1 menu is set, [LCD Display Settings] cannot be changed.

# Specifying the Illumination Button Settings

**4**2

You can set whether to turn on the lights for the following camera parts when is pressed.

Set in [Illumination Settings] of the 2 menu. Selecting [Off] provides no illumination even when is pressed.



LCD Panel	Off, Low, High
Backside Controls	Off, Low, High
Lens Mount	Off, On
Card Slot/Connector	Off, On

# Setting the Illumination of the Indicator Lamps

**\**2

You can set whether to light up the following indicator lamps on the camera body.

Set in [Indicator Lamps] of the **₹**2 menu.

For [Self-timer], the self-timer lamp blinks during the countdown for the drive mode [Self-timer (12 sec.)]. For [Remote Control], the remote control receiver lamp blinks during the standby for shooting.



Wi-Fi	Off, Low, High
GPS	Off, Low, High
Self-timer	Off, On
Remote Control	Off, On

# **Saving Frequently Used Settings**



Camera settings can be saved to  ${\bf U1}$  to  ${\bf U5}$  of the mode dial and used repeatedly.

The following settings can be saved.

Exposure Mode (except for AUTO)

White Balance
Custom Image

Sensitivity
EV Compensation
Drive Mode

menu and C menu settings (with exceptions)

# Saving the Settings

- 1 Set the exposure mode and all the necessary settings to save.
- 2 Select [Save USER Mode] in **△**5 menu and press **▶**.

The [Save USER Mode] screen appears.

3 Select [Save Settings] and press ▶.

The [Save Settings] screen appears.



- 4 Select a USER mode from [USER1] to [USER5], and press ▶.
- 5 Select [Save] and press OK.
  The screen of Step 3 reappears.

### Caution

 [Save USER Mode] cannot be selected when the mode dial is set to AUTO.

#### Memo

- The settings saved as the USER mode can be displayed on the monitor when you select [Check Saved Settings] in Step 3.
- To reset the settings to the default values, select [Reset USER Mode] in Step 3.

# **Editing a Setting Name**

You can change the name of the USER mode in which you saved settings.

- 1 Select [Rename USER Mode] in Step 3 of "Saving the Settings" (p.101) and press ▶.

  The [Rename USER Mode] screen appears.
- 2 Select a USER mode from [USER1] to [USER5], and press ▶.

The text-entry screen appears.

Change the text. Up to 18 single-byte alphanumeric characters and symbols can be entered.



Text input cursor

# Available operations

▲▼◀▶	Moves the text selection cursor.	
Eng.	Moves the text input cursor.	
2	Switches between upper and lower case letters.	
ОК	Enters a character selected with the text selection cursor at the position of the text input cursor.	
Í	Deletes a character at the position of the text input cursor.	

# After entering the text, move the text selection cursor to [Finish], and press 0%.

The [Rename USER Mode] screen reappears.

# **Using the Saved USER Mode**

# $m{1}$ Set the mode dial to U1 to U5.

The USER mode name is displayed.

Use ▲▼ to check the saved settings.



# **2** Change the settings as necessary.

The exposure mode can be changed in [Exposure Mode] of the 1 menu.



#### Memo

 The settings changed in Step 2 are not saved as the USER mode settings. When the camera is turned off, the camera returns to the originally saved settings. To change the original settings, save the USER mode settings again.

# Selecting Settings to Save in the Camera



The setting values for most functions of this camera are saved even if the camera is turned off. For the following function settings, you can select whether to save the settings ( $\boxtimes$ ) or to return the settings to their default values ( $\square$ ) when the camera is turned off.

Set in [Memory] of the \$\infty\$5 menu.

**Digital Filter** Sensitivity **EV** Compensation **HDR Capture** Flash Mode Pixel Shift Resolution Flash Exposure Compensation Composition Adjust. Drive Mode Playback Info Display White Balance Operation Control Lock **Custom Image Outdoor View Setting** Clarity Night Vision LCD Display Skin Tone

### Memo

 When [Reset] of the ~4 menu is performed, all Memory settings return to the default values.

# File Management Settings

# **Protecting Images from Deletion**

You can protect images from being accidentally deleted.

#### Caution

- Even protected images are deleted if the inserted memory card is formatted.
- **1** Select [Protect] in the playback mode palette. The screen for selecting the processing type appears.
- 2 Select [Select image(s)] or [Select a folder] and press 0%.



- 3 Select the image(s) or folder to protect.
  Proceed to Step 5 if [Select a folder] is selected.
  - How to select image(s) (p.84)
- 4 Press INFO.

  The confirmation screen appears.
- 5 Select [Protect] and press OK.

# Memo

• To protect all images stored on the memory card, select [Protect All Images] of the ▶1 menu.

# Specifying the Folder/File Settings



#### Create New Folder

When [Create New Folder] is selected in the  $\ 3$  menu, a folder is created with a new number when the next image is saved.

#### Caution

· You cannot successively create multiple folders.

### Memo

- · A new folder is automatically created in the following cases.
  - When the drive mode is set to [Interval Shooting] (p.68)
  - When [Select multiple images] or [Select a folder] is selected for [RAW Development] of the playback mode palette (p.92)

#### **Folder Name**

When images are captured with this camera, a folder is automatically created and the captured images are stored in it. Each folder name consists of a sequential number from 100 to 999 and a string of five characters.

The character string in the folder name can be changed.

1 Select [Folder Name] in **₹**3 menu and press ▶. The [Folder Name] screen appears.

# 2 Press ▶ and select [Date] or [Optional].



Date	The four digits of the month and day of the shooting date are assigned after the folder number.  The month and day appear according to the [Date Format] setting in [Date Adjustment] of the ♣1 menu.  Example) 101_0125: for images taken on January 25th
Optional	A freely defined string of five characters is assigned after the folder number. (Default setting: PENTX) Example) 101PENTX

Proceed to Step 6 if you select [Date] or do not need to change the character string.

# **3** Press ▼, and then press ▶.

The text-entry screen appears.

4 Change the text. Enter five single-byte alphanumeric characters. Text selection cursor



Text input cursor

#### Available operations

<b>▲▼∢</b> ►	Moves the text selection cursor.	
Eng.	Moves the text input cursor.	
ОК	Enters a character selected with the text selection cursor at the position of the text input cursor.	
0	Resets the entered text to "PENTX".	

- 5 After entering the text, move the text selection cursor to [Finish], and press .
- 6 Press MENU twice.
- Memo
- A folder with a new number is created when the folder name is changed.
- A maximum of 500 images can be stored in a single folder.
   When the number of captured images exceeds 500, a new
   folder is created with the number following the number of the
   folder currently being used. When the drive mode is set to
   [Bracketing], images are stored in the same folder until
   shooting is completed.

### Caution

 The maximum folder number is 999. After the folder number reaches 999, you cannot capture new images if you attempt to change the folder name or create a new folder, or when the file name number reaches 9999.

#### **File Name**

One of the following string of characters is used as the file name prefix depending on the [Color Space] setting of [Image Capture Settings] in the 2 menu.

Color Space	File Name
sRGB	IMGP****.JPG
AdobeRGB	_IMG****.JPG

The first four characters can be changed to a character string of your choice.

1 Select [File Name] in 3 menu and press ▶.
The [File Name] screen appears.

2 Select ♠ or ♣ , and press ▶ .

The text-entry screen appears.



# 3 Change the text.

Up to four single-byte alphanumeric characters can be entered as an alternative for the first part of the file name, while the asterisks stand for figures that increase automatically shot by shot.

How to enter text (p.103)

4 Press MENU twice.

# Memo

- When [Color Space] is set to [AdobeRGB], the file name prefix is "\_" and first three characters of the entered character string become the file name.
- For movies, regardless of the [Color Space] setting, the file name is "IMGP\*\*\*\*.MOV" or the one with the entered string of characters.

#### File No.

Each file name consists of a string of four characters and a sequential number from 0001 to 9999. You can set whether to continue the sequential numbering for the file name even if a new folder is created in [Sequential Numbering] of [File No.] in the 3 menu.



Continues the sequential numbering for the file name even if a new folder is created.

Returns the file number of the first image saved to a folder to 0001 each time a new folder is created.

Select [Reset File Number] to reset the file number to its default value.

### Memo

 When the file number reaches 9999, a new folder is created and the file number is reset. You can set the photographer and copyright information embedded in the Exif data.

1 Select [Copyright Information] in ₹3 menu and press ▶.

The [Copyright Information] screen appears.

2 Use **♦** to set [Embed Copyright Data].



- Does not embed copyright information in the Exif data.
  - Embeds copyright information in the Exif data.
- 3 Select [Photographer] or [Copyright Holder], and press ▶.

The text-entry screen appears.

4 Change the text.

Up to 32 single-byte alphanumeric characters and symbols can be entered.

How to enter text (p.101)

- **5** Press MENU twice.
- Memo
- The Exif information can be checked in Detailed Information Display of the playback mode (p.18) or using the provided software "Digital Camera Utility 5".

# Displaying the Local Date and Time of the Specified City

The date and time set at the time of initial setting ("Initial Settings" (p.41)) serve as the date and time of your present location and are reflected in the shooting date and time for images.

Setting the destination to a location other than your present location enables you to display the local date and time on the monitor when traveling abroad and also save images time-stamped with the local date and time.

- 1 Select [World Time] in **₹1** menu. The [World Time] screen appears.
- 2 Select the time you wish to display in [Time Setting].

♠ (Hometown) or → (Destination) can be selected.



- 3 Select [→ Destination] and press ▶.
  The [→ Destination] screen appears.
- **4** Use **♦** to select a city. Use **♦** to change the region.



- 5 Select [DST] (daylight saving time), and use ◆▶ to select □ or ☒.
- 6 Press OK.
  The screen of Step 2 reappears.
- 7 Press MENU twice.

#### Memo

- Refer to "List of World Time Cities" (p.122) for cities that can be selected as a hometown or destination.
- Select [☆ Hometown] in Step 3 to change the city and DST settings for the hometown.
- ・ ナ appears in the control panel when [Time Setting] is set to ナ.

### **Restrictions on the Combinations of Special Functions**

#: Restricted X: Not available

		LV Electronic Shutter	Clarity/ Skin Tone/ Digital Filter	HDR Capture	Pixel Shift Resolution	ASTRO- TRACER	AA Filter Simulator	Distortion Correction/ Diffraction Correction	Save RAW Data
	Flash	×		×	×				
	Continuous Shooting	×		×	×	×	# <sup>*3</sup>		×
	Bracketing			×	×	×	#*3		#*4
qe	Mirror Lock-up Shooting			×			# <sup>*3</sup>		
<b>Drive Mode</b>	Multi-exposure		×	×	×	×	#*3	×	
	Interval Shooting	×	# <sup>*2</sup>	# <sup>*2</sup>	×	×	#*3		#*4
	Interval Composite	×	×	×	×	×	# <sup>*3</sup>	×	#*4
	Interval Movie Record	×	# <sup>*2</sup>	# <sup>*2</sup>	×	×	# <sup>*3</sup>		×
	Star Stream	×	×	×	×	×	#*3	×	×
	HDR Capture	×	×		×	×	×		
Pi	xel Shift Resolution	# <sup>*1</sup>	×	×		×	×		
AA Filter Simulator		×		×	×	# <sup>*3</sup>			

<sup>\*1</sup> Fixed to [On] or [Off] depending on the setting.

<sup>\*2</sup> There is a restriction on the minimum value for [Interval].

<sup>\*3 [</sup>Bracketing] is not available.

<sup>\*4</sup> Only the final frame can be saved.

# Functions Available with Various Lenses

All capture modes are available when a D FA, DA, DA L, FA, or FA J lens is used, or when a lens with an **A** position is used with the aperture ring set to the **A** position.

When other lenses than above are used, or a lens with an  $\bf A$  position is used in a position other than  $\bf A$ , the following restrictions apply.

✓: Available #: Restricted X: Not available

Lens [Mount type]		FA *6 FA J	F *6	A	M P
Function	[KAF] [KAF2] [KAF3] [KAF4]	[KAF] [KAF2]	[KAF]	[KA]	[K]
Autofocus (Lens only) (With AF adapter 1.7×)*1	<u>~</u>	<u>~</u>	<u>~</u>	_ #	<del>-</del>
Manual focus (With focus indicator)*2 (With matte field)	~	~	~	~	~
Quick-shift focus	# <sup>*4</sup>	×	×	×	×
AF Active Area [Auto]	~	~	~	<b>x</b> *9	<b>×</b> *9
AE Metering [Multi-segment]	~	~	~	~	×
P/Sv/Tv/Av/TAv mode	~	~	~	~	# <sup>*10</sup>
M mode	~	~	~	~	#
P-TTL auto flash *3	~	~	~	~	×
Power zoom	_	# <sup>*7</sup>	_	_	_
Automatic obtaining of the lens focal length information	~	~	~	×	×
Lens Correction	# <sup>*5</sup>	#*8	×	×	×

- \*1 Lenses with a maximum aperture of F2.8 or faster. Only available at the A position.
- \*2 Lenses with a maximum aperture of F5.6 or faster.
- 3 Available when using AF540FGZ, AF540FGZ II, AF360FGZ, AF360FGZ II, AF201FG, AF200FG, or AF160FC.
- \*4 Only available with compatible lenses.
- \*5 Distortion Correction and Peripheral Illumination Correction are disabled when a DA FISH-EYE 10-17mm lens is used.
- \*6 To use an FA SOFT 28mm F2.8 lens, FA SOFT 85mm F2.8 lens, or F SOFT 85mm F2.8 lens, set [26 Using Aperture Ring] to [Enable] in the C4 menu. Pictures can be taken with the aperture you set, but only within a manually adjustable aperture range.
- \*7 The auto zoom and preset zoom are disabled.
- \*8 The Lens Correction is available with the following FA lenses (Only Distortion Correction and Lateral Chromatic Aberration Adjustment can be used when the aperture ring is set to a position other than **A**.): FA \*24mm F2 AL [IF], FA 28mm F2.8 AL, FA 31mm F1.8 Limited, FA 35mm F2 AL, FA 43mm F1.9 Limited, FA 50mm F1.4, FA 77mm F1.8 Limited, FA \*85mm F1.4 [IF], FA \*200mm F2.8 ED [IF], FA \*MACRO 200mm F4 ED, FA \*300mm F2.8 ED [IF], FA \*300mm F4.5 ED [IF], FA \*400mm F5.6 ED [IF], FA \*600mm F4 ED [IF], FA \*28-70mm F2.8 ED [IF], FA \*80-200mm F2.8 ED [IF], and FA \*250-600mm F5.6 ED [IF].
- \*9 Fixed to [Spot].
- \*10 Ay with the aperture set to wide open. (The aperture ring has no effect on the actual aperture value.)

#### Caution

- Set the angle of view in [Crop] of the ■2 and №1 menus when using a DA or DA L lens. (p.48) When the angle of view is changed to be equivalent to that of the APS-C size image sensor, the cropping frame is displayed in the viewfinder. (p.20) Perform shooting so that the subject is positioned in the frame. The Lens Correction features are not available when [Crop] is set to FF while a DA or DA L lens (except DA \*200mm F2.8 ED [IF] SDM, DA \*300mm F4 ED [IF] SDM, and DA 560mm F5.6 ED AW lenses) is attached.
- When the aperture ring is set to a position other than A or a lens without an A position or accessories such as an extension tube are used, the camera does not operate unless [26 Using Aperture Ring] is set to [Enable] in the C4 menu. Refer to "Using the Aperture Ring" (p.111) for details.
- When a retractable lens is attached and is not extended, you
  cannot take pictures or use some functions. If the lens is
  retracted during shooting, the camera stops working.

#### **Lens Names and Mount Names**

	Mount	Lens Name	Lens Type	
	S	S		
MF	K	K, M	For 35mm full-frame size	
	KA	Α		
		D FA	For both 35mm full-frame size and APS-C size	
		DA	For APS-C size Without the aperture ring	
	KAF	FA	For 35mm full-frame size Power zoom not compatible	
		FA J	For 35mm full-frame size Without the aperture ring	
		F	For 35mm full-frame size	
AF		DA	For APS-C size Compatible with the built-in motor Without the aperture ring	
		FA	For 35mm full-frame size Power zoom compatible	
	KAF3,	D FA	For both 35mm full-frame size and APS-C size Dedicated for the built-in motor Without the aperture ring	
	KAF4	DA	For APS-C size Dedicated for the built-in motor Without the aperture ring	

- DA lenses with a motor and FA zoom lenses with a power zoom use the KAF2 mount. (Of these lenses, the lenses without an AF coupler use the KAF3 mount.)
- The KAF3 mount equipped with an electromagnetic diaphragm mechanism instead of an aperture control lever is referred to as the KAF4 mount.
- FA single focal length lenses, DA and DA L lenses without a motor, and D FA, FA J, and F lenses use the KAF mount.
   Refer to respective lens manuals for details.

C4

#### **Using the Aperture Ring**

**C**4

The shutter can be released even if the aperture ring of the D FA, FA, F, or A lens is not set to the **A** position or a lens without an **A** position is attached.

Select [Enable] in [26 Using Aperture Ring] of the **C**4 menu.



The following restrictions apply depending on the lens being used.

Lens	Restriction
D FA, FA, F, A, M (lens only or with automatic diaphragm accessories such as Auto Extension Tube K)	The aperture remains open. The shutter speed changes in relation to the open aperture but an exposure deviation may occur.
D FA, FA, F, A, M, S (with diaphragm accessories such as Extension Tube K)	Pictures can be taken with the set aperture value but an exposure
Manual diaphragm lens such as reflex lens (lens only)	deviation may occur.
FA SOFT 28mm/ FA SOFT 85mm/ F SOFT 85mm (lens only)	Pictures can be taken with the set aperture value in the manually adjustable aperture range.

#### Memo

- If the aperture ring is set to a position other than A, the camera operates in Av mode regardless of the mode dial setting except when set to M. B. or X mode.
- [F--] appears for the aperture indicator in the status screen, Live View screen, and viewfinder, and on the LCD panel.

# How to Achieve the Correct Exposure with the Aperture Ring Not Set to $\boldsymbol{A}$

The correct exposure can be achieved by the following procedures when the aperture ring is not set to **A**.

- 1 Set the mode dial to M.
- 2 Set the aperture ring to the desired aperture.
- 3 Press O.

comes into focus

- The correct shutter speed will be set.
- 4 If the correct exposure cannot be achieved, adjust the ISO sensitivity.

#### **Performing Catch-in Focus Shooting**

You can perform Catch-in Focus shooting using a manual focus lens. The shutter is released automatically when the subject

- 1 Attach a manual focus lens to this camera.
- 2 Set [24 Catch-in Focus] to [On] in the C4 menu.
- 3 Set the autofocus mode to AF and set [AF Mode] to AF.S.
- Place the camera on a fixed support such as a tripod.
- Adjust the focus to the position where the subject may pass and press SHUTTER fully.

  When the subject comes into focus at the specified position, the shutter is released automatically.

#### Setting the Focal Length



The Shake Reduction function operates by obtaining the lens information such as focal length. Set the focal length when using a lens that the focal length information cannot be automatically obtained.

- 1 Set [26 Using Aperture Ring] to [Enable] in the C4 menu.
- **2** Turn the camera off.
- 3 Attach a lens to the camera and turn the camera on.

The [Input Focal Length] screen appears.

4 Use ▲▼ to set the focal length.

Press ◀ to select a value from the list.

When using a zoom lens, select the actual focal length which the zoom is set to



5 Press OK.

The camera returns to standby mode.

Memo

 The focal length setting can be changed in [Input Focal Length] of the 4 menu.

# Functions when Using an External Flash

Use of the following external flashes (optional) enables a variety of flash modes, such as P-TTL auto flash mode.

✓: Available #: Restricted X: Not available

▼ . Available #.		. NUL avallable
Compatible Flash Camera Function	AF540FGZ AF540FGZ II AF360FGZ AF360FGZ II	AF201FG AF200FG AF160FC
Red-eye reduction flash	~	~
Auto Flash Discharge *1	#* <sup>2</sup>	#* <sup>2</sup>
Automatic switch to flash sync speed	~	✓
Automatic setting of the aperture value in <b>P</b> or <b>Tv</b> mode	# <sup>*2</sup>	#* <sup>2</sup>
P-TTL auto flash	# <sup>*2</sup>	# <sup>*2</sup>
Slow-speed Sync flash	~	~
Flash Exposure Compensation	~	~
AF assist light of the external flash	#* <sup>3</sup>	×
Trailing Curtain Sync flash *4	~	# <sup>*5</sup>
Contrast Control Sync flash	# <sup>*6</sup>	# <sup>*7</sup>
Slave flash	#* <sup>6</sup>	×
High-speed Sync flash	~	×
Wireless flash	# <sup>*6</sup>	×

- \*1 Only the **AUTO** mode is available for the capture mode.
- \*2 Available only when using a D FA, DA, DA L, FA, FA J, F, or A lens. (When using a lens with an aperture ring, set the aperture ring to the A position.)
- \*3 AF assist light is not available with the AF540FGZ or AF360FGZ.
- \*4 Shutter speed of 1/100 seconds or slower.
- \*5 Not available with the AF200FG or AF160FC.
- \*6 Multiple AF540FGZ, AF540FGZ II, AF360FGZ, or AF360FGZ II units are required.
- \*7 Available only when combined with the AF540FGZ, AF540FGZ II, AF360FGZ, or AF360FGZ II.

#### Caution

- Flashes with the reversed polarity (the center contact on the hot shoe is minus) cannot be used due to the risk of damaging the camera and flash.
- Do not combine with accessories that have a different number of contacts, such as Hot Shoe Grip, as a malfunction may occur.
- Combining with flashes from other manufacturers may cause equipment breakdown.

#### Memo

 With the AF540FGZ, AF540FGZ II, AF360FGZ, or AF360FGZ II, you can use the high-speed sync flash to discharge a flash and take a picture at a shutter speed faster than 1/200 seconds. Set the exposure mode to Tv, TAv, or

#### M.

- By using two or more external flashes (AF540FGZ, AF540FGZ II, AF360FGZ, or AF360FGZ II), you can use the wireless mode to shoot in P-TTL flash mode without connecting the flash units with a cord. In this case, set the camera channel on the external flashes.
- You can set the flash sync speed in [7 Flash Sync Speed] of the C1 menu.
- You can connect an external flash to the camera with a sync cord by using the X-sync socket. Remove the Sync socket 2P cap to connect a sync cord to the X-sync socket.



### **Troubleshooting**

#### Memo

 In rare cases, the camera may not operate correctly due to causes such as static electricity, etc. This can be remedied by taking the battery out and putting it back in again. If the camera operates correctly, it does not require any repairs.

Problem	Cause	Remedy
The camera does	The battery is not installed properly.	Check the orientation of the battery.
not turn on.	The battery power is low.	Charge the battery.
	There is no available space on the memory card.	Insert a memory card with available space or delete unwanted images.
	Data is being processed.	Wait until processing is finished.
The shutter cannot be released.	The lens aperture ring is set to a position other than <b>A</b> .	Set the lens aperture ring to the <b>A</b> position or select [Enable] in [26 Using Aperture Ring] of the <b>C</b> 4 menu. (p.111)
	The autofocus mode is set to <b>AF.S</b> and the subject is not in focus.	Set the focus method to <b>MF</b> and adjust focus manually.
Autofocus does not work.	The subject is difficult to focus on.	AF cannot work well for low-contrast objects (the sky, white walls, etc.), dark colors, intricate designs, rapidly-moving objects, or scenery shot through a window or a net-like pattern.  Lock focus on another object located at the same distance as your subject, then aim at the target and take a picture.  Alternatively, use MF.
	The subject is too close.	Move away from the subject and take a picture.

Problem	Cause	Remedy
The flash does not discharge.	The flash mode is set to [Auto Flash Discharge].	When the flash mode is set to [Auto Flash Discharge], the flash does not discharge if the subject is bright. Change the flash mode. (p.71)
The camera is not recognized when it is connected to a computer.	The USB connection mode is set to [PTP].	Set [USB Connection] to [MSC] in the 3 menu.
Dust or dirt particles appear in images.	The CMOS sensor is dirty or dusty.	Activate [Dust Removal] from the 4 menu. The Dust Removal function can be activated every time the camera is turned on and off. Refer to "Sensor Cleaning" (p.115) if the problem persists.
Pixel defects such as bright spots and dark spots appear in the image.	There are defective pixels in the CMOS sensor.	Activate [Pixel Mapping] from the 4 menu. It takes about 30 seconds to correct the defective pixels, so be sure to install a fully charged battery.

#### **Sensor Cleaning**



Raise the mirror up and open the shutter when cleaning the CMOS sensor with a blower

- 1 Turn the camera off and remove the lens.
- **2** Turn the camera on.
- 3 Select [Sensor Cleaning] in ~4 menu and press

The [Sensor Cleaning] screen appears.

- 4 Select [Mirror Up] and press OK.
  The mirror rises up.
- **5** Clean the CMOS sensor with a blower.
- **6** Turn the camera off.

  The mirror automatically returns to its original position.

#### Caution

- Never use a spray blower or a blower with a brush. The CMOS sensor may be damaged. Do not wipe the CMOS sensor with a cloth.
- Do not put the tip of the blower inside the lens mount area. If the power is turned off during cleaning, it may cause damage to the shutter, the CMOS sensor, and the mirror. Hold the camera with the lens mount down while cleaning the sensor so dust will fall away from the sensor when the blower is used.
- When the battery level is low, the message [Not enough battery power remaining to clean sensor] is displayed on the monitor. Install a fully charged battery. If the battery capacity becomes low during cleaning, a warning beep will sound. In this case, stop cleaning immediately.

#### Memo

- Please contact your nearest service center for professional cleaning as the CMOS sensor is a precision part.
- You can use the optional Image Sensor Cleaning Kit O-ICK1 when cleaning the CMOS sensor.

### Error Messages

Error Messages	Description
Memory card full	The memory card is full and no more images can be saved. Insert a new memory card or delete unwanted files.
No image	There are no images that can be played back on the memory card.
This image cannot be displayed	You are trying to play back an image in a format not supported by this camera. You may be able to play it back on a computer.
No card in the camera	There is no memory card inserted in the camera.
Memory card error	The memory card has a problem, and image capture and playback are impossible. You may be able to play back or recover the images on a computer.
Card is not formatted	The memory card you have inserted is unformatted or has been previously used on another device and is not compatible with this camera. Use the card after formatting it with this camera.
Card is locked	The write-protect switch on the memory card you have inserted is locked. (p.128)
Cannot use this card	A memory card not compatible with this camera is inserted.
Wi-Fi connection disabled	The capture mode is changed to ## mode while the wireless LAN function is enabled.
This image cannot be magnified	You are trying to magnify an image that cannot be magnified.
This image is protected	You are trying to delete an image that is protected. Remove the protection from the image. (p.103)
Not enough battery power remaining to activate Pixel Mapping	These messages appear when you try to
Not enough battery power remaining to clean sensor	perform Pixel Mapping or Sensor Cleaning, or to update the firmware if the battery level is insufficient. Install a fully
Not enough battery power remaining to update the firmware	charged battery.

Error Messages	Description
Unable to update firmware. There is a problem with the firmware update file	The firmware cannot be updated. The update file is damaged. Try downloading the update file again.
Image folder cannot be created	The maximum folder number (999) is being used, and no more images can be saved. Insert a new memory card or format the card.
Unable to store image	The image could not be saved because of a memory card error.
The operation could not be completed correctly	The operation failed. Try the operation again.
No more images can be selected	You are trying to select more than the maximum number of images for the following functions.  Select & Delete Image Copy RAW Development Protect
No image can be processed	There are no images that can be processed using the Digital Filter or RAW Development function.
This image cannot be processed	This message appears when you try to perform Resize, Cropping, Digital Filter, Movie Edit, RAW Development, or Save as Manual WB for images captured with other cameras, or when you try to perform Resize or Cropping for minimum file size images.
This function is not available in the current mode	You are trying to set a function that is not available with the currently selected capture mode.
The camera will turn off to prevent damage from overheating	The camera will turn off because its internal temperature is too high. Leave the camera turned off until it has had time to cool down before turning on the camera again.
Shutter release is disabled. Ensure the zooming index on the lens is set to a position that permits shutter release	Pictures cannot be taken when a retractable lens is attached and is not extended. (p.46)

### **Main Specifications**

#### **Model Description**

Туре	TTL autofocus, auto-exposure SLR digital camera
Lens Mount	PENTAX KAF2 bayonet mount (AF coupler, lens information contacts, K-mount with power contacts)
Compatible Lenses	KAF4, KAF3, KAF2 (power zoom compatible), KAF, KA mount lenses

#### Image Capture Unit

Primary color filter, CMOS, Size: 35.9 × 24.0 (mm)	
Approx. 36.40 megapixels	
Approx. 36.77 megapixels	
Image sensor cleaning using ultrasonic vibrations "DR II"	
ISO AUTO, Manual ISO range: 100 to 819200 • EV steps can be set to 1 EV, 1/2 EV, or 1/3 EV	
Sensor-shift Shake Reduction (SR; 5-axis image stabilization system)	
Moiré reduction using the SR unit: Off, Type1, Type2, Bracketing (2 images), Bracketing (3 images)	

#### File Formats

Recording Formats	RAW (PEF/DNG), JPEG (Exif 2.3 compliant), DCF 2.0 compliant	
Recorded Pixels	[35mm Full-Frame]  JPEG: L (36M: 7360×4912)	
Quality Level	RAW (14bit): PEF, DNG JPEG: ★★★ (Best), ★★ (Better), ★ (Good) • RAW + JPEG simultaneously recordable	
Color Space	sRGB, AdobeRGB	
Storage Media	SD, SDHC*, and SDXC* memory cards * UHS-I compatible	

Dual Card Slots	Sequential Use, Save to Both, Separate RAW/ JPEG, Copying images between slots possible
Storage Folder	Folder Name: Date (100_1018, 101_1019) or a user-assigned name (default: PENTX)
Storage File	File Name: user-assigned name (default: IMGP****) File No.: Sequential Numbering, Reset

#### Viewfinder

Туре	Pentaprism Finder
Coverage (FOV)	Approx. 100%
Magnification	Approx. 0.70× (50mm F1.4 at infinity)
Eye-Relief Length	Approx. 20.6 mm (from the view window) Approx. 21.7 mm (from the center of lens)
Diopter Adjustment	Approx3.5 to +1.2 m <sup>-1</sup>
Focusing Screen	Unchangeable Natural-Bright-Matte III focusing screen
Overlay Items	AF Points, Grid Display, Electronic Level, AF Frame, and Spot Metering Frame for Viewfinder Overlay; and frame for Crop

#### Live View

Туре	TTL method using the CMOS image sensor
Focusing System	Contrast detection (Face Detection, Tracking, Multiple AF Points, Select, Spot) Focus Peaking: On, Off
Display	Field of view: approx. 100%, Magnified view (up to 16x), Crid Display (4x4 Grid, Golden Section, Scale, Square 1, Square 2, Grid Color: Black, White), Histogram Display, Highlight Alert, Composition Adjustment

#### LCD Monitor

Туре	A flexible, tiltable wide viewing angle TFT color LCD with air-gapless tempered glass
Size	3.2 inches (aspect ratio 3:2)
Dots	Approx. 1037K dots
Adjustment	Brightness, saturation and colors adjustable
Outdoor View Setting	Adjustable ±2 steps
Night Vision LCD Display	On, Off

# Appendix

#### White Balance

Туре	Method using a combination of the CMOS image sensor and the light source detection sensor
Preset Modes	Auto White Balance, Multi Auto White Balance, Daylight, Shade, Cloudy, Fluorescent Light (D: Daylight Color, N: Daylight White, W: Cool White, L: Warm White), Tungsten Light, CTE, Manual White Balance (up to 3 settings), Color Temperature (up to 3 settings), Color temperature (up to 3 settings), Copying the white balance settings of a captured image
Fine Adjustment	Adjustable ±7 steps on A-B axis and G-M axis

#### Focus System

Туре	TTL phase-matching detection autofocus
Focus Sensor	SAFOX12, 33 points (25 cross type focus points in the center)
Brightness Range	EV -3 to 18 (ISO100, at normal temperature)
AF Modes	Single AF (AF.S), Continuous AF (AF.C)
Focusing Area Selection Modes	Spot, Select, Expanded Area AF (S, M, L), Zone Select, Auto (33 AF Points)
AF Assist Light	Dedicated LED AF assist light

#### Exposure Control

Туре	TTL open-aperture metering using 86K pixel RGB sensor Metering modes: Multi-segment, Center-weighted, Spot
Metering Range	EV -3 to 20 (ISO100 at 50mm F1.4)
Exposure Modes	Scene Analyze Auto, Program, Sensitivity Priority, Shutter Priority, Aperture Priority, Shutter & Aperture Priority, Manual, Bulb, Flash X-sync Speed, USER1, USER2, USER3, USER4, USER5
EV Compensation	±5 EV (1/3 EV steps or 1/2 EV steps can be selected)
AE Lock	Button type (timer-control: two times the meter operating time set in Custom Setting); continues as long as SHUTTER is halfway pressed.

#### Shutter

Туре	Electronically controlled vertical-run focal plane shutter • Electronic shutter is used for Pixel Shift Resolution
Shutter Speed	Auto: 1/8000 to 30 seconds, Manual: 1/8000 to 30 seconds (1/3 EV steps or 1/2 EV steps), Bulb (timed exposure setting possible: 10 seconds to 20 minutes)
LV Electronic Shutter	On, Off

#### **Drive Modes**

Mode Selection	[Still picture] Single frame, Continuous (H, M, L), Self-timer (12 sec., 2 sec., continuous), Remote Control (immediately, 3 sec., continuous), Bracketing*1 (2, 3, or 5 frames), Mirror Lock-up Shooting*2, Multi- exposure*3 Interval Shooting*1, Interval Composite*1, Interval Movie Record*1, Star Stream*1 [Movie] Remote Control *1 Available with Self-timer or Remote Control *2 Available with Remote Control *3 Available with Continuous Shooting, Self-timer, or Remote Control
Continuous Shooting	or Remote Control  [35mm Full-Frame]  Max. approx. 4.4 fps, JPEG (□: ★★★ at Continuous H): up to approx. 70 frames, RAW: up to approx. 17 frames  Max. approx. 3.0 fps, JPEG (□: ★★★ at Continuous M): up to approx. 100 frames, RAW: up to approx. 20 frames  Max. approx. 0.7 fps, JPEG (□: ★★★ at Continuous L): up to approx. 100 frames, RAW: up to approx. 100 frames  [APS-C Size]  Max. approx. 6.4 fps, JPEG (□: ★★★ at Continuous H): up to approx. 100 frames, RAW: up to approx. 50 frames  Max. approx. 3.0 fps, JPEG (□: ★★★ at Continuous M): up to approx. 100 frames, RAW: up to approx. 70 frames  Max. approx. 1.0 fps, JPEG (□: ★★★ at Continuous L): up to approx. 100 frames, RAW: up to approx. 1.0 frames  Max. approx. 1.0 fps, JPEG (□: ★★★ at Continuous L): up to approx. 100 frames, RAW: up to approx. 100 frames  When the sensitivity is set to ISO100
Multi-exposure	Composite Mode: Additive, Average, Bright Number of Shots: 2 to 2000 times

[Interval Shooting] Interval: 2 sec. to 24 hr., Standby Interval: minimum time or 1 sec. to 24 hr., Number of Shots: 2 to 2000 times, Start Interval; Now, Self-timer, Remote Control, Set Time [Interval Composite] Interval: 2 sec. to 24 hr., Standby Interval: minimum time or 1 sec. to 24 hr., Number of Shots: 2 to 2000 times, Start Interval: Now, Self-timer, Remote Control, Set Time, Composite Mode: Additive, Average, Bright, Save Process; On, Off [Interval Movie Record] Recorded Pixels: 4K, Fullist, HD, Recording Format: Interval Shooting Motion JPEG (AVI), Interval: 2 sec. to 24 hr., Standby Interval: minimum time or 1 sec. to 24 hr., Number of Shots: 8 to 2000 times (When 4K is selected: 8 to 500 times). Start Interval: Now. Selftimer, Remote Control, Set Time [Star Stream] Recorded Pixels: 4K, FullHD, HD, Recording Format: Motion JPEG (AVI), Standby Interval: minimum time or 1 sec. to 24 hr., Number of Shots: 8 to 2000 times (When 4K is selected: 8 to 500 times), Start Interval: Now, Self-timer, Remote Control, Set Time, Fadeout: Off. Low. Medium. High

#### **External Flash**

Flash Modes	Auto Flash Discharge, Auto Flash + Red-eye Reduction, Flash On, Flash On + Red-eye Reduction, Slow-speed Sync, Slow-speed Sync + Red-eye Reduction, P-TTL, Contrast Control Sync*, High-speed Sync, Wireless Sync* * Available with two or more compatible external flash units
Sync Speed	1/200 seconds
Flash Exposure Compensation	-2.0 to +1.0 EV

#### **Capture Functions**

Custom Image	Auto Select, Bright, Natural, Portrait, Landscape, Vibrant, Radiant, Muted, Flat, Bleach Bypass, Reversal Film, Monochrome, Cross Processing
Cross Processing	Random, Preset 1-3, Favorite 1-3
Digital Filter	Extract Color, Replace Color, Toy Camera, Retro, High Contrast, Shading, Invert Color, Unicolor Bold, Bold Monochrome
Clarity	-4.0 to +4.0
Skin Tone	Type1, Type2, Off

HDR Capture	Auto, Type1, Type2, Type3, Advanced HDR, Off Bracket Value: adjustable Auto Align (automatic composition correction function): available
Pixel Shift Resolution	Motion Correction On, Motion Correction Off, Image Stabilization On, Off
Lens Correction	Distortion Correction, Peripheral Illumination Correction, Lateral Chromatic Aberration Adjustment, Diffraction Correction
D-Range Settings	Highlight Correction, Shadow Correction
Noise Reduction	Slow Shutter Speed NR, High-ISO NR
GPS	GPS Logging (Logging Interval, Logging Duration, Memory Card Options), GPS Time Sync
Electronic Compass	Available
ASTROTRACER	Available
Horizon Correction	SR On: corrects up to 1 degree SR Off: corrects up to 2 degrees
Composition Adjustment	Adjustment range of ±1.5 mm up, down, left or right (±1 mm when rotated); rotating range of ±1 degree
Electronic Level	Displayed in viewfinder (horizontal direction and vertical direction); displayed on monitor (horizontal direction and vertical direction)

#### Movie

Recording Format	MPEG-4 AVC/H.264 (MOV)		
Recorded Pixels/ Frame Rate	Гынно (1920×1080, 60i/50i/30p/25p/24p) но (1280×720, 60p/50p)		
Sound	Built-in stereo microphone, external microphone (stereo recording compatible) Recording Sound Level adjustable, Wind Noise Reduction		
Recording Time	Up to 4 GB or approx. 25 minutes; automatically stops recording if the internal temperature of the camera becomes high.		
Custom Image	Auto Select, Bright, Natural, Portrait, Landscape, Vibrant, Radiant, Muted, Flat, Bleach Bypass, Reversal Film, Monochrome, Cross Processing		
Cross Processing	Random, Preset 1-3, Favorite 1-3		
Digital Filter	Extract Color, Replace Color, Toy Camera, Retro, High Contrast, Shading, Invert Color, Unicolor Bold, Bold Monochrome		

#### Playback Functions Single image, Multi-image display (6, 12, 20, 35, and 80 thumbnails). Image magnification (Up to 16x. 100% display, and quick zoom), Grid Display (4×4 Grid. Golden Section, Scale, Square 1, Square 2, Grid Color: Black, White), Rotated image display, Histogram Display (Y histogram, RGB histogram), Highlight Alert, Playback View Auto Image Rotation, Detailed Information Display, Copyright Information (Photographer, Copyright Holder), GPS information (Latitude, Longitude, Altitude, Coordinated Universal Time (UTC)), Direction, Folder Display, Calendar Filmstrip Display, Slideshow Single image, all images, select & delete, folder, Delete Instant Review image Base Parameter Adi, Extract Color, Replace Color, Toy Camera, Retro, High Contrast, Shading, Invert Color, Unicolor Bold, Bold Monochrome, Tone Digital Filter Expansion, Sketch, Water Color, Pastel, Posterization, Miniature, Soft, Starburst, Fish-eye, Slim, Monochrome Development options: Select single image, Select multiple images. Select a folder Development parameters: White Balance, Custom Image, Sensitivity, Clarity, Skin Tone, Digital Filter, HDR Capture, Pixel Shift Resolution, Shadow RAW Correction, High-ISO NR, Distortion Correction, Development Peripheral Illumination Correction, Lateral Chromatic Aberration Adjustment, Diffraction Correction, Color Fringe Correction, File Format (JPEG, TIFF), Aspect Ratio, JPEG Recorded Pixels, JPEG Quality, Color Space Image Rotation, Color Moiré Correction, Resize, Cropping (aspect ratio can be changed and tilt correction is available). Movie Edit (dividing a movie **Editing Features** file and deleting unwanted segments). Capturing a

#### Customization

USER Mode	Up to 5 settings can be saved.		
Custom Functions 26 items			
Mode Memory	17 items		
Button Customization	[31] 22 button: One Push File Format, Outdoor View Setting, Flash Mode, Pixel Shift Resolution, Shake Reduction, Horizon Correction, Electronic Level		

Image Copy

JPEG still picture from a movie. Save RAW Data.

	<u> </u>		
AF Customization	AF.S: Focus-priority, Release-priority 1st Frame Action in AF.C: Auto, Focus-priority, Release-priority Action in AF.C Continuous: Auto, Focus-priority, FPS- priority Hold AF Status: Off, Low, Medium, High AF in Interval Shooting: Locks focus at 1st exposure, Adjusts focus for each shot AF with Remote Control: Off, On		
Enable/Disable Control	Type1: ♠♥ ♠, ②, SO, ♠, Æ! Type2: ▲▼◀▶, ③, OK, MENU		
Text Size	Standard, Large		
World Time	World Time settings for 75 cities (28 time zones)		
AF Fine Adjustment	±10 steps, uniform adjustment for all lenses or individual adjustment for each lens (up to 20 values can be saved)		
Illumination Settings	LCD Panel: High, Low, Off Backside Controls: High, Low, Off Lens Mount: On, Off Card Slot/Connector: On, Off		
Indicator Lamps	Wi-Fi: High, Low, Off GPS: High, Low, Off Self-timer: On, Off Remote Control: On, Off		
Copyright Information	Names of "Photographer" and "Copyright Holder" are embedded to the image file. A revision history can be checked using the provided software.		

#### **GPS/Electronic Compass**

Satellite Systems	GPS, QZSS SBAS: WAAS, EGNOS, GAGAN, MSAS	
Reception Frequency	L1, 1575.42 MHz	
Recorded Information	Latitude, Longitude, Altitude, Coordinated Universal Time (UTC), Direction	
Geodesics	World Geodetic System (WGS84)	
GPS Logging	KML format, Logging Interval: 5sec., 10sec., 15sec., 30sec., or 1min. Logging Duration: 1hr. to 24hr. (Up to 9 hours when Logging Interval is set to "5sec." Up to 18 hours when Logging Interval is set to "10sec.")	
Electronic Compass	Azimuth calculation using triaxial geomagnetic sensor and triaxial acceleration sensor, True north standard	

#### **Power Supply**

Battery Type	Rechargeable Lithium-ion Battery D-LI90	
AC Adapter	AC Adapter Kit K-AC167 (optional)	
Battery Life	Number of recordable images: approx. 670 images Playback time: approx. 340 minutes  Tested in compliance with CIPA standard using a fully charged lithium-ion battery at a temperature of 23°C. Actual results may vary depending on the shooting conditions/circumstances.	

#### Interfaces

Connection Port	USB 2.0 (micro B), external power supply terminal, cable release terminal, X-sync socket, HDMI® output terminal (type D), stereo microphone input terminal, headphone terminal
USB Connection	MSC/PTP

#### Wireless LAN

Standards	IEEE 802.11b/g/n (standard wireless LAN protocol)
Frequency (Center Frequency)	2412 to 2462 MHz (channels: Ch 1 to Ch 11)
Security	Authentication: WPA2 Encryption: AES

#### **Dimensions and Weight**

	Approx. 136.5 mm (W) $\times$ 110 mm (H) $\times$ 85.5 mm (E (excluding protrusions)	
Weight	Approx. 1010 g (including the dedicated battery and an SD Memory Card) Approx. 925 g (body only)	

#### **Operating Environment**

Temperature	-10 to 40°C (14 to 104°F)
Humidity	85% or less (no condensation)

#### Included Accessories

Package Contents	Strap O-ST162, ME Viewfinder Cap, Rechargeable Lithium-ion Battery D-LI90, Battery Charger D-BC90, AC plug cord, Software (CD-ROM) S-SW171 - Mounted to the camera> Eyecup FT, Hot shoe cover Fk, Sync socket 2P cap, Body mount cap K II, Battery grip terminal cover
Software	Digital Camera Utility 5

# Approximate Image Storage Capacity and Playback Time

(When using the fully charged battery)

Battery	Temperature	Normal Shooting	Playback Time
D-LI90	23°C	670	340 minutes

 The image storage capacity (normal recording) is based on measuring conditions in accordance with CIPA standards, while other data is based on our measuring conditions. Some deviation from the above figures may occur in actual use depending on the selected capture mode and shooting conditions.

#### **Approximate Image Storage Capacity by Size**

(When using an 8 GB memory card)

Recorded Pixels (35mm Full- Frame)				
	***	**	*	RAW
L 36M	351	676	1164	101
M 22M	572	1096	1874	_
S 12M	1054	2013	3364	_
XS 2M	4723	8469	12927	_

Recorded	JPEG Quality			DANK
Pixels (APS-C Size)	***	**	*	RAW
L 15M	821	1564	2669	215
M 12M	1054	2013	3364	_
S 8M	1564	2959	4912	_
XS 2M	4723	8469	12927	_

Recorded	JPEG Quality			
Pixels (1:1 Size)	***	**	*	RAW
L 24M	525	1006	1717	101
M 14M	899	1717	2889	_
S 6M	1846	3459	5712	_
XS 2M	5582	9824	15351	_

 The number of storable images may vary depending on the subject, shooting conditions, selected capture mode, and memory card, etc.

#### **List of World Time Cities**

The following cities can be set as Hometown and Destination.

Region	City
North America	Honolulu, Anchorage, Vancouver, San Francisco, Los Angeles, Calgary, Denver, Chicago, Miami, Toronto, New York, Halifax
Central and South America	Mexico City, Lima, Santiago, Caracas, Buenos Aires, Sao Paulo, Rio de Janeiro
Europe	Lisbon, Madrid, London, Paris, Amsterdam, Milan, Rome, Copenhagen, Berlin, Prague, Stockholm, Budapest, Warsaw, Athens, Helsinki, Moscow
Africa/ West Asia	Dakar, Algiers, Johannesburg, Istanbul, Cairo, Jerusalem, Nairobi, Jeddah, Tehran, Dubai, Karachi, Kabul, Male, Delhi, Colombo, Kathmandu, Dacca
East Asia	Yangon, Bangkok, Kuala Lumpur, Vientiane, Singapore, Phnom Penh, Ho chi Minh, Jakarta, Hong Kong, Beijing, Shanghai, Manila, Taipei, Seoul, Tokyo, Guam
Oceania	Perth, Adelaide, Sydney, Noumea, Wellington, Auckland, Pago Pago

# Operating Environment for USB Connection and Provided Software

With the provided software "Digital Camera Utility 5", you can develop RAW images, make color adjustments, or check shooting information on a computer. Install the software from the provided CD-ROM (S-SW171).

We recommend the following system requirements to connect the camera to a computer and to use the software.

#### **Windows**®

os	Windows <sup>®</sup> 10 (FCU, CU) (32-bit, 64-bit), Windows <sup>®</sup> 8.1 (32-bit, 64-bit), Windows <sup>®</sup> 8 (32-bit, 64-bit), or Windows <sup>®</sup> 7 (32-bit, 64-bit)
CPU	Intel <sup>®</sup> Core™ 2 Duo or higher
RAM	4 GB or more
HDD	For installing and starting up the program: Approx. 100 MB or more of available space For saving image files: Approx. 15 MB/file (JPEG), Approx. 50 MB/file (RAW)
Monitor	1280×1024 dots, 24-bit full color or higher

#### Macintosh

os	macOS 10.13 High Sierra, macOS 10.12 Sierra, OS X 10.11 El Capitan, or OS X 10.10 Yosemite
CPU	Intel <sup>®</sup> Core™ 2 Duo or higher
RAM	4 GB or more
HDD	For installing and starting up the program: Approx. 100 MB or more of available space For saving image files: Approx. 15 MB/file (JPEG), Approx. 50 MB/file (RAW)
Monitor	1280×1024 dots, 24-bit full color or higher

#### Memo

 Application software that supports both MOV (MPEG-4AVC/ H.264) and AVI (Motion JPEG) formats is required to play back movie files transferred to a computer.

Symbols	Aperture Priority Automatic	Brightness adjustment 75	Color Temperature Steps
menus 25	Exposure 49	Brightness histogram 19	71
₩ menus 30	Aperture value 49	Bulb (B) Mode Options 51	Communication device 96
▶ menu	Aspect Ratio 89, 93	Bulb Exposure 49, 51	Communication Info 96
• menus 32	ASTROTRACER 82	Button 11	Composition Adjustment 78
<b>C</b> menus 35	Auto (AF Active Area) 58	Button Customization 97	Computer 94
<b>≌</b> mode 53	Auto EV Compensation 35		Continuous mode (AF Mode)
	Auto Flash Discharge 71	С	58
Numerics	Auto Image Rotation 86	Cable switch terminal 10	Continuous playback 86
1× image display 47	AUTO ISO Parameters 55	Calendar Filmstrip Display	Continuous Shooting 63
1st Frame Action in AF.C	<b>AUTO</b> mode 44	85	Contrast (Custom Image)
57	Auto Power Off 41	Calibration 80	
_	Auto Screen Rotation 17	Camera route 81	Contrast AF Options 59
A	Auto Select (Custom Image)	Capture mode 49	Contrast Detection AF
AA Filter Simulator 78	72	Capture mode selector switch	57, 59
AC adapter 40	Auto SR Off 63	44	Control panel 16, 23
Action in AF.C Continuous	Auto White Balance (White	Card 40	Copyright Holder 106
57	Balance) 69	Card access lamp 10	Copyright Information 106
AdobeRGB 48	Autofocus 57	Catch-in Focus 111	Correcting images 75
AE Metering 56	AV device 87	Center-weighted metering	Create New Folder 103
AE-L with AF Locked 35	Av mode 49	56	Crop 48
AF area 60	AWB in Tungsten Light 70	Certification Marks 129	Cropping 89
AF Assist Light 10, 58	0 0	Change AF Point Button 59	Cropping frame 20
AF Button 97	В	Changing the image size	Cross Processing (Custom
AF coupler 10	<b>B</b> mode 51	88	Image) 72
AF Fine Adjustment 61	Base Parameter Adjustment	Charging the battery 38	CTE 69
AF frame 20, 45	(Digital Filter) 90	Charging time 39	Custom Image 72
AF in Interval Shooting 69	Battery 38	City names 41, 122	Custom Setting menus 35
AF Mode 58	Battery grip 39	Clarity 76	Customization 23, 97
AF point 58	Battery grip contacts 10	Cleaning 115	.,.
AF with Remote Control 65	Bleach Bypass (Custom	Cloudy (White Balance) 69	D
<b>AF.C</b> 58	Image) 72	Color Fringe Correction 93	Date Adjustment 42
<b>AF.S</b> 58	Bold Monochrome (Digital	Color Moiré Correction 89	Date Format 42
AF.S Setting 57	Filter) 74, 90	Color Space 48	Daylight (White Balance)
Angle adjustment 13	Bracketing 65	Color Temperature (White	69
Angle of view 48	Bracketing Order 66	Balance) 71	DC input terminal 40
Anti-aliasing filter 78	Bright (Custom Image) 72	•	Delete 47

Deleting all images	Expanded Area AF (AF Active Area)
Electronic Level 17, 21 Electronic Shutter	Focus mode switch 44, 57 Focus Peaking 59

Function dial	Ш
Fx1/Fx2 button 97	
G	Ir
~	lr
GPS	Ir
GPS Indicator Lamp 79	
GPS Logging 81	Ir
GPS Time Sync 79	Ir
GPS/E-Compass 81	Ir
Grid Display 20, 47	Ir
Guide Display 45	Ir
	Ir
H	
HDMI Out 87	Ir
HDMI <sup>®</sup> terminal 87	
HDR Capture 75	18
Headphone Volume 53	18
Headphones 54	
High Contrast (Digital Filter)	J
74, 90	J
High-ISO NR 55	J
Highlight Alert 18	J
Highlight Correction 75	
Histogram Display 19	K
Hold AF Status 57	K
Hometown 41, 106	_
Horizon Correction 27	L
Hot shoe 71	L
I	L
Illumination Settings 100	L
Image Capture Settings 48	L
Image Copy 88	Α
Image finishing tone 72	L
Image plane indicator 10	L
Image Rotation 86	L
Image storage capacity	L
121	C
Image Sync 96	Ĺ
IMAGE Transmitter 2 95	C

22	Image View (Image Sync)
97	96
	Indicator Lamps 100
	Initial settings 41
79	Initializing a memory card
79	43
81	Input Focal Length 112
79	Instant Review 45, 46
81	Interval Composite 68
47	Interval Movie Record 68
45	Interval Shooting 68
	Interval Shooting Options
	69
87	Invert Color (Digital Filter)
87	
75	ISO AUTO Setting 55
53	ISO sensitivity 55
54	100 30113111VILY
r)	J
90	JPEG 48
55	JPEG Quality48
18	JPEG Recorded Pixels 48
75	
19	K
57	Kelvin 71
106	
27	L
71	Landscape (Custom Image)
	72
	Language setting 41
100	Language/言語 41
48	Lateral Chromatic Aberration
88	Adjustment 76
72	LCD Display 43
10	LCD Display Settings 100
86	LCD panel 21
30	LED light for backside
121	controls 10
96	LED light for card slot/

LED light for lens mount	Monochrome (Digital Filter)	Playback Info Display	Remote control receiver 10
10, 38	90	selection screen 18	Replace Color (Digital Filter)
Lens 37, 109	Movie Capture Settings 48	Playback menu 31	74, 90
Lens Correction 76	Movie Edit 91	Playback mode 47	Reset 34, 36
Lens focal length 112	Movie menus 30	Playback mode palette 83	Resize 88
Lens information contacts	Movie mode 53	Playback Sound Volume	Retractable lens 46
10	Movie SR 30	54	Retro (Digital Filter) 74, 90
Lens mount index 10, 37	MSC 114	Portrait (Custom Image) 72	Reversal Film (Custom
Lens unlock button 37	Multi Auto White Balance	Posterization (Digital Filter)	Image) 72
Lens with aperture ring 111	(White Balance) 69	90	RGB histogram 19
Lever 11	Multi-exposure 67	Power 41	Rotating images 86
Link AE and AF Point 56	Multi-image display 84	Preview 61	Rotation Direction 99
Live View 15	Multiple AF Points (Contrast	Preview Dial 61	_
Log file 81	AF) 60	Processing images 88	S
LV Electronic Shutter 52	Multi-segment metering 56	Program Automatic Exposure	Save as Manual WB 70
	Muted (Custom Image) 72	49	Save Cross Processing 73
M	3.,	Program Line 51	Save Menu Location 24
M mode 49	N	Protect 103	Save RAW Data 45, 47
Macintosh 123	Natural (Custom Image) 72	Protect All Images 103	Save Rotation Info 86
Manual Exposure 49	Night Vision LCD Display	Provided software 123	Save USER Mode 101
Manual White Balance 70	82	PTP 114	Scene Analyze Auto mode
ME viewfinder cap 63	Noise Reduction 50, 55		44
Mechanical Shutter 52		Q	SD Memory Card 40
Memory 102	0	Quality 48	Select (AF Active Area) 58
Memory card 40	One Push File Format 98	Quality level adjustment 76	Select (Contrast AF) 60
Memory Card Options 48	One-Push Bracketing 66	Quick Zoom 47	Select Battery
Menu 24	Operating environment 123		Self-timer
Meter Operating Time 20	Optical Preview 61	R	Self-timer lamp 10
Microphone 10, 54	Outdoor View Setting	Radiant (Custom Image)	Sensitivity 55
Miniature (Digital Filter) 90	14	72	Sensitivity Priority Automatic
Mired 71		RAW 48	Exposure
Mirror 10	P	RAW Development 92	Sensitivity Steps 55
Mirror Lock-up Shooting 66	<b>P</b> mode 49	RAW File Format 48	Sensor Cleaning 115
Mode dial 44	Pastel (Digital Filter) 90	Rec. Mode menus 25	Sequential Numbering 105
Mode dial lock button 44	PEF 48	Recordable time 53	Setting dial
Mode dial lock release lever	Peripheral Illumination	Recorded Pixels 48	Set-up menus 32
	Correction	Recording Sound Level 53	•
	Phase Detection AF 57	Red-eye reduction 71	Shade (White Balance) 69
Moiré reduction	Photographer 106	Remote Capture (Image	Shading (Digital Filter)
Monitor 13, 14	Pixel Mapping 114	Sync) 96	
Monochrome (Custom	Pixel Shift Resolution 77	Remote Control 64	Shadow Correction 75
Image) 72	i ixei oliiit Nesolutioli 11	Remote Control 64	Shake Reduction 75

Sharpness (Custom Image	
	73
Shooting	44
Shooting celestial bodies	
	82
Shooting Info Display	17
Shooting with Live View	45
Shooting with viewfinder	44
Shutter & Aperture Priority	
Automatic Exposure	49
Shutter Priority Automatic	
Exposure	49
Shutter speed	49
Single Frame Shooting	62
Single image display	
18,	47
Single mode (AF Mode)	58
Sketch (Digital Filter)	90
Skin Tone	76
Slideshow	86
Slim (Digital Filter)	90
Slow Shutter Speed NR	50
Slow-speed Sync	72
Smart Function	22
Smartphone	95
Soft (Digital Filter)	90
Sound	53
Sound Effects	32
Sound Volume Setting	53
Species Setting	10
Speaker	10 117
Spot (AF Active Area)	58
Spot (Contrast AF)	60
Spot metering	56
sRGB	48
Standby mode	14
Star Stream	68
Starburst (Digital Filter)	90
Status Screen	15
Strap	37
<b>Sv</b> mode	49

Switch11
Т
<b>TAv</b> mode
Tethered shooting 95
Text input 101
Text Size
Texture adjustment 76
Thumbnail display 47, 84
TIFF 92
Time Setting 106
Timed Exposure 51
Tone Expansion (Digital
Filter) 90
Toy Camera (Digital Filter)
74, 90
Tracking (Contrast AF) 60
Tripod socket 10
TTL phase-matching
autofocus 57
Tungsten (White Balance)
69
<b>Tv</b> mode 49
U
Unicolor Bold (Digital Filter)
USB Connection 94, 123
USB terminal 94
User registration 8
Using Aperture Ring 111
V
Vertical position 17
Vibrant (Custom Image) 72
Viewfinder 20
Viewfinder Light 20
Viewfinder Overlay 20
Volume 32
Volume lahel 43

W
WARRANTY POLICY 131
Water Color (Digital Filter)
90 WB Adjustable Range 70 WB When Using Flash 70 White Balance 69 Wi-Fi lamp 10 Wi-Fi™ 95 Wind Noise Reduction 53 Windows® 123 Wireless LAN 95 World Time 106
<b>X X</b> mode
Z Zone Select (AF Active Area)

#### **Care to be Taken During Handling**

#### **Before Using Your Camera**

When the camera has not been used for a long time, confirm that it is still
working properly, particularly prior to taking important pictures (such as
at a wedding or when traveling). Contents of the recording cannot be
guaranteed if recording, playback or transferring your data to a
computer, etc. is not possible due to a malfunction of your camera or
recording media (memory cards), etc.

#### **About the Battery and Charger**

- To keep the battery in optimum condition, avoid storing it in a fully charged state or in high temperatures.
- If the battery is left inserted and the camera is not used for a long time, the battery will over-discharge and shorten the battery's life.
- Charging the battery a day before use or on the day of use is recommended.
- The AC plug cord provided with this camera is developed exclusively for the battery charger D-BC90. Do not use it with other devices.

#### **Precautions on Carrying and Using Your Camera**

- Do not subject the camera to high temperatures or high humidity. Do not leave the camera in a vehicle, as the temperature can get very high.
- Do not subject the camera to strong vibrations, shocks, or pressure. Use a cushion to protect the camera from vibrations of motorcycles, automobiles, or ships.
- The temperature range for camera use is -10°C to 40°C (14°F to 104°F).
- The monitor may appear black at high temperatures, but will return to normal at normal temperatures.
- The monitor may respond more slowly at low temperatures. This is due to liquid crystal properties, and is not a malfunction.
- Sudden temperature changes will cause condensation on the inside and outside of the camera. Place the camera in your bag or a plastic bag, and remove it after temperatures of the camera and surroundings are equalized.
- Avoid contact with garbage, mud, sand, dust, water, toxic gases, or salt.
   These could cause the camera to breakdown. Wipe the camera to dry off any rain or water drops.
- Do not press on the monitor with excessive force. This could cause it to break or malfunction.
- Be careful not to overtighten the screw in the tripod socket when using a tripod.

#### **Cleaning Your Camera**

 
- Do not clean the camera with organic solvents such as thinner, alcohol, and benzine.
- Use a lens brush to remove dust accumulated on a lens. Never use a spray blower for cleaning as it may damage the lens.
- Please contact your nearest service center for professional cleaning of the CMOS sensor. (This will involve a fee.)
- Periodic inspections are recommended every one to two years to maintain high performance.

#### **Storing Your Camera**

- Do not store the camera with preservatives or chemicals. Storage in high temperatures and high humidity can cause mold to grow on the camera. Remove the camera from its case and store it in a dry and well-ventilated place.
- Avoid using or storing the camera where it may be exposed to static electricity or electrical interference.
- Avoid using or storing the camera in direct sunlight or in locations where it may be exposed to rapid changes in temperature or to condensation.

#### **About SD Memory Cards**

 The SD Memory Card is equipped with a write-protect switch. Setting the switch to LOCK prevents new data from being recorded on the card, the stored data from being deleted, and the card from being formatted by the camera or a computer.



- The SD Memory Card may be hot when removing the card immediately after using the camera.
- Do not remove the SD Memory Card or turn off the power while the card is being accessed. This may cause the data to be lost or the card to be damaged.
- Do not bend the SD Memory Card or subject it to violent impact. Keep it away from water and store away from high temperatures.
- Do not remove the SD Memory Card while formatting. The card may be damaged and become unusable.
- Data on the SD Memory Card may be deleted in the following circumstances. We do not accept any liability for data that is deleted if
   the SD Memory Card is mishandled by the user.
  - the SD Memory Card is exposed to static electricity or electrical interference.
- the SD Memory Card has not been used for a long time.

- the SD Memory Card or the battery is removed while the card is being accessed.
- If the SD Memory Card is not used for a long time, the data on the card may become unreadable. Be sure to regularly make a backup of important data on a computer.
- Format new SD Memory Cards. Also format SD Memory Cards previously used with other cameras.
- Please note that deleting data stored on an SD Memory Card, or formatting an SD Memory Card does not completely erase the original data. Deleted data can sometimes be recovered using commercially available software. If you are going to discard, give away or sell your SD Memory Card, you should ensure that the data on the card is completely deleted or the card itself is destroyed if it contains any personal or sensitive information.
- · The data on your SD Memory Card should be managed at your own risk.

#### **About the Wireless LAN Function**

- Do not use the camera in a place where electrical products, AV/OA devices, and so on generate magnetic fields and electromagnetic waves
- If the camera is affected by magnetic fields and electromagnetic waves, it may not be able to communicate.
- If the camera is used near a TV or a radio, poor reception or TV screen glitch may occur.
- If there are multiple wireless LAN access points near the camera and the same channel is used, search operation may not be executed correctly.
- The security of your data stored, sent or received is your own responsibility.

In the frequency band used by the camera, along with industrial, scientific, and medical devices such as microwave ovens, premises radio stations (wireless stations requiring license) and specified low power radio stations (wireless stations not requiring license) for mobile object identification used in factory production lines, etc., and amateur radio stations (wireless stations requiring license) are operated.

- Before using the camera, confirm that premises radio stations and specified low power radio stations for mobile object identification and amateur radio stations are not operated in the vicinity.
- In the event that the camera causes harmful radio wave interference to premises radio stations for mobile object identification, immediately change the frequency being used to avoid interference.
- If you have other troubles such that the camera causes harmful radio wave interference to specified low power radio stations for mobile object identification or to amateur radio stations, contact your nearest service center.

This camera conforms to the technical standards under the Radio Law and Telecommunications Business Law and the certification of conformance to technical standards can be displayed on the monitor.

The certification marks of conformance to wireless technical standards under the Radio Law and Telecommunications Business Law can be displayed from [Certification Marks] of the ₹4 menu. Refer to "Using the Menus" (p.24) for how to use the menus.

#### **About the GPS**

- Local geographic and atmospheric conditions may prevent or delay the reception of GPS data. This camera may be unable to receive GPS data indoors, underground, or near large structures, trees, or other objects that block or reflect satellite signals.
- The positions of GPS satellites are continuously changing and this may prevent or delay the reception of GPS data at certain hours of the day.
- The presence of mobile phones or other devices that transmit frequencies close to those of GPS satellites, or magnetized high-voltage lines may interfere with the reception of GPS data.
- Note that this camera may take a while to reacquire a signal if it has not been used for an extended period or has been moved a great distance from where the GPS data was last received.
- Turn off the GPS function in any place where, or on any occasion when the use of electronic device is prohibited, such as while visiting a hospital, or taking off and landing of airplane.
- In some countries or regions, using GPS or collecting positioning data may be regulated. When you travel overseas, consult the embassy or your travel agency about using a camera with a GPS function or collecting the positioning log data.
- The GPS function of this camera has been developed for personal-use digital cameras. It cannot be used for surveying or for a navigation system for airplanes, vehicles, or people, etc. We assume no responsibility nor liability for any damages resulting from the use of the function for improper purposes.

#### **Trademarks**

- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.
- Macintosh, macOS, OS X, and App Store are trademarks of Apple Inc., registered in the U.S. and other countries.
- Intel and Intel Core are trademarks of Intel Corporation in the U.S. and/ or other countries.
- SDXC Logo is a trademark of SD-3C, LLC.
- Google, Google Play, Android, and Google Earth are trademarks or registered trademarks of Google Inc.
- Wi-Fi is a registered trademark of Wi-Fi Alliance.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

- This product includes DNG technology under license by Adobe Systems Incorporated.
- The DNG logo is either a registered trademark or trademark of Adobe Systems Incorporated in the United States and/or other countries.
- HDML the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries

All other trademarks are the property of their respective owners.

- This product uses the RICOH RT font designed by Ricoh Company Ltd.
- This product supports PRINT Image Matching III, PRINT Image Matching enabled digital still cameras, printers and software help photographers to produce images more faithful to their intentions. Some functions are not available on printers that are not PRINT Image Matching III compliant.

Copyright 2001 Seiko Epson Corporation, All Rights Reserved, PRINT Image Matching is a trademark of Seiko Epson Corporation. The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.





# **SILKYPIX**°



#### **AVC Patent Portfolio License**

This product is licensed under the AVC Patent Portfolio License for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

#### Announcement on the Use of BSD-Licensed Software

This product includes software licensed under the BSD License, BSD license is a form of license which permits the redistribution of the software provided that it is clearly stated that use is unwarranted, and a copyright notice and a list of licensing conditions are provided. The following contents are displayed based on the abovementioned licensing conditions and are not for the purpose of restricting your use of the product, etc.

Tera Term Copyright (C) 1994-1998 T. Teranishi (C) 2004-2018 TeraTerm Project All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice. this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO. PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS: OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### **WARRANTY POLICY**

All our cameras purchased through authorized bona fide photographic distribution channels are quaranteed against defects of material or workmanship for a period of twelve months from the date of your purchase. Service will be rendered, and defective parts will be replaced without cost to you within that period, provided the camera does not show evidence of impact, sand or liquid damage, mishandling. tampering, battery or chemical corrosion, operation contrary to operating instructions, or modification by an unauthorized repair shop. The manufacturer or its authorized representatives shall not be liable for any repair or alterations except those made with its written consent and shall not be liable for damages from delay or loss of use or from other indirect or consequential damages of any kind, whether caused by defective material or workmanship or otherwise; and it is expressly agreed that the liability of the manufacturer or its representatives under all guarantees or warranties, whether expressed or implied, is strictly limited to the replacement of parts as hereinbefore provided. No refunds will be made on repairs by non-authorized service facilities

Procedure During 12-month Warranty Period Any camera which proves defective during the 12-month warranty period should be returned to the dealer from whom you purchased the camera or to the manufacturer. If there are no representatives of the manufacturer in your country, send the camera to the manufacturer, with postage prepaid. In this case, it will take a considerable length of time before the camera can be returned to you owing to the complicated customs procedures required. If the camera is covered by warranty, repairs will be made and parts replaced free of charge, and the camera will be returned to you upon completion of servicing. If the camera is not covered by warranty, regular charges of the manufacturer or of its representatives will apply. Shipping charges are to be borne by the owner. If your camera was purchased outside of the country where you wish to have it serviced during the warranty period, regular handling and

servicing fees may be charged by the manufacturer's representatives in that country. Notwithstanding this, your camera returned to the manufacturer will be serviced free of charge according to this procedure and warranty policy. In any case, however, shipping charges and customs clearance fees to be borne by the sender. To prove the date of your purchase when required, please keep the receipt or bills covering the purchase of your camera for at least a year. Before sending your camera for servicing, please make sure that you are sending it to the manufacturer's authorized representatives or their approved repair shops, unless you are sending it directly to the manufacturer. Always obtain a quotation for the service charge, and only after you accept the quoted service charge, instruct the service station to proceed with the servicing.

- This warranty policy does not affect the customer's statutory rights.
- The local warranty policies available from our distributors in some countries can supersede this warranty policy. Therefore, we recommend that you review the warranty card supplied with your product at the time of purchase, or contact our distributor in your country for more information and to receive a copy of the warranty policy.

### For Customers in USA STATEMENT OF FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without testing of specific absorption rate (SAR).

# Declaration of Conformity According to 47CFR, Parts 2 and 15 for Class B Personal Computers and Peripherals

We: RICOH IMAGING AMERICAS

**CORPORATION** 

Located at: <u>5 Dedrick Place, West Caldwell,</u>

New Jersey 07006, U.S.A. Phone: 800-877-0155 FAX: 973-882-2008

Declare under sole responsibility that the product identified herein complies with 47CFR Parts 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on the statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsible for ensuring that the equipment complies with the standards of 47CFR §15.101 to §15.109.

Product Name: <u>Digital Single Lens Reflex Camera</u>

Model Number: R01010

Contact person: <u>Customer Service Manager</u>

Date and Place: December, 2017 Colorado

#### For Customers in Canada Innovation, Science and Economic Development Canada (ISED) Regulatory Compliance Notice

This Class B digital apparatus complies with Canadian ICES-003 (B).

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. The K-1 Mark II has been tested and found to comply with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.

#### Pour les utilisateurs au Canada Avis de conformité à la réglementation d'Innovation, Sciences et Développement économique Canada (ISDE)

Cet appareil numérique de la classe B est conforme à la norme NMB-003 (B) du Canada.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Les connaissances scientifiques dont nous disposons n'ont mis en évidence aucun problème de santé associé à l'usage des appareils sans fil à faible puissance. Nous ne sommes cependant pas en mesure de prouver que ces appareils sans fil à faible puissance sont entièrement sans danger. Les appareils sans fil à faible puissance émettent une énergie fréquence radioélectrique (RF) très faible dans le spectre des micro-ondes lorsqu'ils sont utilisés. Alors qu'une dose élevée de RF peut avoir des effets sur la santé (en chauffant les tissus), l'exposition à de faibles RF qui ne produisent pas de chaleur n'a pas de mauvais effets connus sur la santé. De nombreuses études ont été menées sur les expositions aux RF faibles et n'ont découvert aucun effet biologique. Certaines études ont suggéré qu'il pouvait y avoir certains effets biologiques, mais ces résultats n'ont pas été confirmés par des recherches supplémentaires. Le K-1 Mark II a été testé et jugé conforme aux limites d'exposition aux rayonnements ISDE énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de I'ISDE.

#### For Customers in Europe

## Information for Users on Collection and Disposal of Old Equipment and Used Batteries



#### 1. In the European Union

These symbols on the products, packaging and/ or accompanying documents mean that used electrical and electronic equipment and batteries should not be mixed with general household waste.

Used electrical/electronic equipment and batteries must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of these products.



By disposing of these products correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

If a chemical symbol is added beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in the battery at a concentration above an applicable threshold specified in the Battery Directive.

For more information about collection and recycling of used products, please contact your local authorities, your waste disposal service or the point of sale where you purchased the products.

#### 2. In other countries outside the EU

These symbols are only valid in the European Union. If you wish to discard used products, please contact your local authorities or dealer and ask for the correct method of disposal.

For Switzerland: Used electrical/electronic equipment can be returned free of charge to the dealer, even when you don't purchase a new product. Further collection facilities are listed on the home page of <a href="https://www.swico.ch">www.swico.ch</a> or <a href="https://www.swico.ch">www.swico.ch</a>.

#### Notice to Users in EEA Countries

This product complies with the essential requirements and provisions of RE Directive 2014/53/EU.

The CE Declaration of Conformity is available by accessing the URL:

http://www.ricoh-imaging.co.jp/english/support/declaration\_of\_conformity.html and selecting the product applicable.

Operating frequency band: 2400 MHz - 2483.5 MHz Maximum radio-frequency power: 8.22 dBm EIRP

European importer: RICOH IMAGING EUROPE S.A.S. Parc Tertiaire SILIC 7-9, avenue Robert Schuman - B.P. 70102, 94513 Rungis Cedex, FRANCE

Manufacturer: RICOH IMAGING COMPANY, LTD. 1-3-6, Nakamagome, Ohta-ku, Tokyo 143-8555, JAPAN



The CE Mark is a Directive conformity mark of the European Union.

#### For Customers in Thai

This telecommunication equipment is in compliance with NTC requirements.

Memo

Memo

#### RICOH IMAGING COMPANY. LTD.

1-3-6, Nakamagome, Ohta-ku, Tokyo 143-8555, JAPAN (http://www.ricoh-imaging.co.jp)

RICOH IMAGING EUROPE S.A.S.

Parc Tertiaire SILIC 7-9, avenue Robert Schuman - B.P. 70102, 94513 Rungis Cedex, FRANCE

RICOH IMAGING AMERICAS CORPORATION

5 Dedrick Place, West Caldwell, New Jersey 07006, U.S.A. (http://www.us.ricoh-imaging.com)

RICOH IMAGING CANADA INC.

5560 Explorer Drive Suite 100, Mississauga, Ontario, L4W 5M3, CANADA (http://www.ricoh-imaging.ca)

LTD.

RICOH IMAGING CHINA CO., 23D, Jun Yao International Plaza, 789 Zhaojiabang Road, Xu Hui District, Shanghai, 200032, CHINA

(http://www.ricoh-imaging.com.cn)

(http://www.ricoh-imaging.eu)

#### http://www.ricoh-imaging.co.jp/english

This contact information may change without notice. Please check the latest information on our websites.

Specifications and external dimensions are subject to change without notice.