

Register your product and get support at
www.philips.com/welcome



PHILIPS

When the appliance is powered on, you are automatically and continuously supervised, reducing fire and poisoning risks (BHD272 provides with 24 hours care)

After use:

1. Place the hair dryer on a flat surface and wait 10 minutes.
2. Turn the power switch (1) off.
3. Clean the appliance with a dry cloth.
4. Store the appliance in a safe place.

Guarantee and service

If you need an after-sales service, please contact your Philips Consumer Care Center or your country's Philips service center.

Dansk

Tilbedes med 2 års garanti. Philips har et automatisk og kontinuerligt overvågningssystem, der reducerer brand- og forgiftningsskader (BHD272 beskytter med 24 timers omsorg)

English

Specifications are subject to change without notice. © 2019 Philips North America Consumer Electronics. All rights reserved.

3000 030 10321

Important

Read this manual carefully before you use the appliance and keep it for future reference.

WARNING: Do not use this appliance near water.

In a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathbaths, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must not be higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air inlet to avoid electric shock.

Never block the air grilles. Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Do not use the appliance on artificial hair.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend if you use such accessories or parts, your guarantee becomes invalid.

Do not wind the main cord around the appliance.

Wait until the appliance has cooled down before you store it. Do not put on the power cord after using. Always unplug the appliance by holding the plug. Do not operate the appliance with wet hands.

Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

This Philips appliance complies with the limits of electromagnetic fields.

Recycling

This symbol means that this product shall not be disposed of with normal household waste.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal avoids negative environmental consequences for the environment and human health.

2 Dry your hair

Select a suitable attachment (1) (1) for drying or styling and attach it to the dryer (2) for use.

Adjust the temperature switch (3) and adjust the speed switch (4) to the desired position. Press and hold the power switch (5) for 3 seconds for the cord to be locked for 30 seconds.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal avoids negative environmental consequences for the environment and human health.

Switch

Setting

Function

Temperature

Speed

Power

After use

Switch off

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

