

Register your product and get support at
www.philips.com/welcome



PHILIPS

When the appliance is powered on, it can automatically and continuously dampen, reducing frizz and providing additional shine (BHD274 provides with 24 hours time).

After use:

- 1. Place the hair in a resistant surface until it cools down.
- 2. Take the air filter (G) out of the appliance to remove dust.
- 3. Clean the appliance by hand.
- 4. You can hang it with the hanging loop (H).

Guarantee and service

If you need an after-sales support, you can contact the Philips Consumer Care Center or your country's Philips service center. For more information, visit the Philips website or contact your local Philips service center.

Dansk

Tilbedes med 2 års garanti. Hvis Philips' tilbede er defekt, vil Philips reparere eller erstatte det med et nyt tilbede. Hvis Philips' tilbede er defekt, vil Philips reparere eller erstatte det med et nyt tilbede.

Specifications are subject to change without notice

© 2019 Koninklijke Philips N.V. All rights reserved.

English

Congratulations on your purchase, and welcome to Philips. To help you get the most out of your Philips product, we have prepared this user manual. Please read it carefully before using the product.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

WARNING: Do not use this appliance near water.

In a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

WARNING: Do not use this appliance near bathbaths, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must not be a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air inlets to avoid electric shock.

Never block the air grilles. Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Do not use the appliance on artificial hair.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend if you use such accessories or parts, your guarantee becomes invalid.

Do not wind the main cord around the appliance.

Wait until the appliance has cooled down before you store it. Do not put on the power cord after using. Always unplug the appliance by holding the plug. Do not operate the appliance with wet hands.

Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

This Philips appliance complies with applicable standards regarding exposure to electromagnetic fields.

Recycling

This symbol means that this product shall not be disposed of with normal household waste. It should be recycled.

Follow the instructions for the separate collection of electrical and electronic products. Contact your local waste management authorities for more information.

2 Dry your hair

1. Select a suitable attachment (G) for drying or styling and attach it to the dryer (G) for drying or styling.

2. Adjust the temperature switch (I) and airflow switch (J) to the desired position. Press and hold the on/off switch (K) for 5 seconds for the dryer to start.

3. Dry your hair. When the hair is dry, turn the dryer off.

4. Clean the appliance by hand. Do not use water or other liquids. Do not use abrasive materials.

5. Store the appliance in a dry place. Do not store it in a humid or wet place.

6. Do not use the appliance if the power cord is damaged or if the main cord is frayed.

7. Do not use the appliance if the power cord is frayed or if the main cord is frayed.

8. Do not use the appliance if the power cord is frayed or if the main cord is frayed.

9. Do not use the appliance if the power cord is frayed or if the main cord is frayed.

10. Do not use the appliance if the power cord is frayed or if the main cord is frayed.

11. Do not use the appliance if the power cord is frayed or if the main cord is frayed.

12. Do not use the appliance if the power cord is frayed or if the main cord is frayed.



