



**Introduction**

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

**Important**

Please read the important information carefully before you use the appliance and save it for future reference.

This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

**Danger**

- Never immerse the appliance in water.

**Warning**

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance functions abnormally in any way, or if the appliance has been dropped or leaks.

- Do not immerse the iron or (for cordless iron) base in water.

- If the mains cord is damaged, you must have it replaced by Philips, or a service specialist, authorized by Philips or similarly qualified persons in order to avoid a hazard.

- Never leave the appliance unattended when it is connected to the mains.

- Always unplug the appliance from the socket outlet before you fill the water reservoir.

- For cordless, the iron must be removed from the base before you fill the water reservoir.

- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand what is required to protect themselves and others from hazards.

- Do not allow children to play with the appliance.

- Older children aged 8 or over are only allowed to clean the appliance and perform the Calc-Clean procedure under supervision.

- Keep the iron and its mains cord out of the reach of children less than 8 years of age.

- Always place the base (for cordless iron) and the iron on a stable, level and horizontal surface.

- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on its heel or its stand, make sure that the surface on which you place it is stable.

- Do not let the mains cord come into contact with the hot soleplate of the iron.

- (For cordless iron) Do not iron with the base attached to the iron.

- Otherwise, the supply cord will easily get damaged. The steam iron is designed for cordless iron only.

**Warning: For iron models with Quick Calc Release**

- Do not use and remove the Quick Calc Release collector from the appliance or iron.

- Do not use other collectors on the appliance than the Quick Calc Release collector that has been supplied with the appliance.

- Do not fill water at the channel of the Quick Calc Release opening.

- Do not insert your finger and pointed objects into the Quick Calc Release opening.

**CAUTION: Hot-surface (Fig. 1)**

Surfaces are liable to get hot during use (for irons with 'hot' symbol marked on the appliance).

**Caution**

- Only connect the appliance to an earthed wall socket.

- Check the mains cord regularly for possible damage.

- Fully unwind the mains cord before you plug it in the wall socket.

- The soleplate of the iron can become extremely hot and may cause burns if touched.

- Descal the iron regularly according to the instructions in chapter 'Cleaning and maintenance' in the user manual.

- When you have finished using the iron, clean the appliance, when you fill the water reservoir.

- Turn off the steam iron and also when you leave the iron even for a short while, set the steam control to the 'dry ironing' position, put the iron on its heel and remove the mains plug from the wall socket.

- Type of water to use: The appliance is suitable to be used with tap water.

However, if you live in an area with hard water, we recommend that you mix an equal amount of water with distilled or demineralized water. This will prevent fast scaling and prolong the lifetime of the appliance.

- Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.

- The plug must only be connected to a socket with the same technical characteristics as plug.

- The filling hole must not be open during operation.

**Fields (Fig. 2)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Recycling**

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste (2012/19/EU).

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

**Guarantee and support**

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet.

**BULGARSKI**

Поздравявам със своята покупка и първите си впечатления от Philips! За да се възползвате от максималните ползи на Philips поддръжка, регистрацията на продукта си на адрес [www.philips.com/welcome](http://www.philips.com/welcome).

**Важно**

Преди да използвате уреда, прочетете внимателно тази важна информация и запазете за спасване в бъдеще.

Този уред е проектиран само за употреба в домашни условия. При правилна употреба, неподходяща употреба или неизвестно на инструкциите производителя не поема отговорност и гаранцията съва невалидна.

**Опаковка**

- Не оставяйте уреда във вода.

**Предупреждение**

- Преди да включите уреда в електрически контакт, проверете дали посоченото върху уреда е възможно.

- Уредът е изграждан за използване във вода.

- Никога не използвайте уреда, когато е възможна опасност.

- Не използвайте уреда (или за беззадържан истина) от първи поглед.

- Ако захранватият кабел е повреден, то трябва да бъде смениен от производител, от сервиза на Philips или квалифициран техник, за да се избегнат опасности.

- Никога не оставяйте уреда без надзор.

- Винаги изключвате уреда от контакт преди пълнене на водния резервоар.

- За употреба на уреда е необходимо да имате съвет и пълнене на водния резервоар.

- Не допускайте захранватият кабел да се допира до гореща гладка повърхност.

- (За беззадържан истина) Не гледайте, докато енергията е приложена към ютията.

При правилна употреба за изграждане на модела Clean-Clean под наблюдението:

**ЕСТЕТИКА**

**Tutvutus**

Öntömlese puhul ja tervitavam Philips poolt! Philips pakattava töötavate eiletäike katalausteks registreerige oma tööde veebleel [www.philips.com/welcome](http://www.philips.com/welcome).

**Tähta!**

Ene seadme käsimuist lugege olleline teave hoolikalt läbi ja hoidke see edasjaloleks.

Veeleidate informatsiooni ja kasutamiseks vahetage välja vahemikku normatiividega.

- Töösi irudil saab se siis üldiselt kaasvõtta.

</div