

13) 故障かな?と思ったら

故障かな?と思ったら、お調べください。

だんだん切れ味が悪くなった

▶シェービングヘッド部が汚れていないか確認してください。
▶シェービングヘッド部が損傷または摩耗していないか確認してください。
損傷または摩耗しているときは、シェービングヘッドを交換してください。
(替刃品番: SH50)
▶シェービングヘッドに長いヒゲがからまっていないか確認してください。

充電しても使用時間が極端に短い

▶シェーバーが完全に止まるまで動作させてから、もう一度充電してください。
それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

▶シェーバーに充電ケーブルが接続されている場合は外してください。
▶充電されていない場合は約1時間充電をしてみてください。
▶ロック機能がONになっている場合はロックを解除してください。
▶刃が破損している場合は交換をしてください。

シェーバー本体のモーターは回転しているが、内刃が回転しない

▶外刃にキズ、ヘコミがある場合はシェービングヘッドを交換してください。
(替刃品番: SH50)

充電できない

▶シェーバー本体の電源コネクタ受部に充電ケーブルがきちんと差し込まれているか確認してください。
▶充電ケーブルが断線している場合は新しい充電ケーブルをお買い求めください。

以上の点検により、正常な状態に戻らない場合は、フィリップスサポートセンターにお問い合わせください。

14) 保証とアフターサービス

保証書と修理サービスについて (必ずお読みください。)

- 【保証書・表面左側に付属】
- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取ったとき内容をよくお読みの上大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電ケーブル(シェービングユニット、トリマー、保護キャップを除く)

- 【補修用性能部品の保有期間】
- 補修用性能部品の保有期間は製造打ち切り後 6 年です。
●性能部品とは、その製品の機能を維持するために必要な部品です。

- 【ご不明な点や修理に関するご相談は】
- 修理に関するご相談ならびにご不明な点は、フィリップスサポートセンターにお問い合わせください。

- 【修理を依頼されるときは】
- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検ください。尚、異常のあるときはご使用を中止し、フィリップスサポートセンターにお問い合わせください。

- 【保証期間中は】
- 製品と保証書をご用意いただき、フィリップスサポートセンターにお問い合わせください。保証書の記載内容により無料修理いたします。

- 【保証期間が過ぎているときは】
- 修理によって商品の機能が維持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及アフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限りです)
●日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
●海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お買りの点がございますら下記までご連絡ください。
Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRACHTEN The Netherlands Fax:+31 51 259 2785

【お客様の個人情報のお取り扱いについて】

- お受けましたお客様の個人情報の詳細は、株式会社フィリップス・ジャパンのホームページ http://www.philips.co.jp/ に掲載されている「プライバシーに関する通知」に基づき適切に管理いたします。

便 利 メ モ

お買い上げ日

年

月

日

お買い上げ店名

TEL ()

ご使用の時、このような症状はありませんか?

●本体にさわると時々電気を感じる。
●こげくさい臭いがする。
●電源コード部を動かすと通電がし、しなかったりする。
●その他の異常、故障がある。

長年ご使用のシェーバーの点検を
愛情点検

このような症状の時は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから外して、必ずフィリップスサポートセンターにお問い合わせください。

15) 仕様



品番	X5007/00	X5006/00	X5006/05	X5012/05
ハンドル品番	X5007	X5006		X5012
替刃品番	SH50			
本体寸法 (高さ×幅×奥行)	170×60×60mm			
本体質量	約161g			
電源方式	充電式			
定格入力	DC 5V 1A			
充電時間	約1時間			
使用時間	約50分			
使用充電電池	リチウムイオン充電電池 (Li-ion)			

※改良の為、仕様を予告なく変更することがあります。

株式会社 フィリップス・ジャパン
〒108-8507 東京都港区港南2-13-37 フィリップスビル

ENGLISH

X5007/00, X5006/00, X5006/05, X5012/05

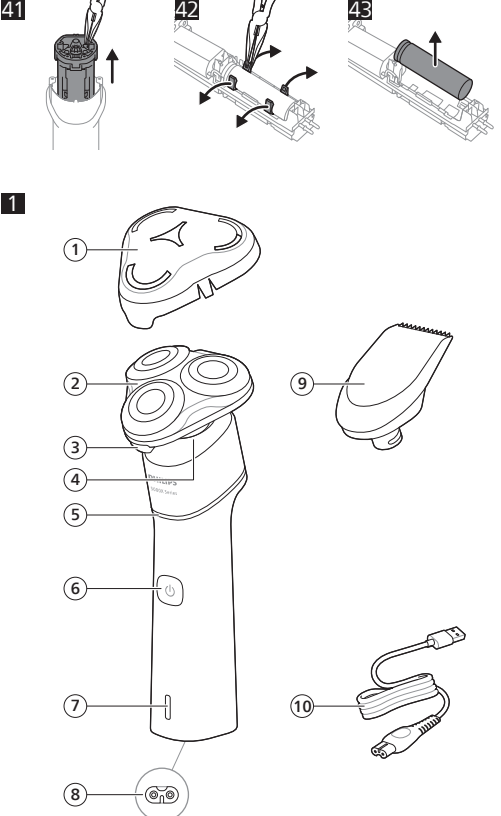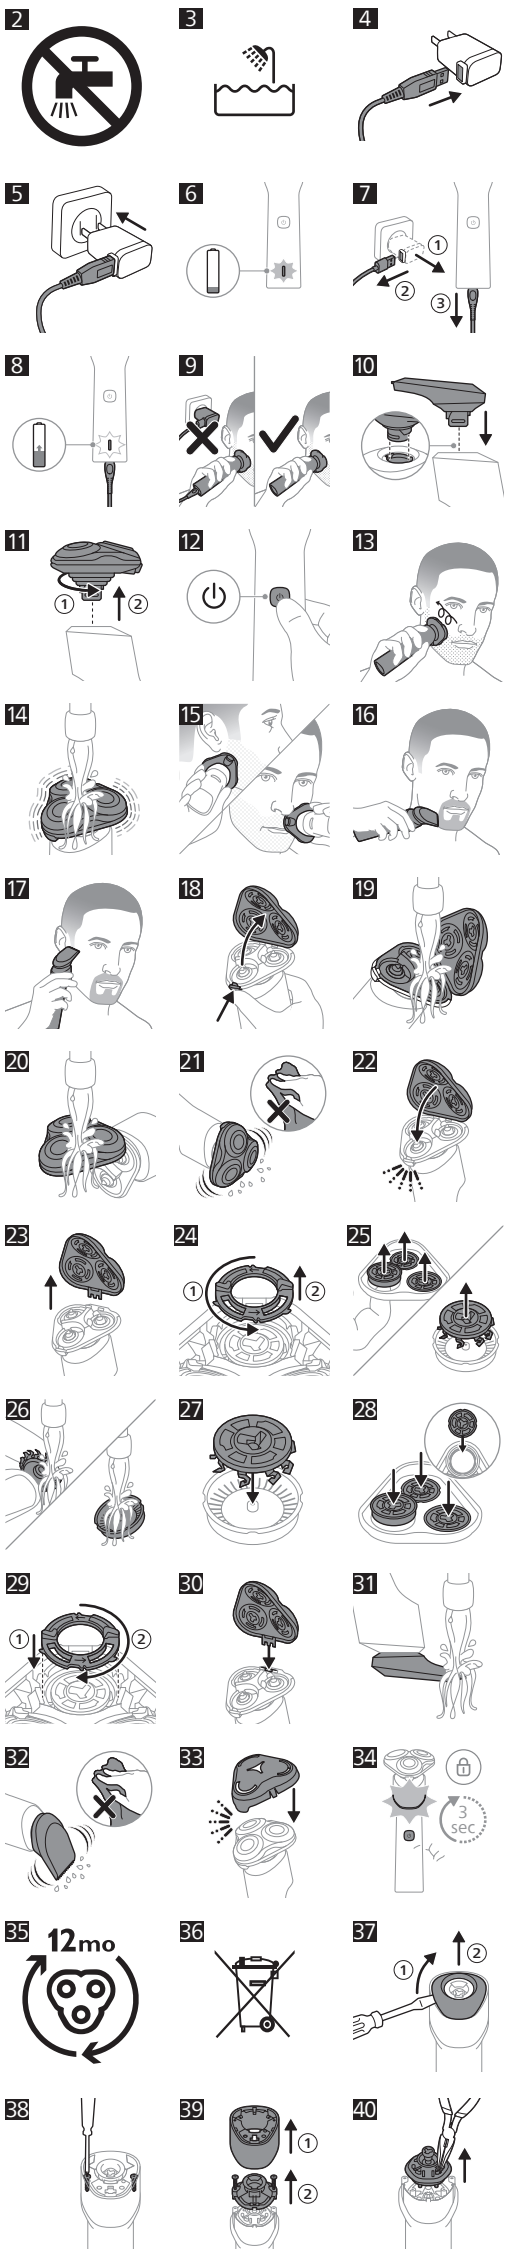

English

Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference. Misuse can lead to hazards or serious injuries. Accessories supplied may vary for different products.

Warning

- To charge the product, only use a certified safety extra low voltage (SELV) supply unit with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) supply unit. A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB supply unit, contact the Consumer Care Center in your country (see the international warranty leaflet for contact details). Using a non-certified supply unit may cause hazards or serious injuries.
- Keep the USB cable and the USB supply unit dry (Fig. 2).
- This shaver is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not modify the supply unit.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Because of hygiene, only one person should use the appliance.
- Unplug the appliance before cleaning it with water.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 41 °F / 5 °C and 95 °F / 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General description

- 1 Protective cap
- 2 Shaving unit
- 3 Shaving unit release button
- 4 Shaving unit connector
- 5 Power-on light ring
- 6 On/off button
- 7 Battery charge indicator
- 8 Socket for small plug
- 9 Trimmer(X5012/05, X5006/05 only)

10 USB cable

Note: A suitable supply unit (e.g. Philips HQ87) is available via www.philips.com/support

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome

Charging

Warning: Keep the USB cable and the USB supply unit dry (Fig. 2).

Fully charge the product before first use and when the display indicates that the battery is almost empty. Charging takes approx. 1 hour. A fully charged shaver provides up to 50 minutes of shaving time. Quick Charge: After approx. 5 minutes of charging, the battery contains enough energy for one full shave.

- 1 Make sure that the appliance is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the appliance.
- 3 Insert the USB plug into the USB supply unit (not provided) (Fig. 4).
- 4 Insert the USB supply unit into the wall socket (Fig. 5). The battery indicator starts to flash white (Fig. 6).
- 5 After charging, remove the USB supply unit from the wall socket, pull the USB plug out of the supply unit and then pull the small plug out of the appliance (Fig. 7).

Charge indications

Battery low

When the battery is almost empty, the battery charge indicator flashes orange (Fig. 6).

Battery charging

While the product charges, the battery charge indicator quickly flashes white (Fig. 8).

Quick charge

When the battery contains enough energy for one shave, the battery charge indicator starts flashing white more slowly.

Battery full

When the product is fully charged, the battery charge indicator lights up white continuously. After approx.30 minutes, the lights go out automatically.

Note: This product can only be used without cord (Fig. 9).

'Unplug before use' reminder

The battery charge indicator flashes white to remind you to unplug the shaver first.

Using the product

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Note: This product can only be used without cord.

Removing or attaching the click-on attachments

- 1 Make sure the product is switched off.
- 2 To attach the click-on attachment, insert the lug of the attachment into the slot in the top of the product. Then press down the attachment to attach it to the product ('click') (Fig. 10).
- 3 To remove the click-on attachment, twist the attachment and then pull it off the product (Fig.11).

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks. You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- 1 Press the on/off button once to switch on the product (Fig. 12).
- 2 Move the shaving heads over your skin in circular movements (Fig. 13) to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 14).

- 3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 15).
- 4 Switch off and clean the product after each use (see 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the product.

Trimming (X5012/05, X5006/05 only)

- 1 Press the on/off button once to switch on the product (Fig. 12).
- 2 Hold the trimmer perpendicular to the skin and move it downwards while exerting gentle pressure.
- 3 You can also use the trimmer to contour your beard (Fig. 16) and sideburns (Fig. 17).
- 4 Switch off the product and clean the trimmer after each use to prevent clogging and damage. Switch off the product and clean the trimmer after each use to prevent clogging and damage.

Cleaning and maintenance

Clean the product and the attachments after each use for optimal performance.

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Always check if the water is too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue,as this may damage the shaving heads.

While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence.

- 1 Press the on/off button once to switch on the product (Fig. 12).
- 2 Rinse the shaving unit with cold or lukewarm water (Fig. 14).
- 3 Press the on/off button to switch off the product. Press the release button to open the shaving unit (Fig. 18).
- 4 Rinse the hair chamber under a warm tap (Fig. 19).
- 5 Rinse the shaving head holder under the tap (Fig.20).
- 6 Carefully shake off excess water and let the shaving head holder air-dry completely (Fig. 21).
- 7 Close the shaving unit (Fig. 22).

Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.

Note: The guards of the shaving heads shown in this user manual may differ from the ones you purchased. The handling is the same.

- 1 Make sure that the product is disconnected from the USB cable.
- 2 Press the on/off button once to switch off the product (Fig. 12).
- 3 Press the release button on the shaving unit (Fig.18) and pull the shaving head holder off the shaving unit (Fig. 23).
- 4 Turn the retaining rings counterclockwise and remove them (Fig. 24).
- 5 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard (Fig. 25).

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

- 6 Clean the cutter and guard under the tap (Fig. 26).
- 7 Put the cutter back into the guard (Fig. 27).
- 8 Place the shaving heads in the shaving head holder (Fig. 28).

Note: Make sure that the projections of the shaving heads fit exactly into the recesses of the shaving head holder.

- 9 Place the retaining rings back onto the shaving head holder and turn them clockwise ('click') (Fig.29).
- Each retaining ring has two recesses and two projections that fit exactly in the projections and recesses of the shaving head holder.
- 10 Reinsert the hinge of the shaving head holder into the slot of the shaving unit (Fig. 30). Close the shaving unit (Fig. 22).

Cleaning the click-on trimmer (X5012/05, X5006/05 only)

Never dry the trimmer with a towel or tissue,as this may damage the trimming teeth.

Clean the trimmer after each use.

- 1 Press the on/off button once to switch on the product (Fig. 12).
- 2 Rinse the trimmer with cold or lukewarm water (Fig. 31).
- 3 After cleaning, press the on/button to switch off the product.
- 4 Carefully shake off excess water and let the trimmer air-dry completely (Fig. 32).
- 5 For optimal performance, lubricate the teeth of the trimmer with a drop of mineral oil every six months.

Storage and travel

Put the protection cap on the product (Fig. 33) to protect it from dirt accumulation. We advise you to let the product dry before you store it.

Travel lock

You can lock the shaver when you are going to travel to prevent it from switching on accidentally. To activate or deactivate the travel lock, press the on/off button for 3 seconds. When the travel lock is activated or deactivated, the power-on light ring flashes three times (Fig. 34).

Note: The appliance unlocks automatically when connected to the wall socket.

Replacement

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 35). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads.

Note: The guards of the shaving heads shown in this user manual may differ from the ones you purchased. The handling is the same.

The following accessories and spare parts are available:

- SH50 Philips replacement shaving heads.

Support

For all product support such as frequently asked questions, please visit www.philips.com/support

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 36).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removal of built-in rechargeable battery

The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the appliance and when you dispose of the rechargeable battery.

When you handle batteries, make sure that your hands, the product and the batteries are dry.

To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g.coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

Only remove the battery if it is completely empty.

- 1 Pull the shaving unit off the shaver (Fig. 11).
- 2 Use a flathead screwdriver to remove the top cap of the housing (Fig. 37).
- 3 Remove the screws (Fig. 38).
- 4 Pull the inner parts out of the housing (Fig. 39). If necessary, use a pair of pliers (Fig. 40).
- 5 Remove the battery compartment (Fig. 41) from the housing.
- 6 Wedge a screwdriver or a pair of pliers between the battery and the pins on the frame. Then pry the pins away from the battery to break them (Fig. 42).
- 7 Grab the battery and pull it away from the internal components to break it from the frame (Fig. 43).

Caution: be aware of the sharp edges of the battery tabs so as to avoid injury to your fingers.