



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Polaroid Mint Nero](#) o cerca il tuo prodotto tra le [migliori offerte di Fotocamere](#)



Pocket Printer

USER GUIDE

Thank you for purchasing the Polaroid Mint Pocket Printer. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

BE SAFE WITH POLAROID MINT

- Never leave your printer or the ZINK® paper in an area that might become extremely hot or where it will be exposed to direct sunlight for a long time. This can cause your printer to overheat or suffer other problems.
- Don't get it wet! If you need to clean your printer, use a soft cloth that's been slightly dampened with water or rubbing alcohol, and gently wipe away

any dirty spots. Don't submerge the whole thing in water, ever.

- Be careful with your printer. Try not to drop it, or shake it violently. The inside of the printer has a lot of very small parts that could break if they are jostled around too much.
- Always use the charging cable that comes in your box to charge your

printer, and be careful that it doesn't get too hot while charging. If you feel the printer overheating while it charges, immediately disconnect it from the power source and let it cool down before turning it back on.

- The Polaroid Mint Pocket Printer absolutely will not work without downloading the Android™ or iOS application. If you do not have an

Android™ phone or an iPhone®, unfortunately, this printer will not work for you.

WHAT COMES IN THE BOX?



Polaroid Mint Pocket Printer



Polaroid ZINK® Paper
Starter Pack



 
Micro USB
Charging Cable



User Guide &
Warranty

GET TO KNOW YOUR PRINTER

1. Power Button
2. Micro USB Charging Port
3. Charging Indicator Light
4. Photo Print Slot

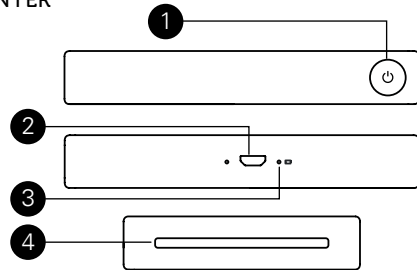


GETTING READY

1. Charge it first: Before you start using your new Polaroid Mint printer, plug it into your computer or any USB charging block with an output of one amp (1A) or higher. The charging indicator will stay red while the printer charges. Once it turns green, it's fully charged and ready to use. The full charging process usually takes approximately two (2) hours.
2. Load your ZINK® paper into the printer:

Follow the steps below to quickly and easily get your new printer loaded with ZINK® sticky-back paper so you can start printing photos!

- a. Open the paper tray in the back by pressing down on the latch and pulling it toward you.
- b. Load the blue calibration sheet in with the barcode facing down and the ZINK® logo in the bottom right corner.

 Place the other plain sheets on top with the glossy side facing you.

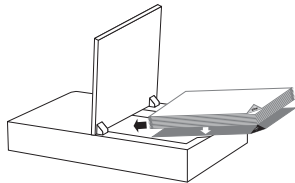


Try to avoid touching the glossy side

so you don't get fingerprints on it. (You can load the whole stack as-is from the packet, but sometimes it's easier to load the calibration sheet first to make sure it's seated correctly in the tray.)

- c. If the printer is off, the calibration sheet will be slowly ejected from the photo slot after a few seconds once you turn the printer on. If the printer

 is on, the calibration sheet will be ejected from the photo print slot when you print your first photo.



NOTE: Please make sure not to push the paper in too far or else the paper

 
could jam or cause misprinting issues.

3. Download the Polaroid Mint application from the Google Play™ or Apple® App Store®. You will need the app installed on your phone for the printer to work.



START USING POLAROID MINT!

1. Turn the printer on by pressing the power button on the side for two (2) seconds.
2. Pair the printer to your phone via Bluetooth®:

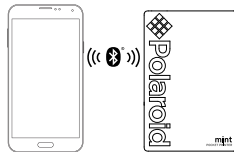

- a. Access your phone's Bluetooth® settings, usually found under the general Settings menu.
- b. Make sure the printer is on first, and then allow your phone to scan for new devices.
- c. You will see "Polaroid Mint" appear in the Bluetooth® list. Tap on it to start pairing.
- d. After a couple of seconds, your phone

should say “paired”.

3. Open up the Polaroid Mint application from your phone, and start using your new Polaroid Mint Pocket Printer!

 
SPECIFICATIONS

- Dimensions: 4.5" L x 3" W x 0.7" D (116 x 77 x 18mm)
- Weight: 5.7 oz (162g)
- Colors Available: Black, White, Red, Blue, Yellow
- Battery Capacity: 900mAh
- Battery Type: Lithium-polymer
- Prints Per Charge: ~50
- Supported Photo Paper: Polaroid ZINK® 2x3" sticky-back photo paper

Questions? Concerns? Get in Touch!

cspolaroid@camarketing.com

1-800-226-6534



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.