



Questo manuale d'istruzione è fornito da [trovaprezzi.it](https://trovaprezzi.it). Scopri tutte le offerte per [Razer Huntsman V3 Pro Tenkeyless Nero](#) o cerca il tuo prodotto tra le [migliori offerte di Mouse, Tastiere, altro Input](#)



RAZER HUNTSMAN V3 PRO TENKEYLESS

MASTER GUIDE

 
Embrace a new standard of speed with the **Razer Huntsman V3 Pro Tenkeyless**. Sporting a leaner form factor for seamless competitive play, get the edge for esports with our latest analog optical switches, featuring adjustable actuation and Rapid Trigger Mode for ultra-fast repeated inputs.

# CONTENTS

|                                         |    |
|-----------------------------------------|----|
| 1. WHAT'S INSIDE .....                  | 3  |
| 2. WHAT'S NEEDED .....                  | 5  |
| 3. LET'S GET YOU COVERED .....          | 5  |
| 4. TECHNICAL SPECIFICATIONS.....        | 6  |
| 5. SETTING UP YOUR KEYBOARD .....       | 6  |
| 6. USING YOUR RAZER KEYBOARD.....       | 8  |
| 7. CONFIGURING YOUR RAZER KEYBOARD..... | 13 |
| 8. SAFETY AND MAINTENANCE .....         | 29 |
| 9. LEGALESE .....                       | 31 |

## 1. WHAT'S INSIDE

- Razer Huntsman V3 Pro Tenkeyless

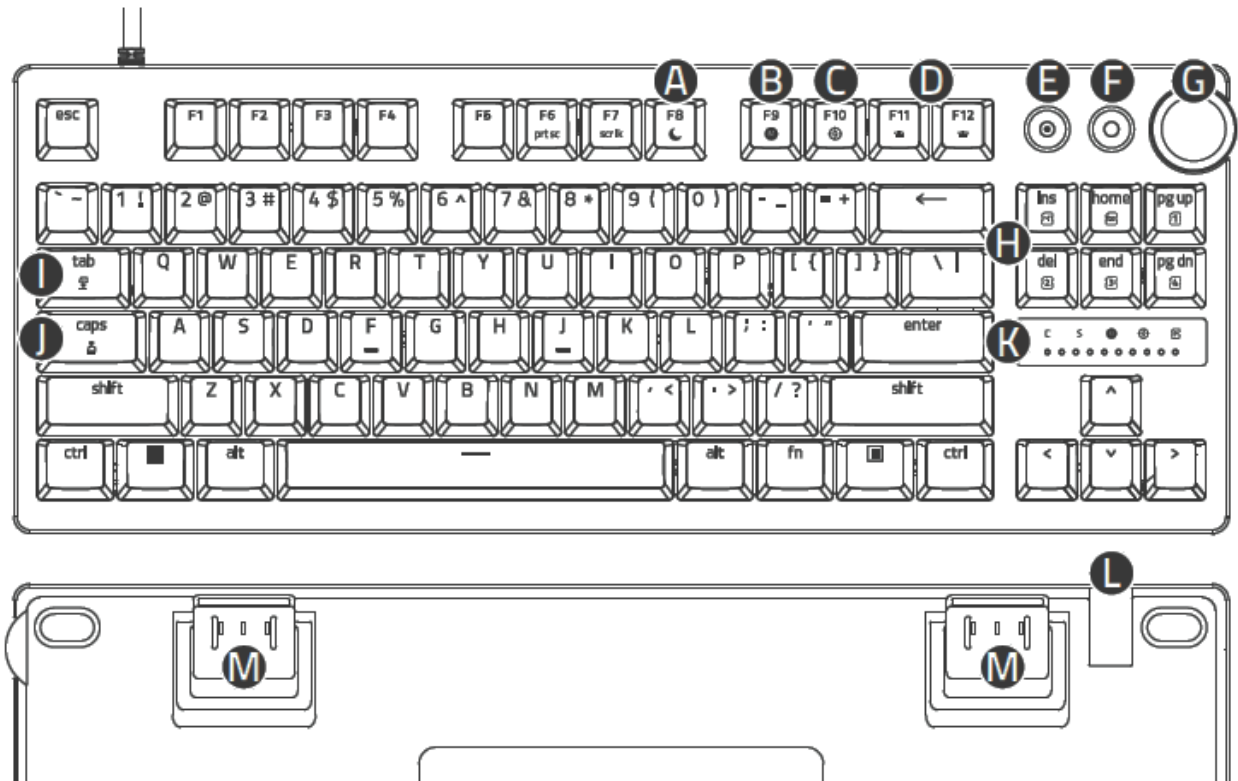


- A. Sleep mode key
- B. On-The-Fly Macro record key
- C. Gaming mode key
- D. Backlight control keys
- E. Remappable Macro button
- F. Multi-function Media button
- G. Multi-function Digital Dial
- H. Preset Profile shortcut keys
  - Last-used Synapse Profile
  - Factory Default
  - FPS Rapid Trigger
- I. Quick Actuation Point adjustment key
  - Analog WASD
  - Racing
  - High Sensitivity
- J. Quick Rapid Trigger adjustment key
- K. LED indicators
- L. USB Type C port
- M. Kickstand

- Magnetic firm leatherette wrist rest



 
- USB Type A to Type C cable



- Important Product Information Guide


---

## 2. WHAT'S NEEDED

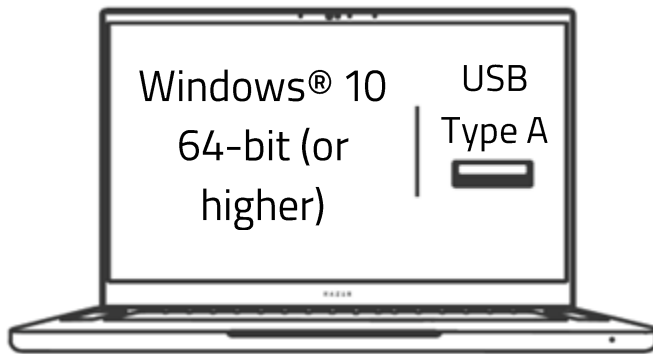 

---

## 3. LET'S GET YOU COVERED

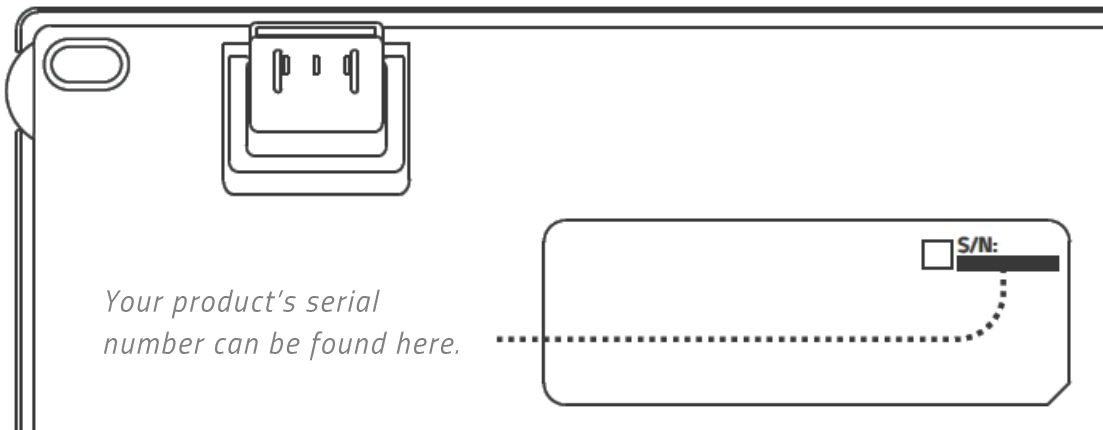 

Register your product and score exclusive benefits

[\*\*razerid.razer.com/warranty\*\*](https://razerid.razer.com/warranty)

---

## 4. TECHNICAL SPECIFICATIONS

### FEATURES

- Switch Type: Razer™ Analog Optical Switch Gen-2
- Size: Tenkeyless
- Lighting: Razer Chroma™ RGB
- Wrist Rest: Yes, Magnetic Firm Leatherette Wrist Rest
- Onboard Memory: Hybrid on-board storage for up to 6 profiles
- Media Keys: Multi-function Dial with 2 dedicated buttons
- Connectivity: Detachable Type C Cable
- Keycaps: Doubleshot PBT Keycaps
- Rapid Trigger Mode
- Adjustable Actuation
- Analog Input
- Dual-step Actuation
- Quick onboard adjustment for Actuation and Rapid Trigger
- Razer™ Synapse enabled
- N-key Rollover with Anti-ghosting
- 1000 Hz Polling Rate
- 5052 Brushed Aluminum Alloy Top Case
- Magnetic Firm Leatherette Wrist Rest
- Fully programmable keys with on-the-fly macro recording
- Gaming Mode

### APPROXIMATE SIZE & WEIGHT

#### Without Wrist Rest

- Length: 363 mm / 14.3 in
- Width: 139 mm / 5.5 in
- Height: 39 mm / 1.5 in
- Weight: 719.5 g / 1.6 lbs

 
#### With Wrist Rest

- Length: 363 mm / 14.3 in
- Width: 224 mm / 8.8 in
- Height: 39 mm / 1.5 in
- Weight: 933 g / 2.1 lbs


---

## 5. SETTING UP YOUR KEYBOARD

1.

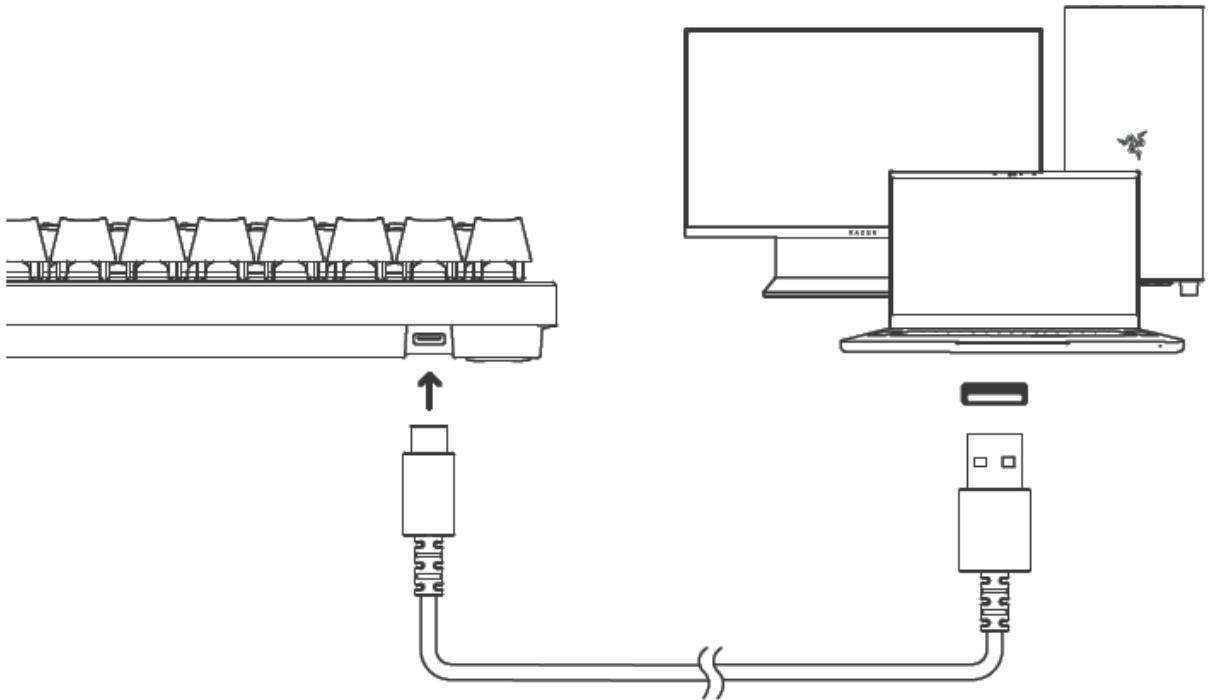

 2.

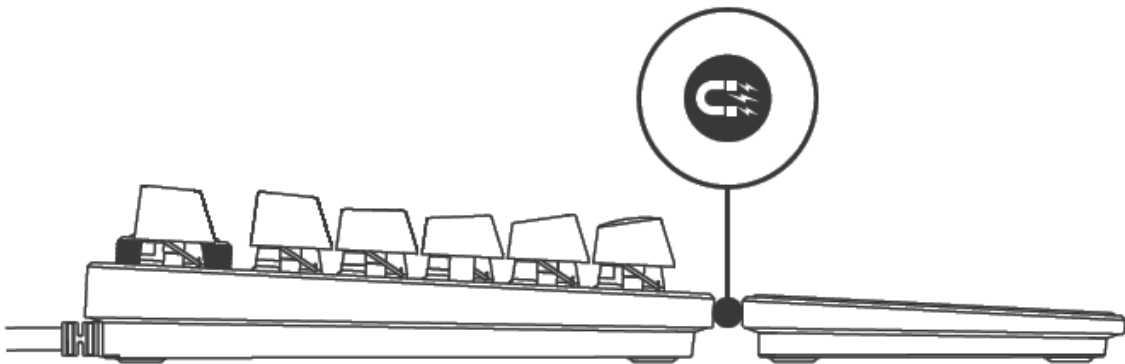


**i** Install Razer Synapse when prompted or download the installer from [razer.com/synapse](https://razer.com/synapse).

## 6. USING YOUR RAZER KEYBOARD
 
### CONTROL BUTTONS

|                                                                                                                     |                                                     |
|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| <br>Remappable<br>Macro button*    | Press to open Xbox Game Bar on Windows              |
| <br>Multi-function<br>Media button | Press once to play/pause the current track (▶  )    |
|                                                                                                                     | Press twice to go to the next track (▶▶ )           |
|                                                                                                                     | Press thrice to go back to the previous track (◀◀ ) |

### Multi-function Digital Dial

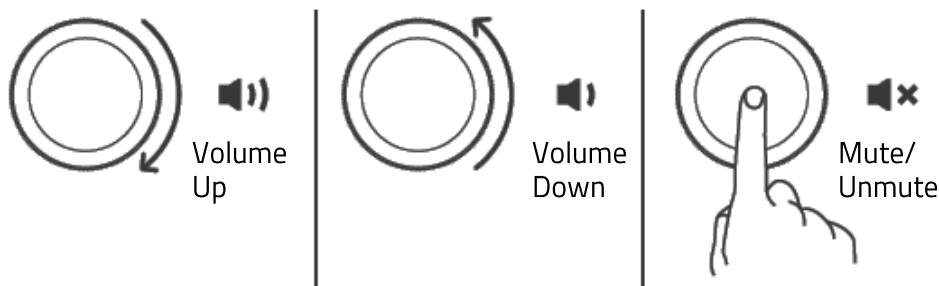


*\*Out-Of-The-Box Settings. Use Razer Synapse to customize and/or remap all functions.*

### KEYBOARD FUNCTIONS
 
| Hotkey   | Description                                                                                                       |
|----------|-------------------------------------------------------------------------------------------------------------------|
| fn + F8  | Suspend all operating system activities and conserve power                                                        |
| fn + F10 | Disable the Windows Key, Menu/Apps Key, Alt + Tab, and Alt + F4 functions (customize options using Razer Synapse) |
| fn + F11 | Decrease (◡◡◡) the keyboard LEDs' brightness                                                                      |
| fn + F12 | Increase (◡◡◡) the keyboard LEDs' brightness                                                                      |


## ON-THE-FLY MACRO RECORDING

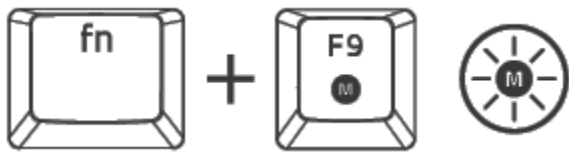

Follow these steps to create an OTF Macro Recording:

1. Press the key combination to start recording.
2. Type the keys you want to record.
3. Press the key combination to stop the recording or the ESC key to cancel the recording.
4. Wait for the OTF Macro record key to start blinking.
5. Press the desired Macro key to bind your recording.

## CHROMA EFFECTS

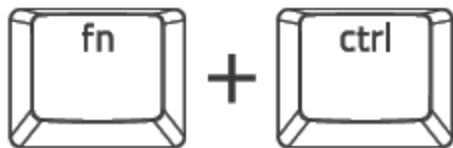 

| Hotkey        | Chroma Effect                                                                                        |
|---------------|------------------------------------------------------------------------------------------------------|
| fn + ctrl + 1 |  Off              |
| fn + ctrl + 2 |  Static*          |
| fn + ctrl + 3 |  Breathing*       |
| fn + ctrl + 4 |  Spectrum cycling |

|               |                                                                                              |
|---------------|----------------------------------------------------------------------------------------------|
| fn + ctrl + 5 |  Wave**     |
| fn + ctrl + 6 |  Reactive*  |
| fn + ctrl + 7 |  Starlight* |
| fn + ctrl + 8 |  Ripple*    |
| fn + ctrl + 9 |  Wheel**   |
| fn + ctrl + 0 |  Radiate* |

\*Press again to change color

\*\*Press again to change direction



Use the Razer Synapse app to customize your keyboard's lighting effects further and access other features available on your keyboard.


## OUT-OF-THE-BOX PRESET PROFILES
 
| Name                      | Hotkey    | Color | Description                                                                                                                                                                   |
|---------------------------|-----------|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Last-used Synapse Profile | fn + ins  | White | Quickly load the last used profile on Synapse. This profile cannot be customized.                                                                                             |
| Factory Default           | fn + home | Green | Default key mapping of the keyboard with actuation point set to 1.2 mm. This profile cannot be customized. Press the key combination again to revert to the previous profile. |

|                   |            |        |                                                                                                                                                                     |
|-------------------|------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FPS Rapid Trigger | fn + pg up | Red    | All keys on this profile are set to 1.2 mm actuation point, and the Rapid Trigger Mode is turned on with 0.4 mm sensitivity.                                        |
| Analog WASD       | fn + del   | Blue   | Use the WASD keys like a controller's left analog stick. All other keys have their actuation point set to 1.2 mm.                                                   |
| Racing            | fn + end   | Yellow | Use the WASD keys to Accelerate (RT), Turn Left (L), Break/Reverse (LT), and Turn Right (L), respectively. All other keys have their actuation point set to 1.2 mm. |
| High Sensitivity  | fn + pg dn | Cyan   | For those seeking a highly reactive keyboard, all keys on this profile are set to 0.4 mm actuation point and Rapid Trigger Mode turned on with 0.1 mm sensitivity.  |

**i** All profiles have adjustable actuation points and rapid trigger sensitivities. Aside from the Factory Default profile, all other profiles can be remapped using Razer Synapse app. Profiles mapped with the controller functionality require the Razer Synapse to be installed.

## QUICK ACTUATION POINT ADJUSTMENT

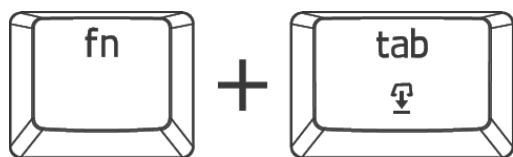


Follow these steps to customize your keyboard's actuation point:

1. Press the combination keys to enter the Adjustment Mode\*.
2. Use the Multi-function Digital Dial or the arrow keys to increase or decrease the actuation point.
3. Use the LED indicators to determine your ideal setting (in millimeters).




4. Press any alphanumeric key to test the current setting. When a key is pressed, the LED indicators light up from left to right to show how deep you need to press a key to fully actuate it.
5. Press the combination keys or Esc key to save your setting and exit Adjustment Mode. Upon exiting, all keys on the keyboard will be set to the chosen actuation point.

## QUICK RAPID TRIGGER ADJUSTMENT

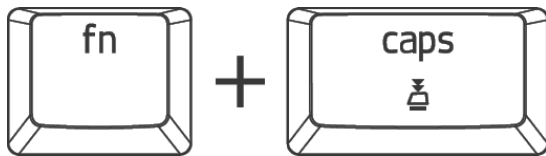 

Follow these steps to customize your keyboard's actuation point:

 1. Press the combination keys to enter the Adjustment Mode\*.
2. Press the Caps Lock key to enable/disable Rapid Trigger on all keys set with this function. When enabled, the keyboard's backlight is brightly lit orange; and when disabled, the keyboard's backlight is dimly lit orange.
3. Use the Multi-function Digital Dial or the arrow keys to increase or decrease the travel distance.
4. Use the LED indicators to determine your ideal setting (in millimeters).

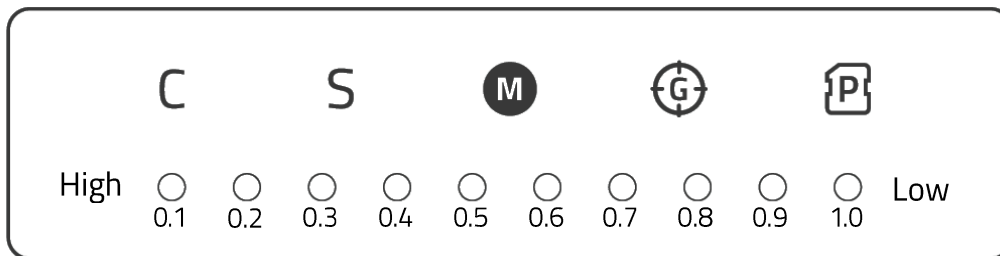

5. Press any alphanumeric key to test the current setting. When pressed and released, the key's backlight turns green when actuated and red when it resets.
6. Press the combination keys or Esc key to save your setting and exit Adjustment Mode. Upon exiting, all keys on the keyboard will be set to the chosen sensitivity.

To learn more about Rapid Trigger, visit <https://rzt.to/rapid-trigger>

*\*While in Adjustment Mode, all non-essential keys and lighting customizations are temporarily disabled. The quick adjustment settings do not permanently overwrite your Synapse Profiles; previously set profiles can be recalled through the Razer Synapse app.*

Find out more about your gaming-grade keyboard at [support.razer.com](https://support.razer.com)

---

## 7. CONFIGURING YOUR RAZER KEYBOARD

 
**i** *Disclaimer: Internet connection is required for installation, updates and cloud-based features. Registering for a Razer ID account is recommended, but optional. All listed features are subject to change based on the current software version, connected device(s), and supported apps and software.*

### SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse.


#### Dashboard

The Dashboard subtab is an overview of your Razer Synapse where you can access all your Razer devices, modules, and online services.

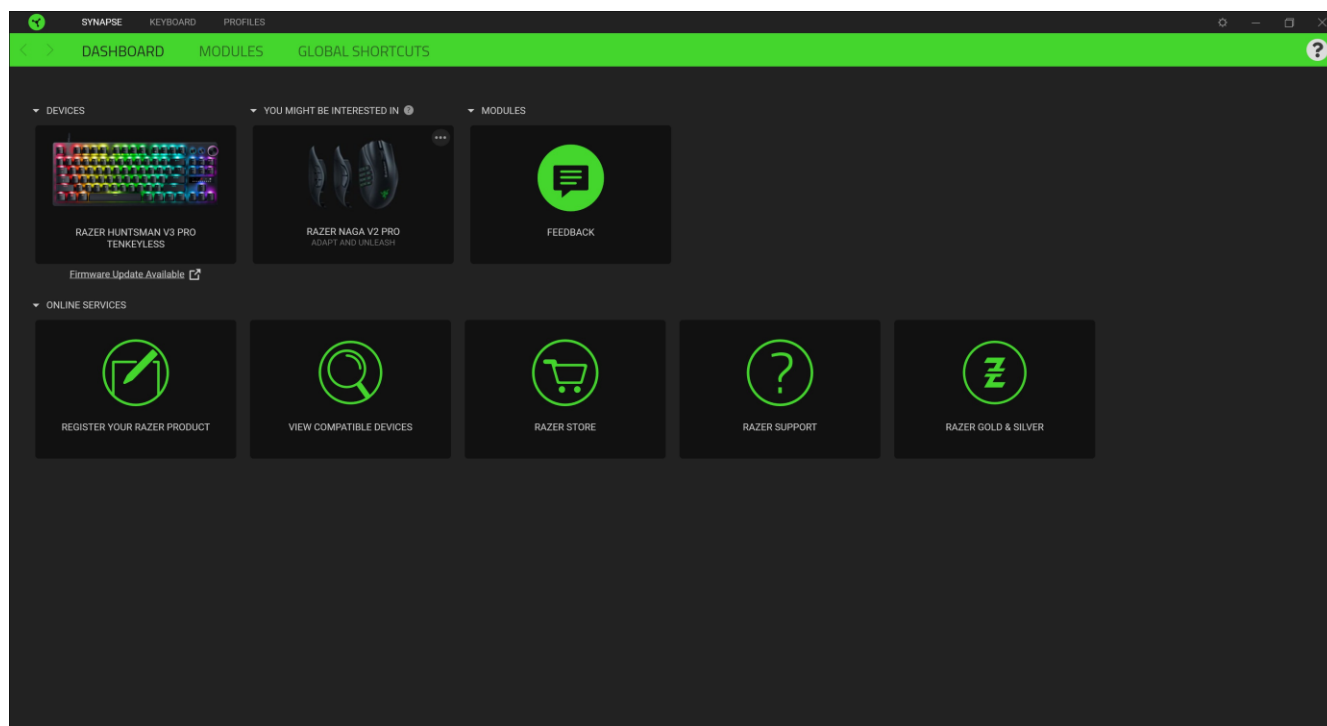

## Modules

 
The Modules subtab displays all installed and available modules for installation.

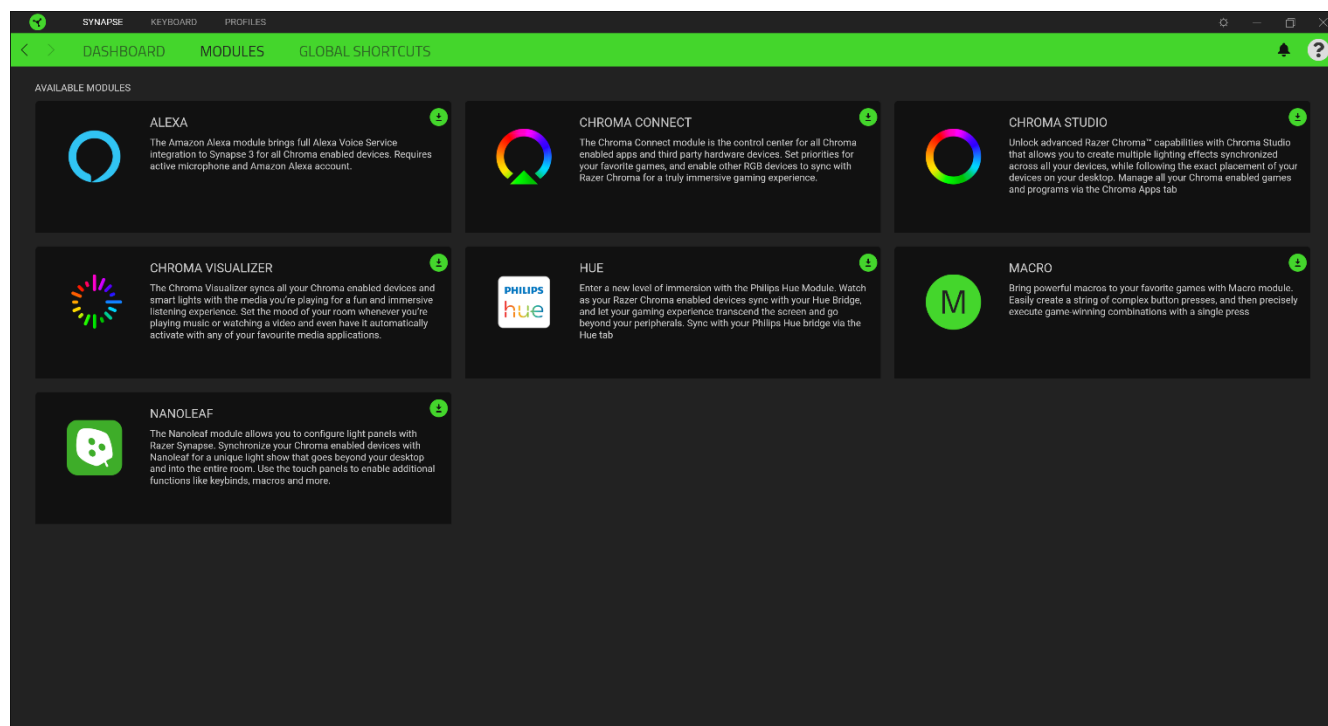

## Global Shortcuts

Bind operations or Razer Synapse functions to custom key-combinations from any Razer Synapse-enabled device inputs which apply across all device profiles. [Learn more about Profiles](#)

  *Only Razer Synapse-enabled device inputs will be recognized.*

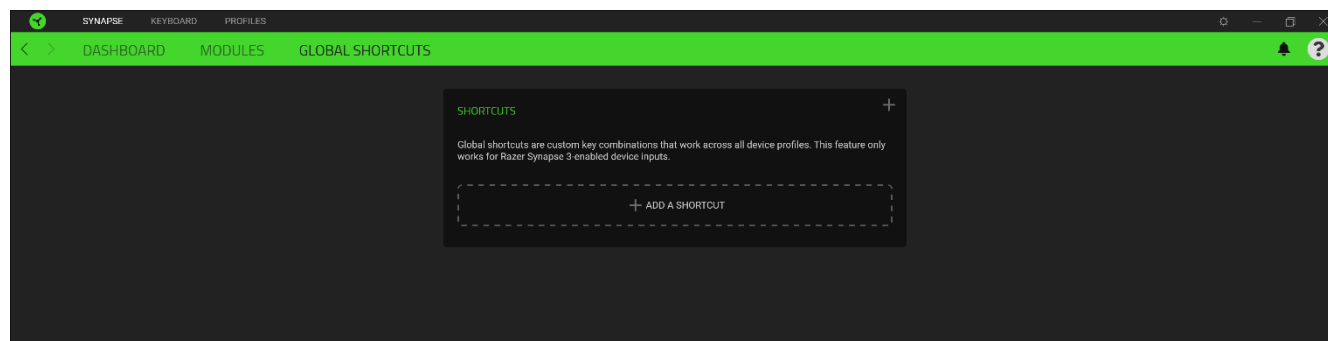


## KEYBOARD

The Keyboard tab is the main tab for your Razer Huntsman V3 Pro Tenkeyless. From here, you can change your device settings such as key assignments and your device's lighting. Changes made under this tab are automatically saved to your system and cloud storage.


### Default

 The Default subtab is only accessible when your profile is set to Factory Default. This is a fixed setting, and no customization can be done here. To customize your keyboard, change the profile to any other preset profile or add your own.

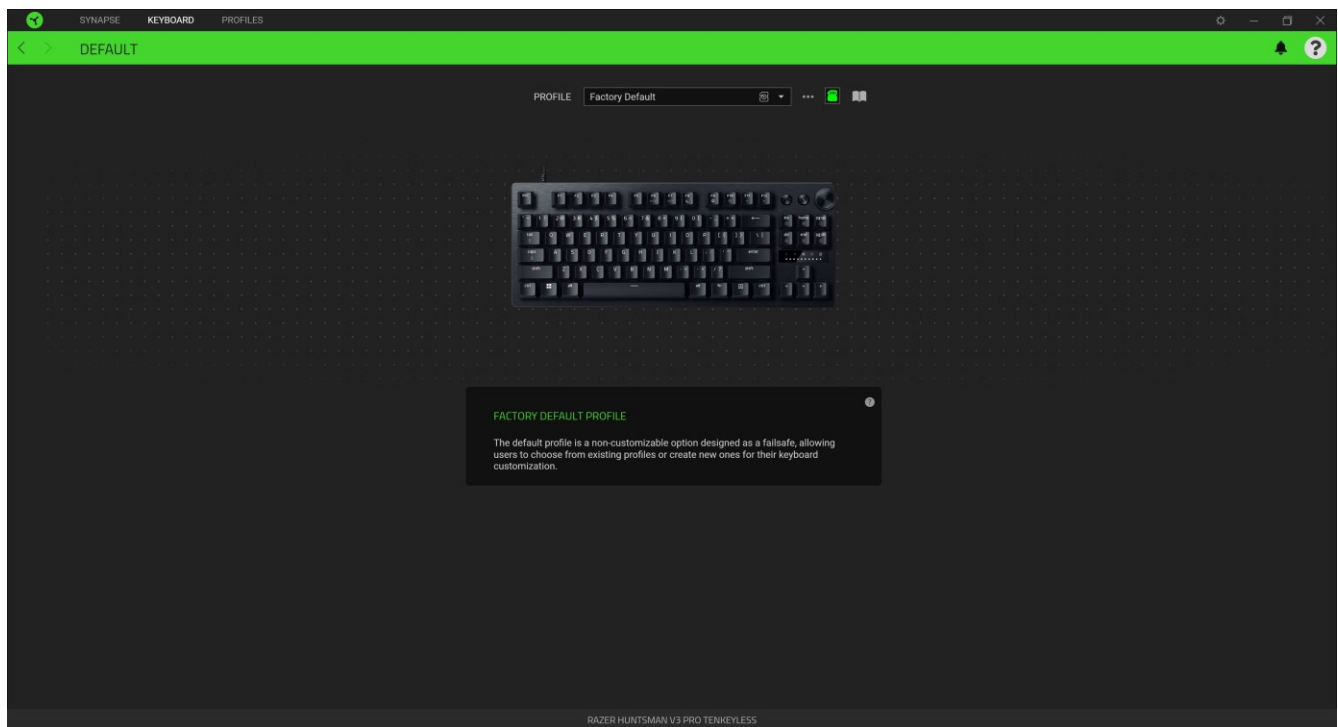

## Customize

 The Customize subtab is for modifying your keyboard's key assignments.

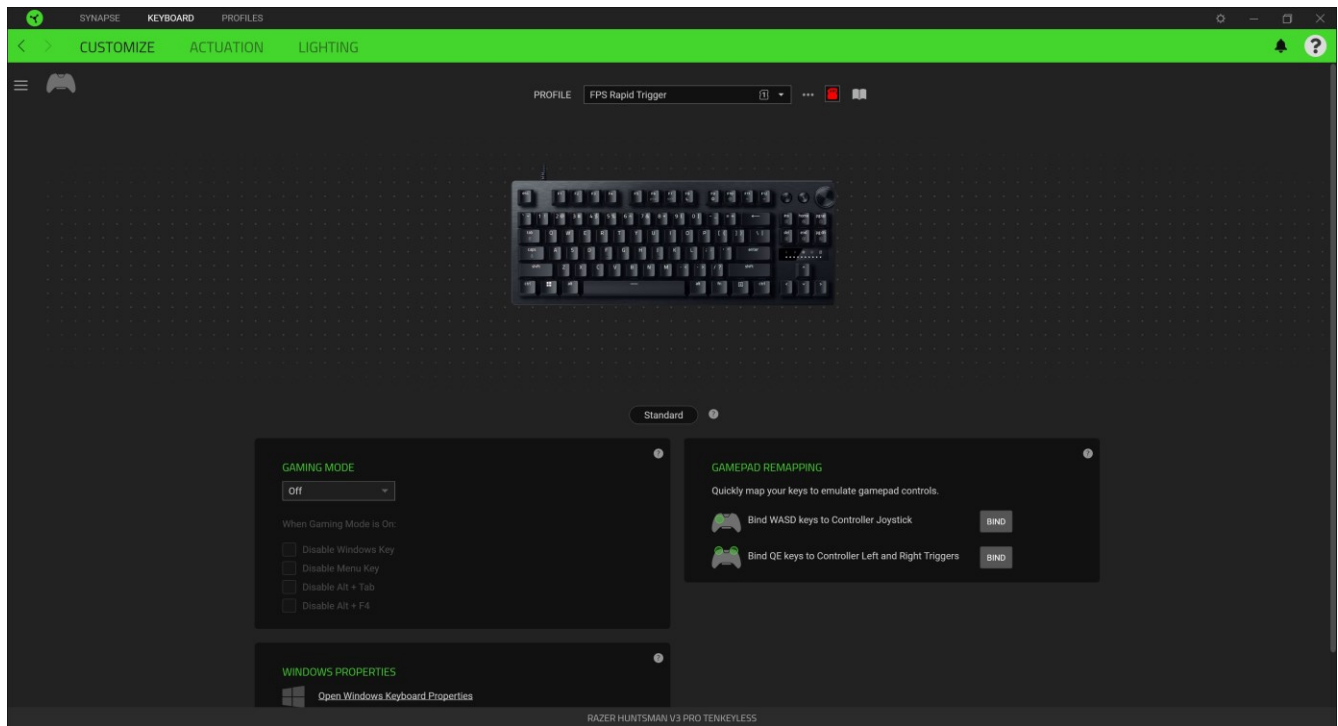

### Profile

Profile is a data storage for keeping all your Razer peripheral's settings. By default, the profile name is based on your system's name. To add, import, rename, duplicate, export, or delete a profile, simply press the profile's corresponding Miscellaneous button (•••). To cycle through your Profiles, press the fn + Menu (⌵) keys.

### Gaming Mode

Gaming Mode enables you to customize which keys to disable when Gaming Mode is activated. Depending on your settings, you may choose to disable the Windows key, Alt + Tab and Alt + F4.

### Keyboard Properties

Allows you to open the Windows Keyboard Properties where you can modify other keyboard settings such as Repeat delay, Repeat Rate, and Cursor blink rate, or view all keyboard drivers installed in your PC.

### Hypershift

 
Hypershift mode is a secondary set of key assignments that is activated when the Hypershift key is held down. By default, the Hypershift key is assigned to the fn key of your Razer Synapse-supported keyboard; however, you can also assign any key as a Hypershift key.

## Gamepad Remapping


Gamepad Remapping enables you to easily change the W, A, S, and D keys into a controller's left joystick function and the Q and E keys into a controller's bumper buttons.

## Sidebar

Clicking the Sidebar button (≡) will reveal all current key assignments for your Razer Huntsman V3 Pro Tenkeyless.

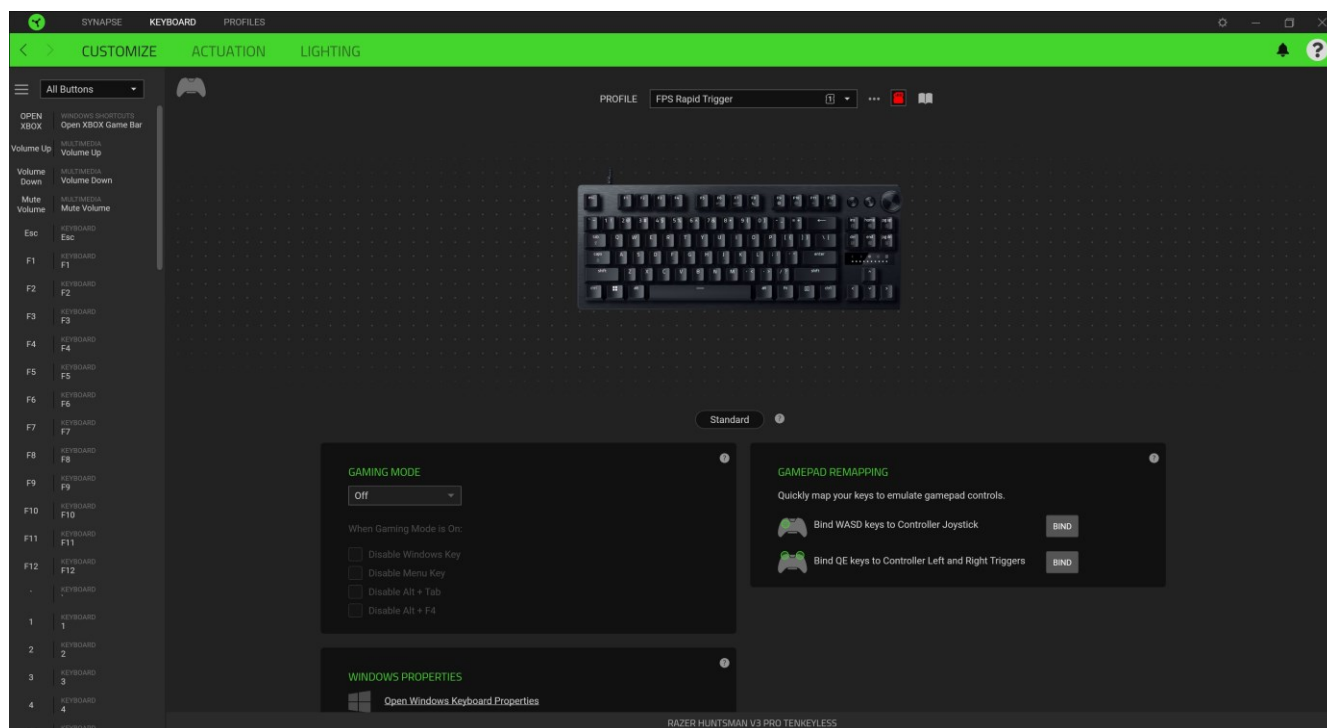

 Alternatively, you can skip to a specific key assignment by selecting it on the Customize tab.

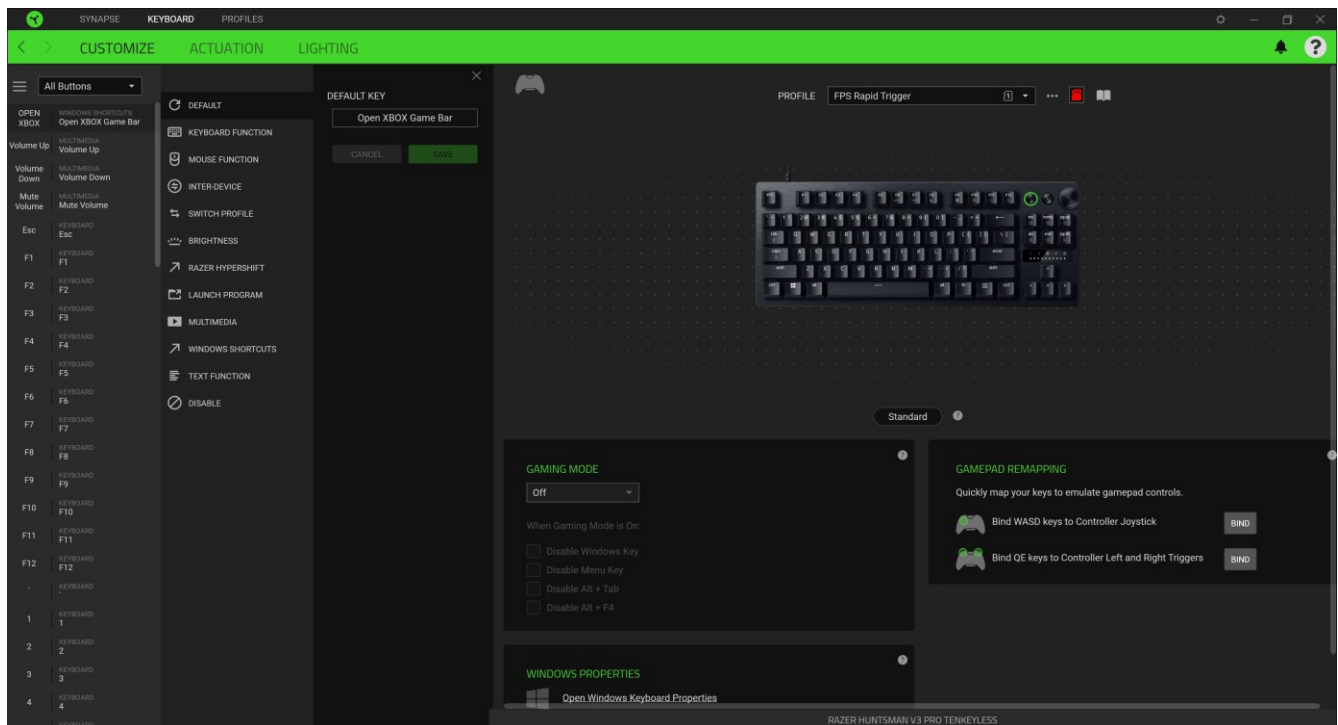

Upon selecting a key assignment, you may then change it to one of the following functions:

#### Default

This option enables you to return the selected key to its original setting. For analog keyboards, this option also allows you to set the actuation and release point for each key or apply the same settings for all analog keys.

#### Keyboard Function

This option changes the key assignment into a keyboard function. You can also choose enable Turbo mode which allows you to emulate repeatedly pressing the keyboard function while the key is held down.

#### Mouse Function

This option allows you to change any key into a mouse function. Listed below are the functions which you can choose from:

- Left Click - Performs a left mouse click using the assigned button.
- Right Click - Performs a right mouse click using the assigned button.
- Scroll Click - Activates the universal scrolling function.

- Double Click - Performs a double left click using the assigned button.
- Mouse Button 4 - Performs a "Backward" command for most internet browsers.
- Mouse Button 5 - Performs a "Forward" command for most internet browsers.
- Scroll Up - Performs a "Scroll Up" command using the assigned button.
- Scroll Down - Performs a "Scroll Down" command using the assigned button.
- Scroll Left - Performs a "Scroll Left" command using the assigned button.
- Scroll Right - Performs a "Scroll Right" command using the assigned button.

You can also choose to enable Turbo mode in some of the mouse functions which allow you to emulate repeatedly pressing and releasing said function while the key is held down.

### Inter-device

Inter-device allows you to change the functionality of other Razer Synapse-enabled devices. Some of these functionalities are device-specific such as using your Razer gaming keyboard to change the Sensitivity Stage of your Razer gaming mouse.

### Switch Profile

Switch Profile enables you to quickly change profiles and load a new set of key assignments. An on-screen notification will appear whenever you switch profiles.

### Brightness

Assign the chosen key to turn your device's LED lighting bright, dim, or to toggle them on/off.

## M Macro

A Macro is a prerecorded sequence of keystrokes and button presses that is executed with precise timing. By setting the key function to Macro, you can conveniently execute a chain of commands. This function will only be visible when the Macro module is installed.

### Switch Lighting

Switch Lighting allows you to easily switch between all advanced lighting effects. This function will only be visible when the Chroma Studio module is installed.

### Razer Hypershift

Setting the key to Razer Hypershift will allow you to activate Hypershift mode if the key is held down.

## Launch Program

Launch Program enables you to open an app or a website using the assigned key. When you select Launch Program, two choices will appear, which require you to search for a specific app you want to open or write the address of the website you want to visit.

## Multimedia

This option allows you to assign multimedia controls to your Razer device. Listed below are the multimedia controls you can choose from:

- Volume Down - Decreases the audio output.
- Volume Up - Increases the audio output.
- Mute Volume - Mutes the audio.
- Mic Volume Up - Increases the microphone volume.
- Mic Volume Down - Decreases the microphone volume.
- Mute Mic - Mutes the microphone.
- Mute All - Mutes both microphone and audio output.
- Play / Pause - Play, pause, or resume playback of the current media.
- Previous Track - Play the previous media track.
- Next Track - Play the next media track.

## Windows Shortcuts

This option allows you to assign your preferred key into a Windows Operating System shortcut command. For more information, please visit: [support.microsoft.com/kb/126449](https://support.microsoft.com/kb/126449)

## Text Function

 
Text Function enables you to type a prewritten text with a touch of a key. Simply write your desired text on the given field, and your text will be typed whenever the assigned key is pressed. This function has full Unicode support, and you can also insert special symbols from character maps.

## Disable

This option renders the assigned key unusable. Use Disable if you do not want to use the selected key or if it interferes with your gaming.


## Controller Sidebar

Clicking the Controller Sidebar button (  ) will show all available controller functions which you can bind to your keyboard. To do so, drag and drop any of these functions onto any key. If you ever need to alternate between typing and using controller functions, simply switch between Factory Default and the current profile.

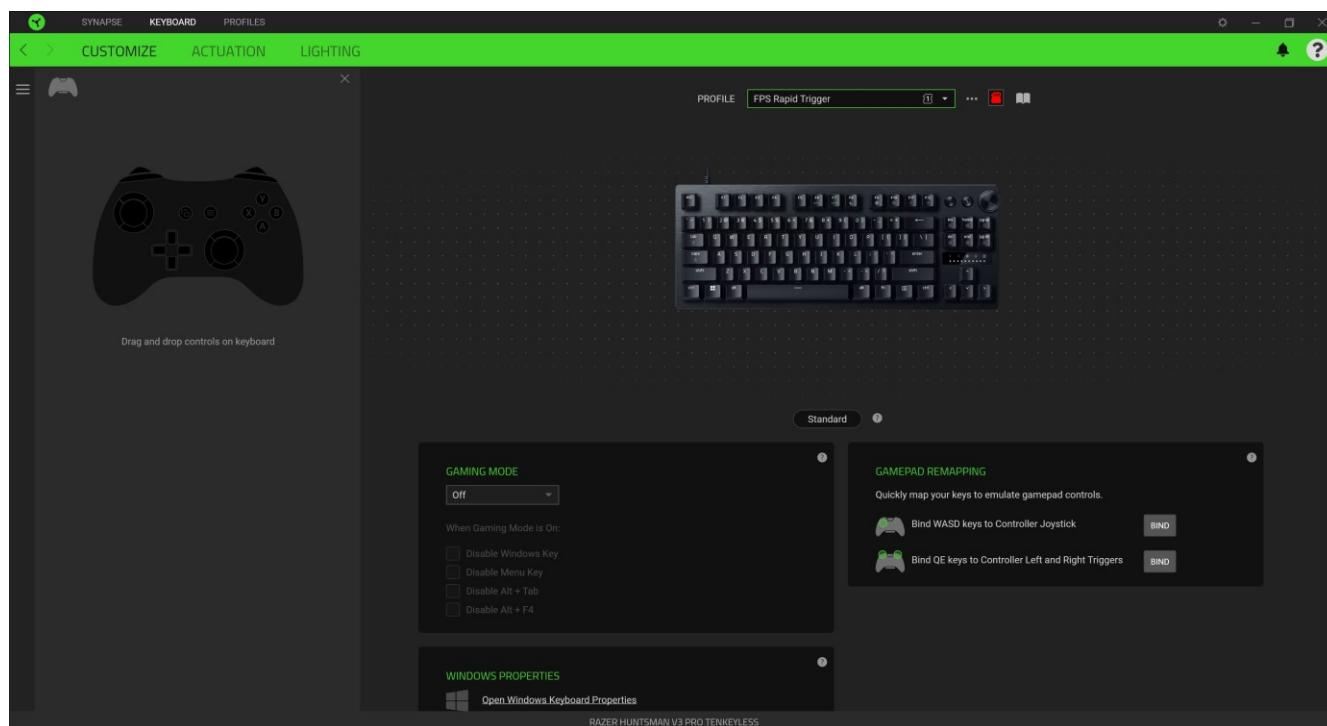

## Actuation

 The Actuation subtab allows you to change the actuation and reset points of your keyboard.

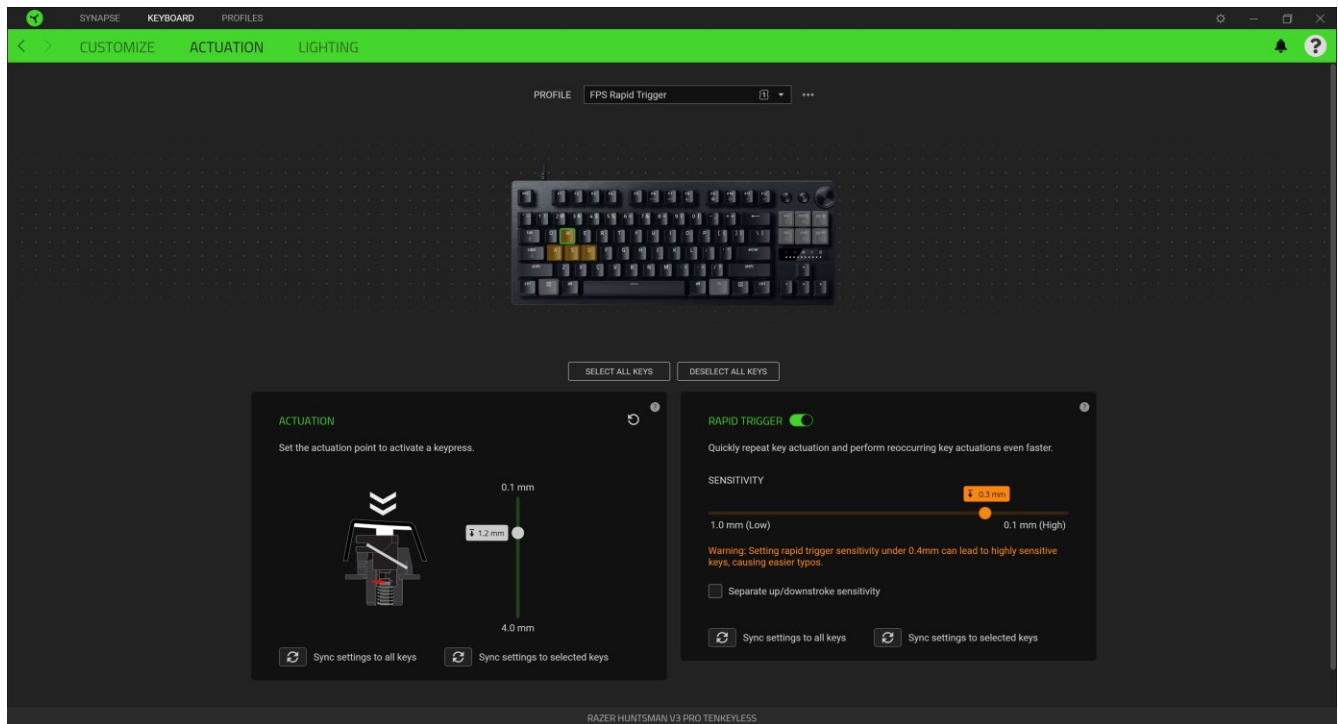

### Actuation

 
Actuation lets you customize the activation point of each key. Set the slider to how deep you want to press the key before it registers as a key press.

### Rapid Trigger

Rapid Trigger enables you to change the sensitivity of each key. Using the slider, change how much your finger needs to travel to activate and reset the key. You can also separate the settings for upstroke and downstroke by ticking the selection box.

# Lighting

The Lighting subtab enables you to modify your Razer device’s light settings.

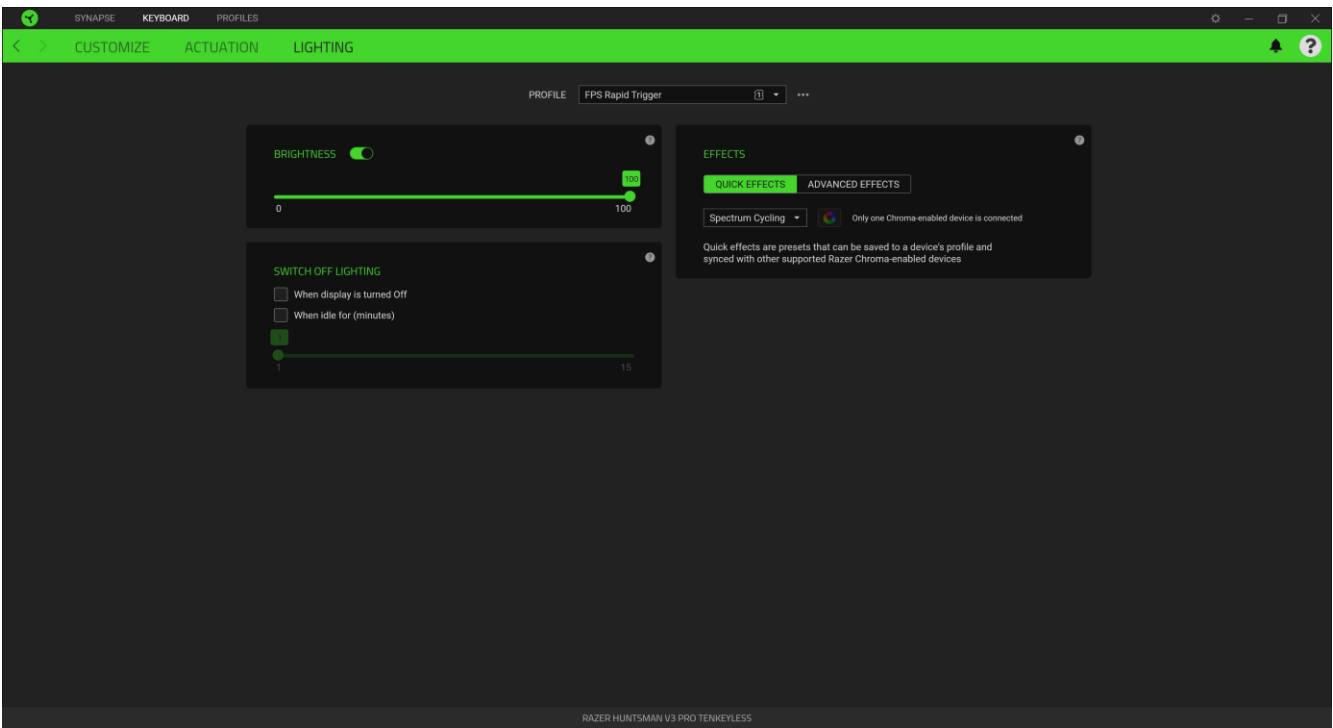

## Brightness

You can turn off your Razer device’s lighting by toggling the Brightness option or increase/decrease the luminance using the slider.

## Switch Off Lighting

 
This is a power saving tool which allows you to disable your device’s lighting in response to your system’s display turning off and/or automatically power down when your Razer Huntsman V3 Pro Tenkeyless has been idle for a set amount of time.

## Quick Effects

A number of quick effects can be selected and applied to your device’s lighting, as listed here:

**i** Only devices that support the selected lighting effect will synchronize. LED indicators are not customizable.

|                                                                                     | Name              | Description                                                                                | How to set up                       |
|-------------------------------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------------|-------------------------------------|
|  | Ambient awareness | The lighting on the keyboard will reflect the averaged color on the selected screen region | Select or customize a screen region |
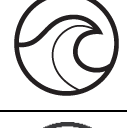
|                                                                                     |                  |                                                                                                        |                                                                 |
|-------------------------------------------------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
|    | Audio meter      | The keyboard will light up according to the audio level with a default spectrum of colors              | Select a Color Boost level                                      |
|    | Breathing        | The keyboard fades in and out of the selected color(s)                                                 | Select up to 2 colors or randomize colors                       |
|    | Fire             | The keyboard lights up in warm colors to mimic the motion of flames                                    | No further customization required                               |
|    | Reactive         | The LEDs will light up when a key is pressed. The light will fade off after a specified period of time | Select a color and a duration                                   |
|    | Ripple           | On key press, light will ripple away from the pressed key                                              | Select a color                                                  |
|   | Spectrum cycling | The lighting will cycle between 16.8 million colors indefinitely                                       | No further customization required                               |
|  | Starlight        | Each LED will have a chance of fading in and out at a random time and duration                         | Select up to 2 colors or randomize colors and select a duration |
|  | Static           | The LEDs will remain lit in the selected color                                                         | Select a color                                                  |
|  | Wave             | The lighting will scroll in the direction selected                                                     | Select either left-to-right or right-to-left wave direction     |
|  | Radiate          | The deeper a key is pressed, the brighter and bigger its glow radius becomes                           | Select a color                                                  |

If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button (  ).

### *Studio Effects*

 
The Studio Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button (  ). [Click here to learn more about the Chroma Studio](#)

## PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

### Devices


View which Razer device is using a specific profile using the Devices subtab.

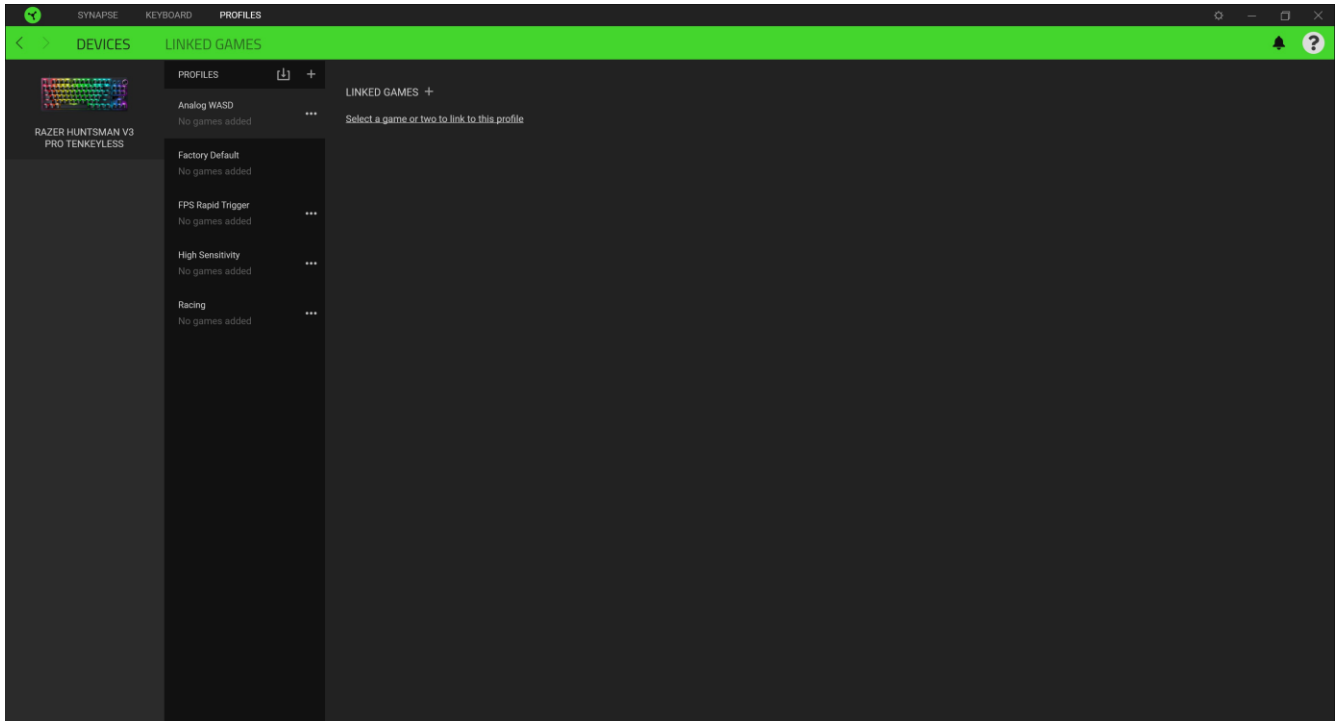

You can import Profiles from your computer or from the cloud through the import button (  ) or create new profiles within the selected device using the add button (  ). To rename, duplicate, export, or delete a profile, simply press the Miscellaneous button (  ). Each profile can be set to automatically activate when you run an application using the Linked Games option.

## Linked Games

 The Linked Games subtab gives you the flexibility to add games, view peripherals that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

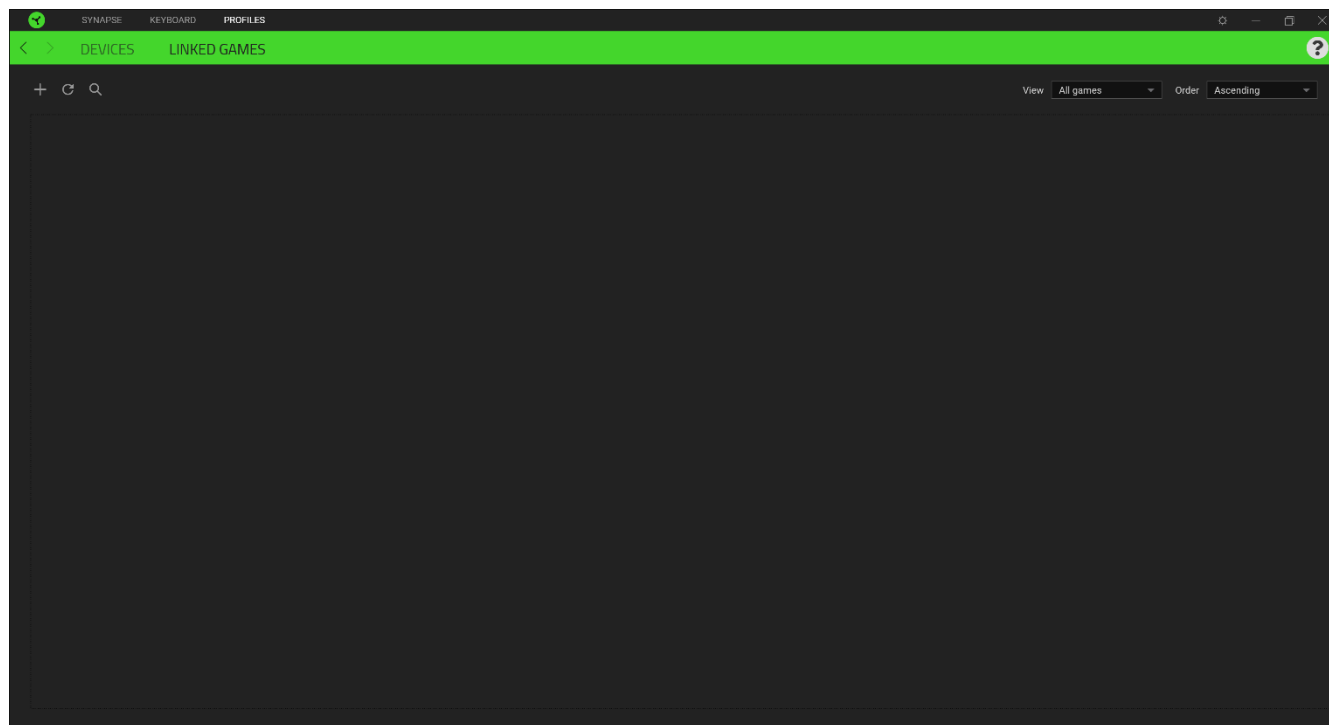


To link games to connected Razer devices, simply click on a game from the list, and then click **Select a device and its profile to launch automatically during gameplay** link to select the Razer device it will link with.

Once linked, you may click on the Miscellaneous button ( ●●● ) of the corresponding device to select a specific profile.

## SETTINGS WINDOW

 The Settings window, accessible by clicking the (  ) button on Razer Synapse, enables you to configure the startup behavior and display language of Razer Synapse, view the master guides of each connected Razer device, or perform factory reset on any connected Razer device.

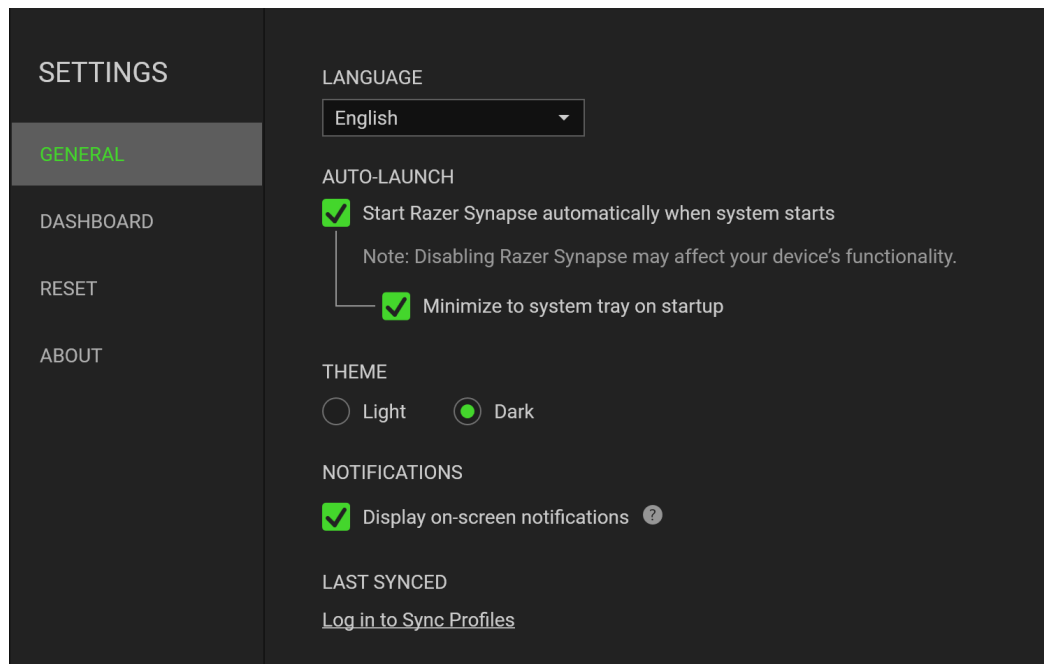

### General tab

The default tab of the Settings window. The General tab enables you to change the software's display language, start-up behavior, and display theme. You may also manually sync your profiles to the cloud (  ) or view the master guide of all connected Razer devices and installed modules.

### Reset tab

The Reset tab allows you to perform a factory reset on any connected Razer device and/or reset Razer Synapse tutorials to acquaint yourself again with Razer Synapse's new features on its next launch.

 *By resetting a Razer device, all profiles on the selected device and its on-board memory (if present) will be erased.*

### About tab

The About tab displays brief software information and copyright statement and provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

---

## 8. SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Huntsman V3 Pro Tenkeyless, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

### COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Razer Huntsman V3 Pro Tenkeyless.

1. Position your keyboard and monitor directly in front of you with your mouse next to it. Place your elbows next to your side, not too far away, and your keyboard within easy reach.
2. Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow height.
3. Keep your feet well supported, posture straight, and your shoulders relaxed.
4. While typing, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods.
6. Use the provided wrist rest to support your wrist while using your keyboard.
7. Customize the keys on your keyboard to suit your style of work to minimize repetitive or awkward motions while typing.
8. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck, and legs.

If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

## **MAINTENANCE AND USE**

The Razer Huntsman V3 Pro Tenkeyless requires minimum maintenance to keep it in optimum condition. Once a month, we recommend you unplug the device from the computer and gently clean each component using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

---

## 9. LEGALESE

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2025 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and “For Gamers. By Gamers.”, are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Huntsman V3 Pro Tenkeyless (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://razer.com/warranty).

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

### **GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.