



XS WIRELESS 1

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C1	XSW 1-908	XSW 1-ME2	XSW 1-ME3
XS WIRELESS 1						
EM-XSW 1 	•	•	•	•	•	•
NT 12-5CW 						
SKM 825-XSW 	•	○	○	○	○	○
MZQ 1 	○	•	○	○	○	○
SKM 835-XSW 						
SK-XSW 	○	○	•	•	•	•
e 908T 	○	○	○	•	○	○
ME 2-2 	○	○		○		○
ME 3-II 	○	○	○	○	○	•
CI 1-N 	○	○	•	○	○	○
2 x AA LR6 1.5 V 	•	•	•	•	•	•

Battery

- Insert battery into the back of the receiver.
- Slide the battery cover open.
- Close the battery cover.

Low Battery

Bank 1 Ch. 1
925.300 MHz

- ~ 10 h
- ~ 7 h
- ~ 3 h
- Low Batt

Setup

XLR-3 OR 6.3 mm

ME 2-2, e 908T, ME 3-II, CI 1-N

EU, US, UK, AU, CN, KOR

On/off

1s on
3s off

OR

OR

OR

OR

Bank 1 Ch. 1
925.300 MHz

Display

EM-XSW 1

Bank 1...8 Channel 0...9

Sensivity Sync Low battery

Volume

0...9

0 1 2 3 4 5 6 7 8 9

CH+ Set / Scan CH-

Mute

Audio on

Audio off

Change frequency

Automatically/Scan

1. Turn the device **Off**.
2. Press **Set/Scan** for 3s.
3. The display shows **23**.
4. Press **Set/Scan** again. A green checkmark indicates success.

Manually

Bank Channel

1. Press **Set/Scan**.
2. The display shows **13**. Press **CH+** to change the channel.
3. The display shows **23**. Press **Set/Scan**.
4. Press **Set/Scan** again.
5. A green checkmark indicates success.

Sync

Warning: Do not sync while the device is on a channel (e.g., 23). Syncing while on a channel is shown with a red 'X' and a warning triangle.

1. Turn the device **Off**. Press **Set/Scan** and **hold** it. The display shows **23**. A red 'X' indicates that syncing while on a channel is incorrect.
2. Press **Set/Scan** again. The display shows **23**. A green checkmark indicates success. The display also shows **Syn**.

OR

Bank Ch. 1 1
925.300

Bank Ch. 2 3
929.100

Sensitivity

Level

- 0 dB
- 10 dB
- 20 dB
- 30 dB

OR

10 20 30 dB

Multichannel

Bank 1...8
Ch. 0...9

max. 10 ch.

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

ME 2-2

25 cm (10")

ME 3-II

2...3 cm (1")

Min. distance

> 5 m (16'5")

SKM

Guitar pickup

> 20 cm (8")

Squelch

min. SQ

max. SQ

