

Important information

Safety

Ensure that your domestic mains supply voltage matches the voltage indicated on the identification sticker located at the back of your set. Where the mains plug, AC inlet or an appliance coupler is used as disconnect device, it shall remain readily operable.

On certain models, the light indicator is located at the side of the TV set. The absence of a light indication at the front does not mean that the TV set is fully disconnected from the mains. To disconnect the TV set completely, the mains plug must be pulled out.

The TV set's components are sensitive to heat. The maximum ambient temperature should not exceed 35° Celsius. Do not cover the vents at the back or sides of the TV set. Leave sufficient space around it to allow adequate ventilation. Install the appliance away from any source of heat (fireplace, etc.) or appliances creating strong magnetic or electric fields.

Moisture in rooms where the set is installed should not exceed 75% humidity. Moving the set from a cold place to a warm one can cause condensation on the screen (and on some components inside the TV set). Let the condensation evaporate before switching the TV set on again.

The ψ or POWER/ψ button on the TV set or the ψ button on the remote control can be used to switch it on and put it into standby mode. If you are not going to be watching the TV for a lengthy period of time, switch it off completely by removing the plug from the mains power socket.

During **thunderstorms**, we recommend that you disconnect the TV set from the mains and aerial so that it is not affected by electrical or electromagnetic surges that could damage it. For this reason, keep the mains and aerial sockets accessible so they can be disconnected, if necessary.

Unplug the TV set immediately if you notice it giving off a smell of burning or smoke. You must never, under any circumstances, open the TV set yourself, as you run the risk of an electric shock in doing so.

WARNINGS

This appliance is intended for domestic household use only and should not be used for any other application, such as for non-domestic use or in a commercial environment.

If the external flexible cable or cord of this product is damaged, it shall be replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Leave more than 10cm clearance around the television to allow adequate ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- · Only using furniture that can safely support the television set.
- · Ensuring the television set is not overhanging the edge of the supporting furniture.
- · Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- · Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Equipment without this symbol is a Class I electrical appliance. It shall be connected to a mains socket outlet with a protective earthing connection



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

TV screen

The TV screen used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects.

The TV screen is a very high technology product, giving you finely detailed pictures. Occasionally, a few nonactive pixels may appear on the screen as a fixed point of blue, green or red. This does not affect the performance of your product.

Care

Use a glass-cleaning product to clean the screen and a soft cloth and mild detergent to clean the rest of the set.

Important: Using strong detergents, alcohol-based and abrasive products may damage the screen.

Dust the vents at the back and sides regularly. Using solvents, abrasive or alcohol-based products could damage the TV set. If an object or liquid enters the appliance, unplug it immediately and have it checked by an authorized engineer. Never open the appliance yourself since this may put you at risk or damage the appliance.

ESD regulation

This apparatus meets ESD performance criteria. In case the apparatus does not recover in Ethernet connection mode due to electrostatic discharge, user interference is required.

Hanging the TV set on the wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount. For certain models, make sure to screw the hexagonal VESA wall mounting screw bosses (and screws) provided with the set into the nuts for the wall mount at the back of your set before your wall mounting.
- · The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is no danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Multi product user manual

The features described in this manual are common to most models. Some features may not be available on your TV and/or your TV may include features that are not described in this user manual. The illustrations in this manual may differ from the actual product. Please refer to the actual product.

Information for Users on Disposal of Old Equipment and Batteries [European Union]



Product



Notice:
The sign Pb below the symbol for batteries indicates that

this battery contains lead.

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at their end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2012/19/EU, 2006/66/EC and 2008/12/EC.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Business users]

If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

[Other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical equipment and batteries.

Dear Customer.

Hereby, TCL declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.tcl.eu

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Important information	
Chapter 1 - Connections	
Connect the power and antenna5	
Connect Blu-ray Disc player, HD camcorder, HD game console, PC, headphones, CI module 5	
Chapter 2 - Getting started	
Remote control functions 6	
Switch the TV on and off 7	
Initial setup	
Chapter 3 - Basic TV operations	
Accessing channels 8	
Watching connected devices 8	
Adjusting Volume 8	
Using TV settings menu 8	
Selecting menu language	
Chapter 4 - Using more of your TV	
Installing channels9	
Common interface	
Using the common interface module 9	
Accessing common interface services 9	
Using EPG (Electronic Programme Guide) 9	
Channel diagnostics	
Using subtitles	
Turning on/off subtitles	
Enabling subtitle languages on digital TV channels 10	
Selecting a subtitle type on digital TV channels 10	
Using Teletext	
Selecting decoding page language 10	
Digital Teletext language 10	
T-Link 10	
Enabling or disabling T-Link 10	
Using one-touch play 10	
Using system standby 10	
Customising the input settings 11	
Changing to shop or home mode 11	
Software update 11	
Reset shop	
Viewing pictures, playing music and watching movies from a USB storage device	


Picture	11
Music	11
Movie	11
Chapter 5 - Other information	
Password in Parental Control	13
Troubleshooting	13

Chapter 1 - Connections


Connect the power and antenna

To switch on TV after connecting power cord, press \circlearrowleft or **POWER**/ \circlearrowleft .

Note: Disconnect the power cord before connecting devices.

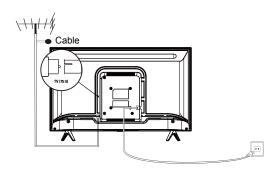

Connect Blu-ray Disc player, HD camcorder, HD game console, PC, headphones, CI module

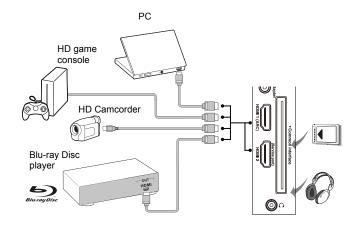


Notes:

- Not all connections available on all models.
- The positions and names of the function buttons and connectors on the TV may vary according to TV model.
- Before connecting a PC, set the PC monitor refresh rate to 60Hz.
- It is recommended to use as short as possible high quality HDMI cables to avoid possible interferences.
- ARC (Audio Return Channel) function is only supported on the HDMI port identified with ARC.
- USB connector is for data input from USB storage devices.
- All USB devices have to be directly connected to TV set without cable extenders. In case extender is required
 it has to be as short as possible and equipped with ferrite beads.

Remote control functions

 Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.



Source To select connected devices.

O Standby/quit standby.

Numeric To enter channel numbers or a digit.

buttons

ECO To turn ECO mode on or off.

Guide To toggle the Electronic Programme Guide on or off (only available for digital channels).

Menu To access the main menu; to return to the previous menu.

Exit To exit the menu or Teletext.

▲ ▼ To navigate in the main menu; to select menu options; to switch to the previous or next photo, song or video in USB function.

◆ To navigate in the main menu; to set functions and change values. ▶

/*Zoom+/- can also be used to open the corresponding submenu.

* To select the picture format.

Note: You are recommended to use the full screen mode. Do not use the display mode with black bars on both sides of the picture (such as 4:3) for a long time, otherwise the TV screen may be damaged permanently.

OK To open the corresponding submenu and activate a setting in menus; to freeze/unfreeze the picture in digital TV mode.

Option To display the function menu to perform certain operations; to display the Teletext menu in Teletext page.

Return To return to the previous channel or menu.

V+/- To control the volume.

Info To display programme information, if available.

Mute To switch the sound off and back on.

P+/- To change channels.

TEXT To toggle Teletext on or off.

SUBTITLE To select a subtitle language available for selected digital TV programme.

LIST To display channel list.

TV To access TV mode.

Colour To select tasks or Teletext pages.

buttons

Lang To select an audio language available for selected digital TV programme.

Note: The remote control type may be changed without notice.

Important:

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like. Remove batteries when the remote control is not to be used for a long time. Batteries left in equipment may cause damage through deterioration and corrosive leakage, invalidating the guarantee.

To protect the environment use local recycling facilities for battery disposal. Dispose of used batteries according to the instructions.

CAUTION: Risk of explosion if batteries are replaced by an incorrect type. Replace only with the same or equivalent type recommended by the equipment manufacturer.

If the batteries in your remote control are run down, you can use the buttons on your TV set. They have the following functions:

1. ≡/്യ button

Turns the TV on from the standby mode. In TV mode, press to display the main menu. In menu mode, long press for 2 seconds to confirm a selection (acts like the **OK** button on the remote). When the TV is on, long press for 2 seconds to open or close the source list directly; long press for more than 3 seconds to turn off the TV.

2. **∢** ➤ button

Decreases or increases the volume. In menu mode, they act like the **◄/►** buttons on the remote and adjust menu controls. (*Note: In some menus*, **►** also acts like the **OK** button on the remote.)

3. ▲ ¥ button

Scans up or down through the channel list. In menu mode, they act like the ▲/▼ buttons on the remote and adjust menu controls.

Switch the TV on and off

- 1. When the power cord is connected, the TV will be turned on directly or be in standby mode. If the TV is in standby mode, press the Φ or **POWER**/Φ button on the set or the Φ button on the remote control to turn it on.
- 2. To put the TV into standby mode, press the \circlearrowleft button on the remote control. The TV set remains powered up, but with low energy consumption.
- 3. To switch the TV off, unplug the mains plug from the mains outlet.

Initial setup

The first time you switch the set on, the **Hello** screen appears, which guides you through the initial setup process. Follow the on-screen instructions to finish the initial setup process such as selecting the language, scanning channels, and more. During each step, either make a choice or skip the step. If you skip a step, you can perform the setup later from the settings menu.

Note: If the channel search retrieved only the analogue channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

Accessing channels

Using the numeric buttons: press the corresponding numeric buttons on the remote control to access the channels

Using the P+/- buttons: press the **P+/-** buttons on the remote control or the corresponding buttons on the TV set to scroll through the channels.

Using the LIST button: press the LIST button on the remote control to display the channel list and press ▲/▼ to select the channels, then press OK to confirm.

Watching connected devices

Select connected devices via three ways below:

- Press Menu to display the main menu, press
 ▲/▼/◄/▶ to select the input source, then press
 OK to enter.
- Press Source to display the Input Source menu, press ▲/▼ and OK to select the input source.
- You can also press the corresponding buttons on the TV set to scroll through TV and other input sources.

Press Source again or Exit to close the menu.

Adjusting Volume

Volume control: press the **V+/-** buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the **Mute** button to temporarily mute the sound. Press this button again or the **V+** button to restore it.

Using TV settings menu

Allows you to adjust TV settings, such as picture and sound.

- 1. Press Menu to display the main menu.
- Press ▲/▼/◄/► to select Settings and press OK to display the Settings menu.
- Press ▲/▼ to select the desired item, then press OK/► to enter the corresponding submenu.
- In submenus, press ▲/▼ to select menu options, then press OK/► to enter the option list, the adjustment interface, or the corresponding submenu.
- 5. Press Return to go back to the previous menu.
- 6. Press Exit to close the menu.

Note: You can also press the **Option** button on the remote control to select **Settings** and press **OK** to enter the Settings menu. Some options may not be available for certain signal sources.

Selecting menu language

Allows you to select your preferred menu language.

- 1. Press Menu to display the main menu.
- Press ▲/▼/◄/▶ to select Settings and press OK, use ▲/▼ to select System, and press OK/▶ to enter.
- Select Menu language and press ▲/▼ to select your desired language, then press OK to confirm.
- 4. Press Exit to close the menu.

Chapter 4 - Using more of your TV

Installing channels

This section describes how to search and store channels automatically. This may be done in any of the cases below:

- you have skipped the channel installation step in the initial setup;
- you are prompted that there are no channels in TV mode:
- you want to update your channels.
- In TV mode, press Menu to display the main menu, use ▲/▼/◄/► to select Settings and press OK. Press ▲/▼ to select Channel > Channel scan, then press OK/► to enter.
- 2. The TV installs and arranges channels according to your country. Press ▲/▼ to select Country, and press OK/▶ to enter. Enter the default password 1234 or your own password in case you have changed the password in the Settings > Lock > Change password menu. Press ▲/▼ to select your country and press OK to confirm.
- Press ▲/▼ to select Automatic search and press OK/► to enter.
- Press ▲/▼ to select Tuner mode and press ◄/►
 to select Antenna, Cable or Satellite. (Note:
 Satellite option may not be available for certain
 models.)
- 5. Press **▲/▼** to select other options to configure.
- After configuration is completed, press ▼ to select Search and press OK to start scanning channels.
- 7. The search may take a few minutes. After the automatic search, channels are arranged in a preset order. If you wish to skip channels or set up your favorite channels, press the Menu button on the remote control, then press ▲/▼/◄/➤ to select Settings > Channel > Channel organizer and press OK/➤ to enter.

Common interface

Encrypted digital TV channels can be decoded with a common interface module and a card provided by a digital TV service operator.

The common interface module may enable several digital services, depending on the operator and services you choose (for example, pay TV). Contact your digital TV service operator for more information about services and terms.

Using the common interface module

WARNING: Switch off your TV before inserting a common interface module. Be sure to follow the instructions described below. Wrong insertion of a common interface module may damage both the module and your TV.

- Following the directions printed on the common interface module, gently insert the module into the common interface slot on the TV.
- 2. Push the module in as far as it will go.
- Turn on the TV and wait for the common interface function to be activated. This may take several minutes.

Note: Do not remove the common interface module from the slot. Removing the module will deactivate the digital services. This TV set has passed CI+ certification. It is recommended that you use a common interface module marked with CI+.

Accessing common interface services

After inserting and activating the common interface module, press **Menu** on the remote control, select **Settings > Channel > Common interface** and press **OK/▶** to enter.

This menu option is only available if the common interface module is correctly inserted and activated. On-screen applications and content are provided by your digital TV service operator.

Using EPG (Electronic Programme Guide)

EPG is an on-screen guide that displays scheduled digital TV programmes. You can navigate, select and view programmes.

- Press Menu on the remote control, select Settings > Channel > EPG and press OK/► to enter, or press Guide on the remote control, the Programme Guide menu will appear, which allows you to get information about the current or next programme playing on each channel. Navigate through the different programmes using the ▲/▼/◄/► buttons on the remote control.
- 2. Use the related buttons shown on the screen to view EPG.
 - Info: press the green button to view the related information.
 - Schedule: press the yellow button to view your schedule list. Press the yellow button again to return to the previous menu, press the red button to delete the channel from the schedule list.
 - Remind: press the blue button to access Set a reminder menu, use ▲/▼ to select a reminder and press OK to confirm. Use ◄/► to set a customized reminder.
- 3. Press Guide or Exit to exit EPG.

Channel diagnostics

1. Press Menu on the remote control, then select

Settings > Channel > Channel diagnostics.

 Press OK/► to display the signal information on the current digital channel, such as signal strength, frequency, etc.

Using subtitles

You can enable subtitles for each TV channel. Subtitles are broadcast via Teletext or DVB-T/DVB-C digital broadcasts. With digital broadcasts, you have the additional option of selecting a preferred subtitle language.

Turning on/off subtitles

- Press Menu on the remote control, select Settings > Channel > Subtitle and press OK/► to enter.
- Select the Subtitle option, press OK/► to enter, press ▲/▼ to select On or Off and press OK to confirm.
- 3. Press Exit to close the menu.

Enabling subtitle languages on digital TV channels

- Press Menu on the remote control, select Settings > Channel > Subtitle > Digital subtitle language 1st and press OK/▶ to enter.
- Press ▲/▼ to select a subtitle language as your preferred language and press OK to confirm.
- Press ▲/▼ to select Digital subtitle language 2nd and press OK/► to enter.
- Press ▲/▼ to select a secondary subtitle language and press OK to confirm.
- 5. Press Exit to close the menu

Selecting a subtitle type on digital TV channels

- Press Menu on the remote control, select Settings > Channel > Subtitle > Subtitle type and press OK/▶ to enter.
- Press ▲/▼ to select a subtitle type and press OK to confirm. You can select Hearing impaired to display the hearing impaired subtitles with your selected language.
- 3. Press Exit to close the menu.

Using Teletext

Selecting decoding page language

 Press Menu on the remote control, select Settings > Channel > Teletext > Decoding page language and press OK/► to enter.

- Press ▲/▼ to select a proper type of language in which Teletext will display and press OK to confirm
- 3. Press Exit to close the menu.

Digital Teletext language

On digital TV channels, depending on the broadcaster, you may be able to enjoy a service with multiple initial Teletext pages in different languages. This function allows you to select an available language as primary language, which relates to different initial Teletext pages.

- Press Menu on the remote control, select Settings > Channel > Teletext > Digital teletext language and press OK/► to enter.
- Press ▲/▼ to select a language and press OK to confirm.
- 3. Press Exit to close the menu.

T-Link

Use this function to search for CEC devices connected to the HDMI sockets in your TV and enable one-touch play and one-touch standby between CEC devices.

Enabling or disabling T-Link

- Press Menu on the remote control, select Settings > System > T-Link and press OK/▶ to enter.
- Press ▲/▼ to select T-Link and press OK/► to enter.
- Press ▲/▼ to select On or Off and press OK to confirm.
- 4. Press Exit to close the menu.

Using one-touch play

With one-touch play, pressing the play button on (for example) your DVD remote control starts playback on your DVD device and automatically switches your TV to the correct source, displaying DVD content.

Using system standby

With system standby, pressing the \oplus button on (for example) your TV remote control switches your TV and all connected HDMI devices to standby mode.

Notes:

- The CEC functions depend on the devices connected and it is possible that some devices may not interoperate correctly when connected to this TV. The user manual or the manufacturer of the problematic devices should be consulted for further information.
- You can also press the Option button on the remote control to access T-Link.

Customising the input settings

You can configure your TV according to the equipment you connect to it.

- Press Menu on the remote control, select Settings > System > Input settings and press OK/► to enter.
- Press ▲/▼ to select a connector your equipment is connected to, press OK/► to enter.
- Press ▲/▼ to select the type of apparatus attached to this connector, and press OK to confirm
- Press Exit to close the menu.

After configuring, the selected source label will be displayed after the name of the related connector in the input source list when pressing **Source** on the remote control or in the main menu when pressing **Menu** on the remote control.

Changing to shop or home mode

- Press Menu on the remote control, select Settings > System > Location and press OK/► to enter.
- Press ▲/▼ to select your location Shop or Home, and press OK to confirm.
- 3. Press Exit to close the menu.

Note: According to the regulation of European Commission 2009/125/EC, in Home mode, TV will be put into standby mode automatically if there is no operation in 4 hours. Select Settings > Time > Auto Standby to deactivate this feature.

Software update

Use this function to update the software.

- Press Menu on the remote control, select Settings > System > Software update and press OK/>
 to enter.
- Press ▲/▼ to select your desired way to update the software and press OK/▶ to start.

Reset shop

Allows you to reset the TV to factory default settings.

- Press Menu on the remote control, select Settings > System > Reset shop and press OK to enter.
- 2. Use the numeric buttons to enter the password.
- 3. Press **◄/▶** to select **OK** and press **OK** to start.
- **4.** The **Hello** screen appears. Follow the on-screen instructions.

Viewing pictures, playing music and watching movies from a USB storage device

Your TV is fitted with USB connectors that enable you to view photos, listen to music or watch videos stored on a USB drive.

Supported file formats:

Picture JPEG, PNG, BMP, GIF.

Music MP3

Movie H.265, H.264, MPEG1/2/4, VC1, AC3,

AAC, HEAAC, LPCM.

Notes:

- Some USB keys and USB products like digital cameras or mobile phones are not fully compatible with USB 2.0 standard so they may not work with the TV multimedia player. Not all USB keys or devices are compatible with the USB function. Not all above formats are recognised. The encoding formats of your files will determine whether or not they can be used.
- Format H.265 may not be available for certain models

To enter the **Media** menu, press **Source** on the remote control and select **Media**.

Picture

Use this function to display photos, if available.

- 1. Select Media > Picture, then press OK to enter.
- After selecting the proper disk, press OK to enter, then use ▲/▼/◄/► to select a photo.
- Press OK to watch, a slide show begins from the selected photo. Press OK to pause. Press Menu to display the photo menu. You can play, pause or rotate the photo, select different play modes and display effects, etc.

Music

Use this function to play music, if available.

- Select Media > Music, then press OK to enter.
- After selecting the proper disk, press OK to enter, then use ▲/▼/◄/► to select a song.
- Press OK to play, and automatic playback begins from the selected song. Press Menu to display the music menu. You can play or pause the song, select different play modes, etc.

Movie

Use this function to watch videos, if available,

- 1. Select Media > Movie, then press OK to enter.
- After selecting the proper disk, press OK to enter, then use ▲/▼/◄/► to select a video.
- 3. Press **OK** to watch, and automatic playback begins from the selected video. Press **Menu** to

display the video menu. You can play or pause the video, select different play modes, screen modes and preset picture settings, etc.

Chapter 5 - Other information

Password in Parental Control

- The default password is 1234. You can change it to
- The super password is 0423. If you forget your code, enter the super password to override any existing codes.

Troubleshooting

Please check the following list before requesting service.

There is no picture or sound.

- · Make sure the power cord is properly inserted in the power outlet.
- · Make sure the source type is set correctly.
- Make sure the antenna is properly connected.
- Make sure the volume is not set to minimum or the sound is not set to mute.
- Make sure the headphones are not connected.
- The TV may be receiving a signal other than from TV broadcasting stations.

Picture is not clear.

- Make sure the antenna cable is properly connected.
- Consider whether your TV signal is being properly received.
- · Poor picture quality can occur due to a VHS camera, camcorder, or other peripheral being connected at the same time. Switch off one of the other peripherals.
- The 'ghost' or double image may be caused by obstruction to the antenna due to high-rise buildings or hills. Using a highly directional antenna may improve the picture quality.
- · The horizontal dotted lines shown on the pictures may be caused by electrical interference, e.g., hair dryer, nearby neon lights, etc. Turn off or remove these

Picture is too dark, too light or tinted.

- · Check the colour adjustment.
- · Check the brightness setting.
- · Check the sharpness function.

Remote control does not work.

- Check the batteries of the remote control.
- Make sure the remote sensor window on the TV front is not under strong fluorescent lighting.
- Try to clean the remote sensor window on the TV front with a soft cloth.

If the above suggestions do not solve your technical issue, please refer to the warranty card for service information.

Operating Conditions

Temperature 5°C - 35°C (41°F - 95°F) Humidity 20 - 75% (non-condensing)

Storage Conditions

Temperature -15°C - 45°C (5°F - 113°F) Humidity 10 - 90% (non-condensing)

OSS Notice

To send inquires and requests for questions regarding open source, contact nearest TCL office.

This product uses the GPL (Version 2 and 3) and LGPL (version 2.1) and MPL (version 1.1).

This product uses some software programs which are distributed under the Independent JPEG Group.

This product uses some software programs which are distributed under the libpng Project.

This product uses some software programs which are distributed under the Freetype Project.

This product uses some software programs which are distributed under the zlib Project.

This product uses some software programs (curl, cares, xml2, pixman, iniparser, fastlz) which are distributed under the MIT.

This product uses opensl, xerces which is distributed under SSLeay and OpenSSL.

GPL software: Linux Kernel, iconv

LGPL software: DFB (DirectFB), glib, alsa, neon,

pango, qt, glibc, uclibc

BSD software: webp, mng, uriparser