

TP-LINK®

User Guide

TL-WPA4220 AV600 Powerline Wi-Fi Extender



COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. **TP-LINK®** is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2016 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

<http://www.tp-link.com>

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF Exposure Information

This device meets the EU requirements (1999/5/EC Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

Safety Information

- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.

Explanation of the symbols on the product label

| Symbol | Explanation |
|---|---|
|  | Indoor use only |
|  | AC voltage |
|  | <p>RECYCLING</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p> |

DECLARATION OF CONFORMITY

For the following equipment:

Product Description: **AV600 Powerline Wi-Fi Extender**

Model No.: **TL-WPA4220**

Trademark: **TP-LINK**

We declare under our own responsibility that the above products satisfy all the technical regulations applicable to the product within the scope of Council Directives:

Directives 2004/108/EC, Directives 2006/95/EC, Directives 2011/65/EU

Directives 1999/5/EC, Directives 1999/519/EC

The above product is in conformity with the following standards or other normative documents

EN 55022: 2010 + AC: 2011

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

EN 50412-2-1: 2005

EN 62311: 2008

EN 300 328 V1.8.1

EN 301 489-1 V1.9.2 & EN 301 489-17 V2.2.1

The product carries the CE Mark:



Person responsible for making this declaration:

A handwritten signature in black ink, appearing to read 'Yang Hongliang', is written over a light gray rectangular background.

Yang Hongliang

Product Manager of International Business

Date of issue: 2016-02-25

TP-LINK TECHNOLOGIES CO., LTD.

Building 24 (floors 1, 3, 4, 5), and 28 (floors 1-4) Central Science and Technology Park, Shennan Rd,
Nanshan, Shenzhen, China

Important Safety Instructions

1. Do not open this product or attempt to service it; it may expose you to dangerous high voltage or other risks.
2. Do not operate this product near water.
3. Do not place or operate this product near a radiator or a heat register.
4. Do not expose this product to dampness, dust or corrosive liquids.
5. Do not connect this product or disconnect it from a wall socket during a lightning or a thunderstorm.
6. Do not block the ventilation slots of this product, for insufficient airflow may harm it.
7. Do not put anything on this product.
8. Plug this product directly into a wall socket (100-240V~, 50/60Hz). Do not use an extension cord between this product and the AC power source.
9. When plugging this product into a wall socket, make sure that the electrical socket is not damaged, and that there is no gas leakage.
10. Place the connecting cables properly so that people won't stumble or walk on it.
11. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult the qualified technician.
12. Unplug this product from the mains and refer the product to qualified service personnel for the following conditions:
 - If liquid has been spilled on the product
 - If the product has been exposed to rain or water
13. Unplug this product from the wall socket before cleaning. Use a damp cloth for cleaning. Do not use liquid cleaners or aerosol cleaners.
14. The specification of the fuse is **T4AL250V**. To avoid damage, please do not change the fuse.
15. The Operating temperature is 0°C~40°C (32°F~104°F). The Storage temperature is -40°C~70°C (-40°F~158°F).

CONTENTS

| | |
|---|----------|
| Chapter 1 Introduction | 1 |
| 1.1 System Requirement | 1 |
| 1.2 Conventions | 1 |
| 1.3 Physical Interface | 2 |
| 1.4 LED Indicator | 2 |
| Chapter 2 Hardware Connection | 4 |
| 2.1 Before You Begin | 4 |
| 2.2 Plug and Play | 4 |
| 2.3 Wi-Fi Clone Button for Super Range Extension..... | 7 |
| Chapter 3 Configure the Device | 9 |
| 3.1 Login..... | 9 |
| 3.1.1 For Wired Connection..... | 9 |
| 3.1.2 For Wireless Connection | 10 |
| 3.2 Status | 12 |
| 3.3 Network | 13 |
| 3.4 Wireless | 13 |
| 3.4.1 Wireless Settings | 14 |
| 3.4.2 Wireless Security | 15 |
| 3.4.3 Wireless MAC Filtering | 18 |
| 3.4.4 Wireless Advanced | 20 |
| 3.4.5 Wireless Statistics | 21 |
| 3.5 Powerline | 22 |
| 3.5.1 Network Settings | 22 |
| 3.5.2 Station Settings | 22 |
| 3.6 System Tools | 24 |
| 3.6.1 Firmware Upgrade | 24 |
| 3.6.2 Factory Defaults | 25 |
| 3.6.3 Backup & Restore | 26 |
| 3.6.4 Reboot | 26 |
| 3.6.5 Password | 27 |
| 3.6.6 System Log | 27 |

| | |
|--|-----------|
| Chapter 4 Connecting to Wireless Network | 29 |
| 4.1 In Windows 7..... | 29 |
| 4.2 In Windows Vista..... | 31 |
| 4.3 In Windows XP | 33 |
| 4.4 In Windows 8 or Windows 10..... | 33 |
| Chapter 5 Pair Button and Reset Button | 36 |
| 5.1 Pair (Secure with 128 bits-AES)..... | 36 |
| 5.2 Setting Up a Powerline Network with the Pair Button..... | 36 |
| 5.3 Reset..... | 37 |
| Appendix A: Troubleshooting Guide | 38 |
| Appendix B: Specifications | 39 |

Chapter 1 Introduction

Congratulations on your purchase of this outstanding AV600 Powerline Wi-Fi Extender. This device is not only a 600Mbps powerline Ethernet adapter which transforms your house's existing electrical wiring into a ubiquitous networking infrastructure, but also a 300Mbps Wi-Fi Access Point which creates a wireless network allowing for greater range and mobility.

As a powerline Ethernet adapter, it uses the existing power lines installed in a home as a path to transmit digital data, voice, audio and video between devices. Simply plug this AV600 Powerline Wi-Fi Extender into an ordinary AC power outlet, and then your Cable/xDSL broadband connection or existing Ethernet (LAN) network can be easily extended to any other electrical outlet on the same electrical circuit of a house. With powerline data rates of 600Mbps, full multimedia application can easily be supported throughout the whole house.

As a Wi-Fi Access Point, it can transmit wireless data at the rate of up to 300Mbps. With multiple protection measures including SSID broadcast control, wireless LAN WEP encryption, and Wi-Fi Protected Access (WPA2- PSK, WPA-PSK), the device delivers complete data privacy.

It supports an easy, Web-based management utility. Even though you may not be familiar with the device, you can easily configure it with the help of this Guide. The adapter adds three new functions which are found to be useful.

1. Connection with a new unassociated device via the **Pair** button.
2. Reset to default settings via the **Reset** button.
3. Wi-Fi Clone via **Wi-Fi Clone** button.

1.1 System Requirement

- a) At least two power outlets (100-240V~, 50/60Hz) with standard home power wiring
- b) A computer with the following:
 - Operating System of Windows XP/Vista/7/8/10
 - Operating System with TCP/IP installed
 - Pentium III compatible processor and above
 - Ethernet LAN card installed with TCP/IP protocol
 - 64 MB RAM or more
 - 50 MB of free disk space (Minimum)

1.2 Conventions


The extender, or TL-WPA4220, or device mentioned in this User Guide stands for TL-WPA4220 AV600 Powerline Wi-Fi Extender without any explanations.

Parameters provided in the pictures are just references for setting up the product. They may differ from the actual situation.

You can set the parameters according to your demand.

1.3 Physical Interface

There are four physical items on this device.

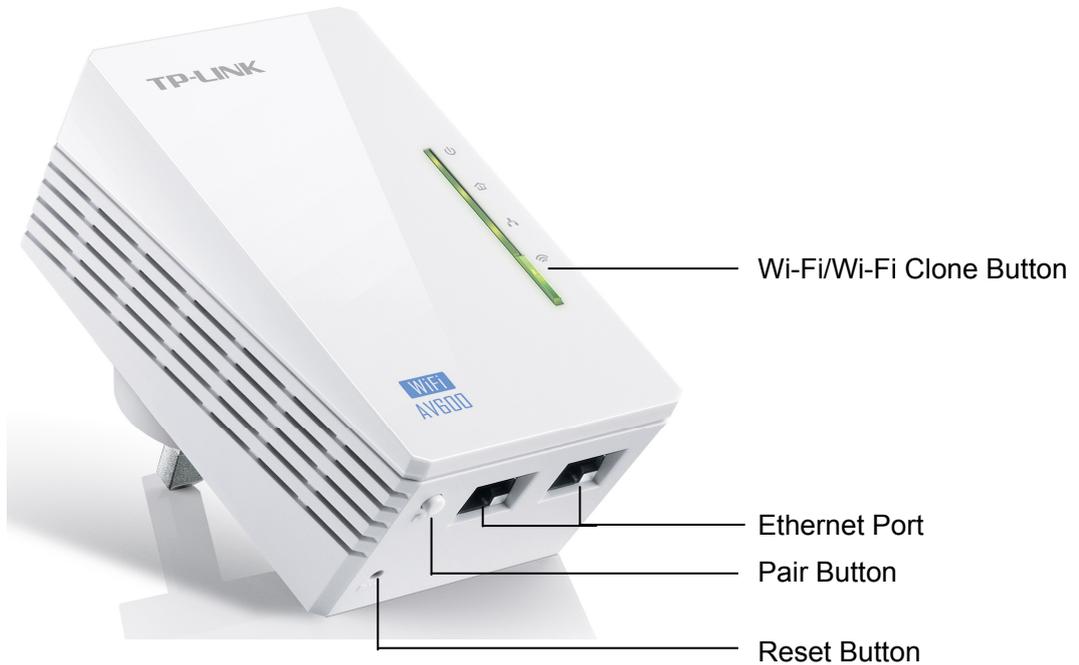

| Item | Description |
|--------------------------|---|
| Wi-Fi/Wi-Fi Clone Button | Press the button for 2 seconds to start Wi-Fi Clone. Press the button for 5 seconds to enable or disable the wireless function. |
| Ethernet Port | Two 10/100Mbps Ethernet port connected to PC LAN card or broadband device. |
| Reset Button | Press the button for about 5 seconds, the device will restore to its factory defaults. |
| Pair Button | Press the button for 1 second to start the pairing process. Press and hold the button for 10 seconds to leave the powerline network. |

Note:

For detailed information about the Reset button and Pair button, please refer to [Chapter 5 Pair Button and Reset Button](#).

1.4 LED Indicator

The LED indicator displays information about the device's status.




| LEDs | Name | Status | Indication |
|---|-----------------------|----------|--|
|  | Power LED | On/ Off | The device is on or off. |
| | | Blinking | Once every second: Pairing is in process. Once every 15 seconds: Power-Saving Mode is on. (Powerline adapter only). |
|  | Powerline LED | On | The device is connected to the powerline network. |
| | | Off | The device is not connected to any powerline network or is in Power-Saving Mode. |
|  | Ethernet LED | On | The Ethernet port is connected. |
| | | Off | The Ethernet port isn't connected. |
|  | Wi-Fi/Wi-Fi Clone LED | Blinking | Rapidly: The Wi-Fi is working properly. |
| | | | Once every second: Wi-Fi cloning is in process. |
| | | Off | The Wi-Fi is disabled. |

Chapter 2 Hardware Connection

2.1 Before You Begin

Please read this User Guide carefully before installing and using the equipment. The operating distance or range of your wireless connection varies significantly based on the physical placement of the powerline extender. Factors that can weaken signals by getting in the way of your network's radio waves are metal appliances or obstructions, and walls. Typical ranges vary based on the types of materials and background RF (radio frequency) noise in your home or office.

This equipment can only be used in the below direction.

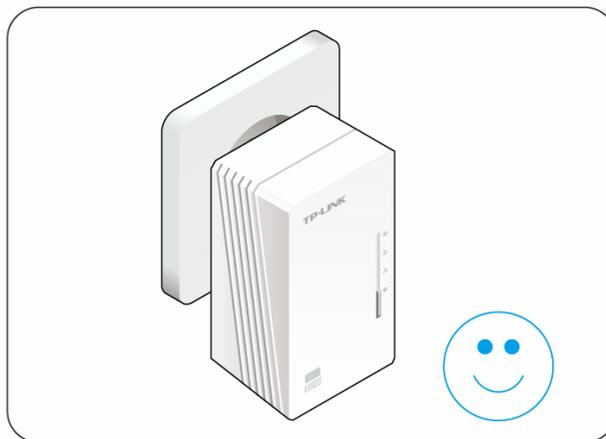

For best performance of your wireless network, you are suggested to place your powerline extender:

- 1). Near the center of the area in which your wireless stations will operate.
- 2). In an elevated location such as a high shelf.
- 3). Away from the potential sources of interference, such as PCs, microwaves, and cordless phones.
- 4). Away from large metal surfaces.

Failure to follow these guidelines can result in significant performance degradation or inability to wirelessly connect to the powerline extender.

Note:

Take notes that this AV600 Powerline Wi-Fi Extender works in pairs or with another powerline adapter. You need to plug the powerline extender into a power outlet; you will also need another powerline extender or powerline Ethernet adapter connected to your Cable/xDSL broadband (Ethernet port) in order to extend your broadband connection or Internet surfing. With clean powerline, the distance between two powerline Ethernet adapters can reach 300 meters, but the actual distance may vary due to the environment.

Section below describes the AV600 Powerline Wi-Fi Extender's LED indicators, physical interface and hardware connection mechanism.

2.2 Plug and Play


Please first make sure that your PC can successfully access the Internet via the router. Then connect the powerline devices by following the instructions below.

Step 1: Connecting to the Internet

This section describes how to connect the powerline extender into your existing network. Follow the procedures described below:

1. Connect one end of an Ethernet (RJ45) cable to the Ethernet port of the powerline extender or a compatible powerline adapter like TL-PA4010.
2. Connect the other end of the Ethernet (RJ45) cable to an available Ethernet port of your wireless router.
3. Plug the powerline extender or powerline adapter into a wall socket.
4. Check and confirm the LEDs status. (The Power LED and Ethernet LED on the powerline device should be **ON**.)

The hardware connection mechanism is shown below:

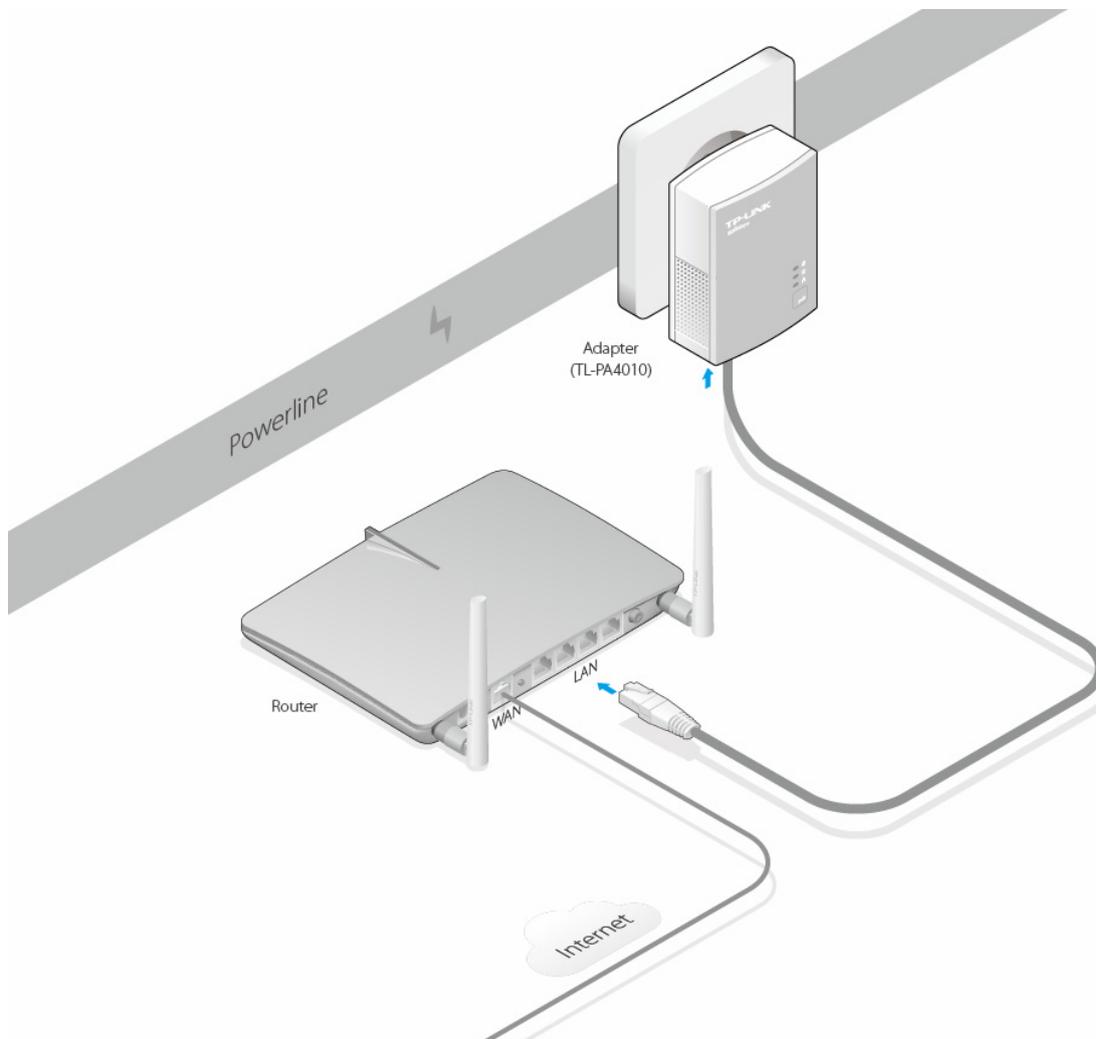

Note:


Do not connect the powerline extender or powerline adapter to an extension lead, power strip, extension cord, or surge protector, as these may degrade the network performance.

Step 2: Connecting the Computer


Following are the steps to properly connect the powerline extender to your computer:

1. Connect one end of the provided Ethernet (RJ45) cable to the powerline extender's Ethernet port.
2. Connect the other end of the Ethernet (RJ45) cable to your computer's LAN port.
3. Plug the powerline extender into a wall socket.
4. Turn on your computer.
5. Check and confirm that the Power LED and Ethernet LED on the powerline extender are **ON**.

The hardware connection mechanism is shown below:

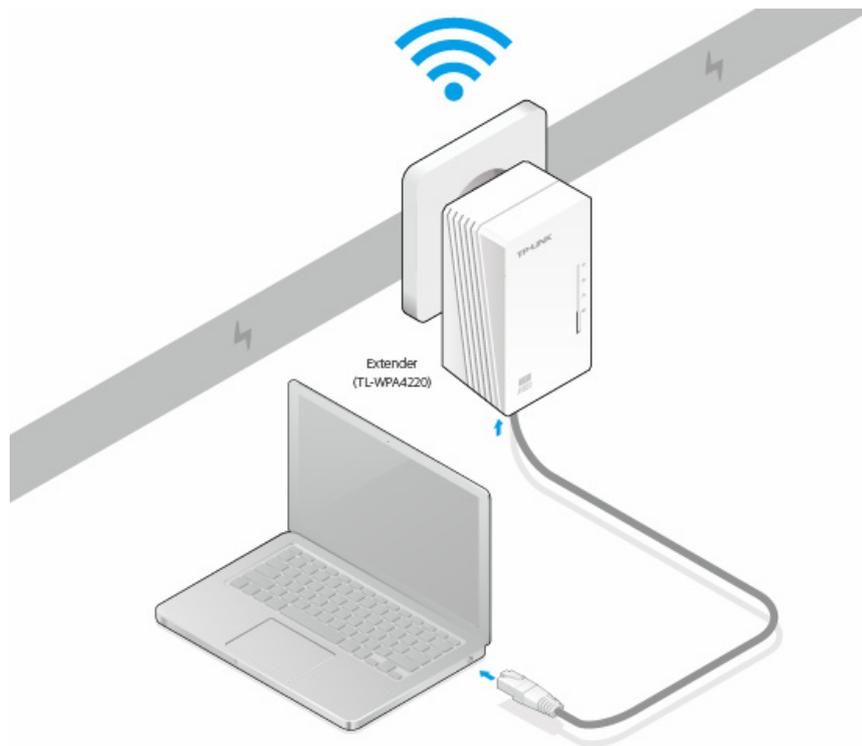

As soon as the powerline devices are connected following the steps above, wait until the powerline LED turns on and a powerline network is available.

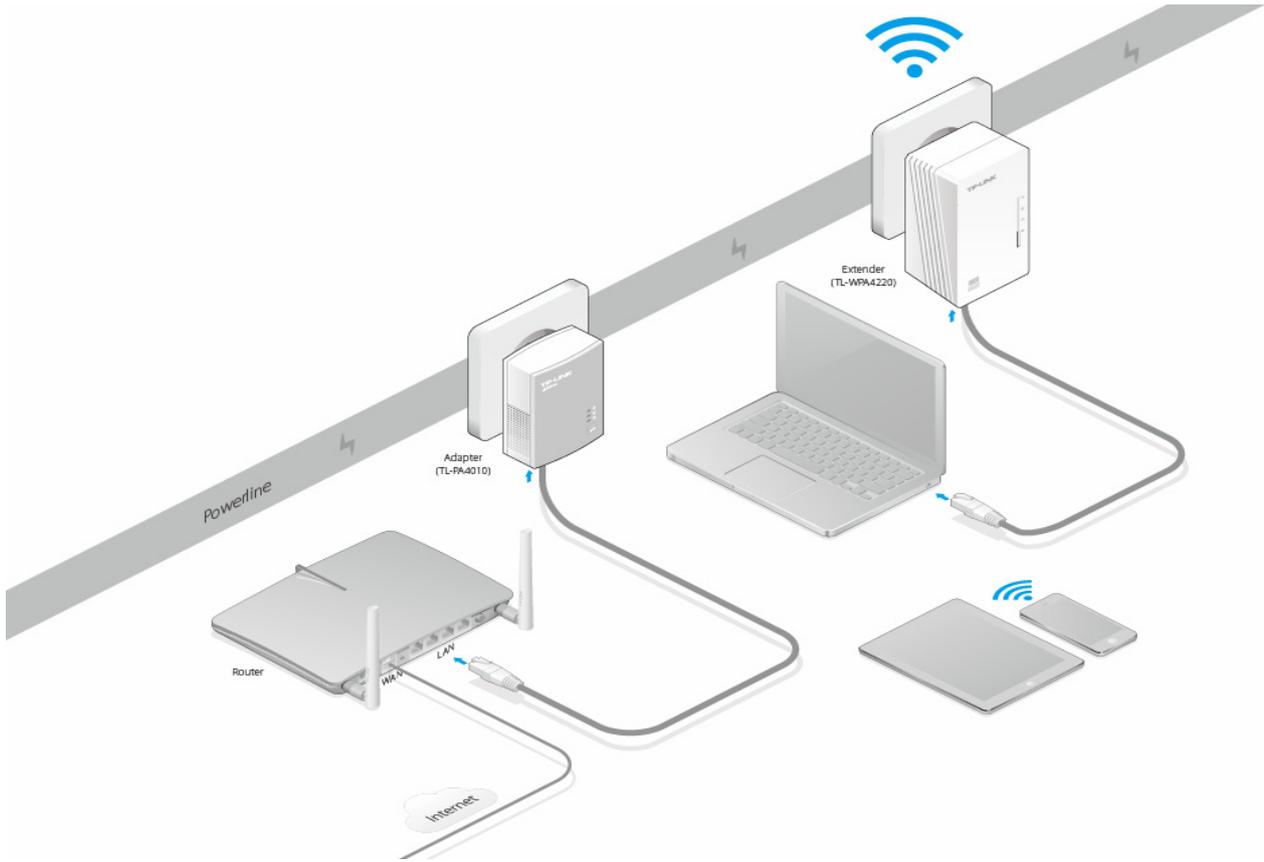

2.3 Wi-Fi Clone Button for Super Range Extension

Wi-Fi Clone button is used for copying the wireless settings (including SSID and wireless password) from the front wireless router.

Wi-Fi Clone Steps:

Before taking the steps below, please make sure the current wireless password of the front router isn't the default value.



1. Press the WPS button on the router for 2 seconds. (Here we take TP-LINK router as an example.)

2. Press the Wi-Fi Clone button on the extender for 2 seconds. The extender will reboot later.

* It's recommended that you plug the extender near the router to use Wi-Fi Clone button.

After Wi-Fi Clone:

A unified wireless network is established. The SSID and wireless password of the powerline extender will be the same as the wireless router.

 **Note:**

If you want to establish a secure and separate wireless network from the wireless router, please refer to [3.4.2 Wireless Security](#) to set a different SSID and password for your powerline extender.

Chapter 3 Configure the Device

This Chapter describes how to configure your powerline extender via the web-based management page. The AV600 Powerline Wi-Fi Extender is easy to configure and manage with the Web-based management page, which can be launched on any windows, Macintosh or UNIX OS with a web browser (Internet Explorer, Netscape® Navigator, Firefox, Safari, Opera or Chrome).

3.1 Login

3.1.1 For Wired Connection

If your computer is connected to the extender via Ethernet cable, you can log in the extender by following the steps below:

1. Obtain the Management Utility setup file from the product support page at <http://www.tp-link.com>.
2. Open the .exe file and click **Connect** to log in to the Web-based management utility.

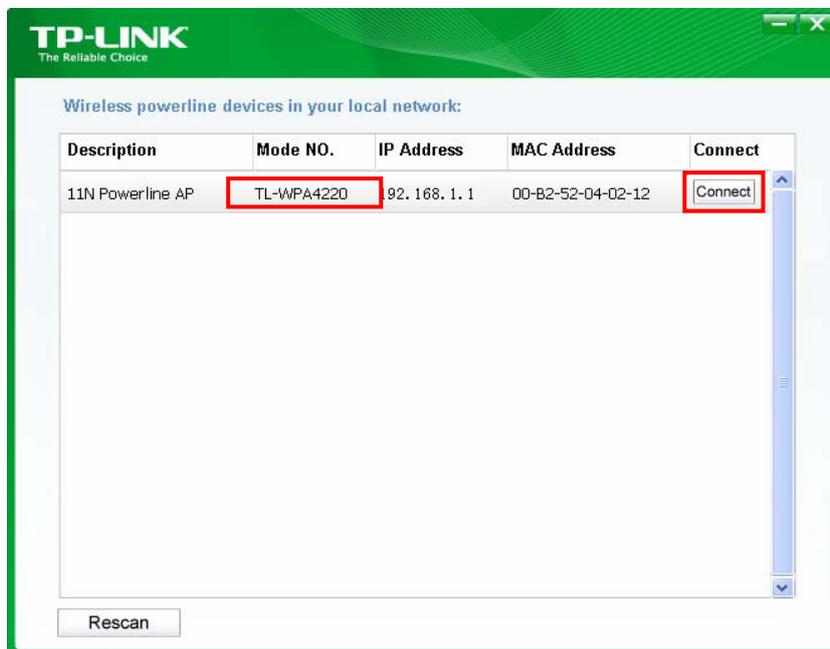


Figure 3-1 Management Utility

 **Note:**

If another TL-WPA4220 is displayed on the screen above and you cannot decide which model is the one you are configuring, please refer to the MAC address under MAC Address column. The device's MAC address can be found on the label at the bottom of the device.

3. Enter **admin** for the User name and Password (both in lower case letters) in the screen below. Then click **OK** or press Enter.



Figure 3-2 Login Window

Note:

If the above screen does not prompt, it means that your web-browser has been set to a proxy. Go to **Tools > Internet Options > Connections > LAN Settings**, in the screen that appears, deselect the **Using Proxy** checkbox, and click **OK** to finish it.

3.1.2 For Wireless Connection

If your device is connected to the extender via wireless, you can log in the extender by following the steps below:

1. Launch a web-browser and type in the default domain name <http://tplinkplclogin.net> in the address field.



Figure 3-3 Log into the Powerline Extender

2. Enter **admin** for the User name and Password (both in lower case letters) in the screen below. Then click **OK** or press Enter.

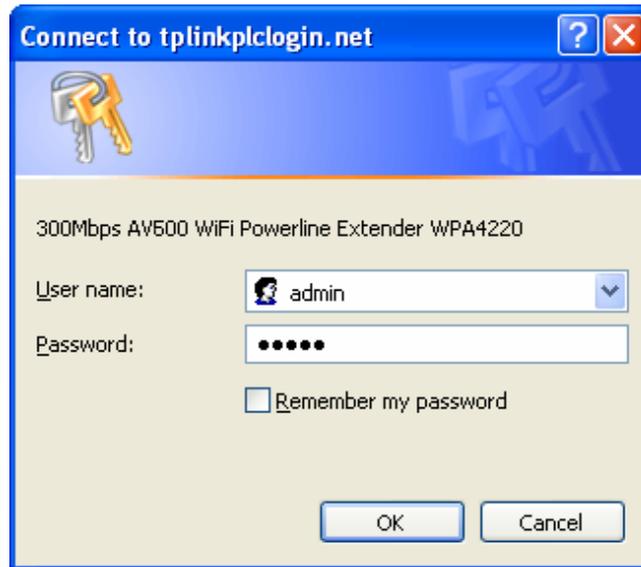


Figure 3-4 Login Windows

 **Note:**

If the above screen does not prompt, it means that your web-browser has been set to a proxy. Go to **Tools > Internet Options > Connections > LAN Settings**, in the screen that appears, deselect the **Using Proxy** checkbox, and click **OK** to finish it.

After a successful login, you can configure and manage the device. There are five main menus on the leftmost column of the Web-based management page: **Status**, **Network**, **Wireless**, **Powerline** and **System Tools**. Submenus will be available after clicking one of the main menus. On the right of the Web-based management page lays the detailed explanations and instructions for the corresponding page.

3.2 Status

The **Status** page displays the powerline extender’s current status and configuration. All information is read-only.

| Status | |
|--------------------------|---|
| Firmware Version: | 1.2.8 Build 140401 Rel.49960n MAC-QCA7420-1.1.0.844-01-20120919-FINAL PIB_422011_140304_002 |
| Hardware Version: | WPA4220 v1 08EF4015 |
| Powerline | |
| MAC Address: | A4-2B-B0-BA-AF-29 |
| Device Password: | MUSS-KWWB-EZWO-CIWK |
| Network Name: | HomePlugAV |
| Network | |
| MAC Address: | A4-2B-B0-BA-AF-28 |
| IP Address: | 192.168.1.1 |
| Subnet Mask: | 255.255.255.0 |
| Wireless | |
| Wireless Radio: | Enable |
| Name (SSID): | TP-LINK_BAAF28 |
| Channel: | Auto (Current channel 1) |
| Mode: | 11bgn mixed |
| Channel Width: | Automatic |
| MAC Address: | A4-2B-B0-BA-AF-28 |
| System Up Time: | 0 days 00:02:32 <input type="button" value="Refresh"/> |

Figure 3-5 Status

- **Firmware Version** - This field displays the current firmware version of the powerline extender.
- **Hardware Version** - This field displays the current hardware version of the powerline extender.
- **Powerline** - This field displays the current settings or information for powerline, including the **MAC address**, **Device Password** and **Network Name** which can be configured on the **Powerline** → **Network Settings** page.
 - **MAC Address** - The physical address of the powerline extender, as seen from powerline.
 - **Device Password** - The security ID that restricts access to critical device functions.
 - **Network Name** - The name that identifies a logical network.
- **Network** - The following parameters apply to the Ethernet port of the powerline extender. You can configure them on the **Network** page.
 - **MAC Address** - The physical address of the powerline extender's Ethernet port.
 - **IP Address** - The IP address of the powerline extender.
 - **Subnet Mask** - The subnet mask associated with IP address.

- **Wireless** - This field displays the current settings or information for wireless. They can be configured on the **Wireless** → **Wireless Settings** page.
 - **Wireless Radio** - Indicates whether the wireless radio feature of the powerline extender is enabled or disabled.
 - **Name (SSID)** - The SSID of the powerline extender.
 - **Channel** - The wireless channel in use.
 - **Mode** - The current wireless mode the powerline extender works on.
 - **Channel Width** - The bandwidth of the wireless channel.
 - **MAC Address** - The physical address of the powerline extender, as seen from the WLAN.
- **System Up Time** - This field displays the length of the time since the powerline extender was last powered on or reset.

Click the **Refresh** button to get the latest status and settings of the powerline extender.

3.3 Network

You can configure the IP parameters of the powerline extender on this page.

| Network | |
|-------------------------------------|--|
| MAC Address: | 00-0A-EB-00-16-01 |
| IP Address: | <input type="text" value="192.168.1.1"/> |
| Subnet Mask: | <input type="text" value="255.255.255.0"/> |
| <input type="button" value="Save"/> | |

Figure 3-6 Network

- **MAC Address** - The physical address of the powerline extender's Ethernet port. The value can not be changed.
- **IP Address** - Enter the IP address of the powerline extender in dotted-decimal notation (factory default setting is 192.168.1.1).
- **Subnet Mask** - An address code that determines the size of the network. Usually it is 255.255.255.0.

Click the **Save** button to save your settings.

Note:

1. If you change the IP address, you must use the new IP address to log in to the powerline extender.
2. If the IP address of the powerline extender conflicts with other device in the intranet, a temporary IP address will be generated at random.

3.4 Wireless

The **Wireless** option, improving functionality and performance for wireless network, can help you make

the powerline extender an ideal solution for your wireless network. Here you can create a wireless local area network just through a few settings. Wireless Settings is used for the configuration of some basic parameters of the powerline extender. Wireless Security provides three different security types to secure your data and thus providing greater security for your wireless network. MAC filtering allows you to control the access of wireless stations to the powerline extender. Wireless Advanced allows you to configure some advanced parameters for the powerline extender. Wireless statistics enables you to get detailed information about the current connected wireless stations.

There are five submenus under the Wireless menu (shown in Figure 3-7): **Wireless Settings**, **Wireless Security**, **Wireless MAC Filtering**, **Wireless Advanced** and **Wireless Statistics**. Click any of them and you will be able to configure the corresponding function. The detailed explanations for each submenu are provided below.

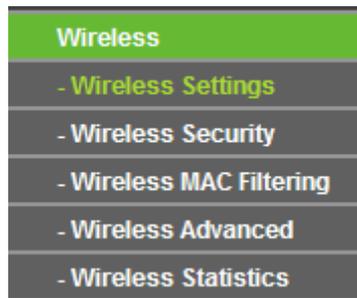


Figure 3-7 Wireless menu

3.4.1 Wireless Settings

Selecting **Wireless > Wireless Settings** will enable you to configure the basic settings for your wireless network on the screen below (Figure 3-8).

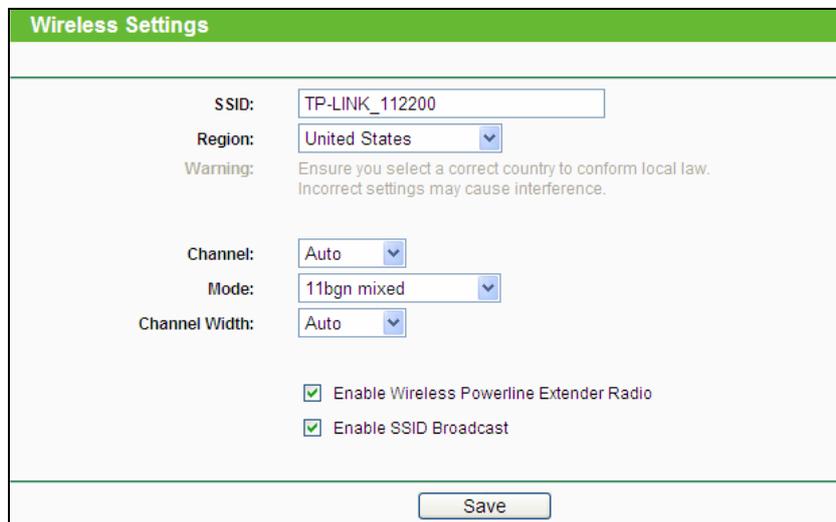


Figure 3-8 Wireless Settings

- **SSID** (Set Service Identifier) - Identifies your wireless network name. Enter a value of up to 32 characters. The same Name (SSID) must be assigned to all wireless devices in your network. The default SSID is TP-LINK_XXXXXX (XXXXXX indicates the last six unique characters of each device’s MAC address). This value is case-sensitive. For example, *TEST* is not the same as *test*.
- **Region** - Select your region from the pull-down list. This field specifies the region where the wireless function of the powerline extender can be used. It may be illegal to use the wireless

function of the powerline extender in a region other than one of those specified in this filed. If your country or region is not listed, please contact your local government agency for assistance.

When you select your local region from the pull-down list, click the **Save** button, then the Note Dialog appears. Click **OK**.



Note Dialog

- **Channel** - This field determines which operating frequency will be used. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point. If you select **Auto**, then the powerline extender will choose the best channel automatically.
- **Mode** - Select the desired wireless mode. The options are:
 - **11b only** - Only 802.11b wireless stations can connect to the device.
 - **11g only** - Only 802.11g wireless stations can connect to the device.
 - **11n only** - Only 802.11n wireless stations can connect to the device.
 - **11bg mixed** - Both 802.11b and 802.11g wireless stations can connect to the device.
 - **11bgn mixed** - All 802.11b, 802.11g and 802.11n wireless stations can connect to the device.

If all of the wireless devices connected with the powerline extender can connect in the same transmission mode (e.g. 802.11b), you can choose the **Only** mode (e.g. 11b only). If you have some devices that use different transmission modes, choose the appropriate **Mixed** mode.

- **Channel Width** - Determines the channel width to be used. It is unnecessary to change the default value unless required.
- **Enable Wireless Powerline Extender Radio** - The wireless radio of the powerline extender can be enabled or disabled to allow or deny wireless stations to access. If it is enabled, the wireless stations will be able to access the powerline extender; otherwise, wireless stations will not be able to access the powerline extender.
- **Enable SSID Broadcast** - Selecting this check box will allow the device to broadcast its name (SSID) on the air. If it's allowed, when wireless clients survey the local area for wireless networks to associate with, they will detect the SSID broadcast by the device.

Note:

To apply any settings you have altered on the page, please click the **Save** button, and then you will be reminded to reboot the device.

3.4.2 Wireless Security

Selecting **Wireless > Wireless Security** will enable you to configure wireless security for your wireless network to protect your data from intruders. The powerline extender provides three security types: WEP,

WPA/WPA2 and WPA-PSK/WPA2-PSK. The default password can be found on the label at the bottom of the device. Wireless security can be configured on the following screen shown as Figure 3-9.

Figure 3-9 Wireless Security

- **Disable Security** - Check this radio button to disable wireless security. If disabled, the wireless stations will be able to connect this device without encryption. It is strongly recommended that you choose one of the security types to enable security.
- **WEP** - Select 802.11 WEP security.

Figure 3-10 WEP

- **Type** - You can select one of following types.
 - ✓ **Automatic** - Select **Shared Key** or **Open System** authentication type automatically based on the wireless station's capability and request.
 - ✓ **Shared Key** - Select 802.11 **Shared Key** authentication type.
 - ✓ **Open System** - Select 802.11 **Open System** authentication type.

- **WEP Key Format** - You can select **ASCII** or **Hexadecimal** format. ASCII format stands for any combination of keyboard characters in the specified length. Hexadecimal format stands for any combination of hexadecimal digits (0-9, a-f, A-F) in the specified length.
- **WEP Key** - Select which of the four keys will be used and enter the matching WEP key information for your network in the selected key radio button. These values must be identical on all wireless stations in your network.
- **Key Type** - You can select the WEP key length (**64-bit**, or **128-bit**) for encryption. "Disabled" means this WEP key entry is invalid.
 - ✓ For **64-bit** encryption - You can enter 10 hexadecimal digits (any combination of 0-9, a-f, A-F, zero key is not permitted) or 5 ASCII characters.
 - ✓ For **128-bit** encryption - You can enter 26 hexadecimal digits (any combination of 0-9, a-f, A-F, zero key is not permitted) or 13 ASCII characters.

Note:

If you do not set the key, the wireless security function is still disabled even if you have selected Shared Key as Authentication Type.

- **WPA/WPA2** - Select WPA/WPA2 based on Radius Server.

The screenshot shows a configuration window titled 'WPA/WPA2'. It contains the following fields:

- Version:** A dropdown menu set to 'Automatic'.
- Encryption:** A dropdown menu set to 'Automatic'.
- Radius Server IP:** An empty text input field.
- Radius Port:** A text input field containing '1812', with a note '(1-65535, 0 stands for default port 1812)'.
- Radius Password:** An empty text input field.
- Group Key Update Period:** A text input field containing '86400', with a note '(in second, minimum is 30, 0 means no update)'.

Figure 3-11 WPA/WPA2

- **Version** - You can select one of the following versions.
 - ✓ **Automatic** - Select **WPA** or **WPA2** automatically based on the wireless station's capability and request.
 - ✓ **WPA** - Wi-Fi Protected Access.
 - ✓ **WPA2** - WPA version 2.
 - **Encryption** - You can select either **Automatic**, **TKIP** or **AES**.
 - **Radius Server IP** - Enter the IP address of the Radius Server.
 - **Radius Port** - Enter the port used by radius service.
 - **Radius Password** - Enter the password for the Radius Server.
 - **Group Key Update Period** - Specify the group key update interval in seconds. The value can be either 0 or at least 30. Enter 0 to disable the update.
- **WPA-PSK/ WPA2-PSK** - Select WPA based on pre-shared key.

WPA-PSK/WPA2-PSK

Version: Automatic

Encryption: Automatic

PSK Password: 12345670
(You can enter ASCII characters between 8 and 63 or Hexadecimal characters between 8 and 64.)

Group Key Update Period: 86400 (in second, minimum is 30, 0 means no update)

Figure 3-12 WPA-PSK/WPA2-PSK

- **Version** - You can select one of the following versions.
 - ✓ **Automatic** - Select **WPA-PSK** or **WPA2-PSK** automatically based on the wireless station's capability and request.
 - ✓ **WPA-PSK** - Pre-shared key of WPA.
 - ✓ **WPA2-PSK** - Pre-shared key of WPA2.
- **Encryption** - When you select **WPA-PSK** or **WPA2-PSK** for **Authentication Type**, you can select either **Automatic**, **TKIP** or **AES** as **Encryption**.
- **PSK Password** - Enter a password here.
- **Group Key Update Period** - Specify the group key update interval in seconds. The value can be either 0 or at least 30. Enter 0 to disable the update.

Be sure to click the **Save** button to save your settings on this page.

Note:

You will be reminded to reboot the device after clicking the **Save** button.

3.4.3 Wireless MAC Filtering

Selecting **Wireless > Wireless MAC Filtering** will allow you to set up some filtering rules to control wireless stations accessing the device, which depends on the station's MAC address on the following screen as shown in Figure 3-13.

Wireless MAC Filtering

Wireless MAC Filtering: **Enabled**

Filtering Rules

Allow the stations not specified by any enabled entries in the list to access.

Deny the stations not specified by any enabled entries in the list to access.

| ID | MAC Address | Status | Description | Modify |
|----|-------------------|---------|--------------------|-------------------------------|
| 1 | 00-0A-EB-B0-00-0B | Enabled | wireless station A | Modify Delete |

Figure 3-13 Wireless MAC Filtering

- **Wireless MAC Filtering** - Click the **Enable** button to enable the Wireless MAC Address Filtering. The default setting is disabled.

To Add a Wireless MAC Address filtering entry, click the **Add New** button. The "Add or Modify Wireless MAC Address Filtering entry" page will appear, shown in Figure 3-14.

Figure 3-14 Add or Modify Wireless MAC Address Filtering entry

- **MAC Address** - Enter the wireless station's MAC address that you want to control.
- **Description** - Give a simple description of the wireless station.
- **Status** - Select a status for this entry, either **Enabled** or **Disabled**.

To set up an entry, follow these instructions:

First, you must decide whether the unspecified wireless stations can access the device or not. If you desire that the unspecified wireless stations can access the device, please select the radio button **Allow the stations not specified by any enabled entries in the list to access**, otherwise, select the radio button **Deny the stations not specified by any enabled entries in the list to access**.

To add a MAC Address Filtering entry, follow these instructions:

1. Enter the appropriate MAC Address into the **MAC Address** field. The format of the MAC Address is XX-XX-XX-XX-XX-XX (X is any hexadecimal digit). For example: 00-0A-EB-B0-00-0B.
2. Enter a simple description of the wireless station in the **Description** field. For example: wireless station A.
3. Select **Enabled** or **Disabled** for this entry on the **Status** pull-down list.
4. Click the **Save** button to save this entry.

To add additional entries, repeat steps 1-4.

To modify or delete an existing entry:

1. Click **Modify** in the entry you want to modify. If you want to delete the entry, click **Delete**.
2. Modify the information.
3. Click the **Save** button.

Click the **Enable All** button to make all entries enabled

Click the **Disabled All** button to make all entries disabled.

Click the **Delete All** button to delete all entries

Click the **Next** button to go to the next page and click the **Previous** button to return to the previous page.

For example: If you desire that the wireless station A with MAC address 00-0A-EB-00-07-BE is able to access the device, while all other wireless stations cannot access the device, you should configure the **Wireless MAC Address Filtering** list by following these steps:

1. Click the **Enable** button to enable this function.
2. Select the radio button: **Deny the stations not specified by any enabled entries in the list to access** for **Filtering Rules**.
3. Delete all or disable all entries if there are any entries already.
4. Click the **Add New...** button and enter the MAC address 00-0A-EB-00-07-BE in the **MAC Address** field, enter Wireless Station A in the **Description** field and select **Enabled** in the **Status** pull-down list. Click the **Save** button.

The filtering rules that configured should be similar to the following list:

| ID | MAC Address | Status | Description | Modify |
|----|-------------------|---------|--------------------|---|
| 1 | 00-0A-EB-00-07-BE | Enabled | wireless station A | Modify Delete |

Note:

If you enable the function and select **Deny the stations not specified by any enabled entries in the list to access** for **Filtering Rules** but there isn't any enabled entry in the list, thus, no wireless stations can access the device.

3.4.4 Wireless Advanced

Selecting **Wireless > Wireless Advanced** will allow you to do some advanced settings for the device in the following screen shown in Figure 3-15. As the configuration for each operation mode is almost the same, we take Access Point mode for example here.

Figure 3-15 Wireless Advanced

- > **Transmit Power** - Specifies the transmit power of the device. You can select **High**, **Middle** or **Low** based on your need. **High** is the default setting and is recommended.
- > **Beacon Interval** - Specifies a value between 40-1000 milliseconds. The beacons are the packets sent by the device to synchronize a wireless network. Beacon Interval value determines the time interval of the beacons. The default value is 100.


- **RTS Threshold** - Specifies the RTS (Request to Send) Threshold. If the packet is larger than the specified RTS Threshold size, the device will send RTS frames to a particular receiving station and negotiate the sending of a data frame. The default value is 2346.
- **Fragmentation Threshold** - This value is the maximum size determining whether packets will be fragmented. Setting the Fragmentation Threshold too low may result in poor network performance since excessive packets. 2346 is the default setting and is recommended.
- **DTIM Interval** - Determines the interval of the Delivery Traffic Indication Message (DTIM). You can specify the value between 1-255 Beacon Intervals. The default value is 1, which indicates the DTIM Interval is the same as Beacon Interval.
- **Enable WMM** - WMM function can guarantee the packets with high-priority messages being transmitted preferentially. It is strongly recommended that this function be enabled.
- **Enable Short GI** - This function is recommended for it will increase the data capacity by reducing the guard interval time.
- **Enable AP Isolation** - Isolates all connected wireless stations so that wireless stations cannot access each other through WLAN. This function will be disabled if WDS/Bridge is enabled.

 **Note:**

If you are not familiar with the setting items on this page, it's strongly recommended that you keep the provided default values; otherwise, it may result in low wireless network performance.

3.4.5 Wireless Statistics

Selecting **Wireless > Wireless Statistics** will allow you to see the wireless transmission information in the following screen shown in Figure 3-16. This page shows **MAC Address**, **Current Status**, **Received Packets** and **Sent Packets** for each connected wireless station.

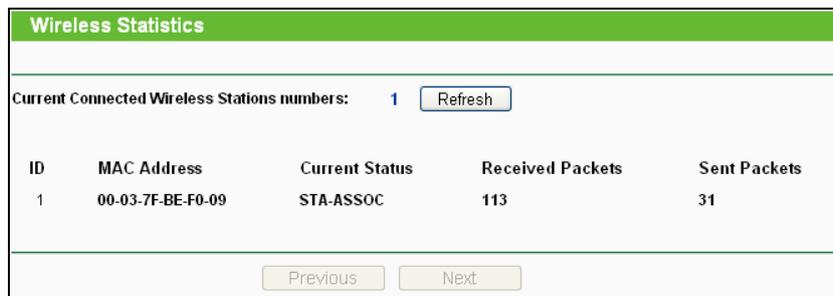

| Wireless Statistics | | | | |
|---|-------------------|----------------|------------------|--------------|
| Current Connected Wireless Stations numbers: 1 <input type="button" value="Refresh"/> | | | | |
| ID | MAC Address | Current Status | Received Packets | Sent Packets |
| 1 | 00-03-7F-BE-F0-09 | STA-ASSOC | 113 | 31 |
| <input type="button" value="Previous"/> <input type="button" value="Next"/> | | | | |

Figure 3-16 Statistics of the device attached wireless stations

- **MAC Address** - Shows the connected wireless station's MAC address.
- **Current Status** - The connected wireless station's running status, one of STA-AUTH / STA-ASSOC / STA-JOINED / WPA / WPA-PSK / WPA2 / WPA2-PSK / AP-UP / AP-DOWN / Disconnected.
- **Received Packets** - Packets received by the station.
- **Sent Packets** - Packets sent by the station.

You cannot change any of the values on this page. To update this page and to show the current connected wireless stations, click the **Refresh** button.

If the numbers of connected wireless stations go beyond one page, click the **Next** button to go to the next page and click the **Previous** button to return to the previous page.

Note:

This page will be refreshed automatically every 5 seconds.

3.5 Powerline

There are two submenus under the Powerline menu (shown in Figure 3-17 Wireless menu): **Network Settings** and **Station Settings**. Click any of them, and you will be able to configure the corresponding function. The detailed explanations for each submenu are provided below.

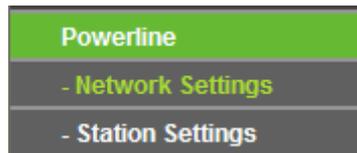


Figure 3-17 Wireless menu

3.5.1 Network Settings

Selecting **Powerline > Network Settings**, and you can configure the network name of the powerline extender or all the stations in current network on this page.

Figure 3-18 Network Settings

- **MAC Address** - The physical address of the powerline extender, as seen from the powerline. The value can not be changed.
- **Device Password** - The password of the powerline extender. The value can not be changed.
- **Network Name** - Enter the network name (factory default - HomePlugAV).

Click the **Default** button to enter the default network name.

Click the **Set Local** button to set the powerline extender.

Click the **Set All** button to set all stations which entered the correct passwords in current network, including the powerline extender.

Note:

If you set all stations network name, the remote ones which is powered off or entered the wrong password will not take effect.

3.5.2 Station Settings

The Station Settings page shows remote stations in current network and allows you to enter, modify or delete the password and name for each station.

| Station Settings | | | | |
|---|-------------------|---|--|---------------------|
| Current Connected Remote Station number: | | 1 | <input type="button" value="Refresh"/> | |
| Device Name | MAC Address | Device Password | Status | Operation |
| | 54-E6-FC-B4-08-AB | | online | Add |
| <input type="button" value="Add New..."/> | | | | |
| | | <input type="button" value="Previous"/> | <input type="button" value="Next"/> | |

Figure 3-19 Station Settings

- **MAC Address** - The remote station's MAC address. The value can not be changed.
- **Device Password** - The security ID of remote station.
- **Device Name** - The name used for identifying a station.

To add or modify a station entry, click the **Add** or **Modify** button in the operation column and follow these instructions:

1. Enter the station password in **Device Password** field. The format of the password is XXXX-XXXX-XXXX-XXXX (X is any character). For example, RLXL-BYPI-MZBO-OPAB.
2. Enter a name you want to give the station in the **Device Name** field or leave it empty. For example, Station A.
3. Click the **Save** button to save this entry.

| Add or Modify PLC Station entry | |
|---|--|
| MAC Address: | 54-E6-FC-B4-08-AB |
| Device Password: | <input type="text" value="RLXL-BYPI-MZBO-OPAB"/> |
| Device Name: | <input type="text" value="Station A"/> |
| <input type="button" value="Save"/> <input type="button" value="Back"/> | |

Figure 3-20 Add or Modify PLC Station entry

To add or modify another entries, repeat steps 1-3.

Click the **Delete** button in the operation column to delete a station entry.

Click the **Add New...** button to add a station into current network. The steps are the same as adding a station entry.

Figure 3-21 Add a new station

Click the **Refresh** button to update the current connected stations.

Click the **Next** button to go to the next page and click the **Previous** button to return to the previous page.

Note:

You can do **Add** or **Modify** operation only when the remote station is connected. If the remote station which you entered the password is powered off or has left the current network, you can only do **Delete** operation.

3.6 System Tools

System Tools option helps you to optimize the configuration of your device. You can upgrade the powerline extender to the latest version of firmware as well as backup or restore the device's configuration files. It's suggested that you change the default password to a more secure one because it controls access to the device's web-based management page. Besides, you can find out what happened to the system in System Log.

There are six submenus under the **System Tools** menu (shown as Figure 3-22): **Firmware Upgrade**, **Factory Defaults**, **Backup & Restore**, **Reboot**, **Password** and **System Log**. Clicking any of them will enable you to configure the corresponding function. The detailed explanations for each submenu are provided below.



Figure 3-22 The System Tools menu

3.6.1 Firmware Upgrade

Selecting **System Tools > Firmware Upgrade** allows you to upgrade the latest version of firmware for the device on the screen shown in Figure 3-23.

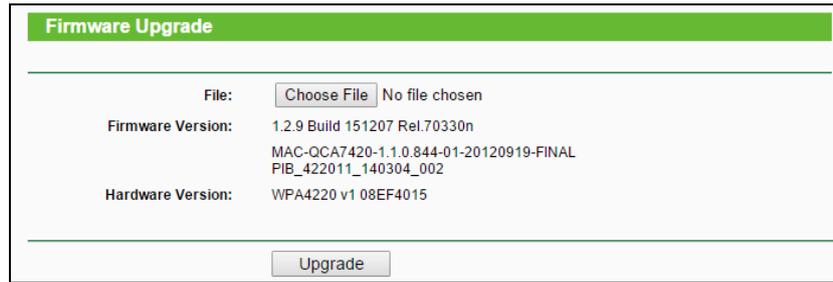


Figure 3-23 Firmware Upgrade

New firmware versions are posted at <http://www.tp-link.com> and can be downloaded for free.

- **Firmware Version** - Here displays the current firmware version.
- **Hardware Version** - Here displays the current hardware version. The hardware version of the upgrade file must accord with the current hardware version.

 **Note:**

- 1 There is no need to upgrade the firmware unless the new firmware has a new feature you want to use. However, when experiencing problems caused by the device itself, you can try to upgrade the firmware.
- 2 Before upgrading the device's firmware, you should write down some of your customized settings to avoid losing important configuration settings of device.

To upgrade the device's firmware, follow these instructions:

1. Download a more recent firmware upgrade file from the TP-LINK website (<http://www.tp-link.com>).
2. Click **Choose File** to select the downloaded file on the computer.
3. Click **Upgrade**.
4. The powerline extender will reboot while the upgrading has been finished.

 **Note:**

The firmware version must correspond to the hardware. The upgrade process takes a few moments and the powerline extender restarts automatically when the upgrade is complete. It is important to keep power applied until the system finishes upgrading and rebooting. Loss of power during the upgrade could damage the powerline extender.

3.6.2 Factory Defaults

Selecting **System Tools > Factory Defaults** allows you to restore the factory default settings for the device on the screen shown in Figure 3-24.

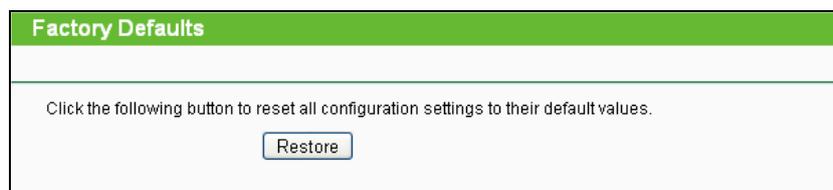


Figure 3-24 Restore Factory Defaults

Click **Restore** to reset all configuration settings to their default values.

- Default **User Name**: admin
- Default **Password**: admin
- Default **IP Address**: 192.168.1.1
- Default **Subnet Mask**: 255.255.255.0

 **Note:**

Any settings you have saved will be lost when the default settings are restored.

3.6.3 Backup & Restore

Selecting **System Tools > Backup & Restore** allows you to save all configuration settings to your local computer as a file or restore the device's configuration on the screen shown in Figure 3-25.

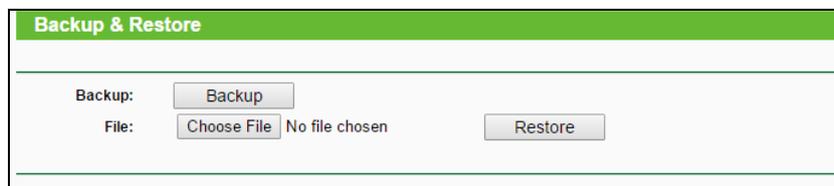


Figure 3-25 Save or Restore the Configuration

Click **Backup** to save all configuration settings to your local computer as a file.

To restore the device's configuration, follow these instructions:

- Click **Choose File** to find the configuration file which you want to restore.
- Click **Restore** to update the configuration with the file whose path is the one you have input or selected in the blank.

 **Note:**

1. The current configuration will be covered with the uploading configuration file.
2. Wrong process will lead the device unmanaged.
3. The restoring process lasts for about 20 seconds and restarts automatically. Do not power off the device during the process to avoid any damage.

3.6.4 Reboot

Selecting **System Tools > Reboot** allows you to reboot the device on the screen shown in Figure 3-26.

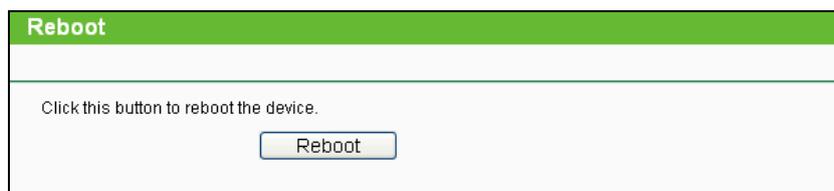


Figure 3-26 Reboot the device


Click the **Reboot** button to reboot the device.

Some settings of the device will take effect only after rebooting, which include:

- Change the powerline extender's IP Address (system will reboot automatically).
- Change the Wireless configurations.
- Upgrade the firmware of the powerline extender (system will reboot automatically).
- Restore the powerline extender's settings to the factory defaults (system will reboot automatically).
- Update the configuration with the file (system will reboot automatically).

3.6.5 Password

Selecting **System Tools > Password** allows you to change the factory default user name and password of the device on the screen shown in Figure 3-27.

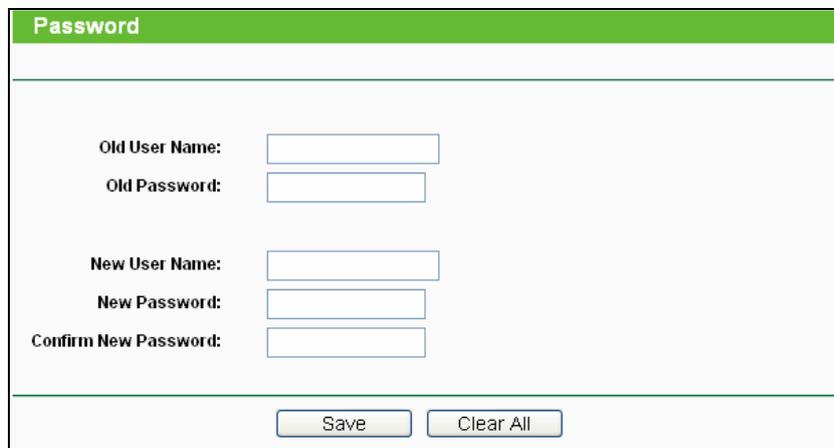

The screenshot shows a web interface for changing the device's password. It features a green header with the text "Password". Below the header, there are five input fields arranged in two columns. The left column contains "Old User Name:", "Old Password:", "New User Name:", and "Confirm New Password:". The right column contains "Old Password:", "New Password:", and "New Password:". At the bottom of the form, there are two buttons: "Save" and "Clear All".

Figure 3-27 Password

It is strongly recommended that you change the factory default user name and password of the device. All users who try to access the device's web-based management page or Quick Setup will be prompted for the device's user name and password.

Note:

The new user name and password must not exceed 14 characters in length and must not include any spaces. Enter the new Password again to confirm it.

Click the **Save** button when finished.

Click the **Clear All** button to clear all.

3.6.6 System Log

Selecting **System Tools > System Log** allows you to query the Logs of the device on the screen shown in Figure 3-28.

| System Log | |
|------------|---|
| Index | Log Content |
| 1 | 0002:System: The device initialization succeeded. H-Ver = WPA4220 v1 08EF4015 : S-Ver = 1.2.2 Build 130306 Rel.34530n L = 192.168.1.1 : M = 255.255.255.0 |

Figure 3-28 System Log

The device can keep logs of all traffic. You can query the logs to find what happened to the device.

Click the **Refresh** button to show the latest log list.

Click the **Clear All** button to clear all logs.

Chapter 4 Connecting to Wireless Network

The default SSID is TP-LINK_XXXXXX. (XXXXXX stand for the last six unique numbers of the WLAN MAC which can be found on the label at the bottom of the device.) The default Wireless Password can also be found on the label of the device.

If you have used the Wi-Fi Clone button to clone Wi-Fi settings from the front router, the SSID and wireless password of the powerline extender will be the same as the wireless router.

If you have established a secure and separate wireless network from the wireless router, the SSID and wireless password of the powerline extender will be what you have set.

4.1 In Windows 7

Windows 7 users may use the built-in wireless utility. Follow the steps below.

1. Click the icon  in the notification area, select the SSID of TL-WPA4220 and then click **Connect**.

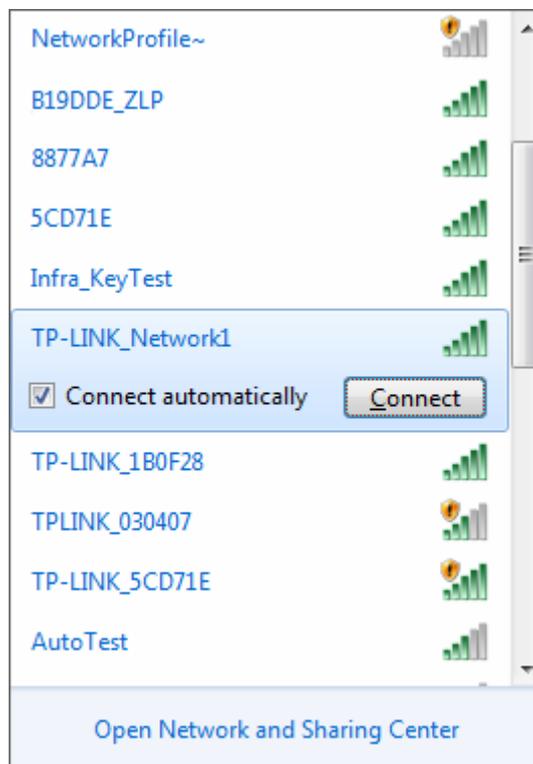


Figure 4-1

- Input the network key and then click **OK**.



Figure 4-2

Note:

If your network is an unsecured network, you will not be prompted to input the network key.

- You have joined the home network and can surf the Internet now.



Figure 4-3

4.2 In Windows Vista

Windows Vista users may use the built-in wireless utility. Follow the steps below.

1. Right-click the icon  in the notification area, then click **Connect to a network**.

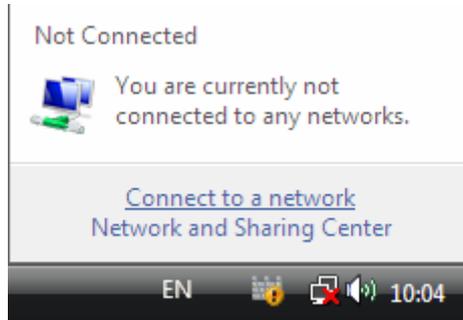


Figure 4-4

2. Select the SSID of TL-WPA4220 and then click **Connect**.

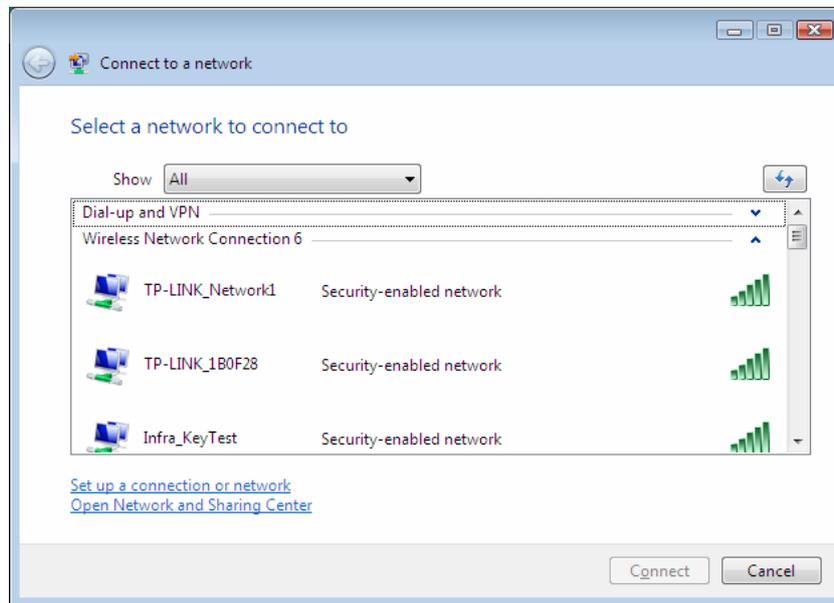


Figure 4-5

3. Input the network key and then click **Connect**.

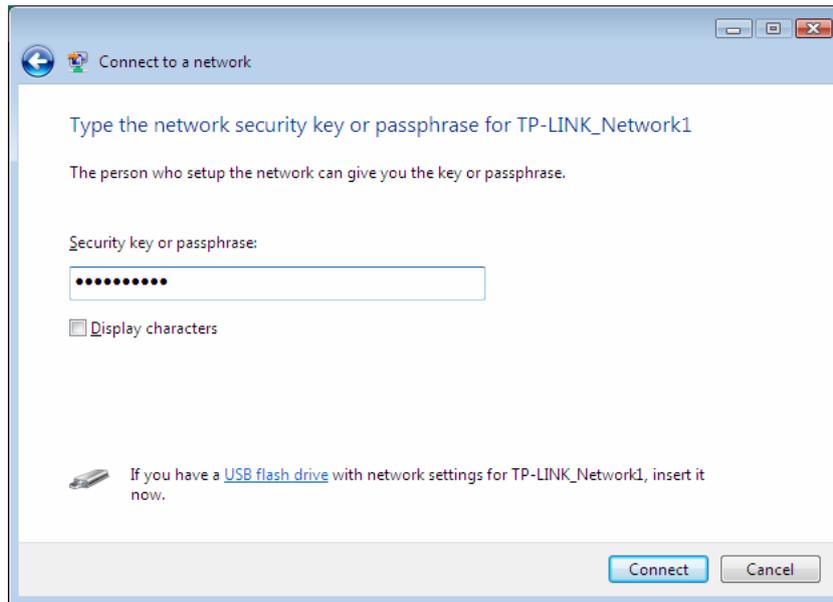


Figure 4-6

Note:

If your network is an unsecured network, you will not be prompted to input the network key.

4. You have joined the home network and can surf the Internet now. Click **Close** to finish the connection.

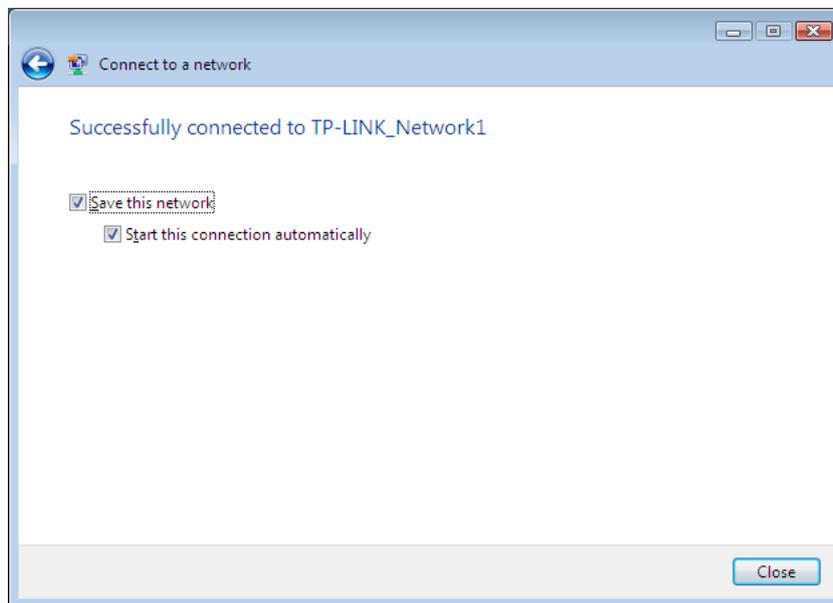


Figure 4-7

4.3 In Windows XP

Windows XP users may use the built-in wireless utility. Follow the steps below.

1. Click the icon  in the notification area, select the SSID of TL-WPA4220 and then click **Connect**.

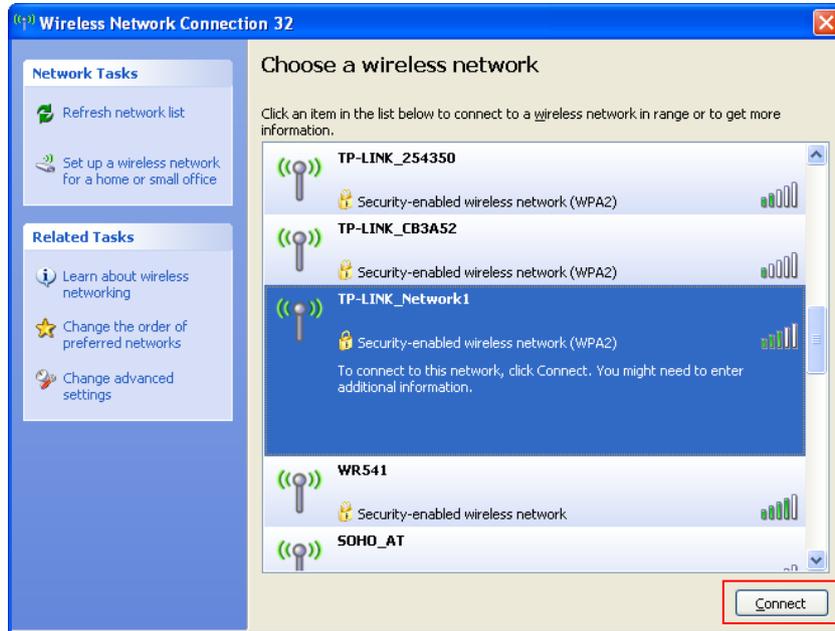


Figure 4-8

2. Input the network key and then click **Connect**.

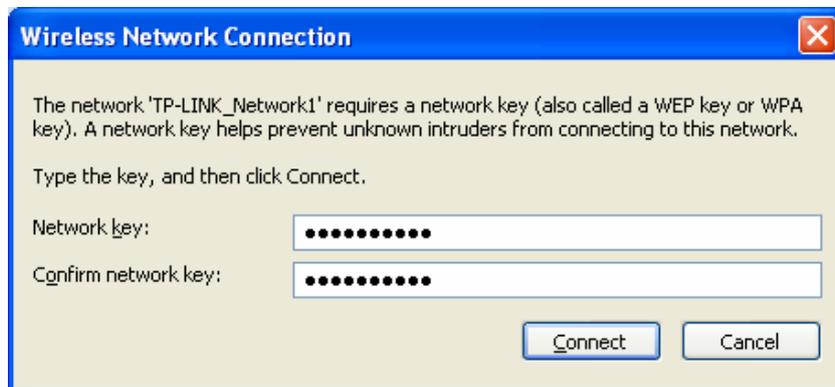


Figure 4-9


 **Note:**

If your network is an unsecured network, you will not be prompted to input the network key.


4.4 In Windows 8 or Windows 10

If you are using Windows 8, please follow the steps below to connect to the wireless network of the powerline extender.

1. Click the icon  in the notification area, select the SSID of TL-WPA4220 and then click **Connect**.

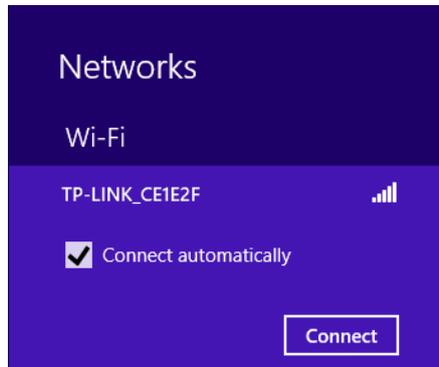

2. Input the network security key and then click **Next**.

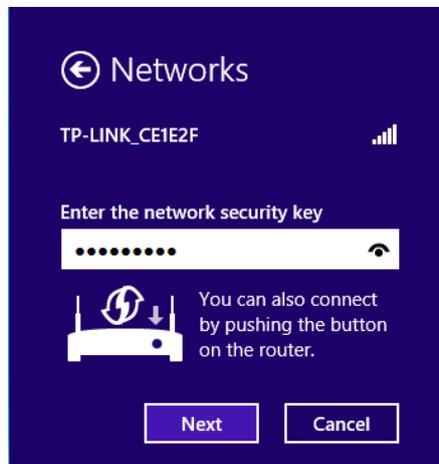


 **Note:**

If your network is an unsecured network, you will not be prompted to input the network key.

3. Click to select whether to turn on sharing and connect to devices.



4. You have joined the home network and can surf the Internet now.

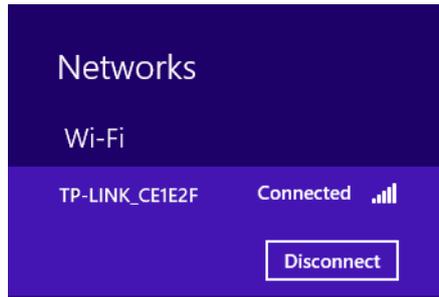

Chapter 5 Pair Button and Reset Button


5.1 Pair (Secure with 128 bits-AES)

The Homeplug AV standard uses 128-bit AES (Advanced Encryption Standard) to safely transmit data between powerline devices. For the powerline devices to communicate with each other, they all need to use the same Network Membership Key (NMK). Otherwise, they cannot unscramble the encrypted data sent in the powerline network.

The **Pair** button allows you to set up a secure powerline connection with other HomePlug AV compliant powerline devices which also support the **Pair** feature. Here takes TP-LINK powerline devices for example (TL-PA4010 for device A, TL-WPA4220 for device B and C).

5.2 Setting Up a Powerline Network with the Pair Button

You can connect a number of devices on a powerline network, but you can use the **Pair** button on only two devices at a time.

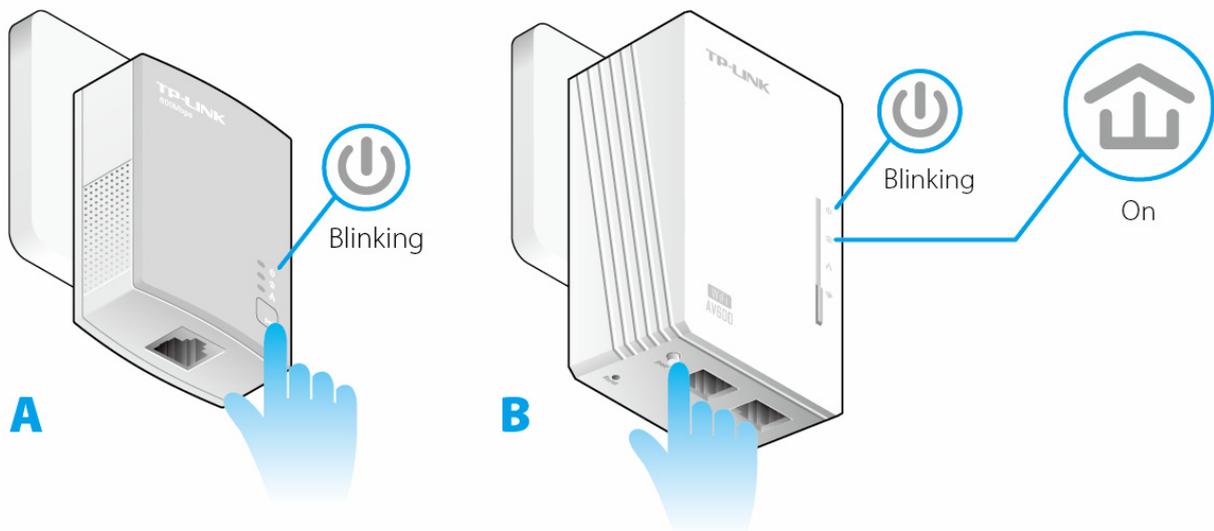


Create a Powerline network using the Pair button:

- Step 1.** Press and hold the Pair button of powerline device A TL-PA4010 for one second, the Power LED will start flashing.
- Step 2.** Within two minutes, press and hold the Pair button of powerline device B TL-WPA4220 for one second, the Power LED will start flashing.
- Step 3.** Wait until the Power LED on both adapters stops flashing and the Powerline LED becomes solid on, and the pairing is completed.

Join an existing Powerline Network:

Powerline device A and B have formed a powerline network, and powerline device C wants to join this network.

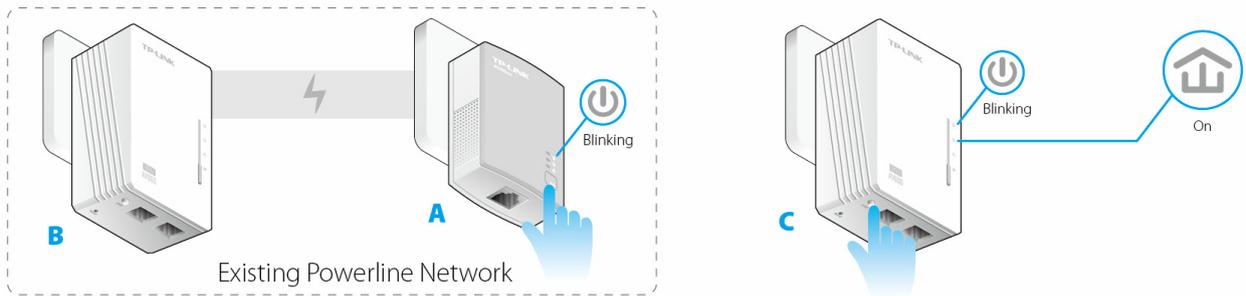

- Step 1.** Press and hold the Pair button on powerline device C TL-WPA4220 for one second.
- Step 2.** Within two minutes, press and hold the Pair button on Powerline device A/B for one second.
- Step 3.** Wait until the Power LED on both adapters stops flashing and the Powerline LED becomes solid on, and the pairing is completed.

 **Note:**

The sequence of Step 1 and Step 2 can be exchanged.

Leave an existing Powerline Network:

As the figure above shows, powerline device A, B and C have formed a powerline network. The user wants to remove one device (powerline adapter A) from this network.

- Step 1.** Press and hold the Pair button on powerline device A for about 10 seconds, and then release the button. (All LEDs of powerline device A will momentarily go off.)
- Step 2.** Wait until the Powerline LED of powerline device A turns off, and the powerline adapter is disconnected from the powerline network.

5.3 Reset

To reset the powerline device:

With the extender powered on, use a pin to press and hold the **Reset** button for about 5 seconds until all LEDs go off. When the Power LED turns on and the Wi-Fi LED starts to blink rapidly, the reset process is complete and the default settings have been restored.

Be careful, don't power off when the device is in reset process.

Appendix A: Troubleshooting Guide

The Troubleshooting Guide provides answers to common problems regarding the powerline Ethernet adapter.

1. The Power LED does not light up.

Ans. Check the following:

- 1) Make sure that the powerline extender is properly plugged into a power outlet.
- 2) Make sure the power outlet is active (working) by plugging another electric device into it.
- 3) Re-plug the powerline extender to the power outlet.

If the Power LED still fails to light up, contact your local dealer for technical support.

2. The Ethernet LED does not light up.

Ans. Check the following:

- 1) Make sure that the Ethernet cable (RJ45) is properly connected to the powerline extender's Ethernet port and the other end of the Ethernet cable (RJ45) is properly connected to the computer LAN card or to your Cable/xDSL Ethernet port.
- 2) Make sure your computer LAN card is properly installed and configured.

Contact your local dealer for technical support if the Ethernet LED still fails to light up after the above procedures.

3. Powerline LED does not light up.

Ans. Check the following:

- 1) Try to plug a powerline Ethernet adapter into a nearby power outlet and check whether the Powerline LED lights up or not.
- 2) Make sure that the device is plugged into a wall socket instead of a power strip.
- 3) Follow the method in "[5.2 Setting Up a Powerline Network with the Pair Button](#)" to establish the connection again.
- 4) Reset the device to its factory default values.

Contact your local dealer for technical support if the Powerline LED still fails to light up after the above procedures.

Appendix B: Specifications

| HARDWARE FEATURES | |
|---------------------------------|--|
| Standards and Protocols | HomePlug AV, IEEE802.3, IEEE802.3u, IEEE802.11b/g/n |
| Interface | 2*10/100Mbps Ethernet Port |
| Plug Type | UK |
| Button | Pair, Wi-Fi/Wi-Fi Clone, Reset |
| LED Indicator | PWR, PLC, ETH, Wi-Fi/Wi-Fi Clone |
| Dimensions (W x D x H) | 3.7 x 2.1 x 1.6 in. (94×54×40mm) |
| Power Consumption | <6W |
| Data Rate | Powerline: 600Mbps Wireless: 300Mbps |
| Range | 300 Meters over electrical circuit |
| SOFTWARE FEATURES | |
| Modulation Technology | OFDM (PLC) |
| Encryption | Powerline Security: 128-bit AES Wireless Security: WEP, WPA/WPA2, WPA-PSK/WPA2-PSK Encryption |
| OTHERS | |
| Certification | CE, RoHS |
| Package Contents | Powerline Ethernet Adapter 6.5 ft. (2 m) Ethernet cable (RJ45) Quick Installation Guide |
| Environment | Operating Temperature: 0°C~40°C (32°F ~104°F) Storage Temperature: -40°C~70°C (-40°F ~158°F) Operating Humidity: 10%~90% non-condensing Storage Humidity: 5%~90% non-condensing |