

READ ALL INSTRUCTIONS BEFORE USING

IMPORTANT SAFEGUARDS

When using this electrical appliance; basic safety precautions should always be observed including the following:

- 1. Do not place or store this appliance where it can fall or be pulled in a bath or sink. Do not place or drop into water or any other liquid.
- 2. Do not reach for an appliance that has fallen into water, unplug immediately.
- 3. Never leave the appliance unattended when plugged in.
- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 5. Use this product only for its intended use as a hair trimmer. Do not use attachments not recommended by the manufacturer.
- 6. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged or immersed in water. Return the appliance to WAHL (UK) LTD, for examination and repair.
- 7. Keep the cord away from heated surfaces.

1

- 8. Never insert any object into any opening on this appliance.
- 9. Do not use outdoors or operate with aerosol products or where oxygen is being administered.
- 10. Do not leave the appliance exposed to the weather, or where it may become damaged.
- 11. Do not use this appliance with a damaged or broken comb or blade set, as injury may occur.
- 12. Always unplug this appliance from the electrical outlet immediately after use.

OPERATING INSTRUCTIONS

- 1. Oil the blades of your Wahl trimmer before and after use.
- 2. Remove plastic blade guard and place a few drops of Wahl Clipper oil on the teeth of your blades, wiping off any excess oil with a clean dry cloth.
- 3. Plug the trimmer into a 230V power outlet and turn the power on.
- 4. Switch on your appliance by using the on/off switch located at the bottom of the trimmer above the power cord.
- 5. Always turn off and unplug your trimmer immediately after use.
- 6. After cutting always clean out any loose hair and oil the blades before replacing the blade guard and storing away.

2



Please retain this leaflet for future reference.

Please read this instruction manual carefully and familiarise yourself with your new WAHL Detailer Trimmer before using for the first time.

USER INSTRUCTIONS

Detailer Trimmer
PART No.: 8081-017
8081-217



FORM No.: ZAS56
Rev No. 2 12-11
USA FORM No.: 91645-001

www.wahl.co.uk

TECHNICAL SUPPORT TEL: 01227 744331
CUSTOMER SERVICE TEL: 01227 740066

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT, CT6 8JZ



5



At the end of this products life it should not be disposed of with general household waste.
Care should be taken to dispose of in a suitable manner in accordance with your Local Authority Regulations.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT DIRECTIVE 2002/96/EC (WEEE)

BLADE WARE IS NOT COVERED UNDER THE TERMS OF THE WARRANTY.

This product is guaranteed against defects in material and workmanship for a period of twelve months from the date of original purchase or receipt as a gift.
The guarantee becomes invalid in the case of misuse or repair by unauthorised persons.
Should this product become defective during the warranty period, return it to the store of purchase together with your proof of purchase for repair or replacement.
This guarantee in no way affects your rights under statutory law in the United Kingdom.

GUARANTEE

3

1. Always ensure the appliance is unplugged before cleaning.
2. To remove hair that may have become clogged between the blades, brush between the blades with the cleaning brush provided. Always be sure to oil the blades after cleaning.
3. Due to the high speed of this trimmer the correct type of oil must be used. Only use oil intended for use in clippers and trimmers, such as Wahl clipper oil. Do not ever use hair oil, grease or any oil mixed with kerosene or any solvent as the solvent will evaporate and leave a thick residue which will impair cutting performance. Wahl clipper oil is a very thin, natural oil which will not evaporate and will not slow down the cutting action.
4. Streaks and miscut hair are caused by dirty surfaces on the blades, so keep your trimmer clean and blades well oiled.
5. Trimmer blades have very precise hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty abrasive materials.
6. Blades should be changed or sharpened in sets only. Normal service of the unit does not require disassembly of the trimmer unit. If major repair is necessary return the unit to a Wahl or an authorised service facility.
7. To prolong the blade life, do not use the trimmer on hair that is coated with a permanent wave solution or hair spray.
8. To clean the outside of the trimmer, use either a clean

CLEANING AND MAINTENANCE

6

Wahl (UK) Ltd.
Founded in 1987 Wahl (UK) have successfully introduced innovative technology that helps make British hairdressers one of the best in the world, not only providing hairdressers with the tools they need to perform but also the education to excel. Wahl - No.1 for Professional Clipper and Trimmers since 1919!

The Wahl Clipper Corporation
Wahl was founded in Sterling, USA, when in 1919 Mr Leo J Wahl invented the worlds first hand held electromagnetic hair clipper and sold it to local barbers. Since then the Wahl group have expanded globally into Europe, South America, Asia and Australia, with 6 manufacturing/distribution plants and 6 dedicated distribution centres, distributing quality Wahl products to over 160 countries globally. Wahl - where the world goes to look good!

See our website for further details; www.wahl.co.uk

4

WARNING: If the supply cord is damaged it must be replaced by the manufacturer service agent or a similarly qualified person in order to avoid a hazard.

WIRING

Please refer to other instruction leaflet regarding the blade adjustment tool.

1. Turn unit off.
2. Place desired comb attachment over blade teeth.
3. Press down until comb clicks into position.

TO ATTACH COMBS

Your appliance is supplied with 3 combs 1.5mm, 4.5mm and 6mm.

ATTACHMENT COMBS

9. Do not store the trimmer in a wet or moist environment.
10. Do not wrap the cord around unit for storage. This may result in breakage or cracks to the power cord.
11. The cord should not be used to pull the trimmer.
12. Freedom of movement needs to be maintained. Care should be used to keep the cord untwisted and unobstructed. When stored the cord should be coiled and the unit placed in its original box.