



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Yashica Peanuts Verde](#) o cerca il tuo prodotto tra le [migliori offerte di Fotocamere](#)

# YASHICA x Peanuts

Digital Camera

**User Manual**



## Contents

|                          |            |
|--------------------------|------------|
| Getting Started          | P. 4       |
| Product Overview         | P. 5 - 7   |
| Operational Instructions | P. 8       |
| Display Preview          | P. 9       |
| Menu Settings            | P. 10 - 13 |
| Troubleshooting          | P. 14      |
| Specifications           | P. 15      |
| Warranty Policy          | P. 16 - 17 |

## Getting Started

 
Please read the manual carefully before use to ensure appropriate use of product functions.  
Please keep this manual for future inquiries.



What is in YASHICA x Peanuts Digital Camera?

1. YASHICA x Peanuts Digital Camera
2. Storage bag
3. User Manual
4. Type-C USB Charging Cable
5. Hand strap
6. Cleaning cloth
7. Key chain
8. YASHICA x Peanuts Stickers

## Product Overview

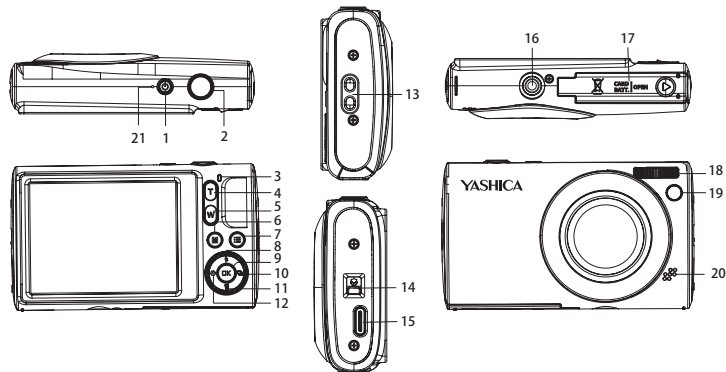

1. Power Button
2. Shutter Button
3. Charging Indicator
4. T Button (Tight for zooming in)
5. W Button(Wide for zooming out)
6. Mode Button
7. Menu Button
8. Up/Flash Mode
9. OK Button
10. Right/Continuous Shoot
11. Down/Delete
12. Left/Timer

13. Handstrap Hook
14. Scroll down: Micro Lens /  
Scroll up: Macro Lens
15. Type-C USB Port
16. Tripod Mount
17. Battery Cover  
(Battery slot with TF/ Micro SD Card Slot)  
\*No TF/Micro SD Card is included.
18. LED Flashlight
19. Selfie mirror
20. Speaker
21. Mic

# Operational Instructions

First time using YASHICA x Peanuts Digital Camera

## 1. Inserting the TF/MicroSD Card

- Open the battery cover on the left bottom (camera lens facing the user) to insert the TF/MicroSD Card into the TF/MicroSDCard Slot. When the card is locked, you will hear a "click"sound.
- Close the cover.

Remarks: Make sure the device is turned off.

Important: Format the TF/MicroSD Card for use

- Format the TF/MicroSD Card in the camera. Press Menu Button and go to Setting > Format function, select OK to confirm.
- If there is any existing data in the TF/MicroSD card, please back up the data before formatting.

## 2. Charging YASHICA x Peanuts Digital Camera

- Connect the Charging Cable to the USB Type-C Port.
- The charging indicator turns red while being charged. It will turn green when the camera is fully charged. Make sure the battery is inserted in the camera, and charge with the provided Type C USB charging cable.

## 3. Attaching the hand strap

- You can attach the provided hand strap to the hook.

## 4. Attaching to tripod

- You can mount the camera to tripods with 1/4"-20 thread mount for capturing the moments in photos or video.

## 5. Micro Lens vs Macro Lens

- Micro Lens: Used for detailed close-ups and close focusing, from 15cm to 50cm
- Macro Lens: For general usage

| Buttons        | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power Button   | Turn the camera on/off.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Shutter Button | Photo mode: Take photos.<br>Video mode: Start/stop recording.<br>Playback mode: Play the video file/Return to photo mode.                                                                                                                                                                                                                                                                                                                                                                                          |
| W Button       | Long press to zoom out while taking photos.<br>Playback mode: Press to zoom out the photo.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| T Button       | Long press to zoom in while taking photos.<br>Playback mode:Press to zoom in the photo.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Mode Button    | Switching modes: photo mode/video mode/playback mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Menu Button    | Enter menu settings: <ul style="list-style-type: none"><li>• Scene</li><li>• Image Size</li><li>• Anti Shake</li><li>• Face Detect</li><li>• Smile Capture</li><li>• Continuous Shooting</li><li>• Timer</li><li>• Setup</li><li>• Exposure</li><li>• ISO</li><li>• White Balance</li><li>• Sharpness</li><li>• Effect</li><li>• Image Quality</li><li>• Date</li><li>• Auto Shutdown</li><li>• Language</li><li>• Frequency</li><li>• Sound</li><li>• Format</li><li>• Default Setting</li><li>• Cancel</li></ul> |
| OK Button      | Select the parameters you need and confirm.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Up             | Up: Going up in the menu settings.<br>Press once: For Auto flash<br>Press twice: For always flash on<br>Press the third time to turn off the flashlight.<br>Playback mode: stop playing video.                                                                                                                                                                                                                                                                                                                     |
| Down           | Down: Going down in the menu settings<br>Shortcut delete button for photos/videos.                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| Buttons | Function                                                                                                                                                                                                                         |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Left    | Left: Going left in the menu settings.<br>Timer:<br>Press once to set the 2-second timer.<br>Press 2 times to set the 5-second timer.<br>Press 3 times to set the 10-second timer.<br>Press 4 times to cancel the timer.         |
| Right   | Right: Going right in the menu settings.<br>Continuous shooting: This mode sets the number of continuous photos, press once to set the option of taking 3 photos.<br>Press 2 times to cancel the setting, and only take 1 photo. |

#### How to Take Photo

Optimal distance: b

1. The camera is in photo mode by default when you turn on the camera.
2. Press Shutter Button to take a photo.

 
#### How to Record Video

1. Press the Mode Button once to enter Video Mode. Press the Shutter Button to start/stop recording. When recording, there is a red flashing sign on the screen and the recording will start from 00:00:01 onwards.
2. Press the shutter button to start/stop video recording.


#### How to Play Back and Delete Files (Photos and Videos)

1. Press the Mode Button two times to enter Playback Mode.
2. Press Left or Right Button to select and go back and forth for photos and videos.
3. Press Down Button. The question: Delete This Image? or Delete This Video? pops out, select Yes to delete the selected image.
4. Alternatively, Press No to exit delete files.
5. Please press the "Mode" button to exit the playback mode.

## Display Preview

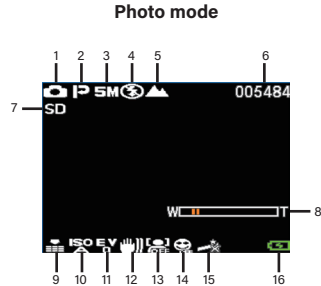

- |                            |                   |
|----------------------------|-------------------|
| 1. Photo Mode              | 9. Image Quality  |
| 2. Scene                   | 10. ISO           |
| 3. Photo Resolution        | 11. Exposure      |
| 4. Flashlight              | 12. Anti Shake    |
| 5. Scene                   | 13. Smile Detect  |
| 6. Available Photos/Videos | 14. Effect        |
| 7. Micro SD Card Inserted  | 15. Battery Level |
| 8. Digital zoom            |                   |

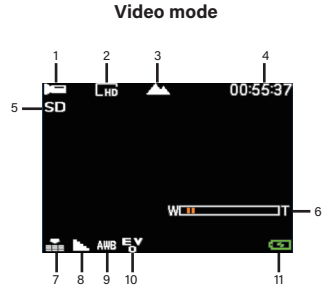 

- |                           |                   |
|---------------------------|-------------------|
| 1. Video Mode             | 7. Video Quality  |
| 2. Video Resolution       | 8. Sharpness      |
| 3. Scene                  | 9. White Balance  |
| 4. Available Videos       | 10. Exposure      |
| 5. Micro SD Card Inserted | 11. Battery Level |
| 6. Digital zoom           |                   |

## Menu Settings

| Function            | Introduce                                                                                                                                                                                                                         |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Scene               | You can set the scene to different scenes. Auto / Night Portrait / Night Scenery / Portrait / Scenery / Sport / Party Beach/ High Sensitivity .<br>The default setting is Auto.<br>Press Mode Button to return to the Photo Mode. |
| Image Size          | You can set the scene to different resolutions. 30MP / 24 MP// 20MP/ 16MP/ 10MP/ 8MP / 7MP / 5MP.<br>The default setting is 5MP.                                                                                                  |
| Anti-Shake          | You can set the anti-shake function for optimising image quality.<br>The default setting is on.                                                                                                                                   |
| Face Detect         | You can set the face detect function to be on, off, or omit this function with the cancel option. The setting is to detect and locate human faces.<br>The default setting is off.                                                 |
| Smile Capture       | You can set the smile capture to be on or off. The setting allows the camera to take a photo when it detects a smiling face.<br>The default setting is off.                                                                       |
| Continuous Shooting | You can set this setting to take multiple photos.<br>The default setting is off.                                                                                                                                                  |
| Timer               | You can set the timer: Off / 2 Seconds / 5 Seconds / 10 Seconds.<br>The default setting is off.                                                                                                                                   |
| Exposure            | You can set the exposure from +3 to -3.<br>The default setting is 0.                                                                                                                                                              |
| ISO                 | You can choose the ISO from: Auto, 100, 200 or 400.<br>The default setting is Auto.                                                                                                                                               |
| White Balance       | You can choose the White Balance from: Auto, Daylight, Cloudy, Tungsten, Fluorescent.<br>The default setting is Auto.                                                                                                             |

| Function       | Introduce                                                                                                                                                                                                                                                                                                |
|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sharpness      | You can set the file sharpness from: Normal, Sharp, Soft.<br>The default setting is Normal.                                                                                                                                                                                                              |
| Effect         | You can choose the photo effects based on your preference, from Normal, B&W, Sunset,Warm, Cool, Over Exposed, IR, Binary, Vivid, Undertone.<br>The default setting is normal.                                                                                                                            |
| Image Quality  | You can set the images to: Super Fine, Fine or Normal.<br>The default setting is Super Fine.                                                                                                                                                                                                             |
| Date           | You can choose to turn on or off the date tag. You can choose to set a date in the following format.<br>YY/MM/DD hr:min:sec<br>The default setting is off.                                                                                                                                               |
| Auto Power Off | You can choose the auto power off setting to be off, 1 minute, 3 minutes, 5 minutes.<br>The default setting is 3 minutes.                                                                                                                                                                                |
| Language       | There are 13 languages to support, including<br><div> <div> - English<br/>- Spanish<br/>- Portugese<br/>- French </div> <div> - German<br/>- Italian<br/>- Dutch<br/>- Traditional Chinese </div> <div> - Simplified Chinese<br/>- Japanese<br/>- Russian </div> </div> The default language is English. |
| Frequency      | The frequency setting is 60Hz/50Hz.<br>The default setting is 60Hz.                                                                                                                                                                                                                                      |
| Button Sound   | The sound effect can be turned on or off.<br>The default setting is on.                                                                                                                                                                                                                                  |

| Function                   | Introduce                                                                                                                                                                                                                                                                                      |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Format                     | This function allows you to format the TF/Micro SD Card.<br>If there are any pre-existing photos or videos, please back up before proceeding to format the TF/Micro SD card.<br>Formatting sets the TF/Micro SD card to fit with the camera's file structure in storing the photos and videos. |
| Restore to Factory Setting | You can choose to reset the system to the original factory setting.<br>After the Menu Setting is completed press the Menu button to return to photo/video mode settings.                                                                                                                       |

#### How to Download Photo/ Video Files to Computer

1. Turn on the camera and connect it the camera with the USB Type-C cable and the computer.
2. You can see a folder with the files, and hence, you can download the photo and videos files from the camera to your computer.
3. After downloading, please remove the USB Type-C cable and press "Eject"

#### Remarks for battery:

If the battery is mishandled, the battery can possibly burst, leading to a fire or burn. Please be aware of the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or excessive force, such as hammering, dropping or stepping on it.
- Do not allow metal objects to come into contact with the battery terminals.
- Do not expose the battery to temperature above 60°C (140°F) in direct sunlight or in a car parked under the sun.
- Do not incinerate or dispose of in fire.
- Do not handle the damaged or leaking lithium ion battery.
- Make sure to charge the battery with a reliable charger.
- Keep the battery pack out of the reach of young children.
- Keep the battery pack dry.
- Replace only the same battery with YASHICA.
- Dispose of used battery packs promptly as described in the instructions.

## Troubleshooting

| Error/Issue                  | Solution                                                                                                                                                                       |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Low/No Battery               | Charge the camera with the provided Type-C charging cable.                                                                                                                     |
| No TF/MicroSD Card Inserted  | There is no TF/MicroSD included in the packaging. Please insert a TF/MicroSD card.                                                                                             |
| Unformatted TF/MicroSD Card  | Back up the photos and videos from the TF/MicroSD Card to your computer or other storage medium.<br>Format the TF/MicroSD Card from the Format function or from your computer. |
| Unrecognised TF/MicroSD Card | Reinsert the TF/MicroSD Card.                                                                                                                                                  |

## Specifications

|                               |                                                       |
|-------------------------------|-------------------------------------------------------|
| Product name                  | YASHICA x Peanuts Digital Camera                      |
| Video Resolution              | 1080P /720P / 480P                                    |
| Image Resolution              | 5MP up to 30MP                                        |
| Shooting Distance             | 100cm to ∞                                            |
| Memory Card                   | Support TF/MicroSD card up to 64GB (SDHC Level 6)     |
| Photo Format                  | JPG                                                   |
| Video Format                  | AVI                                                   |
| Electronic Zoom               | 8X                                                    |
| USB Port                      | Type-C USB                                            |
| Display                       | 2.4" 320 x 240 IPS                                    |
| Battery                       | Rechargeable Li-Ion Battery                           |
| Battery Capacity              | 650mAh                                                |
| Language                      | Support multi-language                                |
| Focal Length                  | f=7.36mm                                              |
| Aperture                      | F/3.2                                                 |
| Operating System Requirements | Windows 7, Windows 8, Windows 10, Windows 11, Mac10.2 |
| Net weight                    | 256g (With battery)                                   |
| Net weight                    | 100g (No battery)                                     |
| Packaging size                | 94*24*58mm                                            |



# Warranty Policy

If you are experiencing a problem with a YASHICA purchase, please kindly read the information below to understand and determine if the issue is covered under YASHICA warranty.

1. YASHICA products are guaranteed against manufacturing defects one (1) year from the original date of purchase. YASHICA's sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA's discretion. Please keep the receipt or invoice of your purchase.

2. The warranty card and original purchase receipt must be emailed to YASHICA at [cs@yashica.com](mailto:cs@yashica.com) and/or present to the YASHICA authorized service facility before any repairs can be made under warranty.

3. All costs, including but not limited to transportation, mail and incidental charges, in relation to repair work are at user's expenses.

4. Warranty does not apply to any of the followings:

- 4.1 Damages arising from normal wear and tear; cosmetic damages including scratches or dents;
- 4.2 Damages caused by misuse, abuse, mishandling, misplacement, or alteration of the product or any usages that contradict with the instructions stated in the User Manual;
- 4.3 Products that have been disassembled, repaired or modified by person(s) other than YASHICA authorized service facility;
- 4.4 Losses and damages arising from accidents or natural calamities;
- 4.5 Damage caused as a result of improper transportation or packing/packaging when returning the product

5. If it is determined that the product is not covered under warranty, you will be required to confirm the quotation provided and pay for the repair. Once the payment is made, YASHICA will arrange for relevant repair/replacement.

6. If it is determined that the warranty covers the product's fault, such as manufacturing defect covered by the warranty, YASHICA will repair/replace your unit at no charge/free of charge. At YASHICA's discretion, YASHICA will cover shipping costs. Communication will be carried out via email at [cs@yashica.com](mailto:cs@yashica.com)

7. We reserve the right to modify these terms without prior notice.

For any enquiries, please feel free to email to [cs@yashica.com](mailto:cs@yashica.com)

Address: Room 403, Floor 4, Shiu Fat Industrial Building, 139-141 Wai Yip Street, Kwun Tong, Kowloon, Hong Kong

YASHICA products are guaranteed against manufacturing defects one (1) year from the original date of purchase. YASHICA's sole obligation in the event of defects during the said period is to repair or replace the defective part or product with a comparable part at YASHICA's discretion. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. YASHICA assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from using this product. In no event YASHICA is liable for incidental or consequential damages relating to or resulting from using YASHICA products or any of their parts. Returns or replacement of parts and products may be subjected to shipping, handling, replacement and restocking fees.

If you have further questions or comments, please contact our customer support team - at [cs@yashica.com](mailto:cs@yashica.com).

**YASHICA.com**