



MeetingBar A20/A30 Teams[®] Collaboration Bar User Guide



Version 15.52 | Mar. 2021

Contents

About This Guide	4
Related Documentations	
Summary of Changes	
Changes for Guide Version 15.52.	
Getting Started	5
Hardware of MeetingBar A20	
Front Panel of MeetingBar A20	
Rear Panel of MeetingBar A20	
Hardware of MeetingBar A30	
Front Panel of MeetingBar A30	
Rear Panel of MeetingBar A30	8
LED Instructions of Devices.	9
The Home Screen	9
Interactive Mode	10
Touch Control	11
Remote Control	
Waking the System	12
Signing into Microsoft Teams	12
Signing into Your Device	
Signing into Microsoft Teams on Your Device	
Signing into Microsoft Teams via Web Sign-in	13
Signing out of Your Device	14
Meeting	14
Creating a Meeting	
Joining a Meeting	
One-button/One-touch Join	15
Call Meeting Number Join	16
Proximity Join	16
Joining a Scheduled Meeting	
Managing a Meeting	19
Adding Participants	
Removing a Participant	
Managing Audio	
Managing Video	
Recording a Meeting	
Sharing Whiteboard	
Introduction of the Whiteboard	
Using and Viewing the Whiteboard	
Raising Hand	
Setting the Screen Layout	
Turning on Live Captions	
Leaving a Meeting	24

	nera Settings	24
	Controlling Camera Position	
	Configuring the Exposure Settings	
	Configuring the White Balance Setting	
	Adjusting Display Image of the Camera	
	Enabling Auto-framing for Camera	26
	Enabling Speaker-tracking for Camera	
	Adjusting Hangup Mode and Camera Pan Direction	27
	Resetting the Camera	
ea	ms Device Settings	
	Changing the Backlight Time	
	Audio Settings	
	Setting Audio Input/Output Device	
	Wireless Microphone	
	Connecting the Wireless Microphone	
	Bluetooth	
	Activating or Deactivating the Bluetooth Mode	29
	Enabling/Disabling Your Device Discovery	
	Disconnecting the Bluetooth Device	29
	Wireless Network	
	Activating or Deactivating the Wi-Fi Mode	
	Connecting to the Wireless Network	29
	Viewing the Wireless Network Information	
	Disconnecting the Wireless Network Connection	31
	Accessibility Features	31
	Large Text	
	High Contrast Mode	31
	Color Correction	
	Color Correction	
		31
eti	ting More Information About Microsoft Teams	31 . 32
et	ting More Information About Microsoft Teams	31 32 32
eti	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal	31 32 32 32
əti	ting More Information About Microsoft Teams	31 32 32 32
	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback	31 32 32 32 32
	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices	
	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices Rebooting Your Device	
	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices Rebooting Your Device Viewing Device Status	
	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices Rebooting Your Device	
ai	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices Rebooting Your Device Viewing Device Status Resetting Your Device	
ai	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices Rebooting Your Device Viewing Device Status Resetting Your Device	
ai	ting More Information About Microsoft Teams Viewing More Information About Microsoft Teams Company Portal Sending Feedback ntaining Teams Devices. Rebooting Your Device	
ai	ting More Information About Microsoft Teams	
ai	ting More Information About Microsoft Teams	
lai	ting More Information About Microsoft Teams	

About This Guide

Thank you for choosing Yealink MeetingBar A20/A30 video collaboration bar, which is mainly designed to work with the Microsoft Teams client. This guide provides everything you need to quickly use your new device. Firstly, verify with your system administrator that the IP network is ready for device configuration. Also, be sure to read the Quick Start Guide in the product package.

- Related Documentations
- Summary of Changes

Related Documentations

You can find the following types of documents from each product support page on Yealink Support:

- Release Notes: This guide describes what's new for a new device firmware.
- Quick Start Guide: This guide describes the contents of your package, how to assemble the device or accessory. This guide is also included in your device package.
- Administrator Guide: This guide provides detailed information about setting up your network and configuring features.

Summary of Changes

• Changes for Guide Version 15.52

Changes for Guide Version 15.52

MeetingBar A30 is new to this guide.

The following sections are new for this version:

- Hardware of MeetingBar A30
- Recording a meeting
- Sharing Whiteboard
- Raising Hand
- Setting Screen Layout
- Turning on Live Captions
- Audio Settings

Major updates have occurred to the following sections:

- Due to Teams APP is updated, the interface displayed on the device has changed.
- LED Instructions of Devices
- Configuring the Exposure Settings
- Configuring the White Balance Setting
- Adjusting Display Image of the Camera
- Adjusting Hangup Mode and Camera Pan Direction

The following features are be cancelled:

- Screen savers.
- The requirement to import the license from the Zoom Rooms version upgrade to the Teams version.

Getting Started

This chapter aims to make you familiar with the device.

- **Note:** As you read this guide, keep in mind that some features are configurable by your system administrator or determined by your device environment. As a result, some features may not be enabled or may be operated differently on your device. Additionally, the examples and graphics in this guide may not directly reflect what is displayed or is available on your device.
- Hardware of MeetingBar A20
- Hardware of MeetingBar A30
- LED Instructions of Devices
- The Home Screen
- Interactive Mode
- Waking the System

Hardware of MeetingBar A20

- Front Panel of MeetingBar A20
- Rear Panel of MeetingBar A20

Front Panel of MeetingBar A20



No.	Item	Description
1	LED Indicator	Indicates the device status.
2	Camera	Camera with an electric privacy shutter.

Related information

LED Instructions of Devices



No.	Port Name	Description
1	Reset Key	Reset the MeetingBar A20 device to factory defaults.
2	DC48V	Connect to the power source via a power adapter.
3	HDMI	Connect to a monitor for video images output.
4	VC Hub/ Phone	 Coming soon: If you want to use wired sharing to present, connect this port to the PoE port on the VCH51 video conferencing hub. Connect to VCM34/VCM38. Connect to MSpeaker II.
5	Internet	Connect to the network device.
6	Security Slot	Allow you to connect a universal security cable to the device, so you can lock the device down. The device cannot be removed when locked.
7	USB	Allow you to connect the USB accessories.

Hardware of MeetingBar A30

- Front Panel of MeetingBar A30
- Rear Panel of MeetingBar A30

Front Panel of MeetingBar A30



No.	Item	Description
1	LED Indicator	Indicates the device status.
2	Camera	Camera with an electric privacy shutter.

Related information

LED Instructions of Devices

Rear Panel of MeetingBar A30



No.	Port Name	Description
1	Reset Key	Reset the MeetingBar A30 device to factory defaults.
2	DC48V	Connect to the power source via a power adapter.
3	VC Hub/Phone	 Coming soon: If you want to use wired sharing to present, connect this port to the PoE port on the VCH51 video conferencing hub. Connect to VCM34/VCM38. Connect to MSpeaker II.
4	Line Out/Line in	Connect to an audio output/input device via an audio cable (3.5mm).
5	HDMI	Connect to a monitor for video images output.
6	Internet	Connect to the network device.
7	Security Slot	Allow you to connect a universal security cable to the device, so you can lock the device down. The device cannot be removed when locked.
8	USB	Allow you to connect the USB accessories.

LED Instructions of Devices

LED Status	Description	
Off	The device is powered off, or is not connected to the power adapter.	
Solid green	The device is initializing.	
	The device is working (calling/sharing content).	
Flashing green	There is an incoming call.	
Solid red	The device is muted.	
Solid orange	The device is idle.	
Flashing orange	The device is upgrading firmware.	

Note: You can configure backlight time for the device. The device goes to the sleep mode after the designated time.

Related tasks

Changing the Backlight Time

The Home Screen

If the system has a Teams account logged in, the monitor idle screen is shown as below:



If you have scheduled meetings, the monitor idle screen is shown as below:



No.	Item	Description
1	Time	The current time of the system.
2	Profile	The current account name and account number.
3	More	Configure the video conferencing device.
4	Meet now	Initiate a Meet Now conference at any time, without any reservation.
5	Dial pad	Join the meeting by calling a meeting number.
6	Schedule	When you log into your Teams account, you can view the conference schedule. In the example: Meeting theme: A20 Demo Test Meeting time: 11:00 AM - 6:30 PM Moderator: Zhang teamstest

Interactive Mode

If you connect a touch display device, you can operate the Meetingbar A20/A30 either by remote control or touch control. If you connect a non-touch display device, you can use the remote control, mouse, or CTP18.

Note: For more information about how to use CTP18 control the device, please refer to Yealink Teams CTP18 Collaboration Touch Panel User Guide.

- Touch Control
- Remote Control

Touch Control



Touch Monitor

Remote Control



Remote Controller

The following table introduces the keys on the remote control:

No.	Name	Description
1	Answer Key	Press to answer a call.

No.	Name	Description
2	Scroll Wheel/OK Key	 Scroll up to increase the focal length of the camera. Scroll down to decrease the focal length of the camera. Press to confirm the action.
3	Mute Key	Press to mute or unmute the microphone.
4	Teams Key	Press to join a meeting.
5	End Call Key	Press to leave a meeting.
6	Navigation Key	Navigate through menu items.
7	Back Key	Press to return to the previous menu.
8	Volume Up/Down Key	Press to increase/decrease the volume.

Waking the System

Procedure

Do one of the following:

- · Press any keys on your remote control to wake up the device.
- Tap the touch monitor screen to wake up the device.

Note: If your monitor with CEC, the device wakes up automatically when you near the device.

Signing into Microsoft Teams

You can sign into the device with your Microsoft online account.

- Signing into Your Device
- Signing out of Your Device

Signing into Your Device

You can sign into your Microsoft online account directly on your device or sign into your device via a web sign-in, which includes your sign-in address and password.

About this task

Contact your system administrator to get your sign-in account.



- Signing into Microsoft Teams on Your Device
- Signing into Microsoft Teams via Web Sign-in

Signing into Microsoft Teams on Your Device

Procedure

1. Select Sign in.



You will be connected to the Company Portal automatically.

- 2. Enter your user credentials.
- 3. After the device signs in successfully, select Got it.

Related information

The Home Screen

Signing into Microsoft Teams via Web Sign-in

Procedure

1. Select Sign in.



You will be connected to the Company Portal automatically.

2. Tap Sign in from another device from the Sign in screen.

Company Portal		
	Microsoft Teams	
	T Microsoft	
	Sign in	
	Email or phone Cart access your account?	
	Sign in from another device	
	Next	
		ms of use Privacy

- 3. Go to https://microsoft.com/devicelogin on your computer.
- 4. Enter the code shown on your device and select Next.
- 5. Enter your user credentials or select the desired account to sign in.

A confirmation message is displayed after you successfully sign into Microsoft Intune Company Portal.

Related information

The Home Screen

Signing out of Your Device

Procedure

- 1. Go to More > Settings > Sign out.
- 2. Select OK.

Meeting

Teams meetings are a great way to come together with your colleagues and clients both inside and outside of your organization. You can initiate meetings, view scheduled meetings, join meetings, and manage meetings.

- Creating a Meeting
- Joining a Meeting
- Managing a Meeting
- Recording a Meeting
- Sharing Whiteboard
- Raising Hand
- Setting the Screen Layout
- Turning on Live Captions
- Leaving a Meeting

Creating a Meeting

When you register a Teams account, you can initiate a meet now conference at any time, without any reservation.

Procedure

1. Select Meet now.



- 2. Enter the participant account information to search and then select the desired participant.
- 3. Select Start meeting.

Joining a Meeting

- One-button/One-touch Join
- Call Meeting Number Join
- Proximity Join
- Joining a Scheduled Meeting

One-button/One-touch Join

You can join a Teams meeting scheduled on the Teams phone, the Teams client, or the Outlook.

Procedure

• Select Join to join the scheduled meeting.



On your remote control/CP900/CP700, press the Teams button Image:

Note: You can join the meeting by CP900/CP700 only if you are using a USB connection.

Call Meeting Number Join

You can join the meeting by calling a meeting number.

Before you begin

The calling plan has been configured for your Teams account.

Procedure

1. Select Dial pad.



2. Enter the meeting number and dial out.

Proximity Join

You can move a Teams meeting on your mobile phone or laptop to the nearby device by the option of **Add a room**.

Before you begin

Make sure the Bluetooth mode is activated and More > Proximity join is enabled.

Procedure

1. Before starting a meeting, do one of the following:

On the mobile phone: go to Join now > Join and add a room and select the desired device.

×	
	Demo Test Norden
	Off
	ZT
	Other join options
Ç	Dial in
R	Call me
⊲×	Audio off
Ş	Join and add a room

On the laptop: select Room audio (suggested) > Join now.

		skype2				- 0	×	
	Choose your video and audio options							
					Computer audio			
					Phone audio			
	K Your camera is turned off		I	Q	Room audio (suggested) We've detected a room device nearby.	0		
				Jess	s Song			
					We'll add the room's audio system to the meeting after you join			
	🕫 🔘 🞘 Background filters				Don't use audio			
					Cancel	Join now]	

2. During a meeting, go to ¹⁶ > **Add a room** and select the desired device on the mobile phone.



Related tasks

Activating or Deactivating the Bluetooth Mode

Joining a Scheduled Meeting

If you have scheduled meetings or are invited to a scheduled meeting, the meeting schedule will be displayed on your device. You can select the desired one to join.

Before you begin

The device synchronizes the meeting information from the server every 5 minutes. The device only displays meeting information within the last 10 minutes.

Procedure

- 1. On the idle screen:
 - · Press the navigation key to view the upcoming meetings of today.

ም Jess Song 弾 +19293733280	All-day	
	A20 Demo Test 11:00 AM-6:30 PM Zhang teamatest	-
	Meet row	Join
	# 59test1	
	Dist past 2:30 PM-3:00 PM Jess Song	
	ooo Test	
	More 3:00 PM – 3:30 PM Jess Song	

• Select **All-day** to view all-day meeting.



2. Select Join to join the meeting.

Managing a Meeting

You can manage meetings in the following ways:

- Adding Participants
- Removing a Participant
- Managing Audio
- Managing Video

Adding Participants

Before you begin

To use the dialpad to add a participant, make sure the calling plan has been configured for your Teams account.

Procedure

During the meeting, do one of the following:

• Select and select .

Enter the participant account information to search and then add the participant.

• Select -> Dial pad.

Dial out a number to add the participant.

Removing a Participant

You can remove participants, and the meeting continues.

Procedure

- 1. Select ^{e8} to view the participants list.
- 2. Select the desired participant and select Remove from meeting to remove the participant.

Managing Audio

- Muting/Unmuting the Microphone
- Muting a Participant
- Adjusting the Volume

Muting/Unmuting the Microphone

You can mute/unmute the microphone during the meeting.

Procedure

During the meeting, do one of the following:

- Select 🔍 / 📧 to mute/unmute the microphone.
- On your remote control, press the mute key.
- On your CP900/CP700, tap the mute key 🛃 .



Note: You can mute/unmute the microphone by CP900/CP700 only if you are using a USB connection.

Muting a Participant

You can mute a participant as needed.

Procedure

1. Select ⁸⁰ to view the participants list.

2. Select the desired participant and select Mute participant.



Adjusting the Volume

You can adjust the speaker volume.

Procedure

Do one of the following:

- Select / + to adjust volume.
- On the remote control, press the Volume Down/Up key to adjust volume.
- On your CP900/CP700, tap / + to adjust volume.

Note: You can adjust volume by CP900/CP700 only if you are using a USB connection.

Managing Video

- Turning off/on the Local Camera
- Turning off/on Incoming Video

Turning off/on the Local Camera

You can turn off/on your camera during the meeting.

Procedure

Select III / III to turn the camera off or on.

Turning off/on Incoming Video

- 1. Select -> Turn off incoming video to stop streaming the participant's video.
- 2. To view the participant's video, select -> Turn on incoming video.

Recording a Meeting

Any Teams meeting can be recorded to capture audio and video. The recording happens in the cloud, and it is saved so you can share it securely across your organization.

About this task

Note: Whiteboards are not currently captured in meeting recordings.

Procedure

During a more than two people meeting, select -> Start recording to record a meeting.

To stop recording, select -> Stop recording.

Sharing Whiteboard

Whiteboard integration in Microsoft Teams meetings is powered by whiteboard for the web, which lets participants of Teams meetings collaborate together on a shared digital canvas. You can share a whiteboard to make it available to all participants in a Teams meeting.

- Introduction of the Whiteboard
- Using and Viewing the Whiteboard

Introduction of the Whiteboard

Procedure

Introduction of the whiteboard is as below:



No.	Item
1	Pan and Zoom

No.	Item
2	Black Pen
3	Red Pen
4	Green Pen
5	Blue Pen
6	Eraser
7	Add text
8	Add note
9	Settings
10	Stop presenting
11	Mute microphone

Using and Viewing the Whiteboard

Procedure

During the meeting, select **...** > **Share Whiteboard**.

Note: You can use the whiteboard to share content if the device connected to a touch display device, otherwise you can only view what others share.

Raising Hand

Everyone in the meeting can raise hands to apply for speaking.

Procedure

During the meeting, select **••••** > **Raise hand**.

Setting the Screen Layout

You can set the layouts as Gallery, Large Gallery, or Together mode.

- 1. Select when the meeting is more than four people.
- 2. Select Gallery, Large gallery, or Together mode to change layouts.

Turning on Live Captions

If you enable the live caption feature, the device will add real-time captions to your meeting.

Procedure

During the meeting, select **•••** > **Turn on live captions**. Live captions are displayed on the display screen.

Leaving a Meeting

Procedure

Do one of the following:

• Select 🔼 .

=

- Press the End Call key on your remote control.
- Tap
 on your CP900/CP700.
 - **Note:** You can leave the meeting by CP900/CP700 only if you are using a USB connection.

Other participants remain connected.

Camera Settings

You can set multiple camera parameters to make the MeetingBar A20/A30 have better framing in the different meeting room environments.

- Controlling Camera Position
- Configuring the Exposure Settings
- Configuring the White Balance Setting
- Adjusting Display Image of the Camera
- Enabling Auto-framing for Camera
- Enabling Speaker-tracking for Camera
- Adjusting Hangup Mode and Camera Pan Direction
- Resetting the Camera

Controlling Camera Position

- 1. Go to More > Settings > Device Settings > Control.
- **2.** Do one of the following:
 - Select (a) / (a) to control camera zoom out/in.
 - · Select the arrow keys to pan/tilt the camera.
 - Select **Reset** to reset the position for camera.

Configuring the Exposure Settings

Procedure

- 1. Go to More > Settings > Device Settings > Exposure Settings.
- 2. Select the desired mode from the Exposure Mode field.

For MeetingBar A20:

• If you select Auto Exposure:

Select the desired value from the **Exposure Compensation**, **Flicker**, **Gain Limit**, **Wide Dynamic Range**, **Metering** field respectively.

• If you select Manual Exposure:

Select the desired value from the Gain Limit, Wide Dynamic Range, Shutter field respectively.

• If you select Shutter Priority:

Select the desired value from the **Exposure Compensation**, **Gain Limit**, **Wide Dynamic Range**, **Metering**, **Shutter** field respectively.

• If you select Brightness Priority:

Select the desired value from the **Flicker**, **Wide Dynamic Range**, **Metering**, **Brightness** field respectively.

For MeetingBar A30:

• If you select Auto Exposure:

Select the desired value from the Flicker field respectively.

• If you select Manual Exposure:

Select the desired value from the Shutter, Brightness field respectively.

• If you select Shutter Priority:

Select the desired value from the Shutter field respectively.

• If you select Brightness Priority:

Select the desired value from the Brightness field respectively.

Configuring the White Balance Setting

Procedure

1. Go to More > Settings > Device Settings > White Balance Setting.

- 2. Select the desired value from the White Balance Mode field and select OK.
 - Auto (default), it calculates the best white balance setting based on lighting conditions in the room.
 - Indoor
 - Outdoor
 - One push (MeetingBar A20)
 - **ATW** (MeetingBar A20), it automatically adjusts the white balance according to the picture taken by the camera.
 - Manual Setting (MeetingBar A20), you can manually adjust the color temperature in the Temperature field.
 - Incandescent (MeetingBar A30)
 - Fluorescent (MeetingBar A30)
 - Cloudy Daylight (MeetingBar A30)

Adjusting Display Image of the Camera

Procedure

- 1. Go to More > Settings > Device Settings > Graphics.
- 2. Select the desired mode from the **Display Mode** field.
 - High Definition
 - Standard
 - Mild
 - Custom, you can adjust the Saturation, Sharpness, Brightness (MeetingBar A20), and Contrast (MeetingBar A20) respectively, and select the desired mode from the Noise Reduction(2D) field.

Enabling Auto-framing for Camera

Auto-framing is mainly based on face detection, which provides real-time detection and position tracking on all faces in the conference room. All participants in the output screen are covered and the camera can be automatically adjusted according to the number of participants and the position changes.

About this task

When the auto-framing feature is enabled, you cannot control the camera position.

Procedure

- 1. Go to More > Settings > Device Settings > Others.
- 2. Select Auto Framing in Framing Mode field.

Enabling Speaker-tracking for Camera

Speaker-tracking is based on auto-framing, which can automatically focus on the speaker in the meeting.

Procedure

1. Go to More > Settings > Device Settings > Others.

- 2. Select Speaker Tracking in Framing Mode field.
- =
- Note: When you turn on voice-tracking, auto-framing will turn on automatically.

Adjusting Hangup Mode and Camera Pan Direction

Procedure

- 1. Go to More > Settings > Device Settings > Others.
- 2. Turn on Hangup Mode (MeetingBar A20).

The picture took by the camera is upside down. This mode is applicable when you install the camera upside down.

3. Select the desired value from the Camera Pan Direction field.

If you select **Reversed**, the camera pan direction will be reversed when pressing the left and right navigation keys on the remote control.

Resetting the Camera

You can reset the camera to factory defaults.

Procedure

- 1. Go to More > Settings > Device Settings > Others.
- 2. Select Reset Camera.
- 3. Select OK to reset the camera.

Teams Device Settings

- Changing the Backlight Time
- Audio Settings
- Wireless Microphone
- Bluetooth
- Wireless Network
- Accessibility Features

Changing the Backlight Time

The backlight brightness automatically changes after the device has been idle for a specified time.

About this task

You can change the backlight time in the following settings:

Backlight Time: The delay time to change the brightness of the LCD screen when the device is inactive. Backlight time includes the following settings:

15s, 30s, 1min, 2min, 5min, 10min, 30min, 45min or 1h: Backlight is turned off when the device is inactive after the designated time.

Procedure

- 1. Go to More > Settings > Device Settings > Display.
- 2. Select the desired time from the Backlight Time field.
- 3. Press OK.

Audio Settings

You can connect additional audio devices and choose the way of audio input and output.

- **Note:** It is only applicable to MeetingBar A30.
- Setting Audio Input/Output Device

Setting Audio Input/Output Device

Procedure

Go to More > Settings > Device Settings > Audio Input/Outout Device and choose one of the following:

- Auto
- Built-in Microphone/Speaker
- Line In/Out

Wireless Microphone

You can connect the device with wireless microphones.

Connecting the Wireless Microphone

Connecting the Wireless Microphone

Before you begin

Make sure the DD10 DECT Dongle is connected to the device.

Procedure

- 1. Go to More > Settings > Device Settings > Wireless Microphone.
- 2. Select New Mic-Wireless.
- 3. Place the MIC on the charger and long press Mute key for 5s into phone registration.
 - Note: You can connect up to 4 CPW90 (wireless expansion mic). To ensure the stability of the device, we recommend that you connect 2 CPW90.

Bluetooth

The Teams device supports Bluetooth.

- Activating or Deactivating the Bluetooth Mode
- Enabling/Disabling Your Device Discovery
- Disconnecting the Bluetooth Device

Activating or Deactivating the Bluetooth Mode

You need to activate Bluetooth mode to use the Bluetooth feature and you can deactivate the Bluetooth mode when you no longer use a Bluetooth device.

Procedure

- 1. Go to More > Settings > Device Settings > Bluetooth.
- 2. Turn on/off Bluetooth.

Enabling/Disabling Your Device Discovery

You can enable/disable this feature to allow/disallow your device to be discovered by other Bluetooth devices.

Procedure

- 1. Go to More > Settings > Device Settings > Bluetooth.
- 2. Turn on/off Open Discover.

Disconnecting the Bluetooth Device

You can disconnect the Bluetooth device from your device. After the Bluetooth device is disconnected, it stays in the paired devices list, so that you can easily connect it to your device next time.

Procedure

- 1. Go to More > Settings > Device Settings > Bluetooth.
- 2. Select the connected Bluetooth device. It prompts if you are sure to disconnect.
- 3. Select OK.

Wireless Network

The Teams device supports the Wi-Fi feature. If there is available Wi-Fi, you can enable the Wi-Fi feature to connect the device to the wireless network.

- Activating or Deactivating the Wi-Fi Mode
- Connecting to the Wireless Network
- Viewing the Wireless Network Information
- Disconnecting the Wireless Network Connection

Activating or Deactivating the Wi-Fi Mode

You can activate the Wi-Fi mode if you need to connect your device to the wireless work or deactivate the Wi-Fi mode when you need to connect your device to the wired network.

Procedure

- 1. Go to More > Settings > Device Settings > Wi-Fi (Admin only, default password: 0000).
- 2. Turn on/off Wi-Fi.

Connecting to the Wireless Network

There are two ways to connect the device to the wireless network.

- Connecting to an Available Wireless Network Manually
- Adding a Wireless Network manually

Connecting to an Available Wireless Network Manually

Before you begin

Get the password of the wireless network from your system administrator.

Make sure that the Wi-Fi mode is activated.

Procedure

- 1. Go to More > Settings > Device Settings > Wi-Fi (Admin only, default password: 0000).
- Select **Scan** to search the available wireless network.
- 3. Select the desired wireless network.
- 4. If the network is secure, enter its password.
- 5. Select CONNECT.

Related tasks

Activating or Deactivating the Wi-Fi Mode

Adding a Wireless Network manually

If your gateway/router has SSID broadcast disabled, it might not appear in the scanning results. In that case, you must manually add a wireless network.

Before you begin

Make sure Wi-Fi Mode is activated.

Procedure

- 1. Go to More > Settings > Device Settings > Wi-Fi (Admin only, default password: 0000).
- 2. Select > Add.
- 3. Enter the SSID and then select a security mode from the Security drop-down menu:
 - If you select None, select Save.
 - If you select WEP or WPA/WPA2-PSK, enter the password and then select Save.
 - If you select **802.1×EAP**, select the desired EAP method and Phase-2 authentication, enter the desired values in the **Identity**, **Anonymous identity**, and **Password** fields and then select **Save**.

If you enable **Show advanced options**, select a desired value in the **Proxy** field; and if you select **Manual**, enter the information about the proxy server in the corresponding fields.

Related tasks

Activating or Deactivating the Wi-Fi Mode

Viewing the Wireless Network Information

After connecting to the wireless network, you can view the wireless network information (such as wireless status, link speed, security, IP address, signal strength, and so on.)

- 1. Go to More > Settings > Device Settings > Wi-Fi (Admin only, default password: 0000).
- 2. Select the connected wireless network.

Disconnecting the Wireless Network Connection

Procedure

- 1. Go to More > Settings > Device Settings > Wi-Fi (Admin only, default password: 0000).
- 2. Select the connected wireless network.
- 3. Select FORGET.

The wireless network is disconnected. You can tap it again to connect.

Accessibility Features

The device includes a number of features to accommodate vision-impaired users.

- Large Text
- High Contrast Mode
- Color Correction

Large Text

You can change the displayed text size.

Procedure

- 1. Go to More > Settings > Device Settings > Accessibility.
- 2. Turn on Large Text.

High Contrast Mode

You can change contrast if any difficulties in reading text on the screen.

Procedure

- 1. Go to More > Settings > Device Settings > Accessibility.
- 2. Turn on High Contrast Mode.

Color Correction

You can change color mode if any difficulties in color recognition.

- 1. Go to More > Settings > Device Settings > Accessibility.
- 2. Select the desired value from the Color Correction field.
 - Off
 - Deuteranomaly (red-green)
 - Protanomaly (red-green)
 - Tritanomaly (blue-yellow)
- 3. Select OK.

Getting More Information About Microsoft Teams

This topic provides you to view more information about Microsoft Teams. If you encounter problems when using the Teams device, you can send feedback to Microsoft.

- Viewing More Information About Microsoft Teams
- Company Portal
- Sending Feedback

Viewing More Information About Microsoft Teams

You can view more information about Microsoft Teams such as the version, calling version, and the details of Privacy& Cookies, Microsoft Software License Terms, and Third-party Notices.

Procedure

Go to More > Settings > About.

You can select **Privacy& Cookies**, **Terms of Use**, or **Third Party Software Notices and Information** to view the details.

Company Portal

Microsoft Intune helps organizations manage access to corporate apps, data, and resources. Company Portal is the app that lets you, as an employee of your company, securely access those resources. Before you can use this app, make sure your IT admin has set up your work account and have a subscription to Microsoft Intune.

Company Portal helps simplify the tasks you need to do for work:

- · Enroll your device to access corporate resources, including Office, email, and OneDrive for Business
- · Sign into corporate resources with company-issued certificates
- · Reduce the number of times you need to sign into corporate resources with single sign-on
- Browse and install approved business apps from your IT department or the Microsoft Store for Business
- View and manage your enrolled devices and wipe them if they get lost or stolen
- Get help directly from your IT department through the available contact information
- **Note:** Every organization has different access requirements and will use Intune in ways that they determine will best manage their information. Some functionality might be unavailable in certain countries. If you have questions about how this app is being used within your organization, contact your company's IT administrator.

Sending Feedback

If you encounter problems while using the Teams device, please feel free to send feedback to let us know.

- 1. Go to More > Settings > Report an issue.
- 2. Select a desired report type in the Type field.
- 3. Enter the alias (your email address).

- 4. Select a desired type of issue and then enter the issue title.
- 5. Select SEND.

Maintaining Teams Devices

When the device cannot be operated properly, you can investigate or troubleshoot issues along with any other tasks your administrator may ask you to perform.

- Rebooting Your Device
- Viewing Device Status
- Resetting Your Device

Rebooting Your Device

Your system administrator may ask you to reboot your device if it malfunctions or to assist in troubleshooting.

Procedure

- 1. Go to More > Settings > Device Settings > Reboot.
- 2. Select Reboot phone.

It prompts if you are sure to reboot the device.

3. Select OK.

Viewing Device Status

Your system administrator may ask you to view the device status such as network, MAC, firmware, Partner APP version, Company Portal version, and Teams version.

Procedure

Go to More > Settings > Device Settings > About.

Resetting Your Device

You can reset the device to factory settings with the need for entering the Administrator's password.

- 1. Go to More > Settings > Device Settings > Debug (Admin only, default password: 0000).
- 2. Select Reset to Factory Settings.
 - It prompts if you are sure to reset to factory default.
- 3. Select OK.

Troubleshooting

If you are having issues with your device, you can try the troubleshooting options and solutions in the following topics to resolve certain issues.

- Why does the device display "Network unavailable"?
- Why does the device display time and date incorrectly?
- How can I obtain the MAC address of a device when the device is not powered on?
- How can I switch to Teams edition?
- Checking the IP Address of Device

Why does the device display "Network unavailable"?

• Ensure that the switch or hub in your network is operational.

Why does the device display time and date incorrectly?

Check whether your device obtains the time and date from the SNTP server automatically. If the device fails to connect the SNTP server, contact your system administrator for more information. You can also configure the time and date manually.

How can I obtain the MAC address of a device when the device is not powered on?

You can use one of the following ways to obtain the MAC address of a device:

- The PO (Purchase Order) provided by the supplier.
- The label of the carton box.
- The device's bar code on the back of the device.

How can I switch to Teams edition?

If your device is not the Teams edition, you can switch to the Teams edition.

Procedure

Do one of the following:

- Upgrade firmware via the web user interface.
- Auto provisioning.

Checking the IP Address of Device

Procedure

Go to More > Settings > Device Settings > About.

| Troubleshooting | 35