


**brother**®

# Basic User's Guide

## MFC-J6920DW

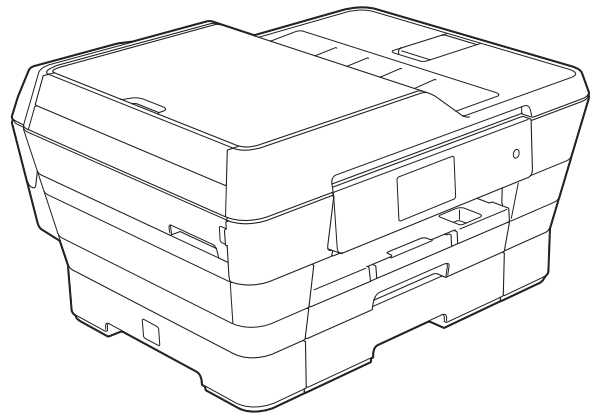

## **If you need to contact Customer Service**

**Please complete the following information for future reference:**

**Model Number:** MFC-J6920DW

**Serial Number:** <sup>1</sup> \_\_\_\_\_

**Date of Purchase:** \_\_\_\_\_

**Place of Purchase:** \_\_\_\_\_

<sup>1</sup> **The serial number is on the back of the unit. Retain this User's Guide with your sales receipt as a permanent record of your purchase, in the event of theft, fire or warranty service.**

**Register your product on-line at**

**<http://www.brother.com/registration/>**

# User's Guides and where do I find them?

Which Guide?	What's in it?	Where is it?
<b>Product Safety Guide</b>	Read this Guide first. Please read the Safety Instructions before you set up your machine. See this Guide for trademarks and legal limitations.	Printed / In the box
<b>Quick Setup Guide</b>	Follow the instructions for setting up your machine, and installing the drivers and software for the operating system and connection type you are using.	Printed / In the box
<b>Basic User's Guide</b>	Learn the basic Fax, Copy, Scan and PhotoCapture Center™ operations and how to replace consumables. See troubleshooting tips.	Printed / In the box <sup>1</sup>
<b>Advanced User's Guide</b>	Learn more advanced operations: Fax, Copy, security features, printing reports and performing routine maintenance.	PDF file / CD-ROM
<b>Software and Network User's Guide</b>	This Guide provides instructions for Scanning, Printing, PC-Fax and other operations that can be performed by connecting your Brother machine to a computer. You can also find useful information about using the Brother ControlCenter utility, using your machine in a network environment, and frequently used terms.	HTML file / CD-ROM
<b>Web Connect Guide</b>	This Guide provides useful information about accessing Internet services from the Brother machine, as well as downloading images, printing data and uploading files directly to Internet services.	PDF file / Brother Solutions Center <sup>2</sup>
<b>AirPrint Guide</b>	This Guide provides information for using AirPrint to print from OS X v10.7.x, 10.8.x and your iPhone, iPod touch, iPad, or other iOS device to your Brother machine without installing a printer driver.	PDF file / Brother Solutions Center <sup>2</sup>
<b>Google Cloud Print Guide</b>	This Guide provides details on how to use Google Cloud Print™ services for printing over the Internet.	PDF file / Brother Solutions Center <sup>2</sup>
<b>Wi-Fi Direct™ Guide</b>	This Guide provides details on how to configure and use your Brother machine for wireless printing directly from a mobile device supporting the Wi-Fi Direct™ standard.	PDF file / Brother Solutions Center <sup>2</sup>
<b>Mobile Print/Scan Guide for Brother iPrint&amp;Scan</b>	This Guide provides useful information about printing from your mobile device and scanning from your Brother machine to your mobile device when connected to a Wi-Fi network.	PDF file / Brother Solutions Center <sup>2</sup>

<sup>1</sup> This may differ depending on your country.

<sup>2</sup> Visit us at <http://solutions.brother.com/>.

# Table of Contents

## (Basic User's Guide)

<b>1</b>	<b>General information</b>	<b>1</b>
	Using the documentation .....	1
	Symbols and conventions used in the documentation .....	1
	Accessing Brother Utilities (Windows® 8) .....	2
	Accessing the Advanced User's Guide and Software and Network User's Guide .....	2
	Viewing User's Guides .....	2
	How to access Guides for Advanced Features .....	4
	Accessing Brother Support (Windows®) .....	5
	Accessing Brother Support (Macintosh) .....	5
	Control panel overview .....	6
	3.7"(93.4 mm) Touchscreen LCD .....	9
	Setting the Ready screen .....	13
	Basic Operations .....	13
	Shortcut Settings .....	14
	Adding Copy Shortcuts .....	14
	Adding Fax Shortcuts .....	15
	Adding Scan Shortcuts .....	16
	Adding Web Connect Shortcuts .....	18
	Changing Shortcuts .....	19
	Editing Shortcut Names .....	19
	Deleting Shortcuts .....	19
	Recalling Shortcuts .....	19
	Volume Settings .....	20
	Ring Volume .....	20
	Beeper Volume .....	20
	Speaker Volume .....	21
	Touchscreen LCD .....	21
	Setting the Backlight brightness .....	21
<b>2</b>	<b>Loading paper</b>	<b>22</b>
	Loading paper and other print media .....	22
	Loading paper in paper tray #1 .....	22
	Loading smaller paper (Photo, Photo L, Photo 2L or envelopes) .....	27
	Loading paper in paper tray #2 .....	30
	Loading paper in the manual feed slot .....	35
	Unprintable area .....	38
	Paper settings .....	39
	Paper Size and Type .....	39
	Tray use in Copy mode .....	39
	Tray use in Fax mode .....	40
	Acceptable paper and other print media .....	40
	Recommended print media .....	41
	Handling and using print media .....	41
	Choosing the right print media .....	42



<b>3</b>	<b>Loading documents</b>	<b>45</b>
	How to load documents .....	45
	Using the ADF .....	45
	Using the scanner glass .....	46
	Unscannable area .....	47
<b>4</b>	<b>Sending a fax</b>	<b>48</b>
	How to send a fax .....	48
	Stop faxing .....	50
	Setting scanner glass size for faxing .....	50
	Colour fax transmission .....	50
	Cancelling a fax in process .....	51
	How to preview an outgoing fax .....	51
	Transmission Verification Report .....	52
<b>5</b>	<b>Receiving a fax</b>	<b>53</b>
	Receive Modes .....	53
	Choose the Receive Mode .....	53
	Using Receive Modes .....	55
	Fax Only .....	55
	Fax/Tel .....	55
	Manual .....	55
	External TAD .....	55
	Receive Mode settings .....	56
	Ring Delay .....	56
	F/T Ring Time (Fax/Tel mode only) .....	56
	Fax Detect .....	57
	Fax Preview (Monochrome faxes only) .....	58
	How to preview a received fax .....	58
	Turning off Fax Preview .....	60
<b>6</b>	<b>Using PC-FAX</b>	<b>61</b>
	PC-FAX Sending .....	61
	Sending a file as a PC-FAX .....	61
	PC-FAX Receiving (Windows®) .....	62

<b>7</b>	<b>Telephone and external devices</b>	<b>64</b>
	Voice operations .....	64
	Fax/Tel mode.....	64
	Caller ID (U.K. and Ireland only).....	64
	Telephone services.....	65
	Setting the Telephone Line Type.....	65
	Voice over Internet Protocol (VoIP) .....	66
	Connecting an external TAD (telephone answering device).....	67
	Connection settings .....	67
	Recording an outgoing message (OGM) on an external TAD.....	68
	Multi-line connections (PBX) .....	68
	External and extension telephones.....	68
	Connecting an external or extension telephone .....	68
	Operation from external and extension telephones.....	69
	Using extension telephones (U.K. only) .....	69
	Using remote codes.....	70
<b>8</b>	<b>Dialling and storing numbers</b>	<b>72</b>
	How to dial .....	72
	Manual dialling.....	72
	Dialling from the Address Book .....	72
	Fax Redial .....	73
	Additional Dialling Operations.....	73
	Outgoing Call history .....	73
	Caller ID history .....	74
	Storing numbers .....	75
	Storing a pause .....	75
	Storing Address Book numbers.....	75
	Changing or deleting Address Book names or numbers .....	76
<b>9</b>	<b>Making copies</b>	<b>77</b>
	How to copy .....	77
	Stop copying.....	77
	Copy preset settings .....	77
	Copy options.....	78
	Paper Type .....	79
	Paper Size .....	79
	Tray Select .....	80
	ADF High Speed Mode copying .....	80
<b>10</b>	<b>Printing photos from a memory card or USB Flash drive</b>	<b>81</b>
	PhotoCapture Center™ operations (PHOTO mode) .....	81
	Using a memory card or USB Flash drive .....	81
	Getting started .....	82
	Print Images.....	84
	View Photos.....	84
	PhotoCapture Center™ print settings.....	85
	How to scan to a memory card or USB Flash drive.....	85

<b>11</b>	<b>How to print from a computer</b>	<b>88</b>
	Printing a document.....	88
<b>12</b>	<b>How to scan to a computer</b>	<b>89</b>
	Before scanning.....	89
	Scanning a document as a PDF file using ControlCenter4 (Windows®) .....	90
	How to change the machine's SCAN mode settings for PDF scanning .....	93
	How to scan a document as a PDF file using the Touchscreen .....	94
	ADF High Speed Mode scanning .....	96
<b>13</b>	<b>How to print and scan with NFC (Near Field Communication)</b>	<b>97</b>
	Printing with NFC (Near Field Communication).....	97
	Scanning with NFC (Near Field Communication).....	97
<b>A</b>	<b>Routine maintenance</b>	<b>98</b>
	Replacing the ink cartridges .....	98
	Cleaning and checking the machine.....	101
	Cleaning the scanner glass .....	101
	Cleaning the print head .....	102
	Checking the print quality .....	103
	Checking the print alignment.....	104
	Setting the date and time.....	105
<b>B</b>	<b>Troubleshooting</b>	<b>106</b>
	Identifying your problem .....	106
	Error and maintenance messages.....	108
	Error animations .....	118
	Transferring your faxes or Fax Journal report.....	118
	Document jam .....	119
	Printer jam or paper jam .....	121
	If you are having difficulty with your machine .....	127
	Dial Tone detection.....	139
	Telephone line interference / VoIP .....	139
	Machine Information .....	140
	Checking the serial number.....	140
	Checking the firmware version .....	140
	Reset functions.....	140
	How to reset the machine.....	141
<b>C</b>	<b>Settings and feature tables</b>	<b>142</b>
	Using the Settings tables .....	142
	Settings tables .....	143
	Feature tables.....	161
	Entering Text .....	190
	Inserting spaces .....	190
	Making corrections .....	190

---

**D Specifications 191**

---

General ..... 191  
Print media..... 193  
Fax..... 195  
Copy ..... 196  
PhotoCapture Center™ ..... 197  
PictBridge ..... 198  
Scanner ..... 199  
Printer ..... 200  
Interfaces ..... 201  
Network..... 202  
Computer requirements ..... 203  
Consumable items ..... 204

**E Index 205**

---

# Table of Contents

## (Advanced User's Guide)

The Advanced User's Guide explains the following features and operations.

You can view the Advanced User's Guide on the CD-ROM.

### **1 General setup**

---

*Memory Storage*  
*Automatic Daylight Saving Time*  
*Sleep Mode*  
*Touchscreen LCD*

### **2 Security features**

---

*Secure Function Lock 2.0*  
*Restricting dialling*

### **3 Sending a fax**

---

*Additional sending options*  
*Additional sending operations*  
*Polling*

### **4 Receiving a fax**

---

*Memory Receive (Monochrome only)*  
*Remote Retrieval*  
*Additional receiving operations*  
*Polling*

### **5 Dialling and storing numbers**

---

*Voice operations*  
*Additional dialling operations*  
*Additional ways to store numbers*

### **6 Printing reports**

---

*Fax reports*  
*Reports*

### **7 Making copies**

---

*Copy options*  
*A3 Copy Shortcuts*

### **8 Printing photos from a memory card or USB Flash drive**

---

*PhotoCapture Center™ operations*  
*Print Images*  
*PhotoCapture Center™ print settings*  
*Scan to a memory card or USB Flash drive*

### **9 Printing photos from a camera**

---

*Printing photos directly from a PictBridge camera*  
*Printing photos directly from a digital camera (without PictBridge)*

### **A Routine maintenance**

---

*Cleaning and checking the machine*  
*Packing and shipping the machine*

### **B Glossary**

---

### **C Index**

---





## Using the documentation

Thank you for buying a Brother machine! Reading the documentation will help you make the most of your machine.

## Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

<b>Bold</b>	Bold typeface identifies the dial pad numbers of the Touchpanel and buttons on your computer screen.
<i>Italics</i>	Italicized typeface emphasizes an important point or refers you to a related topic.
Courier New	Text in the Courier New font identifies messages on the Touchscreen of the machine.

### **WARNING**

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.

### **CAUTION**


CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

### **IMPORTANT**

IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.

### **NOTE**


Notes tell you how to respond to a situation that may arise or give tips about how the operation works with other features.

 Electrical Hazard icons alert you to possible electrical shocks.


## Accessing Brother Utilities (Windows® 8)

If you are using a tablet or computer running Windows® 8, you can make your selections either by tapping the screen or by clicking with your mouse.


After the printer driver is installed,

 (**Brother Utilities**) appears on both the Start screen and the desktop.

- 1 Tap or click **Brother Utilities** either on the Start screen or the desktop.

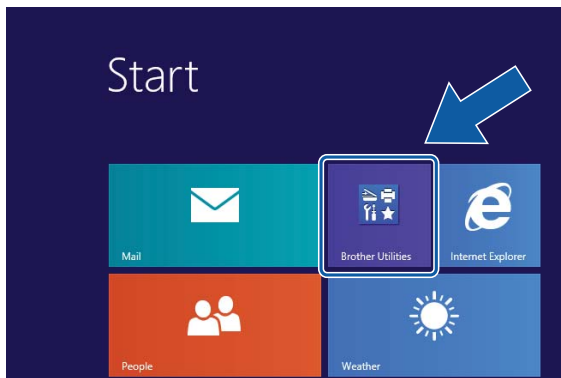

- 2 Select your machine.

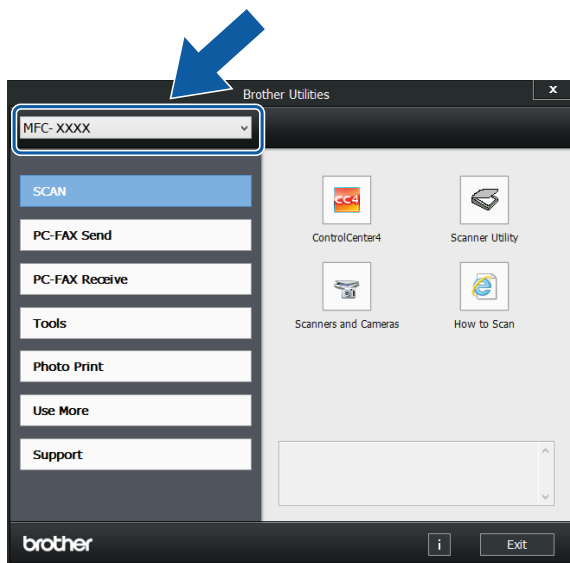

- 3 Choose the function you want to use.

## Accessing the Advanced User's Guide and Software and Network User's Guide

This Basic User's Guide does not contain all the information about the machine, such as how to use the advanced Fax, Copy, PhotoCapture Center™, Printer, Scanner, PC-Fax, and Network features. When you are ready to learn detailed information about these operations, you can read the **Advanced User's Guide** and **Software and Network User's Guide** in HTML format that are on the CD-ROM.

### Viewing User's Guides


#### (Windows®)

(Windows® XP/Windows Vista®/Windows® 7/Windows Server® 2003/Windows Server® 2008/Windows Server® 2008 R2)  
To view the documentation, from



(**Start**), **All Programs**, select **Brother**, **MFC-XXXX** (where XXXX is your model name) from the programs list, and then choose **User's Guides**.

(Windows® 8/Windows Server® 2012)


Click  (**Brother Utilities**), and then click the drop-down list and select your model name (if not already selected). Click **Support** in the left navigation bar, and then click **User's Guides**.

If you have not installed the software, you can find the documentation on the CD-ROM by following the instructions below:


- 1 Turn on your PC. Insert the Brother CD-ROM into your CD-ROM drive.

## NOTE

If the Brother screen does not appear, go to **Computer** or **My Computer**. (For Windows® 8 and Windows Server® 2012 :

Click  (**File Explorer**) on the taskbar, and then go to **Computer**.) Double-click the CD-ROM icon, and then double-click **start.exe**.

- 2 If the model name screen appears, click your model name.
- 3 If the language screen appears, click your language. The CD-ROM **Top Menu** will appear.

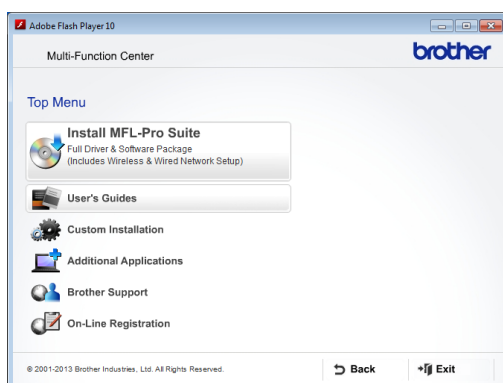

- 4 Click **User's Guides**.
- 5 Click **PDF/HTML documents**. If the country screen appears, choose your country. After the list of User's Guides appears, choose the guide you want to read.

## (Macintosh)

- 1 Turn on your Macintosh. Insert the Brother CD-ROM into your CD-ROM drive. The following window will appear.



- 2 Double-click the **User's Guides** icon.
- 3 Select your model and language if needed.
- 4 Click **User's Guides**. If the country screen appears, choose your country.
- 5 After the list of User's Guides appears, choose the Guide you want to read.

## How to find Scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

### Software and Network User's Guide

- *Scan*
- *ControlCenter*

### Nuance™ PaperPort™ 12SE

#### How-to-Guides

#### (Windows®)

- The complete Nuance™ PaperPort™ 12SE How-to-Guides can be viewed from the Help section in the PaperPort™ 12SE application.

## Presto! PageManager User's Guide (Macintosh)

### NOTE

Presto! PageManager must be downloaded and installed before use. For more information, see *Accessing Brother Support (Macintosh)* on page 5.

- The complete Presto! PageManager User's Guide can be viewed from the Help section in the Presto! PageManager application.

### How to find Network setup instructions

Your machine can be connected to a wireless or wired network.

- Basic setup instructions (See Quick Setup Guide.)
- The wireless access point or router supports Wi-Fi Protected Setup™ or AOSS™ (See Quick Setup Guide.)
- More information about network setup (See Software and Network User's Guide.)

## How to access Guides for Advanced Features

You can view and download these Guides from the Brother Solutions Center at: <http://solutions.brother.com/>.

Click **Manuals** on your model's page to download the documentation.

### Web Connect Guide

This Guide provides useful information about accessing Internet services from the Brother machine, as well as downloading images, printing data and uploading files directly to Internet services.

### AirPrint Guide

This Guide provides information for using AirPrint to print from OS X v10.7.x, 10.8.x and your iPhone, iPod touch, iPad, or other iOS device to your Brother machine without installing a printer driver.

### Google Cloud Print Guide

This Guide provides details on how to use Google Cloud Print™ services for printing over the Internet.

### Wi-Fi Direct™ Guide

This Guide provides details on how to configure and use your Brother machine for wireless printing directly from a mobile device supporting the Wi-Fi Direct™ standard.


### Mobile Print/Scan Guide for Brother iPrint&Scan

This Guide provides useful information about printing from your mobile device and scanning from your Brother machine to your mobile device when connected to a Wi-Fi network.

## Accessing Brother Support (Windows®)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Click **Brother Support** on the **Top Menu**. The following screen will appear:

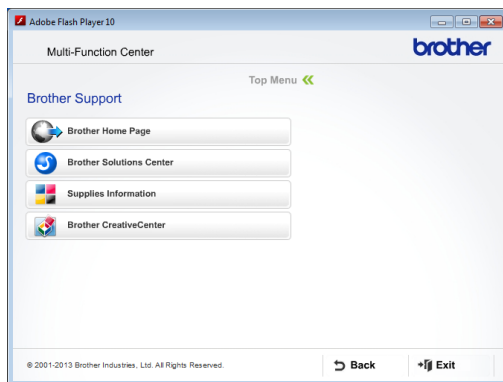

- To access our website (<http://www.brother.com/>), click **Brother Home Page**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.
- To access the Brother CreativeCenter (<http://www.brother.com/creativecenter/>) for FREE photo projects and printable downloads, click **Brother CreativeCenter**.
- To return to the top menu, click **Back** or if you have finished, click **Exit**.

## Accessing Brother Support (Macintosh)

You can find all the contacts you will need, such as Web support (Brother Solutions Center) on the CD-ROM.

- Double-click the **Brother Support** icon. The following screen will appear:



- To download and install Presto! PageManager, click **Presto! PageManager**.
- To access the Brother Web Connect page, click **Brother Web Connect**.
- To register your machine from the Brother Product Registration Page (<http://www.brother.com/registration/>), click **On-Line Registration**.
- For the latest news and product support information (<http://solutions.brother.com/>), click **Brother Solutions Center**.
- To visit our website for original Brother Supplies (<http://www.brother.com/original/>), click **Supplies Information**.

# Control panel overview

## 3.7"(93.4 mm) Touchscreen LCD and Touchpanel


This is a Touchscreen LCD with an electrostatic Touchpanel that only shows the LEDs that can be used.




### 1 3.7"(93.4 mm) Touchscreen LCD (Liquid Crystal Display)

This is a Touchscreen LCD. You can access the menus and options by pressing them as they are displayed on this screen.

You can adjust the angle of the Touchscreen LCD and Touchpanel by lifting it. To lower this control panel, push the release button that is located behind the control panel, as shown in the illustration.

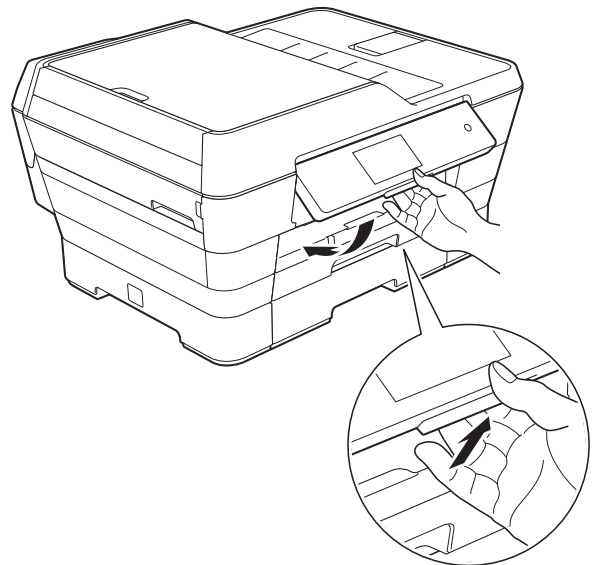



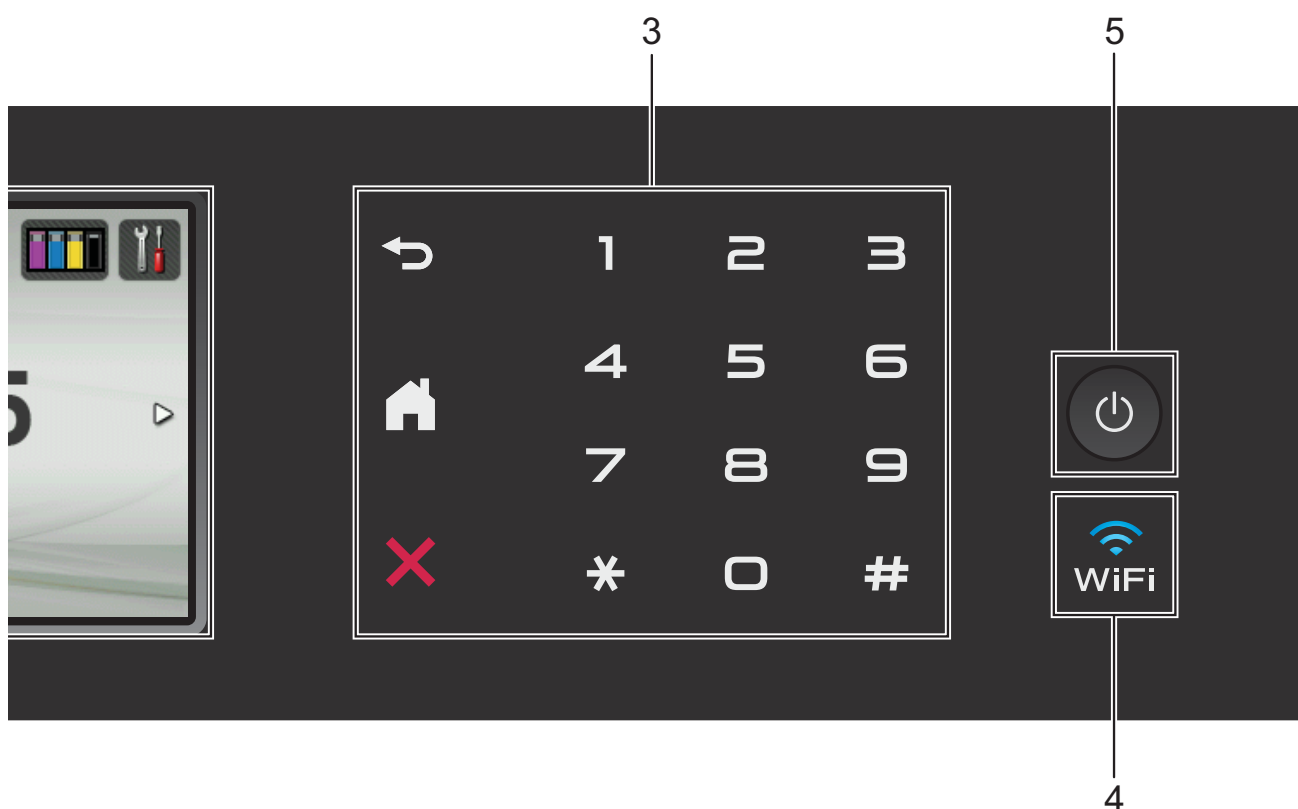

## 2 **NFC (Near Field Communication) logo**

If your Android™ device supports the NFC standard, you can print data from your device or scan data to your device by touching it to the NFC logo on the lower left of the control panel. You must download and install Brother iPrint&Scan to your Android™ device to use this function.

For more information, see *How to print and scan with NFC (Near Field Communication)* on page 97.

## 3 **Touchpanel:**

The LEDs on the Touchpanel only light up when they are available for use.

### ■ **Back**

Press to go back to the previous menu level.

### ■ **Home**

Lets you return to the Home screen. By default it shows the date and time, but you can change the default settings.

### ■ **Cancel**

Press to cancel an operation when lit.


### ■ **Dial Pad**


Press the numbers on the Touchpanel to dial telephone or fax numbers and to enter the number of copies.

## 4 **WiFi**


The WiFi light is on when the network interface is WLAN.

## 5 Power On/Off

Press  to turn the machine on.

Press and hold down  to turn the machine off. The Touchscreen LCD will show *Shutting Down* and will stay on for a few seconds before turning off.

If you have connected an external telephone or TAD, it is always available for use.

If you turn the machine off using , it will still periodically clean the print head to maintain print quality. To prolong the life of the print head, provide better ink efficiency, and maintain print quality, you should keep your machine connected to the power at all times.

## 3.7"(93.4 mm) Touchscreen LCD


You can select from three types of screens for the Home screen. When the Home screen is displayed, you can swipe left or right, or press ◀ or ▶ to display the More screen or one of the Shortcut screens.

The following screens show the machine status when the machine is idle.

	<p><b>Home screen</b></p> <p>The Home screen shows the date and time, as well as provide access to Fax, Copy and Scan, WiFi setup, Ink levels, and Setup screen.</p> <p>When the Home screen is displayed, the machine is in Ready mode. If Secure Function Lock <sup>1</sup> has been turned on, an icon is prominently displayed.</p> <p><sup>1</sup> See Advanced User's Guide: <i>Secure Function Lock 2.0</i>.</p>
	<p><b>More screen</b></p> <p>The More screen provides access to additional features, such as Photo, Web and A3 Copy Shortcuts.</p>
	<p><b>Shortcut screens</b></p> <p>You can save certain settings as a Shortcut so you can quickly send a fax, copy, scan and use Web Connect services. (For details, see <i>Shortcut Settings</i> on page 14.)</p>

**NOTE**

Swiping is a type of user operation on the Touchscreen LCD that is performed by brushing your finger across the screen to display the next page or item.

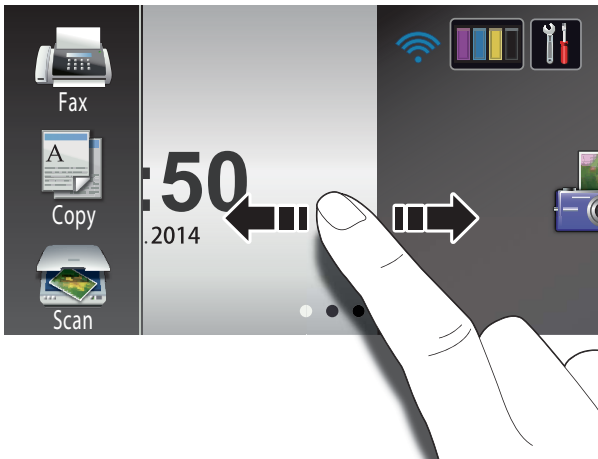**1 Modes:**

-  **Fax**

Lets you access Fax mode.

-  **Copy**

Lets you access Copy mode.


-  **Scan**

Lets you access Scan mode.

**2 Wireless Status**

A four-level indicator on the Ready mode screen shows the current wireless signal strength when using a wireless connection.



If you see  at the top of the screen, you can easily configure the wireless settings by pressing it. For more information, see Quick Setup Guide.

**3  Ink**

Lets you see the available ink volume and also lets you access the **Ink** menu.

When the ink cartridge is near the end of its life or having a problem, an error icon is displayed on the ink colour. For more information, see *Advanced User's Guide: Checking the ink volume*.

**4  Settings**

Lets you access the main settings. For more information, see *Settings screen* on page 12.

**5 Date & Time**

Displays the date and time that has been set in the machine.

**6  Photo**

Lets you access Photo mode.

**7  Web**

Lets you connect the Brother machine to an Internet service.

For details, see *Web Connect Guide*.

**8  A3 Copy Shortcuts**

You can quickly copy to A3 or Ledger size paper using this preset menu. For details, see *Advanced User's Guide: A3 Copy Shortcuts*.

**9  Shortcuts**

Lets you set up Shortcuts.

You can save certain settings as a Shortcut so you can quickly send a fax, make a copy, scan or use Web Connect services.

**NOTE**

- Three Shortcut screens are available. You can set up to six Shortcuts on each Shortcut screen. A total of 18 Shortcuts are available.
- To display the other Shortcut screens, swipe left or right, or press ◀ or ▶.

**10 Faxes in memory**

You can see how many received faxes are in the memory <sup>1</sup>.

Press **Print** to print the faxes.

<sup>1</sup> When Fax Preview is set to **Off**.



**11 New Fax:**



When Fax Preview is set to **On**, you can see how many new faxes you have received and stored in the memory.

Press **View** to see your faxes on the Touchscreen.

**NOTE**

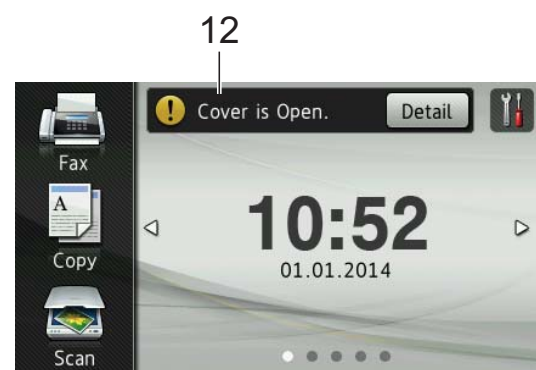If you receive a fax containing multiple paper sizes (for example, a Letter size page and a Ledger size page), the machine may create and store a file for each paper size. The Touchscreen may show that more than one fax job has been received.

**12 Warning icon** 

The warning icon  appears when there is an error or maintenance message; press **Detail** to view it, and then press  to return to Ready mode.

For information about error messages, see *Error and maintenance messages* on page 108.

**NOTE**

- This product adopts the font of ARPHIC TECHNOLOGY CO.,LTD.
- MascotCapsule UI Framework and MascotCapsule Tangible developed by HI CORPORATION are used. MascotCapsule is a registered trademark of HI CORPORATION in Japan.



## Settings screen

The Touchscreen LCD shows the machine status when you press .

You can check and access all the machine's settings from the following screen.



### 1 Ink

See the remaining ink volume.

When the ink cartridge is near the end of its life or having a problem, an error icon is displayed on the ink colour. For more information, see *Advanced User's Guide: Checking the ink volume*.

Press to access the Ink menu.

### 2 **Receive Mode**

See the current Receive Mode:

- Fax (Fax Only)
- Fax/Tel
- External TAD
- Manual

### 3 **Wi-Fi**

Press to setup a wireless network connection.

A four-level indicator on the screen shows the current wireless signal strength if you are using a wireless connection.

### 4 **Date & Time**

See the date and time.

Press to access the Date & Time menu.

### 5 **Fax Preview**

See the Fax Preview setting.

Press to access the Fax Preview setting.

### 6 **All Settings**

Press to access the full Settings menu.

### 7 **Tray #1**

Displays the size of paper in Tray #1. Also, lets you access the Tray #1 setting. You can change the paper size and paper type.


### 8 **Tray #2**



Displays the size of paper in Tray #2. Also, lets you access the Tray #2 setting. You can change the paper size.



## Setting the Ready screen

You can set the Ready screen to either Home, More, Shortcuts 1, Shortcuts 2 or Shortcuts 3.

When the machine is idle or you press , the machine will go back to the screen that you have set.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Set Home Screen.
- 6 Press Set Home Screen.
- 7 Swipe up or down, or press ▲ or ▼ to display Home, More, Shortcuts 1, Shortcuts 2 or Shortcuts 3, and then press the option you want.
- 8 Press . The machine will go to the Home screen that you have set.


## Basic Operations


Press your finger on the Touchscreen LCD to operate it. To display and access all the screen menus or options, swipe left, right, up, down, or press ◀▶ or ▲▼ to scroll through them.

### IMPORTANT


DO NOT touch the Touchscreen immediately after plugging in the power cord or turning on the machine. Doing this may cause an error.

The following steps show how to change a setting in the machine. In this example, the Receive Mode setting is changed from Fax Only to Fax/Tel.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Fax.

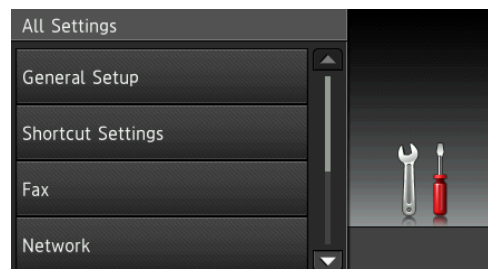


- 4 Press Fax.
- 5 Swipe up or down, or press ▲ or ▼ to display Setup Receive.

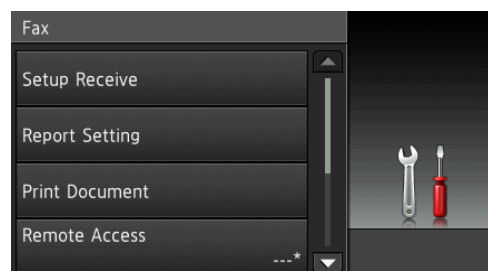


- 6 Press Setup Receive.

- 7 Swipe up or down, or press ▲ or ▼ to display Receive Mode.

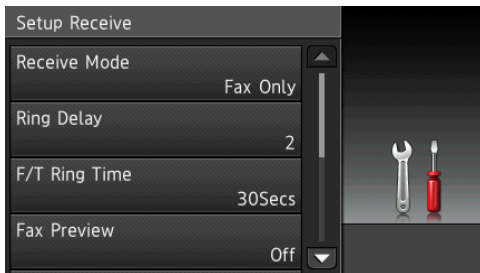


- 8 Press Receive Mode.

- 9 Press Fax/Tel.

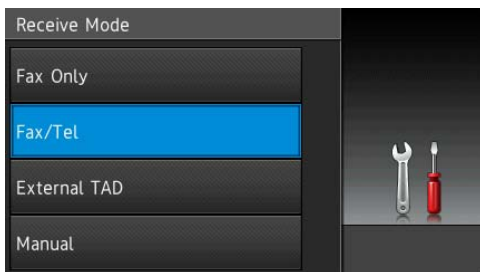

## NOTE

Press  if you want to go back to the previous level.

- 10 Press .


## Shortcut Settings

You can add the fax, copy, scan and Web Connect settings you use most frequently by setting them as your Shortcuts. Later you can quickly and easily recall and apply these settings. You can add up to 18 Shortcuts.

### Adding Copy Shortcuts

The following settings can be included in a Copy Shortcut:


- ADF High Speed Mode
- Quality
- Paper Type
- Paper Size
- Tray Select
- Enlarge/Reduce
- Density
- Stack/Sort
- Page Layout
- Auto Deskew
- 2-sided Copy
- Advanced Settings

- 1 If the displayed screen is either Home or More, swipe left or right, or press ◀ or ▶ to display a Shortcut screen.
- 2 Press  where you have not added a Shortcut.
- 3 Press Copy.
- 4 Read the information on the Touchscreen, and then confirm it by pressing OK.
- 5 Press a copy preset you want to include in the copy Shortcut.
- 6 Swipe up or down, or press ▲ or ▼ to display the available settings, and then press the setting you want to change.

- 7 Swipe up or down, or press ▲ or ▼ to display the available options for the setting, and then press the option you want to set.  
Repeat steps 6 and 7 until you have chosen all the settings for this Shortcut.
- 8 When you are finished changing the settings, press *Save as Shortcut*.
- 9 Read and confirm the displayed list of settings you have chosen, and then press *OK*.
- 10 Enter a name for the Shortcut using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.)  
Press *OK*.
- 11 Press *OK* to save your Shortcut.

## Adding Fax Shortcuts

The following settings can be included in a fax Shortcut:

- Address
  - Fax Resolution
  - 2-sided Fax
  - Contrast
  - Glass Scan Size
  - Broadcasting
  - Preview
  - Colour Setting
  - Real Time TX
  - Overseas Mode
- 1 If the displayed screen is either Home or More, swipe left or right, or press ◀ or ▶ to display a Shortcut screen.
  - 2 Press  where you have not added a Shortcut.
  - 3 Press *Fax*.

- 4 Read the information on the Touchscreen, and then confirm it by pressing *OK*.
- 5 Enter the fax number using the dial pad on the Touchpanel, or you can use the Address Book or Call History on the Touchscreen. When you have finished, go to step 6.

### NOTE

- You can enter up to 20 digits for a fax number.
- If the Shortcut is to be used for broadcasting, press *Options* and choose *Broadcasting* in step 7 before entering the fax number in step 5.
- You can enter up to 20 fax numbers if the Shortcut is for broadcasting. The fax numbers can be entered in any combination of Group numbers from the Address Book and individual fax numbers from the Address Book or entered manually. (See *Advanced User's Guide: Broadcasting (Monochrome only)*.)
- When you enter a fax number in a Shortcut, it will be added to the Address Book. The name in the Address Book will be the Shortcut name plus a sequential number.

- 6 Press *Options*.
- 7 Swipe up or down, or press ▲ or ▼ to display the available settings, and then press the setting you want to change.
- 8 Press the new option you want to set. Repeat steps 7 and 8 until you have chosen all the settings for this Shortcut. Press *OK*.
- 9 When you are finished choosing new options, press *Save as Shortcut*.
- 10 Read and confirm the displayed list of options you have chosen, and then press *OK*.

- 11** Enter a name for the Shortcut using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.)  
Press **OK**.

- 12** Press **OK** to save your Shortcut.

## Adding Scan Shortcuts

The following settings can be included in a scan Shortcut:

to Media

- ADF High Speed Mode
- 2-sided Scan
- Scan Type
- Resolution
- File Type
- Scan Size
- Scan Long Paper
- File Name
- Auto Crop
- Skip Blank Page
- Remove Background Colour

to E-mail Server (Available after IFAX has been downloaded)

- Address
- ADF High Speed Mode
- 2-sided Scan
- Scan Type
- Resolution
- File Type
- Scan Size
- Scan Long Paper


to OCR/to File/to Image/to E-mail

- PC Select

to FTP/to Network

- Profile Name

- 1** If the displayed screen is either Home or More, swipe left or right, or press ◀ or ▶ to display a Shortcut screen.

- 2** Press  where you have not added a Shortcut.

- 3** Press Scan.

- 4** Swipe up or down, or press ▲ or ▼ to display the type of scan you want to do, and then press it.

- 5** Do one of the following:

- If you pressed to Media, read the information on the Touchscreen, and then press **OK** to confirm it. Go to step **8**.
- If you pressed to E-mail Server, read the information on the Touchscreen, and then press **OK** to confirm it. Go to step **6**.
- If you pressed to File, to OCR, to Image or to E-mail, read the information on the Touchscreen, and then press **OK** to confirm it. Go to step **7**.
- If you pressed to Network or to FTP, read the information on the Touchscreen, and then press **OK** to confirm it.

Swipe up or down, or press ▲ or ▼ to display the Profile Name, and then press it.

Press **OK** to confirm the Profile Name you have chosen. Go to step **13**.

**NOTE**

To add a Shortcut for `to Network` and `to FTP`, you must have added the Profile Name beforehand.

- 6** Do one of the following:
- To enter an E-mail address manually, press `Manual`. Enter the E-mail address using the keyboard on the Touchscreen. (See *Entering Text* on page 190.)  
Press `OK`.
  - To enter an E-mail address from the Address Book, press `Address Book`. Swipe up or down, or press `▲` or `▼` to display the E-mail address you want, and then press it.  
Press `OK`.
- After you confirm the E-mail address you entered, press `OK`. Go to step **8**.

**NOTE**

Press `Detail` to view the list of addresses you have entered.

- 7** Do one of the following:
- When the machine is connected to a PC using a USB connection:  
Press `OK` to confirm `<USB>` is chosen as the PC Name. Go to step **13**.
  - When the machine is connected to a network:  
Swipe up or down, or press `▲` or `▼` to display the PC Name, and then press it. Press `OK` to confirm the PC Name you have chosen. Go to step **13**.
- 8** Press `Options`.
- 9** Swipe up or down, or press `▲` or `▼` to display the available settings, and then press the setting you want to change or store.

- 10** Swipe up or down, or press `▲` or `▼` to display the available options for the setting, and then press the new option you want to set.  
Repeat steps **9** and **10** until you have chosen all the settings for this Shortcut. When you have finished changing settings, press `OK`.
- 11** Review the settings you have chosen:
- If you need to make more changes, return to step **8**.
  - If you are satisfied with your changes, press `Save as Shortcut`.
- 12** Review your settings on the Touchscreen, and then press `OK`.
- 13** Enter a name for the Shortcut using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.)  
Press `OK`.
- 14** Read the information on the Touchscreen, and then press `OK` to save your Shortcut.

## Adding Web Connect Shortcuts

---


The settings for the following services can be included in a Web Connect Shortcut:

- SkyDrive®
- Box
- Google Drive™
- Evernote®
- Dropbox
- Facebook
- Picasa Web Albums™
- Flickr®

### NOTE

---

- Web services may have been added and/or service names may have been changed by the provider since this document was published.
- To add a Web Connect Shortcut, you need to have an account with the desired service. (For details, see *Web Connect Guide*.)

- 1 If the displayed screen is either Home or More, swipe left or right, or press ◀ or ▶ to display a Shortcut screen.
- 2 Press  where you have not added a Shortcut.
- 3 Press *Web*.
- 4 If information regarding the Internet connection is displayed, read and confirm it by pressing *OK*.
- 5 Swipe left or right, or press ◀ or ▶ to display the available services, and then press the desired service.

- 6 Press your account.  
If the account needs a PIN, enter the PIN for the account using the keyboard on the Touchscreen.  
Press *OK*.

- 7 Choose the function you want to use.

### NOTE

---

The available functions vary depending on the chosen service.

- 8 Read and confirm the displayed list of functions you have chosen, and then press *OK*.
- 9 Enter a name for the Shortcut using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.)  
Press *OK*.
- 10 Press *OK* to save your Shortcut.



## Changing Shortcuts


You can change the settings in a Shortcut.

### NOTE

You cannot edit existing Web Connect Shortcuts.

If you want to change a Web Connect Shortcut, you should delete it, and then add a new Shortcut.

(For more information, see *Deleting Shortcuts* on page 19 and *Adding Web Connect Shortcuts* on page 18.)

- 1 Press the Shortcut you want to change. The settings for the Shortcut that you chose are displayed.
- 2 Change the settings for the Shortcut you chose in step 1. (For example, see *Adding Copy Shortcuts* on page 14.)
- 3 Press `Save as Shortcut` when you have finished changing the settings.
- 4 Press `OK` to confirm.
- 5 Do one of the following:
  - If you want to overwrite the Shortcut, press `Yes`. Go to step 7.
  - If you do not want to overwrite the Shortcut, press `No` to enter a new Shortcut name. Go to step 6.
- 6 To edit the name, hold down  to delete the current name, and then enter a new name using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.) Press `OK`.
- 7 Press `OK` to confirm.


## Editing Shortcut Names

You can edit a Shortcut name.

- 1 Press and hold the Shortcut until the dialog box appears.

### NOTE

You can also press , `All Settings` and `Shortcut Settings`.

- 2 Press `Edit Shortcut Name`.
- 3 To edit the name, hold down  to delete the current name, and then enter a new name using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.) Press `OK`.

## Deleting Shortcuts

You can delete a Shortcut.

- 1 Press and hold the Shortcut until the dialog box appears.

### NOTE

You can also press , `All Settings` and `Shortcut Settings`.

- 2 Press `Delete` to delete the Shortcut that you chose in step 1. Press `Yes` to confirm.

## Recalling Shortcuts



The Shortcut settings are displayed on the Shortcut screen. To recall a Shortcut, simply press the Shortcut name.

# Volume Settings

## Ring Volume

You can choose from a range of ring volume levels. The machine will keep your new setting until you change it.



### Setting the Ring Volume

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Volume.
- 6 Press Volume.
- 7 Press Ring.
- 8 Press Low, Med, High or Off.
- 9 Press .

## Beeper Volume

When the beeper is on, the machine will make a sound when you press the Touchscreen or Touchpanel, or if you make a mistake, or after you send or receive a fax.



You can choose from a range of sound volume levels.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Volume.
- 6 Press Volume.
- 7 Press Beep.
- 8 Press Low, Med, High or Off.
- 9 Press .

## Speaker Volume

---

You can choose from a range of speaker volume levels.



- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Volume.
- 6 Press Volume.
- 7 Press Speaker.
- 8 Press Low, Med, High or Off.
- 9 Press .

## Touchscreen LCD

### Setting the Backlight brightness

---

If you are having difficulty reading the Touchscreen LCD, try changing the brightness setting.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display LCD Settings.
- 6 Press LCD Settings.
- 7 Press Backlight.
- 8 Press Light, Med or Dark.
- 9 Press .

# 2

## Loading paper

### Loading paper and other print media

#### ⚠ CAUTION

DO NOT carry the machine by holding the scanner cover, the Jam Clear Cover, the manual feed slot cover, or the control panel. Doing this may cause the machine to slip out of your hands. Carry the machine by sliding your hands into the handhold indentations located on each side of the machine.

For detailed information, see Product Safety Guide.

#### NOTE

For tray #2 (lower tray), see *Loading paper in paper tray #2* on page 30.

### Loading paper in paper tray #1

Load only one size of paper and one type of paper in the paper tray at a time.


(For more information about paper size, weight and thickness, see *Choosing the right print media* on page 42.)

#### NOTE

When you load a different paper size in the tray, you must change the paper size setting in the machine at the same time.


(See *Paper Size and Type* on page 39.)

- 1 Pull the paper tray completely out of the machine.

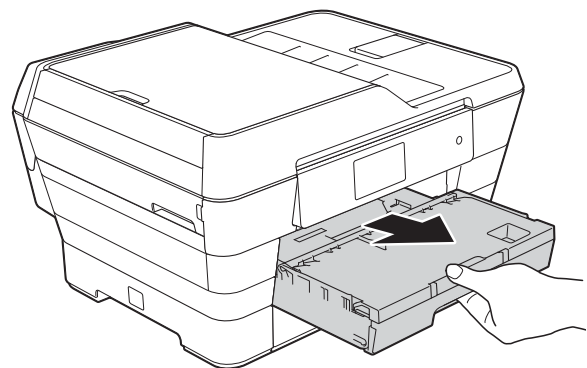

#### NOTE

If the paper support flap (1) is open, close it, and then close the paper support (2).

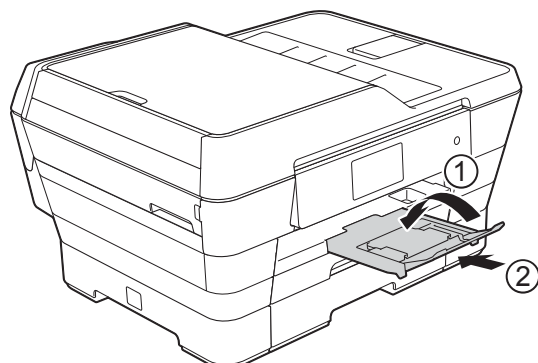


2 Adjust the tray length if needed:

■ **When using A3, Ledger, Legal, or Folio size paper**

Press the universal guide release button (1) as you slide out the front of the paper tray.

Make sure that the triangular mark on the output paper tray cover is aligned with the line indicating Legal or Folio (2) or A3 or Ledger (3) size, as shown in the illustration.

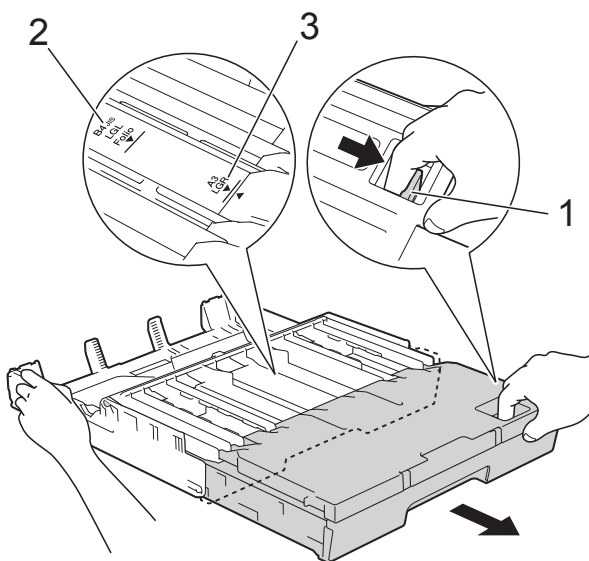


■ **When using A4, Letter, or smaller size paper**


If you are using A4 or Letter, you do not have to extend the tray. If tray #2 is extended, then extend tray #1 and pull up the stopper.

If you are using A5 or smaller size paper, make sure the paper tray is not extended.


3 Gently press and slide the paper side guides (1) to fit the paper size. Make sure that the triangular mark (2) on the paper side guide (1) lines up with the mark for the paper size you are using.

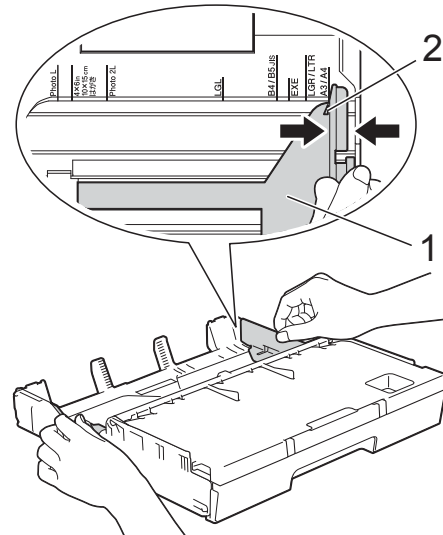

4 Open the output paper tray cover (1).

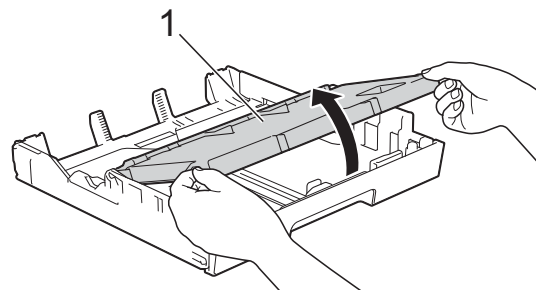

- 5** Gently press and slide the paper length guide (1) to fit the paper size. Make sure that the triangular mark (2) on the paper length guide (1) lines up with the mark for the paper size you are using.

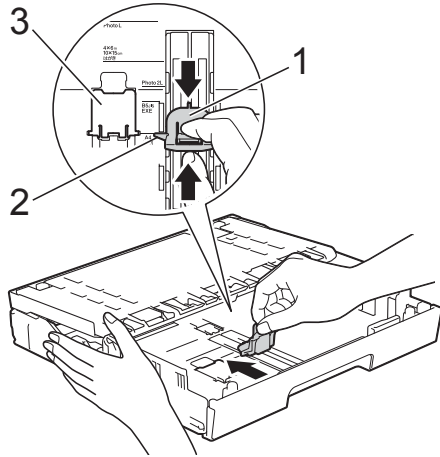


**NOTE**

If you are loading A4 or Letter size paper in tray #1 and must extend it because tray #2 is extended, lift up the A4/LTR stopper (3) to hold the paper in landscape position.

(For instructions about how to extend tray #1 over tray #2, see *Loading paper in paper tray #2* on page 30.)

- 6** Fan the stack of paper well to avoid paper jams and misfeeds.

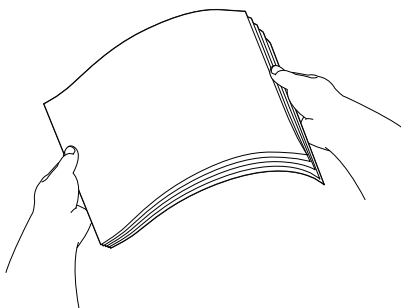


**NOTE**

Always make sure that the paper is not curled.

- 7** To load paper in the tray, do one of the following:


■ **When using A4 or Letter size paper**

- 1** Close the output paper tray cover.

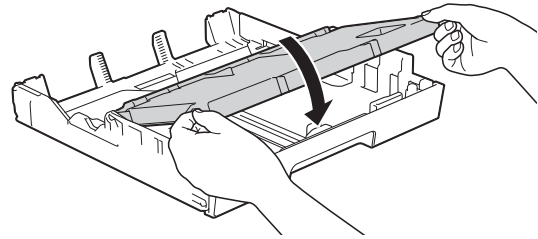

- 2** Gently put the paper into the paper tray print side down. Check that the paper is flat in the tray.


**Landscape orientation**

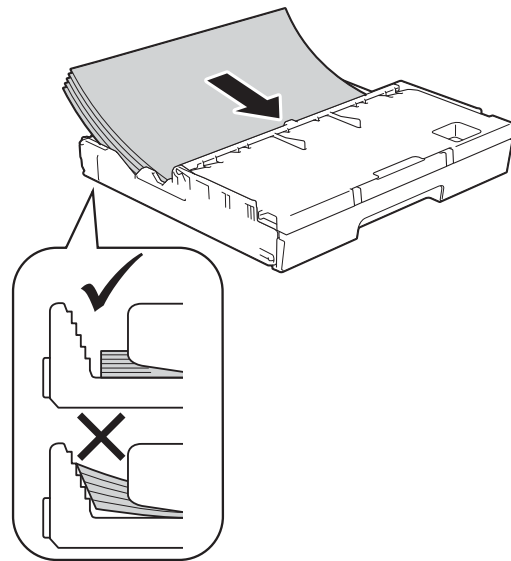


■ **When using A3, Ledger, Legal or Folio size paper**

- 1 Gently put the paper into the paper tray print side down and top edge first. Check that the paper is flat in the tray.


**Portrait orientation**

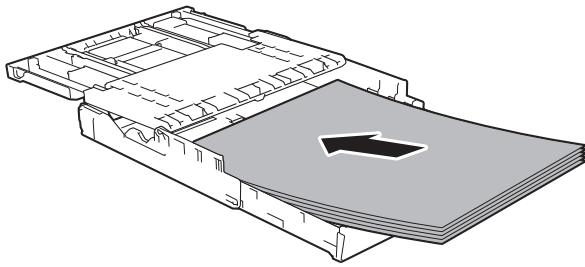

- 2 Close the output paper tray cover.

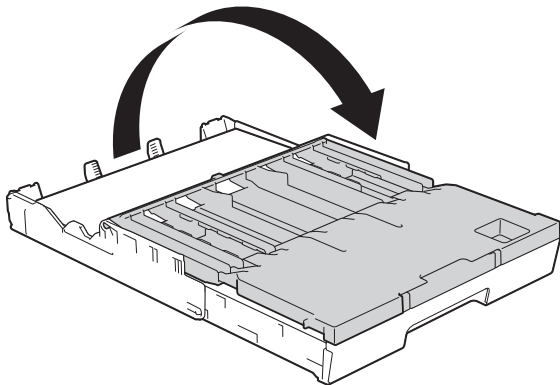


- 8 Gently adjust the paper side guides to the paper with both hands. Make sure the paper side guides touch the sides of the paper.

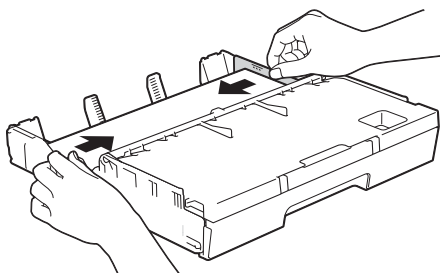


**NOTE**

Be careful not to push the paper in too far; it may lift at the back of the tray and cause feed problems.

- 9 Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

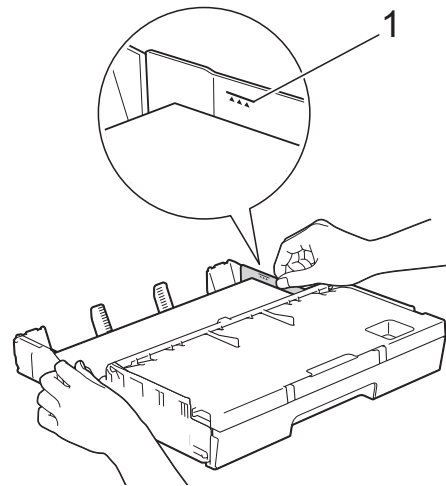


- 10 Slowly push the paper tray completely into the machine.

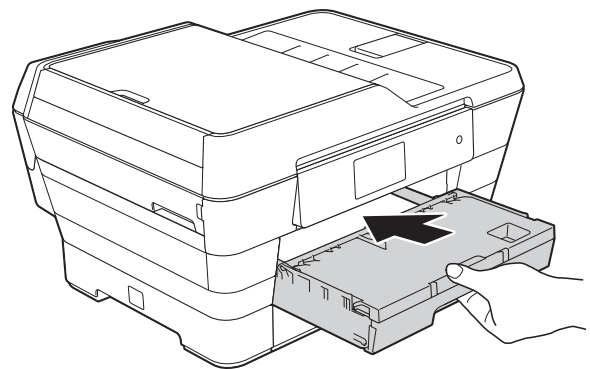

**⚠ CAUTION**



DO NOT push Tray #1 into the machine too quickly. Doing this may cause injury to your hand by trapping it between Tray #1 and Tray #2. Please push Tray #1 *slowly*.

- 11 While holding the paper tray in place, pull out the paper support (1) until it locks into place, and then unfold the paper support flap (2).

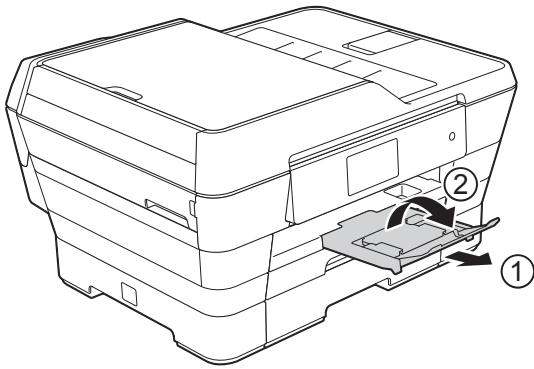

**NOTE**

Before you shorten Tray #1, take the paper out of the tray. Then shorten the tray by pressing the universal guide release button (1). Adjust the paper length guide (2) to fit the paper size you are going to use. Then put the paper in the tray.

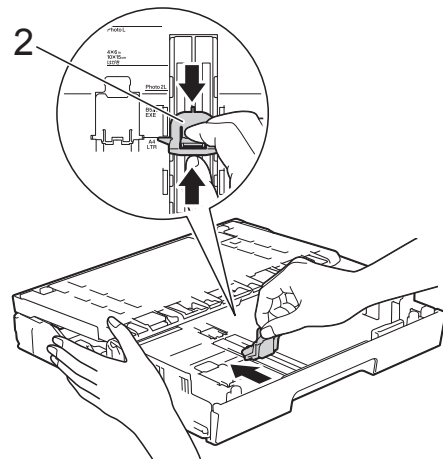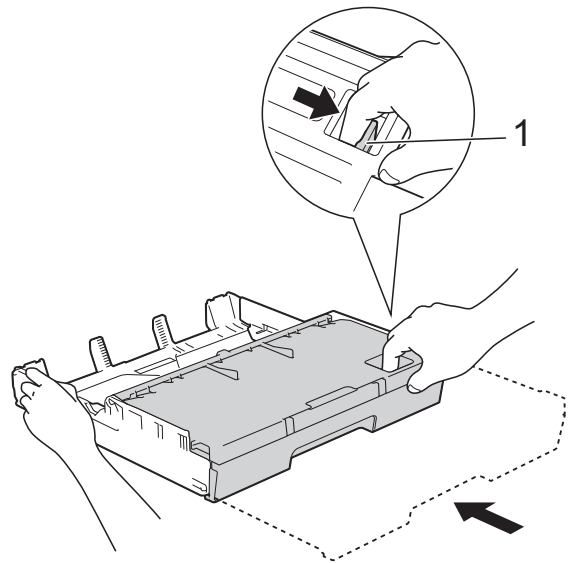




## Loading smaller paper (Photo, Photo L, Photo 2L or envelopes)

### Portrait orientation

(A5 or smaller size paper)

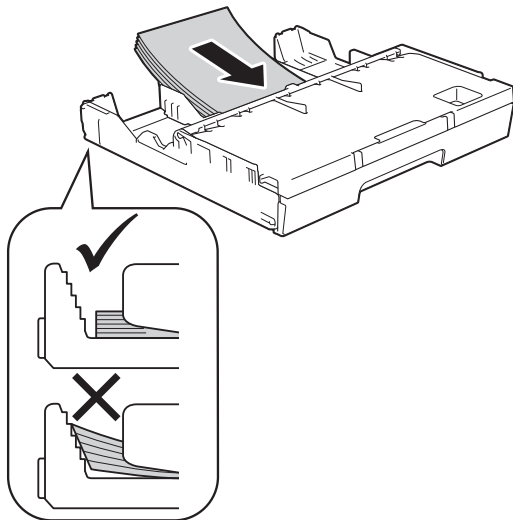

### IMPORTANT

Be careful not to push the paper in too far; it may lift at the back of the tray and cause paper feed problems.


### Loading Photo, Photo L and Photo 2L paper

- 1 Before loading, press the corners and sides of the Photo, Photo L and Photo 2L paper to make them as flat as possible.

### IMPORTANT


If Photo (10 × 15 cm), Photo L (89 × 127 mm) or Photo 2L (13 × 18 cm) paper is “double-feeding,” put only one sheet of Photo or Photo L paper in the paper tray at a time.

- 2 Do one of the following:
  - If you load Photo L (89 × 127 mm) in the paper tray, lift up the Photo L stopper (1).

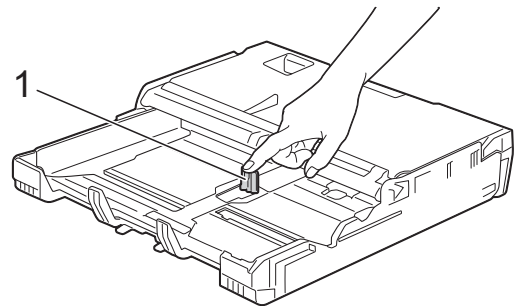


- If you load Photo (10 × 15 cm) or Photo 2L (13 × 18 cm) in the paper tray, open the output paper tray cover.


Gently press the paper length guide (1) to fit the paper size, and then close the output paper tray cover.

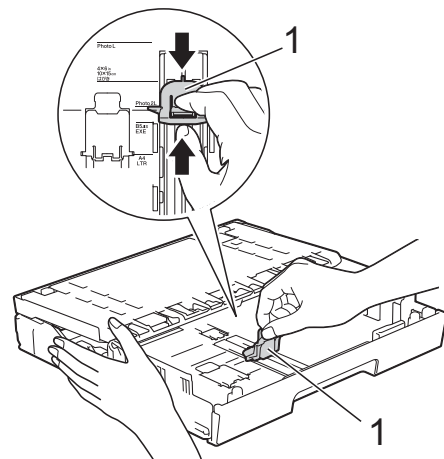


- 3 Gently press the paper side guides to fit the paper size.

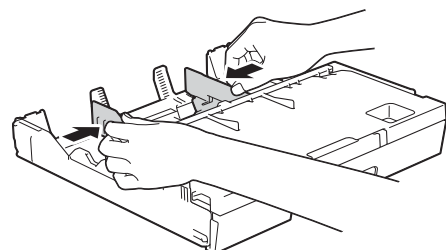

- 4 Put Photo, Photo L, or Photo 2L paper in the paper tray print side down.

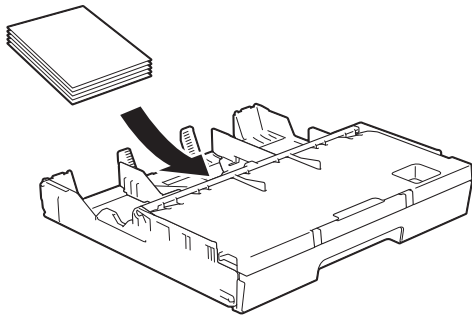

- 5 Gently adjust the paper side guides to fit the paper. Make sure the paper side guides touch the sides of the paper.

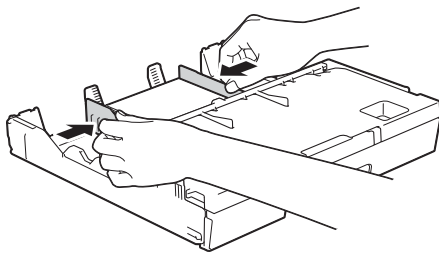

### About envelopes

- Use envelopes that weigh between 80 to 95 g/m<sup>2</sup>.
- Some envelopes need margin settings to be set in the application. Make sure you do a test print first before printing multiple envelopes.

### IMPORTANT

DO NOT use the following types of envelopes, as they will not feed correctly:

- That are of a baggy construction.
- That have windows.
- That are embossed (have raised writing on them).
- That have clasps or staples.
- That are pre-printed on the inside.

Glue	Double flaps


Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

## Loading envelopes


- 1 Before loading, press the corners and sides of the envelopes to make them as flat as possible.

### IMPORTANT


If envelopes are “double-feeding”, put one envelope in the paper tray at a time.

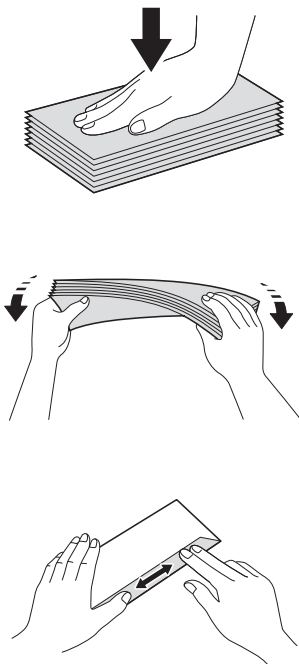

- 2 Gently press and slide the paper side guides to fit the paper size.

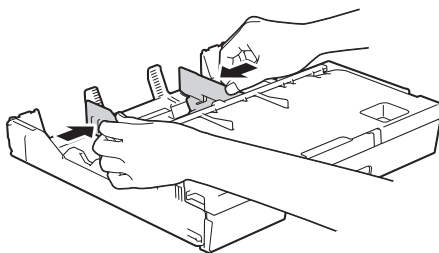


- 3 Put envelopes in the paper tray with the address side down. If the envelope flaps are on the long edge, load the envelopes with the flap on the left, as shown in the illustration. Gently adjust the paper side guides (1) to fit the size of the envelopes.

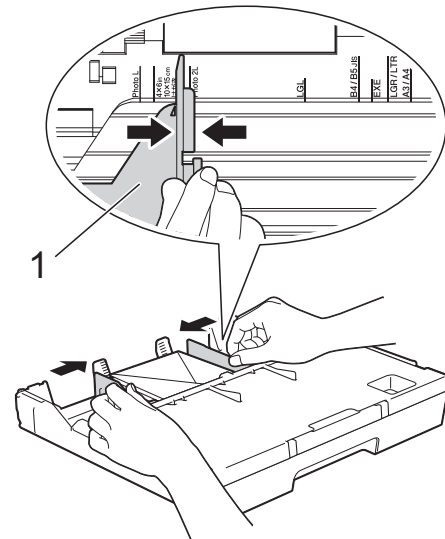

If you have problems printing on envelopes with the flap on the short edge, try the following:

- 1 Open the envelope flap.
- 2 Put the envelope into the paper tray with the address side down and the flap positioned as shown in the illustration.

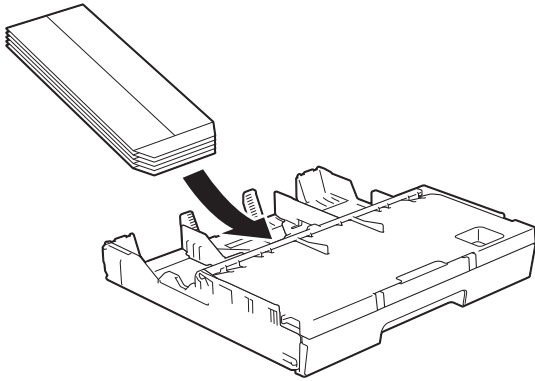


- 3 Select **Reverse Print** (Windows®) or **Reverse page orientation** (Macintosh) in the printer driver's dialog box, and then adjust the size and margin in your application. (See Software and Network User's Guide.)

## Loading paper in paper tray #2

### NOTE

You can only use plain paper sizes A4 or Letter (in Landscape position) and A3, Legal or Ledger (in Portrait position) in tray #2.

- 1 Pull the paper tray completely out of the machine.

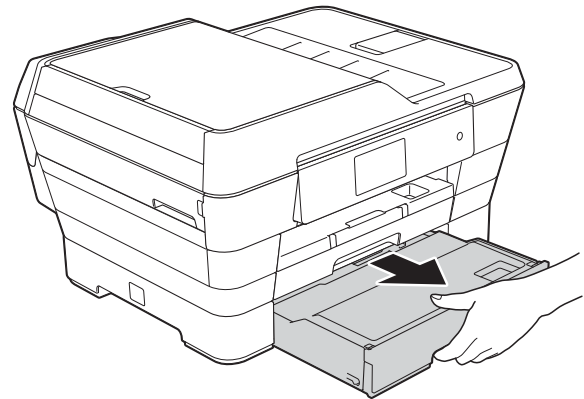


**2** Adjust the tray length if needed:

■ **When using A3, Ledger, or Legal size paper**

Press the universal guide release button (1) as you slide out the front of the paper tray.


You can check if the length of the tray is adjusted correctly by opening the paper tray cover.

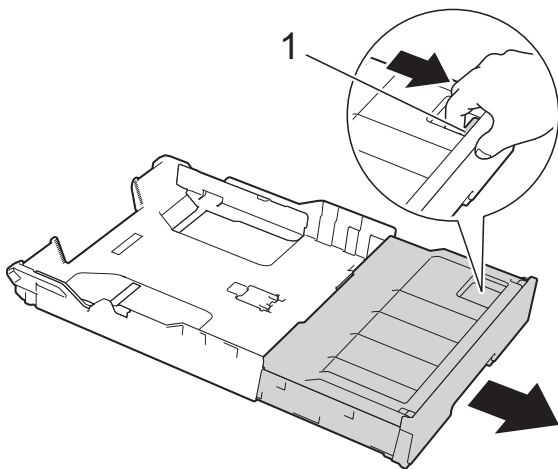

■ **When using A4 or Letter**


If you are using A4 or Letter, you do not have to extend the tray.

**3** Open the paper tray cover (1).

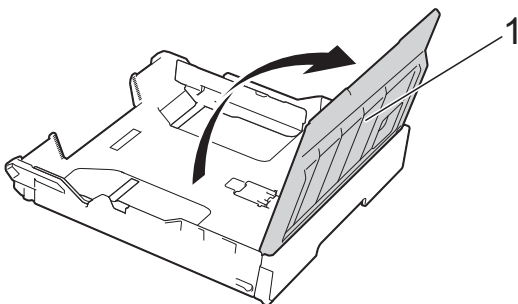

**4** Gently press and slide the paper side guides (1) to fit the paper size. If you are loading A4 or Letter size paper, put it in landscape position and lift up the A4/LTR stopper (2).

Make sure that the triangular mark (3) on the paper side guide lines up with the marks for the paper size you are using.

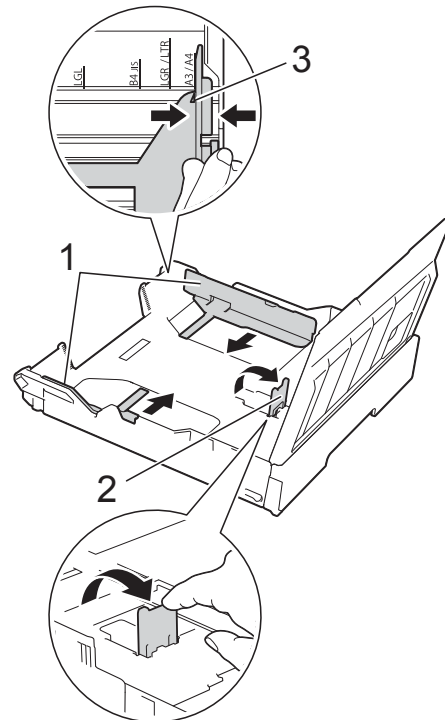

**5** Fan the stack of paper well to avoid paper jams and misfeeds.


**NOTE**

Always make sure that the paper is not curled.

- 6 Gently put the paper into the paper tray print side down.


■ When using A4 or Letter size paper

Landscape orientation

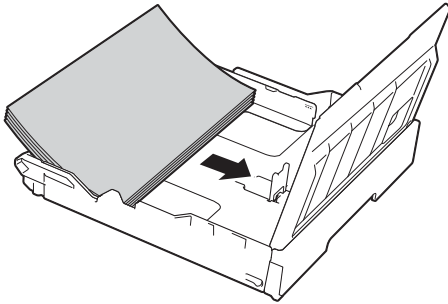


■ When using A3, Ledger, or Legal size paper

Portrait orientation

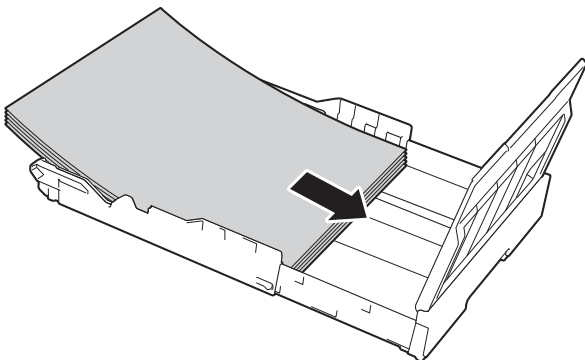


- 7 Gently adjust the paper side guides so they touch the sides of the paper stack.

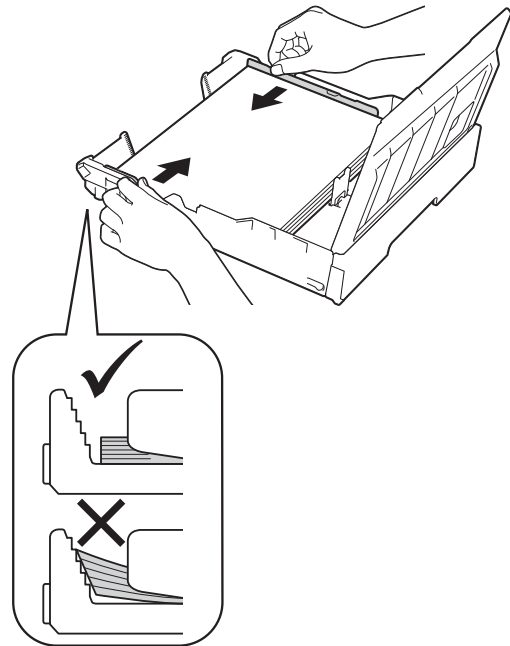


**NOTE**

Be careful not to push the paper in too far; it may lift at the back of the tray and cause feed problems.


- 8 Check that the paper is flat in the tray and below the maximum paper mark (1). Overfilling the paper tray may cause paper jams.

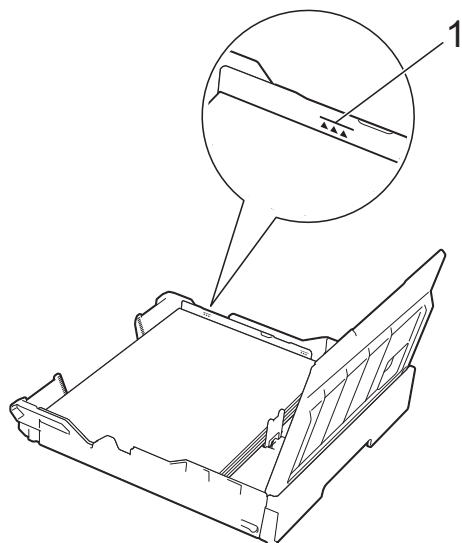

- 9 Close the paper tray cover.

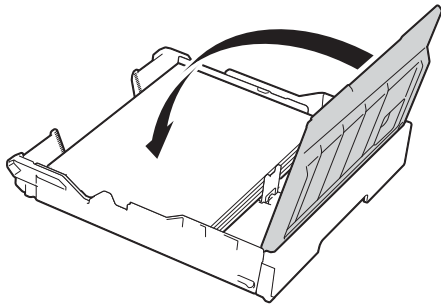

- 10 Slowly push the paper tray back into the machine.

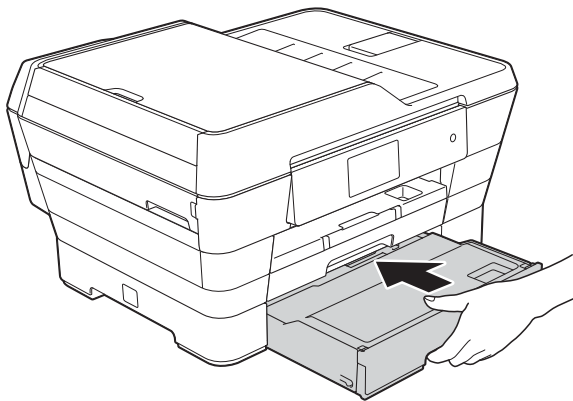


- 11 Do one of the following:
- If you are using A3, Ledger or Legal size paper, go to step 12.



## NOTE

When Tray #2 is extended for large size paper, you must also extend Tray #1 out over Tray #2 to prevent printed pages from falling off the output tray.


- If you are using A4 or Letter size paper, pull out the paper support (1) until it locks into place, and then unfold the paper support flap (2).

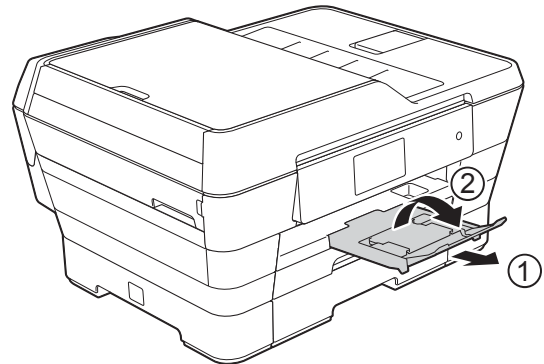


- 12 **Extending tray #1 over tray #2**  
Pull tray #1 out of the machine. Press the universal guide release button (1) as you slide out the front of the paper tray.

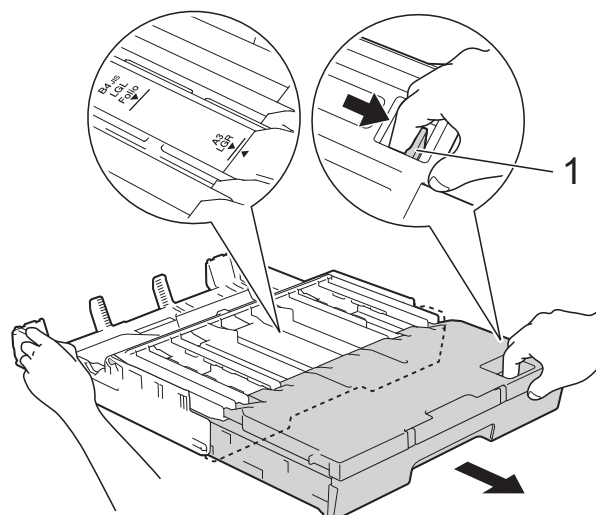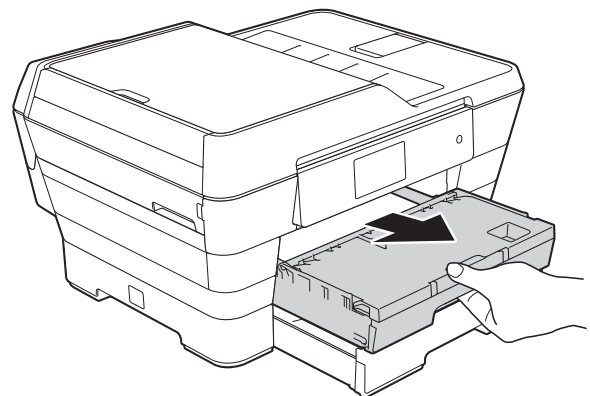


- 13** Open the output paper tray cover and lift the stopper (1) for A4 and Letter.

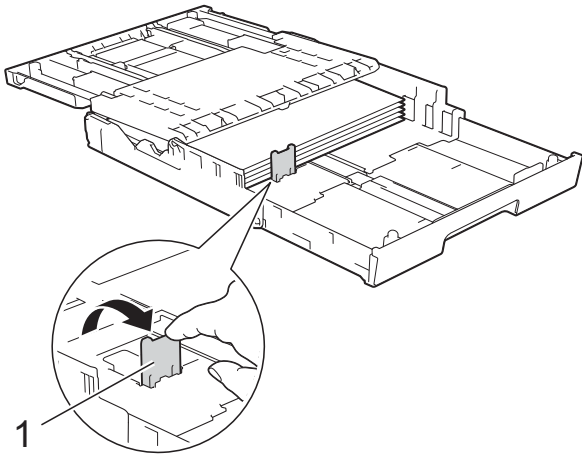

- 14** Close the output paper tray cover and *slowly* push the paper tray into the machine.


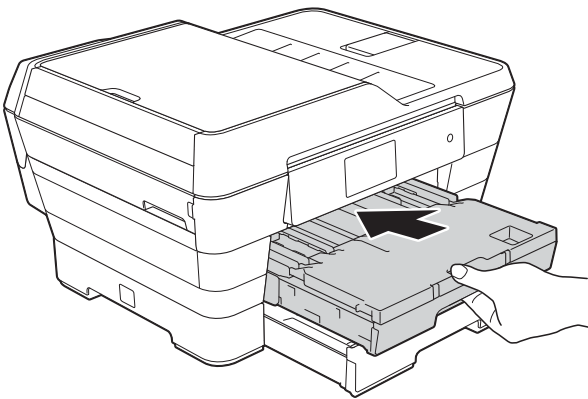


- 15** Pull out the paper support (1) until it locks into place, and then unfold the paper support flap (2).

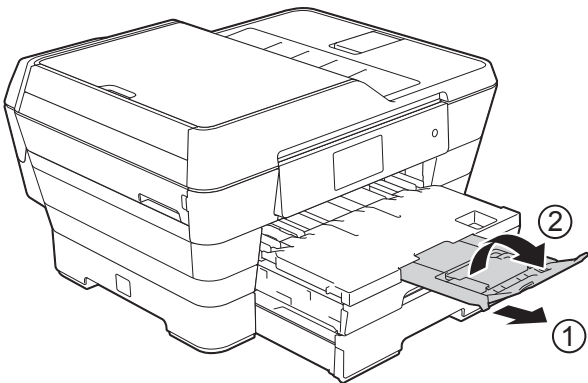

**NOTE**

If you are finished using A3, Ledger or Legal size paper and want to use A4 or Letter size paper, take the paper out of the tray. Shorten the tray by pressing the universal guide release button (1). Adjust the paper side guides (2) to fit A4 or Letter size paper. Lift up the A4/LTR stopper (3). Then put the paper into the tray.

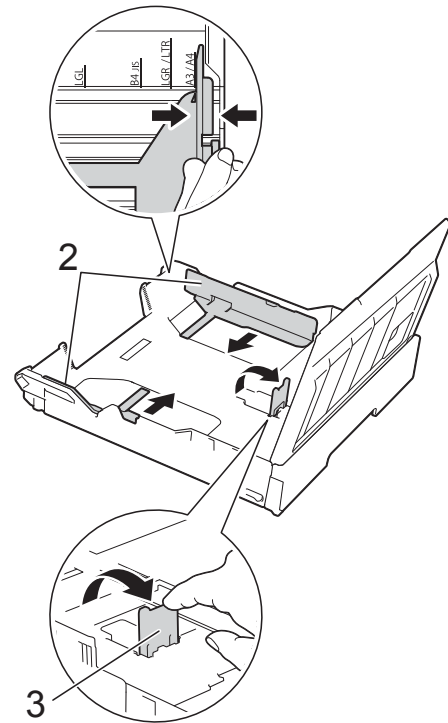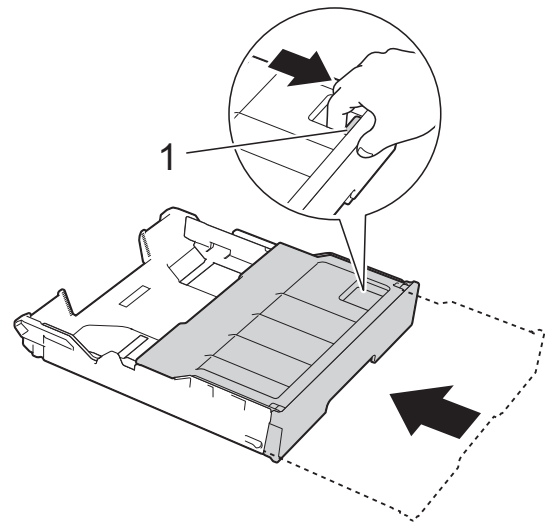



## Loading paper in the manual feed slot



You can load special print media into this slot one sheet at a time.

Use the manual feed slot to print or copy on A3, Ledger, Legal, Folio, A4, Letter, Executive, A5, A6, envelopes, Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index Card (127 × 203 mm.).


### NOTE

The machine automatically turns on Manual Feed mode when you load paper in the manual feed slot.

- 1 Open the manual feed slot cover.

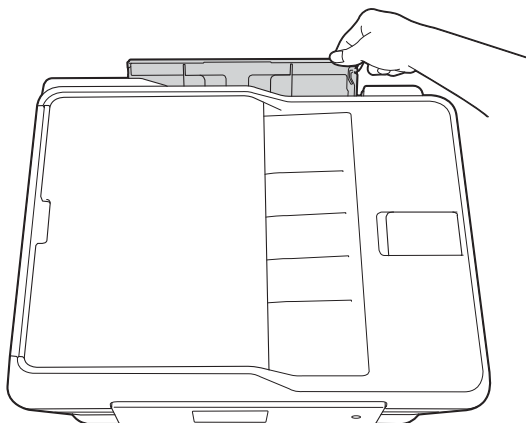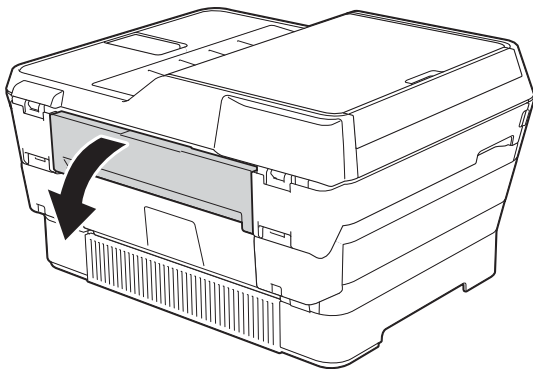


- 2 Slide the manual feed slot paper guides to fit the paper width that you are going to use.

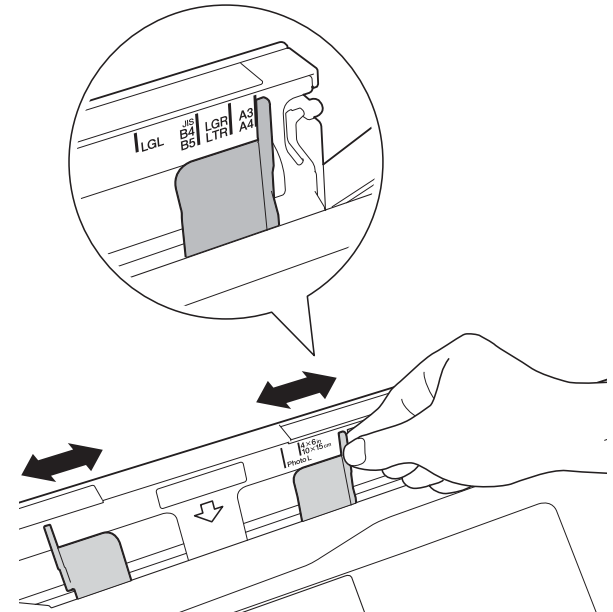

### NOTE


For information about the paper orientation, follow the label attached on the right side of the manual feed slot.




When you slide the paper guides, confirm that they are in these positions.

- 3 Load *only one* sheet of paper in the manual feed slot with the side to be printed on *face up*.

- **When using A3, Ledger, Legal, Folio, A5, A6, envelopes, Photo, Photo L, Photo 2L or Index Card**  
**Portrait orientation**

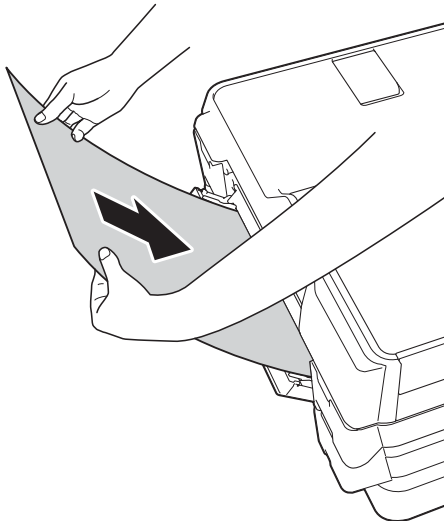

- **When using A4, Letter or Executive**  
**Landscape orientation**

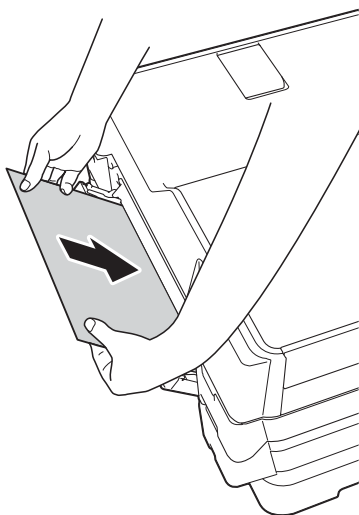


## IMPORTANT

- DO NOT put more than one sheet of paper in the manual feed slot at any one time. Doing this may cause a paper jam. Even if you are printing multiple pages, do not feed the next sheet of paper until the Touchscreen shows a message instructing you to feed the next sheet.



- DO NOT put paper in the manual feed slot when you are printing from the paper tray. Doing this may cause a paper jam.
- For details about the paper orientation, see *Paper orientation and capacity of the paper trays* on page 43.


- 4 Using both hands, gently adjust the manual feed slot paper guides to fit the paper.

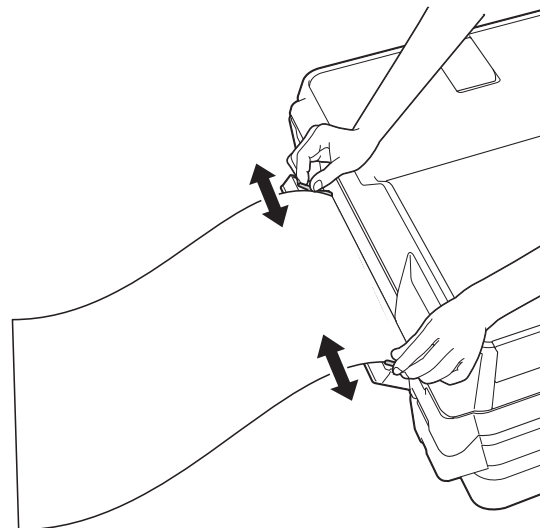

**NOTE**

- DO NOT press the paper guides too tightly against the paper. Doing this may cause the paper to fold.
- Place the paper in the centre of the manual feed slot between the paper guides. If the paper is not centred, pull it out and insert it again at the centre position.

- 5 Using both hands, put one sheet of paper in the manual feed slot until the front edge touches the paper feed roller. Let go of the paper when you hear the machine pull it in a short distance. The Touchscreen will show  
Manual Feed Slot ready.

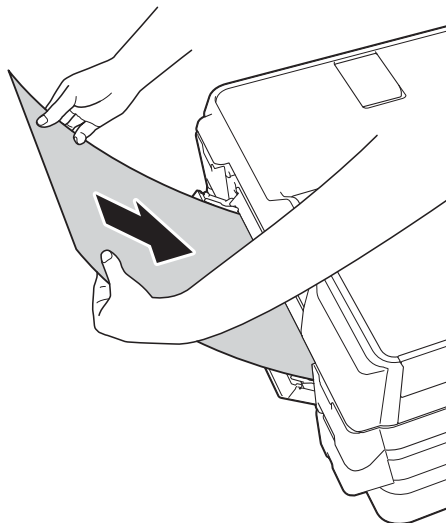**NOTE**

When loading an envelope or a sheet of thick paper, push the envelope into the manual feed slot until you feel it grab the envelope.

- 6 If the data does not fit on one sheet, the Touchscreen will prompt you to load another sheet of paper. Place another sheet of paper in the manual feed slot, and then press **OK** on the Touchscreen.


**NOTE**

- Make sure printing has finished before you close the manual feed slot cover.
- When paper is placed in the manual feed slot, the machine always prints from the manual feed slot.
- Paper inserted in the manual feed slot while a test page, fax or report is being printed will be ejected.
- During the machine's cleaning process, paper you place in the manual feed slot will be ejected. Wait until the machine finishes its cleaning, and then put the paper into the manual feed slot again.


## Unprintable area

The printable area depends on the settings in the application you are using. The figures show the unprintable areas on cut-sheet paper and envelopes.

### Cut-Sheet Paper

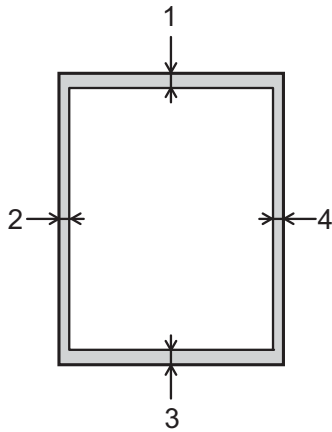

### Envelopes

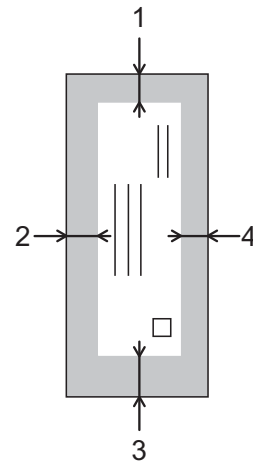

	Top (1)	Left (2)	Bottom (3)	Right (4)
Cut-Sheet	3 mm	3 mm	3 mm	3 mm
Envelopes	22 mm	3 mm	22 mm	3 mm

### NOTE



- The machine can print in the shaded areas of cut-sheet paper when the Borderless print feature is available and turned on. (See Software and Network User's Guide.)
- The Borderless print feature is not available for envelopes and 2-sided printing.

# Paper settings

## Paper Size and Type

To get the best print quality, set the machine for the type of paper you are using.

You can use the following sizes of paper for printing copies: A4, A5, A3, 10 × 15 cm, Letter, Legal and Ledger and five sizes for printing faxes: A4, A3, Ledger, Letter and Legal. When you load a different size of paper in the machine, you will need to change the paper size setting at the same time so your machine can fit an incoming fax on the page.

- 1 Press .
- 2 Press the displayed paper size for Tray #1 or Tray #2.
- 3 Do one of the following:
  - If you press the displayed paper size for Tray #1, press Paper Type.  
Swipe up or down, or press ▲ or ▼ to display Plain Paper, Inkjet Paper, Brother BP71, Other Glossy or Transparency, and press the option you want.  
Press Paper Size.  
Swipe up or down, or press ▲ or ▼ to display A4, A5, A3, 10x15cm, Letter, Legal or Ledger, and press the option you want.
  - If you press the displayed paper size for Tray #2, press Paper Size.  
Swipe up or down, or press ▲ or ▼ to display A4, A3, Letter, Legal or Ledger, and press the option you want.
- 4 Press .

## NOTE



- You can use only plain paper in Tray #2.
- The machine ejects paper with the printed surface face up onto the paper tray in front of the machine. When you use transparencies or glossy paper, remove each sheet at once to prevent smudging or paper jams.

## Tray use in Copy mode

You can change the default tray the machine will use for copies.

Auto Tray Select will allow your machine to feed paper from either Tray #1 or Tray #2, using the paper type and size settings from the Copy menu.

To change the default setting follow the instructions below:

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Tray Setting.
- 6 Press Tray Setting.
- 7 Press Tray Use: Copy.
- 8 Press Tray #1, Tray #2 or Auto Tray Select.
- 9 Press .

## NOTE



You can change the paper size and tray selection temporarily for the next copy. (See *Paper Size* on page 79 and *Tray Select* on page 80.)

## Tray use in Fax mode

You can change the default tray the machine will use for printing received faxes.

Auto Tray Select will allow your machine to take paper from Tray #1 first, or from Tray #2 if:

- Tray #2 is set to a different paper size that is more suitable for the received faxes.
- Both trays are using the same size paper and Tray #1 is not set to use plain paper.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display General Setup.
- 4 Press General Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Tray Setting.
- 6 Press Tray Setting.
- 7 Press Tray Use: Fax.
- 8 Press Tray #1, Tray #2 or Auto Tray Select.
- 9 Press .

## Acceptable paper and other print media

The print quality can be affected by the type of paper you use in the machine.

To get the best print quality for the settings you have chosen, always set the Paper Type to match the type of paper that is loaded in the tray.

You can use plain paper, inkjet paper (coated paper), glossy paper, transparencies and envelopes.

We recommend testing various paper types before buying large quantities.

For best results, use Brother paper.

- When you print on inkjet paper (coated paper), transparencies and glossy paper, be sure to choose the correct print media in the **Basic** tab of the printer driver or in the Paper Type setting of the machine's menu.

(See *Paper Size and Type* on page 39.)

- When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
- When using transparencies or photo paper, remove each sheet at once to prevent smudging or paper jams.
- Avoid touching the printed surface of the paper immediately after printing; the surface may not be completely dry and may stain your fingers.

## Recommended print media

To get the best print quality, we suggest using the Brother paper in the table.

If Brother paper is not available in your country, we recommend testing various papers before purchasing large quantities.

We recommend using 3M Transparency Film when you print on transparencies.

### Brother paper

Paper Type	Item
A3 Plain	BP60PA3
A3 Glossy Photo	BP71GA3
A3 Inkjet (Matte)	BP60MA3
A4 Plain	BP60PA
A4 Glossy Photo	BP71GA4
A4 Inkjet (Matte)	BP60MA
10 × 15 cm Glossy Photo	BP71GP


## Handling and using print media

- Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.
- Avoid touching the shiny (coated) side of the photo paper.
- Avoid touching either side of the transparency paper because they absorb water and perspiration easily, and this may cause decreased output quality. Transparencies designed for laser printers/copiers may stain your next document. Use only transparencies recommended for inkjet printing.

### IMPORTANT

DO NOT use the following kinds of paper:

- Damaged, curled, wrinkled, or irregularly shaped paper

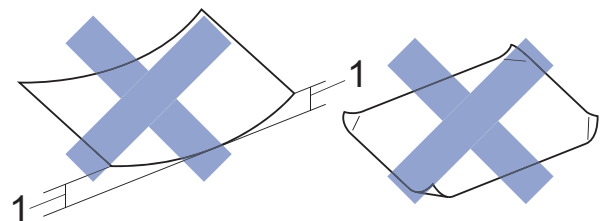

**1 2 mm or greater curl may cause jams to occur.**

- Extremely shiny or highly textured paper
- Paper that cannot be arranged uniformly when stacked
- Short grain paper

### Paper capacity of the output paper tray cover

Up to 50 sheets of 80 g/m<sup>2</sup> A4 paper.

- Transparencies and photo paper must be picked up from the output paper tray cover one page at a time to avoid smudging.

## Choosing the right print media

### Paper type and size for each operation

Paper Type	Paper Size		Usage			
			Fax	Copy	Photo Capture	Printer
Cut-Sheet	A3	297 × 420 mm (11.7 × 16.5 in.)	Yes	Yes	Yes	Yes
	A4	210 × 297 mm (8.3 × 11.7 in.)	Yes	Yes	Yes	Yes
	Ledger	279.4 × 431.8 mm (11 × 17 in.)	Yes	Yes	Yes	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	Yes	Yes	Yes	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	Yes	Yes	–	Yes
	Folio	215.9 × 330.2 mm (8 1/2 × 13 in.)	–	–	–	Yes
	Executive	184 × 267 mm (7 1/4 × 10 1/2 in.)	–	–	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes
	A6	105 × 148 mm (4.1 × 5.8 in.)	–	–	–	Yes
Cards	Photo	10 × 15 cm (4 × 6 in.)	–	Yes	Yes	Yes
	Photo L	89 × 127 mm (3 1/2 × 5 in.)	–	–	–	Yes
	Photo 2L	13 × 18 cm (5 × 7 in.)	–	–	Yes	Yes
	Index Card	127 × 203 mm (5 × 8 in.)	–	–	–	Yes
Envelopes	C5 Envelope	162 × 229 mm (6.4 × 9 in.)	–	–	–	Yes
	DL Envelope	110 × 220 mm (4.3 × 8.7 in.)	–	–	–	Yes
	Com-10	105 × 241 mm (4 1/8 × 9 1/2 in.)	–	–	–	Yes
	Monarch	98 × 191 mm (3 7/8 × 7 1/2 in.)	–	–	–	Yes
Transparencies	A4	210 × 297 mm (8.3 × 11.7 in.)	–	Yes	–	Yes
	Letter	215.9 × 279.4 mm (8 1/2 × 11 in.)	–	Yes	–	Yes
	Legal	215.9 × 355.6 mm (8 1/2 × 14 in.)	–	Yes	–	Yes
	A5	148 × 210 mm (5.8 × 8.3 in.)	–	Yes	–	Yes



## Paper orientation and capacity of the paper trays

	Paper size	Paper types	No. of sheets
Paper Tray #1	<Landscape> A4, Letter, Executive  <Portrait> A3, Ledger, Legal, Folio, A5, A6, Photo, Photo L, Photo 2L, Index card, Envelopes (C5, Com-10, DL, Monarch)	Plain Paper	250 <sup>1</sup>
		Inkjet Paper	20
		Glossy Paper, Photo	20
		Index Card	30
Paper Tray #2	<Landscape> A4, Letter  <Portrait> A3, Legal, Ledger	Plain Paper	250 <sup>1</sup>
Manual Feed Slot	<Landscape> A4, Letter, Executive  <Portrait> A3, Ledger, Legal, Folio, A5, A6, Photo, Photo L, Photo 2L, Index card, Envelopes (C5, Com-10, DL, Monarch)	Plain Paper, Inkjet Paper, Glossy Paper, Photo, Envelopes and Transparencies	1

<sup>1</sup> When using 80 g/m<sup>2</sup> paper.

### NOTE

When you choose User Defined in the Paper Size drop-down list of the printer driver, the paper orientation will differ depending on the size and thickness of the paper.

(For details, see *Paper orientation using User Defined as the Paper Size in the printer driver* on page 44.)

## Paper orientation using User Defined as the Paper Size in the printer driver

	User Defined Size	Paper Orientation
Paper Tray #1	When both of the following conditions are satisfied: <ul style="list-style-type: none"> <li>■ Width: 148.0 mm – 215.9 mm</li> <li>■ Height: 216.0 mm – 297.0 mm</li> </ul>	Landscape
	When any one of the following conditions is satisfied: <ul style="list-style-type: none"> <li>■ Width: less than 148.0 mm</li> <li>■ Width: greater than 215.9 mm</li> <li>■ Height: less than 216.0 mm</li> <li>■ Height: greater than 297.0 mm</li> </ul>	Portrait
Manual Feed Slot	When both of the following conditions are satisfied: <ul style="list-style-type: none"> <li>■ Width: 127.0 mm – 215.9 mm</li> <li>■ Height: 216.0 mm – 297.0 mm</li> </ul>	Landscape
	When any one of the following conditions is satisfied: <ul style="list-style-type: none"> <li>■ Width: less than 127.0 mm</li> <li>■ Width: greater than 215.9 mm</li> <li>■ Height: less than 216.0 mm</li> <li>■ Height: greater than 297.0 mm</li> </ul>	Portrait

### NOTE

- When choosing Envelope in the Paper Thickness drop-down list, you must load the envelopes in Portrait orientation.
- Tray #2 cannot be used for user defined paper sizes.

## Paper weight and thickness

Paper Type		Weight	Thickness
Cut-Sheet	Plain Paper	64 to 120 g/m <sup>2</sup>	0.08 to 0.15 mm
	(Tray #2) Plain Paper	64 to 105 g/m <sup>2</sup>	0.08 to 0.15 mm
	Inkjet Paper	64 to 200 g/m <sup>2</sup>	0.08 to 0.25 mm
	Glossy Paper <sup>1</sup>	Up to 220 g/m <sup>2</sup>	Up to 0.25 mm
Cards	Photo Card <sup>1</sup>	Up to 220 g/m <sup>2</sup>	Up to 0.25 mm
	Index Card	Up to 120 g/m <sup>2</sup>	Up to 0.15 mm
Envelopes		80 to 95 g/m <sup>2</sup>	Up to 0.52 mm
Transparencies		–	–

<sup>1</sup> BP71 (260 g/m<sup>2</sup>) paper is especially designed for Brother inkjet machines.

# 3

## Loading documents

### How to load documents

You can send a fax, make copies, or scan from the ADF (automatic document feeder) and from the scanner glass.

#### NOTE

2-sided documents can be faxed, copied, or scanned up to Ledger or A3 size when using the ADF.

### Using the ADF

The ADF can hold up to 35 pages and feeds each sheet individually. Use paper that is within the sizes and weights shown in the table. Always fan the edges of the pages before placing them in the ADF.

#### Document Sizes and Weights

Length:	148 to 431.8 mm
Width:	148 to 297 mm
Weight:	64 to 90 g/m <sup>2</sup>


### How to load documents

#### IMPORTANT


- DO NOT pull on the document while it is feeding.
- DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, glued or taped.
- DO NOT use cardboard, newspaper or fabric.

Make sure documents written with ink or modified with correction fluid are completely dry.

- 1 Unfold the ADF Document Support (1) and the ADF Document Output Support Flap (2).

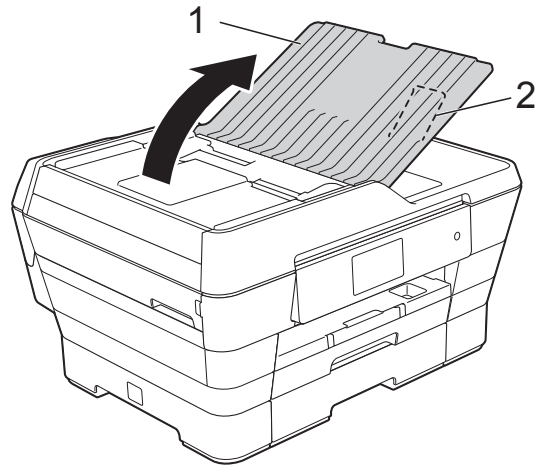

- 2 Fan the pages well.
- 3 Adjust the paper guides (1) to fit the width of your documents.

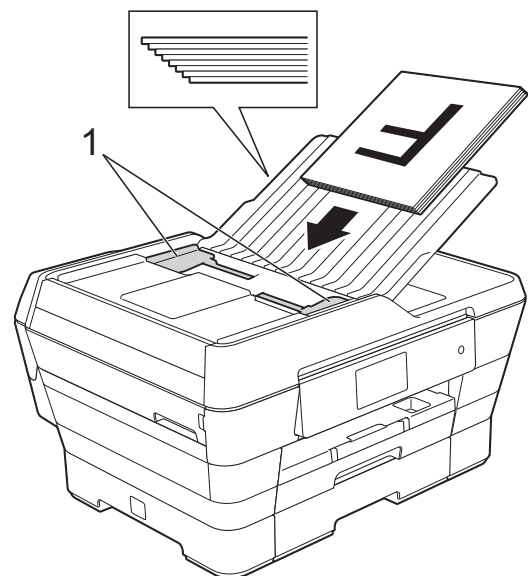


- 4 Place your documents **face up, short edge first** in the ADF until you feel them touch the feed rollers. The Touchscreen will display ADF Ready.

■ **When using ADF High Speed Mode in Copy and Scan mode**

Make sure your document size is A4 or Letter.

Place your documents **face up, long edge first** in the ADF until you feel them touch the feed rollers. The Touchscreen will display ADF Ready.

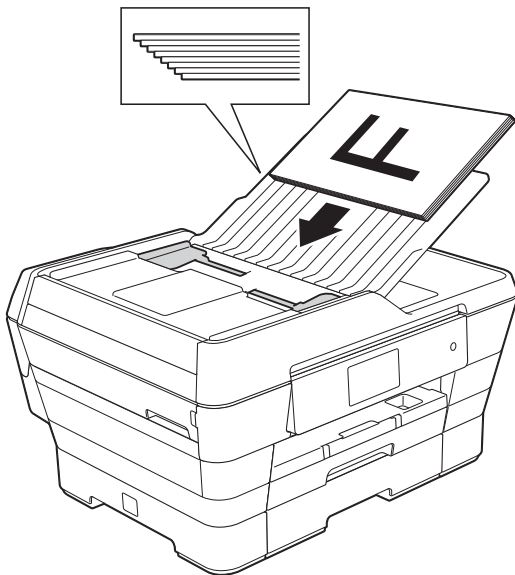

**NOTE**

ADF High Speed Mode is available with Copy and Scan mode. For more information about ADF High Speed Mode, see the following:

- (Copy)  
*ADF High Speed Mode copying*  
on page 80
- (Scan)  
*ADF High Speed Mode scanning*  
on page 96

**IMPORTANT**

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

**Using the scanner glass**

You can use the scanner glass to fax, copy or scan single pages or pages of a book.

**Document Sizes Supported**

Length:	Up to 431.8 mm
Width:	Up to 297 mm
Weight:	Up to 2 kg


**How to load documents**

**NOTE**


To use the scanner glass, the ADF must be empty.

- 1 Lift the document cover.

- 2 Using the document guidelines on the left and top, place the document **face down** in the upper left corner of the scanner glass.

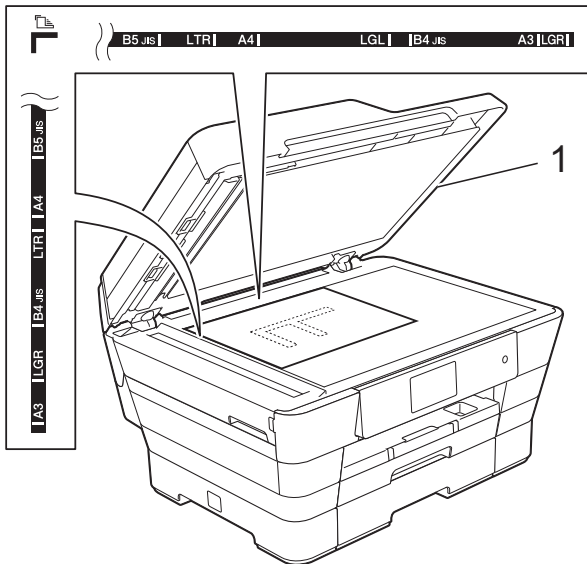

1 document cover

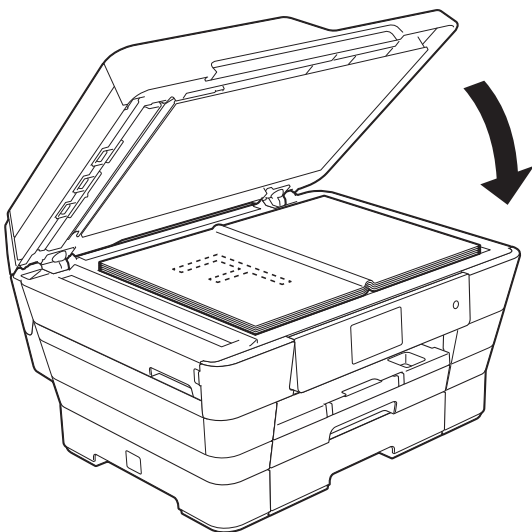


- 3 Close the document cover.

## IMPORTANT

If you are scanning a book or thick document, **DO NOT** slam the cover down or press on it.

## Unscannable area

The scannable area depends on the settings in the application you are using. The figures show the unscannable areas.

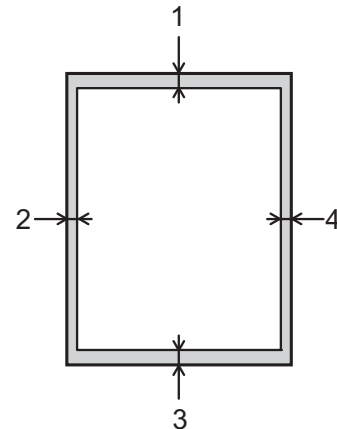

Usage	Document Size	Top (1) Bottom (3)	Left (2) Right (4)
Fax	A3	3 mm	4.5 mm
	A4		3 mm <sup>1</sup>
	Ledger		3.7 mm
	Letter		4 mm
	Legal		
Copy	All paper sizes		3 mm
Scan		2 mm	2 mm

<sup>1</sup> The unscannable area is 1 mm when you use the ADF.

# 4

## Sending a fax




### How to send a fax


The following steps show how to send a fax.

- 1 Do one of the following to load your document:
  - Place the document *face up* in the ADF. (See *Using the ADF* on page 45.)
  - Load your document *face down* on the scanner glass. (See *Using the scanner glass* on page 46.)

#### NOTE

- To send colour faxes with multiple pages, use the ADF.
- If you send a mono fax from the ADF when the memory is full, it will be sent in real time.
- You can use the scanner glass to fax pages of a book one at a time. The documents can be up to A3 or Ledger size.
- Since you can only scan one page at a time, it is easier to use the ADF if you are sending a multiple-page document.

- 2 Do one of the following:
  - When Fax Preview is set to **Off**, press  (Fax).
  - When Fax Preview is set to **On**, press  (Fax) and then  (Sending Faxes).
- The Touchscreen shows:

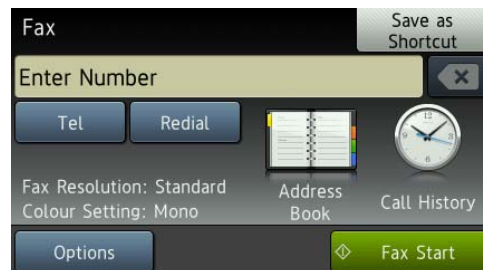

- 3 You can change the following fax-sending settings. Press **Options**. Swipe up or down, or press **▲** or **▼** to scroll through the fax settings. When the setting you want is displayed, press it and choose your new option. When you are finished changing the options, press **OK**.

#### (Basic User's Guide)

For details about changing the following fax-sending settings, see pages 50 to 52.

- Glass Scan Size
- Colour Fax Transmission
- Preview Outgoing Fax
- Transmission Verification Report (Setup)

#### (Advanced User's Guide)

For more advanced fax-sending operations and settings (See Advanced User's Guide: *Sending a fax*.)


- Contrast
- Fax Resolution
- Set New Defaults
- Factory Reset
- 2-sided Fax
- Faxing at the end of a call
- Broadcasting
- Real Time Transmission
- Overseas Mode
- Delayed Fax
- Batch Transmission
- Cancelling Waiting Jobs
- Polled Transmit

- 4 Enter the fax number.

#### Using the dial pad

Using  (**Address Book**)

- Address Book

Using  (**Call History**)

- Outgoing Call
- Caller ID history

#### NOTE

- You can preview a fax message before sending it by setting **Preview** to **On**. (See *How to preview an outgoing fax* on page 51.)
- If your network supports the LDAP protocol you can search for fax numbers and E-mail addresses on your server. (See *Software and Network User's Guide*.)

- 5 Press **Fax Start**.

#### Faxing from the ADF

- The machine starts scanning the document to be sent.

#### Faxing from the scanner glass

- If you choose **Mono** in the **Colour Setting** (default setting), the machine starts scanning the first page. Go to step 6.
- If you choose **Colour** in the **Colour Setting**, the **Touchscreen** asks if you want to send a colour fax. Press **Yes (Colour fax)** to confirm. The machine starts dialling and sending the document.




- 6 When the Touchscreen asks you `Next page?`, do one of the following:
  - To send a single page, press `No`.  
The machine starts sending the document.
  - To send more than one page, press `Yes` and go to step 7.
- 7 Place the next page on the scanner glass.  
Press `OK`.  
The machine starts scanning the page. (Repeat steps 6 and 7 for each additional page.)

## Stop faxing

To stop faxing, press .

## Setting scanner glass size for faxing

When documents are Letter size, you need to set `Scan Size` to `Letter`. If you do not, the side portion of the faxes will be missing.

- 1 Load your document.
- 2 Do one of the following:
  - When `Fax Preview` is set to `Off`, press  (`Fax`).
  - When `Fax Preview` is set to `On`, press  (`Fax`) and then  (`Sending Faxes`).
- 3 Press `Options`.
- 4 Swipe up or down, or press `▲` or `▼` to display `Glass Scan Size`.
- 5 Press `Glass Scan Size`.

- 6 Swipe up or down or press `▲` or `▼` to display `A4`, `A3`, `Letter`, `Legal` or `Ledger`, and then press the option you want to set.
- 7 Press `OK`.
- 8 Enter the fax number.
- 9 Press `Fax Start`.




## NOTE

- You can save the setting you use most often by setting it as the default setting. (See *Advanced User's Guide: Setting your changes as a new default.*)
- This setting is only available for sending documents from the scanner glass.

## Colour fax transmission

Your machine can send a colour fax to machines that support this feature.


Colour faxes cannot be stored in the machine's memory. When you send a colour fax, the machine will send it in real time (even if `Real Time TX` is set to `Off`).

- 1 Load your document.
- 2 Do one of the following:
  - When `Fax Preview` is set to `Off`, press  (`Fax`).
  - When `Fax Preview` is set to `On`, press  (`Fax`) and then  (`Sending Faxes`).
- 3 Press `Options`.
- 4 Swipe up or down, or press `▲` or `▼` to display `Colour Setting`.
- 5 Press `Colour Setting`.
- 6 Press `Colour`.






- 7 Press **OK**.
- 8 Enter the fax number.
- 9 Press **Fax Start**.

## Cancelling a fax in process








If you want to cancel a fax while the machine is scanning, dialling or sending, press .

## How to preview an outgoing fax

You can preview a fax message before you send it. You must set Real Time Transmission and Polling RX to Off before you use this feature.

- 1 Load your document.
- 2 Do one of the following:
  - When Fax Preview is set to Off, press  (Fax).
  - When Fax Preview is set to On, press  (Fax) and then  (Sending Faxes).
- 3 Press **Options**.
- 4 Swipe up or down, or press **▲** or **▼** to display **Preview**.
- 5 Press **Preview**.
- 6 Press **On**.
- 7 Press **OK**.
- 8 Enter the fax number using the dial pad or Address Book.

- 9 Press **Fax Start**.  
The machine starts scanning the document and the outgoing fax appears on the Touchscreen.  
When the fax is displayed, press the Touchscreen to perform the following operations.

	Description
	Enlarge the fax.
	Reduce the fax.
	Scroll vertically.
	Scroll horizontally.
	Rotate the fax clockwise.
	Go back to the previous page.
	Go to the next page.

- 10 Press **Start**.

### NOTE


- To send a colour fax, do not use Fax Preview.
- The fax message in the memory will be sent and then erased when you press **Start**.


## Transmission Verification Report

You can use the Transmission Verification Report as proof that you sent a fax. This report lists the sender's name or fax number, the time and date of the transmission, duration of the transmission, number of pages sent, and whether or not the transmission was successful.

There are several settings available for the Transmission Verification Report:

- **On:** Prints a report after every fax you send.
- **On+Image:** Prints a report after every fax you send. A portion of the fax's first page appears on the report.
- **Off:** Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if the receiving machine modifies the size of the document you fax. `Off` is the default setting.
- **Off+Image:** Prints a report if your fax is unsuccessful due to a transmission error. The report will also print if your fax is successful, but the receiving machine modifies the size of the document you fax. A portion of the fax's first page appears on the report.
- **Off2:** Prints a report *only* if your fax is unsuccessful due to a transmission error.
- **Off2+Image:** Prints a report *only* if your fax is unsuccessful due to a transmission error. A portion of the fax's first page appears on the report.

- 1 Press .
- 2 Press `All Settings`.
- 3 Swipe up or down, or press ▲ or ▼ to display `Fax`.
- 4 Press `Fax`.

- 5 Swipe up or down, or press ▲ or ▼ to display `Report Setting`.
- 6 Press `Report Setting`.
- 7 Press `XMIT Report`.
- 8 Swipe up or down or press ▲ or ▼ to display `On`, `On+Image`, `Off`, `Off+Image`, `Off2` or `Off2+Image` and then press the option you want to set.
- 9 Press .

### NOTE

- If you choose `On+Image`, `Off+Image` or `Off2+Image` the image will only appear on the Transmission Verification Report if `Real Time Transmission` is set to `Off`. The image will not appear on the report when you send a colour fax. (See *Advanced User's Guide: Real Time Transmission*.)
- If your transmission is successful, `OK` will appear next to `RESULT` on the Transmission Verification Report. If the transmission is not successful, `ERROR` will appear next to `RESULT`.

# 5

## Receiving a fax


### Receive Modes

You must choose a Receive Mode depending on the external devices and telephone services you have on your line.


### Choose the Receive Mode

By default, your machine will automatically receive any faxes that are sent to it. The diagram below will help you choose the correct mode.

For more detailed information on the Receive Modes, see *Using Receive Modes* on page 55.

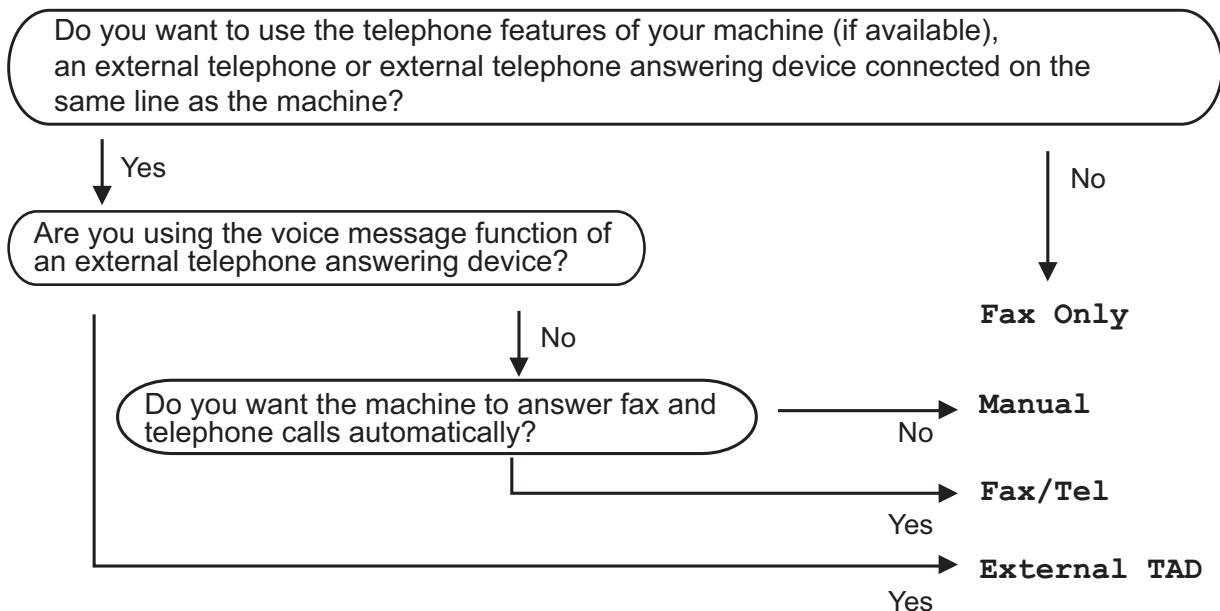

To set the Receive Mode follow the instructions:

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Fax.
- 4 Press Fax.
- 5 Swipe up or down, or press ▲ or ▼ to display Setup Receive.
- 6 Press Setup Receive.
- 7 Swipe up or down, or press ▲ or ▼ to display Receive Mode.

- 8 Press Receive Mode.

## NOTE

---

If the option to change the receive mode is unavailable, make sure the BT Call Sign feature is set to Off. (See *Advanced User's Guide: To enable the machine to work with BT Call Sign (with your external telephone only)*.)

---

- 9 Press Fax Only, Fax/Tel, External TAD or Manual.

- 10 Press .

## Using Receive Modes

Some Receive Modes answer automatically (**Fax Only** and **Fax/Tel**). You may want to change the Ring Delay before using these modes. (See *Ring Delay* on page 56.)

### Fax Only

**Fax Only** mode will automatically answer every call as a fax call.

### Fax/Tel

**Fax/Tel** mode helps you manage incoming calls by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the *F/T Ring* to tell you to pick up the line. The *F/T Ring* is a fast double-ring made by your machine.

If you use **Fax/Tel** mode, see *F/T Ring Time (Fax/Tel mode only)* on page 56 and *Ring Delay* on page 56.

### Manual

**Manual** mode turns off all automatic answering functions unless you are using the **BT Call Sign** feature.

To receive a fax in **Manual** mode, lift the handset of an external telephone. When you hear fax tones (short repeating beeps), press **Fax Start** and choose **Receive**. You can also use the **Fax Detect** feature to receive faxes by lifting a handset on the same line as the machine.

(See *Fax Detect* on page 57.)

### External TAD

**External TAD** mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in one of the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.



To connect your External TAD, see *Connecting an external TAD (telephone answering device)* on page 67.

# Receive Mode settings

## Ring Delay

Ring Delay sets the number of times the machine rings before it answers in **Fax Only** or **Fax/Tel** mode. If you have external or extension telephones on the same line as the machine, choose the maximum number of rings.

(See *Operation from external and extension telephones* on page 69 and *Fax Detect* on page 57.)

- 1 Press .
- 2 Press **All Settings**.
- 3 Swipe up or down, or press ▲ or ▼ to display **Fax**.
- 4 Press **Fax**.
- 5 Swipe up or down, or press ▲ or ▼ to display **Setup Receive**.
- 6 Press **Setup Receive**.
- 7 Swipe up or down, or press ▲ or ▼ to display **Ring Delay**.
- 8 Press **Ring Delay**.
- 9 Swipe up or down, or press ▲ or ▼ to display the options, and then press the number of times the machine will ring before it answers.  
If you choose 0, the machine will answer immediately and the line will not ring at all.
- 10 Press .



## F/T Ring Time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it. However, if it is a voice call then the machine will sound the F/T Ring (a fast double-ring) for the time you have set in the F/T Ring Time setting. If you hear the F/T Ring, it means that you have a voice caller on the line.

Because the F/T Ring is made by the machine, extension and external telephones will not ring. However, you can still answer the call on any telephone by using a remote code.

(For more information, see *Using remote codes* on page 70.)

- 1 Press .
- 2 Press **All Settings**.
- 3 Swipe up or down, or press ▲ or ▼ to display **Fax**.
- 4 Press **Fax**.
- 5 Swipe up or down, or press ▲ or ▼ to display **Setup Receive**.
- 6 Press **Setup Receive**.
- 7 Swipe up or down, or press ▲ or ▼ to display **F/T Ring Time**.
- 8 Press **F/T Ring Time**.
- 9 Press how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds).
- 10 Press .

**NOTE**

Even if the caller hangs up during the fast double-ring, the machine will continue to ring for the set time.

**Fax Detect****If Fax Detect is On:**

The machine receives a fax call automatically, even if you answer the call. When you see *Receiving* on the Touchscreen or when you hear “chirps” through the handset you are using, just replace the handset. Your machine will do the rest.


**If Fax Detect is Off:**


If you are at the machine and answer a fax call by lifting the handset, press *Fax Start*, then press *Receive* to receive the fax.

If you answered at an extension or external telephone, press \* **5 1**. (See *Operation from external and extension telephones* on page 69.)

**NOTE**



- If this feature is set to *On*, but your machine does not connect a fax call when you lift an extension or external telephone handset, press the remote activation code \* **5 1**.
- If you send faxes from a computer on the same telephone line and the machine intercepts them, set *Fax Detect* to *Off*.

- 1 Press .
- 2 Press *All Settings*.
- 3 Swipe up or down, or press ▲ or ▼ to display *Fax*.
- 4 Press *Fax*.



- 5 Swipe up or down, or press ▲ or ▼ to display *Setup Receive*.
- 6 Press *Setup Receive*.
- 7 Swipe up or down, or press ▲ or ▼ to display *Fax Detect*.
- 8 Press *Fax Detect*.
- 9 Press *On* (or *Off*).
- 10 Press .

# Fax Preview (Monochrome faxes only)

## How to preview a received fax

You can view received faxes on the Touchscreen by pressing  (Fax) and then  (Received Faxes). When the machine is in Ready mode, a pop-up message will appear on the Touchscreen to alert you of new faxes.

## Setting Fax Preview

- 1 Press .
- 2 Press `Fax Preview`.
- 3 Press `On` (or `Off`).
- 4 Press `Yes`.
- 5 The Touchscreen will tell you that any future faxes will not be printed as you receive them.  
Press `Yes`.
- 6 Press .

## NOTE



When Fax Preview is turned on, a backup copy of received faxes will not be printed for Fax Forwarding and PC-Fax Receiving operations, even if you have set Backup Print to `On`.

## Using Fax Preview

When you receive a fax, you will see a pop-up message on the Touchscreen. (For example: `New Fax:01 [View]`)

- 1 Press `View`.  
The Touchscreen will display the fax list.

## NOTE

- The fax list includes old and new faxes. New faxes are indicated by a blue mark next to the fax.
- If you want to see a fax that has already been previewed, press  (Fax) and  (Received Faxes).










- 2 Swipe up or down, or press `▲` or `▼` to display the fax number of the fax you want to see.
- 3 Press the fax you want to see.

## NOTE

- If your fax is large there may be a delay before it is displayed.
- The Touchscreen will show the current page number and total pages of the fax message. When your fax message is over 99 pages the total number of pages will be shown as "XX".






Press the Touchscreen or Touchpanel to perform the following operations.




	Description
	Enlarge the fax.
	Reduce the fax.
	Scroll vertically.
	Scroll horizontally.
	Rotate the fax clockwise.
	Delete the fax. Press <b>Yes</b> to confirm.
	Go back to the previous page.
	Go to the next page.
	Go back to the fax list.
Start	Print the fax. Do one of the following: <ul style="list-style-type: none"> <li>■ Press <b>Print All Pages</b> to print the whole fax message.</li> <li>■ Press <b>Print Displayed Only</b> to only print the displayed page.</li> <li>■ Press <b>Print From Displayed</b> to print from the displayed page to the last page.</li> </ul>

4 Press .




## How to print a fax

- 1 Press  (Fax).
- 2 Press  (Received Faxes).
- 3 Press the fax you want to view.
- 4 Press **Start**.
  - If the fax is multiple pages, go to step 5.
  - If the fax is a single page, it will start printing. Go to step 6.
- 5 Do one of the following:
  - Press **Print All Pages** to print all pages of the fax. Go to step 6.
  - Press **Print Displayed Only** to print the displayed page. Go to step 7.
  - Press **Print From Displayed** to print from the displayed page to the last page. Go to step 7.
- 6 Do one of the following:
  - To delete the fax, press **Yes**.
  - To keep the fax in the memory, press **No**.
- 7 Press .



## How to print all faxes in the list

- 1 Press  (Fax).
- 2 Press  (Received Faxes).
- 3 Press `Print/Delete`.
- 4 Do one of the following:
  - To print all new faxes, press `Print All(New Faxes)`.
  - To print all old faxes, press `Print All(Old Faxes)`.
- 5 Press .

## How to delete all faxes in the list

- 1 Press  (Fax).
- 2 Press  (Received Faxes).
- 3 Press `Print/Delete`.
- 4 Do one of the following:
  - To delete all new faxes, press `Delete All(New Faxes)`.
  - To delete all old faxes, press `Delete All(Old Faxes)`.
- 5 Press `Yes` to confirm.
- 6 Press .

## Turning off Fax Preview

- 1 Press .
- 2 Press `Fax Preview`.
- 3 Press `Off`.
- 4 Press `Yes` to confirm.
- 5 If there are faxes stored in the memory, do one of the following:
  - If you do not want to print the stored faxes, press `Continue`.  
The machine asks you to confirm the deletion of the stored faxes.  
Press `Yes` to confirm. Your faxes will be deleted.
  - If you want to print all the stored faxes, press `Print All Faxes Before Delete`.
  - If you do not wish to turn off Fax Preview, press `Cancel`.
- 6 Press .

# 6

## Using PC-FAX

### PC-FAX Sending

You can send a file created in any application on your PC as a standard fax.


#### NOTE

The PC-FAX software can only send monochrome fax documents.

### Sending a file as a PC-FAX

Please install MFL-Pro Suite software, connect your machine and PC before using PC-FAX sending.

- 1 Create a file in any application on your PC.
- 2 Click **File**, then **Print**. The **Print** dialog box appears.
- 3 Choose **Brother PC-FAX** as your printer, and then click **Print**. The PC-FAX sending dialog box appears:

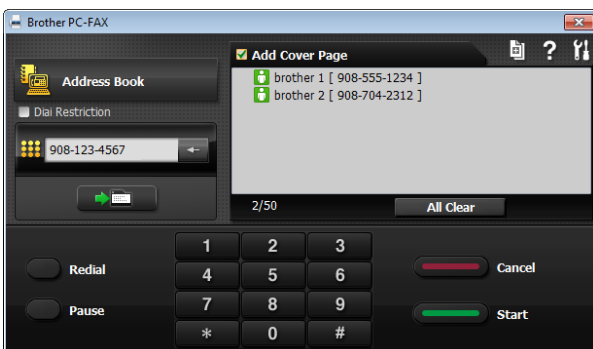

- 4 Enter a fax number using any of the following methods:
  - Use the dial pad to enter the number.

#### NOTE


If you select the **Dial Restriction** check box, a confirmation dialog box will appear for you to re-enter the fax number. This feature helps to prevent transmissions to the wrong destination.

- Click the **Address Book** button, and then choose a member or group from the Address Book.

If you make a mistake, click **All Clear** to delete all the entries.


- 5 To include a cover page, click **Add Cover Page**.

#### NOTE

You can also click the cover page  icon to create or edit a cover page.

- 6 Click **Start** to send the fax.

#### NOTE

- If you want to cancel the fax, click **Cancel**, or press  on the Touchpanel.
- If you want to redial a number, click **Redial** to scroll through the last five fax numbers, choose a number, and then click **Start**.

## PC-FAX Receiving (Windows®)

If you turn on the PC-FAX Receive feature, your machine will store received faxes in the memory and send them to your PC. You can then use your PC to view and store these faxes.


Even if you have turned off your PC (at night or on the weekend, for example), your machine will receive and store your faxes in its memory.

When you start your PC and the PC-FAX Receiving software runs, your machine transfers your faxes to your PC.


To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC.

Do one of the following:



(Windows® XP, Windows Vista® and Windows® 7)

From  (**Start**), select **All Programs**, **Brother**, **MFC-XXXX**, **PC-FAX Receiving**, and select **Receive**. (where XXXX is your model name.)

(Windows® 8)

Click  (**Brother Utilities**), and then click the drop-down list and select your model name (if not already selected). Click **PC-FAX Receive** in the left navigation bar, and then click **Receive**.

If you choose `Backup Print: On`, the machine will also print the fax.

- 1 Press .
- 2 Press `All Settings`.
- 3 Swipe up or down, or press ▲ or ▼ to display `Fax`.
- 4 Press `Fax`.
- 5 Swipe up or down, or press ▲ or ▼ to display `Setup Receive`.
- 6 Press `Setup Receive`.
- 7 Swipe up or down, or press ▲ or ▼ to display `Memory Receive`.
- 8 Press `Memory Receive`.
- 9 Press `PC Fax Receive`.
- 10 The Touchscreen shows the message `Run PC-Fax on your computer.` Press `OK`.
- 11 Press `<USB>` or the name of the PC you want to receive faxes if you are on a network. Press `OK`.
- 12 If Fax Preview is set to `Off`, press `Backup Print: On` or `Backup Print: Off`.
- 13 Press .

**NOTE**

- PC-FAX Receive is not supported by Mac OS.
- Before you can set up PC-FAX Receive, you must install the MFL-Pro Suite software on your PC. Make sure your PC is connected and turned on.

(See Software and Network User's Guide.)

- If you get an error message and the machine cannot print the faxes in the memory, you can use this setting to transfer your faxes to your PC. (See *Transferring your faxes or Fax Journal report* on page 118.)
- When you receive a colour fax, your machine prints the colour fax at your machine but does not send the fax to your PC.
- To change the destination PC, repeat steps ❶ to ❸.

## Voice operations

### Fax/Tel mode

When the machine is in Fax/Tel mode, it will use the F/T Ring (fast double-ring) to alert you to pick up a voice call.

If you are at an external telephone, lift the handset of the external telephone, and then press **Pickup** to answer.

If you are at an extension telephone, you'll need to lift the handset during the F/T Ring Time and then press **# 5 1** between the fast double-rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing **\* 5 1**.

### Caller ID (U.K. and Ireland only)

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the Touchscreen shows the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the Touchscreen, but the call information stays stored in the Caller ID memory.

You can view the list or choose one of these numbers to fax to, add to Address Book, or delete from the history. (See *Caller ID history* on page 74.)

- The **ID Unknown** message means the call originated outside your Caller ID service area.
- The **ID Withheld** message means the caller has intentionally blocked the transmission of their information.



You can print a list of the Caller ID information received by your machine. (See *Advanced User's Guide: How to print a report.*)

### NOTE

The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

### Setting the Caller ID to On

If you have Caller ID on your line, then this function should be set to **On** to display the caller's telephone number on the Touchscreen as the telephone rings.

- 1 Press .
- 2 Press **All Settings**.
- 3 Swipe up or down, or press **▲** or **▼** to display **Fax**.
- 4 Press **Fax**.
- 5 Swipe up or down, or press **▲** or **▼** to display **Miscellaneous**.
- 6 Press **Miscellaneous**.
- 7 Press **Caller ID**.
- 8 Press **On (or Off)**.
- 9 Press .

## Telephone services

Your machine supports the Caller ID subscriber telephone service that some telephone companies offer.


Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, answering services, alarm systems or other custom features on one telephone line may create problems with the operation of your machine.

### NOTE

Caller ID is available for U.K. and Ireland only.

## Setting the Telephone Line Type

If you are connecting the machine to a line that features PBX or ISDN to send and receive faxes, it is also necessary to change the Telephone Line Type accordingly by completing the following steps.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Initial Setup.
- 4 Press Initial Setup.
- 5 Swipe up or down, or press ▲ or ▼ to display Phone Line Set.
- 6 Press Phone Line Set.
- 7 Press Normal, PBX or ISDN.
- 8 Do one of the following:
  - If you choose PBX, go to step 9.
  - If you choose ISDN or Normal, go to step 12.

- 9 Press On or Always.

### NOTE

If you choose On, the machine dials a prefix number before the fax number you dial only when R is pressed.

If you choose Always, the machine always automatically dials a prefix number before the fax number.

- 10 Press Dial Prefix.

- 11 Enter the prefix number using the keyboard on the Touchscreen.  
Press OK.

### NOTE

You can use the numbers 0 to 9, #, \* and !. You cannot use ! with any other numbers or characters.

- 12 Press .

## PBX and TRANSFER

The machine is initially set to `Normal`, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when the `R` on the Touchscreen is pressed.


### NOTE

You can program a press of the `R` button as part of a number stored in Address Book. When programming the Address Book number, press `R` first (the Touchscreen shows '!'), then enter the telephone number. If you do this, you do not need to press `R` each time before you dial using an Address Book. (See *Storing numbers* on page 75.) However, if your Telephone Line Type is not set to PBX on the machine, you cannot use the Address Book number that the `R` is programmed into.

## Voice over Internet Protocol (VoIP)

VoIP is a type of phone system that uses an Internet connection instead of a traditional telephone line. Telephone providers frequently bundle VoIP together with Internet and cable services.

Your machine may not work with some VoIP systems. If you want to use your machine to send and receive faxes on a VoIP system, make sure that one end of your telephone cord is connected to the socket labelled **LINE** on your machine. The other end of the telephone cord may be connected to a modem, phone adapter, splitter, or other such device.

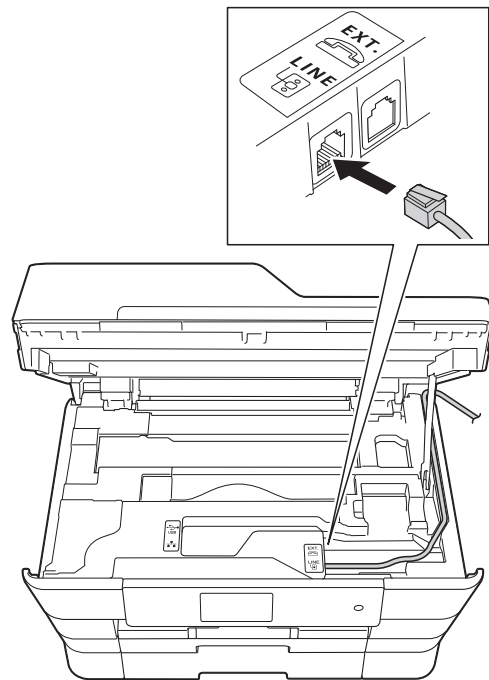

- **If you have questions about how to connect your machine to the VoIP system, please contact your VoIP provider.**

After you have connected your machine to the VoIP system, check for a dial tone. Lift the external telephone's handset and listen for a dial tone. If there is no dial tone, please contact your VoIP provider.

If you are having problems sending or receiving faxes over a VoIP system, we recommend changing the machine's modem speed to the `Basic (for VoIP)` setting (see *Telephone line interference / VoIP* on page 139).




## Connecting an external TAD (telephone answering device)

You may choose to connect an external answering device. However, when you have an **external** TAD on the same telephone line as the machine, the TAD answers all calls and the machine “listens” for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAD continue playing your outgoing message so your caller can leave a voice message.

The TAD must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAD has answered the call, and with four rings, there are only 8 to 10 seconds of CNG tones left for the fax “handshake”. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

### NOTE

If you do not receive all your faxes, shorten the Ring Delay setting on your external TAD.

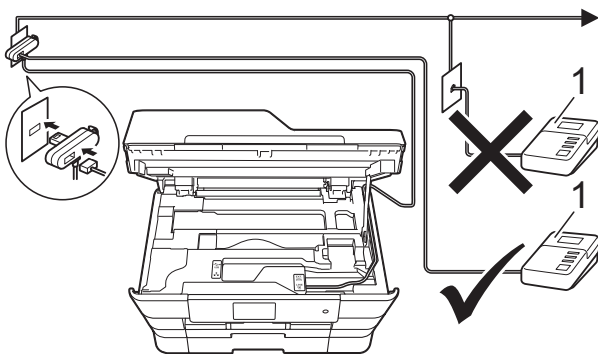

### 1 TAD

When the TAD answers a call, the Touchscreen shows `Telephone`.

### IMPORTANT

DO NOT connect a TAD elsewhere on the same telephone line.

## Connection settings

The external TAD must be connected as shown in the previous illustration.

- 1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position.
- 2 Carefully guide the telephone line cord into the cable channel and out the back of the machine.
- 3 Lift the scanner cover to release the lock. Gently push the scanner cover support down and close the scanner cover using both hands.
- 4 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 5 Record the outgoing message on your external TAD.
- 6 Set the TAD to answer calls.
- 7 Set the Receive Mode to `External TAD`. (See *Choose the Receive Mode* on page 53.)

## Recording an outgoing message (OGM) on an external TAD

Timing is important in recording this message.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.

### NOTE

We recommend beginning your OGM with an initial 5 second silence because the machine may not hear the fax tones over a voice. You may try omitting this pause, but if your machine has trouble receiving, then you must re-record the OGM to include it.

## Multi-line connections (PBX)

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi-line system, we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator, we recommend that you set the Receive Mode to *Manual*.

We cannot guarantee that your machine will operate correctly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.


### NOTE

Make sure the Telephone Line Type is set to PBX. (See *Setting the Telephone Line Type* on page 65.)

## External and extension telephones

### Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram.

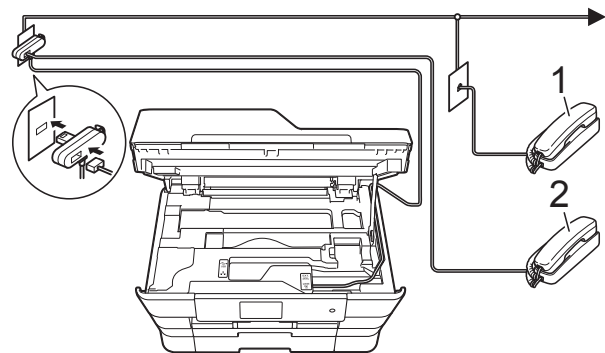

- 1 Extension telephone
- 2 External telephone

### NOTE

Please make sure you use an external telephone with a cable no more than 3 metres long.

## Operation from external and extension telephones

---

If you answer a fax call on an extension or an external telephone, you can make your machine take the call by using the Remote Activation Code. When you press the Remote Activation Code \* 5 1, the machine starts to receive the fax.

If the machine answers a voice call and fast double-rings for you to take over, use the Remote Deactivation Code # 5 1 to take the call at an extension telephone. (See *F/T Ring Time (Fax/Tel mode only)* on page 56.)

### If you answer a call and no one is on the line:

Assume you are receiving a manual fax.

Press \* 5 1 and wait for the chirp or until the Touchscreen shows *Receiving*, and then hang up.

### NOTE

---

You can also use the Fax Detect feature to make your machine automatically take the call. (See *Fax Detect* on page 57.)

---

## Using extension telephones (U.K. only)

---

Your premises may already be wired with parallel extension telephones, or you may plan to add extension telephones to your line, as well as your machine. While the simplest arrangement is a straightforward parallel connection, there are some problems with this. The most obvious is inadvertent interruption of a facsimile transmission caused by someone picking up an extension telephone to make an outgoing call. Also, the remote activation code feature may not operate reliably in such a simple configuration.


This machine may also be set to make a delayed transmission (i.e. a transmission at a pre-set time). This pre-set job may coincide with someone picking up an extension handset.

These problems can easily be eliminated, if you arrange modification of your extension wiring circuit, such that extension devices are connected “downstream” of your machine in a master/slave configuration (see fig. 2). In this configuration the machine can always detect whether a telephone is in use. Thus it will not attempt to seize the line during that time. This is known as “telephone off-hook detection.”

The inadvisable configuration is shown in figure 1, and the recommended master/slave configuration is shown in figure 2.


This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PBX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be put into the modular socket of the white “T”-shaped connector provided as part of the line cord assembly.

### Inadvisable connection of extension sockets (Fig. 1.)

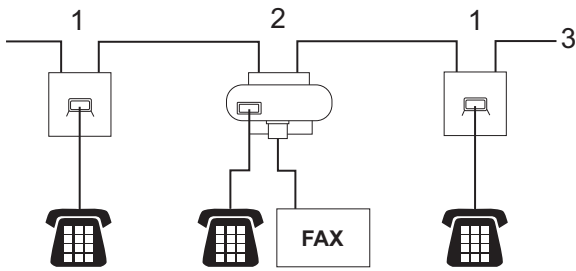

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

### Recommended connection of extension sockets (Fig. 2.)

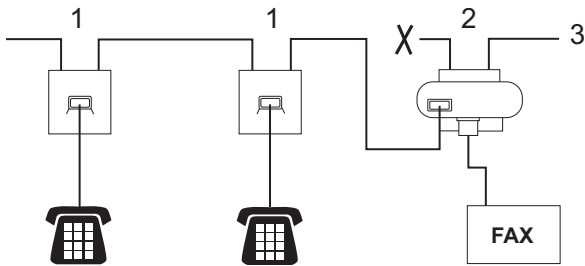

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

The fax machine must be plugged into the master socket.

#### NOTE

These telephones are now connected as external devices (See *Connecting an external or extension telephone* on page 68), because they are connected to the fax machine via the T-connector.

## Using remote codes

### Remote Activation Code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by dialling the Remote Activation Code \* 5 1. Wait for the chirping sounds and then replace the handset. (See *Fax Detect* on page 57.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing *Fax Start* and choose *Receive*.


### Remote Deactivation Code


If you receive a voice call and the machine is in Fax/Tel mode, it will start to sound the F/T Ring (fast double-ring) after the initial ring delay. If you pick up the call on an extension telephone, you can turn the F/T Ring off by pressing # 5 1 (make sure you press this *between* the rings).

If the machine answers a voice call and fast double-rings for you to take over, you can take the call at the external telephone by pressing *Pickup*.

### Changing the remote codes

If you want to use Remote Activation, you have to turn on the remote codes. The preset Remote Activation Code is \* 5 1. The preset Remote Deactivation Code is # 5 1. If you want to, you can replace them with your own codes.

- 1 Press .
- 2 Press *All Settings*.
- 3 Swipe up or down, or press ▲ or ▼ to display *Fax*.
- 4 Press *Fax*.

- 5 Swipe up or down, or press ▲ or ▼ to display `Setup Receive`.
- 6 Press `Setup Receive`.
- 7 Swipe up or down, or press ▲ or ▼ to display `Remote Codes`.
- 8 Press `Remote Codes`.
- 9 Do one of the following:
  - If you want to change the Remote Activation Code, press `Act.Code`.  
Enter the new code, and then press `OK`.
  - If you want to change the Remote Deactivation Code, press `Deact.Code`.  
Enter the new code, and then press `OK`.
  - If you do not want to change the Codes, go to step 10.
  - If you want to turn the Remote Codes Off (or On), press `Remote Codes`.  
Press `Off (or On)`.
- 10 Press .

## NOTE

---

- If you are always disconnected when accessing your external TAD remotely, try changing the Remote Activation Code and Remote Deactivation Code to another three-digit code using the numbers **0-9**, **\***, **#**.
  - Remote Codes might not work with some telephone systems.
-




# 8


## Dialling and storing numbers

### How to dial

#### Manual dialling

---

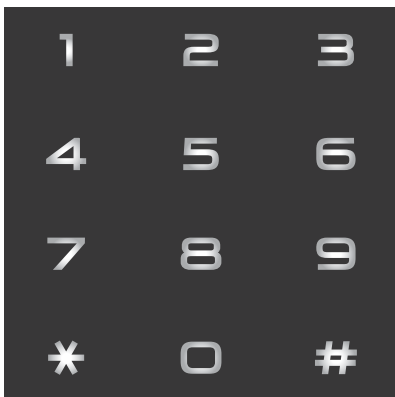


- 1 Load your document.
- 2 Do one of the following:
  - When Fax Preview is set to Off, press  (Fax).
  - When Fax Preview is set to On, press  (Fax) and then  (Sending Faxes).
- 3 Press all of the digits of the fax number.



- 4 Press **Fax Start**.

### Dialling from the Address Book

---

- 1 Load your document.
- 2 Press  (Fax).
- 3 Press  (Address Book).
- 4 Do one of the following:
  - Swipe up or down, or press ▲ or ▼ to display the number you want to dial.
  - Press , and then enter the first letter of the name and press **OK**. Press the name you want to dial.  
If the name has two numbers, go to step 5.  
If the name has one number, go to step 6.

#### NOTE

---

If the LDAP search is available, the result will be shown on the Touchscreen with






(For details, see Software and Network User's Guide.)

- 5 Press the number you want to dial.
- 6 To send a fax, press **Apply**.
- 7 Press **Fax Start**.  
The machine scans and sends the fax.

## Fax Redial

If you are sending a fax automatically and the line is busy, the machine will redial up to three times at five minute intervals.

Redial only works if you dialled from the machine.

- 1 Load your document.
- 2 Do one of the following:
  - When Fax Preview is set to Off, press  (Fax).
  - When Fax Preview is set to On, press  (Fax) and then  (Sending Faxes).
- 3 Press Redial.
- 4 Press Fax Start.




### NOTE

- In Real Time Transmission the automatic redial feature does not work when you are using the scanner glass.
- Redial will change to Pause when you enter a fax number.

## Additional Dialling Operations

### Outgoing Call history

The last 30 numbers you sent a fax to will be stored in the outgoing call history. You can choose one of these numbers to fax to, add to Address Book, or delete from the history.

- 1 Press  (Fax).
- 2 Press  (Call History).
- 3 Press Outgoing Call.
- 4 Press the number you want.
- 5 Do one of the following:
  - To send a fax, press Apply. Press Fax Start.
  - If you want to store the number, press Edit and then press Add to Address Book.  
(See Advanced User's Guide: *Storing Address Book numbers from the Outgoing Call history.*)
  - If you want to delete the number from the Outgoing Call history list, press Edit and then press Delete.  
Press Yes to confirm.  
Press .




## Caller ID history

This feature requires the Caller ID subscriber service offered by many local telephone companies. (See *Caller ID (U.K. and Ireland only)* on page 64.)

The numbers, or names if available, from the last 30 faxes and telephone calls you received will be stored in the Caller ID history. You can view the list or choose one of these numbers to fax to, add to Address Book, or delete from the history. When the thirty-first call comes into the machine, it replaces information about the first call.

### NOTE

If you are not a Caller ID subscriber, you can still view call dates from the Caller ID history, and delete entries from the list.

- 1 Press  (Fax).
- 2 Press  (Call History).
- 3 Press `Caller ID history`.
- 4 Press the number or the name you want.
- 5 Do one of the following:
  - To send a fax, press `Apply`.  
Press `Fax Start`.
  - If you want to store the number, press `Edit` and then press `Add to Address Book`.  
(See *Advanced User's Guide: Storing Address Book numbers from the Caller ID history*.)
  - If you want to delete the number from the Caller ID history list, press `Edit` and then press `Delete`.  
Press `Yes` to confirm.  
Press .

### NOTE

You can print the Caller ID list.  
(See *Advanced User's Guide: How to print a report*.)



## Storing numbers

You can set up your machine to do the following types of easy dialling: Address Book and Groups for broadcasting faxes. When you dial an Address Book number, the Touchscreen shows the number.

### NOTE



If you lose electrical power, the Address Book numbers that are in the memory will not be lost.

## Storing a pause

When you are storing Address Book numbers, you can insert one or more 3.5 second pauses by pressing **Pause** on the Touchscreen.

## Storing Address Book numbers

You can store up to 100 Addresses with a name, and each name can have two numbers.


- 1 Press  (Fax).
- 2 Press  (Address Book).
- 3 Press **Edit**.
- 4 Press **Add New Address**.
- 5 Press **Name**.
- 6 Enter the name using the keyboard on the Touchscreen (up to 16 characters). Press **OK**.  
(For help entering letters, see *Entering Text* on page 190.)
- 7 Press **Address 1**.

- 8 Enter the first fax or telephone number using the keyboard on the Touchscreen (up to 20 digits). Press **OK**.

### NOTE


- Be sure to include the area code when entering a fax or telephone number. Depending on the country, the Caller ID names and history may not be displayed correctly if the area code is not registered with the fax or telephone number.
- *If you downloaded the Internet Fax feature:*

If you want to store an E-mail address to use with Internet Fax or Scan to E-mail

server, press  and enter the E-mail address and press **OK**. (See *Entering Text* on page 190.)



- 9 If you want to store a second fax or telephone number, press **Address 2**. Enter the second fax or telephone number using the keyboard on the Touchscreen (up to 20 digits). Press **OK**.

- 10 Press **OK** to confirm.

- 11 Do one of the following:
  - To store another Address Book number, repeat steps 3 to 10.
  - To finish storing numbers, press .

## Changing or deleting Address Book names or numbers


You can change or delete an Address Book name or number that has already been stored.


- 1 Press  (Fax).
- 2 Press  (Address Book).
- 3 Press `Edit`.
- 4 Do one of the following:
  - Press `Change` to edit the names or numbers. Go to step 5.
  - Press `Delete` to delete the numbers.  
Choose the numbers you want to delete by pressing them to display a red check mark.  
Press `OK`.  
Press `Yes` to confirm. Go to step 9.
- 5 Swipe up or down, or press ▲ or ▼ to display the number you want to change.
- 6 Press the number you want to change.

- 7 Do one of the following:
  - If you want to change the name, press `Name`.  
Enter the new name (up to 16 characters) using the keyboard on the Touchscreen. (For help entering letters, see *Entering Text* on page 190.)  
Press `OK`.
  - If you want to change the first fax or telephone number, press `Address 1`.  
Enter the new fax or telephone number (up to 20 digits) using the keyboard on the Touchscreen.  
Press `OK`.
  - If you want to change the second fax or telephone number, press `Address 2`.  
Enter the new fax or telephone number (up to 20 digits) using the keyboard on the Touchscreen.  
Press `OK`.

### NOTE

*How to change the stored name or number:*

If you want to change a character or a stored number, press ◀ or ▶ to position the cursor to highlight the character or the number you want to change, and then press . Enter the new character or number.

- 8 Do one of the following:
  - Press `OK` to finish.  
To change another Address Book number, repeat steps 3 to 8.
  - To make more changes, return to 7.
- 9 Press .

## How to copy

The following steps show the basic copy operation.

- Do one of the following to load your document:
  - Place the document *face up* in the ADF.  
(See *Using the ADF* on page 45.)
  - Place the document *face down* on the scanner glass.  
(See *Using the scanner glass* on page 46.)

- Press  (Copy).

- The Touchscreen shows:



### 1 No. of Copies

You can enter the number of copies by using the dial pad.

- If you want more than one copy, enter the number (up to 99).
- Press **Mono Start** or **Colour Start**.

## Stop copying

To stop copying, press .

## Copy preset settings

You can copy with a variety of settings that are already set up for you in the machine simply by pressing them.


The following preset settings are available.

- Best Quality
- Normal
- 2-sided (1→2)
- 2-sided (2→2)
- ADF High Speed
- A3
- A4 → A3
- 2in1 (ID)
- 2in1
- Poster
- Ink Save
- Book

### NOTE

If you change the main option for the selected copy preset setting, the name above the setting icon on the Touchscreen will be changed to **Normal**.

For example, if you select **Best Quality** and change the quality option from **Best**, **Normal** will appear above the preset icon.

- Load your document.
- Press  (Copy).
- Swipe left or right to display **Best Quality**, **Normal**, **2-sided (1→2)**, **2-sided (2→2)**, **ADF High Speed**, **A3**, **A4 → A3**, **2in1 (ID)**, **2in1**, **Poster**, **Ink Save** or **Book**, and then press the option you want to set.

- 4 Enter the number of copies you want.
- 5 Do one of the following:
  - If you want to change more settings, go to step 6.
  - If you do not want to change more settings, go to step 9.
- 6 Press **Options**.
- 7 Swipe up or down, or press ▲ or ▼ to display the available settings, and then press the setting you want to change.
- 8 Swipe up or down, or press ▲ or ▼ to display the available options, and then press your new option.  
Repeat steps 7 and 8 for each setting you want to change.  
If you are finished changing the settings, press **OK**.

**NOTE**

If you want to save the settings as a **Shortcut**, press **Save as Shortcut**.

- 9 Press **Mono Start** or **Colour Start**.

## Copy options

You can change the following copy settings. Press **Copy**, and then press **Options**. Swipe up or down, or press ▲ or ▼ to scroll through the copy settings. When the setting you want is displayed, press it and choose your option. When you have finished changing options, press **OK**.

**(Basic User's Guide)**

For details about changing the following copy settings, see page 79.

- Paper Type
- Paper Size
- Tray Select
- ADF High Speed Mode

**(Advanced User's Guide)**

For details about changing the following copy settings, see *Advanced User's Guide: Copy options*.

- Quality
- Enlarge/Reduce
- Page Layout
- 2in1 (ID)
- Stack/Sort
- Density
- Ink Save Mode
- Thin Paper Copy
- Auto Deskew
- Book Copy
- Watermark Copy
- Remove Background Colour
- 2-sided Copy


**NOTE**

If you want to sort copies, use the ADF.

## Paper Type

---


If you are copying on a special type of paper, set the machine for the type of paper you are using to get the best print quality.

- 1 Load your document.
- 2 Press  (Copy).
- 3 Enter the number of copies you want.
- 4 Press `Options`.
- 5 Swipe up or down, or press ▲ or ▼ to display `Paper Type`.
- 6 Press `Paper Type`.
- 7 Swipe up or down, or press ▲ or ▼ to display `Plain Paper`, `Inkjet Paper`, `Brother BP71`, `Other Glossy` or `Transparency`, and then press the option you want to set.
- 8 If you do not want to change additional settings, press `OK`.
- 9 Press `Mono Start` or `Colour Start`.

## Paper Size

---

If you are copying on paper other than A4 size, you will need to change the Paper Size setting. You can copy only on A4, A5, A3, Photo (10 × 15 cm), Letter, Legal or Ledger paper.

- 1 Load your document.
- 2 Press  (Copy).
- 3 Enter the number of copies you want.
- 4 Press `Options`.
- 5 Swipe up or down, or press ▲ or ▼ to display `Paper Size`.
- 6 Press `Paper Size`.
- 7 Swipe up or down, or press ▲ or ▼ to display `A4`, `A5`, `A3`, `10x15cm`, `Letter`, `Legal` or `Ledger`, and then press the option you want to set.

### NOTE

---


If you are using the manual feed slot, insert only one sheet of paper at a time. (See *Loading paper in the manual feed slot* on page 35.)

- 8 If you do not want to change more settings, press `OK`.
- 9 Press `Mono Start` or `Colour Start`.

## Tray Select

---


You can change the tray temporarily for the next copy. To change the default tray setting, see *Tray use in Copy mode* on page 39.

- 1 Load your document.
- 2 Press  (Copy).
- 3 Enter the number of copies you want.
- 4 Press `Options`.
- 5 Swipe up or down, or press `▲` or `▼` to display `Tray Select`.
- 6 Press `Tray Select`.
- 7 Press `Tray #1`, `Tray #2` or `Auto Tray Select`.
- 8 If you do not want to change additional settings, press `OK`.
- 9 Press `Mono Start` or `Colour Start`.

## ADF High Speed Mode copying

---

When copying multi-page A4 or Letter size documents, you can print multiple copies faster by placing the documents **face up, long edge first** in the ADF. (See *Using the ADF* on page 45.)

- 1 Place your document face up, long side edge first in the ADF.
- 2 Press  (Copy).
- 3 Press the `Options`.
- 4 Swipe up or down, or press `▲` or `▼` to display `ADF High Speed Mode`.
- 5 Press `ADF High Speed Mode`.
- 6 Press `On (or Off)`.
- 7 Read the information on the Touchscreen, and then confirm it by pressing `OK`.
- 8 If you do not want to change more settings, press `OK`.

### NOTE

---

Change `Paper Size` to `A4` or `Letter` to match the paper size of your document.

- 9 Press `Mono Start` or `Colour Start`. The machine scans the document and starts printing.

### NOTE

---

`Enlarge/Reduce`, `Page Layout`, `Auto Deskew` and `Advanced Settings` are not available with `ADF High Speed Mode`.

---

## PhotoCapture Center™ operations (PHOTO mode)

Even if your machine is *not* connected to your computer, you can print photos directly from digital camera media or a USB Flash drive. (See *Print Images* on page 84.)

You can scan documents and save them directly to a memory card or USB Flash drive. (See *How to scan to a memory card or USB Flash drive* on page 85.)

If your machine is connected to a computer, you can use your computer to access a memory card or USB Flash drive that is inserted in the front of the machine.

(See Software and Network User's Guide.)

## Using a memory card or USB Flash drive


---

Your Brother machine has media drives (slots) for use with the following popular digital camera media: Memory Stick Duo™, Memory Stick PRO Duo™, SD Memory Card, SDHC Memory Card, SDXC Memory Card, MultiMedia Card, MultiMedia Card plus and a USB Flash drive.


The PhotoCapture Center™ feature lets you print digital photos from your digital camera at high resolution to get photo quality printing.

# Getting started

- 1 Open the media slot cover.
- 2 Firmly put a memory card or USB Flash drive into the correct slot.

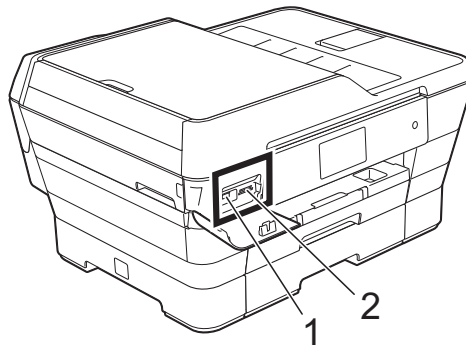







## 1 USB Flash drive



### IMPORTANT

The USB direct interface supports only a USB Flash drive, a PictBridge-compatible camera, or a digital camera that uses the USB mass storage standard. Any other USB devices are not supported.

## 2 Memory card slot

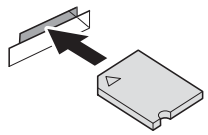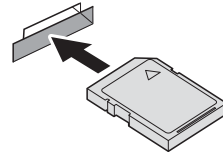Slot	Compatible memory cards	
Upper slot 		Memory Stick Duo™ Memory Stick PRO Duo™
		Memory Stick Micro™ (M2™) (Adapter required)
Lower slot 		SD Memory Card SDHC Memory Card SDXC Memory Card MultiMedia Card MultiMedia Card plus
		miniSD (Adapter required) miniSDHC (Adapter required) microSD (Adapter required) microSDHC (Adapter required) MultiMedia Card mobile (Adapter required)





## IMPORTANT

---

- DO NOT insert a Memory Stick Duo™ into the lower SD slot, this may cause damage to the machine.
  - DO NOT insert more than one media card in the machine at the same time. Doing this may cause damage to the machine.
  - DO NOT unplug the power cord or remove the memory card or USB Flash drive from the media drive (slot) or USB direct interface while the machine is reading or writing to the memory card or USB Flash drive. **You will lose your data or damage the card.**
- 

The machine can only read one device at a time.

# Print Images

## View Photos

You can preview your photos on the Touchscreen before you print them. If your photos are large files there may be a delay before each photo is displayed.

- 1 Open the media slot cover.
- 2 Put the memory card or USB Flash drive in the correct slot.
- 3 Press **Photo**.
- 4 Swipe left or right to display **View Photos**.
- 5 Press **View Photos**. Press **OK**.
- 6 Do one of the following:
  - If you want to choose photos to print or print more than one for an image, go to step 7.
  - If you want to print all photos, press **Print All**. Press **Yes** to confirm. Go to step 10.
- 7 Swipe left or right, or press ◀ or ▶ to display the photo you want to print, and then press it.
- 8 Press **+** or **-** to select the number of copies you want to print. Press **OK**.
- 9 Repeat steps 7 and 8 until you have chosen all the photos you want to print.
- 10 Press **OK**.

- 11 Read and confirm the displayed list of options and do one of the following:
  - If you want to change the print settings, press **Print Settings**. (See *Advanced User's Guide: PhotoCapture Center™ print settings*.)
  - If you do not want to change any settings, go to step 12.
- 12 Press **Start** to print.

## PhotoCapture Center™ print settings

You can temporarily change the print settings for the next print.

The machine returns to its default settings after 1 minute.

### NOTE

You can save the print settings you use most often by setting them as the default. (See *Advanced User's Guide: Setting your changes as a new default.*)



## How to scan to a memory card or USB Flash drive

You can scan monochrome and colour documents to a memory card or USB Flash drive. Monochrome documents will be stored in PDF (\*.PDF) or TIFF (\*.TIF) file formats. Colour documents may be stored in PDF (\*.PDF) or JPEG (\*.JPG) file formats. The factory setting is **Colour**, 200 dpi and the default format is **PDF**. The machine creates file names based on the current date. (See *Quick Setup Guide.*) For example, the fifth image scanned on July 1, 2013 would be named 01071305.PDF. You can change the colour and resolution.

- 1 Load your document.  
If you want to scan a 2-sided document, load your document in the ADF.

### NOTE

You can scan a 2-sided document up to A3 or Ledger size from the ADF except when using ADF High Speed Mode.

- 2 Open the media slot cover.
- 3 Put the memory card or USB Flash drive in the proper slot.
- 4 Press **Scan to Media**.


### IMPORTANT

DO NOT take out the memory card or USB Flash drive while the machine is reading or writing to it to avoid damaging the card, USB Flash drive, or the data stored on them.


- 5 Press **Options**.

- 6** Do one of the following:
- If you loaded a 2-sided document in the ADF, swipe up or down, or press ▲ or ▼ to display 2-sided Scan.  
Press 2-sided Scan. Go to step **7**.
  - If you want to scan a single-sided document, go to step **8**.

- 7** Do one of the following:
- If your document is flipped on the long edge, press  
2-sided Scan: Long Edge.

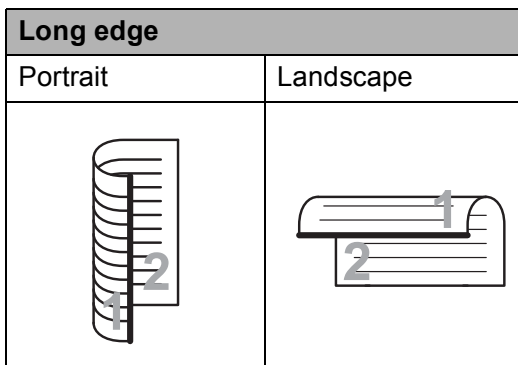

- If your document is flipped on the short edge, press  
2-sided Scan: Short Edge.

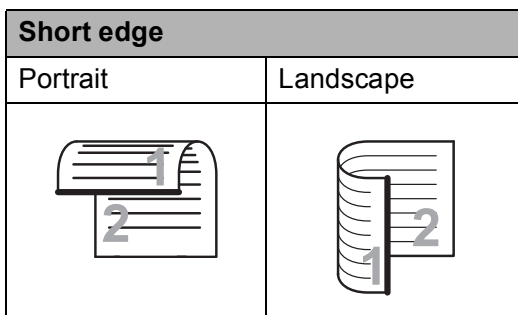

- 8** Do one of the following:
- To scan in ADF High Speed Mode, swipe up or down, or press ▲ or ▼ to display ADF High Speed Mode.  
Press ADF High Speed Mode and choose On (or Off).

To use ADF High Speed Mode, make sure your document is A4 or Letter and place it long edge first in the ADF.

Press OK.

(For more information about ADF High Speed Mode scanning, see *ADF High Speed Mode scanning* on page 96.)

- To change the scan type, swipe up or down, or press ▲ or ▼ to display Scan Type.  
Press Scan Type and choose Colour or Black and White.
- To change the resolution, swipe up or down, or press ▲ or ▼ to display Resolution.  
Press Resolution and choose 100 dpi, 200 dpi, 300 dpi, 600 dpi or Auto.
- To change the file type, swipe up or down, or press ▲ or ▼ to display File Type.  
Press File Type and choose PDF, JPEG or TIFF.
- To change the scanning size, swipe up or down, or press ▲ or ▼ to display Scan Size.  
Press Scan Size and choose A4, A5, A3, 10x15cm, Business Card (90x60mm), Letter, Legal or Ledger.

- To scan a long document, swipe up and down, or press ▲ or ▼ to display `Scan Long Paper`.

Press `Scan Long Paper` and choose `On` (or `Off`).

This function works when the document is placed in the ADF. If the document is placed on the scanner glass, the scan size will be the one you set in `Scan Size` even when you set `Scan Long Paper` to `On`.

- If you want to change the file name, swipe up or down, or press ▲ or ▼ to display `File Name`. Press `File Name`, and then enter the file name.

You can only change the first 6 characters.

Press `OK`.

- To scan multiple documents on the scanner glass, swipe up and down, or press ▲ or ▼ to display `Auto Crop`.

Press `Auto Crop` and choose `On` (or `Off`).

(For details, see *Advanced User's Guide: Auto Crop*.)

- To skip blank pages, swipe up or down, or press ▲ or ▼ to display `Skip Blank Page`. Press `Skip Blank Page` and then press `On` (or `Off`).

## NOTE

`Skip Blank Page` is available only when using the ADF.

- To remove background colour, swipe up or down, or press ▲ or ▼ to display `Remove Background Colour`.

Press

`Remove Background Colour` and choose `Low`, `Medium`, `High` or `Off`.

## NOTE

`Remove Background Colour` removes the base colour of documents to make the scanned data more recognizable.

- To start scanning without changing additional settings, go to step 9.

## NOTE

- If you chose colour in the scan type setting, you cannot choose `TIFF`.
- If you chose black & white in the scan type setting, you cannot choose `JPEG`.

- 9 When you are finished changing settings, press `OK`.

## NOTE

If you want to save the settings as a `Shortcut`, press `Save as Shortcut`.

- 10 Press `Start`.

## Printing a document

The machine can receive and print data from your computer. To print from a computer, you must install the printer driver.

(For more information, see Software and Network User's Guide.)

- 1 Install the Brother printer driver from the CD-ROM or Brother website.  
(See Quick Setup Guide.)
- 2 From your application, choose the Print command.
- 3 Choose the name of your machine in the **Print** dialog box and click **Properties** or **Preferences**, depending on the application you are using.
- 4 Choose the settings you want to change in the Properties dialog box.  
Commonly used settings include:
  - **Media Type**
  - **Print Quality**
  - **Paper Size**
  - **Orientation**
  - **Colour / Greyscale**
  - **Ink Save Mode**
  - **Scaling**
  - **2-sided / Booklet**
- 5 Click **OK**.
- 6 Click **Print** (or **OK** depending on the application you are using) to begin printing.

## Before scanning

To use the machine as a scanner, install a scanner driver. If the machine is on a network, configure it with a TCP/IP address.

- Install the scanner drivers from the CD-ROM. (See Quick Setup Guide: *Install MFL-Pro Suite*.)
- Configure the machine with a TCP/IP address if network scanning does not work.  
(See Software and Network User's Guide.)

# Scanning a document as a PDF file using ControlCenter4 (Windows®)

(For detailed information, see Software and Network User's Guide.)


## NOTE

- The screens on your PC may vary depending on your model.
- This section is based on using the Advanced Mode of ControlCenter4.


ControlCenter4 is a software utility that lets you quickly and easily access the applications you use most often. Using ControlCenter4 eliminates the need to manually launch specific applications.

1 Load your document. (See *How to load documents* on page 45.)


2 (Windows® XP, Windows Vista® and Windows® 7)

Open ControlCenter4 by clicking  (**Start**)/**All Programs**/**Brother**/**MFC-XXXX** (where XXXX is your model name)/**ControlCenter4**. The ControlCenter4 application will open.

(Windows® 8)

Click  (**Brother Utilities**), and then click the drop-down list and select your model name (if not already selected). Click **SCAN** in the left navigation bar, and then click **ControlCenter4**. The ControlCenter4 application will open.


3 If the ControlCenter4 Mode screen appears, choose the **Advanced Mode**, and then click **OK**.

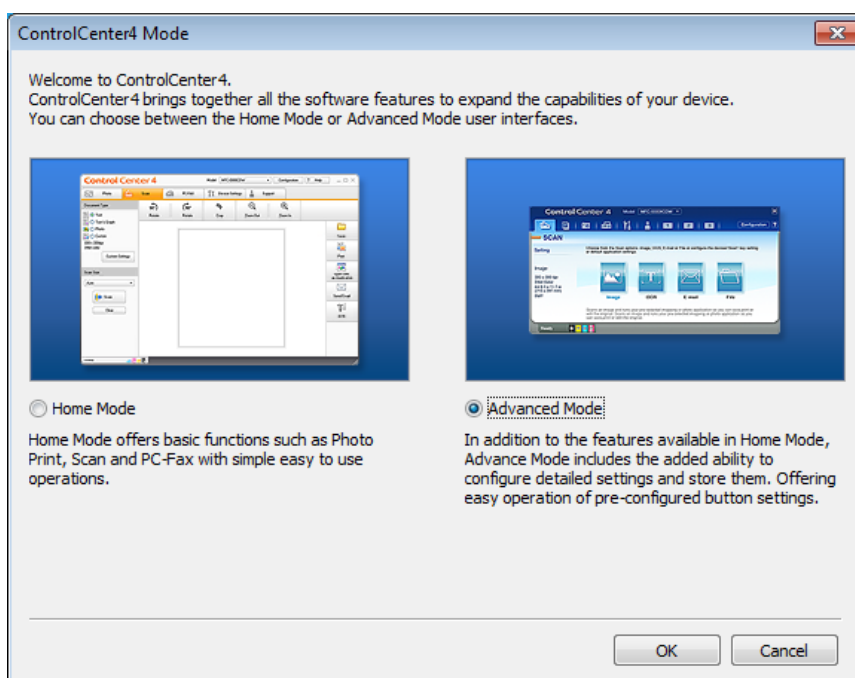


4 Make sure the machine you want to use is selected from the **Model** drop-down list.




- 5 Set the scanning configuration.  
Click **Configuration**, and then select **Button settings**, **Scan** and **File**.

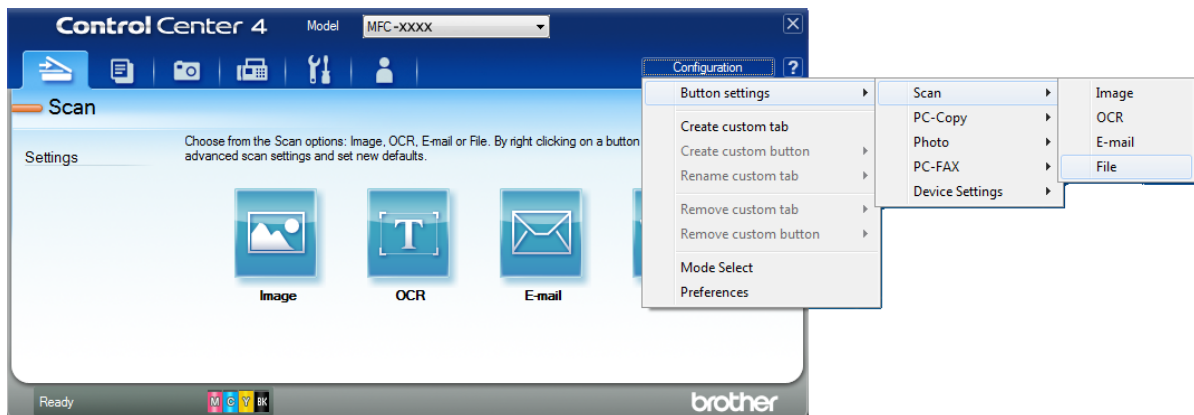


The configuration dialog box appears. You can change the default settings.

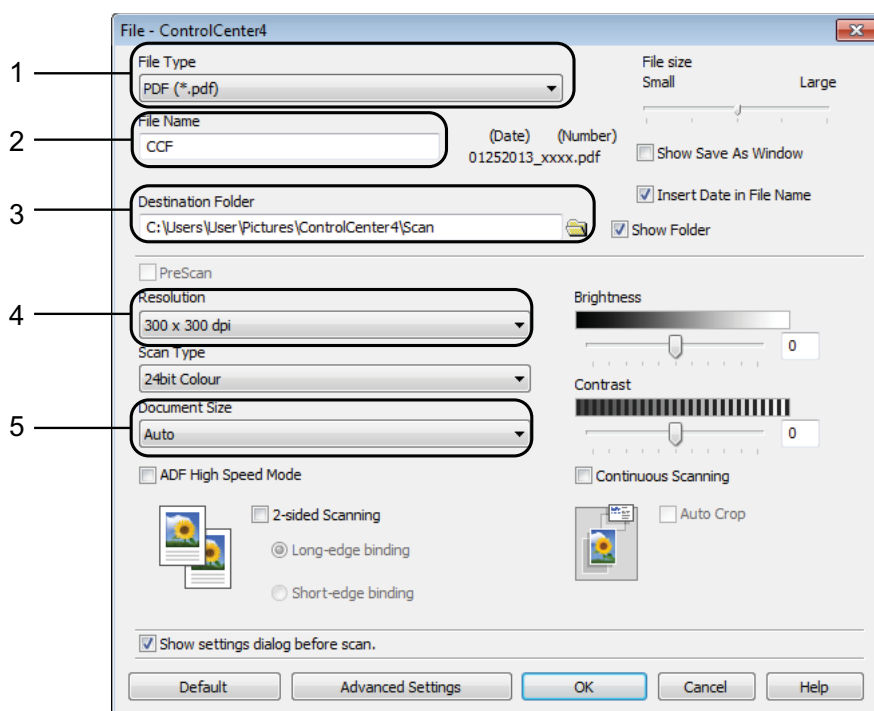


- 1 Choose **PDF (\*.pdf)** from the **File Type** drop-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  (**Browse**) button.
- 4 You can choose a scanning resolution from the **Resolution** drop-down list.
- 5 You can choose the document size from the **Document Size** drop-down list.

- 6 Click **OK**.

7 Click **File**.

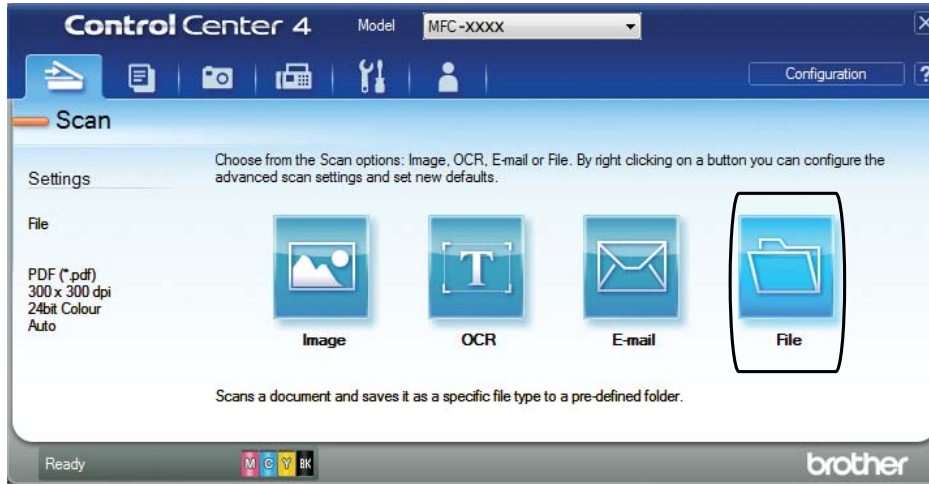

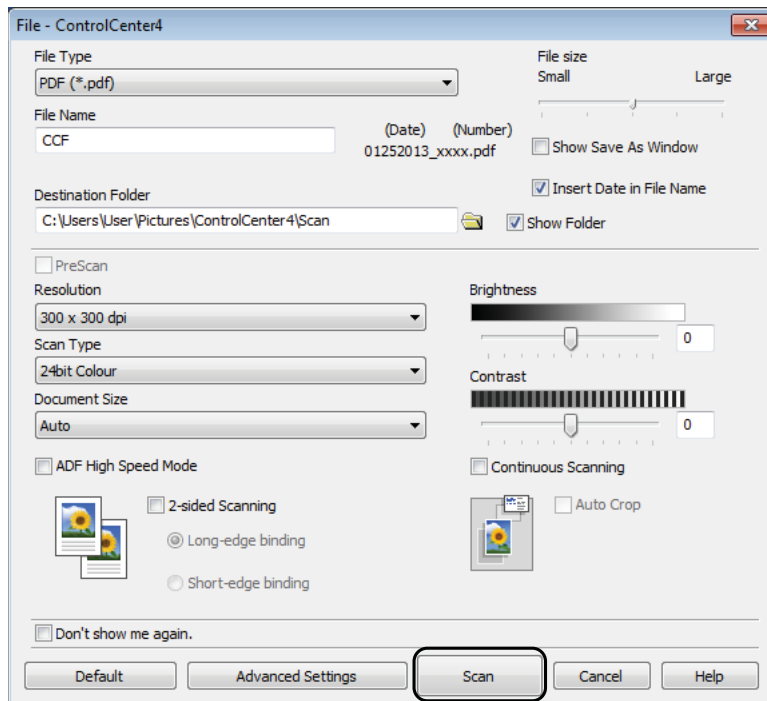

8 Press **Scan**.  
The machine starts the scanning process. The folder where the scanned data is saved will open automatically.




# How to change the machine's SCAN mode settings for PDF scanning


You can change your machine's Scan mode settings using ControlCenter4. (Windows®)

- 1 (Windows® XP, Windows Vista® and Windows® 7)  
Open ControlCenter4 by clicking  (Start)/All Programs/Brother/MFC-XXXX (where XXXX is your model name)/ControlCenter4. The ControlCenter4 application will open. (Windows® 8)  
Click  (**Brother Utilities**), and then click the drop-down list and select your model name (if not already selected). Click **SCAN** in the left navigation bar, and then click **ControlCenter4**. The ControlCenter4 application will open.
- 2 Make sure the machine you want to use is selected from the **Model** pull-down list.
- 3 Click the **Device Settings** tab.
- 4 Click **Device Scan Settings**.





- 5 Choose the **File** tab. You can change the default settings.

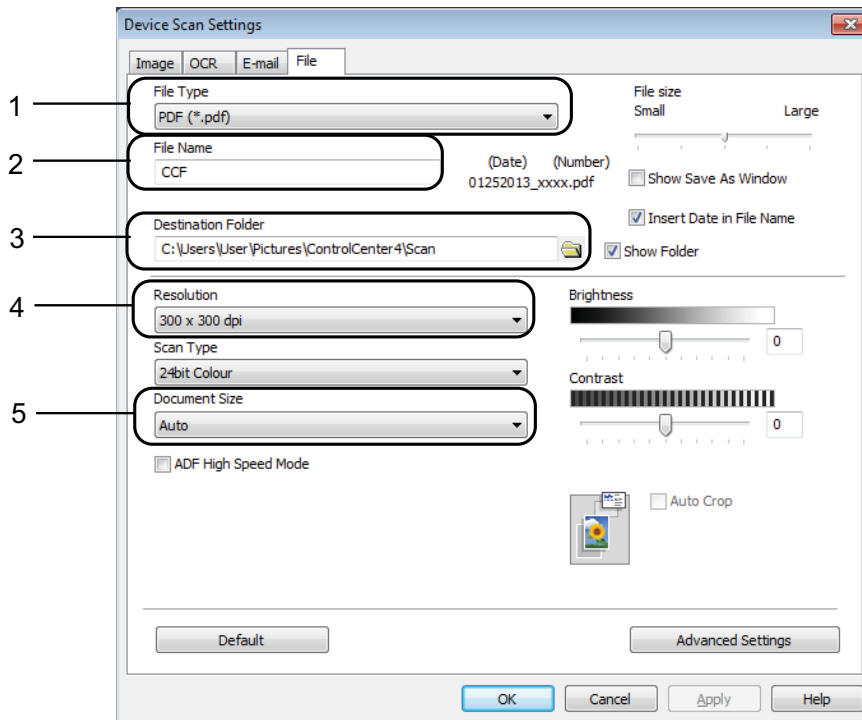

- 1 Choose **PDF (\*.pdf)** from the **File Type** drop-down list.
- 2 You can enter the file name you want to use for the document.
- 3 You can save the file to the default folder, or choose your preferred folder by clicking the  (**Browse**) button.
- 4 You can choose a scanning resolution from the **Resolution** drop-down list.
- 5 You can choose the document size from the **Document Size** drop-down list.

- 6 Click **OK**.

## How to scan a document as a PDF file using the Touchscreen

- 1 Load your document. (See *How to load documents* on page 45.)
- 2 Press  (Scan).
- 3 Swipe left or right to display to File.
- 4 Press to File.  
 will be displayed in the centre of the Touchscreen highlighted in blue.

- 5 Press OK.  
When the machine is connected to a network, press the PC Name.  
Do one of the following:
  - If you want to use the default settings, go to step 10.
  - If you want to change the default settings, go to step 6.
- 6 Press Options.
- 7 Press Set with Touch Panel.  
Press On.
- 8 Choose the settings for 2-sided Scan, ADF High Speed Mode, Scan Type, Resolution, File Type, Scan Size, Skip Blank Page and Remove Background Colour as required.
- 9 Press OK.
- 10 Press Start.  
The machine starts the scanning process.

## NOTE

---

The following scan modes are available.

- to OCR
- to File
- to Image
- to Media
- to E-mail
- to E-mail Server
- to FTP
- to Network
- WS Scan<sup>1</sup> (Web Services Scan)


---

<sup>1</sup> Windows® users only. (Windows Vista® SP2 or later, Windows® 7 and Windows® 8)  
(See Software and Network User's Guide.)

## ADF High Speed Mode scanning

---

When scanning multi-page A4 or Letter size documents, you can scan faster by placing them **face up, long edge first** in the ADF. (See *How to load documents* on page 45.)

- 1 Place your document face up, long side edge first in the ADF.  
If you want to scan to a memory card or USB Flash drive, open the media slot cover and put the memory card or USB Flash drive in the correct slot.
- 2 Press  (Scan).
- 3 Swipe left or right to display to OCR, to File, to Image, to Media, to E-mail, to E-mail Server, to FTP or to Network and press the option you want to use.
- 4 Press OK.  
When the machine connected to a network, press the PC name.
- 5 Press Options.  
For to OCR, to File, to Image and to E-mail, press Set with Touch Panel, and then press On.
- 6 Swipe up or down, or press ▲ or ▼ to display ADF High Speed Mode.
- 7 Press ADF High Speed Mode.
- 8 Press On (or Off).
- 9 Read the information on the Touchscreen, and then confirm it by pressing OK.
- 10 If you do not want to change more settings, press OK.

### NOTE

---

Change Scan Size to A4 or Letter to match the size of your document.

---

- 11 Press Start.  
The machine starts scanning the document.

### NOTE


---

- When scanning to Media, to E-mail Server, to FTP or to Network, the scan speed may be slower than usual if you turn on ADF High Speed Mode and select 2-sided Scan: Long Edge, Black and White, with a Resolution of 300 dpi or 600 dpi. The scan speed will be faster if you select 100 dpi or 200 dpi.
  - Auto Crop and Scan Long Paper are not available with ADF High Speed Mode.
  - The Scan Size options will be limited to A4 and Letter when using ADF High Speed Mode.
-

# How to print and scan with NFC (Near Field Communication)

## Printing with NFC (Near Field Communication)

If your Android™ device supports the NFC function, you can print data (photos, PDF files, text files, web pages and E-mail messages) from your device by touching it to the NFC logo on the lower left of the control panel.

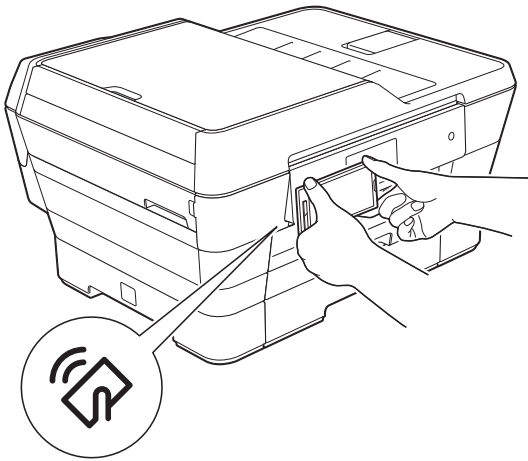


You must download and install Brother iPrint&Scan to your Android™ device to use this function.

(For more information, see Mobile Print/Scan Guide for Brother iPrint&Scan: *For Android™ Devices.*)

## Scanning with NFC (Near Field Communication)

If your Android™ device supports the NFC function, you can scan photos and documents to your device by touching it to the NFC logo on the lower left of the control panel.

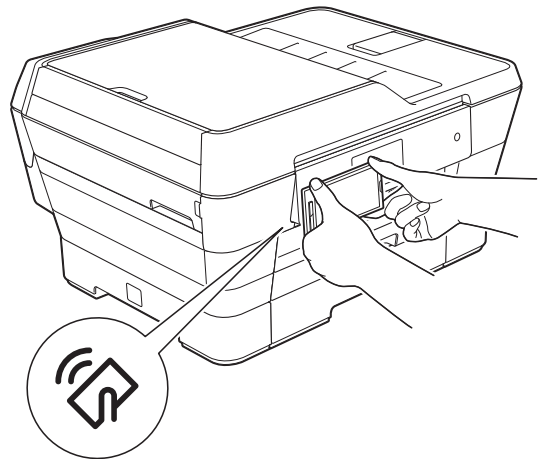

You must download and install Brother iPrint&Scan to your Android™ device to use this function.

(For more information, see Mobile Print/Scan Guide for Brother iPrint&Scan: *For Android™ Devices.*)

### NOTE

NFC (Near Field Communication) allows for simplified transactions, data exchange, and wireless connections between two devices that are in close range of each other.

# A

## Routine maintenance

### Replacing the ink cartridges

Your machine is equipped with an ink dot counter. The ink dot counter monitors the level of ink in each of the four cartridges. When the machine detects an ink cartridge is running out of ink, the machine will display a message.

The Touchscreen will show which ink cartridge is low or needs replacing. Be sure to follow the Touchscreen prompts to replace the ink cartridges in the correct order.

Even though the machine tells you to replace an ink cartridge, there will be a small amount of ink left in the ink cartridge. It is necessary to keep some ink in the ink cartridge to prevent air from drying out and damaging the print head assembly.


#### **⚠ CAUTION**

If ink gets in your eyes, wash it out with water at once and call a doctor if you are concerned.

#### **IMPORTANT**



Brother multifunction machines are designed to work with ink of a particular specification and will work to a level of optimum performance and reliability when used with Brother Original ink cartridges. Brother cannot guarantee this optimum performance and reliability if ink or ink cartridges of other specifications are used. Brother does not therefore recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources. Damage to the product caused by the use of consumables manufactured by third parties may not be covered by the product warranty. Please refer to the terms of the product warranty.

- 1 Open the ink cartridge cover (1). If one or more of the ink cartridges have reached the end of their life, the Touchscreen shows  
B&W 1-sided Print Only or  
Cannot Print.

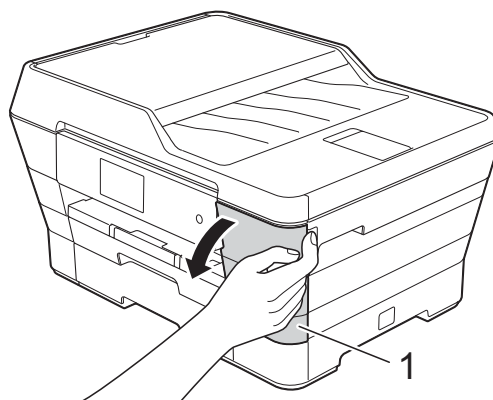






- 2 Press the lock release lever as shown to release the cartridge indicated on the Touchscreen. Remove the cartridge from the machine.

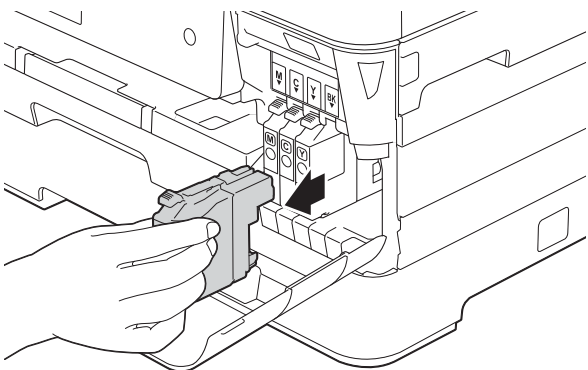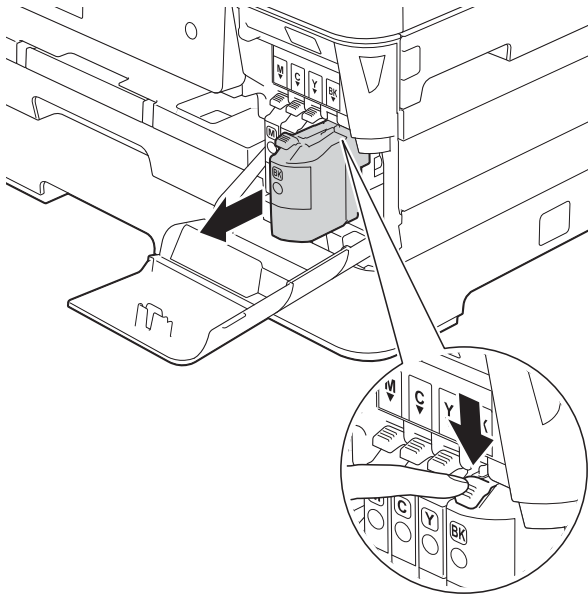

- 3 Open the new ink cartridge bag for the colour indicated on the Touchscreen, and then take out the ink cartridge.


- 4 Turn the green release lever on the orange protective packing (1) counterclockwise until it releases the vacuum seal. Then remove the orange protective packing as shown.

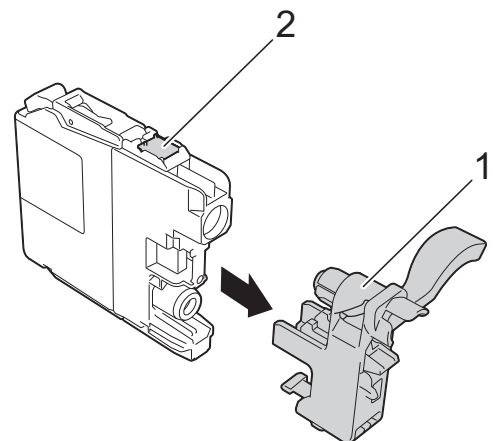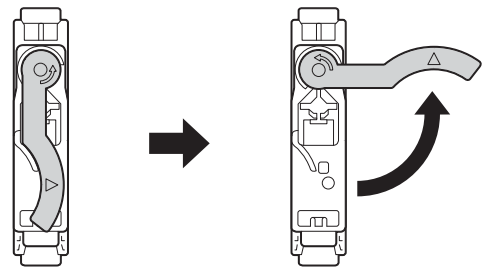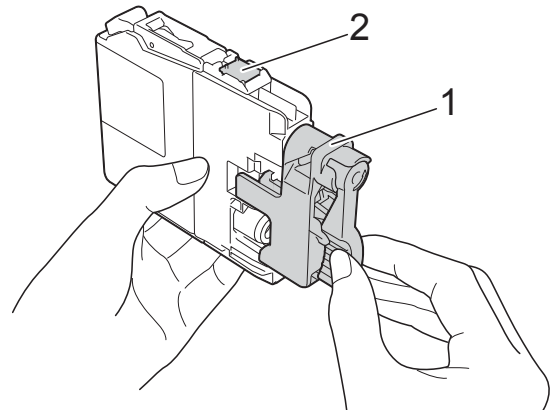


### IMPORTANT

DO NOT touch the area of the cartridge indicated (2); this can prevent the machine from detecting the cartridge.

- 5 Each colour has its own correct position. Insert the ink cartridge in the direction of the arrow on the label.

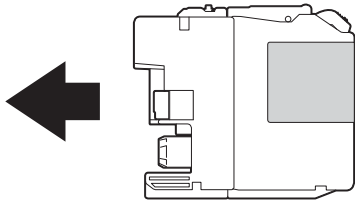

- 6 Gently push the back of the ink cartridge marked PUSH until the cartridge lever lifts, and then close the ink cartridge cover.

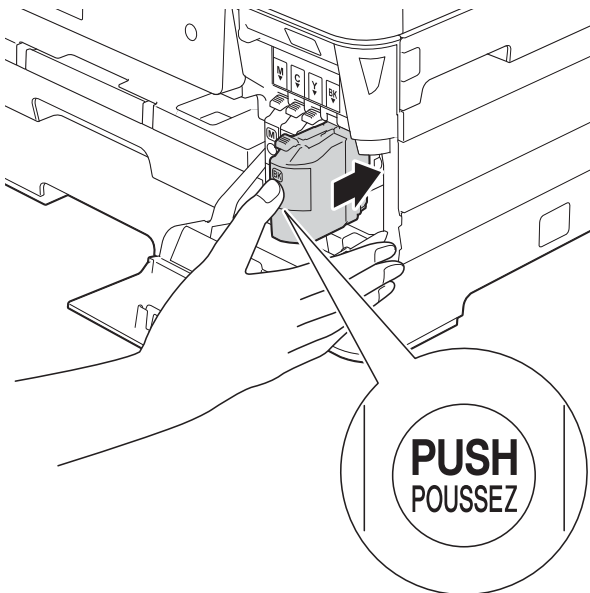

- 7 The machine will automatically reset the ink dot counter.

## NOTE

- If you replaced an ink cartridge, for example Black, the Touchscreen may ask you to verify that it was a brand new one (for example, Did you change **BK** Black). For each new cartridge you installed, press Yes to reset the ink dot counter for that colour. If the ink cartridge you installed is not a brand new one, be sure to press No.
- If the Touchscreen shows No Ink Cartridge or Cannot Detect after you install the ink cartridge, check that the ink cartridge is a brand new Brother Original cartridge and that it is installed correctly. Remove the ink cartridge and reinstall it slowly and firmly until the cartridge lever lifts.


## IMPORTANT

- DO NOT take out ink cartridges if you do not need to replace them. If you do so, it may reduce the ink quantity and the machine will not know the quantity of ink left in the cartridge.
- DO NOT touch the cartridge insertion slots. If you do so, the ink may stain your skin.
- DO NOT shake the ink cartridges. If ink gets on your skin or clothing, immediately wash it off with soap or detergent.
- If you mix the colours by installing an ink cartridge in the wrong position, the Touchscreen shows Wrong Ink Colour. Check which ink cartridges are not matched by colour to their ink cartridge positions and move them to their correct positions.
- Once you open an ink cartridge, install it in the machine and use it up within six months of installation. Use unopened ink cartridges by the expiration date written on the cartridge package.
- DO NOT dismantle or tamper with the ink cartridge; this can cause the ink to leak out of the cartridge.


# Cleaning and checking the machine

## Cleaning the scanner glass


- 1 Unplug the machine from the electrical socket.
- 2 Lift the document cover (1). Clean the scanner glass (2) and the white plastic (3) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

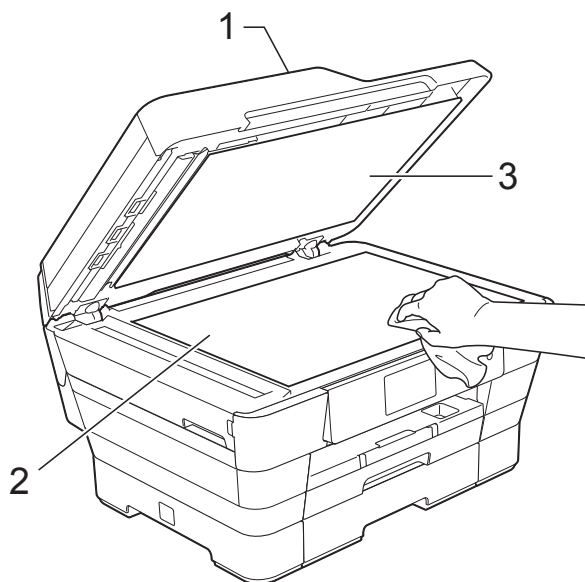

- 3 In the ADF unit, clean the white bar (1) and the glass strip (2) with a lint-free cloth moistened with a non-flammable glass cleaner.

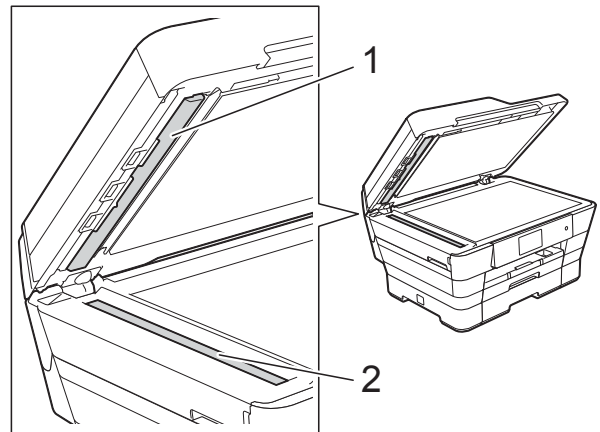

- 4 Close the document cover and open the ADF cover. Clean the white bar (1) and the glass strip (2) with a soft lint-free cloth moistened with a non-flammable glass cleaner.

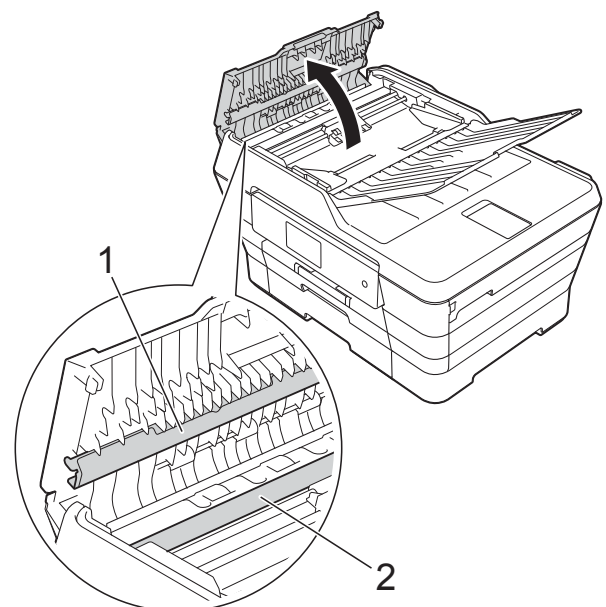

- 5 Close the ADF cover.

## NOTE

In addition to cleaning the glass strip with a non-flammable glass cleaner, run your finger tip over the glass strip to see if you can feel anything on it. If you feel dirt or debris, clean the glass strip again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning attempt.



When there is a spot of dirt or correction fluid on the glass strip, the printed sample shows a vertical line.



After the glass strip is cleaned, the vertical line is gone.

## Cleaning the print head

To maintain good print quality, the machine will automatically clean the print head when needed. You can start the cleaning process manually if there is a print quality problem.

Clean the print head if you get a horizontal line in the text or graphics, or blank text on your printed pages. You can clean Black only, three colours at a time (Yellow/Cyan/Magenta), or all four colours at once.

Cleaning the print head consumes ink. Cleaning too often uses ink unnecessarily.

## IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

1 Press .

## NOTE

You can also press  and then Ink.

2 Press **Cleaning**.

3 Press **Black**, **Colour** or **All**.  
The machine cleans the print head. When cleaning is finished, the machine will go back to the Ready mode.

**NOTE**

- If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ ink cartridge for each problem colour. Try cleaning the print head again up to five more times. If the print has not improved contact Brother customer service or your local Brother dealer.
- You can also clean the print head from your PC.

(See Software and Network User's Guide.)

**Checking the print quality**

If faded or streaked colours and text appear on your printouts, some of the print head nozzles may be clogged. You can check this by printing the Print Quality Check Sheet and looking at the nozzle check pattern.

- 1 Press .

**NOTE**

You can also press  and then Ink.


- 2 Press `Test Print`.
- 3 Press `Print Quality`.
- 4 Press `OK`.  
The machine begins printing the Print Quality Check Sheet.
- 5 Check the quality of the four colour blocks on the sheet.

- 6 The Touchscreen asks you if the print quality is OK.


Do one of the following:

- If all lines are clear and visible, press `Yes` to finish the Print Quality check and go to step 10.
- If you can see missing short lines as shown below, press `No`.

OK

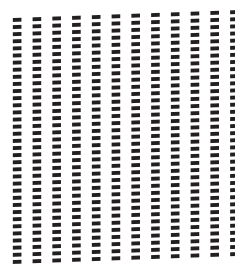

Poor

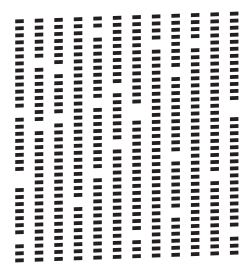

- 7 The Touchscreen asks you if the print quality is OK for black and then the three colours.

Press `Yes` or `No`.

- 8 The Touchscreen asks you if you want to start cleaning.

Press `OK`.

The machine starts cleaning the print head.

- 9 After the cleaning procedure is finished, press `OK`.

The machine prints the Print Quality Check Sheet again. Return to step 5.

- 10 Press .

If you clean the print head at least five times and the print has not improved, try installing a new Brother Original Innobella™ replacement ink cartridge for each problem colour. Try cleaning the print head up to five more times. If the print has not improved, contact Brother customer service or your local Brother dealer.

## IMPORTANT

DO NOT touch the print head. Touching the print head may cause permanent damage and may void the print head's warranty.

## NOTE

When a print head nozzle is clogged, the printed sample looks like this.



Letter, A4 and Executive



A3, Ledger, Legal, A5, A6, envelopes,  
Photo (10 × 15 cm),  
Photo L (89 × 127 mm),  
Photo 2L (13 × 18 cm) and Index Card  
(127 × 203 mm)

After the print head nozzle is cleaned, the horizontal lines are gone.



## Checking the print alignment

If your printed text becomes blurred or images become faded, you may need to adjust the print alignment after transporting the machine.

1 Press .

## NOTE


You can also press  and then Ink.

2 Press Test Print.

3 Press Alignment.

4 Press OK.


The machine starts printing the Alignment Check Sheet.

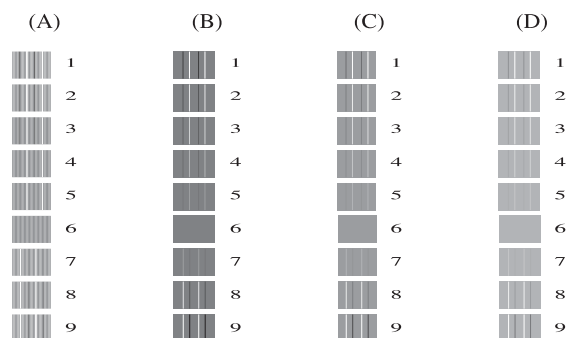

5 For the "A" pattern, swipe up or down, or press ▲ or ▼ to display the number of the test print that has the least visible vertical stripes (1-9), and then press it. Press OK.

Repeat this step for the B, C and D patterns.

In the example number 6 is the best choice for A, B, C and D.

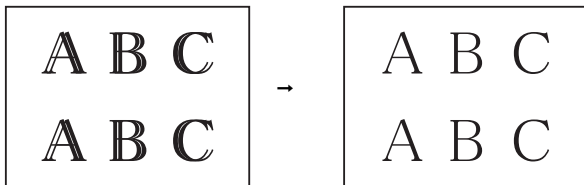**NOTE**

When the print alignment is not adjusted correctly, text looks blurry like this.



After the print alignment is adjusted correctly, text looks like this.

- 6 Press .

## Setting the date and time

The Touchscreen displays the date and time. If it is not current, follow these instructions to re-enter it.

You can add the date and time to each fax you send by setting your Station ID.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Initial Setup.
- 4 Press Initial Setup.
- 5 Press Date & Time.
- 6 Press Date.
- 7 Enter the last two digits of the year on the Touchscreen, and then press OK.
- 8 Enter the two digits for the month on the Touchscreen, and then press OK.
- 9 Enter the two digits for the day on the Touchscreen, and then press OK.
- 10 Press Time.
- 11 Enter the time (in 24-hour format) using the keyboard on the Touchscreen. Press OK.  
(For example, enter 19:45 for 7:45 PM.)
- 12 Press .



# B

# Troubleshooting

If you think there is a problem with your machine, check each of the items below first and follow the troubleshooting tips.

You can correct most problems by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.

Visit us at <http://solutions.brother.com/>.

## Identifying your problem

First, check the following.

- The machine's power cord is connected correctly and the machine's power switch is turned on.
- All of the protective parts have been removed.
- Paper is inserted correctly in the paper tray.
- The interface cables are securely connected to the machine and the computer, or the wireless connection is set up on both the machine and your computer.
- Touchscreen Messages

(See *Error and maintenance messages* on page 108.)

If you did not solve your problem with the above checks, identify your problem and then go to the suggested page.

Paper handling and Printing problems:

- *Printing Difficulties* on page 127
- *Print Quality Difficulties* on page 129
- *Paper Handling Difficulties* on page 131
- *Printing Received Faxes* on page 132

Telephone and Fax problems:

- *Telephone Line or Connections* on page 132
- *Handling Incoming Calls* on page 135
- *Receiving Faxes* on page 133
- *Sending Faxes* on page 134

Copying problems:

- *Copying Difficulties* on page 136



Scanning problems:

- *Scanning Difficulties* on page 136
- *PhotoCapture Center™ Difficulties* on page 136

Software and Network problems:

- *Software Difficulties* on page 137
- *Network Difficulties* on page 137
- *Difficulties when entering data* on page 138


## Error and maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown in the table.

You can clear most errors and perform routine maintenance by yourself. If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips:


Visit us at <http://solutions.brother.com/>.

Error Message	Cause	Action
B&W 1-sided Print Only Replace ink.	<p>One or more of the colour ink cartridges have reached the end of their life.</p> <p>You can use the machine in monochrome mode for approximately four weeks depending on the number of pages you print.</p> <p>While this message appears on the Touchscreen, each operation works in the following way:</p> <ul style="list-style-type: none"> <li>■ <b>Printing</b> If you choose <b>Greyscale</b> in the <b>Advanced</b> tab of the printer driver, you can use the machine as a monochrome printer. 2-sided printing is not available when this message appears.</li> <li>■ <b>Copying</b> If the paper type is set to <b>Plain Paper</b> you can make copies in monochrome. 2-sided copying is not available when this message appears.</li> <li>■ <b>Faxing</b> If the paper type is set to <b>Plain Paper</b> or <b>Inkjet Paper</b>, the machine will receive and print the faxes in monochrome. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome.</li> </ul>	<p>Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 98.)</p> <p><b>NOTE</b></p> <p>The machine will stop all print operations, you cannot use the machine until a new ink cartridge is installed in the following cases:</p> <ul style="list-style-type: none"> <li>• If you unplug the machine or take out the ink cartridge.</li> <li>• If the paper type is set to anything except <b>Plain Paper</b> or <b>Inkjet Paper</b>.</li> <li>• (Windows®) If you select <b>Slow Drying Paper</b> in the <b>Basic</b> tab of the printer driver. (Macintosh) If you select <b>Slow Drying Paper</b> in the <b>Print Settings</b> of the printer driver.</li> </ul>

Error Message	Cause	Action
BT Call Sign On (U.K. only)	BT Call Sign is set to ON. You cannot change the Receive Mode from Manual to another mode.	Set BT Call Sign to OFF. (See Advanced User's Guide: <i>BT Call Sign (U.K. only)</i> .)
Cannot Detect	You installed a new ink cartridge too quickly and the machine did not detect it.	Take out the new ink cartridge and re-install it slowly and firmly until the cartridge lever lifts. (See <i>Replacing the ink cartridges</i> on page 98.)
	An ink cartridge is not installed correctly.	
	If you are using non Brother Original ink, the machine may not detect the ink cartridge.	Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact Brother customer service or your local Brother dealer.
Cannot Detect Ink Volume	If you are using non Brother Original ink, the machine may not detect the ink volume.	Replace the cartridge with a Brother Original ink cartridge. If the error message remains, contact Brother customer service or your local Brother dealer.
Cannot Print Replace ink.	One or more of the ink cartridges have reached the end of their life. The machine will stop all print operations. While memory is available, monochrome faxes will be stored in the memory. If a sending machine has a colour fax, the machine's "handshake" will ask that the fax be sent as monochrome.	Replace the ink cartridges. (See <i>Replacing the ink cartridges</i> on page 98.)
Comm.Error	Poor telephone line quality caused a communication error.	If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Failed	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cover is Open.	The scanner cover is not locked in the closed position.	Lift the scanner cover, and then close it again.
		Make sure the telephone line cord and USB cable (if used) have been guided correctly through the cable channel and out the back of the machine.
	The ink cartridge cover is not locked in the closed position.	Firmly close the ink cartridge cover until it locks into place.
Data Remaining in Memory	Print data is left in the machine's memory.	Press  . The machine will cancel the job and clear it from the memory. Try to print again.


<b>Error Message</b>	<b>Cause</b>	<b>Action</b>
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again. If calls are stopped repeatedly and you are using a VoIP (Voice over IP) system, try changing the Compatibility to <i>Basic</i> (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 139.)
Document Jam/too Long	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	(See <i>Using the ADF</i> on page 45.) (See <i>Document jam</i> on page 119.)
High Temperature	The room temperature is too high.	After lowering the room temperature, allow the machine to cool down to room temperature. Try again later.
Hub is Unusable.	A hub or USB Flash drive with hub has been connected to the USB direct interface.	Hubs, including USB Flash drives with built-in hubs, are not supported. Unplug the device from the USB direct interface.
Image Too Long	The proportions of your photo are irregular so effects could not be added.	Choose a regularly proportioned image.
Image Too Small	The size of your photo is too small to trim.	Choose a larger image.

Error Message	Cause	Action
<p>Ink Absorber Full</p>	<p>The ink absorber box or flushing box is full. These components are periodic maintenance items that may require replacement after a period of time to ensure optimum performance from your Brother machine. Because these components are periodic maintenance items, the replacement is not covered under the warranty. The need to replace these items and the time period before replacement is dependent on the number of purges and flushes required to clean the ink system. These boxes acquire amounts of ink during the different purging and flushing operations. The number of times a machine purges and flushes for cleaning varies depending on different situations. For example, frequently powering the machine on and off will cause numerous cleaning cycles since the machine automatically cleans itself upon power up. The use of non-Brother ink may cause frequent cleanings because non-Brother ink could cause poor print quality, which is resolved by cleaning. The more cleaning the machine requires, the faster these boxes will fill up.</p> <p><b>NOTE</b></p> <p><i>Repairs resulting from the use of non-Brother supplies may not be covered under the stated product warranty.</i></p>	<p>The ink absorber box or flushing box will need to be replaced. Contact Brother Customer Service or your local Brother Authorised Service Centre to have your machine serviced.</p> <p>Other reasons for cleaning are:</p> <ol style="list-style-type: none"> <li>1 After a paper jam has been cleared, the machine automatically cleans itself before the next received fax is printed.</li> <li>2 The machine automatically cleans itself after sitting idle for more than 30 days (infrequent use).</li> <li>3 The machine automatically cleans itself after ink cartridges of the same colour have been replaced 12 times.</li> </ol>
<p>Ink Absorber NearFull</p>	<p>The ink absorber box or flushing box is nearly full.</p>	<p>Contact Brother customer service or your local Brother dealer.</p>
<p>Ink Low</p>	<p>One or more of the ink cartridges are near the end of their life. If one of the colour ink cartridges is near the end of its life and someone is sending you a colour fax, your machine's "handshake" will ask that the fax be sent as monochrome. If the sending machine has the ability to convert it, the colour fax will be printed at your machine as a monochrome fax.</p>	<p>Order a new ink cartridge. You can continue printing until the Touchscreen shows <i>Cannot Print</i>. (See <i>Replacing the ink cartridges</i> on page 98.)</p>

Error Message	Cause	Action
Low Temperature	The room temperature is too low.	After increasing the room temperature, allow the machine to warm up to room temperature. Try again later.
Media Error	The memory card is either corrupted, incorrectly formatted, or there is a problem with the memory card.	Remove the memory card from the media drive (slot) of the machine and format it correctly.
		Put the card firmly into the slot again to make sure it is in the correct position. If the error remains, check the media drive (slot) of the machine by inserting a working memory card.
Media is Full.	The memory card or USB Flash drive you are using already contains 999 files.	Your machine can only save to your memory card or USB Flash drive if it contains less than 999 files. Delete unused files and try again.
	The memory card or USB Flash drive you are using does not have enough free space to scan the documents.	Press  . Delete unused files from your memory card or USB Flash drive to make some free space, and then try again.
No Caller ID	There is no incoming call history. You did not receive calls or you have not subscribed to the Caller ID service from your telephone company.	If you want to use the Caller ID feature, call your telephone company. (See <i>Caller ID (U.K. and Ireland only)</i> on page 64.)
No File	The memory card or USB Flash drive in the media drive does not contain a .JPG file.	Insert a different memory card or USB Flash drive containing .JPG files into the slot.
No Ink Cartridge	An ink cartridge is not installed correctly.	Take out the new ink cartridge and re-install it slowly and firmly until the cartridge lever lifts. (See <i>Replacing the ink cartridges</i> on page 98.)


Error Message	Cause	Action
<p>No Paper Fed No Paper Fed #1 No Paper Fed #2</p>	<p>The machine is out of paper, or paper is not correctly loaded in the paper tray.</p> <p>The paper tray was not fully inserted.</p> <p>The paper was not inserted in the centre position of the manual feed slot.</p> <p>The Jam Clear Cover is not closed correctly.</p> <p>Paper dust has accumulated on the surface of the paper pick-up rollers.</p> <p>The paper is jammed in the machine.</p>	<p>Do one of the following:</p> <ul style="list-style-type: none"> <li>■ Refill the paper in the paper tray, and then press <b>OK</b> on the Touchscreen.</li> <li>■ Remove and reload the paper, then press <b>OK</b> on the Touchscreen. (See <i>Loading paper and other print media</i> on page 22.)</li> </ul> <p>Remove the paper tray and re-install it until it locks into place, and then press <b>OK</b> on the Touchscreen.</p> <p>Remove the paper and re-insert it in the centre of the manual feed slot, and then press <b>OK</b> on the Touchscreen. (See <i>Loading paper in the manual feed slot</i> on page 35.)</p> <p>Make sure the Jam Clear Cover is closed evenly at both ends. (See <i>Printer jam or paper jam</i> on page 121.)</p> <p>Clean the paper pick-up rollers. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i>)</p> <p>Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 121.</p> <p>If this error occurs often during 2-sided copying or 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See <i>Advanced User's Guide: Cleaning the paper feed rollers.</i>)</p>
<p>No Response/Busy</p>	<p>The number you dialled has not answered or is busy.</p>	<p>Verify the number and try again.</p>
<p>Out of Fax Memory</p>	<p>The fax memory is full.</p>	<p>Do one of the following:</p> <ul style="list-style-type: none"> <li>■ Clear the data from the memory. To gain extra memory, you can turn off Memory Receive. (See <i>Advanced User's Guide: Turning off Memory Receive operations.</i>)</li> <li>■ Print the faxes that are in the memory. (See <i>Advanced User's Guide: Printing a fax from the memory.</i>)</li> </ul>



Error Message	Cause	Action
Out of Memory	The machine's memory is full.	<p><b>If a fax-sending or copy operation is in process:</b></p> <ul style="list-style-type: none"> <li>■ Press  or <code>Quit</code> or <code>Close</code> and wait until the other operations that are in process finish, and then try again.</li> <li>■ Press <code>Send Now</code> to send the pages scanned so far.</li> <li>■ Press <code>Partial Print</code> to copy the pages scanned so far.</li> <li>■ Clear the data in the memory. To gain extra memory, you can turn off <code>Memory Receive</code>. (See <i>Advanced User's Guide: Turning off Memory Receive operations.</i>)</li> <li>■ Print the faxes that are in the memory. (See <i>Advanced User's Guide: Printing a fax from the memory.</i>)</li> </ul>
Paper Jam [Front]	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 121.</p> <p>Make sure the paper guides are set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.</p> <hr/> <p>If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 125.)</p>



Error Message	Cause	Action
Paper Jam [Front,Rear]	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 121.</p> <p>Make sure the paper guides are set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.</p> <p>If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 125.)</p>
	<p>More than one sheet of paper was placed in the manual feed slot.</p> <p>—OR—</p> <p>Another sheet of paper was placed in the manual feed slot before the Touchscreen showed</p> <p>Put paper in Manual Feed Slot, and then Press [OK].</p>	<p>Do not put more than one sheet of paper in the manual feed slot at any one time. Wait until the Touchscreen shows</p> <p>Put paper in Manual Feed Slot, and then Press [OK]. before you feed the next sheet of paper in the manual feed slot.</p> <p>Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 121.</p>
Paper Jam [Rear]	The paper is jammed in the machine.	<p>Remove the jammed paper by following the steps in <i>Printer jam or paper jam</i> on page 121.</p> <p>Make sure the paper guides are set to the correct paper size. DO NOT extend the paper tray when you load A5 or smaller size paper.</p> <p>If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 125.)</p>
	Paper dust has accumulated on the surface of the paper pick-up rollers.	Clean the paper pick-up rollers. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i> )
Paper tray not detected	The paper tray is not completely inserted.	Slowly push the paper tray completely into the machine.
	Paper or a foreign object has prevented the paper tray from being inserted properly.	Pull the paper tray out of the machine, and remove the jammed paper or foreign object. Slowly push the paper tray completely into the machine.

Error Message	Cause	Action
Touchscreen Initialisation Failed	The Touchscreen was pressed before the power on initialization was completed.	Make sure that nothing is touching or resting on the Touchscreen, especially when plugging the machine in.
	Debris may be stuck between the lower part of the Touchscreen and its frame.	Insert a piece of stiff paper between the lower part of the Touchscreen and its frame and slide it back and forth to push out the debris.
Unable to Clean XX Unable to Initialize XX Unable to Print XX	The machine has a mechanical problem.  —OR— A foreign object, such as a paper clip or a piece of ripped paper, is in the machine.	Open the scanner cover and remove any foreign objects and paper scraps from inside the machine. If the error message continues, disconnect the machine from the power for several minutes, and then reconnect it.  For more information, see <i>Additional paper jam clear operations</i> on page 125.  (The machine can be turned off for approximately 24 hours without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 118.)
Unable to Scan XX	The machine has a mechanical problem.	Disconnect the machine from the power for several minutes, and then reconnect it.  The machine can be turned off for approximately 24 hours without losing faxes stored in the memory. (See <i>Transferring your faxes or Fax Journal report</i> on page 118.)
Unusable Device Disconnect device from front connector & turn machine off & then on	A broken device has been connected to the USB direct interface.	Unplug the device from the USB direct interface, then press  to turn the machine off and then on again.
Unusable Device Please disconnect USB device.	A USB device or USB Flash drive that is not supported has been connected to the USB direct interface.  For more information, visit us at <a href="http://solutions.brother.com/">http://solutions.brother.com/</a> .	Unplug the device from the USB direct interface. Turn the machine off and then on again.
Wrong Ink Colour	An ink cartridge has been installed in the wrong position.	Check which ink cartridges are not matched by colour to their ink cartridge positions and move them to their correct positions.

Error Message	Cause	Action
<p>Wrong Paper</p> <p>Wrong Paper #1</p> <p>Wrong Paper #2</p>	<p>The paper size setting does not match the size of paper in the tray.</p>	<p>1 Check that the paper size you choose matches the size of paper in the tray.</p>
	<p>The paper orientation is incorrect for the paper size.</p>	<p>(See <i>Paper Size and Type</i> on page 39.)</p>
	<p>You did not set the paper guides in the tray to the indicators for the paper size you are using.</p>	<p>2 Make sure you load the paper in the proper orientation, by setting the paper guides to the indicators for your paper size. (See <i>Loading paper and other print media</i> on page 22.)</p> <p>3 After you have checked the paper size and the paper orientation, press <b>OK</b> on the Touchscreen.</p>
		<p>If you are printing from your computer, make sure the paper size you choose in the printer driver matches the size of paper in the tray. (See <i>Software and Network User's Guide</i>.)</p>
<p>Wrong Tray Setting</p>	<p>The machine's Paper Size and Tray Use settings do not match the size of paper in the tray you are using.</p>	<p>Follow the instructions on the Touchscreen and try to print again.</p>
		<p>Configure the paper size setting for the tray according to the on-screen instructions.</p>

## Error animations

Error animations display step-by-step instructions when paper gets jammed. You can read the steps at your own pace by pressing ► to see the next step and ◀ to go back a step.

## Transferring your faxes or Fax Journal report

If the Touchscreen shows:



- Unable to Clean XX
- Unable to Initialize XX
- Unable to Print XX
- Unable to Scan XX


We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 118 or *Transferring faxes to your PC* on page 118.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring the Fax Journal report to another fax machine* on page 119.)

### Transferring faxes to another fax machine


If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: *Enter personal information (Station ID)*.)

- 1 Press  to temporarily interrupt the error.
- 2 Press .
- 3 Press **All Settings**.
- 4 Swipe up or down, or press ▲ or ▼ to display **Service**.
- 5 Press **Service**.


- 6 Press **Data Transfer**.
- 7 Press **Fax Transfer**.
- 8 Do one of the following:
  - If the Touchscreen shows **No Data**, there are no faxes left in the machine's memory.  
  
Press **Close**, and then press .
  - Enter the fax number to which faxes will be forwarded.
- 9 Press **Fax Start**.

### Transferring faxes to your PC


You can transfer the faxes from your machine's memory to your PC.


- 1 Press  to temporarily interrupt the error.
- 2 Make sure you have installed **MFL-Pro Suite** on your PC, and then turn on **PC-FAX Receiving** on the PC. Do one of the following:

(Windows® XP, Windows Vista® and Windows® 7)

From  (**Start**), select **All Programs**, **Brother, MFC-XXXX**, **PC-FAX Receiving**, and select **Receive**. (where XXXX is your model name.)



(Windows® 8)

Click  (**Brother Utilities**), and then click the drop-down list and select your model name (if not already selected). Click **PC-FAX Receive** in the left navigation bar, and then click **Receive**.

- 3 Make sure you have set PC-Fax Receive on the machine. (See *PC-FAX Receiving (Windows®)* on page 62.) If faxes are in the machine's memory when you set up PC-Fax Receive, the Touchscreen will ask if you want to transfer the faxes to your PC.
- 4 Do one of the following:
  - To transfer all faxes to your PC, press **Yes**. If Fax Preview is set to **Off**, you will be asked if you want to also turn on the backup print option.
  - To exit and leave the faxes in the memory, press **No**.
- 5 Press .

### Transferring the Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See Quick Setup Guide: *Enter personal information (Station ID)*.)


- 1 Press  to temporarily interrupt the error.
- 2 Press .
- 3 Press **All Settings**.
- 4 Swipe up or down, or press **▲** or **▼** to display **Service**.
- 5 Press **Service**.
- 6 Press **Data Transfer**.
- 7 Press **Report Transfer**.
- 8 Enter the fax number to which the Fax Journal report will be forwarded.
- 9 Press **Fax Start**.

## Document jam


Documents can jam in the ADF unit if they are not inserted or fed correctly, or if they are too long. Follow the steps to clear a document jam.

### Document is jammed in the top of the ADF unit

- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Remove the jammed document by pulling it upward.

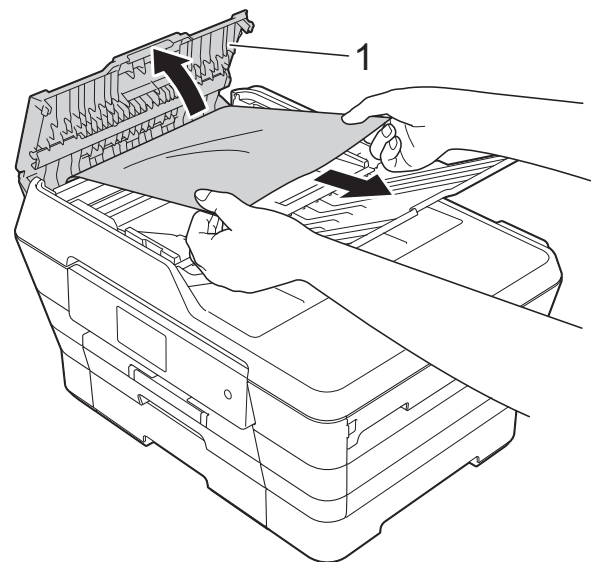

1 ADF cover


- 4 Close the ADF cover.
- 5 Press .

### IMPORTANT


To avoid document jams, close the ADF cover correctly by pushing it gently in the centre.

## Document is jammed inside the ADF unit

- 1 Take any paper that is not jammed out of the ADF.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the left.

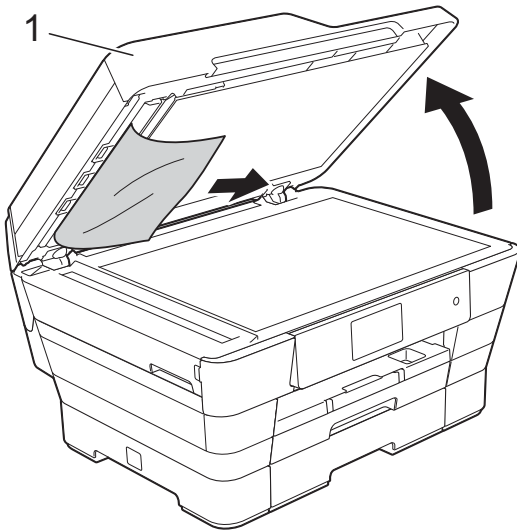


1 document cover


- 4 Close the document cover.
- 5 Press .

## Removing small documents jammed in the ADF

- 1 Lift the document cover.
- 2 Insert a piece of stiff paper, such as cardstock, into the ADF to push any small paper scraps through.

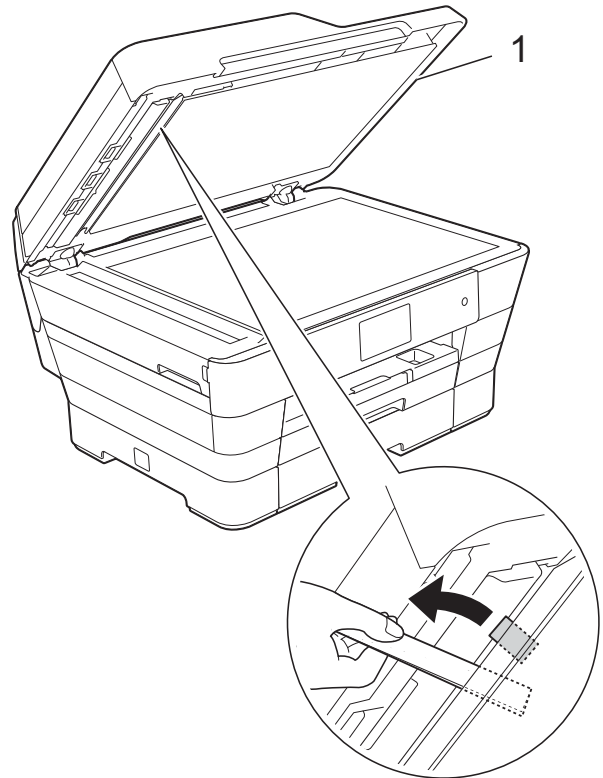



1 document cover

- 3 Close the document cover.
- 4 Press .

## Printer jam or paper jam


Located and removed the jammed paper by following these steps.

- 1 Unplug the machine from the electrical socket.
- 2 Pull paper tray #1 (1) and then tray #2 (2) completely out of the machine.

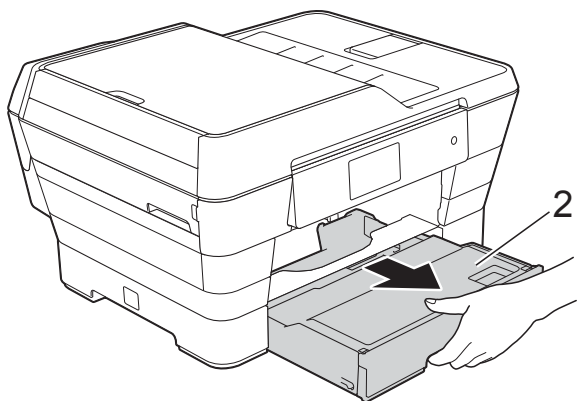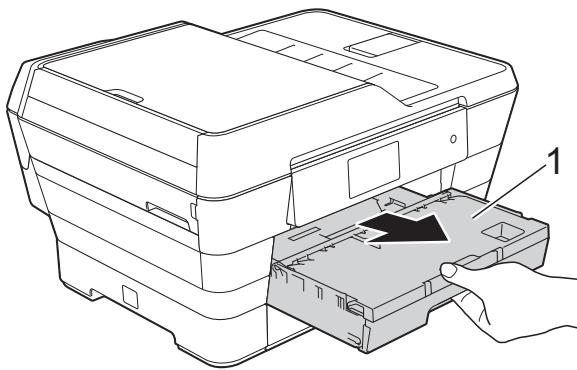


- If the Touchscreen shows Paper Jam [Rear], go to step 10.


- 3 Pull out the jammed paper (1).

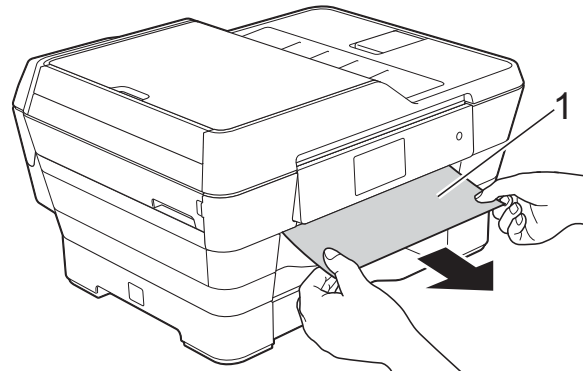

- 4 Lift the green Jam Clear Flap, and remove the jammed paper.

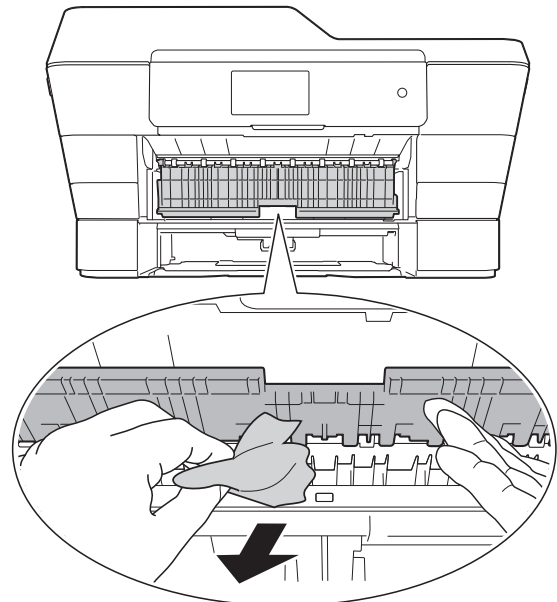


- 5 Make sure you look carefully inside the machine above and below the green Jam Clear Flap for any pieces of paper.

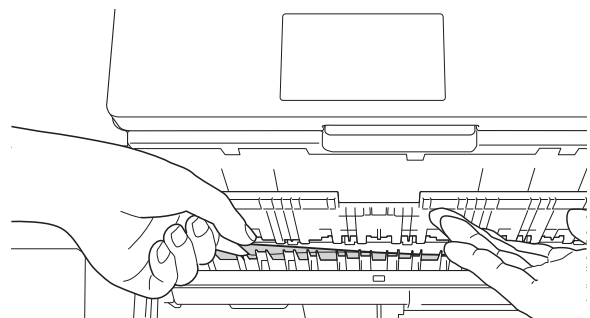





- 6 Using both hands, use the finger holds on each side of the machine to lift the scanner cover (1) into the open position.

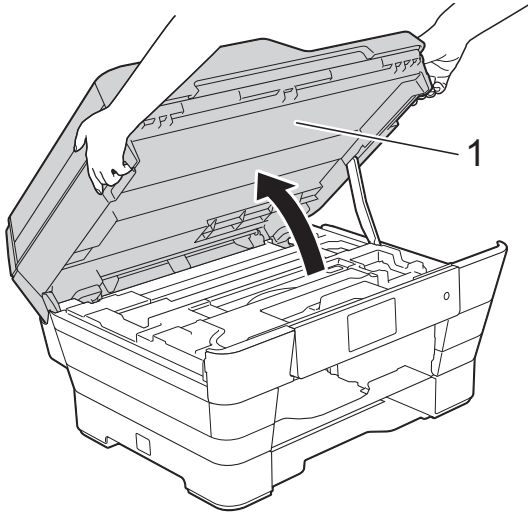


- 7 Slowly pull the jammed paper (1) out of the machine.

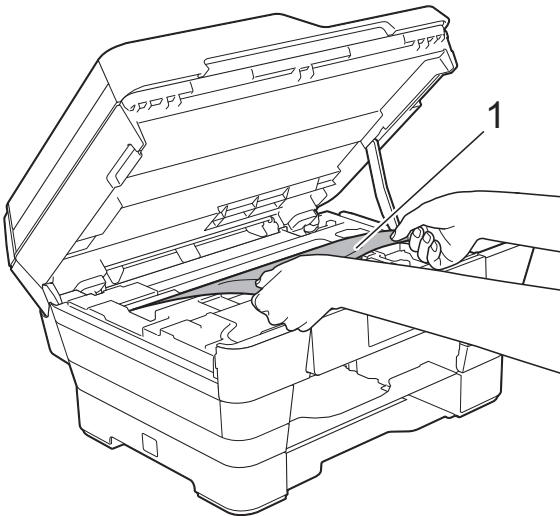


- 8 Move the print head (if necessary) to reach any paper remaining in this area. Make sure no jammed paper is left in the corners of the machine (1) and (2).

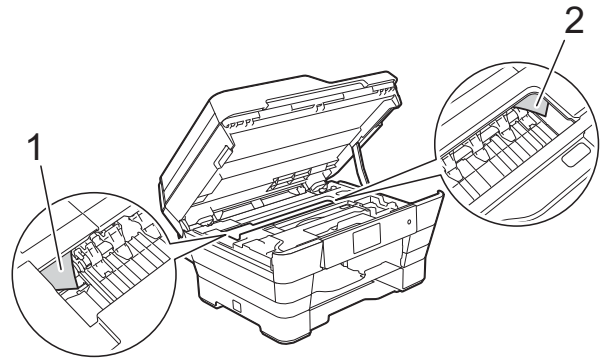

### IMPORTANT


- If the paper is jammed under the print head, unplug the machine from the power source, and then move the print head to reach the paper.
- If the print head is in the right corner as shown in the illustration, you cannot move the print head. Re-connect the power cord. Hold down  until the print head moves to the centre. Then unplug the machine from the power source and remove the paper.

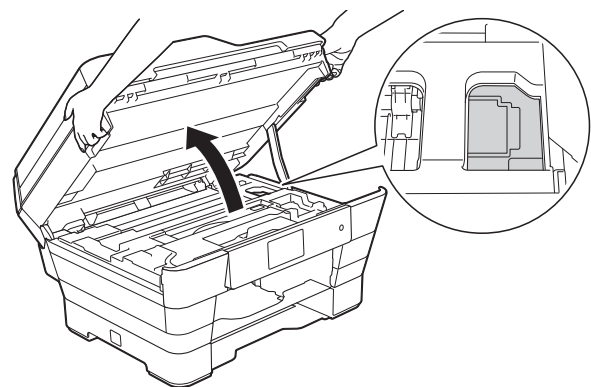


- If ink gets onto your skin, immediately wash with soap and plenty of water.




- 9 Make sure you look carefully inside (1) for any pieces of paper.

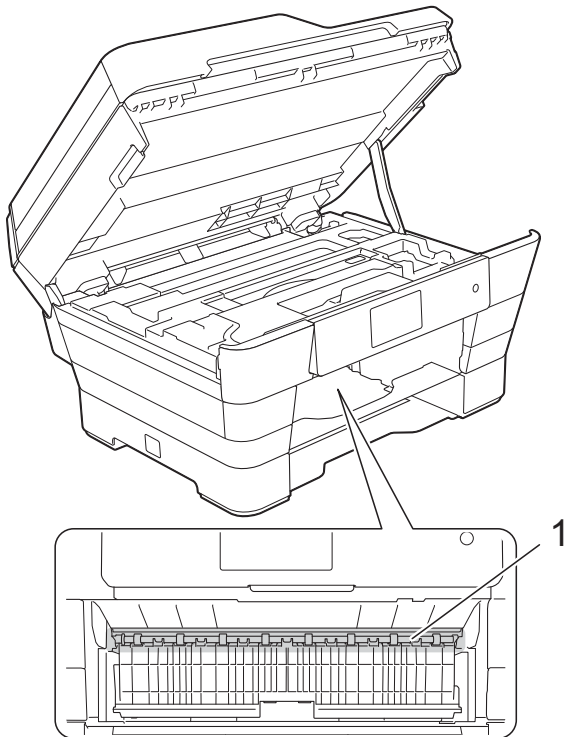

- 11 Open the inside cover (1).

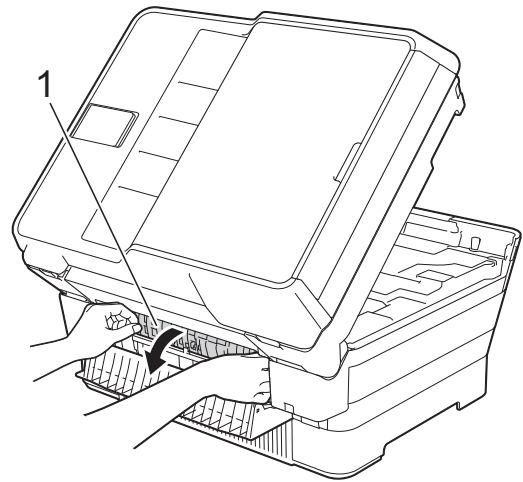


- 12 Make sure you look carefully inside for any jammed paper. If there is any jammed paper, slowly pull it out of the machine.

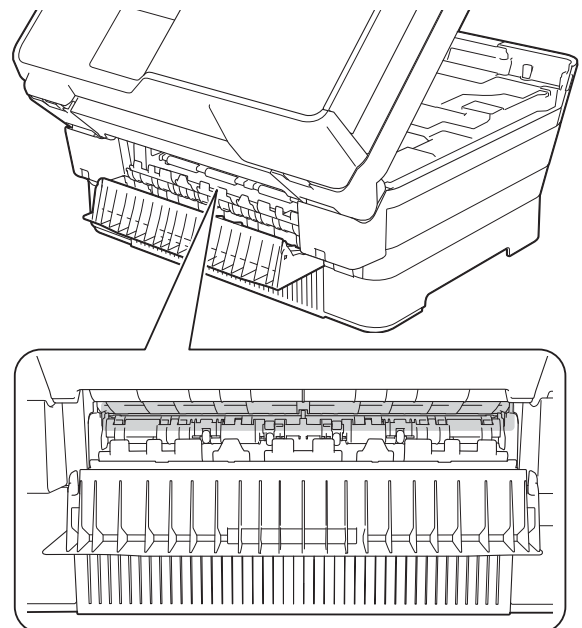


Do one of the following:

- If the Touchscreen shows Paper Jam [Front], go to step 14.
- If the Touchscreen shows Paper Jam [Front, Rear], go to step 10.



- 10 Open the Jam Clear Cover at the back of the machine.

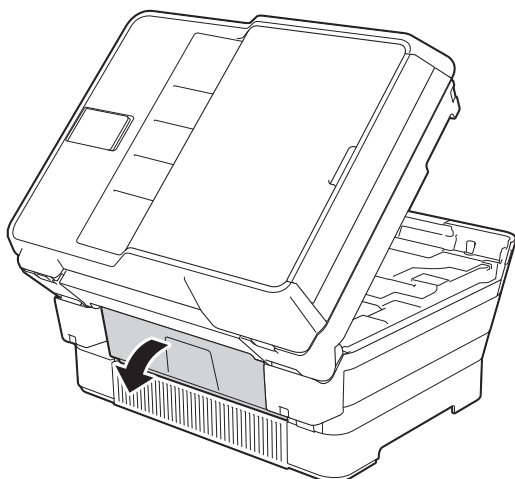


- 13 Close the inside cover and Jam Clear Cover. Make sure the covers are closed completely.

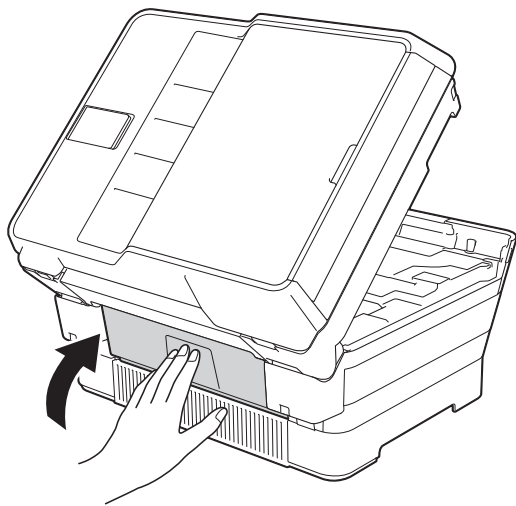

- 14 Put the paper tray firmly back in the machine.

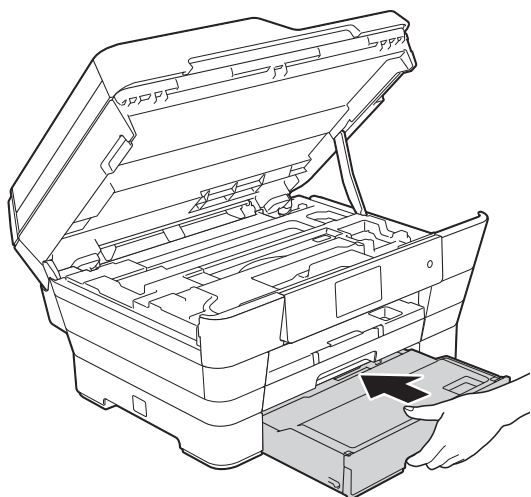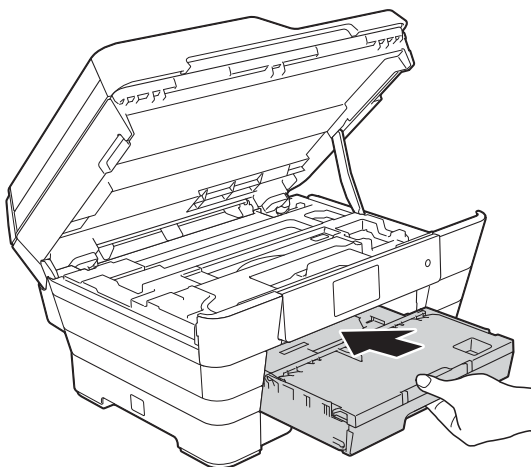

- 15 Gently close the scanner cover using the finger holds on each side.

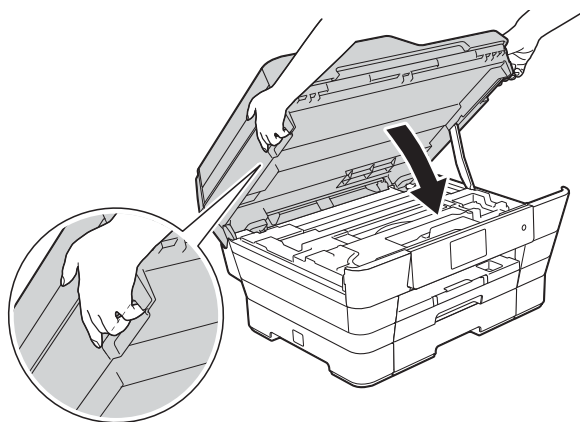

### ⚠ CAUTION

Be careful not to pinch your fingers when you close the scanner cover. Always use the finger holds provided on each side of the scanner cover when opening and closing it.

### NOTE

Make sure you pull out the paper support until it clicks.


- 16 Re-connect the power cord.

### NOTE


If there is a repeat paper jam, a small piece of paper may be stuck in the machine. (See *Additional paper jam clear operations* on page 125.)


## Additional paper jam clear operations

- 1 Using both hands, use the finger holds on each side of the machine to lift the scanner cover (1) into the open position. Move the print head (if necessary) to reach any paper remaining in this area. Make sure no jammed paper is left in the corners of the machine (2) and (3).

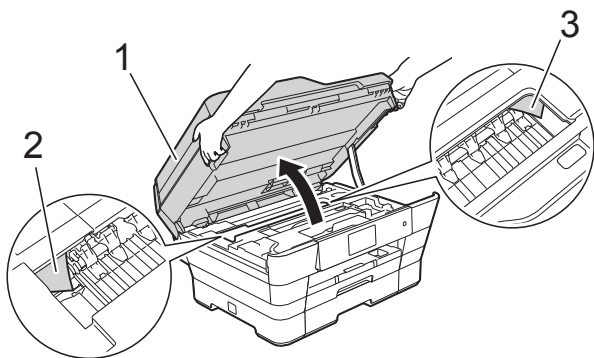


### NOTE

If the print head is at the right corner as shown in the illustration, hold down  until the print head moves to the centre.

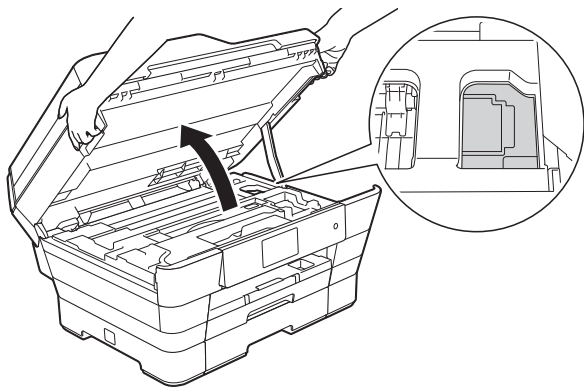

- 2 Unplug the machine from the electrical socket.


- 3 Gently close the scanner cover using the finger holds on each side.

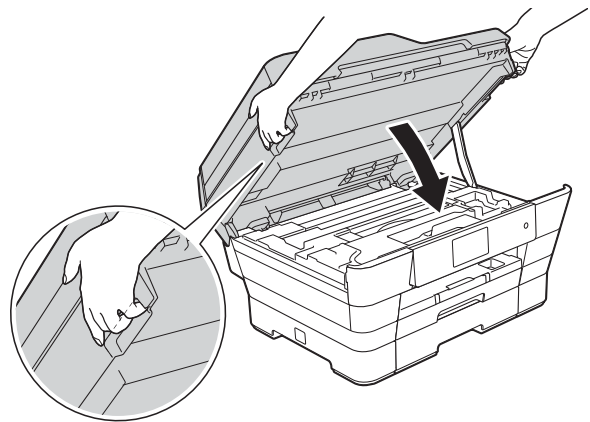


### ⚠ CAUTION

Be careful not to pinch your fingers when you close the scanner cover. Always use the finger holds provided on each side of the scanner cover when opening and closing it.

- 4 Open the manual feed slot cover.

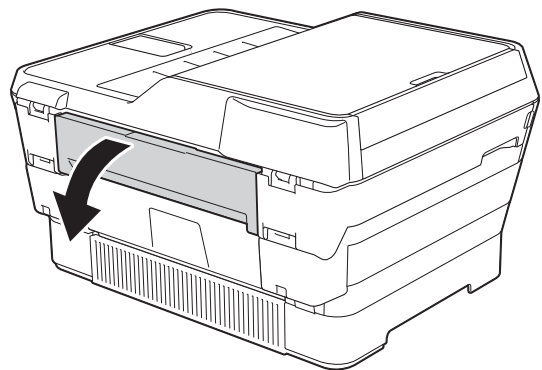

- 5 Put only one sheet of A4 or Letter size thick paper, such as glossy paper, in Landscape orientation in the manual feed slot. Push the paper into the manual feed slot.

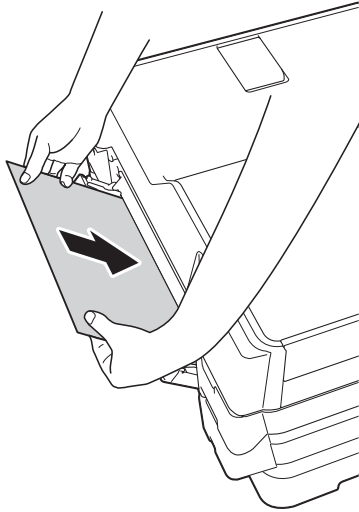

## NOTE

---

- We recommend you use glossy paper.
- If you don't push the paper far enough into the manual feed slot, the machine will not feed it when you re-connect the power cord.

- 6 Re-connect the power cord.  
The paper you placed in the manual feed slot will be fed through the machine and ejected.
- 7 Using both hands, use the finger holds on each side of the machine to lift the scanner cover into the open position. Make sure that a piece of paper is not still jammed inside the machine. Gently close the scanner cover using the finger holds on each side.



# If you are having difficulty with your machine

## NOTE

- For technical help, you must contact Brother customer support.
- If you think there is a problem with your machine, check the following chart and follow the troubleshooting tips. You can correct most problems by yourself.
- If you need additional help, the Brother Solutions Center offers the latest FAQs and troubleshooting tips.



Visit us at <http://solutions.brother.com/>.

## Printing Difficulties





Difficulty	Suggestions
No printout.	Check that the correct printer driver has been installed and chosen.
	Check to see if the Touchscreen is showing an error message. (See <i>Error and maintenance messages</i> on page 108.)
	<p>Make sure that the machine is online.</p> <p>(Windows® XP and Windows Server® 2003) Click <b>Start/Printers and Faxes</b>. Right-click <b>Brother MFC-XXXX Printer</b> (where XXXX is your model name). If the printer is offline, it will show <b>Use Printer Online</b>. Select this option to enable the printer.</p> <p>(Windows Vista® and Windows Server® 2008) Click  <b>Control Panel/Hardware and Sound/Printers</b>. Right-click <b>Brother MFC-XXXX Printer</b> (where XXXX is your model name). If the printer is offline, it will show <b>Use Printer Online</b>. Select this option to enable the printer.</p> <p>(Windows® 7 and Windows Server® 2008 R2) Click  <b>Devices and Printers</b>. Right-click <b>Brother MFC-XXXX Printer</b> (where XXXX is your model name) and choose <b>See what's printing</b>. Click <b>Printer</b> and make sure that <b>Use Printer Offline</b> is cleared.</p> <p>(Windows® 8 and Windows Server® 2012) Move your mouse to the lower right corner of your desktop. When the menu bar appears, click <b>Settings</b>, and then click <b>Control Panel</b>. In the <b>Hardware and Sound</b> (Hardware) group, click <b>View devices and printers</b>. Right-click <b>Brother MFC-XXXX Printer</b> (where XXXX is your model name) and select <b>See what's printing</b>. If printer driver options appear, select your printer driver. Click <b>Printer</b> in the menu bar and make sure that <b>Use Printer Offline</b> is not selected.</p>
	One or more ink cartridges have reached the end of their life. (See <i>Replacing the ink cartridges</i> on page 98.)



## Printing Difficulties (continued)



Difficulty	Suggestions
<p>No printout. (continued)</p>	<p>The document will not print if the old, unprinted data remains in the printer driver spooler. Open the printer icon, and then delete all the data. Your printer icon can be found in the following way:</p> <p>(Windows® XP and Windows Server® 2003) Click <b>Start/Printers and Faxes</b>.</p> <p>(Windows Vista® and Windows Server® 2008) Click /Control Panel/Hardware and Sound/Printers.</p> <p>(Windows® 7 and Windows Server® 2008 R2) Click /Devices and Printers/Printers and Faxes.</p> <p>(Windows® 8 and Windows Server® 2012) Move your mouse to the lower right corner of your desktop. When the menu bar appears, click <b>Settings/Control Panel/Hardware and Sound (Hardware) group/View devices and printers/Printers</b>.</p> <p>(Mac OS X v10.6.8) Click <b>System Preferences/Print &amp; Fax</b>.</p> <p>(OS X v10.7.x, 10.8.x) Click <b>System Preferences/Print &amp; Scan</b>.</p>
<p>The headers or footers appear when the document displays on the screen but they do not show up when it is printed.</p>	<p>There is an unprintable area on the top and bottom of the page. Adjust the top and bottom margins in your document to allow for this.</p> <p>(See <i>Unprintable area</i> on page 38.)</p>
<p>Cannot perform “Page Layout” printing.</p>	<p>Check that the paper size setting in the application and in the printer driver are the same.</p>
<p>Print speed is too slow.</p>	<p>Try changing the printer driver setting. The highest resolution needs longer data processing, sending and printing time. Try the other quality settings in the printer driver as follows:</p> <p>(Windows®) Click <b>Colour Settings</b> on the <b>Advanced</b> tab, and make sure you clear <b>Colour Enhancement</b>.</p> <p>(Macintosh) Choose <b>Color Settings</b>, click <b>Advanced Color Settings</b>, and make sure you clear <b>Color Enhancement</b>.</p> <p>Turn the Borderless feature off. Borderless printing is slower than normal printing. (See Software and Network User’s Guide.)</p>
<p>Colour Enhancement is not working correctly.</p>	<p>If the image data is not full colour in your application (such as 256 colour), Colour Enhancement will not work. Use at least 24 bit colour data with the Colour Enhancement feature.</p>
<p>Machine does not print from Adobe® Illustrator®.</p>	<p>Try to reduce the print resolution. (See Software and Network User’s Guide.)</p>

## Print Quality Difficulties

Difficulty	Suggestions
<p>Poor print quality.</p>	<p>Check the print quality. (See <i>Checking the print quality</i> on page 103.)</p> <p>Make sure that the <b>Media Type</b> setting in the printer driver or the <b>Paper Type</b> setting in the machine's menu matches the type of paper you are using. (See <i>Paper Size and Type</i> on page 39.)</p> <p>(See <i>Software and Network User's Guide</i>.)</p> <p>Make sure that your ink cartridges are fresh. The following may cause ink to clog:</p> <ul style="list-style-type: none"> <li>■ The expiration date written on the cartridge package has passed. (Brother Original cartridges stay usable for up to two years if kept in their original packaging.)</li> <li>■ The ink cartridge has been in your machine for over six months.</li> <li>■ The ink cartridge may not have been stored correctly before use.</li> </ul> <p>Make sure you are using Brother Original Innobella™ ink. Brother does not recommend the use of cartridges other than Brother Original cartridges or the refilling of used cartridges with ink from other sources.</p> <p>Make sure you are using one of the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 40.)</p> <p>The recommended environment for your machine is between 20 °C to 33 °C.</p>
<p>White horizontal lines appear in text or graphics.</p>  <p>A4, Letter and Executive</p>  <p>A3, Ledger, Legal, A5, A6, envelopes, Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index Card (127 × 203 mm)</p>	<p>Clean the print head. (See <i>Cleaning the print head</i> on page 102.)</p> <p>Make sure you are using Brother Original Innobella™ ink.</p> <p>Try using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 40.)</p> <p>To prolong print head life, provide the best ink cartridge economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the machine unplugged for extended periods of time. We recommend using  to power down the machine. Using  allows minimal power to the machine ensuring periodic cleanings of the print head occur.</p>



## Print Quality Difficulties (continued)

Difficulty	Suggestions
The machine prints blank pages.	Clean the print head. (See <i>Cleaning the print head</i> on page 102.)
	Make sure you are using Brother Original Innobella™ ink.
	To prolong print head life, provide the best ink cartridge economy and maintain print quality, we do not recommend frequently unplugging the machine and/or leaving the machine unplugged for extended periods of time. We recommend using  to power down the machine. Using  allows minimal power to the machine ensuring periodic cleanings of the print head occur.
Characters and lines are blurred.	Check the printing alignment. (See <i>Checking the print alignment</i> on page 104.)
Printed text or images are skewed.	Make sure the paper is loaded correctly in the paper tray and the paper guides are adjusted correctly. (See <i>Loading paper and other print media</i> on page 22.)
	Make sure the Jam Clear Cover is closed correctly.
Smudge or stain at the top centre of the printed page.	Make sure the paper is not too thick or curled. (See <i>Acceptable paper and other print media</i> on page 40.)
Printing appears dirty or ink seems to run.	Make sure you are using the recommended types of paper. (See <i>Acceptable paper and other print media</i> on page 40.) Don't handle the paper until the ink is dry.
	Make sure the print side is face down in the paper tray.
	Make sure you are using Brother Original Innobella™ ink.
	If you are using photo paper, make sure that you have set the correct paper type. If you are printing a photo from your PC, set the <b>Media Type</b> in the printer driver.
Ink is smudged or wet when using glossy photo paper.	Be sure to check the front and back of the paper. Place the glossy surface (printing surface) face down. (See <i>Paper Size and Type</i> on page 39.)
	If you use glossy photo paper, make sure that the paper type setting is correct.
Printouts appear dirty or the paper jams when using A3 paper.	(PC print for Windows®)
	Select <b>Slow Drying Paper</b> in the <b>Basic</b> tab of the printer driver.
	(PC print for Macintosh)
	Select <b>Print Settings</b> from the drop-down list and then check <b>Slow Drying Paper</b> of the printer driver.
	(Copy)
	Adjust the copy density to make copies lighter. (See Advanced User's Guide: <i>Adjusting Density</i> .)
Stains appear on the reverse side or at the bottom of the page.	Make sure the printer platen is not dirty with ink. (See Advanced User's Guide: <i>Cleaning the machine's printer platen</i> .)
	Make sure you are using Brother Original Innobella™ ink.
	Make sure you are using the paper support flap. (See <i>Loading paper and other print media</i> on page 22.)
	Make sure the paper feed rollers are not dirty with ink. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)
The machine prints dense lines on the page.	(Windows®) Select <b>Reverse Order</b> in the <b>Basic</b> tab of the printer driver.



## Print Quality Difficulties (continued)

Difficulty	Suggestions
The printouts are wrinkled.	(Windows®) In the printer driver <b>Advanced</b> tab, click <b>Colour Settings</b> and clear <b>Bi-Directional Printing</b> .
	(Macintosh) In the printer driver, choose <b>Print Settings</b> , click <b>Advanced</b> , choose <b>Other Print Options</b> and clear <b>Bi-Directional Printing</b> .
	Make sure you are using Brother Original Innobella™ ink.

## Paper Handling Difficulties

Difficulties	Suggestions
The machine does not feed paper.	Make sure the paper tray is pushed in all the way until it clicks into place.
	Make sure the Jam Clear Cover at the back of the machine is closed.
	If the Touchscreen shows the Paper Jam message and you still have a problem, see <i>Error and maintenance messages</i> on page 108.
	If there is no paper, load a new stack of paper into the paper tray.
	If there is paper in the paper tray, make sure it is straight. If the paper is curled, straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray.
	Reduce the amount of paper in the paper tray, and then try again.
	Clean the paper pick-up rollers. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i> )
Photo paper does not feed correctly.	When you print on Brother Photo paper, load one extra sheet of the same photo paper in the paper tray. An extra sheet has been included in the paper package for this purpose.
Machine feeds multiple pages.	Do the following: (See <i>Loading paper and other print media</i> on page 22.)
	<ul style="list-style-type: none"> <li>■ Make sure the paper is loaded correctly in the paper tray.</li> <li>■ Remove all the paper from the tray and fan the stack of paper well, then put it back in the tray.</li> <li>■ Make sure you do not push the paper in too far.</li> </ul>
	Make sure the Jam Clear Cover is closed correctly. (See <i>Printer jam or paper jam</i> on page 121.)
	Make sure the Base Pad in the paper tray is not dirty. (See <i>Advanced User's Guide: Cleaning the paper pick-up rollers.</i> )
There is a paper jam.	See <i>Printer jam or paper jam</i> on page 121. Make sure the paper guides are set to the correct paper size. Do not extend the paper tray when you load A5 or smaller size paper.
Paper jam reoccurs.	If there is a repeat paper jam, a small piece of paper may be stuck in the machine. Make sure paper is not still jammed in the machine. (See <i>Additional paper jam clear operations</i> on page 125.)

## Paper Handling Difficulties (continued)

Difficulties	Suggestions
The paper jams when you use 2-sided copy or 2-sided print.	Use one of the jam prevention settings, 2-sided 1 or 2-sided 2.
	For copying (See Advanced User's Guide: <i>2-sided copying</i> .)
	For printing (See Software and Network User's Guide.)
	If paper jams occur often during 2-sided copying or 2-sided printing, the paper feed rollers may be stained with ink. Clean the paper feed rollers. (See Advanced User's Guide: <i>Cleaning the paper feed rollers</i> .)

## Printing Received Faxes

Difficulty	Suggestions
<ul style="list-style-type: none"> <li>■ Condensed print</li> <li>■ Horizontal streaks</li> <li>■ Top and bottom sentences are cut off</li> <li>■ Missing lines</li> </ul>	Usually this is caused by a poor telephone connection. You can check this by making a test copy; if your copy looks good, you probably had a bad connection with static or interference on the telephone line. Ask the other party to re-send the fax.
Vertical black lines when receiving.	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
Left and right margins are cut off or a single page is printed on two pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your paper size setting may not be correct for the paper you are using. (See <i>Paper Size and Type</i> on page 39.)
	Turn on Auto Reduction. (See Advanced User's Guide: <i>Printing a reduced incoming fax</i> .)
Received colour fax prints only in monochrome.	Replace the colour ink cartridges that have reached the end of their life, and then ask the other person to send the colour fax again. (See <i>Replacing the ink cartridges</i> on page 98.)

## Telephone Line or Connections

Difficulty	Suggestions
Dialling does not work. (No dial tone)	Check the line cord connections.
	Change the Tone/Pulse setting. (See Quick Setup Guide.)
	If there is no dial tone, connect a known-working telephone and telephone line cord to the socket. Then lift the external telephone's handset and listen for a dial tone. If there is still no dial tone, ask your telephone company to check the line and/or wall socket.
The machine does not answer when called.	Make sure the machine is in the correct Receive Mode for your setup. (See <i>Choose the Receive Mode</i> on page 53.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If there is no ringing when you call your machine, ask your telephone company to check the line.

## Receiving Faxes

Difficulty	Suggestions
<p>Cannot receive a fax.</p>	<p>Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket inside the machine. If you subscribe to DSL or VoIP services, contact your service provider for connection instructions. To lower the modem speed and turn off ECM (error correction mode), see <i>Telephone line interference / VoIP</i> on page 139.</p> <p>Make sure the machine is in the correct Receive Mode. This is determined by the external devices and telephone subscriber services you have on the same line as the Brother machine. (See <i>Choose the Receive Mode</i> on page 53.)</p> <p>If you have a dedicated fax line and want your Brother machine to automatically answer all incoming faxes, select <b>Fax Only</b> mode.</p> <p>If your Brother machine shares a line with an external answering machine, select <b>External TAD</b> mode. In <b>External TAD</b> mode, your Brother machine will automatically receive incoming faxes and voice callers will be able to leave a message on your answering machine.</p> <p>If your Brother machine shares a line with other telephones and you want it to automatically answer all incoming faxes, select <b>Fax/Tel</b> mode. In <b>Fax/Tel</b> mode, your Brother machine will automatically receive faxes and produce a fast double-ring to alert you to answer voice calls.</p> <p>If you do not want your Brother machine to automatically answer incoming faxes, select <b>Manual</b> mode. In <b>Manual</b> mode, you must answer every incoming call and activate the machine to receive faxes.</p> <p>Another device or service at your location may be answering the call before your Brother machine answers. To test this, lower the Ring Delay setting:</p> <ul style="list-style-type: none"> <li>■ If the Receive Mode is set to <b>Fax Only</b> or <b>Fax/Tel</b>, reduce the Ring Delay to 1 ring. (See <i>Ring Delay</i> on page 56.)</li> <li>■ If the Receive Mode is set to <b>External TAD</b>, reduce the number of rings programmed on your answering machine to 2.</li> <li>■ If the Receive Mode is set to <b>Manual</b>, DO NOT adjust the Ring Delay setting.</li> </ul> <p>Have someone send you a test fax:</p> <ul style="list-style-type: none"> <li>■ If you received the test fax successfully, your machine is operating correctly. Remember to reset your Ring Delay or answering machine setting back to your original setting. If receiving problems recur after resetting the Ring Delay, then a person, device, or subscriber service is answering the fax call before the machine has a chance to answer.</li> <li>■ If you were not able to receive the fax, then another device or subscriber service may be interfering with your fax reception or there may be a problem with your fax line.</li> </ul>

## Receiving Faxes (continued)

Difficulty	Suggestions
Cannot receive a fax. (continued)	<p>If you are using a telephone answering machine (<b>External TAD mode</b>) on the same line as the Brother machine, make sure your answering machine is set up correctly. (See <i>Connecting an external TAD (telephone answering device)</i> on page 67.)</p> <ol style="list-style-type: none"> <li>1 Connect the external TAD as shown in the illustration on page 67.</li> <li>2 Set your answering machine to answer in one or two rings.</li> <li>3 Record the outgoing message on your answering machine. <ul style="list-style-type: none"> <li>■ Record five seconds of silence at the beginning of your outgoing message.</li> <li>■ Limit your speaking to 20 seconds.</li> <li>■ End your outgoing message with your Remote Activation Code for people sending manual faxes. For example: "After the beep, leave a message or press * <b>5 1</b> and <b>Start</b> to send a fax."</li> </ul> </li> <li>4 Set your answering machine to answer calls.</li> <li>5 Set your Brother machine's Receive Mode to <b>External TAD</b>. (See <i>Choose the Receive Mode</i> on page 53.)</li> </ol> <p>Make sure your Brother machine's Fax Detect feature is turned On. Fax Detect is a feature that allows you to receive a fax even if you have answered the call on an external or extension telephone. (See <i>Fax Detect</i> on page 57.)</p> <p>If you often get transmission errors due to possible interference on the telephone line, try changing the Compatibility setting to <b>Basic (for VoIP)</b>. (See <i>Telephone line interference / VoIP</i> on page 139.)</p> <p>If you connect your machine to a PBX or ISDN line, set the menu setting of Telephone Line Type to your telephone line type. (See <i>Setting the Telephone Line Type</i> on page 65.)</p>


## Sending Faxes

Difficulty	Suggestions
Cannot send a fax.	<p>Check all line cord connections. Make sure the telephone line cord is plugged into the telephone wall socket and the LINE socket inside the machine.</p> <p>Print the Transmission Verification Report and check for an error. (See <i>Advanced User's Guide: Reports</i>.)</p> <p>Contact your administrator to check your Secure Function Lock Settings.</p> <p>Ask the other party to check that the receiving machine has paper.</p>
Poor fax send quality.	<p>Try changing your resolution to <b>Fine</b> or <b>S.Fine</b>. Make a copy to check your machine's scanner operation. If the copy quality is poor, clean the scanner. (See <i>Cleaning the scanner glass</i> on page 101.)</p>

## Sending Faxes (continued)

Difficulty	Suggestions
Transmission Verification Report says <code>RESULT:ERROR</code> .	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get <code>RESULT:ERROR</code> on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Memory Receive (See <i>Advanced User's Guide: Turning off Memory Receive operations.</i> ), print fax messages from the machine's memory (See <i>Advanced User's Guide: Printing a fax from the memory.</i> ), or cancel a Delayed Fax or Polling Job. (See <i>Cancelling a fax in process</i> on page 51.) (See <i>Advanced User's Guide: Checking and cancelling waiting jobs.</i> ) If the problem continues, ask the telephone company to check your telephone line.
	If you often get transmission errors due to possible interference on the telephone line, try changing the machine's Compatibility setting to <code>Basic</code> (for VoIP). (See <i>Telephone line interference / VoIP</i> on page 139.)
	If you connect your machine to PBX or ISDN, set the menu setting of Telephone Line Type to your telephone line type. (See <i>Setting the Telephone Line Type</i> on page 65.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip. (See <i>Cleaning the scanner glass</i> on page 101.)

## Handling Incoming Calls

Difficulty	Suggestions
The machine "hears" a voice as a CNG Tone.	If Fax Detect is set to <code>On</code> , your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax-receiving tones. Deactivate the machine by pressing  . Try avoiding this problem by turning Fax Detect to <code>Off</code> . (See <i>Fax Detect</i> on page 57.)
Sending a fax call to the machine.	If you answered on an extension or external telephone, press your Remote Activation Code (the factory default is * 5 1). If you answered on an external telephone, press <code>Fax Start</code> , and then press <code>Receive</code> to receive the fax. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes.  <b>For example:</b> If you subscribe to Call Waiting or another custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt the faxes. Brother's ECM (Error Correction Mode) feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, we recommend using a separate telephone line with no custom features.

## Copying Difficulties

Difficulty	Suggestions
Cannot make a copy.	Contact your administrator to check your Secure Function Lock Settings.
Vertical black lines or streaks appear in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip. Clean the glass strip, scanner glass, and the white bar and white plastic above them. (See <i>Cleaning the scanner glass</i> on page 101.)
Poor copy results when using the ADF.	Try using the scanner glass. (See <i>Using the scanner glass</i> on page 46.)
Fit to Page does not work correctly.	Make sure your source document is not skewed. Reposition the document and try again.

## Scanning Difficulties

Difficulty	Suggestions
TWAIN or WIA errors appear when starting to scan. (Windows®)	Make sure the Brother TWAIN or WIA driver is chosen as the primary source in your scanning application. For example, in Nuance™ PaperPort™ 12SE, click <b>Scan Settings, Select</b> to choose the Brother TWAIN/WIA driver.
TWAIN or ICA errors appear when starting to scan. (Macintosh)	Make sure the Brother TWAIN driver is chosen as the primary source. In PageManager, click <b>File, Select Source</b> and choose the Brother TWAIN driver. You can also scan documents using the ICA Scanner Driver. (See Software and Network User's Guide.)
OCR does not work.	Try increasing the scanner resolution. (Macintosh)  Presto! PageManager must be downloaded and installed before use. For more information, see <i>Accessing Brother Support (Macintosh)</i> on page 5.
Poor scanning results when using the ADF.  ■ Vertical black lines appear in the scanned data.	Clean the white bar and the glass strip underneath it. (See <i>Cleaning the scanner glass</i> on page 101.)  Try using the scanner glass. (See <i>Using the scanner glass</i> on page 46.)

## PhotoCapture Center™ Difficulties

Difficulty	Suggestions
Removable Disk does not work correctly.	<ol style="list-style-type: none"> <li>1 Take out the memory card or USB Flash drive and put it back in again.</li> <li>2 If you have tried "Eject" from within Windows®, take out the memory card or USB Flash drive before you continue.</li> <li>3 If an error message appears when you try to eject the memory card or USB Flash drive, it means the card is being accessed. Wait a while, and then try again.</li> <li>4 If all of the above do not work, turn off your PC and machine, and then turn them on again.</li> </ol>
Cannot access Removable Disk from the computer.	Make sure that you have correctly inserted the memory card or USB Flash drive.
Part of my photo is missing when printed.	Make sure that Borderless printing and Cropping are turned off. (See Advanced User's Guide: <i>Borderless printing</i> and <i>Cropping</i> .)


## Software Difficulties

Difficulty	Suggestions
Cannot install software or print.	(Windows®) Run the <b>Repair MFL-Pro Suite</b> program on the CD-ROM. This program will repair and reinstall the software.
“Device Busy”	Make sure the machine is not showing an error message on the Touchscreen.

## Network Difficulties

Difficulty	Suggestions
Cannot print over the network.	Make sure that your machine is powered on and is online and in the Ready mode. Print a Network Configuration Report (See <i>Advanced User's Guide: Reports.</i> ) and check the current Network settings printed in this list. Reconnect the LAN cable to the hub to verify that the cabling and network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. If the connections are good, the machine shows LAN Active for 2 seconds.  If you are using a wireless connection or are having network problems, see Software and Network User's Guide.
The network scanning feature does not work.	It is necessary to configure the third-party Security/Firewall Software to allow Network scanning. To add port 54925 for Network scanning, enter the information below:  In Name: Enter any description, for example Brother NetScan. In Port number: Enter 54925. In Protocol: UDP is selected.  Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.  (Macintosh)  Select <b>Other</b> from the <b>Model</b> drop-down list in the main screen of ControlCenter2. In the <b>Device Selector</b> window, make sure <b>Network</b> is selected in <b>Connection Type</b> , and then click <b>Browse</b> . Reselect your network machine, and press <b>OK</b> .
The network PC-Fax Receive feature does not work.	(Windows®)  It is necessary to set the third-party Security/Firewall Software to allow PC-FAX Rx. To add port 54926 for Network PC-FAX Rx, enter the information below:  In Name: Enter any description, for example Brother PC-FAX Rx. In Port number: Enter 54926. In Protocol: UDP is selected.  Please refer to the instruction manual that came with your third-party Security/Firewall Software or contact the software manufacturer.
The Brother software cannot be installed.	(Windows®)  Allow network access to the following programs if your security software displays an alert message during MFL-Pro Suite installation.  (Macintosh)  If you are using a firewall function of anti-spyware or antivirus security software, temporarily disable it and then install the Brother software.

## Network Difficulties (continued)

Difficulty	Suggestions
Cannot connect to wireless network.	<p>Investigate the problem using the WLAN Report.</p> <p>Press , All Settings, and then swipe up or down, or press ▲ or ▼ to display Print Reports. Press Print Reports. Swipe up or down, or press ▲ or ▼ to display WLAN Report, and then press WLAN Report.</p> <p>(See Software and Network User's Guide.)</p>



## Difficulties when entering data

Difficulty	Suggestions
The dial pad does not work when entering numbers or characters.	Use the keyboard on the Touchscreen to enter information.




## Dial Tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to *Detection*, you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems when dialling, you should change it back to the *No Detection* setting.


- 1 Press .
- 2 Press *All Settings*.
- 3 Swipe up or down, or press ▲ or ▼ to display *Initial Setup*.
- 4 Press *Initial Setup*.
- 5 Swipe up or down, or press ▲ or ▼ to display *Dial Tone*.
- 6 Press *Dial Tone*.
- 7 Press *Detection* or *No Detection*.
- 8 Press .

## Telephone line interference / VoIP

If you are having problems sending or receiving a fax due to possible interference on the telephone line, you can change the compatibility setting which reduces the modem speed to minimise errors.

- 1 Press .
- 2 Press *All Settings*.
- 3 Swipe up or down, or press ▲ or ▼ to display *Initial Setup*.
- 4 Press *Initial Setup*.
- 5 Swipe up or down, or press ▲ or ▼ to display *Compatibility*.
- 6 Press *Compatibility*.
- 7 Press *High*, *Normal* or *Basic* (for VoIP).
  - *Basic* (for VoIP) cuts the modem speed to 9,600 bps and turns off colour fax receiving and ECM, except for colour fax-sending. Unless interference is a recurring problem on your telephone line, you may prefer to use it only when needed.

To improve compatibility with most VoIP services, Brother recommends changing the compatibility setting to *Basic* (for VoIP).

  - *Normal* sets the modem speed at 14,400 bps.
  - *High* increases the modem speed to 33,600 bps. (factory default)
- 8 Press .



### NOTE

VoIP (Voice over IP) is a type of phone system that uses an Internet connection, rather than a traditional phone line.

# Machine Information



## Checking the serial number

You can see the machine's serial number on the Touchscreen.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Machine Info.
- 4 Press Machine Info.
- 5 Press Serial No.  
Your machine's serial number will appear on the Touchscreen.
- 6 Press .

## Checking the firmware version

You can see the machine's firmware version on the Touchscreen.

- 1 Press .
- 2 Press All Settings.
- 3 Swipe up or down, or press ▲ or ▼ to display Machine Info.
- 4 Press Machine Info.
- 5 Press Firmware Version.
- 6 Press Main Version.  
Your machine's firmware version will appear on the Touchscreen.
- 7 Press .

# Reset functions


The following reset functions are available:

- 1 Machine Reset  
You can reset all the machine's settings that you have changed, such as the date and time, telephone line type and Ring Delay.
- 2 Network  
You can reset the print server back to its default factory settings, such as the password and IP address information.
- 3 Address Book & Fax  
Address Book & Fax resets the following settings:
  - Address Book  
(Address Book and Setup Groups)
  - Programmed fax jobs in the memory  
(Polled Transmit, Delayed Fax and Delayed Batch Transmission)
  - Station ID  
(Name and Number)
  - Remote Fax Options  
(Fax Forwarding)
  - Report settings  
(Transmission Verification Report, Address Book and Fax Journal)
  - History  
(Caller ID history and Outgoing Call)
  - Faxes in memory
- 4 All Settings  
You can restore all settings to the factory default.  
Brother strongly recommends performing this procedure before handing over or disposing of the machine.

**NOTE**

Unplug the interface cable before you choose `Network` or `All Settings`.

**How to reset the machine**

- 1 Press .
- 2 Press `All Settings`.
- 3 Swipe up or down, or press ▲ or ▼ to display `Initial Setup`.
- 4 Press `Initial Setup`.
- 5 Swipe up or down, or press ▲ or ▼ to display `Reset`.
- 6 Press `Reset`.
- 7 Press the option you want to reset.
- 8 Press `Yes` to confirm.
- 9 Press `Yes` for 2 seconds to reboot the machine.

# C

## Settings and feature tables

### Using the Settings tables

Your machine's Touchscreen LCD is easy to set up and operate. All you have to do is press the settings and options you want to set as they are displayed on the screen.

We have created step-by-step Settings tables and Feature tables so you can see at-a-glance all the available choices for each setting and feature. You can use these tables to quickly choose your preferred settings in the machine.



# Settings tables

The Settings tables will help you understand the settings selections that are found in the machine's programs. The factory settings are shown in Bold with an asterisk.



## (Settings)



Level1	Level2	Level3	Options	Descriptions	Page
 (Date & Time)	<b>Date</b>	—	—	Sets the date and time on the screen and in the headings of the faxes you send.	See ‡.
	<b>Time</b>	—	—		
	<b>Auto Daylight</b>	—	On* Off	Automatically changes for Daylight Savings Time.	See ◆.
	<b>Time Zone</b>	—	—	Sets the time zone for your country.	See ‡.
<b>Ink</b>	(See <i>Ink</i> on page 188.)				
<b>Wi-Fi</b>	<b>TCP/IP</b>	—	—	Lets you configure the TCP/IP protocol.	See †.
	<b>WLAN Assistant</b>	—	—	You can configure your wireless network settings using the Brother CD-ROM.	
	<b>Setup Wizard</b>	—	—	You can manually configure your print server for a wireless network.	See ‡.
	<b>WPS/AOSS</b>	—	—	You can easily configure your wireless network settings using the one-button push method.	See †.
	<b>WPS w/ PIN Code</b>	—	—	You can easily configure your wireless network settings using WPS with a PIN.	
	<b>WLAN Status</b>	—	—	You can see the current wireless network status.	
		<b>MAC Address</b>	—	—	You can see your machine's MAC address.
<b>Fax Preview</b>	—	—	On Off*	You can view faxes you receive on the Touchscreen.	58
† See Software and Network User's Guide. ‡ See Quick Setup Guide. ◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
 (Tray #1)	Paper Type	—	<b>Plain Paper*</b> Inkjet Paper Brother BP71 Other Glossy Transparency	Sets the type of paper in paper tray #1.	39
	Paper Size	—	<b>A4*</b> A5 A3 10x15cm Letter Legal Ledger	Sets the size of paper in paper tray #1.	
 (Tray #2)	Paper Size	—	<b>A4*</b> A3 Letter Legal Ledger	Sets the size of paper in paper tray #2.	39
<b>All Settings</b>	—	—	For details, see <i>All Settings</i> in the following table.	Configures the detailed settings.	—
† See Software and Network User's Guide. ‡ See Quick Setup Guide. ◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					



## All Settings

Level1	Level2	Level3	Options	Descriptions	Page		
General Setup	Ink	Test Print	Print Quality	Lets you check the print quality or alignment.	103		
			Alignment		104		
		Cleaning	Black Colour All	Lets you clean the print head.	102		
		Ink Volume	—	Lets you check the available ink volume.	See ♦.		
	Tray Setting	Tray #1	Paper Type (Options)	<b>Plain Paper*</b>	Sets the type of paper in paper tray #1.	39	
				Inkjet Paper Brother BP71 Other Glossy Transparency			
			Paper Size (Options)	<b>A4*</b>	Sets the size of paper in paper tray #1.	39	
		A5 A3 10x15cm Letter Legal Ledger					
			Tray #2	Paper Size (Options)	<b>A4*</b>	Sets the size of paper in paper tray #2.	39
		A3 Letter Legal Ledger					
	Tray Use: Copy	Tray #1 Tray #2	<b>Auto Tray Select*</b>	Choose the tray that will be used for copying.	39		
		Tray Use: Fax	Tray #1 Tray #2	<b>Auto Tray Select*</b>	Choose the tray that will be used for faxing.	40	
♦ See Advanced User's Guide.							
The default settings are shown in Bold with an asterisk.							

Level1	Level2	Level3	Options	Descriptions	Page
General Setup (Continued)	Volume	Ring	Off Low <b>Med*</b> High	Adjusts the ring volume.	See  .
		Beep	Off <b>Low*</b> Med High	Adjusts the volume of the sounds when you press the Touchscreen or Touchpanel.	
		Speaker	Off Low <b>Med*</b> High	Adjusts the speaker volume.	
	LCD Settings	Backlight	<b>Light*</b> Med Dark	You can adjust the brightness of the Touchscreen backlight.	
		Dim Timer	Off 10Secs 20Secs <b>30Secs*</b>	You can set how long the Touchscreen backlight stays on after the last finger press.	
	Set Home Screen	—	<b>Home*</b> More Shortcuts 1 Shortcuts 2 Shortcuts 3	Chooses the screen that is displayed when you press Home (  ) on the Touchpanel.	13

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.



Level1	Level2	Level3	Options	Descriptions	Page	
General Setup (Continued)	Sleep Mode	—	1Min 2Mins 3Mins <b>5Mins*</b> 10Mins 30Mins 60Mins	You can choose how long the machine will remain idle before it goes into Sleep mode.	See ♦.	
		Function Lock	Set Password			—
			Lock Off-On			—
Shortcut Settings	Shortcut Name	Edit Shortcut Name	—	You can change the shortcut name.	19	
		Delete	—	Deletes the shortcut.	19	
♦ See Advanced User's Guide.						
The default settings are shown in Bold with an asterisk.						

Level1	Level2	Level3	Options	Descriptions	Page
Fax	Setup Receive	Receive Mode	<b>Fax Only*</b> Fax/Tel External TAD Manual	Choose the Receive Mode that best suits your needs.	53
		Ring Delay	0 1 <b>2*</b> 3 4 5 6 7 8  (Example for the U.K.)	Sets the number of rings before the machine answers in <b>Fax Only</b> or Fax/Tel mode.	56
		F/T Ring Time	20Secs <b>30Secs*</b> 40Secs 70Secs	Sets the length of the fast double-ring time in Fax/Tel mode.	56
		Fax Preview	On <b>Off*</b>	You can view received faxes on the Touchscreen.	58
		Fax Detect	<b>On*</b> Off	Receives fax messages automatically when you answer a call and hear fax tones.	57
		Remote Codes	Remote Codes (Options) <b>On*</b> Off Act.Code (*51) Deact.Code (#51)	Allows you to answer all calls at an extension or external telephone and use codes to turn the machine on or off. You can personalize these codes.	70

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Setup Receive (Continued)	Auto Reduction	On* Off	Cuts the size of incoming faxes to fit the paper size.	See ◆.
		Memory Receive	Off* Fax Forward Fax Storage PC Fax Receive	You can set the machine to either forward fax messages, store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or send faxes to your PC.  If you choose Fax Forward or PC Fax Receive, you can turn on the Backup Print safety feature.	
	Report Setting	XMIT Report	On On+Image Off* Off+Image Off2 Off2+Image	Choose the initial setup for the Transmission Verification Report.	52
		Journal Period	Journal Period	Sets the interval for the automatic printing of the Fax Journal. If you have chosen any other option than Off and Every 50 Faxes, you can set the time for the chosen option. If you have chosen Every 7 Days, you can set the day of the week.	See ◆.
			Time		
	Day				
Print Document	—	—	Prints incoming faxes stored in the memory.		
Remote Access	—	---*	Set your own code for Remote Retrieval.		
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Fax (Continued)	Dial Restriction	Dial Pad	Enter # Twice On <b>Off*</b>	You can set whether to restrict fax transmissions, or require that the user enters the number twice in order to prevent transmissions to an incorrect address.	See ♦.
		Address Book	Enter # Twice On <b>Off*</b>		
		Shortcuts	Enter # Twice On <b>Off*</b>		
		LDAP Server	Enter # Twice On <b>Off*</b>		
	Remaining Jobs	—	—	Check which jobs are in the memory and cancel chosen jobs.	
	Miscellaneous	BT Call Sign (U.K. Only)	On <b>Off*</b>	Use with BT Call Sign.	
Caller ID (U.K. and Ireland only)		<b>On*</b> Off	View or print a list of the last 30 Caller IDs stored in the memory.	64	
♦ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network	Wired LAN	TCP/IP	BOOT Method	<b>Auto*</b> Static RARP BOOTP DHCP	Choose the BOOT method that best suits your needs.	See +.
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
			Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
			Node Name	BRNXXXXXXXXXXXX	Enter the Node name.	
			WINS Configuration	<b>Auto*</b> Static	Chooses the WINS configuration mode.	
			WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary WINS server.	
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary DNS server.	
			APIPA	<b>On*</b> Off	Automatically allocates the IP address from the link-local address range.	

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Wired LAN (Continued)	TCP/IP (Continued)	IPv6	On <b>Off*</b>	Enable or disable the IPv6 protocol. If you want to use the IPv6 protocol, visit <a href="http://solutions.brother.com/">http://solutions.brother.com/</a> for more information.	See +.
		Ethernet	—	<b>Auto*</b> 100B-FD 100B-HD 10B-FD 10B-HD	Chooses the Ethernet link mode.	
		Wired Status	—	Active 100B-FD Active 100B-HD Active 10B-FD Active 10B-HD Inactive Wired OFF	You can see the current wired network status.	
		MAC Address	—	—	You can see your machine's MAC address.	
	WLAN	TCP/IP	BOOT Method	<b>Auto*</b> Static RARP BOOTP DHCP	Chooses the BOOT method that best suits your needs.	
			IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
			Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	WLAN (Continued)	TCP/IP (Continued)	Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	See +.
			Node Name	BRWXXXXXXXXXXXX	Enter the Node name.	
			WINS Configuration	Auto* Static	Chooses the WINS configuration mode.	
			WINS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary WINS server.	
			DNS Server	(Primary) 000.000.000.000 (Secondary) 000.000.000.000	Specifies the IP address of the primary or secondary DNS server.	
			APIPA	On* Off	Automatically allocates the IP address from the link-local address range.	
			IPv6	On Off*	Enable or disable IPv6 protocol for a wireless LAN. If you want to use the IPv6 protocol, visit <a href="http://solutions.brother.com/">http://solutions.brother.com/</a> for more information.	
		WLAN Assistant	—	—	You can configure your wireless network settings using the Brother CD-ROM.	
		Setup Wizard	—	—	You can manually configure your print server for a wireless network.	

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	WLAN (Continued)	WPS/AOSS	—	—	You can easily configure your wireless network settings using the one-button push method.	See †.
		WPS w/ PIN Code	—	—	You can easily configure your wireless network settings using WPS with a PIN.	
		WLAN Status	Status	—	You can see the current wireless network status.	
			Signal	—	You can see the current wireless network signal strength.	
			SSID	—	You can see the current SSID.	
			Comm. Mode	—	You can see the current Communication Mode.	
	MAC Address	—	—	You can see your machine's MAC address.		
	Wi-Fi Direct	Push Button	—	—	You can easily configure your Wi-Fi Direct™ network settings using the one-button push method.	See ♣.
		PIN Code	—	—	You can easily configure your Wi-Fi Direct™ network settings using WPS with a PIN.	
		Manual	—	—	You can manually configure your Wi-Fi Direct™ network settings.	
Group Owner		—	On Off*	Sets your machine as the Group Owner.		

† See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.



Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	Wi-Fi Direct (Continued)	Device Information	Device Name	—	You can see the device name of your machine.	See ♣.
			SSID	—	Shows SSID of Group Owner. When the machine is not connected, Touchscreen shows Not Connected.	
			IP Address	—	You can see the current IP Address of your machine.	
		Status Information	Status	G/O Active (**) Client Active Not Connected Off ** = the number of devices	You can see the current Wi-Fi Direct™ network status.	
			Signal	Strong Medium Weak None	You can see the current Wi-Fi Direct™ network signal strength. When your machine acts as Group Owner, the Touchscreen always shows Strong.	
		I/F Enable	—	On <b>Off*</b>	Enable or Disable the Wi-Fi Direct™ connection.	
	NFC	—	—	On* Off	Enable or Disable the NFC function. For more information about the NFC function, see <i>How to print and scan with NFC (Near Field Communication)</i> on page 97.	—
<p>† See Software and Network User's Guide.</p> <p>♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <a href="http://solutions.brother.com/">http://solutions.brother.com/</a>.</p> <p>● Please go to the Brother Solutions Center to download Web Connect Guide at <a href="http://solutions.brother.com/">http://solutions.brother.com/</a>.</p> <p>The default settings are shown in Bold with an asterisk.</p>						

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded)	Mail Address	—	—	Enter the mail address. (Up to 60 characters)	See +.
		Setup Server	SMTP Server	Name (Up to 30 characters)	Enter the SMTP server address.	
				IP Address [000-255]. [000-255]. [000-255]. [000-255]		
				SMTP Port		
			Auth. for SMTP	None* SMTP-AUTH POP bef. SMTP	Selects the Security method for E-mail notification.	
			SMTP SSL/TLS	None* SSL TLS	Send or receive an E-mail via an E-mail server that requires secure SSL/TLS communication.	
			Verify SMTPCert.	On Off*	Verify the SMTP Server Certificate automatically.	
			POP3 Server	Name (Up to 30 characters)	Enter the POP3 server address.	
				IP Address [000-255]. [000-255]. [000-255]. [000-255]		
			POP3 Port	[00001-65535]	Enter the POP3 port number.	
Mailbox Name	—	Enter the mail box name. (Up to 60 characters)				
Mailbox Password	—	Enter the password to login to the POP3 server. (Up to 32 characters)				

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded) (Continued)	Setup Server (Continued)	POP3 SSL/TLS	None* SSL TLS	You can send or receive an E-mail via an E-mail server that requires secure SSL/TLS communication.	See +.
			Verify POP3Cert.	On Off*	Verify the POP3 Server Certificate automatically.	
			APOP	On Off*	Enables or disables APOP.	
		Setup Mail RX	Auto Polling	Auto Polling (Options) On* Off	Automatically checks the POP3 server for new messages.	
				(When On chosen) Poll Frequency (Options) 1Min 3Mins 5Mins 10Mins* 30Mins 60Mins	Sets the interval for checking for new messages on the POP3 server.	
			Header	All Subject+From+To None*	Selects the contents of the mail header to be printed.	
			Delete Error Mail	On* Off	Deletes error mails automatically.	
			Notification	On MDN Off*	Receives notification messages.	

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Level4	Options	Descriptions	Page		
Network (Continued)	E-mail/IFAX (Available after IFAX is downloaded) (Continued)	Setup Mail TX	Sender Subject	—	Displays the subject that is attached to the Internet Fax data.	See +.		
			Size Limit	On Off*	Limits the size of E-mail documents.			
			Notification	On Off*	Sends notification messages.			
		Setup Relay	Relay Broadcast	On Off*	Relays a document to another fax machine over the Internet.			
			Relay Domain	—	Registers the Domain name.			
			Relay Report	On Off*	Prints the Relay Broadcast Report.			
		Manual POP3 Receive	—	—	Accesses the POP3 server and confirms whether an e-mail has been received.			
		Web Connect Settings	Proxy Settings	Proxy Connection	On Off*		You can change the Web connection settings.	See ●.
				Address	—			
				Port	—			
	User Name			—				
	Password			—				
	Network I/F	—	—	Wired LAN* WLAN	You can choose the network connection type.	See +.		
Network Reset	—	—	Yes No	Restores all network settings back to the factory default.				

+ See Software and Network User's Guide.

♣ Please go to the Brother Solutions Center to download Wi-Fi Direct™ Guide at <http://solutions.brother.com/>.

● Please go to the Brother Solutions Center to download Web Connect Guide at <http://solutions.brother.com/>.

The default settings are shown in Bold with an asterisk.



## All Settings (continued)

Level1	Level2	Level3	Options	Descriptions	Page	
Print Reports	XMIT Verify	—	—	Prints these lists and reports.	See ◆.	
	Address Book	—	—			
	Fax Journal	—	—			
	User Settings	—	—			
	Network Configuration	—	—			
	WLAN Report	—	—			
	Caller ID history	—	—			
Machine Info.	Serial No.	—	—	Lets you check the serial number of your machine.	140	
	Firmware Version	Main Version	—	Lets you check the firmware version of your machine.	140	
Initial Setup	Date & Time	Date	—	Sets the date and time on the screen and in the headings of the faxes you send.	105	
		Time	—			
		Auto Daylight	On* Off	Automatically changes for Daylight Savings Time.		See ◆.
		Time Zone	—	Sets the time zone for your country.		See ‡.
	Station ID	Fax Name	—	Enter your name and fax number to appear on each page you fax.	139	
	Tone/Pulse	—	Tone* Pulse	Choose the dialling mode.		
	Dial Tone	—	Detection No Detection*	Turns Dial Tone Detection on or off.		
	Phone Line Set	—	Normal* PBX ISDN	Choose the telephone line type.	65	
	Compatibility	—	High* Normal Basic(for VoIP)	Adjusts the modem speed to help resolve transmission problems.	139	
◆ See Advanced User's Guide.						
‡ See Quick Setup Guide.						
The default settings are shown in Bold with an asterisk.						

Level1	Level2	Level3	Options	Descriptions	Page
Initial Setup (Continued)	Reset	<b>Machine Reset</b>	Yes No	You can reset all the machine's settings that you have changed, such as the date and time, telephone line type and Ring Delay.	140
		<b>Network</b>	Yes No	Resets the print server back to its factory default settings, such as the password and IP address information.	
		<b>Address Book &amp; Fax</b>	Yes No	Deletes all stored Address Book numbers and faxes, restores the Station ID, Address Book List, Transmission Verification Report and Fax Journal back to the factory default settings.	
		<b>All Settings</b>	Yes No	Resets all the machine's settings back to the factory default.	
<p>◆ See Advanced User's Guide.</p> <p>‡ See Quick Setup Guide.</p> <p>The default settings are shown in Bold with an asterisk.</p>					

# Feature tables



## Fax (When Fax Preview is Off.)

Level1	Level2	Level3	Options	Descriptions	Page
Address Book	 (Search:)	—	—	When LDAP is off, the search will be within the Local Address Book. When LDAP is on, the search will be within the Local Address Book and LDAP Server.	72
		<b>Detail</b> (This will appear only when LDAP is on.)	—	Displays detailed information about the selected address.	See †.
	<b>Edit</b>	—	Add New Address	Stores Address Book numbers, so you can dial by pressing <b>Address Book</b> on the Touchscreen (and <b>Apply</b> , then <b>Fax Start</b> ).	75
			Setup Groups	You can set up Group numbers for Broadcasting.	See ◆.
			Change	You can change Address Book numbers.	76
			Delete	You can delete Address Book numbers.	
	—	<b>Apply</b>	—	You can send a fax using the Address Book.	72
Call History	Outgoing Call	<b>Apply</b>	—	You can choose a number from the Outgoing Call history and then send a fax to it, add it to Address Book, or delete it.	73
		<b>Edit</b>	Add to Address Book Delete		
	Caller ID history	<b>Apply</b>	—	You can choose a number from the Caller ID history and then send a fax to it, add it to Address Book, or delete it.	74
		<b>Edit</b>	Add to Address Book Delete		
† See Software and Network User's Guide. ◆ See Advanced User's Guide. The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Options	Fax Resolution	—	<b>Standard*</b> Fine S.Fine Photo	Sets the resolution for outgoing faxes.	See ◆.
	2-sided Fax	—	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided fax scan mode.	
	Contrast	—	<b>Auto*</b> Light Dark	Changes the lightness or darkness of faxes you send.	
	Glass Scan Size	—	<b>A4*</b> A3 Letter Legal Ledger	Sets the glass scan size for faxes.	50
	Broadcasting	Add Number	Add Number	You can send the same fax message to more than one fax number.	See ◆.
			Add from Address book		
			Search in Address book		
	Preview	—	On <b>Off*</b>	You can preview a fax message before you send it.	51
	Colour Setting	—	<b>Mono*</b> Colour	Sets whether faxes are sent in monochrome or colour.	50
	Delayed Fax	Delayed Fax	On <b>Off*</b>	Sets the time of day in 24-hour format that the delayed faxes will be sent.	See ◆.
		Set Time	—		
	Batch TX	—	On <b>Off*</b>	Combines delayed faxes to the same fax number at the same time of day into one transmission.	
	Real Time TX	—	On <b>Off*</b>	You can send a fax without using the memory.	
Polled TX	—	Standard Secure <b>Off*</b>	Sets up the document on your machine to be retrieved by another fax machine.		

+ See Software and Network User's Guide.

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.



Level1	Level2	Level3	Options	Descriptions	Page
<b>Options</b> (Continued)	<b>Polling RX</b>	—	Standard Secure Timer <b>Off*</b>	Sets up your machine to poll another fax machine.	See <b>◆</b> .
	<b>Overseas Mode</b>	—	On <b>Off*</b>	If you are having difficulty sending faxes overseas, set this to On.	
	<b>Set New Default</b>	—	Yes No	You can save your fax settings.	
	<b>Factory Reset</b>	—	Yes No	You can restore all settings back to the factory default.	
<b>Save as Shortcut</b>	—	—	—	Saves the current settings as a shortcut.	
+ See Software and Network User's Guide.					
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					



### Fax (When Fax Preview is On.)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Sending Faxes</b>	(See <i>Fax (When Fax Preview is Off.)</i> on page 161.)				
<b>Received Faxes</b>	<b>Print/Delete</b>	<b>Print All (New Faxes)</b>	—	Prints the new received faxes.	60
		<b>Print All (Old Faxes)</b>	—	Prints the old received faxes.	
		<b>Delete All (New Faxes)</b>	—	Deletes the new received faxes.	60
		<b>Delete All (Old Faxes)</b>	—	Deletes the old received faxes.	
<b>Address Book</b>	(See <i>Address Book</i> in <i>Fax (When Fax Preview is Off.)</i> on page 161.)				
<b>Call History</b>	(See <i>Call History</i> in <i>Fax (When Fax Preview is Off.)</i> on page 161.)				
The default settings are shown in Bold with an asterisk.					




## Copy

Level1	Level2	Level3	Options	Descriptions	Page
Best Quality <b>Normal*</b> 2-sided(1-2) 2-sided(2-2) ADF High Speed A3 A4 → A3 2in1 (ID) 2in1 Poster Ink Save Book	—	—	—	You can choose the desired settings from the preset items.	77
<b>Options</b>	<b>ADF High Speed Mode</b>	—	On <b>Off*</b>	You can copy A4 or Letter documents faster by placing them long side edge first in the ADF.	80
	<b>Quality</b>	—	<b>Normal*</b> Best	Choose the Copy resolution for the next copy.	See ◆.
	<b>Paper Type</b>	—	<b>Plain Paper*</b> Inkjet Paper Brother BP71 Other Glossy Transparency (When Tray #2 is selected in Tray Select.)  Plain Paper	Choose the paper type that matches the paper in the tray.	79

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Paper Size	—	<b>A4*</b> A5 A3 10x15cm Letter Legal Ledger (When Tray #2 is selected in Tray Select.) <b>A4*</b> A3 Letter Legal Ledger	Choose the paper size that matches the paper in the tray.	79
	Tray Select	—	Tray #1 Tray #2 <b>Auto Tray Select*</b>	Choose the tray that will be used for Copy mode.	80
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

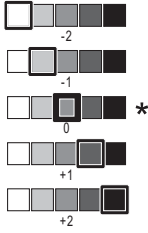Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	Enlarge/Reduce	100%*	—	—	See ◆.
		Enlarge	198% 10x15cm → A4 186% 10x15cm → Letter 141% A4→A3, A5→A4	You can choose the enlargement ratio for the next copy.	
		Reduce	97% Letter → A4 93% A4 → Letter 83% Legal → A4 69% A3 → A4, A4 → A5 47% A4 → 10x15cm	You can choose the reduction ratio for the next copy.	
		Fit to Page	—	Your machine will adjust the size of the next copy to the paper size you set.	
		Custom(25-400%)	—	You can choose the enlargement or reduction ratio for your type of document.	
	Density	—		Adjusts the density of copies.	
	Stack/Sort	—	Stack* Sort	You can choose to stack or sort multiple copies.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	<b>Page Layout</b>	<b>Off (1in1) *</b> 2in1 (Portrait) 2in1 (Landscape) 2in1 (ID) 4in1 (Portrait) 4in1 (Landscape) 1to2 Poster (2x1) Poster (2x2) Poster (3x3)	—	You can make N in 1, 2 in 1 ID, 1 to 2 or Poster copies.	See ◆.
	<b>Layout Format</b> (When you set Ledger or A3, and then choose 2 in 1 or Poster 2x2)	(When 2 in 1 is chosen.) Letterx2 → Ledgerx1 Ledgerx2 → Ledgerx1 A4x2 → A3x1 A3x2 → A3x1  (When Poster(2x2) is chosen) Letterx1 → Ledgerx4 Ledgerx1 → Ledgerx4 A4x1 → A3x4 A3x1 → A3x4	—		
	<b>Auto Deskew</b>	—	<b>Auto*</b> Off	If your scanned copy is skewed, your machine can correct the data automatically.	

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options	Descriptions	Page
Options (Continued)	2-sided Copy	<b>Off*</b>	—	You can choose the 2-sided print settings.	See <b>◆</b> .
		2-sided→2-sided	—		
		1-sided→2-sided Long Edge Flip	—		
		2-sided→1-sided Long Edge Flip	—		
		1-sided→2-sided Short Edge Flip	—		
		2-sided→1-sided Short Edge Flip	—		
		Advanced	<b>Normal*</b> 2-sided 1 2-sided 2		
	<b>Advanced Settings</b>	—	<b>Off*</b> Ink Save Mode Thin Paper Copy Book Copy Watermark Copy Remove Background Colour	You can choose various copy settings, such as Watermark Copy or Remove Background Colour.	
	<b>Save as Shortcut</b>	—	—	Saves the current settings as a shortcut.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					



## Scan

C

Level1	Level2	Level3	Options1	Descriptions	Page
to OCR (Available after Presto! PageManager is downloaded for Macintosh users. See <i>Accessing Brother Support (Macintosh)</i> on page 5.)	<b>PC Select</b>	Options	(For details, see the <i>Options</i> on page 171.)	Configure the detailed settings.	See +.
		Save as Shortcut	—	Saves the current settings as a shortcut.	
to File*	<b>PC Select</b>	Options	(For details, see the <i>Options</i> on page 172.)	Configure the detailed settings.	
		Save as Shortcut	—	Saves the current settings as a shortcut.	
to Image	<b>PC Select</b>	Options	(For details, see the <i>Options</i> on page 172.)	Configure the detailed settings.	
		Save as Shortcut	—	Saves the current settings as a shortcut.	
to Media (when a memory card or USB Flash drive is inserted)	—	Options	(For details, see the <i>Options</i> on page 173.)	Configure the detailed settings.	85
		Save as Shortcut	—	Saves the current settings as a shortcut.	See ◆.
to E-mail	<b>PC Select</b>	Options	(For details, see the <i>Options</i> on page 172.)	Configure the detailed settings.	See +.
		Save as Shortcut	—	Saves the current settings as a shortcut.	
to E-mail Server (Available after IFAX is downloaded)	<b>Address Book</b>	—	—	Choose the address of the recipient from the address book.	
	<b>Manual</b>	—	—	Manually enter the address of the recipient.	
	<b>OK</b>	Options	(For details, see the <i>Options</i> on page 175.)	Configure the detailed settings.	
		Save as Shortcut	—	Saves the current settings as a shortcut.	
	<b>Detail</b>	—	—	You can view the list of addresses you entered.	

+ See Software and Network User's Guide.

◆ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Level3	Options1	Descriptions	Page
<b>to FTP</b>	<b>Profile Name</b>	Options	(For details, see the <i>Options</i> on page 176.)	Configure the detailed settings.	See <b>+</b> .
		Save as Shortcut	—	Saves the current settings as a shortcut.	
<b>to Network</b>	<b>Profile Name</b>	Options	(For details, see the <i>Options</i> on page 176.)	Configure the detailed settings.	
		Save as Shortcut	—	Saves the current settings as a shortcut.	
<b>WS Scan</b> (Appears when you install a Web Services Scanner, which is displayed in your computer's Windows® Explorer.)	—	Scan	<b>PC Select</b>	You can scan data by using the Web Services protocol.	
		Scan for E-mail			
		Scan for Fax			
		Scan for Print			
<b>+</b> See Software and Network User's Guide. <b>◆</b> See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					



## Options (for to OCR)

Level1	Level2	Options1	Descriptions	Page
Options	<b>2-sided Scan</b>	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided scan mode.	See +.
	<b>Set with Touch Panel</b>	<b>Off (Set with Computer)*</b> On	If you want to use the Touchscreen to change the machine's settings, choose On.	
	The settings below will appear when On is selected in Set with Touch Panel.			
	<b>ADF High Speed Mode</b>	On <b>Off*</b>	You can scan A4 or Letter documents faster by placing them long side edge first in the ADF.	96
	<b>Scan Type</b>	Colour <b>Black and White*</b>	You can choose the scan type for your document.	See +.
	<b>Resolution</b>	100 dpi <b>200 dpi*</b> 300 dpi 600 dpi	You can choose the scan resolution for your document.	
	<b>File Type</b>	<b>Text*</b> HTML RTF	You can choose the file format for your document.	
	<b>Scan Size</b>	<b>A4*</b> A5 A3 10x15cm Business Card (90x60mm) Letter Legal Ledger	You can choose the scan size for your document.	
		<b>Skip Blank Page</b>	On <b>Off*</b>	When On is selected, blank pages are skipped.
+ See Software and Network User's Guide.				
The default settings are shown in Bold with an asterisk.				

## Options

(for to File, to Image Or to E-mail)

Level1	Level2	Options1	Descriptions	Page
Options	2-sided Scan	<b>Off*</b> 2-sided Scan: Long Edge  2-sided Scan: Short Edge	You can choose the 2-sided scan mode.	See +.
	Set with Touch Panel	<b>Off (Set with Computer)*</b>  On	If you want to use the Touchscreen to change the machine's settings, choose On.	
	The settings below will appear when On is selected in Set with Touch Panel.			
	ADF High Speed Mode	On <b>Off*</b>	You can scan A4 or Letter documents faster by placing them long side edge first in the ADF.	96
	Scan Type	<b>Colour*</b>  Black and White	You can choose the scan type for your document.	See +.
	Resolution	100 dpi <b>200 dpi*</b> 300 dpi 600 dpi	You can choose the scan resolution for your document.	
	File Type	(If you choose the Colour option in the Scan Type setting)  <b>PDF*</b>  JPEG  (If you choose the Mono option in the Scan Type setting)  <b>PDF*</b>  TIFF	You can choose the file format for your document.	
	Scan Size	<b>A4*</b>  A5  A3  10x15cm  Business Card (90x60mm)  Letter  Legal  Ledger	You can choose the scan size for your document.	
+ See Software and Network User's Guide.				
The default settings are shown in Bold with an asterisk.				

Level1	Level2	Options1	Descriptions	Page
Options (Continued)	<b>Skip Blank Page</b>	On <b>Off*</b>	When On is selected, blank pages are skipped.	See +.
	<b>Remove Background Colour</b>	<b>Off*</b> Low Medium High	Changes the amount of background colour that is removed.	
+ See Software and Network User's Guide.				
The default settings are shown in Bold with an asterisk.				

## Options (for to Media)

Level1	Level2	Options1	Descriptions	Page
Options	<b>ADF High Speed Mode</b>	On <b>Off*</b>	You can scan A4 or Letter documents faster by placing them long side edge first in the ADF.	96
	<b>2-sided Scan</b>	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided scan mode.	85
	<b>Scan Type</b>	<b>Colour*</b> Black and White	You can choose the scan type for your document.	
	<b>Resolution</b>	100 dpi <b>200 dpi*</b> 300 dpi 600 dpi Auto	You can choose the scan resolution for your document.	
	<b>File Type</b>	(If you choose the Colour option in the Scan Type setting) <b>PDF*</b> JPEG (If you choose the Mono option in the Scan Type setting) <b>PDF*</b> TIFF	You can choose the file format for your document.	
◆ See Advanced User's Guide.				
The default settings are shown in Bold with an asterisk.				

Level1	Level2	Options1	Descriptions	Page	
Options (Continued)	<b>Scan Size</b>	<b>A4*</b>	You can choose the scan size for your document.	85	
		A5			
		A3			
			10x15cm		
			Business Card (90x60mm)		
			Letter		
			Legal		
			Ledger		
	<b>Scan Long Paper</b>	On <b>Off*</b>	You can scan a long document using the ADF.		
	<b>File Name</b>	—	You can rename the file.		
	<b>Auto Crop</b>	On <b>Off*</b>	Scan multiple documents placed on the scanner glass to a memory card or USB Flash drive one at a time.	85 See ♦.	
	<b>Skip Blank Page</b>	On <b>Off*</b>	When On is selected, blank pages are skipped.	85	
	<b>Remove Background Colour</b>	<b>Off*</b> Low Medium High	Change the amount of background colour that is removed.	85	
	<b>Set New Default</b>	Yes No	You can save your scan settings as the default settings.	See ♦.	
	<b>Factory Reset</b>	Yes No	You can restore all settings to the original factory default settings.		
♦ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

## Options

(for to E-mail Server)

**NOTE**

It is available after IFAX is downloaded.

Level1	Level2	Options1	Descriptions	Page
Options	<b>ADF High Speed Mode</b>	On <b>Off*</b>	You can scan A4 or Letter documents faster by placing them long side edge first in the ADF.	96
	<b>2-sided Scan</b>	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided scan mode.	See +.
	<b>Scan Type</b>	<b>Colour*</b> Black and White	You can choose the scan type for your document.	
	<b>Resolution</b>	100 dpi <b>200 dpi*</b> 300 dpi 600 dpi Auto	You can choose the scan resolution for your document.	
	<b>File Type</b>	(If you choose the Colour option in the Scan Type setting) <b>PDF*</b> JPEG (If you choose the Mono option in the Scan Type setting) <b>PDF*</b> TIFF	You can choose the file format for your document.	
	<b>Scan Size</b>	<b>A4*</b> A5 A3 10x15cm Business Card (90x60mm) Letter Legal Ledger	You can choose the scan size for your document.	

+ See Software and Network User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Options1	Descriptions	Page
Options (Continued)	<b>Scan Long Paper</b>	On <b>Off*</b>	You can scan a long document using the ADF.	See +.
	<b>Set New Default</b>	Yes No	You can save your scan settings as the default settings.	
	<b>Factory Reset</b>	Yes No	You can restore all settings to the original factory default settings.	

+ See Software and Network User's Guide.

The default settings are shown in Bold with an asterisk.

## Options

(for to FTP or to Network)

Level1	Level2	Options1	Descriptions	Page
Options	<b>ADF High Speed Mode</b>	On <b>Off*</b>	You can scan A4 or Letter documents faster by placing them long side edge first in the ADF.	96
	<b>2-sided Scan</b>	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided scan mode.	See +.
	<b>Scan Type</b>	<b>Colour*</b> Black and White	You can choose the scan type for your document.	
	<b>Resolution</b>	100 dpi <b>200 dpi*</b> 300 dpi 600 dpi Auto	You can choose the scan resolution for your document.	
	<b>File Type</b>	(If you choose the Colour option in the Scan Type setting) <b>PDF*</b> JPEG (If you choose the Mono option in the Scan Type setting) <b>PDF*</b> TIFF	You can choose the file format for your document.	

+ See Software and Network User's Guide.

The default settings are shown in Bold with an asterisk.

Level1	Level2	Options1	Descriptions	Page
Options (Continued)	<b>Scan Size</b>	<b>A4*</b> A5 A3 10x15cm Business Card (90x60mm) Letter Legal Ledger	You can choose the scan size for your document.	See +.
	<b>Scan Long Paper</b>	On <b>Off*</b>	You can scan a long document using the ADF.	
	<b>File Name</b>	<b>BRNXXXXXXXXXXXXX*</b> Estimate Report Order sheet Contract sheet Check Receipt <Manual>	Choose preset file names. If you choose Manual, you can name the file as you like.	
	<b>Skip Blank Page</b>	On <b>Off*</b>	When On is selected, blank pages are skipped.	
	<b>Remove Background Colour</b>	<b>Off*</b> Low Medium High	Change the amount of background colour that is removed.	
	<b>User Name</b>	—	Enter the user name.	
+ See Software and Network User's Guide.				
The default settings are shown in Bold with an asterisk.				



## Photo (More screen)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Index Print</b>	<b>Print Index Sheet</b>	Print Settings	For details, see the <i>Print Settings</i> on page 182.	You can print a thumbnail page.	See ♦.
	<b>Print Photos Using Index No.</b>	Print Settings	For details, see the <i>Print Settings</i> on page 180.	You can print photos by choosing the index numbers.	
<b>View Photos*</b>	<b>OK</b>	Print Settings	For details, see the <i>Print Settings</i> on page 180.	You can adjust your photos with the options.	84
	<b>Print All</b>	—	—	You can print all photos in your memory card or USB Flash drive.	
<b>Enhance Photos</b>	<b>Enhance</b>	Auto Correct	Print Settings (For details, see the <i>Print Settings</i> on page 180.)	You can adjust your photos with these settings.	See ♦.
		Enhance Skin			
		Enhance Scenery			
		Remove Red-Eye			
		Night Scene			
		Fill Light			
		Whiteboard			
		Monochrome			
		Sepia			
		Auto Correct & Remove Red-Eye			
	<b>Crop</b>	Print Settings	For details, see the <i>Print Settings</i> on page 180.	You can crop your photo and print a part of the image.	
	<b>Enhance and Crop</b>	Auto Correct	Print Settings (For details, see the <i>Print Settings</i> on page 180.)	You can adjust and crop your photos with these settings.	
Enhance Skin					
Enhance Scenery					
Remove Red-Eye					
Night Scene					
Fill Light					
Whiteboard					
Monochrome					
Sepia					
Auto Correct & Remove Red-Eye					

♦ See Advanced User's Guide.


The default settings are shown in Bold with an asterisk.







Level1	Level2	Level3	Options	Descriptions	Page
<b>ID Photo Print</b>	<b>ID Photo Size</b>	25x36mm 35x45mm 36x51mm 45x45mm 45x55mm 35x48mm 50x70mm (2x2.75inch) 2x2inch	Print Settings (For more information, see the <i>Print Settings</i> on page 183.)	You can print ID photos for your resume, passport and so on.	See <b>◆</b> .
<b>Slide Show</b>	<b>Show Each Photo for</b>	<b>3Secs*</b> 10Secs 30Secs 1Min 5Mins	—	Sets the time each photo in the Slide Show is shown before the machine switches to the next photo.	
	<b>Effect</b>	<b>Off*</b> Slide In Fade In Zoom In	—	Sets the effect that is used when the machine switches to the next photo in the Slide Show.	
	<b>Start</b>	—	—	The machine starts a Slide Show of your photos.  You can choose a photo during the Slide Show and change the print settings. (For details, see the <i>Print Settings</i> on page 180.)	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

## Print Settings

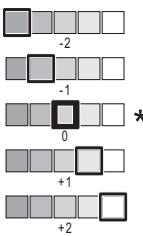(for View Photos, Print Photos Using Index No., Enhance Photos Or Slide Show)

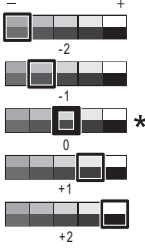Option1	Option2	Option3	Option4	Descriptions	Page
<b>Print Quality</b> (Not available for DPOF printing.)	Normal <b>Photo*</b>	—	—	Choose the print quality.	See ◆.
<b>Paper Type</b>	Plain Paper Inkjet Paper Brother BP71 <b>Other Glossy*</b>	—	—	Choose the paper type.	
<b>Paper Size</b>	<b>10x15cm*</b> 13x18cm A4 A3 Letter Ledger	—	—	Choose the paper size.	
(When Letter or A4 is chosen) <b>Print Size</b>	8x10cm 9x13cm 10x15cm 13x18cm 15x20cm <b>Max. Size*</b>	—	—	Choose the print size if you are using Letter or A4 size paper.	
<b>Auto Correct</b> (Does not appear when DPOF Print is chosen.) (View Photos and Slide Show only)	On <b>Off*</b>	—	—	The machine decides the appropriate effect for your photo.	
<b>Brightness</b> (Does not appear when Enhance or Enhance and Crop is chosen.)		—	—	Adjusts the brightness.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

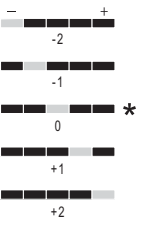Option1	Option2	Option3	Option4	Descriptions	Page
<b>Contrast</b> (Does not appear when Enhance or Enhance and Crop is chosen.)		—	—	Adjusts the contrast.	See ♦.
<b>Colour Enhance</b> (Does not appear when Enhance or Enhance and Crop is chosen.)	<b>On</b>  <b>Off*</b>	White Balance		Adjusts the hue of the white areas.	
		Sharpness		Enhances the detail of the image.	
		Colour Density		Adjusts the total amount of colour in the image.	
<b>Cropping</b>	<b>On*</b>  Off	—	—	Crops the image around the margin to fit the paper size or print size. Turn this feature off if you want to print whole images or prevent unwanted cropping.	
<b>Borderless</b>	<b>On*</b>  Off	—	—	Expands the printable area to fit the edges of the paper.	
<b>Date Print</b> (Not available for DPOF printing.)	<b>On</b>  <b>Off*</b>	—	—	Prints the date on your photo.	
<b>Set New Default</b>	Yes  No	—	—	Saves your print settings as the default settings.	
♦ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

Option1	Option2	Option3	Option4	Descriptions	Page
<b>Factory Reset</b>	Yes No	—	—	Restores all the settings back to the factory default.	See ◆.
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

## Print Settings

(for Print Index Sheet)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Paper Type</b>	<b>Plain Paper*</b> Inkjet Paper Brother BP71 Other Glossy	—	—	Choose the paper type.	See ◆.
<b>Paper Size</b>	Letter <b>A4*</b>	—	—	Choose the paper size.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

## Print Settings (for ID Photo Print)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Print Quality</b>	Normal <b>Photo*</b>	—	—	Choose the print quality.	See ◆.
<b>Paper Type</b>	Plain Paper Inkjet Paper Brother BP71 <b>Other Glossy*</b>	—	—	Choose the paper type.	
<b>Paper Size</b>	<b>10x15cm*</b> 13x18cm A4 Letter	—	—	Choose the paper size.	
<b>Photo Enhance</b>	<b>Off*</b> Auto Correct Remove Red-Eye Auto Correct & Remove Red-Eye	—	—	You can adjust your photos with these settings.	
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					


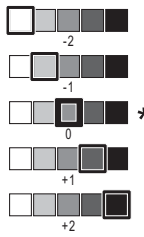




## Web (More screen)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Web</b>	Apps	—	—	Lets you connect the Brother machine to an Internet service.  Web services may have been added and/or service names may have been changed by the provider since this document was published.	See ●.
	SkyDrive®	—	—		
	Box	—	—		
	Google Drive™	—	—		
	Evernote®	—	—		
	Dropbox	—	—		
	Facebook	—	—		
	Picasa Web Albums™	—	—		
Flickr®	—	—	—		
● Please go to the Brother Solutions Center to download Web Connect Guide at <a href="http://solutions.brother.com/">http://solutions.brother.com/</a> .					
The default settings are shown in Bold with an asterisk.					



## A3 Copy Shortcuts (More screen)

Level1	Level2	Option1	Option2	Descriptions	Page
A3 2in1 <b>A3*</b> A4 → A3 A3 → A4 A4 + Note (L) A4 + Note (P) A4 + Grid A4 + Blank A4 Centre	<b>Options</b>	Quality	<b>Normal*</b> Best	Choose the Copy resolution for the next copy.	See  .
		Paper Type	Plain Paper	Displays the available paper type.	
		Paper Size	<b>A3*</b> Ledger (When A3 → A4 is chosen) <b>A4*</b> Letter	Sets the size of paper in the paper tray.	
		Tray Select	Auto Tray Select	Automatically chooses the tray that contains the most suitable paper.	
		Density		Adjusts the density of copies.	
		Auto Deskew	<b>Auto*</b> Off	If your scanned copy is skewed, your machine can correct the data automatically.	
 See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					

 (Shortcuts)

Level1	Level2	Level3	Options	Descriptions	Page
<b>Add Shortcut</b>	<b>Copy</b>	Normal	Move to Copy Options Screen.	You can choose your desired settings from the preset items.	14
		Best Quality			
		ADF High Speed			
		A3			
		2-sided(1-2)			
		2-sided(2-2)			
		A4 → A3			
		2in1 (ID)			
		2in1			
		Poster			
		Ink Save			
		Book			
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
Add Shortcut (Continued)	Fax (Options)	Fax Resolution	<b>Standard*</b> Fine S.Fine Photo	Sets the resolution for outgoing faxes.	15
		2-sided Fax	<b>Off*</b> 2-sided Scan: Long Edge 2-sided Scan: Short Edge	You can choose the 2-sided fax scan mode.	
		Contrast	<b>Auto*</b> Light Dark	Changes the lightness or darkness of faxes you send.	
		Glass Scan Size	<b>A4*</b> A3 Letter Legal Ledger	Adjusts the scan area of the scanner glass to the size of the document.	
		Broadcasting	Add Number (Options) Add Number Add from Address book Search in Address book	You can send the same fax message to more than one fax number.	
		Preview	On <b>Off*</b>	You can preview a fax message before you send it.	
		Colour Setting	<b>Mono*</b> Colour	Sets whether faxes are sent in monochrome or colour.	
		Real Time TX	On <b>Off*</b>	You can send a fax without using the memory.	
		Overseas Mode	On <b>Off*</b>	If you are having difficulty sending faxes overseas, set this to On.	

The default settings are shown in Bold with an asterisk.




Level1	Level2	Level3	Options	Descriptions	Page
<b>Add Shortcut</b> (Continued)	<b>Scan</b>	to File	PC Select	You can scan a monochrome or a colour document into your computer.	16
		to OCR	PC Select	You can have your text document converted to an editable text file.	
		to Image	PC Select	You can scan a colour picture into your graphics application.	
		to Media (Options)	ADF High Speed Mode 2-sided Scan Scan Type Resolution File Type Scan Size Scan Long Paper File Name Auto Crop Skip Blank Page Remove Background Colour	You can scan documents into a memory card or USB Flash drive.	
		to E-mail	PC Select	You can scan a monochrome or a colour document into your E-mail application.	
		to E-mail Server (Options)	ADF High Speed Mode 2-sided Scan Scan Type Resolution File Type Scan Size Scan Long Paper	You can scan a monochrome or a colour document into your E-mail Server.	
		to Network	<b>Profile Name</b>	You can send scanned data to a CIFS server on your local network or on the Internet.	
		to FTP	<b>Profile Name</b>	You can send scanned data via FTP.	
The default settings are shown in Bold with an asterisk.					

Level1	Level2	Level3	Options	Descriptions	Page
<b>Add Shortcut</b> (Continued)	<b>Web</b>	SkyDrive®	—	Lets you connect the Brother machine to an Internet service.  Web services may have been added and/or service names may have been changed by the provider since this document was published.	18
		Box	—		
		Google Drive™	—		
		Evernote®	—		
		Dropbox	—		
		Facebook	—		
		Picasa Web Albums™	—		
	Flickr®	—			
This list appears when each Shortcut name is pressed for 2 seconds.	<b>Edit Shortcut Name</b>	—	—	You can change the shortcut name.	19
	<b>Delete</b>	—	—	Deletes the shortcut.	19

The default settings are shown in Bold with an asterisk.



**(Ink)**

Level1	Level2	Level3	Options	Descriptions	Page
 <b>(Ink)</b>	<b>Test Print</b>	—	Print Quality Alignment	Lets you check the print quality or alignment.	103 104
	<b>Cleaning</b>	—	Black Colour All	Lets you clean the print head.	102
	<b>Ink Volume</b>	—	—	Lets you check the available ink volume.	See ♦.

♦ See Advanced User's Guide.

The default settings are shown in Bold with an asterisk.

**WiFi (Wi-Fi Setup)****NOTE**

After the Wi-Fi® is set up, you cannot change the settings from your Home screen. Change any settings for the Wi-Fi connection in the Settings screen.


Level1	Level2	Level3	Options	Descriptions	Page
<b>WiFi</b> <b>(Wi-Fi Setup)</b>	<b>Setup Wizard</b>	—	—	You can manually configure your print server for a wireless network.	See ‡.
	<b>Setup with PC</b>	—	—	You can configure the Wi-Fi settings using a PC.	
	<b>WPS/AOSS</b>	—	—	You can easily configure your wireless network settings using the one-button push method.	
	<b>WPS w/ PIN Code</b>	—	—	You can easily configure your wireless network settings using WPS with a PIN.	See †.
† See Software and Network User's Guide.					
‡ See Quick Setup Guide.					
The default settings are shown in Bold with an asterisk.					

**When using memory cards or a USB Flash drive in the correct slot**

Level1	Level2	Level3	Options	Descriptions	Page
<b>Photo</b>	(See <i>Photo (More screen)</i> on page 178.)				
<b>Scan to Media</b>	(See <i>to Media</i> on page 169.)				
<b>Web</b>	(See <i>Web (More screen)</i> on page 183.)				
<b>DPOF</b>	—	—	—	Displays the DPOF setting screen.	See ◆.
◆ See Advanced User's Guide.					
The default settings are shown in Bold with an asterisk.					


# Entering Text

When you need to enter text into the machine the keyboard will appear on the Touchscreen.


Press  to cycle between letters, numbers and special characters.



## NOTE

To change between lowercase or uppercase, press .



## Inserting spaces

To enter a space, press `Space`. Or, you can press  to move the cursor.

## NOTE

The characters that are available may differ depending on your country.

## Making corrections

If you entered an incorrect character and want to change it, press  to move the cursor to highlight the incorrect character, and then press . Enter the correct character. You can also use the cursor to go back and insert letters.

To erase all the characters, press  repeatedly.

## General

### NOTE

This chapter provides a summary of the machine's specifications. For additional specifications visit <http://www.brother.com/>.

<b>Printer Type</b>	Inkjet	
<b>Print Head</b>	Mono:	Piezo with 420 nozzles × 1
	Colour:	Piezo with 420 nozzles × 3
<b>Memory Capacity</b>	256 MB	
<b>LCD (Liquid Crystal Display)</b>	3.7 in. (93.4 mm) TFT Colour Touchscreen LCD <sup>1</sup> and Touchpanel	
<b>Power Source</b>	AC 220 to 240V 50/60Hz	
<b>Power Consumption <sup>2</sup></b>	Copying Mode:	Approx. 29 W <sup>3</sup>
	Ready Mode:	Approx. 5.5 W <sup>4</sup>
	Sleep Mode:	Approx. 1.5 W <sup>4</sup>
	Off:	Approx. 0.04 W <sup>4 5</sup>

<sup>1</sup> Measured diagonally.


<sup>2</sup> Measured when the machine is connected to the USB interface. Power consumption varies slightly depending on the usage environment or part wear.

<sup>3</sup> When using ADF, single-sided printing and scanning, resolution: standard / document: ISO/IEC 24712 printed pattern.

<sup>4</sup> Measured according to IEC 62301 Edition 2.0.

<sup>5</sup> Even when the machine is turned off, it will automatically turn itself on periodically for print head maintenance, and then turn itself off.

## Dimension

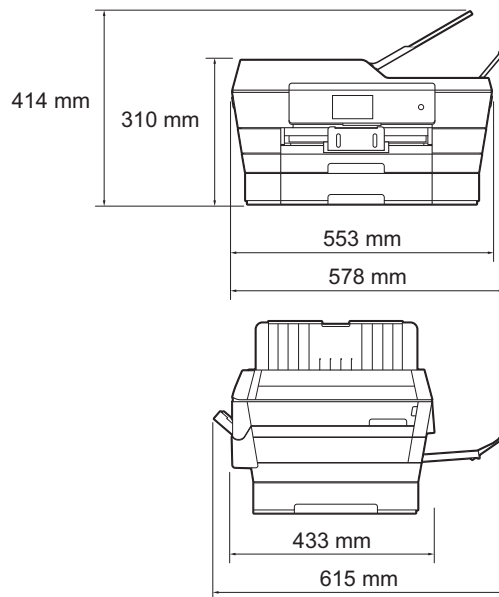

<b>Weight</b>	16.7 kg
<b>Noise Level</b>	<p><b>Sound Pressure</b></p> <p>Operating: LpAm = 50 dB(A) (Maximum) <sup>1</sup></p> <p><b>Sound Power</b> <sup>2 3</sup></p> <p>Copying <sup>4</sup>: LWAd = 6.33 B(A) (Mono) LWAd = 6.25 B(A) (Colour)</p> <p>Ready: LWAd = 3.01 B(A) (Mono/Colour)</p>
<b>Temperature</b>	<p>Operating: 10 to 35 °C</p> <p>Best Print Quality: 20 to 33 °C</p>
<b>Humidity</b>	<p>Operating: 20 to 80% (without condensation)</p> <p>Best Print Quality: 20 to 80% (without condensation)</p>
<b>ADF (automatic document feeder)</b>	<p>Up to 35 pages</p> <p>Paper: 80 g/m<sup>2</sup> A4 or Letter size</p>
<b>Document Size</b>	<p>ADF Width: 148 mm to 297 mm</p> <p>ADF Length: 148 mm to 431.8 mm</p> <p>Scanner Glass Width: Max. 297 mm</p> <p>Scanner Glass Length: Max. 431.8 mm</p>

<sup>1</sup> Noise depends on printing conditions.

<sup>2</sup> In accordance with ISO9296

<sup>3</sup> Office equipment with LWAd>6.30 B(A) is not suitable for use in room where people require high levels of concentration. Such equipment should be placed in separate rooms because of noise emissions.

<sup>4</sup> Copy speed: 14 cpm (Mono) / 11 cpm (Colour)  
These copy speeds were measured in the manner of 3.5.1 of RAL-UZ171.

# Print media

## Paper Input

### Paper Tray #1

- Paper type:  
Plain paper, inkjet paper (coated paper),  
glossy paper<sup>1</sup> and transparency<sup>1 2</sup>
- Paper size<sup>3</sup>:  
(Landscape)  
A4, Letter, Executive  
(Portrait)  
A3, Ledger, Legal, Folio, A5, A6, Envelopes (C5, Com-10, DL,  
Monarch), Photo (10 × 15 cm), Photo L (89 × 127 mm),  
Photo 2L (13 × 18 cm) and Index card (127 × 203 mm)  
Width: 89 mm - 297 mm  
Length: 127 mm - 431.8 mm  
For more details, see *Paper weight and thickness* on page 44.
- Maximum paper tray capacity:  
Approx. 250 sheets of 80 g/m<sup>2</sup> plain paper

### Paper Tray #2

- Paper type:  
Plain Paper
- Paper size:  
(Landscape)  
A4, Letter  
(Portrait)  
A3, Ledger, Legal  
Width: 210 mm - 297 mm  
Length: 279.4 mm - 431.8 mm  
For more details, see *Paper weight and thickness* on page 44.
- Maximum paper tray capacity:  
Approx. 250 sheets of 80 g/m<sup>2</sup> plain paper

<sup>1</sup> For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

<sup>2</sup> Use only transparency paper recommended for inkjet printing.

<sup>3</sup> See *Paper type and size for each operation* on page 42.

## Paper Input

(Continued)

## Manual Feed Slot

### ■ Paper type:

Plain paper, inkjet paper (coated paper), glossy paper<sup>1</sup>, transparency<sup>1 2</sup> and Envelopes

### ■ Paper size<sup>3</sup>:

(Landscape)

A4, Letter, Executive

(Portrait)

A3, Ledger, Legal, Folio, A5, A6, Envelopes (C5, Com-10, DL, Monarch), Photo (10 × 15 cm), Photo L (89 × 127 mm), Photo 2L (13 × 18 cm) and Index card (127 × 203 mm)

Width: 89 mm - 297 mm

Length: 127 mm - 431.8 mm

For more details, see *Paper weight and thickness* on page 44.

### ■ Maximum paper tray capacity:

1 sheet of special print media

## Paper Output

Up to 50 sheets of 80 g/m<sup>2</sup> plain paper (face up print delivery to the output paper tray)<sup>1</sup>

<sup>1</sup> For glossy paper or transparencies, remove printed pages from the output paper tray immediately after they exit the machine to avoid smudging.

<sup>2</sup> Use only transparency paper recommended for inkjet printing.

<sup>3</sup> See *Paper type and size for each operation* on page 42.



# Fax

<b>Compatibility</b>	ITU-T Super Group 3
<b>Modem Speed</b>	Automatic Fallback 33,600 bps
<b>Scanning Width</b> (Single-sided document)	288 mm (A3)
<b>Scanning Width and Length</b> (2-sided document)	Width: 288 mm (A3) (ADF) Length: 414 mm (A3) (ADF)
<b>Printing Width</b>	291 mm (A3)
<b>Greyscale</b>	Monochrome: 8 bit (256 levels) Colour: 24 bit (8 bit per colour/ 256 levels)
<b>Resolution</b>	Standard 203 × 98 dpi (Mono) 203 × 196 dpi (Colour) Fine 203 × 196 dpi (Mono/Colour) Superfine 203 × 392 dpi (Mono) Photo 203 × 196 dpi (Mono)
<b>Address Book</b>	100 names × 2 numbers or E-mail addresses <sup>1</sup>
<b>Groups</b>	Up to 6
<b>Broadcasting</b>	250 (200 Address Book/50 Manual Dial)
<b>Automatic Redial</b>	3 times at 5 minute intervals
<b>Memory Transmission</b>	Up to 200 <sup>2</sup> pages
<b>Out of Paper Reception</b>	Up to 200 <sup>2</sup> pages

<sup>1</sup> E-mail addresses are available after IFAX is downloaded.

<sup>2</sup> "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

# Copy

<b>Colour/Monochrome</b>	Yes/Yes
<b>Copy Width</b>	291 mm <sup>1</sup>
<b>Multiple Copies</b>	Stacks/Sorts up to 99 pages
<b>Enlarge/Reduce</b>	25% to 400% (in increments of 1%)
<b>Resolution</b>	Prints up to 1200 × 2400 dpi
<b>2-sided</b>	Yes
	■ Paper type: Plain paper
	■ Paper size: A4, Letter, Ledger, A3, Legal, A5

<sup>1</sup> When copying on A3 size paper.



# PictBridge

## Compatibility

Supports the Camera & Imaging Products Association PictBridge standard CIPA DC-001.

Visit <http://www.cipa.jp/pictbridge/> for more information.

## Interface

USB direct interface

# Scanner

<b>Colour/Monochrome</b>	Yes/Yes
<b>TWAIN Compliant</b>	Yes (Windows® XP <sup>1</sup> /Windows Vista®/Windows® 7/Windows® 8) (Mac OS X v10.6.8, 10.7.x, 10.8.x)
<b>WIA Compliant</b>	Yes (Windows® XP <sup>1</sup> /Windows Vista®/Windows® 7/Windows® 8)
<b>ICA Compliant</b>	Yes (Mac OS X v10.6.8, 10.7.x, 10.8.x)
<b>Colour Depth</b>	48 bit colour Processing (Input) 24 bit colour Processing (Output) / 256 levels per colour
<b>Greyscale</b>	16 bit colour Processing (Input) 8 bit colour Processing (Output) / 256 levels
<b>Resolution</b>	Up to 19200 × 19200 dpi (interpolated) <sup>2</sup> Up to 2400 × 2400 dpi (optical) (Scanner Glass) Up to 2400 × 1200 dpi (optical) (ADF)
<b>Scanning Width and Length</b> (Single-sided document)	Width: Up to 293 mm Length: Up to 427.8 mm
<b>Scanning Width and Length</b> (2-sided document)	Width: Up to 293 mm (ADF) Length: Up to 427.8 mm (ADF)

<sup>1</sup> Windows® XP in this User's Guide includes Windows® XP Home Edition, Windows® XP Professional, and Windows® XP Professional x64 Edition.

<sup>2</sup> Maximum 1200 × 1200 dpi scanning when using the WIA Driver for Windows® XP, Windows Vista®, Windows® 7 and Windows® 8 (resolution up to 19200 × 19200 dpi can be selected by using the Brother scanner utility).

# Printer

**Resolution**

Up to 1200 × 6000 dpi

**Printing Width <sup>3</sup>**

291 mm [297 mm (borderless) <sup>1</sup>]

**Borderless <sup>2</sup>**

A4, Letter, Ledger, A3, A6, Photo 10 × 15 cm,  
Photo L 89 × 127 mm, Photo 2L 13 × 18 cm, Index Card  
(127 × 203 mm)

**2-sided****■ Paper type:**

Plain paper

**■ Paper size:**

A4, Letter, A3, Ledger, Legal, Folio, A5, Executive

**Print Speed <sup>4</sup>**

<sup>1</sup> When the Borderless feature is set to On.

<sup>2</sup> See *Paper type and size for each operation* on page 42.

<sup>3</sup> When printing on A3 size paper.

<sup>4</sup> For detailed specifications visit <http://www.brother.com/>.

# Interfaces

<b>USB</b> <sup>1 2</sup>	A USB 2.0 interface cable that is no longer than 5 m.
<b>LAN cable</b> <sup>3</sup>	Ethernet UTP cable category 5 or greater.
<b>Wireless LAN</b>	IEEE 802.11b/g/n (Infrastructure/Ad-hoc Mode) IEEE 802.11g/n (Wi-Fi Direct™)
<b>NFC</b>	Yes

<sup>1</sup> Your machine has a Hi-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

<sup>2</sup> Third party USB ports are not supported.

<sup>3</sup> See *Network* on page 202.  
See *Software and Network User's Guide*.

# Network

## NOTE

---

For more information about the Network specifications, see Software and Network User's Guide.

---

You can connect your machine to a network for Network Printing, Network Scanning, PC Fax Send, PC Fax Receive (Windows® only), Remote Setup, and to access photos from PhotoCapture Center™<sup>1</sup>. Also included is the Brother BRAdmin Light<sup>2</sup> Network Management software.

<b>Wireless Network Security</b>	SSID (32 characters), WEP 64/128 bit, WPA-PSK (TKIP/AES), WPA2-PSK (AES)
<b>Wireless Setup Support Utility</b>	<b>AOSS™</b> Yes <b>WPS</b> Yes

<sup>1</sup> See *Computer requirements* on page 203.

<sup>2</sup> (Windows®) If you require more advanced printer management, use the latest Brother BRAdmin Professional utility version that is available as a download from <http://solutions.brother.com/>.  
(Macintosh) The latest Brother BRAdmin Light is available as a download from <http://solutions.brother.com/>.



# Computer requirements

SUPPORTED OPERATING SYSTEMS AND SOFTWARE FUNCTIONS								
Computer Platform & Operating System Version		PC Interface			Processor	Hard Disk Space to install		
		USB <sup>2</sup>	10/100 Base-TX (Ethernet)	Wireless 802.11b/g/n		For Drivers	For Applications (including Drivers)	
Windows® Operating System	Windows® XP Home <sup>1 4</sup>	Printing PC Fax <sup>3</sup> Scanning Removable Disk (USB or Memory card) <sup>5</sup> Network Media Access (LAN) <sup>5</sup>			32bit (x86) or 64bit (x64) processor	150 MB	1 GB	
	Windows® XP Professional <sup>1 4</sup>					500 MB	1.3 GB	
	Windows Vista® <sup>1 4</sup>							
	Windows® 7 <sup>1 4</sup> Windows® 8 <sup>1 4</sup>							650 MB
	Windows Server® 2003	N/A	Printing			64bit (x64) processor	50 MB	N/A
	Windows Server® 2003 R2							
	Windows Server® 2008							
	Windows Server® 2008 R2							
Windows Server® 2012								
Macintosh Operating System	Mac OS X v10.6.8 OS X v10.7.x OS X v10.8.x	Printing PC Fax (Send) <sup>3</sup> Scanning Removable Disk (USB or Memory card) <sup>5</sup> Network Media Access (LAN) <sup>5</sup>			Intel® Processor	80 MB	550 MB	

### Conditions:

- <sup>1</sup> For WIA, 1200 × 1200 resolution. Brother Scanner Utility enables to enhance up to 19200 × 19200 dpi.
- <sup>2</sup> Third party USB ports are not supported.
- <sup>3</sup> PC Fax supports black and white only.
- <sup>4</sup> PaperPort™ 12SE supports Windows® XP Home (SP3 or greater), XP Professional (SP3 or greater), XP Professional x64 Edition (SP2 or greater), Windows Vista® (SP2 or greater), Windows® 7 and Windows® 8.
- <sup>5</sup> Removable disk and Network Media Access are functions of PhotoCapture Center™.

For the latest driver updates, visit us at <http://solutions.brother.com/>.

All trademarks, brand and product names are the property of their respective companies.

# Consumable items

## Ink

The machine uses individual Black, Yellow, Cyan and Magenta ink cartridges that are separate from the print head assembly.

## Service Life of Ink Cartridge

The first time you install a set of ink cartridges the machine will use an amount of ink to fill the ink delivery tubes for high quality printouts. This process will only happen once. After this process is complete the cartridges provided with your machine will have a lower yield than regular capacity cartridges (65 %). With all following ink cartridges you can print the specified number of pages.

## Replacement Consumables

<Super High Yield Black> LC129XLBK  
<Super High Yield Yellow> LC125XLY  
<Super High Yield Cyan> LC125XLC  
<Super High Yield Magenta> LC125XLM

Black - Approximately 2,400 pages <sup>1</sup>

Yellow, Cyan and Magenta - Approximately 1,200 pages <sup>1</sup>

<High Yield Black> LC123BK  
<High Yield Yellow> LC123Y  
<High Yield Cyan> LC123C  
<High Yield Magenta> LC123M

Black, Yellow, Cyan and Magenta - Approximately 600 pages <sup>1</sup>

<sup>1</sup> Approx. cartridge yield is declared in accordance with ISO/IEC 24711.

For more information about the replacement consumables, visit us at <http://www.brother.com/pageyield/>.

## What is Innobella™?

Innobella™ is a range of genuine consumables offered by Brother. The name "Innobella™" derives from the words "Innovation" and "Bella" (meaning "Beautiful" in Italian) and is a representation of the "innovative" technology providing you with "beautiful" and "long lasting" print results.

When you print photo images, Brother recommends Innobella™ glossy photo paper (BP71 series) for high quality. Brilliant prints are made easier with Innobella™ Ink and paper.



## A

Address Book	
changing .....	76
deleting .....	76
Group dial	
changing .....	76
setting up .....	75
using .....	72
ADF (automatic document feeder) .....	45
Answering machine (TAD) .....	67
connecting .....	67
Apple Macintosh	
See Software and Network User's Guide.	
Automatic	
fax receive .....	53
Fax Detect .....	57

## B

Brother	
CreativeCenter .....	5

## C

Caller ID .....	64
Caller ID history .....	74
Add to Address Book .....	74
Delete .....	74
Send a fax .....	74
Cleaning	
print head .....	102
scanner .....	101
Connecting	
external TAD (answering machine) .....	67
external telephone .....	68
Consumable items .....	204
Control panel overview .....	6
ControlCenter	
See Software and Network User's Guide.	
Copy	
paper size .....	79
paper type .....	79
preset settings .....	77
Shortcuts .....	14
tray use .....	39
using scanner glass .....	46

Custom telephone features on a single line .....	135
--	-----

## D

Dialling	
a pause .....	75
Address Book .....	72
Caller ID history .....	74
manual .....	72
Outgoing Call .....	73
Document	
loading .....	45, 46

## E

Envelopes .....	27, 29, 35, 42, 44
Error messages on Touchscreen .....	108
B&W 1-sided Print Only .....	108
Cannot Detect .....	109
Cannot Print .....	109
Comm. Error .....	109
Cover is Open .....	109
Data Remaining in Memory .....	109
Document Jam/too Long .....	110
Ink Absorber Full .....	111
Ink Absorber NearFull .....	111
Ink Low .....	111
No Ink Cartridge .....	112
No Paper Fed .....	113
Out of Fax Memory .....	113
Out of Memory .....	114
Paper Jam .....	114
Unable to Clean .....	116
Unable to Initialize .....	116
Unable to Print .....	116
Unable to Scan .....	116
Wrong Paper .....	117
Wrong Tray Setting .....	117
Extension telephone, using .....	69, 70
External telephone, connecting .....	68

## F

---

- FAX (PC-FAX)
  - Windows®
    - sending ..... 61
- Fax codes
  - changing ..... 70
  - Remote Activation Code ..... 57, 69, 70
  - Remote Deactivation Code ..... 69, 70
  - using ..... 70
- Fax Detect ..... 57
- Fax, from PC
  - See Software and Network User's Guide.
- Fax, stand-alone
  - receiving ..... 53
    - difficulties ..... 132, 133
    - F/T Ring Time, setting ..... 56
    - Fax Detect ..... 57
    - Fax Preview ..... 58
    - from extension telephone ..... 69, 70
    - into PC ..... 62
    - Ring Delay, setting ..... 56
    - telephone line interference / VoIP .... 139
    - tray use ..... 40
  - sending ..... 48
    - change scanner glass size ..... 50
    - colour fax ..... 50
    - difficulties ..... 134
    - Fax Preview ..... 51
    - Shortcuts ..... 14, 15
    - telephone line interference / VoIP .... 139
    - Transmission Verification Report ..... 52
- Fax/Tel mode
  - answering at extension telephones ..... 69, 70
  - Remote Activation Code ..... 69, 70
  - Remote Deactivation Code ..... 69, 70
  - Ring Delay ..... 56

## G

---

- Greyscale ..... 195, 199

## H

---

- Help
  - Features tables ..... 161
  - Settings tables ..... 143
  - Touchscreen messages ..... 142

## I

---

- Ink cartridges
  - ink dot counter ..... 98
  - replacing ..... 98
- Innobella™ ..... 204

## J

---

- Jacks
  - EXT
    - External telephone ..... 68
- Jams
  - document ..... 119
  - paper ..... 121

## L

---

- LCD (Liquid Crystal Display) ..... 6, 142
  - Brightness ..... 21

## M

---

- Macintosh
  - See Software and Network User's Guide.
- Maintenance, routine
  - replacing ink cartridges ..... 98
- Manual
  - dialling ..... 72
  - receive ..... 53
- Manual feed slot ..... 35
- Multi-line connections (PBX) ..... 68

## N

---

- Network
  - Printing
    - See Software and Network User's Guide.
  - Scanning
    - See Software and Network User's Guide.
- NFC (Near Field Communication) ..... 97
  - printing ..... 97
  - scanning ..... 97
- Nuance™ PaperPort™ 12SE
  - See Software and Network User's Guide.
  - Also see Help in the PaperPort™ 12SE application.

## O

Outgoing Call	
Add to Address Book .....	73
Delete .....	73
Send a fax .....	73

## P

Paper .....	40, 193, 194
capacity .....	43
loading .....	22, 27, 30
loading envelopes .....	27
loading Photo and Photo L paper .....	27
printable area .....	38
size of document .....	45
type .....	39, 42
Photo and Photo L paper .....	27, 42, 43
PhotoCapture Center™ from PC	
See Software and Network User's Guide.	
MultiMedia Card .....	81
Preview photos .....	84
Scan to Media	
change file name .....	85
SD Memory Card .....	81
SDHC Memory Card .....	81
SDXC Memory Card .....	81
specifications .....	197
Presets for copying .....	77
Presto! PageManager	
See Software and Network User's Guide.	
Also see Help in the Presto! PageManager application.	
Print	
difficulties .....	127
paper jams .....	121
printable area .....	38
resolution .....	200
specifications .....	200
Printing	
See Software and Network User's Guide.	

## R

Ready screen .....	13
Receive Mode	
External TAD .....	53
Fax Only .....	53
Fax/Tel .....	53
Manual .....	53
Redial/Pause .....	73
Remote Setup	
See Software and Network User's Guide.	
Resolution	
copy .....	196
fax .....	195
print .....	200
scan .....	199
Ring Delay, setting .....	56

## S

Scan Shortcuts .....	14, 16
Scanning	
See Software and Network User's Guide.	
Serial Number	
how to find .....	See inside front cover
Shortcuts .....	14
adding .....	14, 15, 16, 18
changing .....	19
Shortcut name .....	19
Copy .....	14
deleting .....	19
Fax .....	15
recalling .....	19
Scan .....	16
Web .....	18
Sockets	
EXT	
External telephone .....	68
Step-by-step Settings Tables .....	142
Swiping .....	10

## T

---

TAD (telephone answering device), external .....	53, 67
connecting .....	67
Receive Mode .....	53
recording OGM .....	68
Telephone line	
connections .....	67
difficulties .....	132
interference / VoIP .....	139
multi-line (PBX) .....	68
type .....	65
Text, entering .....	190
Transferring your faxes or Fax Journal report .....	118
Transparencies ....	40, 41, 43, 44, 193, 194
Tray Select .....	80
Troubleshooting	
document jam .....	119
error messages on Touchscreen .....	108
if you are having difficulty	
copying .....	136
document jam .....	119
entering data .....	138
incoming calls .....	135
Network .....	137
paper handling .....	131
PhotoCapture Center™ .....	136
print quality .....	129
printing .....	127
printing received faxes .....	132
receiving faxes .....	133
scanning .....	136
software .....	137
telephone line or connections .....	132
maintenance messages on Touchscreen .....	108
paper jam .....	121

## U

---

Unscannable area .....	47
------------------------	----

## V

---

Volume, setting	
beeper .....	20
ring .....	20
speaker .....	21

## W

---

Web Shortcuts .....	14, 18
Windows®	
See Software and Network User's Guide.	
Wireless Network	
See Quick Setup Guide and Software and Network User's Guide.	

# brother®

**Visit us on the World Wide Web**  
**<http://www.brother.com/>**

This machine is approved for use in the country of purchase only. Local Brother companies or their dealers will only support machines purchased in their own countries.



[www.brotherearth.com](http://www.brotherearth.com)