



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Ezviz RS20 Pro](#) o cerca il tuo prodotto tra le [migliori offerte di Aspirapolvere e Pulitrici](#)



RS20 Pro

Robot Vacuum & Mop Combo



PRODUCT SAFETY PRECAUTIONS

ES



Before using this product, please read all the contents of this user manual carefully, install the device accordingly and save this manual for future reference properly. To lower the risk of fire, electric shock or other injuries, please observe the following operation requirements:

FR

IT

NL

- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

PL

GR

CZ

- For European, this appliance can be used by children aged 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision. Children should not play with the appliance.

PT

RO

HU

NO

- Please don't suction high-temperature substances (unextinguished cigarette butts, matches, hot ashes and etc.), superfine substances (like lime, cement, sawdust, gesso, ashes and toner), large sharp fragments (not physically definite matters like glass).

FI


DK

- No action needed to shift the product between 50 and 60Hz, product can adapt itself for both 50 and 60Hz.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When charging, please use the Base Station offered by EZVIZ.

SW

Robot Model	Base Station Model
CS-RS20-PRO-PGA2	CS-RS20-PRO-PGA2-D
CS-RS20-PRO-PGA5	CS-RS20-PRO-PGA5-D
CS-RS20-PRO-TGA2	CS-RS20-PRO-TGA2-D
CS-RS20-PRO-TGA5	CS-RS20-PRO-TGA5-D

- **WARNING:** To Reduce The Risk Of Electric Shock - Do not use outdoors or on wet surfaces, commercial or industrial environments.
- **WARNING:** To Reduce The Risk Of Electric Shock - Use indoors only.
- **WARNING:** To Reduce The Risk Of Electric Shock – Unplug Before Servicing.




- Do not look directly at the laser radar and the line laser when the device is working.
- The radar and line laser of this product comply with the Class 1 laser product standard IEC 60825-1, and will not produce dangerous laser radiation.
- **CAUTION:** Changing the function or performance of the optical module arbitrarily without complying with the provisions of this manual may lead to the danger of laser radiation.
- The Base Station can only charge lithium-ion batteries containing no more than 8 cells with a rated capacity of no more than 5200mAh.
- The Base Station can not be charged to non-rechargeable batteries.


PROPER USE OF THE DEVICE


- The device is only used for cleaning the floor of the home environment, and should not be used in outdoor environment (such as open balconies), non-ground environment (such as stairs), and industrial environment.
- Don't use the device in suspended environment (such as duplexes, open balconies and the top of furniture) without protective facilities.
- Children are not allowed to use the device as a toy. Please keep children and pets away from the device when using it. Don't put accessories such as side brush in the place where children can reach, so as to prevent children from eating by mistake. Don't place children and pets on the device body.
- Don't use the device in an environment with open fire or fragile objects.
- Don't use the device on waterlogged floors or wet ground.

- Don't use the device in an environment higher than 40°C or lower than 0°C. DE
- Don't use the device to clean any flammable materials (such as toner). Don't use the device in the area with flammable materials. ES
- Don't use the device to clean burning items, such as matches, cigarettes and other items that may cause fire. FR
- Don't use the product to absorb large stones, waste paper and other items that may block the product. When the suction port is please clean the product in time and remove the dust, cotton, hair, etc. at the suction port. IT
- Use only the accessories recommended or sold by the manufacturer. Don't use the batteries or Base Station of any third party, and don't use damaged batteries or Base Station. NL
- Dispose of used batteries in accordance with local laws and regulations. PL
- Don't burn the device under any circumstances, as the battery may cause explosion. GR
- If the rear surface of the robot is too dusty, it will affect the recharge of the robot. It is recommended to clean it regularly or as needed. It is also recommended to use a paper towel or soft dry cloth to clean it. CZ
- If the surface of the edge sensor on the side of the Robot is contaminated with lots of dust, it will affect the posture and mapping positioning effect of the Robot when walking along the wall. It is recommended to clean it regularly or as needed. Since the sensor is located inside the body, it is recommended to use the air blowing tool/ paper towel/soft dry cloth for cleaning the camera to wipe the sensor. Don't put your fingers on the sensor. RO
- The bottom of the Robot is easy to be contaminated with lots of dust, so it is recommended to clean it regularly or as needed. HU
- Please use the device according to the instructions in the manual. Any loss and injury caused by improper use shall be borne by the user. NO
- Please don't touch the plug or any electrified part of the product with your wet hands in case of electric shock hazard. FI
- If you will not use the product for a long time, please turn off the power and unplug the charging plug. DK

Regulatory Information

 This product and - if applicable - the supplied accessories too are marked with “CE” and comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the ErP Directive 2009/125/EC, the RoHS Directive 2011/65/EU.

 Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points.

 This symbol means: This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point.

DECLARATION OF CONFORMITY





Hereby, Hangzhou EZVIZ Software Co., Ltd. declares that the radio equipment type [CS-RS20-PRO-PGA2, CS-RS20-PRO-PGA5, CS-RS20-PRO-TGA2, CS-RS20-PRO-TGA5] is in compliance with EU Directive 2014/53/EU and UK Radio Equipment Regulations 2017. The full text of the EU and UK declaration of conformity is available at the following web link: <https://www.ezviz.com/page/declaration-of-conformity>.

EXPOSURE TO RADIOFREQUENCY RF

The frequency bands and the nominal limits of transmitted power (radiated and/or conducted) applicable to this radio device are the following:

Band	Wi-Fi 2.4 GHz
Frequency	Form 2.4G to 2.4835 GHz
Power transmission [EIRP]	≤100 mW

Technical Parameters

	Direct current
	Alternating current
	For indoor use.
	Before charging, read the instructions.

Robot	
Model	CS-RS20-PRO-PGA2 CS-RS20-PRO-PGA5 CS-RS20-PRO-TGA2 CS-RS20-PRO-TGA5
Overall Dimension	365mm * 365mm * 101mm
Battery Capacity	5200 mAh
Weight	Approx 4.1Kg
Battery Rated Voltage	14.4V ---
Rated Input	20V ---
Rated Power	65W

Base Station		
Model	CS-RS20-PRO-PGA2-D	DE
	CS-RS20-PRO-PGA5-D	
	CS-RS20-PRO-TGA2-D	ES
	CS-RS20-PRO-TGA5-D	
Rated Input Voltage	220-240V~50/60Hz	
Rated Output	20V --- 2.5A	FR
Rated Power	60 W (in charging/mop drying state);	
	965 W(in collecting dust state);	IT
	1265 W(in cleaning with hot water state)	
Dimensions	481mm * 452mm * 529mm	NL

PL

GR

CZ

PT

RO

HU

NO

FI

DK

SW

COPYRIGHT © Hangzhou EZVIZ Software Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou EZVIZ Software Co., Ltd. (hereinafter referred to as “EZVIZ”). This user manual (hereinafter referred to as “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of EZVIZ. Unless otherwise stipulated, EZVIZ does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.


About this Manual

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the EZVIZ™ website (<http://www.ezviz.com>).

Revision Record

New release – January 2024

Trademarks Acknowledgement

EZVIZ™, ™, and other EZVIZ's trademarks and logos are the properties of EZVIZ in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND EZVIZ MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL EZVIZ, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF EZVIZ HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL EZVIZ'S TOTAL LIABILITY FOR ALL DAMAGES EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT.

EZVIZ DOES NOT UNDERTAKE ANY LIABILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE AS THE RESULT OF PRODUCT INTERRUPTION OR SERVICE TERMINATION CAUSED BY: A) IMPROPER INSTALLATION OR USAGE OTHER THAN AS REQUESTED; B) THE PROTECTION OF NATIONAL OR PUBLIC INTERESTS; C) FORCE MAJEURE; D) YOURSELF OR THE THIRD PARTY, INCLUDING WITHOUT LIMITATION, USING ANY THIRD PARTY'S PRODUCTS, SOFTWARE, APPLICATIONS, AND AMONG OTHERS.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. EZVIZ SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, EZVIZ WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS AND DATA PROTECTION LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. EZVIZ SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THE ABOVE AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Table of Contents

	DE	
Overview		8
Package Contents	ES	8
Basis	FR	8
Quick Start Guide		13
Preparation	IT	13
Connect the Power Supply to the Base Station	NL	13
Add Clean Water	NL	14
Install Cleaning Solution	PL	14
Remove Shields	PL	15
Install Side Brush and Mop Assembly	GR	16
Get the EZVIZ App	GR	16
Add the Robot to EZVIZ App	CZ	16
Place the Robot	CZ	17
First Cleaning	PT	17
Operations on the EZVIZ App		19
Routine Maintenance	RO	19
Replace Mop Cloth	HU	21
Dump the Dust Box	NO	21
Clean/replace Filter	NO	23
Clean the Main Brush	FI	23
Clean Wheels	FI	24
Clean Important Parts	DK	24
Clean Clean Water Tank/Waste Water Tank	DK	26
Replace Cleaning Solution	SW	26
Replace Dust Bag	SW	27
Replace the Side Brush		27
Clean the Base Station		27
Clean Inlet Air Filter		28
Clean Dust Collection Duct		28
FAQ		29
Appendix		31
Environmental Precautions		31
Rechargeable Lithium ion Battery		32
INFORMATION FOR PRIVATE HOUSEHOLDS		32

Overview


Package Contents



Robot Vacuum & Mop Cleaner *1
(hereinafter referred as to "Robot")



Base Station *1

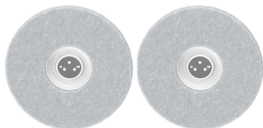

Mop Assembly*2 (Mop cloth included)



Power Cord *1



Side Brush *2



Camera Sticker x1



Cleaning Solution *1



Cleaning Tool *1




Quick Start Guide *2



Regulatory Information *1

 The device's appearance is subject to the actual one you have bought.

Basis
Robot

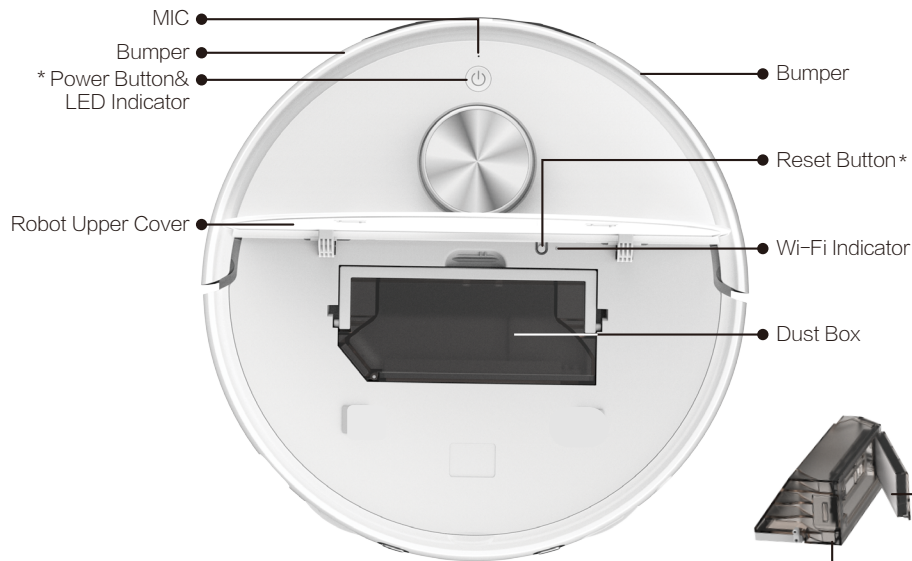

DE

ES

FR

IT

NL

PL

GR





CZ

PT



RO

HU


Power Button		NO
Press and hold for 4s:	Turn on/off the Robot	
Press once:	Start/pause the task	FI
Press twice:	End the task and back to the Base Station	
Press three times:	Enable/disable child lock (please enable child lock feature on EZVIZ app firstly)	DK

LED Indicator		SW
	Orange	In standby mode due to low battery/ task paused
	Red	Fault or exceptions, please check the notification on EZVIZ app
	Blue	In patrol inspection/ remote video
	White	Working properly

Reset Button	
Press and hold for 4s	Enter network configuration status
Press and hold for 10s	Restore to factory settings and restart the Robot

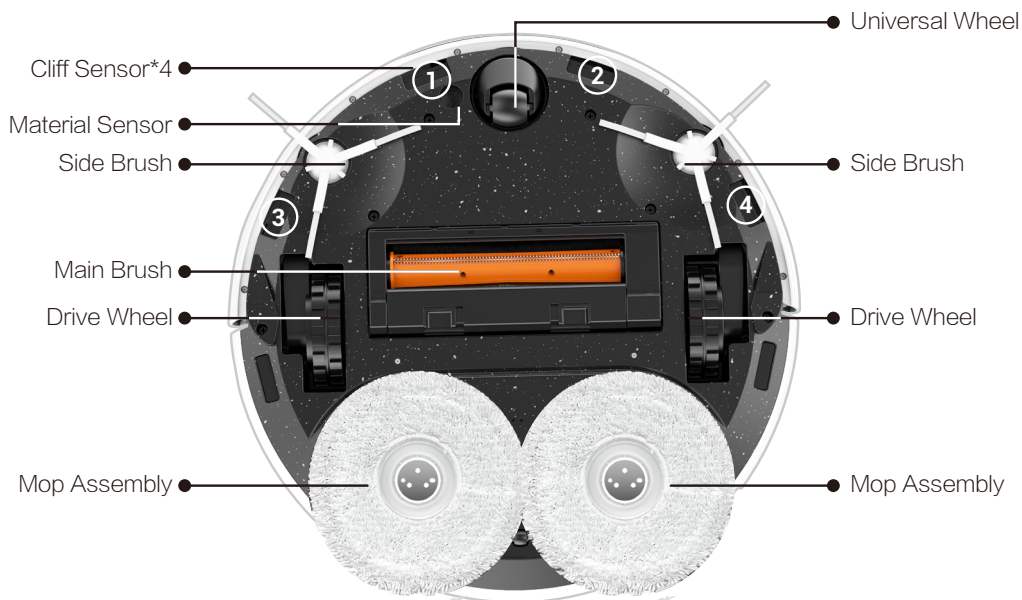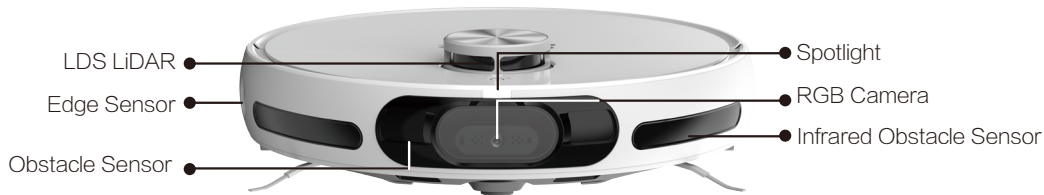

Base Station

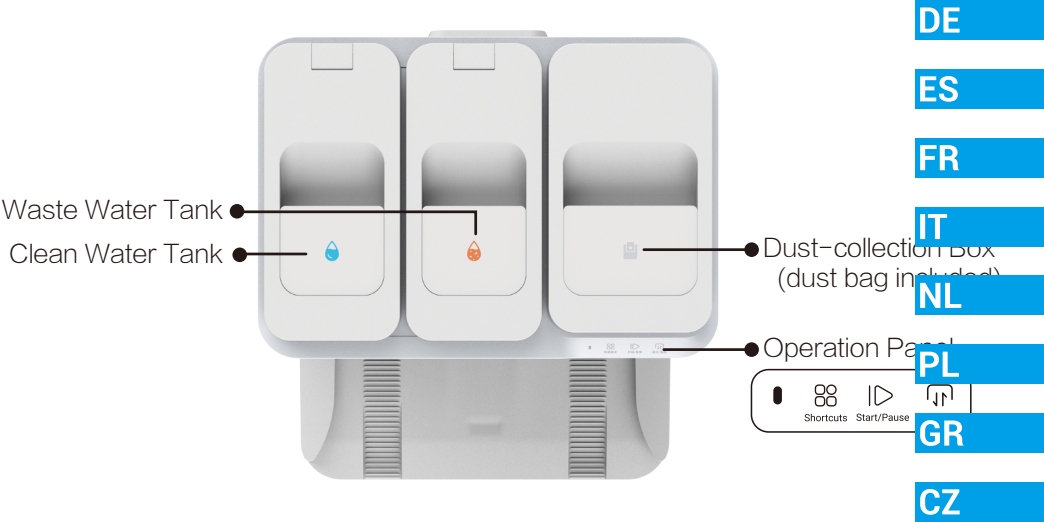


Operation Panel

	Shotcuts		Start/Pause
The corresponding shortcut instructions can be executed through 3 operations (press once, press twice, press and hold for 3s). (Please bind shortcut instructions on EZVIZ app firstly)		Press once: Start/pause task Press and hold for 3s: end the task	
	Exit/Recall		Child Lock
Press once: Robot exit/return Base Station Press and hold for 3s: Start cleaning the cleaning sink of the Base Station, the water sprayed after the Robot exits the Base Station. Press and hold for 3s again: The Base Station extract waste water.		Press and hold for 3s: enable/disenable (Please enable child lock feature on EZVIZ app firstly)	

Indicator on Base Station


	Orange	Slightly exceptions
	Red	Exceptions, please check the notification on EZVIZ app
	White	Working properly

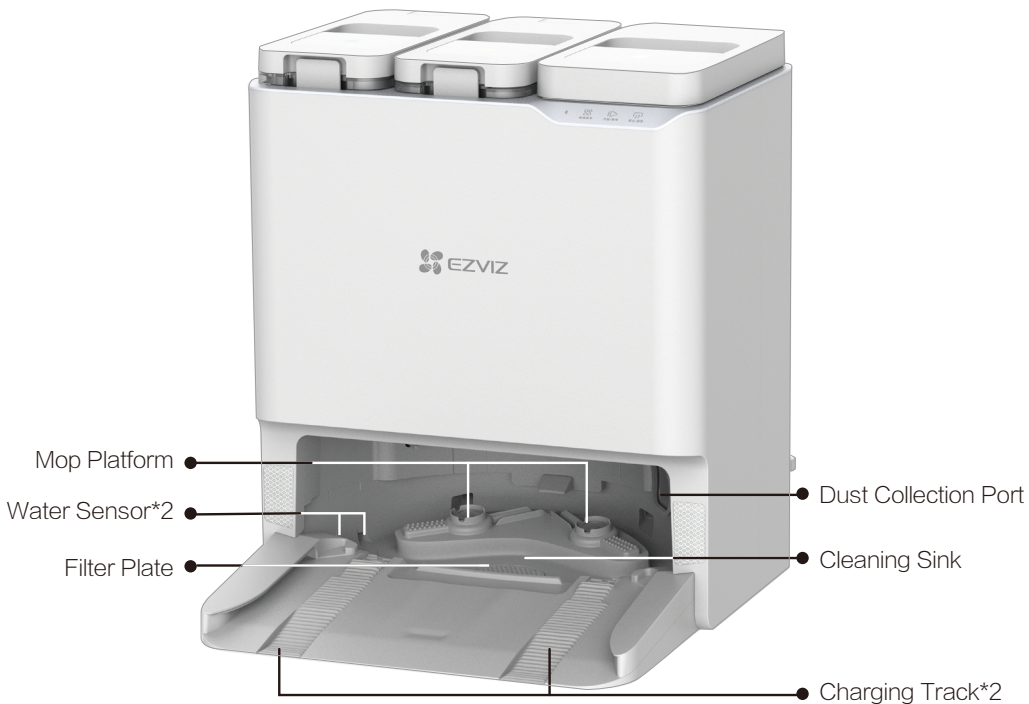

Quick Start Guide

Preparation

Try to avoid using in the environment with stairs (if must, please set up a guardrail), and try to remove the obstacles on the ground before use.

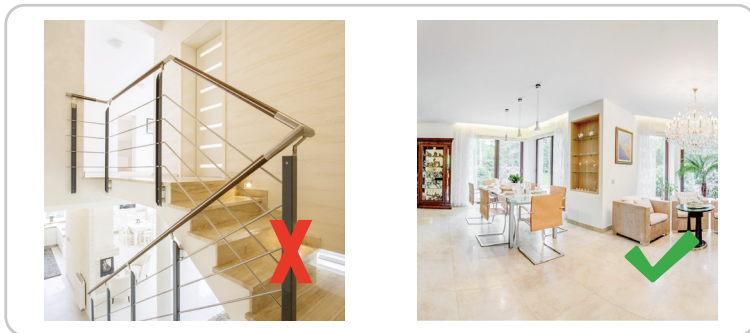

Connect the Power Supply to the Base Station

Select a proper location, place the Base Station on a horizontal floor against the wall, connect the Base Station and the power socket with the power cord, and the Base Station will start automatically (it is recommended to place the Base Station on a flat light colored tile floor instead of a carpet or wooden floor).



- In order to avoid external heat damage to the Base Station, please do not place it next to radiators, heaters, fireplaces, etc.
- For a normal charging process, please do not place the Base Station in environments subjected to direct sunlight, rain, snow or humidity, otherwise the Robot may not back to the Base Station.

DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO

FI

DK

SW

Add Clean Water

Remove the protective bags of the clean water tank and the waste water tank, fill the clean water tank with clean water, and then install them back.

- Do not fill hot water, otherwise the device may be damaged.
- It is recommended to add tap water in room temperature, please do not add the water filtered by water purifier.
- If you need to use cleaning solution, please use EZVIZ specialized cleaning solution. Other cleaning solution may damage the device.
- Please not the water can not exceed the max water level line.




Install Cleaning Solution

1. Remove the protective film and the seal on top of the cleaning solution bottle.



2. Take the waste water tank out, and then install the cleaning solution bottle according to the following illustration.
3. After installation, put the waste water tank into place.

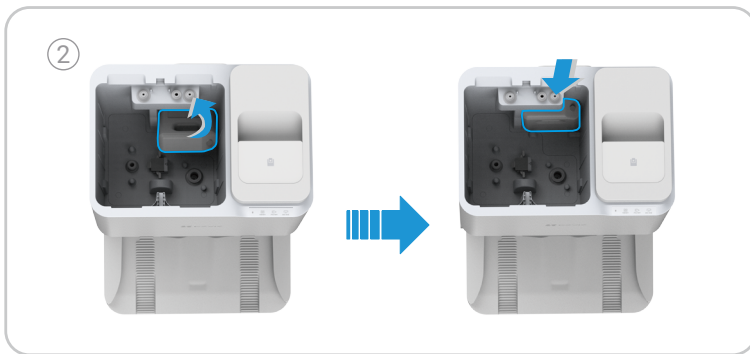

- Please press the cleaning solution bottle into the place when installation.
- Do not use other sterilization solution or cleaning solution not produced by EZVIZ, otherwise the device may be damaged.

Remove Shields

Before use, remove the shields on both sides of the Front Bumper and all protective films on both of the Robot and the Base Station.



DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO


FI

DK

SW


Install Side Brush and Mop Assembly

1. Align the side brushes with the point as shown in the figure and press them down. Hearing a “click” indicates that they are installed in place.
2. Align the mop assembly with the magnetic point.

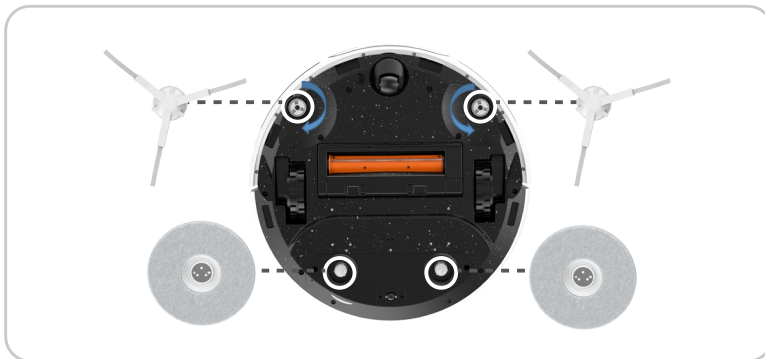

Get the EZVIZ App

1. Connect your mobile phone to Wi-Fi (only 2.4 GHz WiFi is supported).
2. Download and install the EZVIZ App by searching for “EZVIZ” in the App Store or Google Play™.
3. Launch the App and register an EZVIZ user account.

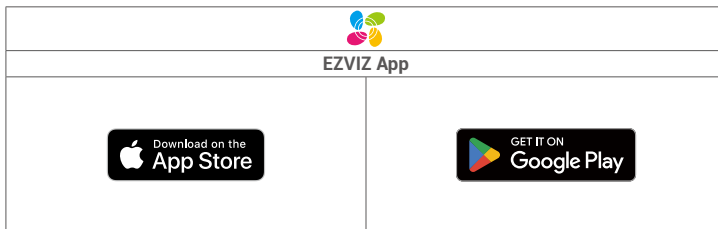


- 1. If you have already used the App, please make sure that it is the latest version. To find out if an update is available, go to the App store or Google Play™ and search for “EZVIZ”.
- The actual process may vary due to ongoing App updates. Follow the instructions provided in the App.


Add the Robot to EZVIZ App

1. Log in to your account through EZVIZ App, tap the device adding icon and then the QR code scanning interface will be displayed.
2. Press and hold the power button of the robot for 4 seconds until it starts.
3. Open the upper cover of the robot, scan the QR code on the robot body, and complete the network configuration and addition of the robot according to the interface prompts.

- i** If Wi-Fi connection failed, or you want to connect the robot to another Wi-Fi, you need to press and hold the reset button for 4 seconds, and then the robot will be restarted and you can add the robot to EZVIZ App again.

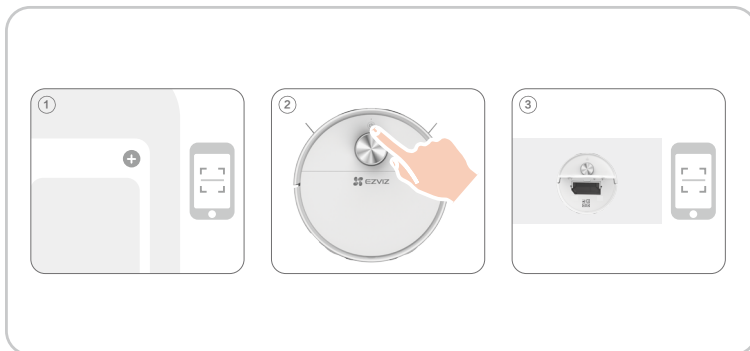

Place the Robot

Place the Robot in front of the Base Station, and then press  on the operation panel. The Robot will enter the Base Station and start charging.

- i** It is recommended to place the Robot within 50 cm in front of the Base Station to avoid recharging failure.



DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO


FI


DK


SW


First Cleaning

You have three ways to operate:


1. Press  button on the Base Station to work.

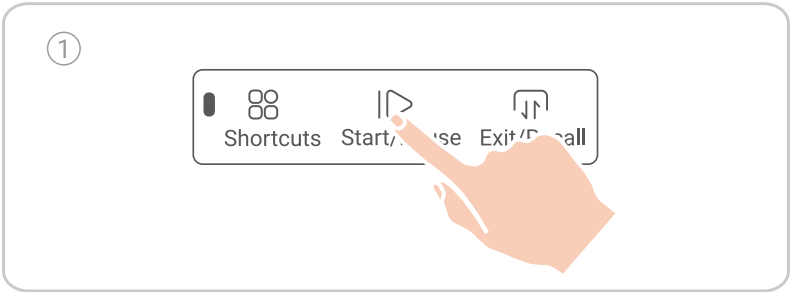

2. Log in to your account through EZVIZ App, add device and select the cleaning mode on the home page of the device on the App, and click  .

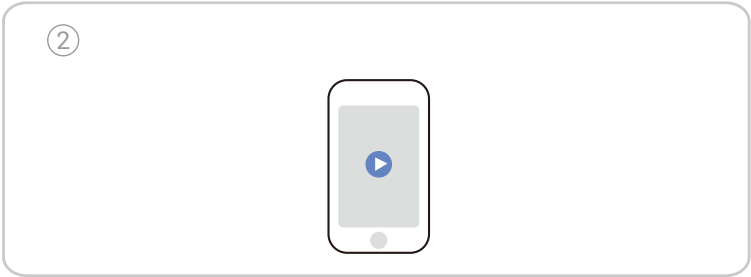

3. Press the button on the Robot to work.

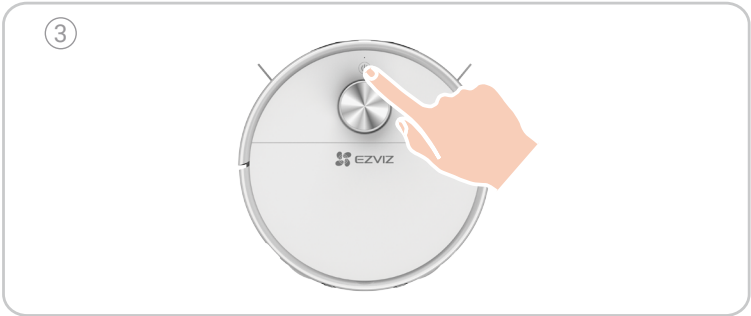

Operations on the EZVIZ App

i The App interface may be different due to version update, and the interface of the App you installed on your phone shall prevail.

Map for Cleaning

Map editing (area dividing, area merging, area building, room naming, no-go zone, invisible wall, rotate, threshold, carpet display, real-time cleaning route display and multi-map saving).

Cleaning Method

General cleaning, customized cleaning, designated room cleaning and area cleaning.

Cleaning Settings

Suction setting, water volume setting, cleaning sequence setting, carpet boost, supplementary sweeping for carpet cleaning for main brush.

Surveillance Feature

Scheduled patrol inspection, fixed-point movement, snapshot/record in patrol inspection, voice intercom.

Information Display

Cleaning history, patrol inspection history, Robot power, consumables and maintenance.

More Features

Firmware upgrade, volume adjustment, scheduled cleaning, Do Not Disturb mode, night vision light compensation and etc.


Routine Maintenance

To maintain the best condition of the device, please maintain the device and replace parts with following frequency.

Robot Part	Maintenance Frequency	Replacement Frequency
Mop Cloth	/	Every 2-3 months
Side Brush	Once every 2 weeks	Every 3-6 months
Main Brush	Once per week	Every 6-12 months
Dust Bag	/	Every 3-4 months
Sponge Filter/ High Efficiency Filter	Once per week	Every 3-6 months
LDS Lidar RGB Camera Edge Sensor Obstacle Sensor Cliff Sensor Infrared Receiving Terminal Bumper Charging Contact Universal Wheel/Drive Wheel	Once per week	/
Cleaning Sink	Once every 2 weeks	/
Clean Water Tank	Once every 3 months	/
Waste Water Tank	After each mopping	/
Base Station	Once every 2 weeks	/

- i** Before performing cleaning and maintenance tasks on the Robot, turn the Robot OFF and unplug the Base Station.
- A multi-function Cleaning Tool is provided for easy maintenance. Handle with care, this Cleaning Tool has sharp edges.
- EZVIZ manufactures various replacement parts and fittings. Please visit www.ezviz.com for more information on replacement parts.

Replace Mop Cloth


Press  button on operation panel of the Base Station, the Robot exits the Base Station.




Turn the Robot over, take off the mop assembly off.



Remove the old mop cloth from the mop assembly and replace a new one, and then put the mop assembly back to the Robot.

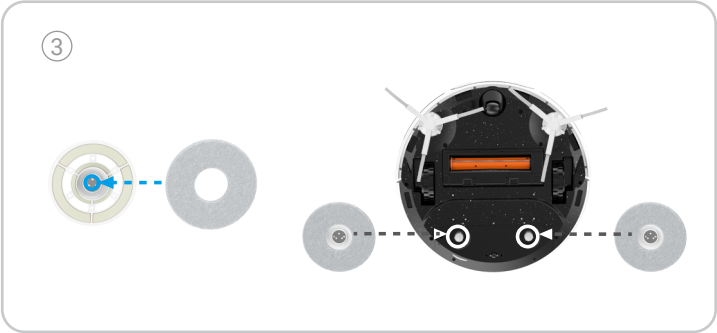


Press  button on operation panel of the Base Station again, the Robot returns to the Base Station.



Dump the Dust Box



Unfasten the buckle on the side of the dust box, open the dust box cover and pour out the garbage inside of it.

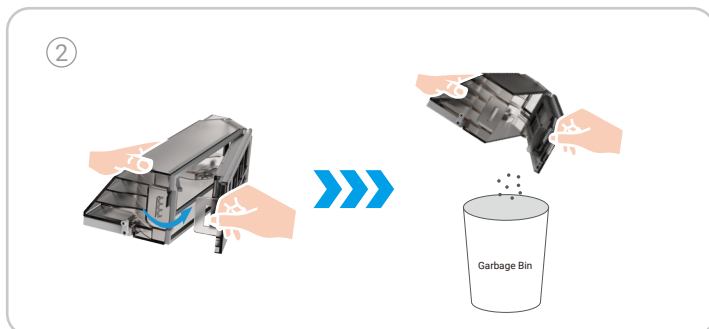

DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO

FI


DK

SW



- ① • Please make sure that the Dust Box and Filter is properly installed onto the Robot before cleaning mission.
- Do not schedule a cleaning mission if the dust box or filter is not properly installed.


Clean/replace Filter


Press  button on operation panel of the Base Station, the Robot exits the Base Station.

Open the upper cover of the Robot, take the dust box out and take off the filter assembly.



Slightly pat the filter assembly or use the cleaning tool to clean the filter, and then rinse with water and thoroughly air dry it.

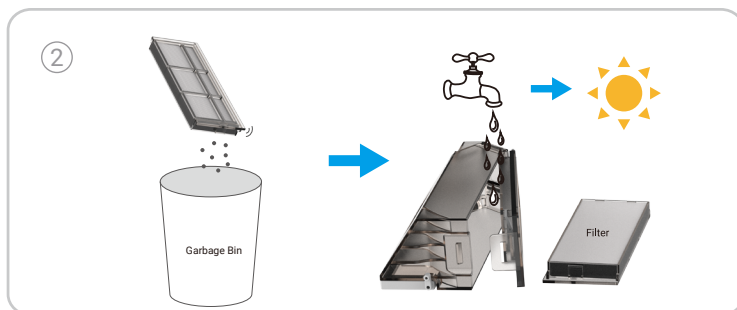

Install it back to the dust box, and then put it into the Robot. Close the upper cover and press  button on operation panel of the Base Station, the Robot returns to the Base Station.

If the filter is required to be replaced, please take it out from the dust box and replace a new one into it.



DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO


FI

DK


SW

Clean the Main Brush

Press the buckles to take out the Main Brush cover and the Main Brush.

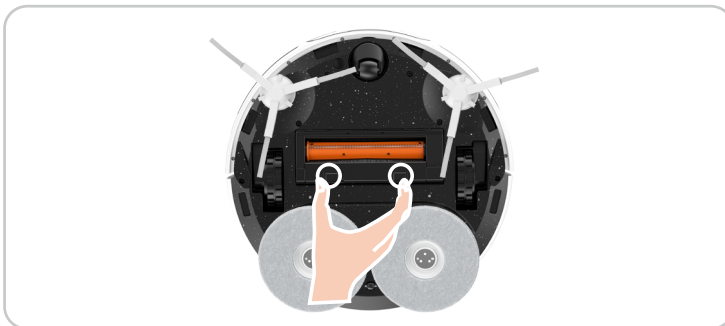


Press the button on the end of the cleaning tool and rotate it to take the blade inside of it. Use the blade to cut off the hair entangled on the Main Brush and remove the roller at one end of the Main Brush to clean it, and then re-install the Main Brush into place.

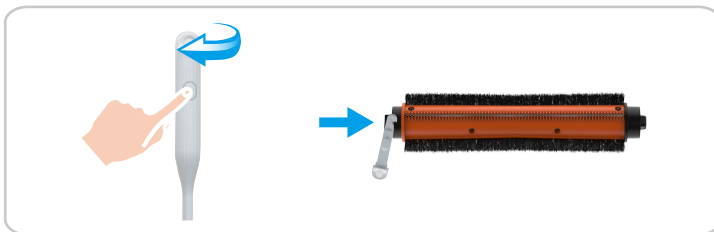

Clean Wheels

Pull up the Universal Wheel directly by hand then clean it with the hidden Cleaning Tool and then re-install it into place.

- i If there is abnormal sounds happened after a long time using, please take the universal wheel off and add lubricant into the metal shaft.

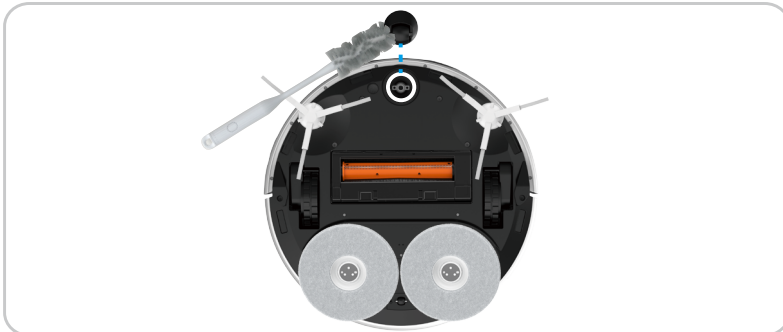

Clean the Driven Wheels with the hidden Cleaning Tool.



Clean Important Parts

Wipe and clean the cliff sensors, material sensor, charging contacts, RGB camera, obstacle sensors, edge sensor and infrared receiving terminal with soft dry cloth.



DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO

FI

DK

SW

Clean Clean Water Tank/Waste Water Tank

Open the cover, unfasten the buckle, take the filter upwards out to clean it.




Pour out the sewage, and use cleaning tool to remove the dirt in the waste water tank.




Replace Cleaning Solution

1. Take the waste water tank out, remove the protective film and seal on the bottle.
2. Install the cleaning solution bottle according to the illustration on the Base Station.
3. After installation finished, put the waste water tank back to the Base Station.

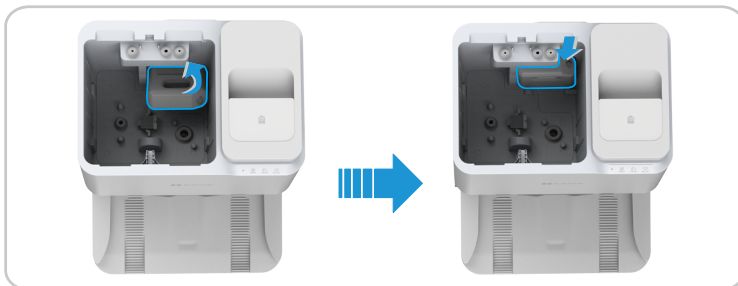

Replace Dust Bag

Open the upper cover of the dust collection box, lift the handle of the dust bag to take out and discard it.

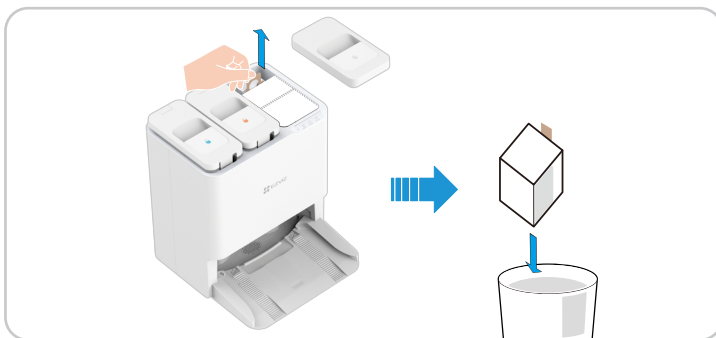

Install a new dust bag into place, and then close the upper cover.



DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO

FI

DK

SW

Replace the Side Brush

Pull out the old side brush and then press the new one into the position.



Clean the Base Station

Use cleaning tool or rags to clean the interior of the Base Station and the cleaning sink.



Clean Inlet Air Filter

1. Open upper cover of the dust collection box and then lift the handle of the dust bag. Rotate and take out of the inlet air filter on the bottom of the dust collection box.
2. Rinse with clean water and dry it, and then install back to the dust collection box.



Clean Dust Collection Duct

For Robot

After take out the dust box, use tool like a thin soft brush to stretch into the dust collection duct to clean.



For Base Station

After take out the dust bag, use tool like a thin soft brush to stretch into the dust collection port or dust collection duct to clean it.



Problem	Solution
Charging failure	The Base Station does not connect to the power supply. Please confirm whether the power cord of the Base Station is connected correctly.
Recharge failure	There are lots of obstacles near the Base Station. Please clean the obstacles in front of the Base Station. Recommended place the Robot back to the Base Station before each cleaning task and ensure the Robot starts working from the Base Station. High ground resistance. It is suggested to move the Base Station to a hard and light-colored tile floor. The floor is slippery. Recommended swipe the floor in front of the Base Station. Incorrect Base Station location. Please check whether the location of the Base Station on the map is correct. Please do not place the Base Station in direct sunlight.
When in recharge, Operation exception nearby the Base Station	There are obstacles within 1.5m in front of the Base Station and within 0.1m on the side. Please clear the obstacles directly in front of the Base Station. Please use soft material (tissue or soft dry cloth) to swipe the charging contact on the tail of the Robot. Please Swipe the driven wheels of the Robot and recharge tracks on the back of the Base Station. Please confirm whether the Base Station installation location is directly exposed to sunlight.
Abnormal noise/shake during cleaning	Foreign objects entangled to the wheels, side brushes or main brush, please turn the Robot after shutting down and clean it. The rubber strip on dust collection port is scripping the floor, which is a normal phenomenon. If the mop cloth is rolled up, remove the mop assembly and re-install the new mop cloth.
Waste water tank keeps pumping water	Clean the Base Station. For more information, please refer to page 24.
Cannot connect to Wi-Fi	Poor Wi-Fi signal, please ensure the Robot is in a area with a good Wi-Fi signal. Wi-Fi connection exception. Please reset the Wi-Fi and download the latest EZVIZ App, and try to scan the QR code on the Robot to reconnect it.
Cannot avoid obstacles	Use air blowing tool to clean the glass on the lens, or you can use soft tissues or dry cloth to swipe the glass on the lens. The obstacle avoidance performance of the Robot will decline when encountering objects with high transmittance (such as glass), high reflectance (such as polished metal), or low reflectance (such as black objects) due to environmental influences.
Abnormal obstacle avoidance	Use air blowing tool to clean the glass on the lens, or you can use soft tissues or dry cloth to swipe the glass on the lens.
Side brush fell off during cleaning	Turn the Robot over and install the side brush again, make sure install it completely until hearing a "clip" sound.

Anti-dropping detection has failed, the Robot can't avoid stairs or high places.	Use soft tissues or dry cloth to swipe the cliff sensors.
Cannot collect dust, poor dust collection effect or abnormal sound in collecting dust	Please check whether the dust collection duct of the Robot and the Base Station is stucked, if so, please refer to the cleaning method of the dust collection duct in this user manual.
	Full dust bag. If so, please replace a new disposable dust bag.
	The air outlet of the Robot's dust box is stucked, please clean it and take the foreign matters out.
Cannot dry automatically	Auto dry feature is off on APP, please check the settings on APP.
	During drying, press the button on the Robot or the Robot exits the Base Station, the drying task ended in advance.
Abnormal operation	If the problem persists after the above possible causes have been considered, the components may be abnormal. Please contact the customer service department.

 For additional information about the Robot, please refer to www.ezviz.com/eu.

Environmental Precautions

The chemical substances contained in the built-in lithium-ion battery of this product may cause environmental pollution. Please remove it before scrapping and send it to a professional battery recycling station for centralized disposal. Steps for removing the battery (the following information is only applicable when discarding the device, not the instructions):

- 1.Let the Robot run to a low power state that cannot be cleaned without touching the Base Station.
- 2.Turn off the Robot and remove the side brush and dust box.
- 3.Turn the Robot over and remove the screws at the bottom.
- 4.Remove the battery cover.
- 5.Take out the battery.



- When disassembling the battery, please ensure that the power is exhausted and operate with the Base Station disconnected.
- Please disassemble the whole battery pack together and do not damage the battery pack casing to avoid short circuit or leakage of hazardous substances.
- If the battery has exudate and accidentally touches it, please flush it with plenty of water and seek medical help promptly.
- This product should not be discarded after the expiration date or after the repair cannot work normally, please hand it over to an enterprise qualified to dispose of WEEE, please refer to the national or local regulations on WEEE for the correct method.

DE

ES

FR

IT

NL

PL

GR

CZ

PT

RO

HU

NO

FI

DK

SW

Rechargeable Lithium ion Battery

- 1. The battery type of the device: Portable battery.
- 2. The battery of this device is non-removable, which is risky to remove.

Chemical Composition	Chemical Formula	CAS No.	Weight (%)
Cobalt lithium manganese nickel oxide	Ni, Co, Mn	346417-97-8	36.80%
Graphite	C	7782-42-5	20.20%
Copper foil	Cu	7440-50-8	7.10%
Aluminium	Al	7429-90-5	3.30%
Electrolyte	LiFP ₆	21324-40-3	11.70%
Steel shell	Fe	12597-68-1	14.40%
Steel pouring	Fe	12597-68-1	3.10%
Lead	Pb	7439-92-1	Not Detected
Cadmium	Cd	7440-43-9	Not Detected
Mercury	Hg	7439-97-36	Not Detected

INFORMATION FOR PRIVATE HOUSEHOLDS

1. Separate collection of waste equipment: Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of waste equipment must dispose of it separately from unsorted municipal waste. In particular, waste equipment does not belong in household waste, but in special collection and return systems.
2. Batteries and rechargeable batteries as well as lamps: Owners of waste equipment shall, as a rule, separate waste batteries and rechargeable batteries that are not enclosed in the waste equipment, which can be removed from the waste equipment without being destroyed, from the waste equipment before handing them in at a collection point. This does not apply if waste equipment is prepared for reuse with the participation of a public waste management authority.
3. Options for returning waste equipment: Owners of waste equipment from private households can return it free of charge to the collection points of the public waste management authorities or to the take-back points set up by manufacturers or distributors within the meaning of the Electrical and Electronics Equipment Law. Stores with a sales area of at least 400 m² for electrical and electronic equipment and those grocery stores with a total sales area of at least 800 m² that offer electrical and electronic equipment several times a year or on a permanent basis and make it available in the market are required to take it back. This also applies in the case of distribution using means of distance communication, if the storage and shipping areas for electrical and electronic equipment are at least 400 m² or the total storage and shipping areas are at least 800 m². Distributors shall, in principle, ensure take-back by providing suitable return facilities at a reasonable distance from the respective end user. The possibility of returning waste equipment free of charge exists for distributors who are obliged to take it back, among other things, if a new similar device that essentially fulfills the same functions is delivered to an end user.
4. Privacy Notice: Waste equipment often contains sensitive personal data. This applies in particular to devices of information and telecommunications technology such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the waste equipment to be disposed of.
5. Meaning of the symbol “crossed-out wheelee bin”: The symbol of a crossed-out wheelee bin regularly depicted on electrical and electronic equipment indicates that the respective device is to be collected separately from unsorted municipal waste at the end of its service life.