




Motherboard

Pro Q570M-C

Quick start guide	Hurtigstartsveiledning
Кратко у пътване за бърз старт	Guia de consulta rápida
Stručná příručka	Instrukcja szybkiej instalacji
Quick Start-vejledning	Краткое руководство
Snelstartgids	Ghid de pornire rapidă
Lühijuhend	Guía de inicio rápida
Guide de démarrage rapide	Vodič za brzo korišćenje
Pikakäynnistysopas	Stručný návod na spustenie
Schnellstartanleitung	Snabbstartsguide
Οδηγός γρήγορης έναρξης	คู่มือเริ่มต้นอย่างเร็ว
Beüzemelési útmutató	Hızlı Başlatma Kılavuzu
Guida Rapida	Hồðùng daãn khôùï ñoàng nhanh
Panduan Ringkas	Vodič za brzi početak rada
クイックスタートガイド	Короткий посібник
Жылдам іске қосу нұсқаулығы	Vodnik za hitri začetek
빠른 시작 설명서	دليل التشغيل السريع
Greitos darbo pradžios vadovas	راهنمای شروع سریع
Īsa pamācība	

Motherboard Layout

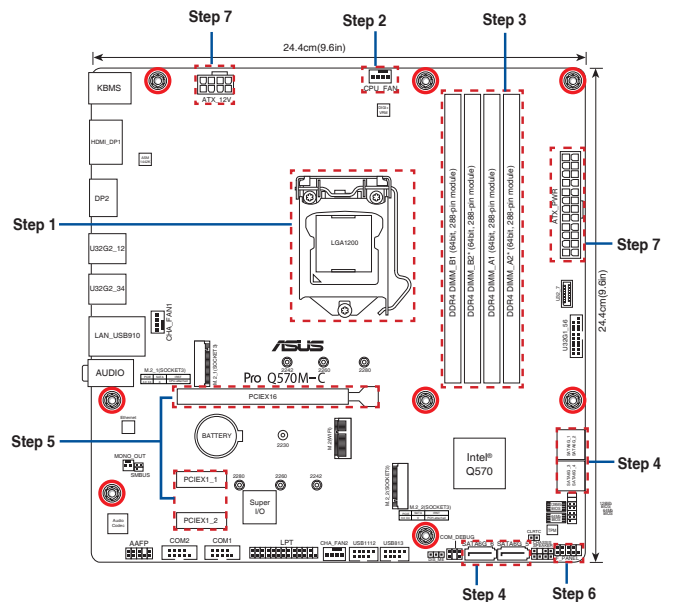

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <http://www.asus.com/support/>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://www.asus.com/support/>

India E-waste (Management) Rules 2016

This product complies with the “India E-Waste (Management) Rules, 2016” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Regional notice for Turkey

AEEE Yönetmeliğine Uygundur.

Q17977
First Edition
February 2021
Copyright © ASUSTeK Computer Inc.
All Rights Reserved

PRODUZIDO NO PÓLO INDUSTRIAL DE MANAUS




CONHEÇA A AMAZÔNIA IMPRESSO NA CHINA



1 5 0 6 0 - 1 1 X 1 0 0 0 0


Step 1

Install the CPU	Installel sentralprosessoren (CPU)
Инсталируйте процессора	Instale a CPU
Instalace procesoru	Instalacja procesora
Installer CPU'en	Установка процессора
De CPU installeren	Instalați CPU-ul
Paigaldage CPU	Instalar la CPU
Installez le processeur	Instalirajte CPU
Asenna suoritin	Instalácia centrálneho procesora
Installieren der CPU	Installera CPU
Εγκατάσταση της CPU	ติดตั้ง CPU
Helyezze be a CPU-t	CPU'yu takin
Installare la CPU	Lắp CPU
Pasang CPU	Instalacija procesora
CPUを取り付ける	Інсталюйте процесор
CPU орнатыңыз	Namestitev CPE-ja
CPU 설치	قم بتنثيث وحدة المعالجة المركزية (CPU) را نصب كنيد
Sumontuokite centrinį procesorių	
Uzstādiet centrālo procesoru	

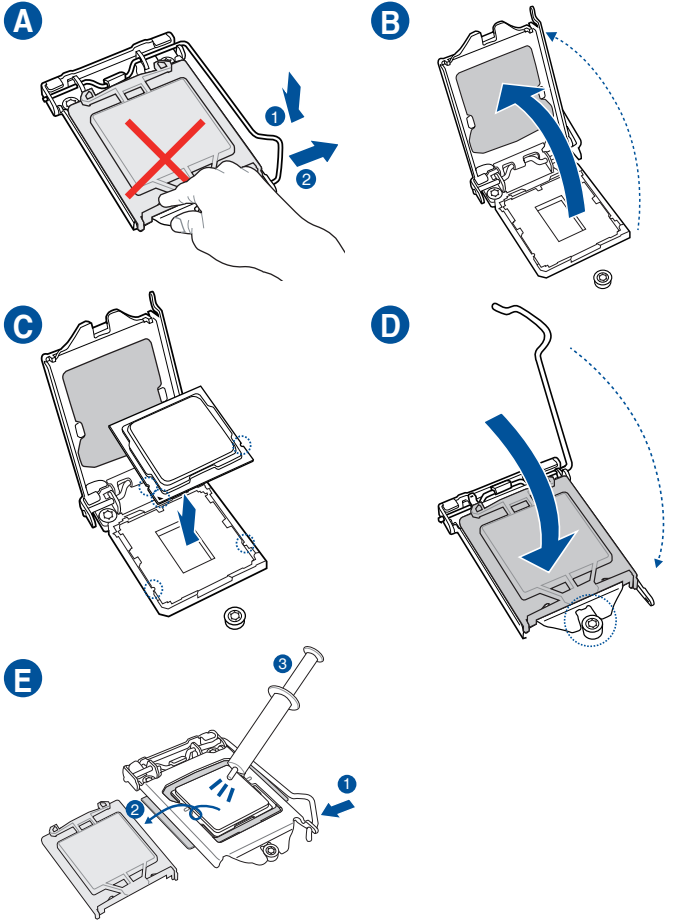


Step 3

Install memory modules	Installel minnmoduler
Инсталируйте модули памет	Instale módulos de memória
Instalace paměťových modulů	Instalacja modułów pamięci
Installer hukommelsesmodulerne	Установка модулей памяти
Geheugenmodules installeren	Instalați modulele de memorie
Paigaldage mäluoodulid	Instalar los módulos de memoria
Installez les modules de mémoire	Instalirajte module memorije
Asenna muistimoduulit	Instalácia pamäťových modulov
Installieren der Speichermodule	Installera minnesmoduler
Εγκατάσταση των στοιχείων μνήμης	ติดตั้งโมดูลหน่วยความจำ
Helyezze be a memória modulokat	Bellek modüllerini takin
Installare i moduli di memoria	Lắp các thanh nhớ
Pasang modul memori	Instalacija memorijskih modula
メモリーモジュールを取り付ける	Інсталюйте модулі пам'яті
Жад модульдерін орнатыңыз	Namestitev pomnilniških modulov
메모리 모듈 설치	تنثيث وحدات الذاكرة
Sumontuokite atminties modulius	مادول های حافظه را نصب كنيد
Uzstādiet atmiņas modulus	

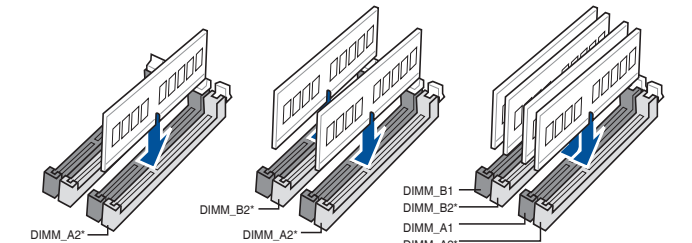


Step 2

Install the CPU fan	تنثيث مروحة وحدة المعالجة المركزية (CPU) را نصب كنيد
Инсталируйте вентилятор на процессора	
Instalace ventilátoru procesoru	
Installer CPU-bläseren	
De CPU-ventilator installeren	
Paigaldage CPU ventilaator	
Installez le ventilateur du processeur	
Asenna suorittimen tuuletin	
Installieren des CPU-Lüfters	
Εγκατάσταση του ανεμιστήρα της CPU	
Szerelje be a CPU ventilátort	
Installare la ventola della CPU	
Pasang kipas CPU	
CPUクーラーを取り付ける	
CPU желдеткішін орнатыңыз	
CPU 팬 설치	
Sumontuokite centrinio procesoriaus ventiliatorių	
Uzstādiet centrālā procesora ventilatoru	
Installer CPU-viften	
Instale a ventoinha de CPU	
Instalacja wentylatora procesora	
Установка вентилятора	
Instalați ventilatorul CPU-ului	
Instalar el ventilador de la CPU	
Instalirajte CPU ventilator	
Instalácia ventilátora centrálneho procesora	
Installera CPU-fläkten	
ติดตั้งพัดลม CPU	
CPU fanını takin	
Lắp quạt CPU	
Instalacija ventilatora procesora	
Інсталюйте вентилятор процесора	
Namestitev ventilatorja CPE-ja	

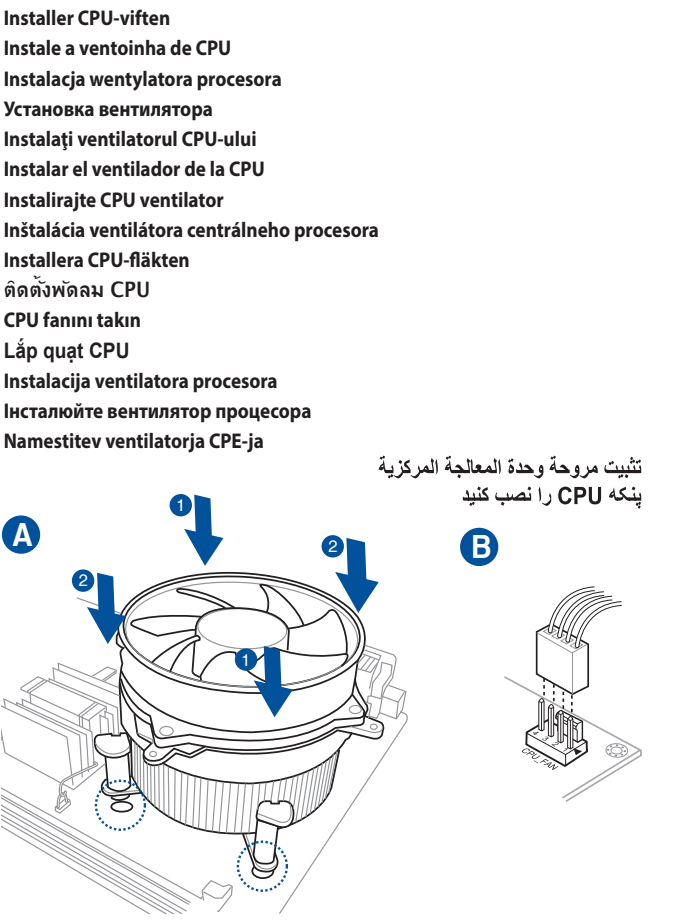


Step 4

Install storage devices	Montere lagringsenheter
Инсталиране на устройства за съхранение	Instalar dispositivos de armazenamento
Instalování paměťových zařízení	Instalacja urządzeń pamięci
Installering af lagerenheder	Установите накопители
Opslagapparaten installeren	Instalarea dispozitivelor de stocare
Installige salvestid	Instalar dispositivos de almacenamiento
Installer les périphériques de stockage	Instalirajte uređaje za skladištenje
Tallennuslaitteiden asentaminen	Ištalácia pamäťových zariadení
Installieren der Speichergeräte	Installera lagringsenheter
Εγκατάσταση συσκευών αποθήκευσης	การติดตั้งอุปกรณ์เก็บข้อมูล
Tárolóeszközök telepítése	Depolama aygıtlarınızı takma
Installare i dispositivi di archiviazione	lắp đặt các thiết bị lưu trữ
Memasang perangkat penyimpanan	Instalirajte uređaje za pohranjivanje
ストレージデバイスを取り付ける	Інсталяція пристроїв пам'яті
Сақтау құрылғыларын орнату	Namestitev naprav za shranjevanje
저장 장치 설치	تنثيث أجهزة التخزين
Įdiegti saugojimo įrenginius	نصب دستگاه های ذخیره سازی
Instalējiet atmiņas ierīces	

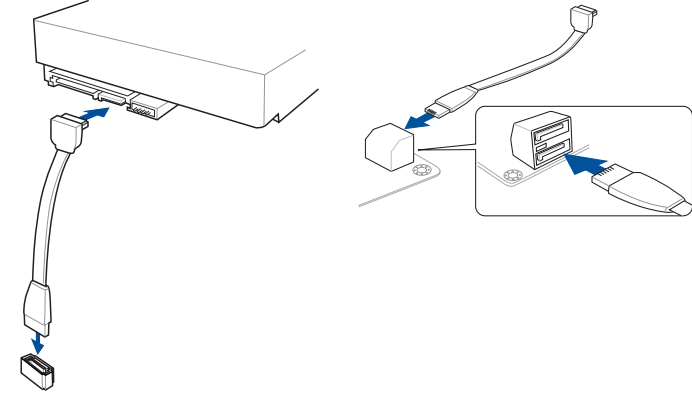


Step 5

Install expansion card(s)
Инсталирайте допълнителна карта (допълнителни карти)
Instalace přídatné karty (karet)
Installer udvidelseskortene
Uitbreidingskaart(en) installeren
Paigaldage laienduskaart(-kaardid)
Installez les cartes d'extension
Asenna laajennuskortti/kortit
Installieren der Erweiterungskarte(n)
Εγκατάσταση καρτών επέκτασης
Helyezze be a bővítőkártyá(ka)t
Installare le schede di espansione
Pasang kartu ekspansi
拡張カードを取り付ける
Кеңейту картас(лар)ын орнатыңыз
확장 카드 설치
Sumontuokite išplėtimo plokštę (-es)
Uzstādiet izvērses karti(-es)
Installer utvidelseskort
Instale placas de expansão
Instalacja kart(y) rozszerzenia
Установка карт расширения
Instalați cardul/cardurile de extensie
Instalar tarjetas de expansión
Instalirajte ekspanzionu/e karticu/e
Inštalácia rozširujúcich kariet
Installera expansionskort
ติดตั้งเอ็กซ์แพนชันการ์ด
Genişletme kartlarını takın
Lắp (các) thẻ mở rộng
Instalacija kartica za proširenje
Інсталюйте плати розширення
Namestitev razširitvenih kartic

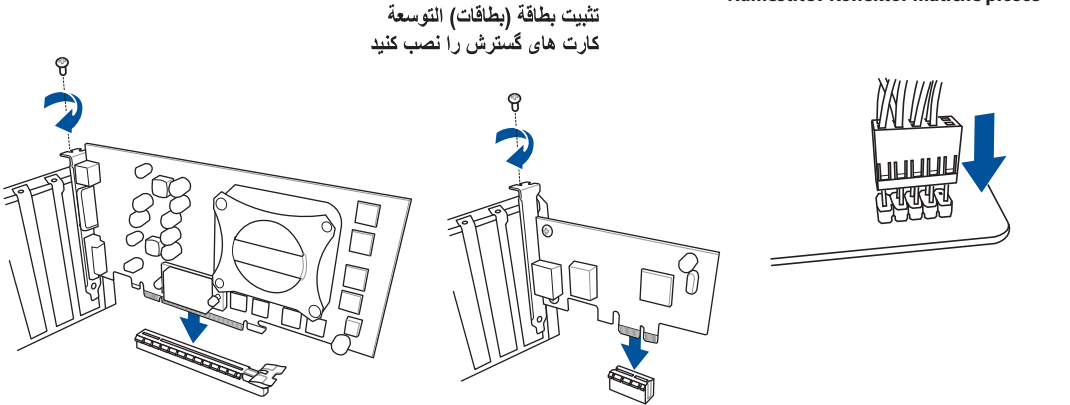


Step 6

Install the system panel connector
Инсталирайте конектора за системния панел
Nainstalujte konektor pro panel systému
Tilslut stikket til systempanelet
Installeer de connectors van het systeempaneel
Ühendage süsteemi paneeli liitmik
Installer le connecteur de panneau système
Asenna järjestelmäpaneelin liitäntä
Installieren des Systembereich-Anschlusses
Εγκατάσταση του συνδέσμου του πινάκα του συστήματος
Telepítse a rendszerpanell csatlakozót
Installa il connettore del pannello di sistema
Pasang konektor panel sistem
システムパネルコネクターを取り付ける
Жүйе панелінің коннекторын орнатыңыз
시스템 패널 커넥터를 설치하십시오
Sumontuokite sistemos valdymo plokštės jungtį
Sistēmas paneļa savienotāja instalēšana
Installer systempanelkontakten
Instalar o conector do painel do sistema
Zainstaluj złącze panelu systemowego
Установка разъема системной панели
Instalați Conector pentru placa de bază
Instalar el conector del panel del sistema
Instalirajte priključak za sistemsku ploču
Inštalácia konektora systémového panela
Sätt i systempanelens kontakt
ติดตั้งขั้วต่อแผงระบบ
Sistem paneli konnektörünü takın
Lắp đầu nối bảng điều khiển hệ thống
Instalacija konektora ploče sustava
Встановить з'єднувач системної панелі
Namestitev Konektor matične plošče

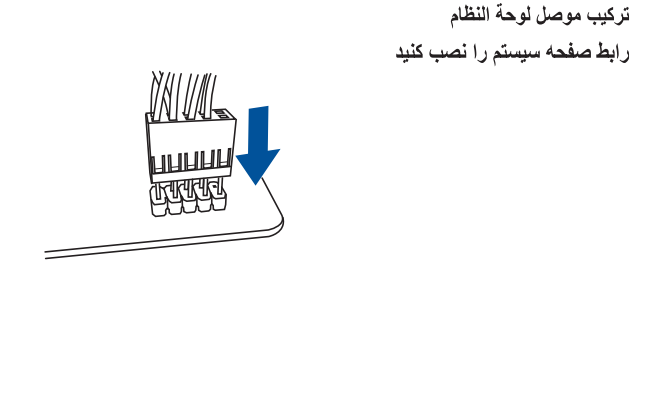


Step 7

Install ATX power connectors
Инсталирайте ATX конекторите за захранване
Instalace konektorů napájení ATX
Installer ATX-strømtilslutningerne
ATX-voedingsaansluitingen installeren
Paigaldage ATX-i toitekonnektorid
Installez les connecteurs d'alimentation ATX
Asenna ATX-virtaliittimet
Installieren der ATX-Stromanschlüsse
Εγκατάσταση συνδέσμων τροφοδοσίας ATX
Csatlakoztassa az ATX tápcsatlakozókat
Installare i connettori di alimentazione ATX
Pasang konektor daya ATX
電源ケーブルを接続する
АТХ электр қуат қосқыштарын орнатыңыз
АТХ 전원 커넥터 설치
Sumontuokite ATX maitinimo jungtis
Uzstādiet ATX strāvas savienotājus
Installer kontakter for ATX-strøm
Instale os conectores de alimentação ATX
Instalacja złączy zasilacza ATX
Установка АТХ разъема
Instalați pinii conectori ATX
Instalar conectores de alimentación ATX
Instalirajte ATX električne priključke
Inštalácia napájacích konektorov ATX
Installera ATX strömkontakter
ติดตั้งขั้วต่อ ATX เพาเวอร์
АТХ güç konnektörlerini takın
Lắp các đầu nối nguồn ATX
Instalacija konektora ATX napajanja
Інсталюйте розніми живлення АТХ
Namestitev priključkov za napajanje ATX

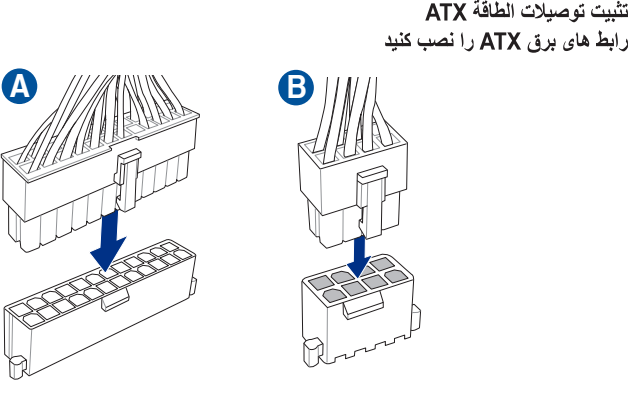

Step 8

Connect input/output devices
Свързване на I/O устройства
Připojení vstupních/výstupních zařízení
Tilslut input-/outputudstyr
I/O-apparaten aansluiten
Ühendage sisend-/väljundseadmed
Connectez les périphériques d'entrée/sortie
Liitä tulo/lähtölaitteita
Eingabe-/Ausgabe-Geräte verbinden
Σύνδεση συσκευών εισόδου/εξόδου
Bemeneti/kimeneti eszközök csatlakoztatása
Collegate i dispositivi di input/output
Sambungkan perangkat input/output
入出力デバイスに接続する
Кіріс/шығыс құрылғыларын қосы
입력/출력 장치 연결
Prijunkite įvesties / išvesties įrenginius
Pievienot ievades/izvades ierīces

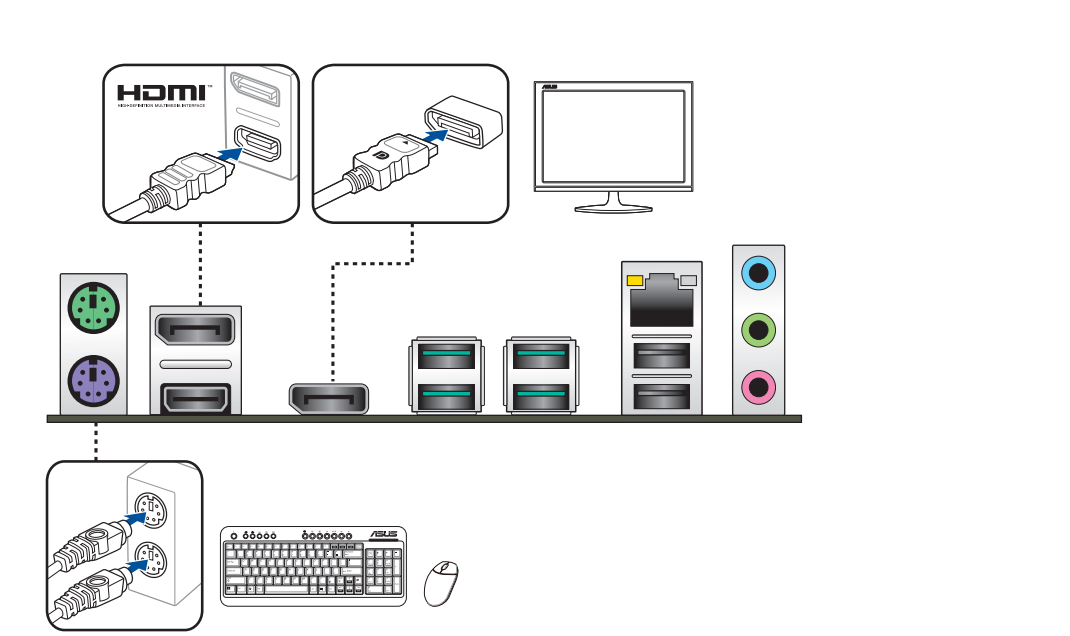

Step 9

Power on the system and install operating system and drivers
Включете системата и инсталирайте операционната система и драйверите
Zapnutí napájení systému a instalace operačního systému a ovladačů
Tænd for systemet, og installer operativsystemet og de tilhørende drivere
Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren
Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid
Démarez le système et installez le système d'exploitation et les pilotes
Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet
Einschalten des Systems und Installieren des Betriebssystems und der Treiber
Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης
Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat
Accendere il sistema e installare il sistema operativo e i driver
Hidupkan sistem, lalu instal sistem operasi dan driver
システムを起動しOSとドライバーをインストールする
Жүйені қосып, операциялық жүйені жәнә драйверлерді орнатыңыз
시스템 전원 켜기 및 운영체제와 드라이버 설치
Ijunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles
Ieslēdziet sistēmu un instalējiet operētājsistēmu un draiverus
Slå på systemet og installer operativsystem og drivere
Ligue o sistema e instale o sistema operativo e os controladores
Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki
Включение системы и установка операционной системы и драйверов
Porniți sistemul și instalați sistemul de operare și driverele
Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores
Uključite sistem i instalirajte operativni sistem i drajvere
Zapnutie systému a inštalácia operačného systému a ovládačov
Slå på systemet och installera operativsystem och drivrutiner
เปิดระบบ และติดตั้งระบบปฏิบัติการและไดรเวอร์
Sistemi açıp işletim sistemini ve sürücülerini yükleyin
Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver
Uključivanje sustava i instaliranje operativnih sustava i upravljačkih programa
Увімкніть живлення системи та інсталюйте операційну систему та драйвери
Vklop sistema ter namestitev operacijskega sistema in gonilnikov

تشغيل الجهاز وتثبيت نظام وبرمجيات التشغيل
سیستم را روشن کرده و درایورها و سیستم عامل را نصب کنید

