



Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per [Bose SoundLink Plus Nero](#) o cerca il tuo prodotto tra le [migliori offerte di Diffusori Audio](#)


BOSE

SOUNDLINK PLUS PORTABLE SPEAKER

Please read and keep all safety and use instructions.

For more information about your Bose SoundLink Plus Portable Speaker, visit: support.Bose.com/sl-plus

Declarations of conformity can be found at: www.Bose.com/compliance

 Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

Important Safety Instructions

If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the connector port is fully dried out before charging.

Do not block any ventilation openings.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the apparatus does not operate normally, or has been physically damaged.

WARNINGS/CAUTIONS



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.



This symbol means use of this product with an incompatible or improperly installed battery could cause a safety hazard. Contact Bose customer service for battery service options or visit bose.com/batt for more information.

- This product must only be operated with compatible Bose certified batteries. Contact Bose customer service for battery service options
- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- The speaker wire and interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.
- Use this product only with an agency-approved LPS power supply that meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- The product label is located on the bottom of the product.
- To reduce the risk of fire, do not place any heating or cooking appliance beneath this product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISED Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with FCC and ISED Canada radiation exposure limits set forth for the general population. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CAN ICES (B) / NMB (B)

For Europe: Frequency band of operation 2400 to 2483.5 MHz. | Maximum transmit power less than 20 dBm EIRP.

Maximum transmit power is below regulatory limits such that SAR testing is not necessary and exempt per applicable regulations.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.


Low-power Radio-frequency Devices Technical Regulations: Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.



Please dispose of used batteries properly, following local regulations. Do not incinerate.



Names and Contents of Toxic or Hazardous Substances or Elements										
Toxic or Hazardous Substances and Elements										
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenyl ether (PBDE)	Dybutyl phthalate (DBP)	Di-isobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl) phthalate (DEHP)
PCBs	X	O	O	O	O	O	O	O	O	O
Metal Parts	X	O	O	O	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O	O	O	O	O
Speakers	X	O	O	O	O	O	O	O	O	O
Cables	X	O	O	O	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.										

Equipment name: <i>Bluetooth</i> Speaker Type designation: 443516							
Restricted substances and its chemical symbols							
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)	
PCBs	—	O	O	O	O	O	
Metal Parts	—	O	O	O	O	O	
Plastic Parts	O	O	O	O	O	O	
Speakers	—	O	O	O	O	O	
Cables	—	O	O	O	O	O	
Note 1: "O" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2: The "-" indicates that the restricted substance corresponds to the exemption.							

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "5" is 2015 or 2025.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Josefillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 Phone Number: +52 55 5263 6500 | Bose Limited (H.K.), 7F., No. 2, Sec. 3, Minsheng E. Road, Zhongshan Dist., Taipei City 104511, Phone Number: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

Input Rating: 5V ---, 3A | **Output Rating:** 5V ---, 3A

Model: 443516. The CMIIT ID is located on the bottom of the speaker.

This product is covered by a limited warranty from Bose, available at worldwide.Bose.com/Warranty

License Disclosures: To view the license disclosures that apply to the third-party software packages included as components of the Bose SoundLink Plus Portable Speaker, use the Bose app. You can access this information from the Settings menu.

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. The trademark "iPhone" is used in Japan with a license from Aiphone K.K.

Use of the Made for Apple and Works with Apple AirPlay badges means that an accessory has been designed to connect specifically to the Apple product(s) identified in the Made for Apple badge and to work specifically with the technology identified in the Works with Apple AirPlay badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Android and Google Play are trademarks of Google LLC.

Snapdragon Sound is a product of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm, Snapdragon and Snapdragon Sound are trademarks or registered trademarks of Qualcomm Incorporated.

Spotify is a registered trademark of Spotify AB.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Bose, the B logo, SimpleSync, and SoundLink are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2025 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Please complete and retain for your records

The serial number and model numbers are located on the bottom of the speaker.

Serial number: _____

Model number: 443516

Please keep your receipt. Now is a good time to register your Bose product. You can easily do this by going to worldwide.bose.com/ProductRegistration

WHAT'S IN THE BOX

Contents 9

GETTING STARTED

Initial setup 10

BLUETOOTH® CONNECTIONS

Connect to a device..... 12

 Using your device's *Bluetooth* settings 12

 Using the Bose app 13

Reconnect to a device 14

 Reconnect to the most recently-connected device..... 14

 Reconnect to a different device 14

Connect an additional device..... 15

Identify connected devices 15

Switch between two connected devices 15

Disconnect a device 16

Clear the speaker device list 16

Android™ devices only..... 17

 Connect using Fast Pair 17

 Snapdragon Sound™ technology 18

SPEAKER CONTROLS

Power on/off..... 19

 Auto-off timer..... 20

Media playback and volume 21

BATTERY

Charge the speaker..... 22

 Charging time..... 23

 Hear the battery level..... 23

 Battery protection mode..... 23

Charge your device 24

STATUS

Power light 25

Bluetooth light 26

Shortcut light 26

VOICE PROMPTS

Pre-installed languages 27

Change the language 27

Disable voice prompts..... 27

SHORTCUTS

Use your shortcut..... 28

Change or disable your shortcut..... 28

SPOTIFY TAP 29

CONNECT BOSE PRODUCTS

Link two Bose *Bluetooth* Speakers..... 30

 Compatible products..... 30

 Link using the product controls..... 31

 Switch between Stereo mode and Party mode 32

 Unlink the speakers..... 32

Connect to a Bose Smart Speaker or Soundbar..... 33

- Compatible products..... 33
- Connect using the Bose app..... 34
- Connect using the product controls 35

Reconnect a Bose Smart Speaker or Soundbar 35

PORTABILITY

Strap uses 36

Water and dust resistance 36

CARE AND MAINTENANCE

Service the speaker battery 37

Update the speaker 37

Clean the speaker 37

Store the speaker 37

Replacement parts and accessories..... 37

Limited warranty 37

TROUBLESHOOTING

Try these solutions first..... 38


Other solutions 38

Reset the speaker 41


Restore the speaker..... 42

CONTENTS

Confirm that the following parts are included:

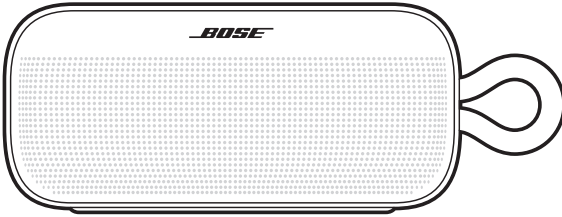

Bose SoundLink Plus Portable Speaker




USB Type-C® to USB-A cable

NOTE: If any part of the product appears to be missing or damaged, do not use it. Visit: support.Bose.com/sl-plus for troubleshooting articles, videos, and product repair or replacement.

The speaker ships with a partial charge. Before using the speaker for the first time, connect it to a power supply. The speaker doesn't need to be fully charged, but it does require the initial connection to activate the battery.


INITIAL SETUP

1. Connect the USB-C® end of the cable to the USB-C port on the back of the speaker.

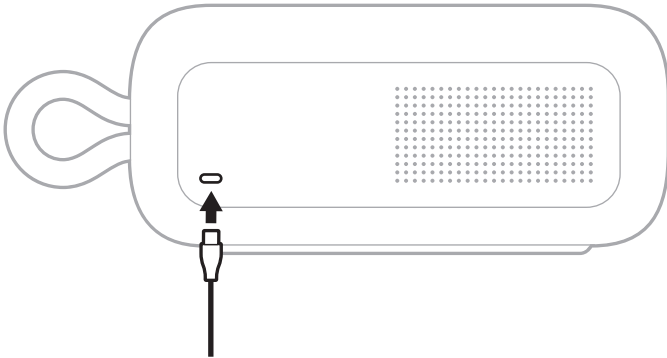


2. Connect the USB-A end of the cable to a USB-A power supply.

The Power light slowly pulses white.

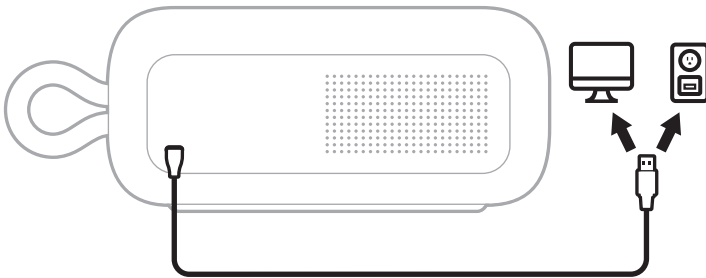

3. Press the Power button .

The Power light slowly pulses white. You hear the battery level followed by "Ready to connect." The *Bluetooth* light slowly blinks blue.

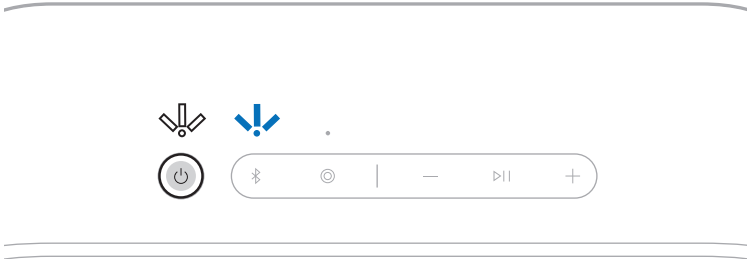

4. Connect to your device (see page 12).


You can store up to six devices in the speaker device list, and the speaker can be actively connected to up to two devices at a time. You can play audio from only one device at a time.

CONNECT TO A DEVICE

You can connect the speaker to your device using any of the following:

- Your device's *Bluetooth* settings (see "Using your device's *Bluetooth* settings")
- The Bose app (see page 13)
- Fast Pair (Android devices only) (see page 17)


Using your device's *Bluetooth* settings

1. Press and hold the *Bluetooth* button  until you hear "Ready to connect" and the *Bluetooth* light slowly blinks blue.



NOTE: If a device is already connected, you hear "Ready to connect another device."

2. On your device, access *Bluetooth* settings.
3. Select the speaker from the list of available products.

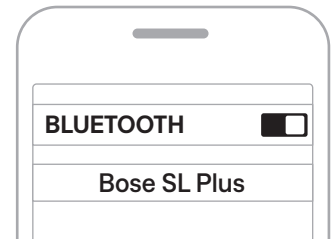

NOTE: Look for the name you entered for the speaker in the Bose app. If you didn't name the speaker, the default name appears.

The speaker appears in the list of connected products. The *Bluetooth* light glows solid white (see page 26).

Using the Bose app

The Bose app lets you set up and control the speaker from any device, such as a smartphone or tablet.

Using the app, you can manage *Bluetooth* connections, manage speaker settings, adjust the audio, choose your voice prompt language, and get any future updates and new features made available by Bose.

NOTE: If you've already downloaded the Bose app for another Bose product, you can add the speaker from the product list screen.

1. On your device, download the Bose app.



2. Follow the app instructions to add the speaker.

RECONNECT TO A DEVICE

Reconnect to the most recently-connected device


When powered on, the speaker connects with the two most recently-connected devices.

NOTES:


- The device must be within range (30 ft or 9 m) and powered on.
- Make sure the *Bluetooth* feature is enabled on your device.

Reconnect to a different device

NOTE: The device must be within range (30 ft or 9 m) and powered on.

1. Press the *Bluetooth* button  and release to hear which devices are currently connected.



2. Within 2 seconds, press the *Bluetooth* button  again to hear the name of the next device in speaker device list.
3. Repeat until you hear the correct device name.
4. Play audio on the connected device.

TIP: You can also reconnect a different device using the device *Bluetooth* settings or the Bose app (see page 13).

NOTE: If two devices are already connected to the speaker, the newly-connected device replaces the older of the two connections.

CONNECT AN ADDITIONAL DEVICE


The speaker can be actively connected to two devices at a time (multi-point connection).

To connect an additional device, see page 12.


NOTES:

- You can only play audio from one device at a time.
- To manage or disable the multi-point connection feature, use the Bose app. To access this option, tap Source on the product control screen.
- Disabling the multi-point connection feature disconnects the second connected device.

IDENTIFY CONNECTED DEVICES

1. Press the *Bluetooth* button  and release to hear which devices are currently connected.



2. Within 2 seconds, press the *Bluetooth* button  again to hear the name of the next device in the speaker device list.

SWITCH BETWEEN TWO CONNECTED DEVICES


1. Pause audio on your first device.
2. Play audio on your second device.

DISCONNECT A DEVICE

Use the device's *Bluetooth* settings or the Bose app.

NOTE: Disabling the *Bluetooth* feature on your device disconnects the speaker and all other *Bluetooth*-connected products.

CLEAR THE SPEAKER DEVICE LIST

1. Press and hold the *Bluetooth* button  for 15 seconds until you hear “*Bluetooth* device list cleared. Ready to connect” and the *Bluetooth* light blinks blue.



2. Delete the speaker from the *Bluetooth* list on your device.

All devices are cleared, and the speaker is ready to connect (see page 12).


ANDROID DEVICES ONLY

If you have an Android device, you can access the following additional connection features.

Connect using Fast Pair

In one tap, the speaker enables quick, effortless *Bluetooth* pairing with your Android device.

NOTES:

- To use Fast Pair, you need an Android device running Android 6.0 or higher.
 - Your Android device must have the Bluetooth and Location features enabled.
1. Press and hold the *Bluetooth* button  until you hear “Ready to connect” and the *Bluetooth* light slowly blinks blue.



NOTE: If a device is already connected, you hear “Ready to connect another device.”

2. Place the speaker next to your Android device.

A notification displays on your device prompting you to pair the speaker.

NOTE: If you don't see a notification, check that notifications are enabled for the Google Play Services app on your device.

3. Tap the notification.

Once the speaker is connected, a notification appears confirming that the connection is complete.

NOTE: You can also tap the button on the notification to download the Bose app and finish setting up the speaker.


Snapdragon Sound technology

Bose SoundLink Plus Portable Speaker features Snapdragon Sound technology. Snapdragon Sound optimizes Qualcomm® audio technologies across connected devices to ensure the best sound quality, connection stability, and latency for your streaming audio.


To experience Snapdragon Sound, you need a Snapdragon Sound-certified device, such as a compatible Android device. Once you connect the speaker, your device will automatically stream audio using the aptX Adaptive *Bluetooth* codec.

NOTE: To see which Snapdragon Sound features the speaker supports and check if your device is compatible, visit: support.bose.com/sl-plus


Controls are located on the top of the speaker.

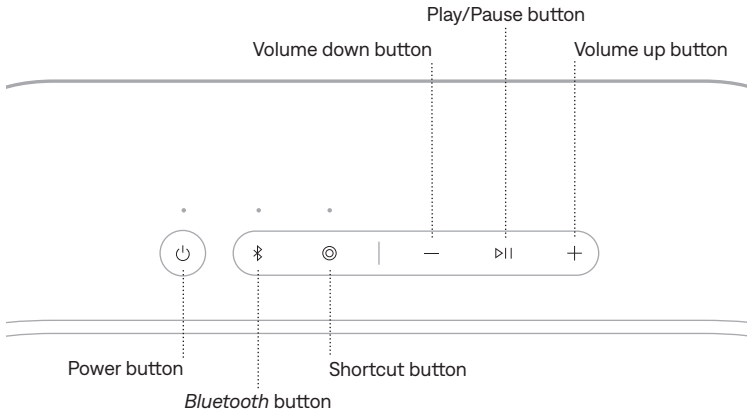

POWER ON/OFF


Press the Power button .

When powered on, a voice prompt announces the battery level. The Power light glows according to the current battery level (see page 25).

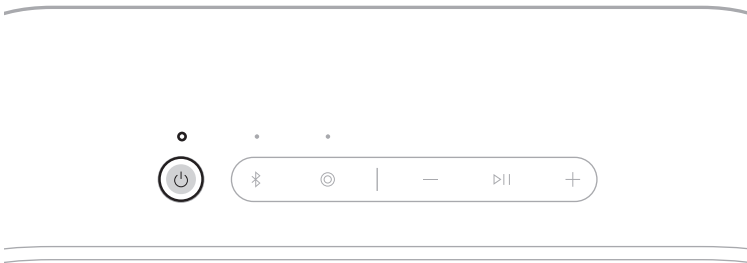



Auto-off timer

The auto-off timer conserves the battery when the speaker is operating on battery power. The speaker switches off when audio has stopped and buttons have not been pressed for 20 minutes.

To wake the speaker, press the Power button  or press and hold the *Bluetooth* button .

NOTE: To change the timer setting, use the Bose app. You can access this option from the Settings menu.


Disable the auto-off timer

Press and hold the Play/Pause button  and the Volume up button  simultaneously. You hear "Auto-off disabled."

Repeat to re-enable the auto-off timer.

TIP: You can also disable the auto-off timer using the Bose app. You can access this option from the Settings menu.

MEDIA PLAYBACK AND VOLUME

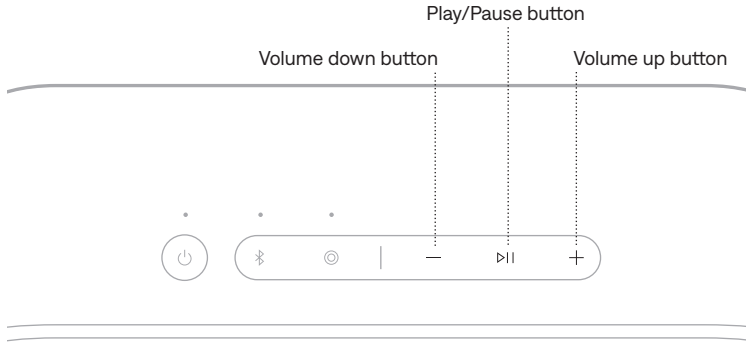

FUNCTION	WHAT TO DO
Play/Pause	Press ▷ .
Skip forward	Double-press ▷ .
Skip backward	Triple-press ▷ .
Volume up	<p>Press +.</p> <p>NOTES:</p> <ul style="list-style-type: none"> • To quickly increase the volume, press and hold +. • When the maximum volume is reached, the <i>Bluetooth</i> light blinks white 2 times.
Volume down	<p>Press -.</p> <p>NOTES:</p> <ul style="list-style-type: none"> • To quickly decrease the volume, press and hold -. • When the minimum volume is reached, the <i>Bluetooth</i> light blinks white 2 times.


TIP: You can also increase or decrease the volume using the volume controls on your device or in the Bose app. You can access this option on the product control screen.

CHARGE THE SPEAKER


CAUTION: Do not attempt to charge the speaker while the speaker is wet. Doing so may cause damage to the speaker. The speaker is waterproof, but the USB-C port must be fully dried out before charging.

NOTE: Make sure you're using the Bose-provided USB cable or a similar USB cable. Bose recommends using a 5V $\overline{\text{---}}$, 1.5A capable power source.

1. Connect USB-C end of the cable to the USB port on the back of the speaker.

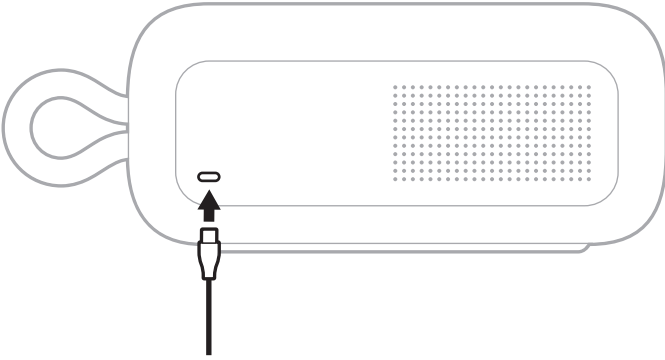

2. Connect the USB-A end of the cable to a power source such as a computer or wall charger.

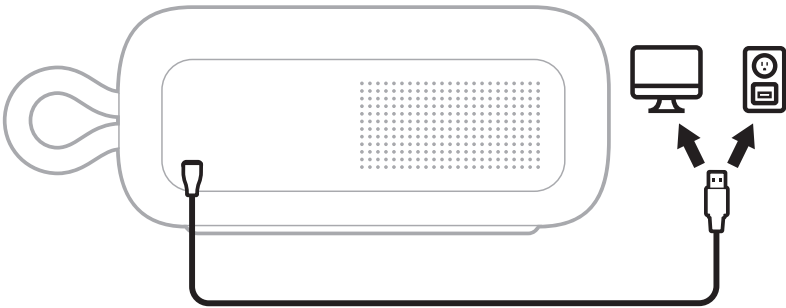

While charging, the battery light pulses white. When the battery is fully charged, the battery light glows solid white.

Charging time

Allow up to 7 hours to fully charge the battery.¹

A full charge powers the speaker up to 20 hours.² At maximum volume, the battery lasts up to 4 hours.³


Charging time and battery performance vary with the USB power supply capability, music content, and speaker volume.

Hear the battery level

Each time you power on the speaker, a voice prompt announces the battery level. When the speaker is in use, a voice prompt announces if the battery needs to be charged.

Press and hold the Power button  until you hear a voice prompt.

Battery protection mode

When the speaker battery is depleted (0%) it enters battery protection mode. To reactivate the speaker, connect it to a power supply and press the Power button .

When not in use, store the speaker in a cool place.

CAUTION: Do NOT store the speaker for extended periods when fully charged or with a remaining charge of less than 10%.

All tests conducted by Bose with production-representative Bose SoundLink Plus Portable Speaker.


- 1 With 5V/1.5A (7.5W) USB-A capable power supply, from 0% to 100% while unit is in standby mode. Charging times will vary when not using a 7.5W supply. Maximum charging is achieved with a 5V/3A (15W) power supply.
- 2 Using *Bluetooth* A2DP audio at 65% volume and between 68° F – 77° F (20° C – 25° C), with default EQ using a mix of Top 50 Global tracks as of November 2024 and no charging of external devices. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.
- 3 Using *Bluetooth* A2DP audio at 100% volume and between 68° F – 77° F (20° C – 25° C), with default EQ using a mix of Top 50 Global tracks as of November 2024 and no charging of external devices. Battery performance varies with individual user conditions such as audio content, loudness, and environmental temperature.

CHARGE YOUR DEVICE


NOTE: A USB-C to USB-C cable (not provided) is required to charge a device using your speaker. The speaker does not support charging a device with USB-C to USB-A cable.

CAUTION: Do not attempt to charge your device while the speaker is wet. Doing so may cause damage to the speaker. The speaker is waterproof, but the USB-C port must be fully dried out before charging. If moisture is detected, the Power light slowly blinks white and amber (see page 25).

1. Connect one end of the USB-C cable to the USB-C port on the back of the speaker.

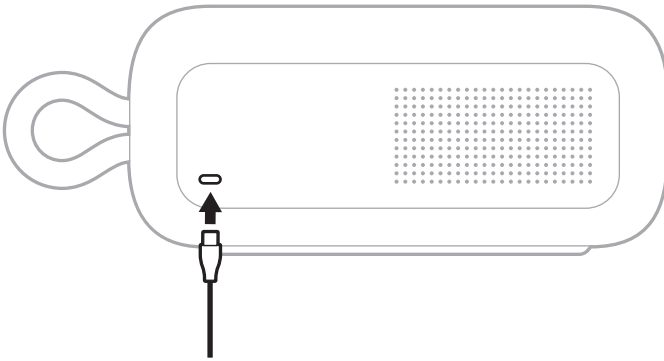


2. Connect the other end of the cable to the USB-C port on your device.

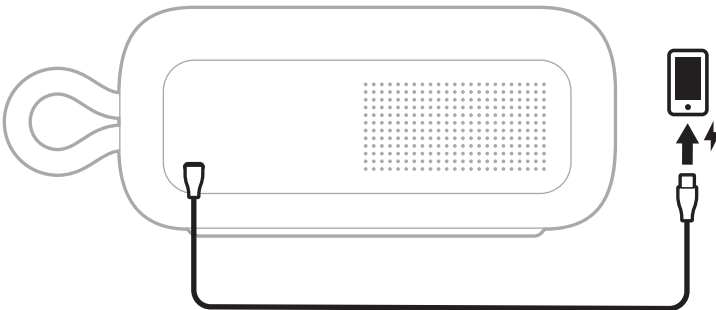

Charging status displays on your device.

The Power, *Bluetooth*, and Shortcut lights are located on the top of the speaker.

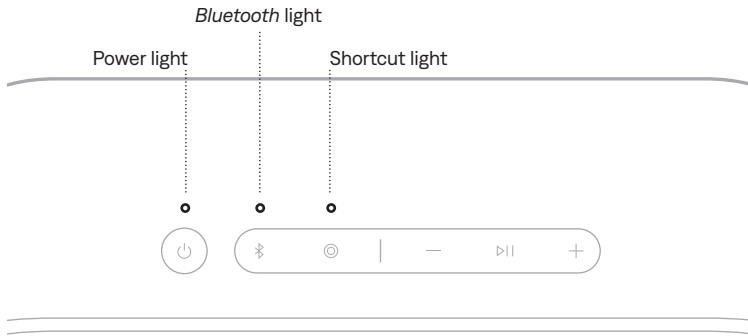

POWER LIGHT

Shows the battery, charging, update, and error status.

LIGHT ACTIVITY	SYSTEM STATE
Solid white	Full charge
Solid amber	Low charge
Blinks amber	Need to charge
Slowly pulses white	Charging
Blinks white 3 times (repeated)	Updating software
Quickly blinks white (3 seconds)	Reset complete
Slowly blinks white and amber (alternating)	Moisture detected - fully dry the USB-C port before charging
Quickly blinks white and amber (alternating)	Error - contact Bose customer service
Blinks amber 3 times (repeated)	Failed battery - contact Bose customer service

BLUETOOTH LIGHT

Shows the *Bluetooth* connection status.

LIGHT ACTIVITY	SYSTEM STATE
Slowly blinks blue	Ready to connect
Quickly blinks blue	Connecting
Solid white	Connected
Blinks white 2 times	Device list cleared

SHORTCUT LIGHT

Shows the status of speakers when linking is set as the shortcut.

LIGHT ACTIVITY	SYSTEM STATE
Slowly blinks white	Speakers are linking
Solid white	Speakers are linked

Voice prompts guide you through the *Bluetooth* connection process, announce the battery level, and identify connected devices.

TIP: You can easily manage voice prompts using the Bose app. Access this option from the Settings menu.

PRE-INSTALLED LANGUAGES


The following languages are pre-installed on the speaker:

- English
- Spanish
- French
- German
- Italian
- Mandarin
- Japanese
- Cantonese


CHANGE THE LANGUAGE

Change the voice prompt language using the Bose app. Access this option from the Settings menu.

DISABLE VOICE PROMPTS

Press and hold the Shortcut button  and Volume down button — simultaneously until you hear “Voice prompts off.”

NOTE: Repeat to re-enable voice prompts.

The programmable Shortcut button  enables you to quickly and easily access one of the following functions:


- Link two Bose *Bluetooth* Speakers (default) (see page 30)
- Access Spotify Tap (see page 29)

USE YOUR SHORTCUT

Press the Shortcut button .

The Shortcut light blinks once.




NOTE: The Shortcut button  is set by default to link two Bose *Bluetooth* speakers (see page 30).


CHANGE OR DISABLE YOUR SHORTCUT


To change or disable your shortcut, use the Bose app. To access this option, tap Shortcut on the product control screen.

Spotify Tap is music to your ears, quite literally. Get the tunes playing with a simple gesture.

NOTE: To use Spotify Tap, it must be set as your shortcut in the Bose app and the Spotify app must be up to date.

1. Press the Shortcut button  to play a recommendation based on your listening taste.

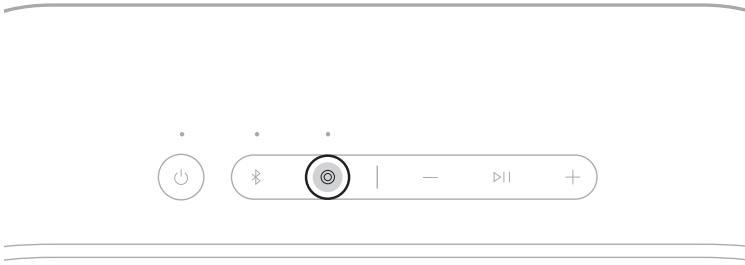


2. Press the Shortcut button  again for the next recommendation made just for you.

LINK TWO BOSE *BLUETOOTH* SPEAKERS

For a more immersive music experience, you can sync your Bose SoundLink Plus Portable Speaker with another compatible Bose *Bluetooth* speaker and play the same audio from both speakers in Stereo mode or Party mode.

- Stereo mode (left speaker and right speaker play separately)
- Party mode (both speakers play in unison)

NOTES:


- The Shortcut button  is set by default to link two Bose *Bluetooth* speakers.
- You can link to only one other speaker at a time.
- Make sure that the two speakers are within 30 ft (9 m) of each other.
- Make sure that the two speakers are within 30 ft (9 m) of the streaming device.
- For an optimal experience, position the speakers in the same room or outdoor area with no obstructions between them. Performance may vary based on device, distance, and environmental factors.

Compatible products


You can link the Bose SoundLink Plus Portable Speaker to any Bose *Bluetooth* speaker that has a Shortcut button.



Link using the product controls


1. On the speaker, press the Shortcut button .

The voice prompt directs you to press the Shortcut button on a second speaker. The Shortcut light slowly blinks white.

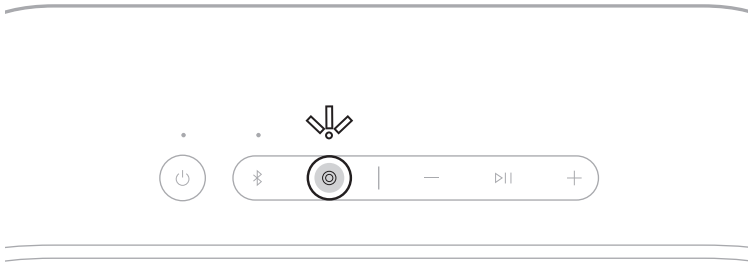

2. On a second compatible Bose *Bluetooth* speaker, press the Shortcut button .

The Shortcut light slowly blinks white.

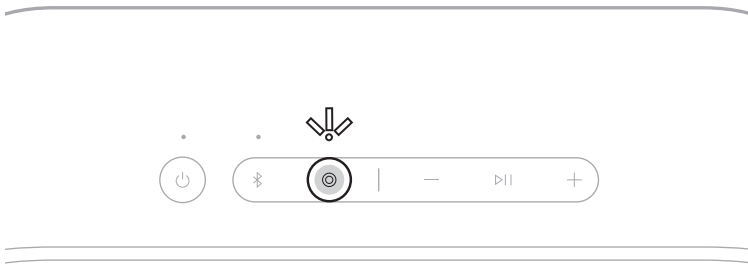


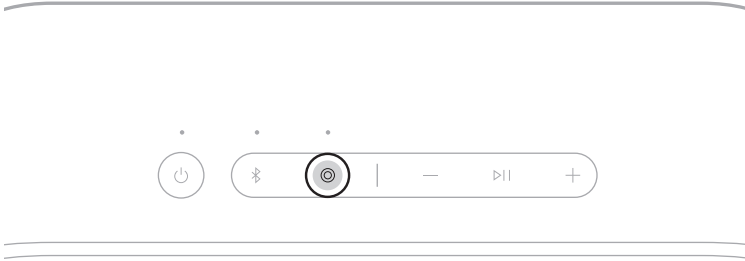
Once the two speakers are linked, a voice prompt announces the mode on both speakers. The Shortcut light on both speakers glows solid white.

NOTE: If the speakers are the same model you hear “Stereo mode,” followed by “Left” on the primary speaker and “Right” on the secondary speaker. If they are different models, you hear “Party mode” on both speakers.



Switch between Stereo mode and Party mode

On either speaker, press the Shortcut button .





A voice prompt announces the mode on each speaker.

NOTE: If the speakers are different models, you can only play audio in Party mode.

TIP: You can also switch between Stereo mode and Party mode using the Bose app. You can access this option on the product control screen.

Unlink the speakers

On either speaker, press the Power button  or press and hold the Shortcut button .



A voice prompt announces the speakers are no longer linked.

TIP: You can also use the Bose app to unlink the speakers. You can access this option on the product control screen.

CONNECT TO A BOSE SMART SPEAKER OR SOUNDBAR

With Bose SimpleSync technology, you can connect the speaker to a Bose Smart Speaker or Bose Smart Soundbar to listen to the same audio in two different rooms at the same time.

NOTE: SimpleSync technology has a *Bluetooth* range of up to 30 ft (9 m). Walls and construction materials can affect reception.

Compatible products


You can connect the speaker to any Bose Smart Speaker or Bose Smart Soundbar.


Popular compatible products include:

- Bose Smart Ultra Soundbar/Bose Ultra Soundbar
- Bose Smart Soundbar 900
- Bose Smart Soundbar 700/Bose Soundbar 700
- Bose Smart Soundbar 600
- Bose Soundbar 500
- Bose Smart Speaker 500/Bose Home Speaker 500
- Bose Home Speaker 300
- Bose Portable Smart Speaker/Bose Portable Home Speaker

New products are added periodically. For a complete list and more information, visit: support.bose.com/Groups

Connect using the Bose app

1. Press and hold the *Bluetooth* button  until you hear “Ready to connect” and the *Bluetooth* light slowly blinks blue.

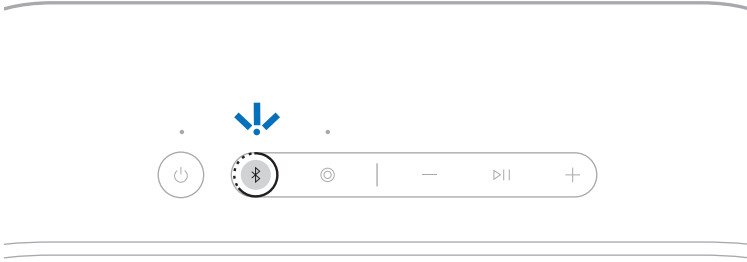


NOTE: If a device is already connected, you hear “Ready to connect another device.”

2. Use the Bose app to connect the speaker to a compatible Bose product. For more information, visit: support.bose.com/Groups

NOTES:


- It could take up to 30 seconds to connect.
- Make sure that the speaker is within 30 ft (9 m) of the speaker or soundbar.
- You can connect the speaker to only one product at a time.

Connect using the product controls

1. Press and hold the *Bluetooth* button  until you hear “Ready to connect” and the *Bluetooth* light slowly blinks blue.



NOTE: If a device is already connected, you hear “Ready to connect another device.”

2. On the soundbar remote or the top of the speaker, press and hold the *Bluetooth* button  until the light bar or light ring pulses blue.

The speaker connects to the soundbar or speaker, and you hear the same audio through both devices.

NOTES:

- It could take up to 30 seconds to connect.
- Make sure that the speaker is within 30 ft (9 m) of the speaker or soundbar.
- You can connect the speaker to only one product at a time.

RECONNECT A BOSE SMART SPEAKER OR SOUNDBAR


Use the Bose app to reconnect the speaker to a previously-connected compatible Bose product. For more information, visit: support.bose.com/Groups

NOTES:

- The speaker or soundbar must be within range (30 ft or 9 m) and powered on.
- If the speaker doesn't connect, see “Speaker doesn't reconnect to a previously-connected Bose Smart Speaker or Soundbar” on page 40.

STRAP USES

You can use the strap as a finger loop to easily carry the speaker. You can also attach it to a carabiner or a cord.

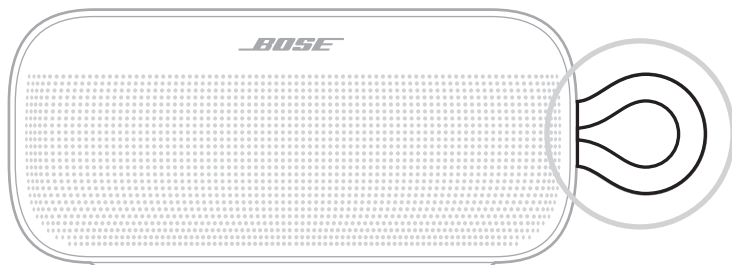

WATER AND DUST RESISTANCE

The speaker is waterproof, splash resistant, and dustproof. It is rated IP67 and IP64. You can immerse the speaker in water for up to 30 minutes at a depth of up to 3.3 ft (1 m). It can also be used while showering and in the rain or snow.

CAUTIONS:

- Do NOT submerge this speaker in any pool of water deeper than 3.3 ft (1 m).
- If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the connector port is fully dried out before charging.
- Never attempt to charge the speaker while it is wet. Doing so may cause damage to the speaker.



SERVICE THE SPEAKER BATTERY

This product must only be operated with compatible Bose certified batteries. For battery service options, contact Bose customer service or visit support.Bose.com/sl-plus

UPDATE THE SPEAKER

The speaker begins updating automatically when connected to the Bose app and an update is available. Follow the app instructions. When the update begins, the Power light blinks white 3 times (repeated) until the update is complete.

You can also update the speaker using the Bose updater website. On your computer, visit: btu.Bose.com and follow the on-screen instructions. When the update begins, the Power light blinks white 3 times (repeated) until the update is complete.

CLEAN THE SPEAKER

The speaker may require periodic cleaning.

- Clean the surface of the speaker with a soft, damp cloth (water only). Make sure the USB-C port is fully dried out before charging.
- Do not use any solvents, chemicals or cleaning solutions containing alcohol, ammonia, or abrasives.
- If the speaker is exposed to salt or chlorinated water, gently rinse with fresh water following the exposure to remove residue. Make sure the USB-C port is fully dried out before charging.

STORE THE SPEAKER

When not in use, store the speaker in a cool place.

CAUTION: Do NOT store the speaker for extended periods when the battery is fully charged or has a low charge (see page 23).

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/sl-plus


LIMITED WARRANTY

The speaker is covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.

To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the speaker:

- Power the speaker off and then on again (see page 19).
- Check the status lights (see page 25).
- Make sure your device supports *Bluetooth* connections (see page 12).
- Charge the speaker (see page 22).
- Increase the volume on the speaker, your device, and the music app.
- Move your device closer to the speaker (30 ft or 9 m) and away from any interference or obstruction.
- Try connecting another device (see page 12).
- Press and hold the Power button  for 15 seconds to reset the speaker (see page 41)

If you couldn't resolve your issue, see the table below to identify symptoms and solutions to common problems. You can also access troubleshooting articles, videos, and other resources at: support.Bose.com/sl-plus



If you're unable to resolve your issue, contact Bose customer service.

Visit: worldwide.Bose.com/contact

OTHER SOLUTIONS

SYMPTOM	SOLUTION
No power (battery)	Battery may be in protection mode or discharged. Connect the speaker to a power supply (see page 23). Battery may need to be serviced. Contact Bose customer service (see page 37).
Speaker doesn't connect with device	Clear the speaker device list (see page 16). Delete the speaker from the <i>Bluetooth</i> list on your device. Connect again (see page 12). Visit: support.Bose.com/sl-plus for additional support.
Speaker doesn't respond to multi-press functions	Vary the speed of presses.

SYMPTOM	SOLUTION
No sound	<p>Make sure voice prompts are on using the Bose app. Press the <i>Bluetooth</i> button \times and release to hear the connected device. Make sure you're using the correct device.</p> <p>Use a different music source.</p> <p>If two devices are connected, pause audio on the first device and play audio on the other device.</p>
Poor sound quality from device connected by <i>Bluetooth</i> connection	<p>Use a different music source.</p> <p>If two devices are connected, disconnect the second device.</p> <p>Disable any audio enhancement features on the device or music app.</p> <p>If the speaker was exposed to water, wait for the speaker to dry and try again.</p>
Delayed audio	<p>Play audio from a different application or music service.</p> <p>Close and re-open the application or music service.</p>
Speaker doesn't charge	<p>Make sure both ends of the USB-C to USB-A cable are secure (page 22).</p> <p>Make sure you're using the Bose-provided USB-C to USB-A cable or a similar USB cable and providing a minimum of 5V $\overline{\text{---}}$, 1.5A.</p> <p>Try another charging source and charging cable.</p> <p>If the speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.</p> <p>If the speaker was exposed to water, wait for the speaker to dry and try again.</p> <p>If the problem persists, contact Bose customer service to request a replacement battery and replace the old one (see page 37).</p>
Speaker doesn't link with a Bose <i>Bluetooth</i> speaker	<p>Make sure you're connecting to a compatible Bose <i>Bluetooth</i> speaker (see page 30).</p>
No sound when Bose <i>Bluetooth</i> speakers are linked	<p>Make sure the primary speaker is powered on. If you power off the primary speaker, the secondary speaker stops playing audio.</p>


SYMPTOM	SOLUTION
<p>Mobile device doesn't charge</p>	<p>Make sure you are using a USB-C cable (not provided). The speaker does not support charging a device with USB-C to USB-A cable.</p> <p>Make sure both ends of the USB-C cable are secure (see page 24).</p> <p>If the speaker was exposed to water, wait for the speaker to dry and try again.</p> <p>Make sure your device can receive a charge from another device. Refer to your mobile device owner's guide.</p> <p>Disconnect the USB-C cable from the speaker and then reconnect. If your device still doesn't charge, disconnect the USB-C cable from your device and reconnect. If you're unable to resolve your issue, refer to your device owner's guide.</p>
<p>Speaker doesn't connect to a Bose Smart Speaker or Soundbar</p>	<p>Make sure you're using the Bose app (see page 13).</p> <p>Make sure the Bose Smart Speaker or Soundbar is running the latest software. Use the Bose app and run available software updates.</p> <p>Make sure you're connecting to a compatible Bose product. For a list of compatible products, visit: support.bose.com/Groups</p> <p>Press and hold the <i>Bluetooth</i> button  until the <i>Bluetooth</i> light blinks blue, and you hear "Ready to connect another device."</p> <p>Make sure that the speaker is within 30 ft (9 m) of the soundbar or speaker.</p>
<p>Speaker doesn't reconnect to a previously-connected Bose Smart Speaker or Soundbar</p>	<p>On the speaker, press and hold the <i>Bluetooth</i> button  until the <i>Bluetooth</i> light blinks blue, and you hear "Ready to connect another device." Use the Bose app to connect the speaker to a compatible Bose product. For more information, visit: support.bose.com/Groups</p>
<p>Delayed audio when connected to Bose Smart Speaker or Soundbar</p>	<p>Download the Bose app (see page 13) and run available software updates for the connected speaker and soundbar.</p> <p>On a computer, check btu.bose.com for USB updates.</p>


RESET THE SPEAKER

If the speaker is unresponsive, you can reset it.

Resetting the speaker resets the product controls and reboots the speaker. It doesn't clear any device settings.

NOTE: Make sure the USB-C to USB-A cable isn't connected to the speaker.

1. Press and hold the Power button  for up to 15 seconds until the speaker powers off.



2. Press the Power button .

The Power light glows according to the battery level (see page 25).

NOTE: If you're unable to resolve your issue, additional troubleshooting and support is available at: support.bose.com/sl-plus

RESTORE THE SPEAKER

Factory reset clears connected devices and language settings from the speaker and returns it to the original factory settings.

1. Press and hold the Volume up button + and Volume down button — for 15 seconds until the Power light quickly blinks white for 3 seconds.



The speaker powers off.

2. Press the Power button .

The *Bluetooth* light glows blue, and the speaker is ready to connect.

NOTE: If you're unable to resolve your issue, additional troubleshooting and support is available at: support.bose.com/sl-plus

请阅读并保留所有安全和使用说明。

有关 Bose SoundLink Plus 手提音箱的更多信息，请访问：support.Bose.com/sl-plus

符合声明载于 www.Bose.com/compliance

 Bose Corporation 在此声明，本产品严格遵守 2014/53/EU 指令和其他所有适用的欧盟指令要求中的基本要求和和其他相关规定。

重要安全说明

如果扬声器暴露于盐或含氯的水中，请随后用淡水轻轻冲洗以清除残留物。充电前，请确保连接器端口完全干燥。

请勿堵塞任何通风口。

只能使用制造商指定的附件/配件。

任何维修事宜均请向合格的人员咨询。当设备不能正常运行或有物理损坏时，需要进行维修。

警告/小心



包含小部件，可能会导致窒息。不适合 3 岁以下的儿童使用。



本产品含有磁性材料。关于是否会影响可植入医疗设备的情况，请咨询医生。



此符号表示电池不兼容或安装不当可能会导致安全隐患。有关电池服务选项，请联系 Bose 客户服务处，或访问 [bose.com/batt](https://www.bose.com/batt) 了解更多信息。

- 本产品只能使用兼容的 Bose 认证电池。有关电池服务选项，请联系 Bose 客户服务处。
- 此产品随附的电池如果处理不当、更换不当或更换为不正确的类型，可能存在起火、爆炸或化学灼伤危险。
- 请勿使含有电池的 product 过热（例如，请避免阳光直射并远离火源等）。
- 如果电池漏液，请避免让液体与皮肤或眼睛接触。如果接触到了液体，请咨询医生。
- 请将本产品放置到远离火源和热源的地方。请勿将明火火源（如点燃的蜡烛）置于本产品上或靠近本产品。
- 请勿对本产品进行未经授权的修改。
- 本系统随附的扬声器连接线和互连连接线不可用于入墙式安装。请根据当地建筑法规选择正确类型的入墙式安装所需的线缆和连接线。
- 仅将本产品搭配经过相关部门批准且符合本地监管要求（如 UL、CSA、VDE、CCC）的 LPS 电源使用。
- 本产品的标签位于产品底部。
- 为减少火灾风险，请勿在本产品下方放置任何加热或烹饪设备。

注意：本设备已经过测试，符合 FCC 规则第 15 部分有关 B 类数字设备的各项限制。这些限制旨在为住宅安装提供合理的保护，防止有害干扰。本设备会产生、使用和辐射射频能量，如果不按照说明进行安装和使用，可能会对无线电通信造成有害干扰。但是，不能保证在特定安装环境中不会产生干扰。如果本设备确实对无线电或电视接收造成有害干扰（可通过关闭和打开设备来确定），建议用户尝试采取以下一项或多项措施来消除干扰：

- 调整接收产品或天线的方向或位置。
- 增加设备与接收器之间的距离。
- 将设备连接到与接收器所连接电路不同的插座上。
- 向经销商或有经验的无线电/电视技术人员寻求帮助。

未经 Bose 公司明确批准的更改或修改可能导致用户无权操作本设备。

本设备符合 FCC 规则第 15 部分规定和加拿大 ISED 免许可证 RSS 标准。本设备工作时应满足下列两项要求：

(1) 本设备不会造成有害干扰；(2) 本设备必须承受任何接收到的干扰，包括可能造成设备异常工作的干扰。

本设备符合为公众阐明的 FCC 和加拿大 ISED 辐射限制。此发射器不能与其他天线或发射器位于同一地点或与这些设备一起使用。

CAN ICES (B) / NMB (B)

欧洲：工作频段 2400 至 2483.5 MHz。I 最大传输功率低于 20 dBm EIRP。

最大传输功率低于规定限值，因此无需 SAR 测试或根据适用法规豁免。



此标志表示本产品不得作为生活垃圾丢弃，必须送至相关回收部门循环利用。适当的处理和回收有助于保护自然资源、人类健康以及自然环境。想了解更多有关本产品的处理和回收信息，请与当地民政部门、废弃物处理服务机构或出售本产品的商店联系。

低功率射频器材技術規範：取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

充电器提供的功率必须介于无线电设备所需的最小 2.5W 和最大 15W 之间，才能达到最大充电速度。




请适当处理废旧电池，遵守本地规章。切勿将其焚化。

廢電池請回收



Li-ion

有毒或有害物质或元素的名称及成分										
零件名称	有毒或有害物质和元素									
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴化联苯 (PBB)	多溴二苯醚 (PBDE)	邻苯二甲酸二丁酯 (DBP)	邻苯二甲酸二异丁酯 (DIBP)	邻苯二甲酸丁苄酯 (BBP)	邻苯二甲酸二(2-乙基己酯) (DEHP)
印刷电路板	X	○	○	○	○	○	○	○	○	○
金属零件	X	○	○	○	○	○	○	○	○	○
塑料零件	○	○	○	○	○	○	○	○	○	○
扬声器	X	○	○	○	○	○	○	○	○	○
连接线	X	○	○	○	○	○	○	○	○	○
此表格符合 SJ/T 11364 条款。 O: 表示此零件使用的所有同类物质中包含的有毒或有害物质低于 GB/T 26572 中的限定要求。 X: 表示此零件使用的同类物质中至少有一种包含的有毒或有害物质高于 GB/T 26572 中的限定要求。										

设备名称: Bluetooth 扬声器 型号: 443516						
装置	限用物质及其化学符号					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ^{VI})	多溴化联苯 (PBB)	多溴联苯醚 (PBDE)
印刷电路板	-	○	○	○	○	○
金属零件	-	○	○	○	○	○
塑料零件	○	○	○	○	○	○
扬声器	-	○	○	○	○	○
连接线	-	○	○	○	○	○
注意 1: “○” 表示限用物质的百分比含量未超出参考值。 注意 2: “-” 表示限用物质属于豁免项目范围。						

生产日期: 序列号中第八位数字表示生产年份; “5” 表示 2015 年或 2025 年。

进口商: 博士视听系统 (上海) 有限公司, 上海市闵行区古岱路 2337 号 D 座 6 层, 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Joselillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 电话: +52 55 5263 6500 | Bose 有限公司 (H.K.), 台北市民生东路 3 段 2 号 7F 104511, 电话: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

输入额定值: 5V ---, 3A | **输出额定值:** 5V ---, 3A

型号: 443516。CMIIT ID 位于扬声器底部。

本产品由 Bose 提供有限质保, 可查看: worldwide.Bose.com/Warranty

许可披露: 要查看作为 Bose SoundLink Plus 手提音箱组件随附的第三方软件包的许可披露, 请使用 Bose 应用。您可以从“设置”菜单中访问此信息。

Apple、Apple 徽标、iPad 以及 iPhone 是 Apple Inc. 在美国和其他国家/地区注册的商标。App Store 是 Apple Inc. 的服务标识。商标“iPhone”已获得 Aiphone K.K. 在日本的使用许可。

使用“Made for Apple”和“Works with Apple AirPlay”标记表示此附件的设计专门用来与“Made for Apple”标记中标明的 Apple 产品连接，并与“Works with Apple AirPlay”标记中认定的技术配合使用，且经过开发商认证符合 Apple 性能标准。Apple 对此设备的工作或其与安全 and 规章标准的符合性概不负责。

Bluetooth® 文字标记和徽标是由 Bluetooth SIG, Inc. 所拥有的注册商标，Bose Corporation 根据许可规定使用上述标记。

Android 和 Google Play 是 Google LLC 的商标。

Snapdragon Sound 是 Qualcomm Technologies, Inc. 和/或其子公司的产品。Qualcomm、Snapdragon 和 Snapdragon Sound 是 Qualcomm Incorporated 的商标或注册商标。

Spotify 是 Spotify AB 公司的注册商标。

USB Type-C® 和 USB-C® 是 USB 应用者论坛的注册商标。

Bose、B 徽标、SimpleSync 以及 SoundLink 是 Bose Corporation 的商标。| Bose Corporation 总部：1-877-230-5639 | ©2025 Bose Corporation。未经事先书面许可，不得复制、修改、发行或以其他方式使用本资料的任何部分。

请填写以下内容，留作记录

序列号和型号位于扬声器底部。

序列号： _____
型号： 443516

请保留您的收据。现在是您注册 Bose 产品的好机会。您可以访问 worldwide.bose.com/ProductRegistration 轻松完成此操作。

装箱单

目录	9
----------	---

入门指南

初始设置	10
------------	----

BLUETOOTH® 连接

连接到设备	12
使用设备的 <i>Bluetooth</i> 设置	12
使用 Bose 应用	13
重新连接设备	14
重新连接最近连接的设备	14
重新连接其他设备	14
连接其他设备	15
识别已连接的设备	15
在两个连接的设备之间切换	15
断开设备	16
清空扬声器设备列表	16
仅限 Android™ 设备	17
使用快速配对连接	17
Snapdragon Sound™ 技术	18

扬声器控件

打开 / 关闭电源	19
自动关闭计时器	20
媒体播放和音量	21

电池

为扬声器充电.....	22
充电时间.....	23
收听电池电量提示.....	23
电池保护模式.....	23
为设备充电.....	24

状态

电源指示灯.....	25
<i>Bluetooth</i> 指示灯.....	26
快捷功能指示灯.....	26

语音提示

预安装的语言.....	27
更改语言.....	27
禁用语音提示.....	27

快捷方式

使用快捷功能.....	28
更改或禁用快捷方式.....	28

SPOTIFY TAP	29
--------------------------	----

连接 BOSE 产品

连接两个 Bose <i>Bluetooth</i> 扬声器.....	30
兼容产品.....	30
使用产品控件进行连接.....	31
在立体声模式和派对模式之间切换.....	32
断开扬声器连接.....	32

连接 Bose 智能扬声器或条形扬声器.....	33
兼容产品.....	33
使用 Bose 应用连接.....	34
使用产品控件连接.....	35
重新连接 Bose 智能扬声器或 Bose 智能条形扬声器.....	35

便携性

束带使用.....	36
防水防尘.....	36

维护与保养


维修扬声器电池.....	37
更新扬声器.....	37
清洁扬声器.....	37
存放扬声器.....	37
更换零件和配件.....	37
有限质保.....	37

故障排除

首先尝试这些解决方案.....	38
其他解决方案.....	38
重置扬声器.....	41
还原扬声器.....	42

目录

请确认包装箱中内含以下部件：

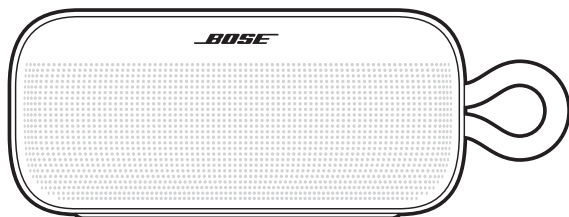

Bose SoundLink Plus 手提音箱




USB Type-C® 到 USB-A 线缆

注意：如果产品的任何部分缺失或损坏，请勿使用。请访问：[请访问](https://support.bose.com/sl-plus) support.bose.com/sl-plus 了解故障排除文章、视频以及产品维修或更换信息。

扬声器在发货时有部分电量。首次使用扬声器前，请将其连接至电源。扬声器不需要充满电也能工作，但要激活电池，仍然需要进行此初始连接操作。

初始设置

1. 将 USB 线缆 USB-C® 端连接至扬声器后面的 USB-C 端口。

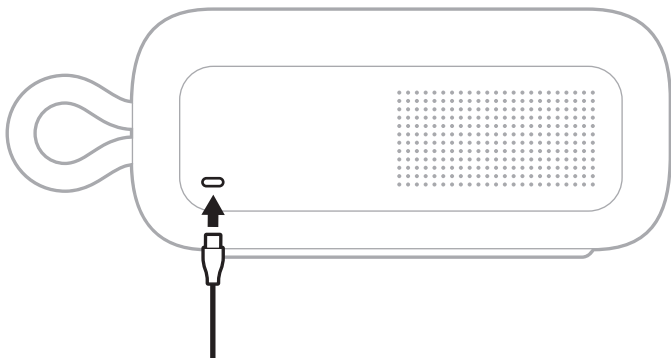

2. 将线缆的 USB-A 端连接到 USB-A 电源。

电源指示灯慢慢闪烁白色光。



3. 按下电源按钮 .

电源指示灯慢慢闪烁白色光。您会听到电池电量提示，然后是“Ready to connect”（已准备好连接）。Bluetooth 指示灯慢闪蓝色光。



4. 连接您的设备（请参见第 12 页）。

扬声器的设备列表中最多可存储六台设备，并且扬声器一次可以最多主动连接两台设备。一次只能播放一台设备的音频。

连接到设备

您可以使用以下任何一种方法将扬声器连接到您的设备：

- 设备的 *Bluetooth* 设置（请参见“使用设备的 *Bluetooth* 设置”）
- Bose 应用程序（请参见第 13 页）
- 快速配对（仅限 Android 设备）（请参见第 17 页）


使用设备的 *Bluetooth* 设置

1. 按住 *Bluetooth* 按钮 ，直到听到“Ready to connect”（准备连接），*Bluetooth* 指示灯慢闪蓝光。



注意：如果已经连接了一个设备，您会听到“Ready to connect another device”（准备好连接其他设备）。

2. 在设备上访问 *Bluetooth* 设置。
3. 从可用产品列表中选择扬声器。

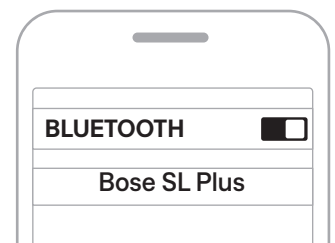

注意：查找 Bose 应用中输入的扬声器名称。如果您没有为扬声器命名，将显示默认名称。

扬声器会出现在已连接产品的列表中。*Bluetooth* 指示灯呈常亮白色光亮起（请参见第 26 页）。


使用 Bose 应用

您可在任何设备（例如智能手机或平板）上通过 Bose 应用设置和控制扬声器。

您可以使用此应用管理 *Bluetooth* 连接、管理扬声器设置、调整音频、选择自己的语音提示语言并获得 Bose 的更新和新功能。

注意：如果您已经下载了另一款 Bose 产品的 Bose 应用，您可以从产品列表屏幕添加扬声器。

1. 在您的设备上下载 Bose 应用。

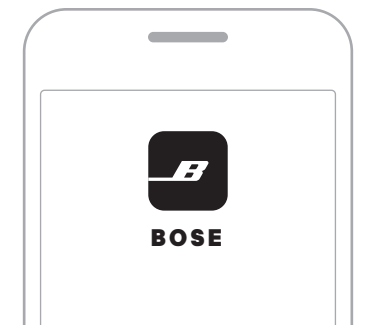

2. 按照应用说明添加扬声器。

重新连接设备

重新连接最近连接的设备


打开电源时，扬声器会连接到最近连接的两个设备。

注意：


- 这些设备必须在连接范围内（9 米）并已通电。
- 请确保您的设备已启用 *Bluetooth* 功能。

重新连接其他设备

注意：这些设备必须在连接范围内（9 米）并已通电。

1. 按下 *Bluetooth* 按钮  并松开，即可听到当前连接的设备。



2. 在 2 秒钟内，再次按下 *Bluetooth* 按钮  即可听到扬声器设备列表中下一个设备的名称。
3. 重复该操作，直到您听到正确的设备名称。
4. 播放已连接设备的音频。

提示：您还可以使用设备的 *Bluetooth* 设置或 *Bose* 应用重新连接其他设备（请参见第 13 页）。

注意：如果有两个设备已经连接到扬声器，新连接的设备将取代两个连接中之前连接的设备。

连接其他设备

扬声器可以同时主动连接两个设备（多点连接）。

要连接其他设备，请参见第 12 页。


注意：

- 您一次只能播放一台设备的音频。
- 要管理或禁用多点连接功能，请使用 Bose 应用。要访问此选项，请点击产品控制屏幕上的 Source（音源）。
- 禁用多点连接功能会断开第二个设备的连接。

识别已连接的设备

1. 按下 *Bluetooth* 按钮  并松开，即可听到当前连接的设备。



2. 在 2 秒钟内，再次按下 *Bluetooth* 按钮  即可听到耳机设备列表中下一个设备的名称。

在两个连接的设备之间切换

1. 暂停第一个设备上的音频。
2. 播放第二个设备上的音频。

断开设备

使用设备的 *Bluetooth* 设置或 Bose 应用。

注意：禁用设备上的 *Bluetooth* 功能会断开扬声器和所有其他 *Bluetooth* 连接产品的连接。

清空扬声器设备列表

1. 按住 *Bluetooth* 按钮 15 秒，直到您听到 “*Bluetooth device list cleared. Ready to connect*”（已清除蓝牙设备列表。已准备好连接），且 *Bluetooth* 指示灯缓慢闪烁蓝光。



2. 从设备上的 *Bluetooth* 列表中删除扬声器。

所有设备已被清空，并且扬声器已准备好连接（请查看第 12 页）。

仅限 ANDROID 设备

如果您有一个 Android 设备，可以访问以下其他连接功能。

使用快速配对连接

只需轻点一下，扬声器即可快速、方便地与您的 Android 设备进行 *Bluetooth* 配对。

注意：

- 要使用快速配对，您需要运行 Android 6.0 或更高版本的 Android 设备。
 - 您的 Android 设备必须已启用 *Bluetooth* 和定位功能。
1. 按住 *Bluetooth* 按钮 ，直到听到“Ready to connect”（已准备好连接），*Bluetooth* 指示灯慢闪蓝光。



注意：如果已经连接了一个设备，您会听到“Ready to connect another device”（准备好连接其他设备）。

2. 将扬声器放在 Android 设备旁边。

设备上会显示通知，提示您对扬声器进行配对。

注意：如果没有看到通知，请检查您设备上的 Google Play Services 应用是否启用了通知。

3. 点击通知。

扬声器连接好后，会出现一条通知，确认连接完成。

注意：您还可以点击通知上的按钮下载 Bose 应用并完成扬声器设置。


Snapdragon Sound 技术

Bose SoundLink Plus 手提音箱采用 Snapdragon Sound 技术。Snapdragon Sound 通过优化 Qualcomm® 音频技术，保证连接设备之间流媒体音频的音质、连接稳定性和延迟实现最佳。


要体验 Snapdragon Sound，您需要一个经过 Snapdragon Sound 认证的设备，如兼容的 Android 设备。连接扬声器后，您的设备将自动使用 aptX Adaptive *Bluetooth* 编解码器进行音频流传输。

注意：要查看扬声器支持哪些 Snapdragon Sound 功能并检查您的设备是否兼容，请访问：support.bose.com/sl-plus


控件位于扬声器顶部。

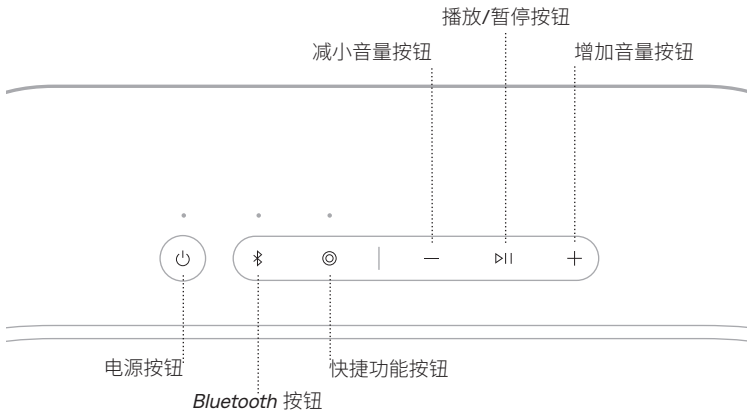

打开/关闭电源



按下电源按钮 .

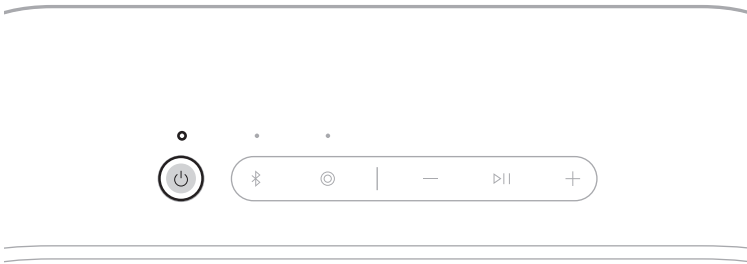开机时，语音提示会告知电池电量。电源指示灯根据当前的电池电量亮起（请参见第 25 页）。





自动关闭计时器

扬声器使用电池运行时，自动关闭计时器有助于节省电量。当音频已停止且已有 20 分钟未触动按钮时，扬声器将关闭。

要唤醒扬声器，请按电源按钮  或按住 *Bluetooth* 按钮 .

注意：要更改定时器设置，请使用 Bose 应用。您可以从“设置”菜单中访问此选项。


禁用自动关闭计时器

同时按住播放/暂停按钮  和增大音量按钮 。您将听到“Auto-off disabled”（自动关机已禁用）。

重复即可重新启用自动关闭计时器。

提示：您也可使用 Bose 应用来禁用自动关闭计时器。您可以从“设置”菜单中访问此选项。

媒体播放和音量

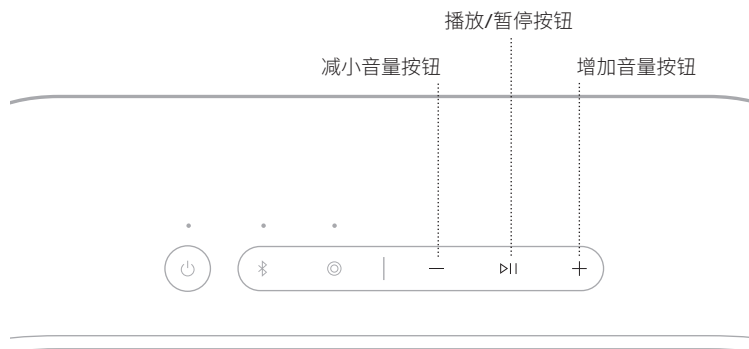

功能	操作方法
播放/暂停	按下 ▷ 。
快进	双按 ▷ 。
快退	三按 ▷ 。
调高音量	按下 +。 注意： <ul style="list-style-type: none"> 要快速提高音量，按住 +。 达到最大音量时，<i>Bluetooth</i> 指示灯会闪烁白色光 2 次。
调低音量	按下 -。 注意： <ul style="list-style-type: none"> 要快速降低音量，按住 -。 达到最小音量时，<i>Bluetooth</i> 指示灯会闪烁白色光 2 次。


提示：您还可以使用设备上或 Bose 应用中的音量控件增大或减小音量。您可以在产品控制屏幕上访问该选项。

为扬声器充电


小心：扬声器潮湿时，请勿尝试充电。否则可能会损坏扬声器。扬声器可防水，但在充电前 USB-C 端口必须完全干燥。

注意：确保使用 Bose 提供的 USB 线缆或类似的 USB 线缆。Bose 建议使用 5V 三、1.5A 的电源。

1. 将线缆的 USB-C 端连接至扬声器后面的 USB 端口。

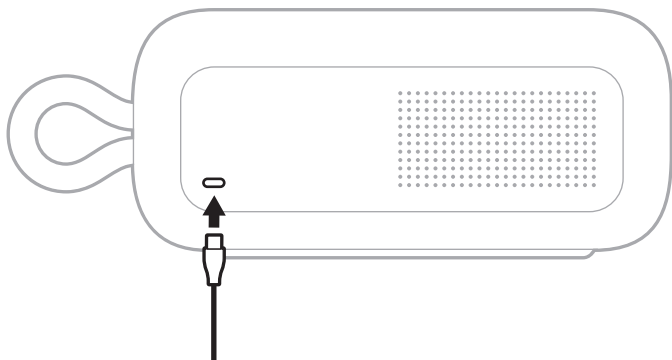

2. 将线缆的 USB-A 一端连接到电源，如电脑或壁式充电器。

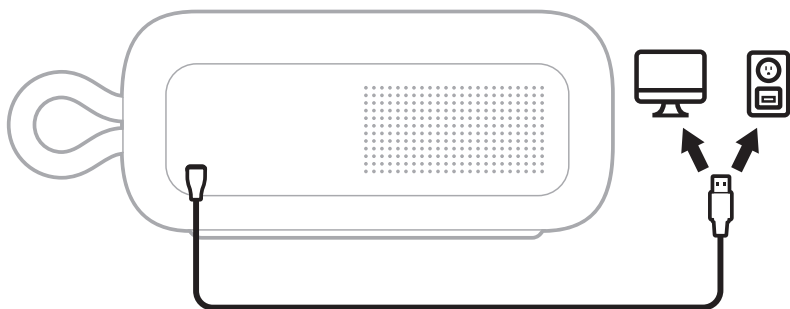

充电时，电池指示灯会闪烁白色光。电池充满电后，电池指示灯呈常亮白色光亮起。

充电时间


最长需要 7 小时即可将电池充满电¹。

充满电后，扬声器可使用多达 20 小时²。在最大音量下，电池可持续使用 4 小时³。


充电时间和电池性能随 USB 供电能力、音乐内容、扬声器音量而变化。

收听电池电量提示

每次打开扬声器电源时，语音提示都会播报电池电量。使用扬声器过程中，若电池需要充电，会进行语音提示。

按住电源按钮 ，直到听到提示音。

电池保护模式

当扬声器电池电量耗尽 (0%) 时，它会进入电池保护模式。要重新激活扬声器，请将其连接到电源并按下电源按钮 。

不使用时，请将扬声器存放在阴凉处。

小心：不要在电池充满电或剩余电量少于 10% 时长期保存扬声器。

所有测试均由 Bose 使用具有生产代表性的 Bose SoundLink Plus 手提音箱进行。


- 1 使用 5V/1.5A (7.5W) USB-A 电源，在设备处于待机模式时充电，电量可从 0% 到 100%。不使用 7.5W 电源时，充电时间会有所不同。使用 5V/3A (15W) 电源可达到最大充电速度。
- 2 使用 Bluetooth A2DP 音频，音量为 65%，温度在 20°C - 25°C 之间，并使用默认 EQ，播放 2024 年 11 月前全球前 50 名热门曲目的混合音轨，不对外接设备充电。电池性能因用户的具体情况而异，如音频内容、响度和环境温度。
- 3 使用 Bluetooth A2DP 音频，音量为 100%，温度在 20°C - 25°C 之间，并使用默认 EQ，播放 2024 年 11 月前全球前 50 名热门曲目的混合音轨，不对外接设备充电。电池性能因用户的具体情况而异，如音频内容、响度和环境温度。

为设备充电


注意：使用扬声器为设备充电时，需要使用 USB-C 到 USB-C 连接线（未提供）。扬声器不支持使用 USB-C 到 USB-A 连接线为设备充电。

小心：扬声器潮湿时，请勿尝试为设备充电。否则可能会损坏扬声器。扬声器可防水，但在充电前 USB-C 端口必须完全干燥。如果检测到潮湿，电源指示灯将缓慢闪烁白色和琥珀色光（请参见第 25 页）。

1. 将 USB-C 线缆的一端连接至扬声器背面的 USB-C 端口。

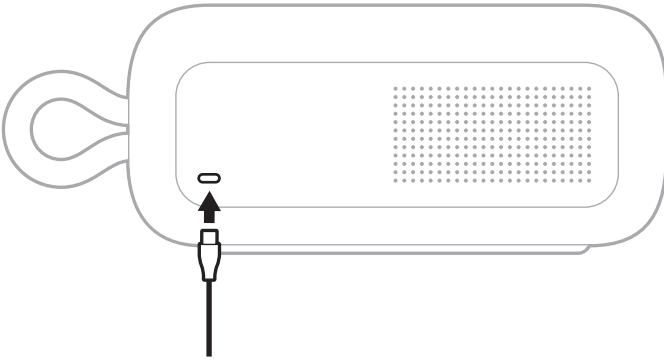


2. 将线缆的另一端连接到设备上的 USB-C 端口。

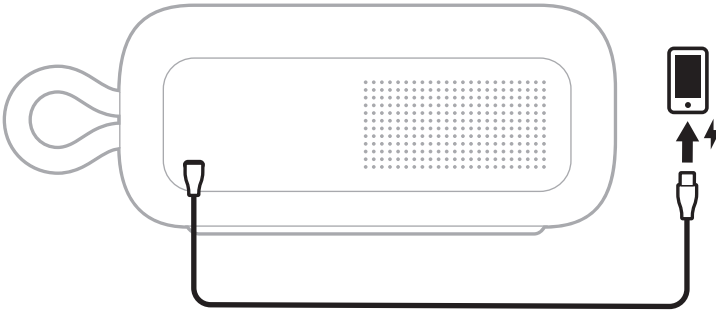

设备上会显示充电状态。

电源、Bluetooth 和快捷功能指示灯位于扬声器的上方。

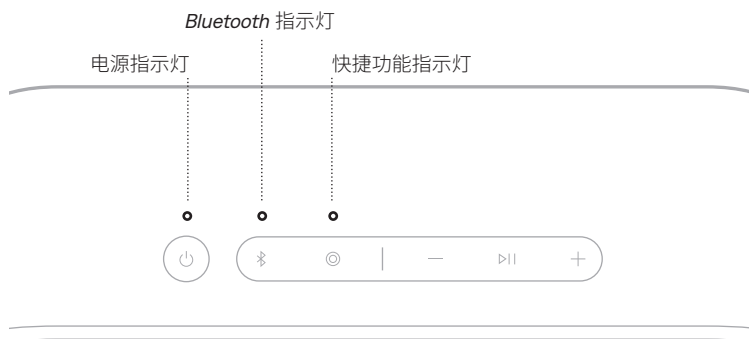

电源指示灯

显示电池、充电、更新和错误状态。

指示灯活动	系统状态
常亮白色光	充满电
常亮琥珀色光	低电量
闪烁琥珀色	需要充电
慢闪白色光	正在充电
闪烁白色光 3 次 (重复)	更新软件
快速闪烁白色光 (3 秒钟)	重置完成
缓慢闪烁白色和琥珀色光 (交替)	检测到潮湿 - 充电前保持 USB-C 端口完全干燥
快速闪烁白色和琥珀色光 (交替)	错误 - 联系 Bose 客户服务处
闪烁琥珀色光 3 次 (重复)	电池故障 - 联系 Bose 客户服务处

BLUETOOTH 指示灯

显示 *Bluetooth* 连接状态。

指示灯活动	系统状态
慢闪蓝色光	已准备好连接
快闪蓝色光	正在连接
常亮白色光	已连接
闪烁白色光 2 次	设备列表已清空

快捷功能指示灯

将链接设置为快捷方式时显示扬声器的状态。

指示灯活动	系统状态
缓慢闪烁白色光	扬声器正在连接
常亮白色光	扬声器已连接

语音提示指导您完成 *Bluetooth* 连接过程、播报电池电量，并识别已连接的设备。

提示：您还可以使用 Bose 应用方便地管理语音提示。从“设置”菜单中访问此选项。

预安装的语言



扬声器上预安装了以下语言：

- 英语
- 西班牙语
- 法语
- 德语
- 意大利语
- 中文
- 日语
- 广东话

更改语言

使用 Bose 应用更改语音提示语言。从“设置”菜单中访问此选项。

禁用语音提示

同时按住快捷功能按钮  和减小音量按钮  直到您听到“Voice prompts off”（语音提示关闭）。

注意：重复操作以重新启用语音提示。

可编程快捷功能按钮  让您可以快速方便地访问下列功能之一：


- 连接两个 Bose Bluetooth 扬声器（默认）（请参见第 30 页）
- 使用 Spotify Tap（请参见第 29 页）

使用快捷功能

按快捷功能按钮 。

快捷功能指示灯会闪烁一下。



注意：默认情况下，快捷按钮  被设置为连接两个 Bose Bluetooth 扬声器（请参见第 30 页）。

更改或禁用快捷方式

要更改或禁用快捷方式，请使用 Bose 应用。要访问此选项，请点按产品控制屏幕上的快捷方式。

Spotify Tap 会为您带来真实悦耳的音乐体验。仅需简单的操作手势即可播放音乐。

注意：要使用 Spotify Tap，必须在 Bose 应用中将其设置为快捷方式，并且 Spotify 应用必须是最新的。

1. 按下快捷按钮 ，按您的收听品味播放推荐的音乐。




2. 再次按下快捷按钮 ，播放下一首为您推荐的音乐。

连接两个 BOSE BLUETOOTH 扬声器

为了获得更加身临其境的音乐体验，您可以将 Bose SoundLink Plus 手提音箱与另一个兼容的 Bose Bluetooth 扬声器同步，在两个扬声器中以立体声模式或派对模式播放同一个音频。

- 立体声模式（左扬声器和右扬声器独立播放）
- 派对模式（两个扬声器同步播放）

注意：

- 快捷功能按钮  默认设置为连接两个 Bose Bluetooth 扬声器。
- 您一次仅可以连接一个其他扬声器。
- 确保两个扬声器在 9 米的连接范围内。
- 确保两个扬声器在距流媒体设备 9 米的连接范围内。
- 为获得最佳体验，请将扬声器放置在同一房间或室外，中间不要有障碍物。性能可能会因设备、距离和环境因素而有所差异。

兼容产品


您可以将 Bose SoundLink Plus 手提音箱连接到任何具有快捷按钮的 Bose Bluetooth 扬声器。



使用产品控件进行连接


1. 在扬声器上按快捷功能按钮 。

语音提示会指示您按下第二个扬声器上的快捷功能按钮。快捷功能指示灯会慢慢闪烁白色光。

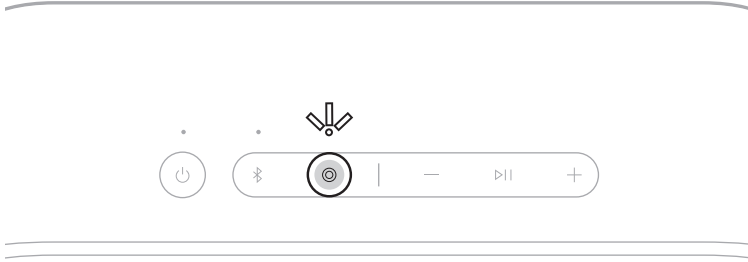

2. 在第二个兼容的 *Bose Bluetooth* 扬声器上，按快捷功能按钮 。

快捷功能指示灯会慢慢闪烁白光。

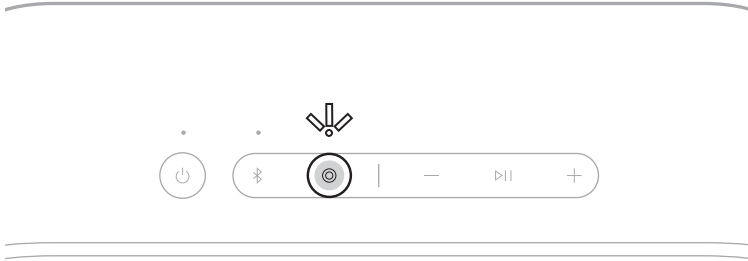


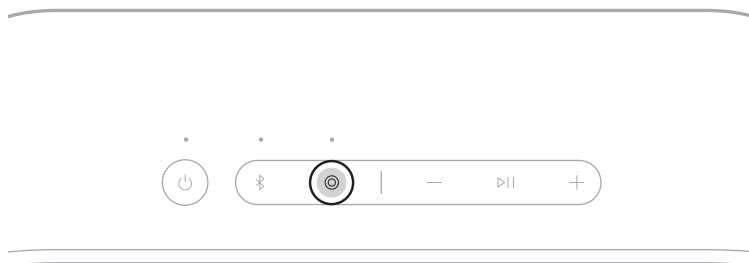
连接两个扬声器后，两个扬声器上都会发出语音提示。两个扬声器上的快捷功能指示灯都会常亮白色光。

注意：如果扬声器型号相同，则会听到“Stereo mode”（立体声模式），然后主扬声器发出“Left”（左），副扬声器会发出“Right”（右）。如果扬声器型号不同，则两个扬声器上都会发出“Party mode”（派对模式）。



在立体声模式和派对模式之间切换

在任一扬声器上按快捷功能按钮 。



每个扬声器上都会有语音提示播报模式。

注意：如果扬声器型号不同，则只能在派对模式下播放音频。

提示：您也可以使用 Bose 应用在立体声模式和派对模式之间切换。您可以在产品控制屏幕上访问该选项。

断开扬声器连接

在任一扬声器上按电源按钮  或长按快捷功能按钮 。



语音提示将通知扬声器不再连接。

提示：您也可以使用 Bose 应用断开扬声器的连接。您可以在产品控制屏幕上访问该选项。

连接 BOSE 智能扬声器或条形扬声器

您可以使用 Bose SimpleSync 技术将扬声器连接到 Bose 智能扬声器或 Bose 智能条形扬声器配对，以便同时在不同的房间听同一首歌。

注意：SimpleSync 技术的 *Bluetooth* 连接范围为 9 米。墙壁和建筑材料可能会影响信号接收。

兼容产品


您可以将扬声器连接到任何 Bose 智能扬声器或 Bose 智能条形扬声器。


受欢迎的兼容产品包括：

- Bose Ultra 智能条形扬声器/Bose Ultra 条形扬声器
- Bose 900 智能条形扬声器
- Bose 700 智能条形扬声器/Bose 700 条形扬声器
- Bose 600 智能条形扬声器
- Bose 500 条形音箱
- Bose 500 智能扬声器/Bose 500 家庭娱乐扬声器
- Bose 300 家庭娱乐扬声器
- Bose 便携式智能扬声器/Bose 便携式家庭娱乐扬声器

将定期添加新产品。如需完整列表和更多信息，请访问：support.bose.com/Groups

使用 Bose 应用连接

1. 按住 *Bluetooth* 按钮 ，直到听到“Ready to connect”（准备连接），*Bluetooth* 指示灯慢闪蓝光。

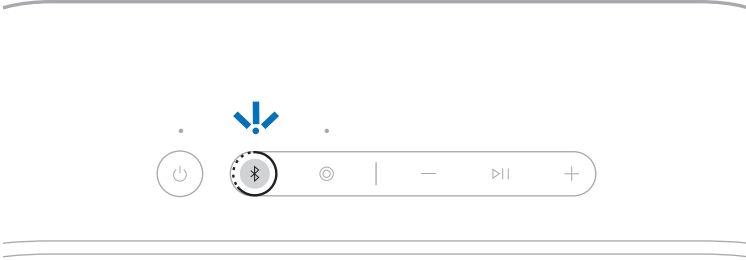


注意：如果已经连接了一个设备，您会听到“Ready to connect another device”（准备好连接其他设备）。

2. 使用 Bose 应用将扬声器连接到兼容的 Bose 产品。有关更多信息，请访问：support.bose.com/Groups

注意：

- 连接可能需要 30 秒的时间。
- 确保扬声器距离扬声器或条形音箱不超过 9 米。
- 您一次只能将扬声器连接到一个产品。

使用产品控件连接

1. 按住 *Bluetooth* 按钮 ，直到听到“Ready to connect”（准备连接），*Bluetooth* 指示灯慢闪蓝光。



注意：如果已经连接了一个设备，您会听到“Ready to connect another device”（准备好连接其他设备）。

2. 在条形音箱遥控器或扬声器顶部，长按 *Bluetooth* 按钮 ，直到灯条或灯环闪烁蓝色光。

扬声器将连接到条形音箱或扬声器，您将通过两个设备听到相同的音频。

注意：

- 连接可能需要 30 秒的时间。
- 确保扬声器距离扬声器或条形音箱不超过 9 米。
- 您一次只能将扬声器连接到一个产品。

重新连接 BOSE 智能扬声器或 BOSE 智能条形扬声器


使用 Bose 应用将扬声器重新连接到以前连接的兼容的 Bose 产品。有关更多信息，请访问：support.Bose.com/Groups

注意：

- 扬声器或条形音箱必须在连接范围内（9 米）并已通电。
- 如果扬声器未连接，请参见第 40 页上的“扬声器未与之前连接的 Bose 智能扬声器或 Bose 智能条形扬声器重新连接”。

束带使用

您可以将束带当作指环使用，以方便携带扬声器。也可以把它固定在扣环或绳子上。

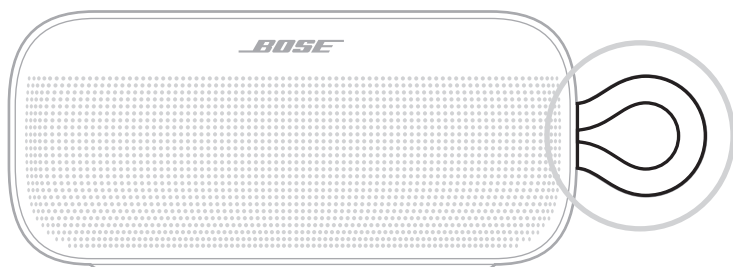

防水防尘

扬声器防水、防溅和防尘。为 IP67 和 IP64 评级。扬声器可浸入 1 米水深中最长 30 分钟。您也可以在淋浴和雨中或雪中使用。

小心：

- 请勿将此扬声器浸入任何深度超过 1 米的水池中。
- 如果扬声器暴露于盐或含氯的水中，请随后用淡水轻轻冲洗以清除残留物。充电前，请确保连接器端口完全干燥。
- 扬声器潮湿时，请勿尝试对其充电。否则可能会损坏扬声器。



维修扬声器电池

本产品只能使用兼容的 Bose 认证电池。有关电池维修选项，请联系 Bose 客户服务处或访问 support.Bose.com/sl-plus。

更新扬声器

当连接到 Bose 应用且有更新可用时，扬声器会自动开始更新。请按照应用说明执行操作。更新开始时，电源指示灯会闪烁白色光 3 次（重复），直至更新完成。

您也可以使用 Bose updater 网站更新扬声器。在您的计算机上，访问：btu.Bose.com 并按屏幕说明操作。更新开始时，电源指示灯会闪烁白色光 3 次（重复），直至更新完成。

清洁扬声器

扬声器可能需要定期清洁。

- 使用柔软的湿布（仅用水）清洁扬声器表面。充电前，请确保 USB-C 端口完全干燥。
- 请勿使用任何溶剂、化学品或含酒精、氨水、研磨剂的清洁剂。
- 如果扬声器暴露于盐或含氯的水中，请随后用淡水轻轻冲洗以清除残留物。充电前，请确保 USB-C 端口完全干燥。

存放扬声器

不使用时，请将扬声器存放在阴凉处。

小心：切勿在电池充满电或电量较低时（参见第 23 页），长时间存放扬声器。

更换零件和配件

可通过 Bose 客户服务处订购更换零件或配件。

请访问：support.Bose.com/sl-plus


有限质保

扬声器享受有限质保。有关有限质保的详细信息，请访问我们的网站：worldwide.Bose.com/Warranty。

要注册您的产品，请访问 worldwide.Bose.com/ProductRegistration 以获取说明。未进行注册并不影响您的有限质保权利。

首先尝试这些解决方案

如果扬声器出现问题：

- 关闭并重新打开扬声器的电源（请参见第 19 页）。
- 检查状态指示灯（请参见第 25 页）。
- 确保设备支持 *Bluetooth* 连接（请参见第 12 页）。
- 为扬声器充电（请参见第 22 页）。
- 提高扬声器、设备和音乐应用的音量。
- 将您的设备靠近扬声器（9 米），并远离任何干扰或障碍物。
- 尝试连接另一台设备（请参见第 12 页）。
- 按住电源按钮  15 秒钟重置扬声器（请参见第 41 页）。

若无法解决问题，请参见下表了解常见问题的症状和解决方案。您还可以访问故障排除文章、视频和其他资源，网址为：support.bose.com/sl-plus

若仍然无法解决问题，请联系 Bose 客户服务处。

请访问：worldwide.bose.com/contact

其他解决方案

症状	解决方案
没有通电（电池）	<p>电池可能处于保护模式或电池已完全放电。将扬声器连接到电源（请参见第 23 页）。</p> <p>电池可能需要维修。请联系 Bose 客户服务处（请参见第 37 页）。</p>
扬声器无法与设备连接	<p>清空扬声器的设备列表（请参见第 16 页）。从设备上的 <i>Bluetooth</i> 列表中删除扬声器。再次连接（请参见第 12 页）。</p> <p>请访问：support.bose.com/sl-plus 获取更多支持。</p>
扬声器对多次按压功能无响应	<p>改变按压速度。</p>

症状	解决方案
没有声音	<p>确保使用 Bose 应用启用了语音提示。按下 <i>Bluetooth</i> 按钮  并松开，收听已连接的设备。确保您使用的是正确的设备。</p> <p>请使用其他音乐源。</p> <p>如果连接了两个设备，暂停第一个设备上的音频，然后播放另一个设备上的音频。</p>
通过 <i>Bluetooth</i> 连接的设备音质不佳	<p>请使用其他音乐源。</p> <p>如果连接了两台设备，请断开第二台设备的连接。</p> <p>禁用设备或音乐应用上的任何音频增强功能。</p> <p>如果扬声器进水，请等待干燥后重试。</p>
音频延迟	<p>使用不同应用或音乐服务播放音频。</p> <p>关闭并重新打开应用或音乐服务。</p>
扬声器不充电	<p>确保 USB-C 转 USB-A 线缆的两端都连接牢固（第 22 页）。</p> <p>确保使用 Bose 提供的 USB-C 到 USB-A 线缆或类似的 USB 线缆，且规格至少为 5V---, 1.5A。</p> <p>尝试其他充电电源和充电线。</p> <p>如果扬声器曾暴露在高温或低温环境中，请先等待扬声器恢复室温，然后再次尝试充电。</p> <p>如果扬声器进水，请等待干燥后重试。</p> <p>如果问题仍然存在，请联系 Bose 客户服务处申请更换电池并替换旧电池（请参见第 37 页）。</p>
扬声器未与 Bose <i>Bluetooth</i> 扬声器连接	<p>确保您连接的是兼容的 Bose <i>Bluetooth</i> 扬声器（请参见第 30 页）。</p>
连接好 Bose <i>Bluetooth</i> 扬声器时没有声音	<p>确保主扬声器的电源已打开。如果关闭主扬声器，副扬声器将停止播放音频。</p>

症状	解决方案
移动设备无法充电	<p>确保您使用的是 USB-C 线缆（未提供）。扬声器不支持使用 USB-C 到 USB-A 连接线为设备充电。</p> <p>确保 USB-C 线缆两端连接牢固（参见第 24 页）。</p> <p>如果扬声器进水，请等待干燥后重试。</p> <p>确保您的设备可以接受其他设备的充电。请参阅移动设备的用户指南。</p> <p>断开扬声器的 USB-C 线览，然后重新连接。如果设备仍然无法充电，请断开 USB-C 线缆与设备的连接，然后重新连接。如果无法解决问题，请参见设备用户指南。</p>
扬声器无法连接到 Bose 智能扬声器或 Bose 智能条形扬声器	<p>确保正在使用 Bose 应用进行连接（请参见第 13 页）。</p> <p>确保您的 Bose 智能扬声器或 Bose 智能条形扬声器正在运行最新的软件。使用 Bose 应用并运行可用的软件更新。</p> <p>确保您正在连接到一个兼容的 Bose 产品。如需兼容产品的清单，请访问：support.Bose.com/Groups</p> <p>按住 <i>Bluetooth</i> 按钮 ，直到 <i>Bluetooth</i> 指示灯闪烁蓝色，并且您听到“Ready to connect another device”（准备好连接其他设备）。</p> <p>确保扬声器在条形音箱或扬声器的 9 米连接范围内。</p>
扬声器未与之前连接的 Bose 智能扬声器或 Bose 智能条形扬声器重新连接	<p>在扬声器上，按住 <i>Bluetooth</i> 按钮 ，直到 <i>Bluetooth</i> 指示灯闪烁蓝色光，并且您听到“Ready to connect another device”（准备好连接其他设备）。使用 Bose 应用将扬声器连接到兼容的 Bose 产品。有关更多信息，请访问：support.Bose.com/Groups</p>
连接到 Bose 智能扬声器或 Bose 智能条形扬声器时音频存在延迟	<p>下载 Bose 应用（请参见第 13 页）并运行所连接扬声器和条形音箱的可用软件更新。</p> <p>在计算机上，检查 btu.Bose.com 上是否有 USB 更新。</p>

重置扬声器

如果扬声器没有响应，可将其重置。

重置扬声器可重置产品控制并重启扬声器。它不会清除任何设备设置。

注意：确保 USB-C 到 USB-A 线缆未连接至扬声器。

1. 按住“电源”按钮  15 秒直到扬声器的电源关闭。



2. 按下电源按钮 .

电源指示灯根据电池电量亮起（请参见第 25 页）。

注意：若仍然无法解决问题，可在以下网站获得更多的故障排除和支持信息：
support.Bose.com/sl-plus

还原扬声器

出厂重置将从扬声器上清除连接的设备 and 语言设置，返回到原始出厂设置。

1. 按住调高音量按钮 + 和调低音量按钮 - 15 秒钟，直到电源指示灯快速闪烁白光 3 秒钟。



关闭扬声器的电源。

2. 按下电源按钮 .


Bluetooth 指示灯亮起蓝色光，且扬声器已准备好连接。

注意：若仍然无法解决问题，可在以下网站获得更多的故障排除和支持信息：
support.Bose.com/sl-plus

請閱讀並保管好所有安全和指示。

有關 Bose SoundLink Plus 可攜式揚聲器的更多資訊，請造訪：support.Bose.com/sl-plus

您可以從以下位置找到符合聲明：www.Bose.com/compliance

 Bose Corporation 在此聲明本產品遵守 2014/53/EU 指令和其他所有適用歐盟指令要求中的基本要求和相關規定。

重要安全指示

如果揚聲器暴露於鹽或含氯的水中，隨後請用淡水輕輕沖洗以清除殘留物。充電前，請確認連接器埠完全乾燥。請勿堵塞任何通風口。

只能使用製造商指定的附件/配件。

任何維修事宜均請向合格的人員諮詢。當裝置不能正常運行或有物理損壞時，需要進行維修。

警告/小心



包含小零件，可能導致窒息危險。不適合 3 歲以下的兒童使用。



本產品含有磁性材料。諮詢醫生了解此裝置是否會影響植入式醫療裝置。



此符號表示在電池不相容或安裝不當的情況下使用本產品可能會造成安全風險。請聯絡 Bose 客戶服務中心以了解電池服務選項，或造訪 [bose.com/batt](https://www.bose.com/batt) 以了解更多資訊。

- 本產品只能使用相容的 Bose 認證電池。如需了解電池服務選項，請聯絡 Bose 客戶服務中心。
- 如未妥善處理、更換不當或更換為不正確的類型，本產品所用電池可能導致著火、爆炸或化學灼傷。
- 請勿使含電池產品過熱（例如存放時請避免陽光直射並遠離火源等）。
- 如果電池漏液，請避免讓液體與皮膚或眼睛接觸。如果接觸到了液體，請諮詢醫生。
- 保持產品遠離火源和熱源。請勿將明火火源（如點燃的蠟燭）置於本產品上或靠近本產品。
- 未經授權切勿擅自改裝本產品。
- 本系統隨附的揚聲器線纜和互連連接線不可用於入牆式安裝。請根據當地建築法規選取正確的入牆式安裝電線和連接線。
- 僅將本產品搭配經過相關部門批准且符合本地監管要求（如 UL、CSA、VDE、CCC）的 LPS 電源使用。
- 產品標籤位於產品底部。
- 為避免火災危險，切勿在本產品下方放置任何加熱或烹飪設備。

注意：本設備已經過測試，符合 FCC 規則第 15 部分有關 B 類數位裝置的各項限制。這些限制性規定旨在防範安裝在住宅中的裝置產生有害干擾。本設備產生、使用並可能發散無線射頻能量，如果不按照指示安裝和使用，則可能會對無線電通訊造成有害干擾。然而，按照指示安裝並不能保證某些安裝不會發生干擾。如果本設備確實對無線電或電視接收造成有害干擾（可透過關閉和開啟本設備來確定），使用者可嘗試採取以下一或多種措施來糾正干擾：

- 重新調整接收產品或天線的方向或位置。
- 增大本設備和接收器的間距。
- 將本設備和接收器電源線插入不同線路上的插座中。
- 請諮詢經銷商或有經驗的無線電/電視技術人員以獲得協助。

未經 Bose Corporation 明確批准，擅自變更或改裝本設備可能會使使用者操作本設備的授權失效。

本裝置符合 FCC 規則第 15 部分規定和加拿大 ISED 免許可證 RSS 標準。本裝置工作時應滿足下列兩種情形：(1) 本裝置不得造成有害干擾；(2) 本裝置必須承受任何接收到的干擾，包括可能造成裝置異常工作的干擾。

本裝置符合為公眾闡明的 FCC 和加拿大 ISED 輻射限制。本發射器不得與其他天線或發射器位於同一地點或同時運行。

CAN ICES (B) / NMB (B)

適用於歐洲：工作頻帶 2400 至 2483.5 MHz。| 最大傳輸功率低於 20 dBm EIRP。

最大傳輸功率低於監管限制，因此無需 SAR 測試並根據適用法規豁免。



此符號表示本產品不得作為家庭垃圾丟棄，應該送至相關回收部門循環利用。適當的處理和回收有助於保護自然資源、人類健康以及自然環境。想了解更多有關本產品的處理和回收資訊，請與當地民政部門、廢棄物處理服務機構或售出本產品的商店連絡。

低功率射頻器材技術規範：取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

充電器提供的功率必須介於無線電設備所需的最小 2.5W 和最大 15W 之間，才能實現最大充電速度。



廢電池請回收


請遵守本地法規，適當處理廢舊電池。請勿將其焚化。



Li-ion

有毒或有害物質或元素的名稱及成分										
零件名稱	有毒或有害物質或元素									
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr(VI))	多溴化聯苯 (PBB)	多溴二苯醚 (PBDE)	鄰苯二甲酸二正丁酯 (DBP)	鄰苯二甲酸二異丁酯 (DIBP)	鄰苯二甲酸丁苄酯 (BBP)	鄰苯二甲酸二(2-乙基己)酯 (DEHP)
印刷電路板	X	○	○	○	○	○	○	○	○	○
金屬零件	X	○	○	○	○	○	○	○	○	○
塑膠零件	○	○	○	○	○	○	○	○	○	○
揚聲器	X	○	○	○	○	○	○	○	○	○
連接線	X	○	○	○	○	○	○	○	○	○

此表格根據 SJ/T 11364 條款編製。
 ○：表示此零件中所有同類物質包含的有毒或有害物質低於 GB/T 26572 中的限定要求。
 X：表示此零件使用的同類物質中至少有一種包含的有毒或有害物質高於 GB/T 26572 中的限定要求。



設備名稱：Bluetooth 揚聲器 型號：443516							
裝置	限用物質及其化學符號						
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁶⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)	
印刷電路板	—	○	○	○	○	○	○
金屬零件	—	○	○	○	○	○	○
塑膠零件	○	○	○	○	○	○	○
揚聲器	—	○	○	○	○	○	○
連接線	—	○	○	○	○	○	○

備註 1：「○」表示限用物質的濃度百分比含量未超過參考值。
備註 2：「—」表示限用物質屬於豁免項目範圍。

生產日期：序號中第八位數字表示生產年份；「5」表示 2015 年或 2025 年。

進口商：Bose 電子（上海）有限公司，上海市閔行區顧戴路 2337 號豐樹商業城塔樓 D 第 6 層（郵編：201100）Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Joselillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398 電話：+52 55 5263 6500 | Bose 有限公司 (H.K.)，台北市民生東路三段 2 號 7F 104511，電話：+886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

輸入額定：5V $\overline{\text{---}}$ ，3A | **輸出額定值：**5V $\overline{\text{---}}$ ，3A

型號：443516。CMIIT ID 位於揚聲器的底部。

本產品由 Bose 提供有限保固，詳見 worldwide.Bose.com/Warranty

許可揭露：要查看作為 Bose SoundLink Plus 可攜式揚聲器隨附的第三方軟體套裝的授權揭露，請使用 Bose 應用程式。您可以從「設定」功能表中存取此資訊。

Apple、Apple 標誌、iPad 以及 iPhone 是 Apple Inc. 在美國和其他國家註冊的商標。App Store 是 Apple Inc. 的服務標記。商標「iPhone」已獲得 Aiphone K.K. 在日本的使用授權。

使用「Apple AirPlay」和「Works with Apple AirPlay」專用標記表示此附件的設計專門用來與「Made for Apple」標記中認定的 Apple 產品連接，並和「Works with Apple AirPlay」標記中認定的技術配合使用，且通過了開發商的認證，符合 Apple 的效能標準。Apple 對此裝置的工作或其與安全和監管標準的合規性概不負責。

Bluetooth® 文字標記和標誌是由 Bluetooth SIG, Inc. 所擁有的註冊商標，Bose Corporation 對上述標記的任何使用都遵守授權規定。

Android 和 Google Play 是 Google LLC 的商標。

Snapdragon Sound 是 Qualcomm Technologies, Inc. 和/或其子公司的產品。Qualcomm、Snapdragon 和 Snapdragon Sound 是 Qualcomm Incorporated 的商標或註冊商標。

Spotify 是 Spotify AB 的註冊商標。

USB Type-C® 和 USB-C® 是 USB Implementers Forum 的註冊商標。

Bose、B 徽標、SimpleSync 和 SoundLink 是 Bose Corporation 的商標。| Bose 公司總部：1-877-230-5639 | ©2025 Bose Corporation。未經事先書面許可，不得複製、修改、發行或以其他方式使用本指南的任何部分。

請填寫以下內容，留作記錄

序號和型號位於揚聲器的底部。

序號： _____

型號：443516

請保留您的收據。現在是註冊您的 Bose 產品的好機會。您可以到 worldwide.Bose.com/ProductRegistration 輕鬆完成註冊。

裝箱單

目錄.....	9
---------	---

開始使用

初始設定	10
------------	----

BLUETOOTH® 連接

連接到裝置	12
使用裝置的 <i>Bluetooth</i> 設定.....	12
使用 Bose 應用程式	13
重新連接裝置.....	14
重新連接最近連接過的裝置	14
重新連接不同的裝置	14
連接其他裝置.....	15
識別已連接的裝置	15
在兩台連接的裝置之間切換.....	15
斷開裝置	16
清除揚聲器的裝置清單.....	16
僅 Android™ 裝置.....	17
使用快速配對連接.....	17
Snapdragon Sound™ 技術	18

揚聲器控制項

打開 / 關閉電源.....	19
自動關閉計時器.....	20
媒體播放和音量	21

電池

為揚聲器充電.....	22
充電時間.....	23
收聽電池電量.....	23
電池保護模式.....	23
為裝置充電.....	24

狀態

電源指示燈.....	25
<i>Bluetooth</i> 指示燈.....	26
捷徑指示燈.....	26

語音提示

預先安裝的語言.....	27
變更語言.....	27
停用語音提示.....	27

捷徑

使用捷徑.....	28
變更或停用捷徑.....	28

SPOTIFY TAP	29
--------------------------	----

連接 BOSE 產品

連接兩個 Bose <i>Bluetooth</i> 揚聲器.....	30
相容產品.....	30
使用產品控制項連接.....	31
在立體聲模式和派對模式之間切換.....	32
斷開揚聲器連接.....	32

連接 Bose 智慧型揚聲器或家庭娛樂揚聲器.....	33
相容產品.....	33
使用 Bose 應用程式連接.....	34
使用產品控制項連接.....	35
重新連接 Bose 智慧型揚聲器或家庭娛樂揚聲器.....	35

可攜性

束帶使用.....	36
防水且防塵.....	36

維護與保養


維修揚聲器電池.....	37
更新揚聲器.....	37
清潔揚聲器.....	37
存放揚聲器.....	37
更換零件和配件.....	37
有限保固.....	37

疑難排解

首先嘗試這些解決方案.....	38
其他解決方案.....	38
重設揚聲器.....	41
恢復揚聲器.....	42

目錄

請確認包裝箱中內含以下零件：

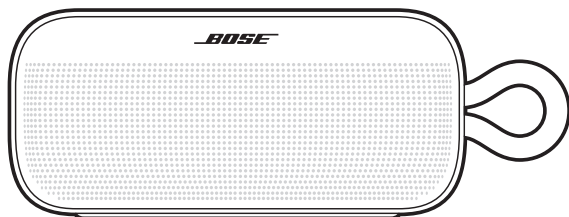

Bose SoundLink Plus 可攜式揚聲器




USB Type-C® 到 USB-A 連接線

注意：如果產品的任何部分缺失或損壞，請勿使用。請造訪：
support.bose.com/sl-plus 了解疑難排解文章、影片以及產品維修或更換資訊。

揚聲器出廠時即已預充少量電力。第一次使用揚聲器之前，請將其連接到電源。揚聲器不需要充滿電也能工作，但要啟用電池，仍然需要進行此初始連接操作。


初始設定

1. 將連接線的 USB-C® 端連接至揚聲器背面的 USB-C 連接埠。

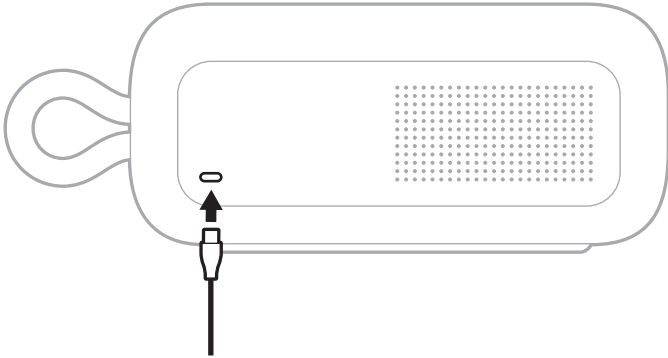


2. 將連接線的 USB-A 端連接到 USB-A 電源。

電源指示燈會慢閃白色光。

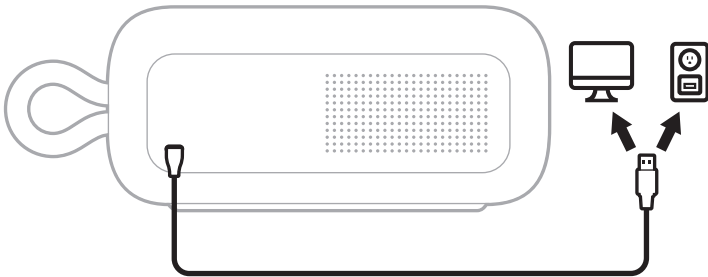

3. 按下電源按鈕 。

電源指示燈會慢閃白色光。您會聽到電池電量提示，然後是「Ready to connect」（準備連接）。Bluetooth 指示燈慢閃藍色光。



4. 連接您的裝置（請參見第 12 頁）。


揚聲器的裝置清單中最多可存儲六台裝置，並且揚聲器一次最多可以主動連接兩台裝置。您一次只能播放一台裝置的音訊。

連接到裝置

您可以使用以下任何一種方法將揚聲器連接到您的裝置：

- 裝置的 *Bluetooth* 設定（請參見「使用裝置的 *Bluetooth* 設定」）
- Bose 應用程式（請參見第 13 頁）
- 快速配對（僅限 Android 裝置）（請參見第 17 頁）


使用裝置的 *Bluetooth* 設定

1. 按住 *Bluetooth* 按鈕 ，直到聽到「Ready to connect」（準備連接），且 *Bluetooth* 指示燈閃爍藍色光。



注意：如果已經連接了一個裝置，您會聽到「Ready to connect another device」（準備連接其他裝置）。

2. 在裝置上存取 *Bluetooth* 設定。
3. 從可用產品清單中選擇揚聲器。

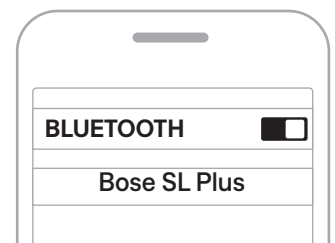

注意：在 Bose 應用程式中查找您為揚聲器輸入的名稱。如果沒有為揚聲器命名，將顯示預設名稱。

揚聲器將顯示在連接的產品清單中。*Bluetooth* 指示燈呈恆亮白色光亮起（請參見第 26 頁）。


使用 Bose 應用程式

您可在任何裝置（例如智慧型手機或平板電腦）上透過 Bose 應用程式設定和控制揚聲器。

您可以使用此應用程式管理 *Bluetooth* 連接、管理揚聲器設定、調整音訊、選擇自己的語音提示語言並獲得 Bose 的更新和新功能。

注意：如果您已經下載了另一款 Bose 產品的 Bose 應用程式，您可以從產品清單螢幕新增揚聲器。

1. 在裝置上，下載 Bose 應用程式。

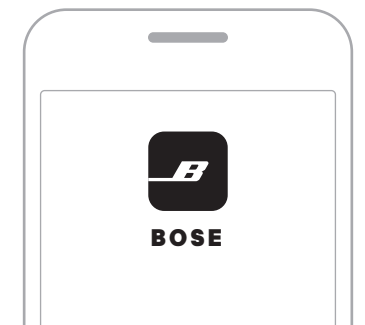

2. 按照應用程式說明新增揚聲器。

重新連接裝置

重新連接最近連接過的裝置

打開電源時，揚聲器將與兩台最近連接的裝置重新建立連接。

注意：


- 裝置必須在連接範圍內（9 公尺）且已開啟電源。
- 請確定您的裝置已啟用 *Bluetooth* 功能。

重新連接不同的裝置

注意：裝置必須在連接範圍內（9 公尺）且已開啟電源。

1. 按下 *Bluetooth* 按鈕  並鬆開，即可聽到當前連接的裝置。



2. 在 2 秒鐘內，按下 *Bluetooth* 按鈕  並再次鬆開，即可聽到揚聲器裝置清單中下一個裝置的名稱。
3. 重複，直到聽到正確的裝置名稱為止。
4. 播放連接的裝置上的音訊。

提示：您還可以使用裝置的 *Bluetooth* 設定或 Bose 應用程式重新連接其他裝置（請參見第 13 頁）。

注意：如果有兩個裝置已經連接到揚聲器，新連接的裝置將取代兩個連接中之前連接的裝置。

連接其他裝置

揚聲器可以同時主動連接兩個裝置（多點連接）。

要連接其他裝置，請參見第 12 頁。

注意：

- 您一次只能播放一台裝置的音訊。
- 要管理或停用多點連接功能，請使用 Bose 應用程式。您可以從「產品控制」螢幕點擊「音源」存取該選項。
- 禁用多點連接功能會斷開第二個裝置的連接。

識別已連接的裝置

1. 按下 *Bluetooth* 按鈕  並鬆開，即可聽到當前連接的裝置。



2. 在 2 秒鐘內，按下 *Bluetooth* 按鈕  並再次鬆開，即可聽到揚聲器裝置清單中下一個裝置的名稱。

在兩台連接的裝置之間切換

1. 暫停第一個裝置上的音訊。
2. 播放第二台裝置上的音訊。

斷開裝置

使用裝置的 *Bluetooth* 設定或 Bose 應用程式。

注意：停用裝置的 *Bluetooth* 功能後，揚聲器和所有其他 *Bluetooth* 連接的產品都將中斷。

清除揚聲器的裝置清單

1. 按住 *Bluetooth* 按鈕 15 秒，直到聽到「*Bluetooth* device list cleared. Ready to connect」（*Bluetooth* 裝置清單已清除，準備連接），且 *Bluetooth* 指示燈閃爍藍色光。



2. 從裝置上的 *Bluetooth* 清單中刪除揚聲器。

所有裝置已被清除，揚聲器可開始連接（請參見第 12 頁）。


僅 ANDROID 裝置

如果您有一個 Android 裝置，可以存取以下額外的連接功能。

使用快速配對連接

只需輕輕一點，揚聲器就能與您的 Android 裝置進行快速、便捷的 *Bluetooth* 配對。

注意：

- 要使用快速配對，您需要運行 Android 6.0 或更高版本的 Android 設備。
 - 您的 Android 裝置必須已啟用 *Bluetooth* 和定位功能。
1. 按住 *Bluetooth* 按鈕 ，直到聽到「Ready to connect」（準備連接），且 *Bluetooth* 指示燈閃爍藍色光。



注意：如果已經連接了一個裝置，您會聽到「Ready to connect another device」（準備連接其他裝置）。

2. 將揚聲器放在 Android 裝置旁邊。

您的裝置上會出現一個通知，提示您對揚聲器進行配對。

注意：如果沒有看到通知，請檢查您設備上的 Google Play Services 應用程式是否啟用了通知。

3. 點擊通知。

揚聲器連接好後，會出現一條通知，確認連接完成。

注意：您也可以點選通知上的按鈕下載 Bose 應用程式並完成揚聲器設定。


Snapdragon Sound 技術

Bose SoundLink Plus 可攜式揚聲器採用 Snapdragon Sound 技術。Snapdragon Sound 透過優化 Qualcomm® 音訊技術，確保連接裝置之間流媒體音訊的音質、連接穩定性和延遲達到最佳狀況。


要體驗 Snapdragon Sound，您需要一個經過 Snapdragon Sound 認證的裝置，如相容的 Android 裝置。連接揚聲器後，您的裝置將自動使用 aptX Adaptive *Bluetooth* 轉碼器進行音訊流傳輸。

注意：要查看揚聲器支援哪些 Snapdragon Sound 功能並檢查您的裝置是否相容，請造訪：support.bose.com/sl-plus


控制項位於揚聲器頂部。

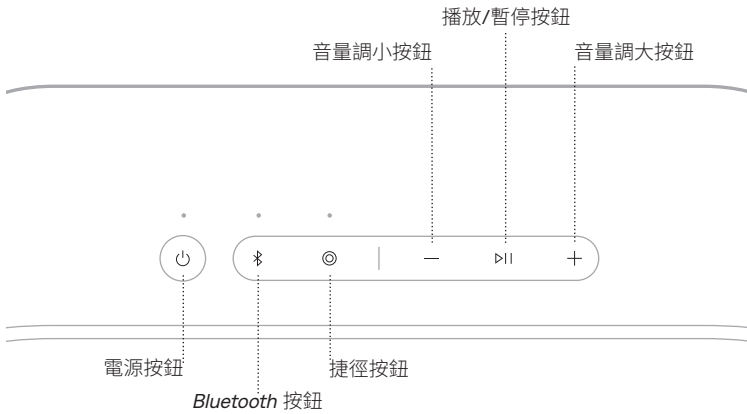

打開/關閉電源

按下電源按鈕 。

開機時，語音提示會播報電池電量。電源指示燈會根據當前電池電量亮起（請參見第 25 頁）。

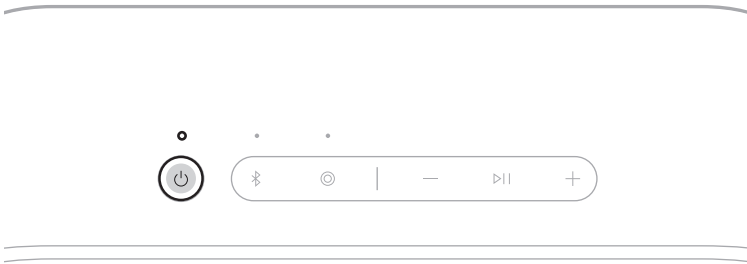



自動關閉計時器

揚聲器使用電池運行時自動關閉計時器可節省電池電量。當音訊已停止且已有 20 分鐘未按動按鈕時，揚聲器將關閉。

要喚醒揚聲器，請按電源按鈕  或按住 *Bluetooth* 按鈕 。

注意：要變更計時器設定，請使用 Bose 應用程式。您可以從「設定」功能表中存取此選項。


停用自動關閉計時器

同時按住「播放/暫停」按鈕  和上調音量按鈕 。您會聽到「Auto-off disabled (自動關閉已停用)」。

重複操作即可重新開啟自動關閉計時器。

提示：您也可使用 Bose 應用程式來停用自動關閉計時器。您可以從「設定」功能表中存取此選項。

媒體播放和音量

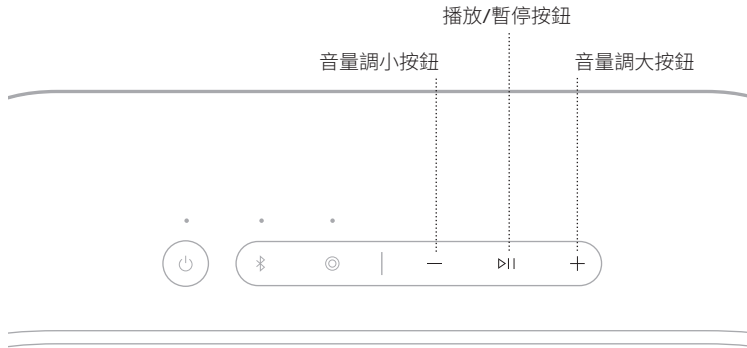

功能	操作方法
播放/暫停	按下 ▷ 。
前進	連按兩下 ▷ 。
倒轉	連按三下 ▷ 。
Volume up (調大音量)	<p>按下 +。</p> <p>注意：</p> <ul style="list-style-type: none"> 要快速提高音量，按住 +。 達到最大音量時，<i>Bluetooth</i> 指示燈會閃爍白色光 2 次。
Volume down (調小音量)	<p>按下 -。</p> <p>注意：</p> <ul style="list-style-type: none"> 要快速降低音量，按住 -。 達到最小音量時，<i>Bluetooth</i> 指示燈會閃爍白色光 2 次。


提示：您還可以使用裝置上或 Bose 應用程式中的音量控制項增大或減小音量。您可以從「產品控制」螢幕存取該選項。

為揚聲器充電


小心：揚聲器潮濕時，請勿嘗試對其充電。否則可能會損壞揚聲器。揚聲器可防水，但在充電前 USB-C 連接埠必須完全乾燥。

注意：確保使用 Bose 提供的 USB 連接線或類似的 USB 連接線。Bose 建議使用 5V ㄓ、1.5A 的電源。

1. 將連接線的 USB-C 端連接至揚聲器背面的 USB 連接埠。

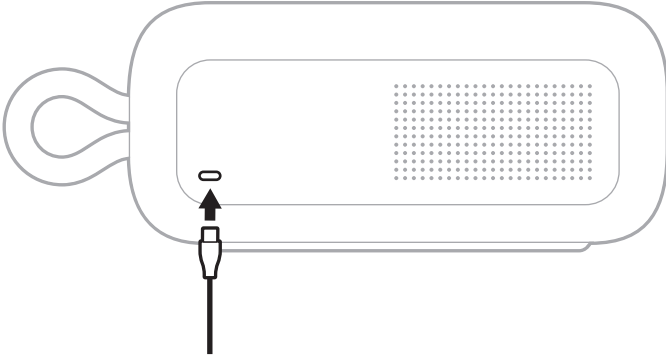

2. 將連接線的 USB-A 一端連接到電源，如電腦或壁式充電器。

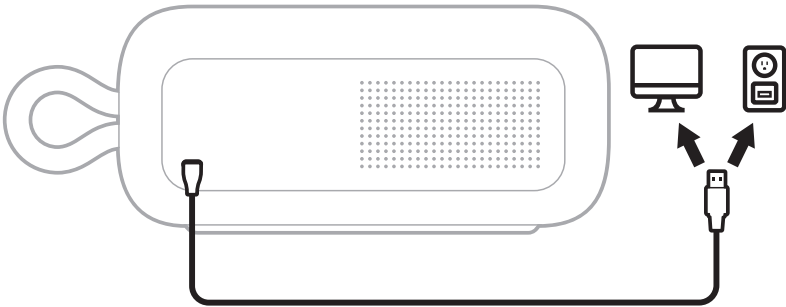

充電時，電池指示燈會閃爍白色光。電池充滿電後，電池指示燈呈恆亮白色光。

充電時間

最長需要 7 小時即可將電池充滿電。¹

揚聲器完全充電後，可使用達 20 個小時。² 在最大音量下，電池可維持長達 4 小時。³


充電時間和電池性能因 USB 電源容量、音樂內容、揚聲器音量而變化。

收聽電池電量

每次開啟揚聲器電源時，語音提示即會告知揚聲器的電池電量。使用揚聲器過程中，若電池需要充電，會進行語音提示。

按住「電源」按鈕 ，直到聽到提示音。

電池保護模式

當揚聲器電池電量耗盡 (0%) 時，它會進入電池保護模式。要重新啟用揚聲器，請按電源按鈕 .

不使用時，請將揚聲器存放在陰涼處。

小心：請勿在電池充滿電或剩餘電量少於 10% 時長期存放揚聲器。

所有測試均由 Bose 使用具有生產代表性的 Bose SoundLink Plus 可攜式揚聲器進行。


- 1 使用 5V/1.5A (7.5W) USB-A 電源，在裝置處於待命模式時充電，電量可從 0% 到 100%。使用的不是 7.5W 電源時，充電時間會有所不同。使用 5V/3A (15W) 電源可達到最大充電速度。
- 2 使用 Bluetooth A2DP 音訊，音量為 65%，溫度在 20°C - 25°C 之間，並使用預設 EQ，播放 2024 年 11 月全球前 50 熱門曲目的混合音軌，不對外接裝置充電。電池性能因使用者的特定情況而異，如音訊內容、響度和環境溫度。
- 3 使用 Bluetooth A2DP 音訊，音量為 100%，溫度在 20°C - 25°C 之間，並使用預設 EQ，播放 2024 年 11 月全球前 50 熱門曲目的混合音軌，不對外接裝置充電。電池性能因使用者的特定情況而異，如音訊內容、響度和環境溫度。

為裝置充電


注意：使用您的揚聲器為裝置充電時，需要使用 USB-C 至 USB-C 連接線（未提供）。揚聲器不支援使用 USB-C 至 USB-A 連接線為裝置充電。

小心：揚聲器潮濕時，請勿嘗試對其充電。否則可能會損壞揚聲器。揚聲器可防水，但在充電前 USB-C 連接埠必須完全乾燥。如果檢測到潮濕，電源指示燈將緩慢閃爍白色和琥珀色光（請參見第 25 頁）。

1. 將 USB-C 連接線的一端連接至揚聲器後部的 USB-C 連接埠。

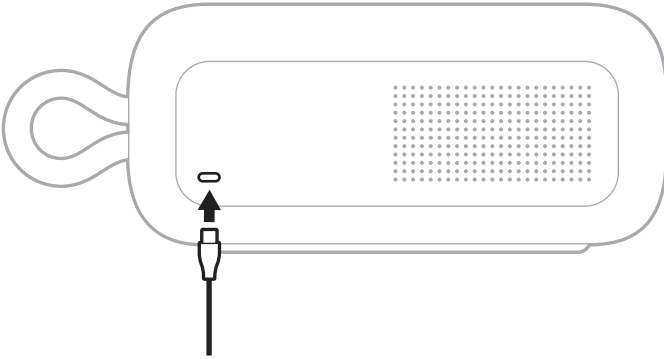


2. 將連接線的另一端插入裝置上的 USB-C 連接埠中。

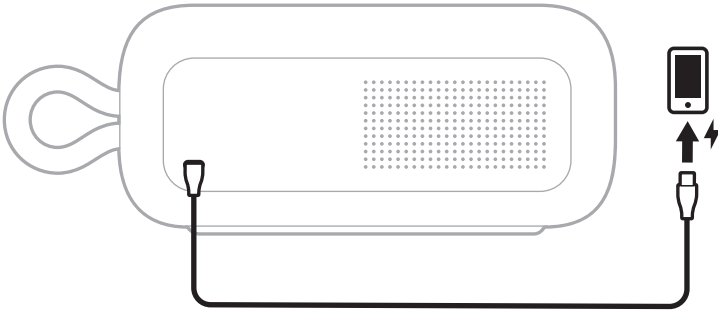

裝置顯示充電狀態。

電源、Bluetooth 和捷徑指示燈位於揚聲器的上方。

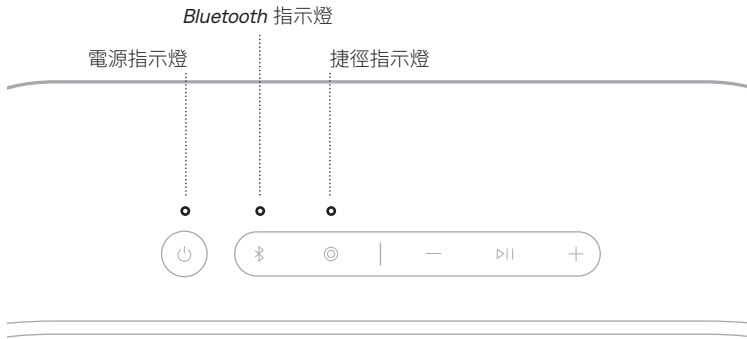

電源指示燈

顯示電池、充電、更新和錯誤狀態。

指示燈活動	系統狀態
恆亮白色光	完全充滿
琥珀色光恆亮	低電量
閃爍琥珀色光	需要充電
慢閃白色光	正在充電
閃爍白色光 3 次 (重複)	更新軟體
快速閃爍白色光 (3 秒)	重設完成
慢閃白色和琥珀色光 (交替)	檢測到潮濕 - 充電前保持 USB-C 連接埠完全乾燥
快速閃爍白色和琥珀色光 (交替)	錯誤 - 聯絡 Bose 客戶服務中心
閃爍琥珀色光 3 次 (重複)	電池故障 - 聯絡 Bose 客戶服務中心

BLUETOOTH 指示燈

顯示 *Bluetooth* 連接狀態。

指示燈活動	系統狀態
慢閃藍色光	準備連接
快閃藍色光	正在連接
恆亮白色光	已連接
閃爍白色光 2 次	裝置清單已清除

捷徑指示燈

將連接設定為捷徑時顯示揚聲器的狀態。

指示燈活動	系統狀態
慢閃白色光	揚聲器正在連接
恆亮白色光	揚聲器已連接

語音提示指導您完成 *Bluetooth* 連接過程、播報電池電量，並識別已連接的裝置。

提示：可以使用 Bose 應用程式方便地管理語音提示。從「設定」功能表中存取此選項。

預先安裝的語言



揚聲器上預先安裝了以下語言：

- 英文
- 德文
- 日文
- 西班牙文
- 義大利文
- 粵語
- 法文
- 簡體中文

變更語言

使用 Bose 應用程式調整語音提示語言。從「設定」功能表中存取此選項。

停用語音提示


同時按住捷徑按鈕  和「音量調小」按鈕 ，直到您聽到「Voice prompts off」（語音提示關閉）。

注意：重複操作可重新啟用語音提示。


可程式化捷徑按鈕  讓您可以快速方便地存取下列功能之一：


- 連接兩個 Bose *Bluetooth* 揚聲器（請參見第 30 頁）
- 使用 Spotify Tap（請參見第 29 頁）

使用捷徑

按下捷徑按鈕 。

捷徑指示燈會閃爍一次。

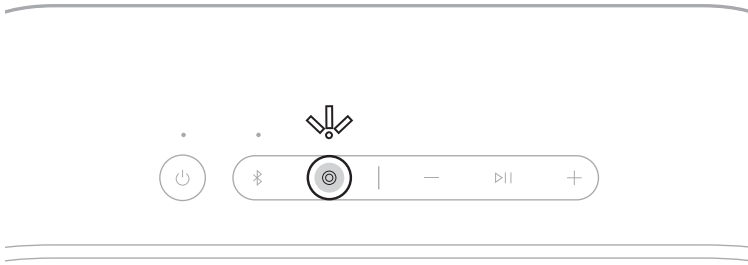


注意：預設情況下，捷徑按鈕  被設定為連接兩個 Bose *Bluetooth* 揚聲器（請參見第 30 頁）。


變更或停用捷徑

要變更或停用捷徑，請使用 Bose 應用程式。您可以從「產品控制」螢幕點擊「捷徑」存取該選項。

Spotify Tap 會為您帶來真實悅耳的音樂體驗。僅需簡單的動作手勢即可播放音樂。

注意：要使用 Spotify Tap，必須在 Bose 應用程式中將其設定為捷徑，並且 Spotify 應用程式必須是最新的。

1. 按下捷徑按鈕 ，按您的收聽品味播放建議的音樂。

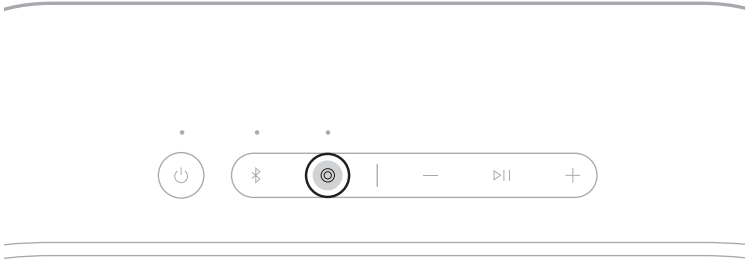


2. 再次按下捷徑按鈕 ，播放下一首為您建議的音樂。

連接兩個 BOSE BLUETOOTH 揚聲器

為了獲得更加身臨其境的音樂體驗，您可以將 Bose SoundLink Plus 可攜式揚聲器與另一個相容的 Bose *Bluetooth* 揚聲器同步，以立體聲模式或派對模式在兩個揚聲器中播放同一個音訊。

- 立體聲模式（左揚聲器和右揚聲器獨立播放）
- 派對模式（兩個揚聲器同時播放）

注意：


- 捷徑按鈕  預設為連接兩個 Bose *Bluetooth* 揚聲器。
- 您一次僅可以連接一個其他揚聲器。
- 確保兩個揚聲器在 9 公尺的連接範圍內。
- 確保兩個揚聲器在距離流媒體裝置 9 公尺的連接範圍內。
- 為獲得最佳體驗，請將揚聲器放置在同一房間或室外，中間不要有障礙物。效能可能會因裝置、距離和環境因素而有所差異。

相容產品


您可以將 Bose SoundLink Plus 可攜式揚聲器連接到任何具有捷徑按鈕的 Bose *Bluetooth* 揚聲器。



使用產品控制項連接


1. 在揚聲器上按捷徑按鈕 。

語音提示會指示您按下第二個揚聲器上的捷徑按鈕。捷徑指示燈會慢閃白色光。

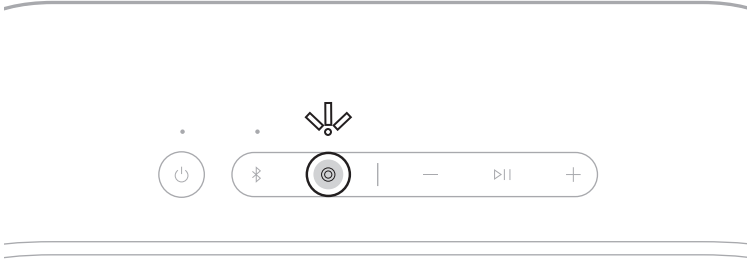


2. 在第二個相容的 Bose Bluetooth 揚聲器上，按下捷徑按鈕 。

捷徑指示燈會慢閃白色光。

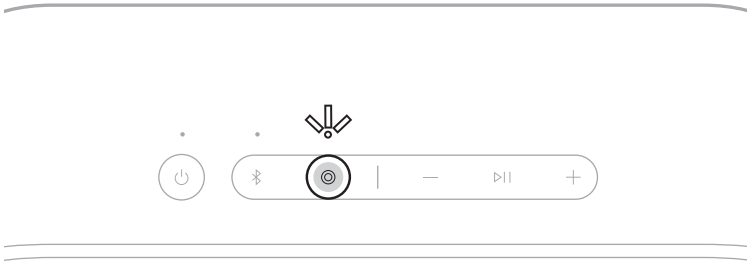


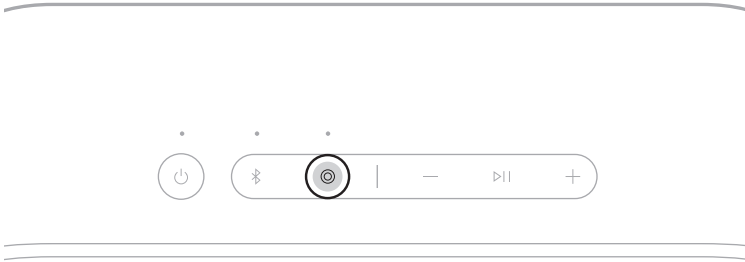
兩個揚聲器連接後，會有語音提示播報兩個揚聲器的模式。兩個揚聲器上的捷徑指示燈都會恆亮白色光。

注意：如果揚聲器型號相同，則會聽到「Stereo mode」（立體聲模式），然後主揚聲器發出「Left」（左），副揚聲器會發出「Right」（右）。如果揚聲器型號不同，則兩個揚聲器上都會發出「Party mode」（派對模式）。

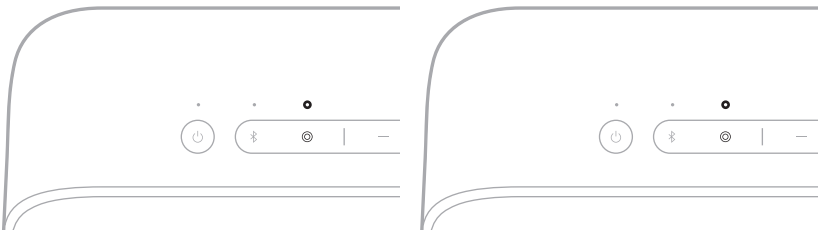

在立體聲模式和派對模式之間切換

在任一揚聲器上，按下捷徑按鈕 。




語音提示會播報每個揚聲器的模式。

注意：如果揚聲器型號不同，則只能在派對模式下播放音訊。

提示：您也可以使用 Bose 應用程式在立體聲模式和派對模式之間切換。您可以從「產品控制」螢幕存取該選項。

斷開揚聲器連接

在任一揚聲器上按電源按鈕  或長按捷徑按鈕 。

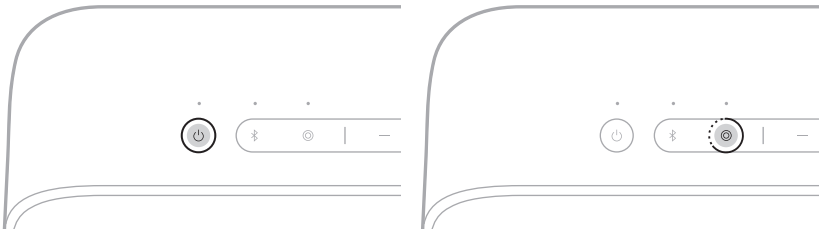

語音提示將播報揚聲器不再連接。

提示：您也可以使用 Bose 應用程式斷開揚聲器的連接。您可以從「產品控制」螢幕存取該選項。

連接 BOSE 智慧型揚聲器或家庭娛樂揚聲器

透過 Bose SimpleSync 技術，您可以將揚聲器連接至 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器，以同時在兩間不同的房間內聆聽同一音訊。

注意：SimpleSync 技術的 *Bluetooth* 連接範圍為 9 公尺。牆壁或建材可能會影響接收效能。

相容產品


您可以將揚聲器連接到任何 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器。


熱門的相容產品包括：

- Bose 智慧型 Ultra 家庭娛樂揚聲器或 Bose 智慧型家庭娛樂揚聲器。
- Bose 智慧型家庭娛樂揚聲器 900
- Bose 智慧型家庭娛樂揚聲器 700/Bose 家庭娛樂揚聲器 700
- Bose 智慧型家庭娛樂揚聲器 600
- Bose Soundbar 500
- Bose 智慧型揚聲器 500/Bose 家用揚聲器 500
- Bose 家用揚聲器 300
- Bose 可攜式智慧型揚聲器/Bose 可攜式家用揚聲器

新產品將定期新增。如需完整清單及更多資訊，請造訪：support.bose.com/Groups

使用 Bose 應用程式連接

1. 按住 *Bluetooth* 按鈕 ，直到聽到「Ready to connect」（準備連接），且 *Bluetooth* 指示燈閃爍藍色光。

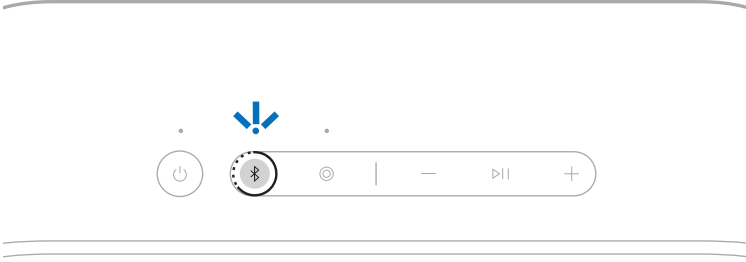


注意：如果已經連接了一個裝置，您會聽到「Ready to connect another device」（準備連接其他裝置）。


2. 使用 Bose 應用程式將揚聲器連接至相容的 Bose 產品。如需詳細資訊，請造訪：
support.bose.com/Groups

注意：

- 連接可能需要 30 秒的時間。
- 確定揚聲器在揚聲器或條形音箱的 9 公尺連接範圍內。
- 您一次只能將揚聲器連接至一個產品。

使用產品控制項連接

1. 按住 *Bluetooth* 按鈕 ，直到聽到「Ready to connect」（準備連接），且 *Bluetooth* 指示燈閃爍藍色光。

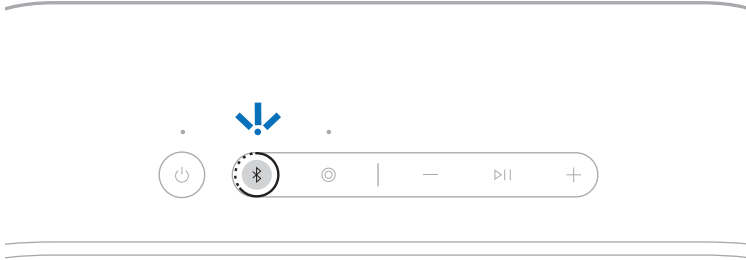

注意：如果已經連接了一個裝置，您會聽到「Ready to connect another device」（準備好連接其他裝置）。

2. 在條形音箱遙控器或揚聲器頂部，長按 *Bluetooth* 按鈕 ，直到燈條或燈環閃爍藍色光。

揚聲器連接到條形音箱或揚聲器，而且您會透過兩個裝置聽到相同的音訊。

注意：

- 連接可能需要 30 秒的時間。
- 確定揚聲器在揚聲器或條形音箱的 9 公尺連接範圍內。
- 您一次只能將揚聲器連接至一個產品。

重新連接 BOSE SMART SPEAKER 或 SOUNDBAR


使用 Bose 應用程式將揚聲器重新連接至之前連接的相容 Bose 產品。如需詳細資訊，請造訪：support.Bose.com/Groups

注意：

- 揚聲器或條形音箱必須在連接範圍內（9 公尺）且已開啟電源。
- 如果揚聲器未連接，請參見第 40 頁上的「揚聲器無法與之前連接的 Bose Smart Speaker 或 Bose Smart Soundbar 重新連接」。

束帶使用

您可以將束帶當作指環使用，以方便攜帶揚聲器。也可以把它固定在扣環或繩子上。

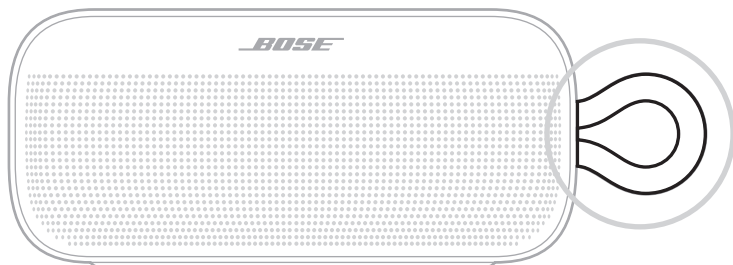

防水且防塵

揚聲器防水、防濺，且防塵。屬於 IP67 和 IP64 級。揚聲器可浸入 1 公尺水深中最長 30 分鐘。您也可以在淋浴和雨中或雪中使用。

小心：

- 請勿將此揚聲器浸入任何深度超過 1 公尺的水池中。
- 如果揚聲器暴露於鹽或含氯的水中，隨後請用淡水輕輕沖洗以清除殘留物。充電前，請確認連接器埠完全乾燥。
- 揚聲器潮濕時，請勿嘗試對其充電。否則可能會損壞揚聲器。



維修揚聲器電池

本產品只能使用相容的 Bose 認證電池。有關電池服務選項，請聯絡 Bose 客戶服務中心或造訪 support.Bose.com/sl-plus。

更新揚聲器

揚聲器連接到 Bose 應用程式並在有可用更新時會自動更新。請按照應用程式指示操作。更新開始時，電源指示燈會閃爍白色光 3 次（重複），直至更新完成。

您也可使用 Bose updater 網站更新揚聲器。在您的系統上，瀏覽：btu.Bose.com 並按螢幕說明操作。更新開始時，電源指示燈會閃爍白色光 3 次（重複），直至更新完成。

清潔揚聲器

揚聲器可能需要定期清潔。

- 使用柔軟的濕布清潔揚聲器表面（僅用水）。充電前，請確認連接埠完全乾燥。
- 請勿使用任何溶劑、化學品或含酒精、氨水、研磨劑的清潔劑。
- 如果揚聲器暴露於鹽或含氯的水中，隨後請用淡水輕輕沖洗以清除殘留物。充電前，請確認連接埠完全乾燥。

存放揚聲器

不使用時，請將揚聲器存放在陰涼處。

小心：切勿在電池充滿電或電量較低時（請參見第 23 頁），長時間存放揚聲器。

更換零件和配件

可透過 Bose 客戶服務中心訂購更換零件和配件。

請造訪：support.Bose.com/sl-plus


有限保固

您的揚聲器受有限的保固保障。有關有限保固的詳細資訊，請造訪我們的網站：worldwide.Bose.com/Warranty。

要註冊您的產品，請訪問 worldwide.Bose.com/ProductRegistration 以獲取說明。未執行註冊並不影響您的有限保固權利。

首先嘗試這些解決方案

如果揚聲器出現問題：

- 關閉並重新打開揚聲器（請參見第 19 頁）。
- 檢查狀態指示燈（請參見第 25 頁）。
- 確定裝置支援 *Bluetooth* 連接（請參見第 12 頁）。
- 為揚聲器充電（請參見第 22 頁）。
- 調高揚聲器、裝置和音樂應用程式的音量。
- 將裝置靠近揚聲器（9 公尺），並遠離任何干擾或障礙。
- 嘗試連接其他裝置（請參見第 12 頁）。
- 按住電源按鈕  15 秒鐘重設揚聲器（請參見第 41 頁）

若無法解決問題，請參見下表了解常見問題的症狀和解決方法。還可以在以下網站存取疑難排解文章、視訊和其他資源：support.bose.com/sl-plus

若仍然無法解決問題，請連絡 Bose 客戶服務中心。

請造訪：worldwide.bose.com/contact

其他解決方案

症狀	解決方案
沒電（電池）	電池可能處於保護模式或已完全放電。將揚聲器連接到電源（請參見第 23 頁）。 電池可能需要維修。請聯絡 Bose 客戶服務中心（請參見第 37 頁）。
揚聲器無法連接到裝置	清除揚聲器的裝置清單（請參見第 16 頁）。從裝置上的 <i>Bluetooth</i> 清單中刪除揚聲器。再次連接（請參見第 12 頁）。 請造訪： support.bose.com/sl-plus 以獲得其他支援。
揚聲器對多次按壓功能無回應	改變按壓速度。

症狀	解決方案
沒有聲音	<p>請務必使用 Bose 應用程式啟用語音提示。按下 <i>Bluetooth</i> 按鈕並鬆開，收聽已連接的裝置。確定您使用的是正確的裝置。</p> <p>使用不同的音樂來源。</p> <p>如果連接了兩台裝置，請暫停第一台裝置的音訊，然後從另一台裝置播放音訊。</p>
透過 Bluetooth 連接的裝置的聲音品質差	<p>使用不同的音樂來源。</p> <p>如果連接了兩台裝置，請斷開第二台裝置的連接。</p> <p>停用裝置或音樂應用程式上的任意音訊增強功能。</p> <p>如果揚聲器接觸過水，待其乾燥並重試。</p>
音訊延遲	<p>使用不同應用程式或音樂服務播放音訊。</p> <p>關閉後重新開啟應用程式或音樂服務。</p>
揚聲器無法充電	<p>確保 USB-C 轉 USB-A 連接線的兩端都連接牢固（第 22 頁）。</p> <p>確保使用 Bose 提供的 USB-C 到 USB-A 連接線或類似的 USB 連接線，其規格至少為 5V=, 1.5A。</p> <p>嘗試其他充電源和充電線。</p> <p>如果揚聲器曾暴露在高溫或低溫環境中，請先等待揚聲器恢復室溫，然後再次嘗試充電。</p> <p>如果揚聲器接觸過水，待其乾燥並重試。</p> <p>如果問題仍然存在，請聯絡 Bose 客戶服務中心以申請更換電池，並更換舊電池（請參見第 37 頁）。</p>
揚聲器未與 Bose Bluetooth 揚聲器連接	<p>確保您正在連接到一個相容的 Bose Bluetooth 揚聲器（請參見第 30 頁）。</p>
連接 Bose Bluetooth 揚聲器時沒有聲音	<p>確保主揚聲器的電源已開啟。如果關閉主揚聲器，副揚聲器將停止播放音訊。</p>

症狀	解決方案
<p>行動裝置無法充電</p>	<p>請確定您使用的是 USB-C 連接線（未提供）。揚聲器不支援使用 USB-C 至 USB-A 連接線為裝置充電。</p> <p>確保 USB-C 連接線兩端已牢固連接（請參見第 24 頁）。</p> <p>如果揚聲器接觸過水，待其乾燥並重試。</p> <p>確保您的裝置可以接受其他裝置的充電。請參閱行動裝置的使用者指南。</p> <p>斷開揚聲器的 USB-C 連接線，然後重新連接。如果裝置仍然無法充電，請斷開 USB-C 連接線與裝置的連接，然後重新連接。如果仍無法解決問題，請參見裝置的使用者指南。</p>
<p>揚聲器無法連接到 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器</p>	<p>確定正在使用 Bose 應用程式（請參見第 13 頁）。</p> <p>確保 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器正在運行最新的軟體。下載 Bose 應用程式並運行可用的軟體更新。</p> <p>確保您正在連接到一個相容的 Bose 產品。如需相容產品的清單，請造訪：support.Bose.com/Groups</p> <p>按住 <i>Bluetooth</i> 按鈕 ，直到 <i>Bluetooth</i> 指示燈閃爍藍色，並且聽到「Ready to pair another device」（準備配對另一台裝置）。</p> <p>確保揚聲器在條形音箱或揚聲器的 9 公尺連接範圍內。</p>
<p>揚聲器無法與之前連接的 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器重新連接</p>	<p>在揚聲器上，按住 <i>Bluetooth</i> 按鈕 ，直到 <i>Bluetooth</i> 指示燈閃爍藍色光，並且聽到「Ready to pair another device」（準備配對另一台裝置）。使用 Bose 應用程式將揚聲器連接至相容的 Bose 產品。如需詳細資訊，請造訪：support.Bose.com/Groups</p>
<p>連接至 Bose 智慧型揚聲器或 Bose 智慧型家庭娛樂揚聲器時音訊延遲</p>	<p>下載 Bose 應用程式（請參見第 13 頁）並為連接的揚聲器和條形音箱運行可用的軟體更新。</p> <p>在電腦上，檢查 btu.Bose.com 上是否有 USB 更新。</p>

重設揚聲器

如果揚聲器沒有反應，可以將其重設。

重設揚聲器會重設產品控制並重啟揚聲器。它不會清除任何裝置的設定。

注意：請確保 USB-C 至 USB-A 連接線沒有連接到揚聲器。

1. 按住電源按鈕  15 秒直到揚聲器關機。



2. 按下電源按鈕 .

電源指示燈會根據電池電量亮起（請參見第 25 頁）。

注意：若仍然無法解決問題，可在以下網站獲得更多的疑難排解文章和支援資訊：
support.Bose.com/sl-plus

恢復揚聲器

出廠重設將從揚聲器上清除連接的裝置和語言設定，返回到原始出廠設定。

1. 按住調高音量按鈕 **+** 和調低音量按鈕 **-** 15 秒鐘，直到電源指示燈快速閃爍白光 3 秒鐘。



揚聲器將關閉。

2. 按下電源按鈕 **⏻**。

Bluetooth 指示燈呈藍色亮起，且揚聲器準備連接。

注意：若仍然無法解決問題，可在以下網站獲得更多的疑難排解文章和支援資訊：
support.Bose.com/sl-plus



898239-0010