



# RM24100 QUICK INSTALLATION GUIDE


## Major Components

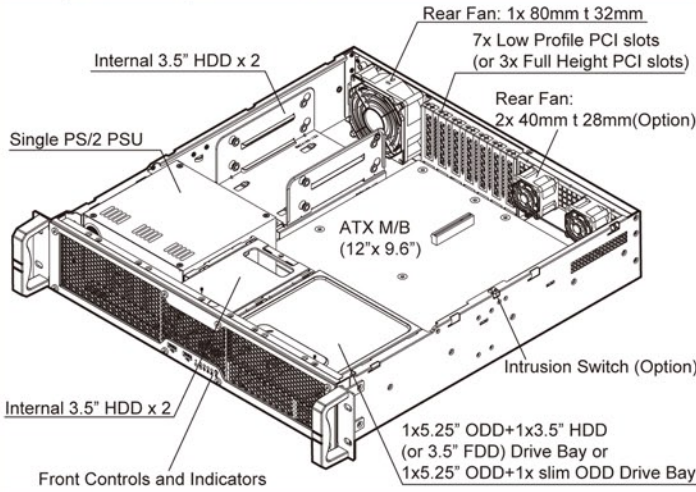


## Front Panel Controls and Indicators

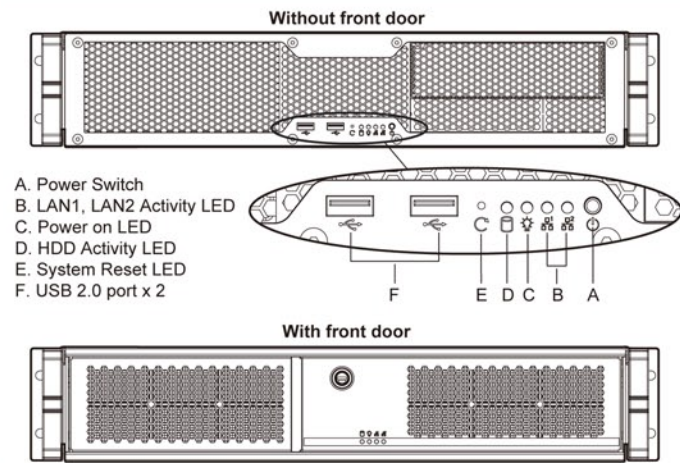

## Maintaining Front Door Filter

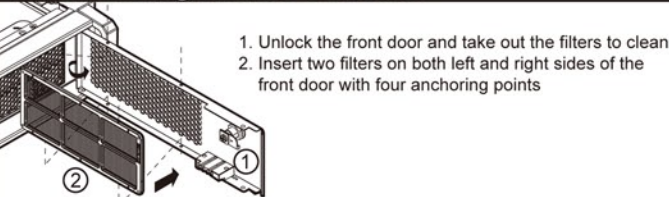


## Rear Window Configuration

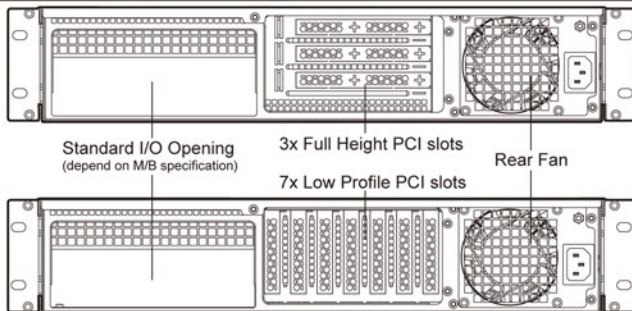


Notice: Please refer to QIG of RM23608 for installing PCI riser cards.

## Top Cover Opening

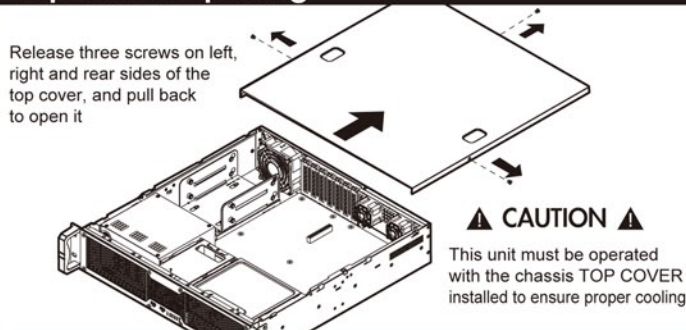


## Installing Internal 3.5" HDD

1. Slide two internal 3.5" HDDs into the bay
2. Use eight quakeproof screws to fix 3.5" HDDs on both left and right sides of the bay
3. Slide the internal 3.5" HDD assembly on the chassis and use a screw to fix it with the chassis

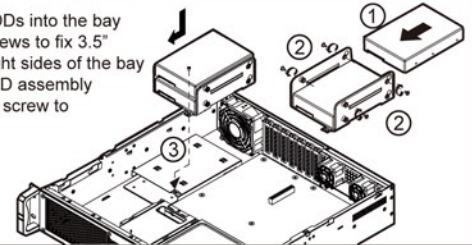


## Installing PS/2 power supply

1. Use two screws to fix bracket on the PSU
2. Slide the PSU assembly into the chassis, and use two screws to fix it on the left side of the chassis

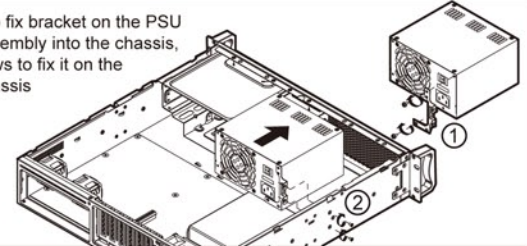

## Installing Internal 2.5" HDD


1. Slide two internal 2.5" HDDs into the bay
2. Use eight quakeproof screws to fix two HDDs on both left and right sides of the bay
3. Slide the internal 2.5" HDD assembly into the chassis and use one screw to fix it on the chassis

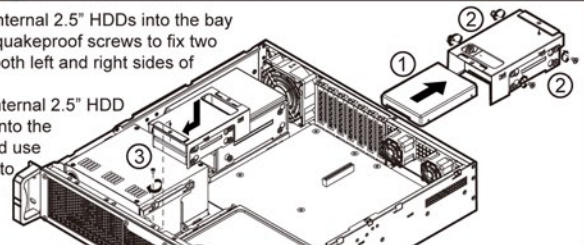

## Installing 5.25"/3.5" Drive Bay(with 3.5" HDD or FDD)


### Installing 5.25" ODD

1. Release two screws on top of the drive bay to take it out from the chassis
2. Release one screw at the right side of the drive bay
3. Take out the upper front cover
4. Slide the 5.25" ODD into the drive bay assembly
5. Use eight screws to fix on both left and right sides of the drive bay

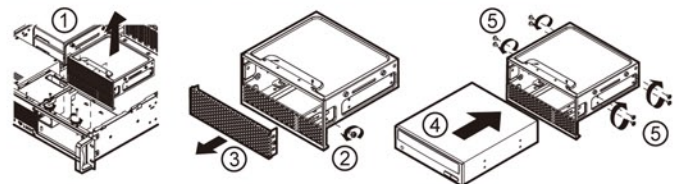


### Installing 3.5" HDD

Slide 3.5" HDD into drive bay, and use four quakeproof screws to fix it at the bottom of the drive bay

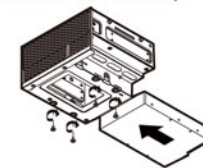

### Installing FDD

1. Remove the lower front cover of the drive bay
2. Slide FDD into drive bay
3. Use four screws to fix it on both left and right sides of the drive bay

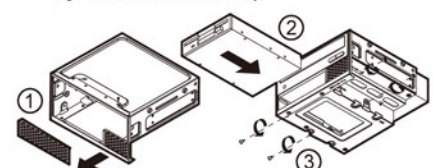


### Installing 5.25"/3.5" Drive Bay

1. Slide the 5.25"/3.5" drive bay into the chassis
2. Use two screws to fix it on the chassis

## Installing Rear Fan (2 x 40mm t 28mm)

Use two screws to fix the fan assembly (fan+ finger guard) on rear window

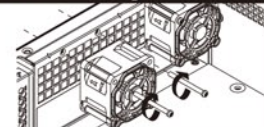

## Installing Intrusion Switch

Use two screws to fix the intrusion switch with a bracket on the chassis

