Standard 512E model 22 TB o cerca il tuo prodotto tra le migliori offerte di Hard Disk interni







SATA Product Manual



# **Standard 512E model**

ST22000NT001 ST20000NT001

204482900, Rev. B January 2023

# © 2023 Seagate Technology LLC. All rights reserved. Publication number: 204482900, Rev. B January 2023 Seagate, Seagate Technology and the Spiral logo are registered trademarks of Seagate Technology LLC in the United States and/or other countries. IronWolf Pro, PowerChoice and SeaTools are either trademarks or registered trademarks of Seagate Technology LLC or one of its affiliated companies in the United States and/or other countries. The FIPS logo is a certification mark of NIST, which does not imply product endorsement by NIST, the U.S., or Canadian governments. All other trademarks or registered trademarks are the property of their respective owners. No part of this publication may be reproduced in any form without written permission of Seagate Technology LLC. Call 877-PUB-TEK1 (877-782-8351) to request permission.

When referring to drive capacity, one gigabyte, or GB, equals one billion bytes and one terabyte, or TB, equals one trillion bytes. Your computer's operating system may use a different standard of measurement and report a lower capacity. In addition, some of the listed capacity is used for formatting and other functions, and thus will not be available for data storage. Actual quantities will vary based on various factors, including file size, file format, features and application software. Actual data rates may vary depending on operating environment and other factors. The export or re-export of hardware or software containing encryption may be regulated by the U.S. Department of Commerce, Bureau of Industry and Security (for more information, visit <a href="https://www.bis.doc.gov">www.bis.doc.gov</a>), and controlled for import and use outside of the U.S. Seagate reserves the right to change, without notice, product offerings or specifications.

# Contents

1.0	Intro	Introduction				
	1.1	About th	ne Serial ATA interface			
2.0	Drive specifications					
	2.1	Specifica	ation summary tables			
	2.2	Formatte	ed capacity9			
		2.2.1	LBA mode9			
	2.3	Recordir	ng and interface technology9			
	2.4	Start/sto	p times			
	2.5	Power sp	pecifications			
		2.5.1	Power consumption			
		2.5.2	Conducted noise			
		2.5.3	Voltage tolerance			
		2.5.4	Extended Power Conditions - PowerChoice™11			
	2.6	Environr	mental limits14			
		2.6.1	Temperature			
		2.6.2	Humidity14			
		2.6.3	Effective Altitude (sea level)			
		2.6.4	Shock and Vibration			
	2.7	Acoustic	:s16			
	2.8	Test for I	Prominent Discrete Tones (PDTs)			
	2.9	Electron	nagnetic immunity16			
	2.10	Reliabilit	:y 17			
		2.10.1	Annualized Failure Rate (AFR) and Mean Time Between Failures (MTBF)			
	2.11	HDD and	d SSD Regulatory Compliance and Safety			
		2.11.1	Regulatory Models			
	2.12	Corrosiv	ve environment			
	2.13	Reference	te documents			
	2.14	Product	warranty19			
	2.15	Seagate <sup>6</sup>	® Rescue <sup>™</sup> Data Recovery Service20			

# Contents

3.0	Confi	guring an	d mounting the drive	22
	3.1	Handlin	ng and static-discharge precautions	22
	3.2		uring the drive	
	3.3		TA cables and connectors	
	3.4	Drive m	nounting	23
		3.4.1	Mechanical specifications	
4.0	Seria	I ATA (SAT	ΓA) interface	24
	4.1	Hot-Plu	ıg compatibility	24
	4.2	Serial A	TA device plug connector pin definitions	24
	4.3	Suppor	ted ATA commands	25
		4.3.1	Identify Device command	28
		4.3.2	Identify Device Data log	
		4.3.3	Device Statistics log	45
		4.3.4	Set Features command	47
		4.3.5	S.M.A.R.T. commands	48

# Seagate® Technology Support Services

For Seagate Product Support, visit: www.seagate.com/support

For Seagate Compliance, Safety, and Disposal, visit: www.seagate.com/support

For Firmware Download and Tools Download for Secure Erase, visit: www.seagate.com/support/downloads/

For information regarding online support and services, visit: www.seagate.com/contacts/

For information regarding Warranty Support, visit: www.seagate.com/support/warranty-and-replacements/


For information regarding data recovery services, visit: www.seagate.com/services-software/recover/

For Seagate OEM and Distribution partner and Seagate reseller portal, visit: www.seagate.com/partners

www.seagate.com Introduction

## 1.0 Introduction

This manual describes the functional, mechanical and interface specifications for the following: Seagate® IronWolf™ Pro SATA +Rescue drive models.



These drives provide the following key features:

- Up to 512 MB data buffer.
- 7200 RPM spindle speed.
- Full-track multiple-sector transfer capability without local processor intervention.
- High instantaneous (burst) data-transfer rates (up to 600MB per second).
- Native Command Queuing with command ordering to increase performance in demanding applications.
- PowerChoice<sup>™</sup> for selectable power savings
- Perpendicular recording technology provides the drives with increased areal density.
- SeaTools<sup>™</sup> diagnostic software performs a drive self-test that eliminates unnecessary drive returns.
- State-of-the-art cache and on-the-fly error-correction algorithms.
- Support for S.M.A.R.T. drive monitoring and reporting.
- Supports latching SATA cables and connectors.
- Top Cover Attached motor for excellent vibration tolerance
- Worldwide Name (WWN) capability uniquely identifies the drive.

**NOTE** Seagate recommends validating the configuration with the selected HBA/RAID controller manufacturer to ensure use of full capacity is supported.

www.seagate.com Introduction

#### 1.1 About the Serial ATA interface

The Serial ATA interface provides several advantages over the traditional (parallel) ATA interface. The primary advantages include:

- Easy installation and configuration with true plug-and-play connectivity.
   It is not necessary to set any jumpers or other configuration options.
- Thinner and more flexible cabling for improved enclosure airflow and ease of installation.
- Scalability to higher performance levels.

In addition, Serial ATA makes the transition from parallel ATA easy by providing legacy software support. Serial ATA was designed to allow users to install a Serial ATA host adapter and Serial ATA disk drive in the current system and expect all of the existing applications to work as normal.

The Serial ATA interface connects each disk drive in a point-to-point configuration with the Serial ATA host adapter. There is no master/slave relationship with Serial ATA devices like there is with parallel ATA. If two drives are attached on one Serial ATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. This essentially means both drives behave as if they are Device 0 (master) devices.

NOTE

The host adapter may, optionally, emulate a master/slave environment to host software where two devices on separate Serial ATA ports are represented to host software as a Device 0 (master) and Device 1 (slave) accessed at the same set of host bus addresses. A host adapter that emulates a master/slave environment manages two sets of shadow registers. This is not a typical Serial ATA environment.

The Serial ATA host adapter and drive share the function of emulating parallel ATA device behavior to provide backward compatibility with existing host systems and software. The Command and Control Block registers, PIO and DMA data transfers, resets, and interrupts are all emulated.

The Serial ATA host adapter contains a set of registers that shadow the contents of the traditional device registers, referred to as the Shadow Register Block. All Serial ATA devices behave like Device 0 devices. For additional information about how Serial ATA emulates parallel ATA, refer to the "Serial ATA: High Speed Serialized AT Attachment" specification. The specification can be downloaded from www.serialata.org.

# 2.0 Drive specifications

Unless otherwise noted, all specifications are measured under ambient conditions, at 25°C, and nominal power. For convenience, the phrases *the drive* and *this drive* are used throughout this manual to indicate the IronWolf Pro SATA +Rescue drive models.

# 2.1 Specification summary tables

The specifications listed in the following tables are for quick reference. For details on specification measurement or definition, see the appropriate section of this manual.

Table 1 Drive specifications summary

Drive specification	ST22000NT001	ST20000NT001	
Formatted (512 bytes/sector)*	22TB	20TB	
Guaranteed sectors	(see Section 2.2)		
Heads	20		
Disks	10		
Bytes per logical sector	512		
Bytes per physical sector	4096		
Recording density, KBPI (Kb/in max)	2552	2470	
Track density, KTPI (ktracks/in avg.)	512	482	
Areal density, (Gb/in <sup>2</sup> avg)	1260	1146	
Spindle speed (RPM)	7200		
Sustained data transfer rate OD (MB/s max)	285		
I/O data-transfer rate (MB/s max)	600		
ATA data-transfer modes supported	PIO modes 0–4 Multiword DMA modes 0–2 Ultra DMA modes 0–6		
Cache buffer	512MB (524,288KB)	256MB (262,144KB)	
Weight: (maximum)	690g (1.521 lb)		
Average latency	4.16ms		
Power-on to ready (sec) (typ/max)	25/30		
Standby to ready (sec) (typ/max)	25/30		
Startup current (typical) 12V (peak)	2.0A		
Voltage tolerance (including noise)	5V ± 5% 12V ± 10%		
Operating ambient temperature (min °C)*	0°C (Ambient)		
Operating temperature (max °C)*	65°C (Drive Reported Temperature) †		
Non-Operating temperature	-40° to 70°C (Ambient Temperature, see sections <b>2.6.1</b> and <b>2.14</b> )		
Temperature gradient (°C per hour max)	20°C (operating) 20°C (nonoperating)		

Drive specification	ST22000NT001	ST20000NT001	
Relative humidity*	5% to 95% (operating) 5% to 95% (nonoperating)		
Relative humidity gradient	20% per hour max		
Altitude, operating	-304.8 m to 3,048 m (-1000 ft to 10,000+ ft)		
Altitude, nonoperating (below mean sea level, max)	-304.8 m to 12,192 m (-1000 ft to 40,000+ ft)		
Operational Shock (2 ms Z-axis)	40 Gs typical		
Non-Operational Shock (2 ms)	200 Gs		
Linear Random Operating Vibration	5–500 Hz: 0.70 Grms		
Random Rotary Operating Vibration	20–1500Hz: 12.5 rads/s <sup>2</sup>		
Linear Random Non-Operating Vibration	2–500 Hz: 2.27 Grms		
Drive acoustics, sound power (dBA)			
ldle	20 (typical) 30 (max) During periods of drive idle, some offline activity may occur according to the SMART specification, which may increase acoustic and power to operational levels.		
Performance seek	26 (typical) 34 (max)		
Nonrecoverable read errors	1 sector per 10 <sup>15</sup> bits read		
Annualized Failure Rate (AFR)*	0.35% based on 8760 POH		
Maximum Rated Workload*	Maximum rate of <550TB/year  Workloads exceeding the annualized rate may degrade the drive MTBF and impact product reliability. The Annualized Workload Rate is in units of TB per year, or TB per 8760 power on hours. Workload Rate = TB transferred * (8760 / recorded power on hours).		
Warranty	To determine the warranty for a specific drive, use a web browser to access the following web page: <a href="https://www.seagate.com/support/warranty-and-replacements/">www.seagate.com/support/warranty-and-replacements/</a> .  From this page, click on the "Is my Drive under Warranty" link. The following are required to be provided: the drive serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive.		
Load-unload cycles (command controlled)	600,000		
Supports Hotplug operation per Serial ATA Revision 3.3 specification	Yes		

<sup>&</sup>lt;sup>#</sup> One GB equals one billion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

<sup>\*</sup> See Section 2.10, "Reliability" for rated MTBF device operating condition requirements.

<sup>\*\*</sup> See Section 2.4, "Start/stop times" for additional information.

<sup>†</sup> Seagate does not recommend operating at sustained drive temperatures above 60°C. Operating at higher temperatures may affect drive health.

# 2.2 Formatted capacity

ST models	Formatted capacity*	Guaranteed sectors	Bytes per logical sector	Guaranteed sectors	Bytes per logical sector
ST22000NT001	22TB	42,970,644,480	512	5,371,330,560	4096
ST20000NT001	20TB	39,063,650,304	(Default)	4,882,956,288	(see Section 2.2.1)

<sup>\*</sup>One GB equals one billion bytes when referring to hard drive capacity. Accessible capacity may vary depending on operating environment and formatting.

NOTE

LBA Counts for drive capacities greater than 8TB are calculated based upon the SFF-8447 standard publication. ftp://ftp.seagate.com/sff/SFF-8447.PDF

#### 2.2.1 LBA mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n-1, where n is the number of guaranteed sectors as defined above.

See **Section 4.3.1, "Identify Device command"** (words 60-61 and 100-103) for additional information about 48-bit addressing support of drives with capacities over 137GB.

# 2.3 Recording and interface technology

Capacity	22TB	20TB
Interface	Serial ATA (SATA)	
Recording method	Perpendicular	
Recording density, KBPI (Kb/in max)	2552	2470
Track density, KTPI (ktracks/in avg)	512	482
Areal density (Gb/in <sup>2</sup> avg)	1260	1146
Spindle speed (RPM) (± 0.2%)	7200	
Sustained data transfer rate (MB/s max)	285	
I/O data-transfer rate (MB/s max)	600 (Ultra DMA mode 5)	

# 2.4 Start/stop times

Power-on to ready time is based on typical operating conditions, default full current spin-up profile, and clean shutdown prior to measurement. To ensure a clean shutdown a Flush Cache, Standby, or Standby Immediate command must be completed before removal of interface power.

Power-on to Ready (sec) (typ/max)	25/30
Standby to Ready (sec) (typ/max)	25/30
Ready to spindle stop (sec) (max)	20

NOTE

An unexpected power loss event, spin up at cold or hot temperature extremes may cause the drive to exceed the typical and max time to ready by 5 to 20 seconds. Extended time to ready is dependent on cache state and environmental conditions prior to the unexpected power loss and during the subsequent power on.

# 2.5 Power specifications

The drive receives DC power (+5V or +12V) through a native SATA power connector. See Figure 3 on page 22.

#### 2.5.1 Power consumption

Power requirements for the drives are listed in **Table 2**. Typical power measurements are based on an average of drives tested, under nominal conditions, using 5.0V and 12.0V input voltage at 35°C ambient temperature.

Table 2 DC power requirements (22TB and 20TB)

ST models	ST22000NT001	ST20000NT001	
Power dissipation	Avg (25° C)		
Spin-Up	2.0A		
Idle	6.0W	5.7W	
Operating	7.9W	7.7W	
Standby	1.2W		
Sleep	1.2W		

<sup>\*</sup>During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

#### 2.5.1.1 Typical current profiles

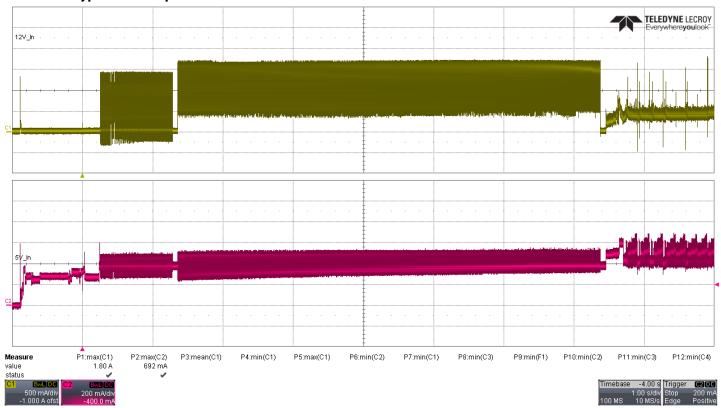


Figure 1. Typical 5V and 12V startup and operation current profiles

#### 2.5.2 Conducted noise

Noise is specified as a periodic and random distribution of frequencies covering a band from DC to 10 MHz. Maximum allowed noise values given below are peak-to-peak measurements and apply at the drive power connector.

+5v = 250 mV pp from 100 Hz to 20 MHz.

+12v = 800 mV pp from 100 Hz to 8 KHz.

450 mV pp from 8 KHz to 20 KHz.

250 mV pp from 20 KHz to 5 MHz.

#### 2.5.3 Voltage tolerance

Voltage tolerance (including noise):

 $5V \pm 5\%$   $12V \pm 10\%$ 

#### 2.5.4 Extended Power Conditions - PowerChoice™

Utilizing the load/unload architecture a programmable power management interface is provided to tailor systems for reduced power consumption and performance requirements.

The table below lists the supported power conditions available in PowerChoice. Power conditions are ordered from highest power consumption (and shortest recovery time) to lowest power consumption (and longest recovery time) as follows: Idle\_a power >= Idle\_b power >= Idle\_c power >= Standby\_z power. The further users go down in the table, the more power savings is actualized. For example, Idle\_b results in greater power savings than the Idle\_a power condition. Standby results in the greatest power savings.

Power Condition Name	Power Condition ID	Description
Idle_a	81 <sub>H</sub>	Reduced electronics
Idle_b	82 <sub>H</sub>	Heads unloaded. Disks spinning at full RPM
Idle_c	83 <sub>H</sub>	Heads unloaded. Disks spinning at reduced RPM
Standby_z	00 <sub>H</sub>	Heads unloaded. Motor stopped (disks not spinning)

Each power condition has a set of current, saved and default settings. Default settings are not modifiable. Default and saved settings persist across power-on resets. The current settings do not persist across power-on resets. At the time of manufacture, the default, saved and current settings are in the Power Conditions log match.

#### PowerChoice is invoked using one of two methods

Automatic power transitions which are triggered by expiration of individual power condition timers. These timer
values may be customized and enabled using the Extended Power Conditions (EPC) feature set using the
standardized Set Features command interface.

■ Immediate host commanded power transitions may be initiated using an EPC Set Features "Go to Power Condition" subcommand to enter any supported power condition. Legacy power commands Standby Immediate and Idle Immediate also provide a method to directly transition the drive into supported power conditions.

#### PowerChoice exits power saving states under the following conditions

- Any command which requires the drive to enter the PMO: Active state (media access)
- Power on reset

#### PowerChoice provides the following reporting methods for tracking purposes

**Check Power Mode Command** 

Reports the current power state of the drive

**Identify Device Command** 

- EPC Feature set supported flag
- EPC Feature enabled flag is set if at least one Idle power condition timer is enabled

Power Condition Log reports the following for each power condition

- Nominal recovery time from the power condition to active
- If the power condition is Supported, Changeable, and Savable
- Default enabled state, and timer value
- Saved enabled state, and timer value
- Current enabled state, and timer value

#### S.M.A.R.T. Read Data Reports

- Attribute 192 Emergency Retract Count
- Attribute 193 Load/Unload Cycle Count

#### **PowerChoice Manufacture Default Power Condition Timer Values**

Default power condition timer values have been established to assure product reliability and data integrity. A minimum timer value threshold of two minutes ensures the appropriate amount of background drive maintenance activities occur. Attempting to set a timer values less than the specified minimum timer value threshold will result in an aborted EPC "Set Power Condition Timer" subcommand.

Power Condition Name	Manufacturer Default Timer Values
Idle_a	100 ms
Idle_b	2 min
Idle_c	4 min
Standby_z	15 min

Setting power condition timer values less than the manufacturer specified defaults or issuing the EPC "Go to Power Condition" subcommand at a rate exceeding the default timers may limit this products reliability and data integrity.

# **PowerChoice Supported Extended Power Condition Feature Subcommands**

EPC Subcommand	Description
00 <sub>H</sub>	Restore Power Condition Settings
01 <sub>H</sub>	Go to Power Condition
02 <sub>H</sub>	Set Power Condition Timer
03 <sub>H</sub>	Set Power Condition State
04 <sub>H</sub>	Enable EPC Feature Set
05 <sub>H</sub>	Disable EPC Feature Set

#### **PowerChoice Supported Extended Power Condition Identifiers**

Power Condition Identifiers	Power Condition Name
00 <sub>H</sub>	Standby_z
01 - 80 <sub>H</sub>	Reserved
81 <sub>H</sub>	Idle_a
82 <sub>H</sub>	Idle_b
83 <sub>H</sub>	ldle_c
84 - FE <sub>H</sub>	Reserved
FF <sub>H</sub>	All EPC Power Conditions

#### 2.6 Environmental limits

Temperature and humidity values experienced by the drive must be such that condensation does not occur on any drive part. Altitude and atmospheric pressure specifications are referenced to a standard day at 58.7°F (14.8°C).

Caution

To maintain optimal performance drives should be run at nominal drive temperatures and humidity. Seagate does not recommend operating at sustained drive temperatures above 60°C. Operating at higher temperatures may affect drive health.

See Section 2.10, "Reliability" for rated MTBF device operating condition requirements.

#### 2.6.1 Temperature

#### a. Operating

32°F to 149°F (0°C ambient to 65°C drive reported) temperature range with a maximum temperature gradient of 36°F (20°C) per hour.

The maximum allowable drive reported temperature is 149°F (65°C).

Air flow may be required to achieve consistent nominal drive temperature values (see **Section 3.4**). To confirm that the required cooling is provided for the electronics and HDA, place the drive in its final mechanical configuration, and perform random write/read operations. After the temperatures stabilize, monitor the current drive temperature using the SMART temperature attribute 194 or Device Statistics log 04h page 5.

#### b. Non-operating

-40° to 158°F (-40° to 70°C) package ambient with a maximum gradient of 36°F (20°C) per hour. This specification assumes that the drive is packaged in the shipping container designed by Seagate for use with drive.

#### 2.6.2 Humidity

The values below assume that no condensation on the drive occurs. Maximum wet bulb temperature is 84.2°F (29°C).

#### 2.6.2.1 Relative humidity

Operating:	5% to 95% non-condensing relative humidity with a maximum gradient of 20% per hour.
Nonoperating:	5% to 95% non-condensing relative humidity with a maximum gradient of 20% per hour.

#### 2.6.3 Effective Altitude (sea level)

Operating:	-304.8 m to 3048 m (-1000 ft. to 10,000+ ft.)	
Nonoperating:	−304.8 m to 12,192 m (−1000 ft. to 40,000+ ft.)	

#### 2.6.4 Shock and Vibration

Shock and vibration measurements specified in this document are made directly on the drive itself and applied in the X, Y, and Z axis at the drive mounting point locations.

#### 2.6.4.1 Shock

## a. Operating

The drive will operate without error while subjected to intermittent shock pulses not exceeding 40 Gs typical at a 2ms duration limited by Z-axis, shown in **Figure 2**.

#### b. Non-operating

The drive will operate without non-recoverable errors after being subjected to shock pulses not exceeding 200 Gs at a duration of 2ms.

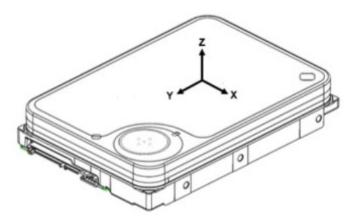


Figure 2. Drive orientation

#### **2.6.4.2** Vibration

#### a. Linear Random Operating Vibration

The drive will operate without non-recoverable errors while being subjected to the random power spectral density noise specified below.

PSD of 5-500 Hz random noise at 0.70 g rms					
Frequency (Hz)	5	20	200	250	500
G^2/Hz	0.00025	0.00210	0.00210	0.00020	0.00020

#### b. Random Rotary Operating Vibration

The drive will exhibit greater than 90% throughput for sequential and random write operations while subjected to the shaped random power spectral density noise specified below.

PSD Profile 20-1500 Hz at 12.5 rad/sec^2					
Frequency (Hz) 20 200				1500	
(rad/sec^2)^2/Hz	5.53E-02	5.53E-02	3.49E-01	6.14E-04	

#### c. Linear Random Non-Operating Vibration

The drive will not incur physical damage or have non-recoverable errors after being subjected to the power spectral density noise specified below.

PSD Profile 2-500 Hz at 2.27 g rms					
Frequency (Hz)	2	4	100	500	
G^2/Hz	0.001	0.030	0.030	0.001	

#### 2.7 Acoustics

Drive acoustics are measured as overall A-weighted acoustic sound power levels (no pure tones). All measurements are consistent with ISO document 7779. Sound power measurements are taken under essentially free-field conditions over a reflecting plane. For all tests, the drive is oriented with the cover facing upward.

NOTE

For seek mode tests, the drive is placed in seek mode only. The number of seeks per second is defined by the following equation:

(Number of seeks per second = 0.4 / (average latency + average access time

Table 3 Sound power levels

	Idle*	Performance seek
All models	20 dBA (typ) 30 dBA (max)	26 dBA (typ) 34 dBA (max)

<sup>\*</sup>During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

# 2.8 Test for Prominent Discrete Tones (PDTs)

Seagate follows the ECMA-74 standards for measurement and identification of PDTs. An exception to this process is the use of the absolute threshold of hearing. Seagate uses this threshold curve (originated in ISO 389-7) to discern tone audibility and to compensate for the inaudible components of sound prior to computation of tone ratios according to Annex D of the ECMA-74 standards.

# 2.9 Electromagnetic immunity

When properly installed in a representative host system, the drive operates without errors or degradation in performance when subjected to the radio frequency (RF) environments defined in the following table:

**Table 4 Radio frequency environments** 

Test	Description	Performance level	Reference standard
Electrostatic discharge	Contact, HCP, VCP: ± 4 kV; Air: ± 8 kV	В	EN 61000-4-2: 95
Radiated RF immunity	ed RF immunity  80 to 1000 MHz, 3 V/m, 80% AM with 1 kHz sine 900 MHz, 3 V/m, 50% pulse modulation @ 200 Hz		EN 61000-4-3: 96 ENV 50204: 95
Electrical fast transient	± 1 kV on AC mains, ± 0.5 kV on external I/O	В	EN 61000-4-4: 95
Surge immunity $\pm$ 1 kV differential, $\pm$ 2 kV common, AC mains		В	EN 61000-4-5: 95
Conducted RF immunity 150 kHz to 80 MHz, 3 Vrms, 80% AM with 1 kHz sine		Α	EN 61000-4-6: 97
Voltage dips, interrupts  0% open, 5 seconds 0% short, 5 seconds 40%, 0.10 seconds 70%, 0.01 seconds		C C C B	EN 61000-4-11: 94

#### 2.10 Reliability

## 2.10.1 Annualized Failure Rate (AFR) and Mean Time Between Failures (MTBF)

The production disk drive shall achieve an annualized failure-rate of 0.35% (MTBF of 2,500,000 hours) over a 5 year service life when used in Enterprise Storage field conditions as limited by the following:

- 8760 power-on hours per year.
- HDA temperature as reported by the drive <= 30°C
- Ambient wet bulb temp <= 26°C
- Typical workload
- The AFR (MTBF) is a population statistic not relevant to individual units
- ANSI/ISA S71.04-2013 G2 classification levels and dust contamination to ISO 14644-1 Class 8 standards (as measured at the device)

The MTBF specification for the drive assumes the operating environment is designed to maintain nominal drive temperature and humidity. Occasional excursions in operating conditions between the rated MTBF conditions and the maximum drive operating conditions may occur without significant impact to the rated MTBF. However continual or sustained operation beyond the rated MTBF conditions will degrade the drive MTBF and reduce product reliability.

Nonrecoverable read errors	1 per 10 <sup>15</sup> bits read, max
Load unload cycles (command controlled)	600,000 cycles
Maximum Rated Workload	Maximum rate of <550TB/year
	Workloads exceeding the annualized rate may degrade the drive MTBF and impact product reliability. The Annualized Workload Rate is in units of TB per year, or TB per 8760 power on hours. Workload Rate = TB transferred * (8760 / recorded power on hours).
Warranty	To determine the warranty for a specific drive, use a web browser to access the following web page: www.seagate.com/support/warranty-and-replacements/.
	From this page, click on the "Is my Drive under Warranty" link. The following are required to be provided: the drive serial number, model number (or part number) and country of purchase. The system will display the warranty information for the drive.
Preventive maintenance	None required.

# 2.11 HDD and SSD Regulatory Compliance and Safety

For the latest regulatory and compliance information see: www.seagate.com/support scroll down the page and click the Compliance, Safety and Disposal Guide link.

#### 2.11.1 Regulatory Models

The following regulatory model number represent all features and configurations within the series:

Regulatory Model Numbers: 22TB model = STL024

20TB model = STL020

#### 2.12 Corrosive environment

Seagate electronic drive components pass accelerated corrosion testing equivalent to 10 years exposure to light industrial environments containing sulfurous gases, chlorine and nitric oxide, classes G and H per ASTM B845. However, this accelerated testing cannot duplicate every potential application environment.

Users should use caution exposing any electronic components to uncontrolled chemical pollutants and corrosive chemicals as electronic drive component reliability can be affected by the installation environment. The silver, copper, nickel and gold films used in hard disk drives are especially sensitive to the presence of sulfide, chloride, and nitrate contaminants. Sulfur is found to be the most damaging. Materials used in cabinet fabrication, such as vulcanized rubber, that can outgas corrosive compounds should be minimized or eliminated. The useful life of any electronic equipment may be extended by replacing materials near circuitry with sulfide-free alternatives.

Seagate recommends that data centers be kept clean by monitoring and controlling the dust and gaseous contamination. Gaseous contamination should be within ANSI/ISA S71.04-2013 G2 classification levels (as measured on copper and silver coupons), and dust contamination to ISO 14644-1 Class 8 standards, and MTBF rated conditions as defined in the Annualized Failure Rate (AFR) and Mean Time Between Failure (MTBF) section.

#### 2.13 Reference documents

**Supported Standards** 

Serial ATA Revision 3.3 specification

**ANSI Documents** 

INCITS 529-2018 ATA/ATAPI Command Set - 4 (ACS-4)

Specification for Acoustic Test Requirement and Procedures

Seagate part number: 30553-001

In case of conflict between this document and any referenced document, this document takes precedence.

#### 2.14 Product warranty

Beginning on the date of shipment to the customer and continuing for the period specified in the purchase contract, Seagate warrants that each product (including components and subassemblies) that fails to function properly under normal use due to defect in materials or workmanship or due to nonconformance to the applicable specifications will be repaired or replaced, at Seagate's option and at no charge to the customer, if returned by customer at customer's expense to Seagate's designated facility in accordance with Seagate's warranty procedure. Seagate will pay for transporting the repair or replacement item to the customer. For more detailed warranty information, refer to the standard terms and conditions of purchase for Seagate products on the purchase documentation.

The remaining warranty for a particular drive can be determined by calling Seagate Customer Service at 1-800-468-3472. Users can also determine remaining warranty using the Seagate web site (www.seagate.com). The drive serial number is required to determine remaining warranty information.

#### Shipping

When transporting or shipping a drive, use only a Seagate-approved container. Keep the original box. Seagate approved containers are easily identified by the Seagate Approved Package label. Shipping a drive in a non-approved container voids the drive warranty.

Seagate repair centers may refuse receipt of components improperly packaged or obviously damaged in transit. Contact the authorized Seagate distributor to purchase additional boxes. Seagate recommends shipping by an airride carrier experienced in handling computer equipment.

#### Storage

Maximum storage periods are 180 days within original unopened Seagate shipping package or 60 days unpackaged within the defined non-operating limits (refer to environmental section in this manual). Storage can be extended to 1 year packaged or unpackaged under optimal environmental conditions (25°C, <40% relative humidity non-condensing, and non-corrosive environment). During any storage period the drive non-operational temperature, humidity, wet bulb, atmospheric conditions, shock, vibration, magnetic and electrical field specifications should be followed.

#### **Product repair and return information**

Seagate customer service centers are the only facilities authorized to service Seagate drives. Seagate does not sanction any third-party repair facilities. Any unauthorized repair or tampering with the factory seal voids the warranty.

# 2.15 Seagate® Rescue<sup>™</sup> Data Recovery Service

If you suffer a data loss event within the Seagate Rescue Data Recovery warranty period, and you are eligible to participate in and submit a case under the Rescue program, contact SRS at (1-800-723-1183) in the US, or if you are calling from outside the US please visit our website for numbers in your local and language: <a href="https://www.seagate.com/contacts/contact-numbers/">www.seagate.com/contacts/contact-numbers/</a>.

In addition, you may visit rescueandreplace.seagate.com/contact.jsp to obtain information regarding how to contact a recovery expert online or by telephone from your location. An SRS representative will review your case to confirm your eligibility, and to assess whether your data may be recoverable by remote recovery services or whether you will need to send your device to SRS for in-lab servicing.

#### Rescue™ General Terms

These Rescue™ General Terms together with the Rescue™ FAQ's make up the Rescue™ Program Terms. By submitting a case under the Rescue™ program ("Program") you agree to be bound by the Program Terms, including these General Terms and the FAQ. You must be a legal resident of the US to participate in the Program.

**Communications**. All communications relating to your request will be available on our web site in your account and sent via e-mail to the address you provide to us unless you request, in writing, to receive such communications via regular mail.

**Personal Data.** You must provide true, accurate and complete information about yourself as prompted by the request form, including, without limitation, your name, address, e-mail address, and telephone number, as applicable (collectively, "Personal Data"). You must maintain and promptly update your Personal Data. You acknowledge that we may send you important information and notices regarding your requests by e-mail and that we shall have no liability associated with or arising from your failure to maintain accurate Personal Data.

Capacity; Legal Rights; Indemnity. You represent to SRS that you are of the legal age of majority in your state or country of residence, with the full capacity to agree to these Program Terms. You warrant that you are the legal owner or the authorized representative of the legal owner of the device you submit to SRS (the "Device") and data. You warrant that the data on the Device is legal and that you have the unrestricted legal right to (a) give us remote access to the data, (b) have the data recovered and reproduced on a backup medium, (c) receive the recovered data, and (d) agree to these Program Terms. You will defend and indemnify us (including our directors, officers, employees, agents, delegates, and contractors) from any claims or actions relating to the Device or data, or your rights or lack of rights thereto.

**Confidentiality**. We will protect the confidentiality of your data against unauthorized disclosure using the same degree of care as we use to protect our own confidential information.

Disclaimer of Warranties, Representations and Guarantees. WE PROVIDE THE PROGRAM AND ANY SERVICES PROVIDED OR ATTEMPTED HEREUNDER "AS IS," WITH ALL FAULTS, AT YOUR SOLE RISK. WE DO NOT EXTEND ANY EXPRESS WARRANTIES, REPRESENTATIONS, CONDITIONS OR GUARANTEES REGARDING OUR RESCUE SERVICES OR ANY RESULTS THEREOF. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW AND SUBJECT TO ANY STATUTORY WARRANTIES THAT CANNOT BE EXCLUDED, WE EXPRESSLY DISCLAIM ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTY OF ACCURACY OR COMPLETENESS WITH RESPECT TO THIS PROGRAM AND SERVICES. This Program and Disclaimer is unrelated to, and does not affect any warranties relating to your Device that we or the seller may have extended to you.

Limitation of Liability. WE WILL NOT BE LIABLE FOR ANY HARM CAUSED, UNLESS YOU PROVE THAT WE CAUSED SUCH HARM INTENTIONALLY. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, WE WILL NOT BE LIABLE FOR THE CONDITION, EXISTENCE, OR LOSS OF THE DATA YOU SEND US OR THE DATA WE RECOVER (IF ANY), ANY LOSS OF REVENUE OR LOSS OF PROFITS, OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES HOWEVER CAUSED. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITATION SHALL APPLY TO ANY AND ALL DAMAGES, REGARDLESS OF THE LEGAL THEORY ON WHICH THEY ARE ASSERTED (INCLUDING, WITHOUT LIMITATION, CONTRACT, BREACH OF CONTRACT, AND TORT), AND REGARDLESS OF WHETHER WE HAVE BEEN ADVISED OF THE POSSIBILITY OF LOSS OR DAMAGES - UNLESS YOU PROVE THAT SRS CAUSED DAMAGES TO YOU INTENTIONALLY. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE AMOUNT OF OUR LIABILITY WILL NOT EXCEED THE TOTAL PRICE YOU ACTUALLY PAY FOR THE DEVICE, THE ESSENTIAL PURPOSE OF WHICH IS TO LIMIT OUR LIABILITY ARISING FROM OR RELATED TO THE PROGRAM AND ANY DATA RECOVERY SERVICES. THIS ALLOCATION OF RISK IS REFLECTED IN THE PRICE CHARGED FOR THIS PROGRAM OR SERVICES, IF ANY. YOU ACKNOWLEDGE THAT THE PRICE OF THIS PROGRAM WOULD BE MUCH GREATER IF WE UNDERTOOK MORE EXTENSIVE LIABILITY. THIS PARAGRAPH WILL APPLY NOTWITHSTANDING ANY OTHER PROVISIONS IN THESE TERMS, OR THE FAILURE OF ANY REMEDY.

Compliance with Laws. You agree to comply with all such laws and regulations and all other applicable laws, statutes, ordinances and regulations relating to the Program. You acknowledge that violations of these Program Terms could subject you to criminal or civil penalties. The goods licensed or provided, or services provided, through the Program, which may include technology and software, are subject to the customs and export control laws and regulations of the U.S. and may also be subject to the customs and export laws and regulations of the country in which the products are manufactured or received. Further, under U.S. law, such goods may not be sold, leased or otherwise transferred to restricted countries, or used by a restricted end-user or an end-user engaged in activities related to weapons of mass destruction including, without limitation, activities related to designing, developing, producing or using nuclear weapons, materials, or facilities, missiles or supporting missile projects, or chemical or biological weapons. You acknowledge you are not a restricted end-user or involved in any of the restricted activities above, and that you will comply with and abide by these laws and regulations. Seagate reserves the right to refuse service to or the return of any storage devices that have been determined to violate these regulations.

**Cancellation.** You may cancel the Program at any time by contacting SRS at 1-800-SEAGATE (1-800-475-0143) in the US, or at such other number available at services.seagate.com/contact.aspx, or you simply may refrain from submitting a request for Rescue services. These Program Terms remain applicable to your and SRS's rights and obligations with respect to any services requested by you under this Program.

Assignment. You may not assign your rights or obligations under these Program Terms without SRS' express written consent.

**Dispute Resolution**. The parties will attempt to resolve any dispute arising out of or related to these Program Terms or any data recovery services requested or attempted hereunder through good faith negotiation. To the extent permitted by applicable law, if the parties are unable to resolve the dispute through good faith negotiation, then the dispute will be submitted to final and binding arbitration with the Judicial Arbitration and Mediation Services. Each party will bear its own costs in arbitration, provided that Seagate reserves the right, in its discretion, to pre-pay certain fees you may incur in connection with the arbitration subject to refund if you do not prevail. **Both parties waive their rights to a jury trial.** All proceedings will take place in Santa Clara County, California, USA. The laws of the State of California will exclusively govern these Program Terms and our provision of any data recovery services, without regard to California's conflicts of laws rules. You consent to the exclusive jurisdiction of the courts located in Santa Clara County, California, USA.

**Severability**. If any provision of these Program Terms is held invalid, illegal or unenforceable, such provision shall be enforced to the fullest extent permitted by applicable law and the validity, legality and enforceability of the remaining provisions shall not be affected thereby.

**Legal Effect**. These Program Terms describe certain legal rights. You may have other rights under applicable law. These Program Terms do not change your rights under applicable law if such laws do not permit these Program Terms to do so. Also, the Program and these Program Terms are in addition and unrelated to any rights you may have under a Seagate warranty statement.

**SRS Companies**. The following SRS companies may provide the services described in these Program Terms: (a) Seagate Technology LLC, with offices at 3101 Jay Street, Suite 110, Santa Clara, California 95054; (b) Seagate Technology Canada Inc., with offices at 2421 Bristol Circle, Suite A100, Oakville, Ontario, Canada L6H 5S9; and/or (c) Seagate Technology (Netherlands) B.V., with offices at Koolhovenlaan 1, 1119 PA, Schiphol-Rijk, The Netherlands.

# 3.0 Configuring and mounting the drive

This section contains the specifications and instructions for configuring and mounting the drive.

# 3.1 Handling and static-discharge precautions

After unpacking, and before installation, the drive may be exposed to potential handling and electrostatic discharge (ESD) hazards. Observe the following standard handling and static-discharge precautions:


## Caution

- Before handling the drive, put on a grounded wrist strap, or ground oneself frequently by touching the metal chassis of a computer that is plugged into a grounded outlet. Wear a grounded wrist strap throughout the entire installation procedure.
- Handle the drive by its edges or frame only.
- The drive is extremely fragile—handle it with care. Do not press down on the drive top cover.
- Always rest the drive on a padded, antistatic surface until mounting it in the computer.
- Do not touch the connector pins or the printed circuit board.
- Do not remove the factory-installed labels from the drive or cover them with additional labels. Removal voids the warranty.
   Some factory-installed labels contain information needed to service the drive. Other labels are used to seal out dirt and contamination.

# 3.2 Configuring the drive

Each drive on the Serial ATA interface connects point-to-point with the Serial ATA host adapter. There is no master/slave relationship because each drive is considered a master in a point-to-point relationship. If two drives are attached on one Serial ATA host adapter, the host operating system views the two devices as if they were both "masters" on two separate ports. Both drives behave as if they are Device 0 (master) devices.

#### 3.3 Serial ATA cables and connectors

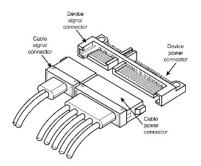

The Serial ATA interface cable consists of four conductors in two differential pairs, plus three ground connections. The cable size may be 30 to 26 AWG with a maximum length of one meter (39.37 in).

See **Table 5** for connector pin definitions. Either end of the SATA signal cable can be attached to the drive or host.

For direct backplane connection, the drive connectors are inserted directly into the host receptacle. The drive and the host receptacle incorporate features that enable the direct connection to be hot pluggable and blind mateable.

For installations which require cables, users can connect the drive as illustrated in Figure 3.

Figure 3. Attaching SATA cabling

Each cable is keyed to ensure correct orientation. IronWolf Pro SATA +Rescue drives support latching SATA connectors.

#### 3.4 Drive mounting

Users can mount the drive in any orientation using four screws in the side-mounting holes or four screws in the bottom-mounting holes. See **Figure 4** for drive mounting dimensions. Follow these important mounting precautions when mounting the drive:

- Allow a minimum clearance of 0.030 in (0.76mm) around the entire perimeter of the drive for cooling.
- Use only 6-32 UNC mounting screws.
- The screws should be inserted no more than 0.140 in (3.56mm) into the bottom or side mounting holes.
- Do not overtighten the mounting screws (maximum torque: 6 in-lb).

#### 3.4.1 Mechanical specifications

Refer to Figure 4 for detailed mounting configuration dimensions. See Section 3.4, "Drive mounting."



NOTE

These dimensions conform to the Small Form Factor Standard documented in SFF-8301 and SFF-8323, found at www.snia.org/technology-communities/sff/specifications

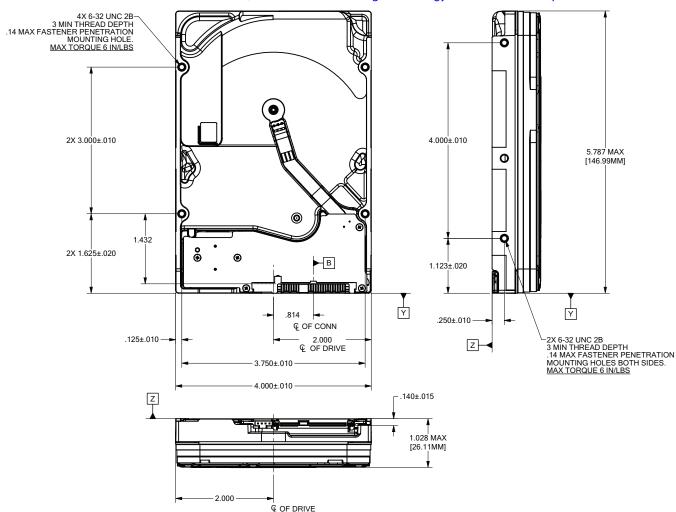


Figure 4. Mounting configuration dimensions

**NOTE** The image is for mechanical dimension reference only and may not represent the actual drive.

# 4.0 Serial ATA (SATA) interface

These drives use the industry-standard Serial ATA interface that supports FIS data transfers. It supports ATA programmed input/output (PIO) modes 0–4; multiword DMA modes 0–2, and Ultra DMA modes 0–6.

For detailed information about the Serial ATA interface, refer to the "Serial ATA: High Speed Serialized AT Attachment" specification.

# 4.1 Hot-Plug compatibility

IronWolf Pro SATA +Rescue drives incorporate connectors which enable users to hot plug these drives in accordance with the Serial ATA Revision 3.3 specification. This specification can be downloaded from www.serialata.org.

#### Caution:

The drive motor must come to a complete stop (**Ready to spindle stop time indicated in Section 2.4**) prior to changing the plane of operation. This time is required to insure data integrity.

# 4.2 Serial ATA device plug connector pin definitions

**Table 5** summarizes the signals on the Serial ATA interface and power connectors.

Table 5 Serial ATA connector pin definitions

Segment	Pin	Function	Definition
Signal	S1	Ground	2nd mate
	S2	A+	Differential signal pair A from Phy
	S3	A-	
	S4	Ground	2nd mate
	S5	B-	Differential signal pair B from Phy
	S6	B+	
	S7	Ground	2nd mate
Key and spa	acing sep	parate signal and power segm	nents
Power	P1	V33	3.3V power
	P2	V33	3.3V power
	Р3	V33	3.3V power, pre-charge, 2nd mate
	P4	Ground	1st mate
	P5	Ground	2nd mate
	P6	Ground	2nd mate
	P7	V5	5V power, pre-charge, 2nd mate
	P8	V5	5V power
	P9	V5	5V power
	P10	Ground	2nd mate
	P11	Ground or LED signal	If grounded, drive does not use deferred spin
	P12	Ground	1st mate.
	P13	V12	12V power, pre-charge, 2nd mate
	P14	V12	12V power
	P15	V12	12V power

#### Notes:

- 1. All pins are in a single row, with a 1.27mm (0.050") pitch.
- 2. The comments on the mating sequence apply to the case of backplane blindmate connector only. In this case, the mating sequences are:
  - the ground pins P4 and P12.
  - the pre-charge power pins and the other ground pins.
  - the signal pins and the rest of the power pins.
- 3. There are three power pins for each voltage. One pin from each voltage is used for pre-charge when installed in a blind-mate backplane configuration.
- 4. All used voltage pins (Vx) must be terminated.

# 4.3 Supported ATA commands

The following table lists Serial ATA standard commands that the drive supports. For a detailed description of the ATA commands, refer to the Serial ATA: High Speed Serialized AT Attachment specification. See "S.M.A.R.T. commands" on page 48 for details and subcommands used in the S.M.A.R.T. implementation.

**Table 6 Supported ATA commands** 

	Command name	Command code (in hex)
Ace	cessible Max Address Configuration	
	Get Native Max Address Ext	78 <sub>H</sub> / 0000 <sub>H</sub>
	Set Accessible Max Address Ext	78 <sub>H</sub> / 0001 <sub>H</sub>
	Freeze Accessible Max Address Ext	78 <sub>H</sub> / 0002 <sub>H</sub>
Ch	eck Power Mode	E5 <sub>H</sub>
Со	nfigure Stream	51 <sub>H</sub>
Do	wnload Microcode	92 <sub>H</sub>
Exe	ecute Device Diagnostics	90 <sub>H</sub>
Flu	sh Cache	E7 <sub>H</sub>
Flu	sh Cache Extended	EA <sub>H</sub>
Ge	t Physical Element Status	12 <sub>H</sub>
lde	entify Device	EC <sub>H</sub>
Idle	e	E3 <sub>H</sub>
Idle	e Immediate	E1 <sub>H</sub>
Rea	ad Buffer	E4 <sub>H</sub>
Rea	ad DMA	C8 <sub>H</sub>
Rea	ad DMA Extended	25 <sub>H</sub>
Rea	ad FPDMA Queued	60 <sub>H</sub>
Rea	ad Log DMA Ext	47 <sub>H</sub>
Rea	ad Log Ext	2F <sub>H</sub>
Rea	ad Multiple	C4 <sub>H</sub>

Command name	Command code (in hex)
Read Multiple Extended	29 <sub>H</sub>
Read Sectors	20 <sub>H</sub>
Read Sectors Extended	24 <sub>H</sub>
Read Stream DMA Ext	2A <sub>H</sub>
Read Verify Sectors	40 <sub>H</sub>
Read Verify Sectors Extended	42 <sub>H</sub>
Receive FPDMA Queued	65 <sub>H</sub>
Request Sense Data Ext	0B <sub>H</sub>
Remove Element And Truncate	7C <sub>H</sub>
Restore Elements And Rebuild	7D <sub>H</sub>
Sanitize Device - Crypto Scramble	B4 <sub>H</sub> / 0011 <sub>H</sub> (SED and ISE drives only)
Sanitize Device - Overwrite Ext	B4 <sub>H</sub> / 0014 <sub>H</sub>
Sanitize Device - Freeze Lock Ext	B4 <sub>H</sub> / 0020 <sub>H</sub>
Sanitize Device - Status Ext	B4 <sub>H</sub> / 0000 <sub>H</sub>
Security Disable Password	F6 <sub>H</sub>
Security Erase Prepare	F3 <sub>H</sub>
Security Erase Unit	F4 <sub>H</sub>
Security Freeze	F5 <sub>H</sub>
Security Set Password	F1 <sub>H</sub>
Security Unlock	F2 <sub>H</sub>
Seek	70 <sub>H</sub>
Send FPDMA Queued	64 <sub>H</sub>
Set Date & Time Ext	77 <sub>H</sub>
Set Features	EF <sub>H</sub>
Set Multiple Mode	C6 <sub>H</sub>
Set Sector Configuration Ext	B2 <sub>H</sub>
Sleep	E6 <sub>H</sub>
S.M.A.R.T. Disable Operations	BO <sub>H</sub> / D9 <sub>H</sub>
S.M.A.R.T. Enable/Disable Autosave	BO <sub>H</sub> / D2 <sub>H</sub>
S.M.A.R.T. Enable Operations	BO <sub>H</sub> / D8 <sub>H</sub>
S.M.A.R.T. Execute Offline	BO <sub>H</sub> / D4 <sub>H</sub>
S.M.A.R.T. Read Attribute Thresholds	BO <sub>H</sub> / D1 <sub>H</sub>
S.M.A.R.T. Read Data	BO <sub>H</sub> / DO <sub>H</sub>
S.M.A.R.T. Read Log Sector	BO <sub>H</sub> / D5 <sub>H</sub>
S.M.A.R.T. Return Status	BO <sub>H</sub> / DA <sub>H</sub>
S.M.A.R.T. Save Attribute Values	BO <sub>H</sub> / D3 <sub>H</sub>

Command name	Command code (in hex)
S.M.A.R.T. Write Log Sector	BO <sub>H</sub> / D6 <sub>H</sub>
Standby	E2 <sub>H</sub>
Standby Immediate	EO <sub>H</sub>
Trusted Send	5E <sub>H</sub> (SED drives only)
Trusted Send DMA	5F <sub>H</sub> (SED drives only)
Trusted Receive	5C <sub>H</sub> (SED drives only)
Trusted Receive DMA	5D <sub>H</sub> (SED drives only)
Write Buffer	E8 <sub>H</sub>
Write DMA	CA <sub>H</sub>
Write DMA Extended	35 <sub>H</sub>
Write DMA FUA Extended	3D <sub>H</sub>
Write FPDMA Queued	61 <sub>H</sub>
Write Log DMA Ext	57 <sub>H</sub>
Write Log Extended	3F <sub>H</sub>
Write Multiple	C5 <sub>H</sub>
Write Multiple Extended	39 <sub>H</sub>
Write Multiple FUA Extended	CE <sub>H</sub>
Write Sectors	30 <sub>H</sub>
Write Sectors Extended	34 <sub>H</sub>
Write Stream DMA Ext	3A <sub>H</sub>
Write Uncorrectable Extended	45 <sub>H</sub>

#### 4.3.1 Identify Device command

The Identify Device command (command code EC<sub>H</sub>) transfers information about the drive to the host following power up. The data is organized as a single 512-byte block of data, whose contents are shown in **Table 6** on **page 25**. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive. **see Section 2.0 on page 7** for default parameter settings.

The following commands contain drive-specific features that may not be included in the Serial ATA specification..

Table 7 Identify Device command

Word	Description	Value
0	Configuration information:  • Bit 15: 0 = ATA; 1 = ATAPI  • Bit 7: removable media  • Bit 6: removable controller  • Bit 0: reserved	0C5A <sub>H</sub>
1	Obsolete	16,383
2	ATA-reserved	C837 <sub>H</sub>
3	Obsolete	16
4	Retired	0000 <sub>H</sub>
5	Retired	0000 <sub>H</sub>
6	Obsolete	003F <sub>H</sub>
7–9	Retired	0000 <sub>H</sub>
10–19	Serial number: (20 ASCII characters, 0000 <sub>H</sub> = none)	ASCII
20-21	Retired	0000 <sub>H</sub>
22	Obsolete	0000 <sub>H</sub>
23–26	Firmware revision (8 ASCII character string, padded with blanks to end of string)	x.xx
27–46	Drive model number: (40 ASCII characters, padded with blanks to end of string)	ST22000NT001 ST20000NT001
47	(Bits 7–0) Maximum sectors per interrupt on Read multiple and Write multiple (16)	8010 <sub>H</sub> (512e) / 8002 <sub>H</sub> (4KN)
48	Trusted computing feature set supported bit 0 (SED only)	4000 <sub>H</sub>
49	Standard Standby timer, IORDY supported and may be disabled	2F00 <sub>H</sub>
50	Capabilities	4000 <sub>H</sub>
51-52	Obsolete	хххх <sub>Н</sub>
53-56	Words 64–70 and 88 are valid	хххх <sub>Н</sub>
57–58	Obsolete	xxxx <sub>H</sub>
59	(Bit 15: 0) Block Erase Ext Not Supported - N (Bit 14: 1) Overwrite Ext Supported - Y (Bit 13: X) Crypto Scramble Ext Supported (SED Only) - N (Bit 12: 1) Sanitize feature set supported - Y (Bit 11: 1) Commands allowed during sanitize op as specified in ACS-3 - Y (Bit 10: 1) Sanitize Antifreeze Lock Ext command supported - Y	5D10 <sub>H</sub> (512E) / 5D02 <sub>H</sub> (4KN)

**Table 7** Identify Device command

Word	Description	Value	
60-61	Total number of user-addressable LBA sectors available (see Section 2.2 for related information)  *Note: The maximum value allowed in this field is: 0FFFFFFF (268,435,455 sectors, 137GB). Drives with capacities over 137GB will have 0FFFFFFFh in this field and the actual number of user-addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.	0FFFFFFh*	
62	Obsolete	0000 <sub>H</sub>	
63	Multiword DMA active and modes supported (see note following this table)	<i>xx</i> 07 <sub>H</sub>	
64	Advanced PIO modes supported (modes 3 and 4 supported)	0003 <sub>H</sub>	
65	Minimum multiword DMA transfer cycle time per word (120 ns)	0078 <sub>H</sub>	
66	Recommended multiword DMA transfer cycle time per word (120 ns)	0078 <sub>H</sub>	
67	Minimum PIO cycle time without IORDY flow control (240 ns)	0078 <sub>H</sub>	
68	Minimum PIO cycle time with IORDY flow control (120 ns)	0078 <sub>H</sub>	
69	Additional supported	000C <sub>H</sub>	
70-74	ATA-reserved	0000 <sub>H</sub>	
75	Queue depth	001F <sub>H</sub>	
76	Serial ATA capabilities	8D0E <sub>H</sub>	
77	(Bit 6:1) Send/Receive FPDMA Queued Commands Supported	xx4x <sub>H</sub>	
78	Serial ATA features supported	00CC <sub>H</sub>	
79	Serial ATA features enabled	xxxx <sub>H</sub>	
80	Major version number	OFEO <sub>H</sub> (ACS-4)	
81	Minor version number	FFFF <sub>H</sub>	
82	Command sets supported	306B <sub>H</sub>	
83	Command sets supported	7561 <sub>H</sub>	
84	Command sets support extension (see note following this table)	6173 <sub>H</sub>	
85	Command sets enabled	3069 <sub>H</sub>	
86	Command sets enabled	B441 <sub>H</sub>	
87	Command sets enable extension	6173 <sub>H</sub>	
88	Ultra DMA support and current mode (see note following this table)	xx7F <sub>H</sub>	
89	Security erase time	xxxx <sub>H</sub>	
90	Enhanced security erase time	xxxx <sub>H</sub>	
92	Master password revision code	FFFE <sub>H</sub>	
93	Hardware reset value	xxxx <sub>H</sub>	
95–99	ATA-reserved	0000 <sub>H</sub>	
100–103	Total number of user-addressable LBA sectors available. These words are required for drives that support the 48-bit addressing feature. Maximum value: 0000FFFFFFFFFFFh.	(see Section 2.2)	
104–105	ATA-reserved	0000 <sub>H</sub>	

Table 7 Identify Device command

Word	Description	Value		
106	Physical/Logical sector size 6003 <sub>H</sub> (512E) / 5000 <sub>H</sub> (4KI			
107	ATA-reserved	0000 <sub>H</sub>		
108–111	The mandatory value of the world wide name (WWN) for the drive.  NOTE: This field is valid if word 84, bit 8 is set to 1 indicating 64-bit WWN support.	Each drive will have a unique value.		
112–118	ATA-reserved	0000 <sub>H</sub>		
119	Commands and feature sets supported	43DE <sub>H</sub>		
120	Commands and feature sets supported or enabled	409C <sub>H</sub>		
121-127	ATA-reserved	0000 <sub>H</sub>		
128	Security status	0021 <sub>H</sub>		
129–159	Seagate-reserved	xxxx <sub>H</sub>		
160–167	ATA-reserved	0000 <sub>H</sub>		
168	Device Nominal Form Factor	3.5"		
169–205	ATA-reserved	0000 <sub>H</sub>		
206	SCT Command Transport command set. If bit 0 is set to one, then the device supports SCT Command Transport. Bits 7:2 indicate individual SCT feature support.	xxBD <sub>H</sub>		
207-216	ATA-reserved	0000 <sub>H</sub>		
217	Nominal media rotation rate	7200		
218-221	ATA-reserved	0000 <sub>H</sub>		
222	Transport Major Version	11FF <sub>H</sub> (SATA 3.3)		
223	Transport Minor Version	0000 <sub>H</sub>		
224-229	ATA-reserved	0000 <sub>H</sub>		
230-233	Extended Number of User Accessible Sectors	(see Section 2.2)		
234-254	ATA-reserved	0000 <sub>H</sub>		
255	Integrity word	xxA5 <sub>H</sub>		

**NOTE** See the bit descriptions below for words 63, 84, and 88 of the Identify Drive data.

Bit	Word 63
0	Multiword DMA mode 0 is supported.
1	Multiword DMA mode 1 is supported.
2	Multiword DMA mode 2 is supported.
8	Multiword DMA mode 0 is currently active.
9	Multiword DMA mode 1 is currently active.
10	Multiword DMA mode 2 is currently active.  Multiword DMA mode 2 is currently active.
10 Bit	Word 84
1	
0	SMART error logging is supported.
1	SMART self-test is supported.
2	Media serial number is not supported.
3	Media Card Pass Through Command feature set is not supported.
4	Streaming feature set is supported.
5	GPL feature set is supported.
6	WRITE DMA FUA EXT and WRITE MULTIPLE FUA EXT commands are supported.
7	WRITE DMA QUEUED FUA EXT command is not supported.
8	64-bit World Wide Name is supported.
9-10	Obsolete.
11-12	Reserved for TLC.
13	IDLE IMMEDIATE command with IUNLOAD feature is supported.
14	Shall be set to 1.
15	Shall be cleared to 0.
Bit	Word 88
0	Ultra DMA mode 0 is supported.
1	Ultra DMA mode 1 is supported.
2	Ultra DMA mode 2 is supported.
3	Ultra DMA mode 3 is supported.
4	Ultra DMA mode 4 is supported.
5	Ultra DMA mode 5 is supported.
6	Ultra DMA mode 6 is supported.
8	Ultra DMA mode 0 is currently active.
9	Ultra DMA mode 1 is currently active.
10	Ultra DMA mode 2 is currently active.
11	Ultra DMA mode 3 is currently active.
12	Ultra DMA mode 4 is currently active.
13	Ultra DMA mode 5 is currently active.
13	

## 4.3.2 Identify Device Data log

The IDENTIFY DEVICE Data log (log 30H) transfers information about the drive. The data is organized as a set of 512-byte blocks of data, whose contents are shown in **Table 1 on page 7**. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive.

The following may contain drive-specific features that may are included in the Serial ATA specification

Page (hex)	QWord Offset (dec)	Bits	Description	Value (hex)			
	List of supported pages						
	07	63:24	Reserved				
		23:16	Page number	00			
		15:0	Revision number	0001			
	8		Number of entries in the following list	09			
	9		Page number of the 1st supported ID data log page	00			
	10		Page number of the 2nd supported ID data log page	01			
00	11		Page number of the next supported ID data log page	02			
	12		Page number of the next supported ID data log page	03			
	13		Page number of the next supported ID data log page	04			
	14		Page number of the next supported ID data log page	05			
	15		Page number of the next supported ID data log page	06			
	16		Page number of the next supported ID data log page	08			
	17		Page number of the last supported ID data log page	00			
	18511		Reserved				
01	Copy of IDENTIFY DEVICE data						
	0511		Copy of IDENTIFY DEVICE command data				

	Capacity					
	07	Capacity page information header (QWord)				
		63	Shall be set to 1	1		
		62:24	Reserved			
		23:16	Page number	02		
		15:0	Revision number	0001		
	815	Device Capacity (QWord)				
		63	Shall be set to 1	1		
	013	62:48	Reserved	0		
		47:0	accessible capacity	(see Section 2.2)		
		Physical	/Logical Sector Size (QWord)			
		63	Contents of the QWord are valid	1		
02		62	logical to physical sector relationship supported	1 (512E) / 0 (4KN)		
	1623	61	logical sector size supported bit	1 (4KN) / 0 (512E)		
		60:22	Reserved	0		
		19:16	logical to physical sector relationship	0 (4KN) / 3 (512E)		
		15:0	logical sector offset	4000 <sub>H</sub>		
		Logical Sector Size (QWord)				
	24 21	63	Contents of the QWord are valid	1		
	2431	62:32	Reserved	0		
		31:0	Logical Sector Size	4096b (4KN)		
		Nominal Buffer Size (QWord)				
	3239	63	Contents of the QWord are valid	1		
		62:0	buffer size	256		
	40511		Reserved	0		
	Supported Cap	abilities				
		Support	ed Capabilities page information header (QWord)			
	07	63	Shall be set to 1	1		
		62:24	Reserved			
		23:16	Page number	03		
03	815	Support	ed Capabilities (QWord)			
		63	Shall be set to 1	1		
		62:55	Reserved	0		
		54	advanced background operation supported	0		
		53	persistent sense data reporting	0		
		52	sff-8447 reporting	1		

		51	definitive ending pattern supported	1
		50	data set management xl supported	0
		49	set sector configuration supported	1
		48	zero ext supported	0
		47	successful ncq command sense data supported	0
		46	dlc supported	0
		45	request sense device default supported	1
		44	dsn supported	1
		43	low power standby supported	0
		42	set epc power source supported	0
		41	amax addr supported	1
		40	Reserved for CFA	0
		39	drat supported	0
		38	lps misalignment reporting supported	0
		37	Reserved	0
		36	read buffer dma supported	0
		35	write buffer dma supported	0
		34	Reserved	0
03 cont.	815 cont.	33	download microcode dma supported	0
		32	28-bit supported	0
		31	rzat supported	0
		30	Reserved	0
		29	nop supported	0
		28	read buffer supported	1
		27	write buffer supported	1
		26	Reserved	0
		25	read look-ahead supported	1
		24	volatile write cache supported	1
		23	smart supported	1
		22	flush cache ext supported	1
		21	Reserved	0
		20	48-bit supported	1
		19	Reserved	0
		18	spin-up supported	1
		17	puis supported	1
		16	apm supported	1
		15	Reserved for CFA	0

		14	download microcode supported	1
		13	unload supported	1
		12	write fua ext supported	1
		11	gpl supported	1
		10	streaming supported	1
	815 cont.	9	Reserved	0
		8	smart self-test supported	1
		7	smart error logging supported	1
		6	epc supported	1
		5	sense data supported	1
		4	free-fall supported	0
		3	dm mode 3 supported	1
		2	gpl dma supported	1
		1	write uncorrectable supported	1
		0	wrv supported	1
		DOWNLOAD MICROCODE Capabilities (QWord)		
		63	Contents of the QWord are valid	1
03	1623	62:36	Reserved	0
cont.		35	dm clears nonactivated deferred data	0
		34	dm offsets deferred supported	1
		33	dm immediate supported	1
		32	dm offsets immediate supported	1
		31:16	dm maximum transfer size	0000 <sub>H</sub>
		15:0	dm minimum transfer size	0000 <sub>H</sub>
	2431	Nomina	Media Rotation Rate (QWord)	
		63	Shall be set to one	1
		62:16	Reserved	0
		15:0	nominal media rotation rate	7200
	3239	Form Fa	ctor (QWord)	
		63	Contents of the QWord are valid	1
		62:4	Reserved	0
		3:0	nominal form factor	3.5"
		Write-Re	ad-Verify Sector Count Mode 3 (QWord)	
	4047	63	Contents of the QWord are valid	1
		62:32	Reserved	0
		31:0	wrm mode 3 count	0

		Write-Re	ad-Verify Sector Count Mode 2 (QWord)	
	40 55	63	Contents of the QWord are valid	1
	4855	62:32	Reserved	0
		31:0	wrm mode 2 count	0
		World wi	ide name (DQWord)	
	5671	127	Shall be set to one	1
	30/ 1	126:64	Reserved	0
		63:0	world wide name	unique
		DATA SE	T MANAGEMENT (QWord)	
		63	Shall be set to one	1
		62:32	Reserved	0
	7279	31:16	max pages per dsm command	0
		15:8	logical block markups supported	0
		7:1	Reserved	0
		0	trim supported	0
		Utilization Per Unit Time (DQWord)		
03		127	Shall be set to one	1
cont.		126:120	Reserved	0
		119:112	utilization type	Combined Writes and Reads
	8095	111:104	utilization units	ТВ
		103:96	utilization interval	Per Year
		95:34	Reserved	0
		63:32	utilization b	
		31:0	utilization a	550
		Utilizatio	n Usage Rate Support (QWord)	
		63	Contents of the QWord are valid	0
		62:24	Reserved	0
		23	setting rate basis supported	0
	96103	22:9	Reserved	0
	JU., 10J	8	since power on rate basis supported	0
		7:5	Reserved	0
		4	power on hours rate basis supported	0
		3:1	Reserved	0
		0	date/time rate basis supported	0

	104 111	Zoned C	apabilities (QWord)	
		63	Contents of the QWord are valid	0
	104111	62:2	Reserved	0
		1:0	zoned	0
		Support	ed ZAC Capabilities (QWord)	
		63	Contents of the QWord are valid	0
		62:5	Reserved	0
	112119	4	non-data reset write pointers ext supported	0
	112119	3	non-data finish zone ext supported	0
		2	non-data close zone ext supported	0
		1	non-data open zone ext supported	0
		0	report zones ext supported	0
		Advanced Background Operations Capabilities (QWord)		
03	120127	63	Contents of the QWord are valid	0
cont.		62	abo foreground mode supported	0
		61	abo ir mode supported	0
		60:48	Reserved	0
		47:16	abo minimum fraction	0
		15:0	abo minimum supported timelimit	0
		Advance	ed Background Operations Recommendations (QWord)	
		63	Contents of the QWord are valid	0
	128135	62:32	Reserved	0
		31:16	device maintenance polling time	0
		15:0	abo recommended abo start interval	0
		Queue [	Depth (QWord)	
	136143	63	Contents of the QWord are valid	0
	150145	62:5	Reserved	0
		4:0	queue depth	32

		Supported SCT Capabilities (QWord)				
		63	Contents of the QWord are valid	0		
		62:27	Reserved	0		
		26	sct write same function 103 supported	1		
		25	sct write same function 102 supported	1		
		24	sct write same function 101 supported	1		
		23:19	Reserved	0		
		18	sct write same function 3 supported	1		
	144151	17	sct write same function 2 supported	1		
		16	sct write same function 1 supported	1		
		15:6	Reserved	0		
		5	sct data tables supported	1		
		4	sct feature control supported	1		
		3	sct error recovery control supported	1		
03		2	sct write same supported	1		
cont.		1	Reserved	0		
		0	sct supported	1		
		Depopulation Capabilities (QWord)				
		63	Contents of the QWord are valid	1		
	152159	62:3	Reserved	0		
	132139	2	restore elements and rebuild supported	1		
		1	get physical element status supported	1		
		0	remove element and truncate supported	1		
		35	Depopulation Execution Time (QWord)			
	160167		Bit Description: 63 Contents of the QWord are valid	1		
			62:0 DEPOPULATION TIME field (see 9.10.5.19)	(Unique per drive)		
	168503	Reserve	d			
		Vendor S	Specific Supported Capabilities (QWord)			
	504511	63	Contents of the QWord are valid	0		
		62:0	Vendor specific			
	Current Setting	gs				
		Current	Settings page information header (QWord)			
04	07	63	Shall be set to 1	1		
	U/	62:24	Reserved	0		
		23:16	Page number	04		

		Current Settings (QWord)			
		63	Shall be set to one	1	
		62:19	Reserved	0	
		18	successful ncq command sense data enabled	0	
		17	dlc enabled	0	
		16	dsn enabled	0	
		15	epc enabled	1	
		14	Reserved	0	
		13	volatile write cache enabled	1	
		12	Reserved	0	
	815	11	reverting to defaults enabled	0	
	013	10	sense data enabled	0	
		9	Reserved	0	
		8	non-volatile write cache	1	
		7	read look-ahead	1	
		6	smart enabled	1	
		5	Reserved	0	
04		4	Reserved	0	
cont.		3	puis enabled	0	
		2	apm enabled	0	
		1	free-fall enabled	0	
		0	wrv enabled	0	
		Feature :	Settings (QWord)		
		63	Contents of the QWord are valid	1	
	1623	62:18	Reserved	0	
	1023	17:16	power source	0	
		15:8	apm level	0	
		7:0	wrv mode	0	
		DMA Ho	st Interface Sector Times (QWord)		
	2431	63	Contents of the QWord are valid	1	
	2731	62:16	Reserved	0	
		15:0	dma sector time	0	
		PIO Host	Interface Sector Times (QWord)		
	3239	63	Contents of the QWord are valid	1	
	5257	62:16	Reserved	0	
		15:0	pio sector time	0	

		Streaming Minimum Request Size (QWord)		
	4047	63	Contents of the QWord are valid	1
	4047	62:16	Reserved	0
		15:0	stream min request size	1000 <sub>H</sub>
		Streami	ing Access Latency (QWord)	·
	4855	63	Contents of the QWord are valid	1
	4055	62:16	Reserved	0
		15:0	stream access latency	0
		Streami	ing Performance Granularity (QWord)	·
	5663	63	Contents of the QWord are valid	1
	3003	62:16	Reserved	0
		15:0	stream granularity	2710 <sub>H</sub>
		Free-fal	l Control Sensitivity (QWord)	
04	6471	63	Contents of the QWord are valid	1
cont.		62:16	Reserved	0
		15:0	free-fall sensitivity	0
		Device	Maintenance Schedule (QWord)	
		63	Contents of the QWord are valid	0
		62:58	Reserved	0
	7279	57:48	minimum inactive time in milliseconds	0
		47:32	time scheduled for device maintenance	0
		31:16	time to performance degradation	0
		15:0	minimum inactive time	0
		Advanc	ed Background Operations Settings (QWord)	
	8087	63	Contents of the QWord are valid	0
	0007	62:8	Reserved	0
		7:0	abo_status	0
	88511	Reserve	ed	

	Strings					
	07	Supported Capabilities page information header (QWord)				
		63	Shall be set to 1	1		
	07	62:24	Reserved			
		23:16	Page number	05		
	827	SERIAL NU	MBER (ATA String)	XXXXXXXX <sub>H</sub>		
05	2831	Reserved				
	3239	FIRMWARI	REVISION (ATA String)	XXXX <sub>H</sub>		
	4047	Reserve	1			
	4887	MODEL N	JMBER (ATA String)	ST22000NT001 ST20000NT001		
	8895	Reserve	d			
	96103	ADDITION	al product identifier (ATA String)	0		
	104511	Reserve	d			
	Security					
		Security page information header (QWord)				
	07	63	Shall be set to 1	1		
		62:24	Reserved			
		23:16	Page number	06		
		Master Password Identifier (QWord)				
	815	63	Contents of the QWord are valid	1		
	013	62:16	Reserved	0		
		15:0	master password identifier	FFFE <sub>H</sub>		
06		Security	Status (QWord)			
		63	Contents of the QWord are valid	1		
		62:7	Reserved	0		
		6	security supported	1		
	1623	5	master password capability	0		
	1025	4	enhanced security erase supported	1		
		3	security count expired	0		
		2	security frozen	0		
		1	security locked	0		
		0	security enabled	0		

		Time re	quired for an Enhanced Erase mode SECURITY ERASE UNIT	Γ command (QWord)
		63	Contents of the QWord are valid	1
	2431	62:16	Reserved	0
		15	enhanced security erase time format	1
		14:0	enhanced security erase time	(Unique per drive)
		Time re	quired for an Normal Erase mode SECURITY ERASE UNIT co	ommand (QWord)
		63	Contents of the QWord are valid	1
	3239	62:16	Reserved	0
		15	normal security erase time format	1
		14:0	normal security erase time	(Unique per drive)
		Trusted	Computing Feature Set (QWord)	
		63	Contents of the QWord are valid	1
06	4047	62:1	Reserved	0
cont.		0	trusted computing supported	0 (1, SED drives only)
		Security Capabilities (QWord)		
		63	Contents of the QWord are valid	1
		62:8	Reserved	0
		7	restricted sanitize overrides security	0
		6	acs-3 commands allowed by sanitize	1
	4855	5	sanitize antifreeze lock supported	1
		4	block erase supported	0
		3	overwrite supported	1
		2	crypto scramble supported	0 (1, SED and ISE drives only)
		1	sanitize supported	1
		0	encrypt all supported	0
	56511	Reserve	ed	
07	Parallel ATA			
07	000511		(Not supported for SATA drives)	all zeros

	Serial ATA	Serial ATA				
		Serial AT	A page information header (QWord)			
	0.7	63	Shall be set to 1	1		
	07	62:24	Reserved			
		23:16	Page number	08		
		SATA Ca	pabilities			
		63	Shall be set to one	1		
		62:32	Reserved	0		
		31	power disable feature always enabled	0		
		30	power disable feature supported	0		
		29	rebuild assist supported	0		
		28	dipm ssp preservation supported	0		
		27	hybrid information supported	0		
		26	devsleep to reducedpwrstate capability supported	0		
		25	device sleep supported	0		
		24	ncq autosense supported	1		
		23	software settings preservation supported	1		
		22	hardware feature control supported	0		
08		21	in-order data delivery supported	0		
		20	device initiated power management supported	1		
	815	19	dma setup auto-activation supported	1		
	013	18	nonzero buffer offsets supported	0		
		17	send and receive queued commands supported	1		
		16	ncq non-data command supported	0		
		15	ncq streaming supported	0		
		14	read log dma ext as equivalent to read log ext supported	1		
		13	device automatic partial to slumber transitions supported	0		
		12	host automatic partial to slumber transitions supported	0		
		11	ncq priority information supported	0		
		10	unload while ncq commands are outstanding supported	1		
		9	sata phy event counters log supported	1		
		8	receipt of host initiated power management requests supported	0		
		7	ncq feature set supported	1		
		6:3	Reserved	0		
		2	sata gen3 signaling speed supported	1		
		1	sata gen2 signaling speed supported	1		
		0	sata gen1 signaling speed supported	1		

		Current	SATA Settings (QWord)			
		63	Shall be set to one	1		
		62:14	Reserved	0		
		13	hybrid enabled	0		
		12	rebuild assist enabled	0		
		11	power disable feature enabled	0		
		10	device sleep enabled	0		
	1623	9	automatic partial to slumber transitions enabled	0		
		8	software settings preservation enabled	1		
		7	hardware feature control is enabled	0		
		6	in-order data delivery enabled	0		
		5	device initiated power management enabled	0		
08		4	dma setup auto-activation enabled	1		
cont.		3	nonzero buffer offsets enabled	0		
		2:0	current negotiated serial ata signal speed	(6.0, 3.0, 1.5) Gb/s		
	2439	Reserved				
	4041	CURRENT HARDWARE FEATURE CONTROL IDENTIFIER (Word)				
	4243	SUPPORTED HARDWARE FEATURE CONTROL IDENTIFIER (Word)				
	4447	Reserved				
		Device S	Sleep Timing Variables (QWord)			
		63	devslp timing variables supported	0		
	4855	62:16	Reserved	0		
	4633	15:8	devsleep exit timeout (deto)	0		
		7:5	Reserved	0		
		4:0	minimum devslp assertion time (mdat)	0		
	56511	Reserve	d			

## 4.3.3 Device Statistics log

The Device Statistics log (log 04H) transfers information about the drive. The data is organized as a set of 512-byte blocks of data, whose contents are shown in **Table 1 on page 7**. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive.

The following may contain drive-specific features that are included in the SATA specifications.

Table 8 Device Statistics log

Page (hex)	Statistic	Supported			
00	List of supported log pages	Yes			
01	General Statistics				
	Lifetime Power-on Resets	Yes			
	Power-on Hours	Yes			
	Logical Sectors Written	Yes			
	Number of Write Commands	Yes			
	Logical Sectors Read	Yes			
	Number of Read Commands	Yes			
	Pending Error Count	Yes			
	Workload Utilization	No			
	Utilization Usage Rate	No			
	Resource Availability	No			
	Random Write Resources Used	No			
02	Free Fall Statistics				
	Number of Free-Fall Events Detected	No			
	Overlimit Shock Events	No			
03	Rotating Media Statistics	•			
	Spindle Motor Power-on Hours	Yes			
	Head Flying Hours	Yes			
	Head Loaded Events	Yes			
	Number of Reallocated Logical Sectors	Yes			
	Read Recovery Attempts	Yes			
	Number of Mechanical Start Failures	Yes			
	Number of Reallocation Candidate Logical Sectors	Yes			
	Number of High Priority Unload Events	Yes			
04	General Errors Statistics	•			
	Number of Reported Uncorrectable Errors	Yes			
	Number of Resets Between Command Acceptance and Command Completion	Yes			
	Physical Element Status Changed	Yes			

Table 8 Device Statistics log

05	Temperature Statistics						
	Current Temperature	Yes					
	Average Short Term Temperature	Yes					
	Average Long Term Temperature	Yes					
	Highest Temperature	Yes					
	Lowest Temperature	Yes					
	Highest Average Short Term Temperature	Yes					
	Lowest Average Short Term Temperature	Yes					
	Highest Average Long Term Temperature	Yes					
	Lowest Average Long Term Temperature	Yes					
	Time in Over-Temperature	Yes					
	Specified Maximum Operating Temperature	Yes					
	Time in Under-Temperature	Yes					
	Specified Minumum Operating Temperature	Yes					
06	Transport Statistics						
	Number of Hardware Resets	Yes					
	Number of ASR Events	Yes					
	Number of Interface CRC Errors	Yes					
07	Solid State Device Statistics						
	Percentage Used Endurance Indicator	No					
08	Zoned Device Statistics						
	Maximum Open Zones	No					
	Maximum Explicitly Open Zones	No					
	Maximum Implicitly Open Zones	No					
	Minimum Empty Zones	No					
	Maximum Non Sequential Zones	No					
	Zones Emptied	No					
	Suboptimal Write Commands	No					
	Commands Exceeding Optimal Limit	No					
	Failed Explicit Opens	No					
	Read Rule Violations	No					
	Write Rule Violations	No					
09FE	Reserved						
FF	Vendor Specific Statistics	l					
	TBD	Х					

### 4.3.4 Set Features command

This command controls the implementation of various features that the drive supports. When the drive receives this command, it sets BSY, checks the contents of the Features register, clears BSY and generates an interrupt. If the value in the register does not represent a feature that the drive supports, the command is aborted. Power-on default has the read look-ahead and write caching features enabled. The acceptable values for the Features register are defined as follows:

### Table 9 Set Features command values

- 02<sub>H</sub> Enable write cache (default).
- 03<sub>H</sub> Set transfer mode (based on value in Sector Count register).

Sector Count register values:

- 00<sub>H</sub> Set PIO mode to default (PIO mode 2).
- 01<sub>H</sub> Set PIO mode to default and disable IORDY (PIO mode 2).
- 08<sub>H</sub> PIO mode 0
- 09<sub>H</sub> PIO mode 1
- 0A<sub>H</sub> PIO mode 2
- 0B<sub>H</sub> PIO mode 3
- OC<sub>H</sub> PIO mode 4 (default)
- 20<sub>H</sub> Multiword DMA mode 0
- 21<sub>H</sub> Multiword DMA mode 1
- 22<sub>H</sub> Multiword DMA mode 2
- 40<sub>H</sub> Ultra DMA mode 0
- 41<sub>H</sub> Ultra DMA mode 1
- 42<sub>H</sub> Ultra DMA mode 2
- 43<sub>H</sub> Ultra DMA mode 3
- 44<sub>H</sub> Ultra DMA mode 4
- 45<sub>H</sub> Ultra DMA mode 5
- 46<sub>H</sub> Ultra DMA mode 6
- 10<sub>H</sub> Enable use of SATA features
- 55<sub>H</sub> Disable read look-ahead (read cache) feature.
- 82<sub>H</sub> Disable write cache
- 90<sub>H</sub> Disable use of SATA features
- AA<sub>H</sub> Enable read look-ahead (read cache) feature (default).
- F1<sub>H</sub> Report full capacity available

**NOTE** At power-on, or after a hardware or software reset, the default values of the features are as indicated above.

### 4.3.5 S.M.A.R.T. commands

S.M.A.R.T. provides near-term failure prediction for disk drives. When S.M.A.R.T. is enabled, the drive monitors predetermined drive attributes that are susceptible to degradation over time. If self-monitoring determines that a failure is likely, S.M.A.R.T. makes a status report available to the host. Not all failures are predictable. S.M.A.R.T. predictability is limited to the attributes the drive can monitor. For more information on S.M.A.R.T. commands and implementation, see the *Draft ATA-5 Standard*.

SeaTools diagnostic software activates a built-in drive self-test (DST S.M.A.R.T. command for D4<sub>H</sub>) that eliminates unnecessary drive returns. The diagnostic software ships with all new drives and is also available at: <a href="https://www.seagate.com/support/downloads/seatools/">www.seagate.com/support/downloads/seatools/</a>.

This drive is shipped with S.M.A.R.T. features disabled. Users must have a recent BIOS or software package that supports S.M.A.R.T. to enable this feature. The table below shows the S.M.A.R.T. command codes that the drive uses.

Table 10 S.M.A.R.T. commands

Code in features register	S.M.A.R.T. command
D0 <sub>H</sub>	S.M.A.R.T. Read Data
D2 <sub>H</sub>	S.M.A.R.T. Enable/Disable Attribute Autosave
D3 <sub>H</sub>	S.M.A.R.T. Save Attribute Values
D4 <sub>H</sub>	S.M.A.R.T. Execute Off-line Immediate (runs DST)
D5 <sub>H</sub>	S.M.A.R.T. Read Log Sector
D6 <sub>H</sub>	S.M.A.R.T. Write Log Sector
D8 <sub>H</sub>	S.M.A.R.T. Enable Operations
D9 <sub>H</sub>	S.M.A.R.T. Disable Operations
DA <sub>H</sub>	S.M.A.R.T. Return Status

NOTE

If an appropriate code is not written to the Features Register, the command is aborted and 0x04 (abort) is written to the Error register.



# **Seagate Technology LLC**

AMERICAS Seagate Technology LLC 47488 Kato Road, Fremont, California 94538, United States, 510-661-1000

Publication Number: 204482900, Rev. B

January 2023