


ATR2500x-USB

Cardioid Condenser USB Microphone

User Manual

Contents

- Introduction & features 2
- Setting up your microphone with pivot mount & desk stand 3
 - Preliminary setup with MacOS Mojave 4
 - Advanced setup with MacOS Mojave 7
 - Preliminary setup with Windows 10 9
 - Advanced setup with Windows 10 11
 - Using headphones 15
 - Selecting software 15
 - Setting your software levels 15
 - Positioning your microphone 15
 - Protecting your microphone 15
 - Specifications 16
 - Warranty 17

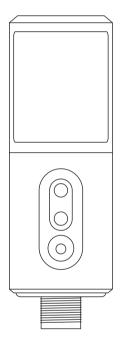

trovaprezzi.it

audio-technica

Compliance with FCC rules (USA only)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Canada only

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme á la norme NMB -003 du Canada.

Thank you for buying the Audio-Technica ATR2500x-USB cardioid condenser microphone. Designed for computerbased recording, this microphone is ideal for digitally capturing music or any acoustic audio source using your favorite recording software.

Equipped with a USB output for easy connection to your computer, the ATR2500x-USB offers studio-quality articulation and intelligibility perfect for home studio recording, field recording, podcasting, and voice over use.


The ATR2500x-USB also features a built-in headphone jack with volume control that allows you to directly monitor your microphone's output during recording. The microphone's focused pickup pattern delivers excellent offaxis rejection, while its A/D converter with up to 24-bit, 192 kHz sampling rate ensures clear, articulate sound reproduction.

Audio-Technica's state-of-the-art design and manufacturing techniques ensure that the microphone complies with the company's renowned consistency and reliability standards.

Features

- · Side-address condenser microphone with USB output for easy connection to your computer
- · Ideal for podcasting, home studio recording, field recording, and voice over use
- Built-in headphone jack lets you monitor directly from the microphone
- · Controls on the front of the microphone allow you to easily adjust headphone volume
- · High-quality A/D converter with up to 24-bit, 192 KHz sampling rate
- · Compatible with Windows and Mac
- Low-mass diaphragm provides excellent frequency response
- Cardioid polar pattern reduces pickup of unwanted sounds from the sides and rear, improving isolation of desired sound source
- Low self-noise ideally suited for digital recording
- Sturdy tripod desk stand with folding legs is easy to set up and transport
- · Pivoting, threaded stand mount attaches securely to a conventional microphone stand
- Durable metal construction for long-lasting performance
- Includes two 2 m (6.6') cables: USB-C to USB-C, USB-C to USB-A

ATR2500x-USB Setup

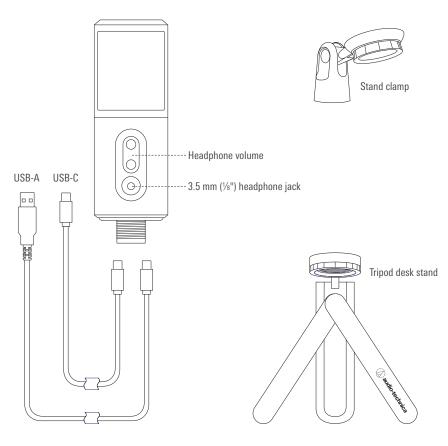


For desktop use

Screw the microphone into the threaded portion of the tripod desk stand. The front of the microphone should face the A-T logo. Extend the tripod legs to provide a wide, secure base, and place the tripod desk stand on a flat surface.

For mic stand use

Screw the microphone stand clamp to your mic stand. Screw microphone into the stand clamp.

Use a screwdriver or coin to loosen/tighten the stand's pivot screws for angle adjustment.

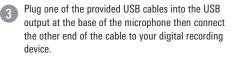

When connecting the microphone to a USB-C port, you must use a USB On-The-Go (USB OTG) cable like the one included.

When using with equipment that includes a built-in mic, consult that device's user guide for instructions on disabling its mic.

Optional headphone monitoring: Connect headphones with 3.5 mm (1/s") plug into front of microphone. Use up/down buttons for volume control.

Preliminary setup with MacOS Mojave

NOTICE Regarding MacOS Catalina

With the release of MacOS Catalina, Apple has introduced restrictions on using non-Apple software. Unless the recording application is officially supported to run under MacOS Catalina, you will not be able to access the microphone even if it shows up as a sound input device!

If you are using an older version of MacOS, your computer will automatically recognize the USB device and install the appropriate driver.

If you are using MacOS Mojave, you must enable software access to the microphone, using the security and privacy settings.

1. Connect the ATR2500x-USB microphone to an open USB port on the Mac (Type A or Type C).

Open the system preferences by clicking the Apple logo in the upper left corner of the menu bar and selecting System Preferences. Alternatively, you can click on the gear icon in the dock. Click the Loudspeaker icon to open the sound preferences.

Ć	Finder	File	Edit	View	Go
A	bout This	Mac			
S	stegn Pref	erenc	es		
	op Store			3 upda	ates
R	ecent Item	s			

Click the Apple Logo and select System Preferences



By default the Mac selects the internal microphone as the sound input device. When the ATR2500x-USB is plugged in, the Mac assumes that it is the desired input device and automatically selects it.

Verify that the ATR2500x-USB is highlighted.

The input volume for the microphone can be adjusted by moving the input slider and watching the level meter while speaking into the microphone. Setting the level too low will not provide enough input signal to your recording application. Setting it too high can overload the input to the recording application resulting in clipping or distortion.

Note: The output volume slider controls the Mac's speaker or headphone jack output and does not affect the input sound level. This slider replicates the volume control associated with the small speaker icon in the menu bar and the volume controls on the keyboard.

	Sound	Q Search
	Sound Effects Output In	put
Select a device for sound	d input:	
Name	Туре	8
Internal Microphone	Built	t-in
ATR2500x-USB Micropho	ine USE	3
Settings for the selected o		.
Input le	vel: 0 0 0 0 0 0 0 0 0 0 0 0	1111

Preliminary setup with MacOS Mojave (continued)

 Because the ATR2500x-USB Microphone has a built-in headphone output, the Mac selects it as the output device. Should you desire to use the internal speakers for playback audio, click the Output tab and choose the desired output device.

The balance control sets the left to right balance in the output device.

The Output volume controls the playback level from the Mac. It is the same as clicking on the small speaker icon in the menu bar and adjusting volume or using the keyboard controls.


••• <> ==	Sound	Q Search	
	Sound Effects Output	Input	
Select a device for sound out	put:		
Name		Туре	
Internal Speakers Pro Tools Aggregate I/O		Built-in Aggregate device	
ATR2500x-USB Microphone		USB	
Γ			
-			
Settings for the selected device	e:		
Balance:			
	left	right	
	•		
			?
	-		
Output volume:	2 I I I I	, ()) Mute	
	Show volume in menu	bar	

With recent updates to MacOS Mojave and the latest MacOS Catalina, Apple implemented a privacy setting allowing you to control which apps have access to the microphone.

If you are using MacOS Mojave, you must enable software access to the microphone, using the security and privacy settings.

1. In order to use the ATR2500x-USB microphone with certain applications you need to verify that the apps are enabled to have access to the microphone.

Open the system preferences and click on the Security and Privacy icon.

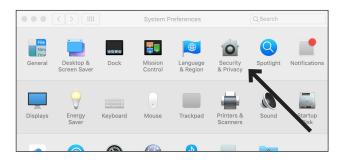

Preliminary setup with MacOS Mojave (continued)


To make changes, you will need to unlock the padlock on the Security and Privacy window by entering your user name and password.

Scroll down to make certain the apps you want to use the microphone with are enabled. If not, use the switch slider associated with the App to turn it on.

0 • 0 <		Sec	urity & Privad	-y	Q Search	_
		System Prefe Privacy prefe Enter your pas	rences.	ring to unlock Se w this.	curity &	
	ont	User Name: Password:			ne.	
1 c	ale			Cancel	Inlock	
R	eminders		💽 Captu	ire		
🛞 PI	hotos		Studie			
a c	amera					
М	licrophone					
() A	ccessibility					
Fi	ull Disk Access					
Authe	enticating				Advanced	?

3. Click the microphone icon and verify that a check mark appears next to the applications that need access to the microphone.

Make certain to click the lock to lock it after making the changes.

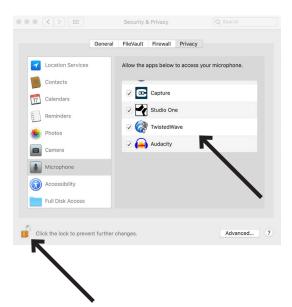

Advanced setup with MacOS Mojave

Advanced Sound Settings

 At this point the Mac is set up to use the ATR2500x-USB microphone as the input device and your selection as the output device. The sample rate is set for the default value (44.1 KHz CD Quality). However, additional settings are available that enable you to change the audio sampling rate and individually adjust left and right input signal levels if you desire.

To access these settings, open a new finder window and navigate to "Applications—Utilities" and double-click the Audio MIDI Setup application.

		💹 Utilities	
< >		🏶 🗸 📋 🖂 🐯 🖌 Q Search	
Back/Forward	View Group	Action Share Edit Tags Dropbox	Search
Favorites Favorites Kusic SteveSavanyu Desktop Forpbox AirDrop Downloads	 Siri Skype Speedtest Stocks Stocks Stocks Studit Dana 4 Stuffit Expander System Preferences Time Machine Time Machine Time Machine 	Adobe Treatd Experience Adobe TreatdE Experience Adobe Installers Adobe Installers Adobe Synce AMFORT Unliky AMFORT Unliky Boot Camp Assistant Console Disclamp Assistant Console Disclamp Adobe Disclamp	
Applications	TouchMix DAW Utility	Aligned State Aligned State Aligned State Aligned State State Aligned State S	
Creative Cloud Files	Voice Memos	Keychain Access	100 0
×	1 of 28 s	elected, 394.26 GB available	

Audio MIDI Setup

2. A list of audio devices appears on the left side and the adjustable settings for the selected device appear on the right.

The ATR2500x-USB appears as two separate devices. One is an input device (2 ins / 0 outs) while the other represents its output (0 ins / 2 outs).

Clicking the input device (2 ins / 0 outs) shows the current settings.

The Format section contains the sample rate settings.

The Master Stream section allows you to individually adjust the microphone signal levels for the left and right audio inputs.

		Audio Devices				
	Built-in Microphone 2 ins / 0 outs	ATR2500x-USB Microphone 1				?
	Built-in Output 0 ins / 2 outs ◀) HDMI 0 ins / 8 outs 🖾	Clock Source: Default	utput			
Ŷ	ATR2500x-USB Microp 2 ins / 0 outs	Format: 2 ch 24-bit Integer 48	8.0 kHz			
Ŷ	ATR2500x-USB Microp 0 ins / 2 outs	Channel Volume Master Stream	Value	dB	Mute	Thru
	Pro Tools Aggregate I/O 0 ins / 2 outs After Effects 13.7.2	Master Front Left	0.63	10.5		
	0 ins / 0 outs After Effects 13.8.1		- 0.63	10.5		

Select input version ATR2500x-USB with 2 ins / 0 outs


Advanced setup with MacOS Mojave (continued)

3. The ATR2500x-USB is capable of very high-quality recording and supports sample rates of up to 192 KHz. In some situations higher sample rates can provide better results. However, as the sample rate increases, the file size becomes much larger.

If you are recording voice-overs for video or music that will be synchronized with video, the default sample rate needs to be changed from 44.1 KHz to 48 KHz.

To change the sample rate, click the drop-down arrows next to the Format box. A sub window opens listing available sample rates. Click on the desired one to choose it and close the sub-window.

Remember that the selected sample rate must match the value set in your recording application or you will hear pops and clicks in the recorded audio.

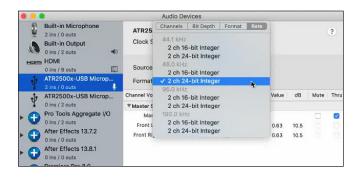

Preliminary setup with Windows 10

If you are using an older version of Windows, your computer will automatically recognize the USB device and install the appropriate driver.

The first time you plug the microphone in, you may see a message that new hardware has been found, or you may see a driver software installed notice. After the first time, you will not see any of these as the computer has already installed the necessary drivers for a USB microphone.

When the ATR2500x-USB microphone is connected, Windows 10 will automatically select it as the input and output device.

1. To verify or make changes click the Start window and click settings (the gear).




2. When the settings window opens, Click "System."

Settings								-	
				Window	ws Settin	igs			
				Find a setting		P			
	⊒	System Distance upod notifications, power	-	Devices Eluetooth, printers, mouse		Phone Link your Android, Phone	0	Network & Internet W-FL algtane mode, VPN	
	ø	Personalization Interpreted (and the ex-	E	Apps Universall defaults, optional features	R	Accounts Now accounts, amail, spec, work, family	₽	Time & Language Speech, region, date	
	8	Gaming Game bac captures, broadcasting, Game Mode	C	Ease of Access manner, magnifier, high	Q	Search Find my film, permissions	0	Cortana Cortana lenguage, permissions, notifications	
	۵	Privacy Location, camera, microphone	0	Upclate &					
				·					


Preliminary setup with Windows 10 (continued)

3. When the System window opens, in the left column, click "Sound."

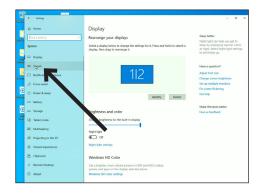

4. The Sound tab opens showing the active input and output device which should be the USB microphone.

To use the computer speakers as your output device, click "Choose your output device" and in the drop-down menu choose the desired item.

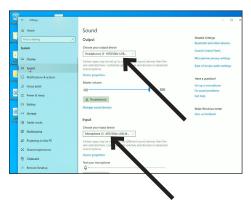


At this point, your computer is set up to use the ATR2500x-USB microphone as the audio input device and whatever you chose as the audio output device. However, in the recent versions of Windows 10, Microsoft has instituted some additional privacy settings, allowing users to control which apps and programs have access to the microphone. Refer to the section on privacy for more information.

There are additional settings available for the microphone, allowing you to set the input level, change the sampling rate and manage other aspects of the audio. Refer to the next section for more details.

Advanced setup with Windows 10

At this point Windows 10 is set up to use the ATR2500x-USB microphone as the input and output device. The sample rate is set for the Windows default (44.1 KHz CD Quality). However, additional settings are available, including input level and sampling rate.


1. To access these settings, click "Sound Control Panel."

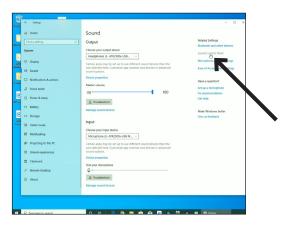

- 2. When the Sound Control Panel opens, select the "Recording" tab and select the ATR2500x-USB microphone.
- 3. Click "Properties."
- 4. Click the Levels tab and move the slider to the right or left to set the input gain for the microphone. Setting it too low will not provide enough signal to your recording application. Setting it too high can cause the recording application to distort.

Note that this level setting is different from the volume control slider on the main sound settings window.



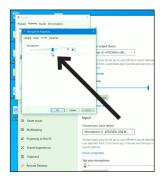

Advanced setup with Windows 10 (continued)

5. The ATR2500x-USB is capable of very high-quality recording and supports sample rates of up to 192 KHz. In some situations higher sample rates can provide better results. However, as the sample rate increases, the file size becomes much larger.

If you are recording voice-overs for video or music that will be synchronized with video, the default sample rate needs to be changed from 44.1 KHz to 48 KHz.

To change the sample rate, click the Advanced tab. The default sample rate (44100 Hz CD Quality) is shown in the drop-down box. Click the drop-down and choose the desired sample rate.

C Royal	- Settings		- ¤ ×
[]	ο Home Find a setting P	Sound Output	Related Settings
F	System Ø found Hextexk Recording Source Co	× Mitt. ×	Sound Control Panel
RES Classical	Display Sound Sound Sound	tifferent sound devices than the olumes and devices in advanced	Ease of Access audio settings
11000	in shared mode.	and bit depth to be used when summing	Have a question?
0	Focus assist Z theree, 154,84,447 Z theree, 154,84,447 Z theree, 154,447 Z theree, 154,477 Z theree, 154,477 Z theree, 154,477 Z theree, 154,197 Z theree, 154,197 Z theree, 154,197 Z theree, 154,197	100 1000 Careful 1	Set up a microphone Fix sound problems Get help
©	Battery State of the second		Make Windows better Give us feedback
da e Gone			Give us reculator
	Restore Defaults		
	dP Projecting to this P X Shared experiences	OK CANNA ANY different and devices than the One descend more consonned approblemes and socies in advanced sound options.	
	Clipboard Remote Desktop	Device properties Test your microphone	
	/- Million Delatop	V	

6. Leaving the "Exclusive Mode" boxes checked allows the recording application to take control of the microphone. This will set the sample rate correctly based on the recording project settings.

When the sample rate is changed, a "Device in use" warning dialog box appears letting you know that a change has been made that may affect other applications (non-exclusive) that might be using the microphone.

Click "Yes" to continue and use the new sample rate.

Rauback Recording Sounds Communications				
F protection of the second sec			Related Settings	
Manphone Properties		× t device	Blaetooth and other devices	
General Laten Levels Advanced		NTR2500x-USB V	Sound Control Panel	
The second second and and and and and and and and and a	a used when running		Microphone privacy settings	
in shared made.		e set up to use different sound devices than t Eustomize aco volumes and devices in advance	he	
2 channel, 24 bit, 192900 Hz (Rudio Que	waya v	Concerning approximes and conves in acres	Lase of Access audio setting	•
Exclusive Mode				
After applications to take endusive of			Have a question?	
Cive exclusive mode approators pro	ally .	10	Set up a microphone	
		10	Fit sound production	
1.3			Get help	
·			ooce sk bee	
Stra Reton Detauts		loes	The device is being used by another application. If you continue, that application may stop working.	
5 5804 Rediois Detauts		4	Do you want to continue?	
3 Tab OK	Concel South		Th No.	
	Choose you	put device		
Multitasking	Microphone	R2500x-US8 M., V		
Projecting to this PC	Certain apps m	y be to use different sound devices than t		
	one selected he sound options.	re. Custor app volumes and devices in advan-	ed .	
Shared experiences	Device properti			
Clipboard				
Remote Deskton	Test your micro	phone		
wemote Detatop	*	_		
About	A Troublesh	oot		
	Manage sound	devices		

Advanced setup with Windows 10 (continued)

With recent updates to Windows 10, Microsoft has included a privacy setting allowing you to control which apps have access to the microphone.

In order to use the ATR2500x-USB microphone with certain applications you need to verify that the apps are enabled to have access to the microphone.

1. In the main Sound setup window, click the "Microphone privacy settings."


) Home	Sound	
Find a setting P	Output Choose your output device	Related Settings Blactooth and other devices Sound Centrel Panel
⊃ Display	Headphones (3- ATR2500e-USB	Microphone grinacy settings Ease of Access audio se
Notifications & actions Focus assist O Power & sleep	Device properties Master volume 40	Have a question? Set up a microphone Fix sound problems Get tells
⊃ Rome & Sector ⊃ Battery ⊐ Storage	A Troubleshoot Manage sound devices	Get help Make Windows better Give us feecback
 Tablet mode Multitasking 	Input Choose your input device Microphone (3- ATR2500r-USB M.,	
DP Projecting to this PC Shared experiences Clipboard	Certain appo may be set up to use different sound devices than the one selected here. Qustomize app volumes and devices in advanced sound options. Device properties	
 Capacity Remote Desktop About 	Test your microphone ↓ - ▲ Troubleshoot	
	Manage sound devices	

The Privacy settings window for the microphone opens. Verify that the "Allow apps to access your microphone" switch is set to "On."


ł	Home	Microphone	
	Find a setting P	Allow access to the microphone on this device	Know your privacy options
	Privacy	If you allow access, people using this device will be able to choose if their apps have microphone access by using the settings on this page. Denying access blocks Windows features. Microsoft Sare apps, and most desktop apps from accessing the microphone.	Learn how this setting impacts yo privacy. Learn more Privacy dashboard Privacy statement
	Windows permissions	Microphone access for this device is on	Time, Paratan
	A General	Change D ₂	Have a question? Get help
	R ^I Speech	Allow apps to access your microphone	
	Inking & typing personalization	If you allow access, you can choose which apps can access your	Make Windows better
	R Diagnostics & feedback	microphone by using the settings on this page. Denying access blocks apps from accessing your microphone.	Give us feedback
	I Activity history	O 0	
	App permissions	Some deskto and only still be able to access your microphone when settings in a copy are off. Find out why	
	≜ Location	If an app is using your mit shone, you'll see this icon:	
	(2) Camera		
	Microphone	Choose which Microsoft Store ops can access your microphone	
	Voice activation	Some apps need to access your microphone to the as intended. Turning off an app here might limit what it can do	
	Notifications	30 Viewer Off	
	All Account info	Camera On	
	a ^R Contacts	Contana On	
1	M. Colandar	O Lonana On	

Advanced setup with Windows 10 (continued)

3. Scroll down to make certain the apps you want to use the microphone with are enabled. If not use the switch slider associated with the app to turn it on.

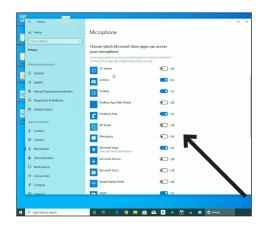

4. Scroll down to the section "Allow desktop apps to access your microphone" and verify that the switch is turned on. This allows applications such as Audacity to have access to the microphone (or other chosen audio source).

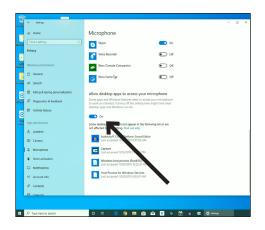

Additional Information

Using Headphones

The '/e" (3.5 mm) headphone jack on the bottom of the microphone allows you to directly monitor your recording with a pair of headphones. When your preliminary setup is completed, and your USB microphone is connected to your computer's USB port (the microphone's blue LED is illuminated), plug your headphones into the headphone jack on the bottom of the microphone. While talking into the microphone, you should hear yourself in the headphones. Adjust the volume up or down by pressing the Up and Down buttons on the front of the microphone. **Note:** The Up and Down buttons only adjust the volume of the microphone output; they do not adjust the microphone level.

Selecting software

You have many choices in recording software. Audacity, available for free online at http://audacity.sourceforge.net/, is a widely used software program that provides basic recording software.

Setting your software levels

Correct adjustment of microphone level is important for optimum performance. Ideally, the microphone level should be as high as possible without overloading the input of your computer. If you hear distortion, or if your recording program shows levels that are consistently overloaded (at peak levels), turn the microphone volume (or level) down, either through your control panel (or system preferences) settings, or through your recording software. If your recording program shows insufficient level, you can increase the microphone gain either from the control panel (or system preferences) settings or through your recording program.

No further microphone level adjustments should be needed, as long as the acoustic input does not change significantly.

Positioning your microphone

It is important to position the microphone directly in line (on axis) with the person speaking/singing or instrument (or other sound source) to achieve the best frequency response of the microphone.

For use in speaking/singing applications, the ideal placement for the microphone is directly in front of the person speaking/singing. The same placement is optimal when miking an instrument such as an acoustic guitar, drums or piano. Experiment with different mic placements to find the best sound for your particular setup.

Protecting your microphone

Avoid leaving your microphone in the open sun or in areas where temperatures exceed 110° F (43° C) for extended periods. Extremely high humidity should also be avoided.

ATR2500x-USB Specifications[†]


Element: Condenser Polar Pattern: Cardioid Frequency Response: 30 – 15,000 Hz Power Requirements: USB Power (5V DC) Bit Depth: Up to 24 bit Sample Rate: 44.1 kHz/48 kHz/96 kHz/192 kHz Controls: Headphone volume (up/down) buttons Weight: 366 g (12.9 oz) Dimensions: 155.0 mm (6.10") long, 50.0 mm (1.97") maximum body diameter Output Connector: USB-C Headphone Output Power: 10 mW @ 16 ohms Headphone Jack: 3.5 mm (¹/₈") TRS (stereo)

Accessories Furnished: Pivoting stand mount for 5%"-27 threaded stands, tripod desk stand, 2 m (6.6') USB-C to USB-C cable (USB On-The-Go Compliant), 2 m (6.6') USB-C to USB-A cable


System Requirements: Macintosh: Mac OS X; USB 1.0 or 2.0; 64 MB RAM (minimum); Windows: Windows 7/8/10; USB 1.0 or 2.0; 64 MB RAM (minimum)

th the interest of standards development, A.T.U.S. offers full details on its test methods to other industry professionals on request. Specifications are subject to change without notice.

Frequency Response



Polar Pattern



ATR2500x-USB U.S. Lifetime Limited Warranty

This product is warranted in the U.S.A. by Audio-Technica U.S., Inc. (A.T.U.S.) for the lifetime of the original purchaser. During the warranty period, A.T.U.S. will repair or replace these products, provided they are sent prepaid to the address below, with proof of original purchase and \$15.00 for handling and return to a U.S. address. Check or money order required; no cash or stamps. A.T.U.S. reserves the right to replace any product with one of equal value.

Except to the extent precluded by applicable state law, A.T.U.S. will have no liability for any consequential, incidental, or special damages; any warranty of merchantability or fitness for particular purpose expires when this warranty expires. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Outside the U.S.A., please contact your local dealer for warranty details.

Register your product at audio-technica.com

Audio-Technica U.S., Inc. 1221 Commerce Drive, Stow, Ohio 44224 USA



Audio-Technica Corporation (Headquarters) 2-46-1 Nishi-naruse, Machida, Tokyo, 194-8666, Japan

Audio-Technica U.S., Inc. 1221 Commerce Drive, Stow, Ohio, 44224, USA

www.audio-technica.com © 2019 Audio-Technica Corporation P52831