



# We love that you are rocking JLab Audio! We take pride in our products and fully stand behind them.



## YOUR WARRANTY

All warranty claims are subject to JLab Audio authorization and at our sole discretion. Retain your proof of purchase to ensure warranty coverage.



#### **CONTACT US**

Reach out to us at <a href="mailto:support@jlabaudio.com">support@jlabaudio.com</a> or visit <a href="mailto:jlabaudio.com/contact">jlabaudio.com/contact</a>

## **REGISTER TODAY**

jlabaudio.com/register


Product updates | How-to tips
FAQs & more

## FIRST TIME SETUP: BLUETOOTH PAIRING



Turn on the Bluetooth in your device settings.




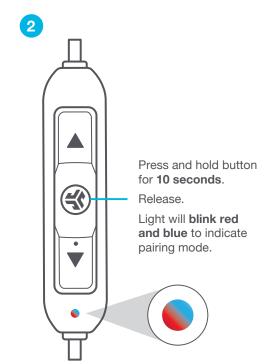



Select "JLab BT" in your device settings to connect.

Light will **slow blink blue** when Bluetooth is paired.

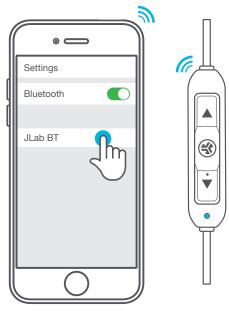

## **RECURRING USE**

Once JLab BT has initially paired to your device, the earbuds will auto-connect to your Bluetooth device when powered back ON. (Follow **BUTTON FUNCTIONS** instructions)

## **BUTTON FUNCTIONS VOLUME UP:** Click once TRACK FORWARD: Click & hold 2+ seconds **POWER ON:** Click & hold 3 seconds **POWER OFF:** Click & hold 5 seconds **PLAY / PAUSE ANSWER / HANG UP CALLS:** Click once **ACTIVATE SIRI (iOS) OR** "OK GOOGLE" (ANDRÓID): Click twice **BLUETOOTH PAIRING:** (Follow First Time Setup: Bluetooth Pairing) **VOLUME DOWN:** Click once **TRACK BACKWARD:**

Click & hold 2+ seconds

## **EQUALIZER MODES**

Quick press both buttons for different EQ settings

(JLab BT earbuds will cycle 3 EQ settings)

## JLab SIGNATURE (One Beep)

JLab C3™ signature sound with amplified vocals and bass

## BALANCED (Two Beeps)

Even sound with no additional sound enhancements

BASS BOOST (Three Beeps)

Amplified bass and sub-bass

#### **VOICE PROMPTS**

#### "HELLO"

Power is ON.

#### "READY TO PAIR"

JLab BT earbuds are ready to connect to your Bluetooth device.


#### "YOU'RE CONNECTED"

JLab BT earbuds are connected to your Bluetooth device and ready for use.

#### "GOODBYE"

Power turning OFF.

### **CHARGING**

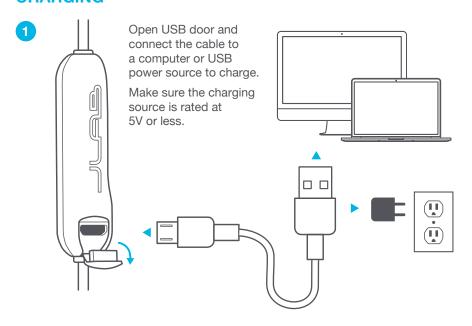


Light will turn solid red when charging and turn blue when fully charged.






### **FITTING**



Note: Styles and options may vary.

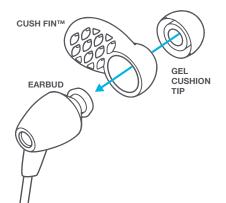

Rotate Cush Fins to desired position.





Try various ear tips and Cush Fins to find best fit.



## **CABLE CLIP USE**

Attach the cable clip near the center of the cable.

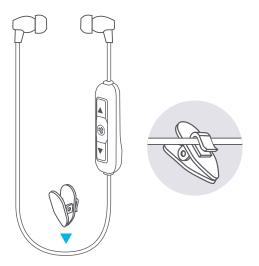


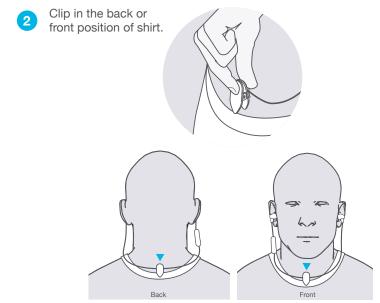

## **CONNECTION TROUBLESHOOTING**

#### I DO NOT SEE JLAB BT IN MY DEVICE

Turn Bluetooth off and then back on in device settings.



If you still do not see JLab BT, repeat FIRST TIME SETUP: BLUETOOTH PAIRING directions.



## JLAB BT DOES NOT RECONNECT TO MY DEVICE AFTER POWERING ON

In device settings, forget the JLab BT.



Turn Bluetooth off then back on in device settings.



Repeat FIRST TIME SETUP:
BLUETOOTH PAIRING directions.




## **CONNECTION TROUBLESHOOTING (CONTINUED)**


#### **BLUETOOTH IS CONNECTING TO AN UNWANTED DEVICE**

Note: The JLab BT can remember up to 8 devices. It will try to auto-connect to last device used.



If you have more than one device that was connected to JLab BT, turn OFF Bluetooth on unwanted devices and turn ON Bluetooth on chosen device.

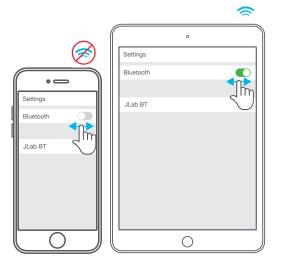


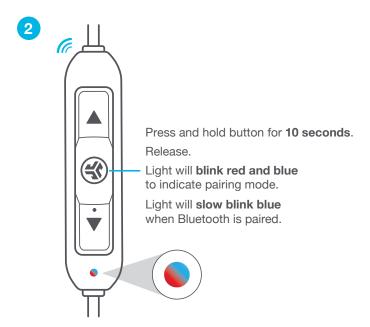


#### WARNING

Make sure USB door is closed and fastened.

This will protect against sweat and water damage.

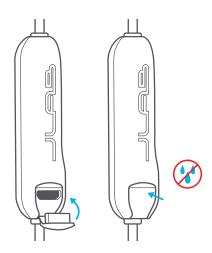




Before charging, the JLab BT earbuds need to be fully dry.

If there is any exposure to moisture, the internal components may become damaged.

It is best practice to air dry before charging.



## **CAUTIONS**

- · Avoid getting moisture or liquids into the tip of the earbuds or charging port.
- · Avoid extreme heat, cold, and humidity.
- · Avoid dropping or crushing the earbuds, stressing the cable by rapid pulling or extreme force, or bending the cable at a sharp angle.
- Wax may build up in the earbud tips, lowering the sound quality. Carefully remove the wax with a cotton swab or other small tool to improve the sound quality.
- If you experience discomfort or pain, try lowering the volume or discontinuing use temporarily.
- · If you experience regular discomfort while using this product, discontinue use and consult your physician.
- · We recommend you treat your earbuds as you would a nice pair of sunglasses and keep them in safe location when not in use.



#### **Shop products | Product alerts | Burn-in your headphones**

JLab Audio + Burn-in Tool



