


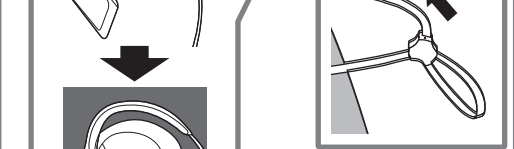
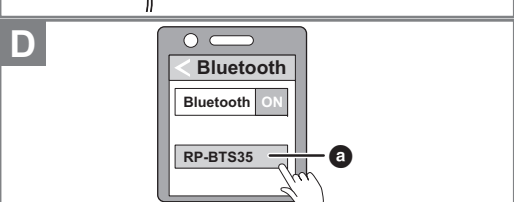
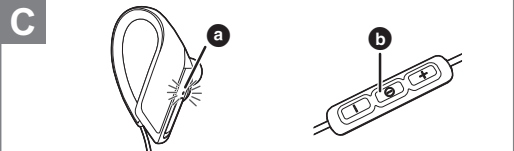
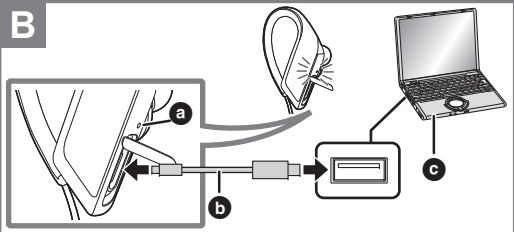


For Thailand only
This telecommunication equipment conforms to NTC/NBTC technical requirement.

[illegible]

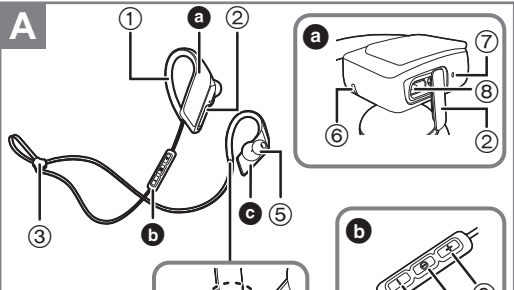

English
A Part names
● Right earphone ● Remote controller ● Left earphone
① Clip ② USB ID ③ Cord adjuster ④ Raised dot indicating the left side ⑤ Earpiece ⑥ Microphone ⑦ LED indicator light ⑧ Charging terminal (DC IN) ⑨ [+] button ⑩ [Q] button ⑪ [-] button * Hereafter referred to as "LED"

B Charging
The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit. Connect this unit to a computer (Q) using the USB charging cord (supplied) (Q). • Within approximately 3 seconds after the connection is established, the LED on the right earphone will light in red. • The LED (Q) lights in red when charging is in progress. When charging is completed, the LED will go out. • Charging will take approximately 2 hours from empty state to fully charged. (Quick charging time for 70 minutes operation: Approx. 15 minutes) • The power cannot be turned on while charging. • Do not use any other USB charging cords except the supplied one. • When the battery level is low during use of the unit, the blue blinking LED will light up. A beep will sound every 1 minute. • When the battery runs out, the power will turn off.

C Turning the power on/off
Press and hold [Q] (Q) of this unit for approx. 3 seconds until the LED (blue) (Q) blinks. • A beep will sound and the LED on the right earphone will blink. To turn the power off Press and hold [Q] for approximately 3 seconds. A beep will sound and the power will be turned off. • If the unit is not connected to a Bluetooth® device, the unit will beep and turn automatically approximately 5 minutes after you have stopped using it. (Auto power off).

D Connecting a Bluetooth® device
■ Bluetooth® pairing 1 In the power-off state, press and hold [Q] of this unit until the LED blinks in blue and red alternately. 2 Select "RP-BT535" (Q) from the Bluetooth® device's menu. • If prompted for a passkey, input the passkey "0000 (four zeros)" of this unit. • When the LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established) ■ Connecting a paired Bluetooth® device 1 Turn on this unit. 2 Perform steps 2 of "Bluetooth® pairing". (→ above) • When the LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established)

E How to wear the earphones
Connect the Bluetooth® device and the unit. ■ Listening to music Select and play the music on the Bluetooth® device. The selected music is output to the earphones of the unit. ■ Remote controlling (Available only if your Bluetooth® device supports "AVRCP") (Operation example) Play / Pause: Press [Q]. Increase the volume: Press [+]. Decrease the volume: Press [-]. Forward to the start of next track: Press and hold [+] for approximately 2 seconds. Return to the start of current track: Press and hold [-] for approximately 2 seconds.

F Using the earphones
Connect the Bluetooth® device and the unit. ■ Listening to music Select and play the music on the Bluetooth® device. The selected music is output to the earphones of the unit. ■ Remote controlling (Available only if your Bluetooth® device supports "AVRCP") (Operation example) Play / Pause: Press [Q]. Increase the volume: Press [+]. Decrease the volume: Press [-]. Forward to the start of next track: Press and hold [+] for approximately 2 seconds. Return to the start of current track: Press and hold [-] for approximately 2 seconds.

G Making a phone call
1 Press [Q] on the unit and answer the incoming call. 2 Start talking. 3 Press [Q] to end the phone call. (HFP only) Reject a call / Change the call device: Press [Q] twice quickly. You can have a phone conversation using the microphone of the unit by making a call from the Bluetooth® enabled phone. ■ Returning to the factory settings While the unit is turned off, press and hold [Q] for at least 5 seconds until the LED starts blinking alternately in blue and red. The LED will blink fast in blue. The unit will restore to the factory settings.

H To remove the battery when disposing of this unit
The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it. ■ Danger As the rechargeable battery is specifically for this product, do not use it for any other device. Do not charge the removed battery. Do not heat or expose to flame. Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed. Do not pierce the battery with a nail, subject it to an impact, or dismantle or modify it. Do not let the wires touch any other metal or each other. Do not carry or store the battery with a necklace, hair pin, or the like. Doing so may cause the battery to generate heat, ignite, or rupture. ■ Warning Do not place the removed battery, and other items within reach of infants. Accidental swallowing of such an item may have an adverse effect on the body. In the event of your thinking such an item has been swallowed, consult a doctor immediately. In the event of fluid leaking from the battery, take the following measure, and do not touch the fluid with bare hands. Fluid entering into an eye may cause loss of eyesight. Wash the eye with water immediately without rubbing it, and then consult a doctor. Fluid getting on your body or clothes may cause inflammation of the skin or injury. Sufficiently rinse with clean water, and then consult a doctor. A lithium-ion polymer rechargeable battery is built in to the left earphone. Please discard according to local regulations. When disposing this product, disassemble properly by following the procedure, and remove the internal rechargeable battery. Disassemble after the battery runs out. When disposing of the battery, please contact your local authorities or dealer and ask for the correct method of disposal. 1 Hold the top of the left earphone (L), and put a straight-slot screwdriver (commercially available) under the upper cover Q. 2 Use the screwdriver for leverage, and push the upper cover Q upward. 3 Be careful not to touch the battery with the screwdriver. 4 Hold the battery Q, and remove it. 5 Pull off the battery Q and separate it from the left earphone by cutting off the wires, one by one, with scissors. Insulate the wire parts of the removed battery with cellophane tape. Do not damage or dismantle the battery.

I To remove the battery when disposing of this unit
The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it. ■ Danger As the rechargeable battery is specifically for this product, do not use it for any other device. Do not charge the removed battery. Do not heat or expose to flame. Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed. Do not pierce the battery with a nail, subject it to an impact, or dismantle or modify it. Do not let the wires touch any other metal or each other. Do not carry or store the battery with a necklace, hair pin, or the like. Doing so may cause the battery to generate heat, ignite, or rupture. ■ Warning Do not place the removed battery, and other items within reach of infants. Accidental swallowing of such an item may have an adverse effect on the body. In the event of your thinking such an item has been swallowed, consult a doctor immediately. In the event of fluid leaking from the battery, take the following measure, and do not touch the fluid with bare hands. Fluid entering into an eye may cause loss of eyesight. Wash the eye with water immediately without rubbing it, and then consult a doctor. Fluid getting on your body or clothes may cause inflammation of the skin or injury. Sufficiently rinse with clean water, and then consult a doctor. A lithium-ion polymer rechargeable battery is built in to the left earphone. Please discard according to local regulations. When disposing this product, disassemble properly by following the procedure, and remove the internal rechargeable battery. Disassemble after the battery runs out. When disposing of the battery, please contact your local authorities or dealer and ask for the correct method of disposal. 1 Hold the top of the left earphone (L), and put a straight-slot screwdriver (commercially available) under the upper cover Q. 2 Use the screwdriver for leverage, and push the upper cover Q upward. 3 Be careful not to touch the battery with the screwdriver. 4 Hold the battery Q, and remove it. 5 Pull off the battery Q and separate it from the left earphone by cutting off the wires, one by one, with scissors. Insulate the wire parts of the removed battery with cellophane tape. Do not damage or dismantle the battery.

K To remove the battery when disposing of this unit
The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it. ■ Danger As the rechargeable battery is specifically for this product, do not use it for any other device. Do not charge the removed battery. Do not heat or expose to flame. Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed. Do not pierce the battery with a nail, subject it to an impact, or dismantle or modify it. Do not let the wires touch any other metal or each other. Do not carry or store the battery with a necklace, hair pin, or the like. Doing so may cause the battery to generate heat, ignite, or rupture. ■ Warning Do not place the removed battery, and other items within reach of infants. Accidental swallowing of such an item may have an adverse effect on the body. In the event of your thinking such an item has been swallowed, consult a doctor immediately. In the event of fluid leaking from the battery, take the following measure, and do not touch the fluid with bare hands. Fluid entering into an eye may cause loss of eyesight. Wash the eye with water immediately without rubbing it, and then consult a doctor. Fluid getting on your body or clothes may cause inflammation of the skin or injury. Sufficiently rinse with clean water, and then consult a doctor. A lithium-ion polymer rechargeable battery is built in to the left earphone. Please discard according to local regulations. When disposing this product, disassemble properly by following the procedure, and remove the internal rechargeable battery. Disassemble after the battery runs out. When disposing of the battery, please contact your local authorities or dealer and ask for the correct method of disposal. 1 Hold the top of the left earphone (L), and put a straight-slot screwdriver (commercially available) under the upper cover Q. 2 Use the screwdriver for leverage, and push the upper cover Q upward. 3 Be careful not to touch the battery with the screwdriver. 4 Hold the battery Q, and remove it. 5 Pull off the battery Q and separate it from the left earphone by cutting off the wires, one by one, with scissors. Insulate the wire parts of the removed battery with cellophane tape. Do not damage or dismantle the battery.

M To remove the battery when disposing of this unit
The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it. ■ Danger As the rechargeable battery is specifically for this product, do not use it for any other device. Do not charge the removed battery. Do not heat or expose to flame. Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed. Do not pierce the battery with a nail, subject it to an impact, or dismantle or modify it. Do not let the wires touch any other metal or each other. Do not carry or store the battery with a necklace, hair pin, or the like. Doing so may cause the battery to generate heat, ignite, or rupture. ■ Warning Do not place the removed battery, and other items within reach of infants. Accidental swallowing of such an item may have an adverse effect on the body. In the event of your thinking such an item has been swallowed, consult a doctor immediately. In the event of fluid leaking from the battery, take the following measure, and do not touch the fluid with bare hands. Fluid entering into an eye may cause loss of eyesight. Wash the eye with water immediately without rubbing it, and then consult a doctor. Fluid getting on your body or clothes may cause inflammation of the skin or injury. Sufficiently rinse with clean water, and then consult a doctor. A lithium-ion polymer rechargeable battery is built in to the left earphone. Please discard according to local regulations. When disposing this product, disassemble properly by following the procedure, and remove the internal rechargeable battery. Disassemble after the battery runs out. When disposing of the battery, please contact your local authorities or dealer and ask for the correct method of disposal. 1 Hold the top of the left earphone (L), and put a straight-slot screwdriver (commercially available) under the upper cover Q. 2 Use the