



### kyoceradocumentsolutions.com

## **Operation Guide**

**ECOSYS MA4500fx ECOSYS MA4500x** 



## **Preface**

Thank you for purchasing this machine.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.


Please read this Operation Guide before using the machine.

## We recommend the use of our genuine toner containers, which have passed rigorous quality control testing, to maintain quality.

The use of non-genuine toner containers may cause failure.


We will not be liable for any damages caused by the use of third party supplies in this machine.

A label is affixed to our replacement genuine toner containers, as shown below.

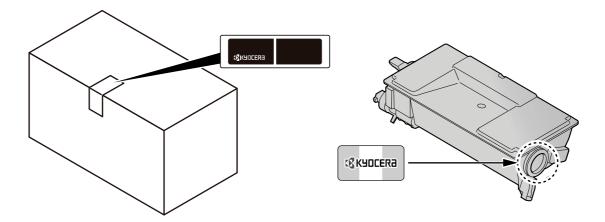

#### **Checking the Equipment's Serial Number**

The equipment's serial number is printed in the location shown in the figure.

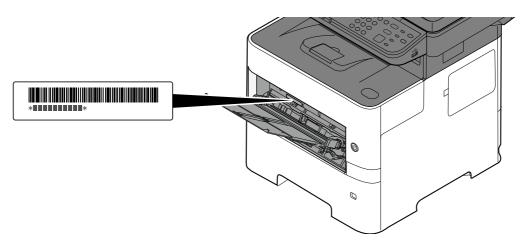

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your Service Representative

## **Contents**

Preface	
Machine Features	ix
Optimize your office workflow	ix
Save energy and cost	x
Create attractive documents	xi
·	
•	
•	
• • • • • • • • • • • • • • • • • • • •	
and Safety Information	
, and the state of	
, 5 5	
<b>5</b>	
Energy Star (ENERGY STAR®) Program	1-14
ling and Catting up the Machine	2.4
Power On/Off	2-11
Power On	2-11
Power Off	2-11
	Machine Features  Optimize your office workflow Save energy and cost Create attractive documents Strengthen security Use functions more efficiently  Color and Image Quality Functions Basic Color Modes Adjusting Image Quality and Color  Guides Provided with the Machine  About the Operation Guide (this Guide) Structure of the guide Conventions Used in This Guide  Menu Map

	Operation Method	2-13
	Display for Originals and Paper	
	Help Screen	
	Login/Logout	
	Login	
	Logout	
	Default Settings of the Machine	
	Setting Date and Time	
	Network Setup	
	Configuring the Wired Network	
	Configuring the Wireless Network	
	Setting Wi-Fi Direct	
	Energy Saver function Low Power Mode	
	Sleep	
	Auto Sleep	
	Sleep Rules (models for Europe)	
	Sleep Level (Energy Saver and Quick Recovery) (models except for Europe).	
	Weekly Timer Settings	
	Power Off Rule (models for Europe)	
	Installing Software	
	Published Software (Windows)	
	Installing Software in Windows	
	Uninstalling the Software	
	Installing Software in Mac Computer	
	Setting TWAIN Driver	
	Setting WIA Driver	
	Checking the Counter	
	Additional Preparations for the Administrator	
	Administrator Privileges Overview	
	Log in as Machine Administrator or Administrator	
	Sending Documents to a PC	
	Strengthening the Security	2-47
	Command Center RX	
	Accessing Command Center RX	2-50
	Changing Security Settings	2-51
	Changing Device Information	
	E-mail Settings	2-53
	Registering Destinations	
	Creating a New Custom Box	2-57
	Printing a document stored in a Custom Box	
	Transferring Data from Our Other Products	
	Migrating the Address Book	
	3 3	
_		2.4
3	Preparation before Use	3-1
	Loading Paper	3-2
	Precaution for Loading Paper	
	Loading in the Cassettes	3-4
	Loading Paper in the Multi Purpose Tray	
	Specifying Paper Size and Media Type	
	Paper Stopper	
	Preparation for Sending a Document to a Shared Folder in a PC	
	Making a Note of the Computer Name and Full Computer Name	
	Making a Note of the User Name and Domain Name	
	Creating a Shared Folder, Making a Note of a Shared Folder	
	Configuring Windows Firewall	
	Scan to Folder Setup Tool for SMB	
	Registering Destinations in the Address Book	
	Adding a Destination (Address Book)	
	Adding a Destination (Address book)	ا د د

	Adding a Destination on One Touch Key (One Touch Key)	3-38
4	Printing from PC	4-1
	Printer Driver Print Settings Screen	
	Printer Driver Help	<del></del> -2
	Changing the Default Printer Driver Settings (Windows 10)	
	Printing from PC	
	Printing on Non-standard Sized Paper	
	Printing with Universal Print	
	Banner printing	
	Canceling Printing from a Computer	
	Printing from the Handheld Device	
	Printing by AirPrint	
	Printing by Mopria	
	Printing with Wi-Fi Direct	
	Printing Data Saved on the Printer	
	Specifying the Job Box from a Computer and Storing the Job	
	Printing Documents from Private Print Box	
	Deleting the Documents Stored in the Private Print Box	
	Printing Document from Stored Job Box	
	Deleting the Documents Stored in the Stored Job Box	
	Printing Document from Quick Copy Box	
	Deleting the Documents Stored in the Quick Copy Box	
	Printing Document from Proof and Hold Box	
	Deleting the Documents Stored in the Proof and Hold Box	
	Printing Document from PIN Print Box	
	Deleting the Documents Stored in the PIN Print Box	
	Printing Document from the Universal Print box	
	Deleting the Documents Stored in the Universal Print Box	
	Status Monitor	
	Accessing the Status Monitor	
	Exiting the Status MonitorStatus Monitor Display	
5	Operation on the Machine	
	Placing Originals on the Platen	
	Loading Originals in the Document Processor	
	Program	5-5
	Registering Programs	
	Confirming the Registered Program	
	Recalling Program	
	Overwriting Program	
	Deleting Program	
	Select Key Settings	
	Copying	
	Basic Operation	
	Canceling Jobs	
	Basic Scanning (Sending)	
	Sending Document via E-mail	
	Sending Document to Desired Shared Folder on a Computer (Scan to PC)	
	Sending Document to Folder on an FTP Server (Scan to FTP)	
	Scanning using TWAIN or WIA	
	Scanning Document stored in a Custom Box	
	Useful Sending Method	
	WSD Scan	
	Install the Driver (for Windows 10)	
	Install the Driver (for Windows 10)	
	INSTALL THE DITAGE OF ANTHORN 9.1. MICHOSON MICHORS SERVER 70171	・コーノノ

	Print Override	
	Quiet Mode	6-23
	Skip Blank Page	
	EmailEncryptedTX	
	DigitalSignature	
	Duplex (2-sided Original)	
	Sending Size	
	File Format	
	PDF Electronic Signature	
	File Separation	
	Scan Resolution	
	Subject/Body	
	FTP Encrypted TX	
	Del. after Print (Delete after Printed)	
	Storing Size	
	Long Original	
	Encrypted PDF	
	JPEG/TIFF Print	
	XPS FitTo Page	
Status	s/Job Cancel	
	Checking Job Status	
	Checking Job History	
	Sending the Log History	7-12
	Sending the Log History	
		7-13
	Job Operation Pause and Resumption of Jobs	<b> 7-13</b> 7-13
	Job Operation	<b>7-13</b> 7-13 7-13
	Job Operation	<b>7-13</b> 7-13 7-13
Setun	Job Operation	<b>7-13</b> 7-13 7-13 <b>7-14 7-16</b>
Setup	Job Operation  Pause and Resumption of Jobs  Canceling of Jobs  Device/Communication  Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)	<b>7-13</b> 7-13 7-13 <b>7-14 7-16</b>
setup	Job Operation	<b>7-13</b> 7-13 <b>7-14 7-16 8-1</b> 8-2
etup	Job Operation  Pause and Resumption of Jobs  Canceling of Jobs  Device/Communication  Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings	<b>7-13</b> 7-13 <b>7-14 7-16 8-1</b> 8-2 8-3
Setup	Job Operation  Pause and Resumption of Jobs  Canceling of Jobs  Device/Communication  Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report	<b>7-13</b> 7-13 <b>7-14 7-16 8-1</b> 8-3
etup	Job Operation  Pause and Resumption of Jobs  Canceling of Jobs  Device/Communication  Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report  System/Network	<b>7-13</b> 7-13 <b>7-14 7-16 8-1</b> 8-3 8-5
etup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu  System Menu Settings  Report  System/Network  User/Job Account	7-13 7-13 7-14 7-16 8-1 8-3 8-5 8-27
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu) System Menu System Menu System Menu System Menu System/Network User/Job Account User Property	7-13 7-13 7-14 7-16 8-1 8-3 8-5 8-8 8-27
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu  System/Network  User/Job Account  User Property  Common Settings	7-13 7-13 7-14 8-1 8-2 8-27 8-28
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report  System/Network  User/Job Account  User Property  Common Settings  Copy	7-13 7-13 7-14 7-16 8-1 8-2 8-27 8-28 8-28
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu  System/Network  User/Job Account  User Property  Common Settings  Copy Printer	7-13 7-13 7-14 8-1 8-2 8-27 8-28 8-43
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report  System/Network  User/Job Account  User Property  Common Settings  Copy  Printer  Send	7-13 7-13 7-14 8-1 8-2 8-2 8-27 8-24 8-44
Setup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu  System/Network  User/Job Account  User Property  Common Settings  Copy Printer	7-13 7-13 7-14 8-1 8-2 8-2 8-27 8-24 8-44
etup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report  System/Network  User/Job Account  User Property  Common Settings  Copy  Printer  Send	7-13 7-13 7-14 8-1 8-2 8-27 8-28 8-28 8-43 8-44 8-46 8-47
etup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu  System Menu  System Menu Settings  Report  System/Network  User/Job Account  User Property  Common Settings  Copy  Printer  Send  FAX	7-13 7-14 7-16 8-1 8-2 8-27 8-28 8-44 8-44 8-44 8-44
etup	Job Operation Pause and Resumption of Jobs Canceling of Jobs  Device/Communication Checking the Remaining Amount of Toner and Paper (Paper/Supplies)  and Registration (System Menu)  System Menu System Menu System Menu Settings Report System/Network User/Job Account User Property Common Settings Copy Printer Send FAX Document Box	7-13 7-14 7-16 8-1 8-2 8-2 8-27 8-28 8-44 8-44 8-44 8-46

	Managing the Users that Print on This Machine from a PC	9-12
	Managing the Users to Scan Using TWAIN	
	Managing the Users to Scan Using WIA	
	Managing Users that Send FAXes from a PC PC	
	Local Authoriz. (Local Authorization)	
	Configure Network User Rights	
	Group Auth. (Group Authorization Settings)	
	Guest Authorization Set.	
	NW User Property (Obtain Network User Property)	
	ID Card Settings	
	<u> </u>	
	PIN Login Settings	
	Using User Login Administration	
	Login/Logout	
	Overview of Job Accounting	
	Enabling Job Accounting	
	Job Accounting Access	
	Job Accounting (Local)	
	Adding an Account	
	Restricting the Use of the Machine	
	Editing an Account	9-30
	Deleting an Account	
	Job Accounting for Printing	9-32
	Job Accounting for Scan Using TWAIN	9-33
	Job Accounting for Scan Using WIA	
	Managing FAX Jobs Transmitted from a PC PC	
	Configuring Job Accounting	
	Default Counter Limit	
	Counting the Number of Pages Printed	
	Counting the Number of Pages for All Accounts	
	Counting the Number of Pages for Each Account	
	Print Accounting Report	
	<u> </u>	
	Using Job Accounting	
	Login/Logout	
	Apply Limit	
	Copier/Printer Count	
	Unknown User Settings	
	Unknown ID Job	
	Registering Information for a User whose ID is Unknown	9-43
10	Troubleshooting	10-1
. •	_	
	Regular Maintenance	
	Cleaning	
	Toner Container Replacement	
	Waste Toner Box Replacement	
	Troubleshooting	
	Solving Malfunctions	10-11
	Machine Operation Trouble	10-11
	Printed Image Trouble	10-16
	Remote Operation	
	Responding to Messages	
	Clearing Paper Jams	
11	Annendiy	11_1
1.1	Appendix	
	Optional Equipment	
	Overview of Optional Equipment	11-2
	Optional Applications	11-7
	Character Entry Method	11-9
	Using the Keys	11-9

Selecting Type of Characters	11-10
Characters That Can be Entered Using the Numeric Keys	11-10
Entering Symbols	11-11
Entering Characters	
Entering Using the Character Selection Screen	11-13
Paper	
Basic Paper Specifications	
Choosing the Appropriate Paper	
Special Paper	
Specifications	
. Machine	
Copy Functions	11-24
Printer Functions	
Scanner Functions	11-25
Document Processor	
Paper Feeder (500-sheet) (Option)	11-26
Back up Data	
Data backup using KYOCERA Net Viewer	11-27
Data backup using Command Center RX	
Glossary	
Index II	

## **Machine Features**

The machine is equipped with many useful functions.

Using Various Functions (page 6-1)


Here are some examples.

## **Optimize your office workflow**

#### Access to frequently used functions with just one touch (Program)

You can preset frequently used functions.

Once you register frequently used settings as favorite, you can call up the settings easily. Using this favorite brings the same results even if operated by another person.

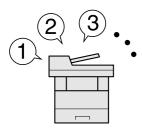

▶ Program (page 5-5)

#### Scan originals of different sizes at a time (Mixed Size Originals)

It is useful when preparing conference materials.

You can set the different sized originals at one time so you don't need to reset the originals regardless of size.





Mixed Size Orig. (Mixed Size Originals) (page 6-12)

## Scan a large number of originals in separate batches and produce as one job (Continuous Scan)

It is useful when preparing many-page handouts.

When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied or sent as one job.




→ Continuous Scan (page 6-22)

#### Send one time with multiple sending options (Multi Sending)

You can send a same document to the multiple destinations using a different method.

You can specify multiple destinations of different send methods such as E-mail, SMB, and Fax.

You can reduce your workflow by sending a job at once.

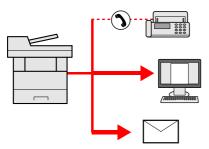

▶ Sending to Different Types of Destinations (Multi Sending) (page 5-24)

#### Save frequently used documents in the machine (Custom Box)

You can save the frequently used document in the machine and print it when needed.




Creating a New Custom Box (page 5-36)

#### Send a FAX from a PC (Sending FAX from PC)

You can save the paper used for sending a FAX with this function.

You can send a file to be faxed from the PC without printing the file, so that you can reduce the number of pieces of paper and perform sending jobs efficiently.

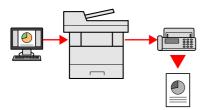

FAX Operation Guide

## Save energy and cost

#### Save energy as needed (Energy Saver function)

The machine is equipped with Energy Saver function that automatically switched into Sleep Mode. You can set appropriate Energy Saver Recovery Level depending on the operation.

In addition, the machine can automatically be switched into Sleep and recovered at a specified time for each day of the week.



**▶** Energy Saver function (page 2-28)

#### **Use less toner for printing (EcoPrint)**

You can save toner consumption with this function.

When you only need to check the printed content, such as a trial print run or documents for internal confirmation, use this function to save toner.


Use this function when a high-quality print is not required.



◆ EcoPrint (page 6-13)

#### Reduce paper use (Paper Saving Printing)

You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.

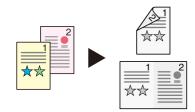

Combine (page 6-18)Duplex (page 6-20)

#### Skip blank pages when printing (Skip Blank Page)

When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.



→ Skip Blank Page (page 6-23)

#### Send a FAX to reduce the communication cost (FAX Delayed Transmission)

You can reduce the communication cost with this function.

The communication cost can be reduced by setting the timer to the time period during which the communication cost is low.




**→** FAX Operation Guide

#### **Create attractive documents**

#### **Prevent image bleed-through (Prevent Bleed-through)**

You can prevent image bleed-through from the reverse side when scanning thin originals.

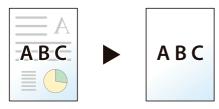


▶ Prevent Bleed-t (Prevent Bleed-thru) (page 6-16)

## Strengthen security

#### Password-protect a PDF file (PDF Encryption Functions)

Use the PDF format's password security options to restrict document viewing, printing and editing.

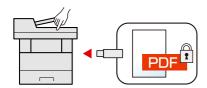

**▶** Encrypted PDF (page 6-36)

#### Protect data on the SSD (Encryption / Overwrite)

You can overwrite the unnecessary data that remains on the SSD automatically.

To prevent an external leakage, the machine is able to encrypt data before writing it to the SSD.



◆ Data Security (page 8-23)

#### **Prevent loss of finished documents (Private Print)**


You can temporarily save a printer document in the machine. By printing the document from the machine prevents someone takes your document.



→ Printing Data Saved on the Printer (page 4-18)

#### Log in by ID card (Card Authentication)


You can log in simply by touching an ID card. You don't need to enter your user name and password.

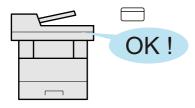

→ Card reader (page 11-6)

#### Prevent the execution of malware (Allowlisting)

Prevent malware from running and prevent software tampering and maintain system reliability.

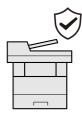

→ Allowlisting (page 8-26)

#### Strengthen security (Settings for Administrator)

Various functions are available for administrators to strengthen security.




◆ Strengthening the Security (page 2-47)

## **Use functions more efficiently**

#### Make the machine quiet (Quiet Mode)

You can make the machine quiet by reducing its running noise. You can configure this mode by job.

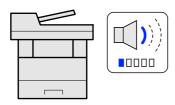

→ Quiet Mode (page 6-23)

#### **Expand functions as necessary (Application)**

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.



Application (page 8-49)

#### Install the machine without concerning the network cables (Wireless Network)

In an environment where the wireless LAN is used, you can install the machine without concerning the network cables.




**→** Setup (page 8-19)

#### **Use USB drive (USB Drive)**

It is useful when you need to print document outside your office or you cannot print document from your PC. You can print the document from the USB drive by plugging it directly into the machine.


Original scanned at the machine can be saved in the USB drive also.

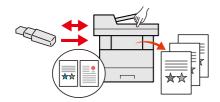

► Using Removable USB Drive (page 5-42)
Saving Documents to USB Drive (Scan to USB) (page 5-44)

#### **Specify image file format (File Format)**


You can select the various file formats when sending/storing images.

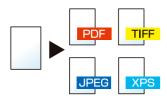

→ File Format (page 6-27)

#### Scan the long originals (Long Original)


You can scan the long originals such as Contract and Data log.

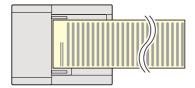

**▶** Long Original (page 6-35)

#### Perform remote operation (Command Center RX)

You can access to the machine remotely to print, send or download data. Administrators can configure the machine behavior or management settings.

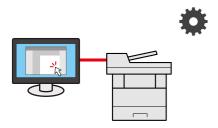

Command Center RX (page 2-49)

## **Color and Image Quality Functions**

The machine is equipped with various color and image quality functions. You can adjust the scanned image as desired.

#### **Basic Color Modes**

The basic color modes are as follows.

#### **Auto Color**

Automatically recognizes whether a document being scanned is color or black & white.

#### **Reference Image**

Before	After

#### **Full Color**

Scans a document in full color.

#### **Reference Image**

Before	After

#### Grayscale

Scans a document in grayscale.

#### **Reference Image**

Before	After

#### **Black & White**

Scans a document in black & white.

#### **Reference Image**

Before	After
	***

For details, refer to the following:

→ Color Selection (page 6-14)

## **Adjusting Image Quality and Color**

To adjust the image quality or color of an image, use the following functions.

#### Adjust the color precisely.

I want to	Before	After	Function
Adjust the density.	A ====================================	A <u> </u>	Density

For details, refer to the following:

Density (page 6-12)

Adjust the image quality precisely

I want to	Before	After	Function
Emphasize or blur the image outline. Example: Emphasize the image outlines			Sharpness
Adjust the difference between dark and light parts of the image.			Contrast
Darken or lighten the background (the area with no texts or images) of a document. Example: Lightening the background	<u>∧</u> <u> </u>	A ====================================	Background Density
Prevent bleed-through in 2-sided originals.	— A <b>A B C</b> . □	АВС	Prevent Bleed-through

For details, refer to the following:

- → Sharpness (page 6-14)
- Contrast (page 6-15)
- Background Density (page 6-15)
- ▶ Prevent Bleed-t (Prevent Bleed-thru) (page 6-16)

#### Adjust the scanned image

I want to	Before	After	Function
Decrease the file size and produce the characters clearly.	Сору	Сору	File format [High Comp. PDF]

For details, refer to the following:

File Format (page 6-27)

## **Guides Provided with the Machine**

The following guides are provided with the machine. Refer to each guide as needed.

The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

#### **Printed guides**

	Quick Guide
Start using the machine quickly	Explains how to use basic functions of the machine, how to use convenient features, how to perform routine maintenance, and what to do when problems occur.
	Safety Guide
	Provides safety and cautionary information for installation environment and use of the machine. Be sure to read this guide before using the machine.
For safe use of the machine	Safety Guide (ECOSYS MA4500fx/ECOSYS MA4500x)
	Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

#### Guides (PDF) on our website

	Operation Guide (This Guide)
Use the machine thoughtfully	Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.
Use the fax functions	FAX Operation Guide
Ose the lax functions	Explains how to use the fax function.
Use the ID card	Card Authentication Kit (B) Operation Guide
Ose the 1D card	Explains how to perform authentication using the ID card.
	Data Security Kit (E) Operation Guide
Strengthen security	Explains how to introduce and use the Data Security kit (E), and how to overwrite and encrypt data.
Easily register machine	Command Center RX User Guide
information and configure settings	Explains how to access the machine from a Web browser on your computer to check and change settings.
Print data from a computer	Printer Driver User Guide
Finit data from a computer	Explains how to install the printer driver and use the printer function.
Directly print a PDF file	KYOCERA Net Direct Print Operation Guide
briectly print a PDF file	Explains how to print PDF files without launching Adobe Acrobat or Reader.
Monitor the machine and	KYOCERA Net Viewer User Guide
printers on the network	Explains how to monitor your network printing system (the machine) with KYOCERA Net Viewer.
	PRESCRIBE Commands Command Reference
Print without using the	Describes the native printer language (PRESCRIBE commands).
printer driver	PRESCRIBE Commands Technical Reference
	Describes the PRESCRIBE command functions and control for each type of emulation.
Adjust the print or scan	Maintenance Menu User Guide
position	Maintenance Menu provides the explanation on how to configure the print, scan, and other settings.

Install the following versions of Adobe Reader to view the manuals. Version 8.0 or later

## **About the Operation Guide (this Guide)**


## **Structure of the guide**

The Operation Guide contains the following chapters.

Chapter	Contents		
Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.		
Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, login, logout, and other matters related to administration of the machine.		
Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to use the operation panel, load paper, and create an address book.		
Printing from PC	Explains functions that are available when the machine is used as a printer.		
Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, sending documents, and using document boxes.		
Using Various Functions	Explains convenient functions that are available on the machine.		
Status/Job Cancel	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, how to check the device status, and how to cancel fax transmission.		
Setup and Registration (System Menu)	Explains System Menu and how it relates to the operation of the machine.		
User Authentication and Accounting (User Login, Job Accounting)	Explains user login and job accounting.		
Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.		
Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.		

#### **Conventions Used in This Guide**

Adobe Reader XI is used as an example in the explanations below.

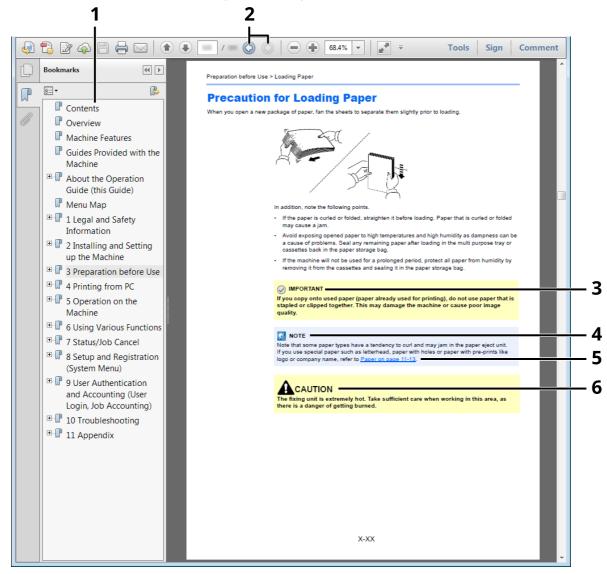

- 1 Click an item in the Table of Contents to jump to the corresponding page.
- 2 Click to move from the current page to the previously displayed page. This is convenient when you want to return to the page from which you jumped to the current page.
- 3 Indicates operational requirements and restrictions to operate the machine correctly, and avoid damage to the machine or property.
- 4 Indicates supplemental explanations and reference information for operations.
- 5 Click the underlined text to jump to the corresponding page.
- 6 Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.compliance with the related points.

#### NOTE

The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.

Convention	Description
[Bold]	Indicates keys and buttons.
"Regular"	Indicates a message or setting.

#### Conventions used in procedures for operating the machine

In this Operation Guide, continuous operation is as follows:

#### **Actual procedure**

- 1 Select the [**System Menu/Counter**] key.
- 2 Select the [▲] or [▼] key to select [Common settings].
- 3 Select the [**OK**] key.

#### Procedure indicated in this guide

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key

#### **Size and Orientation of Originals and Paper**

Original sizes and paper sizes such as A5 can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "R" is added to sizes used in the horizontal orientation. In addition, the following icons are used to indicate original and paper placement orientations on the touch panel.

Orien	tation	Setting Position (X=Length, Y=Width)	Icons on the touch panel	Indicated size in this Guide <sup>*</sup>
Vertical orientation	Original	Y	Original	A5
	Paper	Y	Paper	
Horizontal orientation (-R)	Original	Y	Original	A5-R
	Paper	Y	Paper	

<sup>\*</sup> Original/paper sizes that can be used vary depending on the function and source tray. For details, refer to the following.

Specifications (page 11-22)

## **Menu Map**

This is a list of menus displayed on the message display. Depending on the settings, some menus may not be displayed. Some menu names may differ from their reference titles.



Skip Blank Page (page 6-23)





Me(E-mail) (page 5-24)
E-mail (page 5-25)
Folder(SMB) (page 5-15)

roider(SIVID) (<u>page 5-15</u>)

Folder(FTP) (page 5-17)

WSD Scan (page 5-22)

FAX Server (page 5-26)

FAX (Refer to **FAX Operation Guide**.)



Quiet Mode (page 6-23)

Color Selection (page 6-14)

Original Size (page 6-9)

Original Image (page 6-13)

Scan Resolution (page 6-33)

Sending Size (page 6-26)

Zoom (page 6-16)

Orig.Orientation (page 6-11)

Mixed Size Orig. (page 6-12)

Continuous Scan (page 6-22)

File Format (page 6-27)

File Name Entry (page 6-22)

Subject/Body (page 6-33)

Long Original (page 6-35)

JobFinish Notice (page 6-22)

FAX Resolution (Refer to FAX Operation Guide.)

FAX Delayed TX (Refer to **FAX Operation Guide**.)

FAX Direct TX (Refer to **FAX Operation Guide**.)

FAX RX Polling (Refer to **FAX Operation Guide**.)

FAX TX Report (Refer to **FAX Operation Guide**.)

Density (page 6-12)

Duplex (page 6-25)

FTP Encrypted TX (page 6-34)

File Separation (page 6-33)

Sharpness (page 6-14)

Contrast (page 6-15)

Backgrnd Density (page 6-15)

Prevent Bleed-t (page 6-16)

Skip Blank Page (page 6-23)

EmailEncryptedTX (page 6-24)

DigitalSignature (page 6-24)



Custom	(File	Print (ChangeSet)		Quiet Mode (page 6-23)
Вох	Selection)		■ Function Menu	Collate (page 6-12)
				Paper Selection (page 6-10)
				Duplex (page 6-20)
				EcoPrint (page 6-13)
				File Name Entry ( <u>page 6-22</u> )
				JobFinish Notice (page 6-22)
				Print Override (page 6-23)
				Del. After Print (page 6-34)
Sub Addre	ss Box (Refer t	to FAX Operation Guid	e.)	
Polling Box	x (Refer to FA)	( Operation Guide.)		
Job Box	Private/Stor	ed ( <u>page 4-19</u> )		
	Quick/Proof	(page 4-23)		
	PIN Print (pa	age 4-27)		
	Universal Pr	int ( <u>page 4-29</u> )		
USB Drive	Store File	■ Function Menu	Quiet Mode (page 6-23	3)
			Color Selection (page 6	<u>5-14</u> )
			Original Size (page 6-9	)
			Original Image (page (	<u>5-13</u> )
			Scan Resolution (page	<u>6-33</u> )
			Storing Size (page 6-35	<u>5</u> )
			Zoom ( <u>page 6-16</u> )	
			Orig.Orientation (page	
			Mixed Size Orig. (page	
			Continuous Scan (page	
			Long Original (page 6-	
			File Format (page 6-27	
			File Separation (page 6	
			File Name Entry (page	
			JobFinish Notice ( <u>page 6-22</u> )	
			Density (page 6-12)	
			Duplex (page 6-25)	
			Sharpness (page 6-14)	
			Contrast (page 6-15)	40 6 15)
			Backgrnd Density (pag	
			Prevent Bleed-t (page	
			Skip Blank Page (page	<u>b-23</u> )

Status/ Job Cancel

JSB Drive	(File	Print	■ Function Menu	Quiet Mode (page 6-23)
	Selection)		Function Menu	Collate (page 6-12)
				Paper Selection (page 6-10)
				Duplex (page 6-20)
				EcoPrint (page 6-13)
				File Name Entry (page 6-22)
				JobFinish Notice (page 6-22)
				Print Override (page 6-23)
				Encrypted PDF (page 6-36)
				JPEG/TIFF Print (page 6-36)
				XPS FitTo Page (page 6-36)
•		program. (page 5-5)		
•		program. (page 5-5)  Op. Status (page 7-14)		
<ul><li></li></ul>	Rmt. C			
<ul><li> •</li></ul>	Rmt. C	)p. Status ( <u>page 7-14</u> )		
<b>)</b>	Rmt. C Print Jo Send J Store J	Op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6)		
<b>•</b>	Rmt. C Print Jo Send J Store J Sched	Op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7)		
<b>)</b>	Rmt. C Print Jo Send J Store J Sched	Op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10)		
<b>&gt;</b>	Rmt. C Print Jo Send J Store J Sched Print Jo Send J	Op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10) ob Log (page 7-11)		
<ul><li>*</li></ul>	Rmt. C Print Jo Send Jo Store J Schedo Print Jo Send Jo Store J	ob Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10) ob Log (page 7-11) ob Log (page 7-12)		
	Rmt. C Print Jo Send J Store J Schede Print Jo Send J Store J FAX Jo	op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10) ob Log (page 7-11) ob Log (page 7-12) b Log (Refer to FAX Op	peration Guide.)	
	Rmt. C Print Jo Send J Store J Schede Print Jo Store J FAX Jo Scanne	op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10) ob Log (page 7-11) ob Log (page 7-12) b Log (Refer to FAX Oper (page 7-14)	peration Guide.)	
	Rmt. C Print Jo Send J Store J Scheda Print Jo Store J FAX Jo Scanna Printe	op. Status (page 7-14) ob Status (page 7-4) ob Status (page 7-5) ob Status (page 7-6) uled Job (page 7-7) ob Log (page 7-10) ob Log (page 7-11) ob Log (page 7-12) b Log (Refer to FAX Op		

Wi-Fi Direct (page 7-15)

Option Network (page 7-15)

USB Drive (page 7-14)

Keyboard (<u>page 7-14</u>)
Network (<u>page 7-14</u>)

SSD (page 7-14)

Wi-Fi (<u>page 7-14</u>)

System Menu/ Counter



Report	Report Print	Menu Map (page 8-5)
		Config. List (page 8-5)
		Status Page (page 8-5)
		Font List (page 8-6)
		Opt NW Status (page 8-6)
		Data Sanitization (page 8-6)
	Admin Rpt Set. (Refer to <b>FAX C</b>	Operation Guide.)
	Result Rpt Set. (page 8-7)	
	Job Log History	Auto Sending (page 8-7)
		Send History (page 8-7)
		Destination (page 8-7)
		Subject (page 8-7)
		SSFC Log Subject (page 8-7)
		Personal Info. (page 8-7)
Counter (page 2-45)		

System/Network	Network Setting	Host Name (page 8-8)	
		Wi-Fi Direct Set	Wi-Fi Direct (page 8-8)
			Device Name ( <u>page 8-8</u> )
			IP Address (page 8-8)
			Auto Disconnect (page 8-8)
			Frequency Band (page 8-8)
		Wi-Fi Settings	Wi-Fi ( <u>page 8-9</u> )
			Setup (page 8-9)
			TCP/IP Settings (page 8-11)
			Restart Network (page 8-12)
		Wired Netwk. Set	TCP/IP Settings (page 8-13)
			LAN Interface (page 8-13)
		Bonjour (page 8-13)	
		IP Filter (IPv4) (page 8-13)	
		IP Filter (IPv6) (page 8-13)	
		IPSec (page 8-13)	
		Protocol Settings (page 8-18)	
		Secure Settings (page 8-8)	
		Ping ( <u>page 8-18</u> )	
		Restart Network (page 8-18)	
	Optional Network	Setup (page 8-19)	
		Basic (page 8-20)	
	Primary Network (page 8-21)		
	I/F Block Set.	USB Host (page 8-22)	
		USB Device (page 8-22)	
		USB Storage (page 8-22)	
		Option I/F (page 8-22)	
	Bluetooth Set. (page 8-22)		
	Security Level (page 8-22)		
	Data Security ( <u>page 8-23</u> )		
	Restart (page 8-24)		
	Op Functions (page 8-24)		
	Remote Serv.Set. (page 8-24)		
	Software Version (page 8-24)		
	FAX Server Set. (page 8-24)		
	Remote Operation (page 8-25)  Admin FW Update (page 8-26)  Allowlisting (page 8-26)		
	Secure Boot (page 8-26)		

User/Job Account	User Login Set.	User Login (page 9-3)	
		Local User List (page 9-7)	
		Local Authoriz. (page 9-16)	
		Account Lockout (page 9-5)	
		Password Policy (page 9-6)	
		ID Card Settings	Key Login (page 9-22)
			Additional Auth. (page 9-22)
		Group Auth. (page 9-18)	
		Guest Auth. Set. (page 9-19)	
		PIN Code Login (page 9-23)	
		NW User Property (page 9-21)	
		NW User Auth. (page 9-17)	
	Job Account.Set.	Job Accounting (page 9-27)	
		AccountingAccess (page 9-27)	
		Account. Report (page 9-39)	
		Total Accounting (page 9-37)	
		Each Job Account (page 9-37)	
		Account. List (page 9-28)	
		Default Setting	Apply Limit (page 9-17)
			Copy/Print Count (page 9-41)
			Counter Limit ( <u>page 9-36</u> )
	Unknown User	Unknown ID Job (page 9-42)	
		User Property ( <u>page 9-43</u> )	
User Property (page 9-12)			
Common Settings	Language (page 8-28)		
	Default Screen (page 8-28)	1	
	Sound	Buzzer (page 8-28)	
		FAX Speaker (Refer to <b>FAX Operation Guide</b> .)	
		FAX Monitor (Refer to <b>FAX Op</b>	eration Guide.)
	Display Bright. (page 8-28)		
	Orig./Paper Set.	Custom Orig.Size (page 8-29)	
		Detect Orig.(DP) (page 8-29)	
		Def. Orig. Size (page 8-29)	
		Custom PaperSize (page 8-30)	

Cassette 1 Type (page 8-32)	Common Settings	Orig./Paper Set.	Cassette 1 Set.	Cassette 1 Size (page 8-32)
Cassette 3 Set.  Cassette 3 Set.  Cassette 3 Size (page 8-32)  Cassette 4 Set.  Cassette 4 Set.  Cassette 4 Size (page 8-32)  Cassette 4 Size (page 8-32)  Cassette 5 Set.  MP Tray Size (page 8-32)  MP Tray Type (page 8-32)  Media Type Set. (page 8-31)  Media Type Set. (page 8-31)  Media Type Set. (page 8-31)  SpailPaper Act. (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Fror Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PermissionjobErr (page 8-34)  Date Format (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-35)  Summer Time (page 8-35)  Low Power Timer (page 8-35)  Sleep Rules (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-36)  Power Off Rule (page 8-36)				Cassette 1 Type (page 8-32)
Cassette 3 Set.  Cassette 3 Size (page 8.32)  Cassette 4 Set.  Cassette 4 Set.  Cassette 4 Size (page 8.32)  Cassette 4 Size (page 8.32)  Cassette 5 Set.  Cassette 5 Size (page 8.32)  MP Tray Set.  MP Tray Size (page 8.32)  Media Type Set. (page 8.31)  Media for Auto (page 8.31)  Def. PaperSource (page 8.31)  SpailPaper Act. (page 8.31)  Paper Setup Msg (page 8.31)  Preset Limit (page 8.33)  Measurement (page 8.33)  Error Handling  DuplexPaperError (page 8.34)  PaperMismatchErr (page 8.34)  PaperMismatchErr (page 8.34)  Date Format (page 8.34)  Date Format (page 8.34)  Time Zone (page 8.34)  Time Zone (page 8.35)  Low Power Time (page 8.35)  Low Power Timer (page 8.35)  Sleep Rules (models for Europe) (page 8.35)  Sleep Rule (models except for Europe) (page 8.35)  Sleep Rules (models for Europe) (page 8.35)  Sleep Rule (page 8.36)  Power Off Rule (page 8.36)  Power Off Timer (page 8.36)			Cassette 2 Set.	Cassette 2 Size (page 8-32)
Cassette 4 Set.  Cassette 4 Set.  Cassette 4 Set.  Cassette 4 Size (page 8-32)  Cassette 5 Set.  Cassette 5 Set.  Cassette 5 Size (page 8-32)  MP Tray Set.  MP Tray Set.  MP Tray Set.  MP Tray Set.  Media Type Set. (page 8-31)  Media Type Set. (page 8-31)  Def. PaperSource (page 8-31)  SpailPaper Act. (page 8-31)  Paper Setup Msg (page 8-31)  Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PaperMismatchErr (page 8-34)  Date Format (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-35)  Low Power Time (page 8-35)  Low Power Timer (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Power Off Rule (page 8-36)  Power Off Rule (page 8-36)				Cassette 2 Type (page 8-32)
Cassette 4 Set.  Cassette 4 Type (page 8-32) Cassette 5 Set.  Cassette 5 Set.  Cassette 5 Size (page 8-32) Cassette 5 Type (page 8-32)  MP Tray Set.  MP Tray Size (page 8-32) MP Tray Type (page 8-32) MP Tray Type (page 8-32) MP Tray Type (page 8-32) Media Type Set. (page 8-31) Def. PaperSource (page 8-31) SpainPaper Act. (page 8-31) SpainPaper Act. (page 8-31) Preset Limit (page 8-33)  Error Handling  DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) Date Format (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34) Time Zone (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Power Off Rule (page 8-36) Power Off Rule (page 8-36)			Cassette 3 Set.	Cassette 3 Size (page 8-32)
Cassette 4 Type (page 8.32)  Cassette 5 Set.  Cassette 5 Stet.  Cassette 5 Size (page 8.32)  MP Tray Set.  MP Tray Size (page 8.32)  MP Tray Size (page 8.32)  MP Tray Size (page 8.32)  MP Tray Type (page 8.32)  Media Type Set. (page 8.31)  Def. PaperSource (page 8.31)  SpailPaper Act. (page 8.31)  Preset Limit (page 8.33)  Error Handling  DuplexPaperError (page 8.34)  PaperMismatchErr (page 8.34)  PermissionJobErr (page 8.34)  PermissionJobErr (page 8.34)  Date Format (page 8.34)  Time Zone (page 8.34)  Time Zone (page 8.34)  Time Reset (page 8.35)  PanelReset Timer (page 8.35)  Low Power Timer (page 8.35)  Sleep Level (models except for Europe) (page 8.35)  Sleep Level (models for Europe) (page 8.35)  Sleep Timer (page 8.36)  Power Off Rule (page 8.36)  Power Off Rule (page 8.36)				Cassette 3 Type (page 8-32)
Cassette 5 Set.  Cassette 5 Type (page 8-32)  MP Tray Set.  MP Tray Size (page 8-32)  MP Tray Size (page 8-32)  MP Tray Size (page 8-32)  MP Tray Type (page 8-32)  Media Type Set. (page 8-31)  Def. PaperSource (page 8-31)  SpcialPaper Act. (page 8-31)  Paper Setup Msg (page 8-34)  PaperMismatchErr (page 8-34)  PermissionJobErr (page 8-34)  Date Setting  DuplexPaperError (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Rule (page 8-36)			Cassette 4 Set.	Cassette 4 Size (page 8-32)
Cassette 5 Type (page 8-32)  MP Tray Set.  MP Tray Set.  MP Tray Size (page 8-32)  Media Type Set. (page 8-31)  Media for Auto (page 8-31)  Def. PaperSource (page 8-31)  SpcialPaper Act. (page 8-31)  Paper Setup Msg (page 8-31)  Paper MismatchErr (page 8-34)  PaperMismatchErr (page 8-34)  PermissionJobErr (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Neekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Rule (page 8-36)				Cassette 4 Type (page 8-32)
MP Tray Set.  MP Tray Size (page 8-32)  MP Tray Type (page 8-32)  Media Type Set. (page 8-31)  Media for Auto (page 8-31)  Def. PaperSource (page 8-31)  SpcialPaper Act. (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PermissionJobErr (page 8-34)  PermissionJobErr (page 8-34)  Time Zone (page 8-34)  Time Zone (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Cassette 5 Set.	Cassette 5 Size (page 8-32)
Media Type Set. (page 8-31)  Media Type Set. (page 8-31)  Media for Auto (page 8-31)  Def. PaperSource (page 8-31)  SpcialPaper Act. (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PaperMismatchErr (page 8-34)  Date Setting  Date/Time (page 8-34)  Time Zone (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)				Cassette 5 Type (page 8-32)
Media Type Set. (page 8-31) Media for Auto (page 8-31) Def. PaperSource (page 8-31) SpcialPaper Act. (page 8-31) Paper Setup Msg (page 8-31) Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) Date Setting Date/Time (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34) Time Zone (page 8-34) Summer Time (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Timer (page 8-36)			MP Tray Set.	MP Tray Size (page 8-32)
Media for Auto (page 8-31) Def. PaperSource (page 8-31) SpcialPaper Act. (page 8-31) Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) Date Format (page 8-34) Date Format (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34) Auto Panel Reset (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Rule (page 8-36)				MP Tray Type (page 8-32)
Def. PaperSource (page 8-31)  SpcialPaper Act. (page 8-31)  Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PermissionJobErr (page 8-34)  Date Setting  Date/Time (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)			Media Type Set. (page 8-31)	
SpcialPaper Act. (page 8-31) Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Error Handling  DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) PermissionJobErr (page 8-34)  Date Setting  Date Format (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Rule (page 8-36) Power Off Timer (page 8-36)			Media for Auto (page 8-31)	
Paper Setup Msg (page 8-31)  Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34)  Date Setting  Date/Time (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Rule (page 8-36)			Def. PaperSource (page 8-31)	
Preset Limit (page 8-33)  Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) Date Setting  Date/Time (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Rule (page 8-36) Power Off Timer (page 8-36)			SpcialPaper Act. (page 8-31)	
Measurement (page 8-33)  Error Handling  DuplexPaperError (page 8-34)  PaperMismatchErr (page 8-34)  PermissionJobErr (page 8-34)  Date Setting  Date Format (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Paper Setup Msg (page 8-31)	
DuplexPaperError (page 8-34) PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34) Pate Setting Date Format (page 8-34) Date Format (page 8-34) Time Zone (page 8-34) Summer Time (page 8-34) Timer Setting Auto Panel Reset (page 8-35) PanelReset Timer (page 8-35) Low Power Timer (page 8-35) Sleep Level (models except for Europe) (page 8-35) Sleep Rules (models for Europe) (page 8-35) Sleep Timer (page 8-35) Weekly Timer Set. (page 8-36) Power Off Rule (page 8-36) Power Off Timer (page 8-36)		Preset Limit (page 8-33)		
PaperMismatchErr (page 8-34) PermissionJobErr (page 8-34)  Date Setting  Date/Time (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)		Measurement (page 8-33)		
PermissionJobErr (page 8-34)  Date Setting  Date/Time (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)		Error Handling	DuplexPaperError (page 8-34)	
Date Setting  Date/Time (page 8-34)  Date Format (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			PaperMismatchErr ( <u>page 8-34</u> )	
Date Format (page 8-34)  Time Zone (page 8-34)  Summer Time (page 8-34)  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)			PermissionJobErr (page 8-34)	
Time Zone (page 8-34)  Summer Time (page 8-34)  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)		Date Setting	Date/Time (page 8-34)	
Summer Time (page 8-34)  Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Date Format (page 8-34)	
Timer Setting  Auto Panel Reset (page 8-35)  PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Time Zone (page 8-34)	
PanelReset Timer (page 8-35)  Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Summer Time (page 8-34)	
Low Power Timer (page 8-35)  Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)		Timer Setting	Auto Panel Reset (page 8-35)	
Sleep Level (models except for Europe) (page 8-35)  Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			PanelReset Timer (page 8-35)	
Sleep Rules (models for Europe) (page 8-35)  Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Low Power Timer (page 8-35)	
Sleep Timer (page 8-35)  Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Sleep Level (models except for Europe) (page 8-35)	
Weekly Timer Set. (page 8-36)  Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Sleep Rules (models for Europe) (page 8-35)	
Power Off Rule (page 8-36)  Power Off Timer (page 8-36)			Sleep Timer (page 8-35)	
Power Off Timer (page 8-36)			Weekly Timer Set. (page 8-36)	
			Power Off Rule (page 8-36)	
Auto Err. Clear (page 8-36)			Power Off Timer (page 8-36)	
			Auto Err. Clear (page 8-36)	
Err. Clear Timer (page 8-36)			Err. Clear Timer (page 8-36)	
Unusable Time (Refer to <b>FAX Operation Guide</b> .)			Unusable Time (Refer to <b>FAX Operation Guide</b> .)	
Ping Timeout (page 8-36)			Ping Timeout (page 8-36)	

Common Settings	Function Default	Clear Job Set. (page 8-37)	
		Color Selection (page 8-37)	
		Scan Resolution (page 8-37)	
		FAX Resolution (Refer to <b>FAX Operation Guide</b> .)	
		Orig.Image(Copy) (page 8-37)	
		Orig.Image(Send) (page 8-37)	
		Zoom ( <u>page 8-37</u> )	
		Collate (page 8-37)	
		Orig.Orientation (page 8-37)	
		Backgrnd(Copy) (page 8-37)	
		Backgrnd(Send) (page 8-37)	
		EcoPrint (page 8-37)	
		Prevent B-t Copy (page 8-37)	
		Prevent B-t Send (page 8-37)	
		Skip Blank(Copy) (page 8-37)	
		Skip Blank(Send) (page 8-37)	
		File Name Entry (page 8-38)	
		Subject/Body (page 8-38)	
		Con.scan-Copy (page 8-38)	
		Con.scan-FAX ( <u>page 8-38</u> )	
		Con.scan-Others (page 8-38)	
		File Format (page 8-38)	
		File Separation (page 8-38)	
		JPEG/TIFF Print (page 8-38)	
		XPS FitTo Page (page 8-38)	
		Detail Setting	2 in 1 Layout ( <u>page 8-39</u> )
			4 in 1 Layout ( <u>page 8-39</u> )
			Border Line (page 8-39)
			Orig. Binding (page 8-39)
			Finish. Binding (page 8-39)
			Image Quality (page 8-39)
			Color TIFF Comp. (page 8-39)
			PDF/A ( <u>page 8-39</u> )
			High Comp.PDF (page 8-39)
			Items To Skip Copy (page 8-39)
			Items To Skip Send (page 8-39)
	Login Operation (page 8-39)		
	RAM Disk Mode (page 8-40)		

Common Settings	Optional Memory (page 8-40)
	Disp. Status/Log (page 8-40)
	Keyboard Type (page 8-41)
	Low Toner Alert (page 8-41)
	Remote Printing (page 8-41)
	Show PowerOffMsg (page 8-41)
	EnergySaver Set. (page 8-42)
	Msg Banner Print (page 8-42)
	Pause/Resume (page 8-42)
Сору	Paper Selection (page 8-43)
	AutoPaperSelect. (page 8-43)
	Auto % Priority (page 8-43)
	Reserve Priority (page 8-43)
	Select Key Set. (page 8-43)
Printer	Emulation Set. (page 8-44)
	EcoPrint (page 8-44)
	Override A4/LTR (page 8-44)
	Duplex (page 8-44)
	Copies (page 8-44)
	Orientation (page 8-44)
	Wide A4 (page 8-44)
	FormFeed TimeOut (page 8-44)
	LF Action (page 8-44)
	CR Action (page 8-44)
	Job Name (page 8-45)
	User Name (page 8-45)
	MP Tray Priority (page 8-45)
	Paper Feed Mode (page 8-45)
	Auto Cass. Change (page 8-45)
	Resolution (page 8-45)
	KIR (page 8-45)
	Job Terminator (page 8-45)

Send	Select Key Set (page 8-46)			
Sellu	Select Key Set. (page 8-46)			
	DestinationCheck (page 8-46)			
	New Dest. Entry (page 8-46)			
	Recall Dest. (page 8-46)			
	Broadcast ( <u>page 8-46</u> )	Broadcast (page 8-46)		
	Default Screen (page 8-46)			
	Send and Forward (page 8-46)			
	DigitalSignature (page 8-47)			
	E-mail Settings (page 8-47)			
FAX (Refer to FAX Operation	n Guide.)			
Document Box	Custom Box (page 5-36)			
	Sub Address Box (Refer to <b>FA</b> )	( Operation Guide.)		
	Job Box	Quick Copy Jobs (page 8-48)		
		JobRet. Deletion (page 8-48)		
		DelPIN at PwrOff (page 8-48)		
		Storage Media (page 8-48)		
	Polling Box (Refer to <b>FAX Ope</b>	Polling Box (Refer to <b>FAX Operation Guide</b> .)		
	Select Key Set. (page 8-48)			
Application (page 8-49)				
Edit Destination	Address Book (page 8-49)			
	Edit Restriction (page 8-49)			
	Print List (page 8-49)			
	AddrBookDefaults (page 8-49)			
Adjust/Maint.	Quiet Mode (page 8-50)			
	Copy Denst. Adj. (page 8-50)			
	Send/Box Density (page 8-50)			
	Contrast (Copy) (page 8-50)			
	Contrast (Send) (page 8-50)			
	Backgrnd Density (page 8-50)			
	EcoPrint Setting (page 8-50)			
	Print Density (page 8-50)			
	AutoColorCorrect (page 8-50)			
	Correct. Bk Line (page 8-51)			
	Service Setting (page 8-51)			

# 1 Legal and Safety Information

Please read this information before using your machine. This chapter provides information on the following topics.

Notice		1-2
	ventions in This Guide	
Environmer	ent	1-3
Precautions	s for Use	1-4
Laser Safet	ty (Europe)	1-5
SAFETY OF	LASER BEAM (USA)	1-6
Safety Instr	ructions Regarding the Disconnection of Power	1-7
Compliance	e and Conformity	1-7
Other preca	autions (for users in California, the United States)	1- <u>9</u>
Legal Restr	riction on Copying/Scanning	1- <u>9</u>
EN ISO 777	79	1-9
EK1-ITB 200	000	1-9
Wireless Co	onnection (Mexico only)	1-9
Security Pre	ecautions when Using Wireless LAN (If equipped)	1-10
Limited Use	e of This Product (If equipped)	1-11
Legal Infori	rmation	1-12
Energy Savi	ving Control Function	1-14
Automatic 2	2-Sided Print Function	1-14
Resource Sa	Saving - Paper	1-14
Environmer	ental benefits of "Power Management"	1-14
Energy Star	r (ENERGY STAR®) Program	1-14

### **Notice**

### **Safety Conventions in This Guide**

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.



WARNING: Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



CAUTION: Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

#### **Symbols**

The  $\triangle$  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.



... [General warning]



... [Warning of high temperature]

The  $\bigcirc$  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.



... [Warning of prohibited action]



🤼 ... [Disassembly prohibited]

The ● symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.



... [Alert of required action]



... [Remove the power plug from the outlet]



... [Always connect the machine to an outlet with a ground connection]



### **NOTE**

An original which resembles a bank note closely may not be copied properly in some rare cases because this machine is equipped with a counterfeiting prevention function.

### **Environment**

The service environmental conditions are as follows:

Temperature	50 to 90.5 °F (10 to 32.5 °C)
Humidity	15 to 80%

Avoid the following locations when selecting a site for the machine.

- · Avoid locations near a window or with exposure to direct sunlight.
- · Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- · Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

### **Precautions for Use**

### **Cautions when handling consumables**



Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

#### Other precautions

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multi Purpose (MP) Tray, return it to its original package and reseal it.

# **Laser Safety (Europe)**

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.

This machine is classified as Class 1 laser product under IEC/EN 60825-1:2014.

Regarding CLASS 1 laser products, information is provided on the rating label.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT


### **SAFETY OF LASER BEAM (USA)**

### 1. Safety of laser beam

This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S.DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

#### 2. The CDRH Act

A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States. On this machine, the label is on the rear.

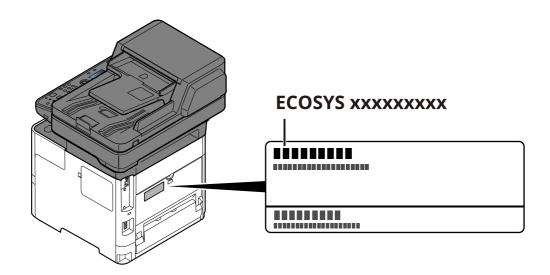

#### 3. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

#### 4. Safety switch

The power to the laser unit is cut off when the front cover is opened.

## **Safety Instructions Regarding the Disconnection of Power**

**Caution**: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

**Attention:** Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

## **Compliance and Conformity**

Hereby, KYOCERA Document Solutions Inc. declares that the radio equipment type ECOSYS MA4500x/ ECOSYS MA4500fx are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <a href="https://www.kyoceradocumentsolutions.eu/index/service/dlc.html">https://www.kyoceradocumentsolutions.eu/index/service/dlc.html</a>

Module name, Option	Software Ver.	Frequency band in which the radio equipment operates:	Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates:
IB-51 (option)	2.2.6	2.4GHz	100mW
IB-37 (option)	1.0	2.4GHz	100mW
		5GHz	50mW - 1W
IB-38 (option)	1.0	2.4GHz	100mW
Transmitter Module(SRD)	2005.11	13.56MHz	0.2nW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **IMPORTANT NOTE:**

#### **Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

#### **Industry Canada statement:**

This device contains licence-exempt transmitter(s) / receiver(s) that complies with Innovation, Science and Economic Development Canada's licence-exempt RSS (s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

Industry Canada ICES-003 Compliance Label: CAN ICES-3B/NMB-3B

#### **Caution:**

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

Operations in the 5.25-5.35GHz band are restricted to indoor usage only.

#### **Radiation Exposure Statement:**

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

\* These above statements are valid in the United States of America, Canada and EU.

### For Singapore (IB-37)

Complies with IMDA Standards DB01846

#### **For Brazil**

IB-37 e IB-38



18780-20-09076

Para maiores informações, consulte o site da ANATEL www.anatel.gov.br

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

#### For Paraguay

IR-37

IB-38



NR: 2021-01-I-0031 NR: 2021-01-I-0032

# Other precautions (for users in California, the United States)

Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

## **Legal Restriction on Copying/Scanning**

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by low. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- · Paper money
- · Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

### **EN ISO 7779**

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

### **EK1-ITB 2000**

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

### **Wireless Connection (Mexico only)**

The operation of this equipment is subject to the following two conditions:

(1) it is possible that this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

# Security Precautions when Using Wireless LAN (If equipped)

Wireless LAN allows information to be exchanged between wireless access points instead of using a network cable, which offers the advantage that a LAN connection can be established freely within an area in which radio waves can be transmitted.

On the other hand, the following problems may occur if security settings are not configured, because radio waves can pass through obstacles (including walls) and reach everywhere within a certain area.

#### **Secretly Viewing Communication Contents**

A third person with malicious objectives may intentionally monitor radio waves and gain unauthorized access to the following communication contents.

- · Personal information including ID, passwords, and credit card numbers
- · Contents of email messages

#### **Illegal Intrusion**

A third party with malicious intent may gain unauthorized access to personal or company networks and conduct the following illegal actions.

- Extracting personal and confidential information (information leak)
- Entering into communication while impersonating a specific person and distributing unauthorized information (spoofing)
- Modifying and retransmitting intercepted communications (falsification)
- Transmitting computer viruses and destroying data and systems (destruction)

Wireless LAN cards and wireless access points contain built-in security mechanisms to address these problems and to reduce the possibility of these problems occurring by configuring the security settings of wireless LAN products when the product is used.

We recommend that customers take responsibility and use their judgment when configuring the security settings and that they ensure that they fully understand the problems that can occur when the product is used without configuring the security settings.

### **Limited Use of This Product (If equipped)**

- Radio waves transmitted from this product may affect medical equipment. When using this product in a medical institution or in the vicinity of medical instruments, either use this product according to the instructions and precautions provided by the administrator of the institution or those provided on the medical instruments.
- Radio waves transmitted from this product may affect automatic control equipment including automatic doors and fire alarms. When using this product in the vicinity of the automatic control equipment, use this product according to the instructions and precautions provided on the automatic control equipment.
- If this product is used in devices that are directly related to service including airplanes, trains, ships, and automobiles or this product is used in applications requiring high reliability and safety to function and in devices requiring accuracy including those used in disaster prevention and crime prevention and those used for various safety purposes, please use this product after considering the safety design of the entire system including adoption of a failsafe design and redundancy design for reliability and safety maintenance of the entire system. This product is not intended for use in applications requiring high reliability and safety including aerospace instruments, trunk communication equipment, nuclear power control equipment, and medical equipment; hence, the decision as to whether to use this product in these applications needs to be fully considered and determined.

#### Sólo México (Mexico only)

Este equipo utiliza el módulo de interfaz de red inalámbrica modelo LBWA1ZZ1CA para conectarse a las redes Inalámbricas.

## **Legal Information**

Copying or other reproduction of all or part of this guide without the prior written consent of KYOCERA Document Solutions Inc. is prohibited.

### **Regarding Trade Names**

- PRESCRIBE and ECOSYS are registered trademark of Kyocera Corporation.
- KPDL is a trademark of Kyocera Corporation.
- Active Directory, Azure, Microsoft, Microsoft 365, Microsoft Edge, Windows and Windows Server are registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries.
- · PCL is a trademark of Hewlett-Packard Company.
- Adobe, Acrobat, PostScript, and Reader are either registered trademarks or trademarks of Adobe in the U.S. and/or other countries.
- Ethernet is a registered trademark of FUJIFILM Business Innovation Corporation.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AirPrint, the AirPrint logo, AppleTalk, Bonjour, iPad, iPhone, iPod touch, Mac, Mac OS and TrueType are trademarks of Apple Inc., registered in the U.S. and other countries.
- All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc.
- Helvetica, Palatino and Times are registered trademarks of Linotype GmbH.
- ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC ZapfDingbats are registered trademarks of International Typeface Corporation.
- ThinPrint is a registered trademark or trademark of Cortado AG in Germany and other countries.
- UFST™ MicroType® fonts by Monotype Imaging Inc. are installed in this machine.
- This machine contains the software having modules developed by Independent JPEG Group.
- iOS is a registered trademark or trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.
- · Google is a registered trademark and/or trademark of Google LLC.
- Mopria and Mopira logo are registered trademarks or trademarks of Mopria Alliance, Inc. in the U.S. and/or other countries.
- Wi-Fi, Wi-Fi Direct and Wi-Fi Protected Setup are registered trademarks and/or trademarks of Wi-Fi Alliance.
- Powered by ABBYY FineReader
   ABBYY and FineReader are trademarks of ABBYY Software Ltd.
- RealVNC, VNC and RFB are registered trademarks or trademarks of RealVNC Ltd. in the U.S. and/or other countries.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations  $^{\text{M}}$  and  $^{\text{R}}$  will not be used in this Operation Guide.

#### **Monotype Imaging License Agreement**

- 1 *Software* shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
- 2 You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols (*Typefaces*) solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Under the terms of this License Agreement, you have the right to use the Fonts on up to three printers. If you need to have access to the fonts on more than three printers, you need to acquire a multiuser license agreement which can be obtained from Monotype Imaging. Monotype Imaging retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
- To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
- 4 You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy. You agree that any such copy shall contain the same proprietary notices as those appearing on the original.
- 5 This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
- 6 You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
- 7 Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.
  - The parties agree that all other warranties, expressed or implied, including warranties of fitness for a particular purpose and merchantability, are excluded.
- 8 Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.
  - In no event will Monotype Imaging be liable for lost profits, lost data, or any other incidental or consequential damages, or any damages caused by abuse or misapplication of the Software and Typefaces.
- 9 Massachusetts U.S.A. law governs this Agreement.
- 10 You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
- 11 Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
- 12 You acknowledge that you have read this Agreement, understand it, and agree to be bound by its terms and conditions. Neither party shall be bound by any statement or representation not contained in this Agreement. No change in this Agreement is effective unless written and signed by properly authorized representatives of each party. By opening this diskette package, you agree to accept the terms and conditions of this Agreement.

#### **Open Source Software License**

For the "Open Source Software license, go into the following URL and select Country > Product Name > OS > Language and then, refer to the "OSS\_Notice" from the manual tab in the "Download".

https://kyocera.info/

# **Energy Saving Control Function**

The device comes equipped with a **Sleep** where printer and fax functions remain in a waiting state but power consumption is reduced to a minimum after a certain amount of time elapses since the device was last used.

#### Sleep

The device automatically enters Sleep when 1 minute has passed since the device was last used. The amount of time of no activity that must pass before Sleep is activated may be lengthened.

→ Sleep Rules (models for Europe) (page 2-29)

### **Automatic 2-Sided Print Function**

This device includes 2-sided printing as a standard function. For example, by printing two 1-sided originals onto a single sheet of paper as a 2-sided print, it is possible to lower the amount of paper used.

→ Duplex (page 6-20)

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

### **Resource Saving - Paper**

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002\* or an equivalent quality standard, be used.

This machine also supports printing on 64  $g/m^2$  paper. Using such paper containing less raw materials can lead to further saving of forest resources.

\*: EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes" Your sales or service representative can provide information about recommended paper types.

### **Environmental benefits of "Power Management"**

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time. Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

# **Energy Star (ENERGY STAR®) Program**

We participate in the ENERGY STAR® Program.

We provide the products complied with ENERGY STAR<sup>®</sup> to the market.

ENERGY STAR $^{\$}$  is an energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing the products complied with ENERGY STAR $^{\$}$ , customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.

# 2 Installing and Setting up the Machine


This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.


Part Names	
Machine Exterior	. 2-2
Connectors/Interior	. 2-4
With Optional Equipments Attached	. 2-7
Connecting the Machine and Other	
Devices	. 2-8
Connecting Cables	. 2-9
Connecting LAN Cable	. 2-9
Connecting USB Cable	2-10
Connecting the Power Cable	
Power On/Off	
Power On	2-11
Power Off	
Using the Operation Panel	2-12
Operation Panel Keys	
Operation Method	
Display for Originals and Paper	
Help Screen	
Login/Logout	
Login	
Logout	
Default Settings of the Machine	
Setting Date and Time	2-17
Network Setup	
Configuring the Wired Network	
Configuring the Wireless Network	2-20
Setting Wi-Fi Direct	
Energy Saver function	
Low Power Mode	2-28
Sleep	2-28
Auto Sleep	2-29
Sleep Rules (models for Europe)	2-29
Sleep Level (Energy Saver and Quick	
Recovery) (models except for Europe)	2-29
Weekly Timer Settings	
Power Off Rule (models for Europe)	2-29
Installing Software	
Published Software (Windows)	2-30
Installing Software in Windows	2-31
Uninstalling the Software	
Installing Software in Mac Computer	
Setting TWAIN Driver	2-42
Setting WIA Driver	2-44

Checking the Counter2-	45
Additional Preparations for the	
Administrator 2-	46
Administrator Privileges Overview 2-	46
Log in as Machine Administrator or	
Administrator 2-	46
Sending Documents to a PC 2-	47
Strengthening the Security 2-	47
Command Center RX 2-	
Accessing Command Center RX 2-	50
Changing Security Settings 2-	51
Changing Device Information 2-	
E-mail Settings 2-	
Registering Destinations 2-	
Creating a New Custom Box 2-	
Printing a document stored in a	
Custom Box 2-	58
Transferring Data from Our Other Products 2-	60
Migrating the Address Book 2-	


# **Part Names**

### **Machine Exterior**

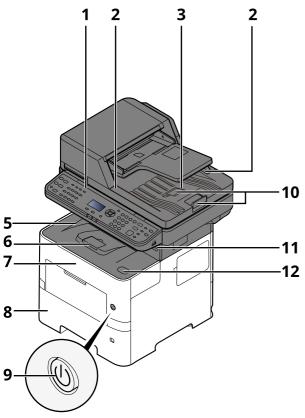

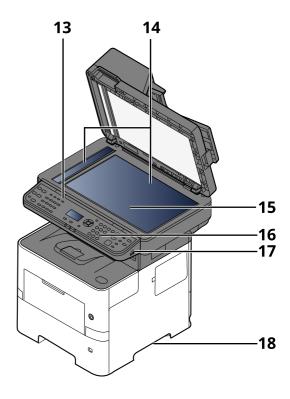



- 1 Document Processor
- 2 Original Width Guides
- 3 Original Table
- 4 Original Eject Table
- 5 Inner Tray
- 6 Paper Stopper
- 7 Front Cover
- 8 Cassette 1
- 9 Power Switch
- 10 Original Stopper
- 11 USB Drive Slot (for card reader)
- 12 Front Cover Open Button
- 13 Slit Glass
- 14 Original Size Indicator Plates
- 15 Platen
- 16 Operation Panel
- 17 USB Drive Slot
- 18 Handles

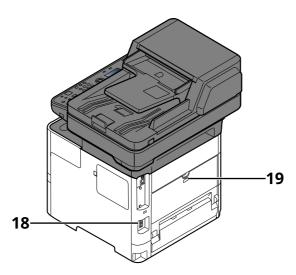


19 Anti-theft Lock Slot20 Rear Cover

# **Connectors/Interior**

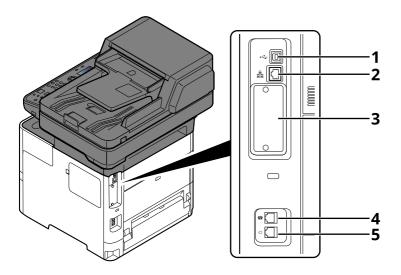


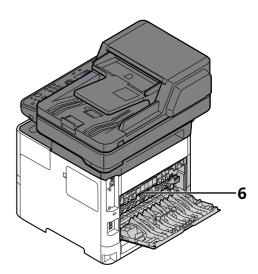

- 1 USB Interface Connector
- 2 Network Interface Connector
- 3 Option Interface Slot
- 4 TEL Connector
- 5 LINE Connector
- 6 Fuser Cover

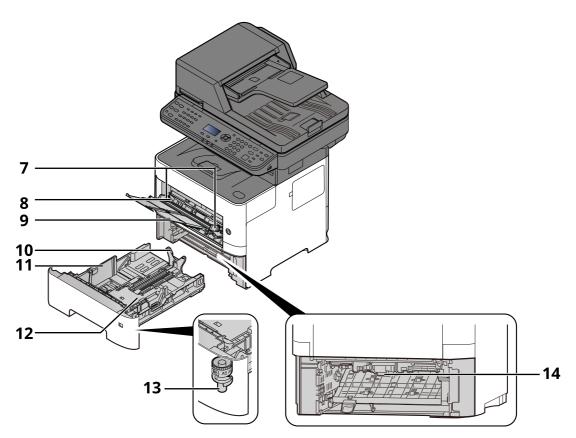


- 7 Paper Width Guides
- 8 Tray Extension
- 9 Multi Purpose Tray
- 10 Paper Length Guide
- 11 Paper Width Guides
- 12 Bottom Plate
- 13 Size Dial
- 14 Duplex Cover

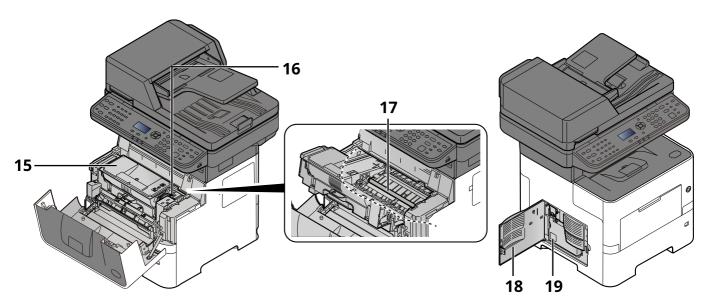

- 15 Toner Container
- 16 Toner Container Lock Lever
- 17 Registration Roller
- 18 Left Cover
- 19 Waste Toner Box

# **With Optional Equipments Attached**

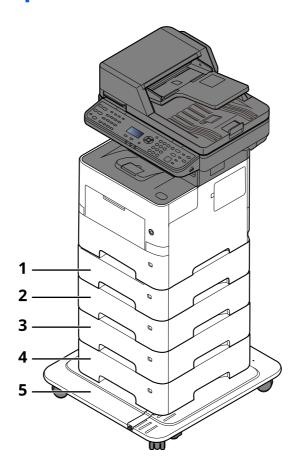


- 1 Cassette 2
- 2 Cassette 3
- 3 Cassette 4
- 4 Cassette 5
- 5 CA-3100
- Optional Equipment (page 11-2)


# **Connecting the Machine and Other Devices**

Prepare the cables necessary to suit the environment and purpose of the machine use.

#### When Connecting the Machine to the PC via USB

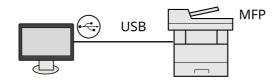

When Connecting the Machine to the PC or Tablet by network cable, Wi-Fi, or Wi-Fi direct

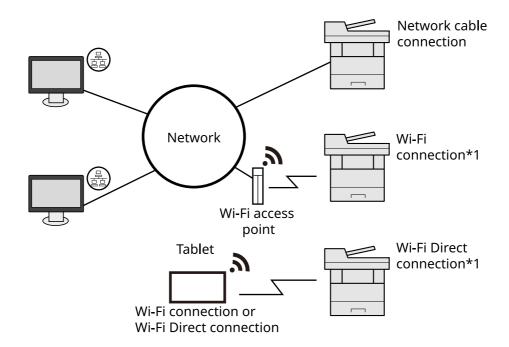

<sup>\*1</sup> Only for models with the optional Wireless Network Interface Kit (IB-37/IB-38).



If you are using wireless LAN, refer to the following.

→ Configuring the Wireless Network (page 2-20)

#### **Cables that Can Be Used**

Connection Environment	Function	Necessary Cable
Connect a LAN cable to the machine.	Printer/Scanner/Network FAX	LAN cable (10BASE-T, 100BASE-TX, 1000BASE-T)
Connect a USB cable to the machine.	Printer/Scanner (TWAIN/WIA)	USB 2.0 compatible cable (Hi-Speed USB compliant, max. 5.0 m , shielded)



Using a cable other than a USB 2.0 compatible cable may cause failure.

# **Connecting Cables**

# **Connecting LAN Cable**


**IMPORTANT** 

If the power is on, turn the power switch off.

→ Power Off (page 2-11)

### 1 Connect the cable to the machine.

1 Connect the LAN cable to the network interface connector.

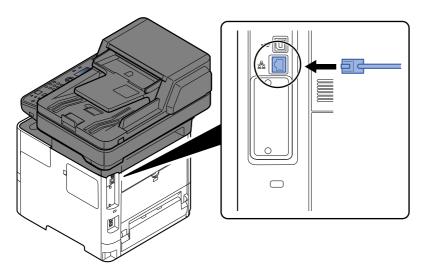

**2** Connect the other end of the cable to the hub.

### **7** Power on the machine and configure the network.

→ Network Setup (page 2-18)

# **Connecting USB Cable**


**⊘** IMPORTANT

If the power is on, turn the power switch off.

→ Power Off (page 2-11)

### Connect the cable to the machine.

1 Connect the USB cable to the USB interface connector located on the left side of the body.

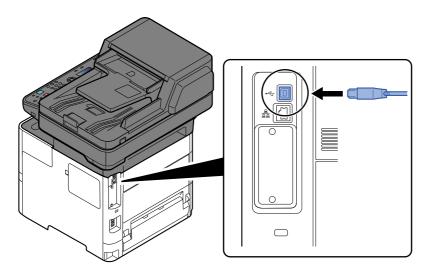


2 Connect the other end of the cable to the PC.

### Power on the machine.

# **Connecting the Power Cable**

### 1 Connect the cable to the machine.

Connect one end of the supplied power cable to the machine and the other end to a power outlet.

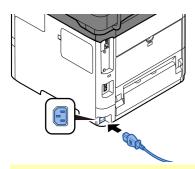


**IMPORTANT** 

Only use the power cable that comes with the machine.

### Power On/Off

### **Power On**

Turn the power switch on.

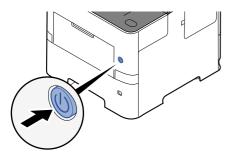


### **⊘** IMPORTANT

When turning off the power switch, do not turn on the power switch again immediately. Wait more than 5 seconds, and then turn on the power switch.

### **Power Off**

Turn the power switch off.

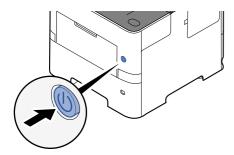

The confirmation message for power supply off is displayed.

→ Show PowerOffMsg (page 8-41)

It takes approximately 3 minutes for power off.



### **CAUTION**


If this machine will be left unused for an extended period (e.g. overnight), turn it off at the main power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

### **✓** IMPORTANT

- If using the products equipped with the fax function, note that turning the machine off at the main power switch disables fax transmission and reception.
- Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

# **Using the Operation Panel**

# **Operation Panel Keys**

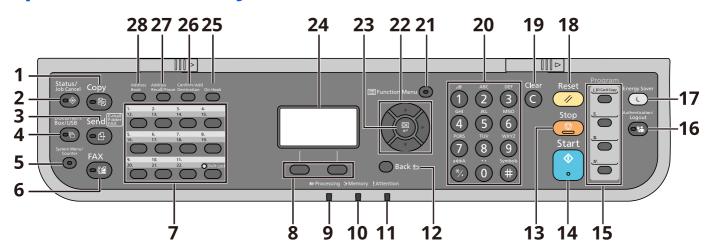


- 1 [Copy] key: Displays the Copy screen.
- 2 [Status/Job Cancel] key: Displays the Status/Job Cancel screen.
- 3 [Send] key: Displays the screen for sending. You can change it to display the Address Book screen.
- 4 [Document Box] key: Displays the Document Box/USB screen.
- 5 [System Menu/Counter] key: Displays the System Menu/Counter screen.
- 6 [FAX] key: Displays the FAX screen. (Only on products with the fax function installed.)
- 7 Recalls the destination registered for One Touch Key.
- 8 **Select Key**: Selects the menu displayed at the bottom of the message display.
- 9 **Processing**: Blinks while printing or sending/receiving.
- 10 **Memory**: Blinks while the machine is accessing the machine memory, fax memory or USB drive (general purpose item).
- 11 Attention: Lights or blinks when an error occurs and a job is stopped.
- 12 [Back] key: Returns to the previous display.
- 13 [Stop] key: Cancels or pauses the job in progress.
- 14 [Start] key: Starts copying and scanning operations and processing for setting operations.
- 15 Used to register or recall programs.
- 16 [Authentication/Logout] key: Authenticates user switching, and exits the operation for the current user (i.e. log out).
- 17 [Energy Saver] key: Puts the machine into Sleep Mode. Recovers from Sleep if in Sleep Mode.
- 18 [Reset] key: Returns settings to their default states.
- 19 [Clear] key: Clears entered numbers and characters.
- 20 Numeric keys: Enter numbers and symbols.
- 21 **[Function Menu]** key: Displays the function menu screen.
- 22 Increments or decrements numbers, or selects menu in the message display. In addition, moves the cursor when entering the characters.
- 23 [OK] key: Finalizes a function or menu, and numbers that have been entered.
- 24 Message display: Displays the setting menu, machine status, and error messages.
- 25 [On Hook] key: Switches between on-hook and off-hook when manually sending a FAX.
- 26 [Confirm/Add Destination] key: Confirms the destination or adds a destination.
- 27 [Address Recall/Pause] key: Calls the previous destination. Also used to enter a pause when entering a FAX number.
- 28 [Address Book] key: Displays the Address Book screen.

### **Operation Method**

This section explains how to operate the setting menus on the message display.


### **Displaying the Menus and Configuring Settings**

Select the [**System Menu/Counter**] key or [**Function Menu**] key to display the setting menus. Select the  $[\blacktriangle]$  key,  $[\blacktriangledown]$  key,  $[\blacktriangle]$  key,  $[\blacktriangle]$  key,  $[\blacktriangle]$  key,  $[\blacktriangle]$  key,  $[\blacktriangle]$  key, or [**Back**] key to select a menu, and perform settings.

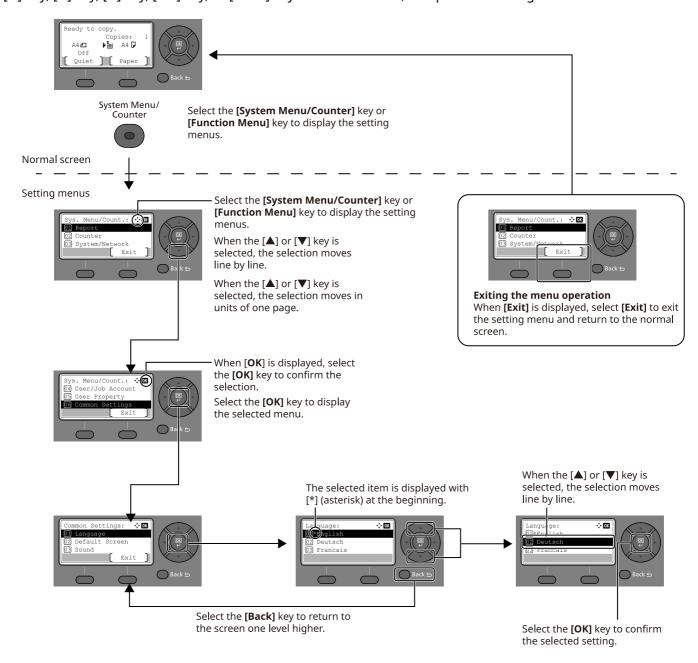

# **Display for Originals and Paper**

The copy screen displays the selected paper source.

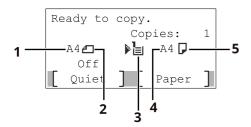

- 1 Original size
- 2 Original orientation
- 3 Paper source
- 4 Paper size
- 5 Paper orientation

### **Help Screen**

If you have difficulty operating the machine, you can check how to operate it using the operation panel.

When [**Help**] is displayed on the message display, select [**Help**] to display the Help screen. The Help screen shows machine operation.



Select the  $[\P]$  key to display the next step or select the  $[\P]$  key to display the previous step. Select the  $[\P]$  key to exit the Help screen.

# Login/Logout

If you are setting a function that requires administrator rights, or if user login administration is enabled, you must enter your login user name and login password.

### Login

### 1 Enter the login user name.

1 If the login screen is displayed during operations, select "Login User Name" and select the [OK] key.



- If [Netwk Authentic.] is selected as the user authentication method, [Menu] is displayed. Select [Menu] and select [Login Type] and then it is possible to select the authentication destination as [Local Authentic.] or [Netwk Authentic.].
- Select [Menu] and select [Domain] and then it is possible to select from the domains registered.
- 2 Enter the login user name using the numeric keys and select the [OK] key.

### NOTE

If Login Operation is [**Select Character**], then the screen is displayed to enter details by selecting from the characters on the message display.


- **▶** Login Operation (page 8-39)
- ◆ Character Entry Method (page 11-9)

### 2 Enter the login password.

- 1 Select "Login Password" and select the [OK] key.
- **2** Enter the login password and select the **[OK]** key.
  - → Character Entry Method (page 11-9)

### Select [Login].

# Logout

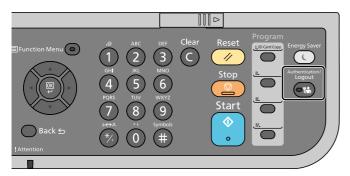

To logout from the machine, select the [**Authentication/Logout**] key to return to the login user name/ login password entry screen.

Users are automatically logged out in the following circumstances:

- · When the machine enters the sleep state.
- When the auto panel reset function is activated.

# **Default Settings of the Machine**

Before using this machine, configure such settings as date and time, network configuration, and energy saving functions as needed.

### **NOTE**

The default settings of the machine can be changed in System Menu. For settings that are configurable from System Menu, refer to the following:

➤ Setup and Registration (System Menu) (page 8-1)

### **Setting Date and Time**

Follow the steps below to set the local date and time at the place of installation.

When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message. Set the date, time and time difference from GMT of the region where the machine is used.

### **NOTE**

- Be sure to set the time difference before setting the date and time.
- The correct time can be periodically set by obtaining the time from the network time server.
- Command Center RX User Guide

### Display the screen.

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key > [▲] [▼] key > [Date Setting] > [OK] key

### Configure the settings.

[▲] [▼] key > [Time Zone] > [OK] key > Select the time zone > [OK] key > [▲] [▼] key > [Date/Time] > [OK] key > Set the date/time > [OK] key > [▲] [▼] key > [Date Format] > [**OK**] key > Select the Date Format > [**OK**] key

Item	Description
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
Date/Time	Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header.
	Value: Year (2000 to 2037), Month (01 to 12), Day (01 to 31), Hour (00 to 23), Min. (00 to 59), Second (00 to 59)
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation.  Value: Month/Day/Year, Day/Month/Year, Year/Month/Day



Select the [▲] or [▼] key to enter a number.

Select the [◄] or [▶] key to move the position being entered, which is shown highlighted.

# **Network Setup**

### **Configuring the Wired Network**

The machine is equipped with network interface, which is compatible with network protocols such as TCP/IP (IPv4), TCP/IP (IPv6), NetBEUI, and IPSec. It enables network printing on the Windows, Macintosh, UNIX and other platforms.

Set up TCP/IP (IPv4) to connect to the Windows network.

The configuration methods are as follows

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Wired Network Settings or Optional Network to configure the network in details from System menu.	Wired Netwk. Set (page 8-13) Optional Network (page 8-19)
Configuring Connections on the Web Page	For the equipped network interface, the connection can be set by using Command Center RX. For the optional IB-50, the connection can be set by using the dedicated Web page.	Command Center RX User Guide IB-50 Operation Guide
Setting the Connection by Using the Setup Utility of IB-50	This is the setup tool included in the CD of IB-50. You can use it on Windows.	IB-50 Operation Guide



#### **NOTE**

When you want to switch to the network interface other than Wired (default) after installing an optional Network Interface Kit (IB-50) and a Wireless Network Interface Kit (IB-37/IB-38/IB-51), select the desired setting on "Primary Network (Client)".

Primary Network (page 8-21)

Be sure to connect the network cable before configuring the settings.

**▶** Connecting LAN Cable (page 2-9)

For other network settings, refer to the following:

→ Network Setting (page 8-8)

#### IPv4 setting



#### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

### Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network]Setting] > [OK] key > [▲] [▼] key > [Wired Netwk. Set] > [OK] key > [▲] [▼] key > [TCP/IP Settings] > [OK] key > [▲] [▼] key > [IPv4 Setting] > [OK] key

### Configure the settings.

#### When using DHCP server

· [DHCP]: On

#### When setting the static IP address

- · [DHCP]: Off
- [Auto-IP]: Off
- [**IP Address**]: Enter the address.
- [Subnet Mask]: Enter the subnet mask in decimal representation (0 to 255).
- [Default Gateway]: Enter the address.

#### When using the Auto-IP

Enter "0.0.0.0" in [IP Address].

#### When setting the DNS server

In the following cases, set the IP address of DNS (Domain Name System) server.

- When using the host name with "DHCP" setting set to "Off".
- When using the DNS server with IP address that is not assigned by DHCP automatically.

Select [Auto (DHCP)] or [Manual]. When [Manual] is selected, enter [Primary Server] and [Secondary Server].



#### **IMPORTANT**

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

→ Restart Network (page 8-18)



Ask your network administrator for the IP address in advance, and have it ready when you configure this setting.

### **Configuring the Wireless Network**

When the Wireless Network Interface Kit (IB-37/IB-38/IB-51) is installed on the machine and the connection settings are configured, it is possible to print or send in a wireless network (wireless LAN) environment. The configuration methods are as follows:

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Wi-Fi Settings to configure the network in details from System menu.	Wi-Fi Settings (page 8-9)
Setting the Connection by Using the Wi-Fi Setup Tool	This is a tool that can be downloaded from our website. You can configure the connection according to the instructions provided by the wizard.	Wired Connection with LAN Cable Using Wi-Fi Setup Tool (page 2-20)
Configuring Connections on the Web Page	For the IB-37/IB-38, the connection can be set from the Command Center RX.	Command Center RX User Guide
	For the IB-51, the connection can be set on the dedicated Web page.	IB-51 Operation Guide
Setting the Connection by Using the Setup Utility of IB-51	This is the setup tool included in the CD of IB-51. You can use it on both Windows and Mac OS.	IB-51 Operation Guide



#### **NOTE**

When you want to switch to the network interface other than Wired (default) after installing an optional Network Interface Kit (IB-50) and a Wireless Network Interface Kit (IB-37/IB-38/IB-51), select the desired setting on "Primary Network (Client)".

Primary Network (page 8-21)

### Wired Connection with LAN Cable Using Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or handheld device with the machine locally. To use a wired LAN cable directly connected to the machine, the Auto-IP (Linklocal) address will be assigned to the machine and the computer. This machine applies Auto-IP as the default settings.



#### **NOTE**

Configure the settings on the operation panel if your computer supports WPS.

→ Wi-Fi Settings (page 8-9)

#### **Wired Connection by Using LAN Cable**

#### Connect the machine with a computer.

- 1 Connect the machine with a computer via LAN cable when the machine is powered on.
- 2 Turn on the computer.
  IP addresses (link local addresses) of the machine and computer are generated automatically.

### **2** Launch the Wi-Fi Setup Tool.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/" to the browser's address bar or location bar.




3 Enter and search the product name, and select this product from the candidate list.



**4** Change the selected operating system and its language setting as needed.

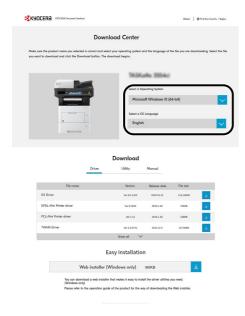

5 Utility tab > "Wi-Fi Setup Tool" The Wi-Fi Setup Tool will be downloaded.

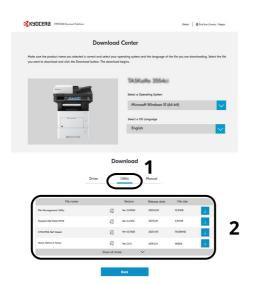

6 Double-click the downloaded installer to launch.



- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click [Yes] ([Allow]).

### **?** Configure the settings.

- 1 [Do not use automatic configuration] > [Next] > [Next]
- 2 [Use LAN cable] > [Next] > [Next]
- 3 [Easy setup] > [Next]

The machine is detected.



- Only one machine can be searched using Wi-Fi Setup Tool. It may take times to search the machine.
- If the machine is not detected, select [**Advanced setup**] > [**Next**]. Select [**Express**] or [**Custom**] as device discovery method and specify the IP address or host name to search the machine.
- 4 Select the machine > [Next]
- 5 Select [**Use the device settings.**] on [**Authentication mode**], and enter the login user name and password.

Enter the Admin login user name and login password to login.

- **6** Configure the communication settings > [**Next**]
- 7 Change the settings of access point as necessary > [Next]
  The network is configured.

#### Wireless LAN Connection by Using Wi-Fi Direct

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or handheld device with the machine locally.

To use Wi-Fi Direct, confirm that the Wi-Fi Direct is enabled (Wi-Fi Direct is set to [**On**]) and Restart Network from the operation panel, before your computer will be connected to this machine with Wi-Fi Direct.

NOTE

Configure the settings on the operation panel if your computer supports WPS.

→ Wi-Fi Settings (page 8-9)

Wired Netwk. Set (page 8-13)

### Display the screen.

[System Menu/Counter] key >[ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [System/Network] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Wi-Fi Direct] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Wi-Fi Direct] > [OK] key

Configure the settings.

[▲] [▼] key > [On] > [OK] key

Restart the network.

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Network Setting] > [OK] key > [▲] [▼] key > [Restart Network] > [OK] key > [Yes]


- **1** Connect a computer or a handheld device with the machine.
  - → Setting Wi-Fi Direct (page 2-26)
- 5 Launch the Wi-Fi Setup Tool.
  - 1 Launch a web browser.
  - 2 Enter "https://kyocera.info/" to the browser's address bar or location bar.




3 Enter and search the product name, and select this product from the candidate list.



**4** Change the selected operating system and its language setting as needed.

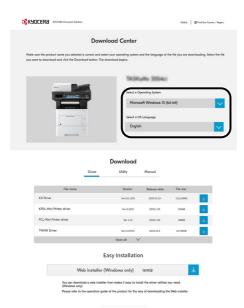

5 Utility tab > "Wi-Fi Setup Tool" 
The Wi-Fi Setup Tool will be downloaded.

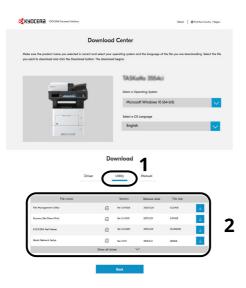

**6** Double-click the downloaded installer to launch.

## NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click [Yes] ([Allow]).

### **6** Configure the settings.

- 1 [Do not use automatic configuration] > [Next] > [Next]
- 2 [Wi-Fi Direct] > [Next] > [Next]
- 3 [Advanced setup] > [Next]

Select [**Express**] or [**Custom**] as device discovery method and specify the IP address or host name to search the machine.

- 4 Select the machine > [Next]
- 5 Select [**Use the device settings.**] on [**Authentication mode**], and enter the login user name and password.

Enter the Admin login user name and login password to login.

- **6** Configure the communication settings > [**Next**]
- 7 Change the settings of access point as necessary > [Next]
  The network is configured.

## **Setting Wi-Fi Direct**

When the wireless network function is available on the machine, setting Wi-Fi Direct enables you to print from the Wi-Fi Direct environment. The configuration methods are as follows:

### Configuring the Connection from the Operation Panel on This Machine

Connecting to Computers or Handheld Devices that Support Wi-Fi Direct

**1** Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Wi-Fi Direct Set] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Wi-Fi Direct] > [OK] key

Configure the settings.

[▲] [▼] key > [On] > [OK] key

**?** Restart the network.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Restart Network] > [OK] key > [Yes]

**1** Specify the machine name from the computer or handheld device.

If a confirmation message appears on the operation panel of the machine, select [Yes].

The network between this machine and the handheld device is configured.

### **Connecting to Computers or Handheld Devices Unsupported Wi-Fi Direct**

Here, we'll explain the procedures for connecting to iOS handheld devices.

1 Display the screen.

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Network Setting] > [OK] key > [▲] [▼] key > [Wi-Fi Direct Set] > [OK] key > [▲] [▼] key > [Wi-Fi Direct] > [OK] key

Configure the settings.

[▲] [▼] key > [On] > [OK] key

**Restart the network.** 

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Restart Network] > [OK] key > [Yes]

- [Status/Job Cancel] Key > [▲] [▼] key > [Wi-Fi Direct] > [OK] key > [▲] [▼] key > [Detail Info] > [OK] key
- 5 Note the network name (SSID), IP address, and password.
- 6 Configure the handheld device.
  - 1 [Settings] > [Wi-Fi]
  - 2 Select the network name (SSID) appeared in step 5 from the list.

3 Enter the password that was provided in step 5 > [Connect]
The network between this machine and the handheld device is configured.

### **Configuring the Connection by Using Push Button**

When your computer or handheld device does not support Wi-Fi Direct but supports WPS, you can configure the network using push button.

Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Wi-Fi Direct] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Wi-Fi Direct] > [OK] key

Configure the settings.

[▲] [▼] key > [On] > [OK] key

Restart the network.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Restart Network] > [OK] key > [Yes]

- [Status/Job Cancel] Key > [♠] [▼] key > [Wi-Fi Direct] > [OK] key > [♠] [▼] key > [PushButton Setup] > [OK] key
- Press the push button on the computer or handheld device and select [Push Button] on the screen of operation panel simultaneously > [Next].

The network between this machine and the computer or handheld device is configured.

## **⊘** IMPORTANT

You can connect up to 10 handheld devices at the same time using Wi-Fi Direct setting. When the devices that support Wi-Fi Direct are connected, if you want to connect other device, disconnect the already-connected devices from the network. The disconnection methods are as follows:

- Disconnect the network from the computer or handheld computer
- Disconnecting all devices from the network on the operation panel
   [Status/Job Cancel] Key > [▲] [▼] key > [Wi-Fi Direct] > [OK] key > [▲] [▼] key > [ConnectionStatus] >
   [OK] key > [Menu] > [▲] [▼] key > [Disconnect All] > [OK] key
- Configuring auto disconnecting time from the System menu
- → Wi-Fi Direct Set (page 8-8)
- Configuring auto disconnecting time from the Command Center RX
- Command Center RX User Guide

## **Energy Saver function**

If a certain period of time elapses after the machine is last used, the machine automatically enters sleep mode, which minimizes power consumption. If the machine is not used while in sleep mode, the power automatically turns off.

### **Low Power Mode**

If the machine is not operated for a certain period of time, the energy saver indicator will light up and the screen will become dark to reduce power consumption. This status is referred to as Low Power Mode.

"Low power." will be displayed on the screen.

The amount of time before entering Low Power Mode: 1 minutes (default setting).

If print data is received during Low Power Mode, the machine automatically wakes up and starts printing. Also when fax data arrives while the machine is in Low Power Mode, the machine automatically wakes up and starts printing.

To resume, perform one of the following actions.

- Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.

Recovery time from Low Power Mode is as follows.

10 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.




### **NOTE**

If the Low Power Timer is equal to the Sleep Timer, a Sleep mode is preceded.

## Sleep

To enter Sleep, select the [Energy Saver] key. Message display and all indicators on the operation panel will go out to save a maximum amount of power except the Energy Saver indicator. This status is referred to as Sleep.

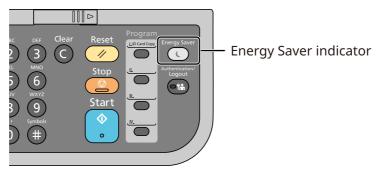

If print data is received during Sleep, the machine automatically wakes up and starts printing.

Also when fax data arrives while the machine is in Sleep, the machine automatically wakes up and starts printing.

To resume, perform the following actions.

• Select any key on the operation panel.

The machine will be ready to operate within 16 seconds.

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

## **Auto Sleep**

Auto Sleep automatically switches the machine into Sleep if left idle for a preset time.

The default preset time is 1 minute.

To change the preset sleep time, refer to the following:

→ Sleep Timer (page 8-35)

## **Sleep Rules (models for Europe)**

You can set whether sleep mode operates for each function. When the machine enters sleep mode, the ID card cannot be recognized.

For more information on Sleep Rules settings, refer to the following:

→ Sleep Rules (models for Europe) (page 8-35)

# Sleep Level (Energy Saver and Quick Recovery) (models except for Europe)

For sleep level, you can toggle between the following two modes: Energy Saver mode and Quick Recovery mode. The default setting is Energy Saver mode.

Energy Saver mode reduces power consumption even more than Quick Recovery mode, and allows Sleep Mode to be set separately for each function. The ID card cannot be recognized.



If the optional Network Interface Kit is installed, this function will not be displayed.

To resume, select the [**Energy Saver**] key on the operation panel. If print data is received during Sleep, the machine automatically wakes up and starts printing.

For more information on Sleep Level settings, refer to the following:

Sleep Level (models except for Europe) (page 8-35)

## **Weekly Timer Settings**

Set the machine to automatically sleep and wake up at times specified for each day.

For more information on Weekly Timer Settings, refer to the following:

**▶** Letterhead (page 8-33)

## **Power Off Rule (models for Europe)**

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Rule is used to stop the power from automatically turning off.

The default preset time is 3 days.

For more information on Power Off Rule settings, refer to the following:

→ Power Off Rule (models for Europe) (page 8-36)

## **Installing Software**

To use printer function, TWAIN/WIA connection, or network fax function, download and install prerequisite softwares from our website (https://kyocera.info/).

## **Published Software (Windows)**

Software	Description	Recommended software
KX DRIVER	This driver enables files on a computer to be printed by the machine. Multiple page description languages (PCL XL, KPDL, etc.) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine.  Use this driver to create PDF files.	0
KPDL mini-driver/PCL mini-driver	This is a Microsoft MiniDriver that supports PCL and KPDL. There are some restrictions on the machine features and option features that can be used with this driver.	-
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	-
Kyocera TWAIN Driver	This driver enables scanning on the machine using a TWAIN-compliant software application.	0
Kyocera WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	-
KYOCERA Net Viewer	This is a utility that enables monitoring of the machine on the network.	-
Status Monitor	This is a utility that monitors the printer status and provides an ongoing reporting function.	0
KYOCERA Net Direct Print	This makes it possible to print a PDF file without starting Adobe Acrobat/Reader.	-
FONTS	These are display fonts that enable the machine's built-in fonts to be used in a software application.	0
Wi-Fi Setup Tool	This is a tool for wireless network (wireless LAN) configuration of this machine.	-
Scan to Folder Setup Tool for SMB	This is a tool to create a shared folder in personal computers and set the shared folder as a destination.	-

## NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- The optional FAX Kit is required in order to make use of fax functionality.

## **Installing Software in Windows**

## Downloading and installing from the website

Download and install a software from our website.

### 1 Download a software from the website.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/" to the browser's address bar or location bar.




**3** Enter and search the product name, and select this product from the candidate list.



4 Change the selected operating system and its language setting as needed.

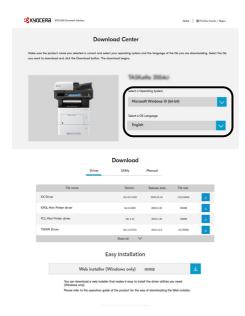

5 Click Driver tab or Utility tab > Click of the software you want to download An installer of the selected software will be downloaded.

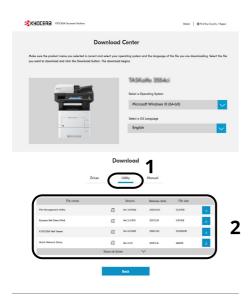

## **2** Double-click the downloaded installer to launch.

Follow the guidance on the screen to install the software.

- **NOTE**
- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click [Yes] ([Allow]).

### Using the web installer

Install a software by using a web installer downloaded from our website.

### **1** Download a software from the website.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/" to the browser's address bar or location bar.




3 Enter and search the product name, and select this product from the candidate list.



4 Change the selected operating system and its language setting as needed.

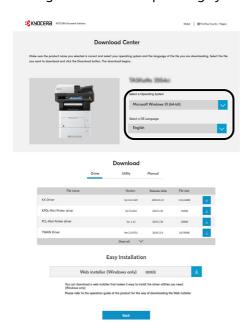

5 Click "Web installer" A web installer will be downloaded.

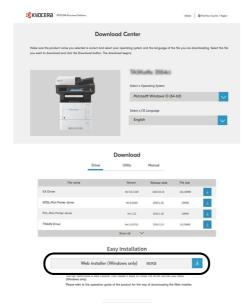

## **2** Double-click the downloaded installer to launch.


- **NOTE**
- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click [Yes] ([Allow]).

## **3** Display the screen.



- 1 Read the license agreement.
- 2 Click [Accept] if there is no problem.

## 4 Click [Install].

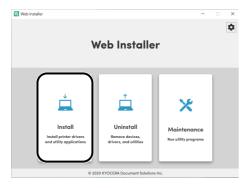

### Select a model and click [Next].



### **NOTE**


- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable.
- If a desired device is not displayed, select [**Add custom device**] to directly select the device you want to use.

### Install the softwares.

1 Select softwares you want to install.



Softwares recommended to install have  $\checkmark$  in their checkboxes by default. Configure them as needed.

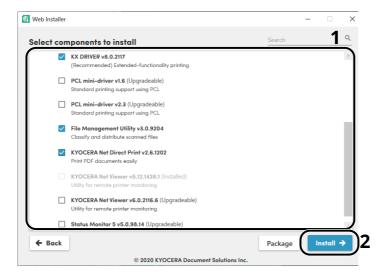


### 2 Click [Install].


When [Install] is clicked, a screen which asks for cooperation for data collection may appear. Select one of the answer choices and click [OK].



- If the Windows security window appears, click [Install this driver software anyway].
- To install Status Monitor for Windows 8.1, it is necessary to install Microsoft.NET Framework 4.0 beforehand.

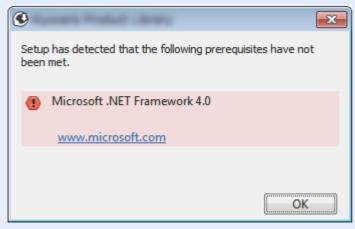

### **7** Finish the installation.

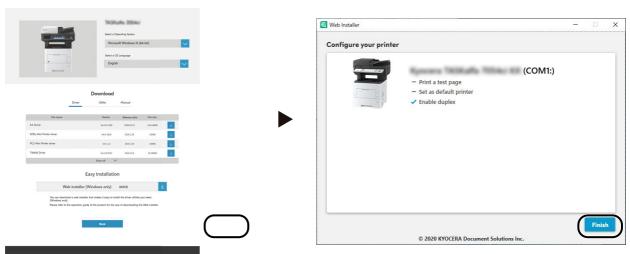

Click [Next] > [Finish] to finish the installation wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

## **Uninstalling the Software**

Perform the following procedure to delete the Software from your computer.



Uninstallation on Windows must be done by a user logged on with administrator privileges.

### Display the screen.


Click the search box in the taskbar, and type "Uninstall Kyocera Product Library" in there. Select [**Uninstall Kyocera Product Library**] in the search list. The Software Uninstall Wizard is displayed.

NOTE

In Windows 8.1, click [**Search**] in charms, and enter "Uninstall Kyocera Product Library" in the search box. Select [**Uninstall Kyocera Product Library**] in the search list.

### Uninstall the software.

Place a check in the check box of the software to be deleted.

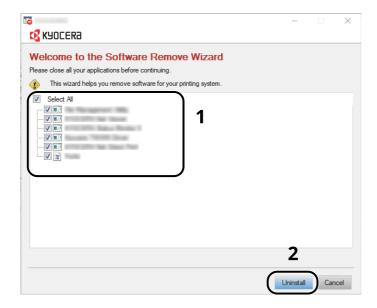

### 3 Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.

**NOTE** 

The software can also be uninstalled using Web Installer. In the screen of Web Installer, click [**Uninstall**], and follow the on-screen instructions to uninstall the software.

## **Installing Software in Mac Computer**

The machine's printer functionality can be used by a Mac computer.

### **NOTE**

- Installation on Mac OS must be done by a user logged on with administrator privileges.
- When printing from a Macintosh computer, set the machine's emulation to [KPDL] or [KPDL(Auto)].
- → Printer (page 8-44)
- If connecting by Bonjour, enable Bonjour in the machine's network settings.
- **▶** Bonjour (page 8-13)
- In the Authenticate screen, enter the name and password used to log in to the operating system.
- When printing via AirPrint, you do not have to install the software.

### 1 Download a software from the website.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/" into the address bar.



**3** Enter and search the product name, and select this product from the candidate list.



**4** Change the selected operating system and its language setting as needed.

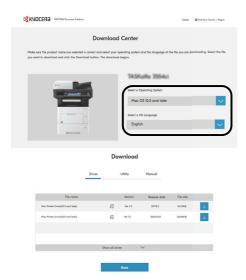


5 Driver tab > Click "Mac Printer Driver(x.x and later)"

An installer of the selected software will be downloaded.



### 2 Install the Printer Driver.

Double click to launch the downloaded installer.

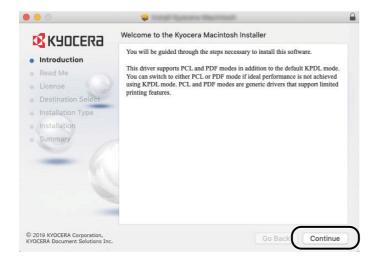

Install the printer driver as directed by the instructions in the installation software.


This completes the printer driver installation.

If a USB connection is used, the machine is automatically recognized and connected. If an IP connection is used, the settings below are required.


### 3 Configure the printer.

1 Open System Preferences and add the printer.




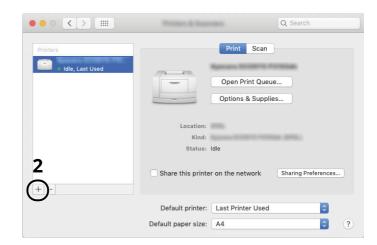

2 Select [Default] and click the item that appears in "Name" and then select the driver in "Use".

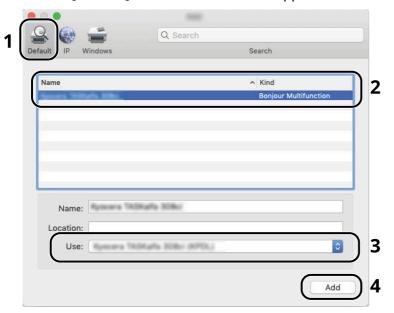

3 The selected machine is added.

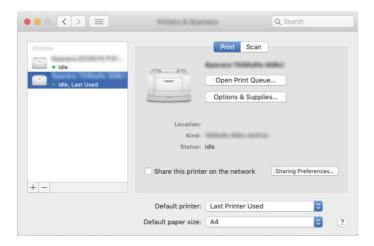


### **NOTE**

When using an IP connection, click the IP icon for an IP connection and then enter the host name or IP address. The number entered in "Address" will automatically appear in "Name". Change if needed.

4 Select the printer added newly, and click the [**Options & Supplies...**] to select the options equipped with the machine.



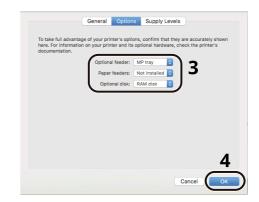

## **Setting TWAIN Driver**

Register this machine to the TWAIN Driver. Instructions are based on interface elements as they appear in Windows 10.


### Display the screen.

1 Click [Search] in charms, and enter "TWAIN Driver Setting" in the search box. Select [TWAIN Driver **Setting**] in the search list.




In Windows 8.1, Click [Search] in charms, and enter "TWAIN Driver Setting" in the search box. Select [TWAIN Driver Setting] in the search list.

2 Click [Add].

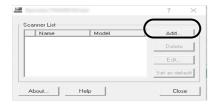

### **Configure TWAIN Driver.**

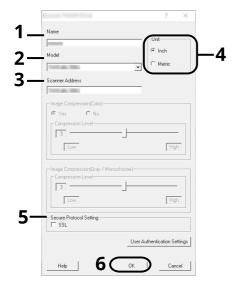


- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Enter the machine's IP address or host name.
- 4 Set units of measurement.
- 5 When using SSL, select the checkbox beside SSL.
- 6 Click [OK].



When the machine's IP address or host name is unknown, contact Administrator.

## **3** Finish registering.

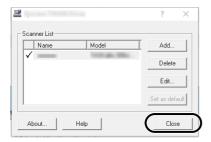



Click [**Delete**] to delete the added machine. Click [**Edit**] to change names.

## **Setting WIA Driver**

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 10.

### Display the screen.

1 Click Search box in taskbar, and enter "View scanners and cameras" in the search box. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.




### **NOTE**

In Windows 8.1, click [Search] in charms, and enter "View scanners and cameras" in the search box. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and click [**Properties**].



### **Configure WIA Driver.**

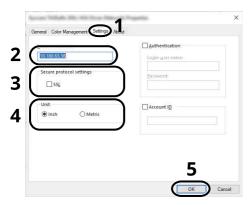

- 1 Click the [Settings] tab.
- 2 Enter the machine IP addresses or host name.
- 3 When using SSL, select the checkbox beside SSL.
- 4 Set units of measurement.
- 5 Click [OK].

## **Checking the Counter**

Check the number of sheets printed and scanned.

**1** Display the screen.

[System Menu/Counter] key > [▲] [▼] key > [Counter] > [OK] key

**2** Check the counter.

Select the item you want to check, and select the  $[\mathbf{OK}]$  key.

## **Additional Preparations for the Administrator**

In addition to the information provided in this chapter, the administrator of this machine should check the following, and configure the settings as needed.

## **Administrator Privileges Overview**

This machine is shipped with two default users registered one with Machine Administrator privileges, and another with Administrator privileges. The user with Machine Administrator privileges and the user with Administrator privileges can configure important settings for the machine. The differences in the privileges are as follows:

### **User with Machine Administrator privileges**

This user can configure the product's network settings, security settings such as user registration, and the machine's security level.

→ Security Level (page 8-22)

### **User with Administrator privileges**

This user can configure the product's network settings, user registration, and other security settings. This user cannot set the machine's security level.

## Log in as Machine Administrator or Administrator

The user with Machine Administrator privileges or the user with Administrator privileges must log in to configure important settings for the product, such as network settings and security settings. The factory default login user name and login password are set as shown below.

#### **Machine Administrator**

User Name	DeviceAdmin
User Name	DeviceAdmin
Login User Name	4500
Login Password	4500

#### **Administrator**

User Name	Admin	
User Name	Admin	
Login User Name	Admin	
Login Password	xxxxxxxxx (Serial Number)	
	★ Checking the Equipment's Serial Number (page i)	

### *⊘* IMPORTANT

To ensure security, be sure to change the factory default user name, login user name, and login password. Also, change your password regularly.

→ Changing User Properties (page 9-10)

## **Sending Documents to a PC**

### To Send to a Shared Folder (Send to Folder (SMB))

To send a document that has been loaded, you need to create a shared folder to receive the document on your computer.

▶ Preparation for Sending a Document to a Shared Folder in a PC (page 3-15)

### To E-mail Scanned Images (Send as E-mail)

You can send a scanned original image as an E-mail attachment.

**▶** E-mail Settings (page 2-53)

## Strengthening the Security

This machine is shipped with two default users registered one with Machine Administrator rights, and another with Administrator rights. Logging in as this user will allow you to configure all settings; therefore, please change the login user name and password.

In addition, this machine is equipped with user authentication function, which can be configured to limit the access to this machine to only those who have a registered login name and password.

→ <u>User Authentication and Accounting (User Login, Job Accounting) (page 9-1)</u>

I want to	Function	Reference page
Restrict the users of the machine.	User Login	page 9-2
	Auto Panel Reset	page 8-35
	ID Card Settings <sup>*1</sup>	page 9-22
Restrict the basic functions that can be used.	Local Authorization	page 9-16
	Group Authorization Set.	page 9-18
	Guest Authorization Set.	page 9-19
Prevent another user from handling the documents stored in the machine.	Custom Box*2	page 5-36
Output the document stored in the machine at the time when user operates the device via operation panel.	Remote Print	page 8-41
Prevent the data stored in the machine from	Data Overwrite*3	Refer to the <b>Data</b>
being leaked.	Encryption <sup>*3</sup>	Security Kit (E) Operation Guide.
	PDF Encryption Functions	page 6-29
Completely delete the data on the machine before disposing of the machine.	DataSanitization	<u>page 8-6</u>

<sup>\*1</sup> The optional Card Authentication Kit is required.

<sup>\*2</sup> The optional SSD is required.

<sup>\*3</sup> The optional Data Security Kit is required.

I want to	Function	Reference page
Protect the transmission from interception and wiretapping.	IPP over TLS	page 8-15
	HTTPS	page 8-15
	LDAP Security	Refer to the Command Center RX User Guide.
	SMTP Security	Refer to the Command Center RX User Guide.
	POP3 Security	Refer to the Command Center RX User Guide.
	FTP Encrypted TX	page 6-34
	Enhanced WSD (TLS)	page 8-13
	IPSec	page 8-13
	SNMPv3	page 8-14
Verify the software in the machine.	SW Verification	page 8-24
Preventing from execution of the unauthorized programs	Allowlisting	page 8-26

## **Command Center RX**

If the machine is connected to the network, you can configure various settings using Command Center RX. This section explains how to access Command Center RX, and how to change security settings and the host name.

#### Command Center RX User Guide



To fully access the features of the Command Center RX pages, enter the User Name and Password and click [**Login**]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu.

Settings that the administrator and general users can configure in Command Center RX are as follows.

Setting	Description	Administ -rator	General User
Device Information/ Remote Operation	The machine's structure can be checked.	0	0
Job Status	Displays all device information, including print and scan jobs, storing jobs, scheduled jobs, and job log history.	0	0
Document Box	Add or delete document boxes, or delete documents within a document box.	0	○ <sup>*1</sup>
Address Book	Create, edit, or delete addresses and address groups.	0	○*1
Device Settings	Configure the advanced settings of the machine.	0	-
Function Settings	Configure the advanced function settings.	0	-
Network Settings	Configure the network advanced settings.	0	-
Security Settings	Configure the security advanced settings.	0	-
Management Settings	Configure the advanced management settings.	0	-

<sup>\*1</sup> The logged in user may not be able to configure some settings, depending on the permissions of the user.

- **NOTE**
- FAX functions are available only on products with the fax function installed.
- Here, information on the FAX settings has been omitted.
- FAX Operation Guide

## **Accessing Command Center RX**

### **1** Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.

Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key > [A] [V] key > [Report] > [OK] key > [A] [V] key > [Report Print] > [OK] key > [A] [V] key > [Status Page] > [OK] key > [Yes]

Examples: https://10.180.81.3/ (for IP address)

https://MFP001 (if the host name is "MFP001")

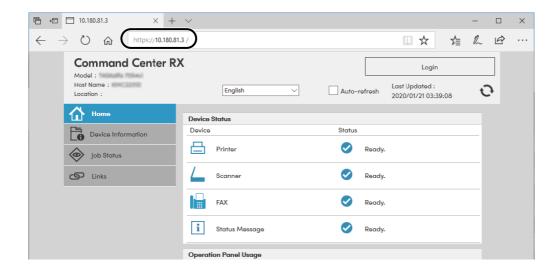

The web page displays basic information about the machine and Command Center RX as well as their current status.

### NOTE

If the screen "There is a problem with this website's security certificate." is displayed, configure the certificate.

### Command Center RX User Guide

You can also continue the operation without configuring the certificate.

### Configure the function.

Select a category from the navigation bar on the left of the screen.



To fully access the features of the Command Center RX pages, enter the User Name and Password and click [**Login**]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu.

## **Changing Security Settings**

### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  - Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Status Page] > [OK] key > [Yes]


3 Log in with administrator privileges.



4 Click [Security Settings].

### Configure the Security Settings.

From the [Security Settings] menu, select the setting you want to configure.

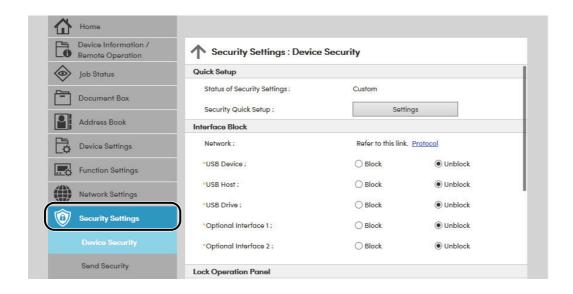

### NOTE

For details on settings related to certificates, refer to the following:

Command Center RX User Guide

## **Changing Device Information**

### **1** Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  - Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Status Page] > [OK] key > [Yes]

3 Log in with administrator privileges.




4 From the [Device Settings] menu, click [System].

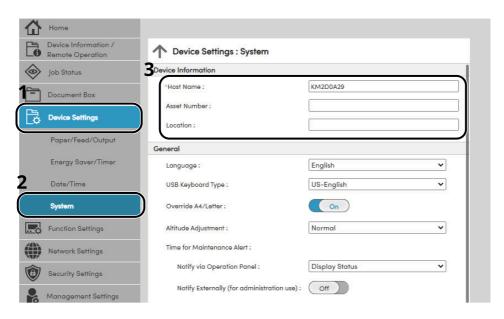

## 2 Specify the host name.

Enter the device information, and then click [Submit].

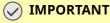

After changing the setting, restart the network or turn the machine OFF and then ON.

To restart the network interface card, click [Reset] in the [Management Settings] menu, and then click [Restart Network] in "Restart".

## **E-mail Settings**

By configuring the SMTP settings, it is possible to send the images scanned by the machine as E-mail attachments and to send E-mail notices when jobs have been completed.

To use this function, this machine must be connected to a mail server using the SMTP protocol.

In addition, configure the following.

- SMTP settings
  Item: "SMTP Protocol" and "SMTP Server Name" in "SMTP"
- The sender address when the machine sends E-mails Item: "Sender Address" in "E-mail Send Settings"
- The setting to limit the size of E-mails
   Item: "E-mail Size Limit" in "E-mail Send Settings"

The procedure for specifying the SMTP settings is explained below.

### 1 Display the screen.

Display the SMTP Protocol screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.


Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Status Page] > [OK] key > [Yes]

3 Log in with administrator privileges.




4 From the [Network Settings] menu, click [Protocol].

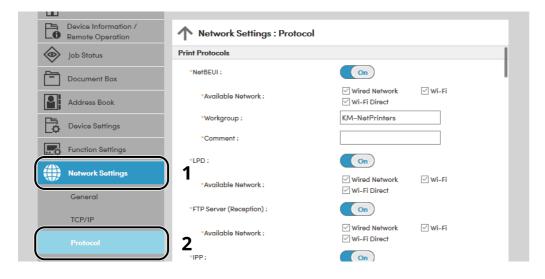

## Configure the settings.


Set "SMTP (E-mail TX)" to [On] in the "Send Protocols".

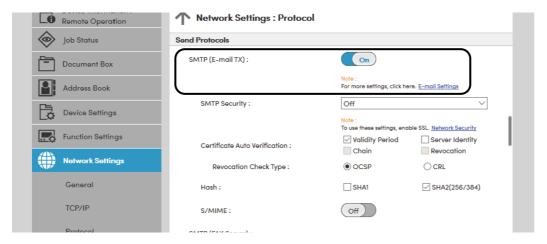

### 3 Display the screen.

Display the E-mail Settings screen.

From the [Function Settings] menu, click [E-mail].

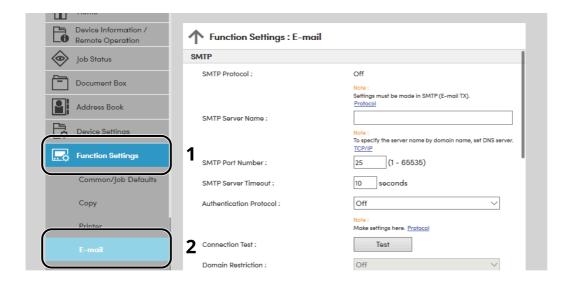

## **4** Configure the settings.

Enter "SMTP" and "E-mail Send Settings" items.

	Setting	Description	
SMTP		Set to send e-mail from the machine.	
	SMTP Protocol	Displays the SMTP protocol settings. Check that "SMTP Protocol" is set to [ <b>On</b> ]. If [ <b>Off</b> ] is set, click [ <b>Protocol</b> ] and set the SMTP protocol to [ <b>On</b> ].	
	SMTP Server Name <sup>*1</sup>	Enter the host name or IP address of the SMTP server.	
	SMTP Port Number	Specify the port number to be used for SMTP. The default port number is 25.	
	SMTP Server Timeout	Set the amount of time to wait before time-out in seconds.	
	Authentication Protocol	To use SMTP authentication, enter the user information for authentication.	
	Connection Test	Tests to confirm that the E-mail function is operating under the settings without sending a mail.	
	Domain Restriction	To restrict the domains, click the [ <b>Domain List</b> ] and enter the domain names of addresses to be allowed or rejected. Restriction can also be specified by e-mail address.	
РОР3	POP3 Protocol	You don't need to set the following items when you only enable the	
	Check Interval	function of sending e-mail from the machine. Set the following item you want to enable the function of receiving e-mail on the machine	
	Run once now	Command Center RX User Guide	
	Domain Restriction		
	POP3 User Settings		
E-mail Send Settings	E-mail Size Limit	Enter the maximum size of E-mail that can be sent in kilobytes. When E-mail size is greater than this value, an error message appears and E-mail sending is cancelled. Use this setting if you have set E-mail Size Limit for SMTP server. If not, enter a value of 0 (zero) to enable E-mail sending regardless of the size limit.	
	Sender Address*1	Specify the sender address for when the machine sends E-mails, such as the machine administrator, so that a reply or non-delivery report will go to a person rather than to the machine. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 128 characters.	
	Signature	Enter the signature. The signature is free form text that will appear at the end of the E-mail body. It is often used for further identification of the machine. The maximum length of the signature is 512 characters.	
	Function Defaults	Change the function default settings in [Common/Job Default Settings] page.	

<sup>\*1</sup> Be sure to enter the items.

## 5 Click [Submit].

## **Registering Destinations**

### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
- Click in the following order to check the machine's IP address and the host name.


[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Status Page] > [OK] key > [Yes]

3 Log in with administrator privileges.

The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)



4 From the [Address Book] menu, click [Machine Address Book].

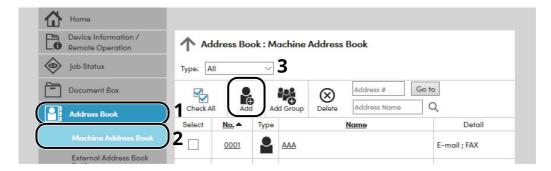

5 Click [Add].

### Populate the fields.

1 Enter the destination information.

Enter the information for the destination you want to register. The fields to populate are the same as when registering via operation panel.

- Registering Destinations in the Address Book (page 3-31)
- 2 Click [Submit].

## **Creating a New Custom Box**

NOTE


To use Custom Box, an optional SSD must be installed in the machine.

### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  - Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key > [A] [V] key > [Report] > [OK] key > [A] [V] key > [Report Print] > [OK] key > [A] [V] key > [Status Page] > [OK] key > [Yes]

3 From the [Document Box] menu, click [Custom Box].

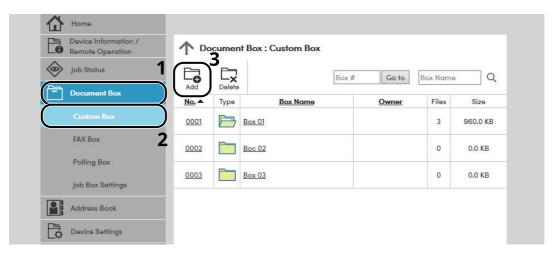

4 Click [Add].

### Configure the Custom Box.

1 Enter the box details.

Enter the information for the custom box you want to register. For details on the fields to populate, refer to the following:

- Command Center RX User Guide
- 2 Click [Submit].


## **Printing a document stored in a Custom Box**

### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  - Click in the following order to check the machine's IP address and the host name.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Status Page] > [OK] key > [Yes]


3 From the [Document Box] menu, click [Custom Box].

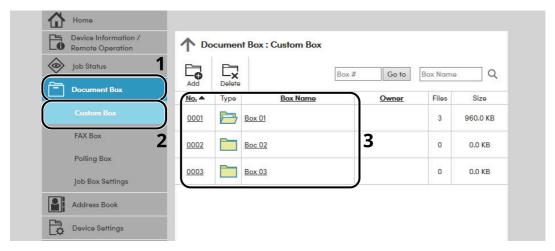

4 Click the number or name of the Custom Box in which the document is stored.

## 2 Print the document.

1 Select the document you wish to print.

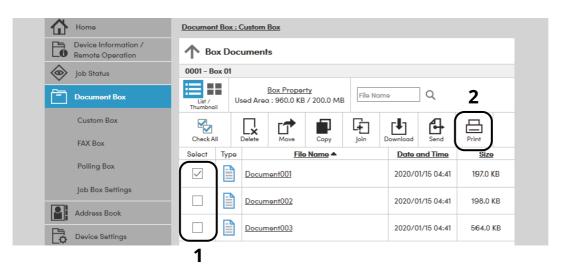

Select the checkbox of the document to be printed.

- 2 Click [Print].
- **3** Configure settings for printing, click [**Print**].

## **Transferring Data from Our Other Products**

By using the machine's utility, you can smoothly migrate address books when the machine is to be replaced. This section explains how to transfer data between our products.

## **Migrating the Address Book**


The Address Book registered on the machine can be backed up or migrated using the KYOCERA Net Viewer downloaded from our website.

For details on operating the KYOCERA Net Viewer, refer to the following:

KYOCERA Net Viewer User Guide

#### **Backing Up Address Book Data to PC**


- 1 Launch the KYOCERA Net Viewer.
- Create a backup.
  - 1 Right-click on the model name from which you want to back up the Address Book, and select [Advanced] [Set multiple devices].

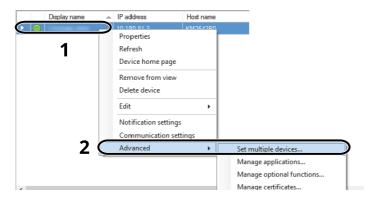


2 Select [Custom mode] and click [Next].




3 Select destination device group and click [Next].

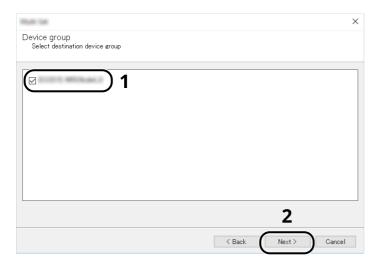


4 Select [Device Address Book] and click [Next].

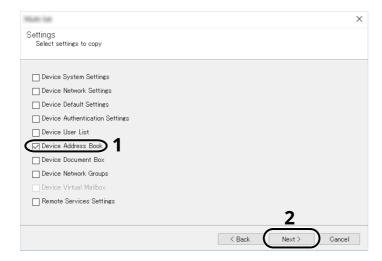

5 Select [Create from device] and remove the checkmark from [Overwrite settings on target device], and then click [Next].

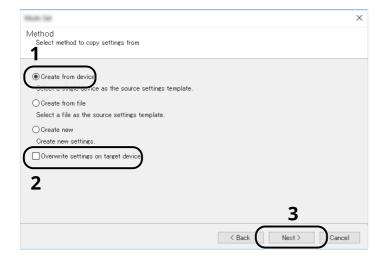


6 Select the model you want to back up, and click [Next].

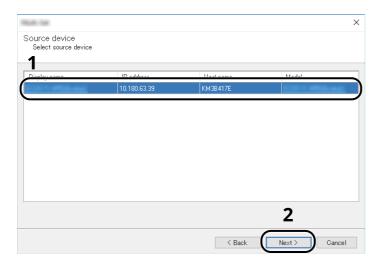

#### **NOTE**


If the "Admin Login" screen appears, enter the "Admin Login" and "Login Password", and then click [**OK**].

7 Click on [Save to file].

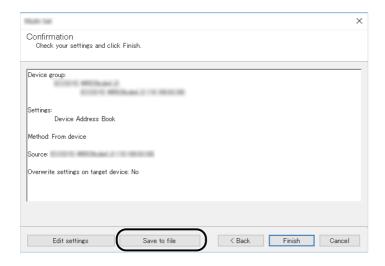

**8** Specify the location to save the file, enter the file name, and then click [**Save**]. For "Save as type", make sure to select "XML File".


**9** After saving the file, always click [**Cancel**] to close the screen.

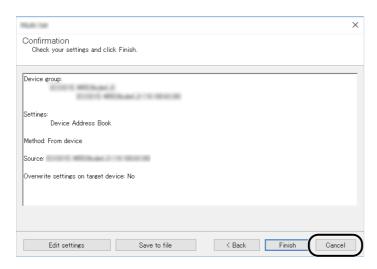

Please note that selecting [Finish] will write the data to the machine's Address Book.

#### Writing Address Book Data to the Machine


- **1** Launch the KYOCERA Net Viewer.
- Load the Address Book data.
  - 1 Right-click on the model name to which you want to transfer the Address Book, and select [**Advanced**] [**Set multiple devices**].

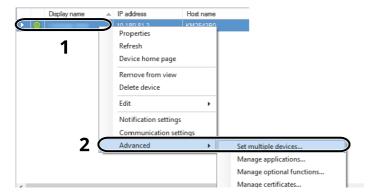

2 Select [Custom Mode] and click [Next].



3 Select destination device group and click [Next].

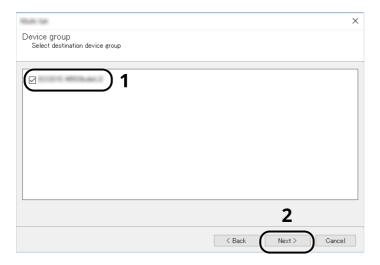

4 Select [Device Address Book] and click [Next].




5 Select [Create from file] and remove the checkmark from [Overwrite settings on target device], and then click [Next].




Selecting the [**Overwrite settings on target device**] checkbox will overwrite the machine's Address Book from entry No.1.

6 Click [Browse] and select the backup Address Book file, and then click [Next].

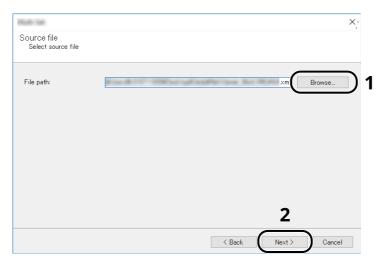

7 Click [Finish].

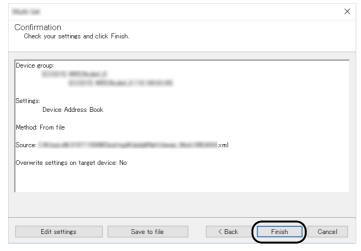

The write process of the Address Book data starts.

**8** Once the write process is complete, click [**Close**].

# 3 Preparation before Use


This chapter explains the following operations.

Loading Paper	3-2
Precaution for Loading Paper	3-3
Loading in the Cassettes	3-4
Loading Paper in the Multi Purpose Tray	
Specifying Paper Size and Media Type	3-12
Paper Stopper	3-14
Preparation for Sending a Document to a Shared Folder in a PC	
Making a Note of the Computer Name and Full Computer Name	3-15
Making a Note of the User Name and Domain Name	3-16
Creating a Shared Folder, Making a Note of a Shared Folder	3-17
Configuring Windows Firewall	3-21
Scan to Folder Setup Tool for SMB	3-26
Registering Destinations in the Address Book	3-31
Adding a Destination (Address Book)	3-31
Adding a Destination on One Touch Key (One Touch Key)	3-38

## **Loading Paper**

Load paper in the cassettes and multipurpose tray.

For the paper load methods for each cassette, refer to the page below.

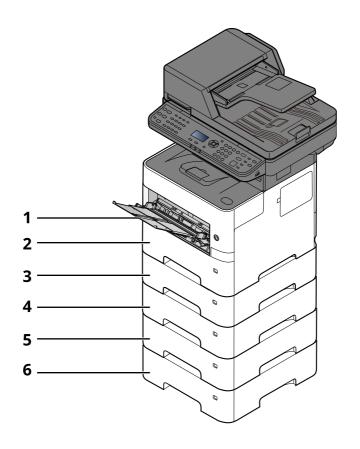


No.	Name	Page
1	Multi Purpose Tray	<u>page 3-8</u>
2	Cassette 1	page 3-4
3	Cassette 2	page 3-4
4	Cassette 3	page 3-4
5	Cassette 4	page 3-4
6	Cassette 5	page 3-4



- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)

## **Precaution for Loading Paper**

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

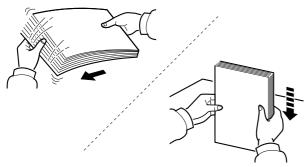

Fan the paper, then tap it on a level surface.

In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high temperatures and high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multi purpose tray or cassettes back in the paper storage bag.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.



#### **✓** IMPORTANT

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.



#### **NOTE**

If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to the following:

▶ Paper (page 11-14)

## **Loading in the Cassettes**

The cassettes can hold plain paper, recycled paper or color paper.

The number of sheets that can be loaded in each cassette is shown below.

Cassette	No. Sheets
Cassette 1 to 5	500 sheets (Plain paper: 80 g/m²)

For details of the supported paper sizes, refer to the following:

→ Choosing the Appropriate Paper (page 11-15)


For the paper type setting, refer to the following:

→ Media Type Setting (page 8-33)

#### **IMPORTANT**

- The cassettes can hold paper with weight between 60 120 g/m<sup>2</sup>.
- Do not load thick paper that is heavier than 120 g/m<sup>2</sup> in the cassettes. Use the multi purpose tray for paper that is heavier than 120 g/m<sup>2</sup>.

#### 1 Pull the cassette completely out of the machine.

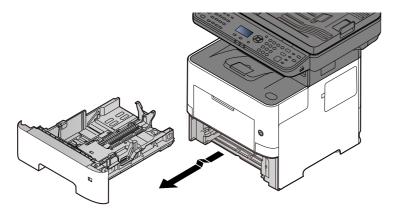


## NOTE

When pulling the cassette out of the machine, ensure it is supported and does not fall out.


### Adjust the cassette size.

1 Adjust the position of the paper width guides located on the left and right sides of the cassette. Press the paper width adjusting tab and slide the guides to the paper size required.

Paper sizes are marked on the cassette.

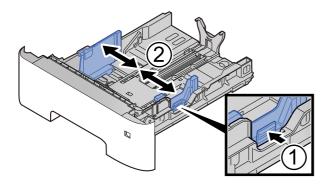


2 Adjust the paper length guide to the paper size required. Press the paper length adjusting tab and slide the guides to the paper size required.

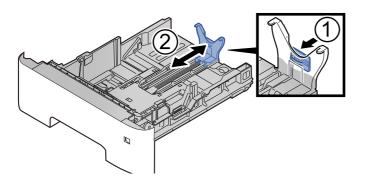


### NOTE

If you are going to use paper that is longer than A4, pull out the paper length guide backwards.

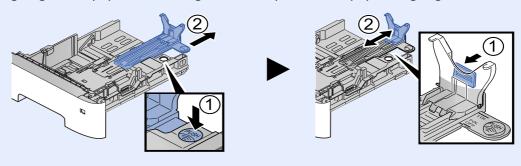

3 Turn the size dial so that the size of the paper you are going to use appears in the paper size window.

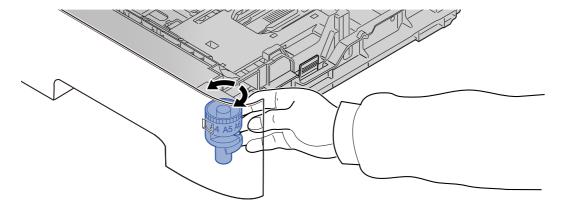


#### **NOTE**

When the size dial is set to "Other" the paper size must be set into the machine on the operation panel.


▶ Paper Size and Media Type for the Cassettes (page 3-12)

#### Press the bottom plate down until it locks.

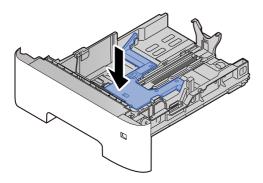

#### Load paper.


- 1 Fan the paper, then tap it on a level surface to avoid paper jams or skewed printing.
- **2** Load the paper in the cassette.

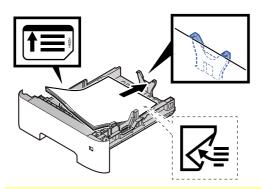

#### **IMPORTANT**

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
- ▶ Precaution for Loading Paper (page 3-3)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

### **5** Gently push the cassette back in.

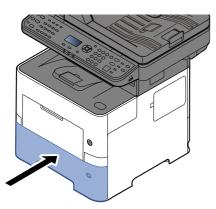

6 Specify the type of paper loaded in the cassette using the operation panel.

► Paper Size and Media Type for the Cassettes (page 3-12)

## **Loading Paper in the Multi Purpose Tray**

The multi purpose tray will hold up to 100 sheets of plain paper (80 g/m<sup>2</sup>).

For details of the supported paper sizes, refer to the following:

Choosing the Appropriate Paper (page 11-15)

For the paper type setting, refer to the following:

→ Media Type Setting (page 8-33)

Be sure to use the multi purpose tray when you print on any special paper.

#### **◯** IMPORTANT

- If you are using a paper weight of 106 g/m<sup>2</sup> or more, set the media type to Thick and set the weight of the paper you are using.
- Remove each transparency from the inner tray as it is printed. Leaving transparencies in the inner tray may cause a paper jam.


The capacity of the multi purpose tray is as follows.

- Plain paper (80 g/m<sup>2</sup>), recycled paper or color paper: 100 sheets
- Thick paper (106 to 220 g/m<sup>2</sup>): 5 sheets
- Thick paper (104.7 g/m<sup>2</sup>): 100 sheets
- · Hagaki (Cardstock): 1 sheets
- Envelope DL, Envelope C5, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Youkei 4, Youkei 2:
   5 sheets
- · OHP film: 1 sheet


#### **NOTE**

- When you load custom size paper, enter the paper size by referring to the following:
- ▶ Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-13)
- When you use special paper such as transparencies or thick paper, select the media type by referring to the following:
- Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-13)

#### Open the multi purpose tray.

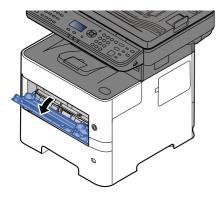


#### Pull out the support tray section of the MP tray.

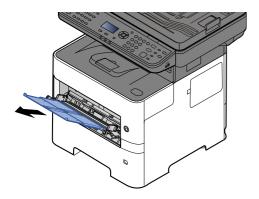


## **3** Adjust the multi purpose tray size.

Paper sizes are marked on the multi purpose tray.

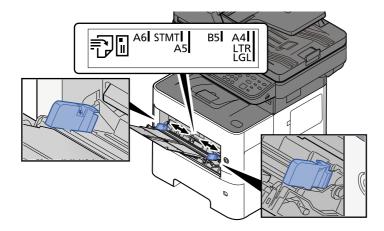

### Load paper.

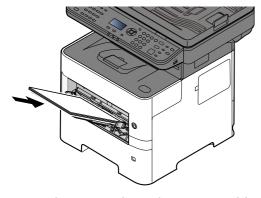

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multi purpose tray.

▶ Precaution for Loading Paper (page 3-3)

#### **IMPORTANT**

- When loading the paper, keep the print side facing up.
- Curled paper must be uncurled before use.
- When loading paper into the multi purpose tray, check that there is no paper left over in the tray
  from a previous job before loading the paper. If there is just a small amount of paper left over in
  the multi purpose tray and you want to add more, first remove the left-over paper from the tray
  and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).

## Specify the type of paper loaded in the multi purpose tray using the operation panel.


▶ Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-13)

#### When you load envelopes or cardstock in the multi purpose tray

Load the paper with the print side facing up. For the procedure for printing, refer to the following:

#### Printer Driver User Guide

Example: When printing the address.

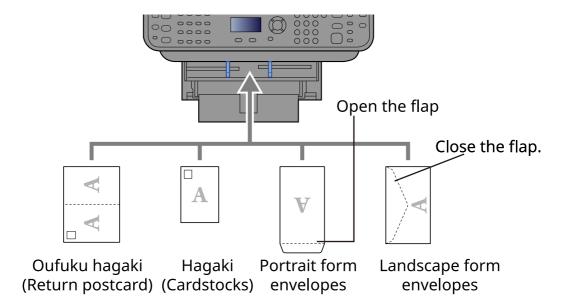

#### **◯** IMPORTANT

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

## **NOTE**

When you load envelopes in the multi purpose tray, select the envelope type by referring to the following:

Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-13)

## **Specifying Paper Size and Media Type**

The default paper size setting for cassette 1, for the multi purpose tray and for the optional paper feeder (cassettes 2 to 5) is "A4" or "Letter", and the default media type setting is "Plain".

To change the type of paper to be used in cassettes, specify the paper size and media type setting.

#### Paper Size and Media Type for the Cassettes

Specify the paper size and media type of paper to be used in cassettes.

Item	Description
Cassette 1 (to 5) Size*1	Available options are as follows:
	Value
	Cassette 1: A4, A5, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope C5, Custom
	Cassettes 2 to 5: A4, A5, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Oufukuhagaki (Return postcard), Youkei 4, Youkei 2, Nagagata 3, Younaga 3, Custom
Cassette 1 (to 5) Type <sup>*2</sup>	Select the media type.
	Value
	Cassette 1: Plain (60 to 105 g/m²), Rough, Recycled, Preprinted <sup>*3</sup> , Bond, Color, Prepunched <sup>*3</sup> , Letterhead <sup>*3</sup> , High Quality, Custom 1 - 8
	Cassettes 2 to 5: Plain (60 to 105 g/m²), Rough, Recycled, Preprinted*3, Bond, Color, Prepunched*3, Letterhead*3, Envelope, High Quality, Custom 1 - 8

<sup>\*1</sup> Only set this when the size dial on the cassette is set to "Other".

- MP Tray Set. (MP Tray Settings) (page 8-32)
  - When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.
- \*3 To print on preprinted or prepunched paper or on letterhead, refer to the following:
- SpecialPaper Act. (page 8-31)

### NOTE

- The available media types for printing received faxes are as shown below.
   Plain, Labels, Recycled, Bond, Vellum, Color, Envelope, Thick, High Quality, Rough and Custom 1 to 8
- Set the paper size of the cassette used for fax reception as follows: Inch models: Letter, Legal, Statement

Metric models: A4, B5, A5, Folio

If the above setting is changed, it will not be possible to print faxes.

### **1** Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Orig./Paper Set.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Cassette 1 (to 5) Set.] > [OK] key



[Cassette 2] to [Cassette 4] are shown when the optional paper feeder is installed.

### Specify the paper size.

- 1 [▲] [▼] key > [Cassette 1 (to 5) Size] > [OK] key
- **2** Select the paper size, and select the **[OK]** key.

<sup>\*2</sup> To change to a media type other than Plain, refer to the following:

#### Specify the media type.

- 1 [▲] [▼] key > [Cassette 1 (to 5) Type] > [OK] key
- 2 Select the media type, and select the [**OK**] key.

#### Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting)

Specify the paper size and media type of paper to be used in the multi purpose tray.

Item	Description
MP Tray Size	Available options are as follows:  Value: A4, A5, A5-R, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Statement-R, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Youkei 4, Youkei 2, Nagagata 3, Younaga 3, Custom*1
MP Tray Type <sup>*2</sup>	Select the media type.  Values: Plain (60 to 105 g/m²), Transparency, Rough, Vellum, Labels, Recycled, Preprinted*3, Bond, Cardstock, Color, Prepunched*3, Letterhead*3, Envelope, Thick (106 to 220 g/m²), High Quality, Custom 1-8

<sup>\*1</sup> For instructions on how to specify the custom paper size, refer to the following:

- **▶** Custom PaperSize (page 8-30)
- \*2 To change to a media type other than "Plain", refer to the following:
- MP Tray Set. (MP Tray Settings) (page 8-32)
- \*3 To print on preprinted or prepunched paper or on letterhead, refer to the following:
- SpecialPaper Act. (page 8-31)

#### NOTE

- The available media types for printing received faxes are as shown below.
   Plain, Label, Recycled, Bond, Vellum, Color, Envelope, Cardstock, Thick, High Quality, Rough and Custom 1 to 8
- Set the paper size of the multi purpose tray used for fax reception as follows: Inch models: Letter, Legal, Statement

Metric models: A4, B5, A5, Folio

If the above setting is changed, it will not be possible to print faxes.

#### **1** Display the screen.

[System Menu/Counter] >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Orig./Paper Set.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [MP Tray Set.] > [OK] key

#### Specify the paper size.


- 1 [▲] [▼] key > [MP Tray Size] > [OK] key
- **2** Select the paper size, and select the **[OK]** key.

#### Specify the media type.

- **1** [▲] [▼] key > [MP Tray Type] > [OK] key
- **2** Select the media type, and select the **[OK]** key.

## **Paper Stopper**

When using paper A4/Letter or larger, open the paper stopper shown in the figure.

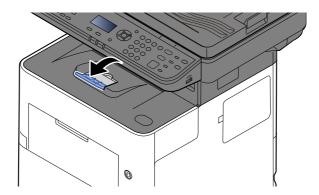

## Preparation for Sending a Document to a **Shared Folder in a PC**

Check the information that needs to be set on the machine and create a folder to receive the document on your computer. Screens of Windows 10 are used in the following explanation. The details of the screens will vary in other versions of Windows.



Log on to Windows with administrator privileges.

## **Making a Note of the Computer Name and Full Computer Name**

Check the name of the computer name and full computer name.

#### Display the screen. 1

Click [Start] button on the Windows and then select [Windows System], [Control Panel], [System and Security], and [System].



In Windows 8.1, right-click [PC] in the Start screen and select [Properties]. Or, right-click the Window icon and select [System].

#### Check the computer name. 2



Check the computer name and full computer name.

Screen example:

Computer name: PC001

Full computer name: PC001.abcdnet.com

After checking the computer name, click the x [Close] button to close the "System Properties" screen.

## **Making a Note of the User Name and Domain Name**

Check the domain name and user name for logging onto Windows.

#### **1** Display the screen.

Click [Start] button on the Windows and then select [Windows System] and [Command Prompt].

In Windows 8.1, click [**Search**] in charms, and enter "Command Prompt" in the search box. Select [**Command Prompt**] in the search list.

The Command Prompt window appears.

### Check the domain name and user name.

At the Command Prompt, enter "net config workstation" and then press [Enter].



Check the user name and domain name.

Screen example:

User Name: james.smith Domain Name:ABCDNET


## Creating a Shared Folder, Making a Note of a Shared Folder

Create a shared folder to receive the document in the destination computer.

### NOTE

If there is a workgroup in System Properties, configure the settings below to limit folder access to a specific user or group.

- 1 Open up a window in File Explorer and select [View], [Options], and then [Folder Options].
- 2 In Windows 8.1, select [Settings] in charms on Desktop, and select [Control Panel], [Appearance and Personalization], and then [Folder Options].

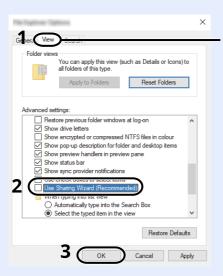

- Make sure that the [View] tab is selected.

Remove the checkmark from [Use Sharing Wizard (Recommended)] in "Advanced settings".

#### Create a folder.


1 Create a folder on your computer.

For example, create a folder with the name "scannerdata" on the desktop.




## 2 Configure permission settings.


1 Right-click the "scannerdata" folder, select [Property], and click [Sharing] and [Advanced Sharing].

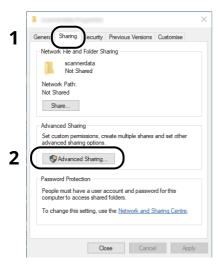


2 Select the [Share this folder] checkbox and click the [Permissions] button.

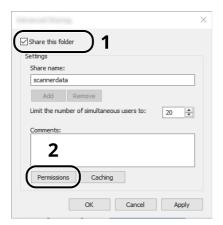

- 3 Make a note of the [Share name].
- 4 Click the [Add] button.

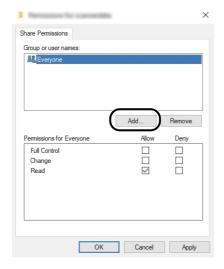

5 Specify the location.

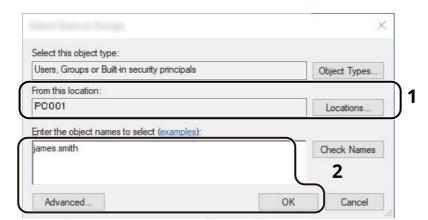


1 If the computer name that you made a note of on <u>page 3-15</u> is the same as the domain name: If the computer name is not shown in "From this location", click the [**Locations**] button, select the computer name, and click the [**OK**] button.

Example: PC001

If the computer name that you made a note of on <u>page 3-15</u> is not the same as the domain name: If the text after the first dot (.) in the full computer name that you made a note of does not appear in "From this location", click the [**Locations**] button, select the text after the dot (.), and click the [**OK**] button.

Example: abcdnet.com

- Making a Note of the User Name and Domain Name (page 3-16)
- 2 Enter the user name that you made a note of on page in the text box, and click the **[OK]** button. Also the user name can be made by clicking the **[Advanced]** button and selecting a user.
- **6** Set the access permission for the user selected.

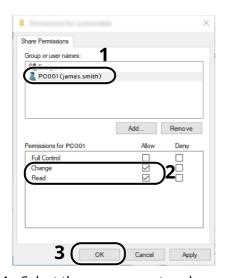


- 1 Select the user you entered.
- 2 Select the [Allow] checkbox of the "Change" and "Read" permissions
- 3 Press [OK].



"Everyone" gives sharing permission to everyone on the network. To strengthen security, it is recommended that you select "Everyone" and remove the "Read" [Allow] checkmark.

7 Click the [OK] button in the "Advanced Sharing" screen to close the screen.

8 Check the details set in the [Security] tab.

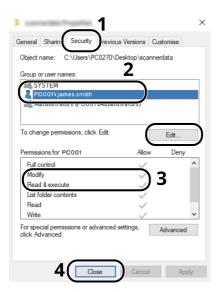

- 1 Select the [Security] tab.
- 2 Select the user you entered. If the user does not appear on "Group or user names", click [Edit] button to add user in a similar way of "configuration of permission settings".
- 3 Make sure that checkmarks appear on [Allow] checkbox for the "Modify" and "Read & execute" permissions.
- 4 Click the [Close] button.

## **Configuring Windows Firewall**


Permit sharing of files and printers and set the port used for SMB transmission.



Log on to Windows with administrator privileges.


#### Check file and printer sharing.

1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], [System and Security], and [Allow an app through Windows Firewall].

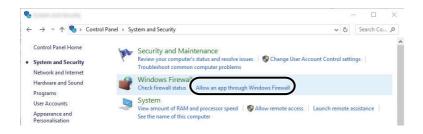

#### **NOTE**

- In Windows 8.1, in charms on Desktop, click [Settings], [Control Panel], [System and Security], and then [Windows Firewall].
- If the User Account Control dialog box appears, click the [Continue] button.
- 2 Select the [File and Printer Sharing] checkbox.

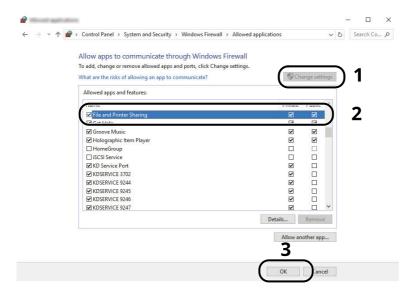

#### 2 Add a port.

1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], [System and Security], and [Check firewall status].




2 Select [Advanced settings].




3 Select [Inbound Rules].




4 Select [New Rules].

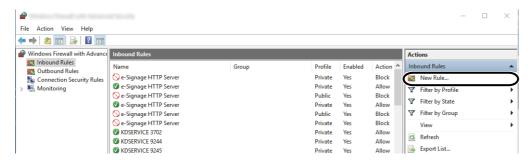


5 Select [Port].

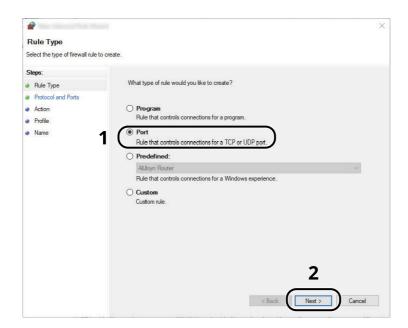


6 Select [**TCP**] as the port to apply the rule to. Then select [**Specific local ports**] and enter "445" then click [**Next**].

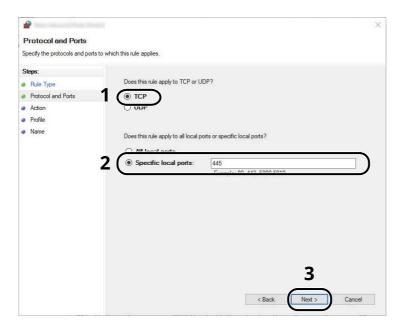


**7** Select [**Allow the connection**] and click the [**Next**] button.

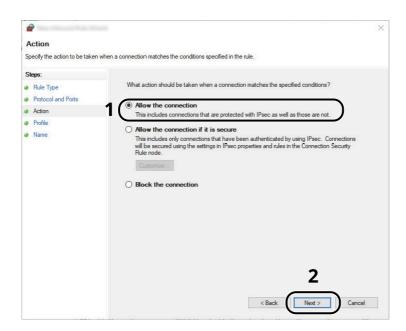

8 Make sure all checkboxes are selected and click the [Next] button.

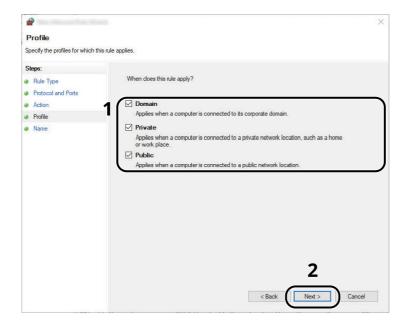

9 Enter "Scan to SMB" in "Name" and click [Finish].

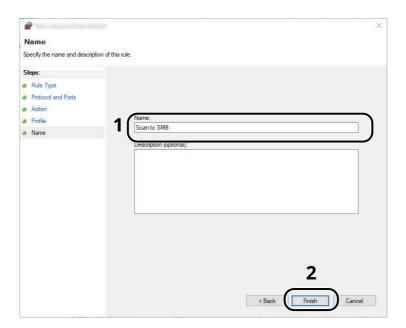

#### In Windows 8.1

1 In Windows 8.1, select [Settings] in charms on Desktop, and select [Control Panel], [System and Security], and then [Windows Firewall].

If the User Account Control dialog box appears, click the [**Continue**] button.

- **2** Configure the settings.
  - **▶** Configuring Windows Firewall (page 3-21)

## **Scan to Folder Setup Tool for SMB**

An environment for sending a document to Windows can be set up smoothly by using the Scan to Folder Setup Tool for SMB downloaded from our website.

By operating the Scan to Folder Setup Tool for SMB, you can configure the following settings.

- Create a shared folder in a PC for receiving documents
   A new folder can be easily created on the desktop. Also, the newly created folder is automatically set as a shared folder.
- Set the created shared folder as an address on this machine
   Information about such things as the name of the computer and shared names for the shared folder is easily recorded in the address book of this machine with a sequence of actions. Can also be registered on the One Touch Keys.

### NOTE

- · Log in to Windows with administrator privileges.
- · If user login administration is enabled, log in with administrator privileges or as a user with execution authority.

#### Download a software from the website.


- Launch a web browser.
- 2 Enter "https://kyocera.info/" to the browser's address bar or location bar.



3 Enter and search the product name, and select this product from the candidate list.




4 Change the selected operating system and its language setting as needed.

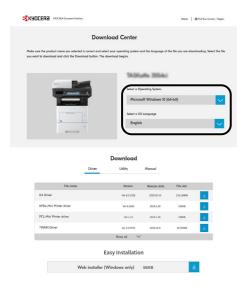

5 Utility tab > "Scan to Folder Setup Tool for SMB"


Scan to Folder Setup Tool for SMB will be downloaded.

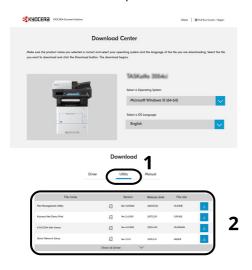

**6** Double click to launch the downloaded installer.

### Configure the settings.

1 Select the device to use and click [Next].

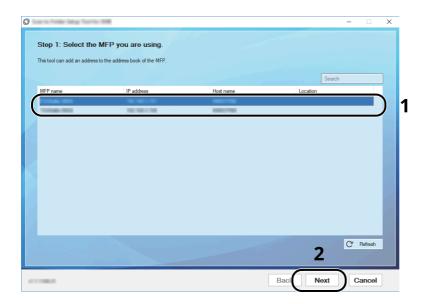


#### **NOTE**

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network cable and that it is turned on and click [C Refresh].
- If user administration is valid on this machine, the user authentication screen appears. Log in with administrator privileges or as a user with execution authority.

The address book of the device appears.

2 Select [Add].

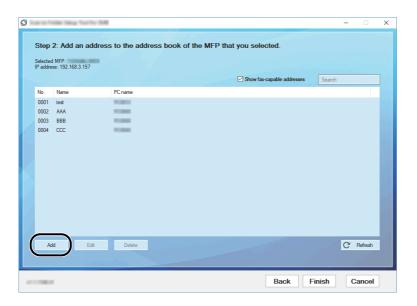

### NOTE

- Clicking on [**Edit**] after selecting the registered address allows you to change the content of the registration.
- Unchecking the [Show fax-capable addresses] check-box will hide the address containing the fax.


3 Create a new folder.



Select "Create a new folder on the desktop" and click [**OK**] to create a new folder on the desktop. (The default folder name is "Scan".)

### **NOTE**

- Click [Edit] to change the desktop folder name.
- Selecting [Select an existing folder and address] allows you to select an existing folder that is already set as a shared folder on the PC.
- 4 Enter the information requested to register the address.

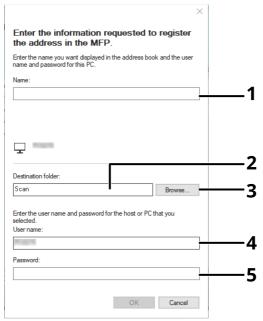

- 1 Enter the name for display in the address book.
- 2 Display the folder name and path to the shared folder.
- 3 Shared folders can be selected from a PC on the network.
- 4 Display the user name of the selected PC.
- 5 Enter the password corresponds to the log in user name of the selected PC.
- 5 Click [**OK**] to register the address to the address book.
- 6 Click [Close].

7 To register the registered address in a One Touch key, click [Yes].



**8** Select a One Touch Key with no registered destination, and click [**Submit**].



- 9 Click [Close].
- 10 Click [Finish] to exit the Scan to Folder Setup Tool.

# **Registering Destinations in the Address Book**

Save frequently used destinations to the Address Book or One Touch Keys. The saved destinations can be changed. The destinations are available for Send as E-mail, Send to Folder, and Fax Transmission (Only on products with the fax function installed).

### **NOTE**

- Registering and editing of the Address Book can also be done in Command Center RX.
- → Registering Destinations (page 2-56)
- Editing of the Address Book and One Touch Keys can be restricted to administrators.
- **▶** Edit Restriction (page 8-49)

# **Adding a Destination (Address Book)**

Add a new destination to the Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.

### **NOTE**

If registering and editing of the Address Book is restricted to administrators, you can edit the Address Book by logging in with administrator privileges.

- **▶** Edit Restriction (page 8-49)
- Command Center RX User Guide

#### Contact (Up to 200)

Each address can include the information such as destination name, E-mail address, FTP server folder path, computer folder path, and FAX No. (Only on products with the fax function installed).

### **1** Display the screen.

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Edit Destination] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Address Book] > [OK] key > [Menu] > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Add Address] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Contact] > [OK] key

### Add the name.

- **1** [◄] [▶] key > [Contact Name] > [Edit]
- 2 Enter the destination name displayed on the Address Book and select the [OK] key.

### NOTE

Up to 32 characters can be entered. Refer to the following for details on entering characters.

Character Entry Method (page 11-9)

### Add the address.

#### **E-mail Address**

- 1 [◄] [▶] key > [E-mailAddress] > [Edit]
- 2 Enter the E-mail address > [OK] key

#### **NOTE**

Up to 256 characters can be entered. Refer to the following for details on entering characters.

→ Character Entry Method (page 11-9)

#### The Folder (SMB) Address

- 1 [◄] [▶] key > [Folder (SMB)] > [Edit]
- 2 Enter the information for "Host Name (SMB)", "Path", "Login User Name" and "Login Password" > [OK] key

#### **NOTE**

For the computer name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

→ Preparation for Sending a Document to a Shared Folder in a PC (page 3-15)

The table below explains the items to be entered.

Item	Description	Max. No. of Characters
Host Name (SMB)*1	Computer name	Up to 256 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 260 characters
Login User Name	If the computer name and domain name are the same: User Name For example: james.smith If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> To specify a port number different from the default (445), enter using the format "Host name: port number" (Example: SMBhostname:140).

To enter the IPv6 address, enclose the address in brackets [].

(Example: [3ae3:9a0:cd05:b1d2:28a:1fc0:a1:10ae]:140)



#### **NOTE**

Refer to the following for details on entering characters.

- → Character Entry Method (page 11-9)
- 3 The connection confirmation screen appears. Select [Yes] to check the connection and [No] to not check it.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

#### The Folder (FTP) Address

- 1 [◄] [▶] key > [Folder (FTP)] > [Edit]
- 2 Enter the information for "Host Name (FTP)", "Path", "Login User Name" and "Login Password" > [OK] key

The table below explains the items to be entered.

Item	Descriptions	Max. No. of Characters
Host Name (FTP)*1	Host name or IP address of FTP server	Up to 64 characters
Path*2	Path for the file to be stored For example: User\ScanData If no path is entered, the file is stored in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password	Up to 64 characters

<sup>\*1</sup> If you specify a port number other than the default (21), use the "Host name: port number" (Example: FTPhostname:140).

To enter the IPv6 address, enclose the address in brackets [].

(Example: [3ae3:9a0:cd05:b1d2:28a:1fc0:a1:10ae]:140)

#### **NOTE**

Refer to the following for details on entering characters.

- → Character Entry Method (page 11-9)
- **3** The connection confirmation screen appears. Select [**Yes**] to check the connection and [**No**] to not check it.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

### 4 Specify the address number.

- 1 [◄] [▶] key > [Address Number] > [Edit]
- 2 Enter an address number.

### **NOTE**

You can set any value between 1 and 250.

Use the numeric keys or select the  $[\blacktriangle]$  or  $[\blacktriangledown]$  key to enter a number.

Address Number is an ID for a destination. You can select any available number.

If you specify an address number that is already in use, an error message appears when you select the  $[\mathbf{OK}]$  key and the number cannot be registered.

3 Select the [OK] key.

### 5 Check if the destination entry is correct and select the [OK] key.

The destination is added to the Address Book.

<sup>\*2</sup> When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

#### Group (Up to 50)

Compile two or more contacts into a group. Designations in the group can be added at the same time.



To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 individually registered destinations and a combined total of up to 5 SMB and FTP destination folders can be registered in a single group.

### Display the screen.

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Edit Destination] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Address Book] > [OK] key > [Menu] > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Add Address] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Group] > [OK] key

#### Add the name.

- **1** [◄] [▶] key > [Group Name] > [Edit]
- 2 Enter the group name displayed on the Address Book and select the [OK] key.
  - **NOTE**

Up to 32 characters can be entered. Refer to the following for details on entering characters.

→ Character Entry Method (page 11-9)

#### Select the members (destinations).

- 1 [◄] [▶] key > [Group Member] > [Edit] > [Menu] > [▲] [▼] key > [Add Member] > [OK] key
- 2 Select the member you want to add, and select the [OK] key.
  - **NOTE**

Select [Menu] and select [Search(Name)] to search using a name.

3 Select the destination to be registered in the group from the destinations registered in the contact addresses and select the [**OK**] key.

The selected member is added to group member.

Members can be added by repeating steps 3-1 to 3-3.

4 Select the [Back] key.

### Specify the address number.

- **1** [◄] [▶] key > [Address Number] > [Edit]
- 2 Enter an address number.

### **NOTE**

- You can set any value between 1 and 250.
- Use the numeric keys or select the [▲] or [▼] key to enter a number.
- Address Number is an ID for a destination. A free number can be selected.
- If you specify an address number that is already in use, an error message appears when you select the [**OK**] key and the number cannot be registered.
- 3 Select the [OK] key.

### 5 Select the [OK] key.

The group is added to the Address Book.

#### **Editing Address Book Entries**

Edit and delete the destinations (contacts) you added to the Address Book.

### Display the screen.

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Edit Destination] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Address Book] > [OK] key

#### **7** Edit the destination.

#### **Editing a Contact**

1 Select the destination (contacts) to edit, and select the [**OK**] key.



Select [Menu] and select [Search(Name)] to search using a name.

- 2 Change "Contact Name", destination type and address, and "Address Number".
  - → Contact (Up to 200) (page 3-31)
- 3 After you have completed the changes, [OK] key > [Yes] Register the changed destination.

#### **Editing a Group**

- 1 Select the group to edit, and select the [**OK**] key.
- 2 Change "Group Name" and "Address Number".
  - → Group (Up to 50) (page 3-34)
- **3** [**4**] [**▶**] key > [**Group Member**] > [**Edit**]
- 4 To delete the destination from the group, select the destination > [Menu] > [▲] [▼] key > [Delete] > [OK] key

### **NOTE**

Select the destination and select the **[OK]** key to show the detailed information of the destination.

To add the destination, select [Add Member].

- → Group (Up to 50) (page 3-34)
- 5 Select [Yes].
- 6 After you have completed the changes, [OK] key > [Yes] Register the changed group.

### **Deleting Address Book Entries**

Edit and delete the destinations (contacts) you added to the Address Book.

### **1** Display the screen.

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Edit Destination] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Address Book] > [OK] key

# **2** Delete the destination.

Select the destination (contacts) or group to delete, [Menu] > [▲] [▼] key > [Delete] > [OK] key > [Yes]

# Adding a Destination on One Touch Key (One Touch Key)


Assign a new destination (contact or group) to an one touch key. A maximum of 22 destinations can be registered.

### **NOTE**

- Numbers 1 to 11 are the One Touch Key numbers while the [Shift Lock] indicator is switched off. Numbers 12 to 22 are the One Touch Key numbers while the [Shift Lock] indicator is switched on by selecting the [Shift Lock] key.
- Refer to the following for use of One Touch Key.
- **▶** Specifying Destination (page 5-29)
- · You can add One Touch keys and change their settings on Command Center RX.
- Registering Destinations (page 2-56)

### Select the One Touch Key to be registered.

1 In the Send or FAX screen, press the One Touch Key that you want to register and hold it (2 seconds or more).

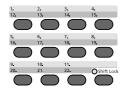

2 [▲] [▼] key > key number > [**OK**] key

Select a One Touch Key number with no registered destination.

#### Select the destinations.

1 Select the destination (contact or group) you want to register to the One touch key from the Address Book.



Select [Menu] and select [Search(Name)] to search using a name.

Select the destination to be registered to the One touch key from the destinations registered in the addresses and select the [OK] key.


The destination will be added to the One Touch Key.

#### **Editing One Touch Key**

Edit the destinations you added to One Touch Key.

### **1** Select the One Touch Key to edit or delete.

1 Press the One Touch Key to edit or delete and hold it (2 seconds or more).

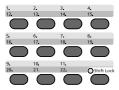

2 [▲] [▼] key > key number > [**OK**] key

When an unregistered One Touch Key number is selected, the Address Book appears. The One Touch Key can be registered by selecting the destination from the Address Book.

#### Edit the destination.

1 [▲] [▼] key > [Edit] > [OK] key



Select [**Detail**] and select the [**OK**] key to show the detailed information of the destination.

2 Select the new destination, and select the [OK] key > [Yes] Register the changed destination.

### **Deleting One Touch Key**

Delete the destinations you added to One Touch Key.

### 1 Select the One Touch Key to edit or delete.

1 Press the One Touch Key to edit or delete and hold it (2 seconds or more).



2 [▲] [▼] key > key number > [**OK**] key

When an unregistered One Touch Key number is selected, the Address Book appears. The One Touch Key can be registered by selecting the destination from the Address Book.

### Delete the destination.

[▲] [▼] key > [Delete] > [OK] key > [Yes]

Deletion of the data registered in the One Touch Key.

# 4 Printing from PC

### This chapter explains the following topics:

Printer Driver Print Settings Screen	4-2
Printer Driver Help	4-4
Changing the Default Printer Driver Settings (Windows 10)	4-4
Printing from PC	4-5
Printing on Non-standard Sized Paper	4-7
Printing with Universal Print	. 4-10
Banner printing	. 4-13
Canceling Printing from a Computer	. 4-16
Printing by AirPrint	. 4-17
Printing by Mopria	. 4-17
Printing with Wi-Fi Direct	. 4-17
Printing Data Saved on the Printer	. 4-18
Specifying the Job Box from a Computer and Storing the Job	. 4-18
Printing Documents from Private Print Box	. 4-19
Deleting the Documents Stored in the Private Print Box	. 4-20
Printing Document from Stored Job Box	. 4-21
Deleting the Documents Stored in the Stored Job Box	. 4-22
Printing Document from Quick Copy Box	. 4-23
Deleting the Documents Stored in the Quick Copy Box	. 4-24
Printing Document from Proof and Hold Box	. 4-25
Deleting the Documents Stored in the Proof and Hold Box	. 4-26
Printing Document from PIN Print Box	
Deleting the Documents Stored in the PIN Print Box	. 4-28
Printing Document from the Universal Print box	. 4-29
Deleting the Documents Stored in the Universal Print Box	. 4-31
Status Monitor	. 4-32
Accessing the Status Monitor	. 4-32
Exiting the Status Monitor	. 4-32
Status Monitor Display	. 4-32

# **Printer Driver Print Settings Screen**

The printer driver print settings screen allows you to configure a variety of print-related settings.


#### Printer Driver User Guide



No.	<b>Description</b>			
1	[Quick Print] tab			
	Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.			
	? X  Quick Print Orientation Collate Duplex Pages per sheet EcoPrint			
	Basic 1 1			
	[Basic] tab			
	This tab groups basic functions that are frequently used. You can use it to configure the paper size, and duplex printing.			
	[Layout] tab			
	This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.			
	[Imaging] tab			
	This tab lets you configure settings related to the quality of the print results.			
	[Publishing] tab			
	This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.			
	[Job] tab			
	This tab lets you configure settings for saving print data from the computer to the machine. Regularly used documents and other data can be saved to the machine for easy printing later. Since saved documents can be printed directly from the machine, this function is also convenient when you wish to print a document that you don't want others to see.			
	[Advanced] tab			
	This tab lets you configure settings for adding text pages or watermarks to print data.			
2	[Profiles]			
	Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.			
3	[Edit]			
	The assortment of icons at the top of the Quick Print tab can be customized to include features that you use most often.			

# **Printer Driver Help**

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.

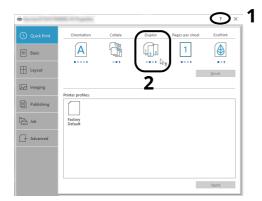

- 1 Click the [?] button in the upper right corner of the screen and then click the item you want to know about.
- 2 Click the item you want to know about and press the [F1] key on your keyboard.

# **Changing the Default Printer Driver Settings (Windows 10)**

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:

#### Printer Driver User Guide

- 1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], and [View devices and printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Basic] button on the [General] tab.
- **4** Select the default settings and click the [**OK**] button.


# **Printing from PC**

Follow the steps below to print documents from applications.

This section provides the printing method using the KX DRIVER.

### **NOTE**

- To print the document from applications, install the printer driver downloaded from our website on your computer.
- In some environments, the current settings are displayed at the bottom of the printer driver.

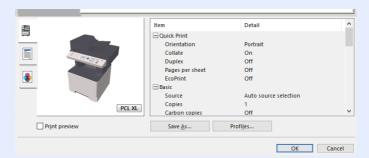

- When printing the cardstock or envelopes, load the cardstock or envelopes in the multi purpose tray before performing the following procedure.
- ▶ When you load envelopes or cardstock in the multi purpose tray (page 3-11)

#### **1** Display the screen.

Click [File] and select [Print] in the application.

### Configure the settings.

1 Select the machine from the "Name" menu and click the [**Properties**] button.



- 2 Select the [Basic] tab.
- 3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

→ Printing on Non-standard Sized Paper (page 4-7)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.



4 Click [**OK**] button to return to the Print dialog box.

### **3** Start printing.

Click the [OK] button.

# **Printing on Non-standard Sized Paper**

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the [**Basic**] tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.



To execute printing at the machine, set the paper size and type in the following:

► Paper Size and Media Type for the Multi Purpose Tray (MP Tray Setting) (page 3-13)

#### **1** Display the screen.

1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], and [View devices and printers].



In Windows 8.1, in charms on Desktop, click [Settings], [Control Panel], and then [Devices and Printers].


- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Preferences] button on the [General] tab.

### Register the paper size.

1 Click the [Basic] tab.

2 Click the [Page Size...] button.

3 Click the [New] button.

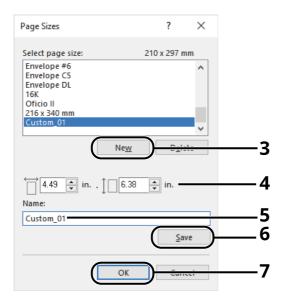

- 4 Enter the paper size.
- 5 Enter the name of the paper.
- 6 Click the [Save] button.
- **7** Click the [**OK**] button.
- 8 Click the [**OK**] button.



# 3 Display the print settings screen.


Click [File] and select [Print] in the application.

### Select the paper size and type of non-standard size paper.

1 Select the machine from the "Printer" menu and click the [**Properties**] button.



- 2 Select the [Basic] tab.
- 3 Click "Print size" menu and select the paper size registered in step 2.

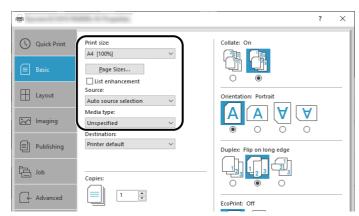

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

### **NOTE**

If you loaded a postcard or envelope, select [**Cardstock**] or [**Envelope**] in the "Media type" menu.

- 4 Select the paper source in the "Source" menu.
- 5 Click [**OK**] button to return to the Print dialog box.

### **5** Start printing.

Click the [OK] button.

# **Printing with Universal Print**

You can use the "Universal Print" cloud service provided by Microsoft to print jobs via the cloud. Users who are authorized in Azure Active Directory can print from any location using printers that are compatible with Universal Print.

### **NOTE**

- In order to use Universal Print, it is necessary for Microsoft365 license, and Azure Active Directory account. If not, please acquire those license and the account.
- To use Universal Print, the following conditions are required.
  - The license of Universal Printer has been granted.
  - All administrators have Printer Administrator or Global Administrator privileges.

#### **Register this machine on Universal Print**

#### Start up the browser.

Enter "https://" and host name of the machine to access the Command Center RX

→ Accessing Command Center RX (page 2-50)

#### Display the screen.

[Function Settings] > [Printer] > "Universal Print Settings" [Settings]

#### **2** Configure the settings.

1 Enter "Printer Name" for "General".



Configure proxy settings as necessary.

- Command Center RX User Guide
- 2 Click [Register] in "Universal Print".

The URL and access code of the Microsoft web page are displayed.

- 3 Click the URL, enter the access code displayed in procedure 2 > [Next]
- 4 Log in using your Azure administrator's account name and password.

### **NOTE**

Permission is required only when registering for the first time. Click [Accept].

- 5 Close the Microsoft web page and return to the Command Center RX.
- 6 Click [OK].

Return to the Universal Print setting screen.



On completing registration, [**Register**] in "Universal Print" changes to [**Unregister**], and the validity period of the certificate is displayed. If the display does not change, click [**Refresh**].

7 Click [Edit] in "Universal Print Preferences" and copy the Unregisteration URL.

8 Open the new tab on the browser and paste the copied URL.

The Universal Print web page is displayed.

9 Click [Printer].

The printers registered are displayed.

10 Check the checkbox next to the name of the printer you want to share and click [Share].

The "Share Printers" setting screen is displayed.

11 Select users to share this machine from the "Select members" list, and click [Share Printer].



#### **NOTE**

Set [Allow access to everyone in my organization] to on to all users in your organization to share the printer.

12 Close the Universal Print website.

#### Register shared printers on a PC

To use Universal Print, shared printers registered in Universal Print must be added to the PC.

### Log in.

- 1 Select in Windows [Start] button > [Settings] > [Account] > [Access work or school] in that order.
- 2 Check that the Azure administrator account name is displayed in [Work or school account], and click.



#### **NOTE**

When the Azure administrator account name is not displayed, click [+] (connect), and log in using the Azure administrator account name and password.

### Display the screen.

Select [Home] > [Device] > [Printers & scanners] in that order.

### Configure the settings.

- 1 Click [Add a printer or scanner].
- **2** Select a shared printer and click [**Add device**].

The shared printer is registered.


### Print a job

### **1** Display the screen.

Click [File] and select [Print] in the application.

### Configure the settings.

1 Select a registered shared printer from the "Printer" menu, and click the [**Properties**] button.

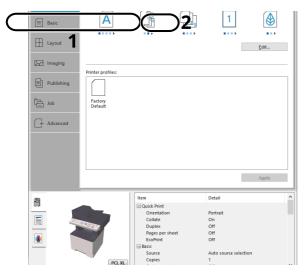

- **2** Configure the paper size and printer functions as necessary.
- 3 Click [OK] button to return to the Print dialog box.

### **3** Start printing.

Click the [**OK**] button.

# **Banner printing**

When a document length from 470.1 mm (18.51") to a maximum of 915.0 mm (36.03") is specified for printing, the print job is treated as banner printing.

Max. number of sheets	1 sheet (multi purpose tray)
Paper width	210 mm to 216 (8.5") mm
Paper length	470.1 mm to 915 mm (18.51" to 36.03")
Paper weight	136 to 163 g/m <sup>2</sup>
Paper type	Heavy 2

Follow the steps below to set banner paper in the printer driver.

### Display the screen.

Click [File] and select [Print] in the application.

### **2** Configure the settings.


1 Select the machine from the "Name" menu and click the [**Properties**] button.



2 Select the [Basic] tab.

3 Click the [Page Size...] button.


### 3 Register the paper size.

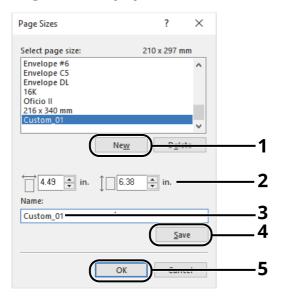

- 1 Click the [New] button.
- 2 Enter the length (470.1 mm (18.52") or longer), and width of the custom paper size being registered.
- **3** Enter the name of the paper.
- 4 Click the [Save] button.
- 5 Click the [**OK**] button.

### **4** Configure the print paper size.

1 Click "Print size" menu and select the paper size registered in step 3.

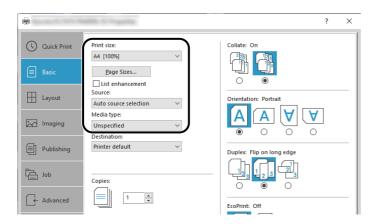


- 2 Click "Source" menu and select [Multipurpose tray].
- 3 Click "Media type" menu and select [Plain].
- 4 Click the [**OK**] button.

### NOTE


When banner printing, a resolution of 600 dpi is set.

# **5** Load paper.

1 Open the multi purpose tray and extend the support tray section of the multi purpose tray.

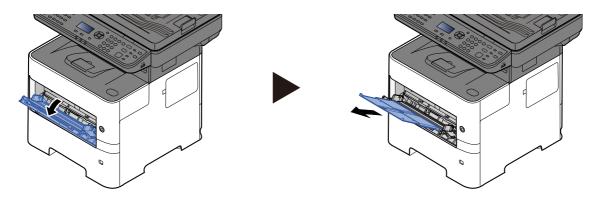


2 Load paper.

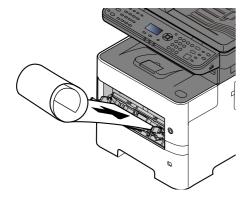

### **6** Start printing.


Click the [OK] button.

When you execute printing in this case, a message appears on the machine's operation panel. Place the paper in the Multi Purpose tray, continue to support it so that it does not fall, and select [**Continue**]. To cancel printing, select [**Cancel**].

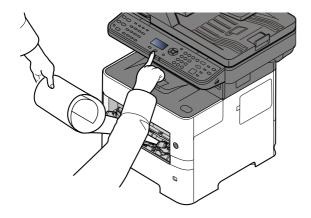

### **◯** IMPORTANT

After pressing [Continue], support the paper with both hands so that it feeds in correctly.

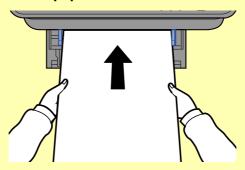

After printing starts, catch the paper when it is output so that it does not fall. When using the inner tray as the output location, do not stand up the stopper.

Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.

→ Msg Banner Print (page 8-42)

# **Canceling Printing from a Computer**

To cancel a print job executed using the printer driver before the printer begins printing, do the following:



When canceling printing from this machine, refer to the following:

- Canceling Jobs (page 5-11)
- 1 Double-click the printer icon ( ) displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- 2 Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

# **Printing from the Handheld Device**

This machine supports the AirPrint and Mopria. According to the supported OS and application, you can print the job from any handheld device or computer without installing a printer driver.

# **Printing by AirPrint**

AirPrint is a printing function that is included standard in iOS 4.2 and later products, and Mac OS X 10.7 and later products.

This function enables you to connect and print to any AirPrint compatible device without installing a printer driver.

To allow the machine to be found when printing by AirPrint, you can set machine location information in Command Center RX.

Command Center RX User Guide



# **Printing by Mopria**

Mopria is a standard on printing function included in Android 4.4 or later products. Mopria Print Service needs to be installed and enabled in advance.

For details on how to use, refer to a Web site of Mopria Alliance.



# **Printing with Wi-Fi Direct**

Wi-Fi Direct is a wireless LAN standard that Wi-Fi Alliance has been established. This is one of the functions of the wireless LAN, without a wireless LAN access point or wireless LAN router, between devices can communicate directly on a peer to peer basis.

The printing procedure by the Wi-Fi Direct is the same as that from the normal handheld devices.

When you use a printer name or Bonjour name on the port settings of the printer property, you can print the job by specifying the name at Wi-Fi Direct connection.

When you use an IP address for the port, specify the IP address of this machine.

# **Printing Data Saved on the Printer**

You can save the print job into the Job Box of this machine and print it as necessary. If you configure settings in the [**Job**] tab of the printer driver and then print, the print job will be saved in the Job Box (memory) and printing can be executed at the machine.

To print the job into the Job Box, specify the Job Box on the computer when sending the print job. Use the operation panel to select a file within a Box and to print it.

You can print the documents from the following boxes.

- Private Print Box
- Printing Documents from Private Print Box (page 4-19)
- Stored Job Box
- Printing Document from Stored Job Box (page 4-21)
- · Quick Copy Box
- → Printing Document from Quick Copy Box (page 4-23)
- · Proof and Hold Box
- → Printing Document from Proof and Hold Box (page 4-25)
- PIN Print Box
- → Printing Document from PIN Print Box (page 4-27)
- Universal Print Box
- → Printing Document from the Universal Print box (page 4-29)

# Specifying the Job Box from a Computer and Storing the Job

Use the procedure below to store data in a Job Box.

- Click [File] and select [Print] in the application. The Print dialog box displays.
- Select the machine from the "Name" menu.
- Click the [Properties] button. The Properties dialog box displays.
- Click the [Job] tab and select the [Job storage (e-MPS)] check box to set the function.
  - NOTE
  - To use Stored Job Box and Quick Copy Box, an optional SSD must be installed in the machine.
  - For information on how to use the printer driver software, refer to the following:
  - Printer Driver User Guide

# **Printing Documents from Private Print Box**

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a 4-digit access code in the printer driver. The job is released for printing by entering the access code on the operation panel, ensuring confidentiality of the print job. The data will be deleted upon completion of the print job or after the power switch is turned off.

### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Private Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.



Display [Private/Stored] when SD Card is mounted.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

**NOTE** 

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected document.
- 2 [▲] [▼] key > [Print] > [OK] key
- 3 Specify the number of copies to print as desired, and the [OK] key > [Yes].

Printing starts.

Upon completion of printing, the Private Print job is automatically deleted.

NOTE

# **Deleting the Documents Stored in the Private Print Box**

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Private Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

### NOTE

Display [Private/Stored] when SD Card is mounted.

#### Delete the document.

1 Select the document to delete, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [**Detail**]: Display the details for the selected document.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The document is deleted.

### **NOTE**

# **Printing Document from Stored Job Box**

In Stored Job, the print data sent from the application is saved to the machine. You can set up an access code as necessary. If you set up an access code, enter the access code when printing. Print data will be stored in the Stored Job Box after printing. This will allow printing of the same print data repeatedly.

### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Private Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

### NOTE

Display [Private/Stored] when SD Card is mounted.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected document.
- 2 [▲] [▼] key > [Print] > [OK] key
- 3 Specify the number of copies to print as desired, and the [OK] key > [Yes]. Printing starts.

### NOTE

# **Deleting the Documents Stored in the Stored Job Box**

#### **1** Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Private Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

### NOTE

Display [Private/Stored] when SD Card is mounted.

#### Print and delete the document.

1 Select the document to delete, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [**Detail**]: Display the details for the selected document.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The document is deleted.

### **NOTE**

# **Printing Document from Quick Copy Box**

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Quick Copy Job Box. When additional copies are required, you can reprint the required number of copies from the operation panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

### **NOTE**

- When the number of jobs reaches the limit, the oldest job will be overwritten by the new one.
- To maintain free space on the box, you can set the maximum number of stored jobs.
- → Quick Copy Jobs (page 8-48)

### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Private Print] > [OK] key
- 2 Select the creator of the document, and select the [OK] key.



Display [Quick/Proof] when SD Card is mounted.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [**Select**] again to cancel the selection.

2 [▲] [▼] key > [Print] > [OK] key

### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected document.
- 3 Specify the number of copies to print as desired, and the [OK] key > [Yes].
  Printing starts.

# **Deleting the Documents Stored in the Quick Copy Box**

You can delete the documents stored in the Quick Copy box. The procedure is as follows.

#### **1** Display the screen.

- 1 [Document Box/USB] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Quick/Proof] > [OK] key
- 2 Select the creator of the document, and select the [OK] key.

### **NOTE**

Display [Quick/Proof] when SD Card is mounted.

#### Delete the document.

1 Select the document to delete, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected document.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The document is deleted.

# **Printing Document from Proof and Hold Box**

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the operation panel. You can change the number of copies to print.

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Proof and Hold] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.



Display [Quick/Proof] when SD Card is mounted.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

NOTE

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected document.
- 2 [▲] [▼] key > [Print] > [OK] key
- 3 Specify the number of copies to print as desired, and the [OK] key > [Yes]. Printing starts.

# **Deleting the Documents Stored in the Proof and Hold Box**

#### **1** Display the screen.

1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [Proof and Hold] > [OK] key

**NOTE** 

Display [Quick/Proof] when SD Card is mounted.

2 Select the creator of the document, and select the [OK] key.

#### Delete the document.

1 Select the document to delete, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

NOTE

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [**Detail**]: Display the details for the selected document.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The document is deleted.

# **Printing Document from PIN Print Box**

When you print something from an application that uses an IPP protocol such as AirPrint or Mopria, the print will become retained in the PIN Print box. The retained print job can be output by entering the PIN code configured when the print was executed. If a PIN code was not configured when printed, a PIN code will not be required during the output.

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Job Box] > [OK] key > [▲] [▼] key > [PIN Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Checkmarks will be placed on the right of the all files when [All Files] is selected.

When all files are checked, all checkmarked files are deselected.

Select the checkmarked file and select [Select] again to cancel the selection.

- 2 [▲] [▼] key > [Print] > [OK] key
- **3** Specify the number of copies to print as desired, and the [**OK**] key > [**Yes**].

Printing starts.

Automatically the PIN print data is automatically deleted once printing is complete.



If the document is protected by a PIN code, the PIN code entry screen will be displayed. Enter the PIN code using the numeric keys.

## **Deleting the Documents Stored in the PIN Print Box**

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key >[Job Box] > [OK] key > [▲] [▼] key > [PIN Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

## 2 Delete the document.

1 Select the document to delete, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Checkmarks will be placed on the right of the all files when [All Files] is selected.

When all files are checked, all checkmarked files are deselected.

Select the checkmarked file and select [Select] again to cancel the selection.

2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The document is deleted.



If the document is protected by a PIN code, the PIN code entry screen will be displayed. Enter the PIN code using the numeric keys.

## **Printing Document from the Universal Print box**

For enhanced security, Universal Print allows PIN codes to be set for print jobs. Jobs for which PIN codes have been set will be saved in the cloud without being printed. Enter a PIN code from the operation panel to make jobs printable from this machine.

## NOTE

- To use Universal Print, you must register this machine as a shared printer.
- ▶ Register this machine on Universal Print (page 4-10)
- In order to use Universal Print, it is necessary for Windows 11 or Microsoft365 license, and Azure Active Directory account. If not, please acquire those license and the account.

#### Save jobs to the Universal Print box

#### Display the screen.

Click [File] and select [Print] in the application.

#### Configure the settings.

1 Select a registered shared printer from the "Printer" menu, and click the [**Properties**] button.



- 2 Click [Advanced].
- 3 Set [PIN protected printing] to [On], and set a 4-digit PIN code in [PIN protected printing PIN].
- 4 Select [**OK**] button > [**OK**] button in order, and return to the print dialog box.

#### 3 Start printing.

Click the [OK] button.

#### Print jobs saved in the Universal Print box

#### 1 Display the screen.

- 1 [Document Box] key > [▲] [▼] key >[Job Box] > [OK] key > [▲] [▼] key > [Universal Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

#### Print the document.

1 Select the document to print, and [Select] > [OK] key.

The file is selected. A checkmark will be placed on the right of the selected file.

Checkmarks will be placed on the right of the all files when [All Files] is selected.

When all files are checked, all checkmarked files are deselected.

Select the checkmarked file and select [Select] again to cancel the selection.

2 [▲] [▼] key > [Print] > [OK] key > Enter the PIN code > [OK] key > [Yes] Printing starts.

Automatically the Universal Print data is automatically deleted once printing is complete.

## **Deleting the Documents Stored in the Universal Print Box**

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key >[Job Box] > [OK] key > [▲] [▼] key > [Universal Print] > [OK] key
- 2 Select the creator of the document, and select the [**OK**] key.

## 2 Delete the document.

- Select the document to delete, and [Select] > [OK] key.
  The file is selected. A checkmark will be placed on the right of the selected file.
  - Checkmarks will be placed on the right of the all files when [All Files] is selected.
  - When all files are checked, all checkmarked files are deselected.
  - Select the checkmarked file and select [Select] again to cancel the selection.
- 2 [▲] [▼] key > [Delete] > [OK] key > Enter the PIN code > [OK] key > [Yes]
  The document is deleted.

## **Status Monitor**

The Status Monitor monitors the printer status and provides an ongoing reporting function.



When you activate Status Monitor, check the status below.

· KX DRIVER is installed.

## **Accessing the Status Monitor**

The Status Monitor also starts up when printing is started.

## **Exiting the Status Monitor**

Use either of the methods listed below to exit the Status Monitor.


- Exit manually:
   Click the settings icon and select Exit in the menu to exit the Status Monitor.
- Exit automatically:
   The Status Monitor automatically shuts down after 7 minutes if it is not being used.

## **Status Monitor Display**

The display of the Status Monitor is as follows.

#### **Quick View State**

The status of the printer is displayed using icons. Detailed information is displayed when the Expand button is clicked.

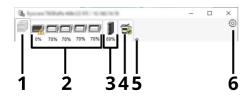


- 1 Printing Progress Tab
- 2 Paper Tray Status Tab
- 3 Toner Status Tab
- 4 Alert Tab
- 5 Expand button
- 6 Settings icon

Detailed information is displayed by clicking on each icon tab.

#### **Printing Progress Tab**

The status of the print jobs is displayed.

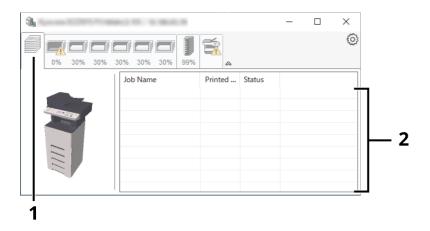


- 1 Status icon
- 2 Job list

Select a job on the job list and it can be canceled using the menu displayed with a right-click.


#### **Paper Tray Status Tab**

Information is displayed about the paper in the printer and about the amount of paper remaining.

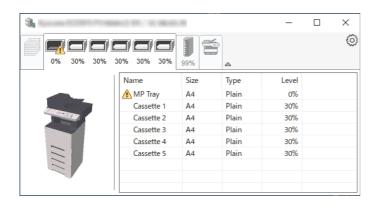


#### **Toner Status Tab**

The amount of toner remaining is displayed.

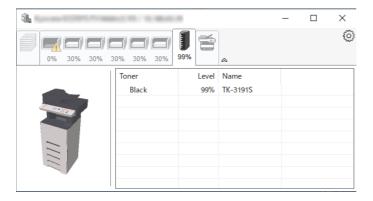


#### **Alert Tab**

If an error occurs, a notice is displayed using a 3D image and a message.

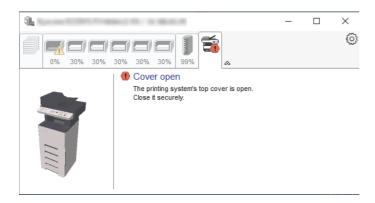

#### **Status Monitor Context Menu**

The following menu is displayed when the settings icon is clicked.

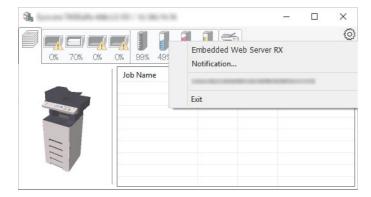

#### Command Center RX

If the printer is connected to a TCP/IP network and has its own IP address, use a web browser to access the Command Center RX to modify or confirm the network settings. This menu is not displayed when using USB connection.

- Command Center RX User Guide
- Notification...


This sets the display of the Status Monitor.

- **▶** Status Monitor Notification Settings (page 4-35)
- www.kyoceradocumentsolutions.com
   Open our website.
- Exit

Exits the Status Monitor.

#### **Status Monitor Notification Settings**

The Status Monitor settings and event list details are displayed.

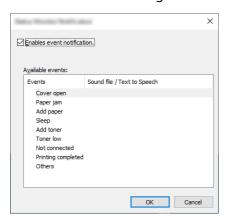


Select whether notification is performed when an error in the event list occurs.

**1** Select Enable event notification.

If this setting is set to Off, then the Status Monitor will not start up even when printing is executed.

- Select an event to use with the text to speech function in Available events.
- Click Sound file / Text to Speech column.

Click the browse (...) button to notify the event by sound file.

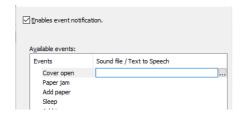



The available file format is WAV.

When customizing the message texts to read on the screen aloud, enter the texts in the text box.

# 5 Operation on the Machine


This chapter explains the following topics:	
Loading Originals	. 5-2
Placing Originals on the Platen	. 5-2
Loading Originals in the Document	
Processor	. 5-3
Program	. 5-5
Registering Programs	. 5-5
Confirming the Registered Program	. 5-6
Recalling Program	. 5-6
Overwriting Program	. 5-7
Deleting Program	. 5-7
Select Key Settings	. 5-8
Copying	. 5-9
Basic Operation	. 5-9
Canceling Jobs	5-11
Basic Scanning (Sending)	5-12
Sending Document via E-mail	5-13
Sending Document to Desired Shared	
Folder on a Computer (Scan to PC)	5-15
Sending Document to Folder on an FTP	
Server (Scan to FTP)	
Scanning using TWAIN or WIA	
Scanning Document stored in a Custom Box	
Useful Sending Method	
WSD Scan	
Install the Driver (for Windows 10)	
Install the Driver (for Windows 8.1, Microse	
Windows Server 2012)	
Executing WSD scan	5-23
Sending to Different Types of Destinations	4
(Multi Sending)	5-24
Sending Documents to E-mail Address of	- 2-
Logged in User (to myself)	5-25
Using fax server to send a fax (fax	E 26
server transmission)	
Canceling Sending Jobs	
Handling Destination	
Specifying DestinationChoosing from the Address Book	
Choosing from the One Touch Key	
<u> </u>	
Checking and Editing Destinations Confirmation Screen of Destinations	
Recall	
How to use the FAX Function	
Using Document Boxes	
What is Job Box? What is USB Drive Box?	
What is a Sub Address Box/Polling Box?	
VVIIGLIS A MILL BUILLESS DOY/POILLIN BOV/	1-17

Creating a New Custom Box	5-36
Editing Custom Box	5-38
Storing Documents	5-38
Storing Documents	5-38
Printing Document in a Custom Box	5-39
Moving Documents in Custom Box	5-40
Deleting Documents in Custom Box	5-41
Jsing Removable USB Drive	5-42
Printing Documents Stored in	
Removable USB Drive	5-42
Saving Documents to USB Drive (Scan to USB)	5-44
Check the USB Drive Information	5-45
Removing USB Drive	5-46

# **Loading Originals**

## **Placing Originals on the Platen**

You may place books or magazines on the platen in addition to ordinary sheet originals.

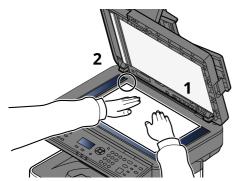


- Put the scanning side facedown.
- 2 Align it flush against the original size indicator plates with the back left corner as the reference point.



For details on Original Orientation, refer to the following:

Orig. Orientation (Original Orientation) (page 6-11)

#### When you place envelopes or cardstock on the platen

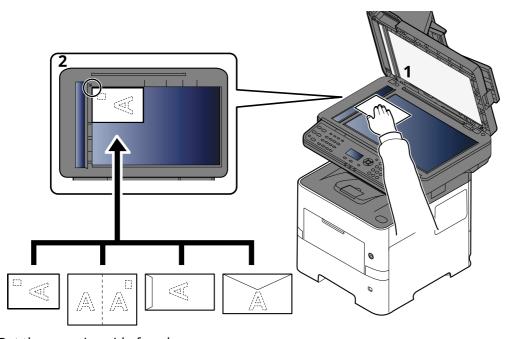

- Put the scanning side facedown.
- 2 Align it flush against the original size indicator plates with the back left corner as the reference point.

**NOTE** 

For the procedure for feeding envelopes or cardstock, refer to the following:

When you load envelopes or cardstock in the multi purpose tray (page 3-11)



Do not leave the document processor open as there is a danger of personal injury.

#### **IMPORTANT**

- Do not push the document processor forcefully when you close it. Excessive pressure may crack the platen glass.
- When placing books or magazines on the machine, do so with the document processor in the open position.

## **Loading Originals in the Document Processor**

The document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

#### **Originals Supported by the Document Processor**

The document processor supports the following types of originals.

Weight	50 to 120 g/m <sup>2</sup> (duplex: 50 to 120 g/m <sup>2</sup> )
Sizes	Maximum 216 x 355.6 mm (Long-sized 216 x 915 mm) to Minimum 105 x 148 mm
No. of sheets	75 sheets or less (50 to 80 g/m²)

#### **Originals Not Supported by the Document Processor**

Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.


- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- · Crumpled paper

#### **How to Load Originals**

### **IMPORTANT**


- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
- Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.

## 1 Adjust the original width guides.

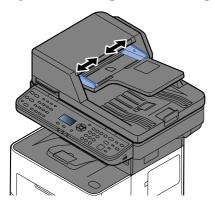

### Place the originals.

1 Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go.

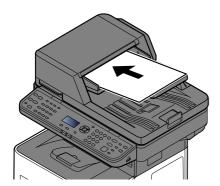


### **NOTE**

For details on Original Orientation, refer to the following:

Orig. Orientation (Original Orientation) (page 6-11)

#### **IMPORTANT**

Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

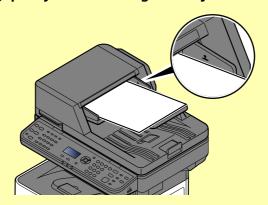


Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.


Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).

2 Open the original stopper to fit the size of the original set.



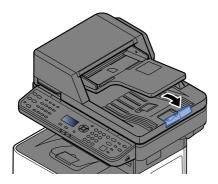

B5 or less

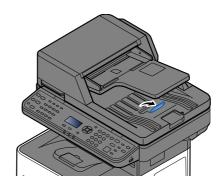

## **Program**

By registering sets of frequently used functions as a single program, you can simply select one of the [**Program IV**] to [**Program IV**] keys as needed to recall those functions.


The following functions are already registered in [**Program I**] key. This function allows you to copy the front and back sides of ID card or other document that is smaller than Statement or A5 size onto a single page. Although the functions are deleted by overwriting [**Program I**] key, you can register the same settings using the [**Function Menu**] key.

Paper Selection: Cassette 1

Zoom: AutoCombine: 2 in 1

Original Size: Statement (Inch models)/A5 (Metric models)

· Continuous Scan: On

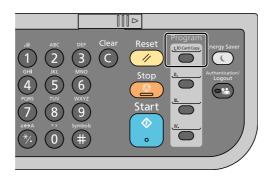

#### **NOTE**

- It is possible to register the copy function, sending function and fax function in a program. (The fax function can be registered or recalled only on products with the fax function installed).
- If user login administration is enabled, you can only register functions by logging in with administrator privileges.

## **Registering Programs**

Use the procedure below to register a program.

## Configure the settings of the functions.

Configure the settings of the functions you want to register in a program.

For the settings of functions, refer to the following:

Using Various Functions (page 6-1)



In the case of the sending function and fax function, a destination is also registered in the program.

### 2 Register the program.

Press the one of the [**Program I**] to [**Program IV**] keys where you want to register the settings and hold it (2 seconds or more).



The current settings are registered to the selected program key.

## **Confirming the Registered Program**

The settings of the registered program can be confirmed by recalling the program.

▶ Recalling Program (page 5-6)

## **Recalling Program**

Select the one of the [**Program I**] to [**Program IV**] keys where the settings you want to recall are registered. The current settings of various functions are replaced with the registered settings.

Place the originals and press the [Start] key.

## **Overwriting Program**

You can change program. Use the procedure below to edit the program.

#### Configure the settings of the functions.

Set the function to change.

For the settings of functions, refer to the following:

**▶** <u>Using Various Functions (page 6-1)</u>



In the case of the sending function and fax function, a destination is also registered in the program.

## **2** Overwrite the program.

1 Press the one of the [Program I] to [Program IV] keys to change and hold it (2 seconds or more).



2 [▲] [▼] key > [Overwrite] > [OK] key > [Yes]

Register the changed program.

## **Deleting Program**

You can delete program.

## **1** Display the screen.

Press the one of the [Program I] to [Program IV] keys to delete and hold it (2 seconds or more).

## 2 Delete the program.

[▲] [▼] key > [**Delete**] > [**OK**] key > [**Yes**]

# **Select Key Settings**

Commonly used functions can be registered to the Select key. Functions can be easily configured by selecting the Select key.

Functions can be registered in Select keys from the system menu.

★ Copy (page 8-43)
Send (page 8-46)

Document Box (page 8-48)


# **Copying**


## **Basic Operation**

Follow the steps as below for basic copying.


- Select the [Copy] key.
- Place the originals.

Place the originals.

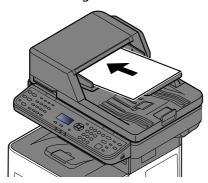

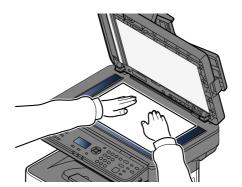

**▶** Loading Originals (page 5-2)

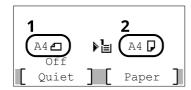

- 1 Original size
- 2 Paper size

Check the original size and the paper size.



For selecting the original size, refer to the following:

→ Original Size (page 6-9)

For selecting the paper source, refer to the following:

▶ Paper Selection (page 6-10)

## **3** Select the functions.

Select the [Function Menu] key to select the copier functions to use.

- **→** Copy (page 6-3)
- Use the numeric keys to enter the copy quantity.

Specify the desired number up to 999.


#### Press the [Start] key.

Copying begins.

## NOTE

This function allows you to reserve the next job during printing. Using this function, the original will be scanned while the machine is printing. When the current print job ends, the reserved copy job is printed. If "Reserve Priority" is set to [**Off**], [**NextCopy**] will appear. Select [**NextCopy**] and configure the necessary settings for the copy job.

→ Reserve Priority (page 8-43)

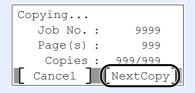

## **Canceling Jobs**

You can also cancel jobs by selecting the [**Stop**] key.

- Select the [Stop] key with the copy screen displayed.
- Cancel a job.
  - **1** [▲] [▼] key > [Cancel Print Job] > [OK] key
  - 2 Select the job to cancel, and [Menu].
  - **3** [▲] [▼] key > [Cancel Job] > [OK] key
    - **NOTE**

Select [**Detail**] and the [**OK**] key to show the detailed information of the job.

4 Select [Yes].

The job is canceled.



During scanning, the job can be canceled by selecting the [**Stop**] key or [**Cancel**].


## **Basic Scanning (Sending)**

This machine can send a scanned image as an attachment of an E-mail message or to a PC linked to the network. In order to do this, it is necessary to register the sender and destination (recipient) address on the network.


A network environment which enables the machine to connect to a mail server is required in order to send E-mail. It is recommended that a Local Area Network (LAN) be used to assist with transmission speed and security issues.

Follow the steps below for basic sending. The following four options are available.

- Send as E-mail (E-mail Addr Entry): Sends a scanned original image as an E-mail attachment.
- Sending Document via E-mail (page 5-13)

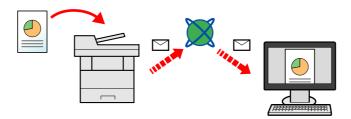

- Send to Folder (SMB): Stores a scanned original image in a shared folder of any PC.
- ► Sending Document to Desired Shared Folder on a Computer (Scan to PC) (page 5-15)
- Send to Folder (FTP): Stores a scanned original image in a folder of an FTP server.
- → Sending Document to Folder on an FTP Server (Scan to FTP) (page 5-17)

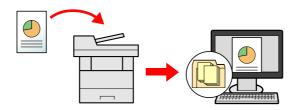


- Image Data Scanning with TWAIN / WIA: Scan the document using a TWAIN or WIA compatible application program.
- ► Scanning using TWAIN or WIA (page 5-19)


#### **NOTE**

- Different sending options can be specified in combination.
- ➤ Sending to Different Types of Destinations (Multi Sending) (page 5-24)
- The fax function can be used on products equipped with fax capability.
- FAX Operation Guide

# **Sending Document via E-mail**

- NOTE
- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- → Primary Network (page 8-21)
- Before sending a scanned document by e-mail, it is necessary to configure SMTP and e-mail sending from Command Center RX.
- **▶** E-mail Settings (page 2-53)
- Select the [Send] key.
- Place the originals.

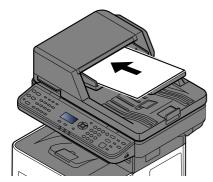

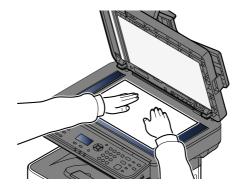

- **▶** Loading Originals (page 5-2)
- 3 In the basic screen for sending, select [▲] [▼] key > [E-mail] > [OK] key
- Enter destination E-mail address > [OK] key

Up to 256 characters can be entered.

→ Character Entry Method (page 11-9)

To send to multiple destinations, select the [**Confirm/Add Destination**] key. You can send to as many as 100 destinations at once.

Destinations can be changed later.

Checking and Editing Destinations (page 5-31)



If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.

→ Broadcast (page 8-46)

## 5 Select the functions.

Select the [Function Menu] key to select the send functions to use.

**▶** Send (page 6-4)

#### **IMPORTANT**

- [EmailEncryptedTX] and [DigitalSignature] appear when setting S/MIME on the Command Center RX.
- Command Center RX User Guide
- When using [EmailEncryptedTX] and [DigitalSignature], specify the E-mail addresses which have encryption certificate, from the address book. The directly-entered address can not be configured these functions. When entering E-mail address from the operation panel, you can not use these functions.

## 6 Press the [Start] key.


Sending starts.

# Sending Document to Desired Shared Folder on a Computer (Scan to PC)

You can store the scanned document into the desired shared folder on a computer.

#### **NOTE**

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- ▶ Primary Network (page 8-21)
- Before sending the scanned document to the shared folder on your computer, you must configure the following settings:
- Make a note of the computer name and full computer name
- → Making a Note of the Computer Name and Full Computer Name (page 3-15)
- Make a note of the user name and domain name
- ▶ Making a Note of the User Name and Domain Name (page 3-16)
- Create a shared folder and make a note of a shared folder
- Creating a Shared Folder, Making a Note of a Shared Folder (page 3-17)
- Configure the Windows firewal
- Configuring Windows Firewall (page 3-21)
- Select the [Send] key.
- Place the originals.

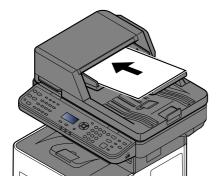



- **▶** Loading Originals (page 5-2)
- In the basic screen for sending, select [▲] [▼] key > [Folder(SMB)] > [OK] key
- Enter the destination information.

The table below lists the items to be set. Enter the information for each item and select the  $[\mathbf{OK}]$  key.

Item	<b>Detail</b>	Max. characters
Host Name (SMB)*1	Computer name	Up to 256 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 260 characters

Item	Detail	Max. characters
Login User Name	If the computer name and domain name are the same: User Name For example: james.smith If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> To specify a port number different from the default (445), enter using the format

(Example: [3ae3:9a0:cd05:b1d2:28a:1fc0:a1:10ae]:140)

### 5 Confirm the information.

The connection confirmation screen appears. Select [Yes] to check the connection and [No] to not check it.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To send to multiple destinations, select the [Confirm/Add Destination] key.



If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.

→ Broadcast (page 8-46)

Destinations can be changed later.

Checking and Editing Destinations (page 5-31)

#### Select the functions.

Select the [Function Menu] key to select the send functions to use.

**→** Send (page 6-4)

## 7 Press the [Start] key.

Sending starts.

<sup>&</sup>quot;Host name: port number" (Example: SMBhostname:140).


To enter the IPv6 address, enclose the address in brackets [].


# Sending Document to Folder on an FTP Server (Scan to FTP)

You can store the scanned document into the desired shared folder on a computer.

### **NOTE**

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- ▶ Primary Network (page 8-21)
- Before sending a document, configure the FTP Client (Transmission) .
- ProtocolSettings (page 8-14)
- Select the [Send] key.
- Place the originals.

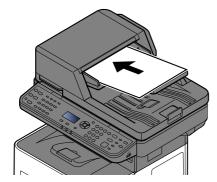

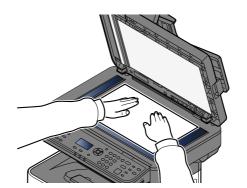

- → Loading Originals (page 5-2)
- In the basic screen for sending, select [▲] [▼] key> [Folder(FTP)] > [OK] key
- **4** Enter the destination information.

The table below explains the items to be entered. Enter the information for each item and select the [OK] key.

Item	Data to be entered	Max. charac- ters
Host Name (FTP)*1	Host name or IP address of FTP server	Up to 64 characters
Path <sup>*2</sup>	Path to the receiving folder For example: User\ScanData Otherwise the data will be saved in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> If you specify a port number other than the default (21), use the "Host name: port number" (Example: FTPhost-name: 140)

To enter the IPv6 address, enclose the address in brackets []. (Example: [3ae3:9a0:cd05:b1d2:28a:1fc0:a1:10ae]:140)

<sup>\*2</sup> When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

## **5** Confirm the information.

The connection confirmation screen appears. Select [Yes] to check the connection and [No] to not check it.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To send to multiple destinations, select the [Confirm/Add Destination] key.

#### **NOTE**

If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.

**▶** Broadcast (page 8-46)

Destinations can be changed later.

→ Checking and Editing Destinations (page 5-31)

#### Select the functions.

Select the [Function Menu] key to select the send functions to use.

**▶** Send (page 6-4)

#### 7 Press the [Start] key.

Sending starts.

# **Scanning using TWAIN or WIA**

This section explains how to scan an original using TWAIN. The WIA driver is used in the same way.

#### **NOTE**

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- Primary Network (page 8-21)
- Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.
- Setting TWAIN Driver (page 2-42)
- Setting WIA Driver (page 2-44)

#### 1 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.



For selecting the machine, see the Operation Guide or Help for each application software.


#### Configure the scan settings.

Select scanning settings in the dialog box that opens.



For the settings, refer to Help in the dialog box.

## Place the originals.

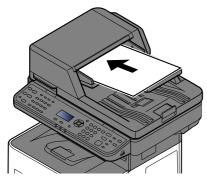



## 4 Scan the originals.

Click the [Scan] button. The document data is scanned.

## **Scanning Document stored in a Custom Box**

Follow the steps as below for scanning a document stored in a custom box using the TWAIN driver. When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

## **NOTE**

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- ▶ Primary Network (page 8-21)
- Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.
- → Setting TWAIN Driver (page 2-42)
- To load a document saved in the Custom Box, select the model name with (Box) from "Model" on the TWAIN driver configuration screen.

#### Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.

## **NOTE**

For selecting the machine, see the Operation Guide or Help for each application software.

#### Display lists of documents.

- 1 Select a custom box stored a document. If a password has been set for the box, the password entry screen appears. Enter the password and click the [**OK**] button. When you select a box, the document files in the Custom Box appear in "Document List".
- 2 Set how to display the document data. Click the [Setting] button to select each item.

## NOTE

For the settings, refer to Help in the dialog box.

3 Click [OK] button.

## **?** Scan the originals.

1 Select the document data to be scanned from [Document List].

Enter the document data name in the Search (Name) to find the data having the same document data name or the document data name with the same beginning.

Click the [**Detail**] button to display the selected document data. When the document data includes multiple pages, select the checkbox beside the pages you want to scan. The selected pages will be scanned.



In this case, the scanned page or the selected document data will not be deleted from the Custom Box.

2 Click the [Acquire] button.

The document data is scanned.

# **Useful Sending Method**

You can specify the following useful scanning (sending) methods.

- WSD Scan: Saves images of originals scanned on this machine as files on a WSD-compatible computer.
  - → WSD Scan (page 5-22)
- Scanning using the fax server: A scanned original is send via a fax server.
  - ▶ Using fax server to send a fax (fax server transmission) (page 5-26)
- Sending to different types of destinations (Multi sending): Sends to different types of destination (E-mail addresses, folders, etc.) in a single operation.
  - → Sending to Different Types of Destinations (Multi Sending) (page 5-24)
- Send to Me (Email): Sends to the E-mail address of the logged in user when user login is enabled.
  - → Sending Documents to E-mail Address of Logged in User (to myself) (page 5-25)

## **WSD Scan**

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

### **NOTE**

- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD-SCAN" is set to [**On**] in the network settings.
- → WSD-SCAN (page 8-16)
- For information on operating the computer, refer to the computer's help or the operation guide of your software.
- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- → Primary Network (page 8-21)

## **Install the Driver (for Windows 10)**

- 1 Right-click [Start] button on the Windows and select [Control Panel] and then [View devices and printer].
- Install the driver.

Click [Add a device]. Select the machine's icon and then click [Next].

When the machine's icon is displayed in "Printers" on the [**Devices and Printers**] screen, the installation is completed.

# **Install the Driver (for Windows 8.1, Microsoft Windows Server 2012)**

- Click [Search] in charms, [Control Panel], and then [View devices and printers].
- Install the driver.

Click [Add a device]. Select the machine's icon and then click [Next].

When the machine's icon is displayed in "Printers" on the [**Devices and Printers**] screen, the installation is completed.

## **Executing WSD scan**


WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.


## NOTE

- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD-SCAN" is set to [**On**] in the network settings.
- → WSD-SCAN (page 8-16)
- For information on operating the computer, refer to the computer's help or the operation guide of your software.
- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- Primary Network (page 8-21)

### Select the [Send] key.

#### Place the originals.

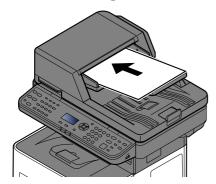

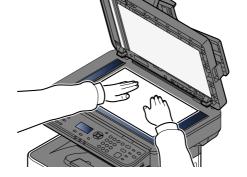

**▶** Loading Originals (page 5-2)

## **?** Display the screen.

[▲] [▼] key > [WSD Scan] > [OK] key

## Scan the originals.

#### Procedure using this machine


- **1** [▲] [▼] key > [From Oper. Panel] > [OK] key
- 2 Select the destination computer, and select the [OK] key.
  You can view information on the selected computer by selecting [Detail].
- **3** Select the [**Function Menu**] key to set the type of original, file format, etc., as desired.
- 4 Press the [Start] key.Sending begins and the software installed on the computer is activated.

#### **Procedure from Your Computer**

- **1** [▲] [▼] key > [From Computer] > [OK] key
- 2 Use the software installed on the computer to send the images.

# Sending to Different Types of Destinations (Multi Sending)

You can specify destinations that combine E-mail addresses, folders (SMB or FTP) and fax numbers (Fax functionality can only be used on products equipped with fax capability.). This is referred to as Multi Sending. This is useful for sending to different types of destination (E-mail addresses, folders, etc.) in a single operation.

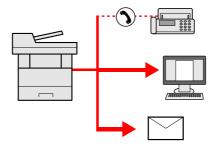

No. of broadcast items: Up to 50

However, number of items are restricted for the following sending options.

- E-mail and fax: Up to 100 in total
- · Folders (SMP, FTP): Total of 5 SMB and FTP

Also, depending on the settings, you can send and print at the same time.

Procedures are the same as used in specifying the destinations of respective types. Continue to enter E-mail address or folder path so that they appear in the destination list. Press the [**Start**] key to start transmission to all destinations at one time.

### **NOTE**

- If the destinations include a fax, the images sent to all destinations will be black and white.
- If [Prohibit] is set to "Broadcast", multiple destinations cannot be entered.
- **▶** Broadcast (page 8-46)

# Sending Documents to E-mail Address of Logged in User (to myself)

When user login is enabled, the document is sent to the E-mail address of the logged in user.

#### Configure the settings.

Before using this function, the following are necessary.

- An E-mail address must be set in user login for the user who logs in.
- → Adding a User (Local User List) (page 9-7)
- 2 In the basic screen for sending, select [▲] [▼] key > [Me(E-mail)] > [OK] key



When this function is used, functions other than transmission cannot be used.

# Using fax server to send a fax (fax server transmission)

You can send a scanned document through a fax server.


## **NOTE**


- A fax server is required to use this function. For information about the fax server, contact the applicable administrator.
- FAX server settings must be configured to send a FAX.
- → FAX Server Settings (page 8-25)

**Command Center RX User Guide** 

- Select the [Send] key.
- Place the originals.

Place the originals.

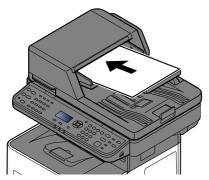

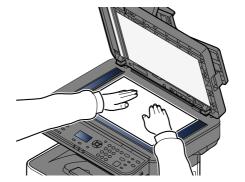

- **▶** Loading Originals (page 5-2)
- **?** [▲] [▼] key > [FAX Server] > [OK] key
- 4 Specifying destination.

Entering the destination fax number with the numeric keys

- 1 Select [Fax No. Entry].
- 2 Enter the fax number.



Use the numeric keys to enter a number.

3 Select [**OK**] key.

Destinations can be changed later.

→ Checking and Editing Destinations (page 5-31)

#### **Choosing from the Address Book**

1 Select [Address Book].

### **NOTE**

The address book set in [AddrBookDefaults] of "FAX Server Set." is displayed.

- 2 Select the destination.
  - → Choosing from the Address Book (page 5-29)
- 3 Select [**OK**] key.

Destinations can be changed later.

◆ Checking and Editing Destinations (page 5-31)

#### Select the functions.

Select the [Function Menu] key to select the send functions to use.

**▶** Send (page 6-4)

### 6 Press the [Start] key.

Sending starts.

## **Canceling Sending Jobs**

You can also cancel jobs by selecting the [Stop] key.

#### Select the [Stop] key with the send screen displayed.

The [Job Cancel List] menu appears.



Selecting the [**Stop**] key will not temporarily stop a job that you have already started sending.

#### Cancel jobs.

- **1** [▲] [▼] key > [Cancel Send Job] > [OK] key
- 2 Select the job to cancel, and [Menu].
- **3** [▲] [▼] key > [Cancel Job] > [OK] key

## NOTE

Select [Detail] and the [OK] key to show the detailed information of the job.

4 Select [Yes].

The job is canceled.



During scanning, the job can be canceled by selecting the [Stop] key or [Cancel].

# **Handling Destination**

This section explains how to select and confirm the destination.

# **Specifying Destination**

Select the destination using either of the following methods:

Choosing from the Address Book (page 5-29)

Choosing from the External Address Book

For details on the External Address Book, refer to the following:

Command Center RX User Guide

Choosing from the One Touch Key (page 5-30)

Checking and Editing Destinations (page 5-31)

Creating a New Custom Box (page 5-36)

Choosing from the FAX

FAX Operation Guide



- You can set the machine up so that the address book screen appears when you select the [Send] key.
- → Default Screen (page 8-46)
- If you are using the products equipped with the fax function, you can specify the fax destination. Enter the other party number using the numeric keypad.

# **Choosing from the Address Book**

Select a destination registered in the Address Book.

For more information about how to register destinations in the Address Book, refer to the following:

- ▶ Registering Destinations in the Address Book (page 3-31)
- 1 In the basic screen for sending, select the [Address Book] key.
- Select the destinations.
  - 1 [▲] [▼] key > [Address Book] > [OK] key
    - NOTE

For details on the External Address Book, refer to the following:

- Command Center RX User Guide
- 2 Select the destination.
  - **NOTE**

When checking information of the destination, select [Menu] > [Details] > [OK] key

#### **Destination Search**

The destination can be searched by name.

- 1 [Menu] > [▲] [▼] key > [Search (Name)] > [OK] key
- 2 Enter characters to search using the numeric keys.

#### **NOTE**

For details on entering characters, refer to the following:

- → Character Entry Method (page 11-9)
- 3 Select the [OK] key.

The searched destination is displayed.

#### Select the [OK] key.

To send to multiple destinations, repeat steps 1 to 3. You can send to as many as 100 destinations at once. Destinations can be changed later.

→ Checking and Editing Destinations (page 5-31)

# **Choosing from the One Touch Key**


Select the destination using the One Touch Keys.

In the basic screen for sending, select the One Touch Keys where the destination is registered.


#### **NOTE**

This procedure assumes that One Touch Keys have already been registered. For more information on adding One Touch keys, refer to the following:

Adding a Destination on One Touch Key (One Touch Key) (page 3-38)

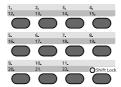

When selecting One Touch Key numbers 12 to 22, the One touch Key needs to be selected after switching on the [**Shift Lock**] indicator by selecting the [**Shift Lock**] key.

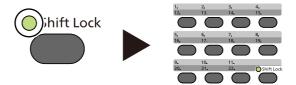

Destinations can be changed later.

Checking and Editing Destinations (page 5-31)

# **Checking and Editing Destinations**

Check and edit a selected destination.

#### Display the screen.

Specify the destination.

**▶** Specifying Destination (page 5-29)

#### Check and edit the destination.

Select the [Confirm/Add Destination] key.

#### Add the destination

- 1 Select [Add].
- 2 Set the destinations to be added.
  - → Specifying Destination (page 5-29)

#### **Edit the destination**

- 1 Select the destination you want to edit, and select the [**OK**] key.
- 2 [▲] [▼] key > [**Detail/Edit**] > [**OK**] key
- 3 Edit the destinations > [**OK**] key
  - **▶** Specifying Destination (page 5-29)

#### NOTE

To edit a destination registered in the address book or a One Touch Key, refer to the following:

→ Editing Address Book Entries (page 3-36)

Editing One Touch Key (page 3-39)

#### **Delete the destination**

- 1 Select the destination you want to delete, and select the [**OK**] key.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

#### Select [Exit].



When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.

Check beforeSend (page 8-46)
 Confirmation Screen of Destinations (page 5-32)

#### **Confirmation Screen of Destinations**

When selecting [On] for Destination Check before Send, the confirmation screen of destinations appears after pressing the [Start] key.

→ DestinationCheck (page 8-46)

Follow the steps below to confirm the destinations.

Confirm all destination.

To show the detailed information of the destination, select the destination and [OK] key  $> [\blacktriangle]$   $[\blacktriangledown]$  key > [Detail] >

To delete the destination, select the destination you want to delete and [OK] key > [A] key > [Delete] > [OK] key

The destination is deleted.

2 Select [Next].



#### **NOTE**

Be sure to confirm all destination by displaying them on the message display. You cannot select [Next] unless you have confirmed all destination.

#### Recall

Recall is a function allowing you to send the last entered destination once again. When you want to send the image to the same destination, select the [Address Recall/Pause] key, and you can call the destination you sent on the destination list.

1 Select the [Address Recall/Pause] key.

The destination you sent is displayed on the destination list.



#### **NOTE**

When the last sending included FAX, computers and E-mail destinations, they are also displayed. If necessary, add or delete the destination.

2 Press the [Start] key.

Sending starts.



#### **NOTE**

- When [On] is selected in "Check beforeSend", a destination confirmation screen is displayed when you press the [Start] key.
- **▶** Confirmation Screen of Destinations (page 5-32)
- Recall information is canceled in the following conditions.
  - When you turn the power off
  - When you send a next image (new recall information is registered)
  - When you log out

# **How to use the FAX Function**

On products with a FAX function, it is possible to use the FAX function.

FAX Operation Guide

# **Using Document Boxes**

Document Box is a function for saving print data from a computer and sharing it with multiple users. The following types of document boxes are available:

- Custom Box
- Job Box
- USB Drive Box
- Sub Address Box
- Polling Box

#### What is Custom Box?

Custom Box is a component box which you can create within the Document Box and store data for later retrieval. You can create or delete a Custom Box.

- The following operations are possible:
- Creating a new Custom Box
- Printing Document in a Custom Box
- Saving scanned documents to a Custom Box
- Sending Documents in a Custom Box
- Editing Documents in a Custom Box
- · Deleting Documents in Custom Box

#### NOTE

- To use Custom Box, an optional SSD must be installed in the machine.
- The operation on Custom Box can also be performed from Command Center RX.
- Command Center RX User Guide

## What is Job Box?

Job Box is a generic name for the "Private Print/Stored Job Box", "Quick Copy/Proof and Hold Box", and "PIN Print Box".

These Job Boxes cannot be created or deleted by a user.



- You can set up the machine so that temporary documents in job boxes are automatically deleted.
- → JobRet. Deletion (page 8-48)
- For details on operating the Job Box, refer to the following:
- → Printing Data Saved on the Printer (page 4-18)

### What is USB Drive Box?

A USB Drive stick can be connected to the USB Drive slot on the machine to print a saved file. You can print data directly from the USB Drive without a PC. Image files scanned using this machine can also be saved to USB Drive in the PDF, TIFF, JPEG, XPS, OpenXPS or high compression PDF format (Scan to USB).

# What is a Sub Address Box/Polling Box?

Fax Box store the fax data. This function can be used with machines that have a fax function. For details, refer to the following:

FAX Operation Guide

# **Creating a New Custom Box**

#### **NOTE**

- To use Custom Box, an optional SSD must be installed in the machine.
- If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.
- If user login administration is enabled, log in with administrator privileges to perform the following operations. They cannot be performed with user privileges.
  - Creating a box
  - Deleting a box of which owner is another user.

#### Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Document Box] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Custom Box] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Detail/Edit] > [OK] key > [Menu]

#### Create a custom box.

- 1 [▲] [▼] key > [Add Box] > [OK] key
- 2 Enter the box name and select the [**OK**] key.

#### **NOTE**

Up to 32 characters can be entered.

For details on entering characters, refer to the following:

- Character Entry Method (page 11-9)
- 3 Enter a box number and select the [**OK**] key.

#### **NOTE**

You can set any value between 0001 and 1000.

Use the  $[\blacktriangle]$  or  $[\blacktriangledown]$  key or the numeric keys to enter a number.

If you specify a box number that is already in use, an error message appears when you select the **[OK]** key and the number cannot be registered. If you enter 0000, the smallest number available will be automatically assigned.

4 To complete the box registration, select [▲] [▼] key > [Exit] > [OK] key. The Custom Box is created.

To register further Box information, select  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [**Detail**] > [**OK**] key.

Proceed to next step.

# 3 Enter the box information.

Select [**Edit**] or [**Change**] on each item and enter the information then select the [**OK**] key. Select the  $[\ \ \ ]$  key to view the next screen. Select the  $[\ \ \ \ ]$  key to return to the previous screen. The table below lists the items to be set.

Item	Description
Box Name	Enter a box name consisting of up to 32 characters.
	→ Character Entry Method (page 11-9)
Owner*1 *2	Set the owner of the box. Select the owner from the user list that appears.
Permission*1	Select whether to share the box.
Box Password	User access to the box can be restricted by specifying a password to protect the box. Entering a password is not mandatory.
	Enter a password of up to 16 characters and select the [ <b>OK</b> ] key. Reenter the same password for confirmation and select the [ <b>OK</b> ] key.
	This can be set if [ <b>Shared</b> ] is selected in "Permission".
Box Number	Enter the box number by using the numeric keys or using the [▲] or [▼] key. The box number can be from 0001 to 1000. A Custom Box should have a unique number. If you enter 0000, the smallest number available will be automatically assigned.
Usage Restrict.	The usage for a box can be restricted. To enable a capacity restriction enter a value for the storage capacity of the Custom Box in megabytes by using the numeric keys or using the [?] or [?] key. You can enter a limit between 1 and 30,000 (MB).
Auto File Del.	Automatically deletes stored documents after a set period of time.
	To enable automatic deletion, select $[\blacktriangle]$ $[\blacktriangledown]$ key $\gt$ $[On]$ $\gt$ $[OK]$ key.
	Use the numeric keys or use the [▲] or [▼] key to enter the number of days for which documents are stored. You can enter any number between 1 and 31 (day(s)).
	To disable automatic file deletion, select $[A]$ $[V]$ key $V$ $V$ $V$ key.
Free Space	Displays the free space on the box.
OverwriteSetting	Specifies whether or not old stored documents are overwritten when new documents are stored. To overwrite old documents, select $[\blacktriangle]$ $[\blacktriangledown]$ key > $[Permit]$ > $[OK]$ key. To retain old documents, select $[\blacktriangle]$ $[\blacktriangledown]$ key > $[Prohibit]$ > $[OK]$ key.
Del. afterPrint	Automatically delete a document from the box once printing is complete. To delete the document, select $[\blacktriangle]$ $[\blacktriangledown]$ key > $[On]$ > $[OK]$ key. To retain the document, select $[\blacktriangle]$ $[\blacktriangledown]$ key > $[Off]$ > $[OK]$ key.

<sup>\*1</sup> Displayed when the user login administration is enabled.

<sup>\*2</sup> Displayed when the user has logged in as administrator.

# **Editing Custom Box**

#### Display the screen.

[System Menu/Counter] key >  $[ \triangle ]$  [ $\lor$ ] key > [Document Box] > [ OK] key >  $[ \triangle ]$  [ $\lor$ ] key > [Custom Box] > [ OK] key >  $[ \triangle ]$  [ $\lor$ ] key > [Detail/Edit] > [ OK] key

#### Edit the custom box.

1 Select the box you want edit and select the [**OK**] key.

#### **NOTE**

- When you have logged in as a user, you can only edit a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.
- If a custom box is protected by a password, enter the correct password.
- **2** Change the box information.
  - → Creating a New Custom Box (page 5-36)

# **Deleting Custom Box**

#### **1** Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Document Box] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Custom Box] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Detail/Edit] > [OK] key

### Deleting Custom Box

1 Select the box you want delete and [Menu].

#### **NOTE**

- When you have logged in as a user, you can only delete a box whose owner is set to that user.
- When you have logged in as administrator, you can delete all boxes.
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

#### **NOTE**

If a custom box is protected by a password, enter the correct password.

## **Storing Documents**

Custom box stores the print data which is sent from a PC. For the operation of the printing from the PC, refer to the following:

Printer Driver User Guide

# **Printing Document in a Custom Box**

The procedure for printing documents in a custom box is explained below.

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Custom Box] > [OK] key
- 2 Select the box containing the document you want to print, and select the [OK] key.

#### **NOTE**

- If a custom box is protected by a password, enter the correct password.
- Select [Menu] to perform the following operations.
  - [Open]: Open the selected box.
  - [Detail]: Display the details for the selected box.
  - [Sort(No.)], [Sort(Name)]: Sort the boxes.
  - [Search(No.)], [Search(Name)]: Search using the box number or the box name.

#### Print the document.

1 Select the document you want to print, and select [**Select**].

A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

#### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Search(Name)]: Search using a file name.
- [Detail]: Display the details for the selected file.
- 2 Select the [OK] key.

To use the settings used at the time of printing (when the document was saved), select  $[\blacktriangle]$   $[\blacktriangledown]$  key > [Print]> [OK] key.

To change the print settings, select  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [**Print(ChangeSet)**] > [**OK**] key.

If [**Print**] is selected, change the number of copies to print as necessary.

If [**Print (ChangeSet)**] is selected, change the print settings. For the features that can be selected, refer to the following:

- Custom Box (Printing) (page 6-6)
- 3 Press the [Start] key.

Printing of the selected document begins.

# **Moving Documents in Custom Box**

This function allows you to move documents stored in custom boxes into other boxes. The procedure for moving documents is explained below.

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Custom Box] > [OK] key
- 2 Select the box containing the document you want to move, and select the [**OK**] key.

#### **NOTE**

- If a custom box is protected by a password, enter the correct password.
- Select [Menu] to perform the following operations.
  - [Open]: Open the selected box.
  - [Detail]: Display the details for the selected box.
  - [Sort(No.)], [Sort(Name)]: Sort the boxes.
  - [Search(No.)], [Search(Name)]: Search using the box number or the box name.

#### Move the documents.

1 Select the document you want to move, and select [**Select**].

A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

#### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Search(Name)]: Search using a file name.
- [Detail]: Display the details for the selected file.
- 2 [OK] key > [▲] [▼] key > [Move] > [OK] key
- **3** Select the destination box, and the **[OK]** key.

The selected document is moved.

#### NOTE

If the box to which the document is to be moved is protected by a password, enter the correct password.

# **Deleting Documents in Custom Box**

The procedure for deleting documents in a custom box is explained below.

#### Display the screen.

- 1 [Document Box] key > [▲] [▼] key > [Custom Box] > [OK] key
- 2 Select the box containing the document you want to delete, and select the [OK] key.

#### **NOTE**

- If a custom box is protected by a password, enter the correct password.
- Select [Menu] to perform the following operations.
  - [Open]: Open the selected box.
  - [Detail]: Display the details for the selected box.
  - [Sort(No.)], [Sort(Name)]: Sort the boxes.
  - [Search(No.)], [Search(Name)]: Search using the box number or the box name.

#### Delete the document.

1 Select the document you want to delete, and select [Select].

A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

### NOTE

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Search(Name)]: Search using a file name.
- [Detail]: Display the details for the selected file.
- 2 [OK] key > [▲] [▼] key > [Delete] > [OK] key > [Yes]

# **Using Removable USB Drive**

Plugging USB drive directly into the machine enables you to quickly and easily print the files stored in the USB drive without having to use a computer.

The following file types can be printed:

PDF file (Version 1.7 or older)

TIFF file (TIFF V6/TTN2 format)

JPEG file

XPS file

OpenXPS file

**Encrypted PDF file** 


# **Printing Documents Stored in Removable USB Drive**

#### **NOTE**

- PDF files you wish to print should have an extension (.pdf).
- Files to be printed should be saved no further down than the top 3 folder levels, including the root folder.
- Plug the USB drive directly into the USB drive Slot.

#### Plug the USB drive.

Plug the USB drive into the USB Drive Slot.

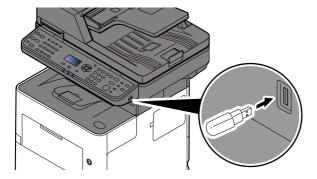

#### Display the screen.

[Document Box] key > [▲] [▼] key > [USB Drive] > [OK] key

#### Print the document.

1 Select the folder containing the file to be printed, and select the [**OK**] key.

The machine will display documents in the top 3 folder levels, including the root folder.

#### NOTE

- 1,000 documents can be displayed.
- To return to a higher level folder, select the [Back] key.

**2** Select the document you want to print, and [**Select**].

A checkmark will be placed on the right of the selected file.

Select the checkmarked file and select [Select] again to cancel the selection.

#### **NOTE**

Select [Menu] to perform the following operations.

- [Select All]: Select all files.
- [Clear All]: Cancel all the file selections.
- [Detail]: Display the details for the selected file.
- [USB Drive Detail]: Display the detail for the USB drive.
- [Remove USB Drive]: Remove the USB drive.
- **3** [**OK**] key > [▲] [▼] key > [**Print**] > [**OK**] key
- 4 Change the number of copies, duplex printing, etc. as desired.

For the features that can be selected, refer to the following:

- → Removable Memory (Store File, Printing Documents) (page 6-7)
- 5 Press the [Start] key.

Printing of the selected file begins.


# Saving Documents to USB Drive (Scan to USB)


This function allows you to store scanned image files in USB drive connected to the machine. You can store files in PDF, TIFF, JPEG, XPS, OpenXPS or high-compression PDF format.



The maximum number of the storable files is 1,000.

#### Place the originals.

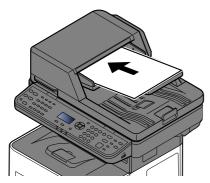


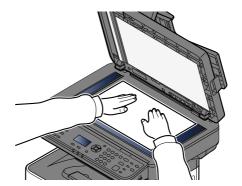

Loading Originals (page 5-2)

#### Plug the USB drive.

Plug the USB drive into the USB drive Slot.

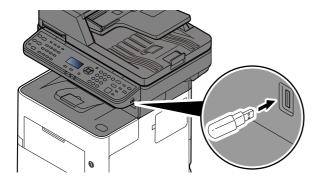

#### Display the screen.

[Document Box] key > [▲] [▼] key > [USB Drive] > [OK] key

#### Store the document.

- 1 Select the folder where the file will be stored, and the [**OK**] key. The machine will display the top 3 folder levels, including the root folder.
- 2 [▲] [▼] key > [Store File] > [OK] key
- **3** Set the type of original, file format, etc., as desired. For the features that can be set, refer to the following:
  - ▶ Removable Memory (Store File, Printing Documents) (page 6-7)
- 4 Press the [Start] key.

The original is scanned and the data is stored in the USB drive.

# **Check the USB Drive Information**

You can check the USB drive information.

#### **1** Display the screen.

[Document Box] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [USB Drive] > [OK] key > [Menu] > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [USB Drive Detail] > [OK] key

#### Check the information.

Select the [\*] key to view the next screen. Select the [\*] key to return to the previous screen. Once you confirm the information, select the  $[\mathbf{OK}]$  key.

# **Removing USB Drive**

Follow the steps below to remove the USB drive.

**⊘** IMPORTANT

Be sure to follow the proper procedure to avoid damaging the data or USB drive.

Display the screen.

[Reset] key > [Document Box] key > [▲] [▼] key > [USB Drive] > [OK] key

Select [Remove USB Drive].

[Menu] > [▲] [▼] key > [Remove USB Drive] > [OK]

Remove the USB drive.

When "USB drive can be safely removed." is displayed, select [OK] and then remove the USB drive.

**NOTE** 

USB drive can also be removed after checking the status of the device.

**▶** <u>Device/Communication (page 7-14)</u>

# **6** Using Various Functions

This chapter exp	lains the fol	lowing top	ics:
------------------	---------------	------------	------

Functions Available on the Machine	6-2
Copy	6-3
Send	6-4
Custom Box (Printing)	6-6
Removable Memory (Store File, Printing Documents)	6-7
Functions	6-9
ID Card Copy	6-9
Original Size	6-9
Paper Selection	6-10
Orig. Orientation (Original Orientation)	6-11
Mixed Size Orig. (Mixed Size Originals)	6-12
Collate	6-12
Density	6-12
Original Image	6-13
EcoPrint	6-13
Color Selection	6-14
Sharpness	6-14
Contrast	6-15
Background Density	
Prevent Bleed-t (Prevent Bleed-thru)	
Zoom	
Combine	
Duplex	
Continuous Scan	
Job Finish Notice	
File Name Entry	
Print Override	
Quiet Mode	
Skip Blank Page	
EmailEncryptedTX	
DigitalSignature	
Duplex (2-sided Original)	
Sending Size	
File Format	
PDF Electronic Signature	
File Separation	
Scan Resolution	
Subject/Body	
FTP Encrypted TX	
Del. after Print (Delete after Printed)	
Storing Size	
Long Original	
Encrypted PDF	
JPEG/TIFF Print	
XPS FitTo Page	6-36

# **Functions Available on the Machine**

To configure the settings for functions, select the [Function Menu] key.

◆ Operation Method (page 2-13)



- 1 Displays the function menu.
- 2 Selects the item displayed or changes the numeric value.
- 3 Confirms the selected setting.
- 4 Cancels the current menu setting to return to the menu one level higher.

# Copy

For details on each function, see the table below.




Function	Description	Reference page
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-23
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	page 6-10
Collate	Offsets the output by page or set.	page 6-12
ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	page 6-9
Duplex	Produces two-sided copies. You can also create single-sided copies from two-sided originals.	page 6-20
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-16
Combine	Combines 2 or 4 original sheets into 1 printed page.	page 6-18
Original Size	Specify the original size to be scanned.	page 6-9
Orig. Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-11
Mixed Size Orig. (Mixed Size Originals)	Scans all sheets in the document processor, even if they are of different sizes.	page 6-12
Original Image	Select original image type for best results.	page 6-13
Density	Adjust density.	page 6-12
EcoPrint	EcoPrint saves toner when printing.	page 6-13
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-22
File Name Entry	Adds a file name.	page 6-22
JobFinish Notice	Sends E-mail notice when a job is complete.	page 6-22
Print Override	Suspends the current job and gives a new job top priority.	page 6-23
Sharpness	Adjusts the sharpness of image outlines.	page 6-14
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-15
Backgrnd Density	Removes dark background from originals, such as newspapers.	page 6-15
Prevent Bleed-t	Hides background colors and image bleed-through when scanning thin original.	page 6-16
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-23

# **Send**

For details on each function, see the table below.




Function	Description	Reference page	
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-23	
Color Selection	Select the color mode setting.	page 6-14	
Original Size	Specify the original size to be scanned.	page 6-9	
Original Image	Select original image type for best results.	page 6-13	
Scan Resolution	Select fineness of scanning resolution.	page 6-33	
Sending Size	Select size of image to be sent.	page 6-26	
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-16	
Orig. Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-11	
Mixed Size Orig. (Mixed Size Originals)	Scans all sheets in the document processor, even if they are of different sizes.	page 6-12	
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-22	
File Format	Specify the image file format. Image quality level can also be adjusted.	<u>page 6-27</u>	
File Name Entry	try Adds a file name.		
Subject/Body	Adds subject and body when sending a document.	page 6-33	
JobFinish Notice	Sends E-mail notice when a job is complete.	page 6-22	
FAX Resolution	Select fineness of images when sending FAX.	Refer to the	
FAX Delayed TX	Set a send time.	Operation	
FAX Direct TX	Sends FAX directly without reading original data into memory.	Guide.	
FAX RX Polling	Automatically makes a machine with a stored document send the document to your machine.		
FAX TX Report	Prints a report when transmission of a document is successful, or when an error occurs and transmission fails.		
Density	Adjust density.	page 6-12	
Duplex	Select the type and orientation of the binding based on the original.	page 6-25	
FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-34	
File Separation	Creates several files by dividing scanned original data page by page, and sends the files.	page 6-33	
Sharpness	Adjusts the sharpness of image outlines.	page 6-14	
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-15	
Backgrnd Density	Removes dark background from originals, such as newspapers.	page 6-15	

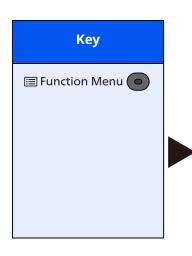

Function	Description	Reference page
Prevent Bleed-t	Hides background colors and image bleed- through when scanning thin original.	<u>page 6-16</u>
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.	page 6-23
<b>Email Encrypted TX</b> Sends encrypted E-mail using the electron certificate.		<u>page 6-24</u>
Digital Signature Email	Add a digital signature to the email, using the electronic certificate.	<u>page 6-24</u>

# **Custom Box (Printing)**

For details on each function, see the table below.

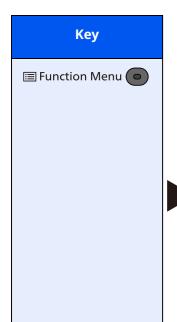

Function	Description	Reference page
Quiet Mode	Lower print and scan speed for quiet processing.	page 6-23
Collate	Offsets the output by page or set.	page 6-12
Paper Selection	Select the cassette or multi-purpose tray that contains the required paper size.	<u>page 6-10</u>
Duplex	Print a document on both sides of the paper.	page 6-21
EcoPrint	EcoPrint saves toner when printing.	page 6-13
File Name Entry	Adds a file name.	page 6-22
JobFinish Notice	Sends E-mail notice when a job is complete.	
Print Override	Suspends the current job and gives a new job top priority.	<u>page 6-23</u>
Del. after Print	Automatically deletes a document from the box once printing is complete.	page 6-34

# **Removable Memory (Store File, Printing Documents)**


For details on each function, see the table below.


#### Store File





#### **Printing Documents**

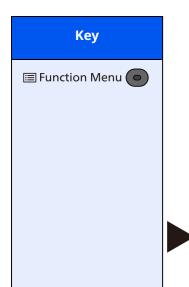

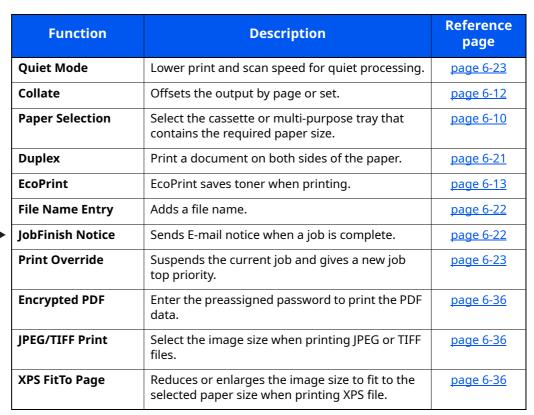

# **Functions**

On pages that explain a convenient function, the modes in which that function can be used are indicated by icons.

Printing:







Sending:



Storing:




# **ID Card Copy**



Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.

(Value: [Off] / [On])

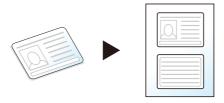

# **Original Size**







Specify the original size to be scanned.

Item	Description
Auto(DP)*1, A4, A5, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom*2	Select from standard sizes and custom size.

- \*1 This function is displayed when [Auto Detect] in [Detect Orig.(DP)] is set to [On].
- ▶ Detect Orig.(DP) (page 8-29)
- \*2 For instructions on how to specify the custom original size, refer to the following:
- Custom Orig. Size (page 8-29)



Be sure to always specify the original size when using custom size original.

# **Paper Selection**







Select the cassette or multi-purpose tray that contains the required paper size.

Select from [1] (Cassette 1) to [5] (Cassette 5) to use the paper contained in that cassette.

If [Auto] is selected, the paper matching the size of the original is selected automatically.

#### **NOTE**

- Specify in advance the size and type of the paper loaded in the cassette.
- Cassette 1 (to 5) Set. (Cassette 1 (to 5) Settings) (page 8-32)
- → MP Tray Set. (MP Tray Settings) (page 8-32)
- Cassettes 2 to 5 are displayed when the optional paper feeder is installed.

Before selecting [MP Tray], you need to select [MP Tray Set.] and specify the paper size and media type. The available paper sizes and media types are shown in the table below.

Item	Value	Description	
Auto		The paper matching the size of the original is selected automatically.	
Cassette 1 (to 5) *1		Feed paper from cassette 1 (to 5).	
		Feed paper from the multi purpose tray. Specify the paper size and media type.	
Standard Size	A4, A5, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom*2	Select from the standard sizes and custom size.	
Size Entry	Set the sizes of [Y] (vertical).  Metric: 148 to 356 mm (in 1 mm increments) Inch: 5.83 to 14.02" (in 0.01" increments)  Set the sizes of [X] (horizontal).  Metric: 70 to 216 mm (in 1 mm increments) Inch: 2.76 to 8.50" (in 0.01" increments)	Enter the size not included in the standard size.*3  When you have selected [Size Entry], use [▲]/[▼] or the numeric keys to set the sizes of "X" (horizontal) and "Y" (vertical).	
Media Type	Plain (60 to 105 g/m <sup>2</sup> ), Transparency, Rough, Vellum, Labels, Recycled, Preprinted <sup>*4</sup> , Bond, Cardstock, Color, Prepunched <sup>*4</sup> , Letterhead <sup>*4</sup> , Envelope, Thick (106 to 220 g/m <sup>2</sup> ), High Quality, Custom 1 to 8 <sup>*4</sup>	Select the media type.  Displayed after [Standard Size] or [Size Entry] is set in [MP Tray Set.].	

<sup>\*1</sup> Cassette 2 to Cassette 5 are displayed when the optional paper feeder is installed.

- Media Type Setting (page 8-33)
   To print on preprinted or prepunched paper or on letterhead, refer to the following:
- SpecialPaper Act. (page 8-31)

<sup>\*2</sup> For instructions on how to specify the custom paper sizes, refer to the following:

Custom PaperSize (page 8-30)

<sup>\*3</sup> The input units can be changed in System Menu.

<sup>→</sup> Measurement (page 8-33)

<sup>\*4</sup> For instructions on how to specify the custom paper types 1 to 8, refer to the following:



- You can conveniently select in advance the size and type of paper that will be used often and set them as default.
- → MP Tray Set. (MP Tray Settings) (page 8-32)
- If the specified size of paper is not loaded in the paper source cassette or multi purpose tray, a confirmation screen appears. Load the required paper in the multi purpose tray and select [OK] to start copying.

# **Orig. Orientation (Original Orientation)**








Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.

- Duplex
- Combine
- Duplex (2-sided Original)

Select original orientation from [Top Edge on Top] or [Top Edge on Left].

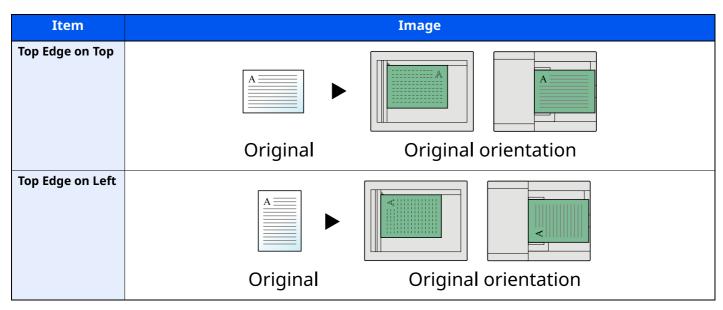



The default setting for Original Orientation can be changed.

Orig.Orientation (page 8-37)

# **Mixed Size Orig. (Mixed Size Originals)**







Scans all sheets in the document processor, even if they are of different sizes.

(Value: [Off] / [On])

#### **Supported Combinations of Originals**

Legal and Letter (Folio and A4)





## **Collate**







Offsets the output by page or set.

(Value: [Off] / [On])



# **Density**







Adjust density.

Adjust density selecting [-4] (Lighter) to [+4] (Darker).



# **Original Image**







Select original image type for best results.

#### Copying

In each setting, if you want to bring out text or lines marked with a highlighter pen, select [**Highlight**] and then [**On**]. The color of the highlighter pen will be reproduced as much as possible.

Item	Description	
Text+Photo*1	Best for mixed text and photo documents.	
Photo	Best for photos taken with a camera.	
Text	Best for documents that are mostly text.	
Graphic/Map	Best for graphics and maps.	

<sup>\*1</sup> If gray text is not printed completely using [Text + Photo], selecting [Text] may improve the result.

#### Sending/Storing

Item	Description
Text+Photo	Best for mixed text and photo documents.
Photo	Best for photos taken with a camera.
Text	Best for documents that are mostly text.
For OCR*1	Scanning produces an image that is suitable for OCR.
Light Text/Line	Clearly reproduces faint characters written in pencil, etc., and thin lines on map originals or diagrams.

<sup>\*1</sup> This function is only available when "Color Selection" is set to [**Black & White**]. For details, refer to the following:

# **EcoPrint**







EcoPrint saves toner when printing.

Use this function for test prints or any other occasion when high quality print is not required.

(Value: [Off] / [On])







**<sup>▶</sup>** Color Selection (page 6-14)

### **Color Selection**





Select the color mode setting.

Item	Description
Auto (Color/Gray)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Grayscale.
Auto (Color/B&W)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Black and White.
Full Color	Scans the document in full color.
Grayscale	Scans the document in grayscale. Produces a smooth, detailed image.
Black & White	Scans the document in black and white.

# **Sharpness**








Adjusts the sharpness of image outlines.

When copying penciled originals with rough or broken lines, clear copies can be taken by adjusting sharpness toward "Sharpen". When copying images made up of patterned dots such as magazine photos, in which moire \*1 patterns appear, edge softening and weakening of the moire effect can be obtained by setting the sharpness toward "Blur".

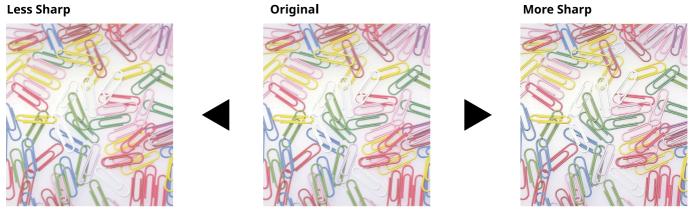

Item	Description		
1 to 3 (Sharpen)	Emphasizes the image outline.		
-1 to -3 (Unsharpen)	Blurs the image outline. Can weaken a Moire <sup>*1</sup> effect.		

<sup>\*1</sup> Patterns that are created by irregular distribution of halftone dots.

### **Contrast**







You can adjust the contrast between light and dark areas of the image.



Item	Description		
1 to 4 (Higher)	Increases the sharpness of colors.		
-1 to -4 (Lower)	Creates smoother colors.		

# **Background Density**







Removes dark background from originals, such as newspapers.

If the ground color is obtrusive, select [**Auto**]. If [**Auto**] does not remove the ground color, select [**Manual**] and adjust the density of the ground color.

Item	Description	
Off Does not adjust the ground color.		
Auto Automatically adjusts the background density based on the original.		
Manual	Select [ <b>1</b> ] to [ <b>5</b> ] (Lighter - Darker) to adjust the background density manually.	

# **Prevent Bleed-t (Prevent Bleed-thru)**








Hides background colors and image bleed-through when scanning thin original.

(Value: [Off] / [On])

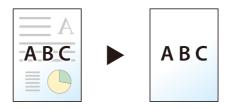

### Zoom








Adjust the zoom to reduce or enlarge the image.

#### Copying

The following zoom options are available.

#### **Auto**

Adjusts the image to match the paper size.

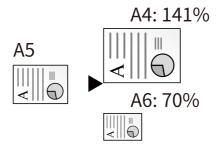

#### **Standard Zoom**

Reduces or enlarges at preset magnifications.

Model	Zoom Level (Original Copy)		Model	Zoom Level (Original Copy)	
Metric Models	400%	90% FOL >> A4	Inch Models	400%	78% LGL >> LTR
	200%	86% A4 >> B5		200%	64% LTR >> STMT
	141% A5 >> A4	70% A4 >> A5		129% STMT >> LTR	50%
	115% B5 >> A4	50%		100%	25%
	100%	25%			


#### **Others**

Reduces or enlarges at magnifications other than the Standard Zoom.

Model	Zoom Level (Original Copy)	Model	Zoom Level (Original Copy)
Metric Models	129% STMT >> LTR	Inch Models	141% A5 >> A4 86% A4 >> B5
	78% LGL >> LTR		115% B5 >> A4 70% A4 >> A5
	64% LTR >> STMT		90% FOL >> A4

#### **Zoom Entry**

Manually reduces or enlarges the original image in 1% increments between 25% and 400%. Use the numeric keys or select [A] or [V] to enter the any magnification.

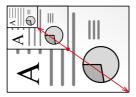

#### Sending/Storing

Item	Description	
100% Reproduces the original size.		
Auto Reduces or enlarges original to sending/storing size.		



To reduce or enlarge the image, select the paper size, sending size, or storing size.

Paper Selection (page 6-10) Sending Size (page 6-26) Storing Size (page 6-35)


# **Combine**



Combines 2 or 4 original sheets into 1 printed page.

You can select the page layout and the type of boundary lines around the pages.


The following types of the boundary lines are available.

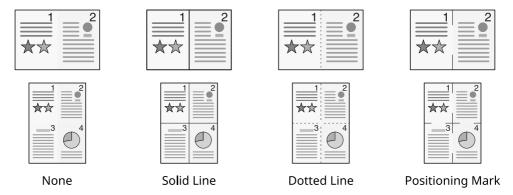

Select [2 in 1] or [4 in 1], select [Detail], and configure the function.

	Item	Value	Description
Off		_	Disables the function.
2 in 1		_	Select the [ <b>OK</b> ] key to copy the original with the default setting. For the default settings, refer to the following:
			→ Function Defaults (page 8-37)
	2 in 1 Layout	L to R T to B, R to L B to T	Select the page layout of scanned originals, and select the [ <b>OK</b> ] key.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the page boundary line, and select the [ <b>OK</b> ] key.
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.  Choose orientation of the originals, either [ <b>Top Edge on Top</b> ] or [ <b>Top Edge on Left</b> ]. Then select the [ <b>OK</b> ] key.
4 in 1		_	Select the [ <b>OK</b> ] key to copy the original with the default setting. For the default settings, refer to the following:
			→ Function Defaults (page 8-37)
	4 in 1 Layout	Right then Down, Down then Right, Left then Down, Down then Left	Select the page layout of scanned originals, and select the [ <b>OK</b> ] key.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the page boundary line, and select the [ <b>OK</b> ] key.
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.
			Choose orientation of the originals, either [ <b>Top Edge on Top</b> ] or [ <b>Top Edge on Left</b> ]. Then select the [ <b>OK</b> ] key.

### **Layout image**

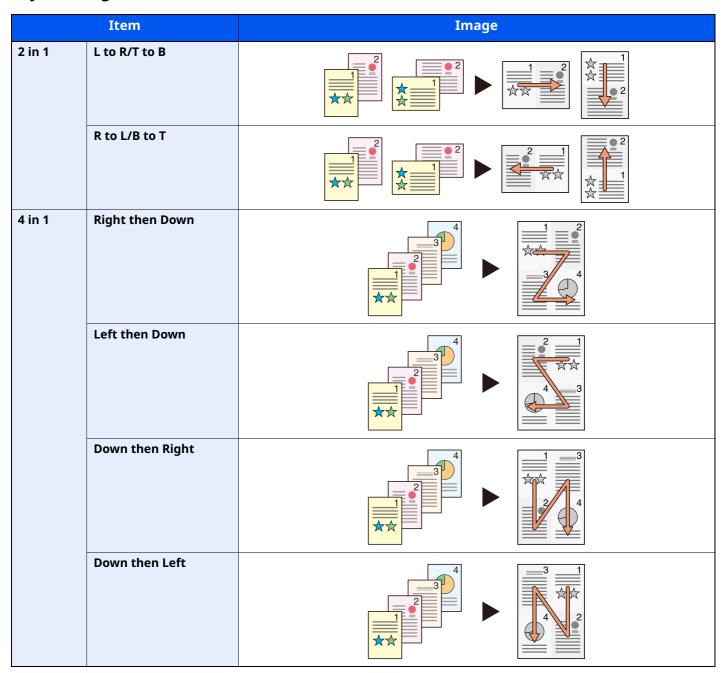

# NOTE

- The paper sizes supported in Combine mode are A4, A5, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Oficio II, and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.

# **Duplex**








Produces two-sided copies. You can also create single-sided copies from two-sided originals.

The following modes are available.

### One-sided to Two-sided

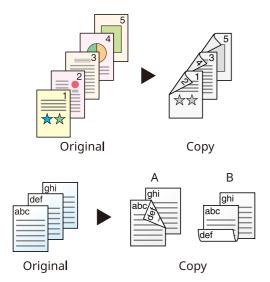

Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank.

The following binding options are available.

- A Original Left/Right to Binding Left/Right: Images on the second sides are not rotated.
- B Original Left/Right to Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.


### Two-sided to One-sided



Copies each side of a two-sided original onto two individual sheets. The following binding options are available.

- Binding Left/Right: Images on the second sides are not rotated.
- Binding Top: Images on the second sides are rotated 180 degrees.

### Two-sided to Two-sided

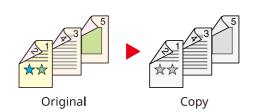

Produces two-sided copies from two-sided originals.



### **NOTE**

The paper sizes supported in Two-sided to Two-sided mode are A4, B5, A5, Legal, Letter, Executive, Statement, Oficio II, 216 × 340 mm, Folio, ISO B5, and 16K.

### Copying

Prints 1-sided originals to 2-sided, or 2-sided originals to 1-sided. Select the binding orientation for original and finished documents.

Item		Value	Description	
1-sided>>1-sided		_	Disables the function.	
1-sided>>2-sided		_	Select the [ <b>OK</b> ] key to copy the original with the default setting.  For the default settings, refer to the following:  Function Defaults (page 8-37)	
	Finish. Binding	Left/Right, Top	Select [ <b>Detail</b> ] to display the [ <b>Finish. Binding</b> ] screen. Select the binding orientation of copies, and select the [ <b>OK</b> ] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [ <b>Top Edge on Top</b> ] or [ <b>Top Edge on Left</b> ]. Then select the [ <b>OK</b> ] key.	
2-side	ed>>1-sided	_	Select the [ <b>OK</b> ] key to copy the original with the default setting.  For the default settings, refer to the following:  Function Defaults (page 8-37)	
	Orig. Binding	Left/Right, Top	Select [ <b>Detail</b> ] to display the [ <b>Orig. Binding</b> ] screen. Select the binding orientation of originals, and select the [ <b>OK</b> ] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [ <b>Top Edge on Top</b> ] or [ <b>Top Edge on Left</b> ]. Then select the [ <b>OK</b> ] key.	
2-side	ed>>2-sided	_	Select the [ <b>OK</b> ] key to copy the original with the default setting.  For the default settings, refer to the following:  Function Defaults (page 8-37)	
	Orig. Binding	Left/Right, Top	Select [ <b>Detail</b> ] to display the [ <b>Orig. Binding</b> ] screen. Select the binding direction of originals, and select the [ <b>OK</b> ] key.	
	Finish. Binding	Left/Right, Top	Select the binding orientation of copies, and select the [ <b>OK</b> ] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Choose orientation of the originals, either [ <b>Top Edge on Top</b> ] or [ <b>Top Edge on Left</b> ]. Then select the [ <b>OK</b> ] key.	

When placing the original on the platen, consecutively replace each original and press the [Start] key.

After scanning all originals, select [Finish Scan] to start copying.

### **Printing**

Print a document on both sides of the paper.

	Item	Value	Description
1-sided — Disables		_	Disables the function.
For the default ser		_	Select the [ <b>OK</b> ] key to print a 2-sided document with the default setting.  For the default settings, refer to the following:  Function Defaults (page 8-37)
	Finish. Binding	Left/Right, Top	Select [ <b>Detail</b> ] to display the [ <b>Finish. Binding</b> ] screen. Select the binding orientation of copies, and select the [ <b>OK</b> ] key.

# **Continuous Scan**








Scans a large number of originals in separate batches and then produce as one job.

Originals will be scanned continuously until you select [End Scan].

(Value: [Off] / [On])

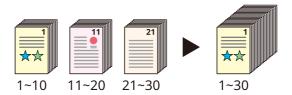

# **Job Finish Notice**











Sends E-mail notice when a job is complete.

Users can be notified of the completion of a job while working at a remote desk, saving the time spent waiting beside the machine to finish.



PC should be configured in advance so that E-mail can be used.

→ Command Center RX (page 2-49)

E-mail can be sent to a single destination.

Item	Description	
Off	Disables the function.	
JobFinished Only	Enter E-mail address directly. Enter the address (up to 128 characters) and select the [ <b>OK</b> ]	
Fin.+Interrupted	key.	

# **File Name Entry**











Adds a file name.

Additional information such as job number and date and time can also be set. You can check a job history or job status using the file name, date and time, or job number specified here.

Enter the file name (up to 32 characters), and select the [OK] key.

To add date and time, select [Date] and the [OK] key. To add job number, select [Job No.] and the [OK] key. To add both, select [Job No. + Date] or [Date + Job No.] and the [OK] key.

### **Print Override**







Suspends the current job and gives a new job top priority.

The suspended job resumes after the other job is finished.

(Value: [Off] / [On])

# **NOTE**

- This function is not available if current job was an override.
- Print override may not be available depending on the status of the current print job and memory usage.

# **Quiet Mode**











Lower print and scan speed for quiet processing.

Select this mode when the running noise is uncomfortable.

It is possible to set the use of Quiet Mode for each function, such as copying and sending.

(Value: [Off] / [On])

# NOTE

- The processing speed will be slower than normal when in Quiet Mode.
- This cannot be used when [Prohibit] is set for "Each Job".
- **→** Each Job (page 8-50)

# **Skip Blank Page**







When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

Blank pages can be set as pages that include ruled lines and a small number of characters.

The machine detects blank pages, saving unnecessary printing without the need to check for blank pages in the document.

Item		Description	
Off		Everything, including blank pages, is scanned.	
On	Blank+Ruled Line	Blank pages and pages that include ruled lines are judged to be blank pages.	
Blank Pages Only		Blank pages only are judged to be blank pages.	
Blank+Some Text		Blank pages and pages that include a small amount of text are judged to be blank pages.	



### **NOTE**

The originals with punched holes or originals printed on a colored substrate may not be recognized as blank pages.

# **EmailEncryptedTX**



Sends encrypted E-mail using the electronic certificate.

Encryption secures the document transmission.

(Value: [Off] / [On])



To use this function, configure the certificate, protocol and email function in the Command Center RX.

→ Command Center RX (page 2-49)

# **DigitalSignature**



Add a digital signature to the email, using the electronic certificate.

By adding a digital signature to an email, you can confirm the identity of the destination and detect tampering during transmission.

(Value: [Off] / [On])



### **NOTE**

To use this function, configure the certificate, protocol and email function in the Command Center RX.

→ Command Center RX (page 2-49)

### Command Center RXConfiguring S/MIME

To send encrypted email and use the use the digital signature function for email, the following settings must be configured in advance from the Command Center RX.

# Accessing Command Center RX

Accessing Command Center RX (page 2-50)

# Register the device certificate which is used for S/MIME.

- 1 From the [Network Settings] menu, click [Certificates].
- 2 Click [Address Book] of " Device Certificate" (1 to 5) to create or import the device certificate.
- Command Center RX User Guide
- 3 Click [Restart/Reset] > [Restart entire device] to restart the device.

# Configure the protocol settings

- 1 From the [Function Settings] menu, click [Protocols].
- 2 Set [Send Protocols] and [S/MIME] of "Send Protocol" to [On].

3 Click [Submit].

# Configure the E-mail function.

- 1 From the [Use File Settings] menu, click [E-mail].
- **2** Configure the settings in "S/MIME Settings" as necessary.
- Command Center RX User Guide
- 3 Click [Submit].

### Link the E-mail address with S/MIME certificates

- 1 From the [Document Box] menu, click [Management Settings].
- 2 Click the contact's [Number] or [Name] you want to edit.
- 3 Click [Address Book] in " S/MIME Certificate".
- 4 Click [Import] on the required certificate to register it, and then click [Submit].
- 5 Click [OK].

# **Duplex (2-sided Original)**





Select the type and orientation of the binding based on the original.

Item		Value	Description	
1-sided		_	Disables the function.	
2-sided		_	Select the [ <b>OK</b> ] key to scan the original with the default setting. For the default settings, refer to the following:  Function Defaults (page 8-37)	
	Orig. Binding	Left/Right, Top	Select [ <b>Detail</b> ] to display the [ <b>Orig. Binding</b> ] screen. Select the binding direction of originals, and select the [ <b>OK</b> ] key.	
	Orig. Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction, and select the [ <b>OK</b> ] key.	

### Sample image

	Value	Image
2-sided	Binding Left/ Right	
	Binding Top	

# **Sending Size**



Select size of image to be sent.

Item	Description
Same as OrigSize	Send an image the same size as the original.
A4, A5, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2	Select from standard sizes.

### Relationship between Original Size, Sending Size, and Zoom

Original Size (page 6-9), Sending Size, and Zoom (page 6-16) are related to each other. For details, see the table below.

Original size and sending size are	the same	different
Original Size (page 6-9)	Specify as necessary.	Specify as necessary.
Sending Size	Select [Same as Original Size].	Select the desired size.
Zoom (page 6-16)	Select [100%] (or [Auto]).	Select [Auto].



When you specify the sending size that is different from the original size, and select the zoom of [100%], you can send the image as the actual size (No Zoom).

# **File Format**






Specify the image file format. Image quality level can also be adjusted.

Select the file format from [PDF], [TIFF], [XPS], [OpenXPS], [JPEG] and [High Comp. PDF].

When the color mode in scanning has been selected for Grayscale or Full Color, set the image quality.

If you selected [PDF] or [High Comp. PDF], you can specify encryption or PDF/A settings.

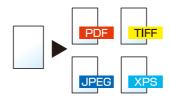

	Item	Value	Description
PDF		_	Select the [ <b>OK</b> ] key to save or send a PDF file. The image quality and PDF/A settings will be the default settings.
			For the default settings, refer to the following:
			→ Function Defaults (page 8-37)
	Image Quality	1 Low(High Comp) to	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen.
		5 High(Low Comp)	Select the image quality and select the [ <b>OK</b> ] key.
	PDF/A	Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u	Select PDF/A format type and select the [ <b>OK</b> ] key.
	Encryption	Off, On	Set the PDF encryption and then select the [ <b>OK</b> ] key.
			If [ <b>On</b> ] is selected, refer to the following:
			▶ PDF Encryption Functions (page 6-29)
	DigitalSignature	Off, On	Set the digital signature and then select the [ <b>OK</b> ] key.
			If [ <b>On</b> ] is selected, refer to the following:
			▶ PDF Electronic Signature (page 6-31)
TIFF		_	Select the [ <b>OK</b> ] key to save or send a TIFF file. The Image Quality settings will be the default values.
			For the default settings, refer to the following:
			→ Function Defaults (page 8-37)
	Image Quality	1 Low(High Comp) to 5 High(Low Comp)	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen. Select the image quality and select the [ <b>OK</b> ] key.
XPS		_	Select the [ <b>OK</b> ] key to save or send a XPS file. The Image Quality settings will be the default values.
			For the default settings, refer to the following:
			→ Function Defaults (page 8-37)
	Image Quality	1 Low(High Comp) to	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen.
		5 High(Low Comp)	Select the image quality and select the [ <b>OK</b> ] key.

	Item	Value	Description
Open	XPS	_	Select the [ <b>OK</b> ] key to save or send a OpenXPS file. The Image Quality settings will be the default values.  For the default settings, refer to the following:  Function Defaults (page 8-37)
	Image Quality	1 Low(High Comp) to 5 High(Low Comp)	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen. Select the image quality and select the [ <b>OK</b> ] key.
JPEG		_	Select the [ <b>OK</b> ] key to save or send a JPEG file. The Image Quality settings will be the default values.  For the default settings, refer to the following:  Function Defaults (page 8-37)
	Image Quality	1 Low(High Comp) to 5 High(Low Comp)	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen. Select the image quality and select the [ <b>OK</b> ] key.
High	Comp. PDF	_	Select the [ <b>OK</b> ] key to save or send a High Comp. PDF file. The image quality and PDF/A settings will be the default settings.  For the default settings, refer to the following:  Function Defaults (page 8-37)
	Image Quality	Comp. Priority, Standard, Quality Priority	Select [ <b>Detail</b> ] to display the [ <b>Image Quality</b> ] screen. Select the image quality and select the [ <b>OK</b> ] key.
	PDF/A	Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u	Select PDF/A format type and select the [ <b>OK</b> ] key.
	Encryption	Off, On	Set the PDF encryption and then select the [ <b>OK</b> ] key.  If [ <b>On</b> ] is selected, refer to to the following:  PDF Encryption Functions (page 6-29)
	DigitalSignature	Off, On	Set the digital signature and then select the [ <b>OK</b> ] key.  If [ <b>On</b> ] is selected, refer to the following:  PDF Electronic Signature (page 6-31)

# NOTE

- You can use PDF encryption functions.
- → PDF Encryption Functions (page 6-29)
- If encryption is enabled, PDF/A settings cannot be specified.

### **PDF Encryption Functions**

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Items that can be set vary depending on the setting selected in [Compatibility].

### When [Acrobat3.0&Later] is selected in "Compatibility"

	Item		Value	Description
Password	Open Document		Off, On	Enter the password to open the PDF file.  Select [ <b>On</b> ] and select the [ <b>OK</b> ] key.  Enter a password (up to 256 characters) and then select the [ <b>OK</b> ] key. Enter the password again for confirmation, and select the [ <b>OK</b> ] key.
	Edit/Print Doc.		Off, On	Enter the password to edit the PDF file.  Select [ <b>On</b> ] and select the [ <b>OK</b> ] key.  Enter a password (up to 256 characters) and then select the [ <b>OK</b> ] key. Enter the password again for confirmation, and select the [ <b>OK</b> ] key.
		Printing Allowed	Not Allowed, Allowed	Restricts printing of the PDF file. Then select the [ <b>OK</b> ] key.
		Changes Allowed	Not Allowed, Commenting, Page Layout, Any Changes	Restricts editing of the PDF file. Select from the following restrictions then select the [OK] key.  Not Allowed: Disables the change to the PDF file.  Commenting: Can only add commenting.  Page Layout: Can change the page layout except extracting the pages of the PDF file.  Any Changes: Can conduct all operations except extracting the pages of the PDF file.
		Copying Contents	Disable, Enable	Restricts the copying of text and objects on the PDF file. Then select the [ <b>OK</b> ] key.

# When [Acrobat5.0&Later] is selected in "Compatibility"

	Item	Value	Description
Password	Open Document	Off, On	Enter the password to open the PDF file.  Select [ <b>On</b> ] and select the [ <b>OK</b> ] key.  Enter a password (up to 256 characters) and then select the [ <b>OK</b> ] key. Enter the password again for confirmation, and select the [ <b>OK</b> ] key.
	Edit/Print Doc.	Off, On	Enter the password to edit the PDF file.  Select [ <b>On</b> ] and select the [ <b>OK</b> ] key.  Enter a password (up to 256 characters) and then select the [ <b>OK</b> ] key. Enter the password again for confirmation, and select the [ <b>OK</b> ] key.
	Printing Allowed	Not Allowed, Allowed (Low Res.), Allowed	Restricts printing of the PDF file. Select from the following restrictions then select the [ <b>OK</b> ] key.  Not Allowed: Disables the printing of PDF file.  Allowed (Low Res.): Can print the PDF file only in low resolution.  Allowed: Can print the PDF file in original resolution.
	Changes Allowed	Not Allowed, Ins./Del./Rotat., Commenting, Any Changes	Specifically limit the operation. Select from the following restrictions then select the [ <b>OK</b> ] key.  Not Allowed: Disables the change to the PDF file.  Ins./Del./Rotat.: Can only insert, delete, and rotate the pages of the PDF file.  Commenting: Can only add commenting.  Any Changes: Can conduct all operations except extracting the pages of the PDF file.
	Copying Contents	Disable, Enable	Restricts the copying of text and objects on the PDF file. Then select the [ <b>OK</b> ] key.

# **PDF Electronic Signature**

If [**PDF**] or [**High Comp. PDF**] is selected as a file format, electronic signature can be added to the PDF to be sent. Electronic signature can certify a sender of document and prevent falsification. To use this function, it is required to register a signing certificate from Command Center RX or KYOCERA Net Viewer and enable digital signature to files from the system menu. In this manual, a procedure to register a signing certificate from Command Center RX is described as an example.

### **NOTE**

- This function appears when [**Specify Each Job**] is selected for "Digital Signature to File" in the system menu.
- → <u>DigitalSignature (page 8-47)</u>
- This function can be configured when [PDF/A-2a], [PDF/A-2b], or [PDF/A-2u] is selected in PDF/A.
- To register a signing certificate from KYOCERA Net Viewer, refer to the following.
- KYOCERA Net Viewer User Guide

### Accessing Command Center RX

→ Accessing Command Center RX (page 2-50)

### **2** Register a signing certificate to be used in the electronic signature addition setting.

- 1 From the [Use File Settings] menu, click [Common/Job Defaults].
- 2 Click [Address Book] in [File Default Settings] > [Signature] to create or import the device certificate.
  - Command Center RX User Guide
- 3 Click [Restart/Reset] > [Restart entire device] to restart the device.

# Configure the digital signature settings.

1 [System Menu/Counter] key > [▲] [▼] key > [Send] > [OK] key > [▲] [▼] key > [DigitalSignature] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

**2** Configure the digital signature addition settings.

The following settings can be selected.

### **Digital Signature**

Select whether to add a digital signature.

Off

Does not add a digital signature.

### **Specify Each Job**

Whether to add a digital signature is selected each time of sending.

Always adds a digital signature when sending.

### **Format**

Select an algorithm used for encryption of digital signature.

Value: SHA1, SHA-256, SHA-384, SHA-512



### **NOTE**

This function is displayed when "Digital Signature" is set to [Specify Each Job] or [On].

### **Password Confirm**

Select whether to confirm password when setting digital signature.

Value: On, Off



### **NOTE**

This function is displayed when "Digital Signature" is set to [Specify Each Job].

### **Password**

Set a password required for setting digital signature. Enter a new security password 6 to 16 alphanumeric characters and symbols.



This function is displayed when "Password Confirmation on Signature Permission" is set to [On].

# Display the screen.

1 [Send] key > [Function Menu] key > [▲] [▼] key > [File Format] > [OK] key

### Configure the settings. 5

- 1 Select [PDF] or [High Comp. PDF] as a file format.
- 2 From "DigitalSignature", select [On] > [OK] in order.



### **NOTE**

If " Password Confirmation on Signature Permission" is set to [On], a password input screen appears. Enter a password set in the system menu.

Password (page 6-30)

# Press the [Start] key.

# **File Separation**





Creates several files by dividing scanned original data page by page, and sends the files.

(Value: [Off] / [Each Page])

Select [Each Page] to set File Separation.





### **NOTE**

A three-digit serial number such as "abc\_001.pdf, abc\_002.pdf..." is attached to the end of the file name.

### **Scan Resolution**





Select fineness of scanning resolution.

(Value: [200 × 100dpi Norm.] / [200 × 200dpi Fine] / [200 × 400dpi S.Fin] / [300 × 300dpi] / [400 × 400dpi U.Fin] / [600 × 600dpi])







### **NOTE**


The larger the number, the better the image resolution. However, better resolution also means larger file sizes and longer send times.

# Subject/Body



Adds subject and body when sending a document.

Select [Subject] / [Body] to enter the E-mail subject/body.

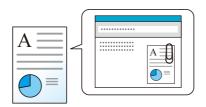



### NOTE

The subject can include up to 256 characters, and the body can include up to 500 characters.

# **FTP Encrypted TX**



Encrypts images when sending via FTP.

Encryption secures the document transmission.

(Value: [Off] / [On])



Click [Security Settings], and then [Network Security] in the Command Center RX. Be sure that "TLS" of Secure Protocol Settings is "On" and one or more effective encryption are selected in Client side settings.

Command Center RX User Guide

# **Del. after Print (Delete after Printed)**



Automatically deletes a document from the box once printing is complete.

(Value: [Off] / [On])

# **Storing Size**



Select size of image to be stored.

Item	Description
Same as OrigSize	Store an image the same size as the original.
A4, A5, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2	Select from standard sizes.

### Relationship between Original Size, Storing Size, and Zoom

Original Size (page 6-9), Storing Size, and Zoom (page 6-16) are related to each other. For details, see the table below.

Original Size and the size you wish to store as are	the same	different
Original Size (page 6-9)	Specify as necessary.	Specify as necessary.
Storing Size	Select [ <b>Same as OrigSize</b> ].	Select the desired size.
Zoom (page 6-16)	Select [100%] (or [Auto]).	Select [ <b>Auto</b> ].



When you select Storing Size that is different from Original Size, and select the Zoom [100%], you can store the image as the actual size (No Zoom).

# **Long Original**





Reads long-sized original documents using a document processor.

(Value: [Off] / [On])



### **NOTE**

- Long originals are sent in black and white or Grayscale.
- Only a single side of a long original cannot Originals of up to 915 mm / 36-1/32" long can be scanned.
- You can select resolution 300×300 dpi or less.

# **Encrypted PDF**



Enter the preassigned password to print the PDF data.

Enter the Password, and select [OK].



For details on entering the password, refer to the following:


→ Character Entry Method (page 11-9)

# JPEG/TIFF Print



Select the image size when printing JPEG or TIFF files.

(Value: [Paper Size] / [Image Resolution] / [Print Resolution])

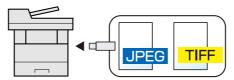


Item	Description
Paper Size	Fits the image size to the selected paper size.
Image Resolution	Prints at resolution of the actual image.
Print Resolution	Fits the image size to the print resolution.

# **XPS FitTo Page**



Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.

(Value: [Off] / [On])

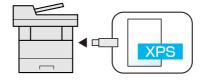

# 7 Status/Job Cancel

### This chapter explains the following topics:

Checking Job Status	7-2
Checking Job History	7-8
Sending the Log History	
Job Operation	
Pause and Resumption of Jobs	. 7-13
Canceling of Jobs	. 7-13
Device/Communication	
Checking the Remaining Amount of Toner and Paper (Paper/Supplies)	. 7-16

# **Checking Job Status**

Check the status of jobs being processed or waiting to be printed.

### **Available Status Screens**

The processing and waiting statuses of jobs are displayed as a list on the message display in four different screens - Printing Jobs, Sending Jobs, Storing Jobs, and Scheduled Jobs.

The following job statuses are available.

Status Display	Job status to be displayed
Print Job Status	• Copy
	• Printer
	FAX reception
	E-mail reception
	Printing from Document Box
	Printing data from USB drive
	Job Report/List
Send Job Status	FAX transmission
	• E-mail
	Folder transmission
	Application
	Multiple destination
Store Job Status	• Scan
	• FAX
	• Printer
Scheduled Job	Sending Job FAX using Delayed transmission

### **Displaying Status Screens**

### **1** Display the screen.

[Status/Job Cancel] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Print Job Status], [Send Job Status], [Store Job Status] or [Scheduled Job] > [OK] key

# Select the job you want to check.

1 Select the job you want to check, and [Menu].

# NOTE

You can show the job statuses of all users, or only the statuses of your own jobs.

→ Disp. Status/Log (page 8-40)

This setting can also be changed from Command Center RX.

> Command Center RX User Guide

### 2 [▲] [▼] key > [**Detail**] > [**OK**] key

Jobs Detail Status is displayed.

### **NOTE**

- If a FAX job is selected in [Send Job Status] then [PriorityOverride] is displayed. Select [PriorityOverride] and select the [OK] key to suspend the current job and gives the selected job top priority.
- For [Scheduled Job], [Start Now] is displayed. Select [Start Now] and select the [OK] key to send the selected job immediately.

# **3** Check the status.

Select the [◄] key to view the next screen. Select the [▶] key to return to the previous screen.

Print Job Status (page 7-4)
 Send Job Status (page 7-5)
 Store Job Status (page 7-6)
 Scheduled Job Status (page 7-7)

### **Print Job Status**

Item	Description
Status	Status of job  [Processing]:The status before starting to print.  [Pause]: Pausing print job or error  [Canceling]: Canceling the job  []: The job is finished.
Accepted Time	Accepted Time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[Copy]:Copy job[FAX]*1:FAX reception[Box]:Job from Document Box[Printer]:Printer job[Report]:Report/List[E-mail]:E-mail reception[USB]:Data from USB drive
User Name	User Name for the executed job If user login administration is disabled, [] appears.
Page and Copy	<ul> <li>Number of pages printed</li> <li>Number of copies printed / Total number of copies to be printed</li> </ul>
Original Pages	Number of original pages
Sender Info.	The sender information is displayed.  When receiving a FAX  If the name of the sender is provided when receiving a FAX, the name is displayed. If only the number of the sender is provided, the number is displayed.  If there is no information about the sender or if a FAX is not received, [] appears.  For E-mails  The E-mail address is displayed.  In other cases, [] is displayed.  NOTE  When the sender information is displayed in a short form, select [Detail] to see the complete sender Information. Select the [OK] key to return to the previous screen.

<sup>\*1</sup> Displayed only on products with the fax function installed.

# Send Job Status

Item	Description
Status	Status of job  [Processing]:The status before starting sending such as during scanning originals  [Pause]: Pausing the job  [Canceling]: Canceling the job
Accepted Time	Accepted Time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[FAX]*1: Sending Job FAX [E-mail]: Sending Job E-mail [Folder]: Sending Job Folder (SMB/FTP) [Application]:Sending Job Application [Multi]: Multi Sending
User Name	User Name for the executed job If user login administration is disabled, [] appears.
Original Pages	Number of original pages
Color/B & W	Color mode [Color/B & W] [Full Color] [Black & White] [Grayscale] [Mixed] [Auto (Color/Gray)] [Auto (Color/B & W)]
Destination	The destination is displayed.  If there is one destination:  Destination (Either destination name, FAX number, E-mail address, or server name)  NOTE  When the destination is displayed in a short form, select [Detail] to see the complete destination. Select the [OK] key to return to the previous screen.  If there are multiple destinations:  [Broadcast] is displayed.  When [List] is selected, all destinations are displayed.  Select [Exit] to return to the original screen.  NOTE  When the destination in a short form, select the destination and then select the [OK] key to see the complete destination. Select the [OK] key to return to the previous screen.

<sup>\*1</sup> Displayed only on products with the fax function installed.

### **Store Job Status**

Item	Description
Status	Status of job [Processing]:The status before starting sending such as during scanning originals [Canceling]: Canceling the job
Accepted Time	Accepted Time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[FAX]*1: Storing Job FAX [SCAN]: Storing Job Scan [Printer]: Storing Job Printer
User Name	User Name for the executed job If user login administration is disabled, [] appears.
Original Pages	Number of original pages
Color/B & W	Color mode [Color/B & W] [Full Color] [Black & White] [Grayscale] [Mixed] [Auto (Color/Gray)] [Auto (Color/B & W)]
Sender Info.	The sender information is displayed.  When receiving a FAX  If the name of the sender is provided when receiving a FAX, the name is displayed. If only the number of the sender is provided, the number is displayed.  If there is no information about the sender or if a FAX is not received, [] appears. In other cases, [] is displayed.  NOTE  When the sender Information is displayed in a short form, select [Detail] to see the complete sender Information. Select the [OK] key to return to the previous screen.

<sup>\*1</sup> Displayed only on products with the fax function installed.

### **Scheduled Job Status**

Item	Description
Status	Status of job
	[ <b>Waiting</b> ]: Waiting Sending
Start Time	Time to start the scheduled job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[FAX] is displayed.
User Name	User Name for the executed job
	If user login administration is disabled, [] appears.
Original Pages	Number of original pages
Color/B & W	Color mode
	[Black & White]
Destination	The destination is displayed.
	▶ <u>Destination (page 7-5)</u>

# **Checking Job History**

Check the history of completed jobs.

**NOTE** 

Job history is also available by Command Center RX or KYOCERA Net Viewer from the computer.

- > Command Center RX User Guide
- KYOCERA Net Viewer User Guide

### **Available Job History Screens**

The job histories are displayed separately in four screens - Printing Jobs, Sending Jobs, Storing Jobs, and FAX Jobs. The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	• Copy
	• Printer
	FAX reception
	E-mail reception
	Printing from Document Box
	Job Report/List
	Printing data from USB drive
	Application
Send Job Log	• FAX
	• E-mail
	• Folder
	Application
	Multiple destination
Store Job Log	• Scan
	• FAX
	• Printer
FAX Job Log	<b>→</b> FAX Operation Guide

### **Displaying Job History Screen**

### **1** Display the screen.

[Status/Job Cancel] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Print Job Log], [Send Job Log], [Store Job Log] or [FAX Job Log] > [OK] key

**NOTE** 

For [FAX Job Log], refer to the following:

FAX Operation Guide

### Select the job you want to check.

Select the job you want to check, and [Detail].

A job result icon is displayed on the extreme right of each job.

- : The job has been completed.
- : An error has occurred.

### **NOTE**

You can show the job log of all users, or only your own job log.

→ Disp. Status/Log (page 8-40)

This setting can also be changed from Command Center RX.

Command Center RX User Guide

# **?** Check the job history.

Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.

Print Job Log (page 7-10)
 Send Job Log (page 7-11)
 Store Job Log (page 7-12)

### **Print Job Log**

Item	Description
Result	Result of job
	[ <b>OK</b> ]: The job has been completed.
	[ <b>Error</b> ]: An error has occurred.
	[Cancel]: The job has been canceled.
Accepted Time	Accepted time of job
End Time	Completed time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[Copy]: Copy job
	[ <b>FAX</b> ] <sup>*1</sup> : FAX reception
	[ <b>Box</b> ]: Job from Document Box
	[ <b>Printer</b> ]: Printer job
	[ <b>Report</b> ]: Report/List
	[ <b>E-mail</b> ]: E-mail reception
	[ <b>USB</b> ]: Data from USB drive
User Name	User Name for the executed job
	If user login administration is disabled, [] appears.
Page and Copy	Number of pages printed
	Number of copies printed / Total number of copies to be printed
Original Pages	Number of original pages
Sender Info.	The sender information is displayed.
	→ Sender Info. (page 7-4)

<sup>\*1</sup> Displayed only on products with the fax function installed.

### Send Job Log

Item	Description
Result	Result of job  [OK]: The job has been completed.  [Error]: An error has occurred.
Accepted Time	[Cancel]: The job has been canceled.  Accepted Time of job
End Time	Completed time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[E-mail]:       Sending Job E-mail         [Folder]:       Sending Job Folder (SMB/FTP)         [FAX]*1:       Sending Job FAX         [Application]:       Sending Job Application         [FAX Server]:       FAX Server transmission         [Multi]:       Multi Sending
User Name	User Name for the executed job If user login administration is disabled, [] appears.
Original Pages	Number of original pages
Color/B & W	Color mode [Color/B & W] [Full Color] [Black & White] [Grayscale] [Mixed]
Destination	The destination is displayed.  → Destination (page 7-5)

<sup>\*1</sup> Displayed only on products with the fax function installed.



If the login user name entry screen appears during operations, log in by referring to the following:

**→** Login (page 2-15)

### Store Job Log

Item	Description
Result	Result of job  [OK]: The job has been completed.  [Error]: An error has occurred.  [Cancel]: The job has been canceled.
Accepted Time	Accepted Time of job
End Time	Completed time of job
Job Name	When the job name in Job Name is displayed in a short form, select [ <b>Detail</b> ] to see the complete job name. Select the [ <b>OK</b> ] key to return to the previous screen.
Job Type	[FAX]*1: Storing Job FAX [SCAN]: Storing Job Scan [Printer]: Storing Job Printer
User Name	User Name for the executed job If user login administration is disabled, [] appears.
Original Pages	Number of original pages
Color/B & W	Color mode [Color/B & W] [Full Color] [Black & White] [Grayscale] [Mixed]
Sender Info.	The sender information is displayed.  → Sender Info. (page 7-6)

<sup>\*1</sup> Displayed only on products with the fax function installed.

# **Sending the Log History**

You can send the log history by E-mail. You can either send it manually as needed or have it sent automatically whenever a set number of jobs is reached.

→ Send History (page 8-7)

# **Job Operation**

# Pause and Resumption of Jobs

Pause/resume all printing jobs in printing/waiting.

### 1 Display the screen.

Select the [Status/Job Cancel] key.

### Select [Pause].

Printing is paused.

When resuming the printing of jobs that have been paused, select [**Resume**].



If the [**Back**] key or other function key, such as the [**Copy**] key, is selected during Pause, "Resume paused jobs. Are you sure?" appears. If [**Yes**] is selected and then the [**OK**] key is selected, the job is resumed and the following screen appears. If [**No**] is selected and then the [**OK**] key is selected, the following screen appears while the job is paused.

# **Canceling of Jobs**

A job in printing/waiting status can be canceled.

### **1** Display the screen.

[Status/Job Cancel] key  $> [\blacktriangle]$  [ $\blacktriangledown$ ] key > [Print Job Status], [Send Job Status], [Store Job Status] or [Scheduled Job] > [OK] key

# **2** Cancel a job.

### **Print Job Status**

- 1 Select the job to be canceled, and [Menu].
- 2 [▲] [▼] key > [Cancel Job] > [OK] key > [Yes]

# **NOTE**

When FAX reception job is selected, [**Cannot cancel FAX reception jobs.**] is displayed and the job cannot be canceled.

### Send Job Status, Store Job Status or Scheduled Job Status

1 Select the job to be canceled, and [Cancel].



A job can be canceled by selecting [Menu], selecting [Cancel Job] and then selecting the [OK] key.

2 Select [Yes].

# **Device/Communication**

Configure the devices/lines installed or connected to this machine or check their status.

### **1** Display the screen.

Select the [Status/Job Cancel] key.

### Check the status.

Select the items you want to check. Then, select the **[OK]** key to show the status of the selected device.

The items you can check are described below.

### "Rmt. Op. Status"

The status of the Remote Operation Status is displayed.

### "Scanner"

The status of an original scanning or the error information (paper jam, opened cover, etc.) is displayed.

### "Printer"

Error information such as paper jam, out of toner, or out of paper, and status such as waiting or printing are displayed.

### "FAX"

- The information such as sending/receiving and dialing is displayed.
- Select [Line Off] to cancel a fax in sending/receiving.

### **→** FAX Operation Guide

### "USB drive"

- The usage, capacity and free space of the external media connected to this machine are displayed.
- Select [Remove] to safely remove the external media.

### "SSD"

The status of the optional SSD is displayed.

### "Keyboard"

The status of the optional Bluetooth Keyboard is displayed.

### "Network"

The network connection status appears.

### "Wi-Fi"

The Wi-Fi connection status and network name (SSID) of the machine appear.

This function is displayed when the wireless network function is available on the machine.

### "Wi-Fi Direct"

This function is displayed when the wireless network function is available on the machine.

- Select [▲] [▼] key > [**PushButton Setup**] > [**OK**] key, and execute the push button of the device you want to connect to start the connection to the machine.
- Select [▲] [▼] key > [**Detail Info**] > [**OK**] key, information on the device that is connected by Wi-Fi Direct appears.
- Select [▲] [▼] key > [ConnectionStatus] > [OK] key > [▲] [▼] key > [ConnectedDevices] > [OK] key to display the list of connected devices.
- Select [▲] [▼] key > [ConnectionStatus] > [OK] key > [▲] [▼] key > [DisconnectAll] > [OK] key to disconnect all devices.

### "Option Network"

The connection status of the optional Network Interface Kit is displayed.

### "Security"

You can check the security information on the machine.

# **Checking the Remaining Amount of Toner and Paper (Paper/Supplies)**

Check the remaining amount of toner, and paper on the message display.

### 1 Display the screen.

Select the [Status/Job Cancel] key.

### Check the status.

[▲] [▼] key > [Toner Status] or [Paper Status] > [OK] key

The items you can check are described below.

### "Toner Status"

The amount of toner remaining is shown in levels.

### "Paper Status"

The status of the source is displayed. Select the  $[\ \ \ ]$  key to view the next source. Select the  $[\ \ \ ]$  key to return to the previous screen.

# 8 Setup and Registration (System Menu)

### This chapter explains the following topics:


System Menu	8-2
System Menu Settings	8-3
Report	8-5
System/Network	8-8
Úser/Job Account	8-27
User Property	8-27
Common Settings	8-28
Copy	8-43
Printer	
Send	
FAX	8-47
Document Box	8-48
Edit Destination	
Adjust/Maint	8-50
•	

# **System Menu**

Configure settings related to overall machine operation.

Select the [**System Menu/Counter**] key to show the settings on the message display. Then, select from the settings displayed.

◆ Operation Method (page 2-13)

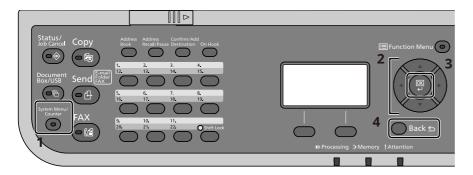

- 1 Displays the System Menu items.
- 2 Selects the item displayed or changes the numeric value.
- 3 Confirms the selected setting.
- 4 Cancels the current menu setting to return to the menu one level higher.

# NOTE

- If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.
- If function default settings have been changed, the [**Reset**] key can be selected in each function screen to immediately change the settings.

# **System Menu Settings**

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and select the setting item. For details on each function, see the table below.

Item	Description	Reference Page
Report Print	Configure settings for printing reports and histories.	page 8-5
Admin Rpt Set.		Refer to the FAX Operation Guide.
Result Rpt Set.		page 8-7
Job Log History		page 8-7
Counter	This counts the number of pages printed or scanned.	page 2-45
Network Setting	Configures network settings.	page 8-8
Optional Network	Configure settings for the optional Network Interface Kit.	page 8-19
Primary Network	Specify the network interface card to be used for the send function, the network authentication and connecting to external address book.	page 8-21
I/F Block Set.	This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.	page 8-22
Bluetooth Set.	Set the Bluetooth keyboard.	page 8-22
Security Level	The Security Level setting is primarily a menu option used by service personnel for maintenance work. There is no need for customers to use this menu.	_
Data Security	Configure settings for data stored in the optional SSD and machine's memory.	page 8-23
Restart	Restart the CPU without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)	page 8-24
Op Functions	You can use the optional applications installed on this machine.  page 8	
Remote Serv.Set.	When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.	page 8-24
Software Version	Check the machine's system and engine software versions.	page 8-24
FAX Server Settings	Configure settings for FAX Server.	page 8-25
Remote Operation	Configures remote operation settings.	page 8-25
Admin FW Update	Set whether to allow firmware updates.	page 8-26
Allowlisting	Configure settings to prevent malware from running and prevent software tampering.	page 8-26
Secure Boot	Display whether the Secure Boot function is available.  page 8-2	
User/Job Account	Configures settings related to machine management. User Login:	_
	<ul> <li>Overview of User Login Administration (page 9-2)</li> <li>Job Accounting:</li> <li>Overview of Job Accounting (page 9-25)</li> </ul>	
User Property	Allows you to view information about logged in users and edit some of that information.	

Item	Description	Reference Page
Language	Select the language displayed on the message display.	page 8-28
Default Screen	Select the screen appearing right after start-up (default screen).	page 8-28
Sound	Set options for buzzer sound during the machine operations.	page 8-28
Display Bright.	Set the brightness of the message display.	page 8-28
Cassette 1 (to 5) Set. (Cassette 1 (to 5) Settings)	Select type of paper in Cassette 1 (to 5).	page 8-32
MP Tray Set. (MP Tray Settings)	Select type of paper in multi purpose tray.	page 8-32
Orig./Paper Set.	Configure settings for originals.	page 8-29
Preset Limit	Restrict the number of copies that can be made at one time.	page 8-33
Measurement	Select inch or metric for the unit for paper dimensions.	page 8-33
Error Handling	Select whether to cancel or continue the job when error has occurred.	page 8-34
Date Setting	Configure settings related to the date and time.	page 8-34
Timer Setting	Configure settings related to the time.	page 8-35
Function Defaults	Defaults are the values automatically set after the warm-up is completed or the [ <b>Reset</b> ] key is selected.	page 8-37
	Set the defaults for available settings such as copying and sending. Setting the frequently-used values as defaults makes subsequent jobs easier.	
Login Operation	Select the screen to enter the login user name and password when logging in.	page 8-39
RAM Disk Mode	A RAM disk can be created and its size can be set.	page 8-40
Optional Memory	When optional memory is installed, select the memory allocation scheme based on the application in which you are using the equipment.	page 8-40
Disp. Status/Log	Set the display method of the Status/Log.	page 8-40
Keyboard Type	Select the type of keyboard that you want to use.	page 8-41
Low Toner Alert	Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.	page 8-41
Show PowerOffMsg	Set the mode whether display a confirmation message in power supply off.	page 8-41
EnergySaver Set.	Select the method of recovery from energy saver.	page 8-42
Msg Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.	page 8-42
Сору	Configures settings for copying functions.	page 8-43
Printer	Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.	page 8-44
Send	Configures settings for sending functions.	page 8-46
FAX	Configures settings for fax functions.	_
	→ FAX Operation Guide	
Document Box	Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box.	
	→ FAX Operation Guide	

Item	Description	Reference Page
Edit Destination	Configures Address Book and One Touch Key settings. Address Book:	page 8-49
	★ Adding a Destination (Address Book) (page 3-31) One Touch Key:	
	→ Adding a Destination on One Touch Key (One Touch Key) (page 3-38)	
Adjust/Maint.	Adjust printing quality and conduct machine maintenance.  page 8-50	

# **Report**

Print reports to check the machine settings and status.

Default settings for printing the result reports can also be configured.

## **Report Print**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report Print] > [OK] key

Item	Description		
Мепи Мар	Prints Menu Map to check the settings of the machine.  Menu Map  Firmware Version		
Config. List	Prints the list of settings of the system menu. The settings of this machine can be checked.  Config. List  Firmware Version		
Status Page	Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed.  Status Page  KYDDEERA		

Item	Description		
Font List	Prints the font list, allowing you to check the font samples installed in the machine.  Internal Sale board Bitmapped Fonts List PRESCRIBE  Font Name Scale List PRESCRIBE		
Opt NW Status	Prints the optional network status, allowing you to check the information including optional network interface firmware version, network address and protocol.  NOTE  This function is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.		
DataSanitization	Prints the data sanitization report.		

## Admin Rpt Set.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Report] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Admin Rpt Set.] > [OK] key Configure settings for fax functions.

FAX Operation Guide

## **Result Rpt Set.**

[System Menu/Counter] key > [▲] [▼] key > [Report] > [OK] key > [▲] [▼] key > [Result Rpt Set.] > [OK] key

	Item	Description
Send Result		Automatically print a report of transmission result when a transmission is complete.
E-mail/Folder		Automatically print a report of transmission result when E-mail or SMB/FTP transmission is complete.  Value: Off, On, Error Only
	FAX*1	→ FAX Operation Guide
Attached NW FAX		→ FAX Operation Guide
CancelBeforeSend*2		Print a send result report if the job is canceled before being sent.  Value: Off, On
	Dest. Info.*2	Select the Recipient Format for the send result report.
		Value: Dest. or Name, Dest. and Name
FAX F	XX Result <sup>*1</sup>	→ FAX Operation Guide
JobFinish Notice		Attaches sent images to job finish notices.
		Value: Do Not Attach Image, Attach SendImage

<sup>\*1</sup> Only on products with the fax function installed.

## **Job Log History**

[System Menu/Counter] key > [A] [V] key > [Report] > [OK] key > [A] [V] key > [Job Log History] > [OK] key

Item	Description	
Auto Sending	This function automatically sends the log history to the specified destinations whenever a set number of jobs has been logged.  Value: Off, On	
	NOTE	
	If [ <b>On</b> ] is selected, specify the number of job histories. The setting range is 1 to 16.	
Send History	You can also send the log history to the specified destinations manually.	
Destination	Set the destination to which log histories are sent. Only E-mail address can be set.	
Subject	Set the subject automatically entered when sending log histories by E-mail.  Value: Up to 60 characters	
SSFC Log Subject	Enter the subject of the printed job history with ID card authentication.  Value: Up to 60 characters	
Personal Info.	Select whether to include personal information in the job log.  Value: Include, Exclude	

<sup>\*2</sup> When "E-mail/Folder" and "FAX" are set to [Off], this function will not be displayed.

# System/Network

Configures machine system settings.

## **Network Setting**

[System Menu/Counter]  $key > [\blacktriangle] [\blacktriangledown] key > [System/Network] > [OK] key > [\blacktriangle] [\blacktriangledown] key > [Network Setting] > [OK]$ 

Configures network settings.

#### **Host Name**

Item	Description	
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.	
	◆ Changing Device Information (page 2-52)	

#### Wi-Fi Direct Set

Set Wi-Fi Direct.



This function is displayed when the wireless network function is available on the machine.

Item	Description
Wi-Fi Direct	Select whether to use Wi-Fi Direct.
	Value: Off, On
Device Name	Specify the device name.
	NOTE
	Up to 32 characters can be entered.
	This function is displayed when [Wi-Fi Direct] is set to [On].
IP Address	Check the IP address of the machine.
	→ TCP/IP Settings (page 8-11)
	NOTE
	This function is displayed when [ <b>Wi-Fi Direct</b> ] is set to [ <b>On</b> ].
Auto Disconnect	Automatically disconnect devices connected through Wi-Fi Direct.
	Value: Off, On
	NOTE
	This function is displayed when [ <b>Wi-Fi Direct</b> ] is set to [ <b>On</b> ].
Disconnect Tir	<b>ner</b> If you select [ <b>On</b> ] to Auto Disconnect, set the waiting time for automatic disconnection.
	Value: Day (00 to 99), Hour (00 to 23), Minute (00 to 59)
Frequency band	Set the frequency band to be used.
	Value: 2.4GHz, 5Ghz

## **Wi-Fi Settings**

Set Wi-Fi.



This function is displayed when the wireless network function is available on the machine.

Item Description			
Wi-Fi	Select whether to use Wi-Fi.  Value: Off, On		
Setup	-		
ConnectionStatus	Check the wireless LAN status.		
Quick Setup	If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.		
	NOTE  If you are connecting to an access point that has WEP enabled, select [Menu] and set [WEP Key Index].		
AvailableNetwork	Displays access points to which the machine can connect.  NOTE		
	<ul> <li>When [Reload] is selected, the list is reloaded.</li> <li>If the access point's security setting uses WEP, select [Menu] and set [WEP Key Index].</li> </ul>		
WEP Key Index	Select the key index of the access point.  Value: 0 to 3		
Push Button	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.		
	NOTE The push button method supports only the WPS.		
PIN (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.		

Item	Description			
Custom Setup	The detailed settings for wireless LAN can be changed.			
Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.			
	NOTE Up to 32 characters can be entered.			
Netwk Authentic.	Select network authentication type.  Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP, WPA3SAE/WPA2PSK, WPA3-SAE, WPA3/WPA2-EAP, WPA3-EAP			
Encryption	Select encryption metho Authentication setting.	od. The setting	yvalues vary depending on the Network	
	Network Encryption Authentication			
	Open	Disable	_	
		WEP	WEP Key: Up to 26 characters WEP Key Index: 0 to 3	
	WPA2/WPA-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters		
	WPA2-PSK	Data Encryption: AES, Auto Preshared Key: Up to 64 characters		
	WPA2/WPA-EAP	Data Encryption: AES, Auto		
	WPA2-EAP	Data Encryption: AES, Auto		
	WPA3SAE/WPA2PSK	Preshared Key		
	WPA3-SAE	Preshared Key		
	WPA3/WPA2-EAP	_		
	WPA3-EAP	_		

Item	Description		
CP/IP Settings	-		
TCP/IP	Select whether to use TCP/IP Protocol.  Value: Off, On		
IPv4 Setting	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [ <b>TCP/IP</b> ] is set to [ <b>On</b> ].		
DHCP	Select whether to use the DHCP (IPv4) server.  Value: Off, On		
Auto-IP	Select whether to use Auto-IP.  Value: Off, On		
IP Address	Set the IP address.  Value: ###.#################################		
	NOTE  When DHCP is set to [ <b>On</b> ], this item is displayed only and cannot be entered.		
Subnet Mask	Set the IP subnet mask.  Value: ###.#################################		
	NOTE  When DHCP is set to [ <b>On</b> ], this item is displayed only and cannot be entered.		
Default Gateway	Set the IP gateway address.  Value: ###.###.###		
	NOTE When DHCP is set to [ <b>On</b> ], this item is displayed only and cannot be entered.		
DNS Server	Set DNS server (IPv4).  Value: Auto (DHCP), Manual		
	NOTE When [Manual] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.		
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS.  Value: Off, On, Auto		

# *⊘* IMPORTANT

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.

Item	Description
IPv6 Setting	Set up TCP/IP (IPv6) to connect to the network. This setting is available when [ <b>TCP/IP</b> ] is [ <b>On</b> ].
IPv6 Setting	Select whether to use IPv6.  Value: Off, On
	NOTE Selecting [On] displays IP address in [Link Local] after restarting the network.
Manual Settings	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6).  Value
	IP Address: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).
	Prefix Length: 0 to 128  Default Gateway:128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).
	NOTE  This function is displayed when [IPv6 Setting] is set to [On].  To enter "Default Gateway", set [RA (Stateless)] to [Off].
RA(Stateless)	Select whether to use RA (Stateless).  Value: Off, On
	NOTE  This function is displayed when [IPv6 Setting] is set to [On].  Selecting [On] displays IP address in [IP Address 1 (to 5)] after restarting the network.
DHCPv6 Settings	Select whether to use the DHCP (IPv6) server.  Value: Off, On
	NOTE  This function is displayed when [IPv6 Setting] is set to [On].  Selecting [On] displays IP address in [IP Address] after restarting the network.
DNS Server	Set DNS server (IPv6).  Value: Auto (DHCP), Manual
	NOTE  When [Manual] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS.  Value: Off, On
Restart Network	Restarts the network.

# **⊘** IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

### Wired Netwk. Set

Configure wired network settings.

Item	Description
TCP/IP Settings	For details on setting value.
	→ TCP/IP Settings (page 8-11)
LAN Interface	Specify the settings for the LAN interface to be used.  Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000Base-T



## *⊘* IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

### **Bonjour**

	Item	Description
Avail	able Net.	Select whether to use Bonjour.  Value: Off, On
	Wi-Fi Direct <sup>*1</sup>	Set whether to enable this function for each network.
	Wi-Fi <sup>*1</sup>	Value: Disable, Enable
	Wired Network	

<sup>\*1</sup> Displayed only when the wireless network function is available on the machine.

## IP Filter (IPv4)

Item	Description
IP Filter (IPv4)	Make this setting when you use IP Filter (IPv4).
	Value: Off, On

## IP Filter (IPv6)

Item	Description
IP Filter (IPv6)	Make this setting when you use IP Filter (IPv6).  Value: Off, On

### **IPSec**

Item	Description
IPSec	Make this setting when you use IPSec.  Value: Off, On

## **ProtocolSettings**

Configure protocol settings.

Item	Description
NetBEUI	Selects whether to receive documents using NetBEUI.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE  This function is displayed when [NetBEUI] is set to [On].
SNMPv3	Select whether to communicate using SNMPv3.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [SNMPv3] is set to [On].
FTP (Server)	Select whether to receive documents using FTP.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE  This function is displayed when [FTP (Server)] is set to [On].
FTP (Client)	Select whether to send documents using FTP. When selecting [On], set the FTP Port Number. The default port number is 21.  Value: Off, On (Port Number: 1 to 65535)
SMB	Select whether to send documents using SMB. When selecting [ <b>On</b> ], set the SMB default Port Number. The default port number is 445.  Value: Off, On (Port Number: 1 to 65535)
SNMP	Select whether to communicate using SNMP.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [SNMP] is set to [On].
SMTP	Select whether to send E-mail using SMTP.  Value: Off, On
POP3	Select whether to receive E-mail using POP3.  Value: Off, On
RAW Port	Select whether to receive documents using Raw Port.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE  This function is displayed when [RAW Port] is set to [On].

Item	Description
LPD	Selects whether to receive documents using LPD.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE
	This function is displayed when [LPD] is set to [On].
IPP	Selects whether to receive documents using IPP. To use the IPP protocol, select [Not Secure (IPP&IPPS)] on IPP Security under Security Settings from the Command Center RX. The default port number is 631.*1  Value: Off, On (Port Number: 1 to 32767)
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi*2	Value: Disable, Enable
Wired Network	NOTE
	This function is displayed when [ <b>IPP</b> ] is set to [ <b>On</b> ].
IPP Over TLS	Select whether or not to use IPP over TLS.*1, *3
	Value: Off, On (Port Number: 1 to 32767)
	NOTE
	When selecting [ <b>On</b> ], it also requires a certificate for TLS. the default certificate is the self-certificate of the machine.
	<b>→</b> Command Center RX User Guide
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE
	This function is displayed when [IPP Over TLS] is set to [On].
НТТР	Select whether to communicate using HTTP.*1
	Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE
	This function is displayed when [HTTP] is set to [On].
HTTPS	Select whether to communicate using HTTPS.*1, *3  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE
	This function is displayed when [HTTPS] is set to [On].
LDAP	Select whether to use LDAP.
	Value: Off, On

Item	Description
ThinPrint	Select whether to use ThinPrint. To use the Thin Print protocol, set the protocol to [On]. The default port number is 4000.*1, *3  Value: Off, On (Port Number: 1 to 32767)
	NOTE  This function is displayed only when the optional ThinPrint Option is activated.
Thin Print over TLS	To use the Thin Print over TLS protocol, set [ <b>Thin Print Over TLS</b> ] to [ <b>On</b> ].*1,*3 <b>Value: Off, On</b>
	<ul> <li>NOTE</li> <li>This function is displayed when [ThinPrint] is set to [On].</li> <li>When selecting [On], it also requires a certificate for TLS. The default certificate is the self-certificate of the machine.</li> </ul>
	→ Command Center RX User Guide
Wi-Fi Direct*2	Set whether to enable this function for each network.  Value: Disable, Enable
Wi-Fi <sup>*2</sup>	NOTE
Wired Network	This function is displayed when [ <b>ThinPrint</b> ] is set to [ <b>On</b> ].
WSD-SCAN	Select whether to use WSD Scan.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [WSD-SCAN] is set to [On].
WSD-PRINT	Set whether to use our proprietary web services. WIA driver, TWAIN driver and Network FAX driver use this Enhanced WSD web service.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi*2	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [WSD-PRINT] is set to [On].
Enhanced WSD	Set whether to use our proprietary web services.*1  Value: Off, On
	NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX driver.
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [Enhanced WSD] is set to [On].

Item	Description
EnhancedWSD(TLS)	Set whether to use our proprietary web services over TLS.*1, *3  Value: Off, On
	NOTE Selecting [Off] will disable the functionality of WIA, TWAIN and Network FAX drivers.
Wi-Fi Direct*2 Wi-Fi*2	Set whether to enable this function for each network.  Value: Disable, Enable
Wired Network	NOTE This function is displayed when [EnhancedWSD(TLS)] is set to [On].
eSCL	Selects whether to receive scanned documents using eSCL.*1  Value: Off, On
Wi-Fi Direct*2	Set whether to enable this function for each network.  Value: Disable, Enable
Wired Network	NOTE This function is displayed when [eSCL] is set to [On].
eSCL over TLS	Selects whether to receive scanned documents using eSCL over TLS.*1, *3  Value: Off, On
Wi-Fi Direct*2 Wi-Fi*2	Set whether to enable this function for each network.  Value: Disable, Enable
Wired Network	NOTE This function is displayed when [eSCL over TLS] is set to [On].
VNC(RFB)	-
Off/On	Set when using a remote operation by starting up a VNC Viewer other than ours (example: Real VNC).*1  Value: Off, On
Port Number	Specifies the port number used. The default port number is 9062.*1  Value: 1 to 32767  NOTE  This function is displayed when [Off/On] is set to [On].
Available Net.	-
Wi-Fi Direct*2	Set whether to enable this function for each network.
Wi-Fi*2	Value: Disable, Enable
Wired Network	NOTE This function is displayed when [Off/On] is set to [On].

Item	Description
EnhncdVNC ov TLS	-
Off/On	Start Command Center RX and set for using TLS-protected remote operation.*1, *3  Value: Off, On
	NOTE
	The factory default setting is [ <b>On</b> ].
	• If the setting is [ <b>On</b> ], a TLS certificate is required. The factory certificate is the certificate owned by the machine.
	→ Command Center RX User Guide
Port Number	Specifies the port number used. The default port number is 9061.*1  Value: 1 to 32767
	NOTE
	This function is displayed when [ <b>Off/On</b> ] is set to [ <b>On</b> ].
Available Net.	-
Wi-Fi Direct <sup>*2</sup>	Set whether to enable this function for each network.
Wi-Fi <sup>*2</sup>	Value: Disable, Enable
Wired Network	NOTE
1111001110111	This function is displayed when [ <b>Off/On</b> ] is set to [ <b>On</b> ].

- \*1 The setting will be changed after restarting the device or network.
- \*2 Displayed only when the wireless network function is available on the machine.
- \*3 Set "TLS" to [**On**] in Secure Settings.
- Secure Settings (page 8-18)



After changing the setting, restart the network or turn the machine OFF and then ON.

#### **Secure Settings**

Item	Description
TLS	Select whether or not to use TLS.
	Value: Off, On

## Ping

Item	Description
Ping	Checks if communication with the destination by entering the host name or IP address of the destination is possible.
	NOTE  If [Primary Network] is set to [Option Network], this item is not displayed.

#### **Restart Network**

Item	Description
Restart Network	Restarts the network.

## **Optional Network**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Optional Network] > [**OK**] key

Configure settings for the optional Network Interface Kit.



## **NOTE**

This menu is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

### Setup

	Item	Description
Conn	ectionStatus	When the optional Wireless Network Interface Kit is installed, you can check the wireless LAN status.
Quick Setup		If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.
	AvailableNetwork	Displays access points to which the machine can connect.
	Push Button	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.
		NOTE
		The push button method supports only the WPS.
	PIN (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.
	PIN (Terminal)	Starts connection using the PIN code of the access point. Enter the PIN code of the access point.

	Item	Description
Custo	om Setup	The detailed settings for wireless LAN can be changed. You can check the connection with a wireless network by selecting [ <b>Connect</b> ].
	Netwk Name(SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.
		NOTE
		Up to 32 characters can be entered.
	Connection Mode	Set the connection mode.
		Value: Ad Hoc, Infrastructure
		NOTE
		<b>Ad Hoc</b> : Directly communicates with the device without going through an access point. This method cannot be used to connect to two or more devices.
		Infrastructure: Performs communication through an access point.
	Channel	Set channel. Use [▲] or [▼] or the numeric keys to enter a number.
		Value: 1 to 11
	Netwk Authentic.	Select network authentication type. To select other options, open the device home page from a computer.
		Value: Open, Shared, WPA-PSK*1, WPA2-PSK*1
	Encryption	Select encryption settings. The setting values vary depending on the "Netwk Authentic." setting.
	Data Encryption	Set the encryption method.
		When "Netwk Authentic." is set to [Open] or [Shared]: Value: Disable, WEP
		When "Netwk Authentic." is set to [WPA-PSK] or [WPA2-PSK]: Value: TKIP*2, AES, Auto*2
	WEP Key	Register the WEP key. Select [ <b>Edit</b> ] and Enter the WEP Key using the numeric keys.
		NOTE
		Up to 26 characters can be entered.
		→ Character Entry Method (page 11-9)
	Preshared Key*3	Register the Preshared Key. Select [ <b>Edit</b> ] and Enter the Preshared Key using the numeric keys.
		NOTE
		The number of characters is between 8 and 64.
		→ Character Entry Method (page 11-9)
		1 7 7

<sup>\*1</sup> Not displayed if you selected [**Ad Hoc**] for "Connection Mode".

#### **Basic**

Item	Description
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.
	→ Changing Device Information (page 2-52)
TCP/IP Settings	For details on setting value.
	TCP/IP Settings (page 8-13) IPSec (page 8-13)

<sup>\*2</sup> Not displayed if you selected [WPA2-PSK] for "Netwk Authentic.".
\*3 Displayed if you selected [WPA-PSK] or [WPA2-PSK] for "Netwk Authentic.".

Item	Description
Bonjour	Select whether to use Bonjour.  Value: Off, On
Wi-Fi Direct*1	Set whether to enable this function for each network.
Wi-Fi <sup>*1</sup>	Value: Disable, Enable
Wired Network	
IPSec	Select whether to use IPSec.
	Value: Off, On
LAN Interface	Select the LAN Interface type.*2
	Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000Base-T
	This function is displayed when the optional Network Interface Kit is installed.
MACAddressFilter	Select whether to use MAC Address Filter.
	Operation Guide for the optional Network Interface Kit
	Value: Off, On
Restart Network	Restarts the network card of the device.

<sup>\*1</sup> Displayed only when the wireless network function is available on the machine.

## **Primary Network**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Primary Network] > [OK] key



This function is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

Item	Description
Primary Network	Specify the network interface card to be used for the send function, the network authentication and connecting to external address book.  Value: Wi-Fi, Wired Network, Option Network

<sup>\*2</sup> The setting will be changed after restarting the device or network.

### I/F Block Set.

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [I/F Block Set.] > [OK] key

This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.

Item	Description
USB Host	This locks and protects the USB port (USB host).
	Value: Unblock, Block
USB Device	This locks and protects the USB interface connector (USB Device).
	Value: Unblock, Block
USB Storage	This locks and protects the USB drive slot.
	Value: Unblock, Block
	NOTE
	This function is available when USB Host is set to [ <b>Unblock</b> ].
Option I/F	This locks and protects the optional interface slots.
	Value: Unblock, Block
	NOTE
	If the machine has two optional interface slots, you can set this feature for each slot.

**IMPORTANT** 

After changing the setting, restart the network or turn the machine OFF and then ON.

#### **Bluetooth Set.**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Bluetooth Set.] > [OK] key



**NOTE** 

This function is displayed when the Bluetooth adapter is installed.

Item	Description
Bluetooth	Use Bluetooth Keyboard.  Value: Off, On
Search Device	Select the keyboard to be used.

## **Security Level**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Security Level] > [OK] key

Item	Description
Security Level	Specify the security level.
	Value
	Low: This mode is used during maintenance. Do not use normally.
	High: This is the security setting we recommend. Use this setting normally.
	Very High: In addition to [High] setting, this setting disables the machine settings to be changed from external command.

## **Data Security**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [System/Network] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Data Security] > [OK] key

Configure settings for data stored in the optional SSD and machine's memory.

	Item	Description
SSD I	nitializ.	This changes security function settings.
		NOTE
		This function is displayed when the optional SSD is installed and the optional Data Security Kit is activated.
		Input of the security password is required to change security function settings. The initial setting for the Security Password is "000000".
	Security Passwd	You can customize the security password so that only the administrator can use the security kit.
		Enter a password that uses six to 16 alphanumeric characters and symbols.
		You will need to enter the password again for confirmation.
		<b>⊘</b> IMPORTANT
		Avoid any easy-to-guess numbers for the security password (e.g. 11111111 or 12345678).
	Initialization	This can be used to delete all the data stored in the SSD. Overwrite all the data stored in the SSD when disposing of the machine.
		If you accidentally turn the power switch off during initialization, the SSD might possibly crash or initialization might fail.
		NOTE
		If you accidentally turn off power during initialization, turn it back on.
		Initialization will restart automatically.
Data	Sanitization	Return the following information registered in the machine to the factory defaults.
		System settings
		<ul><li>Data saved in Custom Box</li><li>Optional applications</li></ul>
		<b>⊘</b> IMPORTANT
		Data saved in an application or SD card cannot be erased. To erase data on an SD card, you must format the SD card.
		NOTE
		Once in progress, the processing cannot canceled.
		Before performing this function, disconnect modular, network, and other cables.
		Before performing this function, set all interface block settings to [ <b>Unblock</b> ].
		→ I/F Block Set. (page 8-22)
		Do not turn off the main power switch while sanitizing the data. If the main power is turned off during data erasing, erasing will be executed automatically when the power is restored, however, complete erasure cannot be guaranteed.

	Item	Description
	Run Immediately	Data Sanitization will be performed.
	Schedule	Completely erase address and image data saved in the device at the scheduled time.  Value: Off, On
		If [ <b>On</b> ] is selected, set the date and time that sanitization is to be performed. The setting range is Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23).
	Device Use	The device use restriction after the data sanitization is completed.
		The device cannot be used if [ <b>Prohibit</b> ] is selected.
		Value: Permit, Prohibit
SW Verification		Verify the software in the machine.
		Select [ <b>Execute</b> ] to start verification. If you experience any abnormalities in software verification, contact your service representative.

#### **Restart**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Restart] > [OK] key

Item	Description
Restart	Restart the CPU without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)

### **Op Functions**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Op Functions] > [OK] key

Item	Description
Op Functions	You can use the optional applications installed on this machine.
	◆ Optional Applications (page 11-7)

#### Remote Serv.Set.

[System Menu/Counter] key >  $[ \_ ]$  key > [System/Network] >  $[ \_ ]$  key >  $[ \_ ]$  key > [Remote Serv.Set.] > [OK] key

When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.



When using the remote service settings, it is necessary to make a contract with our company.

Please contact our sales office or our authorized dealer (purchase source) for the details.

#### **Software Version**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Software Version] > [OK] key

Item	Description
Software Version	Check the machine's system and engine software versions.

## **FAX Server Settings**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [System/Network] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [FAX Server Set.] > [OK] key

Configure settings for FAX Server.

Item	Description
FAX Server	Select whether or not to use FAX Server.
	Value: Off, On
Address Settings	Set the prefix, suffix, and domain name to be assigned to the address.
	NOTE
	For the fax server information, ask your fax server administrator.
File Format	Select the default type of the files to be sent.
	Value: PDF, TIFF, XPS
AddrBookDefaults	Set the expansion address book to be used.
	Value: Machine AddrBook, Ext. Address Book
	NOTE
	This appears when [ <b>On</b> ] is set in fax server.
	This does not appear when extension address book is not enabled.
	→ Command Center RX User Guide

## **Remote Operation**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Remote Serv.Set.] > [OK] key

Item	Description
Remote Operation	-
Off/On	Configure settings for remote operation.  Value: Off, On
Use Restriction	Configure settings for Use Restriction  Value:  [Off]: Users without administrator privileges can also execute remote operation.  [Use Password]: Enter the password, then re-enter it to confirm.  [Admin. Only]: Only administrator can execute remote operation.  NOTE  • This function is displayed when [Off/On] is set to [On].  • When selecting [Admin. Only], the remote operation using VNC software is unavailable.
VNC Comp. Soft	Shows whether VNC compatible software is available.  NOTE  This function is displayed when [Off/On] is set to [On].

## **Admin FW Update**

[System Menu/Counter] key > [▲] [▼] > key [System/Network] > [OK] key > [▲] [▼] key > [Admin FW Update] > [OK] key

Item	Description
Admin FW Update	Set whether to allow firmware updates.  Value: Off, On

## **Allowlisting**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Allowlisting] > [OK] key

Item	Description
Allowlisting	In case if the unauthorized program or the program that has tampered are installed, the stored data or the contents of the communication in this program might be stolen.
	Once this function is activated, execution of the unauthorized software or the tampering of the software can be prevented, and possible to maintain the reliability of the system.
	Value: Off, On
	NOTE
	After setting to [ <b>On</b> ], it is necessary to turn the power off and on.
	Once this function is activated, the start up of this product will be slowered.
	• If malware is detected, an event report can be used as a way to understand its content. Event reports are available if the Command Center RX "Management Settings: Notification/Report" [Recipient 1 (to 3) e-mail address is designated] and [Notify when Malicious Program is Detected] is set to [On].

#### **Secure Boot**

[System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Secure Boot] > [OK] key

Secure Boot is a function that detects tampering with firmware when the machine boots. It verifies the digital signature assigned to the firmware, and prevents the firmware from running if it detects tampering.



## **IMPORTANT**

When tampering is detected and Secure Boot fails, F000 will displayed on the panel.

Item	Description
Secure Boot	Configure Secure Boot for firmware.  Value: BIOS, BIOS + Firmware
	<ul> <li>NOTE</li> <li>After changing the setting, turn the machine OFF and then ON.</li> <li>Once this function is activated, the start up of this machine will be slowered.</li> </ul>

# **User/Job Account**

[System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

Configure settings related to machine management.

Overview of User Login Administration (page 9-2)
 Overview of Job Accounting (page 9-25)
 Unknown ID Job (page 9-42)

# **User Property**

[System Menu/Counter] key > [▲] [▼] key > [User Property] > [OK] key

Allows you to view information about logged in users and edit some of that information.

**▶** Enabling User Login Administration (page 9-3)

# **Common Settings**

Configures overall machine operation.

## Language

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Language] > [OK] key

Item	Description
Language	Select the language displayed on the message display.

#### **Default Screen**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Default Screen] > [OK] key

Item	Description
Default Screen	Select the screen appearing right after start-up (default screen).
	Value: Status, Copy, Send, FAX, Document Box

#### Sound

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Sound] > [OK] key

Item	Description
Buzzer	Set options for buzzer sound during the machine operations.
Key Confirmation	Emit a sound when the operation panel keys are selected.  Value: Off, On
Job Finish	Emit a sound when a print job is normally completed.  Value: Off, On, FAX RX Only*1
Ready	Emit a sound when the warm-up is completed.  Value: Off, On
Warning	Emit a sound when errors occur.  Value: Off, On
Keyboard Confirm	Emit a sound to confirm keypresses with a sound.  Value: Off, On
FAX Speaker*1	→ FAX Operation Guide
FAX Monitor *1	→ FAX Operation Guide

<sup>\*1</sup> Only on products with the fax function installed.

## **Display Bright. (Display Brightness)**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Display Bright.] > [OK] key

Item	Description
Display Bright.	Set the brightness of the message display.
	Value: Darker -3, Darker -2, Darker -1, Normal 0, Lighter +1, Lighter +2, Lighter +3

## Orig./Paper Set.

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Orig./Paper Set.] > [OK] key

Configure settings for originals.

Item	Description
Custom Orig. Size	Set up frequently-used custom original size. The custom size option is displayed on the screen to select original size.  Value Metric X: 50 to 356 mm (in 1 mm increments) Y: 50 to 216 mm (in 1 mm increments) Inch X: 1.97 to 14.02" (in 0.01" increments) Y: 1.97 to 8.50" (in 0.01" increments) Horizontal
	Y
Detect Orig.(DP)	Select whether to automatically detect originals of the document processor.
Auto Detect	Select whether to enable automatic detection of original size.  Value: Off, On
System of Units	Select metric or inch for the unit of original size detection.  Value: Metric, Inch
LGL/OFII/216x3	As Legal, OficioII and 216 x 340 mm are similar in size, select either one of them for automatic detection.  Value: Legal, OficioII, 216 x 340 mm  NOTE  When [Auto Detect] is set to [Off], this function will not be displayed.  When [System of Units] is set to [Metric], this function will not be displayed.
Def. Orig. Size	Set the default original size.  Value: A4, A5, A6, B5, B6, Folio*1, 216 × 340 mm*1, Letter, Legal*1, Statement, Executive, Oficio II*1, 16K

<sup>\*1</sup> Not displayed for inch models.

Item	Description	
Custom PaperSize	Set up frequently-used custom paper size.	
	One custom paper size is set for each paper supply source. The custom size option is displayed on the screen to select paper size.	
Cassette 1 Size*1	Register the custom paper size to be used in Cassette 1.	
	Value	
	Metric	
	X: 140 to 216 mm (in 1 mm increments) Y: 210 to 356 mm (in 1 mm increments)	
	Inch X: 5.50 to 8.50" (in 0.01" increments) Y: 8.25 to 14.02" (in 0.01" increments)	
	X=Length, Y=Width	
	Vertical X	
	Y	
Cassette 2 (to 5) Size*1	Register the custom paper size to be used in Cassettes 2 to 5.	
	Value	
	Metric	
	X: 92 to 216 mm (in 1 mm increments)	
	Y: 162 to 356 mm (in 1 mm increments) Inch	
	X: 3.62 to 8.50" (in 0.01" increments)	
	Y: 6.38 to 14.02" (in 0.01" increments)	
MP Tray Size	Register the custom paper size to be used in the multi purpose tray.	
	Value	
	Metric	
	X: 70 to 216 mm (in 1 mm increments) Y: 148 to 356 mm (in 1 mm increments)	
	Inch	
	X: 2.76 to 8.50" (in 0.01" increments) Y: 5.83 to 14.02" (in 0.01" increments)	
	X=Length, Y=Width	
	Vertical Horizontal	
	X	
Cassette 1 (to 5) Set.	Select the paper size and media type for cassettes 1 to 5.	
	→ Cassette 1 (to 5) Set. (Cassette 1 (to 5) Settings) (page 8-32)	
MP Tray Set.	Select the paper size and media type for the multi purpose tray.	
	→ MP Tray Set. (MP Tray Settings) (page 8-32)	

 $<sup>\</sup>star 1$  Only set this when the size dial on the cassette is set to "Other".

Item	Description	
Media Type Set.	Select weight for each media type.	
	For Custom 1-8, settings for duplex printing and media type name can be changed.	
	→ Media Type Setting (page 8-33)	
Media for Auto	Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size.  Value: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8	
Def. PaperSource	Select the default paper source from Cassette 1-5 and multi purpose tray.  Value: Cassette 1 to 5, MP Tray  NOTE	
	[Cassette 2] to [Cassette 5] are displayed when optional paper feeder is installed.	
SpecialPaper Act.	When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adj. PrintDirect] to adjust the print direction. When paper orientation is not important, select [Speed Priority].  If [Adj. PrintDirect] is selected, load paper according to the steps below.  Example: copying on Letterhead  Original Paper Finished Cassette Multipurpose Tray  Original Paper Finished Cassette Multipurpose Tray  Original Paper Finished Cassette Multipurpose Tray	
	Tray	
	Value: Adj. PrintDirect, Speed Priority	
Paper Setup Msg	Set whether to display the confirmation screen for the paper setting when a new paper is set for each cassette.	
Cassette 1 to 5	Value: Off, On	
MP Tray	NOTE [Cassette 2] to [Cassette 5] are displayed when optional paper feeder is installed.	

#### Cassette 1 (to 5) Set. (Cassette 1 (to 5) Settings)

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Orig./Paper Set.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Cassette 1 (to 5) Set.] > [OK] key

Select paper size and media type for Cassettes 1 to 5.

Item	Description	
Cassette 1 (to 5) Size*1	Available options are as follows:	
	Value	
	Cassette 1: A4, A5, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope C5, Custom	
	Cassettes 2 to 5: A4, A5, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Nagagata 3, Younaga 3, Custom	
Cassette 1 (to 5) Type <sup>*2</sup>	Select the media type.	
	Value	
	Cassette 1: Plain (60 to 105 g/m²), Rough, Recycled, Preprinted*3, Bond, Color, Prepunched*3, Letterhead*3, High Quality, Custom 1 - 8	
	Cassettes 2 to 5: Plain (60 to 105 g/m²), Rough, Recycled, Preprinted*3, Bond, Color, Prepunched*3, Letterhead*3, Envelope, High Quality, Custom 1 - 8	

<sup>\*1</sup> Only set this when the size dial on the cassette is set to "Other".

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.

◆ SpecialPaper Act. (page 8-31)

#### **MP Tray Set. (MP Tray Settings)**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Orig./Paper Set.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [MP Tray Set.] > [OK] key

Select paper size and media type for the multi purpose tray.

Item	Description
MP Tray Size	Available options are as follows:  Value: A4, A5, A5-R, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Statement-R, Executive, Oficio II, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Nagagata 3, Younaga 3, Custom*1
MP Tray Type <sup>*2</sup>	Select the media type.  Values: Plain (60 to 105 g/m²), Transparency, Rough, Vellum, Labels, Recycled, Preprinted*³, Bond, Cardstock, Color, Prepunched*³, Letterhead*³, Envelope, Thick (106 to 220 g/m²), High Quality, Custom 1-8

<sup>\*1</sup> For instructions on how to specify the custom paper size.

<sup>\*2</sup> To change to a media type other than "Plain".

<sup>→</sup> Media Type Setting (page 8-33).

<sup>\*3</sup> To print on preprinted or prepunched paper or on letterhead.

Custom PaperSize (page 8-30)

<sup>\*2</sup> To change to a media type other than "Plain".

<sup>→</sup> Media Type Setting (page 8-33)

<sup>\*3</sup> To print on preprinted or prepunched paper or on letterhead.

<sup>◆</sup> SpecialPaper Act. (page 8-31)

### **Media Type Setting**

The following media type and paper weight combinations are available.

Paper Weight	Weight (g/m²)	Paper Weight	Weight (g/m²)
Light	52 g/m² to 59 g/m²	Heavy 1	106 g/m² to 135 g/m²
Normal 1	60 g/m² to 74 g/m²	Heavy 2	136 g/m² to 163 g/m²
Normal 2	75 g/m² to 90 g/m²	Heavy 3	164 g/m² to 220 g/m²
Normal 3	91 g/m² to 105 g/m²	Extra Heavy	Transparencies

Each media type's default weight is indicated.

Media Type	Default	Media Type	Default
Plain	Normal 2	Cardstock	Heavy 3
Transparency	Extra Heavy	Color	Normal 2
Rough	Normal 2	Prepunched	Normal 2
Vellum	Light	Letterhead	Normal 2
Labels	Heavy 1	Envelope*1	Heavy 3
Recycled	Normal 2	Thick	Heavy 3
Preprinted	Normal 2	High Quality	Normal 2
Bond	Normal 3	Custom 1 - 8	Normal 2

<sup>\*1</sup> The processing speed will be slower than normal.

For Custom 1-8, settings for duplex printing and media type name can be changed.

Item		Description
Duplex Print	Permit	Duplex printing allowed.
	Prohibit	Duplex printing not allowed.
Name		Change names for Custom 1-8. Names should be not more than 16 characters. Selecting media type at multi purpose tray, the name after change will be displayed.  Character Entry Method (page 11-9)

#### **Preset Limit**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Preset Limit] > [OK] key

Item	Description
Preset Limit	Restrict the number of copies that can be made at one time.
	Value: 1 to 999 copies.

#### Measurement

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Measurement] > [OK] key

Item	Description
Measurement	Select inch or metric for the unit for paper dimensions.
	Value: inch, mm

## **Error Handling**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Error Handling] > [OK] key

Select whether to cancel or continue the job when error has occurred.

Item	Description
DuplexPaperError	Select what to do when duplex printing is not possible for the selected paper size and media type.  Value  1-sided: Printed in 1-sided  Display Error: Message to cancel printing is displayed.
PaperMismatchErr	Select what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multi-purpose tray.  Value  Ignore: The setting is ignored and the job is printed.  Display Error: Message to cancel printing is displayed.
PermissionJobErr	Set which users can cancel or continue operations for jobs which were paused due to an error.  Value: All Users, Job Owner Only  NOTE  Administrator can cancel all jobs regardless of this setting.

## **Date Setting**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Date Setting] > [OK] key

Configure settings related to the date and time.

Item	Description
Date/Time	Set the date and time for the location where you use the machine. When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message.
	Value: Year (2000 to 2037), Month (01 to 12), Day (01 to 31), Hour (00 to 23), Min. (00 to 59), Second (00 to 59)
	→ <u>Setting Date and Time (page 2-17)</u>
	NOTE
	If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation.
	Value: Month/Day/Year, Day/Month/Year, Year/Month/Day
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you
Summer Time	select a region that utilizes summer time, configure settings for summer time.  Setting Date and Time (page 2-17)

## **Timer Setting**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Timer Setting] > [OK] key

Configure settings related to the time.

Item	Description
Auto Panel Reset	If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not.  Value: Off, On
	NOTE
	The time allowed to elapse before the panel is reset is set with the "PanelReset TimerPanel Reset Timer".
	→ PanelReset Timer (page 8-35)
PanelReset Timer	If you select [ <b>On</b> ] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset.  Value: 5 to 495 seconds (in 5 second increments)
	NOTE
	This function is displayed when [Auto Panel Reset] is set to [On].
Low Power Timer	Set amount of time before entering the Low Power mode.  Value
	For Europe: 1 to 120 minutes (1 minute increments)
	Except for Europe: 1 to 240 minutes (1 minute increments)
	► Low Power Mode (page 2-28)
Sleep Level (models except for Europe)*1	Select the Sleep level.
101 141 0 000)	Set the Energy Saver mode to reduce power consumption even more than Quick Recovery mode.
	Value: Quick Recovery, Energy Saver
(Detailed settings)	Set whether to use the Energy Saver mode for the following functions individually:  • Card Reader*2
	Application  Value: Off, On
	NOTE
	When the machine enters Energy Saver, the ID card cannot be recognized.
Sleep Rules (models for Europe)	Select whether to use the Sleep mode for the following functions individually:  • Card Reader*2
	• Application
	Value: Off, On
	NOTE
	When the machine enters Energy Saver, the ID card cannot be recognized.
Sleep Timer	Set amount of time before entering Sleep.
	Value
	For Europe 1 to 120 minutes (1 minute increments)
	Except for Europe
	1 to 240 minutes (1 minute increments)
	→ Sleep Rules (models for Europe) (page 2-29)

	Item	Description
WeeklyTimer Set.		Configure settings for switching the machine to OFF and waking it automatically at a specified time for each day of the week.
	Weekly Timer	Select whether to use Weekly Timer.  Value: Off, On
Schedule Retry Settings		Specify the time for each day of the week at which the machine turns OFF.
		_
	Limited Retries	Select whether to limit the numbers of retries for turning OFF this machine.  Value: On, Off
	Retry Times	If you select [ <b>On</b> ] for Limited Retries, set the number of retries for turning OFF this machine.  Value: <b>0</b> to <b>10</b> times
	Retry Interval	Set the retry interval.  Use [-] / [+] to enter a number.  Value: 10 to 60 seconds (increments of 10 seconds)
Power Off Rule (models for Europe)		Select whether or not the machine enters Power Off mode for the following function.  Select [ <b>On</b> ] to set the Power Off mode.  Network  FAX*3  USB Cable  USB Host  NIC**4
		NOTE  Even when any of the functions is set to [On], if [FAX] is set to [Off], the machine does not enter Power Off Mode.  Even when [Network] or [USB Cable] is set to [Off], if the machine does not communicate with the other devices, the machine will enter Power Off Mode.
Power Off Timer (models for Europe)		Select whether to turn off the power automatically after a period of inactivity.  Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week
Auto Err. Clear		If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses.  Value: Off, On
Err. Clear Timer		If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors.  Value: 5 to 495 seconds (in 5 second increments)
		NOTE  This function is displayed when [Auto Err. Clear] is set to [On].
Unus	able Time	→ FAX Operation Guide
Ping	Timeout <sup>*3</sup>	Set the time until timeout occurs when [Ping] is executed in "System/Network".  Value: 1 to 30 seconds (in 1 second increments)

<sup>\*1</sup> When the optional Network Interface Kit is installed, this is not displayed.

<sup>\*2</sup> Displayed only when the optional Card Authentication Kit is activated.

<sup>\*3</sup> Only on products with the fax function installed.

<sup>\*4</sup> Displayed only when the optional Network Interface Kit is installed.

## **Function Defaults**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Function Defaults] > [OK] key

Item	Description
Clear Job Set.	Set whether to reset function settings to their defaults after the job starts.  Value: Clear, Do Not Clear
Color Selection	Select the default color mode for scanning documents.  Value: Auto (Color/Gray), Auto (Color/B & W), Full Color, Grayscale, Black & White
Scan Resolution	Select the default scanning resolution.  Value: 200×100dpi Norm., 200×200dpi Fine, 200×400dpi S.Fin, 300×300dpi, 400×400dpi U.Fin, 600×600dpi
FAX Resolution	→ FAX Operation Guide
Orig.Image(Copy)	Set the default original document type for copying.  Value: Text+Photo, Photo, Text, Graphic/Map
Orig.Image(Send)	Set the default original document type for sending.  Value: Text+Photo, Photo, Text, for OCR, Light Text/Line  NOTE  [for OCR] is only available when "Color Selection" is set to [Auto (Color/B & W)] or [Black & White].
Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set.  Value: 100%, Auto
Collate	Set the defaults for Collate.  Value: Off, On
Orig.Orientation	Set the original orientation defaults.  Value: Top Edge on Top, Top Edge on Left
Backgrnd(Copy)	Set the default Backgrnd Density (Copy).  Value: Off, Auto, Manual (Darker 5)
Backgrnd(Send)	Set the default Backgrnd Density (Send).  Value: Off, Auto, Manual (Darker 5)
EcoPrint	Select the EcoPrint default.  Value: Off, On
Prevent B-t Copy	Set the default value for preventing bleed-through (Copy).  Value: Off, On
Prevent B-t Send	Set the default Prevent Bleed (Send).  Value: Off, On
Skip Blank(Copy)	Set the default Skip Blank(Copy) settings.  Value: Off, On
Skip Blank(Send)	Set the default Skip Blank(Send) settings.  Value: Off, On

Item	Description
File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Date and Job No. can also be set.
	Value
	File Name: Up to 32 characters can be entered.
	Additional Info: None, Date, Job No., Job No. + Date, Date + Job No.
Subject/Body	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by E-mail.
	Value
	Subject: Up to 256 characters can be entered.
	Body: Up to 500 characters can be entered.
Con.scan-Copy	Set the continuous scan (copy) defaults.
	Value: Off, On
Con.scan-FAX	→ FAX Operation Guide
Con.scan-Others	Set the continuous scan (excludes copy) defaults.
	Value: Off, On
File Format	Select the default type of the files to be sent.
	Value: PDF, TIFF, XPS, JPEG, OpenXPS, High Comp. PDF
File Separation	Select the default file separation setting.
	Value: Off, Each Page
JPEG/TIFF Print	Select the image size (resolution) when printing JPEG or TIFF file.
	Value: Paper Size, Image Resolution, Print Resolution
XPS FitTo Page	Set the default value for the XPS fit to page function.
	Value: Off, On

	Item	Description
Deta	il Setting	_
	2 in 1 Layout	Set the default for the 2-in-1 layout of Combine copies.
		Value: L to R T to B, R to L B to T
	4 in 1 Layout	Set the default for the 4-in-1 layout of Combine copies.
		Value: Right then Down, Down then Right, Left then Down, Down then Left
	Border Line	Set the default for the border line of Combine copies.
		Value: None, Solid Line, Dotted Line, Positioning Mark
	Orig. Binding	Set the default binding side for duplex scanning.
		Value: Left/Right, Top
	Finish. Binding	Set the default for the binding orientation of finished two-sided copies.
		Value: Left/Right, Top
	Image Quality	Select the default PDF/TIFF/JPEG/XPS/OpenXPS file quality.
		Value: 1 Low(High Comp) to 5 High(Low Comp)
	Color TIFF Comp.	Select the compression method for sending the color documents in the TIFF format.
		Value: TIFF V6, TTN2
	PDF/A	Select the default PDF/A setting.
		Value: Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u
	High Comp. PDF	Select the default quality setting for high compressed PDF files.
		Value: Comp. Priority, Standard, Quality Priority
	ItemsToSkip Copy	Select the default Items to Skip (Copy) settings.
		Value: Blank+Ruled Line, Blank Pages Only, Blank+Some Text
	ItemsToSkip Send	Select the default Items to Skip (Send/Store) settings.
		Value: Blank+Ruled Line, Blank Pages Only, Blank+Some Text

# **Login Operation**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Login Operation] > [OK] key

Item	Description
Login Operation	Select the screen to enter the login user name and password when logging in.  Value: Use Numeric Key, Select Character

#### **RAM Disk Mode**

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key > [▲] [▼] key > [RAM Disk Mode] > [OK] key



#### **NOTE**

This function will not be displayed when the optional SSD is installed.

Item	Description
RAM Disk Mode	A RAM disk can be created and its size can be set.
	Creating a RAM disk makes it possible to print from a Job Box.
	Value
	RAM Disk Mode: Off, On
	RAM Disk Size: The setting range varies depending on the amount of memory installed and the option memory usage setting.



#### **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

#### **Optional Memory**

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key > [▲] [▼] key > [Optional Memory] > [OK] key

Item	Description	
Optional Memory	When optional memory is installed, select the memory allocation scheme based on the application in which you are using the equipment.	
	Value: Normal, Printer Priority, Copy Priority	



#### **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

#### Disp. Status/Log

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key > [▲] [▼] key > [Disp. Status/Log] > [OK] key

	Item	Description
Disp	. Status/Log	Set the display method of the Status/Log.
	JobsDetailStatus	Value: Show All, My Jobs Only, Hide All
	Jobs Log	Value: Show All, My Jobs Only, Hide All
	FAX Log*1	Value: Show All, Hide All

<sup>\*1</sup> Only on products with the fax function installed.

#### **Keyboard Type**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Keyboard Type] > [OK] key

Item	Description
Keyboard Type	Select the type of keyboard that you want to use.  Value: US-English, US-English with Euro, French, German, UK-English
	value: 05-English, 05-English with Euro, French, German, Ok-English

#### **Low Toner Alert**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Low Toner Alert] > [OK] key

Item	Description
Low Toner Alert	Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.  Value: Off, On  NOTE  Selecting [Off] alerts you low toner when the amount of remaining toner becomes 5%.  If [On] is selected, set the amount of remaining toner to alert. The setting range is 5 to
	100% (in 1% increments).

#### **Remote Printing**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Remote Printing] > [OK] key

Item	Description	
Remote Printing	Select whether to prohibit printing that is performed without operating the machine.  When [Prohibit] is selected, a document that has been stored in the document box from	
	the printer driver can be printed from the machine. This prevents another person from seeing that document.	
	Value: Permit, Prohibit	

#### **Show PowerOffMsg**

[System Menu/Counter] key > [▲] [▼] key > [Common Settings] > [OK] key > [▲] [▼] key > [Show PowerOffMsg] > [OK] key

Item	Description	
Show PowerOffMsg	Set the mode whether display a confirmation message in power supply off.  Value: Off, On	

#### **EnergySaver Set.**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [EnergySaver Set.] > [OK] key

Item		Description
Recovery Level	Select the method of recovery from energy saver.	
	Value:	
	Full Recovery:	This mode enables the use of all functions immediately. However, this mode saves less energy.
	Normal Recovery:	In this mode, you can select the method from the following: enabling the use of all functions immediately or enabling the use of desired functions only.  If you want to use all functions immediately, press the power switch to execute recovery.
	Power Saving:	This mode enables the use of desired functions only. This mode saves energy most effectively.

#### **Msg Banner Print**

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Msg Banner Print] > [OK] key

Item	Description	
Msg Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.  Value: Off, On	

#### Pause/Resume

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Common Settings] > [OK] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [Pause/Resume] > [OK] key

Item	Description
Pause/Resume	Sets whether to allow Pause/Resume of print jobs.
	Value: Allowed, Not Allowed

# Copy

#### [System Menu/Counter] key > [▲] [▼] key > [Copy] > [OK] key

Configures settings for copying functions.

Item	Description
Paper Selection	Set the default paper selection.
	Value: Auto, Def. PaperSource
AutoPaperSelect.	If [ <b>Auto</b> ] is selected for Paper Selection, set the paper size selection method when the zoom changes.
	Value
	MostSuitableSize: Select paper based on the current zoom and the size of the original.
	Same as OrigSize: Select paper that matches the size of the original, regardless the zoom.
Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed.
	Value: Off, On
Reserve Priority	Specify whether the default screen appears when a subsequent copy job is reserved while printing is in progress. To have the default screen appear, select [ <b>On</b> ].  Value: <b>Off, On</b>
Select Key Set.	Commonly used copying functions can be registered to the Select key. Functions can be easily configured by selecting the Select key.
	Value: None, Quiet Mode, Paper Selection, Collate, ID Card Copy, Duplex, Zoom, Combine, Original Size, Orig. Orientation, Mixed Size Orig., Original Image, Density, EcoPrint, Continuous Scan, File Name Entry, JobFinish Notice, Print Override, Sharpness, Contrast, Backgrnd Density, Prevent Bleed-t, Skip Blank Page

# **Printer**

#### [System Menu/Counter] key > [▲] [▼] key > [Printer] > [OK] key

Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

Item	Description
Emulation Set.	Select the emulation for operating this machine by commands oriented to other types of printers.  Value: Line Printer, IBM Proprinter, EPSON LQ-850, PCL6, KPDL, KPDL (Auto)  NOTE  When you have selected [KPDL] or [KPDL (Auto)], set "KPDL Error Rpt", too.
Alt. Emulation	When you have selected [KPDL (Auto)] as emulation mode, you can switch between KPDL and another emulation mode (alternative emulation) automatically according to the data to print.  Value: Line Printer, IBM Proprinter, EPSON LQ-850, PCL6
KPDL Error Rpt	When an error has occurred during printing in KPDL emulation mode, set whether or not the error report is output.  Value: Off, On
EcoPrint	EcoPrint conserves toner when printing. This is recommended for test copies where faded printing is not a problem.  Value: Off, On
Override A4/LTR	Select whether to treat A4 size and Letter, which are similar in size, as the same size when printing.  Value  Off: A4 and Letter are not regarded as the same in size.  On: A4 and Letter are regarded as the same in size. The machine will use whichever size is in the paper source.
Duplex	Select binding orientation for duplex mode.  Value: Off, Bind Long Edge, Bind Short Edge
Copies	Set the default number of copies, from 1 to 999.  Value: 1 to 999 copies
Orientation	Set the default orientation, [Portrait] or [Landscape].  Value: Portrait, Landscape
Wide A4	Turn this to on to increase the maximum number of characters that can be printed in a line for an A4 page (78 characters at 10 pitch) and Letter size page (80 characters at 10 pitch). This setting is only effective in PCL6 emulation.  Value: Off, On
FormFeed TimeOut	Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints paper. The options are between 5 and 495 seconds.  Value: 5 to 495 seconds (in 5 second increments)
LF Action	Set the line feed action when the machine receives the line feed code (character code 0AH).  Value: LF Only, LF and CR, Ignore LF
Set the character return action when the machine receives the character return of (character code 0DH).  Value: CR Only, LF and CR, Ignore CR	

Item	Description
Job Name	Set whether the job name set in the printer driver is displayed.  Value: Off, On
	NOTE
	When selecting [ <b>On</b> ], select the job name to be displayed from [ <b>Job Name</b> ], [ <b>Job No.+Job Name</b> ], or [ <b>Job Name+Job No.</b> ].
User Name	Set whether the user name set in the printer driver is displayed.  Value: Off, On
MP Tray Priority	If paper is set in the MP Tray then it is possible for priority to be given to that MP tray in the paper feed.
	Value Off: The printer driver settings are followed.
	Auto Feed: If Auto is selected in the printer driver and there is paper in the MP tray then the paper feed will be from the MP tray.
	Always: If there is paper in the MP tray then the paper feed will be from the MP tray regardless of what is set in the printer driver.
Paper Feed Mode	While printing from the computer, select how to feed paper when the paper source and type are specified.  Value
	Auto: Search the paper source that matches the selected paper size and type.  Fixed: Print on paper loaded in the specified paper source.
Auto Cass.Change	Select the following actions when the paper runs out in the paper source while printing.  Value: Off, On
	NOTE
	When selecting [ <b>Off</b> ], the machine displays "Load paper in cassette #." (# is a cassette number) or "Load paper in MP Tray", and stops printing.
	Load the paper according to the paper source displayed to resume printing.
	To print from the other paper source, select [ <b>Paper</b> ]. Select the desired paper source, and then select the [ <b>OK</b> ] key.
	When selecting [ <b>On</b> ], the machine continues printing automatically when the other cassette contains the same paper as the currently-used cassette.
Resolution	Set the resolution used for printing.
	Value: 300dpi, 600dpi, Fine1200, Fast1200
	NOTE
	Settings that are received from the printer driver have priority over the operation panel settings.
KIR	The machine is equipped with the smoothing function, which realizes an excellent printing of about 9600 dpi (600 dpi × 15 gradation) × 600 dpi.  Value: Off, On
Job Terminator	Set the condition to be regarded as the job end if the print job has not been processed to the end due to the usage environment or for other reasons.  Value:
	EOJ (End of Job): Up to the detection of a command indicating the end of job data is regarded as one job.
	End of Session: Data contained in one session of network connection is regarded as one job.
	UEL (Universal Exit Language): Up to detection of UEL at the end of the job is regarded as one job.

# **Send**

[System Menu/Counter] key > [▲] [▼] key > [Send] > [OK] key

Configures settings for sending functions.

Item	Description	
Select Key Set.	Commonly used sending functions can be registered to the Select key. Functions can be easily configured by selecting the Select key.  Value: None, Quiet Mode, Color Selection, Original Size, Original Image, Scan Resolution, Sending Size, Zoom, Orig. Orientation, Mixed Size Orig., Continuous Scan, File Format, File Name Entry, Subject/Body, Long Original, JobFinish Notice, FAX Resolution*1, FAX Direct TX*1, FAX Delayed TX*1, FAX RX Polling*1, FAX TX Report*1, Density, Duplex, FTP Encrypted TX, File Separation, Sharpness, Backgrnd Density, Prevent Bleed-t, Skip Blank Page, EmailEncryptedTX*2, DigitalSignature*2	
DestinationCheck	Set the confirmation of destinations. *3	
Check beforeSend	Select whether to display the confirmation screen of destinations after pressing the [Start] key when performing sending jobs.  Value: Off, On	
Check New Dest.	When adding new destination, select whether to display the entry check screen to check the entered destination.  Value: Off, On	
New Dest. Entry	Select whether to permit direct entry of destination.*3  Value: Permit, Prohibit	
Recall Dest.	Select whether to permit usage of [ <b>Recall</b> ] on the Send screen.*3  Value: Permit, Prohibit	
Broadcast	Set whether to enable broadcast.  Value: Permit, Prohibit	
Default Screen	Use this procedure to set the default screen displayed when you select the [Send] key.  Value: Destination, Address Book	
Send and Forward	Set whether to send the original to another destination and store it when sending images.	
Forward	Set the rule to send the original.  Value: Off, On  NOTE  When selecting [On], select rules to forward from [E-mail], [Folder (SMB)], [Folder (FTP)] and [FAX]*1.	
Destination	Set the destination to which the original is forwarded. One destination can be set. You can check and edit the set address.  Follow the steps below to register the destination.  • Address Book  • Address Entry  Specifying Destination (page 5-29)	
Email Encrypted TX	Sends encrypted E-mail using the electronic certificate.   EmailEncryptedTX (page 6-24)	

	Item	Description	
Digit	alSignature	-	
	DigitalSignature	Select whether to add a digital signature.	
		Value:	
		Off:	Does not add a digital signature.
		Specify Each Job:	Whether to add a digital signature is selected each time of sending.
		On:	Always adds a digital signature when sending.
	Format	Select an algorithm	used for encryption of digital signature.
		Value: SHA1, SHA	-256, SHA-384, SHA-512
		NOTE	
		This function is displayed when "Digital Signature" is set to [Specify Each Job] or [On].	
	Password Confirm	Select whether to confirm password when setting digital signature.	
		Value: On, Off	
		NOTE	
		This function is displayed when "Digital Signature" is set to [Specify Each Job].	
	Password	Set a password required for setting digital signature. Enter a new security passwor to 16 alphanumeric characters and symbols.	
		NOTE	
		This function is disp	played when "Password Confirm" is set to [On].
E-ma	il Settings	-	
	Sender Address	Specify the sender a	ddress for when the machine sends E-mails.
		recommended that y	may be sent back to the sender address specified here. It is you specify an e-mail address that can be received by the device ender address must be entered correctly for SMTP authentication.  ween 0 and 300

<sup>\*1</sup> Only on products with the fax function installed.

# **FAX**

[System Menu/Counter] key > [ $\blacktriangle$ ] [ $\blacktriangledown$ ] key > [FAX] > [OK] key

Configure settings for FAX.

**→** FAX Operation Guide

<sup>\*2</sup> Non-display; when the S/MIME is Off.

<sup>\*3</sup> Also applies when sending the fax.

# **Document Box**

[System Menu/Counter] key > [▲] [▼] key > [Document Box] > [OK] key

Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box.

	Item	Description
Cust	om Box	Configure settings for Custom Box.
	Detail/Edit	Creating a New Custom Box (page 5-36)
	File Del. Time	Set the time to automatically delete stored documents.  Value: Hour (00 to 23), Min. (00 to 59)
Sub A	Address Box <sup>*1</sup>	→ FAX Operation Guide
Job Box		Configure settings for Job Box.
	Quick Copy Jobs	To maintain free space on the box, you can set the maximum number of stored jobs.  Value: number between 0 and 300  NOTE  When 0 is set, Quick Copy cannot be used.
	JobRet. Deletion	This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time.  Value: Off, 1 hour, 4 hours, 1 day, 1 week  NOTE  This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the main power switch is turned off.
	DelPIN at PwrOff	Configures whether to delete the jobs retained in the PIN Print box when the power is turned off.  Value: Off, On
	Storage Media	Select which storage media to use.  Value: SSD, SD Card  NOTE  This setting is not displayed if the optional SSD or SD card is not installed.
Polli	ng Box <sup>*1</sup>	→ FAX Operation Guide
Select Key Set.		Commonly used printing and storing functions can be registered to the Select key. Functions used when printing and when saving can both be registered. Functions can be easily configured by selecting the Select key.  Value  Print: None, Quiet Mode, Collate*2, Paper Selection*2, Duplex*2, EcoPrint*2, File Name Entry, JobFinish Notice, Print Override, Encrypted PDF*3, JPEG/TIFF Print*3, XPS FitTo Page*3, Del. after Print*4  Store: None, Quiet Mode, Color Selection*5, Original Size, Original Image, Scan Resolution, Storing Size*5, Zoom*5, Orig. Orientation, Mixed Size Org.*5, Continuous Scan, Long Original, File Format*5, File Separation*5, File Name Entry, JobFinish Notice, Density, Duplex, Sharpness*5, Contrast*5, Backgrnd Density*5, Prevent Bleed-t*5, Skip Blank Page

<sup>\*1</sup> Only on products with the fax function installed.

<sup>\*2</sup> Only displayed when printing from USB drive and Custom Box.

<sup>\*3</sup> Only displayed when printing from USB drive.

<sup>\*4</sup> Only displayed when printing from Sub Address Box and Custom Box.

<sup>\*5</sup> Not displayed when saving to Polling Box.

# **Application**

[System Menu/Counter] key > [▲] or [▼] key > [Application] > [OK] key

Configure the application settings.

**▶** Optional Applications (page 11-7) Checking Details of Application (page 11-8)

#### **Edit Destination**

#### **Address Book**

[System Menu/Counter] key > [▲] [▼] key > [Edit Destination] > [OK] key > [▲] [▼] key > [Address Book] > [OK] key

Configure settings for address book.

→ Adding a Destination (Address Book) (page 3-31)

#### **Edit Restriction**

[System Menu/Counter] key > [▲] [▼] key > [Edit Destination] > [OK] key > [▲] [▼] key > [Edit Restriction] > [OK] key

Item	Description
Address Book	Restrict editing of the address book. If you selected [ <b>Admin. Only</b> ], you can only edit the Address Book by logging in with administrator privileges.  Value: Off, Admin. Only
One Touch Key	Restrict editing of the One Touch Key. If you selected [ <b>Admin. Only</b> ], you can only edit the One Touch Key by logging in with administrator privileges.  Value: Off, Admin. Only

#### **Print List**

[System Menu/Counter] key > [A] [v] key > [Edit Destination] > [OK] key > [A] [v] key > [Print List] > [OK] key

FAX Operation Guide

#### **AddrBookDefaults**

[System Menu/Counter] key > [▲] [▼] key > [Edit Destination] > [OK] key > [▲] [▼] key > [AddrBookDefaults] > [OK] key



#### **NOTE**

This function does not appear when the External Address Book is not set.

Item	Description
Address Book	Set the type of address book that appears when the address book is displayed.  Value: Machine AddrBook, Ext Address Book

# Adjust/Maint.

[System Menu/Counter] key > [▲] [▼] key > [Adjust/Maint.] > [OK] key

Adjust printing quality and conduct machine maintenance.

	Item	Description
Quiet M	ode	Lower print and scan speed for quiet processing.
	Quiet Mode	Set the Quiet Mode. Select this mode when the running noise is uncomfortable.  Value: Off, On
	Each Job	It is possible to set the use of Quiet Mode for each job, such as copying and sending. Set whether or not to permit the setting for each job.  Value: Permit, Prohibit
Copy De	nst. Adj.	Adjust copy density.  Value: -3 Lighter, -2, -1, 0 Normal, +1, +2, +3 Darker
Send/Bo	x Density	Adjust scan density when sending or storing the data in Document Box.  Value: -3 Lighter, -2, -1, 0 Normal, +1, +2, +3 Darker
Contras	t (Copy)	Increases or decreases the overall contrast of copies.  Value: -3, -2, -1, 0, 1, 2, 3
Contras	t (Send)	Increases or decreases the overall contrast when documents are sent or saved in a document box.  Value: -3, -2, -1, 0, 1, 2, 3
Backgro	und Density	Darkens or lightens overall background density adjustment.
	Copy (Auto)	Darkens or lightens overall background density adjustment during copying.  Value: -3 Lighter, -2, -1, 0 Normal, +1, +2, +3 Darker
	Send/Box (Auto)	Darkens or lightens overall background density when sending images or storing them in the Document Box.  Value: -3 Lighter, -2, -1, 0 Normal, +1, +2, +3 Darker
EcoPrint	Setting	Select the default EcoPrint Setting.
	Save Level(Copy)	Select the default EcoPrint Setting at the time of copying.  Value: 1 (Lower) to 5 (Higher)  Raising the level reduces toner consumption, but image quality falls.
	SaveLvl(Printer)	Select the default EcoPrint Setting at the time of use of the printer.  Value: 1 (Lower) to 5 (Higher)  Raising the level reduces toner consumption, but image quality falls.
Print Density		Adjust print density. Adjustment can be made in 5 levels.  Value: 1 (Lighter) to 5 (Darker)
AutoColorCorrect		This setting allows you to adjust the detection level used by the machine to determine whether the original is color or black and white during Auto Color Mode. Setting a lower value will result in more originals being identified as color, while a larger value will tend to increase the number of originals being identified as black and white.  Value: 1 to 5

Item	Description	
Correct. Bk Line	Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.	
	Value	
	Off: No correction performed. Select this when you want to reproduce fine lines in the original more clearly than with [On].	
	On: Correction performed.	
Service Setting	Settings for machine maintenance and inspection. This menu is primarily used by service technicians to perform maintenance.	

# 9 User Authentication and Accounting (User Login, Job Accounting)


#### This chapter explains the following topics:

Overview of User Login Administration	
Enabling User Login Administration	
Setting User Login Administration	
Authentication Security	
Password Policy Settings	
Adding a User (Local User List)	
Changing User Properties	
Managing the Users that Print on This Machine from a PC	9-12
Managing the Users to Scan Using TWAIN	
Managing the Users to Scan Using WIA	
Managing Users that Send FAXes from a PC	
Local Authoriz. (Local Authorization)	9-16
Configure Network User Rights	
Group Auth. (Group Authorization Settings)	9-18
Guest Authorization Set	
NW User Property (Obtain Network User Property)	
ID Card Settings	
PIN Login Settings	
Using User Login Administration	
Login/Logout	
Overview of Job Accounting	
Enabling Job Accounting	
Job Accounting Access	
Job Accounting (Local)	
Adding an Account	
Restricting the Use of the Machine	
Editing an Account	
Deleting an Account	
Job Accounting for Printing	
Job Accounting for Scan Using TWAIN	
Job Accounting for Scan Using WIA	
Managing FAX Jobs Transmitted from a PC	
Configuring Job Accounting	
Default Counter Limit	
Counting the Number of Pages Printed	
Counting the Number of Pages for All Accounts	
Counting the Number of Pages for Each Account	
Print Accounting Report	9-39
Using Job Accounting	
Login/Logout	
Apply Limit	
Copier/Printer Count	
Unknown User Settings	
Unknown ID Job	
Registering Information for a User whose ID is Unknown	9-43

# **Overview of User Login Administration**

User login administration specifies how the user access is administered on this machine. Enter a correct login user name and password for user authentication to login.

- 1 Enable User Login Administration
- ► Enabling User Login Administration (page 9-3)
- 2 Set the user
- ◆ Adding a User (Local User List) (page 9-7)
- 3 Enter the login user name and password and execute the job
- Using User Login Administration (page 9-24)

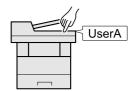

Access are in three levels - "User", "Administrator", and "Machine Administrator". The security levels can be modified only by the "Machine Administrator".


#### To manage the job account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

#### To Manage the Users to Print from PCs

Printer driver settings are necessary to manage the users that print on the machine from PCs.

→ Managing the Users that Print on This Machine from a PC (page 9-12)

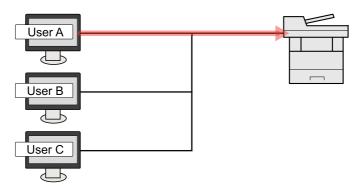

#### To Manage the Users to Use TWAIN for Scanning

TWAIN driver settings on the PC are necessary to manage the users that use TWAIN for scanning.

Managing the Users to Scan Using TWAIN (page 9-13)

#### To Manage the Users to Use WIA for Scanning

WIA driver settings on the PC are necessary to manage the users that use WIA for scanning.

→ Managing the Users to Scan Using WIA (page 9-14)

#### To Manage the Users to Send Faxes from a PC\*1

FAX driver settings on the PC are necessary to manage the users that send faxes from a PC.

- Managing Users that Send FAXes from a PC (page 9-15)
- \*1 Only on products with the fax function installed.

# **Enabling User Login Administration**

This enables user login administration. Select one of the following authentication methods:

Item	Descriptions
Local Authentic.	User authentication based on user properties on the local user list stored in the machine.
Netwk Authentic.	User authentication based on Authentication Server. Use a user property stored in Authentication Server to access the network authentication login page.

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key

#### Configure the settings.

1 [▲] [▼] key > [User Login] > [OK] key > [▲] [▼] key > [Local Authentic.] or [Netwk Authentic.] > [OK] key



If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

#### When selecting [Netwk Authentic.]

- 1 [▲] [▼] key > [NTLM], [Kerberos] or [Ext.] > [OK] key
- **2** Enter the host name (64 characters or less) for the Authentication Server and select the [**OK**] key.
- 3 Select the domain name for the Authentication Server, and select the [OK] key.

If the domain has not been set, select the number where "-----" is displayed and select [**Menu**]. Select [**Edit**] and select the [**OK**] key then enter the domain name (in 256 characters or less). Select the [**OK**] key and the domain will be registered.

To edit or delete a domain name that has already been registered, select that domain name and select [Menu].



Up to 10 domain names can be registered.

4 When selecting [Ext.] as the server type, enter the port number and select the [OK] key.

## NOTE

If the login user name and password are rejected, check the following settings.

- Network Authentication setting of the machine
- User property of the Authentication Server
- Date and time setting of the machine and the Authentication Server

If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

# **Setting User Login Administration**

This registers, alters and deletes users and configures the settings for User Login Administration.

# **Authentication Security**

If user authentication is enabled, configure the user authentication settings.

#### **User Account Lockout Setting**

You can prohibit the use of a user account if an incorrect password is entered repeatedly to login with that account.

#### **1** Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [Account Lockout] > [OK] key

#### Configure the settings.

The following settings can be selected.

Item		Descriptions
Lockout		Select whether or not account lockout policy is enabled.  Value: Off, On
Lockout Policy		Specify the conditions and the extent to which the account lockout is applied.
	Number of Retries	Specify how many login retries are allowed until the account is locked out.  Value: 1 to 10 times
	Lockout Duration	Specify how long the account is to be locked out until it is unlocked.  Value: 1 to 60 minutes
	Lockout Target	Specify the extent to which the account lockout is applied. [Remote Only] locks out all operations from outside the operation panel.  Value: All, Remote Only
Locked out Users		Displays a list of locked out users.  To cancel the locks:  Select the [▲] or [▼] key to select the user in the list, and [Select]. A checkmark will be placed on the right of the selected user.  Select [Menu]. Select [Unlock] and the [OK] key.

# **Password Policy Settings**

You can prohibit the setting and use of passwords that do not comply with the password policy. Setting the Password Policy makes it more difficult to break the password.

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

## **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key >[Password Policy] key > [OK] key

#### Configure the settings.

The following settings can be configured.

Item	Descriptions
Password Policy	Select whether or not password policy is enabled.  Value: Off, On
Min DW Longth	Set the minimum password length of characters for password.
Min. PW Length	Value: Off, On (1 to 64 characters)
PW Complexity	Set the password complexity.  Value  Reject common PW: Off, On  Include uc ltr.: Off, On  Include lc ltr.: Off, On  Include number: Off, On  Include symbol: Off, On
Maximum PW Age	Set the maximum password age.  Value: Off, On (1 to 180 days)
Violator List	List of users do not meet password policy requirements.

# **Adding a User (Local User List)**

This adds a new user. You can add up to 100 users (including the default login user name).

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [Local User List] > [OK] key > [Menu] > [▲] [▼] key > [Add User] > [OK] key

#### **7** Enter the user information.

1 Enter the name displayed on the user list (up to 32 characters) and select the [OK] key.

**NOTE** 

For details on entering characters, refer to the the following:

- **▶** Character Entry Method (page 11-9)
- 2 Enter the login user name to login (up to 64 characters) and select the [**OK**] key.
  - **NOTE**

The same login user name cannot be registered.

3 To enter detailed user information, select [▲] [▼] key > [Detail] > [OK] key To exit the operation, select [▲] [▼] key > [Exit] > [OK] key

4 Enter the detailed user information.

Select [**Edit**], [**Change**] or [**Detail**] on each item, enter the information and then select the [**OK**] key. Select the [ $\blacktriangleright$ ] key to view the next screen. Select the [ $\blacktriangleleft$ ] key to return to the previous screen. The table below explains the user information to be registered.

Item	Descriptions
User Name <sup>*1</sup>	Enter the name displayed on the user list (up to 32 characters).
Login User Name <sup>*1</sup>	Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.
Login Password	Enter the password to login (up to 64 characters). Reenter the same password for confirmation and select the [ <b>OK</b> ] key.
E-mail Address	The user can register his/her E-mail address. The registered address will be automatically selected for subsequent operations that need any E-mail function.
Access Level*1	Select "Administrator" or "User" for user access privileges.
Account Name	Add an account where the user belongs. The user, who registered his/her account name, can login without entering the account ID.
	Overview of Job Accounting (page 9-25)
ID Card Info.	Register ID card information. Select [ <b>Read</b> ] and the [ <b>OK</b> ] key.
	Place the ID card on the ID card reader, and select [ <b>Read</b> ].
	NOTE
	This function is displayed when the optional ID Card Authentication Kit is activated.
	→ Card reader (page 11-6)
	To delete ID card information, select [ <b>Delete</b> ] > [ <b>OK</b> ] key.

<sup>\*1</sup> Mandatory at user registration.

Item	Descriptions
Authoriz. Rules <sup>*1</sup>	Set usage authority for each user.
	Select [ <b>Edit</b> ] for each item, change the restrictions and then select the [ <b>OK</b> ] key. Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.
	The following restriction items are available:
	Print Restrict.:
	Select whether or not use of the print function of the printer is prohibited.
	Applicable print functions are as follows:
	•Print from Box
	•Print from Removable Memory
	Print Report Print from PC
	Copy Restrict.:
	Select whether or not use of the copy print function is prohibited.
	Duplex Restrict:
	Select whether only duplex printing is allowed.
	CombineRestrict:
	Specify whether only Combine is allowed.
	EcoPrint Restr.:
	Specify whether only EcoPrint is allowed.
	Send Restrict.:
	Select whether or not use of the send function is prohibited.
	FAX Restrict.*2:
	Select whether or not use of the fax send function is prohibited.
	Storing in Box:
	Select whether or not use of the box store function is prohibited.
	StoringinMemory:
	Select whether or not use of the removable memory store function is prohibited.
My Panel	You can register the language selection, and initial screen for each user. Settings registered here can be applied simply by logging in.

<sup>\*1</sup> Displayed when Local Authoriz. is enabled.

# 3 Select the [OK] key.

A new user is added on the local user list.

**<sup>▶</sup>** Local Authoriz. (Local Authorization) (page 9-16)

<sup>\*2</sup> Only on products with the fax function installed.

# **Changing User Properties**

Types of user properties that could be changed may be different depending on user access privilege.

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



#### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [Local User List] > [OK] key

#### Change the user properties.

- 1 Select the user whose properties you wish to change, and the [**OK**] key.
- 2 Enter the user information.

ltem		
User Name		
Login User Name <sup>*1</sup>		
Domain Name <sup>*2</sup>		
Login Password		
Email Address		
Access Level*1		
Account Name*1		
ID Card Info. <sup>*1</sup>		
Authoriz. Rules*1*3		
My Panel		

- \*1 You can change only when you log in with machine administrator authority.
- \*2 The domain name will be displayed for network users granted with local user privileges
- NW User Property (Obtain Network User Property) (page 9-21)
- \*3 Displayed when Local Authorization is enabled.
- ▶ Local Authoriz. (Local Authorization) (page 9-16)

For details on each items, refer to step 2 of "Adding a User (Local User List)" to change a user property.

- → Adding a User (Local User List) (page 9-7)
- **3** [**OK**] key > [**Yes**]

The user information is changed.

#### Delete a user

Types of user properties that could be changed may be different depending on user access privilege.

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [Local User List] > [OK] key

#### 2 Delete a user.

- 1 Select the user whose properties you wish to delete, and [Menu].
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The selected user will be deleted.

**NOTE** 

The default user with machine administrator rights cannot be deleted.

# Managing the Users that Print on This Machine from a PC

Printer driver settings are necessary to manage the users that print on the machine from PCs. Instructions are based on interface elements as they appear in Windows 10.

#### 1 Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel], and [View devices and printers].




In Windows 8.1, select [**Settings**] in charms on Desktop, and select [**Control Panel**], and then [**Devices and Printers**].

- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Administrator] on the [Device Settings] tab.

#### Configure the settings.

1 Select [User Login] on the [User Login] tab.

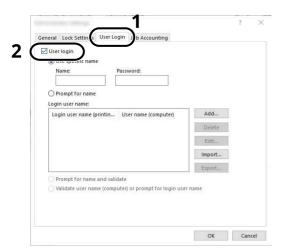

2 Set the User Login Administration.

[**Use specific name**]: This option can be used to specify a user name and password to use the same User login for every print job. If this option is selected, the user does not have to type the name and password for each print job.

[**Prompt for name**]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password must be entered each time a printing is attempted.

[**Prompt for name and validate**]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password stored in the Login user name list needs to be entered. The user name and password must be entered each time a printing is attempted.

[Validate user name (computer) or prompt for login user name]: When printing, the Windows user name is searched in the "Login user names" and printing is possible if the name is registered. If the name is not registered, the printing will be canceled for users with only user authority. If the user has administrator privileges, the screen to enter the user name and password will appear.

3 Click [OK].



For other settings of job accounting, refer to the following:

Printer Driver User Guide

# **Managing the Users to Scan Using TWAIN**

The following TWAIN driver settings are necessary to manage the users that use TWAIN for scanning. Instructions are based on interface elements as they appear in Windows 10.


#### Display the screen.

1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select [**TWAIN Driver Setting**] in the search list. TWAIN Driver screen is displayed.



In Windows 8.1, select [**Search**] in charms, and enter "TWAIN Driver Setting" in the search box. Click [**TWAIN Driver Setting**] in the search list then the TWAIN Driver Setting screen appears.

2 Select the machine, and click [**Edit**].

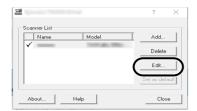

#### Configure the settings.

- 1 Click [User Authentication Settings].
- 2 Select the checkbox beside [Authentication], and enter Login User Name and Password.



3 Click [**OK**].

# Managing the Users to Scan Using WIA

The following WIA driver settings are necessary to manage the users that use WIA for scanning. Instructions are based on interface elements as they appear in Windows 10.

#### Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel]. Click the search box in the Control Panel, and type "Scanner" in there. Select [View scanners and cameras] in the search list. The Scanners and Cameras screen is displayed.




In Windows 8.1, click [Search] in charms, and enter "Scanner" in the search box. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and press [**Properties**].



# Configure the settings.

1 Select the checkbox beside [**Authentication**] on the [**Settings**] tab, and enter Login User Name and Password.

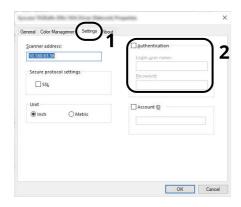

2 Click [OK].

# Managing Users that Send FAXes from a PC

To manage the users that send faxes from a PC, the following settings are necessary in the FAX driver. Instructions are based on interface elements as they appear in Windows 10.

#### Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel], and [View devices and printers].



In Windows 8.1, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [**Printing preferences**] menu of the printer driver.
- 3 Click [FAX TX Setting] on the [Printing Preferences] window.

#### Configure the settings.

1 Select [User Login] on the [Authentication] tab.



2 Set the User Login Administration.

[Use Specific Login User Name]: This option can be used to specify a user name and password to use the same User login for every FAX job. If this option is selected, the user does not have to type the name and password for each FAX job.

[**Prompt for Login User Name**]: A screen for entering the user name and password will be displayed when attempting a transmission. The user name and password must be entered each time a transmission is attempted.

3 Click [OK].

# **Local Authoriz. (Local Authorization)**

Select whether or not to use Local Authorization.

**NOTE** 

When using Local Authorization, the user authentication type must be set to [Local Authoriz.].

**▶** Enabling User Login Administration (page 9-3)

#### **1** Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key

#### Configure the setting.

 $[\blacktriangle]$  key > [Local Authoriz.] > [OK] key >  $[\blacktriangle]$   $[\blacktriangledown]$  key > [Off] or [On] > [OK] key

# **Configure Network User Rights**

Select whether or not to grant local user rights to network users. If this setting is applied, when a network user logs in, the logged in network user's information is registered as a local user. By setting the account name on the registered local user information, network users can coordinate with job accounting. Displays the "Domain Name" in the user information for local users with rights.

NOTE

For local user information, refer to the following:

→ Adding a User (Local User List) (page 9-7)

#### 1 Display the screen.

1 [System Menu/Counter] key > [▲] or [▼] key > [User/Job Account] > [OK] key

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

 $[\blacktriangle]$  or  $[\blacktriangledown]$  key > [User Login Set.] > [OK] key >  $[\blacktriangle]$  or  $[\blacktriangledown]$  key > [NW User Auth.] > [OK] key

#### Configure the settings.

Select [On] for "Give Authority" and configure each item.

Item		Description
User Full Action		Configure the action when the number of users is exceeded when granting local user rights.
		Value: Do Not Add New, Delete Old User
Offline Auth.		Set the expiration date for not requiring network authentication for local user rights that have been granted.
		Value: Always Enabled, Enabled Period
		NOTE
		If [ <b>Enabled Period</b> ] is set, also set the period. (1 to 180 days)
Local Auth. Def.		Set the default local user rights that are granted.
	rint Restrict: rinter	Value: Off, Reject Usage
Co	opy Restrict.	Value: Off, Reject Usage
Du	uplex Restrict	Value: Off, 2-sided Only
Co	ombineRestrict	Value: Off, 2in1 & 4in1 Only, 4in1 Only
Ec	oPrint Restr.	Value: Off, EcoPrint Only
Se	end Restrict.	Value: Off, Reject Usage
FA	AX Restrict.	Value: Off, Reject Usage
St	oring in Box <sup>*1</sup>	Value: Off, Reject Usage
Sto	oringinMemory	Value: Off, Reject Usage

<sup>\*1</sup> This setting is displayed when the optional SSD is installed.

# **Group Auth. (Group Authorization Settings)**

Set restrictions of the machine usage by each individual group registered in the authentication server.

## **NOTE**

- To use the group authorization settings, [**Netwk Authentic.**] must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Settings".
- ► Enabling User Login Administration (page 9-3)
  ProtocolSettings (page 8-14)
- Setting to use group authorization is performed from the operation panel. The groups should be registered with Command Center RX.
- Command Center RX User Guide

#### **Group Authorization**

- Display the screen.
  - 1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key
    - **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 [▲] [▼] key > [User Login Set.] > [OK] key
- Configure the setting.

 $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Group Auth.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Off] or [On] > [OK] key

#### **Guest Authorization Set.**

When User Login Administration is enabled, set the functions that guest users who cannot log in to the machine are allowed to use.

NOTE

To use Guest Authorization Set., User Login Administration must be enabled in "Enabling User Login Administration".

Enabling User Login Administration (page 9-3)

#### **Enabling Guest Authorization**

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [Guest Auth. Set.] > [OK] key > [▲] [▼] key > [Guest Auth.] > [OK] key

#### Configure the setting.

[▲] [▼] key > [On] or [Off] > [OK] key

**NOTE** 

If the guest authorization setting is enabled, the [**Authentication/Logout**] key must be selected when logging in.

In the guest user default settings, only monochrome copying can be used. If you wish to use a different function, log in as a user who can use that function, or change the settings in the guest properties.

# **Configuring Guest Property**

Register guest user information and functions that are restricted.

## Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key

# Configure the settings.

1 [▲] [▼] key > [Guest Auth. Set.] > [OK] key > [▲] [▼] key > [Guest Property] > [OK] key

#### **2** Configure the settings.

The table below explains the user information to be registered.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
	The default setting is "Guest User".
Access Level	The authority of the user appears. This cannot be changed.
Account Name	Add an account where the user belongs.
Auth. Rules	Set usage authority for each user. The items you can restrict the access level with are as follows.
	Print Restrict.:
	Select whether or not use of the print function of the printer is prohibited.
	Applicable print functions are as follows:
	•Print from Box
	•Print from Removable Memory
	•Print Report
	Copy Restrict.:
	Select whether or not use of the copy print function is prohibited.
	Duplex Restrict:
	Select whether only duplex printing is allowed.
	Combine Restrict:
	Specify whether only Combine is allowed.
	EcoPrint Restr.:
	Specify whether only EcoPrint is allowed.
	Send Restrict.:
	Select whether or not use of the send function is prohibited.
	FAX Restrict.*1:
	Select whether or not use of the fax send function is prohibited.
	Storing in Box:
	Select whether or not use of the box store function is prohibited.
	StoringinMemory:
	Select whether or not use of the removable memory store function is prohibited.

<sup>\*1</sup> Only on products with the fax function installed.

Select [**Edit**], [**Change**] or [**Detail**] on each item, enter the information and then select the [**OK**] key. Select the [ $\blacktriangleright$ ] key to view the next screen. Select the [ $\blacktriangleleft$ ] key to return to the previous screen.

## Select the [OK] key.

# **NW User Property (Obtain Network User Property)**

Set the required information to obtain the network user property from the LDAP server. The user name and E-mail address obtained with this setting is shown in the user information, the status confirmation screen, and the header of E-mail.

#### **NOTE**

- To obtain the network user property from the LDAP server, [**Netwk Authentic.**] must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Settings".
- Enabling User Login Administration (page 9-3)
   ProtocolSettings (page 8-14)
- Setting to obtain network user information is performed from the operation panel. The details of the information to be obtained should be set with Command Center RX.
- Command Center RX User Guide

#### 1 Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

# NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 [▲] [▼] key > [User Login Set.] > [OK] key
- Configure the settings.

[▲] [▼] key > [NW User Property] > [OK] key > [▲] [▼] key > [Off] or [On] > [OK] key

# **ID Card Settings**

If ID card authentication is enabled, select the authentication type.

**NOTE** 

This functions appears when the Card Authentication kit is activated.

→ Card reader (page 11-6)

#### **Key Login**

When ID card authentication is enabled, select whether or not login by keyboard is allowed.

#### 1 Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [ID Card Settings] > [OK] key > [▲] [▼] key > [Key Login] > [OK] key

#### Configure the settings.

Select [Permit] or [Prohibit].

#### Additional Auth.

Select whether or not to require password entry after authenticating by ID card.

**NOTE** 

This function does not appear when the server type is set to [NTLM] or [Kerberos] in "Netwk Authentic.".

## Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key > [▲] [▼] key > [ID Card Settings] > [OK] key > [▲] [▼] key > [Additional Auth.] > [OK] key

# Configure the settings.

Select [Off], [Use Password] or [Use PIN].

**NOTE** 

[Use PIN] is displayed only when using PIN Code Authorization.

▶ PIN Login Settings (page 9-23)

# **PIN Login Settings**

NOTE

This setting is only displayed when [**Netwk Authentic.**] must be selected for the authentication method and the server type is set to [**Ext.**] in "Netwk Authentic.".

**▶** Enabling User Login Administration (page 9-3)

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

**NOTE** 

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [User Login Set.] > [OK] key

#### Configure the settings.

 $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [PIN Login] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > Select [Off] or [On] > [OK] key

# **Using User Login Administration**

This section explains procedures while setting job accounting.

# Login/Logout

If user login administration is enabled, the login user name and login password entry screen appears each time you use this machine.

Use the procedure below to login and logout.

#### Login

If the login user name entry screen appears during operations, log in by referring to the following:

**▶** Login (page 2-15)


#### Logout

When the operations are complete, select the [**Authentication/Logout**] key to return to the login user name and login password entry screen.

# **Overview of Job Accounting**

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.

- 1 Enable job accounting.
- Enabling Job Accounting (page 9-27)
- 2 Setting an account.
- → Job Accounting (Local) (page 9-28)
- 3 Enter the assigned account ID when performing the job.
- Using User Login Administration (page 9-24)
- 4 Count the number of pages copied, printed, scanned and faxed.

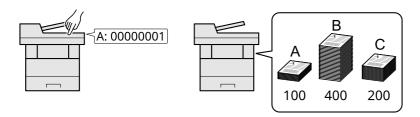


#### To manage the job account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

#### To Manage the Number of Sheets Used on Jobs Printed from a PC

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

- 1 Set Job Accounting for the PC on the network by using the printer driver.
- ▶ Job Accounting for Printing (page 9-32)
- 2 Execute printing.
- 3 Count the number of pages printed.

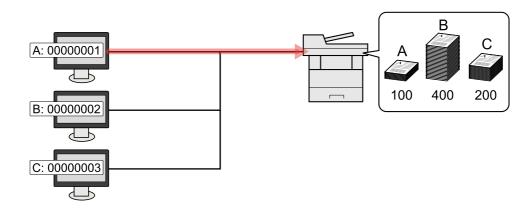

#### To Manage the Scan Job Account by Using TWAIN

To manage the scan job account by using TWAIN, you need to configure the TWAIN driver settings on the computer connected to the machine.

▶ Job Accounting for Scan Using TWAIN (page 9-33)

#### To Manage the Scan Job Account by Using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer connected to the machine.

→ Job Accounting for Scan Using WIA (page 9-34)

#### To Manage the FAX Job Transmitted from a PC \*1

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC.

- → Managing FAX Jobs Transmitted from a PC (page 9-35)
- \*1 Only on products with the fax function installed.

# **Enabling Job Accounting**

Enable job accounting. Use the procedure below.

### **1** Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

# NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key

### Configure the settings.

[▲] [▼] key > [Job Accounting] > [OK] key > [▲] [▼] key > [On] > [OK] key

### **NOTE**

- To disable job accounting, select [Off].
- When the display returns to System Menu default screen, logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

# **Job Accounting Access**

Set the job accounting access.

### 1 Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key

### Configure the settings.

[▲] [▼] key > [AccountingAccess] > [OK] key > [▲] [▼] key > [Local] or [Network] > [OK] key

# **Job Accounting (Local)**

You can add, change and delete an account and set the restriction for each account.

# **Adding an Account**

Up to 100 individual accounts can be added. The following entries are required.

Item	Descriptions	
Account Name	Enter the account name (up to 32 characters).	
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).	
<b>Restriction</b> This prohibits printing/scanning or restricts the number of she		
	Restricting the Use of the Machine (page 9-29)	

#### **1** Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key > [Account. List] > [OK] key > [Menu] > [▲] [▼] key > [Add Account] > [OK] key

### **7** Enter the account information.

1 Enter the account name > [OK] key

### NOTE

For details on entering characters, refer to the the following:

- Character Entry Method (page 11-9)
- 2 Enter the account ID > [OK] key

### **NOTE**

Any "Account ID" that has already registered cannot be used. Enter any other account ID.

- 3 To apply restriction to the account ID, select [▲] [▼] key > [Detail] > [OK] key.
  To exit the operation, select [▲] [▼] key > [Exit] > [OK] key.
- 4 Check the account name and account ID and set the use restrictions.

To change the details, select [**Edit**], enter the information and then select the [**OK**] key. Select the [ $\blacktriangleright$ ] key to view the next screen. Select the [ $\blacktriangleleft$ ] key to return to the previous screen.

- Restricting the Use of the Machine (page 9-29)
- **5** Select the **[OK]** key.

A new account is added on the account list.

# **Restricting the Use of the Machine**

This section explains how to restrict the use of the machine by account or the number of sheets available.

The items that can be restricted differ depending on whether "Split" or "Total" is selected for "Copy/Print Count".

#### **Restriction Items**

"Split" selected for Copy/Printer Count"Split" selected for Copy/Printer Count

Item	Descriptions
Print Restrict Copier	Limits the number of sheets used for copying.
Print Restrict Printer	Limits the number of sheets used for printing.
Scan Restrict. Others	Limits the number of sheets scanned (excludes copying).
FAX TX Restrict	Limits the number of sheets sent by fax. This is displayed only on products with the fax function installed.

<sup>&</sup>quot;Total" selected for Copy/Printer Count

Item	Descriptions
Print Restrict.	Limits the total number of sheets used for copying and printing.
Scan Restrict. Others Limits the number of sheets scanned (excludes copying).	
FAX TX Restrict	Limits the number of sheets sent by fax. This is displayed only on products with the fax function installed.

### **Applying Restriction**

Restriction can be applied in the following modes:

Item	Descriptions
Off	No restriction is applied.
Counter Limit*1	Restricts the print counter in one-page increments up to 9,999,999 copies.
Reject Usage	Restriction is applied.

<sup>\*1</sup> If [**Counter Limit**] is selected, the [**Limit Pages**] screen appears after the [**OK**] key is selected. Enter a counter limit on pages using the numeric keys, and select the [**OK**] key.

# **Editing an Account**

### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key > [Account. List] > [OK] key

#### **7** Edit an account.

1 Select the account you want to change and select the [**OK**] key.

# **NOTE**

The account information can be changed by selecting [**Menu**], selecting [**Detail/Edit**] and then selecting the [**OK**] key.

- 2 Refer to step 2 of "Adding an Account" and "Restricting the Use of the Machine" to change account information.
  - ★ Adding an Account (page 9-28) Restricting the Use of the Machine (page 9-29)
- **3 [OK]** key > **[Yes]**

The account information is changed.

# **Deleting an Account**

This deletes the account.

#### **1** Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Job Account.Set.] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Account. List] > [OK] key

#### Delete an account.

- 1 Select the account you want to delete and [Menu].
- 2 [▲] [▼] key > [Delete] > [OK] key > [Yes]

The account is deleted.

# **Job Accounting for Printing**

To manage the number of pages used for jobs to be printed from the PC, you need to configure the following settings by using the printer driver. Instructions are based on interface elements as they appear in Windows 10.

#### Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel], and [View devices and printers].



In Windows 8.1, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Administrator] on the [Device Settings] tab.

### Configure the settings.

1 Select [Job accounting] on the [Job Accounting] tab.



#### 2 Set the Account ID.

[Use specific account ID]: Enter the Account ID. Printing will be performed using the entered Account ID. If this option is selected, the user does not have to enter the Account ID for each print job.

[**Prompt for account ID**]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

[**Prompt for account ID and validate**]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

[**Display account ID list**]: The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

[Validate user name (computer) or prompt for account ID]: When printing, the Windows user name is searched in the "Account IDs" and printing is possible if the name is registered. If the Account ID is not registered, the screen for entering the Account ID will appear.

3 Click [**OK**].



For other settings of job accounting, refer to the following:

Printer Driver User Guide

# **Job Accounting for Scan Using TWAIN**

To manage the scan job account by using TWAIN, you need to configure the following TWAIN driver settings. Instructions are based on interface elements as they appear in Windows 10.

### Display the screen.

1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select **[TWAIN Driver Setting]** in the search list. TWAIN Driver screen is displayed.



In Windows 8.1, select [**Search**] in charms, and enter "TWAIN Driver Setting" in the search box. Click [**TWAIN Driver Setting**] in the search list then the TWAIN Driver Setting screen appears.

2 Select the machine, click [**Edit**].



### Configure the settings.

- 1 Click [User Authentication Settings].
- 2 Select the checkbox beside [Account], and enter the account ID.



3 Click [OK].

# **Job Accounting for Scan Using WIA**

To manage the scan job account by using WIA, you need to configure the following WIA driver settings. Instructions are based on interface elements as they appear in Windows 10.

### Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel]. Click the search box in the Control Panel, and type "Scanner" in there. Select [View scanners and cameras] in the search list. The Scanners and Cameras screen is displayed.

# NOTE


In Windows 8.1, click [Search] in charms, and enter "Scanner" in the search box. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and press [**Properties**].



### Configure WIA Driver.

- 1 Select the checkbox beside [Account ID] on the [Settings] tab, and enter the Account ID.
- 2 Click [**OK**].

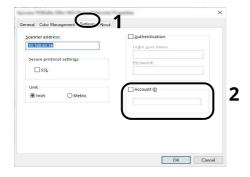

# **Managing FAX Jobs Transmitted from a PC**



FAX functions are available only on products with the fax function installed.

To manage the number of pages used for FAX jobs transmitted from the PC, you need to configure the following settings by using the FAX Driver. Instructions are based on interface elements as they appear in Windows 10.

#### Display the screen.

1 Click [Start] button on the Windows, and then select [Windows System], [Control Panel], and [View devices and printers].

### NOTE

In Windows 8.1, select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].

- 2 Right click the name of the machine to be used as the FAX Driver and select [**Printing preferences**] from the resulting pull-down menu.
- 3 Click [FAX TX Setting] in the [Printing Preferences] window.

# Configure the settings.

1 Select [Job Accounting] on the [Authentication] tab.



2 Set the Job Accounting.

[**Use Specific Account ID**]: This option can be used to specify an account ID to use the same Account ID for every FAX job. If this option is selected, the user does not have to enter the Account ID for each FAX job.

[**Prompt for Account ID**]: A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

3 Click [OK].

# **Configuring Job Accounting**

### **Default Counter Limit**

When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.

The items that can be set differ depending on whether [Split] or [Total] is selected for [Copy/Print Count].

→ Copier/Printer Count (page 9-41)

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key] key > [Default Setting] > [OK] key >[▲] [▼] key > [Counter Limit] > [OK] key

### Configure the settings.

[Split] selected for Copy/Print Count		
Copy Restriction	Sets the default restriction on the number of sheets used for copying.	
Print Restrict.	Sets the default restriction on the number of sheets used for printing.	
ScanRest.(Other)	Sets the default restriction on the number of sheets used for scanning (excludes copying).	
FAX Restriction*1	Sets the default restriction on the number of sheets used for sending faxes.	

<sup>\*1</sup> Only on products with the fax function installed.

[Total] selected for Copy/Print Count		
[Total] selected for Copy/Print Count		
Print Restrict.	Sets the default restriction on the total number of sheets used for copying and printing.	
ScanRest.(Other)	Sets the default restriction on the number of sheets used for scanning (excludes copying).	
FAX Restriction*1	Sets the default restriction on the number of sheets used for sending faxes.	

1 Select the item > use [▲] , [▼] or the numeric keys to enter the default restriction on the number of sheets > [**OK**] key

# **Counting the Number of Pages Printed**

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

Types of the counts are as follows.

	Item	Descriptions	
Print	ed Pages	Displays the number of pages copied and printed, and the total number of pages used. You can also use [FAX RX Pages]*1, [Duplex Pages] and [Combine Pages] to check the number of pages used.	
Copy/Print Pages		Displays the number of pages copied and printed, and the total number of pages used. Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.	
	FAX RX Pages	Displays the number of pages received.	
	Total PrintPages	Displays the total number of pages used for copying and printing.	
	Duplex Pages	Displays the number of pages printed in [ <b>1-Sided</b> ] mode, [ <b>2-Sided</b> ] mode, and the total pages in both modes. Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.	
	Combine Pages	Displays the number of pages printed in [ <b>None</b> ] (no Combine) mode, [ <b>2 in 1</b> ] mode, [ <b>4 in 1</b> ] mode, and the total pages in both modes. Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.	
Scanned Pages		Displays the number of pages scanned for copying, faxing and other functions, as well as the total number of pages scanned. Select the [▶] key to view the next screen. Select the [◄] key to return to the previous screen.	
FAX TX Pages*1		Displays the number of pages faxed.	
FAX TX Time*1		Displays the total duration of FAX transmissions.	
Counter Reset		Resets the counter. Select [ <b>Yes</b> ] in the confirmation screen.	

<sup>\*1</sup> Only on products with the fax function installed.

# **Counting the Number of Pages for All Accounts**

This counts the number of pages for each account. In addition, you can reset the counts for all accounts at the same time.

#### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key > [Total Accounting] > [OK] key

### Check the number of pages.

- 1 Select the item to check the count.
- 2 Check the count.

Select [Counter Reset] to reset the counter.

**3** Confirm the count and select [**Close**] .

# **Counting the Number of Pages for Each Account**

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

### 1 Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [A] [V] key [OK] Account.Set. [OK] key [A] [V] key [Each lob Account] > [OK] key [OK]

# Check the number of pages.


- 1 Select the account.
- 2 Select the item to check the count.
- 3 Check the count.

Select [Counter Reset] to reset the counter.

4 Confirm the count and select [Close].

# **Print Accounting Report**

The total pages counted of all relevant accounts can be printed as an accounting report.

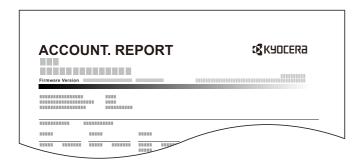

#### Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

**2** [▲] [▼] key > [Job Account.Set.] > [OK] key

### **3** Print the report.

[▲] [▼] key > [Account. Report] > [OK] key > [Yes]

Accounting report is printed.

# **Using Job Accounting**

This section explains procedures while setting job accounting.

# Login/Logout

If job accounting is enabled, an account ID entry screen appears each time you use this machine.

Use the procedure below to login and logout.

#### Login

1 In the account ID entry screen, enter the account ID using the numeric keys and select the [**OK**] key.



#### **NOTE**

- If you entered a wrong character, select the [Clear] key and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- By selecting [Counter], you can refer to the number of pages printed and the number of pages scanned.

#### When the screen to enter the login user name and password appears

If user login administration is enabled, the screen to enter the login user name and password appears. Enter a login user name and password to login. If the user has already registered the account information, the account ID entry would be skipped.

- → Adding a User (Local User List) (page 9-7)
- 2 Proceed to complete the rest of the steps.

#### Logout

When the operations are complete, select the [Authentication/Logout] key to return to the account ID entry screen.

# **Apply Limit**

This specifies how the machine behaves when the counter has reached the limit of restriction. The processing is as follows:

Item	Descriptions	
Immediately	Job stops when the counter reaches its limit.  The next job will be prohibited in sending or in storing in the box.	
Subsequently	Printing/scanning of the job continues but the subsequent job will be rejected.	
Alert Only	Job continues while displaying an alert message.	

#### Display the screen

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key > [Default Setting] > [OK] key > [▲] [▼] key > [Apply Limit] > [OK] key

#### Configure the settings

[▲] [▼] key > [Immediately], [Subsequently] or [Alert Only] > [OK] key

# **Copier/Printer Count**

You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually. The selection may influence restriction on the count and count method. For details, refer to the following:

### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Job Account.Set.] > [OK] key > [▲] [▼] key > [Default Setting] > [OK] key > [▲] [▼] key > [Copy/Print Count] > [OK] key

# Configure the settings

[▲] [▼] key > [Split] or [Total]] > [OK] key

# **Unknown User Settings**

# **Unknown ID Job**

This specifies the behavior for handling the jobs sent with unknown or unsent login user names or User ID. If the User Login is set to invalid and Job Accounting is set to valid, follow the procedure when the Account ID is unknown.

### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

### **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Unknown User] key > [OK] key

### Configure the settings.

[A] [ $\P$ ] key > [Unknown ID Job] > [OK] key > [A] [ $\P$ ] key > [Reject] or [Permit] > [OK] key

Item	Descriptions
Permit	The job is permitted to be printed.
Reject	The job is rejected (not printed).

# Registering Information for a User whose ID is Unknown

If you register user information for a user whose ID is unknown, you can check information on the Job Status or Job History screens. In addition, you can restrict available functions.

NOTE

This functions appears when [Unknown ID Job] is set to [Permit].

<u> Unknown ID Job (page 9-42)</u>

### Display the screen.

1 [System Menu/Counter] key > [▲] [▼] key > [User/Job Account] > [OK] key

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 [▲] [▼] key > [Unknown User] > [OK] key > [▲] [▼] key > [User Property] > [OK] key

# **2** Enter the user information.

The table below explains the user information to be registered.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
	NOTE
	This is displayed when user login administration is enabled.
Account Name	Add an account where the user belongs.
	Overview of Job Accounting (page 9-25)
	NOTE
	This is displayed when job accounting is enabled.
Auth. Rules	Set usage authority.
	The following restriction items are available:
	Print Restrict.:  Select whether or not use of the print function of the printer is prohibited.

# 10 Troubleshooting

### This chapter explains the following topics:

Regular Maintenance	10-2
Cleaning	10-2
Toner Container Replacement	
Waste Toner Box Replacement	10-9
Troubleshooting	10-11
Solving Malfunctions	10-11
Machine Operation Trouble	10-11
Printed Image Trouble	10-16
Remote Operation	10-19
Responding to Messages	10-21
Clearing Paper Jams	10-32

# **Regular Maintenance**

# **Cleaning**

Clean the machine regularly to ensure optimum printing quality.



For safety, always unplug the power cord before cleaning the machine.

#### **Glass Platen**


Wipe the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.



**IMPORTANT** 

Do not use thinner or other organic solvents.



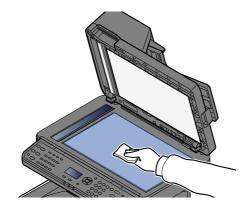

#### **Slit Glass**

When using the document processor, clean the slit glass surface and the reading guide with the dry cloth.



**IMPORTANT** 

Do not use water, soap or solvents for cleaning.



**NOTE** 


Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.






# **Registration Roller**


1

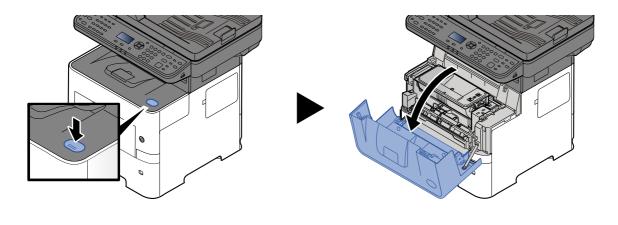

2

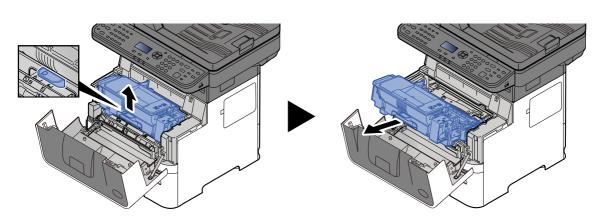


3

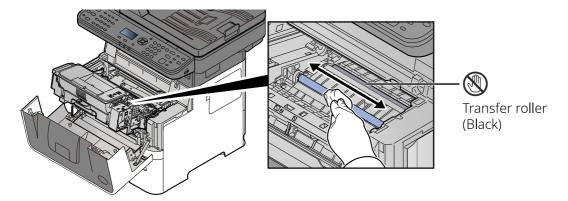

**IMPORTANT** 


Be careful not to touch the black transfer roller and brown transfer belt during cleaning as this may adversely affect print quality.



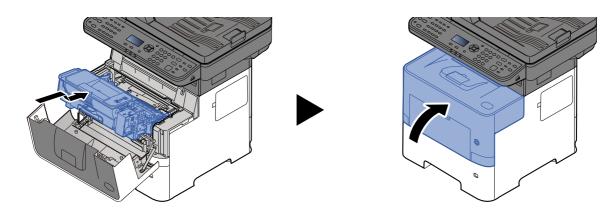

### **Vents**

Use a lint free cloth to clean dust and dirt away from the vents.

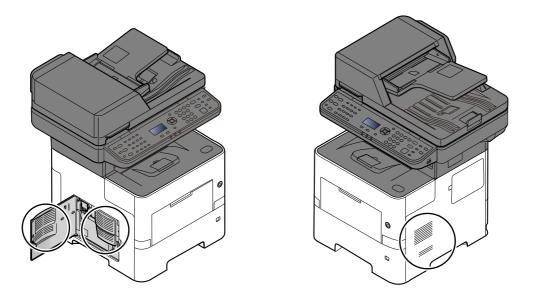

# **Toner Container Replacement**

When toner runs low, "Toner is low. (Replace when empty.)" appears in the message display. Make sure you have a new toner container available for replacement.

When the message displays "Replace the toner.", replace the toner.

#### **Frequency of Toner Container Replacement**

The life of the toner containers depends on the amount of toner required to accomplish your printing jobs. According to ISO/IEC 19752 and EcoPrint switched off the toner container can print as follows (A4/Letter paper is assumed):

#### Life of the Toner Container (Printable pages)

12,500 images



#### **NOTE**


- The average number of images that can be printed with the toner container provided with the machine is 6,000 images.
- To maintain quality, we recommend using genuine Kyocera toner containers, which must pass numerous quality inspections.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.




Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

# **Replacing the Toner Container**


1

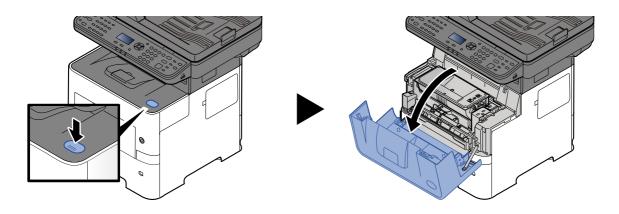

2

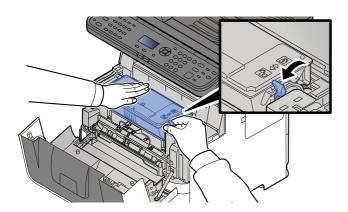


3

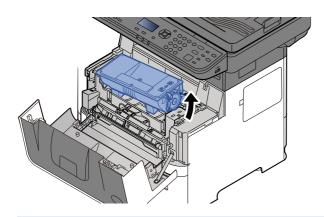


NOTE

When removing the toner container from the machine, lift up the right hand side first.



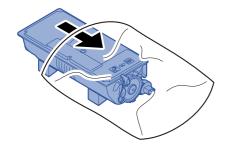


5

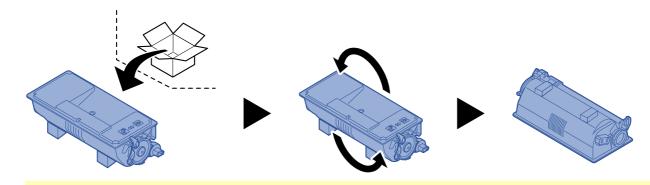


# **⊘** IMPORTANT


Do not touch the points shown below.

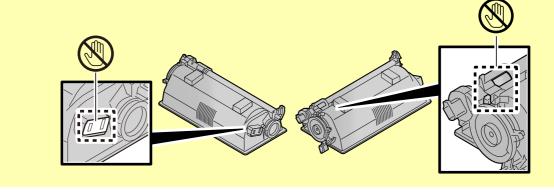


6

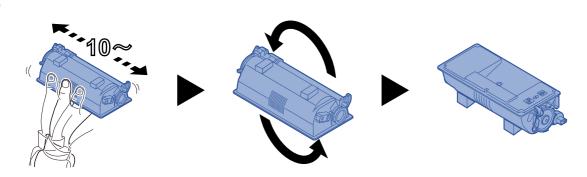


7

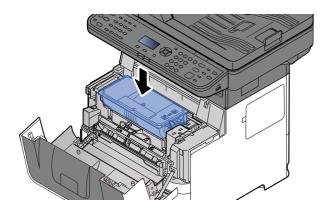

8

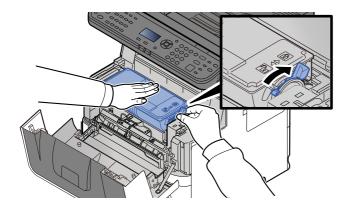

9

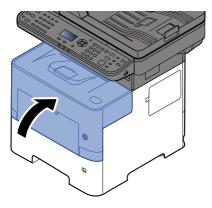

# NOTE

- If the front cover does not close, check that the new toner container is installed correctly (in step 7).
- Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.


# **Waste Toner Box Replacement**

When the waste toner box becomes full, immediately replace the waste toner box.




CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

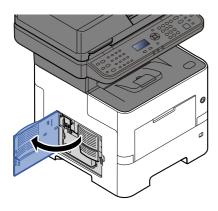


2

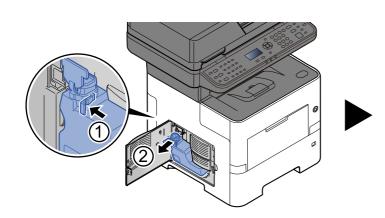




3

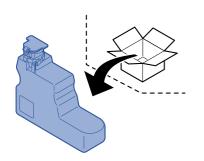






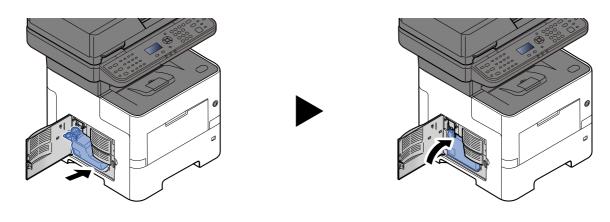

5

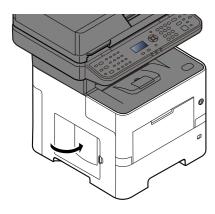

# NOTE

Return the exhausted waste toner box to your dealer or service representative. The collected waste toner box will be recycled or disposed in accordance with the relevant regulations.

# **Troubleshooting**

# **Solving Malfunctions**

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.



When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

Checking the Equipment's Serial Number (page i)

# **Machine Operation Trouble**

When the following machine operation troubles occur, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
An application does not start.	Is the Auto Panel Reset time short?	Set the Auto Panel Reset time to 30 seconds or more.	page 8-35
The screen does not respond when the power switch is turned on.	Is the machine plugged in?	Plug the power cord into an AC outlet.	_
Pressing the [Start] key does not produce copies.	Is there a message on the screen?	Determine the appropriate response to the message and respond accordingly.	page 10-21
	Is the machine in Sleep mode?	Select any key on the operation panel to recover the machine from Sleep mode.	page 2-28
Blank sheets are ejected.	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 5-2
		When placing originals in the document processor, place them face-up.	page 5-3
	_	Check that the settings of the application software.	_

Symptom	Checkpoints	Corrective Actions	Reference Page
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	page 3-2
	_	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-2
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-4
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-4
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 10-32
2 or more sheets are overlaps when ejected. (multi feed)	_	Load the paper correctly.	page 3-2
123			
Printouts are wrinkled.	Is the paper loaded correctly?	Load the paper correctly.	<u>page 3-2</u>
ABC 123	_	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	<u>page 3-2</u>
Printouts are curled.	_	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	page 3-2
Printer driver cannot be installed.	Is the driver installed with the host name while Wi-Fi or Wi-Fi Direct function is available?	Specify the IP address instead of the host name.	page 2-31

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	_
	Is the machine powered on?	Turn on the power switch.	page 2-11
	Are the USB cable and network cable connected?	Connect the correct USB cable and network cable securely.	page 2-9
	Is the print job paused?	Resume printing.	page 7-13
	When the wired or Wi-Fi network is configured using the name resolution, does the IP address (private address) of the other network which can not access coexists?	The number of host name and domain name which can be used with the machine is one respectively. Configure the network under this restriction.	_
		Change the settings of name resolution such as NetBEUI and DNS, or network environment settings.	Command Center RX User Guide
		Select Wi-Fi, Wired Network or Optional Network as an unlimited- use network on Primary Network (Client).	page 8-21
		Set to [Wired Network] or [Wi-Fi] either one of [Enable], and set the other setting to [Disable].	page 8-21
Cannot print with USB drive.	Is the USB host blocked?	Select [Unblock] in the USB host settings.	page 8-22
USB drive not recognized.	_	Check that the USB drive is securely plugged into the machine.	_
While "Auto-IP" is already set to [ <b>On</b> ], the IP address is not assigned automatically.	Is a value other than "0.0.0.0" entered for the link local address of TCP/IP(v4)?	Enter "0.0.0.0" for the IP address of TCP/IP(v4).	page 2-18

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot send via SMB.	Is the network cable connected?	Connect the correct network cable securely.	page 2-9
	Have the network settings for the equipment been configured properly?	Configure the TCP/IP settings properly.	page 8-20
	Have the folder sharing settings been configured properly?	Check sharing settings and access privileges under the folder properties.	page 3-17
	Is the selected interface selected as the Primary Network?	Specify the host name or IP address of the interface selected as the Primary Network, or set the interface to be used again.	page 8-21
	Has the SMB protocol been set to [On]?	Set the SMB protocol setting to [On].	page 8-14
	Has [ <b>Host Name</b> ] been entered properly? *1	Check the name of the computer to which data is being sent.	page 5-12
	Has [Path] been entered properly?	Check the share name for the shared folder.	page 5-12
	Has [ <b>Login User Name</b> ] been entered properly? *1 *2	Check the domain name and login user name.	page 5-12
	Has the same domain name been used for [Host Name] and [Login User Name]?	Delete the domain name and backslash ("/") from [Login User Name].	page 5-12
	Has [Login Password] been entered properly?	Check the login password.	page 5-12
	Have exceptions for Windows Firewall been configured properly?	Configure exceptions for Windows Firewall properly.	page 3-21
	Do the time settings for the equipment, domain server, and data destination computer differ?	Set the equipment, domain server, and data destination computer to the same time.	_
	Is the screen displaying Send error?	Refer to Responding to Send Error.	page 10-29
Cannot send via the e-mail.	Is the E-mail send size limit set in the SMTP server registered on the machine?	Check the limit value is entered to "E-mail Size Limit" of [E-mail] setting in Command Center RX and change the value as necessary.	page 2-53
The machine is emitting steam in the area around the paper ejection slot.	Check the room temperature to see if it is low, or if damp paper was used.	Depending on the printing environment and the paper's condition, the heat generated during printing will cause the moisture in the paper to evaporate, and the steam emitted may look like smoke. This is not a problem, and you can continue printing. If the steam concerns you, raise the room temperature, or replace the paper with a newer, dryer paper.	

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot search a text that you want to search on the PDF file.	Are the texts of the scanned original fainted or too light?	Set [Density] to darker level.	page 6-15
	Is the background of the scanned original too dark and the texts are difficult to recognize?	Set [Background Density] to [Auto] or [Manual] and manually adjust the density lighter. Otherwise, set [Density] to darker level.	page 6-12 page 6-15
	Is the text or image on the back of the original visible on the front?	Set [Prevent Bleed-t] to [On].	page 6-16
Cannot find the machine with WSD.	Did you search by specifying the machine's IP address or host name?	For security reasons, [HTTP] protocol is set to [Off], and therefore you cannot search by IP address or host name.	_
The machine makes a clicking sound before starting to print or after printing.	_	The machine is adjusting itself. It is not a machine failure.	_

<sup>\*1</sup> You can also enter a full computer name as the host name (for example, pc001.abcdnet.com).

<sup>\*2</sup> You can also enter login user names in the following formats:
Domain\_name/user\_name (for example, abcdnet/james.smith)
User\_name@domain\_name (for example, james.smith@abcdnet)

# **Printed Image Trouble**

When the following printed image trouble occurs, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
Printouts are totally too light.  ABC ABC 123	Is the paper damp?	Replace the paper with new paper.	page 3-2
	Have you changed the density?	Select appropriate density level.	page 6-12 page 8-50
	Is the toner distributed evenly within the toner container?	Shake the toner container from side to side several times.	page 10-5
	Is EcoPrint mode enabled?	Disable [EcoPrint] mode.	page 8-37
	_	Select the [System Menu/Counter] key > [Adjust/Maint.] > [Service Setting] > [Drum Refresh], and then select [Yes].	_
	_	Make sure the paper type setting is correct for the paper being used.	page 8-33
White background parts of the image appear to have a slight overall coloration.	Have you changed the density?	Select appropriate density level.	page 6-12 page 8-50
ABC 123	_	Select the [System Menu/Counter] key > [Adjust/Maint.] > [Service Setting] > [Drum Refresh], and then select [Yes].	_
Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).	Is the original a printed photograph?	Set the original image to [ <b>Photo</b> ].	page 6-13
Texts are not clearly printed.  ABC 123	Did you choose appropriate image quality for the original?	Select appropriate image quality.	page 6-13
Black or color dots appear on the white background.	Is the original holder or the glass platen dirty?	Clean the original holder or the glass platen.	page 10-2
ABC 123	_	Select the [System Menu/Counter] key > [Adjust/Maint.] > [Service Setting] > [Drum Refresh], and then select [Yes].	_

Symptom	Checkpoints	Corrective Actions	Reference Page
Printed images are fuzzy. Printed images are cut off.	Is the device used in an environment with high humidity or where the temperature or humidity changes suddenly?	Use in an environment that has suitable humidity.	_
ABC 123	_	Select the [System Menu/Counter] key > [Adjust/Maint.] > [Service Setting] > [Drum Refresh], and then select [Yes].	_
Printed images are skewed.	Are the originals placed correctly?	When placing originals on the platen, align them with the original size indicator plates.	page 5-2
ABC		When placing originals in the document processor, align the original width guides securely before placing the originals.	page 5-3
	Is the paper loaded correctly?	Check the position of the paper width guides.	page 3-4 page 3-8
	_	Perform center line adjustment. For more information about how to do so, contact your service representative.	_
Irregular horizontal lines appear in the image.		Contact your service representative.	
Printed images have vertical lines.  ABC 123	Is the slit glass dirty?	Clean the slit glass.	page 10-2
Dirt on the top edge or back of the paper.  ABC 123	Is the interior of the machine dirty?	Open the right cover. If the machine interior is dirty with toner, clean it using soft, dry, lint-free cloth.	page 10-2

Symptom	Checkpoints	Corrective Actions	Reference Page
Part of the image is periodically faint or shows white lines.	Are the developing unit and drum unit installed correctly?	Remove and correctly re-install the developing unit and drum unit.	_
	_	Open and then close the right cover.	_
	_	Select the [System Menu/Counter] key > [Adjust/Maint.] > [Service Setting] > [Drum Refresh], and then select [Yes].	_
The previous image remains and lightly printed.		Make sure the paper type setting is correct for the paper being used.	page 8-33
AB			
Print on the back of the sheet is visible on the front.	_	Set [Prevent Bleed-t] to [On].	page 6-16 page 8-37
ABC 123			

## **Remote Operation**

This function enables the system administrator to explain how to operate the panel and troubleshoot to user, by accessing operation panel of the machine at remote using browser and VNC software.

#### **Executing Remote Operation from Browser**

The supported Browser is as follows. We recommend the latest version of browser to use Remote Operation.

- · Google Chrome (Version 21.0 or later)
- · Microsoft Edge
- · Mozilla Firefox (Version 14.0 or later)
- Safari (Version 5.0 or later)

This procedure explains how to execute Remote Operation from Command Center RX using Google Chrome.



To execute Remote Operation using other browsers, refer to the following:

Command Center RX User Guide

## 1 Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [ProtocolSettings] > [OK] key

## Set "Enhanced VNC over SSL" to [On].

→ ProtocolSettings (page 8-14)



You can configure the protocol settings using Command Center RX.

Command Center RX User Guide

## Configure settings for remote operation.

- 1 [System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key > [▲] [▼] key > [Remote Operation] > [OK] key > [▲] [▼] key > [Off/On] > [OK] key > [▲] [▼] key > [ON] > [OK] key
- 2 [▲] [▼] key > [Use Restriction] > [OK] key > [▲] [▼] key > Select [Off], [Use Password], or [Admin. Only] > [OK] key

When you select [Use Password], enter the password in "Password" and "Confirm Password", then select [OK].

▶ Remote Operation (page 8-25)

## **NOTE**

You can configure settings for remote operation using Command Center RX

Command Center RX User Guide

## **1** Restart the machine.

▶ Restart (page 8-24)

## Start up the browser.

Enter "https://" and host name of the machine to access the Command Center RX.

→ Accessing Command Center RX (page 2-50)

## Select [Device Information/Remote Operation] > [Remote Operation].

## **7** Click [Start] button.

## **NOTE**

- If the user is logged in to the device, the permission confirmation screen will be displayed on the operation panel. Select [**Yes**].
- If pop-up blocking of the browser occurs during connection of the Remote Operation, select Always allow pop-ups from https:// [host name], and click Done. Perform Remote Operation after waiting 1 minute or more.

When the Remote Operation is started up, the operation panel screen will be displayed on the system administrator's or user's PC screen.

#### **Executing Remote Operation from VNC Software**

## Display the screen.

[System Menu/Counter] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [System/Network] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [Network Setting] > [OK] key >  $[\blacktriangle]$  [ $\blacktriangledown$ ] key > [ProtocolSettings] > [OK] key

## Set "Enhanced VNC (RFB)" to [On].

▶ ProtocolSettings (page 8-14)

## **NOTE**

- When setting "VNC (RFB) over SSL" to [**On**], the communication is encrypted.
- You can configure the protocol settings using Command Center RX.
- Command Center RX User Guide

## 3 Startup the remote operation.

- 1 Start up the VNC software.
- **2** Enter the following format separated by a colon to start up the remote operation.

"IP address: port number"

## **NOTE**

When setting "VNC (RFB)" to [**On**] in step 2, the default port number is 9062. When setting "VNC (RFB) over SSL " to [**On**], the default port number is 9063.

▶ ProtocolSettings (page 8-14)

# **Responding to Messages**

If the message display or the computer displays any of these messages, follow the corresponding procedure.



When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

→ Checking the Equipment's Serial Number (page i)

#### Α

Message	Checkpoints	Corrective Actions	Reference Page
Account error.	_	Failed to specify Job Accounting when processing the job externally. The job is canceled. Select [ <b>OK</b> ].	_
Add toner.	_	Replace the toner container to our specified toner container.	page 10-5

В

Message	Checkpoints	Corrective Actions	Reference Page
Box is not found. Job is canceled.	_	The specified box cannot be found. Job is canceled. Select [ <b>OK</b> ].	_
Box limit exceeded. Job is canceled.*1	Is [ <b>OK</b> ] displayed on the screen?	The specified box is full, and no further storage is available; Job is canceled. Select [ <b>OK</b> ] . Try to perform the job again after printing or deleting data from the box.	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

C

Message	Checkpoints	Corrective Actions	Reference Page
Cannot connect to Authentication Server Check the connection with the server.	_	Check the connection status with the server.	_
Cannot connect to Authentication Server Check the domain name.	_	Check the domain name.	page 9-2
Cannot connect to Authentication Server Check the host name.	_	Check the host name.	page 8-8

<sup>→</sup> Auto Err. Clear (page 8-36)

Message	Checkpoints	Corrective Actions	Reference Page
Cannot connect to Authentication Server Set machine time to match server's time.	_	Set machine time to match the server's time.	page 2-17
Cannot connect to Server. Check the Connection Status. Job is canceled.	_	Check the connection status with the server.	_
Cannot duplex print on this paper.  ↑↓ (Displayed alternately)  Press OK to continue using cassette #.	Did you select a paper size/type that cannot be duplex printed?	Select [ <b>Paper</b> ] to select the available paper. Select [ <b>OK</b> ] to print without using Duplex function.	page 6-20
Cannot duplex print on this paper.			page 6-20
Cannot execute this job. Restricted by Group Authorization.	_	This job is canceled because it is restricted by Group Authorization settings. Select [ <b>OK</b> ].	page 9-18
Cannot feed paper. Set cassette #.	_	Cannot feed paper. Set the cassette indicated on the screen.	_
Cannot use this function. >> FAX Transmission	_	This job is canceled because it is restricted by User Authorization or Job Accounting. Select [ <b>OK</b> ].	_
Cannot use this function. >> Print			
Cannot use this function. >> Send			
Cannot use this function.			
Check cassette #.	_	Open and then close the indicated cassette.	_
Close # cover.	Is there any cover which is open?	Close the cover indicated on the screen.	_
Close document processor.	Is the document processor open?	Close the document processor.	_
Close scanner unit.	_	Close the scanner unit.	_

Ε

Message	Checkpoints	Corrective Actions	Reference Page
Error occurred. Turn the power switch off and on.	_	System error has occurred. Turn the main power switch OFF and then ON.	_

F

Message	Checkpoints	Corrective Actions	Reference Page
Failed to store job retention data. Job is canceled.	_	The job is canceled. Select [ <b>OK</b> ].	_
File is not found. Job is canceled.	_	The specified file is not found. The job is canceled. Select [ <b>OK</b> ].	_

I

Message	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID. Job is canceled.*1	_	The account ID was incorrect when processing the job externally. The job is canceled. Select [ <b>OK</b> ].	_
Incorrect box password. Job is canceled.	_	The box password was incorrect when processing the job externally. The job is canceled. Select [ <b>OK</b> ].	_
Incorrect Login User Name or Password. Job is canceled.*1	_	The login user name or password was incorrect when processing the job externally. The job is canceled. Select [ <b>OK</b> ].	_
Inner tray is full of paper. Remove the paper.	_	Remove paper from the inner tray.	_
Insufficient memory. Cannot start the job.	_	Job cannot be started. Try again later.	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

→ Auto Err. Clear (page 8-36)

J

Message	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded. Job is canceled.	Is the acceptable printing count restricted by Job Accounting exceeded?	The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more. This job is canceled. Select [ <b>OK</b> ].	_

## K

Message	Checkpoints	Corrective Actions	Reference Page
KPDL error. Job is canceled.*1	_	PostScript error has occurred. The job is canceled. Select [ <b>OK</b> ].	

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

## L

Message	Checkpoints	Corrective Actions	Reference Page
Load paper in cassette #.  ↑↓ (Displayed alternately) Press OK to continue using cassette #.	Is the indicated cassette out of paper?	Load paper. Select [ <b>Paper</b> ] to select the other paper source. Select the [ <b>OK</b> ] key to print on the paper in the currently selected paper source.	page 3-4
Load paper in cassette #. ↑↓ (Displayed alternately) Set selected size paper and press [OK].	Is the indicated cassette out of paper?	Load paper. Select [ <b>Paper</b> ] to select the other paper source.	page 3-4
Load paper in MP tray.  ↑↓ (Displayed alternately)  Press OK to continue using MP tray.	Is the paper of the selected size loaded in the multi purpose tray?	Load paper. Select [ <b>Paper</b> ] to select the other paper source. Select the [ <b>OK</b> ] key to print on the paper in the currently selected paper source.	page 3-8
Load paper in MP tray.  ↑↓ (Displayed alternately)  Set selected size paper and press [OK].	Is the paper of the selected size loaded in the multi purpose tray?	Load paper. Select [ <b>Paper</b> ] to select the other paper source.	page 3-8

#### M

Message	Checkpoints	Corrective Actions	Reference Page
Machine failure. Call service.	_	An error has occurred in the machine. Make a note of the error code displayed on the message display, and contact your service representative.	_
Maximum number of scanned pages. Job is canceled.	Is the acceptable scanning count exceeded?	Cannot scan pages any more. Job is canceled. Select [ <b>OK</b> ].	_

<sup>→</sup> Auto Err. Clear (page 8-36)

Message	Checkpoints	Corrective Actions	Reference Page
Memory is full. Job is canceled.	_	The process cannot be performed due to insufficient memory. Select [ <b>OK</b> ]. The job will be canceled.	_
Memory is full. Print job cannot be processed completely.*1		Unable to continue the job as the memory is used up. Select [Continue] to print the scanned pages. The print job cannot be processed completely. Select [Cancel] to cancel the job.  The machine may reproduce the same originals by arranging the following settings:  Select [On] of RAM Disk Mode in System Menu, and then decrease the RAM Disk Size.  Select [Printer Priority] of Optional Memory in System Menu.  NOTE  Before changing the RAM Disk Setting or Optional Memory setting, contact your administrator.	

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

## Ν

Message	Checkpoints	Corrective Actions	Reference Page
Non-genuine Toner. Press [Help].	Is the installed toner container our own brand?	The manufacturer assumes no responsibility for damage caused by a non-genuine toner. We recommend that you only use genuine toner containers. When you want to use the toner container currently installed, select the [ <b>OK</b> ] key and the [ <b>Stop</b> ] key simultaneously for 3 seconds or more.	

P

Message	Checkpoints	Corrective Actions	Reference Page
Paper jammed at MP tray.		— If a paper jam occurs, the machine will stop and the location of the	page 10-32
Paper jammed in Cassette #.		jam will be indicated on the screen. Leave the machine on and select [ <b>Help</b> ]. Follow the instruction to remove the jammed paper.	1.
Paper jammed in document processor.	_	A paper jam has occurred in the document processor. Leave the machine on and select [ <b>Help</b> ] on the screen, and follow the instruction to remove the jammed paper.	_

<sup>→</sup> Auto Err. Clear (page 8-36)

Message	Checkpoints	Corrective Actions	Reference Page
Paper jammed in rear cover #.		If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instruction to remove the jammed paper.	page 10-32
Preparing to print.	_	The machine is under the adjustment to maintain its quality. Please wait.	_
Printing multiple copies is not allowed.		Multi copies cannot be printed because RAM disk is disabled or the SSD is not installed. The job is canceled. Select [ <b>OK</b> ].	_
		Try adding more memory or installing SSD, and configuring the RAM disk settings.	
Print overrun. Job is paused.	_	Warning. Low printer memory. The job was paused. Re-starting the job. Select [Continue].	_

R

Message	Checkpoints	Corrective Actions	Reference Page
RAM disk error. Press [OK].	_	An error has occurred on the RAM disk. Job is canceled. Select [ <b>OK</b> ]. The possible error codes and their descriptions are as follows.  04: Insufficient space on the RAM disk. If the optional RAM dis is installed, increase the RAM Disk Size by changing RAM Disk Mode in System Menu.	page 8-40
		The range of RAM disk size can be increased by selecting [ <b>Printer Priority</b> ] in Optional Memory.	
Removable Memory is full. Job is canceled.*1	_	Job is canceled. Select [ <b>OK</b> ]. Insufficient free space in the removable memory. Delete unneeded files.	_
Remove original from document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	_
Replace all originals and press Start key.	_	Remove originals from the document processor, put them back in their original order, and place them again. Press the [Start] key to resume printing. Select [Cancel] to cancel the job.	_

Message	Checkpoints	Corrective Actions	Reference Page
Replace MK.		Replacement of the parts in the maintenance kit is necessary at every 300,000 pages of printing and requires professional servicing. Contact your Service Representative.	
Replace the toner.	_	Replace the toner container to our specified toner container.	page 10-5
Restricted by Job Accounting. Cannot print.	_	This job is canceled because it is restricted by Job Accounting. Select [ <b>OK</b> ].	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

S

Message	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full. Job is canceled.	_	Scanning cannot be performed any more due to insufficient memory. The job is canceled. Select [ <b>OK</b> ].	_
Send Error.*1	_	An error has occurred during transmission. The job is canceled. Select [ <b>OK</b> ].  Refer to Responding to Send Error for the error code and corrective actions.	page 10-29
Shake the toner container.	_	Shake the toner container well and reinstall it.	page 10-5
SSD error. Job is canceled.		An error has occurred on SSD. Job is canceled. Select [ <b>OK</b> ].  The possible error codes and their descriptions are as follows.  O1: The amount of data that can be saved at once has been exceeded. Turn the power OFF/ON. If the error still occurs, divide the file into smaller files. If the error occurs after the file is divided, the specified file may be damaged. Delete the file.  O4: Insufficient space on SSD to complete this operation. Move data or delete unneeded data.	

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<sup>→</sup> Auto Err. Clear (page 8-36)

<sup>→</sup> Auto Err. Clear (page 8-36)

T

Message	Checkpoints	Corrective Actions	Reference Page
The slit glass requires cleaning.	_	Clean the slit glass using the cleaning cloth supplied with the document processor.	page 10-2
The toner container is not locked or improperly installed.	_	The toner container is not installed correctly. Set it correctly.	page 10-5
This user account is locked out. Contact administrator Job is canceled.	_	Contact administrator. The job is canceled. Select [ <b>OK</b> ].	_
Toner is low. (Replace when empty.)	_	It is almost time to replace the toner container. Obtain a new toner container.	_

U

Message	Checkpoints	Corrective Actions	Reference Page
Unknown Toner Installed. PC [K]	Does the installed toner container's regional specification match the machine's?	Install the specified toner container.	_
USB drive error. Job is canceled.	_	An error occurred in the removable memory. The job stopped. Select [ <b>OK</b> ].	_
		The possible error codes and their descriptions are as follows.	
		01: The amount of data that can be saved at once has been exceeded. Turn the power OFF/ON. If the error still occurs, the removable memory is not compatible with the machine.	

W

Message	Checkpoints	Corrective Actions	Reference Page
Waste toner box is full or placed improperly.	_	The waste toner box is not installed correctly. Set it correctly.	page 10-9
	Is the waste toner box full?	Replace the waste toner box.	page 10-9

Υ

Message	Checkpoints	Corrective Actions	Reference Page
You cannot use this box. Job is canceled.	_	You cannot use the specified box. Job is canceled. Select [ <b>OK</b> ].	_

# **Responding to Send Error**

Error Code	Message	Corrective Actions	Reference Page
1101	Failed to send the e-mail.	Check the host name of the SMTP server on the Command Center RX.	page 2-53
	Failed to send via FTP.	Check the host name of FTP.	page 5-31
	Failed to send via SMB.	Check the host name of SMB.	page 5-31
1102	Failed to send via SMB.	Check the SMB settings.  • Login user name and login password	page 5-31
		<ul><li>NOTE</li><li>If the sender is a domain user, specify the domain name.</li><li>Host name</li><li>Path</li></ul>	
	Failed to send the e-mail.	<ul> <li>Check the following on the Command Center RX.</li> <li>SMTP login user name and login password</li> <li>POP3 login user name and login password</li> <li>E-mail size limit</li> </ul>	page 2-53
	Failed to send via FTP.	<ul> <li>Check the FTP settings.</li> <li>Login user name and login password</li> <li>NOTE</li> <li>If the sender is a domain user, specify the domain name.</li> <li>Path</li> <li>Folder share permissions of the recipient</li> </ul>	page 5-31
1103	Failed to send via SMB.	Check the SMB settings.  Login user name and login password  NOTE  If the sender is a domain user, specify the domain name.  Path Folder share permissions of the recipient	page 5-31
	Failed to send via FTP.	<ul><li>Check the FTP settings.</li><li>Path</li><li>Folder share permissions of the recipient</li></ul>	page 5-31
1104	Failed to send the e-mail.	Check the e-mail address.  NOTE  If the address is rejected by the domain, you cannot send the email.	page 5-31


Error Code	Message	Message Corrective Actions							
1105	Failed to send via SMB.	Check the following settings.  [System Menu/Counter] key > [System/Network] > [Network Setting] > [ProtocolSettings] > [SMB]	page 8-14						
	Failed to send the e-mail.	Select [ <b>On</b> ] of the SMTP settings on the Command Center RX.	page 2-53						
	Failed to send via FTP.	Check the following settings.  [System Menu/Counter] key > [System/Network] > [Network Setting] > [ProtocolSettings] > [FTP(Client)]	page 8-14						
1106	Failed to send the e-mail.	Check the sender address of SMTP on the Command Center RX.	page 2-53						
1131	Failed to send via FTP.	Enable the TLS.  [System Menu/Counter] key > [System/Network] > [Network Setting] > [Secure Protocol] > [TLS]	page 8-18						
1132	Failed to send the e-mail.	<ul><li>Check the following of the SMTP server.</li><li>Is SMTP over TLS available?</li><li>Is the encryption available?</li></ul>	Refer to the Command Center RX User Guide.						
	Failed to send via FTP.	<ul><li>Check the following of the FTP server.</li><li>Is FTPS available?</li><li>Is the encryption available?</li></ul>	_						
2101	Failed to send via SMB.	<ul> <li>Check the network and SMB settings.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>Host name and IP address</li> <li>Port number</li> </ul>	_						
	Failed to send via FTP.	<ul> <li>Check the network and FTP settings.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>Host name and IP address</li> <li>Port number</li> </ul>	_						
	Failed to send the e-mail.	<ul> <li>Check the network and Command Center RX.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>POP3 server name of the POP3 user</li> <li>SMTP server name</li> </ul>	page 2-53						

Error Code	Message	Corrective Actions	Reference Page
2102 2103	Failed to send via FTP.	<ul><li>Check the network.</li><li>The network cable is connected.</li><li>The hub is not operating properly.</li><li>The server is not operating properly.</li></ul>	_
		<ul><li>Check the following of the FTP server.</li><li>Is FTP available?</li><li>The server is not operating properly.</li></ul>	_
	Failed to send the e-mail.	<ul><li>Check the network.</li><li>The network cable is connected.</li><li>The hub is not operating properly.</li><li>The server is not operating properly.</li></ul>	_
2201 2202 2203 2231	Failed to send the e-mail. Failed to send via FTP. Failed to send via SMB.	<ul><li>Check the network.</li><li>The network cable is connected.</li><li>The hub is not operating properly.</li><li>The server is not operating properly.</li></ul>	_
2204	Failed to send the e-mail.	Check the e-mail size limit of the SMTP settings on the Command Center RX.	page 2-53
3101	Failed to send the e-mail.	Check the authentication methods of both the sender and the recipient.	_
	Failed to send via FTP.	<ul><li>Check the network.</li><li>The network cable is connected.</li><li>The hub is not operating properly.</li><li>The server is not operating properly.</li></ul>	_
3201	Failed to send the e-mail.	Check the SMTP user authentication method of the recipient.	_
0007 4201 4701 5101 5102 5103 5104 7101 7102 7103 720f		Turn the main power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	page 2-11
9181	_	The scanned original exceeds the acceptable number of pages of 999. Send the excess pages separately.	_

# **Clearing Paper Jams**

If a paper jam occurs, the message display will display "Paper Jam." and the machine will stop. Refer to these procedures to remove the jammed paper.

#### **Jam Location Indicators**

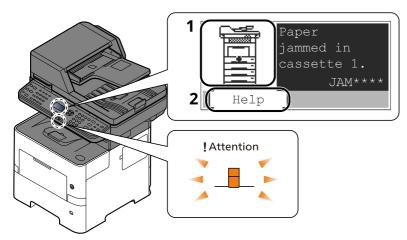


- 1 Shows the location of a paper jam.
- 2 Displays the Help screen.



For details on Help Screen, refer to the following:

→ Help Screen (page 2-14)

If a paper jam occurs, the location of the jam will be displayed on the message display as well as the clearing instructions.

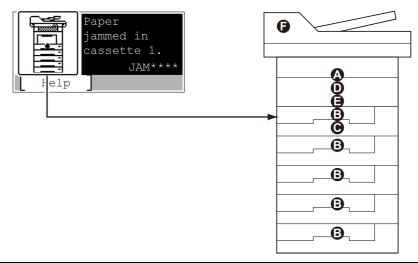

Paper Jam Location Indicator	Paper Jam Location	Reference Page
Α	Multi Purpose Tray	page 10-33
В	Cassettes 1 to 5	page 10-34
С	Duplex Unit	<u>page 10-35</u>
D	Inside the Machine	<u>page 10-36</u>
Е	Inner Tray / Inside Rear Cover	page 10-37
F	Document Processor	page 10-39

After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.

## **Precautions with Paper Jams**


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.




The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

## **Multi Purpose Tray**

1

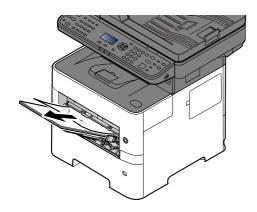


2

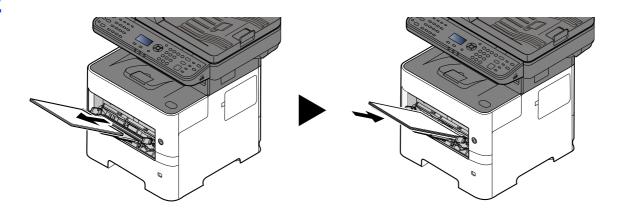


## Cassettes 1 to 5

Procedures for handling a paper jam in Cassettes 1 to 5 are all the same. This section explains procedures using Cassette 1 as an example.



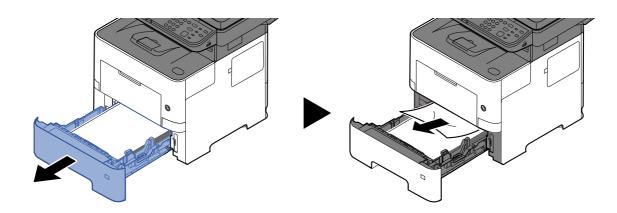




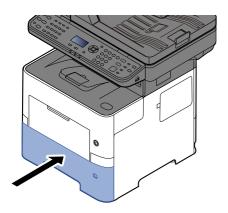



# **Duplex Unit**

1

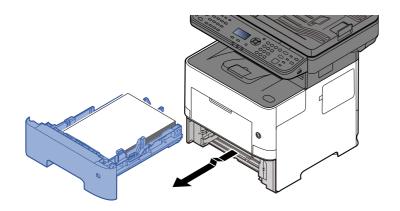



2

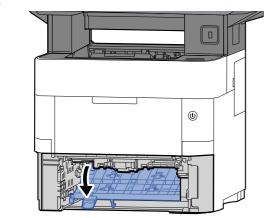

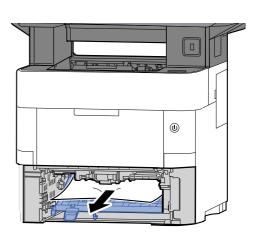


3

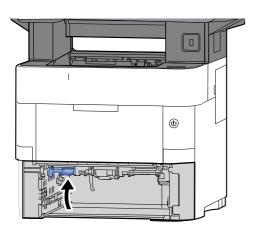

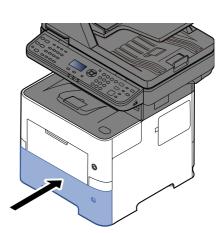


## **Inside the Machine**

1

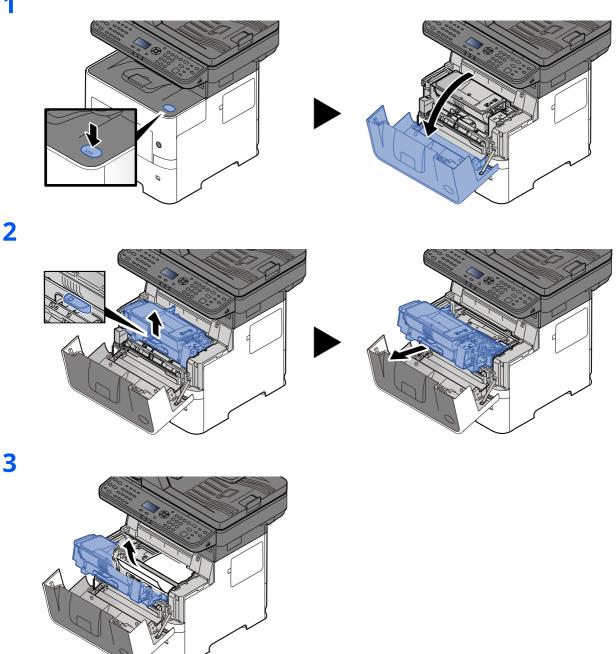


If the jammed paper appears to be pinched by rollers, pull it along the normal running direction of the paper. If you cannot find a paper jam, try checking inside the rear of the printer.

▶ Inner Tray / Inside Rear Cover (page 10-37)

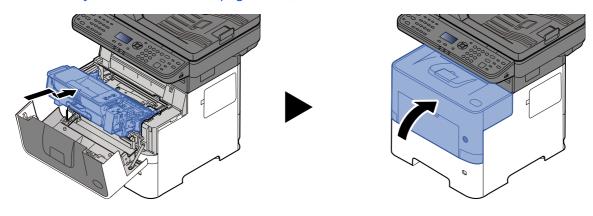


## Inner Tray / Inside Rear Cover


1

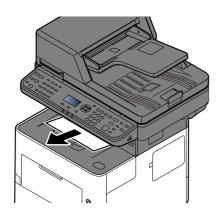


2

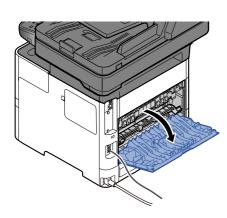

3

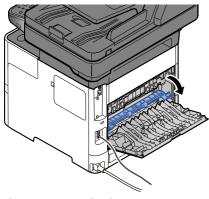



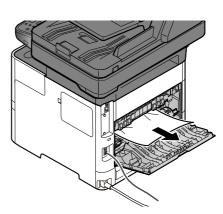


If you cannot find a paper jam, try checking inside the rear of the machine.



# CAUTION


The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.




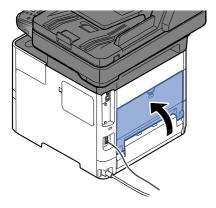


## **Document Processor**


1

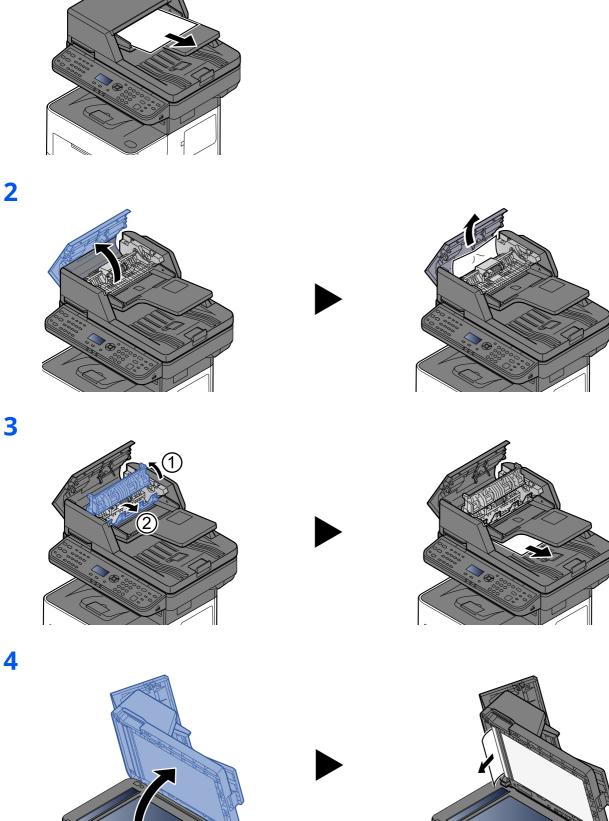

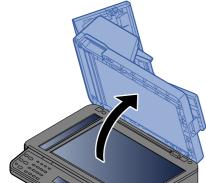

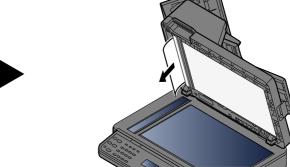



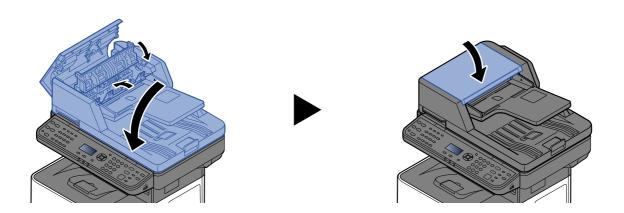

# 11 Appendix


This ch	anter	explains	the	following	tonics
11113 (11	apici	CADIGIIIS	UIIC	TOHOVVILIG	LODICS

Optional Equipment	11-2
Overview of Optional Equipment	
Optional Applications	
Character Entry Method	11-9
Using the Keys	11-9
Selecting Type of Characters	11-10
Characters That Can be Entered Using the Numeric Keys	11-10
Entering Symbols	
Entering Characters	
Entering Using the Character Selection Screen 11-13	
Paper	11-14
Basic Paper Specifications	
Choosing the Appropriate Paper	
Special Paper	
Specifications	
Machine	
Copy Functions	
Printer Functions	
Scanner Functions	
Document Processor	
Paper Feeder (500-sheet) (Option)	
Back up Data	
Data backup using KYOCERA Net Viewer 11-27	
Data backup using Command Center RX 11-27	
Glossary	11-28

# **Optional Equipment**

# **Overview of Optional Equipment**

The following optional equipment is available for the machine.

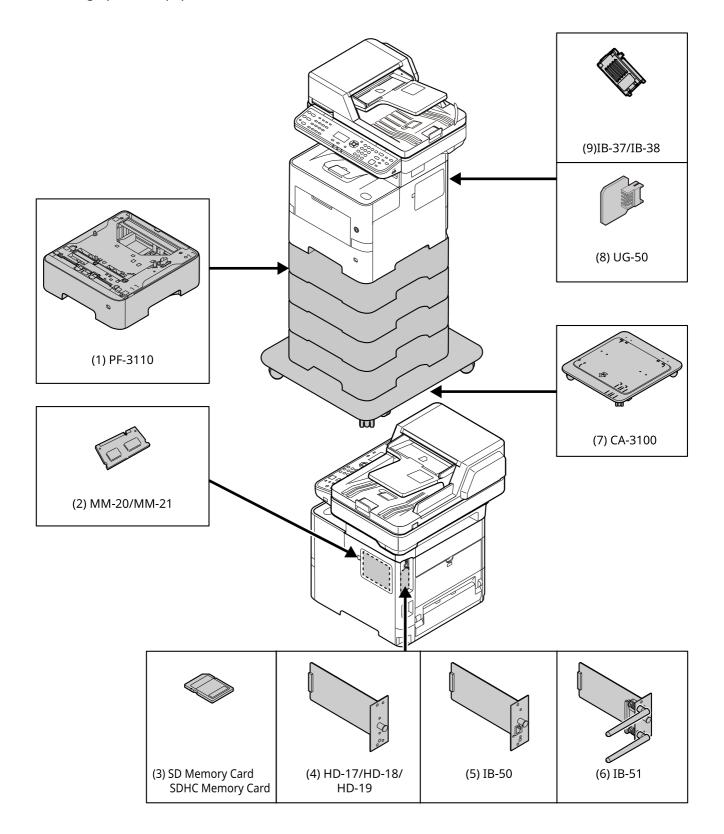

## (1) PF-3110 "Paper Feeder (500-sheet x1)"


Up to four additional cassettes identical to the machine's cassettes can be installed in the machine. Loading method are the same as the standard cassettes.

▶ Loading in the Cassettes (page 3-4)

## (2) MM-20/MM-21 "Expansion Memory"

The machine can perform the more multiple jobs simultaneously by adding more memories. You can increase the machine's memory up to 3,072 MB by plugging in the optional memory modules.

#### **Precautions for Handling the Memory Modules**

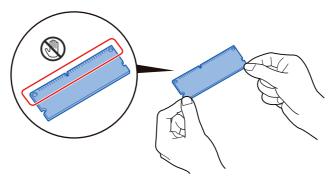

To protect electronic parts, discharge static electricity from your body by touching a water pipe (faucet) or other large metal object before handling the memory modules. Or, wear an antistatic wrist strap, if possible, when you install the memory modules.


#### **Installing the Memory Modules**

1 Turn off the machine and disconnect the power cord and interface cable.




If the optional IB-50/51 or HD-6/7 is installed, remove it.

2 Remove the covers.

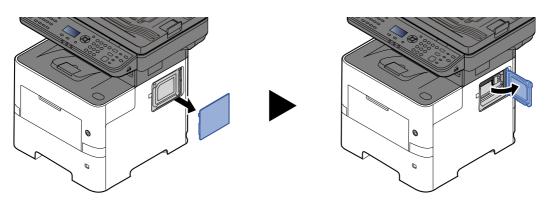

- 3 Remove the memory module from its package.
- 4 With the memory connection terminal pointing toward the socket, align the cut-out part with the socket terminal and insert directly in at an angle.

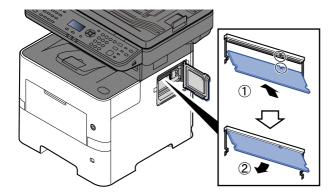

- **5** Carefully press the inserted memory down and into the machine.
- 6 Reinstall the covers.

#### **Removing the Memory Module**

To remove a memory module, remove the right cover and the memory slot cover from the machine. Then, carefully push out the two socket clamps. Ease the memory module out of the socket to remove.

#### **Verifying the Expanded Memory**

To verify that the memory module is working properly, test it by printing a status page.

Report (page 8-5)

## (3) "SD/SDHC Memory Card"

An SD/SDHC memory card is useful for storing fonts, macros, and overlays. The machine is equipped with a slot for an SDHC memory card with a maximum size of 32 GB, and an SD memory card with a maximum size of 2 GB.


#### Reading the SD/SDHC Memory Card

Once inserted in the machine's slot, the contents of the SD/SDHC memory card can be read from the operation panel or automatically when you power on or reset the machine.


#### **Installing and Formatting the SD/SDHC Memory Card**

To use an unused SD/SDHC memory card, you must first use the machine to format the SD/SDHC memory card. For information on formatting an SD/SDHC memory card, consult your Service Representative.


1 Power off the machine and unplug the power cord.

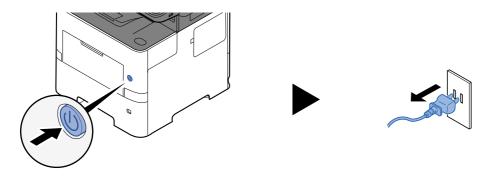


2 Remove the cover.

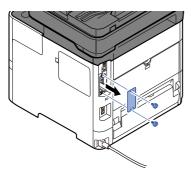


3 Insert the SD/SDHC memory card into the SD/SDHC memory card slot.

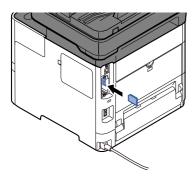

4 Replace the covers.

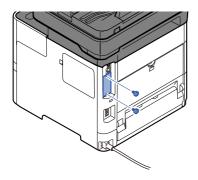

5 Insert the power cord into the socket and turn on the power switch.

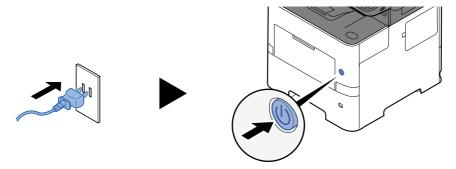

#### (4) HD-17/HD-18/HD-19 "SSD"

With SSD installed in the machine, received data can be rasterized and stored on this SSD. This enables high-speed printing of multiple copies using an electric sort function. Also, you can use the Document Box functions.

The security function can be used by installing the SSD.

- → Data Security (page 8-23)
- Data Encryption/Overwrite OPERATION GUIDE

#### (5) IB-50 "Network Interface Kit"

The Network Interface Kit provides a high-speed connection for the Gigabit-per-second interface. Settings are possible for a variety of OS and network protocols.

→ IB-50 User's Manual

## (6) IB-51 "Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE802.11n (Max 300 Mbps) and 11 g/b.

With the utilities supplied, settings are possible for a variety of OS and network protocols.

→ IB-51 User's Manual

#### (7) CA-3100 "Castor kit"

If you are attaching Paper Feeder (500-sheet x1) to the printer and installing it on the floor, you can use the castor kit to maintain the machine's stability.

#### (8) UG-50 "Trusted Platform Module"

You can secure sensitive information with this option. The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected.



If removing the TPM chip after the data encryption function is enabled, the machine will stop working.

#### (9) IB-37/IB-38 "Wireless Network Interface Kit"

These are wireless LAN Interface cards which support the following wireless LAN specifications.

IB-37: IEEE802.11 a/b/g/n/ac; IB-38: IEEE802.11 b/g/n

In addition, network printing is possible without using the wireless LAN router because Wi-Fi Direct is supported.

#### (10) UG-33 "ThinPrint Option"

This application allows print data to be printed directly without a print driver.

#### (11) USB Keyboard "USB Keyboard"

A USB keyboard can be used to enter information into the text fields on the operation panel. A special mount is also available to install the keyboard on the machine. Please contact your dealer or service representative for information on keyboards that are compatible with your machine before you purchase one.

#### (12) Scan Extension Kit(A) "OCR Scan Activation Kit"

This option enables the use of the OCR Text Recognition function in the applications of the machine.

## (13) Card reader

Purchase a compatible commercial card reader. Please contact your dealer or service representative for information on card reader that are compatible with your machine before you purchase one.

# **Optional Applications**

## **Overview of the Applications**

The applications listed below are installed on this machine.

Item	Application
Data Encryption/Overwrite	Data Encryption/Overwrite
CARD AUTHENTICATIONKIT(B)	Card Authentication Kit <sup>*1</sup>
UG-33	ThinPrint Option*1
Scan extension kit(A)	OCR Scan Activation Kit <sup>*1</sup>

<sup>\*1</sup> This can be used on a trial basis for a limited time.

## **NOTE**

- Restrictions such as the number of times the application can be used during the trial period differ depending on the application.
- If you change the date/time while using the trial version of an application, you will no longer be able to use the application.

#### **Starting Application Use**

Use the procedure below to start using an application.

## [System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

## 2 [▲] [▼] key > [Op Functions] > [OK] key

## **3** Select the desired application, and select the [OK] key.



You can view detailed information on the selected application by selecting [**Menu**] > [**Detail**] > [**OK**] key.

## **4** [▲] [▼] key > [Official] > [OK] key

To use the application as a trial, select [Trial] without entering the license key.

## 5 Enter the license key > [OK] key

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to Step 6.

## 6 Select [Yes].



If you started the Security Kit or Thin Print option and entered the license key, turn the power OFF/ON.

## **Checking Details of Application**

Use the procedure below to check the details of application.

## [System Menu/Counter] key > [▲] [▼] key > [System/Network] > [OK] key



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- [▲] [▼] key > [Op Functions] > [OK] key
- Select the desired application, and select [Menu].
- [▲] [▼] key > [Detail] > [OK] key

You can view detailed information on the selected application. Select the  $[\[ \]$  key to view the next screen. Select the  $[\[ \]$  key to return to the previous screen.

The table below lists the item you can view.

Item
Function Name
License On
Trial Counts
Date of Trial
Status

#### Extend the trial period.

[▲] [▼] key > [Date of Trial] > [Extend] > [Yes]


The trial period is extended.

# **Character Entry Method**

This section explains how to enter characters.

# **Using the Keys**

Use the following keys to enter characters.

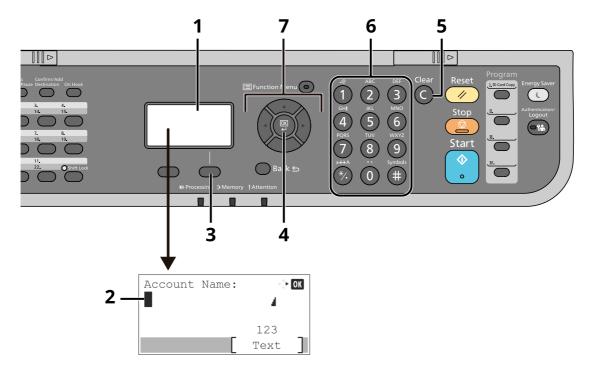


No.	Display/Key	Description
1	Message Display	Displays entered characters.
2	Cursor	Characters are entered at the position of the cursor.
3	Right Select key	Select to select the type of characters you want to enter. (When [ <b>Text</b> ] is displayed)
4	[ <b>OK</b> ] key	Select to finalize entry and return to the screen before the entry. To enter a symbol, select to confirm the selected symbol.
5	[Clear] key	Select to delete characters.
6	Numeric keys	Select to enter characters and symbols.
7	Arrow keys	Select to select the entry position, or select a character from the character list.

# **Selecting Type of Characters**

To enter characters, the following three types are available:

Types	Description
ABC	To enter alphabets.
123	To enter numerals.
Symbols	To enter symbols.

In a character entry screen, select [**Text**] to select the type of characters you want to enter.

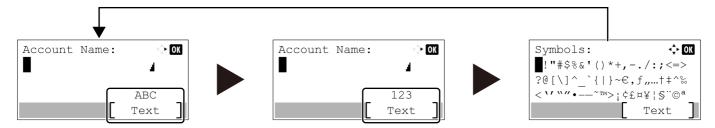

Each time you select [Text], the character type switches as follows: [ABC], [123], [Symbols], [ABC] ...

# **Characters That Can be Entered Using the Numeric Keys**

The following table lists the characters that can be entered using the numeric keys.


Keys		Cha	racte	ers (E	ach	press	of a	key	char	nges the character in the order from left to right.)						
.@		@	-	_	/	:	~	1	(Rep	peats from the first character on the left)						
	1 (D	uring	num	ber er	ntry)	•										
ABC	а	b	С	Α	В	С	2	2 (Repeats from the first character on the left)								
2	2 (D	uring	num	ber er	ntry)	•		•								
DEF	d	е	f	D	Е	F	F 3 (Repeats from the first character on the left)									
3	3 (During number entry)															
GHI	g	h	i	G	Н	I	4	(Rep	oeats	from the first character on the left)						
4	4 (D	uring	num	ber er	ntry)											
JKL	j	k	I	J	K	L	5	(Rep	oeats	from the first character on the left)						
5	5 (D	uring	num	ber er	ntry)											
MNO	m	n	0	М	N	0	6	(Rep	oeats	from the first character on the left)						
6	6 (D	uring	num	ber er	ntry)											
PQRS	р	q	r	S	Р	Q	R	S	7	(Repeats from the first character on the left)						
7	7 (D	uring	num	ber er	ntry)											
TUV	t	u	V	Т	U	٧	8	(Rep	peats	from the first character on the left)						
8	8 (D	uring	num	ber er	ntry)											

Keys		Cha	racte	ers (E	ach	press	s of a	key	char	nges	the o	hara	cter	in th	ne or	der f	rom	left to right.)
WXYZ	w	Х	у	Z	W	Χ	Υ	Z	9	(Rep	epeats from the first character on the left)							
9	9 (D	uring	num	ber ei	ntry)					1								
.,		,	-	_	'	!	?	(sp	ace)	0	(Rep	eats	from	the fi	rst ch	aract	er on	the left)
0	0 (D	0 (During number entry)																
a↔A	Sele	Select to change the character in the cursor position between upper case and lower case.																
*/.	"*" (	"*" or "." (During number entry)																
Symbols	!	"	#	\$	%	&	'	(	)	*	+	,	-		/	:	;	Displays the
(#)	<	=	>	?	@	[	١	]	٨	_	`	{	I	}	~			symbol list. For details, refer to
	# (D	uring	num	ber e	ntry)													the following:
	*	Deper	nding	on the	functi	ions, tl	here a	re syn	nbols t	that ca	ınnot k	e ento	ered.					► Entering Symbols (page 11-11)

# **Entering Symbols**

Symbols can be entered.


1 Select the [#] key. Displays the symbol list.

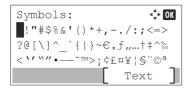

2 Select the  $[\blacktriangle]$ ,  $[\blacktriangledown]$ ,  $[\blacktriangledown]$  or  $[\blacktriangleright]$  key to move the cursor and select the symbol to be entered.




**3** Select the **[OK]** key. The selected symbol is entered.

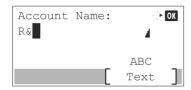


# **Entering Characters**

Follow the steps shown below to enter "R&D" for example.


1 Select the [7] key three times. [r] is entered.

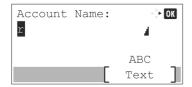


2 Select the [\*/.] key. [r] changes to [R].

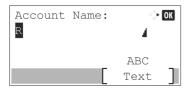

3 Select the [▶] key. The cursor moves to the right.

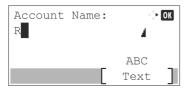


4 Select the [#] key. Displays the symbol list.

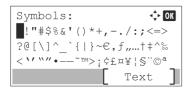


5 Select the [▲] or [▼] key to move the cursor and select [&].




6 Select the [**OK**] key. [**&**] is entered.

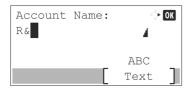

7 Select the [3] key four times. [D] is entered.

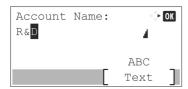


8 Select the [▶] key.

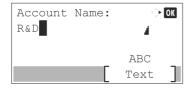


# **Entering Using the Character Selection Screen**

If "Login Operation" is [Select Character], then the screen is displayed to enter details by selecting from the characters on the message display. For details on changing the login operation method, refer to the following:

- **▶** Login Operation (page 8-39)
  - 1 Select the  $[\blacktriangle]$ ,  $[\blacktriangledown]$ ,  $[\blacktriangledown]$  or  $[\blacktriangleright]$  key to move the cursor and select the character to be entered.

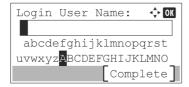

2 Select the [OK] key. The selected character is entered.

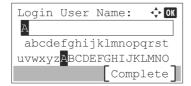

You can go back one character by selecting the [Clear] key.

**3** When the entry is complete, select [**Complete**].



# **Paper**

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to the following:

→ Specifications (page 11-22)

# **Basic Paper Specifications**

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

# Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

# **Basic Paper Specifications**

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications
Weight	Cassettes: 60 to 120 g/m <sup>2</sup>
	Multi purpose tray: 60 to 220 g/m <sup>2</sup>
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture content	4 to 6%
Pulp content	80% or more



### **NOTE**

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

# **Choosing the Appropriate Paper**

This section describes guidelines for choosing paper.

#### Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

# **Ingredients**

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

# **Supported Paper Sizes**

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a  $\pm 0.7$  mm dimensional accuracy for length and width. Corner angles must be  $90^{\circ} \pm 0.2^{\circ}$ .

Paper Size	Cassette 1	Cassettes 2 to 5	Multi Purpose Tray
Envelope Monarch (3-7/8 × 7-1/2")	×	0	0
Envelope #10 (4-1/8 × 9-1/2")	×	0	0
Envelope DL (110 × 220 mm)	×	0	0
Envelope C5 (162 × 229 mm)	0	0	0
Executive (7-1/4 × 10-1/2")	0	0	0
Letter	0	0	0
Legal	0	0	0
A4 (297 × 210 mm)	0	0	0
B5 (257 × 182 mm)	0	0	0
A5 (210 × 148 mm)	0	0	0
B6 (182 × 128 mm)	×	0	0
Envelope #9 (3-7/8 × 8-7/8")	×	0	0
Envelope #6 (3-5/8 × 6-1/2")	×	0	0
ISO B5 (176 × 250 mm)	0	0	0
Hagaki (Cardstock) (100 × 148 mm)	×	×	0
Oufuku hagaki (Return postcard) (148 × 200 mm)	×	0	0
Oficio II	0	0	0
216 × 340 mm	0	0	0
16K (273 × 197 mm)	0	0	0
Statement	0	0	0

Paper Size	Cassette 1	Cassettes 2 to 5	Multi Purpose Tray
Folio (210 × 330 mm)	0	0	0
Nagakaku 3	×	0	0
Younaga 3	×	0	0
Youkei 4 (105 × 235 mm)	×	0	0
Youkei 2 (114 × 162 mm)	×	0	0
Custom	Cassette 1: 140 × 148 to 216 × 356 mm  Cassettes 2 to 5: 92 × 162 to 216 × 356 mm  Multi Purpose Tray: 70 × 148 to 216 × 356 mm		

#### **Smoothness**

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

# **Basis Weight**

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

#### **Moisture Content**

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

# **Other Paper Specifications**

Porosity: The density of the paper fibers.

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

**Curl**: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

**Static electricity**: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

**Quality**: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

**Packaging**: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

**Specially treated paper**: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- · Glossy paper
- Watermarked paper
- Paper with an uneven surface
- · Perforated paper

# **Special Paper**

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- Preprinted paper
- Bond paper
- · Recycled paper
- Thin paper
- Letterhead
- Colored paper
- Prepunched paper
- Envelopes
- Hagaki (Cardstock)
- · Thick paper
- Labels
- · High-quality paper

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multi purpose tray for transparencies, thick paper, envelopes, cardstocks, and label paper.

# **Choosing Special Paper**

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multi purpose tray for special paper.

#### **Transparencies**

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C	
Thickness	0.100 to 0.110 mm	
Material	Polyester	
Dimensional accuracy	±0.7 mm	
Squareness of corners	90° ±0.2°	

To avoid problems, use the multi purpose tray for transparencies and load transparencies with the long side facing the machine.

If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

#### Label

Be sure to feed labels from the multi purpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.



Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

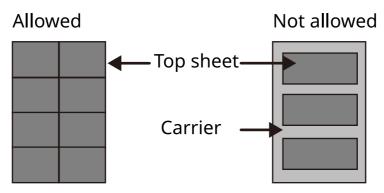

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m²
Basis weight (overall paper weight)	104 to 151 g/m <sup>2</sup>
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

# Hagaki (Cardstock)

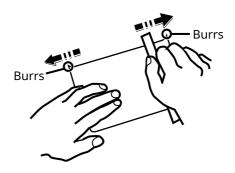

Before loading Hagaki (Cardstock) into the multi purpose tray, fan them and align the edges. If the Hagaki (Cardstock) paper is curled, straighten it before loading. Printing onto curled Hagaki (Cardstock) may cause jams.

Use unfolded Oufuku haqaki (Return postcard) (available at post offices). Some Haqaki (Cardstock) may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki (Cardstock) on a flat surface and rubbing the edges gently a few times with a ruler.

### **Envelopes**

Envelopes should be fed from the MP tray with the print-side up or the optional paper feeder with the print-side up.



#### **NOTE**

Do not load paper above the load limits located on the paper width guide of the optional paper feeder.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- If paper jams occur, load fewer envelopes at once.

### **Thick Paper**

Before loading thick paper in the multi purpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki (Cardstock) by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.



## **NOTE**

If the paper is not supplied correctly even after it is smoothed, load the paper in the multi purpose tray with the leading edge raised a few millimeters.

## **Colored Paper**

Colored paper must conform to the specifications.

→ Basic Paper Specifications (page 11-14)

In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

# **Preprinted Paper**

Preprinted paper must conform to the specifications.

→ Basic Paper Specifications (page 11-14)

The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

## **Recycled Paper**

Recycled paper must conform to the specifications; however, its whiteness may be considered separately.

→ Basic Paper Specifications (page 11-14)



Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

# **Specifications**



*⊘* IMPORTANT

Specifications are subject to change without notice.



For more information on using the FAX, refer to the following:

FAX Operation Guide

# **Machine**

Ite	m	Description
Туре		Desktop
Printing Method		Electrophotography by semiconductor laser
Paper Weight	Cassette	60 to 120 g/m <sup>2</sup>
	Multi Purpose Tray	60 to 220 g/m <sup>2</sup> , 209.5 g/m <sup>2</sup>
Paper Type	Cassette	Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8 (Duplex: Same as Simplex)
	Multi Purpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8
Paper Size	Cassette	A4, A5, B5, Letter, Legal, Statement, Executive,Oficio II, Folio, 216 × 340 mm, 16K, B5 (ISO), Envelope DL, Envelope C5, Custom (140 × 148 mm to 216 × 356 mm)
	Multi Purpose Tray	A4, A5, A6, B5, B6, Folio, 216 × 340 mm, Letter, Legal, Statement, Executive, Oficio II, 16K, B5 (ISO), Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Envelope DL, Envelope C5, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2,Nagagata 3, Younaga 3, Custom (70 × 148 mm to 216 × 356 mm), Banner sheet (216 × 470.1 mm to 216 × 915 mm)
Warm-up Time	Power on	16 seconds or less
(22°C/71.6°F, 60%)	Low Power Mode	10 seconds or less
	Sleep	16 seconds or less
Paper Capacity	Cassette	500 sheets (80 g/m <sup>2</sup> )*1
	Multi Purpose Tray	100 sheets (80 g/m <sup>2</sup> )

<sup>\*1</sup> Up to upper limit height line in the cassette.

Ite	m	Description
Output Tray Capacity	Inner tray	250 sheets (80 g/m <sup>2</sup> )
Image Write Sys	tem	Semiconductor laser and electrophotography
Memory		1024 MB
Interface Standard		USB Interface Connector: 1 (Hi-Speed USB) Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T) USB Port: 2 (Hi-Speed USB) Fax: 1 (ECOSYS MA4500fx only)
	Option	eKUIO: 1
Operating	Temperature	10 to 32.5°C/50 to 90.5°F
Environment	Humidity	15 to 80 %
	Altitude	3,500 m/11,482 ft maximum
	Brightness	1,500 lux maximum
Dimension (W ×	D × H)	18.71" × 18.74" × 22.64" 475 × 476 × 575 mm
Weight		Approx. 49.2 lb/Approx. 22.3 kg (without toner container)
Space Required ( (Using multi pur	·	18.71 × 26.23 475 × 666 mm
Power Source		120 V Specification Model: 120 V $\sim$ 60 Hz 10.0 A 230 V Specification Model: 220 to 240 V $\sim$ 50/60 Hz 5.6 A
The power consumption of the product in networked standby (If all network ports are connected.)		The information is available at the website below.  https://www.kyoceradocumentsolutions.eu/en/about-us/our-brand/environmental-policy.html
Options		◆ Optional Equipment (page 11-2)

# **Copy Functions**

Item		Description
Copy Speed (Standard cassette)	A4	45 sheets/min
	Letter	47 sheets/min
	Legal	38 sheets/min
	B5	36 sheets/min
	A5	23 sheets/min
	Statement	23 sheets/min
First Copy Time (A4, place on the platen, feed from Cassette)	7 seconds or less	
Zoom Level	Manual mode: 25 t Auto mode: Preset	o 400%, 1% increments Zoom
Continuous Copying	1 to 999 sheets	
Resolution	600 × 600 dpi	
Supported Original Types	Sheet, Book, 3-dim Legal/Folio)	ensional objects (maximum original size:
Original Feed System	Fixed	

# **Printer Functions**

Item	Description
Printing Speed	Same as Copying Speed.
First Print Time (A4, feed from Cassette)	5.3 seconds or less
Resolution	Fast 1200, Fine 1200, 600 dpi
Operating System	Windows 8, Windows 8.1, Windows 10, Windows 11, Windows Server 2012/R2, Windows Server 2016, Windows Server 2019, Mac OS 10.9 or later
Interface	USB Interface Connector: 1 (Hi-Speed USB)  Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T)  Optional Interface (Option): 1 (For IB-50/IB-51 mounting)  Wireless LAN (Option): 1 (For IB-37/IB-38 mounting)
Page Description Language	PRESCRIBE
Emulations	PCL6 (PCL-XL, PCL5c), KPDL3, XPS, TIFF/JPEG, PDF, URF, PWG Raster, PCLm

# **Scanner Functions**

Item		Description	
Resolution		600 dpi, 400 dpi, 300 dpi, 200×400 dpi, 200 dpi, 200×100 dpi	
File Format		TIFF (MMR/JPEG compression), JPEG, PDF (MMR/JPEG compression), XPS, PDF/A, High compressive PDF, Encrypted PDF, OPEN XPS	
Scanning Speed <sup>*1</sup>	(A4 landscape, 200 dpi, Image quality: Text/ Photo original)	1-sided B/W 60 Images/min Color 40 Images/min 2-sided B/W 26 Images/min Color 17 Images/min	
	(A4 landscape, 300 dpi, Image quality: Text/ Photo original)	1-sided B/W 60 Images/min Color 40 Images/min 2-sided B/W 26 Images/min Color 17 Images/min	
Interface		Ethernet (10 BASE-T/100 BASE-TX/1000 BASE-T), USB	
Transmission System		SMB, SMTP, FTP, FTP over TLS, USB, TWAIN*2, WIA*2, WSD	

<sup>\*1</sup> When using the document processor (except TWAIN and WIA scanning)

# **Document Processor**

Item		Description
Supported Orig	inal Types	Sheet originals
Paper Size	Maximum Minimum	8.5" × 14" 216 × 355.6 mm (Long-sized 216 × 915 mm) 4.13" × 5.82" 105 mm × 148 mm
Paper Weight		1-sided: 50 to 120 g/m <sup>2</sup> 2-sided: 50 to 120 g/m <sup>2</sup>
Loading Capacity		75 sheets (50 to 80 g/m²) maximum <sup>*1</sup>

<sup>\*1</sup> Up to upper limit height line in the document processor

<sup>\*2</sup> Available Operating System: Windows 8/Windows 8.1/Windows 10/Windows 11/ Windows Server 2012/Windows Server 2012 R2/Windows Server 2016/Windows Server 2019

# Paper Feeder (500-sheet) (Option)

Item	Description
Paper Supply Method	Friction roller feeder (No. Sheets: 500, 80 g/m²)
Paper Size	A4, A5, B5, B6, Folio, Letter, Legal, Statement, Executive, Oficio II, 16K, B5 (ISO), Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Envelope DL, Envelope C5, Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom (92 × 162 to 216 × 356 mm)
Supported Paper	Paper weight: 60 to 120 g/m <sup>2</sup> Media types: Plain, Rough, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8
Dimensions (W) × (D) × (H)	14.97" × 16.16" × 4.77" 380 × 410 × 121 mm
Weight	8.4 lbs. or less/ 3.8 kg or less



Consult your dealer or service representative for recommended paper types.

# **Back up Data**

If the SSD, HDD or this machine's memory mounted on the main unit fails for some reason, the box files, fax reception data and various settings saved will be erased and cannot be restored. To prevent data erasure, make regular backups as follows:

- · Take a backup using KYOCERA Net Viewer
- ▶ Data backup using KYOCERA Net Viewer (page 11-27)
- Take a backup using Command Center RX
- Data backup using Command Center RX (page 11-27)

# Data backup using KYOCERA Net Viewer

Use KYOCERA Net Viewer to regularly back up the data below that is saved on the machine.

- System Settings
- Network Settings
- User List
- Address Book
- Document Box Settings (excluding files in the document box)
- → Migrating the Address Book (page 2-60)

# **Data backup using Command Center RX**

Use Command Center RX to regularly back up data saved in the Document Box and Fax Box to your PC. This section describes the procedure for backing up the data in the document box. Fax boxes can be backed up using the same procedure.

# 1 Display the screen.

- 1 Launch a web browser
- 2 In the address or location bar, enter the machine's IP address or the host name.

Click in the following order to check the machine's IP address and the host name.

[Device Information] in the home screen > [Identification/Wired Network]

Click the number or name of the Custom Box in which the document is stored.

# 2 Download Document

- Select the document data you want to download to your PC.
   Only the data of one document can be downloaded at a time.
- 2 Click the [Download] icon. The selected document is displayed in [Print Settings].
- 3 Specify the [Image Quality] and [File Format] as needed.
- 4 Click [Download].

# **Glossary**

# Accessibility

The machine is designed featuring good accessibility even for the elderly and those who are physically challenged or visually impaired.

# **Apple Talk**

AppleTalk offers file sharing and printer sharing and it also enables you to utilize application software that is on another computer on the same AppleTalk network.

#### **Auto Form Feed Timeout**

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

#### **Auto-IP**

Auto-IP is a module that enables dynamic IPv4 addresses to be assigned to a device on startup. However, DHCP requires a DHCP server. Auto-IP is a server-less method of choosing an IP address. IP addresses between 169.254.0.0 to 169.254.255.255 are reserved for Auto-IP and assigned automatically.

### **Auto Paper Selection**

A function to automatically select paper in the same size as originals when printing.

# **Auto Sleep**

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

# **Bonjour**

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour on Windows OS, the Windows firewall will be set up correctly for Bonjour.

#### **Custom Box**

The Custom Box function stores print data for each individual user on the printer and allows the user to print single or multiple copies of the stored data later using the printer's operation panel.

#### **Default Gateway**

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on. When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

# **DHCP (Dynamic Host Configuration Protocol)**

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

# **DHCP (IPv6)**

DHCP (IPv6) is the next-generation of the Internet's Dynamic Host Configuration Protocol and supports IPv6. It extends the BOOTP startup protocol that defines the protocols used for transferring configuration information to hosts on the network. DHCP (IPv6) permits the DHCP server to use its expanded functionality to send configuration parameters to an IPv6 node. Because the network addresses that can be used are allocated automatically, the IPv6 node management workload is reduced in systems where the administrator has to exercise close control over IP address allocation.

## dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

#### **EcoPrint Mode**

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

#### **Emulation**

The function to interpret and execute other printers' page description languages. The machine emulates operation of PCL6, KPDL3 (PostScript 3 compatible).

# FTP (File Transfer Protocol)

A protocol to transfer files on the TCP/IP network, whether the Internet or an intranet. Along with HTTP and SMTP/POP, FTP is now frequently used on the Internet.

#### Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

#### **IP Address**

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

#### **IPP**

IPP (Internet Printing Protocol) is a standard that uses TCP/IP networks such as the Internet to enable print jobs to be sent between remote computers and printers. IPP is an extension of the HTTP protocol used to view websites and enables printing to be carried out via routers on printers in remote locations. It also supports the HTTP authentication mechanisms along with TLS server and client authentication as well as encryption.

#### **Job Box**

The Job Box function stores print data on the printer and allows users to print single or multiple copies of the stored data later using the printer's operation panel.

# **KPDL** (Kyocera Page Description Language)

Kyocera's PostScript page description language compatible with Adobe PostScript Level 3.

# Multi Purpose (MP) Tray

The paper supply tray on the front side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki (Cardstock), transparencies, or labels.

### **NetBEUI (NetBIOS Extended User Interface)**

An interface, developed by IBM in 1985, as an update from NetBIOS. It enables more advanced functions on smaller networks than other protocols such as TCP/IP, etc. It is not suitable for larger networks due to lack of routing capabilities to choose the most appropriate routes. NetBEUI has been adopted by IBM for its OS/2 and Microsoft for its Windows as a standard protocol for file sharing and printing services.

#### **Outline font**

With outline fonts, character outlines are represented with numerical expressions and fonts can be enlarged or reduced in different ways by changing the numeric values of those expressions. Printing remains clear even if you enlarge fonts, since the characters are defined with outlines represented with numerical expressions. You can specify the font size in steps of 0.25 points up to 999.75 points.

#### PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

#### **POP3 (Post Office Protocol 3)**

A standard protocol to receive E-mail from the server in which the mail is stored on the Internet or an intranet.

#### **PostScript**

A page description language developed by Adobe Systems. It enables flexible font functions and highly-functional graphics, allowing higher quality printing. The first version called Level 1 was launched in 1985, followed by Level 2 that enabled color printing and two-byte languages (e.g. Japanese) in 1990. In 1996, Level 3 was released as an update for the Internet access and PDF format as well as gradual improvements in implementation technologies.

#### PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

#### **Printer Driver**

The software to enable you to print data created on any application software. The printer driver for the machine is downloaded from our website. Install the printer driver on the computer connected to the machine.

#### RA(Stateless)

The IPv6 router communicates (transmits) information such as the global address prefix using ICMPv6. This information is the Router Advertisement (RA).

ICMPv6 stands for Internet Control Message Protocol, and is a IPv6 standard defined in the RFC 2463 "Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification".

#### **RAM Disk**

Using part of the printer's memory as a virtual disk, you can set any amount of memory from overall printer memory as a RAM disk in order to use features such as electronic sorting (shortening print time).

#### Send as E-mail

A function to send the image data stored in the machine as an E-mail attachment. E-mail addresses can be selected from the list or entered at each time.

# **SMTP (Simple Mail Transfer Protocol)**

A protocol for E-mail transmission over the Internet or an intranet. It is used for transferring mail between mail servers as well as for sending mail from clients to their servers.

### **Status Page**

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

#### **Subnet Mask**

The subnet mask is a way of augmenting the network address section of an IP address.

A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address is indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the "DHCP" setting to "Off".

#### TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

#### TCP/IP (IPv6)

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

#### TWAIN (Technology Without An Interesting Name)

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

#### **USB (Universal Serial Bus) 2.0**

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

# **WIA (Windows Imaging Acquisition)**

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

# **WPS (Wi-Fi Protected Setup)**

WPS is a network security standard created by Wi-Fi Alliance, to make it easy to connect with the wireless devices and set up the Wi-Fi Protected Access. The WPS-supported services can connect to the wireless access points by pushing a button or entering passphrases.

#### Index Combine 6-18 Command Center RX 2-49 Common Settings 8-28 Date Setting 8-34 Default Screen 8-28 Accessibility 11-28 Display Brightness 8-28 Address Book 3-31 Display Status/Log 8-40 Adding 3-31 Error Handling 8-34 Contact 3-31 Function Defaults 8-37 Editing and Deleting 3-36, 3-37 Keyboard Type 8-41 Group 3-34 Language 8-28 Address Book/One Touch 8-49 Login Operation 8-39 Adjustment/Maintenance 8-50 Measurement 8-33 Print Density 8-50 Optional Memory 8-40 AirPrint 4-17 Orig./Paper Set. 8-29 Allowlisting 8-26 Preset Limit 8-33 Anti-theft Lock Slot 2-3 RAM Disk Mode 8-40 Apple Talk 11-28 Sound 8-28 Application 8-49 Timer Setting 8-35 Auto Error Clear 8-36 TonerAlert Level 8-41 Auto Form Feed Timeout 11-28 Connecting Auto Panel Reset 8-35 LAN Cable 2-9 Auto Paper Selection 11-28 Power Cable 2-10 Auto Sleep 2-29, 11-28 USB cable 2-10 AutoColorCorrect 8-50 Connection Method 2-8 Auto-IP 11-28 Continuous Scan 6-22 Settings 8-11 Default 8-38 Automatic 2-Sided Print Function 1-14 Contrast 6-15, 8-50 Contrast (Copy) 8-50 Contrast (Send) 8-50 Background Density Adjustment 6-15, 8-50 Conventions Used in This Guide XXI Default 8-37 Copy 5-9 Bluetooth Set. 8-22 Copy Denst. Adj. 8-50 Bonjour 11-28 Copy Settings 8-43 Settings 8-13 Auto % Priority 8-43 Border Line 6-18 AutoPaperSelect. 8-43 Default 8-39 Paper Selection 8-43 Reserve Priority 8-43 C Select Key Setting 8-43 Cables 2-8 Copy Speed 11-24 Correct. Bk Line 8-51 Card reader 11-6 Counting the Number of Pages Printed Cassette Loading Paper 3-4 Counter 2-45 Print Accounting Report 9-39 Paper Size and Media Type 3-12, 8-32 Unknown ID Job 9-42 Cassette 1 2-2 Custom Box 11-28 Cassette Settings 3-12 Cassettes 2 to 4 2-7 Creating a New Box 5-36 Deleting Documents 5-41 Castor kit 11-6 Editing and Deleting Custom Box 5-38 Character Entry Method 11-9 Checking the Counter 2-45 Editing Documents 5-40 Storing Documents 5-38 Checking the Remaining Amount of Toner 7-16 Cleaning 10-2 Glass Platen 10-2 D Registration Roller 10-3 Data Security 8-23 Slit Glass 10-2 Date Format 8-34 Clear Settings after Job Started 8-37 **Date Setting** Collate 6-12 Date Format 8-34 Default 8-37 Date/Time 8-34 Color Selection 6-14 Summer Time 8-34 Default 8-37 Time Zone 8-34

Date/Time 8-34	Edit Destination 8-49
Date/Timer/Energy Saver	Address Book 3-31
EnergySaver RecoveryLevel 8-42	Address Book Defaults 8-49
Low Power Timer 8-35	Contact 3-31
Weekly Timer Settings 8-36	Edit Restriction 8-49
Default Gateway 11-28	Group 3-34
Settings 8-11	One Touch Key 3-38
Default Screen 8-28	E-mail Settings 2-53
Del. after Print 6-34	E-mail Subject/Body
Density 6-12	Default 8-38
Destination	Emulation 11-29
Adding a Destination 3-31	Selection 8-44
Address Book 5-29	Encrypted PDF 6-36
Checking and Editing 5-31	Energy Saver Recovery Level 8-42
Confirmation Screen of Destinations 5-32	Energy Saving Control Function 1-14
Destination Check 8-46	Energy Star (ENERGY STAR®) Program 1-14
Multi Sending 5-24	Enhanced WSD
One Touch Key 3-38	Protocol Settings 8-16
Search 5-30	EnhancedWSD (TLS)
Sort 8-49	Protocol Settings 8-17
Destination Check	EnhncdVNC ov TLS
Check before Send 8-46	Protocol Settings 8-18
Check New Destination 8-46	Entry
Device 7-14	File Name 6-22
Device Common	Subject 6-33
Bluetooth Set 8-22	Environment 1-3
DHCP 11-29	Err. Clear Timer 8-36
Settings 8-11	Error Handling 8-34
DHCP (IPv6) 11-29	Error Job Skip 8-34
Settings 8-12	eSCL
Display Brightness 8-28	Protocol Settings 8-17
Display Status/Log 8-40	eSCL over SSL
Document Box	Protocol Settings 8-17
Custom Box 5-34, 5-36	
	Expansion Memory 11-3
Job Box 4-18, 5-34	_
Removable Memory Box 5-35	F
What is Document Box? 5-34	FAX 8-47
Document Box Settings 8-48	File
Custom Box 8-48	Format 6-27
Job Box 8-48	PDF 6-29
Polling Box 8-48	Separation 6-33
Select Key Setting 8-48	File Format 6-27
Sub Address Box 8-48	Default 8-38
Document Processor	File Name Entry 6-22
How to Load Originals 5-3	Default 8-38
Loading Originals 5-3	File Separation 6-33
Originals Not Supported by the Document	Default 8-38
Processor 5-3	Finishing Binding 6-21
Originals Supported by the Document	First Copy Time 11-24
Processor 5-3	First Print Time 11-24
Part Names 2-2	
dpi 11-29	Front Cover 2-2
Duplex 6-20	Front Cover Open Button 2-2
Duplex (2-sided Original) 6-25	FTP 11-29
Duplex Cover 2-5	FTP (Clien)
Duplex Cover 2-3	Protocol Settings 8-14
_	FTP (Server)
E	Protocol Settings 8-14
EcoPrint 6-13, 11-29	FTP Encrypted TX 6-34
Default 8-37	Function Defaults 8-37
Printer 8-44	Fuser Cover 2-4

G	Job Accounting 9-25
Glossary 11-28	Adding an Account 9-28
Grayscale 11-29	Counting the Number of Pages Printed 9-37
Group Authorization Set. 9-18	Default Setting 9-36
Group Authorization 9-18	Deleting an Account 9-31
Guest Authorization Set. 9-19	Editing an Account 9-30
Guest Authorization 9-19	Enabling Job Accounting 9-27
Guest Property 9-19	FAX Driver 9-35
Guides Provided with the Machine XVIII	Job Accounting Access 9-27
	Login 9-40
Н	Logout 9-40
Handle 2-2	Overview of Job Accounting 9-25
	Print Accounting Report 9-39
Help 11-29	Printing 9-32
Help Screen 2-14	Restricting the Use of the Machine 9-29
High Compression PDF 6-28	TWAIN 9-33
Host Name 8-8 HTTP	WIA 9-34
	Job Box 11-29
Protocol Settings 8-15 HTTPS	Deletion of Job Retention 8-48
	PIN Print 4-27
Protocol Settings 8-15	Private Print Box 4-19
•	Proof and Hold Box 4-25
I	Quick Copy Box 4-23
I/F Block Set. 8-22	Quick Copy Jobs 8-48
Image Quality 6-27	Specifying the Job Box from a Computer and
Inner Tray 2-2	Storing the Job 4-18
Install	Storage Media 8-48
Macintosh 2-38	Stored Job Box 4-21
Software 2-30	Universal Print 4-29
Uninstalling 2-37	Job Finish Notice 6-22
Windows 2-31	JPEG/TIFF Print 6-36
IP Address 11-29	Default 8-38
Settings 8-11	
IP Filter (IPv4)	K
Settings 8-13	Keyboard Type 8-41
IP Filter (IPv6)	Knopflerfish License 1-13
Settings 8-13	KPDL 11-30
IPP 11-29	NI DE 11 30
Protocol Settings 8-15	The second secon
IPP over TLS	L
Protocol Settings 8-15	Label 11-19
IPSec	LAN Cable 2-8
Settings 8-13	Connecting 2-9
	Language 8-28
J	LDAP
Job	Protocol Settings 8-15
Available Status 7-2	Left Cover 2-6
Canceling 7-13	Legal Information 1-12
Checking History 7-8	Legal Restriction on Copying 1-9
Checking Status 7-2	Legal Restriction on Scanning 1-9
Displaying History Screen 7-9	Limited Use of This Product 1-11
Displaying Status Screens 7-2	LINE Connector 2-4
Pause and Resumption 7-13	Loading Originals 5-2
Sending the Log History 7-12	Loading Originals in the Document Processor 5-3
, , , , , , , , , , , , , , , , , , ,	Placing Originals on the Platen 5-2
	Local Authorization 9-16
	Login 2-15
	Login Operation 8-39
	Logout 2-16
	Long Original 6-35
	Low Power Mode 2-28

Low Power Timer 8-35	Optional Function 8-24
LPD	Optional Memory 8-40
Protocol Settings 8-15	Optional Network
	Basic 8-20
M	Orig./Paper Set. 8-29
Management 9-1	Original
Manual FW Update 8-26	Auto Detect Original Size (DP) 8-29
Manual Settings (IPv6) 8-12	Custom Orig. Size 8-29
Measurement 8-33	Default Original Size 8-29
Media Type Setting 8-33	Settings 8-29
Mixed Size Originals 6-9, 6-12	Original Binding 6-21, 6-25
Monotype Imaging License Agreement 1-13	Original eject table 2-2
Mopria 4-17	Original Image 6-13
MP Tray Settings 8-32	Default 8-37
Multi Purpose Tray 2-5, 11-30	Original Orientation 6-11
Paper Size and Media Type 3-13, 8-32	Default 8-37
Multi Sending 5-24	Original Size 6-9
Walti Schaing 5 24	Original Size Indicator Plates 2-2
NI.	Original Stopper 2-2, 5-4
N	Original Table 2-2
NetBEUI 11-30	Original Width Guides 2-2
Protocol Settings 8-14	Outline font 11-30
Network	
Preparation 2-18	P
Remote Operation 8-25	•
Remote Serv.Set. 8-24	Panel Reset Timer 8-35
Settings 8-8	Paper Chacking the Remaining Amount of Paper 7.16
Network Interface 2-8	Checking the Remaining Amount of Paper 7-16
Network Interface Connector 2-4	Appropriate Paper 11-15
Network Interface Kit 11-6	Cassette 8-32
Network Setup	Custom Paper Size 8-30
Wired Network 2-18	Default Paper Source 8-31
Wireless Network 2-20	Loading Cardstock 3-11
Notice 1-2	Loading Envelopes 3-11
NW InterfaceSend 8-21	Loading Paper 3-2
	Loading Paper in the Cassettes 3-4
0	Loading Paper in the Multi Purpose Tray 3-8
OCR Scan Activation Kit 11-6	Media for Auto 8-31
One Touch Key	Media Type Setting 8-31
Adding 3-38	Multi Purpose Tray 8-32
Editing and Deleting 3-39	Precaution for Loading Paper 3-3
Operation Assist	Size and Media Type 3-12, 11-14
Clear Settings after Job Started 8-37	Special Paper 11-18
Operation Panel 2-2	Special Paper Action 8-31
Option	Specifications 11-14
Card reader 11-6	Weight 8-33
Castor kit 11-6	Paper Feed Mode 8-45
Expansion Memory 11-3	Paper Feeder 11-3
Network Interface Kit 11-6	Paper Jams 10-32
OCR Scan Activation Kit 11-6	Cassettes 1 to 5 10-34
Overview 11-2	Document Processor 10-39
	Duplex Unit 10-35
Paper Feeder 11-3	Inner Tray 10-37
SD Card 11-4 SSD 11-6	Inside Rear Cover 10-37
SSD 11-6 Thin Print Ontion 11.6	Inside the Machine 10-36
ThinPrint Option 11-6	Jam Location Indicators 10-32
Trusted Platform Module 11-6	Multi Purpose Tray 10-33
USB Keyboard 11-6	Paper Length Guide 2-5, 3-5
Wireless Network Interface Kit 11-6	Paper Selection 6-10
Option Interface Slot 2-4	Paper Stopper 2-2, 3-14
Optional Applications 11-7	Paper Width Guides 2-5 3-4

Part Names 2-2	RAM Disk 11-31
PDF/A 6-27, 11-30	RAM Disk Mode 8-40
Ping 8-18	Raw
Platen 2-2	Protocol Settings 8-14
POP3 11-30	Rear Cover 1 2-3
Protocol Settings 8-14	Recycled Paper 11-21
PostScript 11-30	Regarding Trade Names 1-12
Power Cable	Registration Roller 2-6
Connecting 2-10	Regular Maintenance 10-2
Power Management 1-14	Toner Container Replacement 10-5
Power Off 2-11	Waste Toner Box Replacement 10-9
Power On 2-11	Remote Operation 8-25, 10-19
Power Switch 2-2	Remote Serv.Set. 8-24
PPM 11-30	Report 8-5
Precaution for Loading Paper 3-3	Admin Report Settings 8-7
Precautions for Use 1-4	Job Log History 8-7
Preset Limit 8-33	Report Print 8-5
Prevent Bleed-thru 6-16	Result Report Settings 8-7
Default 8-37	Report Print
Print Density 8-50	Font List 8-6
Print Override 6-23	Menu Map 8-5
Print Settings 4-2	Opt NW Status 8-6
Printer 8-44	Status Page 8-5
Auto Cassette Change 8-45	Resolution 6-33, 11-24
Copies 8-44	Resource Saving - Paper 1-14
CR Action 8-44	Responding to Messages 10-21
Duplex 8-44	Restart 8-24
EcoPrint 8-44	Restart Network 8-18
Emulation Set. 8-44	Restart Network 6-16
Form Feed TimeOut 8-44	
	<b>S</b>
Job Name 8-45 LF Action 8-44	Safety Conventions in This Guide 1-2
	Saving Documents to USB Drive 5-44
MP Tray Priority 8-45 Orientation 8-44	Scan Resolution 6-33
Override A4/Letter 8-44	Default 8-37
	Scan to Folder Setup Tool for SMB 3-26
Paper Feed Mode 8-45	SD Card 11-4
Print setting 4-2	Secure Boot 8-26
Printing Job Terminator 8-45	Secure Protocol 8-18
User Name 8-45	Security
Wide A4 8-44	Allowlisting 8-26
Printer Driver 11-30	Manual FW Update 8-26
Help 4-4	Secure Boot 8-26
Printing Documents Stored in Removable USB	Security Level 8-22
drive 5-42	Security Precautions when Using Wireless LAN 1-10
Printing from PC 4-5	Select Key Setting 8-43, 8-46, 8-48
Printing Speed 11-24	Send and Forward 8-46
Program 5-5	Send as E-mail 5-12
Confirming 5-6	Send Result 8-7
Deleting 5-7	Send Settings 8-46
Overwriting 5-7	Broadcast 8-46
Recalling 5-6	Default Screen 8-46
Registering 5-5	Destination Check 8-46
	New Destination Entry 8-46
Q	Recall Destination 8-46
Quiet Mode 6-23, 8-50	Select Key Setting 8-46
	Send and Forward 8-46
R	Send to Folder (FTP) 5-12
RA (Stateless) 11-30	Send to Folder (SMB) 5-12
RA(Stateless)	Send/Box Density 8-50
Settings 8-12	
55th 195 V 12	

Sending 5-12	System/Network 8-8
Preparation for Sending a Document to a	Data Security 8-23
PC 3-15	I/F Block Set. 8-22
Sending Size 6-26	Network Setting 8-8
Service Setting 8-51	NW InterfaceSend 8-21
Setting Date and Time 2-17	Optional Function 8-24
Sharpness 6-14	Optional Network 8-19
Simple Login 2-16	Restart 8-24
Size Dial 2-5	Security Level 8-22
Skip Blank Page 6-23	
Sleep 2-28	Т
Sleep Level 2-29, 8-35	TCP/IP 11-31
Sleep Rules 2-29, 8-35	Settings 8-11, 8-13
Sleep Timer 8-35	TCP/IP (IPv4)
Slit Glass 2-2	Settings 2-18, 8-11
SMB	TCP/IP (IPv6) 11-29
Protocol Settings 8-14	Settings 8-12
SMTP 11-31	TEL Connector 2-4
Protocol Settings 8-14	Thin Print over SSL
SNMPv1/v2c	Protocol Settings 8-16
Protocol Settings 8-14	ThinPrint
SNMPv3	Protocol Settings 8-16
Protocol Settings 8-14	ThinPrint Option 11-6
Solving Malfunctions 10-11	Time Zone 8-34
Sound 8-28	Timer Setting
Specifications 11-22	Auto Error Clear 8-36
Copy Functions 11-24	Auto Panel Reset 8-35
Document Processor 11-25	Err. Clear Timer 8-36
Machine 11-22	PanelReset Timer 8-35
Paper Feeder (500-sheet) (Option) 11-26	Ping Timeout 8-36
Printer Functions 11-24	Sleep Level 8-35
Scanner Functions 11-25	Sleep Rules 8-35
Specifying Destination 5-29	Sleep Timer 8-35
SSD 11-6	Unusable Time 8-36
SSD Initializ. 8-23	TLS 8-18
Status Page 11-31	Toner Container 2-6
Status/Job Cancel 7-1	Toner Container Lock Lever 2-6
Storing Size 6-35	Toner Container Replacement 10-5
Subject/Body 6-33 Default 8-38	TonerAlert Level 8-41
	Tray Extension 2-5
Subnet Mask 11-31	Troubleshooting 10-11
Settings 8-11	Trusted Platform Module 11-6
Supplies Chasking the Remaining Amount 7.16	TWAIN 11-31
Checking the Remaining Amount 7-16 Symbols 1-2	Scanning using TWAIN 5-19
System Menu 8-2	Setting TWAIN Driver 2-42
Address Book/One Touch 8-49	
Adjustment/Maintenance 8-50	U
Application 8-49	Universal Print 4-10, 4-17
Common Settings 8-28	USB 11-31
Copy 8-43	USB Cable
Document Box 8-48	Connecting 2-10
Edit Destination 8-49	USB Drive
FAX 8-47	Printing 5-42
Printer 8-44	Remove 5-46
Report 8-5	Save 5-44
Send 8-46	USB Drive Slot 2-2
System/Network 8-8	USB Drive Slot (for card reader) 2-2
User Login/Job Accounting 8-27	USB Interface 2-8
User Property 8-27	USB Interface Connector 2-4
•	USB Keyboard 11-6

```
User Login Administration 9-2
   Adding a User 9-7
   Changing User Properties 9-10
   Enabling User Login Administration 9-3
   FAX Driver 9-15
   Group Authorization Set. 9-18
   Guest Authorization Set. 9-19
   ID Card Settings 9-22
   Local Authoriz. 9-16
   Login 2-15
   Logout 2-16
   Obtain NW User Property 9-21
   Overview of User Login Administration 9-2
   Printing 9-12
   TWAIN 9-13
   User Account Lockout Setting 9-5
   WIA 9-14
User Login/Job Accounting 8-27
   Job Accounting 9-25
   Unknown ID Job 9-42
   User Login 9-2
User Property 8-27
VNC(RFB)
   Protocol Settings 8-17
W
Waste Toner Box 2-6
Waste Toner Box Replacement 10-9
Weekly Timer Settings 8-36
WIA 11-32
   Setting WIA Driver 2-44
Wi-Fi
   Settings 2-20, 8-9
Wi-Fi Direct
   Printing 4-17
   Settings 2-26, 8-8
Wireless Connection 1-9
Wireless Network
   Basic 8-20
   Settings 2-20
Wireless Network Interface Kit 11-6
WSD Scan 5-22
WSD-PRINT
   Protocol Settings 8-16
WSD-SCAN
   Protocol Settings 8-16
X
XPS FitTo Page 6-36
   Default 8-38
Z
Zoom 6-16
   Default 8-37
```

# QUALITY CERTIFICATE

This machine has passed all quality controls and final inspection.

# KYOCERA Document Solutions America, Inc. Headquarters

225 Sand Road, Fairfield, New Jersey 07004-0008, U.S.A.

Phone: +1-973-808-8444 Fax: +1-973-882-6000

#### **Latin America**

8240 NW 52nd Terrace, Suite 301 Miami, Florida 33166, U.S.A. Phone: +1-305-421-6640

# **KYOCERA Document Solutions** Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8, Canada

Phone: +1-905-670-4425 Fax: +1-905-670-8116

# KYOCERA Document Solutions Mexico, S.A. de C.V.

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco Chapultepec, Delegacion Miguel Hidalgo, Ciudad de

Mexico, C.P.11560, Mexico Phone: +52-555-383-2741 Fax: +52-555-383-7804

# **KYOCERA Document Solutions** Brazil, Ltda.

Al. Mamoré, 503, 4° andar, salas 41, 42 e 43, do Ed. Icon Alphaville, Alphaville, Barueri, SP, CEP 06454-040, Brazil

Phone: +55-11-2424-5353 Fax: +55-11-2424-5304

# **KYOCERA Document Solutions Chile SpA**

Andrés Bello 2299, Providencia Santiago,

Region Metropolitana, Chile Phone: +56-2-2670-1900 Fax: +56-2-2350-7150

# KYOCERA Document Solutions Australia Pty. Ltd.

Level 3, Quarter One, 1 Epping Road, North Ryde NSW

2113, Australia

Phone: +61-2-9888-9999 Fax: +61-2-9888-9588

# **KYOCERA Document Solutions New Zealand Ltd.**

Ground Floor. 19 Byron Avenue, Takapuna, Auckland,

New Zealand

Phone: +64-9-415-4517 Fax: +64-9-415-4597

#### **KYOCERA Document Solutions Asia Limited**

13/F., Mita Centre, 552-566, Castle Peak Road, Tsuen

Wan, New Territories, Hong Kong, China

Phone: +852-2496-5678 Fax: +852-2610-2063

# **KYOCERA Document Solutions** (China) Corporation

8F, No. 288 Nanjing Road West, Huangpu District,

Shanghai, 200003, China Phone: +86-21-5301-1777 Fax: +86-21-5302-8300

## **KYOCERA Document Solutions** Europe B.V.

Bloemlaan 4, 2132 NP Hoofddorp, The Netherlands

Phone: +31(0)20-654-0000 Fax: +31(0)20-653-1256

#### **KYOCERA Document Solutions** Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Rijk, The Netherlands

Phone: +31-20-5877200 Fax: +31-20-5877260

### **KYOCERA Document Solutions** (U.K.) Limited

Eldon Court 75-77 London Road, Reading, Berkshire RG1

5BS. United Kingdom Phone: +44-118-931-1500 Fax: +44-118-931-1108

#### **KYOCERA Document Solutions** Italia S.p.A.

Via Monfalcone 15, 20132, Milano, Italy

Phone: +39-02-921791 Fax: +39-02-92179-600

### **KYOCERA Document Solutions** Belgium N.V.

Sint-Martinusweg 199-201 1930 Zaventem, Belgium

Phone: +32-2-7209270 Fax: +32-2-7208748

#### **KYOCERA Document Solutions** France S.A.S.

Espace Technologique de Saint-Aubin, Route de l'Orme,

91190 Gif-sur-Yvette. France Phone: +33-1-69852600 Fax: +33-1-69853409

## **KYOCERA Document Solutions** Espana, S.A.

Calle Manacor, 2, Las Rozas, Madrid, 28290 Las Rozas

de Madrid, Madrid, Spain Phone: +34-91-6318392 Fax: +34-91-6318219

#### **KYOCERA Document Solutions Finland Ov**

Plaza Business Park Pilke, Äyritie 16, Vantaa, Finland

Phone: +358-9-47805200 Fax: +358-9-47805212

# **KYOCERA Document Solutions** Europe B.V. Amsterdam (NL) Zürich Branch

Hohlstrasse 614, 8048 Zürich, Switzerland

Phone: +41-44-9084949 Fax: +41-44-9084950

### **KYOCERA Bilgitas Document Solutions** Turkey A.S.

Altunizade Mah. Prof. Fahrettin Kerim Gökay Cad. No:45

34662 ÜSKÜDAR İSTANBUL TURKEY

Phone: +90-216-339-0020 Fax: +90-216-339-0070

### **KYOCERA Document Solutions Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch, Germany

Phone: +49-2159-9180 Fax: +49-2159-918100

#### **KYOCERA Document Solutions** Austria GmbH

Wienerbergstraße 11, Turm A, 18. OG, 1100 Wien, Austria

Phone: +43-1-863380 Fax: +43-1-86338-400

#### **KYOCERA Document Solutions Nordic AB**

Borgarfjordsgatan 11, 164 40 Kista, Sweden

Phone: +46-8-546-550-00 Fax: +46-8-546-550-10

# **KYOCERA Document Solutions** Norge Nuf

Olaf Helsetsv. 6, 0619 Oslo, Norway

Phone: +47-22-62-73-00 Fax: +47-22-62-72-00

### **KYOCERA Document Solutions** Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup, Denmark

Phone: +45-70223880 Fax: +45-45765850

## **KYOCERA Document Solutions** Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-249 Lisboa,

Portugal

Phone: +351-21-843-6780 Fax: +351-21-849-3312

# **KYOCERA Document Solutions** South Africa (Pty) Ltd.

KYOCERA House, Hertford Office Park, 90 Bekker Road

(Cnr. Allandale), Midrand, South Africa

Phone: +27-11-540-2600 Fax: +27-11-466-3050

### **KYOCERA Document Solutions** Russia LLC

Building 2, 51/4, Schepkina St., 129110, Moscow, Russia

Phone: +7(495)741-0004 Fax: +7(495)741-0018

#### **KYOCERA Document Solutions Middle East**

Dubai Internet City, Bldg. 17,

Office 157 P.O. Box 500817, Dubai, United Arab Emirates

Phone: +971-4-4330412

#### **KYOCERA Document Solutions**

Czech, s.r.o.

Harfa Office Park, Českomoravská 2420/15, Praha 9 Czech Republic

Phone: +420-222-562-246

#### **KYOCERA Document Solutions Inc.**

1-2-28 Tamatsukuri Chuo-ku Osaka 540-8585 Japan

Phone: +81-6-6764-3555

https://www.kyoceradocumentsolutions.com

© 2022 KYOCERA Document Solutions Inc.