



MAG Series OLED Monitor

MAG 341CQP QD-OLED (3DD0)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
G.I	11
Gaming	12
Professional	13
Image	13
Input Source	14
PIP/PBP	15
Navi Key	16
Settings	16
MSI OLED Care	18
Specifications	20
Preset Display Modes	22
Troubleshooting	24
Safety Instructions	25
TÜV Rheinland Certification	27
Regulatory Notices	28

Revision

V1.0, 2023/12

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	MAG 341CQP QD-OLED		
Documentation	Quick Start Guide		
	Stand		
Accessories	Stand Base with Screw(s)		
Accessories	Screw(s) for Wall Mount Bracket(s)		
	Power Cord		
	Ultra High Speed HDMI™ Cable (Optional)		
Cables	USB Upstream Cable (Optional) (for USB Type-B Upstream Port)		




/ Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.


Installing the Monitor Stand

- 1. Leave the monitor in its protective packaging. Align the stand to the monitor groove.
- 2. Push the stand towards the monitor groove until it locks in place.
- 3. Connect the base to the stand and tighten the base screws to secure the base.
- Make sure the stand assembly is properly installed before setting the monitor upright.

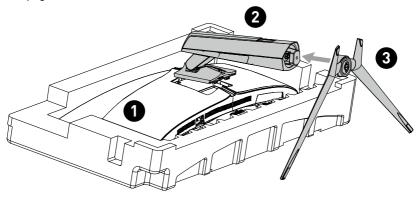

Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any
 mechanical damages to the product including removal of the polarizing film may
 affect the warranty!

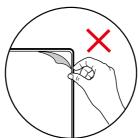


Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




• Avoid touching the display panel when adjusting the monitor.

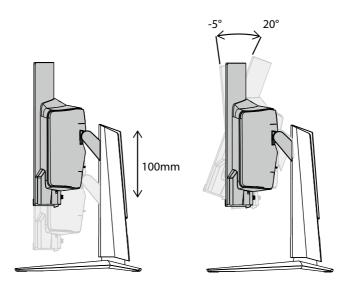




Monitor Overview

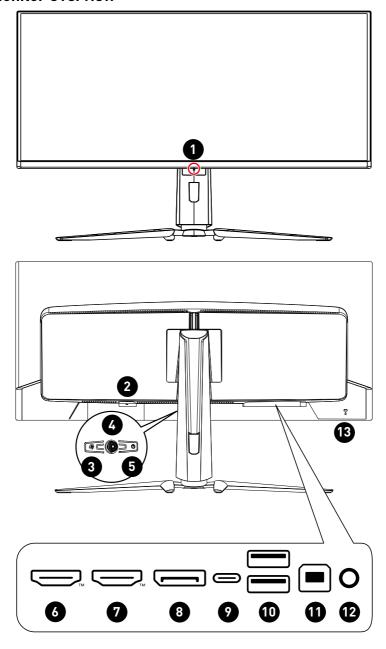

1	Power LED			
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.			
2	Power Jack			
a	Macro Key			
3	To activate OSD Application.			
4	Navi Key			
5	Power Button			
6	HDMITM Connector HIGH-DEFINITION MULTIMEDIA INTERFACE			
	Supports HDMI™ CEC, 3440x1440@175Hz as specified in HDMI™ 2.1.			
7	HDMI TM Connector MICHOEFINITION MULTIMEDIA INTERFACE			
	Supports 3440x1440@175Hz as specified in HDMI™ 2.1.			
8	DisplayPort			
	Supports 3440x1440@175Hz as specified in DisplayPort 1.4.			
9	USB Type-C Port			
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery.			
	1 Important			
	Your USB-C signal source and cable must support DisplayPort Alternate Mode to enable video output to the monitor.			
10	USB 2.0 Type-A Port			
a	USB 2.0 Type-B Upstream Port			
	For USB Upstream Cable.			
	Important To Monitor			
	Check the package for USB Upstream Cable and connect it to the PC and monitor. Once this cable is connected, the USB Type-A Downstream Ports on the monitor will be ready for use.			
12	Headphone Jack			
B	Kensington Lock			

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- **5.** Turn on the monitor. (Figure C)
- **6.** Power on the computer and the monitor will auto detect the signal source.

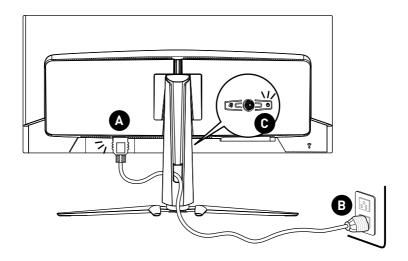

OSD Setup

This chapter provides you with essential information on OSD Setup.




Important

All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

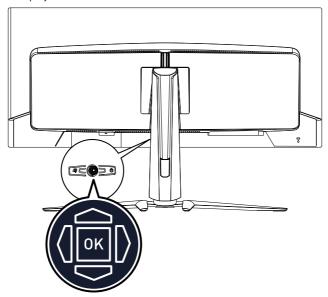

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

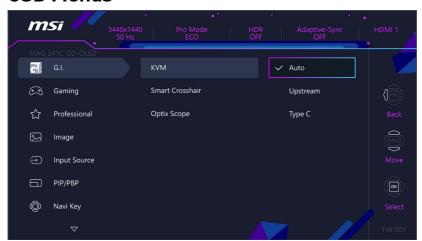



The following settings will be grayed out when HDR signals are received:

- Night Vision
- Low Blue Light
- Brightness
- Contrast

- Color Temperature
- Optix Scope
- PIP/PBP

<u>G.I.</u>

1st Level Menu	2nd/3rd Level Menu		Description	
KVM	Auto Upstream		Auto allows the monitor to automatically switch between USB input sources, such as keyboards, mice or other USB devices.	
	Type C		Users can also designate Upstream port or USB Type-C as the only USB signal source.	
Smart Crosshair	Icon	None [+] -!!::::::::-	Through AI algorithm, this function enhances the visibility of in-game crosshair. Users can select the color and position of the crosshair.	
	Color	White		
		Red		
		Auto		
	Position			
	Reset			
Optix Scope	Scope Size	Small	The center point will zoom in when Optix Scope is enabled, user can adjust the details through	
	Size	Medium	the "Scope Size" and "Scope Ratio" settings.	
		Large	Smart Crosshair and Optix Scope can be enabled at the same time. Activating Optix Scope will affect:	
	Scope Ratio	x1.5		
		x2	Affected Function Function Status	
			» Adaptive-Sync Set to OFF	
	OFF		» PIP/PBP	
	ON		» Screen Size 1:1 Set to Auto	

Gaming

1st Level Menu	2nd/3rd Level Menu		Description	
Game Mode	Premium Color		Use Up or Down Button to select and preview mode effects. Press the OK Button to confirm and applying to the original applying the original applying the original applying the original applyi	
	User			
	FPS		 Press the OK Button to confirm and apply your mode type. 	
	Racing			
	RTS			
	RPG			
Night Vision	OFF		This function optimizes background brightness	
	Normal		and is recommended for FPS games.	
	Strong			
	Strongest			
	A.I.			
Refresh Rate	Location	Left Top	Location is adjustable in OSD Menu. Press the	
		Right Top	OK Button to confirm and apply your Refresh Rate Location.	
		Left Bottom	This monitor follows and works at the Operating	
		Right Bottom	System's preset Screen Refresh Rate.	
		Customize		
	OFF			
	ON			
Alarm Clock	Location	Left Top	After setting the time, press the OK Button to	
		Right Top	activate the timer. • Users have to manually restore their preset	
		Left Bottom	Alarm Clock after any AC power loss and	
		Right Bottom	reconnection.	
		Customize		
	OFF			
	15:00	00:01 ~ 99:59		
	30:00			
	45:00			
	60:00			
Adaptive-Sync	OFF		Adaptive-Sync prevents screen tearing.	
	ON		Activating Adaptive-Sync will affect:	
			Affected Function Function Status	
			» PIP/PBP Set to OFF » Optix Scope	
			» Screen Size 1:1 Set to Auto	
		,		

Professional

1st Level Menu	2nd Level Menu	Description		
Pro Mode	Eco	Use Up or Down Button to select and preview mode effects.		
	User	Press the OK Button to confirm and apply your mode		
	Anti-Blue	type. • The default setting "Eco" mode meets the		
	Movie	requirements of TÜV Rheinland's "Low Blue Light" standard and Eyesafe certification.		
	Office	Activating sRGB, Adobe RGB, Display P3 will affect:		
	sRGB	Affected Function Function Status		
	SKUD	» Color Temperature		
	Adobe RGB	» Low Blue Light Unable to select		
	Display P3	» Contrast		
Low Blue Light	OFF	Low Blue Light protects your eyes against blue ligh		
	ON	When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.		
		When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.		
		This monitor is a Low Blue Light backlight monitor, it would decrease the blue light emitted without adjusting OSD function.		
Image Enhancement	OFF	Image Enhancement enhances image edges to improve		
	Weak	their acutance.		
	Medium			
	Strong			
	Strongest			

Image

1st Level Menu	2nd/3rd Level Menu		Description
Brightness	0-100		Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100		Properly adjust Contrast to relax your eyes.
Sharpness	0-5		Sharpness improves clarity and details of images.
Color Temperature	Cool		Use Up or Down Button to select and preview
	Normal		mode effects.
	Warm		Press the OK Button to confirm and apply your mode type.
	Customization R (0-100)		Users can adjust Color Temperature in
		G (0-100)	Customization mode.
		B (0-100)	

1st Level Menu	2nd/3rd Level Menu	Description
Screen Size	Auto	Users can adjust Screen Size in any mode, any
	4:3	resolution and any screen refresh rate. • Activating Screen Size 1:1 will affect:
	16:9	Affected Function Function Status
	21:9	» Adaptive-Sync
	1:1	» PIP/PBP Set to 0FF
		» Optix Scope
DisplayHDR	True Black 400	Users can set the DisplayHDR to True Black
	Peak 1000 nits	400 or Peak 1000 nits.

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™ 1		Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Type C		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at
	ON	below status: White "Auto Scan" is set to "OFF" with the monitor at power saving mode; White "No Signal" message box is shown on the monitor.

PIP/PBP

1st Level Menu	2nd/3rd Level Menu		Description	
OFF		PIP (Picture in Picture) allows users to		
PIP	Source	HDMI™ 1	simultaneously display multiple video some screen. One program is displayed	
		HDMI™ 2	screen at the same time a	is one or more other
		DP	 programs are displayed in PBP (Picture by Picture) is 	
		Type C	displays two input sources	
	PIP Size	Small	screen. • Display Switch allows use	rs to switch hotwoon
		Medium	primary and secondary in	
		Large	If there is only one signal and Audio Switch will be g	
	Location	Left Top	Users can adjust the ratio	•
		Right Top	switching mode 1/2/Cust	
		Left Bottom	Activating PIP/PBP will af	
		Right	» Adaptive-Sync	Function Status
		» Ontiv Scope	Set to OFF	
		Customize	» DisplayHDR	Unable to select
	Display Swit		» HDMI™ 2.1	Unable to select
	Audio Switch	1	» HDMI™ CEC	Set to OFF
PBP	Mode 1		» PIP: Screen Size 1:1 » PBP: Screen Size Set to Auto	
	Mode 2			Set to Auto
	Customize	1	4:3/16:9/21:9/1:1	
	Source 1	HDMI™ 1		
		HDMI™ 2		
		DP		
		Type C		
	Source 2	HDMI™ 1		
		HDMI™ 2		
		DP		
		Type C		
	Display Switch Audio Switch]	

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	0FF	All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left	Game Mode	
Right	Smart Crosshair	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	
	Optix Scope	
	KVM	

Settings

1st Level Menu	2nd Level Menu	Description			
Language	繁體中文	Users have to press the OK Button to confirm and			
	English	apply the Language setting.Language is an independent setting. Users' own			
	Français	language setting will override the factory default.			
	Deutsch	When users set Reset to Yes, Language will not be changed.			
	Italiano				
	Español				
	한국어				
	日本語				
	Русский				
	Português				
	简体中文				
	Bahasa Indonesia				
	Türkçe				
	(More languages coming soon)				
Transparency	0~5	Users can adjust Transparency in any mode.			
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.			
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.			
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.			

1st Level Menu	2nd Level Menu	Description
Info. On Screen	0FF	The information of the monitor status will be shown
	ON	on the right side of the screen.
HDMI™ 2.1	Console	To reach maximum resolution of 3440x1440@175Hz,
	PC	users have to set HDMI™ 2.1 to PC.
HDMI™ CEC	OFF	HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™,
	ON	Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.
		If HDMI™ CEC is set to ON:
		The monitor will automatically power on when the CEC device is turned on.
		The CEC device will enter power saving mode when the monitor is turned off.
		 When Sony PlayStation®, Nintendo® Switch™, or Xbox Series XIS console is connected, Game Mode and Pro Mode will be automatically set to default Eco mode and can be adjusted to users' preferred modes later.
Type C PD Charge	0FF	Type C PD Charge enables users to charge their
	ON	devices through a USB Type-C connector, which can deliver up to 15W (5V/3A).
Reset	YES	Users can Reset and restore settings to original
	NO NO	OSD Default in any mode.

MSI OLED Care

1st Level Menu	2nd/3rd Leve	l Menu	Description				
Pixel Shift	Slow		•			ls of your screen at	
	Normal	Normal		regular intervals to reduce the possibility of screen burn-in or image retention.			
	Fast		Serven burn in or image retention.				
Panel Protect				To maintain panel image quality, panel protect function will automatically activate when monitor using over 4 hours.			
			•	This pro to comp		take several minutes	
			•	The pow process		link orange color until	
			•		process executing er cord from mon	, please do not unplug itor.	
			•		process executing cancel this functi	, press power button on.	
Static Screen	OFF		•	If Static	Screen Detection	is set to ON:	
Detection	ON		When detecting static visuals over periods of time, the monitor redu- brightness to prevent screen burn		nitor reduces		
			Once detecting moving visuals, the monitor restores its previous brightness setting.				
	Starting in	50 Sec	•	Starting in detects the time a static image			
		100 Sec	remains on the screen.				
	Time	120 Sec	Time required specifies the time for brightness				
	required	240 Sec		reduction after detecting a static image for 50/100 seconds.			
			The brightness reduction level depends setting of Reducing Level.				
	Reducing Level	1-7	Users can select a level for brightness reduction.				
			Reducing effect depends on Brightness/ DisplayHDR setting.				
Multi Logo Detection	OFF		This function helps prevent image sticking phenomenon. When set to ON, brightness				
	ON	ON		reduction of multi logo areas will ki are detected.		eas will kick in it logos	
						k when the monitor is efresh Rate) content.	
				VRR*	VRR Content**	Multi Logo Detection	
	Reducing 1-2 Level			ON	YES	Set to OFF & Unable to select	
				ON OFF	N0 N0	Adjustable	
				reductio Reducin	an select a level f in. g effect depends HDR setting.	-	

1st Level Menu	2nd/3rd Level	. Menu	De	Description			
Taskbar Detection	OFF ON		This function helps prevent image sticking phenomenon. When set to ON, brightness reduction of taskbar areas will kick in if taskbars are detected. This function will not work when the monitor is receiving VRR (Variable Refresh Rate) content.				
				VRR*	VRR Content**	Taskbar Detection	
				ON	YES	Set to OFF & Unable to select	
				ON	N0	Adjustable	
				0FF	N0	Aujustable	
	Reducing 1-3 Level		Users can select a level for brightness reduction. Reducing effect depends on Brightness/DisplayHDR setting.			, and the second	
Boundary Detection	OFF ON		This function helps prevent image sticking phenomenon. When set to ON, brightness reduction of boundary areas will kick in if boundaries, such as letters, pillars and vertical lines, are detected.				
						ot work when the monitor is iable Refresh Rate) content.	
				VRR*	VRR Content**	Boundary Detection	
				ON	YES	Set to OFF & Unable to select	
			1 1	ON	N0	Adjustable	
				0FF	N0	Aujustable	
	Reducing Level	1-3	Users can select a level for brightness reduction. Reducing effect depends on Brightness/DisplayHDR setting.				
OLED Panel Info.	,	,	This field shows the information of MSI OLED Care.				

^{*} HDMI™ VRR (Variable Refresh Rate) synchronizes with Adaptive-Sync (ON/ OFF). For VRR ON/OFF status, please check Adaptive-Sync.

^{**} When VRR is set to ON, the monitor scaler will detect whether the graphics card is sending VRR content.

Specifications

Monitor	MAG 341CQP QD-OLED			
Size	34.18 inch			
Curvature	1800R			
Panel Type	QD-OLED			
Resolution	3440 x 1440 (UWQHD)			
Aspect Ratio	21:9			
Brightness	SDR: 250 nits (typ.)			
Contrast Ratio	1500000:1			
Refresh Rate	175Hz			
Response Time	0.03ms (GTG)			
	0.1ms (Tr+Tf)			
1/0	HDMI™ Connector x 2			
	DisplayPort x 1			
	USB Type-C Port x 1			
	USB 2.0 Type-A Port x2			
	• USB 2.0 Type-B Upstream Port x1			
	Headphone Jack x1			
View Angles	178°(H) , 178°(V)			
DCI-P3*/ sRGB	99.3%/ 139.1%			
Surface Treatment	Anti-Reflection			
Display Colors	1.07B (10 bits)			
Monitor Power Options	100-240~, 50/60Hz 2.7A			
	Power On < 150W			
Power Consumption (Typical)	Standby < 0.5W			
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Power Off < 0.3W			
Adjustment (Height)	0 ~ 100mm			
Adjustment (Tilt)	-5° ~ 20°			
Adjustment (Swivel)	-30° ~ 30°			
Kensington Lock	Yes			

Monitor		MAG 341CQP QD-OLED			
VESA Mounting		• Plate Type: 100 x 100 mm			
		• Screw Type: M4 x 10 mm			
		Thread Diameter: 4 mm			
		• Thread Pitch: 0.7 mm			
		Thread Length: 10 mm			
Dimension (W	x D x H)	812 x 318 x 427 mm			
Weight	Net	8.8 kg			
Weight	Gross	12.45 kg			
Environment	Operating	• Temperature: 0°C to 40°C			
		• Humidity: 20% to 90%, non-condensing			
		• Altitude: 0 ~ 5000m			
Storage		• Temperature: -20°C to 60°C			
		• Humidity: 10% to 90%, non-condensing			

^{*} Based on CIE1976 test standards.

Preset Display Modes



All information is subject to change without prior notice.

Claudaud	Decelution		Standard Defa	ult Mode HDMI ^T	[™] 2.1 - PC
Standard Resolution			HDMI™	DP	USB-C
QHD	2560x1440	@60Hz	٧	٧	V
		@120Hz	٧	٧	V
WQHD	3440x1440	@50Hz	٧		
		@60Hz	٧	٧	V
		@100Hz	٧	٧	V
		@144Hz	V	V	V
		@175Hz	٧	٧	V
Video	720P		٧	٧	V
Timing Resolution	1080P	@60Hz	٧	٧	V
resolution		@120Hz	٧	٧	V
	2160P	@30Hz	٧		
		@60Hz	٧		
		@120Hz	V		
	2560x1080P	@60Hz	٧	V	V
		@120Hz	٧	٧	٧

Chandand	Resolution		HDMI™ 2.1 - Console			
Standard Resolution			HDMI™	DP	USB-C	
QHD	2560x1440	@60Hz	٧			
		@120Hz	٧			
WQHD	3440x1440	@50Hz	٧			
		@100Hz	V			
Video	720P		٧			
Timing Resolution	1080P	@60Hz	٧			
resolution		@120Hz	٧			
	2160P	@30Hz	٧			
		@60Hz	V			
		@120Hz	V			
	2560x1080P	@60Hz	٧			
		@120Hz	V			

Classification 1	Standard Resolution		PIP Mode - Without HDR			
Standard			HDMI™	DP	USB-C	
Full HD	1920x1080	@60Hz	٧	٧	V	
QHD	2560x1440	@60Hz	V	V	V	
WQHD	WQHD 3440x1440	@50Hz	V			
		@60Hz	V	V	٧	
Video	720P		٧	٧	V	
Timing Resolution	1080P	@60Hz	٧	٧	V	
Resolution	2160P	@30Hz	V	V		
		@50Hz	٧	٧		
		@60Hz	٧	٧		

Standard	Resolution		PBP Mode 1 - Main/Sub without HDR			
			HDMI™	DP	USB-C	
Video	720P		٧	٧	V	
Timing Resolution	1080P	@60Hz	V	V	V	
Used for	2560x1440	@60Hz	٧	٧	V	
PBP Full Screen	880x1440	@60Hz	V	V	V	

Ci an iland	Resolution		PBP Mode 2/Customize - without HDR			
Standard			HDMI™	DP	USB-C	
Video	720P		٧	٧	V	
Timing Resolution	1080P	@60Hz	V	V	V	
Used for	1720x1440	@60Hz	٧	٧	V	
PBP Full Screen	2560x1440	@60Hz			V	

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

 TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled.
 (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility [2014/30/EU], Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may



cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828

www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}^2 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- · Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright \odot Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator. Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.