

Questo manuale d'istruzione è fornito da trovaprezzi.it. Scopri tutte le offerte per D-Link DGS-1210 DGS-1210-16 o cerca il tuo prodotto tra le migliori offerte di Switch



DGS-1210-08P/16/24/24P/48 MANUAL SMART MANAGED SWITCH

Ver. 7.10



Table of Contents

Table of Contents	i
About This Guide	1
Terms/Usage	1
Copyright and Trademarks	1
1 Product Introduction	2
DGS-1210-08P	3
Front Panel	3
Rear Panel	4
DGS-1210-16	4
Front Panel	4
Rear Panel	5
DGS-1210-24	5
Front Panel	5
Rear Panel	6
DGS-1210-24P	6
Front Panel	6
Rear Panel	7
DGS-1210-48	7
Front Panel	7
Rear Panel	8
LED Indicators	8
2 Hardware Installation	10
Safety Cautions	10
Step 1: Unpacking	11
Step 2: Switch Installation	11
Desktop or Shelf Installation	11
Rack Installation	11
Step 3: Plugging in the AC Power Cord with Power Cord Clip	
Power Failure	
Grounding the Switch	
3 Getting Started	
Management Options	
Using Web-based Management	
Supported Web Browsers	
Connecting to the Switch	
Login Web-based Management	
Smart Wizard	
Web-based Management	
D-Link Network Assistant	
4 Web-based Switch Configuration	
Smart Wizard Configuration	
Step 1 – Web Mode	
Step 2 – IP Information	
Step 3 – Password	
Step 4 – SNMP (Only for Standard Mode)	
Web-based Management	
Tool Bar > Save Menu	23

	Save Configuration	. 23
	Save Log	. 23
Т	ool Bar > Tools Menu	. 23
	Reset	. 23
	Reset System	. 23
	Reboot Device	. 24
	Configuration Backup and Restore	. 24
	Firmware Backup and Upgrade	. 25
	Flash Information	. 25
Т	ool Bar > Wizard	. 25
Т	ool Bar > Online Help	. 25
Т	ool Bar > Surveillance Mode	. 26
F	unction Tree	. 27
	Device Information	. 27
	System > System Settings	. 28
	System > Password	. 29
	System > Port Settings	. 30
	System > Port Description	. 30
	System > DHCP Auto Configuration	. 31
	System > DHCP Relay > DHCP Relay Global Settings	. 31
	System > DHCP Relay > DHCP Relay Interface Settings	
	System > DHCP Local Relay Settings	. 33
	System > DHCPv6 Relay Settings	
	System > System Log Configuration > System Log Settings	
	System > System Log Configuration > SysLog Host	
	System > Time Profile	
	System > Power Saving	. 36
	System > IEEE802.3az EEE Settings	
	System > D-Link Discover Protocol Settings	
	System > Firmware Information	
	System > Configuration Information	
	VLAN > 802.1Q VLAN	
	VLAN > 802.1Q VLAN PVID	. 40
	VLAN > Voice VLAN > Voice VLAN Global Settings	
	VLAN > Voice VLAN > Voice VLAN Port Settings	
	VLAN > Voice VLAN > Voice Device List	
	VLAN > Auto Surveillance VLAN > Auto Surveillance Properties	. 42
	VLAN > Auto Surveillance VLAN > MAC Settings and Surveillance Device	
	VLAN > Auto Surveillance VLAN > ONVIF IPC Information	
	VLAN > Auto Surveillance VLAN > ONVIF NVR Information	. 44
	L2 Functions > Jumbo Frame	. 45
	L2 Functions > Port Mirroring	. 45
	L2 Functions > Loopback Detection	
	L2 Functions > MAC Address Table > Static MAC	
	L2 Functions > MAC Address Table > Dynamic Forwarding Table	
	L2 Functions > Spanning Tree > STP Global Settings	
	L2 Functions > Spanning Tree > STP Port Settings	
	L2 Functions > Link Aggregation > Port Trunking	
	L2 Functions > Link Aggregation > LACP Port Settings	

L2 Functions > Multicast > IGMP Snooping	
L2 Functions > Multicast > MLD Snooping	. 53
L2 Functions > Multicast > Multicast Forwarding	. 55
L2 Functions > Multicast > Multicast Filtering Mode	
L2 Functions > SNTP > Time Settings	. 56
L2 Functions > SNTP > TimeZone Settings	. 57
L2 Functions > LLDP > LLDP Global Settings	. 57
L2 Functions > LLDP > LLDP-MED Settings	. 58
L2 Functions > LLDP > LLDP Port Settings	. 59
L2 Functions > LLDP > 802.1 Extension TLV	. 59
L2 Functions > LLDP > 802.3 Extension TLV	. 60
L2 Functions > LLDP > LLDP Management Address Settings	. 61
L2 Functions > LLDP > LLDP Management Address Table	. 61
L2 Functions > LLDP > LLDP Local Port Table	. 62
L2 Functions > LLDP > LLDP Remote Port Table	. 63
L2 Functions > LLDP > LLDP Statistics	. 66
L3 Functions > IP Interface	. 67
L3 Functions > IPv6 Neighbor Settings	. 68
L3 Functions > IPv4 Static Route	. 69
L3 Functions > IPv4 Routing Table Finder	. 70
L3 Functions > IPv6 Static Route	. 70
L3 Functions > IPv6 Routing Table Finder	. 71
L3 Functions > ARP > ARP Table Global Settings	. 71
L3 Functions > ARP > Static ARP Settings	. 72
QoS > Bandwidth Control	. 73
QoS > 802.1p/DSCP/ToS	. 73
Security > Trusted Host	. 74
Security > Port Security	. 75
Security > Traffic Segmentation	. 75
Security > Safeguard Engine	. 76
Security > Storm Control	. 76
Security > ARP Spoofing Prevention	. 77
Security > DHCP Server Screening	. 78
Security > SSL/TLS	. 78
Security > DoS Prevention Settings	. 80
Security > SSH > SSH Settings	. 81
Security > SSH > SSH Authmode and Algorithm Settings	. 81
Security > SSH > SSH User Authentication Lists	. 82
Security > Smart Binding > Smart Binding Settings	. 83
Security > Smart Binding > Smart Binding	. 84
Security > Smart Binding > White List	. 84
Security > Smart Binding > Black List	. 85
AAA > RADIUS Server	. 85
AAA > 802.1X > 802.1X Global Settings	. 86
AAA > 802.1X > 802.1X Port Settings	. 86
AAA > 802.1X > 802.1X User	. 88
ACL > ACL Wizard	. 88
ACL > ACL Access List	102
ACL > ACL Access Group	103

ACL > ACL Hardware Resource Status	104
PoE > PoE Global Settings (only for DGS-1210-08P/24P)	104
PoE > PoE Port Settings (only for DGS-1210-08P/24P)	105
SNMP > SNMP > SNMP Global Settings	107
SNMP > SNMP > SNMP User	
SNMP > SNMP > SNMP Group Table	108
SNMP > SNMP > SNMP View	109
SNMP > SNMP > SNMP Community	109
SNMP > SNMP > SNMP Host	
SNMP > SNMP > SNMP Engine ID	110
SNMP > RMON > RMON Global Settings	110
SNMP > RMON > RMON Statistics	111
SNMP > RMON > RMON History	111
SNMP > RMON > RMON Alarm	111
SNMP > RMON > RMON Event	112
Monitoring > Port Statistics	
Monitoring > Cable Diagnostics	113
Monitoring > System Log	
5Surveillance Mode Configuration	
Web User Interface	
Surveillance Overview	
Surveillance Topology	
Device Information	
Port Information	
IP-Camera Information	
NVR Information	
PoE Information	
PoE Scheduling	
Time > Clock Settings	
Time > SNTP Settings	
Surveillance Settings	
Surveillance Log	
Health Diagnostic	
Tool Bar > Wizard	
Tool Bar > Tools Menu	
Reset System	
Reboot Device	
Configuration Backup & Restore	
Firmware Backup and Upgrade	
Firmware Information	
Flash Information	
Tool Bar > Save	
Tool Bar > Help	
Tool Bar > Online Help	
Tool Bar > Standard Mode	
6 Command Line Interface	
To connect a switch via TELNET:	
Logging on to the Command Line Interface:	
CLI Commands:	131

?	
download	
upload	
config ipif	
config ipif	
logout	
ping	
ping6	
reboot	
reset config	
show boot_file	
show firmware information	
show ipif	
show switch	
show route	
config account admin password	
save	
debug info	
Appendix A - Ethernet Technology	
Gigabit Ethernet Technology	
Fast Ethernet Technology	
Switching Technology	
Appendix B - Technical Specifications	
Hardware Specifications	
Features	
L2 Features	
L3 Features	
VLAN	
QoS (Quality of Service)	
Security	
OAM	
Management	
D-Link Green Technology	
Appendix C – Rack mount Instructions	

About This Guide

This guide provides instructions to install the D-Link Smart Managed Switch DGS-1210 series, and to configure Web-based Management step-by-step.

> Note: The model you have purchased may appear slightly different from the illustrations shown in the document. Refer to the Product Instruction and Technical Specification sections for detailed information about your switch, its components, network connections, and technical specifications.

This guide is mainly divided into four parts:


- 1. Hardware Installation: Step-by-step hardware installation procedures.
- Getting Started: A startup guide for basic switch installation and settings. 2.
- 3. Web Configuration: Information about the function descriptions and configuration settings via Web.
- 4. Command Line Interface: Information about the function descriptions and configuration settings via Telnet.

Terms/Usage

In this guide, the term "Switch" (first letter capitalized) refers to the Smart Switch, and "switch" (first letter lower case) refers to other Ethernet switches. Some technologies refer to terms "switch", "bridge" and "switching hubs" interchangeably, and both are commonly accepted for Ethernet switches.



A NOTE indicates important information that helps a better use of the device.

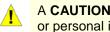

A CAUTION indicates potential property damage or personal injury.

Copyright and Trademarks

Information in this document is subjected to change without notice.

© 2017 D-Link Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

Product Introduction

Thank you and congratulations on your purchase of D-Link Smart Managed Switch Products.

D-Link's next generation Smart Managed switch series blends plug-and-play simplicity with exceptional value and reliability for small and medium-sized business (SMB) networking. All models are housed in a new style rack-mount metal case with easy-to-view front panel diagnostic LEDs, and provides advanced features including network security, traffic segmentation, QoS and versatile management.

Flexible Port Configurations. The DGS-1210 series is the new generation of Smart Managed Switch series. It provides 8, 16, 24 or 48 10/100/1000Mbps Non-PoE or PoE ports plus 4 GE/SFP ports. All switches of the DGS-1210 series feature embedded 4 gigabit SFP uplinks, which provides flexible network topology choices such as ring, tree, or mixed.

D-Link Green Technology. D-Link Green devices are about providing eco-friendly alternatives without compromising performance. D-Link Green Technology includes a number of innovations to reduce energy consumption on DGS-1210 series such as shutting down a port, or turning off some LED indicators, or adjusting the power usage according to the Ethernet cable connected to it.

Extensive Layer 2 Features. Implemented as complete L2 devices, these switches include functions such as IGMP snooping, port mirroring, Spanning Tree, 802.3ad LACP and Loopback Detection to enhance performance and network resiliency.

Traffic Segmentation, QoS and Auto Surveillance VLAN. The switches support 802.1Q VLAN standard tagging to enhance network security and performance. The switches also support 802.1p priority queues, enabling users to run bandwidth-sensitive applications such as streaming multimedia by prioritizing that traffic in network. These functions allow switches to work seamlessly with VLAN and 802.1p traffic in the network. Auto Surveillance VLAN will automatically place the vedio traffic from pre-defined IP surveillance devices to an assigned VLAN with higher priority, so it can be separated from normal data traffic. Asymmetric VLAN is implemented in these switches for a more efficient use of shared resources, such as server or gateway devices.

Network Security. D-Link's innovative Safeguard Engine function protects the switches against traffic flooding caused by virus attacks. Additional features like 802.1X port-based authentication provide access control of the network with external RADIUS servers. ACL is a powerful tool to screen unwanted IP or MAC traffic. Storm Control can help to keep the network from being overwhelmed by abnormal traffic. Port Security is another simple but useful authentication method to maintain the network device integrity.

Versatile Management. The new generation of D-Link Smart Managed Switches provides growing businesses simple and easy management of their network. The multi-language Web-Based management interface allows administrators to remotely control their network down to the port level. The intuitive easily allows customers to discover multiple D-Link Smart Managed Switches in the same L2 network segment. With this utility, users do not need to change the IP address of PC and provides easy initial setting of smart switches. The switches within the same L2 network segment connected to user's local PC are displayed on the screen for instant access. It allows extensive switch configuration setting, and basic configuration of discovered devices such as a password change or firmware upgrade.

Users can also access the Switch via Telnet. Basic tasks such as changing the Switch IP address, resetting the settings to factory defaults, setting the administrator password, rebooting the Switch, or upgrading the Switch firmware can be performed using the Command Line Interface (CLI)

In addition, users can utilize the SNMP MIB (*Management Information Base*) to poll the switches for information about the status, or send out traps of abnormal events. SNMP support allows users to integrate

the switches with other third-party devices for management in an SNMP-enabled environment. D-Link Smart Managed Switches provides easy-to-use graphic interface and facilitates the operation efficiency.

DGS-1210-08P

8-Port 10/100/1000Mbps plus 2 SFP Ports (100/1000Mbps) Smart Managed PoE Switch.

Front Panel

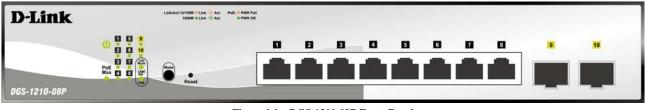


Figure 1.1 – DGS-1210-08P Front Panel

The front panel of the DGS-1210-08P switch consists out of the following:

- **Power LED**⁽¹⁾: The Power LED lights up when the Switch is connected to a power source.
- **PoE Max:** The PoE Max LED lights up with solid red when the Switch reaches the maximum power budget defined by the administrator via PoE System Settings page of Web GUI or the default power budget of 65 Watts.
- **Port Link/Act/Speed LED (1-8):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When a port has an amber light, this indicates that the port is running on 10M or 100M. When it has a green light it is running on 1000M.
- **Port Link/Act/Speed LED (9F, 10F):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When the port LED glows in amber, it indicates the port is running on 100M. When the port LED glows in green, it is running on 1000Mbps.
- **LED Mode:** To select the mode of port LED, the Link/Act and PoE LED under the mode button will solid green to indicate which mode is selected.
- **Mode:** By pressing the Mode button, the Port LED will switch between Link/Act and PoE modes.
- **Reset:** Press the Reset button for 1~5 seconds to reboot the device. Press the Reset button for 6~10 seconds to reset the Switch back to the default settings and led will be solid light with amber for 2 seconds. Or press the Reset button over 11 seconds to enter the loader mode after device reboot and the led will be solid light with green for 2 seconds. If the device cannot reboot the Switch, the device will enter the loader mode automatically.



∕₽∖

CAUTION: The MiniGBIC ports should use UL listed Optical Transceiver product, Rated Laser Class I. 3.3Vdc.

CAUTION: The port 1 ~ port 8 are PoE ports. When user press the **Mode** button to PoE mode, only port 1 ~ port 8 will light up.



CAUTION: This equipment can be connected only to PoE networks without routing to the outside plant.

NOTE: Once user enter in loader mode, you can use DNA tool (standalone version 2.0.2.4 only (No support by Chrome DNA3.x.x.x)) to download the image or call D-Link Technical Support for further help.

Rear Panel

ß	SWITCH GND	
		54V1.574A © ⊕ ⊕ ⊕ ⊕

Figure 1.2 – DGS-1210-08P Rear Panel

Power: Connect the supplied DC external power 54V/1.574A cable to this port.

DGS-1210-16

16-Port 10/100/1000Mbps plus 4 Combo GE/SFP Slot Smart Managed Switch.

D-Link	Link Act 10	CIM © Link 🖶 Ac	i 🕯 i		â		1	6	1 17	9 20	17	18	19	20
					d	T								
0	-											_	-	_

Figure 1.3 – DGS-1210-16 Front Panel

The front panel of the **DGS-1210-16** switch consists out of the following:


- **Power LED**⁽¹⁾: The Power LED lights up when the Switch is connected to a power source.
- **Port Link/Act/Speed LED (1-16):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When a port has an amber light, this indicates that the port is running on 10M or 100M. When it has a green light it is running on 1000M.
- Port Link/Act/Speed LED (17F, 18F, 19F, 20F, 17T, 18T, 19T, 20T): The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When the port LED glows in amber, it indicates the port is running on 100M. When the port LED glows in green, it is running on 100Mbps.
- **Reset:** Press the Reset button for 1~5 seconds to reboot the device. Press the Reset button for 6~10 seconds to reset the Switch back to the default settings and led will be solid light with amber for 2 seconds. Or press the Reset button over 11 seconds to enter the loader mode after device reboot and the led will be solid light with green for 2 seconds. If the device cannot reboot the Switch, the device will enter the loader mode automatically.

5

NOTE: On the DGS-1210-16, the MiniGBIC ports are shared with normal RJ-45 ports 17T, 18T, 19T and 20T. When the MiniGBIC port is used, the RJ-45 port cannot be used.



CAUTION: The MiniGBIC ports should use UL listed Optical Transceiver product, Rated Laser Class I. 3.3Vdc.

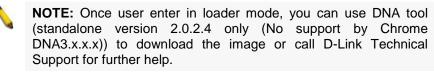

Rear Panel

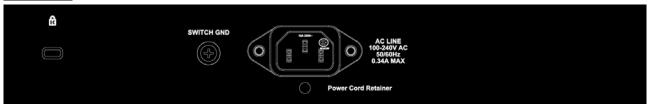


Figure 1.4 – DGS-1210-16 Rear Panel

Power: Connect the supplied AC power cable to this port.

DGS-1210-24

24-Port 10/100/1000Mbps plus 4 Combo GE/SFP Slot Smart Managed Switch.

Front Panel

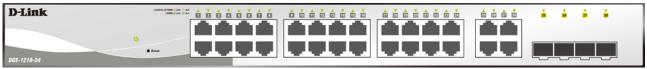


Figure 1.5 – DGS-1210-24 Front Panel

The front panel of the DGS-1210-24 switch consists out of the following:

- **Power LED**⁽¹⁾: The Power LED lights up when the Switch is connected to a power source.
- **Port Link/Act/Speed LED (1-24):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When a port has an amber light, this indicates that the port is running on 10M or 100M. When it has a green light it is running on 1000M.
- Port Link/Act/Speed LED (25F, 26F, 27F, 28F, 25T, 26T, 27T, 28T): The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When the port LED glows in amber, it indicates the port is running on 100M. When the port LED glows in green, it is running on 100Mbps.
- **Reset:** Press the Reset button for 1~5 seconds to reboot the device. Press the Reset button for 6~10 seconds to reset the Switch back to the default settings and led will be solid light with amber for 2 seconds. Or press the Reset button over 11 seconds to enter the loader mode after device reboot and the led will be solid light with green for 2 seconds. If the device cannot reboot the Switch, the device will enter the loader mode automatically.
 - **NOTE:** On the DGS-1210-24, the MiniGBIC ports are shared with normal RJ-45 ports 25T, 26T, 27T and 28T. When the MiniGBIC port is used, the RJ-45 port cannot be used.



CAUTION: The MiniGBIC ports should use UL listed Optical Transceiver product, Rated Laser Class I. 3.3Vdc.



NOTE: Once user enter in loader mode, you can use DNA tool (standalone version 2.0.2.4 only (No support by Chrome DNA3.x.x.x)) to download the image or call D-Link Technical Support for further help.

Rear Panel



Figure 1.6 – DGS-1210-24 Rear Panel

Power: Connect the supplied AC power cable to this port.

DGS-1210-24P

24-Port 10/100/1000Mbps plus 4 Combo GE/SFP Smart Managed PoE Switch.

Front Panel

D-Link			28 28 27 28
DGS-1210-24P			

Figure 1.7 – DGS-1210-24P Front Panel

The front panel of the **DGS-1210-24P** switch consists out of the following:

- **Power LED**⁽¹⁾: The Power LED lights up when the Switch is connected to a power source.
- **Fan Error:** The FAN LED shows the status of the fans, light off indicates all fans work fine and the red light indicates that one or multiple fans are working abnormally.
- **PoE Max:** The PoE Max LED lights up with solid red when the Switch reaches the maximum power budget defined by the administrator via PoE System Settings page of Web GUI or the default power budget of 193 Watts.
- **LED Mode:** To select the mode of port LED, the Link/Act and PoE LED under the mode button will solid green to indicate which mode is selected.
- **Port Link/Act/Speed LED (1-24):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When a port has an amber light, this indicates that the port is running on 10M or 100M. When it has a green light it is running on 1000M.
- Port Link/Act/Speed LED (25F, 26F, 27F, 28F, 25T, 26T, 27T, 28T): The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When the port LED glows in amber, it indicates the port is running on 100M. When the port LED glows in green, it is running on 100Mbps.
- **Reset:** Press the Reset button for 1~5 seconds to reboot the device. Press the Reset button for 6~10 seconds to reset the Switch back to the default settings and led will be solid light with amber for 2 seconds. Or press the Reset button over 11 seconds to enter the loader mode after device reboot and the led will be solid light with green for 2 seconds. If the device cannot reboot the Switch, the device will enter the loader mode automatically.
- **LED Mode:** By pressing the Mode button, the Port LED will switch between Link/Act and PoE modes.

NOTE: On the DGS-1210-24P, the MiniGBIC ports are shared with normal RJ-45 ports 25T, 26T, 27T and 28T. When the MiniGBIC port is used, the RJ-45 port cannot be used.



CAUTION: The MiniGBIC ports should use UL listed Optical Transceiver product, Rated Laser Class I. 3.3Vdc.



CAUTION: The port 1 ~ port 24 are PoE ports. When user press the **Mode** button to PoE mode, only port 1 ~ port 24 will light up.



CAUTION: This equipment can be connected only to PoE networks without routing to the outside plant.

NOTE: Once user enter in loader mode, you can use DNA tool (standalone version 2.0.2.4 only (No support by Chrome DNA3.x.x.x)) to download the image or call D-Link Technical Support for further help.

Rear Panel



Figure 1.8 – DGS-1210-24P Rear Panel

Power: Connect the supplied AC power cable to this port.

DGS-1210-48

48-Port 10/100/1000Mbps plus 4 Combo GE/SFP Slot Smart Managed Switch.

Front Panel



Figure 1.9 - DGS-1210-48 Front Panel

The front panel of the DGS-1210-48 switch consists out of the following:

- **Power LED**⁽¹⁾: The Power LED lights up when the Switch is connected to a power source.
- **Port Link/Act/Speed LED (1-48):** The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When a port has an amber light, this indicates that the port is running on 10M or 100M. When it has a green light it is running on 1000M.
- Port Link/Act/Speed LED (49F, 50F, 51F, 52F, 49T, 50T, 51T, 52T): The Link/Act/Speed LED flashes, which indicates a network link through the corresponding port. Blinking indicates that the Switch is either sending or receiving data to the port. When the port LED glows in amber, it indicates the port is running on 100M. When the port LED glows in green, it is running on 100Mbps.
- **Reset:** Press the Reset button for 1~5 seconds to reboot the device. Press the Reset button for 6~10 seconds to reset the Switch back to the default settings and led will be solid light with amber for 2 seconds. Or press the Reset button over 11 seconds to enter the loader mode after device reboot and the led will be solid light with green for 2 seconds. If the device cannot reboot the Switch, the device will enter the loader mode automatically.



NOTE: On the DGS-1210-48, the MiniGBIC ports are shared with normal RJ-45 ports 49T, 50T, 51T and 52T. When the MiniGBIC port is used, the RJ-45 port cannot be used.



CAUTION: The MiniGBIC ports should use UL listed Optical Transceiver product, Rated Laser Class I. 3.3Vdc.



NOTE: Once user enter in loader mode, you can use DNA tool (standalone version 2.0.2.4 only (No support by Chrome DNA3.x.x.x)) to download the image or call D-Link Technical Support for further help.

Rear Panel



Figure 1.10 – DGS-1210-48 Rear Panel

Power: Connect the supplied AC power cable to this port.

LED Indicators

The Switch supports LED indicators for Power, Fan, and Link/Act for each port. The following shows the LED indicators for the DGS-1210 series Smart Managed Switch along with an explanation of each indicator.

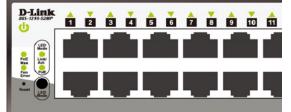


Figure 1.11 -LED Indicators on DGS-1210 series

Location	LED Indicative	Color	Status	Description
	Power	Green	Solid Light	Power on.
	rowei	Green	Light off	Power off.
	Fan Error (For DGS-1210-24P)	Red	Solid light	The fan has runtime failure and is brought offline.
Per Device	PoE Max. (For DGS-1210-08P/24P)	Amber	Solid light	The PoE Max LED lights up when the total PoE output of Switch reached or exceeded 65 Watts for DGS-1210-08P and 193 Watts for DGS-1210-24P. In the meantime, no additional PoE device can be supported.
			Blinking Amber	Total PoE output of Switch reached guard band mode. (Max. PoE budget < 7 Watts)
			Light off	When the system power usage does not reach the guard band range.
LED Per			Solid Green	When there is a secure 1000Mbps Ethernet connection (or link) at any of the ports.
10/100/1000Mbps Copper Port	Link/Act	Green/Amber	Blinking Green	When there is reception or transmission (i.e. Activity—Act) of data occurring at a 1000Mbps Ethernet connected port.
			Solid	When there is a secure

			Amber Blinking Amber	10/100Mbps Ethernet connection (or link) at any of the ports. When there is reception or transmission (i.e. Activity—Act) of data occurring at a 10/100Mbps Ethernet connected port.
		0	Light off	No link.
	PoE Mode	Green	Solia Light	Power feeding.
		Amber	Solid Light	Error Condition.
		Off	Solid Off	No Power feeding.
		Green/Amber	Solid Green	When there is a secure 1000Mbps Ethernet connection (or link) at any of the ports.
	Link/Act		Blinking Green	When there is reception or transmission (i.e. Activity—Act) of data occurring at a 1000Mbps Ethernet connected port.
LED Per 100/1000Mbps SFP Port			Solid Amber	When there is a secure 100Mbps Ethernet connection (or link) at any of the ports.
			Blinking Amber	When there is reception or transmission (i.e. Activity—Act) of data occurring at a 100Mbps Ethernet connected port.
		Off	Solid off	No link.

2 Hardware Installation

This chapter provides unpacking and installation information for the D-Link Smart Managed Switch.

Safety Cautions

To reduce the risk of bodily injury, electrical shock, fire and damage to the equipment, observe the following precautions:

- Observe and follow service markings
 - Do not service any product except as explained in your system documentation.
 - Opening or removing covers that are marked with the triangular symbol with a lightning bolt may expose you to electrical shock.
- Only a trained service technician should service components inside these compartments.
- If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your trained service provider:
 - The power cable, extension cable, or plug is damaged.
 - · An object has fallen into the product.
 - The product has been exposed to water.
 - The product has been dropped or damaged.
 - The product does not operate correctly when you follow the operating instructions.
- Keep your system away from radiators and heat sources. Also, do not block cooling vents.
- Do not spill food or liquids on your system components, and never operate the product in a wet environment. If the system gets wet, contact your trained service provider.
- Do not push any objects into the openings of your system. Doing so can cause fire or electric shock by shorting out interior components.
- Use the product only with approved equipment.
- Allow the product to cool before removing covers or touching internal components.
- Operate the product only from the type of external power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your service provider or local power company.
- Also, be sure that attached devices are electrically rated to operate with the power available in your location.
- Use only approved power cable(s). If you have not been provided with a power cable for your system or for any AC powered option intended for your system, purchase a power cable that is approved for use in your country. The power cable must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.
- To help prevent electric shock, plug the system and peripheral power cables into properly grounded electrical outlets.
- These cables are equipped with three-prong plugs to help ensure proper grounding. Do not use adapter plugs or remove the grounding prong from a cable. If you must use an extension cable, use a 3-wire cable with properly grounded plugs.
- Observe extension cable and power strip ratings. Make sure that the total ampere rating of all products plugged into the extension cable or power strip does not exceed 80 percent of the ampere ratings limit for the extension cable or power strip.
- To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- Position system cables and power cables carefully; route cables so that they cannot be stepped on or tripped over. Be sure that nothing rests on any cables.
- Do not modify power cables or plugs. Consult a licensed electrician or your power company for site modifications.
- Always follow your local/national wiring rules.

- When connecting or disconnecting power to hot-pluggable power supplies, if offered with your system, observe the following guidelines:
 - Install the power supply before connecting the power cable to the power supply.
 - Unplug the power cable before removing the power supply.
 - If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- Move products with care; ensure that all casters and/or stabilizers are firmly connected to the system. Avoid sudden stops and uneven surfaces.

Step 1: Unpacking

Open the shipping carton and carefully unpack its contents. Please consult the packing list located in the User Manual to make sure all items are present and undamaged. If any item is missing or damaged, please contact your local D-Link reseller for replacement.

- One D-Link DGS-1210 Smart Managed Switch
- One Multilingual Getting Started Guide
- User Guide CD
- Power cord and Power Cord Retainer or external power adapter(DGS-1210-08P only)
- Rack-mount kit and rubber feet

If any item is found missing or damaged, please contact the local reseller for replacement.

Step 2: Switch Installation

For safe switch installation and operation, it is recommended that you:

- Visually inspect the power cord to see that it is secured fully to the AC power connector.
- Make sure that there is proper heat dissipation and adequate ventilation around the switch.
- Do not place heavy objects on the switch.

Desktop or Shelf Installation

When installing the switch on a desktop or shelf, the rubber feet included with the device must be attached on the bottom at each corner of the device's base. Allow enough ventilation space between the device and the objects around it.

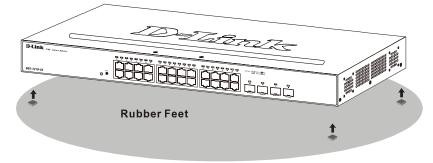


Figure 2.1 – Attach the adhesive rubber pads to the bottom

Rack Installation

The switch can be mounted in an EIA standard size 19-inch rack, which can be placed in a wiring closet with other equipment. To install, attach the mounting brackets to the switch's side panels (one on each side) and secure them with the screws provided (please note that these brackets are not designed for palm size switches).

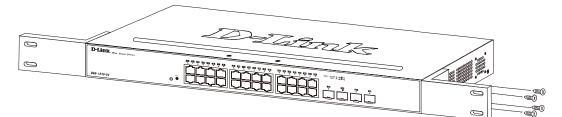


Figure 2.2 – Attach the mounting brackets to the Switch

Then, use the screws provided with the equipment rack to mount the switch in the rack.

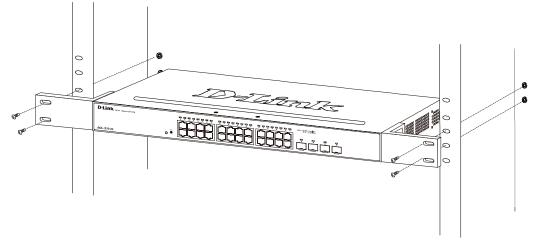


Figure 2.3 – Mount the Switch in the rack or chassis

Please be aware of following safety Instructions when installing:

A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.

B) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

C) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit, and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

E) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips)."

Step 3: Plugging in the AC Power Cord with Power Cord Clip

To prevent accidental removal of the AC power cord, it is recommended to install the power cord clip together with the power cord.

A) With the rough side facing down, insert the Tie Wrap into the hole below the power socket.

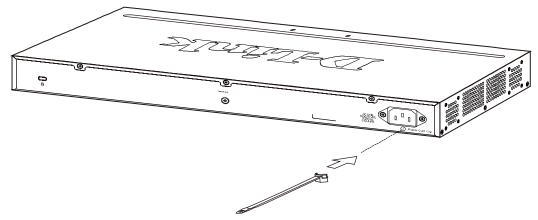


Figure 2.4 – Insert Tie Wrap to the Switch

B) Plug the AC power cord into the power socket of the Switch.

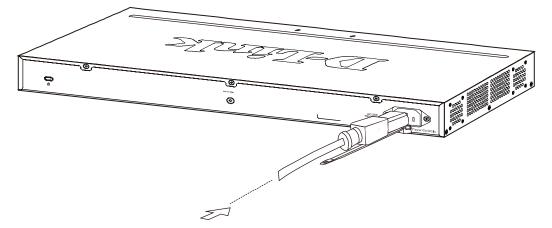


Figure 2.5 – Connect the power cord to the Switch

C) Slide the Retainer through the Tie Wrap until the end of the cord.

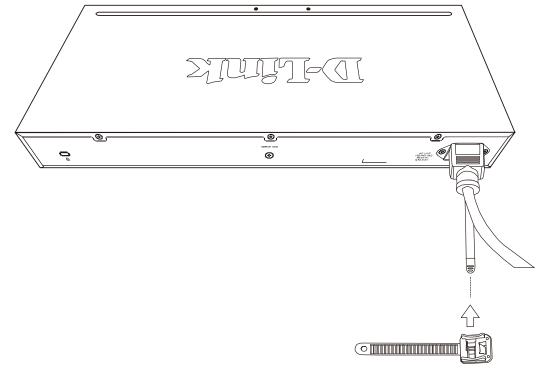


Figure 2.6 – Slide the Retainer through the Tie Wrap

D) Circle the tie of the Retainer around the power cord and into the locker of the Retainer.

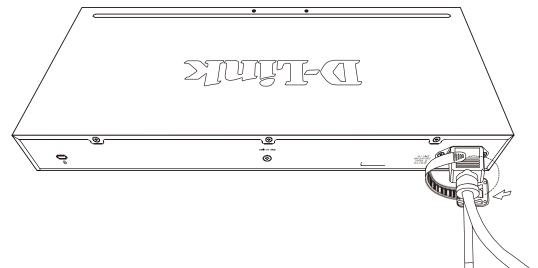


Figure 2.7 – Circle around the power cord

E) Fasten the tie of the Retainer until the power cord is secured.

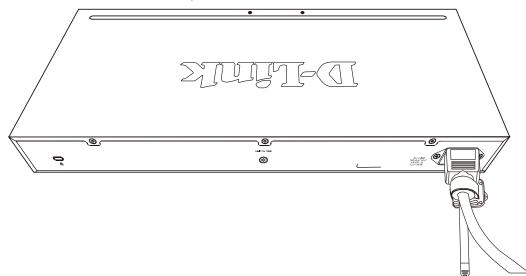


Figure 2.8 – Secure the power cord

F) Users may now connect the AC power cord to an electrical outlet (preferably one that is grounded and surge protected).

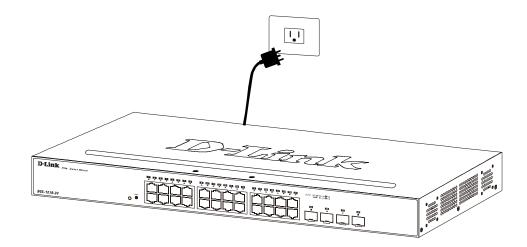


Figure 2.9 – Plugging the switch into an outlet

Power Failure

As a precaution, the switch should be unplugged in case of power failure. When power is resumed, plug the switch back in.

Grounding the Switch

This section describes how to connect the DGS-1210 Series Switch to ground. You must complete this procedure before powering your switch.

Required Tools and Equipment

- Ground screws (included in the accessory kit): One M4 x 6 mm (metric) pan-head screw.
- Ground cable (not included in the accessory kit): The grounding cable should be sized according to local and national installation requirements. Depending on the power supply and system, a 12 to 6 AWG copper conductor is required for U.S installation. Commercially available 6 AWG wire is recommended. The length of the cable depends on the proximity of the switch to proper grounding facilities.
- A screwdriver (not included in the accessory kit)

The following steps let you connect the switch to a protective ground:

Step 1: Verify if the system power is off.

- Step 2: Use the ground cable to place the #8 terminal lug ring on top of the ground-screw opening, as seen in the figure below.
- Step 3: Insert the ground screw into the ground-screw opening.
- Step 4: Using a screwdriver, tighten the ground screw to secure the ground cable to the switch.
- Step 5: Attach the terminal lug ring at the other end of the grounding cable to an appropriate grounding stud or bolt on rack where the switch is installed.
- Step 6: Verify if the connections at the ground connector on the switch and the rack are securely attached.



Figure 2.10 – Connect a Grounding Cable

Getting Started

This chapter introduces the management interface of D-Link Smart Managed Switch.

Management Options

The D-Link Smart Managed Switch can be managed through any port on the device by using the Web-based Management.

Each switch must be assigned its own IP Address, which is used for communication with Web-Based Management or a SNMP network manager. The PC should have an IP address in the same range as the switch. Each switch can allow up to four users to access to the Web-Based Management concurrently. Please refer to the following installation instructions for the Web-based Management.

Using Web-based Management

After a successful physical installation, you can configure the Switch, monitor the network status, and display statistics using a web browser.

Supported Web Browsers

The embedded Web-based Management currently supports the following web browsers: Web Browser via IE8(or later version), Firefox, Chrome and Safari.

Connecting to the Switch

You will need the following equipment to begin the web configuration of your device:

- 1. A PC with a RJ-45 Ethernet connection
- 2. A standard Ethernet cable

Connect the Ethernet cable to any of the ports on the front panel of the switch and to the Ethernet port on the PC.

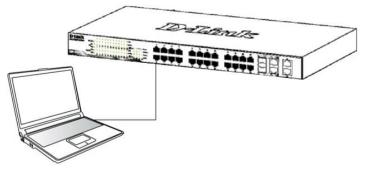


Figure 3.1 – Connected Ethernet cable

Login Web-based Management

In order to login and configure the switch via an Ethernet connection, the PC must have an IP address in the same subnet as the switch. For example, if the switch has an IP address of 10.90.90.90, the PC should have an IP address of **10.x.y.z** (where x/y is a number between $0 \sim 254$ and z is a number between $1 \sim 254$), and a subnet mask of **255.0.0.0**. There are two ways to launch the Web-based Management, you may either click the Web Access button at the top of the SmartConsole Utility or open the web browser and enter 10.90.90.90 (the factory-default IP address) in the address bar. Then press <Enter>.

🥖 D-Link Welcome - Windows Internet Explorer								
\bigcirc	0	- 🧭	http://10.90	.90.90				
Eile	Edit	⊻iew	F <u>a</u> vorites	Tools	Help			
Figure 3.2 _Enter the IP address 10.90.90 in the web browser								

10.90.90.90 in the web browser



NOTE: The switch's factory default IP address is 10.90.90.90 with a subnet mask of 255.0.0.0 and a default gateway of 0.0.0.0.

The web configuration can also be accessed through the SmartConsole Utility. Open the SmartConsole Utility and double-click the switch as it appears in the Monitor List. This will automatically load the web configuration in your web browser.

When the following logon dialog box appears, enter the password and choose the language of the Webbased Management interface then click **OK**.

The switch supports 10 languages including English, Traditional Chinese, Simplified Chinese, German, Spanish, French, Italian, Portuguese, Japanese and Russian. By default, the password is **admin** and the language is **English**.

Connect to 1	0.90.90.90	
7		GEN
Enter your pass	word	
Password		
Language	English	•
	ОК	Cancel

Figure 3.3 – Logon Dialog Box

Smart Wizard

After a successful login, the Smart Wizard will guide you through essential settings of the D-Link Smart Managed Switch. Please refer to the Smart Wizard Configuration section for details.

Web-based Management

By clicking the **Exit** button in the Smart Wizard, you will enter the Web-based Management interface. Please refer to Chapter 4 <u>Web-based Switch Configuration</u> for detailed instructions.

D-Link Network Assistant

D-Link Network Assistant (DNA) is a program that is used to discover switches which are in the same layer 2 network segment as your PC. You can download the DNA utility from <u>http://tools.dlink.com/intro/dna/</u>. Please go to above link for details.

Web-based Switch Configuration

The features and functions of the D-Link Smart Managed Switch can be configured for optimum use through the Web-based Management Utility.

Smart Wizard Configuration

The Smart Wizard is a configuration utility that is launched the first time the Web UI is accessed. It allows users to configure basic settings such as the switch mode, management IP, password and SNMP. It can also be used to switch between **Standard Mode** and **Surveillance Mode** Web UI types.

Standard Mode is used to manage the network and system elements of the switch. Surveillance Mode is a dedicated user interface designed for monitoring and managing the surveillance and IP security device on your network.

To switch between the two types of interfaces, you can re-run the Smart Wizard that is presented when you access the web interface of the device.

Step 1 – Web Mode

After a successful login, the Smart Wizard will guide you through essential settings of the D-Link Smart Managed Switch. The initial page allows the user to choose between **Standard Mode** and **Surveillance Mode** on the switch. This can be changed at any time by returning to the Smart Wizard.

If you do not plan to change anything, click **Exit** to leave the Wizard and enter the Web Interface. You can also skip it by clicking **Ignore the Wizard next time** for the next time you logon to the Web-based Management.

Welcome to	Smart Wizard
	The wizard will guide you to do basic configurations on 3 steps for the IP Information, access password, and SNMP. If you are not changing the settings, click on "Exit" to go back to the main page. Step 1: Choose the web interface mode. Web Mode
	Standard Mode Surveillance Mode
Ig	nore the wizard next time Exit Back Next

Figure 4.1 – Web Mode in Smart Wizard

Item Description	
Web Mode	Select the Standard Mode to continue the following settings or select the Surveillance Mode to continue the Smart Wizard in Surveillance Mode.

The fields that can be configured are described below:

Click **Next** to enter the next configuration page.

Step 2 – IP Information

The IP Information page allows the user to configure IP address assignment method, the static IP address, netmask and gateway address.

Welcome to Smart Wizard
The wizard will guide you to do basic configurations on 3 steps for the IP Information, access password, and SNMP. If you are not changing the settings, click on "Exit" to go back to the main page. Step 2: The wizard will help to complete settings for IP address, Netmask, and Gateway.
IP Information
Static DHCP BOOTP
IP Address 10.90.90.90 Netmask 8 (255.0.0.0) ▼ Gateway 0.0.0
Ignore the wizard next time Exit Back Next

Figure 4.2 – IP Information in Smart Wizard

The fields that can be configured are described below:

Item	Description	
Static	Select Static option to manually configure and use IP address setting on this switch.	
DHCP	Select DHCP option to obtain IP address settings from a DHCP server.	
IP Address	Specifies the IP address to be configured.	
Netmask	Specifies the Netmask to be configured.	
Gateway Specifies the default Gateway IP address to be configured.		
воотр	Select BOOTP option to be used on the switch.	

Click **Next** to enter the next Password setting page.

Tick the Ignore the wizard next time option to skip the Smart Wizard on the next login.

NOTE: The Smart Wizard supports quick settings for IPv4 network.

NOTE: The switch will probe IP-Cameras every 30 seconds. If and IP-Camera is not in the same subnet as the switch, the IP-Camera will not be automatically discovered. Place the switch management IP in the same subnet as the IP-Cameras for the cameras to be automatically added to the Surveillance Mode Web UI.

Step 3 – Password

Type the desired new password in the **Password** box and again in the **Confirm Password**, then click the **Apply&Save** button to accept the changes made and enter the next **SNMP** setting page. Tick the **Ignore the wizard next time** option to skip the Smart Wizard on the next login.

Step 3: Set up the password for authorized access.
Password
Password Confirm Password


Figure 4.3 – Password in Smart Wizard

Step 4 – SNMP (Only for Standard Mode)

The SNMP Setting allows you to quickly enable/disable the SNMP function. The default SNMP Setting is Disabled. Click **Enabled** and then click **Apply** to make it effective.

elcol	ne to Smart Wizard
ł	Step 4: Enable SNMP for management.
	SNMP
	SNMP: Enabled Disabled
-	Ignore the wizard next time Exit Back Next Apply

Figure 4.4 – SNMP in Smart Wizard

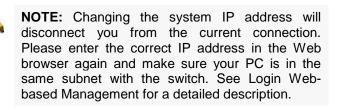

NOTE: Standard Mode and Surveillance Mode Web UIs share the same configuration files. Any features enables in one interface will be made available in the other interface, for example: PoE scheduling, SNMP settings and the surveillance VLAN in use.

If you want to change the settings, click **Apply** and start a new web browser.

10.90.90.90 says:		
You have completed setup. Any chan		
IP address will stop current commect Continue?	ion to the device.	
Continue:		
	01	
	OK	Cancel

Figure 4.5 - Confirm the changes of IP address in Smart Wizard

Web-based Management

smart D-Link Tool Bar 🍳 admin - 10.90.90.98 🔨 Tools 🖵 🔹 Wizard 👔 Help 🚽 wire Surveillance Mod 🥖 Logout DGS-1210 **Device Information** Safeguard System
 VLAN
 VLAN
 L2 Functions
 GoS
 GoS
 Security Device Information Device Type DGS-1210-24P Gigabit Ethernet Switch System Name Boot Version 1.00.002 System Location Firmware Version 7.10.008 System Time 01/01/2017 00:01:41 0 days , 0 hours , 2 mins , 33 AAA Hardware Version G1 System Up Time -ACL seconds PoE
 SNMP
 Monitoring QBDES12105200 Serial Number Login Timeout (minutes) 5 MAC Address 00-01-02-03-04-05 IP Address Information IPv4 Address 10.90.90.90 **Function Tree** Subnet Mask 255 0 0 0 Default Gateway 0.0.0.0 IPv6 Global Unicast Address **Main Configuration Screen** IPv6 Link-Local Address Device Status and Quick Configurations RSTP Disabled <u>Settings</u> Disabled <u>Settings</u> SNMP Status Disabled Settings 802.1X Status Port Mirroring Disabled Settings Storm Control Disabled Settings Safeguard Engine Enabled Settings Disabled Settings IGMP Snooping DHCP Client Disabled Settings Jumbo Frame Disabled Settings Power Saving Enabled Settings *** 2433 2225 TTTT TTTT

After clicking the Exit button in Smart Wizard you will see the screen below:

Figure 4.6 – Web-based Management

The above image is the Web-based Management screen. The three main areas are the **Tool Bar** on top, the **Function Tree**, and the **Main Configuration Screen**.

Item Area	Description	
Tool Bar	To provide a quick and convenient way for essential utility functions like firmware and configuration management.	
Function Tree	By choosing different functions in the Function Tree , you can change all the settings in the Main Configuration Screen .	
Main Configuration Screen	To display the current status of your Switch by clicking the model name on top of the function tree.	

At the upper right corner of the screen the username and current IP address will be displayed. Under the username is the **Logout** button. Click this to end this session.

NOTE: If you close the web browser without clicking the **Logout** button first, then it will be seen as an abnormal exit and the login session will still be occupied.

Finally, by clicking on the D-Link logo at the upper-left corner of the screen you will be redirected to the local D-Link website.

Tool Bar > Save Menu

The Save Menu provides Save Configuration and Save Log functions.

H Save	🐔	Tools		
Save Confi	guration			
Save Log				
Figure 4.7 – Save Menu				

Save Configuration

Select to save the entire configuration changes to configuration ID 1 or 2 you have made to the device to switch's non-volatile RAM.

Save Configuration			😑 Safeguard
Please press the button to save the config of device.	config_id 1 ▼	Save Config	
	Figure 4.8 – Sa	ve Configuration	

Save Log

Save the log entries to your local drive and a pop-up message will prompt you for the file path. You can view or edit the log file by using text editor (e.g. Notepad).

Save Log			😑 Safeguard
Backup to file :	Backup Log		
		Figure 4.9 – Save Log	

Tool Bar > Tools Menu

The Tools Menu offers global function controls such as Reset, Reset System, Reboot Device, Configuration Backup & Restore, Firmware Backup & Upgrade and Flash Information.

ave	-	- X	Tools	-
Res	set			
Re	set Sy	stem		
Rel	boot D	Device		
Cor	nfigur	ation Ba	ackup &	Restore
Firm	nware	Backu	p & Upg	rade
Fla	sh Infe	ormation	n	

Figure 4.10 - Tool Menu

<u>Reset</u>

Provide a safe reset option for the Switch. All configuration settings in non-volatile RAM will be reset to factory default except for the IP address.



Figure 4.11 – Tool Menu > Reset

Reset System

Provide another safe reset option for the Switch. All configuration settings in non-volatile RAM will reset to factory default and the Switch will reboot.



Figure 4.12 – Tool Menu > Reset System

Reboot Device

Provide a safe way to reboot the system. Select **YES** or **NO** to save the current settings before action. And click **Reboot** to restart the switch.

Reboot System	😑 Safeguard
Do you want to save the settings ? ● YES ○ NO If you do not save the settings, all changes made in this session will be lost.	Reboot

Figure 4.13 – Tool Menu > Reboot Device

Configuration Backup and Restore

Allow the current configuration settings to be saved to a file (not including the password), and if necessary, you can restore configuration settings from this file. Two methods can be selected: **HTTP** or **TFTP**.

Configuration Backup and Restore		😑 Safeguard
 HTTP Backup/Restore Config ID number : Backup current configuration to file : Restore configuration from file : 	config_id 1 ▼ Backup Choose File No file chosen Restore	
O TFTP Backup/Restore Config ID number :	config_id 1 ▼	
TFTP Server IP Address	IPv4 O IPv6	
Backup current configuration to file : Restore configuration from file :	Backup Restore	
TFTP Server IP Address TFTP File Name Backup current configuration to file :	IPv4 IPv6 Backup	

Figure 4.14 – Tool Menu > Configure Backup and Restore

HTTP: Backup or restore the configuration file to or from your local drive.

Backup/Restore Config ID Number: Select config_id 1 or config_id 2.

Click **Backup** to save the current settings to your disk.

Click **Choose File** to browse your inventories for a saved backup settings file.

Click **Restore** after selecting the backup settings file you want to restore.

TFTP: TFTP (Trivial File Transfer Protocol) is a file transfer protocol that allows you to transfer files to a remote TFTP server. Specifies the configuration 1 or 2 to be specified, **TFTP Server IP Address** with IPv4 or IPv6 address and **TFTP File Name** for the configuration file you want to save to / restore from.

Click **Backup** to save the current settings to the TFTP server.

Click **Restore** after selecting the backup settings file you want to restore.



Note: Switch will reboot after restore, and all current configurations will be lost.

Firmware Backup and Upgrade

Allow for the firmware to be saved, or for an existing firmware file to be uploaded to the Switch. Two methods can be selected: **HTTP** or **TFTP**.

Firmware Backup and Upgrade	🤤 Safeguard
• HTTP	
Backup firmware to file : Backup	
Upgrade firmware from file : Choose File	No file chosen
Upgrade	
O TFTP	
TFTP Server IP Address :	 IPv4
	O IPv6
TFTP File Name	
Backup firmware to file :	Backup
Upgrade firmware from file :	Ipgrade

Figure 4.15 – Tool Menu > Firmware Backup and Upload

HTTP: Backup or upgrade the firmware to or from your local PC drive.

Click **Backup** to save the firmware to your disk.

Click **Choose File** to browse your inventories for a saved firmware file.

Click Upgrade after selecting the firmware file you want to restore.

TFTP: Backup or upgrade the firmware to or from a remote TFTP server. Specifies **TFTP Server IP Address** with IPv4 or IPv6 address and **TFTP File Name** for the firmware file you want to save to / restore from.

Click **Backup** to save the firmware to the TFTP server.


Click **Upgrade** after selecting the firmware file you want to restore.

1	CAUTION: Do not disconnect the PC or remove the power cord from device until the upgrade
	completes. The Switch may crash if the Firmware upgrade is incomplete.

Flash Information

This page displays the flash detail information of the Switch.

sh Informatio	n			🨑 Safegua
Flash ID	MX25L25635F			
Flash Size	32MB			
	Used	Total	Available	Usage %
		4000000	0	100
Boot	1000000	1000000	U	100
Boot Image1	1000000 9912352	14155776	4243424	70

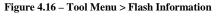

Tool Bar > Wizard

By clicking the Wizard button, you can return to the Smart Wizard if you wish to make any changes there.

Tool Bar > Online Help

The Online Help provides two ways of online support: **D-Link Support Site** will lead you to the D-Link website where you can find online resources such as updated firmware images; **User Guide** can offer an immediate reference for the feature definition or configuration guide.



Tool Bar > Surveillance Mode

By clicking the **Surveillance Mode** button to access the Surveillance Mode Web UI on the Switch. After clicking the Surveillance Mode option in the Toolbar, the following pop-up window will appear.

The following settings will automatic	ally be configued wher	changing to
the Suveillace Mode ASV2.0, LBD,SN enabled.	MP and SNMP traps wi	ll globally be
VLAN member ports will be configur ports.	ed as untagged, excep	t for uplin <mark>k</mark>
Are you sure you want to change to	the Surveillance Mode	?
	ОК	Cancel

Figure 4.18 – Survillance Mode Confirmation Message

The pop-up message window above displays a message that mentioned configurations need to be changed when access to the Surveillance Mode is given.

Click the **OK** button to continue.

Click the Cancel button and return to the Standard Mode.

After successfully switching to the Surveillance Mode on the Web UI of the Switch, the following window will be presented.



Figure 4.19 – Survillance Mode Help Message

Click the **OK** button to continue, the following page will be presented.


Vizard 🔆 Tooks 🖳] Save 🕜 Help 🌐 Online Help	Surveillance Mod
Saorch	Surveillance Overview	
OGS-1210-24P Port Information	Surveillance Topology	Device Information
P-Camera Information AVR Information PoE Information PoE Scheduling Time		
urveillance Settings urveillance Log ealth Diagnostic	(Mar)	
	D-Link 065-1210-24P	

Figure 4.20 – Survillance Mode

Scroll to the bottom of the page and click the **OK** button to continue to the Web UI. For more detail information of Surveillance Mode. Please refer to Chapter 5 <u>Surveillance Mode Configuration</u> for detailed instructions.

Function Tree

All configuration options on the switch are accessed through the Setup menu on the left side of the screen. Click on the setup item that you want to configure. The following sections provide more detailed description of each feature and function.

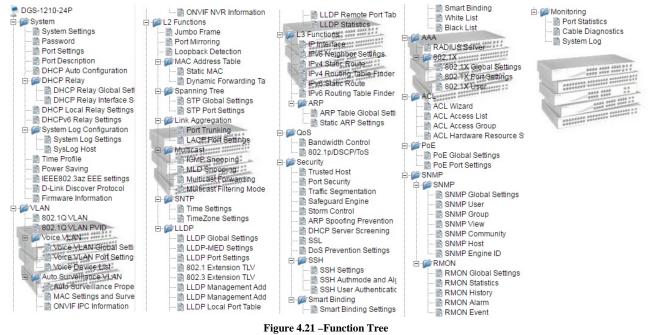

Device Information

The Device Information provides an overview of the switch, including essential information such as firmware & hardware information, and IP address.

Device Information						😑 Safeguard
Device Information Device Type Boot Version Firmware Version	DGS-1210-24P (1.00.002 7.10.008	Bigabit Ethernet Switch	System Name System Location System Time		01/01/2017 00:10:38	
Hardware Version	G1		System Up Time		0 days , 0 hours , 11 mins , 31 seconds	
Serial Number MAC Address	QBDES1210520 00-01-02-03-04-0		Login Timeout (minutes)		5	
IP Address Information						
IPv4 Address	10.90.90.90					
Subnet Mask	255.0.0.0					
Default Gateway	0.0.0					
IPv6 Global Unicast Addres	s					
IPv6 Link-Local Address						
Device Status and Quick	Configurations					
RSTP	Disabled Settings		NMP Status	Disable		
Port Mirroring	Disabled Settings		02.1X Status	Disable		
Storm Control	Disabled Settings		afeguard Engine	Enable		
DHCP Client	Disabled Settings		SMP Snooping	Disable		
Jumbo Frame	Disabled Settings	Pe	ower Saving	Enable	ed <u>Settings</u>	

Figure 4.22 – Device Information

It also offers an overall status of common software features:

RSTP: Click **Settings** to link to L2 Functions > Spanning Tree > STP Global Settings. Default is disabled.

Port Mirroring: Click **Settings** to link to L2 Functions > Port Mirroring. Default is disabled.

Storm Control: Click **Settings** to link to Security > Storm Control. Default is disabled.

DHCP Client: Click **Settings** to link to System > System Settings. Default is disabled.

Jumbo Frame: Click **Settings** to link to L2 Functions > Jumbo Frame. Default is disabled.

SNMP Status: Click **Settings** to link to SNMP > SNMP > SNMP Global Settings. Default is disabled.

802.1X Status: Click Settings to link to AAA > 802.1X > 802.1X Settings. Default is disabled.

Safeguard Engine: Click Settings to link to Security > Safeguard Engine. Default is enabled.

IGMP Snooping: Click **Settings** to link to L2 Functions > Multicast > IGMP Snooping. Default is disabled.

Power Saving: Click Settings to link to System > Power Saving. Default is disabled.

System > System Settings

The System Setting allows the user to configure the IP address and the basic system information of the Switch.

System Settings		😑 Safeguard
IPv4 Information		
Static DHCP BOOTP Interface Name VLAN Name	System default	
Interface Admin State IPv4 Address Netmask	Enabled ▼ 10.90.90.90 8 (255.0.0.0) ▼	
Gateway DHCP Option 12 State: DHCP Option 12 Host Name	0.0.0.0 Disabled V DGS-1210-24P	
DHCP Retry Times (0-120)	7	Apply
System Information		
System Name System Location Login Timeout (3-30 minutes)	5	
		Apply

Figure 4.23 – System > System Settings

IPv4 Information: There are three ways for the switch to obtain an IP address: Static, DHCP (Dynamic Host Configuration Protocol) and BOOTP.

When using static mode, the Interface Name, VLAN Name, Interface Admin State, IPv4 Address, NetMask and Gateway can be manually configured. When using DHCP mode, the Switch will first look for a DHCP server to provide it with an IP address (including network mask and default gateway) before using the default or previously entered settings. By default the IP setting is static mode with IP address is 10.90.90.90 and subnet mask is 255.0.0.0.

DHCP Option 12 State: Specifies the DHCP option 12 state is enabled or disabled.

DHCP Option 12 Host Name: Specifies the host name for DHCP.

DHCP Retry Times: Specifies the retry time of DHCP.

System Information: By entering a **System Name** and **System Location**, the device can more easily be recognized through the SmartConsole Utility and from other Web-Smart devices on the LAN.

Login Timeout: The Login Timeout controls the idle time-out period for security purposes, and when there is no action for a specific time span in the Web-based Management. If the current session times out (expires), the user is required a re-login before using the Web-based Management again. Selective range is from 3 to 30 minutes, and the default setting is 5 minutes.

System > Password

Setting a password is a critical tool for managers to secure the Web-Smart Switch. After entering the old password and the new password twice, click **Apply** for the changes to take effect.

Password Access Control	😑 Safeguard
Old Password	
New Password	
Confirm Password	
🤌 Maximum 20 characters.	Apply

Figure 4.24 – System > Password Access Control

System > Port Settings

In the Port Setting page, the status of all ports can be monitored and adjusted for optimum configuration. By selecting a range of ports (**From Port** and **To Port**), the **Speed** can be set for all selected ports by clicking **Apply**. Press the **Refresh** button to view the latest information.

ort Setting	s					ິ ອີ	Gafegua
om Port 01 🔻	To Port 52 🔻	Speed Auto ▼	MDI/MDIX Auto	Flow Control Disabled ▼	Auto Downgrade Disabled ▼		
apability Adver	rtised 🕑 10_half	✓ 10_full	🕑 100_half	✓ 100_full	1000_full		Refresh Apply
Port	Link Status	Sp	eed	MDI/MDIX	Flow Control	Auto Downgrade	Capability Advertised
01	Link down	A	uto	Auto	Disabled	Disabled	10_ha
02	Link down	A	uto	Auto	Disabled	Disabled	10_ha
03	Link down	A	uto	Auto	Disabled	Disabled	10_ha
04	Link down	A	uto	Auto	Disabled	Disabled	10_ha
05	1000M Full	A	uto	Auto	Disabled	Disabled	10_ha
06	Link down	A	uto	Auto	Disabled	Disabled	10_ha
07	Link down	A	uto	Auto	Disabled	Disabled	10_ha
08	Link down	A	uto	Auto	Disabled	Disabled	10_ha
09	Link down	A	uto	Auto	Disabled	Disabled	10_ha
10	Link down	A	uto	Auto	Disabled	Disabled	10_ha
11	Link down	A	uto	Auto	Disabled	Disabled	10_ha
12	Link down	A	uto	Auto	Disabled	Disabled	10_ha
13	Link down	A	uto	Auto	Disabled	Disabled	10 ha

Figure 4.25 – System > Port Settings

Speed: Gigabit Fiber connections can operate in 1000M Auto or Disabled. Copper connections can operate in Forced Mode settings (1000M Full, 100M Full, 100M Half, 10M Full, 10M Half), Auto, or Disabled. The default setting for all ports is **Auto**.

NOTE: Be sure to adjust port speed settings appropriately after changing the connected cable media types.



NOTE: All ports do not support MDI/MDI-X function when the speed links to 1000M force mode.

MDI/MDIX:

A **medium dependent interface (MDI)** port is an Ethernet port connection typically used on the Network Interface Card (NIC) or Integrated NIC port on a PC. Switches and hubs usually use **Medium dependent interface crossover (MDIX)** interface. When connecting the Switch to end stations, user have to use straight through Ethernet cables to make sure the Tx/Rx pairs match up properly. When connecting the Switch to other networking devices, a crossover cable must be used.

This switch provides a configurable **MDI/MDIX** function for users. The switches can be set as an MDI port in order to connect to other hubs or switches without an Ethernet crossover cable.

Auto MDI/MDIX is designed on the switch to detect if the connection is backwards, and automatically chooses MDI or MDIX to properly match the connection. The default setting is "**Auto**" **MDI/MDIX**.

Flow Control: You can enable this function to mitigate the traffic congestion. Ports configured for full-duplex use 802.3x flow control, half-duplex ports use backpressure flow control. The default setting is Disabled.

Auto Downgrade: Enable or disable automatically downgrading advertised speed. This function only takes effect, when **Speed** is configured as Auto.

Capability Advertised: When the Speed is set to Auto, these capabilities are advertised during autonegotitation.

System > Port Description

Port description can be given on this page.

Port Description	1		🦲 Safeguard
From Port 01 T	To Port 52 ▼	Description	Apply
Port		Description	
01			
02			
03			
04			
05			
06			
07			
08			
09			
10			
11			
12			
13			

Figure 4.26 – System > Port Description

From Port / To Port: Specifies the range of ports to describe.

Description: Specifies the description for the chosen ports.

Click Apply to set the description in the table.

System > DHCP Auto Configuration

This page allows you to enable the DHCP Auto Configuration feature on the Switch. When enabled, the Switch becomes a DHCP client and gets the configuration file from a TFTP server automatically on next boot up. To accomplish this, the DHCP server must deliver the TFTP server IP address and configuration file name information in the DHCP reply packet. The TFTP server must be up and running and store the necessary configuration file in its base directory when the request is received from the Switch.

DHCP Auto Configuration Settings	😑 Safeguard
DHCP Auto Configuration O Enabled O Disabled	Apply
If DHCP Auto Configuration is enabled, the switch will load a previously saved configuration file from TFTP server after every boot up.	
If the switch is unable to complete the Auto Configuration process, the last configuration file saved in switch flash memory will be loaded.	

Figure 4.27 – System > DHCP Auto Configuration

System > DHCP Relay > DHCP Relay Global Settings

User can enable and configure DHCP Relay Global Settings on the Switch.

DHCP Relay Global Settings		😑 Safeguard
DHCP Relay State	Disabled •	
DHCP Relay Hops Count Limit (1-16)	4	
DHCP Relay Time Threshold (0-65535)	0	
DHCP Relay Agent Information Option 82 State	Enabled •	
DHCP Relay Agent Information Option 82 Check	Disabled •	
DHCP Relay Agent Information Option 82 Policy	Replace •	
DHCP Relay Agent Information Option 82 Remote ID	Default 00-01-02-03-04-05	
		Apply

Figure 4.28 – System > DHCP Relay > DHCP Relay Global Settings

DHCP Relay State: This field can be toggled between Enabled and Disabled using the pull-down menu. It is used to enable or disable the DHCP Relay service on the Switch. The default is *Disabled*.

DHCP Relay Hops Count Limit (1-16): This field allows an entry between *1* and *16* to define the maximum number of router hops DHCP messages can be forwarded across. The default hop count is 4.

DHCP Relay Time Threshold (0-65535): Allows an entry between *0* and *65535* seconds, and defines the maximum time limit for routing a DHCP packet. If a value of 0 is entered, the Switch will not process the value in the **seconds** field of the DHCP packet. If a non-zero value is entered, the Switch will use that value, along with the hop count to determine whether to forward a given DHCP packet.

DHCP Relay Agent Information Option 82 State: This field can be toggled between Enabled and Disabled using the pull-down menu. It is used to enable or disable the DHCP Agent Information Option 82 on the Switch. The default is *Disabled*.

Enabled – When this field is toggled to Enabled the relay agent will insert and remove DHCP relay information (option 82 field) in messages between DHCP servers and clients. When the relay agent receives the DHCP request, it adds the option 82 information, and the IP address of the relay agent (if the relay agent is configured), to the packet. Once the option 82 information has been added to the packet it is sent on to the DHCP server. When the DHCP server receives the packet, if the server is capable of option 82, it can implement policies like restricting the number of IP addresses that can be assigned to a single remote ID or circuit ID. Then the DHCP server echoes the option 82 field in the DHCP reply. The DHCP server unicasts reply to the back to the relay agent if the request was relayed to the server by the relay agent. The switch verifies that it originally inserted the option 82 data. Finally, the relay agent removes the option 82 field and forwards the packet to the switch port that connects to the DHCP client that sent the DHCP request.

Disabled - If the field is toggled to Disabled the relay agent will not insert and remove DHCP relay information (option 82 field) in messages between DHCP servers and clients, and the check and policy settings will have no effect.

DHCP Relay Agent Information Option 82 Check: This field can be toggled between Enabled and Disabled using the pull-down menu. It is used to enable or disable the Switches ability to check the validity of the packet's option 82.

Enabled – When the field is toggled to E_{nabled} , the relay agent will check the validity of the packet's option 82 fields. If the switch receives a packet that contains the option-82 field from a DHCP client, the switch drops the packet because it is invalid. In packets received from DHCP servers, the relay agent will drop invalid messages.

Disabled - When the field is toggled to Disabled, the relay agent will not check the validity of the packet's option 82 fields.

DHCP Relay Agent Information Option 82 Policy: This field can be toggled between Replace, Drop, and Keep by using the pull-down menu. It is used to set the Switches policy for handling packets when the **DHCP Agent Information Option 82 Check** is set to Disabled. The default is *Replace*.

Replace - The option 82 field will be replaced if the option 82 field already exists in the packet received from the DHCP client.

Drop - The packet will be dropped if the option 82 field already exists in the packet received from the DHCP client.

Keep -The option 82 field will be retained if the option 82 field already exists in the packet received from the DHCP client.

DHCP Relay Agent Information Option 82 Remote ID: This field can be toggled between Default and User Define.

NOTE: If the Switch receives a packet that contains the option-82 field from a DHCP client and the information-checking feature is enabled, the switch drops the packet because it is invalid. However, in some instances, you might configure a client with the option-82 field. In this situation, you should disable the information-check feature so that the switch does not remove the option-82 field from the packet. You can configure the action that the switch takes when it receives a packet with existing option-82 information by configuring the **DHCP Agent Information Option 82 Policy**.

System > DHCP Relay > DHCP Relay Interface Settings

This page allows the user to set up a server, by IP address, for relaying DHCP information the switch. The user may enter a previously configured IP interface on the Switch that will be connected directly to the DHCP

server using the following window. Properly configured settings will be displayed in the **DHCP Relay Interface Table** at the bottom of the following window, once the user clicks the **Add** button under the **Apply** heading. The user may add up to four server IPs per IP interface on the Switch. Entries may be deleted by clicking Delete button.

DHCP Relay Interface Settings	😑 Safeguard
Interface System Server IP	Apply
DHCP Relay Interface Table	
Interface Server1 Server2 Server3	Server4

Figure 4.29 – System > DHCP Relay > DHCP Relay Interface Settings

Interface: The IP interface on the Switch that will be connected directly to the Server.

Server IP: Enter the IP address of the DHCP server. Up to four server IPs can be configured per IP Interface. Click **Apply** to implement changes made.

System > DHCP Local Relay Settings

The DHCP Local Relay Settings page allows the user to configure DHCP Local Relay. DHCP broadcasts are trapped by the switch CPU, and replacement broadcasts are forwarded with Option 82. Replies from the DHCP servers are trapped by the switch CPU, the Option 82 is removed and the reply is sent to the DHCP Client.

DHCP Local Relay Sett	ings		😑 Safeguard
DHCP Local Relay Status	Enabled	Disabled	Apply
Config DHCP Local Relay for VL Config VLAN by:	AN VID V	State	Disabled
, DHCP Local Relay VID List :			

Figure 4.30 - System > DHCP Local Relay Settings

DHCP Local Relay Status: Specifies whether DHCP Local Relay is enabled on the device.

Enabled – Enables DHCP Local Relay on the device.

Disabled – Disables DHCP Local Relay on the device. This is the default value.

Config VLAN by: Configure the VLAN by VID or VLAN Name of drop-down menu.

State: Specifies whether DHCP Local Relay is enabled on the VLAN.

Enabled – Enables DHCP Local Relay on the VLAN.

Disabled – Disables DHCP Local Relay on the VLAN.

DHCP Local Relay VID List: Displays the list of VLANs on which DHCP Local Relay has been defined.

Click the **Apply** button to implement changes made.

System > DHCPv6 Relay Settings

The DHCPv6 Relay Settings page allows user to configure the DHCPv6 settings.

DHCPv6 Relay S	Settings				😑 Safeguard
DHCPv6 Relay State		Disabled	•		
DHCPv6 Relay Hops Count Limit (1-32) 4		4]	
DHCPv6 Relay Option37	7 State	Enabled	•		
DHCPv6 Relay Option37	7 Check	Enabled	•		
DHCPv6 Relay Option37	7 Remote ID Type	Default	¥		
		00-01-02-03-04-05]	Apply
Interface Server IP	System				Apply
DHCPv6 Relay Interfac	ce Table				
Interface	Server Address				Delete

Figure 4.31 - System > DHCPv6 Relay Settings

DHCPv6 Relay Status: Specifies whether DHCPv6 Relay is enabled on the device.

Enabled – Enables DHCPv6 Relay on the device.

Disabled – Disables DHCPv6 Relay on the device. This is the default value.

DHCPv6 Relay Hops Count Limit (1-32): The field allows and entry between 1 and 32 to define the maximum number of router hops DHCPv6 messages can be forwarded. The default hop count is 4.

DHCPv6 Relay Option37 State: Specifies the DHCPv6 Relay Option37 State to be enabled or disabled.

DHCPv6 Relay Option37 Check: Specifies the DHCPv6 Relay Option37 Check to be enabled or disabled. DHCPv6 Relay Option37 Remote ID Type: Specifies the DHCPv6 Relay Option37 Remote ID type is CID

with User Defined, User Defined or Default.

Interface: Enter a name of the interface.

Server IP: Enter the server IP address.

Click the **Apply** button to implement changes made.

System > System Log Configuration > System Log Settings

System Log Configuration feature contains information for configuring various attributes and properties. The System Log Settings page allows user to enable or disable the System Log and specify a method for which to save the switch log to the flash memory of the Switch.

System Log Settings	😑 Safeguard
System Log O Enabled	Apply
Save Mode Settings Save Mode On Demand Apply	y Save Log

Figure 4.32 – System > System Log Configuration > System Log Settings

System Log: To enable or disable the system log feature.

Click the **Apply** button to implement changes made.

System Log Save Mode Settings:

Save Mode: Use this drop-down menu to choose the method that will trigger a log entry. Choose among *On Demand*, *Time Interval*, and *Log Trigger*.

On Demand – Users who choose this method will only save log files when they manually tell the Switch to do so, either using the Save Log link in the Save folder.

Time Interval – Users who choose this method can configure a time interval by which the Switch will save the log files, in the box adjacent to this configuration field. The user may set a time between 1 and 65535 minutes.

Log Trigger – Users who choose this method will have log files saved to the Switch every time a log event occurs on the Swtich.

Minutes (1-65535): To specify the time interval in minutes, for which a log entry is to be made.

Click the **Apply** button to implement changes made.

System > System Log Configuration > SysLog Host

System Logs record and manage events, as well as report errors and informational messages. Message severity determines a set of event messages that will be sent. Click **Enable** so you can start to configure the related settings of the remote system log server, then press **Apply** for the changes to take effect.

			Safeguard
IPv4 0.0.0.0	Severity	All	
O IPv6	Facility	Local 0 🔻	
514			
Enabled •			
			Apply
	0 IPv6	IPv6 Facility	O IPv6 Facility Local 0 ▼ 514

Figure 4.33 – System > System Log Configuration > SysLog Host

Server IP Address: Select IPv4 or IPv6 then specify the IP address of the system log server.

UDP Port: Specifies the UDP port to which the server logs are sent. The possible range is 1 - 65535, and the default value is 514.

Time Stamp: Select Enable to time stamp log messages.

Severity: Specifies the minimum severity from which warning messages are sent to the server. There are three levels. When a severity level is selected, all severity level choices above the selection are selected automatically. The possible levels are:

Warning - The lowest level of a device warning. The device is functioning, but an operational problem has occurred.

Informational - Provides device information.

All - Displays all levels of system logs. And this is the default value.

Facility: Specifies an application from which system logs are sent to the remote server. Only one facility can be assigned to a single server. If a second facility level is assigned, the first facility is overwritten. There are up to eight facilities can be assigned (Local 0 ~ Local 7).

System > Time Profile

The Time Profile page allows users to configure the time profile settings of the device.

Time Profile Se	ttings					😑 Safeguard
Time Profile						
Profile Name						
Time(HH MM)	Start Time 0	0 ▼ 00 ▼		End Time 00 🔻	00 🔻	
Weekdays	🗆 Sun 🔲 M	on 🗆 Tue 🗆 W	ed 🔲 Thu 🔲 Fri 🔲 Sat			
Date 📃	From Day 2	011 🔻 1 🔻	1 🔻	To Day 2011 🔻	1 • 1 •	
						Add
Total Entries:0						
Profile Name	Start Time	End Time	Weekdays	From Day	To Day	Delete

Figure 4.34 – System > Time Profile

Profile Name: Specifies the profile name.

Time(HH MM): Specifies the Start Time and End Time.

Weekdays: Specifies the work day.

Date: Select Date and specifies the From Day and To Day of the time profile.

Click Add to create a new time profile or click Delete to delete a time profile from the table.

System > Power Saving

The Power Saving mode feature reduces power consumption automatically when the RJ-45 port is link down or the connected devices are turned off.

By reducing power consumption, less heat is produced, resulting in extended product life and lower operating costs. By default, the Link Status Detection is disabled. Click **Apply** to make the change effective.



Figure 4.35 – System > Power Saving

Advanced Power Saving Settings:

Type: Specifies the Power Saving type to be LED Shut-off, Port Shut-off or System Hibernation.

LED Shut-off - The LED Shut-off gets high priority. If the user select LED Shut-off, the profile function will not take effect. It means the LED cannot be turned on after Time Profile time's up when the state is disabled. On the contrary, if the LED is enabled, the Time Profile function will work.

Port Shut-off - The Port Shut-off state has high priority (the priority rule is the same as LED.) Therefore, if the Port Shut-off sate is already disabled the Time Profile function will not take effect.

System Hibernation - In this mode, switches get most power-saving figures since main chipsets (both MAC and PHY) are disabled for all ports, and energy required to power the CPU is minimal.

State: Specifies the power saving state to be Enabled or Disabled.

Time Profile 1: Specifies the time profile or None.

Time Profile 2: Specifies the time profile or None.

Port: Specifies the ports to be configure of the Power Saving.

Click **Select All** configure all ports, or click **Clear** to uncheck all port. Then click **Apply** to implement changes made.

System > IEEE802.3az EEE Settings

The IEEE 802.3 EEE standard defines mechanisms and protocols intended to reduce the energy consumption of network links during periods of low utilization, by transitioning interfaces into a low-power state without interrupting the network connection. The transmitted and received sides should be IEEE802.3az EEE compliance. By default, the 802.3az EEE function is disabled of the switch. Users can enable this feature by individual port via the IEEE802.3az EEE setting page.

IEEE802.3az	EEE settings		😑 Safeguard
From Port	To Port 52 🔻	State Disabled ▼	Apply
IEEE802.3az EEE s	settings		
Port	State		×
1	Disabled		
2	Disabled		
3	Disabled		
4	Disabled		
5	Disabled		
6	Disabled		
7	Disabled		
8	Disabled		
9	Disabled		
10	Disabled		
11	Disabled		
12	Disabled		
13	Disabled		

Figure 4.36 – System > IEEE802.3az EEE Settings

From Port / To Port: A consecutive group of ports may be configured starting with the selected port.State: Enabled or Disabled the IEEE802.3az EEE for the specified ports. By default, all ports are disabled.Click Apply to implement changes made.

If the connection speed drops down from 1000M to 100M, or the first link up takes longer time, please follow below steps and check again:

- 1. Upgrade drivers of your Ethernet adapter or LAN controller for the host PC.
- 2. Disable EEE function on the switch port.

System > D-Link Discover Protocol Settings

For the D-Link Discovery Protocol (DDP) supported device, this page is an option for you to disable DDP or configure the DDP packet report timer.

D-Link Discover Pro	otocol Settings		😑 Safeguard
DDP Global Settings D-Link Discover Protocol St D-Link Discover Protocol Re		Enabled Disabled Never T	Apply
DDP Port Settings			
From Port 1	To Port 52 🔹 State	Enabled T	Apply
Port	State		
1	Enabled		
2	Enabled		
3	Enabled		
4	Enabled		
5	Enabled		
6	Enabled		
7	Enabled		
8	Enabled		
9	Enabled		
10	Enabled		
11	Enabled		
12	Enabled		

Figure 4.37 – System > D-Link Discover Protocol Settings

D-Link Discover Protocol State: Enable or disable the Discover Protocol state. The default value is enabled.

D-Link Discover Protocol Report Timer (Seconds): Configure the report timer of D-Link Discover Protocol in seconds. The values are 30, 60, 90, 120 or Never.

Click the **Apply** button to implement changes made.

DDP Port Setting:

From Port / To Port: Specifies the range of ports to be configured for D-Link Discover Protocol of the Switch. **State:** Specifies to enable or disable the D-Link Discover Protocol state for the specified ports.

Click **Apply** to implement changes made.

System > Firmware Information

The Firmware Information page displays the information of firmware.

irmware In	nformation		_	🨑 Safeguai
ID Version *1 7.10.00		Update Time N/A	From N/A	User Anonymous (factory)
	: Boot up firmware			
SSH)	: Firmware update through SSH			
Neb)	: Firmware update through Web			
SNMP)	: Firmware update through SNMP			
Telnet)	: Firmware update through Telnet			

Figure 4.38 – System > Firmware Information

System > Configuration Information

The Configuration Information page displays the information of configuration. The user can specify which configuration file to be viewed of the Switch.

Johngaraa	on Information			😑 Safe	guai
ID Size	(B)	Update Time	From	User	
*1 N/A 2 N/A		N/A N/A	N/A N/A	N/A N/A	
Please select t	ne boot up config of device.				
Apply	: Boot up config				
Apply		ugh SSH			
Apply *** (SSH)	: Boot up config				
Apply	: Boot up config : Config update thro	ugh Web			

Figure 4.39 – System > Configuration Information

VLAN > 802.1Q VLAN

A VLAN is a group of ports that can be anywhere in the network, but communicate as though they were in the same area.

VLANs can be easily organized to reflect department groups (such as R&D, Marketing), usage groups (such as e-mail), or multicast groups (multimedia applications such as video conferencing), and therefore help to simplify network management by allowing users to move devices to a new VLAN without having to change any physical connections.

The IEEE 802.1Q VLAN Configuration page provides powerful VID management functions. The original settings have the VID as 1, no default name, and all ports as "Untagged"

Rename: Click to rename the VLAN group.

Delete VID: Click to delete the VLAN group.

Add New VID: Click to create a new VID group, assigning ports from 01 to 28 as Untag, Tag, or Not Member. A port can be untagged in only one VID. To save the VID group, click Apply.

You may change the name accordingly to the desired groups, such as R&D, Marketing, email, etc.

302.1Q	VLAN Settings			😑 Safeguar
Asymmetr	ric VLAN [Example]	nabled		Apply
	tic VLAN entries: 1 um 256 entries.			Add
VID	VLAN Name	Untagged	Tagged	Delete
1	default	01-28		Delete

Figure 4.40 – Configuration > 802.1Q VLAN

Click Add to create a new VID group, entering the VID and VLAN name, assigning ports from 01 to 52 as Untag, Tag or Not Member. To save the VID group, click Apply.

/ID Setting	s																							0	Sa	fegi	Jar
VID							_																				
VLAN Name							=																				
Maximum 20) characters.						_																Back			Appl	у
Port	Select All	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Untagged	All	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	\odot	0	0	0	0	0	0	0	0	0	0
Tagged	All																										
Not member	All	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲
Port	Select All	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
Untagged	All	0	0	0	0	0	0	0	0	0	\odot	0	0	0	0	\odot	\odot	\odot	0	0	0	0	0	0	0	0	0
Tagged	All																										
Not member	All	۲	۰	•	•			•	•	•			•	•				•				۲			•		•

Figure 4.41 – Configuration > 802.1Q VLAN > Add VID

After click Apply, the 802.1Q VLAN Configuration Table will displayed with updates.

802.1Q	VLAN Settings			😑 Safeguar
Asymmet	ric VLAN [Example] O En	abled 💿 Disabled		Apply
	tic VLAN entries: 3 um 256 entries.			Add
VID	VLAN Name	Untagged	Tagged	Delete
1	default	01-48	49-52	Delete
2	vlan2		12-15 ,28 ,49-52	Delete
4094	ASV_4094		49-52	Delete

Figure 4.42 – Configuration > 802.1Q VLAN > Add VLAN

Click the VID number, the configuration of VLAN group which selected by user will displayed. Change the port assignment then click **Apply** to implement changes made.

/ID Setting	S	_	_	_	_													-						0	Saf	fegi	Jai
VID	1																										
VLAN Name	de	fault																Back	<		Арр	bly					
Port	Select All	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Untagged	All	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۰
Tagged	All																										
Not Member	All																										
Port	Select All	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
Untagged	All	۲	۲	۲	۰	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۲	۰	۲	۲	0			0
Tagged	All																							•	•	•	•
Not Member	All																										

Figure 4.43 - Configuration > 802.1Q VLAN > VID Assignments

VLAN > 802.1Q VLAN PVID

The 802.1Q VLAN PVID setting allows user to configure the PVID for each ports. Click **Apply** to implement changes made.

02.1Q VLAN	PVID S	ettings	_	_	_	_	_	_	_	_	0	Safegua
Port 01 PVID 1	02	03	04	05	06	07	08	09	10	11	12	13
Port 14 PVID 1	15	16	17	18	19	20	21	22	23	24	25 1	26 1
Port 27 PVID 1	28 1	29 1	30 1	31 1	32 1	33 1	34 1	35 1	36 1	37 1	38 1	39 1
Port 40 PVID 1	41	42	43 1	44	45 1	46 1	47	48 1	49 1	50 1	51 1	52 1

Figure 4.44 – Configuration > 802.1Q VLAN PVID

VLAN > Voice VLAN > Voice VLAN Global Settings

Voice VLAN is a feature that allows you to automatically place the voice traffic from IP phone to an assigned VLAN to enhance the VoIP service. With a higher priority and individual VLAN, the quality and the security of VoIP traffic are guaranteed. If a VoIP packet comes with a VLAN tag, the Voice VLAN function won't replace the original VLAN tag.

Voice VLAN Globa	al Settings						0	Safeguard
Voice VLAN	Enabled	Disabled						
VLAN ID 1	Ŧ		Aging Time (1~120)		1	hour		
Priority 5	Ŧ							Apply
Voice VLAN OUI Settings								
		ription	-	Telephony OUI	2.00			
Default OUI	300	M		00-E0-BB-00-00				
User defined OUI					()	XX-XX-XX-XX-XX)		
🤌 Maximum number of u	user defined OUI is 10	entries.						Add
ID	Descriptio	on	Telephony	OUI		OUI Mask		Delete
	Fi	miro / /5 V	TAN - Voico VL	N > Voice VI	AN Clobe	Sottings		

Figure 4.45 – VLAN > Voice VLAN > Voice VLAN Global Settings

Voice VLAN: Select to enable or disable Voice VLAN. The default is *Disabled.* After you enabled Voice VLAN, you can configure the **Voice VLAN Global Settings**.

VLAN ID: The ID of VLAN that you want to assign voice traffic to. You must first create a VLAN from the 802.1Q VLAN page before you can assign a dedicated Voice VLAN. The member port you configured in 802.1Q VLAN setting page will be the static member port of voice VLAN. To dynamically add ports into the voice VLAN, please enable the **Auto Detection** function

Priority: The 802.1p priority levels of the traffic in the Voice VLAN.

Aging Time (1-120): Enter a period of time (in hours) to remove a port from the voice VLAN if the port is an automatic VLAN member. When the last voice device stops sending traffic and the MAC address of this voice device is aged out, the voice VLAN aging timer will start. The port will be removed from the voice VLAN after the expiration of the voice VLAN aging timer. Selectable range is from 1 to 120 hours, and default is 1. Click **Apply** to implement changes made.

Voice VLAN OUI Settings: This allows the user to configure the user-defined voice traffic's OUI. An Organizationally Unique Identifier (OUI) is the first three bytes of the MAC address. This identifier uniquely identifies a vendor, manufacturer, or other organization.

There are some pre-defined OUIs and when the user configures personal OUI, these pre-defined OUIs must be avoided. Below are the pre-defined voice traffic's OUI:

OUI	Vendor	Mnemonic Name
00:E0:BB	3Com	3com
00:03:6B	Cisco	cisco
00:E0:75	Veritel	veritel
00:D0:1E	Pingtel	pingtel
00:01:E3	Siemens	siemens
00:60:B9	NEC/ Philips	nec&philips
00:0F:E2	Huawei-3COM	huawei&3com
00:09:6E	Avaya	avaya

Default OUI: Pre-defined OUI values, including brand names of 3COM, Cisco, Veritel, Pingtel, Siemens, NEC/Philips, Huawei3COM, and Avaya.

User defined OUI: You can manually create a Telephony OUI with a description. The maximum number of user defined OUIs is 10.

Select the OUI and press **Add** to the lower table to complete the Auto Voice VLAN setting.

Note: Voice VLAN has higher priority than any other features (including QoS). Therefore the voice traffic will be operated according to the Voice VLAN setting and not impacted by the QoS feature.

Note: It is recommended setting the highest priority for Voice VLAN to guarantee the quality of VoIP traffic.

VLAN > Voice VLAN > Voice VLAN Port Settings

The Voice VLAN Port Settings page allows users to automatically place the voice traffic from IP phone to an assigned VLAN to enhance the VoIP service. With a higher priority and individual VLAN, the quality and the security of VoIP traffic are guaranteed.

bice VLAN Port Set	tings			😑 Safegu
om Port To F	Port Auto Detection 52 ▼	Tagged / Untagged Untagged V		Refresh Apply
Port	Auto Detection	Tagged / Untagged	Current State	Status
01	Disabled	Untagged	None	Static
02	Disabled	Untagged	None	Static
03	Disabled	Untagged	None	Static
04	Disabled	Untagged	None	Static
05	Disabled	Untagged	None	Static
06	Disabled	Untagged	None	Static
07	Disabled	Untagged	None	Static
08	Disabled	Untagged	None	Static
09	Disabled	Untagged	None	Static
10	Disabled	Untagged	None	Static
11	Disabled	Untagged	None	Static
12	Disabled	Untagged	None	Static
13	Disabled	Untagged	None	Static
14	Disabled	Untagged	None	Static
15	Disabled	Untagged	None	Static
16	Disabled	Untagged	None	Static

Figure 4.46 – VLAN > Voice VLAN > Voice VLAN Port Settings

From Port / To Port: A consecutive group of ports may be configured starting with the selected port.

Auto Detection: Switch will add ports to the voice VLAN automatically if it detects the device OUI matches the Telephony OUI configured in Voice VLAN OUI Setting page. Use the drop-down menu to enable or disable the OUI auto detection function. The default is Disabled

Tagged / Untagged: Tagged or untagged the ports.

Click **Apply** to implement changes made and **Refresh** to refresh the voice vlan table.



Note: Voice VLAN has higher priority than any other features even QoS. Therefore the voice traffic will be operated according to Voice VLAN setting and not impacted by QoS feature.



Note: It is recommended setting the highest priority for Voice VLAN to guarantee the quality of VoIP traffic.

VLAN > Voice VLAN > Voice Device List

The Voice Device List page displays the information of Voice VLAN.

Voice Device	e List				😑 Safeguard
Port All	▼ Search				
ID	Port	MAC Address	Priority	Туре	Delete

Figure 4.47 – VLAN > Voice VLAN > Voice Device List

Select a port or all ports and click **Search** to display the Voice Device information in the table.

VLAN > Auto Surveillance VLAN > Auto Surveillance Properties

The Auto Surveillance Properties page allows user to configure and display the ports surveillance VLAN settings and information.

Auto Surveillance Properties		😑 Safeguard
Global Settings Auto Surveillance VLAN Surveillance VLAN ID Surveillance VLAN CoS Tagged Uplink/Downlink Port Aging Time (1-65535) Discover Port (554,1024-65535) Log State Note:Surveillance VLAN ID and Voice VLAN ID cannot be the same.	 Enabled Disabled 4094 5 Ex:(1,2,4-6) 720 554 Enabled Disabled 	Apply
ONVIF Global Status Surveillance Device Detected (OUI) IP-Camera Detected (ONVIF) NVR Detected (ONVIF)	0 0 0	

Figure 4.48 – VLAN > Auto Surveillance VLAN > Auto Surveillance Properties

Global Settings: To configure the related auto surveillance VLAN global settings.

Auto Surveillance VLAN: To enable or disable the auto surveillance VLAN state.

Surveillance VLAN ID: Specifies the surveillance VLAN ID. The range is from 2 to 4094.

Surveillance VLAN CoS: Specifies the priority of the surveillance VLAN. The range is from 0 to 7.

Tagged Uplink/Downlink Port: Specifies the port or ports to be tagged uplink port or downlink port for the Auto Surveillance VLAN.

Aging Time (1-65535): Specifies the aging time of surveillance VLAN. The range is from 1 to 65535 minutes. The default value is 720 minutes. The aging time is used to remove a port from surveillance VLAN if the port is an automatic surveillance VLAN member. When the last surveillance device stops sending traffic and the MAC address of this surveillance device is aged out, the surveillance VLAN aging timer will be started. The port will be removed from the surveillance VLAN after expiration of surveillance VLAN aging timer. If the surveillance traffic resumes during the aging time, the aging timer will be reset and stop.

Discover Port (554, 1024-65535): Specifies the TCP/UDP port number for surveillance VLAN. The range is either 554, or between 1024 and 65535. This is used to configure the TCP/UDP port number for RTSP stream snooping. ONVIF-capable IPC and ONVIF-capable NVR utilize WS-Discovery to find other devices. Once IPCs are discovered, the Switch can further discover NVRs by snooping RTSP, HTTP, and HTTPS packets between NVRs and IPCs. These packets cannot be snooped if the TCP/UDP port is not equal to the RTSP port number.

Log State: To enable or disable the log state of surveillance VLAN.

Click the **Apply** button to implement changes made.

VLAN > Auto Surveillance VLAN > MAC Settings and Surveillance Device

Similar as Voice VLAN, Auto Surveillance VLAN is a feature that allows you to automatically place the video traffic from D-Link IP cameras to an assigned VLAN to enhance the IP surveillance service. With a higher priority and individual VLAN, the quality and the security of surveillance traffic are guaranteed. The Auto Surveillance VLAN function will check the source MAC address / VLAN ID on the incoming packets. If it matches specified MAC address / VLAN ID, the packets will pass through switch with desired priority.

	Settings and Surveilland				😑 Safegua
or do	fined MAC Settings				
		e VLAN by user-defined configuration	n as helow		
auun	nore device(s) for Auto Surveillant	e vento y user-defined configuration	in as below		
mnor	ent Type Des	cription	(XX-XX-	XX-XX-XX-XX)	
		cipuon			
deo I	Management Server •		MAC V		Add
Maui	mum number of user-defined MAC	in F antrian			
ID	Component Type	Description	MAC Address	Mask	Delete
01	D-Link Surveillance Device	D-Link IP Surveillance Device	28-10-7B-00-00-00	FF-FF-FF-E0-00-00	Default
02	D-Link Surveillance Device	D-Link IP Surveillance Device	28-10-7B-20-00-00	FF-FF-FF-F0-00-00	Default
03	D-Link Surveillance Device	D-Link IP Surveillance Device	B0-C5-54-00-00-00	FF-FF-FF-80-00-00	Default
04	D-Link Surveillance Device	D-Link IP Surveillance Device	F0-7D-68-00-00-00	FF-FF-FF-F0-00-00	Default
to Su	rveillance VLAN Summary				Refresh
to Su	rveillance VLAN Summary	Component Type		Description	Refresh
to Su		Component Type None		Description None	Refresh
to Su	Port	None None		None None	Refresh
to Su	Port	None None None		None None None	Refresh
to Su	Port 1 1 2 3 4	None None None None		None None None None	Refresh
to Su	Port 1 1 2 3 4 5	None None None None None		None None None None None	Refresh
ito Su	Port 1 1 2 3 4	None None None None		None None None None	Refresh



User-defined MAC Settings:

Component Type: Auto Surveillance VLAN will automatically detect D-Link Surveillance Devices by default. There are another five surveillance components that could be configured to be auto-detected by the Auto Surveillance VLAN. These five components are *Video Management Server (VMS), VMS Client/Remote viewer, Video Encoder, Network Storage* and Other *IP Surveillance Devices*.

Description: Here to input the description for the component type.

MAC Address: User can manually create an MAC or OUI address for the surveillance component. The maximum number of user defined MAC address is 5.

Mask: Specifies the mask address for the MAC or OUI.

Click **Add** to create a new surveillance component and **Refresh** to refresh the Auto Surveillance VLAN summary table.

VLAN > Auto Surveillance VLAN > ONVIF IPC Information

The ONVIF IPC Information page displays the information on each IP camera connected to the switch. Including the port number, IP address, MAC address, throughput and other information such as port description and model name.

ONVIF IPC Informatio	n						😑 Safeguard
ONVIF IPC Information							
Total Entries Discovered: 0							
Ports IP Address	MAC Address	Model	Manufacturer	Traffic	Description	Throughput	
Note:System probes IP-Camer	a every 30s.						

Figure 4.50 – VLAN > Auto Surveillance VLAN > ONVIF IPC Information

VLAN > Auto Surveillance VLAN > ONVIF NVR Information

The ONVIF NVR Information page displays the information on each NVR connected to the switch. Including the port number, IP address, MAC address, IP-Camera number, throughput and description relating to the cameras connected to the NVR, such as the group name, total number of cameras and the port and IP address of each camera.

ONVIF NVR Information	😑 Safeguard
ONVIF NVR Information	
Total Entries Discovered: 0	
Ports IP Address MAC Address IP-Camera Number Throughput Group Description	

Figure 4.51 – VLAN > Auto Surveillance VLAN > ONVIF NVR Information

L2 Functions > Jumbo Frame

D-Link Gigabit Smart Managed Switches support jumbo frames (frames larger than the Ethernet frame size of 1536 bytes) of up to 10000 bytes (tagged). Default is disabled, Select **Enabled** then click **Apply** to turn on the jumbo frame support.

Jumbo Frame Se	ettings		🥚 Safeguard
Jumbo Frame	Enabled	Disabled	
🤌 Maximum Length is	10000 bytes.		Apply

Figure 4.52 – L2 Functions > Jumbo Frame

L2 Functions > Port Mirroring

Port Mirroring is a method of monitoring network traffic that forwards a copy of each incoming and/or outgoing packet from one port of the Switch to another port, where the packet can be studied. This enables network managers to better monitor network performances.

Port Mirroring Settings															feg	uar											
Port Mirroring										O	Enabl	ed	•	isab	led												
Target Port											01	Ŧ	-														
Source Port Sele	ction																									Арр	ly
Sniffer Mode	Select All	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
TX	All	0	0	0	\odot	0	\odot	0	\odot	\odot	0	0	\odot	\odot	\odot	0	0		0	0	0	\odot		0	\odot	0	0
RX	All																										
TX/RX	All																										
None	All	0	•	•	•	•	0	•	•	0	•	0	0	0	•	0	•	•	•	•	•	•	•	•	•	•	0
Sniffer Mode	Select All	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
ТХ	All	0	0	\odot	\odot	0	\odot	0	\odot	0	0	0	\odot	0	\odot	0	\odot	0	0		0	\circ			\odot	0	\circ
RX	All																										
TX/RX	All																										
None	All	•	0	•	•	0	0	0	0	0	•	•	0	•	•	0	0	0	0	0	•	0	0	0	0	0	0

Figure 4.53 – L2 Functions > Port Mirroring

Selection options for the Source Ports are as follows:

TX (transmit) mode: Duplicates the data transmitted from the source port and forwards it to the Target Port. Click "all" to include all ports into port mirroring.

RX (receive) mode: Duplicates the data that is received from the source port and forwards it to the Target Port. Click "all" to include all ports into port mirroring.

TX/RX (transmit and receive) mode: Duplicate both the data transmitted from and data sent to the source port, and forwards all the data to the assigned Target Port. Click "all" to include all ports into port mirroring. **None:** Turns off the mirroring of the port. Click "all" to remove all ports from mirroring.

L2 Functions > Loopback Detection

The Loopback Detection function is used to detect the loop created by a specific port while Spanning Tree Protocol (STP) is not enabled in the network, especially when the down links are hubs or unmanaged switches. The Switch will automatically shutdown the port and sends a log to the administrator. The Loopback Detection port will be unlocked when the Loopback Detection **Recover Time** times out. The Loopback Detection function can be implemented on a range of ports at the same time. You may enable or disable this function using the pull-down menu.

Loopback Detection Se	ettings	😑 Safeguard
Loopback Detection Mode Interval (1-32767) Recover Time (0 or 60-1000000)	Enabled Disabled Port-based VLAN List 2 sec 60 sec	Apply
From Port	To Port State	
01 🔻	28 V Disabled V	Refresh Apply
Port	State	Loop Status
01	Disabled	Normal
02	Disabled	Normal
03	Disabled	Normal
04	Disabled	Normal
05	Disabled	Normal
06	Disabled	Normal
07	Disabled	Normal
08	Disabled	Normal
09	Disabled	Normal
10	Disabled	Normal
11	Disabled	Normal
12	Disabled	Normal
13	Disabled	Normal
14	Disabled	Normal
15	Disabled	Normal
16	Disabled	Normal
17	Disabled	Normal
18	Disabled	Normal
19	Disabled	Normal
20	Disabled	Normal
21	Disabled	Normal
22	Disabled	Normal
23	Disabled	Normal
24	Disabled	Normal
25	Disabled	Normal
26	Disabled	Normal

Figure 4.54 – L2 Functions > Loopback Detection

Loopback Detection: Use the drop-down menu to enable or disable loopback detection. The default is *Disabled.*

Mode: Specifies Port-based or VLAN-based mode. If port-based mode is selected, the loop happening port will be shut down and affect all member VLANs. If VLAN-based mode is selected, only the member port in the loop happening VLAN will be shut down.

VID List: Specifies the VID.

Interval (1-32767): Set a Loop detection Interval between 1 and 32767 seconds. The default is 2 seconds.

Recover Time (0 or 60-1000000): Time allowed (in seconds) for recovery when a Loopback is detected. The Loop Detection Recover Time can be set at *0* seconds, or *60* to *1000000* seconds. Entering *0* will disable the Loop Detection Recover Time. The default is *60* seconds.

From Port: The beginning of a consecutive group of ports may be configured starting with the selected port.

To Port: The ending of a consecutive group of ports may be configured starting with the selected port.

State: Use the drop-down menu to toggle between Enabled and Disabled. Default is Disabled.

Click the **Apply** button to implement changes made or click Refresh to **refresh** the Loopback Detection table.

L2 Functions > MAC Address Table > Static MAC

This feature provides two distinct functions. The **MAC Address** Learning table allows turning off the function of learning MAC address automatically, if a port isn't specified as an uplink port (for example, connects to a DHCP Server or Gateway). By default, this feature is disabled.

																			Se	ect Al		Cle	ar		Арр	ly
Port	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Learning		1				v				1						1										1
Port	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
Learning		1	1	1		1	1	1	1			1	1			1			1		1	V	V			1
Add Static M	AC A	ddres	s	ddres					VIE	0 1		T													Ad	

Figure 4.55 – L2 Functions > MAC Address Table > Static Mac Address

The Static MAC Address Lists table displays the static MAC addresses connected, as well as the VID.

Add Static MAC Address: you need to select the assigned Port number. Enter both the Mac Address and VID, and then Click Add. Click Delete to remove one entry or click Delete all to clear the list.

By disabling MAC Address Auto Learning capability and specifying the static MAC addresses, the network is protected from potential threats like hackers, because traffic from illegal MAC addresses will not be forwarded by the Switch.

L2 Functions > MAC Address Table > Dynamic Forwarding Table

For each port, this table displays the MAC address learned by the Switch. To add a MAC address to the Static Mac Address List, click the **Add** checkbox, and then click **Apply** associated with the identified address.

Dynamic F	Forwarding Ta	ble			😑 Safeguard
Port All	Search Search entries used/maxim	num:0/256		Select All	Clear Apply
ID	Port	MAC Address	VID	Туре	Add to Static MAC
1	5	3C-97-0E-E5-76-4D	1	Dynamic	
	5	30-31-02-23-10-40		Dynamic	_

Figure 4.56 – L2 Functions > MAC Address Table > Dynamic Forwarding Table

L2 Functions > Spanning Tree > STP Global Settings

The Switch implements three versions of the Spanning Tree Protocol, the Rapid Spanning Tree Protocol (RSTP) as defined by the IEEE 802.1w specification and a version compatible with the IEEE 802.1D STP as defined by the IEEE802.1 specification. RSTP can operate with legacy equipment implementing IEEE 802.1D, however the advantages of using RSTP will be lost.

The IEEE 802.1w Rapid Spanning Tree Protocol (RSTP) evolved from the 802.1D STP standard. RSTP was developed in order to overcome some limitations of STP that impede the function of some recent switching innovations. The basic function and much of the terminology is the same as STP. Most of the settings configured for STP are also used for RSTP. This section introduces some new Spanning Tree concepts and illustrates the main differences between the two protocols.

By default, Rapid Spanning Tree is disabled. If enabled, the Switch will listen for BPDU packets and its accompanying Hello packet. BPDU packets are sent even if a BPDU packet was not received. Therefore, each link between bridges is sensitive to the status of the link. Ultimately this difference results in faster detection of failed links, and thus faster topology adjustment.

By default Multiple Spanning Tree is enabled. It will tag BPDU packets to receiving devices and distinguish spanning tree instances, spanning tree regions and the VLANs associated with them.

After enabling STP, setting the STP Global Setting includes the following options:

STP Global Settings				😑 Safeguard
Spanning Tree Protocol STP Version Bridge Priority Tx Hold Count (1-10)	C Enabled ● Disabled RSTP ▼ 32768 ▼ 6	Maximum Age (6-40) Hello Time (1-10) Forward Delay (4-30)	20 2 15	sec sec sec Refresh Apply
Root Bridge Information Root Bridge Root Cost Root Maximum Age Root Forward Delay Root Port	00:00:00:00:00:00:00:00 0 20 15 0			

Figure 4.57 – L2 Functions > Spanning Tree > STP Bridge Global Settings

STP State: Specifies the Spanning Tree Protocol to be Enabled or Disabled.

STP Version: You can choose RSTP or STP Compatible. The default setting is STP.

Bridge Priority: This value between 0 and 61410 specifies the priority for forwarding packets: the lower the value, the higher the priority. The default is 32768.

TX Hold Count (1-10): Used to set the maximum number of Hello packets transmitted per interval. The count can be specified from *1* to *10*. The default is *6*.

Maximum Age (6-40 sec): This value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that the Switch has the lowest Bridge Identifier, it will become the Root Bridge. A time interval may be chosen between 6 and 40 seconds. The default value is 20. (Max Age has to have a value bigger than Hello Time)

Hello Time (1-10 sec): The user may set the time interval between transmissions of configuration messages by the root device, thus stating that the Switch is still functioning. The default is 2 seconds.

Forward Delay (4-30 sec): This sets the maximum amount of time that the root device will wait before changing states. The default is 15 seconds.

Root Bridge: Displays the MAC address of the Root Bridge.

Root Cost: Displays the cost of the Root Bridge.

Root Maximum Age: Displays the Maximum Age of the Root Bridge.

Root Forward Delay: Displays the Forward Delay of the Root Bridge.

Root port: Displays the root port.

Click the **Apply** button to implement changes made.

Click **Refresh** to renew the page.

L2 Functions > Spanning Tree > STP Port Settings

STP can be set up on a port per port basis. In addition to setting Spanning Tree parameters for use on the switch level, the Switch allows for the configuration of the groups of ports, each port-group of which will have its own spanning tree, and will require some of its own configuration settings.

An STP Group spanning tree works in the same way as the switch-level spanning tree, but the root bridge concept is replaced with a root port concept. A root port is a port of the group that is elected based on port priority and port cost, to be the connection to the network for the group. Redundant links will be blocked, just as redundant links are blocked on the switch level.

The STP on the switch level blocks redundant links between switches (and similar network devices). The port level STP will block redundant links within an STP Group.

It is advisable to define an STP Group to correspond to a VLAN group of ports.

STP F	Port Settings							😑 Safegu	ard
From P	ort	01	▼ To Port	28	▼]	State	Enabled	•	
Externa	Cont								
(0-2000 0=Auto	00000;	2000000	Migrate	Disabled	•	Edge	Auto	•	
Priority		128	P2P	Auto	•	Restricted Role	False	•	
			121	Auto	·)	Nestreted Note	1 dise	•	
Restrict	ed TCN	False	•						
							Refresh	Annha	
							Refrest	n Apply	
Por	State	Priority	External Cost	Edge	P2P	Restricted Role	Restricted TCN	Port Status	A
01	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
02	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
03	Enable	128	AUTO/20000	True	Auto	False	False	Disabled	-
04	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
05	Enable	128	AUTO/200000000	True	Auto	False	False	Disabled	-
06	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
07	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
08	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
09	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
10	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
11	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	-
12	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	1
13	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
14	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
15	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
16	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
17	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
18	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
19	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
20	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
21	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	
22	Enable	128	AUTO/20000000	True	Auto	False	False	Disabled	

Figure 4.58 – L2 Functions > Spanning Tree > STP Port Settings

From Port/To Port: A consecutive group of ports may be configured starting with the selected port.

State: Use the drop-down menu to enable or disable STP by per-port based. It will be selectable after the global STP is enabled.

External Cost: This defines a metric that indicates the relative cost of forwarding packetsto the specified port list. Port cost can be set automatically or as a metric value. The default value is *0* (auto).

0 (auto) - Setting 0 for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000.

Value 1-200000000 - Define a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets.

Migrate: Setting this parameter as Yes will set the ports to send out BPDU packets to other bridges, requesting information on their STP setting. If the Switch is configured for RSTP, the port will be capable to migrate from 802.1d STP to 802.1w RSTP. Migration should be set as yes on ports connected to network stations or segments that are capable of being upgraded to 802.1w RSTP on all or some portion of the segment.

Edge: Selecting the *True* parameter designates the port as an edge port. Edge ports cannot create loops, however an edge port can lose edge port status if a topology change creates a potential for a loop. An edge port normally should not receive BPDU packets. If a BPDU packet is received, it automatically loses edge port status. Selecting the *False* parameter indicates that the port does not have edge port status. Selecting the *Auto* parameter indicates that the port status or not have edge port status automatically.

Priority: Specifies the priority of each port. Selectable range is from 0 to 240, and the default setting is 128. The lower the number, the greater the probability the port will be chosen as a root port.

P2P: Choosing the *True* parameter indicates a point-to-point (P2P) shared link. P2P ports are similar to edge ports, however they are restricted in that a P2P port must operate in full-duplex.

Like edge ports, P2P ports transition to a forwarding state rapidly thus benefiting from RSTP. A p2p value of *false* indicates that the port cannot have p2p status. *Auto* allows the port to have p2p status whenever possible and operate as if the p2p status were true. If the port cannot maintain this status, (for example if the port is forced to half-duplex operation) the p2p status changes to operate as if the p2p value were *False*. The default setting for this parameter is *Auto*.

Restricted Role: Toggle between *True* and *False* to set the restricted role state of the packet. If set to *True*, the port will never be selected to be the Root port. The default value is *False*.

Restricted TCN: Toggle between *True* and *False* to set the restricted TCN of the packet. Topology Change Notification (TCN) is a BPDU that a bridge sends out to its root port to signal a topology change. If set to *True*, it stops the port from propagating received TCN and to other ports. The default value is *False*.

Click the **Apply** button to implement changes made. Click **Refresh** to renew the page.

L2 Functions > Link Aggregation > Port Trunking

The Trunking function enables the combining of two or more ports together to increase bandwidth. Up to eight Trunk groups may be created, and each group consists up to eight ports. Select the ports to be grouped together, and then click **Apply** to activate the selected Trunking groups. Two types of link aggregation can be selected:

Static - Static link aggregation.

LACP - LACP (Link Aggregation Control Protocol) is enabled on the device. LACP allows for the automatic detection of links in a Port Trunking Group.

Disable - Remove all members in this trunk group.

Port Tr	runkir	ng																					0) Sa	afeg	uard
Link Agg	regatio	n					⊖ En	abled	۲	Disab	led														Арр	ly
Link Ag	gregati		tings																							
Group		01		•					Typ	oe 🛛		LACE		•											Арр	ly
Port	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Port	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
Maxir		oorts ir	static	group	and 8	3 ports	s in LA	CP gr	oup.																	
Irunking	Jiist																									
Group			Ty	ре			F	orts																D	elete	

Figure 4.59 – L2 Functions > Link Aggregation > Port Trunking



NOTE: Each combined trunk port must be connected to devices within the same VLAN group.

L2 Functions > Link Aggregation > LACP Port Settings

The LACP Port Settings is used to create port trunking groups on the Switch. The user may set which ports will be active and passive in processing and sending LACP control frames.

Port Activity Timeout 01 Active Long (90 sec) 02 Active Long (90 sec) 03 Active Long (90 sec) 04 Active Long (90 sec) 05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	CP Port	Settings	 		😑 Safegua
01 Active Long (90 sec) 02 Active Long (90 sec) 03 Active Long (90 sec) 04 Active Long (90 sec) 05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)		_			Apply
02 Active Long (90 sec) 03 Active Long (90 sec) 04 Active Long (90 sec) 05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	Port	Activity		Timeout	
03 Active Long (90 sec) 04 Active Long (90 sec) 05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)			 		
04 Active Long (90 sec) 05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)		Active			
05 Active Long (90 sec) 06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	03	Active		Long (90 sec)	
06 Active Long (90 sec) 07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	04	Active		Long (90 sec)	
07 Active Long (90 sec) 08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	05	Active		Long (90 sec)	
08 Active Long (90 sec) 09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	06	Active		Long (90 sec)	
09 Active Long (90 sec) 10 Active Long (90 sec) 11 Active Long (90 sec)	07	Active		Long (90 sec)	
10 Active Long (90 sec) 11 Active Long (90 sec)	08	Active		Long (90 sec)	
10 Active Long (90 sec) 11 Active Long (90 sec)	09	Active		Long (90 sec)	
11 Active Long (90 sec)	10	Active			
	11	Active			
	12	Active		Long (90 sec)	

Figure 4.60 – L2 Functions > Link Aggregation > LACP Port Settings

From Port: The beginning of a consecutive group of ports may be configured starting with the selected port.

To Port: The ending of a consecutive group of ports may be configured starting with the selected port.

Activity: There are two different roles of LACP ports:

Active - Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs require. In order to utilize the ability to change an aggregated port group, that is, to add or subtract ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP.

Passive - LACP ports that are designated as passive cannot initially send LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, one end of the connection must have "active" LACP ports.

Timeout: Specifies the administrative LACP timeout. The possible field values are:

Short (3 Sec) - Defines the LACP timeout as 3 seconds.

Long (90 Sec) - Defines the LACP timeout as 90 seconds. This is the default value.

Click the **Apply** button to implement changes made.

L2 Functions > Multicast > IGMP Snooping

With Internet Group Management Protocol (IGMP) snooping, the Smart Managed Switch can make intelligent multicast forwarding decisions by examining the contents of each frame's Layer 2 MAC header. IGMP snooping can help reduce cluttered traffic on the LAN. With IGMP snooping enabled globally, the Smart Managed Switch will forward multicast traffic only to connections that have group members attached.

The default IGMP Snooping version is v3, which works compatible with IGMP versions v1 and v2.

The DGS-1210 series support IGMP v1/v2/v3 awareness. And the IGMP v3 awareness means that we do support IGMP v3 snooping, in other words, switch can read/understand the IGMP control packet which is version3. The Switch still can based on its report/leave packet to do the correct behavior. But from the RFC point of view, full IGMP v3 means that it should support source filtering and it's not possible to support on the L2 switch.

The settings of IGMP snooping is set by each VLAN individually.

IGMP Sno	oping Configur	ation				😑 Safeguard
IGMP Snooping Host Timeout (Robustness Va Query Interval	130-153025) riable (2-255) (60-600) ier state is enabled, th	e Host Timeout is calcu able * Query Interval +		led Repo Router Timeout (60-60 Last Member Query Int Max Response Time (1	terval (1-25)	125 sec 1 sec 10 sec Apply
IGMP Snoopin	g VLAN Settings					
VLAN ID	VLAN Name	State	Querier State	Fast Leave	Router Ports	Multicast Entries
1	default	Enabled	Disabled	Disabled		View
					Page 01 🔻	Back Next
					rayo or .	Duen

Figure 4.61 – L2 Functions > Multicast > IGMP Snooping

By default, IGMP is disabled. If enabled, the IGMP Global Settings will need to be entered:

Host Timeout (130-153025 sec): This is the interval after which a learned host port entry will be purged. For each host port learned, a 'Port Purge Timer' runs for 'Host Port Purge Interval'. This timer will be restarted whenever a report message from host is received over that port. If no report messages are received for 'Host Port Purge Interval' time, the learned host entry will be purged from the multicast group. The default value is 260 seconds.

Robustness Variable (2-255 sec): The Robustness Variable allows adjustment for the expected packet loss on a subnet. If a subnet is expected to be lossy, the Robustness Variable may need to be increased. The Robustness Variable cannot be set to zero, and it SHOULD NOT be. Default is 2 seconds.

Query Interval (60-600 sec): The Query Interval is the interval between General Queries sent. By adjusting the Query Interval, the number of IGMP messages can be increased or decreased; larger values will cause IGMP Queries to be sent less often. Default value is 125 seconds.

Router Timeout (60-600 sec): This is the interval after which a learned router port entry will be purged. For each router port learned, a 'Router Port Purge Timer' runs for 'Router Port Purge Interval'. This timer will be restarted whenever a Query control message is received over that port. If there are no Query control messages received for 'Router Port Purge Interval' time, the learned router port entry will be purged. Default is 260 seconds.

Last Member Query Interval (1-25 sec): The Last Member Query Interval is the Max Response Time inserted into Group-Specific Queries sent in response to Leave Group messages, and is also the amount of time between Group-Specific Query messages. This value may be adjusted to modify the "leave latency" of the network. A reduced value results in reduced time to detect the loss of the last member of a group. Default is 1 second.

Max Response Time (10-25 sec): The Max Response Time specifies the maximum allowed time before sending a responding report message. Adjusting this setting effects the "leave latency", or the time between the moment the last host leaves a group and when the multicast server is notified that there are no more members. It also allows adjustments for controlling the frequency of IGMP traffic on a subnet. Default is 10 seconds.

To enable IGMP snooping for a given VLAN, select enable and click on the **Apply** button. Then press the **VLAN ID** number, and select the ports to be assigned as router ports for IGMP snooping for the VLAN, and press **Apply** for changes to take effect. A router port configured manually is a **Static Router Port**, and a **Dynamic Router Port** is dynamically configured by the Switch when query control message is received.

IGMP Snooping VLAN Settings		😑 Safeguard
VLAN ID VLAN Name State	1 default Enabled ▼	
Querier State	Disabled v	
Fast Leave	Disabled v	Apply
Static Router Ports		
01 02 03 04 05 06 07 0	08 09 10 11 12 13 14 15 16 17 18 19 20	
27 28 29 30 31 32 33 3	84 35 36 37 38 39 40 41 42 43 44 45 46	6 47 48 49 50 51 52
Dynamic Router Ports		
01 02 03 04 05 06 07 0)8 09 10 11 12 13 14 15 16 17 18 19 20) 21 22 23 24 25 26
27 28 29 30 31 32 33 3	14 35 36 37 38 39 40 41 42 43 44 45 46	6 47 48 49 50 51 52
		Back Apply

Figure 4.62 – L2 Functions > Multicast > IGMP Snooping VLAN Settings

State: Specifies the State to be enabled or disabled.

Querier State: D-Link Smart Switch is able to send out the IGMP Queries to check the status of multicast clients. Default is disabled.

Fast Leave: Specifies the Fast Leave feature to be enabled or disabled.

To view the Multicast Entry Table for a given VLAN, press the **View** button.

					Back	Delete All
Group ID	VLAN ID	VLAN Name	Multicast Group	Multicast MAC address	Member Port	Delete
001	1	default	239.255.255.250	01-00-5E-7F-FF-FA	01	Delete

Figure 4.63 – L2 Functions > Multicast > IGMP Multicast Entry Table

Click **Delete** to remove a specified entry or click **Delete All** to remove all entries.

L2 Functions > Multicast > MLD Snooping

Multicast Listener Discovery (MLD) Snooping is an IPv6 function used similarly to IGMP snooping in IPv4. It is used to discover ports on a VLAN that are requesting multicast data. Instead of flooding all ports on a selected VLAN with multicast traffic, MLD snooping will only forward multicast data to ports that wish to receive this data through the use of queries and reports produced by the requesting ports and the source of the multicast traffic.

MLD snooping is accomplished through the examination of the layer 3 part of an MLD control packet transferred between end nodes and a MLD router. When the Switch discovers that this route is requesting multicast traffic, it adds the port directly attached to it into the correct IPv6 multicast table, and begins the process of forwarding multicast traffic to that port. This entry in the multicast routing table records the port, the VLAN ID, and the associated multicast IPv6 multicast group address, and then considers this port to be an active listening port. The active listening ports are the only ones to receive multicast group data.

MLD Snoo	oping Configur	ation				😑 Safeguard
MLD Snooping Host Timeout (Robustness Va Query Interval	130-153025) vriable (2-255) (60-600) rier state is enabled, t		Enabled Disa 260 sec 2 125 sec iculated as the formula : + Max Response Time)	Ibled Free Former Forme	y Interval (1-25)	125 sec 1 sec 10 sec Apply
MLD Snooping	g VLAN Settings VLAN Name	State	Querier State	Fast Leave	Router Ports	Multicast Entries
1	default	Enabled	Disabled	Disabled	Nouler Forts	View
					Page 01 ▼	Back Next

Figure 4.64 – L2 Functions > Multicast > MLD Snooping

MLD Global Settings:

MLD Snooping: Enable or disable the MLD Snooping.

Host Timeout (130-153025 sec): Specifies the time interval in seconds after which a port is removed from a Multicast Group. Ports are removed if a Multicast group MLD report was not received from a Multicast port within the defined *Host Timeout* period. The possible field range is 130 - 153025 seconds. The default timeout is 260 seconds.

Router Timeout (60-600): Specifies the time interval in seconds the Multicast router waits to receive a message before it times out. The possible field range is 60 - 600 seconds. The default timeout is 125 seconds.

Robustness Variable (2-255): The Robustness Variable allows adjustment for the expected packet loss on a subnet. If a subnet is expected to be lossy, the Robustness Variable may be increased. The Robustness Variable cannot be set to zero, and SHOULD NOT be one. Default is 2 seconds. Last Member **Query Interval (1-25 sec):** The Last Member Query Interval is the Max Response Time inserted into Group-Specific Queries sent in response to Leave Group messages, and is also the amount of time between Group-Specific Query messages. This value may be adjusted to modify the "leave latency" of network. A reduced value results in reduced time to detect the loss of the last member of a group. The default value is 1 second.

Query Interval (60-600 sec): The Query Interval is the interval between General Queries sent. By adjusting the Query Interval, the number of MLD messages can increase or decrease; larger values cause MLD Queries to be sent less often. Default is 125 seconds.

Max Response Time (10-25 sec): Specifies the time interval in seconds after which a port is removed from the Multicast membership group. Ports are removed from the Multicast membership when the port sends a Done Message, indicating the port requests to leave the Multicast group. The field range is 10-25 seconds. The default timeout is 10 seconds.

Click the **Apply** button to implement changes made.

MLD Snooping VLAN Settings List:

Click the number of VLAN ID to modify the settings:

/ILD Sr	noopii	ng V	LAN	Sett	ings																	0 5	Gafe	guar
VLAN ID							1																	
VLAN Nan	ne					(default																	
State							Enabl	ed 🔻	'															
Querier St	ate						Disab	led 🔻	'															
Fast Leave	е						Disab	led 🔻	- -													[A	oply
Static Rou	uter Po	rts																						
01 02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
27 28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
Dynamic	Router	Ports																						
01 02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
27 28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
																					Back		Ap	ply

Figure 4.65 – L2 Functions > Multicast > Multicast Forwarding

State: Specifies the state of MLD Snooping VLAN to be enabled or disabled.

Querier State: Specifies the querier state to be enabled or disabled.

Fast Leave: Specifies the fast leave feature to be enabled or disabled.

Click Apply to implement changes made.

Static Router Ports: Selects the ports to be static router ports and assigned for MLD snooping for the VLAN. **Dynamic Router Ports:** Select the ports to be dynamic router ports and assigned for MLD snooping for the VLAN.

Click the **Apply** button to implement changes made.

L2 Functions > Multicast > Multicast Forwarding

The Multicast Forwarding page displays all of the entries made into the Switch's static multicast forwarding table. To implement the Multicast Forwarding Settings, input **VID**, **Multicast MAC Address** and port settings, then click **Add**.

																							Add	
01 ()2 (03 04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
	0 (0 0	0	0	0	0	0	0	\odot	0	\odot	0	\circ	0	0	\circ	\odot	\odot	\mathbf{O}	0	•	0	\odot	0
•	•	• •	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
27	28 2	29 30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
•	•	• •	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	27 2	27 28 2	27 28 29 30 0 0 0	27 28 29 30 31	27 28 29 30 31 32 0 0 0 0 0 0	27 28 29 30 31 32 33 • • • • • • • •	27 28 29 30 31 32 33 34 • • • • • • • • •	27 28 29 30 31 32 33 34 35 • • • • • • • • • •	27 28 29 30 31 32 33 34 35 36 • <td< td=""><td>27 28 29 30 31 32 33 34 35 36 37 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 •</td></td<> <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 •<td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 •<!--</td--><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 •<</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 • <td< td=""></td<></td></td></td>	27 28 29 30 31 32 33 34 35 36 37 •	27 28 29 30 31 32 33 34 35 36 37 38 •	27 28 29 30 31 32 33 34 35 36 37 38 39 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 • <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 •<!--</td--><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 •<</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 •</td><td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 • <td< td=""></td<></td></td>	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 • </td <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 •<</td> <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 •</td> <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 •</td> <td>27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 • <td< td=""></td<></td>	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 •<	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 •	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 • <td< td=""></td<>

Figure 4.66 – L2 Functions > Multicast > Multicast Forwarding

VID: The VLAN ID of the VLAN to which the corresponding MAC address belongs.

Multicast MAC Address: The MAC address of the static source of multicast packets. This must be a multicast MAC address.

Port Settings: Allows the selection of ports that will be members of the static multicast group and ports either that are forbidden from joining dynamically, or that can join the multicast group dynamically, using GMRP.

Member - The port is a static member of the multicast group.

None - No restrictions on the port dynamically joining the multicast group. When **None** is chosen, the port will not be a member of the Static Multicast Group.

L2 Functions > Multicast > Multicast Filtering Mode

The **Multicast Filtering Mode** function allows users to select the filtering mode for IGMP group per VLAN basis.

Multicast Filtering M	ode		😑 Safeguard
From Port To P	ort Filtering Mode 52 Forward Unregistered Groups	▼ Apply	
	Multicast Filtering Mode Table		
Forwarding List	1-52		
Filtering List			

Figure 4.67 – L2 Functions > Multicast > Multicast Filtering Mode

VLAN ID: Specifies the VLAN ID.

Filtering Mode:

Forward Unregistered Groups: The multicast stream will be forwarded based on the register table in registered group, but it will be flooded to all ports of the VLAN in unregistered group.

Filter Unregistered Groups: The registered group will be forwarded based on the register table and the unregister group will be filtered.

Click the Apply button to implement changes made.

L2 Functions > SNTP > Time Settings

SNTP or Simple Network Time Protocol is used by the Switch to synchronize the clock of the computer. The SNTP settings folders contain two windows: Time Settings and TimeZone Settings. Users can configure the time settings for the switch, and the following parameters can be set or are displayed in the Time Settings page.

Time Settings		😑 Safeguard
Clock Source	Local O SNTP	
Current Time	01/01/2017 01:26:16	
SNTP Server Settings		
SNTP First Server	IPv40.0.0.0	
	O IPv6	
SNTP Second Server	IPv40.0.00	
SNTP Poll Interval (30-99999)	30 sec	
Manually Time Settings		
Date (DD/MM/YYYY)	01/01/2017	
Time (HH:MM:SS)	01:26:16	
Sync To PC		
Date (DD/MM/YYYY)	14/03/2018	
Time (HH:MM:SS)	16:24:17	Apply

Figure 4.68 – L2 Functions > SNTP > Time Settings

Clock Source: Specifies the clock source by which the system time is set. The possible options are:

Local - Indicates that the system time is set locally by the device.

SNTP - Indicates that the system time is retrieved from a SNTP server.

Current Time: Displays the current date and time for the switch.

If choosing **SNTP** for the clock source, then the following parameters will be available:

SNTP First Server: Select IPv4 or IPv6 and specify the IP address of the primary SNTP server from which the system time is retrieved.

SNTP Second Server: Select IPv4 or IPv6 and specify the IP address of the secondary SNTP server from which the system time is retrieved.

SNTP Poll Interval in Seconds (30-99999): Defines the interval (in seconds) at which the SNTP server is polled for Unicast information. The Poll Interval default is 30 seconds.

Click **Apply** to implement changes made.

When selecting **Local** for the clock source, users can select from one of two options:

Manually set current time: Users input the system time manually.

Set time from PC: The system time will be synchronized from the local computer.

L2 Functions > SNTP > TimeZone Settings

The TimeZone Setting Page is used to configure time zones and Daylight Savings time settings for SNTP.

TimeZone Settings		😑 Safeguard
Daylight Saving Time	Enabled Isabled	
Daylight Saving Time Offset	60 v min	
Time Zone Offset: GMT +/-HH:MM	+ • 00 • 00 •	
Daylight Saving Time Settings		
From: Month / Day	Jan 🔻 01 💌	
From: HH / MM	00 v 00	
To: Month / Day	Jan 🔻 01 💌	
To: HH / MM	v 00 v	
		Apply

Figure 4.69 – L2 Functions > SNTP > TimeZone Settings

Daylight Saving Time State: Enable or disable the DST Settings.

Daylight Saving Time Offset: Use this drop-down menu to specify the amount of time that will constitute your local DST offset - *30*, *60*, *90*, or *120* minutes.

Time Zone Offset GMT +/- HH:MM: Use these drop-down menus to specify your local time zone's offset from Greenwich Mean Time (GMT.)

Daylight Saving Time Settings:

From: Month / Day: Enter the month DST and date DST will start on, each year.

From: HH:MM: Enter the time of day that DST will start on, each year.

To: Month / Day: Enter the month DST and date DST will end on, each year.

To: HH:MM: Enter the time of day that DST will end on, each year.

Click the **Apply** button to implement changes made.

L2 Functions > LLDP > LLDP Global Settings

LLDP (Link Layer Discovery Protocol) provides IEEE 802.1AB standards-based method for switches to advertise themselves to neighbor devices, as well as to learn about neighbor LLDP devices. SNMP utilities can learn the network topology by obtaining the MIB information in each LLDP device. The LLDP function is enabled by default.

LLDP Global Settings						😑 Safeguard
LLDP Message TX Hold Multipier (2 - 10) Message TX Interval (5 - 32768) LLDP Reinit Delay (1 - 10) LLDP TX Delay (1 - 8192)	C Enabled	Disabled	4 30 2 2] sec sec	Apply
LLDP System Information						
Chassis ID Subtype				macAddre	ess	
Chassis ID				00-01-02-	03-04-05	
System Name						
System Description				DGS-121	D-24P 7.10.008	

Figure 4.70 – L2 Functions > LLDP > LLDP Global Settings

LLDP: When this function is *Enabled*, the switch can start to transmit, receive and process the LLDP packets. For the advertisement of LLDP packets, the switch announces the information to its neighbor through ports. For the receiving of LLDP packets, the switch will learn the information from the LLDP packets advertised from the neighbor in the neighbor table. Click **Apply** to make the change effective.

Message TX Hold Multiplier (2-10): This parameter is a multiplier that determines the actual TTL value used in an LLDPDU. The default value is **4**.

Message TX Interval (5-32768): This parameter indicates the interval at which LLDP frames are transmitted on behalf of this LLDP agent. The default value is **30** seconds.

LLDP Relnit Delay (1-10): This parameter indicates the amount of delay from the time adminStatus becomes "disabled" until re-initialization is attempted. The default value is **2** seconds.

LLDP TX Delay (1-8192): This parameter indicates the delay between successive LLDP frame transmissions initiated by value or status changes in the LLDP local systems MIB. The value for txDelay is set by the following range formula: 1 < txDelay < (0.25 °— msgTxInterval). The default value is **2** seconds.

L2 Functions > LLDP > LLDP-MED Settings

LLDP-MED (Link Layer Discovery Protocol-Media Endpoint Discovery) is an enhancement of LLDP. It improves the LLDP operation between endpoint devices such as IP phones and APs. LLDP-MED supports features such as Auto-discovery of LAN policies and device location discovery.

This page allows user to configure the **Power PSE TLV** (Type-length-value) state of 802.3at ports. Select **From Port/ To Port** and **Enable / Disable** and then click **Apply** to turn on/off the **Power PSE TLV** transmission.

LLDP MED Settings			😑 Safeguard
LLDP-MED Extended PSE TLV S From Port	Setting To Port 24	Extended PSE TLV Disabled	Refresh Apply
Port	1	Extended PSE TLV	
Folt			
1		Disabled	
2		Disabled	
3		Disabled	
4		Disabled	
5		Disabled	
6		Disabled Disabled	
8		Disabled	
9		Disabled	
10		Disabled	
11		Disabled	
12		Disabled	
13		Disabled	
14		Disabled	
15		Disabled	
16		Disabled	
17		Disabled	
18		Disabled	
19		Disabled	
20		Disabled	
21		Disabled	
22	1	Disabled	
23		Disabled	
24		Disabled	

Figure 4.71 – L2 Functions > LLDP > LLDP–MED Settings

L2 Functions > LLDP > LLDP Port Settings

The Basic LLDP Port Settings page displays LLDP port information and contains parameters for configuring LLDP port settings.

sic LLD	P Port Settings					😑 Safegua
om Port 1 🔹 🔻	To Port 52 ▼		dmin Status Port Des TX_Only ▼ Disable	<u> </u>	Disabled •	n System Capabilities Disabled T Refresh Apply
Port	Notification State	Admin Status	Port Description	System Name	System Description	System Capabilities
1	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
2	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
3	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
4	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
5	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
6	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
7	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
8	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
9	Disabled	TX_and_RX	Disabled	Disabled	Disabled	Disabled
	Disabled	TX and RX	Disabled	Disabled	Disabled	Disabled
10	Diodolog					

Figure 4.72 – L2 Functions > LLDP > LLDP Port Settings

From Port/ To Port: A consecutive group of ports may be configured starting with the selected port. **Notification State:** Specifies whether notification is sent when an LLDP topology change occurs on the port. The possible field values are:

Enabled – Enables LLDP notification on the port.

Disabled – Disables LLDP notification on the port. This is the default value.

Admin Status: Specifies the LLDP transmission mode on the port. The possible field values are:

TX_Only – Enables transmitting LLDP packets only.

RX_Only – Enables receiving LLDP packets only.

TX_and_RX – Enables transmitting and receiving LLDP packets. This is the default.

Disabled – Disables LLDP on the port.

Port Description: Specifies whether the Port Description TLV is enabled on the port. The possible field values are:

Enabled – Enables the Port Description TLV on the port.

Disabled – Disables the Port Description TLV on the port.

System Name: Specifies whether the System Name TLV is enabled on the port. The possible field values are:

Enabled – Enables the System Name TLV on the port.

Disabled – Disables the System Name TLV on the port.

System Description: Specifies whether the System Description TLV is enabled on the port. The possible field values are:

Enabled - Enables the System Description TLV on the port.

Disabled – Disables the System Description TLV on the port.

System Capabilities: Specifies whether the System Capabilities TLV is enabled on the port. The possible field values are:

Enabled – Enables the System Capabilities TLV on the port.

Disabled - Disables the System Capabilities TLV on the port.

Define these parameter fields. Click the **Apply** button to implement changes made and click **Refresh** to refresh the table information.

L2 Functions > LLDP > 802.1 Extension TLV

This 802.1 Extension TLV page is used to configure the LLDP Port settings.

802.1 Extensi	ion LLDP Port Settings		😑 Safeguard
From Port	1 To Port 52]	
Port VLAN ID	Disabled •		
VLAN Name	Disabled VLAN ID V		
Protocol Identity	Disabled V EAPOL V		
			Refresh Apply
Port	Port VLAN ID	VLAN ID	Protocol Identity
1	Disabled	(None)	(None)
2	Disabled	(None)	(None)
3	Disabled	(None)	(None)
4	Disabled	(None)	(None)
5	Disabled	(None)	(None)
6	Disabled	(None)	(None)
7	Disabled	(None)	(None)
8	Disabled	(None)	(None)
9	Disabled	(None)	(None)
10	Disabled	(None)	(None)
11	Disabled	(None)	(None)
12	Disabled	(None)	(None)
13	Disabled	(None)	(None)
14	Disabled	(None)	(None)

Figure 4.73 – L2 Functions > LLDP > 802.1 Extension TLV Port Settings

From Port / To Port: A consecutive group of ports may be configured starting with the selected port.

Port VLAN ID: Specifies the Port VLAN ID to be enabled or disabled.

VLAN Name: Specifies the VLAN name to be enabled or disabled in the LLDP port. If select Enabled, users can specifies the content of VLAN ID or VLAN Name or all.

Protocol Identity: Specifies the Protocol Identity to be enabled or disabled in the LLDP port. If select Enabled, users can specifies the EAPOL, LACP, GVRP, STP or ALL.

Click the **Apply** button to implement changes made and click **Refresh** to refresh the table information.

L2 Functions > LLDP > 802.3 Extension TLV

The 802.3 Extension LLDP Port Settings page displays 802.3 Extension LLDP port information and contains parameters for configuring 802.3 Extension LLDP port settings.

2.3 Exter	nsion LLDP Port Settings			😑 Safeguar
om Port 1 ▼	To Port Con	r/PHY Iguration/Status Power Via MDI abled ▼ Disabled ▼	Link Aggregation Maximum F Disabled Disabled	
Port	MAC/PHY Configuration/Status	Power Via MDI	Link Aggregation	Maximum Frame Size
1	Disabled	Disabled	Disabled	Disabled
2	Disabled	Disabled	Disabled	Disabled
3	Disabled	Disabled	Disabled	Disabled
4	Disabled	Disabled	Disabled	Disabled
5	Disabled	Disabled	Disabled	Disabled
6	Disabled	Disabled	Disabled	Disabled
7	Disabled	Disabled	Disabled	Disabled
8	Disabled	Disabled	Disabled	Disabled
9	Disabled	Disabled	Disabled	Disabled
10	Disabled	Disabled	Disabled	Disabled
11	Disabled	Disabled	Disabled	Disabled
	Disabled	Disabled	Disabled	Disabled
12	Disableu			

Figure 4.74 – L2 Functions > LLDP > 802.3 Extension TLV

From Port / To Port: A consecutive group of ports may be configured starting with the selected port. **MAC/PHY Configuration/Status:** Specifies whether the MAC/PHY Configuration Status is enabled on the port. The possible field values are:

Enabled – Enables the MAC/PHY Configuration Status on the port.

Disabled – Disables the MAC/PHY Configuration Status on the port.

Power via MDI: Advertises the Power via MDI implementations supported by the port. The possible field values are:

Enabled – Enables the Power via MDI configured on the port.

Disabled – Disables the Power via MDI configured on the port.

Link Aggregation: Specifies whether the link aggregation is enabled on the port. The possible field values are:

Enabled – Enables the link aggregation configured on the port.

Disabled – Disables the link aggregation configured on the port.

Maximum Frame Size: Specifies whether the Maximum Frame Size is enabled on the port. The possible field values are:

Enabled – Enables the Maximum Frame Size configured on the port.

Disabled – Disables the Maximum Frame Size configured on the port.

Define these parameter fields. Click the **Apply** button to implement changes made and click **Refresh** to refresh the table information.

L2 Functions > LLDP > LLDP Management Address Settings

The LLDP Management Address Settings allows the user to set management address which is included in LLDP information transmitted.

LLDP Manag	ement Address	s Settings			😑 Safeguard
From Port 01 ▼	To Port 52 ▼	Address Type	Address	Port State Disabled ▼	Apply
Enabled Manager	nent Address Table				

Port	Enabled Management Address	Port State	
01	None	Disabled	
02	None	Disabled	
03	None	Disabled	
04	None	Disabled	
05	None	Disabled	
06	None	Disabled	
07	None	Disabled	
08	None	Disabled	
09	None	Disabled	
10	None	Disabled	
11	None	Disabled	
12	None	Disabled	
13	None	Disabled	
14	None	Disabled	

Figure 4.75 – L2 Functions > LLDP > LLDP Management Address Settings

From Port / To Port: A consecutive group of ports may be configured starting with the selected port.

Address Type: Specifies the LLDP address type on the port. The value is always IPv4.

Address: Specifies the address.

Port State: Specifies whether the Port State is enabled n the port. The possible field values are:

Enabled – Enables the port state configured on the port.

Disabled – Disables the port state configured on the port.

Click the **Apply** button to implement changes made.

L2 Functions > LLDP > LLDP Management Address Table

The LLDP Management Address Table page displays the detailed management address information for the entry.

Safeguard

LLDP	Managem	ent Address Table			😑 Safeguard
Manage	ement Address	IPv4 T	Search		
Total Er	ntries: 1				
No.	Subtype	Management Address	IF Type	OID	Advertising Ports
1	IPv4	10.90.90.90	ifIndex	1.3.6.1.2.1.2.2.1.1	(NONE)

Figure 4.76 – L2 Functions > LLDP > LLDP Management Address Table

Management Address: Select IPv4 or IPv6 address and enter the IP address.

Click **Search** and the table will update and display the values required.

Subtype: Displays the managed address subtype. For example, MAC address or IPv4 address.

Management Address: Displays the IP address.

IF Type: Displays the IF Type.

OID: Displays the SNMP OID.

Advertising Ports: Displays the advertising ports.

L2 Functions > LLDP > LLDP Local Port Table

The LLDP Local Port Table page displays LLDP local port information.

LLDP Local Port Brief Table

Port ID Subtype Port ID Port Description Port 01 Interface Alias Slot0/1 Ethernet Interface View View 02 Interface Alias Slot0/2 Ethernet Interface View View 03 Interface Alias Slot0/3 Ethernet Interface View View Slot0/4 04 Interface Alias Ethernet Interface View View 05 Interface Alias Slot0/5 Ethernet Interface View View 06 Interface Alias Slot0/6 Ethernet Interface View View 07 Interface Alias Slot0/7 Ethernet Interface View View 08 Interface Alias Slot0/8 Ethernet Interface View View 09 Interface Alias Slot0/9 Ethernet Interface View View 10 Interface Alias Slot0/10 Ethernet Interface View View 11 Interface Alias Slot0/11 Ethernet Interface View View 12 Interface Alias Slot0/12 Ethernet Interface View View 13 Interface Alias Slot0/13 Ethernet Interface View View 14 Interface Alias Slot0/14 Ethernet Interface View View

Figure 4.77 – L2 Functions > LLDP > LLDP Local Port Table

Port: Displays the port number.


Port ID Subtype: Displays the port ID subtype.

Port ID: Displays the port ID (Unit number/Port number).

Port Description: Displays the port description.


Click View of Normal column to display more information.

No.	1	
Port Id Subtype	Interface Alias	
Port Id	Slot0/1	
Port Description	D-Link DGS-1210-24P Rev.G1/7.10.008 Port 1	
Port VID	1	
Management Address Count	1	
PVID Entries Count	0	
/LAN Name Entries Count	1	
Protocol Identity Entries Count	0	
MAC/PHY Configuration/Status	See detail	
Power Via MDI	See detail	
ink Aggregation	See detail	
Maximum Frame Size	1522	

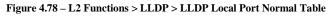





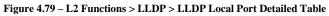

L2 Functions > LLDP > LLDP Remote Port Table

This LLDP Remote Port Table page is used to display the LLDP Remote Port Brief Table. Select port number and click **Search** to display information.

LDP Remote Port Brief Table	Safeguard
Port 01 V Search	
Port ID : 1	
Remote Entities Count : 0 (NONE)	
lormal : <u>View Normal</u>)etailed : <u>View Detailed</u>	

Figure 4.80 – L2 Functions > LLDP > LLDP Remote Port Table

To view the settings for a remote port, click **View Normal** and the following page displays.

LLDP Remote Port Normal Table	Safeguard
Port ID : 1	
Remote Entities Count : 0 (NONE)	
Show LLDP Remote Port Brief Table Show LLDP Remote Port Detailed Table	
Figure 4.81 – L2 Functions > LLDP > LLDP Remote Port Normal Table	

To view the detail settings for a remote port, click **View Detailed** and the following page displays.

LLDP Remote Port Detailed Table	😑 Safeguard
Port ID : 1	
Remote Entities Count : 0 (NONE)	
Show LLDP Remote Port Brief Table	
Show LLDP Remote Port Normal Table	
Figure 4.82 – L2 Functions > LLDP > LLDP Remote Port Detailed Table	

L2 Functions > LLDP > LLDP Statistics

The LLDP Statistics page displays an overview of all LLDP traffic.

	Statistics Table						😑 Safeguar
I DP Sta	itistics System						
	nge Time		0				
	of Table Insert		0				
	of Table Delete		0				
			0				
	of Table Drop						
umber o	of Table Age Out		0				
LDP Por	rt Statistics						
						Refresh	Clear
						Refresh	
Port	TxPort Frames	RxPortFrames Discarded	RxPort FramesErrors	RxPort Frames	RxPortTLVs Discarded	RxPortTLVs Unrecognized	RxPort Ageouts
Port 1	TxPort Frames		RxPort FramesErrors	RxPort Frames			RxPort Ageouts
Port 1 2		Discarded			Discarded	Unrecognized	
1	0	Discarded 0	0	0	Discarded 0	Unrecognized 0	0
1 2	0	Discarded 0 0	0	0	Discarded 0 0	Unrecognized 0 0	0
1 2 3	0 0 0	Discarded 0 0 0	0 0 0	0 0 0	Discarded 0 0 0	Unrecognized 0 0 0	0 0 0 0
1 2 3 4	0 0 0 0	Discarded 0 0 0 0	0 0 0 0	0 0 0 0	Discarded 0 0 0 0	Unrecognized 0 0 0 0 0	0 0 0 0
1 2 3 4 5	0 0 0 0 25	Discarded 0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	Discarded 0 0 0 0 0	Unrecognized 0 0 0 0 0 0	0 0 0 0 0
1 2 3 4 5	0 0 0 25 0	Discarded 0 0 0 0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	Discarded 0 0 0 0 0 0 0	Unrecognized 0 0 0 0 0 0 0 0	0 0 0 0 0 0
1 2 3 4 5 6 7	0 0 0 25 0 0	Discarded 0 0 0 0 0 0 0 0 0 0 0 0 0			Discarded 0 0 0 0 0 0 0	Unrecognized 0 0 0 0 0 0 0 0	0 0 0 0 0 0
1 2 3 4 5 6 7 8	0 0 0 25 0 0 0	Discarded 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	Discarded 0 0 0 0 0 0 0 0 0 0	Unrecognized 0 0 0 0 0 0 0 0 0 0	
1 2 3 4 5 6 7 8 9	0 0 0 25 0 0 0 0 0	Discarded 0 0 0 0 0 0 0 0 0 0 0 0 0			Discarded 0 0 0 0 0 0 0 0 0 0 0	Unrecognized 0 0 0 0 0 0 0 0 0 0 0 0	

Figure 4.83 – L2 Functions > LLDP > LLDP Statistics

The following information can be viewed:

LLDP Statistics System: Displays the counters that refer to the whole switch.

Last Change Time – Displays the time for when the last change entry was last deleted or added. It is also displays the time elapsed since last change was detected.

Number of Table Insert – Displays the number of new entries inserted since switch reboot. **Number of Table Delete** – Displays the number of new entries deleted since switch reboot.

Number of Table Drop – Displays the number of LLDP frames dropped due to that the table was

full.

Number of Table Age Out - Displays the number of entries deleted due to Time-To-Live expiring.

LLDP Port Statistics: Displays the counters that refer to the ports.

TxPort FramesTotal – Displays the total number of LLDP frames transmitted on the port.

RxPort FramesDiscarded – Displays the total discarded frame number of LLDP frames received on the port.

RxPort FramesErrors – Displays the Error frame number of LLDP frames received on the port.

RxPort Frames - Displays the total number of LLDP frames received on the port.

RxPortTLVsDiscarded – Each LLDP frame can contain multiple pieces of information, known as TLVs. If a TLV is malformed, it is counted and discarded.

RxPortTLVsUnrecognized – Displays the number of well-formed TLVs, but with an known type value.

RxPort Ageouts – Each LLDP frame contains information about how long time the LLDP information is valid. If no new LLDP frame is received within the age out time, the LLDP information is removed, and the Age-Out counter is incremented.

Click Refresh to renew the page, and click Clear to clean out all statistics.

L3 Functions > IP Interface

The IP Interface page allow user to configure the IPv6 system settings.

IP Interface Se	ettings							😑 Safeguard
Interface Name								
VLAN Name								
IPv4 Address								
Netmask	24	4 (255.255.255.0)	T					
Interface Admin State	e E	Enabled	T					
								Add
🥕 Maximum 4 entrie	29							
Interface Name	VLAN Name	IPv4 Addre	SS	Netmask	Admin State	Link State	IPv6	Delete
System	default	10.90.90.9	0	255.0.0.0	Enabled	Link Up	IPv6	Delete

Figure 4.84 – L3 Functions > IP Interface

Interface Name: Specifies the name of IP interface.

VLAN Name: Specifies the VLAN name of IP interface.

IPv4 Address: Specifies the IPv4 address for the interface.

Netmask: Select the netmask of IP address.

Interface Admin State: Enables or disables the interface administration state.

Click **Add** for the settings to take effect.

Click the **IPv6** button to configure the IPv6 interface settings:

IPv6 Interface Settings	S		😑 Safeguard
IPv6 Interface Settings Interface Name Interface Admin State DHCPv6 Client	System Enabled Disabled ▼	IPv6 State IPv6 Network Address (e.g.: 3710::1/64)	Enabled Back Apply
NS Retransmit Time Settings		1s	Apply
Automatic Link Local State Se Automatic Link Local Address	ettings	Disabled	Apply
View All IPv6 Address Address Type		IPv6 Address	Delete
Address Type		IPv6 Address	Delete

Figure 4.85 – L3 Functions > IPv6 Interface Settings

IPv6 System Settings:

Interface Name: Displays the interface name of IPv6.

IPv6 State: Specifies the IPv6 to be enabled or disabled.

Interface Admin State: Displays the interface admin status.

DHCPv6 Client: Specifies the DHCPv6 client to be enabled or disabled.

IPv6 Network Address: Specifies the IPv6 Network Address.

NS Retransmit Time Settings:

NS Retransmit Time (1-3600): Enter the Neighbor solicitation's retransmit timer in second here. Specifies the NS retransmit time for IPv6. The field range is 1-3600, and default is 1 second.

Automatic Link Local State Settings:

Automatic Link Local Address: Specifies the automatic link is enabled or disabled.

Click the **Apply** button to implement changes made.

L3 Functions > IPv6 Neighbor Settings

The user can configure the Switch's IPv6 neighbor settings. The Switch's current IPv6 neighbor settings will be displayed in the table at the bottom of this window.

IPv6 Neighbor Settings			0	Safeguard
Interface Name Neighbor IPv6 Address Link Layer MAC Address				Apply
Interface Name All	✓ All □ Hards	ware	Find	Clear
Total Entries : 1				
Neighbor fe80::7c7f:bce3:3edb:92e6	Link Layer Address 3C-97-0E-E5-76-4D	Interface Name System	State Stale	_

Figure 4.86 – L3 Functions > IPv6 Neighbor Settings

Interface Name: Enter the interface name of the IPv6 neighbor. **Neighbor IPv6 Address:** Specifies the neighbor IPv6 address. Link Layer MAC Address: Specifies the link layer MAC address.

Click **Apply** to implement changes made.

Interface Name: Specifies the interface name of the IPv6 neighbor. To search for all the current interfaces on the Switch, go to the second Interface Name field in the middle part of the window, tick the All check box. Tick the Hardware option to display all the neighbor cache entries which were written into the hardware table. **State:** Use the drop-down menu to select All, Address, Static or Dynamic. When the user selects address from the drop-down menu, the user will be able to enter an IP address in the space provided next to the state option.

Click **Find** to locate a specific entry based on the information entered.

Click **Clear** to clear all the information entered in the fields.

L3 Functions > IPv4 Static Route

The Switch supports static routing for IPv4 formatted addressing. User can create up to 256 static route entries for IPv4. For IPv4 static routes, once a static route has been set, the Switch will send an ARP request packet to the next hop router that has been set by the user. Once an ARP response has been retrieved by the Switch from that next hop, the route becomes enabled. However, if the ARP entry already exists, an ARP request will not be sent.

The Switch also supports a floating static route, which means that the user may create an alternative static route to a different next hop. This secondary next hop device route is considered as a backup static route for when the primary static route is down. If the primary route is lost, the backup route will uplink and its status will become active. Entries into the Switch's forwarding table can be made using both an IP address subnet mask and a gateway.

The IPv4 Static Route page allows user to enable and configure the IPv4 route settings.

Static Route Settings						Safeguard
IPv4 Static Route: Enable 	ed Obisabled					Apply
IPv4 Address						
Netmask	24 (255.255.255.0)					
Gateway						
Metric (1-65535)						
Backup State	Primary •					Add
Total Entries : 0 / Active Ent	tries: 0 / Inactive Entries: 0					
IPv4 Address Netr	nask Gateway	Metric	Protocol	Backup	Status	Delete

Figure 4.87 – L3 Functions > IPv4 Static Route

IPv4 Static Route: Specifies to enable or disable the IPv4 static route feature on the Switch. Click the **Apply** button to implement changes made.

IPv4 Address: Specifies an IPv4 address to be assigned to the static route.

Netmask: Specifies a subnet mask to be applied to the corresponding subnet mask of the IPv4 address.

Gateway: The corresponding IPv4 address for the next hop Gateway address in IPv4 format.

Metric: Represents the metric value of the IP interface entered into the table. This field may read a number between 1 and 65535.

Backup State: The user may choose between *Primary* and *Backup*. If the Primary Static Route fails, the Backup Route will support the entry. Please take note that the Primary and Backup entries cannot have the same Gateway.

Click **Add** to create a static route.

To create a new IPv4 static route entry for example, enter the configuration displayed below then click Add:

Static Route Setti	ngs						😑 Safeguard
IPv4 Static Route: 🔍 🖲	Enabled Oisabled	i i					Apply
IPv4 Address	10.90.90.90						
Netmask	24 (255.255.25	5.0) 🔻					
Gateway	10.90.90.254						
Metric (1-65535)	2						
Backup State	Primary	•					Add
Total Entries : 0 / Activ	e Entries : 0 / Inactiv	ve Entries: 0					
IPv4 Address	Netmask	Gateway	Metric	Protocol	Backup	Status	Delete

Figure 4.88 – L3 Functions > IPv4 Static Route – Add

The new entry will be displayed in the IPv4 static route table:

Static Route Settin	ngs						😑 Safeguard
IPv4 Static Route: E 	nabled Oisabled						Apply
IPv4 Address							
Netmask	24 (255.255.255.	0) 🔻					
Gateway							
Metric (1-65535)							
Backup State	Primary	7					Add
Total Entries: 1 / Active	Entries: 0 / Inactive	Entries: 1					
IPv4 Address	Netmask	Gateway	Metric	Protocol	Backup	Status	Delete
10.90.90.90	255.255.255.0	10.90.90.254	2	Static	Primary	Inactive	Delete

Figure 4.89 – L3 Functions > IPv4 Static Route – Static Route Table

Click the **Delete** button to remove the entry.

L3 Functions > IPv4 Routing Table Finder

The IPv4 Routing Table Finder page shows the current IPv4 routing table of the Switch. To find a specific IPv4 route, enter and IPv4 address into the **Network Address** field and click the **Search** button.

Routing Table Finder				0	Safeguard
Network Address	Ex:	(172.18.208.11 or 172.18.208.11/24	t)		Search
Total Entries: 0					
IP Address	Netmask	Gateway	Interface Name	Metric	Protocol
10.0.0.0	255.0.0.0	0.0.0.0	System	1	Local

Figure 4.90 – L3 Functions > IPv4 Routing Table Finder

L3 Functions > IPv6 Static Route

The IPv6 Static Route page allows user to enable and configure the IPv6 route settings.

IPv6 Static Route Settin	ngs					😑 Safeguard
IPv6 Static Route: O Enabled	Disabled					Apply
IPv6 Address/Prefix Length						
Nexthop Address		(e.g.: 3FFE::1)				
Metric (1-65535)						
Backup State	Primary	V				
						Add
Total Entries : 0						
IPv6 Address/Prefix	Next Hop	Metric	Protocol	Backup	Status	Delete

Figure 4.91 – L3 Functions > IPv6 Static Route

IPv6 Static Route: Specifies to enable or disable the IPv6 static route feature on the Switch.

Click the **Apply** button to implement changes made.

IPv6 Address/Prefix Length: Specifies that packets matching that address will be translated.

Nexthop Address: Specifies the corresponding IPv6 address for the next hop gateway address in IPv6 format.

Metric (1-65535): Specifies a metric of the IPv6 interface into the table representing the number of routers between the Switch and the IPv6 address above. The value ranges between 1 and 65535.

Backup State: Each IP address can only have one primary route, while other routes should be assigned to the backup state. When the primary route failed, switch will try the backup routes according to the order learnt by the routing table until route success. The field represents the Backup state that the Static and Default Route is configured for.

Click **Add** to create a new IPv6 Static Route.


L3 Functions > IPv6 Routing Table Finder

The IPv6 Routing Table Finder page shows the current Ipv6 routing table of the Switch. To find a specific Ipv6 route, enter and IPv6 address into the **IPv6 Network Address** field and click **Search**.

IPv6 Routing Tab	le Finder					😑 Safeguar
IPv6 Network Address		Ex:(1234::1234 or	1234::1234/64)			Search
Total Entries : 0						
IPv6 Address/Prefix	Next Hop	Interface Name	Protocol	Backup	Metric	Status

Figure 4.92 – L3 Functions > IPv6 Routing Table Finder

IPv6 Network Address: Specifies the IPv6 address.

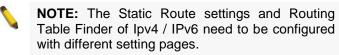

L3 Functions > ARP > ARP Table Global Settings

The ARP Table Global Settings page displays the current ARP entries on the Switch. The table allows network managers to view, define, modify, and delete ARP information for specific devise. Static entries can be defined in the ARP table. When static entries are defined, a permanent entry is entered and is used to translate IP addresses to MAC addresses.

ARP Table	Global Settings				0	Safeguard
Global Settings						
ARP Aging Time	e (0-65535) 5	min				Apply
Interface Name		IP Address	MAC Address			Search
Static ARP er	ntries used/maximum:0/38	34		Select All	Clear	Apply
ID	Interface Name	IP Address	MAC Address	Туре	Add to Static AR	
01	System	10.0.0.0	ff-ff-ff-ff-ff	Static		
02	System	10.90.90.90	4a-6f-6e-01-01-01	Static		
03	System	10.90.90.96	3c-97-0e-e5-76-4d	Dynamic / Inactive		
04	System	10.255.255.255	ff-ff-ff-ff-ff	Static		
				Page 01 🔻	Back	Next

Figure 4.93 – L3 Functions > ARP > ARP Table Global Settings

Global Settings:

ARP Aging Time (0-65535): Specifies the ARP entry age-out time, in minutes. The default is 5 minutes.

Interface Name: Enter or view the Interface name used.IP Address: Enter or view the IP Address used.MAC Address: Enter or view the MAC address used.

Click the **Search** button to locate a specific entry based on the information entered. Click the **Select All** button to Click the **Clear** button to remove the entry listed in the table.

L3 Functions > ARP > Static ARP Settings

The Address Resolution Protocol is a TCP/IP protocol that converts IP address into physical addresses. The table allows network managers to view, define, modify, and delete ARP information for specific devise. Static entries can be defined in the ARP table. When static entries are defined, a permanent entry is entered and is used to translate IP addresses to MAC addresses.

Static ARP Settin	gs			😑 Safeguar
Add Static ARP Entry				
IP Address	MAC Address			Add
				Delete All
Total Entries : 0 Interface Name	IP Address	MAC Adress	Туре	Delete
System	10.0.0.0	FF-FF-FF-FF-FF	LOCAL/BROADCAST	Delete
System	10.90.90.90	4A-6F-6E-01-01-01	LOCAL	
				Delete

Figure 4.94 – L3 Functions > ARP > Static ARP Settings

IP Address: Specifies the IP address.

MAC Address: Specifies the MAC address.

Click the **Add** button to create a static ARP entry. Click the **Delete All** button to remove all the entries listed Click the **Delete** button to remove the specific entry.

QoS > Bandwidth Control

The Bandwidth Control page allows network managers to define the bandwidth settings for a specified port's transmitting and receiving data rates.

andwidth Control		😑 Safeguar	
om Port To Por 01		e(16-1024000) Kbits/sec Apply	
Port	Tx Rate (Kbits/sec)	Rx Rate (Kbits/sec)	
01	No Limit	No Limit	
02	No Limit	No Limit	
03	No Limit	No Limit	
04	No Limit	No Limit	
05	No Limit	No Limit	
06	No Limit	No Limit	
07	No Limit	No Limit	
08	No Limit	No Limit	
09	No Limit	No Limit	
10	No Limit	No Limit	
11	No Limit	No Limit	
12	No Limit	No Limit	
13	No Limit	No Limit	

Figure 4.95 – QoS > Bandwidth Control

From Port / To Port: A consecutive group of ports may be configured starting with the selected port.

Type: This drop-down menu allows you to select between *RX* (receive), *TX* (transmit), and *Both*. This setting will determine whether the bandwidth ceiling is applied to receiving, transmitting, or both receiving and transmitting packets.

No Limit: This drop-down menu allows you to specify that the selected port will have no bandwidth limit. *Enabled* disables the limit.

Rate (64-1024000): This field allows you to enter the data rate, in Kbits per second, will be the limit for the selected port. The value is between 64 and 1024000.

Click **Apply** to set the bandwidth control for the selected ports.

QoS > 802.1p/DSCP/ToS

QoS is an implementation of the IEEE 802.1p standard that allows network administrators to reserve bandwidth for important functions that require a larger bandwidth or that might have a higher priority, such as

VoIP (voice-over Internet Protocol), web browsing applications, file server applications or video conferencing. Thus with larger bandwidth, less critical traffic is limited, and therefore excessive bandwidth can be saved.

The following figure displays the status of Quality of Service priority levels of each port, higher priority means the traffic from this port will be first handled by the switch. For packets that are untagged, the switch will assign the priority depending on your configuration.

Select QoS Mode: 802.1 p • Queuing mechanism: Strict Priority • Apply MRR Queue: Class-0 Class-1 Class-2 Class-3 Class-5 Class-6 Class-7 8 From Port To Port Priority Priority Outer State Priority Priority Priority Priority Priority Priority Priority Priority Select Qas Mode: Select Qas Mode: Select Qas Mode: Priority Priority Priority Priority Select Qas Mode: Apply 01 0 52 7 7 • Apply Apply 01 0 0 0 0 0 For ingress untagged packets, the per port "Default Priority" settings will be applied to packets of each port in prioritization. For ingress tagged packets, D-Link Smart Switches will refer to their 802.1 p information for prioritization. 05 0 0 0 1 2 3 4 5 6 7 10 0 1 0 1 2 3 4 5 6 7 11 0	802.1p Pri	ority S	ettings										0	Safe	guard
Weight : 1 2 3 4 5 6 7 8 From Port To Port Friority 7 Apply 01 0 52 7 Apply Port Priority 52 7 Apply 01 0 52 7 Apply Port Priority 52 7 Apply 01 0	Queuing mech		· · ·	¥										Ар	bly
From Port To Port Priority 01 52 7 Apply	[WRR]							4 C			6 C				
01 52 7 Apply Port Priority	,	weight		2	5	+	5		•	'		0			
Port Priority 01 0 02 0 03 0 04 0 05 0 06 0 07 0 08 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 20 0 21 0 22 0 23 0	From Port		To Port		Pi	riority									
Port Priority 01 0 02 0 03 0 04 0 05 0 06 0 07 0 08 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 20 0 21 0 22 0 23 0	01 🔻		52	•	7	•								AD	vlv
01 0 02 0 03 0 04 0 05 0 06 0 07 0 08 0 09 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0															,
01 0 02 0 03 0 04 0 05 0 06 0 07 0 08 0 09 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	Port		Priority												
02 0 03 0 04 0 05 0 06 0 07 0 08 0 09 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0															Ê
03 0 04 0 05 0 06 0 07 0 08 0 09 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 22 0 23 0															
04 0 05 0 06 0 07 0 08 0 09 0 10 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 22 0 23 0															
05 0 06 0 07 0 08 0 09 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0				- .											
06 0 07 0 08 0 09 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0					For ingress untag	ged packets, t	he per por	t "Default	Priority" s	settings wi	II be app	lied to pad	ckets of ea	ach port	
07 0 08 0 09 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 21 0 22 0 23 0				- '	to provide port-ba	aseu trainc prio	nuzation.								
09 0 10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	07				For ingress tagge	ed packets, D-L	ink Smart	Switches	will refer	to their 80	02.1p info	rmation fo	or prioritiz	ation.	
10 0 11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	08		0												
11 0 12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 23 0	09		0												
12 0 13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	10		0												
13 0 14 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	11		0												
14 0 15 0 15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	12		0												
15 0 16 0 17 0 18 0 19 0 20 0 21 0 23 0	13		0	- I F								1	1		
15 0 16 0 17 0 18 0 19 0 20 0 21 0 22 0 23 0	14		0		802.1p priority		0	1	2	3	4	5	6	7	
17 0 18 0 19 0 20 0 21 0 22 0 23 0	15		0				_		_	_		_			
18 0 19 0 20 0 21 0 22 0 23 0	16		0												
19 0 20 0 21 0 22 0 23 0			0		Queue number		2	0	1	3	4	5	6	7	
20 0 21 0 22 0 23 0	18		0												
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$					Note: Queue prio	rity from low to	high is 0 t	n 7							
22 0 23 0			0	'	vote. Queue prio	inty noninow to	inginis Ut								
23 0			0												
			0												
	23		0												

Figure 4.96 – QoS > 802.1p/DSCP/ToS

Select QoS Mode: Specifies the QoS mode to be 802.1p, DSCP or ToS.

Queuing Mechanism:

Strict Priority: Denoting a Strict scheduling will set the highest queue to be emptied first while the other queues will follow the weighted round-robin scheduling scheme

WRR: Use the weighted round-robin (WRR) algorithm to handle packets in an even distribution in priority classes of service.

Click **Apply** for the settings to take effect.

From Port / To Port: Defines the port range which the port packet priorities are defined.

Priority: Defines the priority assigned to the port. The priority range is between 0 and 7 with 0 being assigned to the lowest priority and 7 assigned to the highest.

Click the **Apply** button to implement changes made.

Security > Trusted Host

Use Trusted Host function to manage the switch from a remote station. You can enter up to ten designated management stations networks by defining the IPv4 Address/Netmask or IPv6 Address/Prefix as seen in the figure below. The first thing after the function is enabled is to add your local host IP address as a trusted host. Otherwise, you may lose the connection.

rusted Host Settings			😑 Safeguaro
Trusted Host: O Enabled	Disabled		Apply
IPv4 Address	Netmask 24 (25	5.255.255.0) 🔻	Add
IPv6 Address	Prefix	(1-128)	
Please add your local host IP	address first to make it trusted.	Otherwise, the connection will be stopped.	
rusted Host Table			
🕈 Maximum 10 entries.			
ID IP Add	ress	Netmask/Prefix	Delete

Figure 4.97 Security > Trusted Host

Trusted Host: Specifies the Trusted Host to be enabled or disabled. The default is disabled.

To define a management station IP setting, click the **Add** button and type in the IP address and Subnet mask. Click the **Apply** button to save your settings. You may permit only single or a range of IP addresses by different IP mask setting, the format can be either 192.168.1.1/255.255.255.0 or 192.168.0.1/24. Please see the example below for permitting the IP range.

IP Address	Subnet Mask	Permitted IP
192.168.0.1	255.255.255.0	192.168.0.1~192.168.0.255
172.17.5.215	255.0.0.0	172.0.0.1~172.255.255.255


To delete the IP address simply click the **Delete** button, check the unwanted address, and then click **Apply**.

<u>Security > Port Security</u>

Port Security is a security feature that prevents unauthorized computers (with source MAC addresses) unknown to the Switch prior to stopping auto-learning processing from gaining access to the network.

A given ports' (or a range of ports') dynamic MAC address learning can be stopped such that the current source MAC addresses entered into the MAC address forwarding table can not be changed once the port lock is enabled. Using the drop-down menu, change **Admin State** to *Enabled*, input Max Learning Address, and then click **Apply**.

Port Security				😑 Safeguard
From Port	To Port 52 ▼	Admin State Disabled ▼	Max Learning Address (0-64) 0	Apply
Port Security				
Port	Admin State	Max Learning Address		
01	Disabled	0		
02	Disabled	0		
03	Disabled	0		
04	Disabled	0		
05	Disabled	0		
06	Disabled	0		
07	Disabled	0		
08	Disabled	0		
09	Disabled	0		
10	Disabled	0		
11	Disabled	0		
12	Disabled	0		
13	Disabled	0		
14	Disabled	0		
45	Disabled	0		

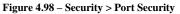

Security > Traffic Segmentation

This feature provides administrators to limit traffic flow from a single port to a group of ports on a single Switch. This method of segmenting the flow of traffic is similar to using VLANs to limit traffic, but is more restrictive.

raffic \$	Segn	nent	atio	n Se	etting	gs) 8	Safe	gua
Forwardir	n <mark>g Port</mark>	Settin	gs						0	Enabl	ed	• Di	sabled	ł											Арр	ly
From Port	t	All		Ŧ															Select	t All		Clea	ar		Арр	ly
To Port	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
To Port	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52
	P	ort												Fo		-	ort									
	P	ort												Fo	rward	-	ort									
		2													1-{											
		3													1-{											
		4													1-{											
															1-{											
5															1-{											
6							1-52																			
		7																								
		7 8													1-52											
															1-(1-(
		8														52										

Figure 4.99 – Security > Traffic Segmentation

Forwarding Port Settings: Click Enabled or Disabled and click Apply to configure this feature.

From Port: Use the drop-down menu to select a port or all ports from that switch. This is the port that will be transmitting packets.

To Port: Click the box of ports and will be able to forward packets. These ports will be allowed to receive packets from the port specified above.

Click Apply to enter the settings into the Switch's Traffic Segmentation table.

Click Select All button to check all ports or click Clear button to uncheck all ports.

Security > Safeguard Engine

D-Link's **Safeguard Engine** is a robust and innovative technology that automatically throttles the impact of packet flooding into the switch's CPU. This function helps protect the Web-Smart Switch from being interrupted by malicious viruses or worm attacks. This option is enabled by default.

Safeguard Engine S	ettings		😑 Safeguard
Safeguard Engine State	Enabled	O Disabled	Apply
CPU.		novative technology developed by D-Link, which will automa from being too frequently interrupted by malicious viruses or	

Figure 4.100 – Security > Safeguard Engine

Security > Storm Control

The Storm Control feature provides the ability to control the receive rate of broadcast, multicast, and unknown unicast packets. Once a packet storm has been detected, the Switch will drop packets coming into the Switch until the storm has subsided.

Storm Control Settings		😑 Safeguard
Storm Control Storm Control Type	 ○ Enabled ● Disabled Multicast & Broadcast & Unknown Unica: ▼ 	
Threshold (16Kbps * N)	N = (1 ~ 64000) 16Kbps * = 0 Kbps	Apply

Figure 4.101 – Security > Storm Control

Storm Control Type: User can select the different Storm type from Broadcast Only, Multicast & Broadcast, and Multicast & Broadcast & Unknown Unicast.

Threshold (16Kbps * N): If storm control is enabled (default is disabled), the threshold is from of 16 \sim 1,024,000 Kbit per second, with steps (N) of 16Kbps. N can be from 1 to 64000.

Click the **Apply** button to implement changes made.

Security > ARP Spoofing Prevention

ARP spoofing, also known as ARP poisoning, is a method to attack an Ethernet network by allowing an attacker to sniff data frames on a LAN, modifying the traffic, or stopping the traffic (known as a Denial of Service – DoS attack). The main idea of ARP spoofing is to send fake or spoofed ARP messages to an Ethernet network. It associates the attacker's or random MAC address with the IP address of another node such as the default gateway. Any traffic meant for that IP address would be mistakenly re-directed to the node specified by the attacker.

A common DoS attack today can be done by associating a nonexistent or specified MAC address to the IP address of the network's default gateway. The malicious attacker only needs to broadcast one gratuitous ARP to the network claiming to be the gateway, so that the whole network operation is turned down as all packets to the Internet will be directed to the wrong node.

The ARP Spoofing Prevention function can discard the ARP Spoofing Attack in the network by checking the gratuitous ARP packets and filtering those with illegal IP or MAC addresses.

ARP Spooting Preven	ntion Settings			Safeguard
IP Address	MAC Address	Ports	2,4-6)	Add
Total Entries: 0				Delete All
IP Address	MAC Address		Ports	Delete
to attack a LAN.			nat cracker can spoof the IP and MAC in	
			and address in a localized and an excelence of a second second second	

2. The main purpose of this feature is to protect network from Man-in-the-Middle or ARP spoofing attack including router / gateway or specific client

Figure 4.102 – Security > ARP Spoofing Prevention

Enter the **IP Address**, **MAC Address**, **Ports** and then click **Add** to create a checking/filtering rule. Click **Delete** to remove an existing rule and **Delete All** to clear all the entries.

Security > DHCP Server Screening

DHCP Server Screening function allows user to restrict the illegal DHCP server by discarding the DHCP service from distrusted ports. This page allows you to configure the DHCP Server Screening state for each port and designed trusted DHCP server IP address. Select **Ports** and then click **Apply** to enable or disable the function.

Port	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Port	27	28	✓	✓	31	✓	33	✓ 34	35	✓	37	✓ 38	✓ 39	⊻ 40	✓	✓	✓43		⊻ 45	✓	⊻ 47	✓	✓	✓	✓	✓
ort	21	28	29	30	3	32	33	34	30	30	31	36	39	40	41	42	43	44	40	40	47	48	49	00		⊃Z ▼
isted	рнср	Serv	er IP S	ettings	5																					
		Serv	er IP S	ettings	5							Add														
USted IPv4	۱ (Serv	er IP S	ettings	\$							Add														

Figure 4.103 – Security > DHCP Server Screening

Trusted DHCP Server IP Settings: Select IPv4 or IPv6 and specify the IP address then click **Add** to create Trusted DHCP Server. For default, the ports are all enabled of trusted DHCP Server. Click **Add** to add a trusted DHCP server.

Security > SSL/TLS

Secure Sockets Layer (SSL) is a security feature that provides a secure communication path between a Web Management host and the Switch Web UI by using authentication, digital signatures and encryption. These security functions are implemented by Ciphersuite, a security string that determines the cryptographic parameters, encryption algorithms and key sizes to be used for an authentication session and consists of three levels: key exchange, encryption and has algorithm.

This page allows you to configure the SSL global state and the Ciphersuite settings. Select **Enable** or **Disable** and then click **Apply** to change the SSL state or the Ciphersuite settings of the Switch. By default, SSL is **Disabled** and all Ciphersuites are **Enabled**.

SSL/TLS Settings			😑 Safeguard
SSL State HTTP will be disabled if SSL is e	Enabled Dis Dis	abled	Apply
SSL Ciphersuite Settings			
ECDHE-RSA-AES128-SHA	Enabled	O Disabled	
ECDHE-ECDSA-AES256-SHA	Enabled	Disabled	
DHE-RSA-AES256-SHA	Enabled	O Disabled	
ECDHE-RSA-AES256-SHA	Enabled	O Disabled	
ECDHE-ECDSA-AES128-SHA	Enabled	O Disabled	
DHE-RSA-AES128-SHA	Enabled	O Disabled	
RSA-AES128-SHA	Enabled	O Disabled	
RSA-AES256-SHA	Enabled	O Disabled	
			Apply

Figure 4.104 – Security > SSL/TLS Settings



NOTE: When SSL is enabled, it will take longer time to open a web page due to encryption and HTTP will be disabled.

Version	Description
SSL v2.0	First SSL protocol for which implementations exist.
SSL v3.0	Revisions to prevent specific security attack, add non-RSA ciphers and support for certificate chains.
TLS v1.0	Revision of SSL 3.0 to update the MAC layer to HMAC, add block padding for block ciphers, message order standardization and more alert messages.
TLS v1.1	Defined in RFC 4346, and is an update to TLS 1.0. The Implicit Initialization Vector (IV) is replaced with an explicit IV to protect against Cipher block chaining (CBC) attacks. Premature closes no longer cause a session to be non-resumable.
TLS v1.2	Defined in RFC 5246. Remove the protocol's dependency on the MD5 and SHA-1 digest algorithms.

Version of the SSL & TLS protocol which listed below:

NOTE: The DGS-1210 series support TLS 1.2, 1.1 and do not support SSL v3.0.

SSL (Secure Sockets Layer) is the secure communications protocol of choice for a large part of the Internet community. There are many applications of SSL in existence, since it is capable of securing any transmission over TCP.

Transport Layer Security (TLS), is the successor to SSL and provides much the same functionality. It ensures privacy between communicating applications and their users on the Internet. When a server and client communicate, TLS ensures that no third party may eavesdrop or tamper with any message.

Hyper Test Transfer Protocol Secure (HTTPS) is the secure version of HTTP which is often used to protect highly confidential information, enhance encryption and authentication, and running on top of SSL/TLS. HTTPS is used to secure web browsing service between a browser and a web server.

To browse the web via HTTPS with highly encryption and authentication, select **Enabled** and click **Apply** button to enable SSL state and the HTTP will be disabled.

SSL/TLS Settings		😑 Safeguard
SSL State	Enabled Obisabled	Apply
SSL Ciphersuite Settings		
ECDHE-RSA-AES128-SHA	Enabled Obisabled	
ECDHE-ECDSA-AES256-SHA	Enabled Obisabled	
DHE-RSA-AES256-SHA	Enabled Obisabled	
ECDHE-RSA-AES256-SHA	Enabled Obisabled	
ECDHE-ECDSA-AES128-SHA	Enabled Obisabled	
DHE-RSA-AES128-SHA	Enabled Obsabled	
RSA-AES128-SHA	Enabled Obisabled	
RSA-AES256-SHA	Enabled Obsabled	
		Apply

Figure 4.105 – Security > SSL/TLS Settings - Enable

SSL Ciphersuite Settings:

ECDHE-RSA-AES128-SHA: Specifies ECDHE and RSA key exchange with AES128 encryption and SHA hash is enabled or disabled.

ECDHE-ECDSA-AES256-SHA: Specifies ECDHE and ECDSA key exchange with AES256 encryption and SHA hash is enabled or disabled.

DHE-RSA-AES256-SHA: Specifies DHE and RSA key exchange with AES256 encryption and SHA hash is enabled or disabled.

ECDHE-RSA-AES256-SHA: Specifies ECDHE and RSA key exchange with AES256 encryption and SHA hash is enabled or disabled.

ECDHE-ECDSA-AES128-SHA: Specifies ECDHE and ECDSA key exchange with AES128 encryption and SHA hash is enabled or disabled.

DHE-RSA-AES128-SHA: Specifies DHE and RSA key exchange with AES128 encryption and SHA hash is enabled or disabled.

RSA-AES128-SHA: Specifies RSA key exchange with AES128 encryption and SHA hash is enabled or disabled.

RSA-AES256-SHA: Specifies RSA key exchange with AES256 encryption and SHA hash is enabled or disabled.

Enter https://10.90.90.90 to re-login the Web management page:

5	
Enter your pas	sword
Language	English

Figure 4.106 – Security > SSL/TLS Settings – HTTPS enable

Security > DoS Prevention Settings

← → C 🕼 https://10.90.90.90

The user can enable or disable the prevention of each DoS attacks. As long as user enables DoS Prevention, switch can stop the packet matching DoS Attachk Prevention type listed on below table. The packet matching will be done by hardware.

DoS Prevention Settings		😑 Safeguard
Prevention Settings		
State Disabled ▼		Apply
Prevention Settings		
Type 📃 Land Attack	TCP Null Scan	
TCP Xmascan	CP SYNFIN	
TCP SYN SrcPort less 1024	All	
State Enabled •		Apply
DoS Attack Prevention List		
DoS Type	State	
Land Attack	Disabled	
Tcp Null Scan	Disabled	
Tcp Xmascan	Disabled	
Tcp Synfin	Disabled	
Tcp Syn Srcport less 1024	Disabled	

Figure 4.107 – Security > DoS Prevention Settings

State: Specifies the state to be enabled or disabled.

Click Apply to implement changes made.

Prevention Settings:

Type: Selects the attack types to be prevented. The types are Land Attack, TCP Null Scan, TCP Xmascan, TCP SYNFIN, TCP SYN SrcPortless 1024 or All.

State: Specifies the state to be enabled or disabled.

Click the **Apply** button to implement changes made.

Security > SSH > SSH Settings

SSH is an abbreviation of Secure Shell, which is a program allowing secure remote login and secure network services over an insecure network. It allows a secure login to remote host computers, a safe method of executing commands on a remote end node, and will provide secure encrypted and authenticated communication between two non-trusted hosts. SSH, with its array of unmatched security features is an essential tool in today's networking environment. It is a powerful guardian against numerous existing security hazards that now threaten network communications.

SSH Settings		🨑 Safeguard
SSH Global Settings		
SSH State	Enabled Isabled	
Max. Session (1-4)	4	
Connection Timeout (120-600)	120 sec	
Authfail Attempts (2-20)	2 times	
Rekey Timeout	60min 🔻	
		Apply

Figure 4.108 – Security > SSH > SSH Settings

To configure the SSH server on the Switch, modify the following parameters and click Apply:

SSH State: Enabled or Disabled SSH on the Switch. The default is Disabled.

Max Session (1 - 4): Enter a value between *1* and 4 to set the number of users that may simultaneously access the Switch. The default setting is *1*.

Connection Timeout (120 - 600): Allows the user to set the connection timeout. The use may set a time between *120* and *600* seconds. The default setting is *120* seconds.

Authfail Attempts (2 - 20): Allows the Administrator to set the maximum number of attempts that a user may try to log on to the SSH Server utilizing the SSH authentication. After the maximum number of attempts has been exceeded, the Switch will be disconnected and the user must reconnect to the Switch to attempt another login. The number of maximum attempts may be set between 2 and 20. The default setting is 2.

Rekey Timeout: Using the pull-down menu uses this field to set the time period that the Switch will change the security shell encryptions. The available options are *Never*, *10 min*, *30 min*, and *60 min*. The default setting is *60 min*.

Click the **Apply** button to implement changes made.

Security > SSH > SSH Authmode and Algorithm Settings

The SSH Authentication and Algorithm Settings page allows user to configure the desired types of SSH algorithms used for authentication encryption.

SSH Authmode and Algorithm	Settings		😑 Safeguard
SSH Authentication Mode Settings			
Password	Public Key	Host Based	
Encryption Algorithm			
✓ 3DES-CBC			
Data Integrity Algorithm			
MMAC-MD5	MMAC-SHA1		
Public Key Algorithm			
HMAC-RSA			Apply

Figure 4.109 – Security > SSH > SSH Settings

SSH Authentication Mode Settings:

Password: Allows user to use a locally configured password for authentication on the Switch.

Public Key: This parameter may be enabled if the administrator wishes to use a public key configuration set on a SSH server, for authentication on the Switch.

Host Based: This parameter may be enabled if the administrator wishes to use a host computer for authentication. This parameter is intended for Linux users requiring SSH authentication techniques and the host computer is running the Linux operating system with a SSH program previously installed.

Encryption Algorithm:

3DES-CBC: Use the check box to enable or disable the Triple Data Encryption Standard encryption algorithm with Cipher Block Chaining. The default is enabled.

Data Integrity Algorithm:

HMAC-MD5: Use the check box to enable the supports of hash for message Authentication Code (HMAC) MD5 Message Digest (MD5) mechanism.

HMAC-SHA1: Use the check box to enable the supports of hash for message Authentication Code (HMAC) Secure Hash Algorithm (SHA) mechanism.

Public Key Algorithm:

HMAC-RSA: Use the check box to enable the supports of Hash for Message Authentication Code (HMAC) mechanism utilizing the RSA encryption algorithm.

Click the **Apply** button to implement changes made.

Security > SSH > SSH User Authentication Lists

The SSH User Authentication Lists page is used to configure parameters for users attempting to access the Switch through SSH.

SSH User Authe	entication Lists				😑 Safeguard
Total Entries : 1					
User Name	Auth. Mode	Host Name	Host IPv4	Host IPv6	
	Password				Edit

Figure 4.110 – Security > SSH > SSH User Authentication Lists

The user may view the following parameters:

User Name: A name of no more than *15* characters to identify the SSH user. This User Name must be a previously configured user account on the Switch.

Auth. Mode: The administrator may choose one of the following to set the authorization for users attempting to access the Switch.

Host Based – This parameter should be chosen if the administrator wishes to use a remote SSH server for authentication purposes.

Password – This parameter should be chosen if the administrator wishes to use an administratordefined password for authentication. Upon entry of this parameter, the Switch will prompt the administrator for a password, and then to re-type the password for confirmation.

Public Key – This parameter should be chosen if the administrator wishes to use the public key on an SSH server for authentication.

Host Name: Enter an alphanumeric string of no more than *32* characters to identify the remote SSH user. This parameter is only used in conjunction with the *Host Based* choice in the Auth. Mode field.

Host IPv4: Enter the corresponding IPv4 address of the SSH user. This parameter is only used in conjunction with the *Host Based* choice in the Auth. Mode field.

Host IPv6: Enter the corresponding IPv6 address of the SSH user. This parameter is only used in conjunction with the *Host Based* choice in the Auth. Mode field.

Security > Smart Binding > Smart Binding Settings

The primary purpose of Smart Binding is to restrict client access to a switch by enabling administrators to configure pairs of client MAC and IP addresses that are allowed to access networks through a switch.

The Smart Binding function is port-based, meaning that a user can enable or disable the function on any individual port. Once Smart Binding is enabled on a switch port, the switch will restrict or allow client access by checking the pair of IP-MAC addresses with the pre-configured database, also known as the "IMPB white list".

Users can enable or disable the Inspection packets and DHCP Snooping on the Switch.

Smart Binding	Settings			😑 Safeguard
From Port 01 Packet Inspection	To Port 52 ▼ ARP Inspection ▼	State Disabled DHCP Snooping Disabled]	Apply
IMPB Setting				
Port	Admin State	Also inspect IP packets	DHCP Snooping	×
01	Disabled	Disabled	Disabled	
02	Disabled	Disabled	Disabled	
03	Disabled	Disabled	Disabled	
04	Disabled	Disabled	Disabled	
05	Disabled	Disabled	Disabled	
06	Disabled	Disabled	Disabled	
07	Disabled	Disabled	Disabled	
08	Disabled	Disabled	Disabled	
09	Disabled	Disabled	Disabled	
10	Disabled	Disabled	Disabled	
11	Disabled	Disabled	Disabled	
12	Disabled	Disabled	Disabled	
13	Disabled	Disabled	Disabled	

Figure 4.111 – Security > Smart Binding > Smart Binding Settings

The Smart Binding Settings page contains the following fields:

From Port/ To Port: Select a range of ports to set for IP-MAC-port binding.

State: Use the drop-down menu to enable or disable these ports for Smart Binding.

Enabled – Enable Smart Binding with related configurations to the ports

Disabled – Disable Smart Binding.

Packet Inspection: Specifies *ARP Inspection* or *IP+ARP Inspection* for the IP packets. If ARP inspection is selected, the Switch will inspect incoming ARP packets and compare them with the Switch's Smart Binding white list entries. If the IP-MAC pair of an ARP packet is not found in the white list, the Switch will block the MAC address. A major benefit of Loose state is that it uses less CPU resources. However, it cannot block malicious users who send only unicast IP packets. An example of this is that a malicious user can perform DoS attacks by statically configuring the ARP table on their PC. In this case, the Switch cannot block such attacks because the PC will not send out ARP packets. If **ARP+ IP Inspection** mode is selected, the Switch will inspect all incoming ARP and IP packets and compare them to the IMPB white list. If the IP-MAC pair

find a match in the white list, the packets from that MAC address are unblocked. If not, the MAC address will stay blocked. While the mode examines every ingress ARP and IP packet, it enforces better security.

DHCP Snooping: By enable DHCP Snooping, the switch will snoop the packets sent from DHCP Server and clients, and update information to the White List. This includes DHCPv6 snooping.

Click the **Apply** button to implement changes made.

Security > Smart Binding > Smart Binding

The Smart Binding Settings page allows users to set IP-MAC-Port Binding entries by manually entering required information, or by scanning all connected devices and clicking to bind.

Smart Binding		🦲 Safeguard
Manual Binding From Port To Port 01 ▼	IP Address MAC Address	Add
Auto Scan Enter a range of IP address to scan all devices in the no IP Address From To	work.	Scan
VLAN IP Address	Select All MAC Address	Clear All Apply Port Binding

Figure 4.112 – Security > Smart Binding > Smart Binding

The Manual Binding Settings contains the following fields:

From Port / To Port: Specifies the switch port ranges for which to configure this IP-MAC binding entry (IP Address + MAC Address).

IP Address: Specifies the IP address to bind to the MAC address set below.

MAC Address: Specifies the MAC address to bind to the IP address set above.

Click **Add** to add a new entry.

Auto Scan: The Auto Scan Setting can list connected devices and easily select to bind. It contains the following fields:

IP Address From/To: Specifies the range of IP Address to find desired devices, or leaves the fields blank to see all connected devices.

Click **Scan** and the search results will be listed in below table.

Binding: Check the box to select desired binding devices.

Apply: Click Apply to set IP-MAC-Port Binding entries."

Select All: To check the boxes of Binding for all found devices.

Clear All: To cancel the box of Binding

Security > Smart Binding > White List

When IP +ARP Inspection Mode is selected, the White List page displays finished IP-MAC-Port Binding entries from page Smart Binding. Only IP packets or ARP packets carrying matched IP-MAC-Port information can access to the switch. You can cancel a device's authorization by deleting it from the table.

White List		Safe	aguard
	Delete Select All	Clea	an
Total Entries: 0			
IP Address	Mac Address	Port	Delete

Figure 4.113 – Security > Smart Binding > White List

Select the check box of entry then click **Delete** to remove it.

Click **Select All** to select all entries of the table or click **Clean** to select none entries. Please keep at least one management host in the White List.

Security > Smart Binding > Black List

The Black List page shows unauthorized accesses. When ARP Inspection is selected and a device sends out an ARP packet containing unmatched IP-MAC-Port information, the device will be forbidden and listed here.

Black List				😑 Safeguard
	IP Address	MAC Address	Port	Find
Total Entries: 0			Delete Selec	t All Clean
VID IP Address			Mac Address	Port Delete

Figure 4.114 – Security > Smart Binding > Black List

By giving conditions, desired devices information can be screened out below and then click **Find** to search for a list of the entry:

VID: Enter the VLAN ID number of the device.

IP Address: Enter the IP Address of the device.

MAC Address: Enter the MAC Address of the device.

Port: Enter the port number which the device connects to.

Check a box of Delete column to release an entry from the forbidden list and then click **Apply** to delete an entry from the list.

Click Select All to select all entries, or click Clean to select none of the entries

AAA > RADIUS Server

The RUAIUS Server of the Switch allows you to facilitate centralized user administration as well as providing protection against a sniffing, active hacker.

Authentication RADIUS Server)	Safeguard
Index	1	•				
IP Address	IPv4 0.0.0.0					
	O IPv6					
Authentication Port (1-65535)	1812					
Accounting Port (1-65535)	1813					
Timeout (1-255)	5	sec				
Retransmit (1-255)	2	times				
Кеу		For key, th	e maximum numbe	er of character is 32.		
Confirm Key						
						Apply
RADIUS Server List						
Index IP Address	Auth-Port	Acct-Port	Timeout	Retransmit	Кеу	Delete
2						
3						
4						
5						

Figure 4.115 – AAA > RADIUS Server

Index: Choose the desired RADIUS server to configure: 1, 2 or 3. The user can create maximum 5 RADIUS servers.

IP Address: Select IPv4 or IPv6 and enter the IP address.

Authentication Port (1 - 65535): Set the RADIUS authentic server(s) UDP port. The default port is 1812.

Accounting Port (1 - 65535): Set the RADIUS account server(s) UDP port. The default port is 1813.

Timeout (1 – 255 sec): This field will set the time the Switch will wait for a response of authentication from the user. The user may set a time between *1* and *255* seconds. The default setting is *5* seconds.

Retransmit (1 – 255 times): This command will configure the maximum number of times the Switch will accept authentication attempts. Users failing to be authenticated after the set amount of attempts will be denied access to the Switch and will be locked out of further authentication attempts. Command line interface users will have to wait 60 seconds before another authentication attempt. Telnet and web users will be disconnected from the Switch. The user may set the number of attempts from 1 to 255. The default setting is 2.

Key: Set the key the same as that of the RADIUS server.

Confirm Key: Confirm the shared key is the same as that of the RADIUS server.

Click the **Apply** button to implement changes made.

AAA > 802.1X > 802.1X Global Settings

Network switches provide easy and open access to resources, by simply attaching a client PC. Unfortunately this automatic configuration also allows unauthorized personnel to easily intrude and possibly gain access to sensitive data.

IEEE-802.1X provides a security standard for network access control, especially in Wi-Fi wireless networks. 802.1X holds a network port disconnected until authentication is completed. The switch uses Extensible Authentication Protocol over LANs (EAPOL) to exchange authentication protocol client identity (such as a user name) with the client, and forward it to another remote RADIUS authentication server to verify access rights. The EAP packet from the RADIUS server also contains the authentication method to be used. The client can reject the authentication method and request another, depending on the configuration of the client software and the RADIUS server. Depending on the authenticated results, the port is either made available to the user, or the user is denied access to the network.

802.1X Global Settings		😑 Safeguard
Authentication State Forward EAPOL PDU	Enabled	
Authentication Protocol	.ocal T	Apply

Figure 4.116 – AAA > 802.1x Global Settings

Authentication State: Specifies to enable or disable the 802.1X function.

Forward EAPOL PDU: This is a global setting to control the forwarding of EAPOL PDU. When 802.1X functionality is disabled globally or for a port, and if 802.1X forward PDU is enabled both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports for which 802.1X forward PDU is enabled and 802.1X is disabled (globally or just for the port). The default state is disabled.

Authentication Protocol: Indicates the 802.1X Protocol on the device. The possible field values are *Local* and *RADIUS*.

Click the **Apply** button to implement changes made.

AAA > 802.1X > 802.1X Port Settings

To use EAP for security, set the 802.1X Port Settings for the Radius Server and applicable authentication information.

002	1X Por	t Settin	gs								0 5	Safegu	lard
802.	X Port Ac	cess Cont	trol										
From	Port		1		T		To Port		52		T		
Ouio	Period (0-	SEEDE)	60		sec		SuppTimeout (1-6	EE2E)	30		sec		
								5555)					
Serv	erTimeout ((1-65535)	30		sec		MaxReq (1-10)		2		times		
TxPe	riod (1-655	535)	30		sec		ReAuthPeriod (1-6	65535)	3600)	sec		
ReA	uthenticatio	on	Disable	ed	T		Port Control		For	ceAuthoriz	ed 🔻		
0	1.111A				_		Direction						
Capa	Dinty		None		Ŧ		Direction		Bot	n	Ŧ		
										_			
											Refresh	Apply	V
											Refresh	- de les	У
											Kerresi		У
		0.000			0.11	0	0	Details			Kerresit		
Port	AdmDir	Oper CrlDir	Port Control	TxPeriod	Quiet Period	Supp - Timeout	Server - Timeout	ReAuth Period	ReAuth	Capability		Session Time	
Port 1	AdmDir Both		Port Control Force Authorized	TxPeriod 30					ReAuth Disabled	Capability		Session	
Port 1 2		CrlDir			Period	Timeout	Timeout MaxReq	Period			Port Status	Session Time	
1	Both	CrlDir Both	Force Authorized	30	Period 60	Timeout 30	Timeout MaxReq 30 2	Period 3600	Disabled	None	Port Status Unauthorized	Session Time 0	
1	Both Both	CrIDir Both Both	Force Authorized Force Authorized	30 30 30 30 30	Period 60 60 60 60	Timeout 30 30 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600	Disabled Disabled	None None	Port Status Unauthorized Unauthorized	Session Time 0	U: ** ** ** ** ** ** **
1 2 3	Both Both Both	CrIDir Both Both Both	Force Authorized Force Authorized Force Authorized	30 30 30	Period 60 60 60	Timeout 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2	Period 3600 3600 3600	Disabled Disabled Disabled	None None None	Port Status Unauthorized Unauthorized Unauthorized	Session Time 0 0	
1 2 3 4	Both Both Both Both	CrIDir Both Both Both Both	Force Authorized Force Authorized Force Authorized Force Authorized	30 30 30 30 30	Period 60 60 60 60	Timeout 30 30 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600 3600 3600	Disabled Disabled Disabled Disabled	None None None	Port Status Unauthorized Unauthorized Unauthorized Unauthorized	Session Time 0 0 0	U: ** ** ** ** ** ** **
1 2 3 4 5	Both Both Both Both Both	CrIDir Both Both Both Both Both	Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized	30 30 30 30 30 30	Period 60 60 60 60 60	Timeout 30 30 30 30 30 30	Timeout Maxkeq 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600 3600 3600 3600	Disabled Disabled Disabled Disabled Disabled	None None None None None	Port Status Unauthorized Unauthorized Unauthorized Unauthorized	Session Time 0 0 0 0	U: xx xx xx xx xx
1 2 3 4 5 6	Both Both Both Both Both Both	CrIDir Both Both Both Both Both Both	Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized	30 30 30 30 30 30 30 30	Period 60 60 60 60 60 60	Timeout 30 30 30 30 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600 3600 3600 3600 3600	Disabled Disabled Disabled Disabled Disabled Disabled	None None None None None None	Port Status Unauthorized Unauthorized Unauthorized Unauthorized Unauthorized	Session Time 0 0 0 0 0	U: ▲
1 2 3 4 5 6 7	Both Both Both Both Both Both Both	CriDir Both Both Both Both Both Both Both	Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized	30 30 30 30 30 30 30 30 30	Period 60 60 60 60 60 60 60	Timeout 30 30 30 30 30 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600 3600 3600 3600 3600 3600	Disabled Disabled Disabled Disabled Disabled Disabled Disabled	None None None None None None None	Port Status Unauthorized Unauthorized Unauthorized Unauthorized Unauthorized Unauthorized	Session Time 0 0 0 0	
1 2 3 4 5 6 7 8	Both Both Both Both Both Both Both Both	CrIDir Both Both Both Both Both Both Both Both	Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized Force Authorized	30 30 30 30 30 30 30 30 30	Period 60 60 60 60 60 60 60 60	Timeout 30 30 30 30 30 30 30 30 30 30	Timeout MaxReq 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2 30 2	Period 3600 3600 3600 3600 3600 3600 3600 3600	Disabled Disabled Disabled Disabled Disabled Disabled Disabled Disabled	None None None None None None None None	Port Status Unauthorized Unauthorized Unauthorized Unauthorized Unauthorized Unauthorized	Session Time 0 0 0 0 0	Image: state Image: state<

Figure 4.117 – AAA > 802.1X > 802.1X Port Settings

From Port/To Port: Enter the port or ports to be set.

QuietPeriod (0 – 65535 sec): Sets the number of seconds that the switch remains in the quiet state following a failed authentication exchange with the client. Default is *60* seconds.

ServerTimeout (1 – 65535 sec): Sets the amount of time the switch waits for a response from the client before resending the response to the authentication server. Default is *30* seconds.

TxPeriod (1 – 65535 sec): This sets the TxPeriod of time for the authenticator PAE state machine. This value determines the period of an EAP Request/Identity packet transmitted to the client. Default is 30 seconds.

ReAuthentication: Determines whether regular reauthentication will take place on this port. The default setting is *Disabled*.

Capability: Indicates the capability of the 802.1X. The possible field values are:

Authenticator – Specifies the Authenticator settings to be applied on a per-port basis.

None – Disable 802.1X functions on the port.

SuppTimeout (1 – 65535 sec): This value determines timeout conditions in the exchanges between the Authenticator and the client. Default is *30* seconds.

MaxReq (1 – 10): This parameter specifies the maximum number of times that the switch retransmits an EAP request (md-5challnege) to the client before it times out the authentication session. Default is 2 times.

ReAuthPeriod (1 – 65535 sec): A constant that defines a nonzero number of seconds between periodic reauthentication of the client. The default setting is *3600* seconds.

Port Control: This allows user to control the port authorization state.

Select **ForceAuthorized** to disable 802.1X and cause the port to transition to the authorized state without any authentication exchange required. This means the port transmits and receives normal traffic without 802.1X-based authentication of the client.

If **ForceUnauthorized** is selected, the port will remain in the unauthorized state, ignoring all attempts by the client to authenticate. The Switch cannot provide authentication services to the client through the interface.

If **Auto** is selected, it will enable 802.1X and cause the port to begin in the unauthorized state, allowing only EAPOL frames to be sent and received through the port. The authentication process begins when the link state of the port transitions from down to up, or when an EAPOL-start frame is received. The Switch then requests the identity of the client and begins relaying authentication messages between the client and the authentication server.

The default setting is Auto.

Direction: Sets the administrative-controlled direction on the port. The possible field values are:

Both – Specifies the control is exerted over both incoming and outgoing traffic through the controlled port selected in the first field.

In – Disables the support in the present firmware release.

Click the **Apply** button to implement changes made.

AAA > 802.1X > 802.1X User

The **802.1X User** page allows user to set different local users on the Switch. Enter a **802.1X User** name, **Password** and **Confirm Password**. Properly configured local users will be displayed in the table.

802.1X User			😑 Safeguard
802.1X User Maximum 15 characters	Password	Confirm Password	Add
Total Entries: 0			
User Name	Password		Delete

Figure 4.118 - AAA > 802.1X > 802.1X User

Click **Add** to add a new 802.1X user.

ACL > ACL Wizard

Access Control List (ACL) allows you to establish criteria to determine whether or not the Switch will forward packets based on the information contained in each packet's header. This criteria can be specified on a basis of the MAC address, or IP address.

The ACL Configuration Wizard will aid with the creation of access profiles and ACL Rules. The ACL Wizard will create the access rule and profile automatically. The maximum usable profiles are 50 and with 200 Rules in total for the switch.

To create a new access rule, select Create and enter the Access-List Name then click Next button.

ACL Configuration Wizard	😑 Safeguard
Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Do you want to create a new ACL access-list or update an existing access-list?	
Create Access-List Name	
O Update	
	Next
Figure 4.119 - ACL > ACL Wizard – Create Access-List	

The steps of adding an access profile are described below:

1) Select the Packet Type: MAC, IPv4 or IPv6.

ACL Configuration Wizard	😑 Safeguard
Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Which type of packet do you want to monitor?	
MAC	
O IPv4	
O IPv6	
	Back Next
Figure 4.120 - ACL > ACL Wizard – Select Packet Type	

acket type based on MAC address, IPv4 address, IPv6 address or packet content. This w

Select packet type based on MAC address, IPv4 address, IPv6 address or packet content. This will change the window according to the requirements for the type of profile. **MAC:** Defines the ACL profile Layer 2 protocols. Select MAC to monitor MAC address of each packet.

IPv4: Defines the IPv4 ACL profile protocols. Select IPv4 to monitor IPv4 address of each packet. **IPv6:** Defines the IPv6 ACL profile protocols. Select IPv6 to monitor IPv6 address of each packet.

• To define the MAC ACL Rule: Select MAC click Next button. The updates to show the follows:

ACL Configurati	on Wizard			😑 Safeguard			
	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule.						
O Bequence No. (1-0	(5555)	 Auto Assign 					
Assign rule criteria							
MAC address	802.1Q VLAN	Ether Type/LLC	Payload				
MAC address							
Source	Specify •	Address	Mask				
Destination	Specify •	Address	Mask				
802.1Q VLAN							
dot1P (0-7)							
VLAN ID	Any 🔻						
Enthernet Type							
Ethernet-type							
Action	Permit •						
Priority (0-7)							
Replace Priority							
				Deale Neut			
				Back Next			
Figure 4.121 – Add Access Rule - MAC							

Assign sequence number:

Sequence No. (1-65535): Specifies the sequence number. The value is from 1 to 65535. **Auto Assign:** Auto assign the sequence number for a new rule.

Assign Rule Criteria: Specifies the MAC address settings.

Source: Select the source MAC to be specified or Any. Enter a source MAC address and source MAC mask, e.g. FF-FF-FF-FF-FF-FF-FF.

Destination: Select the destination MAC to be specified or Any. Enter a destination MAC address and destination MAC mask, e.g. FF-FF-FF-FF-FF.

If user selects the 802.1Q VLAN box, then need to specify the dot1p and VLAN ID.

Dot1p (0-7): Specifies the dot1p priority.

VLAN ID: Selecting this option instructs the Switch to examine the 802.1p priority value of each packet header and use this as the, or part of the criterion for forwarding.

If user selects the Ethernet Type box, then need to specity the Ethernet Type and select the Action.

Ethernet Type: Selecting this option instructs the Switch to examine the Ethernet type value in each frame's header.

Action: Specifies the ACL forwarding action matching the rule criteria. **Permit** forwards packets if all other ACL criteria are met. **Deny** drops packets if all other ACL criteria is met.

Priority (0-7): Specifies the MAC ACL priority whish values are 0-7. **Replace Priority:** Check the box to enable the Replace Priority feature.

Click **Next** button then the ACL profile is added.

• To define the IPv4 ACL ICMP Rule: Select IPv4 and click Next button. Select the Protocol Type to ICMP, the updates to show the follows:

ACL Configuration	n Wizard			😑 Safeguard			
	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule.						
Sequence No. (1-655)	535)	Auto Assign					
Assign rule criteria							
L2 Header	TOS	IPv4 Address	Protocol				
ToS							
ToS (0-7)							
OSCP (0-63)							
IPv4 Address							
Source	Specify	 Address 	Mask				
Destination	Specify	 Address 	Mask				
Protocol							
Protocol Type	ICMP	T					
Protocol ID (0-255)							
Source Port		Source Port Mask					
Destination Port		Destination Port Mask					
ICMP Type (0-255)		Code (0-255)					
IGMP (0-255)							
Action	Permit	T					
Priority (0-7)							
Replace Priority							
				Back Next			
Figure 4.122 - Add Access Rule – IPv4 ICMP							

Assign sequence number:

Sequence No. (1-65535): Specifies the sequence number. The value is from 1 to 65535. **Auto Assign:** Auto assign the sequence number for a new rule.

Assign Rule Criteria: Specifies the IPv4 ACL settings.

ToS: Check the box to specify the ToS priority and DSCP value.

ToS (0-7): Specifies the ToS value.

DSCP (0-63): Specifies the DSCP value. The values are between 0 and 63.

IPv4 Address: Specifies the IPv4 Source and destination address.

Source: Select the source IP to be specified or Any relevant to the ACL rules. Enter a source IP address and source IP mask. For example, to set 176.212.XX.XX, use mask 255.255.0.0.

Destination: Select the destination IP to be specified or Any relevant to the ACL rules. Enter a destination IP address and destination IP mask. For example, to set 176.212.XX.XX, use mask 255.255.0.0.

Protocol: Check Protocol to configure the related settings.

Protocol Type: Select the protocol type for IPv4. The possible fields are **ICMP**, **IGMP**, **TCP**, **UDP** and **Protocol ID**.

ICMP Type (0-255): Sets the ICMP Type field as an essential field to match.

Code (0-255): Sets the ICMP code field as an essential field to match.

Select the ports which added into the Access-List and click Next button then the ACL profile was added.

To define the IPv4 ACL IGMP Rule: Select IPv4 ACL and click Next button. Select the Protocol • Type to IGMP, the updates to show the follows:

ACL Configuration	Wizard		Safeguard				
-	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule.						
Sequence No. (1-655)	35)	Auto Assign					
Assign rule criteria							
L2 Header	TOS	IPv4 Address Protocol					
ToS							
ToS (0-7)							
OSCP (0-63)							
IPv4 Address							
Source	Specify	Address Mask					
Destination	Specify	Address Mask					
Protocol							
Protocol Type	IGMP	v					
Protocol ID (0-255)							
Source Port		Source Port Mask					
Destination Port		Destination Port Mask					
ICMP Type (0-255)		Code (0-255)					
IGMP (0-255)							
Action	Permit	•					
Priority (0-7)							
Replace Priority							
			Back Next				
		Figure 4 123 Add Access Dule					

Figure 4.123 - Add Access Rule – IPv4 IGMP

IGMP Type (0-255): Sets the IGMP Type field as an essential field to match. Click **Next** button then the ACL profile is added.

To define the IPv4 ACL TCP Rule: Select IPv4 ACL and click Next button. Select the Protocol Type • to **TCP**, the updates to show the follows:

ACL Configuration	Wizard					😑 Safeguard	
-	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule.						
Sequence No. (1-6553)	35)	Auto Assi	gn				
Assign rule criteria							
L2 Header	TOS	IPv4 Addre	SS	Protocol			
ToS							
ToS (0-7)							
OSCP (0-63)							
IPv4 Address							
Source	Specify	Address		Mask			
Destination	Specify	 Address 		Mask			
Protocol							
Protocol Type	TCP	•					
Protocol ID (0-255)							
Source Port		Source Por					
Destination Port		Destination					
ICMP Type (0-255)		Code (0-25	5)				
IGMP (0-255)	Descrit						
Action	Permit	•					
Priority (0-7)							
Replace Priority							
					Ba	ck Next	
Figure 4.124 - Add Access Rule – IPv4 TCP							

0

IPv4 Address: Defines the range of source Ports relevant to the ACL rules.

Source: Defines the range of source Ports relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Click **Next** button then the ACL profile is added.

• To define the IPv4 ACL UDP Rule: Select IPv4 ACL and click Next button. Select the Protocol Type to UDP, the updates to show the follows:

ACL Configuration	Wizard			😑 Safeguard			
	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule. © Sequence No. (1-65535) • Auto Assign						
Assign rule criteria L2 Header	TOS	IPv4 Address	Protocol				
ToS	103	IFV4 Address	Plotocol				
 ToS (0-7) DSCP (0-63) 							
IPv4 Address							
Source	Specify	Address	Mask				
Destination	Specify	Address	Mask				
Protocol							
Protocol Type	UDP	·					
Protocol ID (0-255)							
Source Port		Source Port Mask					
Destination Port		Destination Port Mask					
ICMP Type (0-255)		Code (0-255)					
IGMP (0-255)							
Action	Permit	<u></u>					
Priority (0-7)							
Replace Priority							
			Bac	k Next			

Figure 4.125 - Add Access Rule - IPv4 UDP

IPv4 Address: Defines the range of source Ports relevant to the ACL rules.

Source: Defines the range of source Ports relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Click **Next** button then the ACL profile is added.

• To define the IPv4 ACL Protocol ID Rule: Select IPv4 ACL and click Next button. Select the Protocol Type to Protocol ID, the updates to show the follows:

ACL Configuration Wizard			😑 Safeguard				
Please assign a sequence number to crea	Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule.						
Sequence No. (1-65535)	Auto Assign						
Assign rule criteria							
L2 Header TOS	IPv4 Address	Protocol					
ToS							
O ToS (0-7)							
O DSCP (0-63)							
IPv4 Address							
Source Specify	Address	Mask					
Destination Specify	 Address 	Mask					
Protocol							
Protocol Type Protocol ID	T						
Protocol ID (0-255)							
Source Port	Source Port Mask						
Destination Port	Destination Port Mask						
ICMP Type (0-255)	Code (0-255)						
IGMP (0-255)							
Action Permit	•						
Priority (0-7)							
Replace Priority							
		В	Back Next				

Figure 4.126 - Add Access Rule – IPv4 Protocol ID

IPv4 Address: Defines the range of source Ports relevant to the ACL rules.

Source: Defines the range of source Ports relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Protocol ID (0-255) – Specifies the Protocol ID to be configured.

Click **Next** button then the ACL profile is added.



NOTE: A combination of one or several filtering masks can be selected simultaneously. The page updates with the relevant field(s).

• To define the IPv6 ACL ICMP rule: Select IPv6 ACL with ICMP of Protocol Type and click Next button. The updates to show the follows:

ACL Configuration	Wizard			😑 Safeguard
-	> Select Packet Type >> Add te number to create a new 35) e			
Assign rule criteria	1	(1	
L2 Header	Traffic Class	Next Header	IPv6 Address	
Traffic Class				
IPv6 Class (0-255)				
Next Header				
Protocol Type	ICMP V			
Protocol ID (0-255)				
Source Port		Source Port Mask		
Destination Port		Destination Port Mask		
ICMPv6 Type (0-255)		Code (0-255)		
IPv6 Address		Address		
Source	Specify •		Prefix Length	
Destination	Specify •	Address	Prefix Length	
Action	Permit 🔻			
Priority (0-7)				
Replace Priority				
				Back Next

Figure 4.127 - Add Access Rule – IPv6 ICMP

IPv6 Class (0-255): Specifies the class of access rule. The field range is from 0 to 255.

ICMPv6 Type: Sets the ICMP Type field as an essential field to match.

Code (0-255): Sets the ICMP code field as an essential field to match.

Source IPv6 Address: Defines the range of source IP addresses, relevant to the ACL rules. For example, to set 2002:0:0:0:0:0:b0d4:0, use mask 128.

Destination IPv6 Address: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 2002:0:0:0:0:0:bfd4:0, use mask 128.

Action: Specifies the ACL forwarding action matching the rule criteria. **Permit** forwards packets if all other ACL criteria are met. **Deny** drops packets if all other ACL criteria is met.

Click **Next** button then the ACL profile is added.

• To define the IPv6 ACL TCP profile: Select IPv6 ACL with TCP of Protocol Type and click Next button. The updates to show the follows:

ACL Configuration	Wizard			😑 Safeguard
-	> Select Packet Type >> Ad te number to create a new 35) e			
Assign rule criteria				
L2 Header	Traffic Class	Next Header	IPv6 Address	
Traffic Class				
IPv6 Class (0-255)				
Next Header				
Protocol Type	TCP 🔻			
Protocol ID (0-255)				
Source Port		Source Port Mask		
Destination Port		Destination Port Mask		
ICMPv6 Type (0-255)		Code (0-255)		
IPv6 Address				
Source	Specify •	Address	Prefix Length	
Destination	Specify •	Address	Prefix Length	
Action	Permit 🔹			
Priority (0-7)				
Replace Priority				
				Back Next

Figure 4.128 - Add Access Rule – IPv6 TCP

Source Port: Specifies the source port.

Source Port Mask: Defines the range of source IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination Port: Specifies the destination port.

Destination Port Mask: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Click **Next** button then the ACL profile is added.

• To define the IPv6 ACL UDP profile: Select IPv6 ACL with UDP of Protocol Type and click Next button. The updates to show the follows:

ACL Configuration	Wizard			😑 Safeguard		
Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule Please assign a sequence number to create a new rule. Sequence No. (1-65535)						
Assign rule criteria L2 Header	Traffic Class	Next Header	IPv6 Address			
 Traffic Class IPv6 Class (0-255) ✓ Next Header Protocol Type Protocol ID (0-255) Source Port Destination Port ICMPv6 Type (0-255) IPv6 Address 	UDP V	Source Port Mask Destination Port Mask Code (0-255) Address				
Source Destination Action Priority (0-7) Replace Priority	Specify ▼ Specify ▼ Permit ▼	Address	Prefix Length			
			[Back Next		

Figure 4.129 - Add Access Rule - IPv6 UDP

Source Port: Specifies the source port.

Source Port Mask: Defines the range of source IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination Port: Specifies the destination port.

Destination Port Mask: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Click **Next** button then the ACL profile is added.

• To define the IPv6 ACL Protocol ID profile: Select IPv6 ACL with Protocol ID of Protocol Type and click Next button. The updates to show the follows:

ACL Configuration	Wizard			😑 Safeguard
-	> Select Packet Type >> Ad ce number to create a new 35) e			
Assign rule criteria				
L2 Header	Traffic Class	Next Header	IPv6 Address	
Traffic Class				
IPv6 Class (0-255)				
Next Header				
Protocol Type	Protocol ID 🔹			
Protocol ID (0-255)				
Source Port		Source Port Mask		
Destination Port		Destination Port Mask		
ICMPv6 Type (0-255) IPv6 Address		Code (0-255)		
		Address		
Source	Specify •		Prefix Length	
Destination	Specify •	Address	Prefix Length	
Action	Permit 🔻			
Priority (0-7)				
Replace Priority				
				Back Next

Figure 4.130 - Add Access Rule – IPv6 Protocol ID

Source Port: Specifies the source port.

Source Port Mask: Defines the range of source IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Destination Port: Specifies the destination port.

Destination Port Mask: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 0 - 15, set mask of FFF0.

Source IPv6 Address: Defines the range of source IP addresses, relevant to the ACL rules. For example, to set 2002:0:0:0:0:0:0b0d4:0, use mask 128.

Destination IPv6 Address: Defines the range of destination IP addresses, relevant to the ACL rules. For example, to set 2002:0:0:0:0:0:bfd4:0, use mask 128.

Action: Specifies the ACL forwarding action matching the rule criteria. **Permit** forwards packets if all other ACL criteria are met. **Deny** drops packets if all other ACL criteria is met.

Click **Next** button then the ACL profile is added.



NOTE: A combination of one or several filtering masks can be selected simultaneously. The page updates with the relevant field(s).

2) Selecting the field of interest will display the next page which shows the follows:

ACL Configuration Wizard	😑 Safeguard
ACL Configuration Wizard Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Rule • Port Based • Port 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 Port 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 Port 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 55 51 52	Safeguard
Back Figure 4.131 - Add Access Rule – Ports	Next

Click **Next** button then the ACL profile is added.

3) To modify an existing rule, please select **Update** and the **Access-List Name** hyperlink and click **Next** button.

ACL Configuration Wizard			😑 Safeguard
Access-List Assignment >> Select Pa Do you want to create a new ACL acc O Create Access-List Name	acket Type >> Add Rule >> Apply Rule :ess-list or update an existing access-	list?	
Access-List Name	Туре	Total Rules	
O acl2	MAC	International Rules	
			Next

Figure 4.132 - ACL > ACL Wizard – Update ACL List

ACL > ACL Access List

The ACL Access List page provides information for configuring ACL Access manually. Click Edit Rules button to modify the access profile or click **Delete** button to remove the ACL profile.

ACL Access List			😑 Safeguard
Add Delete All Current/Max. Profile: 0/50, Current	nt/Max. Rule: 0/768		
Access-List Name	Туре	Total Rules	

Figure 4.133 - ACL > ACL Access List

To add a new profile, click **Add** button. The updates to show the follows:

Add ACL Profile		0 5	Safeguard
Add ACL Profile Access-List Packet Type	Name • MAC • IPv4 • IPv4 Extended • IPv6	3	Safeguard
	Back		Apply
	Element 4.124 ACL & ACL Assess List Add ACL Descile		

Figure 4.134 - ACL > ACL Access List – Add ACL Profile

Access-List: Specifies the access list name for the ACL profile to be added.

Packet Type: Specifies the packet type to be MAC, IPv4, IPv4 Exdended or IPv6 then click Apply button.

To modify an existing rule, click **Edit Rules** button and ACL Access list table will be displayed. Please click on the Sequence No. hyperlink.

IAC Access Rule Li	😑 Safeguaro		
Access-List Name : acl2	Type : MAC		Back Add
Seq. No.	Summary	Action	Delete
1	Destination MAC, Source MAC, VLAN, 802.1p, Ether Type	Permit	Delete

Figure 4.135 - ACL > ACL Access List – Update ACL Profile

ACL > ACL Access Group

The ACL Access Group page allows user to configure the ACL access group settings.

CL Acce	ess Group			Safeguar
Port MAC Ac		v		
 IPv4 Acc IPv6 Acc 		T T		Apply
IPvo Acc	cess-List		L	Арріу
Port No.	MAC	IPv4	IPv6	
0				
1				
2 3				
3				
4 5				
5				
6				

Figure 4.136 - ACL > ACL Access Group

Port: Specifies the ports to be added in the access list group.

MAC Access-List: Add the specified ports in the MAC access list group.

IPv4 Access-List: Add the specified ports in the IPv4 access list group.

IPv6 Access-List: Add the specified ports in the IPv6 access list group.

Click the **Apply** button to implement changes made.

ACL > ACL Hardware Resource Status

The ACL Hardware Resource Status page displays the information of ACL Hardware Resource status.

Hardware Profile ID	Access-List Name	Consumed/Total Entries	
1	STATIC_HOST_ROUTE	1 / 128	
2	STATIC_NET_ROUTE	1 / 128	
3		0 / 128	
4		0 / 128	
5		0 / 128	
6		0 / 128	
7		0 / 128	
8		0 / 128	
9		0 / 128	
10		0 / 128	

PoE > PoE Global Settings (only for DGS-1210-08P/24P)

This page will display the PoE status including System Budget Power, Support Total Power, Remainder Power, and The ratio of system power supply.

PoE Global Settings	O Safeguard
PoE Power Threshold (7.1-193.0) 193.0 Watts Power Shut Off Sequence Deny low priority port ▼	Apply
System Power Status Total PoE Power Budget 193 Power Used 0 Power Left 193 The percentage of system power supplied 0%	
 7 watts guard band is reserved for system to prevent a PD from being powered off when encountering a sudden increment of PD power supp Power reaches guard band, a new PD will trigger the action defined in Power Shut Off Sequence. If a sudden increment of a PD power causes PSE power overload, switch will firstly stop power supply to the port with a low priority PD. As a r PD can work without being affected. 	

Figure 4.138 – PoE > PoE Global Setting

System Power Threshold: Manually configure the system power budget.

Power Shut Off Sequence: Defines the method used to deny power to a port once the threshold is reached. The possible fields are:

Deny next port: When the power budget is exceeded, the next port attempting to power up is denied, regardless of the port priority.

Deny low priority port: The port with the lower priority will be shut down to allow the higher priority port to power up.

Click the **Apply** button to implement changes made.

System Power Status: Displays the system power status of device.

Total PoE Power Budget: Displays the total PoE power budget of this switch.

Power Used: Displays the current used power of the switch.

Power Left: Displays the spare power of the switch.

The percentage of system power supplied: Displays the percentage of system power supplied of the switch.

PoE > PoE Port Settings (only for DGS-1210-08P/24P)

The DGS-1210 series supports Power over Ethernet (PoE) as defined by the IEEE specification. The PoE port specification is listed in the table below:

Model Name	PoE Capable Ports	Power Budget
DGS-1210-08P	Port 1 ~ Port 8: Max. PoE Output 30 Watts	65 Watts
DGS-1210-24P	Port 1 ~ Port 24: Max. PoE Output 30 Watts	193 Watts

The DGS-1210 series work with all D-Link 802.3af or 802.3at capable devices. The Switch also works in PoE mode with all non-802.3af capable D-Link AP, IP Cam and IP phone equipment via the PoE splitter DWL-P50.

IEEE 802.3at defined that the PSE provides power according to the following classification:

Class	Usage	Output power limit by PSE
0	Default	15.4W
1	Optional	4.0W
2	Optional	7.0W
3	Optional	15.4W
4	Optional	30W

The PoE port table will display the PoE status including, Port Enable, Power Limit, Power (W), Voltage (V), Current (mA), Classification, Port Status. You can select **From Port** / **To Port** to control the PoE functions of a port. The DGS-1210 series will auto disable the ports if port current is over 375mA in 802.3af mode or 625mA in pre-802.3at mode.

Note: The PoE Status information of Power current, Power Voltage, and Current is the power usage information of the connected PD; please "Refresh" to renew the information.

PoE Port Settings Safeguard								
From Port	To Port 24 V	State Enabled ▼	Time Range N/A	Priority ▼ Normal ▼	Delay Power Detect Power Limit Disabled ▼ Auto ▼ Watts Legacy PD Enable ▼ Refresh Apply			

🥕 1. The port 1 to port 24 can be set a power limit between 1W and 30W. Max power used by PSE: Class 1: 4W, Class 2: 7W, Class 3: 15.4W, Class 4: 30W.

Port	State	Time Range	Priority	Delay P	Legacy	Power	Power (W)	Voltage (V)	Current (mA)	Classification	Status
1	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
2	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
3	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
4	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
5	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
6	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
7	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
8	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
9	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
10	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
11	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
12	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
13	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
14	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
15	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
16	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
17	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
18	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
19	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
20	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
21	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
22	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF
23	Enabled	N/A	Normal	Disabled	Disabled	Auto	0.0	0.0	0.0	N/A	POWER OFF

Figure 4.139 – PoE > PoE Port Setting

From Port / To Port: Specifies the PoE function of a port or ports.

State: Select "Enabled" or "Disabled" to configure PoE function for designated port(s). Default is Enabled.

Time Range: Select the PoE time profile configured from Time-Based PoE > Time Range Settings to enable the time-based PoE function on designated port(s). Default setting is N/A.

Priority: Configure the power supply priority as "Low", "Normal", or "High" on designated port(s). Default is Normal.

Delay Power Detect: Configure the delay power detection. Default is Disabled.

Power Limit: This function allows you to manually set the port power current limitation to be given to the PD. To protect the DGS-1210 PoE series and the connected devices, the power limit function will disable the PoE function of the port when the power is overloaded. Select from "Class 1", "Class 2", "Class 3", "Class 4" and "Auto" for the power limit. "Auto" will negotiate and follow the classification from the PD power current based on the 802.3at standard.

User Define: Check the box and input the power budget (from 1 to 30W) to manually assign an upper limit of port power budget on designated port(s).

Legacy PD: Specifies to enable or disable detecting legacy PDs signal.

Click **Apply** to make the configurations take effects or click **Refresh** to redisplay the table.

Note: For the PoE Port Settings table, if the classification was shown as "Legacy PD", it will be classified to non-AF PD or Legacy PD.

Note: This switch conforms to IEEE 802.3af and 802.3at standards. The IEEE PoE standard requires a switch to shut off power to a port if the power draw is less than 10mA within a 400ms time interval. To support some non-standard devices that may take longer, you may enable this feature to extend the time interval to 500ms. If the PD is still not powering on, please contact the vendor of your device for support.

SNMP > SNMP > SNMP Global Settings

Simple Network Management Protocol (SNMP) is an OSI Layer 7 (Application Layer) protocol designed specifically for managing and monitoring network devices. SNMP enables network management stations to read and modify the settings of gateways, routers, switches, and other network devices. Use SNMP to configure system features for proper operation, monitor performance and detect potential problems in the Switch or LAN.

Managed devices that support SNMP include software (referred to as an agent), which runs locally on the device. A defined set of variables (managed objects) is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB), which provides a standard presentation of the information controlled by the on-board SNMP agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The default SNMP global state is disabled. Select Enable and click **Apply** to enable the SNMP function.

SNMP Global Settings		😑 Safeguard
SNMP Global State	C Enabled	
Trap Settings		
SNMP Authentication Traps		
Device Bootup		
Port Link Up / Link Down		
RSTP Port State Change		
Firmware Upgrade State		
PoE Power On / Off		
PoE Power Error		
PoE over max power budget		
Loopback Detection occuring / recovery		
		Apply

Figure 4.140 – SNMP > SNMP > SNMP Global Settings

Trap Settings: Specifies whether the device can send SNMP notifications.

SNMP Authentication Traps: Specifies the device to send authentication failure notifications.

Device Bootup: System boot-up information.

Illegal Login: Events of incorrect password logins, recording the IP of the originating PC.

Port Link Up / Link Down: Copper port connection information.

RSTP Port State Change: Events of a RSTP port state changes.

Firmware Upgrade State: Information of firmware upgrade - success or failure.

PoE power On / Off: Status of power per port.

PoE Power Error: The four trap events are: power over loading, short circuit, thermal shutdown and power deny.

PoE over max power budget: When the system supplies power to PDs and hits the max PoE power budget, the system will send out this trap message.

Delete

Loopback Detection occurring / recovery: Specifies the device to send SNMP Trap when Loopback Detection occurring and recovery.

SNMP > SNMP > SNMP User

ReadWrite

This page is used to maintain the SNMP user table for the use of SNMPv3. SNMPv3 allows or restricts users using the MIB OID, and also encrypts the SNMP messages sent out between users and Switch.

SNMP User Tab	le					 Safeguard
User Name Group Name SNMP Version Encrypt Auth-Protocol Privacy Protocol	v1 Disabled MD5 DES	* * * * *	Password Password			
* indicates mandat						Add
User Name	Group Name	_	SNMP Version	Auth Protocol	Privacy Protocol	Delete
ReadOnly	ReadOnly		v1	None	None	Delete
ReadOnly	ReadOnly		v2c	None	None	Delete
ReadWrite	ReadWrite		v1	None	None	Delete

Figure 4.141 – SNMP > SNMP > SNMP User Table

User Name: Enter a SNMP user name of up to 32 characters.

Group Name: Specifies the SNMP group of the SNMP user.

SNMP Version: Specifies the SNMP version of the user. Only SNMPv3 encrypts the messages.

Encrypt: Specifies the Encrypt is enabled or disabled when the SNMP Version is V3.

Auth-Protocol/Password: Specifies either HMAC-MD5-96 or HMAC-SHA to be the authentication protocol. Enter a password for SNMPv3 encryption in the right column.

Priv-Protocol/Password: Specifies either **no authorization** or **DES 56-bit encryption** and then enter a password for SNMPv3 encryption in the right column.

Click Add to create a new SNMP user account, and click **Delete** to remove any existing data.

SNMP > SNMP > SNMP Group Table

ReadWri

This page is used to maintain the SNMP Group Table associating to the users in SNMP User Table. SNMPv3 can control MIB access policy, security policy for a user group directly.

Group Name: Specifies the SNMP user group of up to 32 characters.

Read View Name: Specifies a SNMP group name for users that are allowed SNMP read privileges to the Switch's SNMP agent.

Write View Name: Specifies a SNMP group name for users that are allowed SNMP write privileges to the Switch's SNMP agent.

Security Model: Select the SNMP security model.

SNMPv1 - SNMPv1 does not support the security features.

SNMPv2 - SNMPv2 supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.

SNMPv3 - SNMPv3 provides secure access to devices through a combination of authentication and encrypting packets over the network.

Security Level: This function is only available when you select SNMPv3 security level.

NoAuthNoPriv - No authorization and no encryption for packets sent between the Switch and SNMP manager.

AuthNoPriv - Authorization is required, but no encryption for packets sent between the Switch and SNMP manager.

AuthPriv – Both authorization and encryption are required for packets sent between the Switch and SNMP manger.

Notify View Name: Specifies a SNMP group name for users that can receive SNMP trap messages generated by the Switch's SNMP agent.

SNMP Group	Table					😑 Safegua
Group Name	[*	Sec	urity Model	v1	•
Read View Name			Sec	urity Level	NoAuthNoPri	Ŧ
Write View Name	[Noti	ify View Name		_
🔸 * indicates man	idatory data.					Add
Group Name	Read View	Write View	Notify View	Security Model	Security Level	Delete
Group Name ReadOnly	Read View Read Write	Write View	Notify View ReadWrite	Security Model	Security Level NoAuthNoPriv	Delete Delete
Group Name ReadOnly ReadOnly		Write View				
ReadOnly	ReadWrite		ReadWrite	v1	NoAuthNoPriv	Delete

Figure 4.142 – SNMP > SNMP > SNMP Group Table

SNMP > SNMP > SNMP View

This page allows you to maintain SNMP views to community strings that define the MIB objects which can be accessed by a remote SNMP manager.

View Name Subtree OID OID Mask View Type Included	SNMP View Table Config	guration			😑 Safeguard
	Subtree OID OID Mask	r r r Included			
	🖋 * indicates mandatory data.				Add
	-				
View Name Subtree OID OID Mask View Type Delete	View Name S	Subtree OID	OID Mask	View Type	Delete
ReadWrite 1 Included Delete	ReadWrite	1	1	Included	Delete

Figure 4.143 – SNMP > SNMP > SNMP View

View Name: Name of the view, up to 32 characters.

Subtree OID: The Object Identifier (OID) Subtree for the view. The OID identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager.

OID Mask: The mask of the Subtree OID. 1 means this object number is concerned, 0 means do not concerned. For example 1.3.6.1.2.1.1 with mask 1.1.1.1.1.0 means 1.3.6.1.2.1.X.

View Type: Specifies the configured OID is Included or Excluded that a SNMP manager can access.

Click Add to create a new view, **Delete** to remove an existing view.

SNMP > SNMP > SNMP Community

This page is used to maintain the SNMP community string of the SNMP managers using the same community string are permitted to gain access to the Switch's SNMP agent.

Community Name: Name of the community string

User Name (View Policy): Specifies the read/write or read-only level permission for the MIB objects accessible to the SNMP community.

SNMP Community Table			😑 Safeguard
Community Name User Name (View Policy)		ReadOnly ▼	
🤌 * indicates mandatory data.			Add
Community Name	User Name		Delete
public	ReadOnly		Delete
private	ReadWrite		Delete

Figure 4.144 –SNMP > SNMP > SNMP Community

Click Add to create a new SNMP community, Delete to remove an existing community.

SNMP > SNMP > SNMP Host

This SNMP Host page is to configure the SNMP trap recipients.

SNMP Host Table			😑 Safeguard
Host IP Address		IPv4	
SNMP Version Community String/ SNMPv3 User Name	V1	▼*	
			Apply
Host IP Address	SNMP Version	Community Name/SNMPv3 User Name	Delete

Figure 4.145 – SNMP > SNMP + SNMP Host

Host IP Address: Select IPv4 or IPv6 and specify the IP address of SNMP management host.

SNMP Version: Specifies the SNMP version to be used to the management host.

Community String/SNMPv3 User Name: Specifies the community string or SNMPv3 user name for the management host.

Click **Apply** to create a new SNMP host, **Delete** to remove an existing host.

SNMP > SNMP > SNMP Engine ID

The Engine ID is a unique identifier used to identify the SNMPv3 engine on the Switch.

Input the Engine ID then click **Apply** to apply the changes and click **Default** resets to default value.



SNMP > RMON > RMON Global Settings

Users can enable and disable remote monitoring (RMON) status for the SNMP function on the Switch. In addition, RMON Rising and Falling Alarm Traps can be enabled and disabled. Click **Apply** to make effects.

RMON C Enabled Sisabled	RMON Global S	ettings	😑 Safeguard
Apply	RMON O Enabled	Disabled	Apply

Figure 4.147 - SNMP > RMON > RMON Global Settings

SNMP > RMON > RMON Statistics

The RMON Statistics Configuration page displays the information of RMON Ethernet Statistics and allows the user to configure the settings.

RMON Ethernet Statistic	s Settings	😑 Safegi	Jard
Index (1~65535) Port	*		
Owner			
* indicates mandatory data.		Refresh Add	
Index Port Drop Events	Octets Packets	Broadcast Packets Multiast Packets Owner Delete	-

Figure 4.148 - SNMP > RMON > RMON Ethernet Statistics Configuration

The RMON Ethernet Statistics Configuration contains the following fields:

Index (1 - 65535): Indicates the RMON Ethernet Statistics entry number.

Port: Specifies the port from which the RMON information was taken.

Owner: Displays the RMON station or user that requested the RMON information.

Click Add to make the configurations take effects and click Refresh to redisplay the table information.

SNMP > RMON > RMON History

The RMON History Control Configuration page contains information about samples of data taken from ports. For example, the samples may include interface definitions or polling periods.

RMON History C	ontrol Settings				😑 Safeguard
Index (1~65535) Port Buckets Requested (1~ Interval (1~3600)	50)	* * 			
Owner 🥕 * indicates mandator	ry data.				Add
Index Port	Buckets Requested	Buckets Granted	Interval	Owner	Delete

Figure 4.149 - SNMP > RMON > RMON History Control Settings

The History Control Configuration contains the following fields:

Index (1 - 65535): Indicates the history control entry number.

Port: Specifies the port from which the RMON information was taken.

Buckets Requested (1 ~ 50): Specifies the number of buckets that the device saves.

Interval (1 ~ 3600): Indicates in seconds the time period that samplings are taken from the ports. The field range is *1-3600*. The default is *1800* seconds (equal to 30 minutes).

Owner: Displays the RMON station or user that requested the RMON information.

Click the **Apply** button to implement changes made.

SNMP > RMON > RMON Alarm

The RMON Alarm Settings page allows the user to configure the network alarms. Network alarms occur when a network problem, or event, is detected.

RMON Alarm Settings			😑 Safeguard
Index (1~65535) Variable Rising Threshold (0~2^31-1) Rising Event Index (1~65535) Owner	* * *	Interval (1~2^31-1) Sample type Falling Threshold (0~2^31-1) Falling Event Index (1~65535)	300 sec Absolute value ▼ *
	Sample Type Rising Threshold		Falling ivent Index

Figure 4.150 - SNMP > RMON > RMON Alarm Settings

The configuration contains the following fields:

Index (1 - 65535): Indicates a specific alarm.

Variable: Specifies the selected MIB variable value.

Rising Threshold (0 ~ 2^31-1): Displays the rising counter value that triggers the rising threshold alarm.

Rising Event Index (1 ~ 65535): Displays the event that triggers the specific alarm. The possible field values are user defined RMON events.

Owner: Displays the device or user that defined the alarm.

Interval (1 ~ 2^31-1): Defines the alarm interval time in seconds.

Sample type: Defines the sampling method for the selected variable and comparing the value against the thresholds. The possible field values are:

Delta value – Subtracts the last sampled value from the current value. The difference in the values is compared to the threshold.

Absolute value - Compares the values directly with the thresholds at the end of the sampling interval.

Falling Threshold (0 ~ 2^31-1): Displays the falling counter value that triggers the falling threshold alarm.

Falling Event Index (1 ~ 65535): Displays the event that triggers the specific alarm. The possible field values are user defined RMON events.

Click **Add** to make the configurations take effects.

SNMP > RMON > RMON Event

The RMON Event page contains fields for defining, modifying and viewing RMON events statistics.

RMON Event S	ettings					😑 Safeguard
Index (1~65535) Description Type Community Owner		None T	*			
🤌 * indicates manda	tory data.					Add
Index D	escription	Туре	Community	Owner	Last Time Sent	Delete

Figure 4.151 - SNMP > RMON > RMON Event Settings

The RMON Events Page contains the following fields:

Index (1~ 65535): Displays the event.

Description: Specifies the user-defined event description.

Type: Specifies the event type. The possible values are:

None – Indicates that no event occurred.

Safequard

Log – Indicates that the event is a log entry.

SNMP Trap – Indicates that the event is a trap.

Log and Trap – Indicates that the event is both a log entry and a trap.

Community: Specifies the community to which the event belongs.

Owner: Specifies the time that the event occurred.

Click Add to add a new RMON event.

Monitoring > Port Statistics

The Port Statistics screen displays the status of each port packet count.

				Refresh	Clear
Port	TxOK	RxOK	TxError	RxError	· · · · · · · · · · · · · · · · · · ·
<u>01</u>	0	0	0	0	
02	0	0	0	0	
03	0	0	0	0	
04	0	0	0	0	
05	0	0	0	0	
06	0	0	0	0	
07	0	0	0	0	
08	0	0	0	0	
09	4009	3896	0	0	
<u>10</u>	0	0	0	0	
<u>11</u>	0	0	0	0	
12	0	0	0	0	
13	0	0	0	0	

Figure 4.152 – Monitoring > Port Statistics

Refresh: Renews the details collected and displayed.

Clear: To reset the details displayed.

TxOK: Number of packets transmitted successfully.

RxOK: Number of packets received successfully.

TxError: Number of transmitted packets resulting in error.

RxError: Number of received packets resulting in error.

To view the statistics of individual ports, click one of the linked port numbers for details.

t:9		Ba	ck Refresh Clear
x		RX	
OutOctets	3110753	InOctets	485802
OutUcastPkts	4085	InUcastPkts	3118
OutNUcastPkts	3	InNUcastPkts	842
OutErrors	0	InDiscards	0
LateCollisions	0	InErrors	0
ExcessiveCollisions	0	FCSErrors	0
InternalMacTransmitErrors	0	FrameTooLongs	0
		InternalMacReceiveError	s 0

Figure 4.153 – Monitoring > Port Statistics

Back: Go back to the Statistics main page.

Refresh: To renew the details collected and displayed.

Clear: To reset the details displayed.

Monitoring > Cable Diagnostics

The Cable Diagnostics is designed primarily for administrators and customer service representatives to examine the copper cable quality. It rapidly determines the type of cable errors occurred in the cable.

Select a port and then click the **Test Now** button to start the diagnosis.

Cable Diagnostics	3				😑 Safeguard
From Port	01 •	To Port	01 🔻		Test Now
Port Test Result		Cable Fault Distance	(meters)	Cable Length (meters)	
The cable diagnostics feat quality of the cables and the		trators or customer ser	vice representatives to verify	/ and test copper cables; it can rapidly	y determine the
1 If cable length is disc	aved as "N/A" (not available) it me	ans the cable length car	anot be detected. The port is	unable to determine the cable length	either because
the link speed is 10/1 2. The deviation of "Cal	100 Mbps or the cable used is broke ble Length(meters)" and "Cable Fau	n or of bad quality.		ay be displayed under Test Result, w	
is less than 10m in le 3. Cable diagnostics ca	ength. n also detect the location of the cab	le fault. This will be sho	wn as "Cable Fault Distance	e", the distance the switch.	
	Fig	ure 4.154 – Monito	oring > Cable Diagnos	tic	

Test Result: The description of the cable diagnostic results.

• **OK** means the cable is good for the connection.

• Short in Cable means the wires of the RJ45 cable may be in contact somewhere.

• Open in Cable means the wires of RJ45 cable may be broken, or the other end of the cable is simply disconnected.

• **Mismatched** means some other errors occurred during cable diagnostics. Please select the same port and test again.

• Line Driver: The high impedance is detected. Out scenario is the cable plug to a power down link partner.

Cable Fault Distance (meters): Indicates the distance of the cable fault from the Switch port, if the cable is less than 2 meters, it will show "No Cable".

Cable Length (meter): If the test result shows OK, then cable length will be indicated for the total length of the cable. The cable lengths are categorized into four types: <50 meters, 50~80 meters, 80~100 meters and >100 meters.



NOTE: Cable length detection is effective on Gigabit ports only.

NOTE: Please be sure that Power Saving feature is disabled before enabling Cable Diagnostics function.

Monitoring > System Log

The System Log page provides information about system logs, including information when the device was booted, how the ports are operating, when users logged in, when sessions timed out, as well as other system information.

yste	em Log		😑 Safegua
			Refresh Clear
	timum 500 entries.	Los Description	Severity
Max	Time	Log Description	Severity
		Log Description Successful login through Web (IP: 10.90.90.96)	Severity
	Time		

Figure 4.155 – Monitoring > System Log

ID: Displays an incremented counter of the System Log entry. The Maximum entries are 500.

Time: Displays the time in days, hours, and minutes the log was entered.

Log Description: Displays a description event recorded.

Severity: Displays a severity level of the event recorded.

Click Refresh to renew the page, and click Clear to clean out all log entries.



Note: The system logs will be reset and won't be saved after the switch reboots.

5 Surveillance Mode Configuration

When you complete the Surveillance Mode Smart Wizard, you will be presented with the following screen:

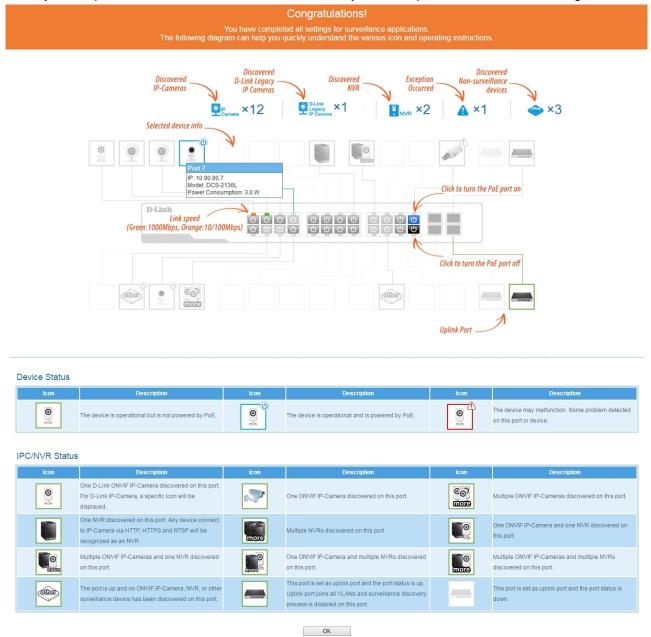


Figure 5.1 – Surveillance Mode Congratulations window

Click **OK** button to continue to the Web UI.

Web User Interface

Before enter the Web User interface, the pop-up dialog will be shown as below. Click **OK** to enter the Web user interface.

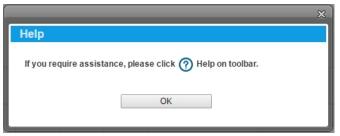


Figure 5.2 – Surveillance Mode > Help

D-Link	Save 🕐 Help 💼 Online Hel	Foot Bar	
arry Search	Surveillance Overview		
POS-1210-24P Port Information P-Carrier Information P-Carrier Information Port Information Pole Information Pole Schoduling Time Surveillance Settings Surveillance Log Pole Health Diagnostc	Surveillance Topology	Device information	₩ _{Nvn} x 0 ▲ x 0 ◆ x 1
Function Tree	D-Link 065-1210-24P		
	Note: System probes JP-Camera every 30	Main Configuration Screen	

Figure 5.3 – Surveillance Mode > Main Web UI Window

The above image is the Web UI Interface screen. The three main areas are the **Tool Bar** on top, the **Function Tree**, and the **Main Configuration Screen**.

Item Area	Description
Tool Bar	To provide a quick and convenient way for essential utility functions like firmware and configuration management for Surveillance mode.
Function Tree	By choosing different functions in the Function Tree navigation menu, Click on the links and navigate the folder structure to display information on the Main Configuration Screen for Surveillance mode.
Main Configuration Screen	To display the information and configuration options for Surveillance mode on the switch.

At the upper right corner of the screen the username and current IP address will be displayed. Under the username is the **Logout** button. Click this to end this session.

Surveillance Overview

This loads automatically when user log-in to the switch and contains two tabs; **Surveillance Topology** and **Device Information**. To return to the Surveillance Overview page after viewing other pages, click the model number of the switch at the top of the navigation menu.

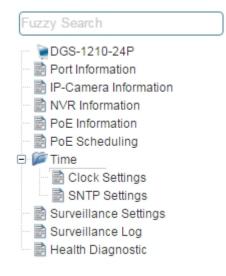


Figure 5.4 – Surveillance Mode > Overview

Surveillance Topology

The Surveillance Topology page contains a diagram of the surveillance topology, including an overview of the devices connected to the switch.

To view the following window, click on the model number of the switch at the top of the navigation menu:

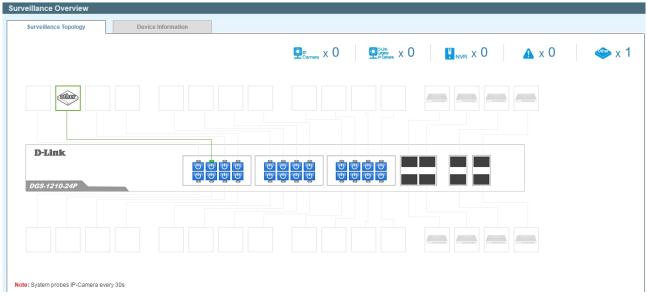


Figure 5.5 – Surveillance Mode > Surveillance Topology Tab

There is a device count at the top of the page, listing the number of connected IP-Cameras, Network Video Recorders (NVRs) and unrecognized devices. It also lists the number of warnings on the system.

The Surveillance Topology provides users more information about what is connected to each port. Hover over each device icon to get more information about the recognized devices, such as: the number of devices, device type, IP address, power consumption, link speed and errors. Click on the 'more' link to get more information about the devices connected to a port. Each port can also be powered-on and off using PoE by clicking the power symbol on each port.



CAUTION: Before connecting the Powered Device (PD) and enabling 60/70 Watts PoE, make sure it supports IEEE 802.3bt, as otherwise it will become damaged.



NOTE: The device icons can be found by clicking the **Help** menu at the top of the page.



NOTE: The system probes for new IP-Cameras every 30 seconds.

Device Information

This tab on the Surveillance Overview page and is divided into 3 parts; a device information section, PoE utilization section and bandwidth usage section.

To view the following window, click on the model number of the switch at the top of the navigation menu and the click the **Device Information** tab:

Surveillance Topology	Device Information	tion					
SWITCH			Q WEB				
Device Type	DGS-1210-24P		IP Address	10.90.90.90	Boot PROM	ersion	1.00.002
System Name			Mask	255.0.0.0	Firmware Ver	ion	7.10.008
Hardware Version	G1		Gateway	0.0.0.0	System Time		01/01/2017 02:12:01
Serial Number	QBDES12105200		MAC Address	00-01-02-03-04-05	Using Time		Odays2hours13mins7seconds
PoE Utilization	0	20					
	0%	W 20 -		7 8 9 10 11 12 13 14	' 15 ' 16 ' 17 ' 18 ' 1 ∕ort	9 20 21 22	23 24 25 26 27 28
MAX	0%	W 20 -		7 8 9 10 11 12 13 14)20 [~] 21 [~] 22	23 24 25 26 27 28 1000 Mbps 50 Mbps
MAX 193W	0%	W 20 - 	1 ' 2 ' 3 ' 4 ' 5 ' 6	7 8 9 10 11 12 13 14	Port	20 21 22	
MAX 193W	0% 0 Mbps	W 20	1 ' 2 ' 3 ' 4 ' 5 ' 6	7 8 9 10 11 12 13 14	Port	20 21 22	

Figure 5.6 – Surveillance Mode > Device Information Tab

The device information section is sub-divided into 3 sections; switch information, web information and system information. It contains information such as the device type, system name, serial number, IP address settings, MAC address settings, firmware versions and system uptime.

The PoE utilization area contains PoE utilization statistics for the switch. On the left is the total PoE utilization, with the total power budget and overall utilization show. On the right is a per-port usage graph, showing the PoE utilization for each individual port.

The bandwidth usage section contains bandwidth utilization for the switch. On the left the total bandwidth shows the total inbound traffic on all ports. There is also a per-port bandwidth utilization graph on the right, showing the inbound traffic for each individual port. The scale of the graph can be changed by pressing the 1000 Mbps and 50 Mbps buttons above the graph.

Click the **1000 Mbps** button to change the maximum bandwidth displayed in the **Bandwidth Utilization** chart to 1 Gbps.

Click the **50 Mbps** button to change the maximum bandwidth displayed in the **Bandwidth Utilization** chart to 50 Mbps.

Port Information

The Port Information page displays the port status for each port. This information includes the throughput, PoE status, Loopback Detection Status, cable length, power consumption and how many IP cameras, NVRs, and other devices are connected to the ports.

					Came	na x 0 IJNVR x 0 ↔
1	-	.	-	2	~~ -	-
	A 1 -		-		∱ −	
3	~~	Jr -	-	4	~~ -	-
	\$		-		₽ -	🛞 I -
5	<mark></mark>	\	-	6	 -	- 1)
	M ON		Video Management Serve 🔻		A	

Figure 5.7 – Surveillance Mode > Port Information

IP-Camera Information

The IP-Camera Information page displays information on each camera connected to the switch. It features the port number, device type, throughput, IP address and other information such as port description, power consumption and location.

	🚧 0 _{Mbps} 🚺 -0w / 0w
Note: System probes IP-Camera every 30s.	

Figure 5.8 – Surveillance Mode > IP-Camera Information

NVR Information

The NVR Information page displays information on each NVR connected to the switch. It features the port number, throughput, IP address and information relating to the cameras connected to the NVR, such as the group name, total number of cameras and the port and IP address of each camera. Hover-over each field to get more information about each value.



Figure 5.9 – Surveillance Mode > NVR Information

PoE Information

This page displays the Power-over-Ethernet(PoE) usage information of each port on the Switch. The port number, PoE status, health status, PoE budget and power consumption is listed for each port. It is possible to click on the health status to be re-directed to the Health Diagnostic page. Hover-over each field to get more information about each value.

				PoE 15W	< 0 <u>PoE+</u> x 0
1	🕚 On	POE -		🕚 On	POE -
POE	<u>4</u> 2 -		POE	4	0
	On	POE -	4	U On	POE -
POE	<u>4</u> 2 -	3 -	POE	<u>4</u> 2 -	2 -
5	() On	POE -	6	(U) On	POE -

Figure 5.10 – Surveillance Mode > PoE Information

PoE Scheduling

This PoE Scheduling page allows user to specify the amount of time that power is delivered to a PoE port. This can be used to save power when devices are not in use, or as a security feature to prevent wireless access from being available outside of business hours, for example. It is possible to set a schedule name, a start time, and end time and which ports the PoE schedule applies to.

Time Profile						
Profile Name						
Time(HH MM)	Start Time 00 🔻 🛛	▼ 00		End Time 00 🔻 00 🔻		
Weekdays	Sun Mon Tue	Wed Thu Fri Sat				
Date	From Day 2011	• 1 • 1 •	0	To Day 2011 • 1	v 1 v	
						Add
Total Entries:1						
Profile Name	Start Time	End Time	Weekdays	From Day	To Day	Delete
1	00:00	17:00	Sat			Delete
PoE Configuration						
From Port	To Port	Time Profile				
1 •	1 •	N/A 🔻				Apply
Port			Time Profile			
1			1		Delete]
2					Delete	
3					Delete	

Figure 5.11 – Surveillance Mode > PoE Scheduling

The fields that can be configured in the Time Profile section are described below:

Parameter	Description
Profile Name	Specifies the name of the time range schedule.
Time(HH MM)	Select the start time end time with hour and minutes.
Weekdays	Specifies the work day for the scheduling.
Date	Tick the Date and select the From Day / To Day for the scheduling.

Click the **Add** button to create a new time profile for PoE scheduling. Click the **Delete** button to remove the specified profile entry. The fields that can be configured in the **PoE Configuration** section are described below:

Parameter	Description
From Port / To Port	Select the port range to be used.
Time Profile	Select the time profile to be used.

Click the **Apply** button to implement changes made.

Click the **Delete** button to remove the time range schedule from the specified port.

Time > Clock Settings

This Clock Settings page allows user to configure the time on the Switch.

Clock Settings		
Clock Settings		
Time (HH:MM:SS) Date (DD/MM/YYYY)	01/01/2016	
		Apply

Figure 5.12 – Surveillance Mode > Time > Clock Settings

The fields that can be configured for Clock Settings are described below:

Parameter	Description
Time (HH:MM:SS)	Set the system time with the format (HH:MM:SS).
Date (DD/MM/YYYY)	Set the date with the format (DD/MM/YYYY).

Click the **Apply** button to implement changes made.

Time > SNTP Settings

The SNTP Settings page allows user to configure an external time source on the switch. Simple Network Time Protocol (SNTP) is a lightweight version of the NTP protocol and can be used to keep the system clock in-sync by using a network-based time source.

SNTP Settings			
SNTP Global Settings			
Current Time Source	System Time		
SNTP State	Disabled •		
SNTP Poll Interval (30-99999)	30 sec		Apply
SNTP Server Setting			
SNTP First Server	IPv4 Address		
	○IPv6 Address		
SNTP Second Server	IPv4 Address		
	○IPv6 Address		Apply
SNTP First	Server	SNTP Second Server	
0.0.0	.0	0.0.0.0	

Figure 5.13 – Surveillance Mode > Time > SNTP Settings

The fields that can be configured for **SNTP Global Settings** are described below:

Parameter	Description
SNTP State	Specifies to enable or disable the SNTP state.
SNTP Poll Interval (30-99999)	Specifies the poll interval. The range is between 30 and 99999. By default, the value is 30 seconds.

Click the **Apply** button to implement changes made.

The fields that can be configured for **SNTP Server Settings** are described below:

Parameter	Description
SNTP First Server	Select to enter the IPv4 or IPv6 address for SNTP first server.
SNTP Second Server	Select to enter the IPv4 or IPv6 address for SNTP second server.

Click the **Apply** button to add the SNTP server to the configuration.

Surveillance Settings

The Surveillance Settings page allows user to configure the settings for the Surveillance VLAN. This is a VLAN dedicated for IP-Camera (IPC) and Network Video Recorders (NVR), and also can be used to manage surveillance devices on the network.

ourromaneo ootango			
Surveillance VLAN Settings			
VLAN ID (2-4094)	4094		Apply
IP Settings			
Get IP From	Static •		
IP Address	10.90.90		
Mask	8 (255.0.0.0) 🔻		
Gateway	0.0.0		Apply
SNMP Host Settings			Αμμιγ
	· · · · ·		
Community Name/SNMPv3 User Name Host IPv4 Address	^		Apply
HUSLIF V4 AUGIESS			Арріу
Host IP Address	SNMP Version	Community Name/SNMPv3 User Name	Delete
Log Server			
Host IPv4 Address	0.0.0.0		
 Host IPv6 Address 			Apply
Password Settings			
Old Password	20 chars		
New Password	20 chars		
Confirm Password	20 chars		Apply
Uplink Port Settings			
From Port	To Port		
1 •	1 •		Add
	Port		
	49	Delete	
	50	Delete	
	51	Delete	
	52	Delete	

Figure 5.14 – Surveillance Mode > Surveillance Settings

The fields that can be configured for the Surveillance Settings are described below:

Parameter	Description
VLAN ID (2-4094)	Specifies a VLAN ID for the surveillance VLAN in the range between 2 and 4094.

Click the **Apply** button to implement changes made.

The fields that can be configured for the **IP Settings** are described below:

Parameter	Description
Get IP From	Specifies how the management IP for this VLAN is assigned to the switch. Options are: Static , DHCP or BOOTP . If Static is chosen, the following fields become available.
IP Address	Specifies the IP address for the surveillance VLAN management IP.

Mask	Specifies the netmask for the surveillance VLAN management IP.
Gateway	Specifies the gateway for the surveillance VLAN.

Click the **Apply** button to implement changes made.

The fields that can be configured for the **SNMP Host Settings** are described below:

Parameter	Description
Community Name/SNMPv3 User Name	Specifies the community name or SNMPv3 user name to be configured.
Host Ipv4 Address	Specifies the IPv4 address of the SNP Network Management Server (NMS) which will receive SNMP Traps from this device.

Click the **Apply** button to implement changes made.

The fields that can be configured for the **Log Server** are described below:

Parameter	Description
Host IPv4 Address	Specifies the IPv4 address of the Syslog NMS which will receive Syslog messages from this device.
Host Ipv4 Address	Specifies the IPv6 address of the Syslog NMS which will receive Syslog messages from this device.

Click the **Apply** button to implement changes made.

The fields that can be configured for the **Password Settings** are described below:

Parameter	Description
Old Password	Enter the old password that is used to restrict access to the device via the Web UI. Password length is a maximum of 20 characters.
New Password	Configure a new password that will be used to restrict access to the device via the Web UI. Password length is a maximum of 20 characters.
Confirm Password	Confirm the password that will be used to restrict access to the device via the Web UI. Password length is a maximum of 20 characters.

Click the **Apply** button to implement changes made.

The fields that can be configured for the **Uplink Port Settings** are described below:

Parameter	Description
From Port	Specifies the start port in the range for Uplink Ports. These are used for connecting the surveillance VLAN with other switches.
To Port	Specifies the end port in the range for Uplink Ports. These are used for connecting the surveillance VLAN with other switches.

Click the **Add** button to implement changes made.

Click the Delete button to delete any entries in the list of uplink ports.

Surveillance Log

The Surveillance Log page consists of a list of Syslog messages that have been generated by the switch. Depending on whether a Syslog server has been defined in the Surveillance Settings section, these may be local to the switch or copied to an external logging server. The messages are ordered in date order with the latest message at the top of the list. Please consult an external source for more information on syslog logging levels.

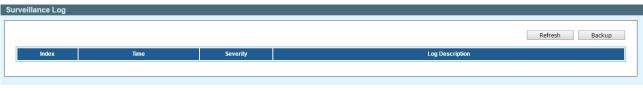


Figure 5.15 – Surveillance Mode > Surveillance Log

Click the **Refresh** button to refresh the information displayed in the table.

Click the **Backup** button to save the information displayed in the table to a remote location.

Health Diagnostic

The Health Diagnostic page is linked-to by the Port Information and PoE Information pages and displays an overview of the port status. It contains the port number, Loopback Detection status, Cable Link status, PoE Status, Tx/Rx Error Counter, number of Discovered Surveillance Devices on the port (which links to the Group Details page) and the detected cable length. The page automatically refreshes every 30 seconds.

						Detec
Port	Loopback Detection Status	Cable Link	PoE Status	Tx/Rx CRC Counter	Discovered Surveillance Devices	Detect Distance
1	-	-	-	-	-	Detect
2	-	-	-	-	-	Detect
3	-	-	-	-	-	Detect
4	-	-	-	-	-	Detect
5	-	-	-	-		Detect
6	Normal	Pass	-	0/0	<u>0</u>	Detect
7						Detect
8	-	- -	-	-	-	Detect
9	-	-	-	-	-	Detect
10	-	-	-	-	-	Detect
11	-	-	-	-	-	Detect
12	-	-	-	-	-	Detect
13	-	-	-	-	-	Detect
14	-	-	÷	-	-	Detect
15	-	-		-	-	Detect

Figure 5.16 – Surveillance Mode > Health Diagnostic

Click the **Detect All** button to initiate a cable distance test on all the ports of the Switch.

Click the **Detect** button to initiate a cable distance test on the specified port on the Switch.

Click the hyperlink in the **Discovered Surveillance Devices** column to view more information of the devices connected to the port.

After clicking the hyperlink in the **Discovered Surveillance Devices** column, the following window will appear.

/ Group Details							S Back
Port 6							
-	₽ 0 0	Other			Ì -	9	
			•				

Figure 5.17 – Surveillance Mode > Health Diagnostic – Port Information / Group Details

Click **Back** to go to the previous page.

Tool Bar > Wizard

By clicking the Wizard button, you can return to the Smart Wizard if you wish to make any changes there. For the Smart Wizard configuration, you can refer to the Chapter 4 <u>Smart Wizard Configuration</u>.

Tool Bar > Tools Menu

The Tools Menu offers global function controls such as Reset System, Reboot Device, Configuration Backup & Restore, Firmware Backup & Upgrade, Firmware Information and Flash Information.

🔀 Tools 💾 Save 🥐
Reset System
Reboot Device
Configuration Backup & Restore
Firmware Backup & Upgrade
Firmware Information
Flash Information

Figure 5.18 – Surveillance Mode > Tools Menu

Reset System

Provide a safe reset option of Surveillance VLAN for the Switch. All configuration settings in non-volatile RAM will be reset to factory default except for the IP address.

Reset	
Reset Warning!! The Switch will be reset to its factory defaults, and then will reboot.	
WarningII The Switch will be reset to its factory defaults except IP address, and then will reboot.	Apply

Figure 5.19 – Surveillance Mode > Tools Menu > Reset

Select one of the following options:

- Warning!! The Switch will be reset to its factory defaults, and then will reboot. To reset the Switch's configuration to its factory default settings.
- Warning!! The Switch will be reset to its factory defaults except IP address, and then will reboot. – To reset the Switch's configuration to its factory default settings. This option will exclude the IP address from being changed.

Click the **Apply** button to initiate the factory default reset and reboot the Switch.

Reboot Device

Provide a safe way to reboot the system. Select **YES** or **NO** to save the current settings before action. And click **Reboot** to restart the switch.

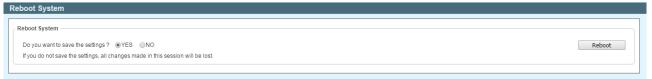


Figure 5.20 – Surveillance Mode > Tools Menu > Reboot Device

When rebooting the Switch, any configuration changes that was made during this session, will be lost unless the **Yes** option is selected when asked to save the settings.

Click the **Reboot** button to alternatively save the settings and reboot the Switch.

Configuration Backup & Restore

Allow the current configuration settings to be saved to a file (not including the password), and if necessary, you can restore configuration settings from this file. Two methods can be selected: **HTTP** or **TFTP**. Configuration Backup and Restore

HTTP Declara Dectars Confor ID combined	C 114 -	
Backup/Restore Config ID number :	config_id 1 🔻	
Backup current configuration to file :	Backup	
Restore configuration from file :	Choose File No file chosen	
	Restore	
O TFTP		
Backup/Restore Config ID number :	config_id 1 ▼	
TFTP Server IP Address	IPv4	
	○ IPv6	
TFTP File Name		
Backup current configuration to file :	Backup	
Restore configuration from file :	Restore	

Figure 5.21 – Surveillance Mode > Tools Menu > Configuration Backup & Restore

The fields that can be configured with HTTP section are described below:

Parameter			Description
Backup/Restore number:	Config	ID	Select config_id 1 or config_id 2 to backup or restore the configuration file.

Click **Backup** to save the current settings to your disk.

Click Choose File to browse your inventories for a saved backup settings file.

Click Restore after selecting the backup settings file you want to restore.

The fields that can be configured with **TFTP** section are described below:

Parameter	Description
Backup/Restore Config ID number:	Select config_id 1 or config_id 2 to backup or restore the configuration file.
TFTP Server IP Address	Specifies the IPv4 or IPv6 Address to be used.
TFTP File Name	Choose the file name for the configuration file you want to save to / restore from.

Click **Backup** to save the current settings to the TFTP server.

Click **Restore** after selecting the backup settings file you want to restore.



Note: Switch will reboot after restore, and all current configurations will be lost.

Firmware Backup and Upgrade

Allow for the firmware to be saved, or for an existing firmware file to be uploaded to the Switch. Two methods can be selected: **HTTP** or **TFTP**.

HTTP		
Backup firmware to file :	Backup	
Upgrade firmware from file :	Choose File No file chosen	
	Upgrade	
© TFTP		
TFTP Server IP Address :	IPv4	
	O IPv6	
TFTP File Name		
Backup firmware to file :	Backup	
Upgrade firmware from file :	Upgrade	

Figure 5.22 – Surveillance Mode > Tools Menu > Firmware Backup & Upgrade

Click **Backup** to save the firmware to your disk.

Click Choose File to browse your inventories for a saved firmware file.

Click **Upgrade** after selecting the firmware file you want to restore.

The fields that can be configured with **TFTP** section are described below:

Parameter	Description
TFTP Server IP Address	Specifies the IPv4 or IPv6 Address to be used.
TFTP File Name	Choose the file name for the firmware file you want to save to / restore from.

Click **Backup** to save the firmware to the TFTP server.

Click Upgrade after selecting the firmware file you want to restore.



Note: Do not disconnect the PC or remove the power cord from device until the upgrade completes. The Switch may crash if the firmware upgrade is incomplete.

Firmware Information

The Firmware Information page displays the information of firmware. The user can specify configuration ID and image file to boot up when power on the Switch next time.


ID	Version	Size (B)	Update Time	From	User
*1	7.10.008	12288000	N/A	N/A	Anonymous (factory)
Please select the boo config_id 1 • Apply	t up config of device. : Boot up firm	Nare			
(SSH)		date through SSH			
(Web)	: Firmware up	date through Web			
(SNMP)	: Firmware up	date through SNMP			
(Telnet)	· Firmware un	date through Telnet			

 $Figure \ 5.23-Surveillance \ Mode > Tools \ Menu > Firmware \ Information$

Flash Information

The Flash Information displays the flash detail information of the Switch.

h Information				
Flash ID	MX25L25635F			
Flash Size	32MB			
	Used	Total	Available	Usage %
Boot	Used 1000000	Total 1000000	Available 0	Usage %
Boot Image1				

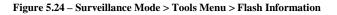

Tool Bar > Save

Select to save the entire configuration changes to configuration ID 1 or 2 you have made to the device to switch's non-volatile RAM. Or save the log entries to your local drive and a pop-up message will prompt you for the file path. You can view or edit the log file by using text editor (e.g. Notepad).




Figure 5.25 – Surveillance Mode > Save

Specifies the configuration ID 1 or 2 to be saved and click the **Save Config** button to implement changes made.

Click the **Backup Log** button to save the current settings to your disk.

Tool Bar > Help

By clicking the Wizard button to access the built-in Surveillance Help window.

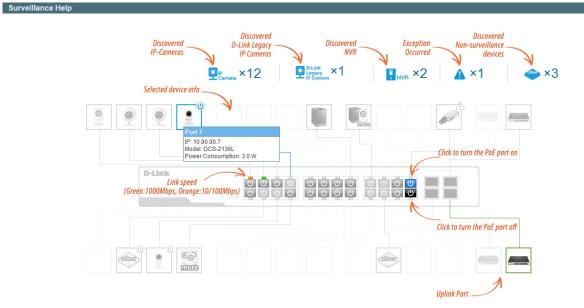

 $Figure \ 5.26-Surveillance \ Mode > Help \ - \ Diagram$

lcon	Description	lcon	Description	lcon	Description
0	The device is operational but is not powered by PoE.		The device is operational and is powered by PoE.		The device may malfunction. Some problem detected on this po or device.
VVR Status					
kon	Description	lcon	Description	licon	Description
0	One D-Link ONVIF IP-Camera discovered on this port. For D- Link IP-Camera, a specific icon will be displayed.	2	Dine ONVIF IP-Camera discovered on this port.	©)	Multiple ONVIF IP-Cameras discovered on this port
	One NVR discovered on this port. Any device connect to IP- Camera via HTTP, HTTPS and RTSP will be recognized as an NVR.	more	Multiple NVRs discovered on this port.		One ONVIFIP-Camera and one NVR discovered on this port.
	Multiple ONVIF IP-Cameras and one NVR discovered on this port.		One ONVIF IP-Camera and multiple NVRs discovered on this port.	more	Multiple ONVIF IP-Cameras and multiple NVRs discovered on this port.
	The port is up and no ONVIF IP-Camera: NVR, or other surveillance device has been discovered on this port.		This port is set as uplink port and the port status is up. Uplink port joins all VLANs and surveillance discovery process is disabled		This port is set as uplink port and the port status is down

Figure 5.27 – Surveillance Mode > Help - Table

Tool Bar > Online Help

The Online Help provides two ways of online support: **D-Link Support Site** will lead you to the D-Link website where you can find online resources such as updated firmware images; **User Guide** can offer an immediate reference for the feature definition or configuration guide.



Figure 5.28 – Surveillance Mode > Online Help

Tool Bar > Standard Mode

By this option to access the Standard Mode Web UI available on the Switch.



NOTE: The **Web Mode** can only be changed to the **Standard Mode** when one user session is connected to the Web UI of the Switch.

Command Line Interface

The D-Link Smart Managed Switch allows a computer or terminal to perform some basic monitoring and configuration tasks by using the Command Line Interface (CLI) via TELNET protocol.

To connect a switch via TELNET:

1. Make sure the network connection between the switch and PC is active.

To connect, launch any terminal software like *HyperTerminal* in Microsoft Windows, or just use the command prompt by typing the command *telnet* followed by the switch IP address, eg. *telnet 10.90.90.90*.
 The logon prompt will appear.

Logging on to the Command Line Interface:

Enter your User Name and Password to log in. The default user name and password is **admin**. Note that the user name and password are case-sensitive. Press **Enter** in both the Username and Password fields. The command prompt will appear as shown below (**DGS-1210-24P>**):

DGS-1210-24P> login: admin Password: DGS-1210-24P>

Figure 6.1 – Command Prompt

The user session is automatically terminated if idle for the login timeout period. The default login timeout period is 5 minutes.

CLI Commands:

The Basic Switch commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
?	
download	{firmware_fromTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> config_id <integer (1-2)="">}</integer></path_filename></ipv6addr></ipaddr></path_filename></ipv6addr></ipaddr>
upload	{firmware_toTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_toTFTP {<ipaddr> <ipv6addr>} <path_filename> config_id <integer (1-2)="">}</integer></path_filename></ipv6addr></ipaddr></path_filename></ipv6addr></ipaddr>
config ipif	<ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw- address> dhcp bootp }</gw- </subnet-mask></ip-address></ipif_name>
config ipif	<ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client [enable disable] }</ipv6networkaddr></ipif_name>
logout	
ping	<ip_addr></ip_addr>
ping6	<ipv6addr></ipv6addr>
reboot	
reset config	
show boot_file	

Command	Parameter
show firmware information	
show ipif	[<ipif_name>]</ipif_name>
show switch	
show route	{ipv4 ipv6}
config account	admin password <passwd></passwd>
save	
debug info	

Each command is listed in detail, as follows:

?	
Purpose	To display a list of commands.
Syntax	?
Description	The ? command displays a list of commands of the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display a list of commands of the switch:

DGS-1210-24P> ? USEREXEC commands : config account admin password <passwd> config configuration config_id <integer (1-2)=""> {delete boot_up } config ipif <ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw-add ress> dhcp bootp } config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>] show route { ipv4 ipv6 }</ipif_name></integer></ipv6addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></gw-add </subnet-mask></ip-address></ipif_name></integer></passwd>	
<pre>config account admin password <passwd> config configuration config_id <integer (1-2)=""> {delete boot_up } config ipif <ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw-add ress> dhcp bootp } config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></gw-add </subnet-mask></ip-address></ipif_name></integer></passwd></pre>	DGS-1210-24P> ?
<pre>config configuration config_id <integer (1-2)=""> {delete boot_up } config ipif <ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw-add ress=""> dhcp bootp } config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)=""> } logout ping <ip_addr> ping6 <ipv6addr> reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></gw-add></subnet-mask></ip-address></ipif_name></integer></pre>	USEREXEC commands :
<pre>config ipif <ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw-add ress=""> dhcp bootp } config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></gw-add></subnet-mask></ip-address></ipif_name></pre>	config account admin password <passwd></passwd>
<pre>ress> dhcp bootp } config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></pre>	<pre>config configuration config_id <integer (1-2)=""> {delete boot_up }</integer></pre>
<pre>config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client { enable disable}} debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></ipv6networkaddr></ipif_name></pre>	config ipif <ipif_name> { ipaddress <ip-address> <subnet-mask> gateway <gw-add< td=""></gw-add<></subnet-mask></ip-address></ipif_name>
enable disable}} debug info download { firmware_fromTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr>	ress> dhcp bootp }
<pre>debug info download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></pre>	config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client {</ipv6networkaddr></ipif_name>
<pre>download { firmware_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> cfg_fromT FTP {<ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr></path_filename></ipv6addr></ipaddr></pre>	enable disable}}
FTP { <ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">} logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></integer></path_filename></ipv6_addr></ip_addr>	debug info
logout ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr>	download { firmware_fromTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_fromT</path_filename></ipv6addr></ipaddr>
<pre>ping <ip_addr> ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></ip_addr></pre>	FTP { <ip_addr> <ipv6_addr>} <path_filename> config_id <integer (1-2)="">}</integer></path_filename></ipv6_addr></ip_addr>
<pre>ping6 <ipv6addr> reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer></ipv6addr></pre>	logout
reboot reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer>	ping <ip_addr></ip_addr>
reset config save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer>	ping6 <ipv6addr></ipv6addr>
save [config config_id <integer (1-2)="">] show boot_file show firmware information show ipif [<ipif_name>]</ipif_name></integer>	reboot
show boot_file show firmware information show ipif [<ipif_name>]</ipif_name>	reset config
show firmware information show ipif [<ipif_name>]</ipif_name>	save [config config_id <integer (1-2)="">]</integer>
show ipif [<ipif_name>]</ipif_name>	show boot_file
	show firmware information
show route { ipv4 ipv6 }	show ipif [<ipif_name>]</ipif_name>
	show route { ipv4 ipv6 }


show switch


DGS-1210-24P>

download	
Purpose	To download and install a firmware, boot, or switch configuration file from a TFTP server.
Syntax	download {firmware_fromTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_fromTFTP {<ipaddr> <ipv6addr>} <path_filename> config_id <integer (1-2)="">}</integer></path_filename></ipv6addr></ipaddr></path_filename></ipv6addr></ipaddr>
Description	The download command downloads a firmware, boot, or switch configuration file from a TFTP server.
Parameters	<i>firmware_fromTFTP</i> – Download and install new firmware on the Switch from a TFTP server.
	<i>cfg_fromTFTP</i> - Download a switch configuration file from a TFTP server.
	<ipaddr> - The IPv4 address of the TFTP server.</ipaddr>
	<ipv6addr> - The IPv6 address of the TFTP server.</ipv6addr>
	<pre><path_filename> - The filename of the firmware or switch configuration file on the TFTP server. You need to specify the DOS path if the file is not at the root directory of the TFTP server.</path_filename></pre>
	<i>config_id</i> < <i>integer</i> (1-2)> - Specifies the configuration id to be configured.
Restrictions	None.

Example usage:

To download a firmware file:

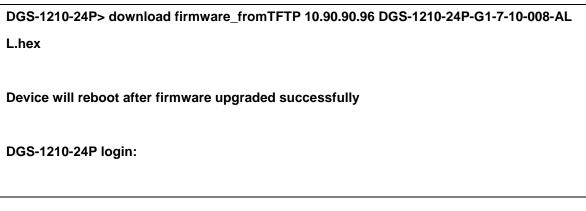

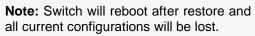

upload	
Purpose	To upload the firmware file or a Switch configuration file to a TFTP server.
Syntax	upload {firmware_toTFTP { <ipaddr> <ipv6addr>} <path_filename> cfg_toTFTP {<ipaddr> <ipv6addr>} <path_filename> config_id <integer (1-2)="">}</integer></path_filename></ipv6addr></ipaddr></path_filename></ipv6addr></ipaddr>

Description	The upload command uploads the Switch's current settings to a TFTP server.
Parameters	<i>firmware_toTFTP</i> – Upload the firmware on the Switch from a TFTP server.
	<i>cfg_toTFTP</i> – Specifies that the Switch's current settings will be uploaded to the TFTP server.
	<ipaddr> - The IPv4 address of the TFTP server.</ipaddr>
	<ipv6addr> – The IPv6 address of the TFTP server.</ipv6addr>
	<pre><path_filename> - The filename of the firmware or switch configuration file on the TFTP server. You need to specify the DOS path if the file is not at the root directory of the TFTP server. config_id <integer (1-2)=""> - Specifies the configuration id to be configured.</integer></path_filename></pre>
Restrictions	None.

To upload a firmware file:

DGS-1210-24P> upload firmware_toTFTP 10.90.90.96 DGS-1210-24P-G1-7-10-008-ALL.hex

Image Upload Successfully.

DGS-1210-24P>

config ipif	
Purpose	To configure the System IP interface.
Syntax	config ipif <ipif_name> { ipaddress <ip-address> <subnet- mask> gateway <gw-address> dhcp bootp }</gw-address></subnet- </ip-address></ipif_name>
Description	The config ipif command configures the System IP interface on the Switch.
Parameters	<pre><ipif_name> - Specifies the ipif name to be configured. ipaddress <ip-address> <subnet-mask> - The IP address and subnet mask to be created. Users need to specify the address and mask information using the traditional format (for example,10.1.2.3/255.0.0.0) gateway <gw-address> - The IP address of the router or gateway. dhcp - Allows the selection of the DHCP protocol for the assignment of an IP address to the Switch's System IP interface. bootp - Allows the selection of the BOOTP to the switch.</gw-address></subnet-mask></ip-address></ipif_name></pre>
Restrictions	None.

Example usage:

To configure the IP interface System:

DGS-1210-24P> config ipif System ipaddress 10.48.74.122/8

Success.

DGS-1210-24P>

config ipif	
Purpose	To configure the System IPv6 interface.
Syntax	config ipif <ipif_name> { ipv6 ipv6address <ipv6networkaddr> dhcpv6_client [enable disable] }</ipv6networkaddr></ipif_name>
Description	The config ipif command configures the System IPv6 interface on the Switch.
Parameters	<pre><ipif_name> - Specifies the ipif name to be configured. ipv6 ipv6address <ipv6networkaddr> - Use this parameter to statically assign an IPv6address to this interface. This address should define a host address and a network prefix length. Multiple IPv6 addresses can be configured for a single IP interface. Ex: 3ffe:501:ffff:100::1/64. The /64 represents the prefix length of the IPv6 addresses. dhcpv6_client [enable disable] - Specifies the DHCPv6 client to be disabled or enabled.</ipv6networkaddr></ipif_name></pre>
Restrictions	None.

To configure the IPv6 interface System:

DGS-1210-24P> config ipif System ipv6 ipv6address 3ffe:501:ffff:100::1/64

Success.

DGS-1210-24P>

logout	
Purpose	To log out a user from the Switch's console.
Syntax	logout
Description	The logout command terminates the current user's session on the Switch's console.
Parameters	None.
Restrictions	None.

Example usage:

To terminate the current user's console session:

DGS-1210-24P> logout



NOTE: Save your configuration changes before logging out.

ping	
Purpose	To test the connectivity between network devices.
Syntax	ping <ip_addr></ip_addr>

Description	The ping command checks if another IP address is reachable on the network. You can ping the IP address connected to through the managed VLAN (VLAN 1 by default), as long as there is a physical path between the switch and the target IP equipment. By default, Switch sends five pings to the target IP.
Parameters	< <i>ip_addr</i> > - The IPv4 address of the host.
Restrictions	None.

To ping the IP address 10.90.90.91:

DGS-1210-24P> ping 10.90.90.91
Reply Received From :10.90.90.91, TimeTaken : 20 msecs
Reply Received From :10.90.90.91, TimeTaken : 20 msecs
Reply Received From :10.90.90.91, TimeTaken : 20 msecs
10.90.90.91 Ping Statistics
3 Packets Transmitted, 3 Packets Received, 0% Packets Loss
DGS-1210-24P>

ping6	
Purpose	To test the connectivity between network devices.
Syntax	ping6 <ipv6addr></ipv6addr>
Description	The pingv6 command checks if another IP address is reachable on the network. You can ping the IP address connected to through the managed VLAN (VLAN 1 by default), as long as there is a physical path between the switch and the target IP equipment. By default, Switch sends five pings to the target IP.
Parameters	<ipv6addr> - The IPv6 address of the host.</ipv6addr>
Restrictions	None.

Example usage:

To ping the IPv6 address 3000::1:

DGS-1210-24P> ping6 3000 ::1
Reply Received From : 3000 ::1, TimeTaken : 20 msecs
Reply Received From : 3000 ::1, TimeTaken : 20 msecs
Reply Received From : 3000 ::1, TimeTaken : 20 msecs
3000 ::1 Ping Statistics
3 Packets Transmitted, 3 Packets Received, 0% Packets Loss
DGS-1210-24P>

reboot	
Purpose	To reboot the Switch. If the Switch is a member of a stack, it may be rebooted individually, without affecting the other members of the stack.
Syntax	reboot
Description	The reboot command reboots the system. All network connections are terminated and the boot code executes.
Parameters	None.
Restrictions	None.

To restart the Switch:

DGS-1210-24P> reboot % Device will reboot, please wait a few minutes to re-login.

DGS-1210-24P>

reset config	
Purpose	To reset the Switch to the factory default settings.
Syntax	reset config
Description	All configurations will be reset to the default settings.
Parameters	None.
Restrictions	None.

Example usage:

To restore all of the Switch's parameters to their default values:

DGS-1210-24P> reset config

% Device will reboot after reset configuration successfully.

DGS-1210-24P>

show boot_file	
Purpose	To display the information of the boot file on the Switch.
Syntax	show boot_file
Description	The show boot_file command displays the current information of boot file on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To the information of the boot file on the Switch:

DGS-1210-24P> show boot_file

Bootup Firmware : image_1

Bootup Configuration : config_1

DGS-1210-24P>

show firmware information		
Purpose	To display the firmware information on the Switch.	
Syntax	show firmware information	
Description	The show firmware information command displays the current firmware information on the switch.	
Parameters	None.	
Restrictions	None.	

Example usage:

To the firmware information on the Switch:

DGS-1210-24P> show firmware information		
Version	: 7.10.008	
Size	: 12288000 Bytes	
Updated Tim	ne : 01/01/1970 00:00:00	
From	: 10.90.90.90	
User	: Anonymous (unknown)	
DGS-1210-24P>		

show ipif	
Purpose	To display the configuration of an IP interface on the Switch.
Syntax	show ipif [<ipif_name>]</ipif_name>
Description	The show ipif command displays the current IP address of the switch.
Parameters	<pre><ipif_name> - Specifies the IP interface name to be displayed.</ipif_name></pre>
Restrictions	None.

Example usage:

To display IP interface settings:

DGS-1210-24P> show ipif	
IP Setting Mode	: Static
Interface Name	: System
Interface VLAN Name	: default
IP Address	: 10.90.90.90
Subnet Mask	: 255.0.0.0

show switch	
Purpose	To display the information of the Switch.
Syntax	show switch
Description	The show switch command displays the status of the switch.
Parameters	None.
Restrictions	None.

To display the switch information:

DGS-1210-24P> show switch	
System name	:
System Contact	:
System Location	:
System up time	: 0 days, 0 hrs, 12 min, 9 secs
System Time	: 01/01/2017 00:47:54
System hardware version	: G1
System firmware version	: 7.10.008
System boot version	: 1.00.002
System serial number	: QBDES12105200
MAC Address	: 00-01-02-03-04-05

DGS-1210-24P>

show route	
Purpose	To display the routing status of IPv4 or IPv6 on the Switch.
Syntax	show route {ipv4 ipv6}
Description	The show route command displays the routing status of IPv4 or IPv6 on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the IPv4 & IPv6 route status on the Switch:

DGS-1210-24P> show route ipv4

IPv4 Static R	oute State : Er	nable			
IP Address	Netmask	Gateway	Protocol	Backup	Status
Total Entries					
DGS-1210-24P> show route ipv6					
IPv6 Static Route State : Disable					
DGS-1210-24	P>				

config account admin password		
Purpose	To display the configuration of an IP interface on the Switch.	
Syntax	config account admin password <passwd></passwd>	
Description	The config account admin password command sets the administrator password.	
Parameters	<pre><passwd> - The new password of the administrator.</passwd></pre>	
Restrictions	None.	

To configure the account admin password:

DGS-1210-24P> config account admin password 1234

DGS-1210-24P>

save	
Purpose	To save changes in the Switch's configuration to non-volatile RAM.
Syntax	save
Description	The save command saves the configuration changes to the memory.
Parameters	None.
Restrictions	None.

Example usage:

To save the Switch's current configuration to non-volatile RAM:

```
DGS-1210-24P> save
Building configuration ...
[OK]
```

DGS-1210-24P>

debug info	
Purpose	To display the ARP table and MAC FDB information of the Switch.
Syntax	debug info
Description	The debug info command displays the ARP table and MAC FDB of the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the ARP table and MAC FDB information of the Switch:

DGS-1210-24P> debug info				
% sgementation fault log file :				
File doesn't exis	st !!!			
% ARP table :				
Address	Hardware Address	Туре	Interface	Mapping
 10.0.0.0	 ff-ff-ff-ff-ff			
10.90.90.90	4a-6f-6e-01-01-01	ARPA	vlan1	Static
10.90.90.96	3c-97-0e-e5-76-4d	ARPA	vlan1	Dynamic
10.255.255.255	ff-ff-ff-ff-ff	ARPA	vlan1	Static
% MAC table :				
Vlan Mac Address Type Ports				
Total Mac Addresses displayed: 1				
% POE MCU VERSION :				
PoeVersion : 24 (0x18)				
PoeExtVersion : 33 (0x21)				
DGS-1210-24P>				

Appendix A - Ethernet Technology

This chapter will describe the features of the D-Link Smart Managed Switch and provide some background information about Ethernet/Fast Ethernet/Gigabit Ethernet switching technology.

Gigabit Ethernet Technology

Gigabit Ethernet is an extension of IEEE 802.3 Ethernet utilizing the same packet structure, format, and support for CSMA/CD protocol, full duplex, and management objects, but with a tenfold increase in theoretical throughput of over 100-Mbps Fast Ethernet and a hundredfold increase over 10-Mbps Ethernet. Since it is compatible with all 10-Mbps and 100-Mbps Ethernet environments, Gigabit Ethernet provides a straightforward upgrade without wasting existing investments in hardware, software, or trained personnel.

The increased speed and extra bandwidth offered by Gigabit Ethernet is essential in solving network bottlenecks, which frequently develops as more advanced computer users and newer applications continue to demand greater network resources. Upgrading key components, such as backbone connections and servers to Gigabit Ethernet technology, can greatly improve network response times as well as significantly speed up the traffic between subnets.

Gigabit Ethernet enables fast optical fiber connections to support video conferencing, complex imaging, and similar data-intensive applications. Likewise, since data transfers occur 10 times faster than Fast Ethernet, servers outfitted with Gigabit Ethernet NIC's are able to perform 10 times the number of operations in the same amount of time.

In addition, the phenomenal bandwidth delivered by Gigabit Ethernet is the most cost-effective method to take advantage of today and tomorrow's rapidly improving switching and routing internetworking technologies. With expected advances in the coming years in silicon technology and digital signal processing, which will enable Gigabit Ethernet to eventually operate over unshielded twisted-pair (UTP) cabling, a flexible foundation for the next generation of network technology products will be created. This will outfit your network with a powerful 1000-Mbps-capable backbone/server connection.

Fast Ethernet Technology

The growing importance of LANs, and the increasing complexity of desktop computing applications are fueling the need for high performance networks. A number of high-speed LAN technologies have been proposed to provide greater bandwidth and improve client/server response times. Among them, 100BASE-T (Fast Ethernet) provides a non-disruptive, smooth evolution from the current 10BASE-T technology. The non-disruptive and smooth evolution nature, and the dominating potential market base, virtually guarantees cost-effective and high performance Fast Ethernet solutions.

100Mbps Fast Ethernet is a standard specified by the IEEE 802.3 LAN committee. It is an extension of the 10Mbps Ethernet standard with the ability to transmit and receive data at 100Mbps, while maintaining the CSMA/CD Ethernet protocol. Since the 100Mbps Fast Ethernet is compatible with all other 10Mbps Ethernet environments, it provides a straightforward upgrade and utilizes existing investments in hardware, software, and personnel training.

Switching Technology

Another approach to push beyond the limits of Ethernet technology is the development of switching technology. A switch bridges Ethernet packets at the MAC address level of the Ethernet protocol transmitting among connected Ethernet or Fast Ethernet LAN segments.

Switching is a cost-effective way of increasing the total network capacity available to users on a local area network. A switch increases capacity and decreases network loading by dividing a local area network into different segments, which won't compete with each other for network transmission capacity.

The switch acts as a high-speed selective bridge between the individual segments. The switch, without interfering with any other segments, automatically forwards traffic that needs to go from one segment to another. By doing this the total network capacity is multiplied, while still maintaining the same network cabling and adapter cards.

Appendix B - Technical Specifications

This appendix contains the device specifications, and contains the topics:

- Hardware Specifications
- Features

Hardware Specifications

Key Components / Perfor	mance		
Switching Capacity	DGS-1210-08P:20GbpsDGS-1210-16:40GbpsDGS-1210-24:56GbpsDGS-1210-24P:56GbpsDGS-1210-48:104Gbps		
Max. Forwarding Rate	DDGS-1210-08P: 14.88Mpps DGS-1210-16: 29.8Mpps DGS-1210-24: 41.7Mpps DGS-1210-24P: 41.7Mpps DGS-1210-48: 77.4Mpps		
Forwarding Mode	Store and Forward		
Packet Buffer memory	DGS-1210-08P: 4.1Mbits DGS-1210-16: 4.1Mbits DGS-1210-24: 4.1Mbits DGS-1210-24P: 4.1Mbits DGS-1210-24P: 4.1Mbits DGS-1210-24P: 4.1Mbits DGS-1210-24P: 4.1Mbits		
DDRIII for CPU	128M bytes		
Flash Memory	32M bytes		
Priority Queues	8		
Port Functions			
10/100/1000BASE-TX Ethernet ports	 8 x 10/100/1000BaseT ports for DGS-1210-08P 16 x 10/100/1000BaseT ports for DGS-1210-16 24 x 10/100/1000BaseT ports for DGS-1210-24/24P 48 x 10/100/1000BaseT ports for DGS-1210-48 1000Base-T ports compliant to following standards: IEEE 802.3 compliance IEEE 802.3u compliance IEEE 802.3ab compliance Support Half/Full-Duplex operations IEEE 802.3x Flow Control support for Full-Duplex mode Back Pressure for Half-Duplex mode Head-of-line blocking prevention 		

Support manual/auto MDI/MDIX configuration Support Auto-Negotiation for each port		
Support Auto-Negotiation for each port		
Port 9 ~ 10 for DGS-1210-08P		
SFP ports comply with following standards:		
- IEEE 802.3u compliance (Support 100M transceivers)		
- IEEE 802.3z compliance		
- IEEE 802.3ah compliance		
Support Transceivers:		
- 100M/1000M SFP Transceivers		
- WDM SFP Transceivers		
- 1000BASE-T Transceivers		
4 combo 1000BASE-T/SFP ports for DGS-1210-16/24/24P/48		
SFP Transceivers Supported:		
- DGS-712 (1000Base-T)		
- DEM-210 (100BASE-FX, 15km)		
- DEM-211 (100BASE-FX, 2km)		
- DEM-310GT (1000BASE-LX, 10km)		
- DEM-311GT (1000BASE-SX, 550m)		
- DEM-314GT (1000BASE-LH, 50km)		
- DEM-315GT (1000BASE-ZX, 80km)		
- DEM-312GT2 (1000BASE-SX, 2km)		
WDM Transceivers Supported:		
- DEM-220T (100Base-BX,TX-1550/RX-1310nm, 20km)		
- DEM-220R (100Base-BX,TX-1310/RX-1550nm, 20km)		
- DEM-330T (1000Base-BX,TX-1550/RX-1310nm, 10km)		
- DEM-330R (1000Base-BX,TX-1310/RX-1550nm, 10km)		
- DEM-331T (1000Base-BX,TX-1550/RX-1310nm, 40km)		
- DEM-331R (1000Base-BX,TX-1310/RX-1550nm, 40km)		
DGS-1210-08P:		
Maximum power consumption: 81.9 Watts (PoE On), 7.6 Watts (PoE Off)		
Standby power consumption: 2.5 Watts		
DGS-1210-16:		
Maximum power consumption: 13.08 Watts		
Standby power consumption: 5.56 Watts		
DGS-1210-24:		
Maximum power consumption: 17.32 Watts		
Standby power consumption: 6.55 Watts		
DGS-1210-24P:		

	Maximum power consumption: 263.9 Watts (PoE On), 30.6 Watts (PoE Off) Standby power consumption: 19.6 Watts DGS-1210-48: Maximum power consumption: 34.85 Watts Standby power consumption: 13.9 Watts		
Power Supply	AC input, 100~240 VAC, 50/60Hz, internal universal power supply AC input, 100-240 VAC, 50/60Hz, DC 54V/1.574A external desktop power adapter (only DGS-1210-08P)		
Fans	DGS-1210-08P: Fanless DGS-1210-16: Fanless DGS-1210-24: Fanless DGS-1210-24P: 2pcs Smart Fan DGS-1210-48: Fanless		
Operating Temperature	-5~50°C		
Storage Temperature	-20~70°C		
Humidity	Storage: 0%~95% non-condensing		
Dimensions	DGS-1210-08P:280mm x 126mm x 44mmDGS-1210-16:280mm x 180mm x 44mmDGS-1210-24:440mm x 140mm x 44mmDGS-1210-24P:440mm x 250mm x 44mmDGS-1210-48:440mm x 210mm x 44mm		
Weight	DGS-1210-08P:0.95kgDGS-1210-16:1.75kgDGS-1210-24:2.15kgDGS-1210-24P:3.75kgDGS-1210-48:3.46kg		
ЕМІ	CE, FCC/IC, VCCI, BSMI, C-Tick, CCC		
Safety	UL, CB, BSMI, CCC		

Features

L2 Features

- Supports up to 8K MAC address for DGS-1210-08P/16/24/24P, and 16K for DGS-1210-48
- Supports 256 static MAC
- Jumbo frame: Supports up to 10,000 bytes.
- IGMP Snooping v1/v2/v3 awareness:
 - Supports 256 multicast groups
 - Supports at least 256 static multicast groups
- MLD Snooping:
 - Supports max. 256 MLD Snooping groups
 - Supports 256 static MLD groups per device
- 802.1D Spanning Tree
- 802.1w Rapid Spanning Tree
- Loopback Detection
- 802.3ad Link Aggregation:

- DGS-1210-08P: Supports max 4 groups per device and 8 ports per group

- DGS-1210-16/24/24P: Supports max 8 groups per device and 8 ports per group

- DGS-1210-48: Supports max 16 groups per device and 8 ports per group

- Port mirroring
- SNTP
- LLDP/LLDP-MED
- IPv6 neighbor Discovery (ND): Supports 128 dynamic + static ND entries
- L2 Multicast Filtering

L3 Features

- ARP:
- Max 4K ARP entries
 - Support 384 static ARP entries
- Support 4 IPv4 and 4 IPv6 interfaces
- Support IPv6 Neighbor Discovery:
 - Max 128 ND entries
 - Support up to 128 static ND entries
- Max. 124 IPv4 and 50 IPv6 static route entries
- Supports default route backup entry
- Max. 384 IPv4 and 128 IPv6 host route

<u>VLAN</u>

- 802.1Q VLAN standard (VLAN Tagging)
- Up to 256 static VLAN groups
- Asymmetric VLAN
- Management VLAN
- Auto Voice VLAN
- Auto Surveillance VLAN 2.0

QoS (Quality of Service)

- Priority queue mapping by :
 - 802.1p
 - DSCP
 - ToS
 - TCP/UDP port number
 - IPv6 traffic class
- Up to 8 queues per port
- Supports Strict in queue handling
- Bandwidth Control

<u>AAA</u>

- > 802.1X port-based access control
- Support RADIUS server

<u>ACL</u>

- Max 50 ingress ACL access-list
- Ingress ACL rules: 768 rules (each rule can be associated to a single port or multiple ports)
- Support different ACL policy packet contents:
 - 802.1p priority
 - VLAN
 - MAC address
 - Ethernet Type
 - IPv4/IPv6 address
 - DSCP
 - Protocol type
 - TCP/UDP port number
 - IPv6 Traffic class

Security

- Trusted Host
- Port Security: Support 64 MAC addresses per port
- Traffic Segmentation
- D-Link Safeguard Engine
- Broadcast Storm Control
- ARP Spoofing Prevention: Supports max 127 entries
- DHCP Server Screening: Able to configure 4 IP addresses for DHCP server.
- SSL/TLS: Support v1/v2/v3, TLS1.2
- Smart Binding

- Support manual configuration and scanning for binding.

- Supports ARP packet inspection as default, ARP and IP packet inspection as an option.

- Supports DHCP Snooping

<u>OAM</u>

Cable Diagnostics

Reset button (reset to factory default)

Management

- Web-based GUI or D-Link Network Assistant (DNA)
- D-Link CLI style
- SNMP support
- DHCP client
- Trap setting for destination IP, system events, fiber port events, twisted-pair port events
- Password access control
- Web-based configuration backup / restoration
- Web-based firmware backup/restore
- Firmware upgrade using D-Link Network Assistant (DNA) & Web-based management
- Reset, Reboot
- Surveillance Mode

D-Link Green Technology

Power Saving: Enabled by default to save power:

> - By Link Status: Drastically save power when the switch port link is down. For example, no PC connection or the connected PC is powered off.

> - By LED Shut-Off: LEDs can be turned on/off by port or system through schedule.

- By Port Shut-Off: Each port on the system can be turned on/off by schedule.

- By System Hibernation: System enters hibernation by schedule. In this mode, switches save most power since main chipsets (both MAC and PHY) are disabled for all ports, and energy required to power the CPU is minimal.

Appendix C – Rack mount Instructions

Safety Instructions - Rack Mount Instructions - The following or similar rack-mount instructions are included with the installation instructions:

A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.

B) Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.

C) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

D) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

E) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).

