

Gigaset GX4 / LUG AU-IE-UK-International en / A31008-XXXXX-XXXX-X-XXXX / Cover_front_c.fm / 1/16/23

Gigaset

GX4

(E940-2797-00)

You can find the most up-to-date
user guide at

www.gigaset.com/manuals



Contents


Overview	3
Gigaset GX4	3
Start screen	4
Illustration in the user guide	5
Safety information	6
Getting started	10
Using your smartphone	18
Basic operation	18
Configuring the start screens	22
Notifications	28
Apps	31
Downloads	36
Fingerprint sensor	37
Protection from unwanted interruptions	38
Additional functions	44
Communication	49
Making calls	49
Contacts	54
Messages (SMS/MMS)	58
Settings	62
Device	62
Security	68
Accounts and location detection	73
Apps	76
Network connections	79
System	91
Troubleshooting	95
Questions and answers (FAQ)	96
Appendix	98
Customer service United Kingdom and Ireland	98
Customer Service & Assistance	99
Manufacturer's advice	101
Open source software	104
Index	105



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Gigaset GX4

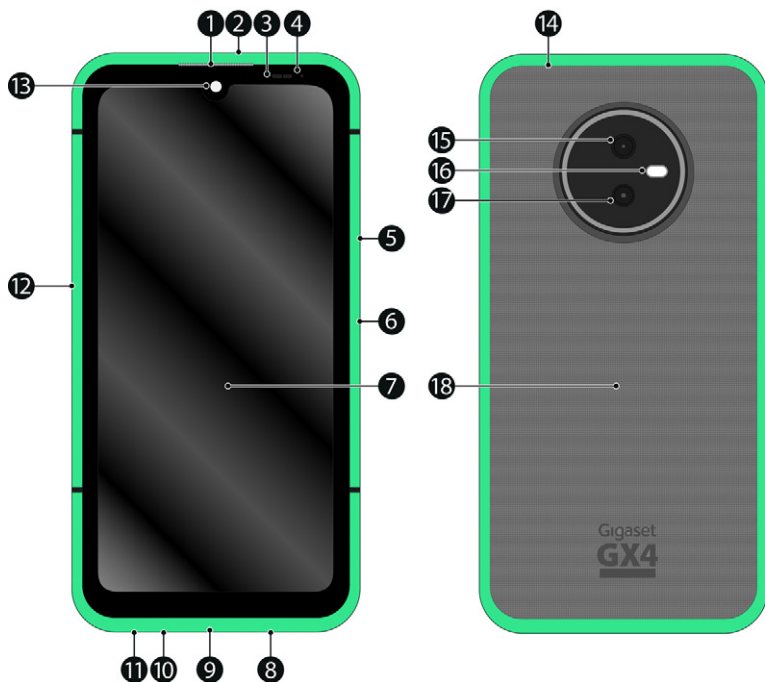

- | | | | |
|----|--|----|--|
| 1 | Speaker (receiver) | 11 | Headset jack |
| 2 | Microphone (top/bottom) | 12 | Function key (individual assignment) |
| 3 | Brightness sensor | 13 | Front camera |
| 4 | Message LED | 14 | Air pressure sensor |
| 5 | Volume +: ▶ Press up
Volume -: ▶ Press down | 15 | Main camera |
| 6 | Switch on and off / Fingerprint sensor | 16 | Flash |
| 7 | Touchscreen (start screen) | 17 | Macro camera |
| 8 | Speaker | 18 | Coil (internal)
for NFC and for inductive charging of the
smartphone |
| 9 | USB type C connector | | |
| 10 | Microphone (top/bottom) | | |

Status displays for message LED

The message LED provides information on the charge level when charging and the arrival of notifications.

LED	Meaning
On	Smartphone is charging.
Flashing	Smartphone is charging and/or notification available.
Off	Smartphone is not being charged or it is charged and there is no notification.

Start screen



Notifications and status bar

Icons show the arrival of notifications and various states

Access to notifications (→ p. 28)

Access to quick settings (→ p. 21)

Search engine

Can be set (→ p. 28)

Area for apps and widgets

Can be customised (→ p. 22)

Status bar with number of start screens set up / Navigation between start screens / Display all apps

Can be customised (→ p. 20)

Favourites bar

Frequently used apps (→ p. 22)





Navigation bar (→ p. 20)

Comes with the Google™ app and Google Chrome™

Illustration in the user guide

The following sections contain information to be shown in the operating guide. The symbols and procedures used in this document are described.





Icons

	Warnings, the non-adherence to which can result in damage to devices or personal injury.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for carrying out the following action.
	Additional helpful information.

Procedures

Example: Change the time for transitioning to the idle status

▶  ▶  **Settings** ▶ **Display** ▶ **Screen timeout** ▶ Select time

Symbols	Meaning
▶	Every arrow initiates an action.
▶ 	Swipe the start screen up Note: You can skip this step if the app you want to open is on a start screen.
▶  Settings	Tap the Settings app. The Settings menu opens.
▶ Display	Tap the menu entry Display .
▶ Screen timeout	Tap Screen timeout .
▶ Select time	Tap the required time  = Selected,  = Not selected

When opened, some menus do not show all entries:

▶ Tap **Advanced** to show all entries

Safety information



Please read these instructions carefully. Failure to comply presents a risk of injury and damage to a device, as well as breaches of applicable laws.

Please explain to your children the contents of this document as well as the potential risks associated with using your smartphone.

The operating guide is part of your smartphone. It contains important information about safety, use and disposal. Please familiarise yourself with all the operating and safety information before using your smartphone. Only use the product as described and for the specified areas of use.

Include all documents if passing your smartphone on to a third party.

Proper use

The Gigaset GX4 – hereinafter referred to as the smartphone – is suitable for use in a mobile network. Your smartphone is suitable for private and business use. Any other use is not permitted. You are not permitted to make changes or modifications to the smartphone and any such changes or modifications will invalidate the warranty.

General information



Warning!

Risk of suffocation! Keep away from children! Keep packaging and protective film and batteries away from children. Keep the mobile phone and accessories out of the reach of children. Small children could swallow small parts or batteries. If a battery is swallowed, seek medical attention immediately.



Dispose of used smartphones in line with the instructions (see Section Waste and environmental protection → p. 102).

- The descriptions in this document are based on the default settings of your smartphone.
- For your own safety, only use original, approved accessories from Gigaset for your mobile phone. Using incompatible accessories can damage the mobile phone and entail hazardous situations. Original accessories can be purchased from Gigaset Customer Service (see Section Customer service United Kingdom and Ireland → p. 98).
- Your smartphone offers protection class IP68 (dust- and water-resistant). In the event of contact with water, please comply with the following instructions: Never submerge your smartphone in deep water. Do not use your smartphone underwater for more than 30 minutes at a maximum water depth of 1.5 m. Keep all covers fully closed so that no water can get in. Once your smartphone is out of the water, dry it and remove any remaining water droplets from the device openings (microphone / speaker (receiver) / USB type C connector / headset jack) with a lint-free cloth.
- Permitted temperature range for charging: -10-45°C.
Permitted temperature range for operation: -15-45°C.
High temperatures can shorten the life of electronic devices and damage the battery; plastic parts can deform or melt. Using or keeping your smartphone in refrigerated areas can result in condensation on the inside, which will destroy the electronic circuitry.
- Switch off your smartphone when in potentially explosive areas and observe all warning signs. Potentially explosive areas also include places where switching off vehicle engines is normally recommended. It is at these kinds of places that flying sparks can be the cause of explosions or fires with resulting injuries, and there may be a risk to life.
These areas include petrol stations, chemical factories, transport and storage systems for hazardous chemicals, spaces under ship decks, areas in which the air contains chemical substances or fine particles (such as dust or metal powder particles).
- Short-circuiting, disassembling and modifying your smartphone are not permitted because they present a risk of injury, electric shock, fire or damage to the charger.

- If your smartphone becomes hot, changes colour or shape or leaks whilst being used, charged or at any other time, contact Gigaset Customer Service immediately.
- The apps preinstalled on your smartphone will be updated automatically. Updates may result in differences from the described menus, functions and displays or apps may no longer function properly. If in doubt, please contact Gigaset Customer Service.
- Additional costs may be charged by your mobile network operator for automatic updates of preinstalled apps, installing further apps or downloading image, video or audio files. Contact your mobile network operator for suitable mobile network tariffs.

Battery and charging



Not replacing the battery properly can pose a risk of explosion.
Dispose of used batteries in line with the instructions (see Section Waste and environmental protection → p. 102).

- Never burn or heat batteries, and do not dispose of them in environments which are at risk of heat or fire to prevent battery fluid escaping, overheating, explosion and fire. Do not disassemble, weld and/or modify the battery. Do not keep the battery where it is exposed to strong mechanical effects.
- Do not use any sharp objects (such as screwdrivers) to touch or pierce the battery. There is a risk that battery fluid will escape or the battery will overheat, explode or catch fire and burn. Crushing, heating and burning batteries are strictly prohibited.
- The battery electrolyte coming into contact with eyes can cause a loss of eyesight. If electrolyte does enter an eye, please do not rub the eye with a hand. Immediately wash the affected eye thoroughly with clear water and consult a doctor. The electrolyte coming into contact with skin (or clothing) presents a risk of skin burns. Immediately wash the skin or clothing thoroughly with soap and clear water, and consult a doctor if required.
- Never use batteries for purposes other than those specified. Never use a damaged battery. If the battery becomes hot, discolours, deforms or becomes leaky whilst being used, charged or kept in a safe place, it must be replaced immediately by a new battery for safety reasons.
- The battery temperature rises during the charging process. Do not keep the battery together with ignitable products in the same drawer as this poses a risk of fire.
- Do not charge the battery for longer than 12 hours.
- Only charge the smartphone indoors. Whilst the phone is charging, do not use the phone for calls or dial any numbers.
- The socket must be easily accessible during the charging process.
- Electrical storms pose a risk of electric shocks.
- Do not use the charger when the power cable is damaged or no battery is inserted in your smartphone because this poses a risk of electric shock and fire.
- Please only use approved power adapters.

Volume



High volumes can impair hearing.

Listening to music or conversation with headphones set to a loud volume can be unpleasant and permanently impair hearing.

To prevent loss of hearing, do not have the volume turned up too high for long periods.

Use in hospitals / medical devices

- The function of medical equipment near your smartphone can be impaired. Bear in mind the technical conditions of the environment in question (such as in a doctors' surgery).
- If you use a medical device such as a pacemaker, please consult the manufacturer of the product before using the product. You will be provided information on the sensitivity of your smartphone to external, high-frequency energy sources.
- Heart pacemakers, implantable cardioverter defibrillators:
When you switch on your smartphone, ensure that the distance between your smartphone and an implant is at least 20 cm. To reduce potential interference, use your smartphone on the opposite side to the implant. Please switch your smartphone off immediately if interference occurs. Do not keep your smartphone in a shirt pocket.
- Hearing aids, cochlear implants:
Some digital wireless devices can interfere with hearing aids and cochlear implants. Please consult the manufacturers of these products if interference occurs.
- Other medical devices:
If you and the people around you use other medical devices, please contact the relevant manufacturer for information on whether such devices are protected from radio frequency signals in the environment. You can also consult your doctor about this.

Emergency calls

- Ensure your smartphone is switched on and connected to the mobile network. Enter the emergency number as required and speak.
- Tell the person at the emergency call centre your location.
- Do not end the conversation until the person at the emergency call centre asks you to.

Children and pets

- Keep your smartphone, chargers and accessories out of the reach of children and pets. Children and/or pets can swallow the small parts, posing a risk of suffocation and other hazards. A child may only use your smartphone under the supervision of an adult.

Long periods of use

- Playing games or surfing on your smartphone for long periods may mean assuming an unhealthy body posture. Take a 15 minute break every hour. If you feel unwell having used the phone for a long period, take a break - and consult a doctor if your condition persists.

Aeroplanes, vehicles and road safety

- Switch off your smartphone in aeroplanes.
Please observe applicable restrictions and regulations. Wireless devices can interfere with the function of aeronautical equipment. Follow the instructions issued by flight personnel when using your smartphone.
- The absolute priority for every vehicle driver and everyone in a vehicle is safety on the roads and for road users. Using your smartphone whilst driving can be distracting and therefore lead to dangerous situations. You may also be violating applicable laws.

SIM card, memory card and data connector cable

- Do not remove the card from your smartphone whilst data is being sent or received, as this presents a risk of data loss and damage to your smartphone or memory card.
- Charges might apply when establishing Internet connections via the SIM card.

Defective devices

- The installation and repair of products are the sole preserves of qualified maintenance personnel. Please contact a Gigaset Service Centre.
- Dispose of faulty devices carefully or have them repaired by our Customer Service team. These devices could interfere with other wireless services.
- Careless handling of your smartphone, such as dropping it, can shatter the display and damage the electronic circuitry and sensitive parts inside.
- Do not use your smartphone if the device is cracked or shattered. Fragments of glass or plastic can injure hands and face.

Other important information

- Never point the flash light directly at the eyes of people or animals. Pointing a flash light too near to human eyes poses a risk of temporary loss of eyesight or impairment of vision.
- Your smartphone can heat up when running power-intensive apps or programs for longer periods. This is normal and has no bearing on the performance of your smartphone.
- When your smartphone warms up, please put it aside and stop the program you were running. Coming into contact with a hot smartphone can cause minor skin irritations such as redness.
- Do not paint or lacquer your smartphone. Lacquer and paint can damage the parts of your smartphone and may cause malfunction.

Getting started

Package contents

Check the package contents of the Gigaset GX4, before starting it.

Contact Gigaset Customer Service if anything is missing or damaged.

- 1 × smartphone Gigaset GX4
 - 1 × charger cable (USB type C)
 - 1 × wrist strap
-

Getting started

Inserting/removing the SIM cards and memory card


You can insert 2 nano SIM cards and one memory card into your smartphone.

- ▶ Place your fingernail into the notch at the bottom left corner and pull the cover upwards.


Do not exert any force when inserting the SIM or memory card because doing so might damage the connector on your smartphone and other parts.



- ▶ Insert nano SIM card / memory card. Your SIM card 1 goes in a holder under the memory card.


 Your smartphone detects memory cards with a storage capacity of 1 TB.

- ▶ To remove SIM card 1, push the ejector tool lever on the left downwards (see diagram).

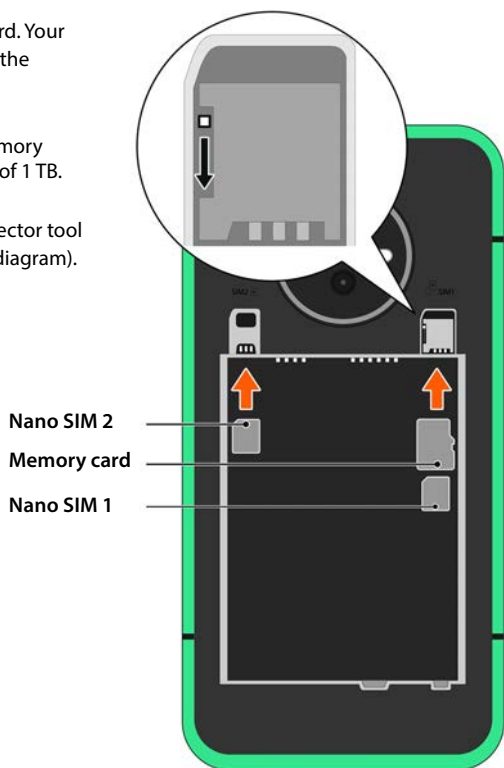

Inserting and charging the battery

- ▶ Inserting the battery.
- ▶ Carefully press down the back cover until it clicks into place. Protection class IP68 is only guaranteed if the cover is completely closed.
- ▶ Connect the USB type C connector on the charger cable supplied.
- ▶ Connect the power adapter (not included in delivery) to the USB type A connector of the charger cable and connect it to the power source.

Your smartphone is charged once the charge icon  in the status bar is filled completely.



To conserve natural resources, the package does not contain a USB power adapter.

Please use the USB power adapter from your old smartphone.

You can also buy a USB power adapter from the Gigaset online shop.


Only use approved USB power adapters or mains adapters.

Alternatively, you can inductive charge your smartphone using a wireless charger.



Switch your smartphone off if you are not using it for a couple of days.

If you are not using your smartphone for a couple of weeks, switch it off and remove the battery.

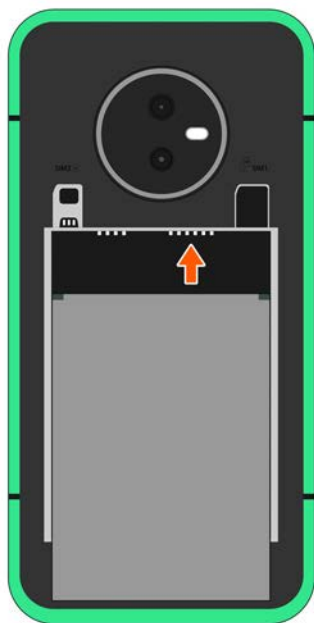

Replacing the battery

When the battery is reaching the end of its life, you can replace it.



Do not remove the battery while your smartphone is charging. This could damage your smartphone.

Remove the power adapter from your smartphone before replacing or removing the battery.



Ensure the environment is free of dust so that no dust collects on the camera lenses.

Only use Gigaset batteries with the same technical specifications as the original battery (→ p. 103).


- ▶ Smartphone switching off.
- ▶ Place your fingernail into the notch at the bottom left corner and pull the cover upwards.
- ▶ Remove the old battery.
- ▶ Insert the new battery.
- ▶ Carefully press down the back cover until it clicks into place.



Switching the smartphone on

- ▶ Press and hold the **on/off button**.

When you are requested to unlock the SIM card,

- ▶  Use the keypad to enter the PIN of the SIM card ▶ ✓
- ▶ When switching on the device for the first time, a wizard starts which guides you through the initial configuration (→ p. 14).

Using the touchscreen

Movements and gestures for using the touchscreen:

Tap

- ▶ Briefly touch the screen with your finger

Examples:

Start an app, and select function or setting: ▶ Tap the element

Enter text: ▶ Tap a text field . . . A keypad is shown

Touch and hold

- ▶ Keep your finger on an element until it responds.

Dragging and releasing

- ▶ Touch and hold the element ▶ Move your finger across the screen to the place required ▶ Release the element

Example: Moving apps on the start screen

Swipe or drag

- ▶ Move your finger quickly across the screen without stopping

Example: Switching between the start screens

Double tapping

- ▶ Tap the screen twice quickly in succession.

App-dependent: e.g. z. B. zoom in (Zoom), select text, ...

Spread apart / pinch together your fingers

- ▶ Place two or more fingers on the screen at the same time

Zoom in: ▶ Spread your fingers apart

Zoom out: ▶ Pinch your fingers together

Example: Scaling screen content. Only possible for special screens (such as Google Maps and Chrome).

Configuration wizard for your smartphone

When you switch on your smartphone for the first time, you are automatically guided through the most important configuration steps.

< Back: Check and change as required settings already configured.

Next > Apply the setting on the screen and jump to the next screen.

Skip Configure the setting later.

Selecting the language

The set language is displayed.

- ▶ Select another language and country as required ▶ Tap **START**

Inserting SIM cards

This screen is only shown when no SIM card is inserted:

- ▶ Insert card now (→ p. 10)

Insert SIM card later: ▶ **Skip**

Establishing a WLAN connection

Wireless networks (WLANs) in range are displayed.

- ▶ Tap the required WLAN ▶  Enter the WLAN password ▶ **Connect** ... A connection to the selected WLAN is established



Your smartphone checks whether there is more up-to-date software. New software is installed as required.

Copying apps & data

You can now define whether you want to set up your smartphone from scratch or if you want to copy personal data (for example, apps, photos, music) from another device or Google Cloud.

Copying data




You have an Android smartphone, a Google account or an iPhone.

- ▶ Tap **Next** ▶ Select the desired data source
- ▶ Follow the instructions on the screen

Set up as new smartphone


- ▶ Tap **Do not copy**

Logging in to the existing Google account

- ▶  Enter the email address and password of your Google account

or

Creating a new account

- ▶ Tap **Create account** ▶  Enter the email address and password for a new Google account.
- ▶ Add further information to finish setting up the Google account.

Using Google services

Various services are displayed.

- ▶ Use the switch to enable/disable the service you want to use ▶ **Accept**



Performing this step means you accept the conditions of use and data protection declaration of Google.

Selecting a search provider

You can select which search provider you use for search requests.

- ▶ Select a provider ▶ **Next**

Setting up the display lock

Protect your smartphone from unauthorised use.

- ▶ Enter the PIN

or

- ▶ Tap **Options for the display lock**
- ▶ Select **Pattern | PIN | Password** ▶ **Next**
- ▶ Enter the pattern, PIN or password ▶ **Next** ▶ Repeat ▶ **Confirm**

Setting up facial recognition

You can use facial recognition to unlock the smartphone, as well as for other functions requiring authorisation.

Do not set up facial recognition: ▶ **No, thanks**

Set up facial recognition: ▶ **I consent** . . . A wizard opens to guide you through the necessary steps

For further support when setting up facial recognition: ▶ **Use accessibility setup**

For detailed information → p. 69

Capturing a fingerprint

You can use a fingerprint to unlock your smartphone, as well as for other functions requiring authorisation.

Do not capture fingerprint now: ▶ **No, thanks**

Capturing a fingerprint: ▶ **I consent** . . . A wizard opens to guide you through the necessary steps.

For detailed information → p. 37

Activating Google Assistant

Google Assistant provides answers to questions and carries out different tasks. Google Assistant is controlled using Voice Match.

Google Assistant settings can come from any device logged in to the Google account. You can change the settings any time in your Google account under myaccount.google.com.

Voice Match

Use Voice Match to control Google Assistant with voice commands.

Enable: ▶ **I consent**

Disable: ▶ **Skip**

Voice Match on the lock screen

You can also use Voice Match when your smartphone is locked.


Enable: ▶ **I consent**

Disable: ▶ **Skip**

Setting up additional functions

You can configure additional settings, for example, set up Google Pay, set the background for the display or font size or set up another email account.

Gmail is set up once you log in to your Google account. When you set up email addresses for additional email accounts, the emails will also be displayed in the **Gmail** app.

▶ **Add another email account** ▶ Select the provider ▶  Enter access data ▶ **Next**

If you don't want to configure any more settings: ▶ **No, thanks**

Afterwards you need to confirm the data protection policy and declaration of agreement.

As the last step, you can accept the device charge limit. The charge limit of your smartphone is preset to 90% battery capacity. This increases the battery life.

Your Gigaset GX4 is now ready to use.

Using your smartphone

This section includes basic information about using your smartphone, the start screen, messages and apps.



The menus, functions and displays described here may differ in appearance and function as the result of automatic updates for the device or individual apps.

Please note that the following sections will not describe every detail of every setting.

Basic operation

The following sections contain information about the basic operation of the device.

Switching the smartphone on and off

Switching on

- ▶ Hold down the **on/off button** ... Your smartphone will start up

Unlocking the SIM card

- ▶ Enter the PIN for the SIM card ▶ ✓

Removing notifications (if available)

- Deleting a notification: ▶ Swipe to the left or right
- Deal with notification later: ▶ Swipe upwards to the Notifications bar

Notifications: → p. 28

When a display lock is set up to protect against unauthorised use

- ▶ Swipe up ▶ Unlock display lock ... The start screen is displayed

Display lock: → p. 69

Switching off

- ▶ Hold down the **on/off button** ▶ Tap **Power off** ▶ OK



You can also switch your smartphone to **Airplane mode**. This only disables the wireless functions, the other device functions remain available.

Switching the smartphone to and ending idle mode

Switching the smartphone to idle mode

- ▶ Briefly press the **on/off button**



If your smartphone is not used for a defined time, it automatically switches to idle mode.

Setting the period of inactivity for transitioning to idle mode

- ▶  ▶  Settings ▶ Display ▶ Screen timeout ▶ Select period

Ending idle mode

- ▶ Briefly press the **on/off button** ▶ Remove notifications if necessary ▶ Swipe up ▶ Unlock display lock



Some apps can be accessed directly from idle mode with a fingerprint (→ p. 37).

Start screen

A start screen is displayed when you switch on or unlock your smartphone and no app is open.

You can create several start screens and configure them as you wish - to be able to quickly access favourite apps and content (→ p. 28).




The start screen shown here is an example. The actual appearance of the start screen on your smartphone may vary.

Returning to the start screen from any user situation

For gesture control:


- ▶ From the Navigation bar, swipe up

With virtual buttons:

- ▶ Tap the Home button  in the Navigation bar ...
The start screen which was open last time is displayed

Switching between start screens

- ▶ Swipe left or right to the required start screen.

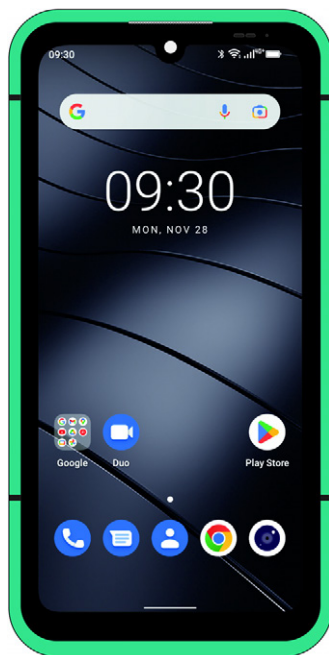

Swipe right on the start screen to display the Google feed on the left.

Google uses information from data saved by your smartphone, other Google products and your Google account to select the messages shown in your feed.

You can use settings to define what types of information you want to see in your feed.

Switching between start screens and apps

The Navigation bar is at the bottom of every screen. Navigation is performed by gestures or three virtual buttons depending on your settings.

Setting the Navigation bar

Set the required operation type for the Navigation bar:

▶  ▶  Settings ▶ Navigation bar ▶ Select **Gesture navigation** or **Virtual key**

Navigation using gestures



Operation on the start screen

Function	Gesture
Open list of apps used most recently:	▶ From the line at the bottom, drag a little way up and release
Open list of all apps:	▶ From the Status bar (dots), swipe up

Operation within apps

A line is displayed at the bottom of the screen (Navigation bar).




Function	Gesture
Back to start screen:	▶ From the line, swipe up
Switch between open apps:	▶ Swipe over the line to the left or right
In an app, navigate forwards/backwards:	▶ Swipe to the centre from the left or right edge of the screen.

Navigation using virtual buttons



Virtual key is set.





-  Opens the last screen viewed. You can go back several times (only as far as the start screen).
-  Home button
Briefly tap to: Open the start screen which was open last time.
Touch and hold to: Open the Google Assistant → [Google Help](#)
-  Opens an overview of the apps and browser tabs used last time.
Scroll through list of apps: ▶ Swipe to the left or right
Open an app: ▶ Tap it
Close an app: ▶ Swipe the app up
Close all apps: ▶ Tap **Clear all**


Adjust Navigation bar

- ▶  ▶  Settings ▶ Navigation bar



Show/hide Navigation bar

- ▶ Enable/disable **Hide navigation bar** with the switch
( = Navigation bar is shown;  = Navigation bar is hidden)

If the Navigation bar is hidden:

- Show: ▶ Swipe from the bottom up
- Hide: ▶ Tap 

Changing the order of Navigation buttons

Swapping the position of the Navigation buttons  and .

- ▶ Select the required combination, e.g.



Configuring the start screens

The following sections contain information about creating and managing the start screen.

Tailoring the Favourites bar


At the bottom of every start screen is the Favourites bar, from which you are able to quickly access the apps you use most frequently.




Removing apps from the Favourites bar

- ▶ Touch and hold an app in the Favourites bar
 - ▶ Click **Forget**
 - or
 - ▶ Drag it to somewhere else on the screen and release your finger


Adding an app

- ▶  ▶ Select the required app ▶ Touch, hold and drag the app to the start screen ... The start screen is shown in the background ▶ Drag the app to a space in the Favourites bar and release.


 If there is already an app at the required place, an app folder is created (→ p. 23).

Changing the wallpaper

- ▶ Touch and hold the background ▶ Tap **Wallpapers** ▶ Select an image from the predefined backgrounds or your own photo from the photo gallery ▶ Tap **Choose wallpaper from** ▶ Select where to use the background/photo (**Home, Lock screen, Home screen and lock screen**)

 More wallpaper images can be downloaded from Google Play.

Adding an app to a start screen

- ▶  ▶ Open the App menu ▶ Look for the required app ▶ Touch and hold the app ... The start screen is displayed in the background ▶ Drag the app to a free space in the start screen and release your finger

Adding a widget to a start screen

Widgets are components that are specifically intended to be displayed on a start screen, e.g. the entry field for a search machine, a clock, a calendar extract for the current day, an important entry from the contact list or a direct dial.

- ▶ Touch and hold a free space on a start screen ▶ Tap **Widgets**
- ▶ Touch and hold the required widget ... The start screen is shown in the background ▶ Drag the widget to a free place on a start screen and release your finger

The sizes of some widgets can be changed:

- ▶ Touch and hold a widget ▶ Release your finger ... If the size of the widget can be changed, you see a dotted frame on the edges ▶ Change the size of the widget by dragging the dots

Once the correct size is set: ▶ Tap anywhere outside the widget

Moving apps and widgets

- ▶ Touch and hold an app or widget on a start screen ▶ Drag the app or widget to the required position and release your finger, or drag it to the left or right to another start screen and release your finger
-

Creating folders for apps

- ▶ Touch and hold the app on the start screen ▶ Drag the app icon onto another app icon ... A joint icon for both apps is created



Adding apps:

- ▶ Touch and hold an app ▶ Drag it to the folder

Removing apps:

- ▶ Open the folder ▶ Touch and hold an app ▶ Drag it out of the folder onto the background

Renaming a folder:

- ▶ Open the folder ▶ Tap the name ... The keypad opens ▶ Delete the old name ▶  Enter the new name ▶ 
-


Removing an app or widget

- ▶ Touch and hold an app/widget on the start screen ▶ Click **Forget**

Adding, rearranging and removing start screens

If you have created multiple start screens, white dots appear above the Favourites bar indicating the number of start screens and the position of the current start screen.

Adding start screens

- ▶  ▶ Touch and hold an app ▶ Drag the app to the right until a blank start screen is shown ▶ Release your finger ... A new start screen is created and the app is placed on it.

Removing a start screen


- ▶ Remove all apps and widgets from a start screen (by deleting them or moving them to another start screen) ... When the last app or widget has been removed, the start screen is deleted

Other settings for the start screen



You can configure more settings for your start screen, such as how the app icons are to look.

- ▶ Touch and hold a free space on a start screen ▶ Tap **Home settings** ▶ Select the required option and set as required

Using gestures to operate the smartphone

 **Gesture navigation** is set (→ p. 20).

Some functions can be used by picking up, turning or shaking your smartphone.


- ▶  ▶  **Settings** ▶ **Intelligent assistance** ... The possible actions are displayed ▶ Enable the required actions with the switch

Quick settings

The quick settings enable you to access frequently used settings from all user situations, such as screen lighting, WLAN, Bluetooth and similar settings.

Opening the quick settings

- ▶ From the Status bar, swipe down ... The most important quick settings are displayed
- ▶ Swipe down again ... More quick settings are displayed

 Depending on the number of options shown, you can swipe between multiple pages of quick settings.

Enabling and disabling a function


- ▶ Tap the setting ... The setting icon is coloured when enabled and grey when disabled

Modifying a setting (if available)


- ▶ Touch and hold an icon ▶ Modify setting as required


Editing quick settings

You can make more options available in quick settings, remove any not used and rearrange the icons.


- ▶ Tap  ... Options not being used are shown at the bottom ▶ Touch and keep your finger on the icon and drag it to the required position

Restore defaults: ▶ Tap  ▶ **Reset**

End editing: ▶ At the top left, tap 

 If the required setting is not available as a quick setting:

- ▶ Tap  ... The **Settings** app opens; here you can access all the device settings.

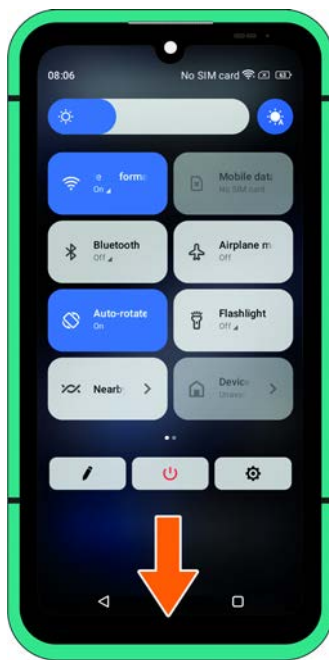

Setting volume and vibration with the Volume button

- ▶ Press one of the volume buttons on your smartphone ... The slider for the volume is opened ▶ Adjust the volume with the slider or volume buttons

Which volume is changed depends on what you are currently doing. If you are on a call, the volume of the receiver changes. In idle mode, the media volume changes.

Disable ringtone

- ▶ Drag the slider right down

Switching between ringtone, vibration and mute

Disabling the ringtone, enabling vibration:

- ▶ Tap 

Disabling vibration, disabling ringtone (mute):

- ▶ Tap 

Enabling ringtone:

- ▶ Tap 

Setting the volume for media playback, receiver, ringtone and alarm

- ▶ Tap Sliders are displayed for **Media volume**, **Call volume**, **Ring & notification volume**, **Alarm volume** ▶ Set the required volume using the slider.

- ▶ Click **Done**.

Configuring advanced audio settings

Tap ... ▶ **See more** ... Menu **Settings – Sound** is opened (→ p. 64)



Writing and editing text

Use the Google keypad to write text.


Opening the keypad


- ▶ Tap a place where text can be entered

You can enter letters, digits and special characters.



Switching between entry of letters and digits / special characters: ▶ Tap 

Closing the keypad

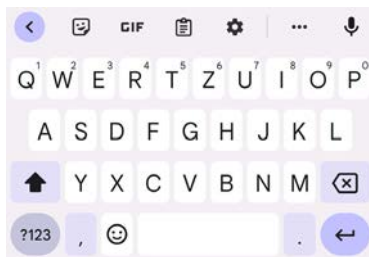- ▶ In the Navigation bar, tap 




Adding text

- Entering letters and symbols: ▶ Tap a key
- Entering uppercase letters: ▶ Tap the shift key ()
- Enabling/disabling Caps Lock: ▶ Double tap the shift key ()
- Showing umlauts: ▶ Touch and hold the key

Whilst text is being entered, suggestions from the keypad dictionary are shown above the keypad.

- Using a suggestion: ▶ Tap the word . . . The word is included and a space is inserted automatically

Editing text

- Positioning the cursor: ▶ Tap the place in the text where you want to position the cursor
- Moving the cursor: ▶ On the text, move your finger to the left or right
- Deleting a character: ▶ Tap backspace ()
- Selecting text: ▶ Touch and hold a word ▶ Select more or less text with tabs on both sides
- Selecting all: ▶ Touch and hold a word ▶ **Select all**
- Cut selected text: ▶ Tap **Cut**
- Copy selected text: ▶ Tap **Copy**
- Pasting text: ▶ Position the cursor ▶ Tap the cursor ▶ **Paste**
- Share a text: ▶ Select the text ▶ **Share** ▶ Select the app you want to use to share the text with others



If not all options are displayed for space reasons: ▶ Tap **•••**

Changing the keypad settings



You can change various keypad settings, such as the language for the keypad assignment, the response to keypresses and the keypad design.

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **On-screen keyboard** ▶ **Gboard**



Setting voice entry

If an app permits it, you can also enter text by speaking into the microphone. The function is enabled by default.

Enable/disable voice input:



- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **On-screen keyboard** ▶ **Manage on-screen keyboards** ▶ **Enable/disable Google Voice input with switch**


Voice input settings:

- ▶  ▶  **Settings** ▶ **System** ▶ **Languages & input** ▶ **On-screen keyboard** ▶ **Google Voice input**

Settings for function key

Various functions or apps can be assigned to the function key on your smartphone.

- ▶  ▶  **Settings** ▶ **Function key** ... The possible functions (single click, double click, hold) are displayed ▶ Tap the required function and select the stored function/app

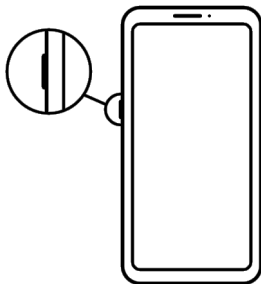

Notifications

The following sections contain information about editing and settings for notifications.

Notifications inform you about various events, such as the arrival of a new voice message or email, appointments or wake-up calls.

Notifications are displayed as follows:

- In the Notifications bar: ▶ Swipe over the screen from the top down
An icon in the Notifications bar denotes which notifications are available.
- On the lock screen: when the phone starts or when your smartphone returns from idle mode
- At the top of the screen whilst you are doing something else on your smartphone such as reading an email or watching a video
- If notification dots are allowed: a coloured dot by the app icon that has sent a notification
- Briefly on the idle screen

Changing the settings for displaying notifications: ➔ p. 29

The message LED flashes if there are new notifications.

Dealing with notifications

Viewing and responding to notifications

- ▶ Tap the notification ... The contents of the message are displayed in the associated app. If there are several possible apps, you can select one.

Which information is displayed and which actions are possible depend on the app which triggers a notification.

Some apps allow actions to respond to a notification. You can for example reply directly to a mail, switch off a wake-up call or show on the map the meeting place for an appointment.

Changing the display options of the app for notifications: → p. 30

Deleting and resetting notifications

Deleting a notification:

- ▶ Swipe the notification to the left or right

Deleting all notifications on the Notifications screen:


- ▶ Scroll down to the end of the notifications ▶ **CLEAR ALL**

Resetting a notification on the lock screen or at the top of the screen to read it later:

- ▶ Swipe the notification up



Settings for notifications

Changing app settings

- ▶  ▶  Settings ▶ Notifications ▶ App settings

The apps that sent the last notifications are listed. Select between **Most recent**, **Most frequent**, **See all apps**, **Disabled** to display the corresponding apps.



or

- ▶  ▶  Settings ▶ Notifications ▶ Tap the **App notifications** icon on the right

All apps are listed. You can enable/disable notifications for the displayed apps with the switch.



Show notification history

- ▶  ▶  Settings ▶ Notifications ▶ Enable/disable **Notification history** with switch

The notification history displays the last notifications from apps in chronological order.

To see detailed information about an app notification: ▶ Tap the corresponding app

Changing the default notification sound

▶  ▶  Settings ▶ Sound ▶ Notifications ▶ Select notification sound ▶ OK

No notification sound: ▶ Select **None** (first entry in the list)





- If you do not wish to be disturbed, you can mute your smartphone. No notification sound is played.

Use the “Do not disturb” function to mute your smartphone → p. 41


- In some apps, sound and vibration settings for notifications can be set directly in the app from the **Settings** menu.
- Your smartphone continues to vibrate for notifications for which Vibration mode is already selected.

Changing the settings for app notifications

Specify how and when notifications for an app are displayed

▶  ▶  Settings ▶ Apps ▶ See all apps ▶ Select an app ▶ Notifications

or



▶ Touch and hold an app notification ▶ Tap 

The settings for the app notifications are displayed.



Permit/prevent notification dots

Notification dots show that there are new messages in an app by displaying a coloured dot on the app icon.

Default setting for all apps:

▶  ▶  Settings ▶ Notifications ▶ Enable/disable the **Notification dot on app icon** function with the switch

App-specific setting:



▶  ▶  Settings ▶ Apps ▶ See all apps ▶ Select app ▶ Notifications ▶ Enable/disable the function **Allow notification dot** with the switch

Notifications on the lock screen

The following settings are available for the lock screen:

- **Don't show notifications at all**
- **Show conversations, default, and silent**
- **Hide silent conversations and notifications**

You can use these settings as default settings for all apps.

▶  ▶  Settings ▶ Notifications ▶ Tap the **Lock screen notifications** icon on the left ▶ Enable/disable the required option with the switch.



Apps

The following sections contain information about using and managing apps.

The apps available on your smartphone are stored in the App menu. Your smartphone is supplied with a number of default apps.

You can download and install more apps, or disable and uninstall existing apps.



You can place frequently used apps directly on a start screen (→ p. 22), and the five most important apps in the Favourites bar (→ p. 22).

Opening and exiting apps

Opening an app from the App menu



The start screen is open. If not: ▶ Swipe from the bottom up

- ▶ Swipe from the bottom up ... All apps are displayed ▶ Tap the app that you want to open

Switching between apps

- ▶ Drag slowly from the bottom up ... The apps used most recently are displayed ▶ Scroll as required through the list by swiping left or right ▶ Tap the app you want to open or with navigation using gestures (→ p. 20)
- ▶ From the line at the bottom, drag a little way up and release

Ending/exiting apps

Exiting apps (gesture control)

- ▶ Swipe from the bottom up ... The start screen is displayed.



The app remains open in the background and is displayed in the most recently opened apps.


Exiting apps (Navigation bar)

- ▶ Tap the Home button ... The start screen is displayed.




The app remains open in the background and is displayed in the most recently opened apps.



Ending apps (gesture control)

- ▶  Drag slowly from the bottom up . . . The apps used most recently are displayed ▶ Swipe the app up to exit ▶ Tap **Clear all**

Ending apps (Navigation bar)



- ▶ Tap the  button . . . The apps used most recently are displayed ▶ Swipe the app up to exit. ▶ Tap **Clear all**

Finding apps

- ▶  Swipe from the bottom up on the start screen . . . All apps are displayed ▶ Tap **Search apps** at the top of the apps list ▶  Enter the first few letters of the app you are looking for . . . All matching apps are displayed

Installing/uninstalling apps**Installing new apps**

Downloading apps from Google Play:

- ▶  ▶  **Play Store** . . . The Google Play Store is opened ▶ Look for the app you want ▶ Open the app screen ▶ **Install**

Uninstalling or disabling apps

You can uninstall or disable apps on your smartphone.



You can uninstall apps you have downloaded. They will be removed from your smartphone. Apps preinstalled on your smartphone can be disabled but not removed. Disabled apps are not shown on your smartphone.




Disabling a certain system app can cause problems with other apps.





Some system apps cannot be uninstalled or disabled.

- ▶  ▶  **Settings** ▶ **Apps** ▶ Show all apps ▶ Select the app you want to uninstall ▶ **Uninstall / Disable**

or on the start screen (for apps which can be uninstalled)














- ▶  ▶ Touch and hold the app you want to uninstall ▶ Tap **UNINSTALL**

Show system apps and processes:

- ▶  ▶  **Settings** ▶ **Apps** ▶ Show all apps ▶ Tap **⋮** ▶ **Show system**

Preinstalled default Google apps

Your smartphone makes available many of the default apps from Google, including:



	Google	Browse Internet and search smartphone
	Chrome	Browser for surfing on the Internet
	Gmail	Receive, write and send emails
	Maps	Look for and find out about places in all corners of the globe
	YouTube	Play YouTube videos and playlists
	Files	File manager
	Drive	Store data centrally
	Google Play Music	Listening to music
	Google Play Movies & TV	Watch films and series
	Photos	Save and manage photos centrally
	Calendar	Manage tasks and dates/times
	Duo	Make calls with video view
	Google Play Store	Download apps

More information on Google apps → [Google Help](#)

Speeding up app running with DuraSpeed

Apps running in the background can impair the running of apps in the foreground. This is why the running of apps in the background is normally limited, for example, notifications are delayed.

You can use DuraSpeed to define which apps can run in the background without limits if an app is active in the foreground. The function is not enabled on initial delivery.

▶  ▶  **Settings** ▶ **DuraSpeed** ▶ Enable/disable the function with the switch

If enabled:

▶ Enable/disable apps that can run in the background without limits.

Using two apps at the same time

Split screen mode enables you to display two apps next to or above each other on the screen, and to work with both apps in parallel.



Both apps support the function.

Starting Split screen mode



Depending on the device orientation, the apps are either displayed top/bottom (portrait) or left/right (landscape).

Selecting the first app

- ▶ Open the first app from a start screen or from the app menu ▶ Slowly drag from the bottom up ▶ Tap the icon at the top of the app image ▶ Tap **Splitscreen** ... The app is displayed at the top (or on the side)

Selecting the second app


- ▶ Open the second app from a start screen, the app menu or the list of most recently used apps ... The app is loaded into the second screen area

Changing the second app

- ▶ Select another app from a start screen, the app menu or the list of most recently used apps

Ending Split screen mode

- ▶ Drag the black bar between the two apps all the way up/down or left/right ... The second app is moved to the background, your smartphone returns to Default mode

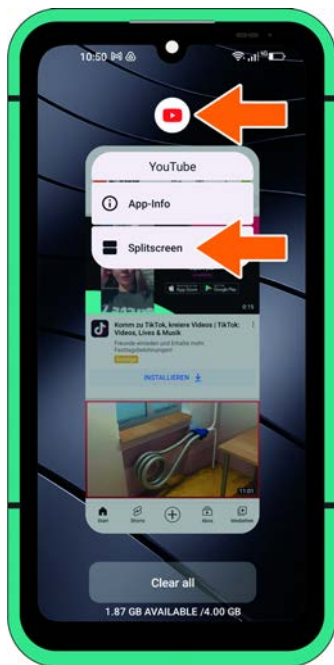

Protection from harmful apps

Downloading apps from sources other than Google Play

If you want to download apps from sources other than Google Play, you must permit it explicitly. You can fund this function in the settings of the app that is allowing the download, such as the browser or mail program.

- ▶  ▶  Settings ▶ Apps ▶ Special app access ▶ Install unknown apps ▶ Enable the Allow from this source switch.

If you want to use apps classified by Google as less secure, you must permit the use of such apps explicitly. Check Google for existing security risks.



Apps from unknown sources can represent a security risk for your smartphone. A download can corrupt your smartphone, and personal details can be misused or go missing.

Checking your smartphone for security threats

Google Play Protect checks apps when they are installed and checks your smartphone for security threats. In the event Play Protect finds a potentially harmful app, you are notified.

- ▶  ▶  Settings ▶ Security ▶ Google Play Protect ... Information is displayed on apps checked recently.
- ▶ Manually starting a check: ▶ Tap **Scan**

Enabling/disabling automatic checking:

- ▶ Tap  ▶ Enable/disable **Scan apps with Play Protect** with switch

The following actions are possible when you install an app which is not from Google Play:

- Recommendation not to install the app.
- Installation of the app is blocked when there is a threat to the security of the device.
- Information on the app's identification is sent to Google, such as protocol information, URLs connected to the app, the device ID, its operating system version and the IP address.

Apps installed on your smartphone are checked regularly. If a potential harmful app is detected, the app check can take the following actions:

- Recommend that you uninstall the app immediately.
- Remove an app which is known to be insecure from your smartphone.

Improving the detection of harmful apps



The **Scan apps with Play Protect** is enabled.

If the function is enabled, Google also receives anonymous information on all apps installed which are not from the Google Play Store. This helps Google to provide better protection for users against harmful apps.

▶ ▶ **Settings** ▶ **Security** ▶ **Google Play Protect** ▶ ▶ Enable the **Improving the detection of harmful apps** switch.



This option might not work for all apps because developers are able to disable this function to prevent their apps being subjected to verification.

Downloads

You can download files from websites onto your smartphone. Downloaded files are mainly stored in the available file manager apps, such as **Files**.



Content such as music, TV programs and books are generally not stored in the file manager, but in the app, with which the download was performed.

Working with downloaded files

▶ ▶ **Files** ▶ **Downloads**

Switch between image and list view: ▶ Tap /

Opening a file: ▶ Tap the file

Delete a file: ▶ Touch and hold the file ▶ Tap



Sharing a file: ▶ Touch and hold the file ▶ Tap

Additional options: ▶ Tap

Fingerprint sensor

Your smartphone has a fingerprint sensor. It enables you, for example, to authorise purchases, register with certain apps and open a contact quickly from idle mode.

Setting up the fingerprint

▶  ▶  **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ **Fingerprint** ▶ **Fingerprint Manager** ... A wizard opens to guide you through the necessary steps ▶ **Next**

When a display lock is set up: ▶ Enter **Pattern, PIN or Password**

If a display lock is not yet set up: ▶ **Choose a screen lock** (→ p. 69)

Capturing a fingerprint: ▶ **I consent** ▶ A wizard opens to guide you through the necessary steps.



Pattern, PIN or Password are alternatives to the fingerprint.

The alternative method must be used in the following cases:

- The fingerprint is not recognised after several attempts
- For editing fingerprint settings
- When it has been more than 48 hours since the alternative method was used for unlocking

Scanning a fingerprint

▶ Place your finger on the fingerprint sensor. Hold your smartphone as you will also hold it later for unlocking ▶ **Next**

▶ Keep tapping the sensor until the **Fingerprint added** message is shown. Keep changing the position of your finger.

Ending the scan: ▶ **Done**

Add more fingerprints: ▶ **Fingerprint** ▶ **Fingerprint Manager**






You can add up to five fingerprints. They are saved as Finger 1 to Finger 5.


Note that all those who add their fingerprints are able to unlock your smartphone and authorise purchases with your account. Fingerprints are stored securely and never outside your smartphone.

Changing a fingerprint name

Assign a suitable name for the fingerprint, e.g. "Index finger left".

▶  ▶  **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ **Fingerprint** ▶ **Fingerprint Manager** ▶ Use alternative method (**Pattern, PIN or Password**) to unlock ▶ Touch the name ▶  Enter a new name in the text field ▶ **OK**

Using a fingerprint

If an action is to be authorised with a fingerprint, the  icon or alternative display lock (if set up) is displayed.

- ▶ Tap the fingerprint sensor with a finger which has been scanned ▶ Repeat the process as required

The alternative display lock is requested automatically if the fingerprint is not recognised after several attempts.

Protection from unwanted interruptions

The following sections contain information about how you can configure use of your smartphone to be more secure and less detrimental.

Digital wellbeing

Grouped under “Digital Wellbeing” are different functions with which you can see an overview of the usage of your smartphone and reduce time on your smartphone. Digital wellbeing gives you the opportunity to use your smartphone in a smarter way.

- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls**

You can see in the diagram how long you have used your smartphone today and how usage is split across different tasks.

Show more information:

- ▶ Tap the diagram or **Dashboard** ▶ Select the information required

Device usage duration

The diagram shows the device usage for the current week.

Listed underneath are the apps you have used and how long you have used them. Apps you have not yet used can be found via **Display all apps**.

Notifications received

Shows the number of notifications you have received from which apps.





Opened how often?

Shows how often you have unlocked your smartphone and opened certain apps.

Show more information about individual apps:



- ▶ Tap the app ▶ Select the required information

Restrict app usage

- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ Tap the diagram ▶ **Show all apps**
- ▶ Next to the app for which you want to set the usage time, tap  ▶ Set the time in hours and minutes ▶ **OK** ... The time set is displayed under the  icon

When the timer expires, the app is ended and the app icon greyed out. You receive a message.

Clear a timer:

- ▶ In the message, tap **Settings** ... The **Digital wellbeing & parental controls** app is opened ▶ Next to the app, tap  ▶  **Delete** ▶ **OK**



App timers are reset at 0.00.




Checking and restricting website usage



You use the  **Chrome** web browser.

For other browsers, you can only set the app timer. Access is not possible to individual websites.

The website display shows an overview of times spent on individual websites.

- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ Tap the diagram ▶  **Select Chrome**.


If Chrome is not in the list: ▶ **Show all apps**

- ▶ **Show websites** ▶ **View** ... All websites you have searched in the time period in question are displayed, with the respective usage times.

Exit display: ▶ **Remove websites**



Show more information about individual websites: ▶ Tap the name of the website

Set the usage time:

- ▶ Next to the website for which you want to set the usage time, tap  ▶ Set the time in hours and minutes ▶ **OK**

When the timer expires, the website is closed. You receive a message.

Clear a timer:

- ▶ In the message, tap **Settings** ... The **Digital wellbeing & parental controls** app is opened ▶ Next to the website, tap  ▶  **Delete** ▶ **OK**



Website timers are reset at 0.00.

Setting sleep time mode

When sleep time mode is enabled, your smartphone can be muted and/or the screen changed to the grey scale display at a defined time.

- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ **Sleep time mode**

The welcome screen with information about sleep time mode is displayed.

Select how sleep time mode is to be enabled:

- ▶ Use the switch to enable **Do Not Disturb** ... The current settings for the “Do not disturb” function are enabled at the sleep time (→ p. 41)
- ▶ Use the switch to enable **Grayscale** ... The screen is changed to the grey scale display at the set sleep time
- ▶ Tap **Next** and **Set sleep time mode**:
 - ▶ Set the start and end times, and the weekdays.

Choose from the following options:

Based on your schedule

- ▶ Sleep time mode is activated at the set sleep time.

When charging at sleep time

- ▶ Set the time period by entering **After** and **Before** ... Sleep time mode is enabled as soon as the smartphone is charged during this time



Off

- ▶ Sleep time mode is disabled.
- ▶ Click **Done**.

Set Concentration mode

Concentration mode enables you to set the time periods during which you do not want to be disturbed by certain apps and want to concentration on other things.

When Concentration mode is enabled, you can not use the selected apps and receive no notifications from them.

- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ **Concentration mode** ▶
Select the apps you wish to pause

Immediately enable/disable Concentration mode:

- ▶ Tap **Turn on now/Turn off now**



Use timer to enable/disable Concentration mode automatically:

- ▶ **Set a schedule** ▶ Select the start and end times, and weekdays ▶ **Set**

Delete schedule:

- ▶ 

Permit/prevent authorisations from apps

- ▶  ▶  Settings ▶ Digital wellbeing & parental controls ▶ Manage notifications ...
A list of apps is displayed

Prevent all notifications for an app: ▶ Disable the switch next to the app

Detailed setting of app notifications: ▶ Tap the app

More information on authorisations: → p. 28

Setting Heads Up

With the Heads Up function, you receive notifications to concentrate on your surroundings when you are walking along looking at your smartphone.

- ▶  ▶  Settings ▶ Digital wellbeing & parental controls ▶ Heads Up

You also have the option of selecting whether to use GPS:

- ▶ Tap **Location (optional)** ▶ Select location permission ▶ **Next** ▶ Enable the “**Caution**” function



“Do not disturb”

The “Do not disturb” function mutes your smartphone; it does not ring or vibrate. It prevents for example the phone ringing at night and during meetings, and all interruptions apart from a wake-up call.


Enable/disable “Do not disturb”

- ▶ From the Status bar, swipe down ... The quick settings are displayed



Switch on:

- ▶ Tap  **Do Not Disturb** ... “Do not disturb” is enabled with the current rules set; the icon turns coloured;  is displayed in the Status bar


Switch off:

- ▶ Tap  ... All signals are enabled again and the icon turns grey



or

- ▶  ▶  Settings ▶ Digital wellbeing & parental controls ▶ **Do Not Disturb** ▶ Enable/disable the slider

Define rules for “Do not disturb”

▶ Touch and hold the  icon ... The setting screen for **Do Not Disturb** is opened

or

▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ **Do Not Disturb** ... The setting screen for **Do Not Disturb** is opened

People

You can set which people are permitted to contact you even when “Do not disturb” is enabled.

Conversations

Set which conversations are permitted to interrupt you.

▶ **Conversations** ▶ Select permitted conversations (**All conversations**, **Priority conversations**, **None**).

Calls

Set which contacts are permitted to interrupt you with calls.

▶ **Calls** ▶ Select permitted calls (**Starred contacts**, **Contacts**, **Anyone**, **None**)


So as not to miss important calls, you can permit repeated calls within 15 minutes.

▶ Use the switch to enable **Calls** ▶ **Allow repeat callers**

When you have selected **Starred contacts**, you can edit the list of these contacts. Starred contacts are the favourites in your contact list.

▶ **Tap Calls** ▶ **Starred contacts** ... A list of your contacts with Favourite status is opened

Remove a marking:

▶ **Tap Contact** ▶ Tap  ... The contact is removed from the list

Adding starred contacts:

▶ **Tap Add Starred contacts** ▶ Select contact

Messages

Set which contacts are permitted to interrupt you with messages.

▶ **Messages** ▶ Select permitted messages (**Starred contacts**, **Contacts**, **Anyone**, **None**)

Apps

Set which apps are permitted to interrupt you with notifications.

Digital wellbeing

▶ **Tap Digital wellbeing** ▶ Use the displayed sliders to set which events to permit

Adding apps

▶ **Tap Add apps** ▶ Select an app from the list ▶ Use the displayed sliders to set which events to permit.



Alarm & other interruptions

Set whether you are allowed to be interrupted by alarms, media sounds, touch sounds, reminders or calendar appointments.

- ▶ Tap the **respective option** ▶ Use the displayed sliders to set which events to permit.

Schedules

Specify how long the “Do not disturb” function is to remain active. Two schedules (Sleeping and Event) are already set by default.

- ▶ Tap  after **Sleeping** or **Event** ▶ The currently stored setting is displayed.
- ▶ Tap  **Edit** ▶ Adapt the name of the schedule ▶ **OK**
- ▶ Tap **Days** ▶ Select the required weekdays for the schedule ▶ **Done**
- ▶ Tap **Start time** ▶ Select the required start time for the schedule ▶ **Confirm**
- ▶ Tap **End time** ▶ Select the required end time for the schedule ▶ **Confirm**
- ▶ Use the slider to enable or disable the “**Alarm can override end time**” option.
- ▶ Tap “**Do Not Disturb**” **behaviour** ▶ Select the required settings for **Do Not Disturb** ▶ **Confirm**

Enabling a schedule

- ▶ Tap on the **required schedule**.

Add a new schedule:

- ▶ Tap **Add more**.

Duration for Quick Settings

Specify the duration of the **Do not disturb settings**.

- ▶ Tap **Duration for Quick Settings**
- ▶ Select one of the 3 options (**Until you turn off, X hour, Ask every time**)
- ▶ **OK**

Display options for hidden notifications

Specify whether you want to receive visual or audible alerts for hidden notifications.



- ▶ Tap **Display options for hidden notifications**
- ▶ Select one of the 4 options (**Until you turn off, No sound from notifications, No visuals or sound from notifications, Custom**)

If you select **Custom**:

- ▶ Enable or disable the options offered.

Parental controls

With parental controls, you can define rules for when your children use your smartphone. For this, the **Family Link** app must be installed on your smartphone as well as that of the child. With **Family Link**, you can set up rules that ensure exposure to digital media is age-appropriate, such as

- Keeping an eye on a child's activities
 - Managing a child's apps
 - Approving downloads and purchases, and hiding age-inappropriate content in the Google Play Store
 - Installing apps recommended by teachers
 - Setting time limits and blocking the child's device from your smartphone
 - Ascertaining the location of your child
- ▶  ▶  **Settings** ▶ **Digital wellbeing & parental controls** ▶ **Set up parental controls** ▶ **Start now**
- ▶ Select whether the device is being used by "A child or teenager" or "A parent".
 - ▶ Parent: Download and install the **Family Link** app
 - ▶ Child or teenager: Create a Google account for the child and connect it to the child's device ▶ Start the **Family Link** app on your smartphone ▶ Connect the two devices, following the step-by-step instructions on the app

Then you can define rules for usage of the child's smartphone, query the location of the child and view usage protocols and notifications from the app.

More detailed information about Google **Family Link** → [Google Help](#)



If you do not have a smartphone yourself, you can also configure the settings for protection of minors from a browser on a PC.

Additional functions

The following sections include information about creating and managing multiple users, connecting the device to a PC and printing documents via your smartphone.

Setting up multiple users



You can enable your smartphone for more guests/users. All users receive a separate area they can set up themselves, such as own start screen, apps, accounts and contacts. Different user icon colours denote different users.

The guest area can be restarted every time there is a guest change. All settings are reset to the defaults. The guest area cannot be provided with a display lock.



It is only possible to set up new guests/users from the Settings menu of the main user.
The updating of apps is possible and applicable for all users.

Setting up a guest

- ▶  ▶  **Settings** ▶ **System** ▶ **Multiple users** ▶ **Use multiple users** ... All available users are displayed ▶ **Add guest** ▶ **Switch to guest** ... Your smartphone switches to the guest area.



There is also an option to define whether the guest is to be permitted to use your smartphone for calls:

- ▶ Enable/disable **Allow calls** with the switch ▶ **OK**

Removing a guest

- ▶  ▶  **Settings** ▶ **System** ▶ **Multiple users** ▶ **Guest** ▶ **Remove guest** ▶ **Reset**


Setting up a new user

- ▶  ▶  **Settings** ▶ **System** ▶ **Multiple users** ▶ **Use multiple users** ... All available users are displayed ▶ **Add user** ▶ **OK** ▶ Enter the name for the new user ▶ **OK** ▶ **Switch to user name** ▶ **Set up now** ... Your smartphone switches to the new user area.


The Setup Wizard is opened.


- ▶ Configure user-specific settings with the Wizard. When you close the Wizard, the user is displayed under quick settings.

Changing user name

- ▶ Swipe the toolbar down ▶ Tap  ▶ **User settings** ▶ Select the user ▶ Enter the name ▶ **OK**


Switching user

- ▶ Swipe the toolbar down ▶ Tap  ... All available users are displayed ▶ Tap the required user ... The settings for the selected user are loaded



 The user icons are different colours.

Deleting a user

The main user can delete all user entries apart from his/her own:

- ▶ Swipe the toolbar down ▶ Tap  ▶ **User settings** ▶ Select the user ▶ **Delete user** ▶ **Delete**

All other users can only delete their own entry:

- ▶ Swipe the toolbar down ▶ Tap  ▶ **User settings** ▶ Select the user ▶ Tap  ▶ **Delete** <user name> **from the device** ▶ **Delete**

Creating screenshots

Take a screenshot of your smartphone as an image, and edit, share and send it.

Taking a screenshot

- ▶ Open the screen for which you want to create a screenshot.
 - ▶ Press and hold the **on/off button** ▶ **Screenshot**
- or
- ▶ Press the **volume -** and **on/off buttons** simultaneously

The screen content is kept in the **Photos** app. The screenshot you took will be displayed for approx. 5 seconds on the bottom left of the display.

Viewing a screenshot

If more than one app is available for editing images, such as **Photos** and **Files**:

- ▶ Select the desired app




Screenshots can be edited with app resources.

For more detailed information on the app **Photos** → [Google Help](#)

Sending files between a computer and the smartphone

Use a USB cable to send photos, music, ringtones and other files between a computer and your smartphone.


 A warning icon consisting of a triangle with a checkmark inside.

A computer detects your smartphone connected via USB. It is linked in as a drive.

Connecting the USB cable

- ▶ Use the USB cable provided to connect the smartphone to a computer.

Your smartphone is normally connected for charging. If you want to use the USB port for data exchange, you must enable this function.

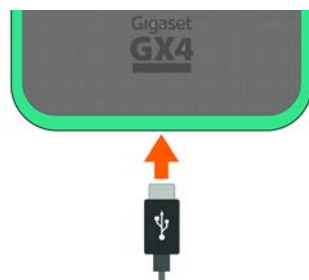

Transferring files



For data interchange with a computer with macOS:
Android File Transfer is installed and started on the computer.

▶ Swipe the Notifications bar down ▶ Tap the USB notification ▶ Select **File Transfer**

or

▶ ▶ ▶ **Settings** ▶ **Connected devices** ▶ **USB** ▶ **File Transfer**

Windows: Automatic drive detection is opened on the computer ▶ Open Windows Explorer ▶ Use drag-and-drop to move files as for other external drives

macOS: The **Android File Transfer** window is opened on the computer ▶ Use Drag-and-Drop to move the files

Managing music

Use the Music Manager to upload music from the computer to the Google Play media library.

For information on managing music with Google Play Music → [Google Help](#)

Printing

Your smartphone has an integrated print service. Apps with a print function enable you to print from your smartphone.



A printer is available that is set up and able to receive data over a WLAN connection or mobile network.

▶ ▶ ▶ **Settings** ▶ **More networks and connections** ▶ **Connection settings** ▶ **Printing** ▶ Select a service

Default Print Service: The printers in the network are displayed

Add service: Download other print service from Google Play and install it

The procedure for printing depends on the used app.

▶ Open the menu from icon or ▶ Tap **Printing**

Printing the screen content: ▶ Take a screenshot (→ p. 46) and then print it.



Sending the screen content to another device (streaming)

Sent the image and sound of your smartphone to a TV device.



The TV device is streaming-capable or equipped with a streaming device (such as Chromecast) and is in the same network (via LAN or WLAN). The app for which you want to stream content supports the same Chromecast version.


Starting transmission

- ▶ Start video on your smartphone
- ▶ From the Status bar, swipe down using two fingers ... The quick settings are opened
- ▶ Tap  **Screen Cast** ... A search is performed for streaming devices in range ▶ In the list, tap the streaming device to which the screen is to be sent ... The transmission is started. The  icon is displayed in the Notifications bar.





If necessary, you must make the streaming icon available in the quick settings (→ p. 25).

Stopping transmission

- ▶ Tap  ... The transfer is ended

Permitting, enabling and disabling streaming devices

- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **Connection settings** ▶ **Cast** ... A search is performed for streaming devices within range ▶ Select device ... It is entered in the list

Remove device from list: ▶ Select device ▶  ▶ **Forget**

For more information on Chromecast → [Google Help](#)

Communication

This section contains information and making calls and contacts.



The menus, functions and displays described here may differ in appearance and function as the result of automatic updates for your smartphone or individual apps.

Please note that the following sections will not describe every detail of every setting.

Making calls

The following section contains information about making calls and corresponding functions during a call.

To make calls, use the **Phone** app. It is in the Favourites bar on the start screen by default (→ p. 22).

Calling numbers

▶ **Phone** ...

Enter the number

▶ Tap ... The dialpad is shown ▶ Type in the phone number ▶ Tap



Whilst a number is being entered, contacts with a potential matching phone number are displayed. If there are no matching entries, you can add the entered number to the contact list.

Using a phone number from a contact

▶ Tap **Contacts** ... The contact list opens ▶ Select an entry ... All phone numbers stored for the contact are shown ▶ Tap the required phone number

Contacts → p. 54

Using a phone number of a favourite contact

▶ Tap ... The Favourites list opens ▶ Tap the required contact ... The main phone number of the contact is selected

Adding contacts to Favourites → p. 57

Using a phone number from the call log

▶ Tap ... The call log opens ▶ Tap the required phone number

Call list → p. 53

Ending a call

▶ Tap



Calls can also be initiated from some other apps or widgets, such as from the **Contacts** app.

Incoming calls

With an incoming call, the phone number of the caller is displayed, if available. Information on the contact or the Caller ID is also displayed.


Accepting a call

- Display lock enabled: ▶ Touch the white circle and swipe up
- No display lock: ▶ Tap **Answer**

Rejecting a call

- Display lock enabled: ▶ Touch the white circle and swipe down
- No display lock: ▶ Tap **Decline**

Rejecting a call and sending an SMS to the caller

- ▶ Tap the message icon  ▶ Select a predefined quick response or write your own message ... The caller will receive a message with the selected text

Changing predefined messages → p. 51



If your mobile network operator has set up a mailbox for you, callers whose calls have been rejected by you can leave a message.

If you accept a call whilst talking to somebody else, the current call is put on hold.

Options during a call

Showing the dialpad during a call

- ▶ Tap 

Switching between headset, speaker and connected Bluetooth headset

- ▶ Tap 





Muting and switching back on the microphone

- ▶ Tap  / 

Interrupting and continuing a call


- ▶ Tap 

Consultation, call swapping

- ▶ Tap  ▶ Use  to enter the number for a second person or use  to select from contacts ▶ Tap  ... The call is initiated The first call is put on hold.


The call on hold is displayed with the phone number as a **On hold** at the top of the screen.


Switching between calls (call swapping):


- ▶ Tap  ... The call on hold becomes the active call

Merging two calls into a conference call


One call active, one call on hold.

- ▶ Tap  ... The calls are merged

Ending a conference call: ▶ Tap  ... The phone numbers of the participants are displayed

- ▶ Tap  next to a phone number ... The connection to this participant is ended

or

- ▶ Tap  next to a phone number ... The calls are separated again, the connections remain active

Call settings

Display of caller name in the call log and contact list of the Phone app

- ▶  Phone ▶ Tap  ▶ Settings ▶ Display options ...

Specify how calls are sorted:

- ▶ Select **Sort by** ▶ **First name** or **Last name**

Specify how the names of contacts are displayed:

- ▶ Select **Name format** ▶ **First name first** or **Last name first**



Setting tones and vibration

- ▶  Phone ▶ Tap  ▶ Settings ▶ Sounds and vibration ...

Changing the ringtone: ▶ **Phone ringtone** ▶ Select the ringtone ▶ **OK**

Vibrate for incoming calls: ▶ Enable the **Vibrate for calls** option




Tones when tapping the dialpad: ▶ Enable the **Keypad tones** option

-  Other settings for sounds via the app  **Settings** → p. 64

Editing quick SMS responses



If you do not want to accept a call, you can send a predefined SMS instead (→ p. 50).

Editing automatically sent SMS text:

- ▶  Phone ▶ Tap  ▶ Settings ▶ Quick responses ... Four predefined messages are listed ▶ Tap a reply ▶  Edit the reply ▶ **OK**

Blocking incoming numbers


Protect yourself against unwanted calls and texts.

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Blocked numbers** ... Blocked incoming numbers are listed

Add a number:



- ▶ **Add number** ▶  Enter the number ▶ **BLOCK**

Enable the number again:

- ▶ Tap  next to the number ▶ **UNBLOCK**

Network-dependent settings

You can, depending on your mobile network operator, use additional network services such as a mailbox, Call divert and Call waiting. You can set up, and enable and disable as required, these services from the Settings menu in the Phone app.

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Calling accounts** ▶ Tap the SIM card of the operator whose network services you want to edit

Using accessibility features



You can use certain accessibility features to make it easier to use your smartphone.

In TTY mode (Telephone Typewriter), those with speech and hearing impediments can communicate by entering text on a smartphone.



Your smartphone is connected to a special teletypewriter or other TTY service via USB.

Enabling TTY mode:

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Accessibility** ▶ **TTY mode** ▶ Select the mode required

TTY (full mode) See the call as text and hear it as audio.



TTY HCO Hear what the other person is saying, reply by entering text

TTY VCO See as text what the other person is saying, reply by speaking

If you use hearing aids, you can enable hearing aid compatibility:

- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Accessibility** ▶ Enable the **Hearing aids** switch



If you want to reduce background noise during calls, you can enable noise reduction:




- ▶  **Phone** ▶ Tap  ▶ **Settings** ▶ **Accessibility** ▶ Enable the **Noise reduction** switch



Call list

The call log shows all outgoing, accepted and missed calls.

Showing the call log

▶  **Phone** ▶ Tap  ... The calls are listed with phone number, place and date. Arrow icons show the types of calls:

-  Missed call
-  Accepted call
-  Outgoing call

 Tap  to see a detailed list of missed calls.

Show all missed, accepted and outgoing calls for this phone number with more information

▶ Tap Call ▶  access history

Contacting the caller

▶  **Phone** ▶ Tap  ...

Calling: ▶ Tap  next to the entry

Sending an SMS: ▶ Tap the call ▶  **Send message** ▶ Enter a message ▶ Tap 

Adding a phone number to the contacts

▶  **Phone** ▶ Tap  ▶ Tap the call ▶  **Add contact**

Deleting calls from the call log

▶  **Phone** ▶ Tap  ...



Deleting a call: ▶ Touch and hold the call ▶ **Delete**

Deleting all entries:

▶ Tap  ▶ **Call History** ▶ Tap  ▶ **Clear call history** ▶ Confirm with OK

Contacts

The following sections contain information about using, creating and managing contacts.


You can use the  **Contacts** app to enter and organise all information on your contacts, such as different number, address, mail address and much more. Other apps, such as the  **Phone** app, access the information and make it available where it is needed.



Contacts can be stored at different places: locally on your smartphone, on the SIM card or in a Google account.

Using contacts

Viewing contacts

- ▶  **Contacts** ... Favourites are displayed first. Then all contacts are displayed in alphabetical order

Specify how the contacts are sorted:

- ▶ Tap  ▶ **Settings** ▶ Select **Sort by** ▶ **First name** or **Last name**


Specify how the names of contacts are displayed:

- ▶ Tap  ▶ **Settings** ▶ Select **Name format** ▶ **First name first** or **Last name first**


Adjusting the view

All contacts from all locations are displayed by default. You can limit what is shown, for example by hiding certain locations or labels (groups).

Only display certain contacts:


- ▶ Tap  ▶ **Customize view** ▶ **Customize** ... All sources for contacts are displayed.
- ▶ Mark the required contacts ▶ **Save** ... Only the selected contacts are displayed







Display contacts from a certain location:

- ▶ Tap  ▶ Select the corresponding location (default account)

Using a contact for communication

Calling a contact, sending an email or SMS to a contact.

- ▶  **Contacts** ▶ Scroll through the list and select the required contact ▶ Select an action

- Calling: ▶ Tap the number or  ... The call is initiated
- Sending an SMS: ▶ Tap  ... Enter the text message ▶ Tap 
- Start a video call: ▶ Tap  ... The **Duo** app is opened for the video call
- Sending an email: ▶ Tap the mail address or  ▶ Write the email ▶ Tap 


There can be more buttons - this depends on the information stored for a contact.

Grouping contacts


Merge contacts into groups under a common label. You can, for example, send a group message or a group email to the members of a label. Different labels are predefined, such as Family and Friends.

▶  **Contacts** ▶ Tap  ... Existing labels are listed



Creating a new label

▶ **Create label** ▶  Enter the label name ▶ **OK** ▶ **Add contact** ▶ Select a contact ... The label is created with this contact


Adding contacts to a label


▶  **Contacts** ▶ Tap  ▶ Select label

Add a new contact:


▶ Tap  ▶  Enter the contact data ▶ **Save**

Add a contact from a contact list:

▶ Tap  ... All contacts belonging to the account are listed ▶ Select contact

 A contact can belong to more than one group.


Removing contact from label

▶ Tap the label ▶ Touch and hold the contact ▶ Tap  ▶ **Remove from label**

Deleting a label




▶  **Contacts** ▶ Tap  ▶ Select a label ▶ Tap  ▶ **Delete label**

Adding contacts





 If you have set up a Google account, you can also set up and manage your contacts from your computer. The contacts are automatically synchronised with your smartphone.

To do this, log into the web browser of your computer with your Google account on the following website: <https://contacts.google.com>

Creating a contact

▶  **Contacts** ▶ Tap  ▶  Enter name, phone number and other details for the contact ▶ **Save**

or




▶  **Phone** ▶  **Contacts** ▶ Scroll to the start of the list ▶ Tap  **Create new contact** ▶ Select the location (default account) ▶  Enter name, phone number and other details for the contact ▶ **Save**

Correcting and managing contacts

Contacts can be corrected and managed. This includes options such as merging and correcting duplicate contacts or restoring, exporting and importing contacts.

Correcting and merging

Duplicate contacts can be detected automatically and corrected.




- ▶  **Contacts** ▶  **Correcting and managing** ▶  Merge and correct ... Duplicates are displayed ▶ Tap Merge ▶ Duplicates are automatically merged into one contact.

Restoring contacts



A backup created with a smartphone with a higher Android version cannot be restored on a smartphone with a lower Android version.




Your smartphone creates backups of your contacts automatically from your Google account. Deleted contacts can be restored from a backup.

- ▶  **Contacts** ▶  **Correcting and managing** ▶  Restore contacts ▶ Select backup ▶ Redo




Exporting and importing contacts

Contacts can be imported from and exported to any location. For example, you can import contacts saved on your SIM card to your Google account or store the Google account contacts as vCards in the internal memory of your smartphone.




Exporting contacts in a file

- ▶  **Contacts** ▶  **Correcting and managing** ▶  Export as file ▶ Enter name for VCF file ▶ Save

Importing contacts from SIM




- ▶  **Contacts** ▶  **Correcting and managing** ▶  Import from SIM ▶ Select required contacts ▶ Import

Importing contacts from a file

- ▶  **Contacts** ▶  **Correcting and managing** ▶  Import from file ▶ Select location (default account) ▶ Select source for import (VCF file)

Display deleted contacts (Recycle Bin)

Deleted contacts can be displayed in the Recycle Bin.

- ▶  **Contacts** ▶  **Correcting and managing** ▶  Recycle Bin







Contacts that have been in the Recycle Bin for more than 30 days will be deleted automatically.

Settings


You can define the individual synchronisation settings for the contacts saved in your Google account.

- ▶  **Contacts** ▶  **Correcting and managing** ▶  Settings

Editing contact details

- ▶  **Contacts** ▶ Select the contact to edit ▶ Tap 
 - ▶ Tap the field you wish to edit ▶  Change the contents ▶ **Save**
- or
- ▶ Scroll down ▶ Tap **More fields** ▶  Fill in the required fields ▶ **Save**

Adding contacts to Favourites


Add people you contact frequently to your Favourites. Favourites are shown in the  **Phone** app in a separate list (→ p. 49). You can also use the rules of the “Do not disturb” function (→ p. 41).

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ... The contact is displayed in the Favourites list in the  **Phone** app


Creating a special ringtone for a contact

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Choose ringtone** ▶ Select a ringtone ▶ **OK**

Diverting calls from a contact to the mailbox

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Route to voicemail**

Deleting contacts

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Delete** ▶ **OK**

Deleting more than one contact at the same time:

- ▶ Touch and hold a contact ▶ Select more contacts by tapping briefly ▶ Tap  ▶ **Delete**



Adding contacts to start screen for direct dial

You can add contact widgets to the start screen for direct dial.

- ▶  **Contacts** ▶ Select a contact ▶ Tap  ▶ **Add to Home screen** ▶ **Add to Home screen**


Resetting changes to the contact list

You can reset the contact list to how it was earlier.

- ▶  **Contacts** ▶ Tap  ▶ **Settings** ▶ **Undo changes** ▶ Select the time period ▶ **Confirm**

Messages (SMS/MMS)

The following sections contain information about sending, receiving and managing messages (SMS/MMS).

To send and receive messages (SMS/MMS), use the  **Messages** app. It is in the Favourites bar on the start screen by default (⇒ p. 22).



Helpful information about the **Messages** app:

- ▶  **Messages** ▶ Tap  ▶ **Help & feedback**

Information on the app settings is also here.


Sending and replying to messages




Sometimes apps send text messages using billable premium services. Android detects every attempt by an app to send an SMS in your name. A warning is displayed when there is a suspicion that an SMS entails additional charges. Text messages can be discarded, or sent anyway, in these cases.


Writing an SMS

A text message (SMS) can comprise a maximum of 160 characters. If you enter more characters, the message is sent in several sub-messages (if this function is supported by your mobile network operator).

- ▶  **Messages** ... The list of conversations is displayed


Message in existing conversation: ▶ Tap on the conversation

Create a new conversation: ▶ Tap  **Start chat**

- ▶  Enter the phone number, name or email address ... Whilst you are doing so, matching contacts from the contact list are suggested ▶ Tap a suggestion or continue with your entry

or

- ▶ Select one or more contacts to whom to send the message


Enter a message: ▶  Enter text

Inserting a smiley (emoticon)

- ▶ When writing a message, tap  ▶ Select the desired symbol

Back to the keypad: ▶ Tap 


Saving a message as a draft

- ▶ Whilst entering a text message,  tap ... The message is stored in the list of conversations as a draft


Continue with entry: ▶ Tap this conversation.

Writing an MMS

Multimedia messages (MMS) can contain text, images, voice messages, camera pictures or videos, preconfigured stickers (animated symbols) and information about a location.

- ▶ When writing a message, tap  to the left of the text field ▶ Select the required attachment(s) ...


GIF videos (giphies)

- ▶ Tap  ... Different categories are displayed (for example, happy, sad, yes, no, ...) ▶ Select a category ▶ Select a GIF video


Stickers

- ▶ Tap  ... Stickers (movable symbols) are displayed ▶ Select a sticker



Map with location

- ▶ Tap  ... A map in which your current location is entered is displayed ▶ Send location or: ▶ Move location, select another position


Contacts

- ▶ Tap  ... The contact list opens ▶ Select a contact

File


- ▶ Tap  ... Files in the internal memory of your smartphone are displayed ▶ If necessary, use  to select another source ▶ Select a file

Schedule send

- ▶ Tap  ... Select a time to send the MMS

The MMS will be sent automatically to the recipient at the selected time.

Pictures and videos

- ▶ When writing a message, tap  to the left of the text field ▶ Take a photo or select the required image from the gallery or screenshots. Multiple selections are possible ...

The files appended are displayed in the message.

Show preview: ▶ Tap on attachment

Delete attachment: ▶ Tap on  on the top right

Sending a message

- ▶ Write a text or multimedia message ▶ Tap  ... The message is sent

Back to the list of conversations: ▶ Tap 

The message is the start of a conversation. It is stored in the message list under the name or phone number of the recipient. Responses from the message recipient are displayed in the same conversation.

Sending speech-to-text messages


- ▶ When writing a message, tap and hold  next to the text field ▶ Record the voice message ▶ Release the symbol.

The spoken text will be converted into text via speech recognition and can be sent as a message.






Voice messages are not stored on your smartphone.

Responding to received messages

When a new message arrives, the messages LED flashes, you receive a notification and the  icon is shown in the Notifications bar.


- ▶ Tap the notification ... The message opens

or

- ▶  **Messages** ... The list of conversations is displayed ▶ Tap the conversation with the new message
- ▶  Enter the reply ▶ Tap 

Reading and managing messages


Reading messages

- ▶  **Messages** ... The list of conversations is displayed ▶ Tap a conversation ... All messages in this conversation are displayed in chronological order



Managing messages

- ▶ Touch and hold the message ... An options bar is shown at the top ▶ Select an option ...


Sharing a message:

- ▶ Tap  ▶ **Share** ... Apps with which you can edit and forward the message are shown, such as other Messengers, email and Google Drive.

Forwarding a message to a contact or another recipient:

- ▶ Tap  ▶ **Forward** ▶ Select recipient ... The text starts a new conversation ▶ Add text if necessary and send with 


Copying message text:

- ▶ Tap  ... The text is copied to cache. You can use it for any text entry.
Pasting copied text: ▶ Touch and hold the place in the entry field ▶ **Paste**


Displaying more information on the message and sender:

- ▶ Tap  ▶ **View details** ... Detailed information depending on the message is displayed




Saving MMS pictures and videos on your smartphone:

- ▶ Tap  ... The picture is saved in the internal memory on your smartphone under **Pictures/ Messages**


Deleting a message from a conversation:

- ▶ Tap  ▶ Confirm with **Delete**

Searching in messages

- ▶  **Messages** ▶ Tap  ▶  Enter the search term ... Messages in which text matching the search term occurs are displayed

Managing conversation




- ▶  **Messages** ... The list of conversations is displayed ▶ Touch and hold one (or more) conversation(s) ... All selected conversations are marked with ✓. An options bar is shown at the top ▶ Select the required option ...

Deleting conversions

- ▶ Tap  ▶ Confirm with **Delete**

Archiving conversations

Archived conversations are no longer shown on the start screen of the app, but you can still read them.

- ▶ Tap  ... The conversations selected are archived
Open archive: ▶ Tap  ▶ **Archived** ... The conversations selected are displayed
Retrieve conversations from the archive: ▶ Touch and hold the conversations ▶ Tap  ...
The conversations are displayed again on the start screen

Blocking conversations

If you do not want to receive any more calls or messages from certain contacts, you can block them.

- ▶ Touch and hold the conversation ▶ Tap  ▶ **BLOCK** ... Calls and messages from the selected contacts will no longer be signalled

Unblock contact: ▶ Tap  ▶ **Blocked contacts** ▶ Tap  next to the number ▶ **UNBLOCK**

Settings

The following section contains information about the different device settings, such as display, sounds, energy options, security, mobile signal and network.



The menus, functions and displays described here may differ in appearance and function as the result of automatic updates for the device or individual apps.

Please note that the following section will not describe every detail of every setting.

Device

The following sections contain information about the most important settings for the various areas of the device, such as display, sounds and energy management.

Language

Change the language for the displays.

- ▶ ▶ **Settings** ▶ **System** ▶ **Languages & input** ▶ **Languages** ... All available languages are displayed in a list. The language being used at the moment is at the very top.

Make available other languages:

- ▶ **Add a language** ▶ Scroll through the list and select the language ▶ Select the country ... The language is included in the list.

Select language:

- ▶ Touch and hold the entry ▶ Drag up and release.

Delete language from list:

- ▶ Tap ▶ **Remove** ▶ Select the languages to delete ▶ Tap ▶ **OK**

Display

You can find detailed display settings that have a direct impact on the device display in the **Display** menu.

You can also configure start screen settings here (→ p. 19).

Brightness

Change the screen brightness or adapt it the surroundings.

- ▶ From the Status bar, swipe down . . . The quick settings are opened.


or

- ▶  ▶  **Settings** ▶ **Display** ▶ **Brightness level**



- ▶ Set the brightness level with the slider:



Automatically adapting the brightness level depending on the ambient light available

- ▶ Next to the slider, tap 

or

- ▶  ▶  **Settings** ▶ **Display** ▶ **Automatic brightness** ▶ Enable/disable the function with the switch.



Even if the brightness is set to automatically adapt, you can adjust the brightness level with the slider.

Night light

You can schedule a reduction in the display illumination to protect your eyes against bright light.

- ▶  ▶  **Settings** ▶ **Display** ▶ **Night Light**

Enable:

- ▶ Activate the **On** switch.
- ▶ Use the **Color Temperature** slider to set the light intensity required.

Enable with time control:

- ▶ Activate the **Schedule** switch.
- ▶ **Schedule** ▶ Select the required setting ▶ Set the start and end times as required ▶ Enable the function . . . The night light is enabled as per your settings.


Dark design

When the function is enabled, the background colour of the system and of the apps provided changes to black.

- ▶  ▶  Settings ▶ Display ▶ Theme mode ▶ Select dark design



or

- ▶ From the Status bar, swipe down ... The quick settings are opened ▶ **Dark theme** Enable and disable using the  button





The setting only takes effect for apps supporting dark design.

The **Dark theme** function must be available in the quick settings → p. 21).

Font size

Change the display size of text.

- ▶  ▶  Settings ▶ Display ▶ Font size ▶ You can use the slider to select font size in four steps



Display orientation

Set what the screen content does when you rotate the device.

- ▶  ▶  Settings ▶ Display ▶ Enable/disable **Auto-rotate screen**



This option can also be enabled/disabled in the accessibility features and quick settings.

Tones and volume

Configure more audio settings for your smartphone from the **Sound** menu.


For special quiet settings, you can use the "Do not disturb" function (→ p. 41).




Configure audio settings using the volume button: → p. 26



Adjusting the volume

You can adjust the volume for ringtone, notifications, music and other media and alarms independently.

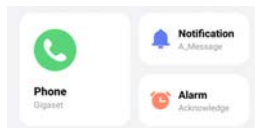- ▶  ▶  Settings ▶ Sound ▶ Setting ringtone, media, call and alarm volume with slider





Enable vibration


- ▶  ▶  **Settings** ▶ **Sound** ▶ Tap the **Vibrate for calls** option and choose from three setting options.

Ringtones




Changing the default ringtone

- ▶  ▶  **Settings** ▶ **Sound** ▶ Select the category (phone, notification, alarms) ▶ Select ringtone ▶ **OK**

Adding new ringtones



Ringtone apps: ▶ Download and install ringtone apps from the Google Play Store 

Transferring a music file (MP3) from a computer:

- ▶ Use the USB cable provided to connect your smartphone to a computer → p. 46
- ▶ Transferring a music file (MP3) in the File Manager to folder **Ringtones** or the memory card
- ▶  ▶  **Settings** ▶ **Sound** ▶ Select the category (phone, notifications, alarms) ▶ Scroll all the way down ▶ **Add ringtone** ▶ Select a different file or the memory card from the  menu as required
 - ▶ Select the ringtone file
 or
 - ▶ Tap **Sound Recorder** ▶ Record the ringtone with the sound recorder

Enabling/disabling other tones

Set whether tones are sounded or the device vibrates when the dialpad is used - for every touch when the display lock is enabled.



- ▶  ▶  **Settings** ▶ **Sound** ▶ **More** ▶ Enable/disable the required option with the switch.

Power management


To prolong the life of your smartphone, there are various ways to make best possible use of the battery capacity.

Set the battery charge limit



You can prolong the life of your battery by not fully charging it. The best maximum charge level is 80 to 90%.

- ▶  ▶  **Settings** ▶ **Battery** ▶ Enable the **Set the battery charge limit** option with the switch ▶ Tap **Charging limit value** ▶ Select the limit



Displaying the charge level as a percentage

The  icon in the Status bar shows the charge level.

Showing the charge level in the battery icon (as %):

- ▶  ▶  **Settings** ▶ **Battery** ▶ Enable/disable the **Battery percentage** function with the switch

Display battery use

- ▶  ▶  **Settings** ▶ **Battery** ... The current charge level is displayed

Show more information:

- ▶ **Battery usage** ... This shows more information about the charge level and usage by the various apps.




The battery use information is estimated and may vary depending on the usage of your smartphone.

Using Power Save mode

Save power until your smartphone can be charged again.

In Power Save mode, some functions of your smartphone are restricted, such as background activities, optical effects and other power-intensive functions.

Enabling/disabling Power Save mode:

- ▶ From the Status bar, swipe down ▶ Tap the Power Save icon  ... Power Save mode is enabled or disabled.





When Power Save mode is enabled, the **Dark theme** function is enabled and a small flame  is shown next to the battery icon.

Power Save mode ends automatically when your smartphone is being charged.





The **Battery Saver** function must be available in the quick settings → p. 21).

or

- ▶  ▶  **Settings** ▶ **Battery** ▶ **Battery Saver** ▶ Use the switch to enable the **Turn on Battery Saver** function

Enable/disable Power save mode according to charge level

- ▶  ▶  **Settings** ▶ **Battery** ▶ **Battery Saver** ▶ **Set a schedule** ▶ Select **Based on percentage** ▶ Use the slider to set the charge level at which Power Save mode is enabled automatically


Automatically disable Power Save mode when charge level is adequate

When the function is enabled, Power Save mode is disabled automatically when the battery is 90% full.

- ▶  ▶  **Settings** ▶ **Battery** ▶ **Battery Saver** ▶ Enable/disable the **Turn off when fully charged** option with the switch



Storage

Your smartphone differentiates between permanent device storage (which can be extended with a memory card) and main memory. The permanent storage area on your smartphone is used for data such as music and photos. The main memory is temporary storage used by your smartphone to run apps and the overall system.

-  Your smartphone detects memory cards with a storage capacity of 1 TB.



Displaying the memory allocation

Checking the available storage capacity and memory usage of apps.

- ▶  ▶  **Settings** ▶ **Phone info** ▶ **Storage capacity** ... The total available and currently used storage capacities are displayed, as well as a list of how the storage capacity is being used, broken down into categories


Show more information: ▶ Tap an entry

Device storage management with memory card


- ▶  ▶  **Settings** ▶ **Phone info** ▶ **Storage capacity** ▶ Tap **THIS DEVICE** at the top and select the memory card ... The total available and currently used storage capacities of the memory card are displayed, as well as a list of the components using the storage capacity

Show more information: ▶ Tap an entry

Ejecting memory card:

- ▶  ▶ **Eject** ... The memory card is disabled. It can no longer be used as storage and the information on it is no longer available.

Using the memory card again:

- ▶ Tap **THIS DEVICE** at the top and select the memory card ▶  ▶ **Mount**

Freeing up device memory



- ▶ Uninstall apps which are not used (→ p. 32)
- ▶ Delete saved photos and videos and/or save them in the Cloud (e.g. using Google Photos)
- ▶ Remove downloaded music, films and other media
- ▶ Empty/clear the cache or data for individual apps (→ p. 77)

Security

The following sections contain information about the main security settings for your smartphone, such as data protection, device and SIM card locks and app permissions.

Data protection

The **Privacy** menu contains different settings with which you can protect your privacy.

- ▶  ▶  Settings ▶ Privacy ...
- ▶ **Privacy Dashboard** An overview of the apps that have recently used permissions.
- ▶ **Permission manager** Set the authorisations for apps according to authorisation types (→ p. 72).
- ▶ **Camera access** Enable/disable camera access by apps with the switch.
- ▶ **Microphone access** Enable/disable microphone access by apps with the switch.
- ▶ **Show passwords** Use the switch to enable/disable displaying of characters whilst passwords are entered.
- ▶ **Android System Intelligence** Machine learning on your smartphone. Display, add and delete suggestions for keypad entries. Delete learned data from your smartphone.
- ▶ **App contents** Enable/disable the sending of app contents to the Android system with the switch.
- ▶ **Show access to clipboard** Enable/disable notification of app access to the clipboard with the switch.
- ▶ **Google Autofill service** Have forms completed automatically using information stored in your Google account, such as addresses and passwords.
- ▶ **Google Location History** Configure settings for storing location information in the Google account (→ p. 76).
- ▶ **Activity settings** Define which information about your online activities in the Google account is saved.
- ▶ **Display** Configure settings for the Google advert activities.
- ▶ **Usage & Diagnostics** Enable/disable Google from using diagnostic, device and app usage data from your smartphone.

Display lock

The display lock protects your smartphone from unauthorised use. When you switch your smartphone on or enable the display, you are prompted to unlock your smartphone .

The display lock becomes active after a defined time after your smartphone has switched to idle mode.

A pattern, PIN or password is used as the display lock.




It is also possible to use a fingerprint or facial recognition as a display lock (→ p. 37). In this case, the display lock set up serves as the alternative method.

Setting up the display lock

- ▶ ▶ **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ Password is.. ▶ Select method ...

- None** No security
- Swipe** The display can be unlocked by swiping over the screen
- Pattern** The display can be unlocked via a pattern drawn on the screen
- PIN** The display can be unlocked by entering a PIN.
- Password** The display can be unlocked by entering a password.

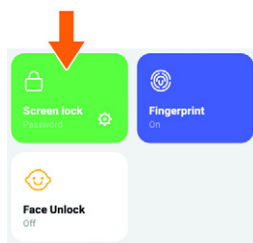

For **Pattern**:

- ▶ Draw the pattern - join together at least four dots ▶ **Continue** ▶ Repeat **Pattern** ▶ **Confirm**

For **PIN**:

- ▶ Enter at least four digits ▶ **Continue** ▶ Repeat **PIN** ▶ **Confirm**

For **Password**:

- ▶ Enter at least four letters or digits ▶ **Continue** ▶ Repeat **Password** ▶ **Confirm**

Automatically unlocking the smartphone with Smart Lock

Smart Lock enables your smartphone to be unlocked automatically under certain circumstances, such as when you have it on you or are at home.



A display lock is set up.

Smart Lock must be enabled as a trust agent:

- ▶ ▶ **Settings** ▶ **Security** ▶ **Trust agents**

Configuring Smart Lock:

- ▶ ▶ **Settings** ▶ **Security** ▶ **Smart Lock**

More information on Smart Lock → [Google Help](#)



Unlocking display lock with facial recognition

Your smartphone will unlock when it detects a trusted face. Scan your face. Your smartphone will carry out facial recognition when you switch it on and unlock if it recognises the face.





Facial recognition is not as secure as a PIN, pattern or password. Someone who looks like you could unlock your smartphone.

Setting up facial recognition



- ▶  ▶  **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ **face** ▶ Use current method for screen locking (**Pattern, PIN, Password**) . . . The wizard for setting up face unlocking is opened ▶ Follow the on-screen instructions.

Then use the switches to set whether your smartphone will unlock with facial recognition and whether the lock screen should be skipped.

Enabling/disabling facial recognition

- ▶  ▶  **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ **face** ▶ Use current method for screen locking (**Pattern, PIN, Password**) ▶ Enable/disable **Face Unlock** with the switch.

Deleting face details

- ▶  ▶  **Settings** ▶ **Security** ▶ **Biometrics & password** ▶ **face** ▶ **Delete face model** ▶ **Delete**



The data used for facial recognition is only stored on your smartphone. The data is not accessible to apps and is not stored on Google servers.

Add emergency information to the lock screen

Add to the lock screen a link to personal emergency information (such as your blood group, details of any allergies you have or medication you need, or people to be contacted in an emergency).

Enter medical information:

- ▶  ▶  **Settings** ▶ **Safety & emergency** ▶ **OPEN EMERGENCY INFORMATION** ▶ Enter the information you want to display

Specify emergency contacts:

- ▶ **Add contact** ▶ Select a contact

Delete the emergency information:

- ▶  ▶ **Clear all**

Display the emergency information

- ▶ When the screen is locked, swipe upwards ▶ Tap **EMERGENCY DIALER** ▶ Tap **EMERGENCY INFORMATION** twice





Emergency information can be seen by all those picking up your smartphone. Your smartphone need not be unlocked.



Screen pinning

When you pass on your smartphone to someone else, you can restrict its usage to a single app. For this, you pin a certain view of this app.


Enabling/disabling screen pinning

- ▶  ▶  **Settings** ▶ **Security** ▶ **screen pinning** ▶ Enable/disable the **Use app pinning**-function with the switch
- ▶ Use the switch to specify whether the PIN, pattern or password needs to be entered to unpin the screen.

Pinning the screen

- ▶ Open the screen to be pinned ▶  From the Navigation bar, slowly drag from the bottom upwards ... The app overview is displayed ▶ Touch and hold the app icon at the top in the app display ▶ Tap  **Pin** ... Only this app can now be used.

Unpinning the screen

- ▶  From the Navigation bar, slowly drag from the bottom upwards and hold ...
 - Cancel frozen screen without lock: The frozen screen is cancelled immediately.
 - Cancel frozen screen with lock: The idle screen is shown. If you want to continue using the phone, unlock the display again.


SIM card lock

The SIM card lock prevents unauthorised use of your smartphone. For every locked SIM card, the PIN must be entered when the device is started.

The PIN lock is enabled when the device is purchased. The PIN is available from your mobile network operator.

- ▶  ▶  **Settings** ▶ **Security** ▶ **SIM card lock** ▶ When there are two SIM cards, select the provider of the SIM card from the header

Enabling/disabling the SIM card lock:

- ▶ Enable/disable the switch next to **Lock SIM card** ▶  Enter the valid PIN ▶ **OK**

Changing the PIN:

- ▶ **Change SIM PIN** ▶  Enter the valid PIN ▶ **OK** ▶  Enter the new 4-digit PIN ▶ **OK**

App permissions

When downloading an app from Google Play, specify the functions and data to which this app has access, e.g. to contacts or your location.

You can check and change permissions for apps on your smartphone. With App permissions management, you have quick access to all permissions granted to apps on your smartphone.

Permissions when installing apps

Many apps downloaded from Play Store request access to particular information before installation. For apps developed for Android 6.0 and higher, you can grant or deny permissions on initial use.

Enabling/disabling permissions for apps on the smartphone

▶  ▶  **Settings** ▶ **Apps** ▶ View all apps


Setting the permissions for an app:


- ▶ Select the app for which you want to change the permissions ▶ **Permissions** ...
- All meaningful permissions for the app are displayed ▶ Select the required permissions ▶ Select **Allow/Don't allow**

For some functions, you can also restrict permission just to the time you use the app:

- ▶ Tap the permission **Location** ▶ **While using the app**.

Displaying all permissions in detail:

- ▶ Tap  ▶ **All permissions**
- ▶ Tapping on the individual permissions displays information about the permission

 If you revoke or do not grant permissions for an app, it might not work properly.

Authorisation manager

You can use the Authorisation manager to check which apps have the same authorisations. For example, you can check which apps are allowed to access your calendar or contacts, and set authorisations for apps depending on authorisation types.

▶  ▶  **Settings** ▶ **Privacy** ▶ **Permission manager**

A list of authorisation types is displayed, such as call list, calendar, contacts and physical activity ...

Check which apps have which authorisations:

- ▶ Tap an authorisation type ... The apps permitted for this authorisation type are listed; shown underneath are the apps rejected for access

Change authorisations:

- ▶ Tap an app ▶ Select **Allow/Deny**

Android Device Manager



If you have lost your smartphone, you can use the Android Device Manager to locate it, ring it, lock it and delete data on it.





Your smartphone is registered with a Google account (→ p. 73)

Location detection is enabled (→ p. 75).

Enabling/disabling monitoring by the Android Device Manager:

▶  ▶  **Settings** ▶ **Google** ▶ **Find my device** ▶ Enable/disable the function with the switch

or

▶  ▶  **Settings** ▶ **Security** ▶ **Find my device** ▶ Enable/disable the function with the switch

Find your smartphone:

- ▶ Select the service you want to use for device location, install the app if necessary and log in with your Google account
- ▶ Log in to the selected service with your Google account and check if your smartphone is displayed.



You can also install the Android Device Manager on mobile devices, such as another smartphone or a tablet (download from Google Play).

Accounts and location detection

This section includes information about creating, managing and synchronising user accounts.

Accounts

Use one or more accounts to use personal information such as contacts, pictures and mailbox on multiple devices. An account enables synchronisation of the information and makes it available to all registered devices.

Account types

Google account

You need a Google account for Google services such as Gmail, Google+ or YouTube™ and for downloading apps from Google Play. When you log in with a Google account, emails, contacts, appointments and other information assigned to this account are automatically synchronised with your smartphone. You can set up a new account on your smartphone or log in your smartphone to an existing account.

Email account (IMAP or POP3)

If you do not use the Google account for your email, you need to register your smartphone with your mail server. POP3 and IMAP mail servers are supported.

You can still use the **Gmail** app to receive and send emails.



You require information on the service the account uses, such as server address, user name and password. Your smartphone must be able to establish an Internet connection over WLAN.

Exchange account

You set up an Exchange account to synchronise contacts, calendar, tasks and emails with Microsoft Outlook™.

Adding an account

- ▶ ▶ **Settings** ▶ **Passwords & accounts** ▶ **Add account** ▶ Tap the type of account you want to add ▶ Enter the account details. Follow the instructions on the screen

Removing an account



When an account is removed from your smartphone, all associated content is also removed, such as emails, contacts and settings.

- ▶ ▶ **Settings** ▶ **Passwords & accounts** ▶ Tap the account to be deleted ▶ **Remove account**

Synchronising

You can specify how apps synchronise messages, emails and other current data in your Google account.

Google apps are automatically synchronised with the Google account as standard. You can enable and disable automatic synchronisation for individual Google apps.



Apps which are not from Google cannot be synchronised using a Google account. Look in the respective settings menu for these apps for a synchronisation option.

Enabling/disabling automatic synchronisation



Setting synchronisation for a Google account:

- ▶  ▶  **Settings** ▶ **Passwords & accounts** ▶ Enable/disable the **Auto-sync data** option



Disabling automatic synchronisation prolongs the battery life. Enable automatic synchronisation again if you want to continue after charging the battery.

Setting synchronisation for individual apps:

- ▶  ▶  **Settings** ▶ **Passwords & accounts** ▶ Select an account ▶ **Account sync** . . . A list of Google apps with the time of the most recent synchronisation is displayed ▶ Enable/disable synchronisation of an app with the relevant switch



Synchronisation for individual apps can only be set if automatic synchronisation is enabled.

Manually synchronising an account


In manual synchronisation, the data of all Google apps is updated if automatic synchronisation is not enabled. If automatic synchronisation is enabled, only the apps whose automatic synchronisation is not disabled will be synchronised.

- ▶  ▶  **Settings** ▶ **Passwords & accounts** ▶ Select account ▶ **Account sync** ▶ Tap **⋮** ▶ **Sync now**



Location detection

Apps with **Location detection** permission can use the device's location information to offer location-specific services, such as check-in options, traffic information and nearby restaurants.

Enabling/disabling location detection

- ▶ From the Status bar, swipe down using two fingers . . . The quick settings are displayed ▶ Tap the  icon



or

- ▶  ▶  **Settings** ▶ **Location** ▶ Enable/disable the function with the switch

On this screen, you can configure detailed settings for access by Google and certain apps to your location.

Checking location detection by apps

Check which apps are currently accessing your location, or have recently accessed your location.

- ▶  ▶  **Settings** ▶ **Location** . . . Under **Recent access** is a list of apps which have recently accessed the location of the device.

Limit the usage time of location access by apps → p. 72

Managing location history

When Location history is enabled, Google can also determine the location of your smartphone when no Google app is active. Location history information is stored in your Google account for all devices assigned to the account.

▶  ▶  Settings ▶ Location ▶ Location services ▶ Google Location History


or

▶  ▶  Settings ▶ Privacy ▶ Google Location History


The screen is the starting point for all activities pertaining to the location history. You can for example switch off the location history for individual or all devices, view locations visited over a certain period, show information on locations visited or delete all your location history information.



For information on location history → [Google Help](#)

Enable location service for emergencies

 The emergency location service must be permitted in your country and be supported by your mobile provider.

When the emergency location service (ELS) is enabled, your smartphone automatically sends your location to the emergency services in an emergency. Sending of the location is triggered when you call an emergency number or send an SMS to an emergency number (e.g. 112).

 If the emergency location service is disabled, your mobile provider might still send the location of your smartphone when an emergency call is made or SMS sent. Please clarify this with your provider.

▶  ▶  Settings ▶ Location ▶ Location services ▶ Use the switch to enable/disable the **Emergency location service** ▶ function

Display on the lock screen the emergency information for first aiders → p. 70

Apps

This section includes information about managing apps.

Detailed information on working with apps → p. 31

Default app

If you have several apps with identical functions, you can select which app is used as standard for an action. For example, if you have downloaded from Google Play a different calendar or another app for making calls, you can make these the default apps.

Selecting a default app for an action


If multiple apps are available for an action and a default app is not defined, you are prompted to select an app.

- ▶ Tap the app you want to use.
- ▶ Select whether this app is used **Just once** or **Always** for the action.

If you select **Always**, the app is set as the default app for all actions of this type.



Resetting the default app

- ▶  ▶  **Settings** ▶ **Apps** ▶ Show all apps ▶ Select an app for which an action was previously **Always** selected ▶ **Open by default** ▶ **Clear defaults**

 If you then restart the action, you are prompted again as to which app to use.

Specifying the default app for a frequently used function

For some functions, you can select a default app at any time without performing a corresponding action.

- ▶  ▶  **Settings** ▶ **Apps** ▶ **Default apps** . . . Various functions are displayed ▶ Select function . . . If there are several apps for this function, they are displayed ▶ Select app
-

Changing app settings

Check the current app settings and change them as required.

- ▶  ▶  **Settings** ▶ **Apps** ▶ Show all apps ▶ Select an app

Which settings are available depends on the respective app.

Open

Open the app.

Uninstall / Disable

Uninstall app from your smartphone / disable app → p. 32

Force stop

Stops the app including all background processes. This is a sensible action when an app no longer responds for example, or is running in the background and is using too many system resources (such as memory). The app can easily be started again from the App menu.

Notifications

Specify the procedure for app notifications (→ p. 29)

Permissions

Apps or system resources the app is permitted to access (→ p. 72)

Storage & cache

Internal storage used by the app.

Freeing up storage: ► **Clear storage**

Freeing up temporary app memory: ► **Clear cache**

Mobile data & Wi-Fi

Data volume downloaded or uploaded by the app over the mobile data network or WLAN (→ p. 83).

Screen time

Time the app was used in a certain time period.

Battery

Battery usage since the last full charge (→ p. 65).

Open by default

Specify how the app is to proceed with links.

Modify system settings

Specify whether the app may change system settings.

Display over other apps

Specify whether the app may be shown over the app you are currently using when a corresponding event occurs (such as an incoming call).

Modify system settings

Specify whether the app may change system settings.

App details

Shows information on the app from Google Play.

General app settings

Checking and changing the permissions and default values for apps.

►  ►  ► **Settings** ► **Apps**

Default apps

If several apps with identical functions are available, select which one is used by default (→ p. 76).

Screen time

Shows the total time your smartphone has been in use, and the usage durations of individual apps. Alternatively, you can display how many notifications have arrived or how often your smartphone has been unlocked.

You can set up timers for the daily use of individual apps. When a timer expired, the app in question is blocked for the rest of the day.

Unused apps




Shows apps not being used.

Special app access

Contains detailed information on the access capabilities of apps to data and system resources.

Resetting app settings

Reset all the changes made to app settings.

▶  ▶  Settings ▶ Apps ▶ Show all apps ▶ Tap  ▶ Reset app preferences

Network connections

This section includes information about mobile networks, WLAN, data usage, Bluetooth, NFC, VPN and tethering.

Your smartphone can establish connections to mobile networks, WLAN and other devices via Bluetooth and NFC.


Mobile networks

To make and receive calls with your smartphone over a mobile network, you require a SIM card from the relevant mobile network operator. Refer to your mobile contract for which services are available, and which terms and conditions apply.

You can insert two SIM cards into your smartphone, i.e. you can use two mobile networks at the same time.

Enabling/disabling mobile data


Specify whether data can also be transmitted via mobile data connection if no WLAN is available.

▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the  icon

or

▶  ▶  Settings ▶ Mobile network ▶ Mobile data Enable/disable with the switch

Editing settings

▶  ▶  Settings ▶ Mobile network



If two SIM cards are inserted into your smartphone, the screen contains a tab for each SIM card ▶ Select the appropriate tab as required.

Roaming

Permit the sending of data by your smartphone over mobile networks of other operators whilst you are in a region where the network of your operator is not available.



Additional charges can be incurred by data roaming (depending on your mobile contract).

App data usage

Shows data usage and how this breaks down by individual app.

Data warning & limit

Specify the data usage limit at which a warning is to be displayed (→ p. 84).

4G Calling

Improve speech quality and other communication.

Preferred network type

Select the preferred mobile standard, such as 2G, 3G, 4G, 5G. The smartphone uses the network with the best availability as standard.

WLAN calls (depending on mobile network operator)

Make calls via WLAN.

Automatically select network

The mobile network is selected automatically by default.

Select network yourself: ▶ Disable the function ▶ Select the operator from the available mobile networks.

Select network

Select the mobile network manually.

Access point names

Your mobile network operator can use these settings to determine the correct IP address for your smartphone, and so establish a secure connection for your smartphone.

Using two SIM cards

▶  ▶  Settings ▶ SIM cards ... Detected SIM cards in slots 1 and 2 are displayed

Enabling and disabling a SIM card: ▶ Enable/disable the switch

Showing information:

▶ Tap an entry ... The name of the SIM card, the colour used for the card, the mobile network operator and the phone number are displayed. You can change the name and display colour.

Specify the preferred SIM card for the following functions:

- **Mobile data**
Only one SIM card can be used for mobile data transmission.
- **Allow calls**
You can specify one SIM card for all outgoing calls, or be prompted for which SIM card to use before every call.
- **SMS messages**
One SIM card can be defined for sending SMS messages.




You might need to perform the assignment anew when you insert a new SIM card or swap out an existing one.

WLAN



Use your smartphone to establish a connection to a WLAN, and use the connection to send data and to surf the Internet.


A connection is established automatically if your smartphone is within range of a registered WLAN and the WLAN function is enabled.


Enabling/disabling the WLAN function

▶ From the Status bar, swipe down using two fingers ... The quick settings are displayed ▶ Tap the  WLAN icon



or


▶  ▶  **Settings** ▶ **Wi-Fi** ▶ Use the switch to enable/disable **Use WLAN**


If WLAN is enabled, the icon  and the name of the connected WLAN are displayed in the Status bar. The icon shows the signal strength on four levels.

 To prolong the battery life, disable the WLAN function when you are not using it. WLAN is disabled in Flight mode.

Establishing a connection to a WLAN

▶  ▶  **Settings** ▶ **Wi-Fi** ... All WLAN within range are displayed.

Networks protected by a password have a lock next to the  icon. Networks without a lock icon are public hot spots.




▶ Tap the required WLAN ▶  Enter the network password ▶ **Connect** ... If the connection is successful, **Connected** is displayed under the network name

WLANs registered for your smartphone are shown at the end of the list under **Saved networks**, even if they are currently out of range and no connection is established.

Showing saved WLANs: ▶ **Saved networks**



Adding more WLANs

WLANs which do not send their name (the SSID) or are not within range are not displayed in the WLAN list. They can still be saved with name and password. The connection is established if the WLAN is within range.

▶  ▶  **Settings** ▶ **Wi-Fi** ▶ Scroll down if required ▶ **Add network** ▶  Enter the network name (SSID) and security details ▶ **Save** ... The network is added to the **Saved networks** list



Removing a WLAN

If the requirement is for your smartphone to not connect automatically to a saved WLAN, the WLAN can be removed from the list of saved networks.

▶  ▶  **Settings** ▶ **Wi-Fi** ▶ **Saved networks** ▶ Tap on the saved network to be removed ▶ **Forget**



Sharing WLAN access

Sharing your WLAN access with friends is quick.

- ▶  ▶  **Settings** ▶ **Wi-Fi** ▶ Tap the WLAN you want to share ▶ **Share** ▶ Confirm your identity with a fingerprint or use the current method for screen unlocking ... The password is shown as text and a QR code

You can provide friends with this code so they can take a photo of it or scan it to connect to your WLAN.




Viewing WLAN details

- ▶  ▶  **Settings** ▶ **Wi-Fi** ▶ Tap the network name of a connected WLAN ... Information on the connection is displayed, such as signal strength, connection status and transmission rate

Changing the network settings: ▶ Tap 

Connection configuration

Align the network settings to the requirements of the WLAN to be used to establish a connection.

- ▶  ▶  **Settings** ▶ **Wi-Fi** ▶ Tap the network name ▶ Tap  ▶ Next to **Advanced options** tap the down arrow ...

Handling billable networks


If your network has a data limit, you can define the WLAN as metered. You then have better control over data usage by downloads and other apps.

- ▶ Tap **Network usage** ▶ Select the option **Treat as "metered"**.


Proxy

If a connection to a WLAN is established over a proxy:

Manually entering the proxy details:

- ▶ Under **Proxy** select the **Manual** option ▶  Enter data ▶ **Save**

Automatic proxy configuration:

- ▶ Under **Proxy** select the **Autom. proxy configuration** option ▶  Enter the URL of a PAC file ▶ **Save**



A Proxy Auto Config (PAC) file enables a web browser to automatically find the right proxy server for a required URL.

DHCP

When there is no active DHCP server in the WLAN:

- ▶ Under **IP settings** Select the **Static** option ▶  Enter network configuration data ▶ **Save**

Additional WLAN settings

- ▶  ▶  **Settings** ▶ **Wi-Fi** ▶ **Wi-Fi settings** ▶ Select option . . .

Enable WLAN automatically when in range of stored networks. Location detection must be enabled.

- ▶ Enable/disable **Turn on Wi-Fi automatically** with the switch

Show powerful public network.

- ▶ Enable/disable **Notify for public networks** with the switch

Digital certificates are used to identify your smartphone for WLAN access. You can install additional certificates if not all those required are available.

- ▶ **Install certificates** ▶ Select the source for the certificate

Establish a connection between your smartphone and other Wi-Fi Direct-enabled devices.

- ▶ **Wi-Fi Direct** . . . WiFi Direct-enabled devices or groups within range are displayed ▶ Select the required device or group

Data usage

The data usage is the amount of data uploaded or downloaded by your smartphone over a certain period of time over the mobile data connection or WLAN. Most tariffs include a restriction of data volume. So as not to incur any additional costs, you can check the data usage of your smartphone and limit it as required.

Checking data usage

You can check the data usage of the mobile network and WLAN separately.

Mobile network



Data usage in the mobile network is displayed in a bar - for a certain time period and in relation to the warning limit for mobile data usage.

- ▶  ▶  **Settings** ▶ **Mobile network** ▶ **App data usage** . . . More information is shown, such as which apps were involved in data usage.

Display another time period:

- ▶ Tap the arrow next to the time period displayed ▶ Select time period

WLAN

- ▶  ▶  **Settings** ▶ **Wi-Fi** ▶ **Wi-Fi data usage** ... This shows the data volume sent over WLAN within the time period set. Underneath is a list of apps that sent data over WLAN, including the data volume sent.

Display another time period:

- ▶ Tap the arrow next to the time period displayed ▶ Select time period

Setting a limit and warning for mobile data usage




Setting a data usage cycle

Data usage is recorded in a monthly cycle, starting on the first day of the month by default. If the billing cycle of your mobile network operator differs from this, you can select a different start date.

- ▶  ▶  **Settings** ▶ **Mobile network** ▶ **Data warning & limit** ▶ **App data usage cycle** ▶ Select a day with the digit wheel ▶ **Set**

Enter a data warning

Enter the maximum data volume made available by your provider as a data limit. Once the limit set for data usage is reached, mobile data usage is disabled automatically. You receive a notification.

- ▶  ▶  **Settings** ▶ **Mobile network** ▶ **Data warning & limit** ▶ Enable the **Set data warning** function with the switch ▶ **OK**
- ▶ Tap **Data limit** ▶ Switch between MB and GB if required ▶  **Change value** ▶ **Set** ... The limit is entered in the **App data usage** graphic.

Re-enabling data usage:




- ▶ Enable the **Set data limit** function with the switch ▶ **OK**



Data transmission can now incur costs.


Setting a warning for data usage

Set a value for data volume usage at which you want to receive a warning.

- ▶  ▶  **Settings** ▶ **Mobile network** ▶ **Data warning & limit** ▶ Enable the **Set data warning** function with the switch
- ▶ Tap **Data warning** ▶  **Change value** ▶ Switch between MB and GB if required ▶ **Set** ... You receive a notification when the data volume value is reached.

Enabling/disabling Data save mode

Mobile data usage is reduced when Data save mode is enabled. Most apps and services can only retrieve background data over WLAN.

- ▶ From the Status bar, use two fingers to swipe down ... The quick settings are displayed ▶ Tap  = enabled



Restricting background data can impact the performance of the app. For example, you receive no more notifications until the app is opened the next time.

Other ways to reduce data usage



Disabling automatic synchronisation

When automatic synchronisation is enabled, the data of apps is updated automatically, such as contacts or appointments.

Disabling automatic synchronisation: → p. 75

Disable roaming

If the network of your mobile network operator is not available, data roaming enables your smartphone to use the networks of other operators.

- ▶  ▶  **Settings** ▶ **Mobile network** ▶ Enable/disable the option with the switch next to **Roaming**




Roaming can entail additional costs, but is in some places the only way to establish an Internet connection.

Bluetooth



Use your smartphone to establish a connection to a Bluetooth device.

If you are using a Bluetooth device for the first time, it must first be coupled with your smartphone by the Pairing process to enable a secure connection between the two devices. Then the connection is established automatically.

Enabling/disabling Bluetooth

- ▶ From the Status bar, swipe down ... The quick settings are displayed ▶ Tap the  Bluetooth icon

or

- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ Enable/disable **Use Bluetooth** with the switch

When Bluetooth is enabled, the  icon is displayed in the Status bar.





Your smartphone can be seen by all nearby devices with Bluetooth function.

To prolong the battery life, disable the Bluetooth function when you are not using it. Bluetooth is disabled in Flight mode.

Pairing

Before you can connect your smartphone to a Bluetooth device, you must perform a pairing between these devices. After a pairing is performed, the devices keep this status until the pairing is ended.



- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ **Pair new device** ... The Bluetooth devices available in the vicinity are displayed ▶ Tap the name of the required Bluetooth device ▶ Follow the subsequent instructions on the screen to complete the pairing ... If performed successfully, the device is included in the **Previously connected** list



If you are prompted to do so, enter the ID displayed. If no ID is displayed, try popular IDs such as 0000 and 1234, or read the documentation for the Bluetooth device.

Changing the names of connected Bluetooth devices or ending pairing

- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ Next to the connected device, tap 

Change name: ▶  ▶  Enter the name of the device ▶ **Rename**

Ending a pairing: ▶ **Forget**

Enable functions for connected devices

Permit Bluetooth-enabled devices to access your contacts or access the Internet via your smartphone.

- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ Tap  next to the connected device ▶ Enable/disable **Internet access** / **Contact sharing** / **SIM Access** with the switch

Changing the Bluetooth name of your smartphone

Your smartphone can be seen by other Bluetooth devices under the name Gigaset GX4. You can change the name.


- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ **Device name** ▶  Enter a new name for your smartphone ▶ **Rename**

Displaying data transmission information



- ▶  ▶  **Settings** ▶ **Bluetooth** ▶ **Received files** ... The data received via Bluetooth is displayed

Flight mode

WLAN, mobile networks and Bluetooth are disabled in Flight mode.

- ▶ From the Status bar, swipe down ... The quick settings are displayed ▶ Tap the  Flight mode icon

or

- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **Airplane mode** ▶ Enable/disable Flight mode with the switch

When Flight mode is enabled, the  icon is displayed in the Status bar.

Virtual Private Networks (VPN)

A Virtual Private Network (VPN) enables you to connect your smartphone to your private or company network. When you are out and about and have access to a WLAN, use the VPN connection to surf free of eavesdroppers, to make free calls over your landline number, and to access your mailbox or data in the company network.







A VPN server is set up in the private or company network.

A VPN client is preinstalled on your smartphone. You need the configuration details of the VPN to set up a VPN connection.






You might require another VPN client for the VPN with which you want to connect the smartphone. Various VPN apps are available from the Google Play Store. Once you have installed a VPN app, configuration is done via the app.

Adding a VPN




- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ▶ Tap  ▶  Enter configuration data ▶ **Save**

Establishing a connection to a VPN




- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ... The VPNs set up are listed ▶ Select VPN ▶  Enter **Username** and **Password** ▶ **Connect**

Once your smartphone is connected to a VPN, the  icon is shown in the Status bar.





Ending a VPN connection


- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ▶ Next to the VPN to be ended, tap  ▶ Disable the VPN with the switch

Deleting a VPN

- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ... The VPNs set up are listed ▶ Next to the VPN to be deleted, tap  ▶ **Forget**




Editing VPN settings

- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ▶ Next to the VPN to be changed, tap  ▶  **Edit the VPN settings** ▶ **Save**


 If you are using a VPN app, it is opened and you can make the required changes.

Enabling/disabling “always-on” VPN

With some VPNs, your smartphone remains always connected when the VPN connection is not active. This is a sensible option when moving between insecure public WLANs.

- ▶  ▶  **Settings** ▶ **More networks and connections** ▶ **VPN** ▶ Next to the VPN to be changed, tap  ▶ **Enable/disable Always-on VPN** with the switch ▶ **Save**

You receive a notification that “always-on” VPN is enabled, and when the connection to an “always-on” VPN is down.

 Once you have set up a VPN from an app, the option **Always-on VPN** is not displayed.

Tethering with WLAN hotspot, Bluetooth, USB or Ethernet

With mobile WLAN hotspots, Bluetooth tethering or USB tethering, you can enable the data connection of the smartphone to other devices. For example, use your smartphone connection to surf the Internet with your notebook.




Using hotspot or tethering connections might entail additional charges. Contact your mobile operator as required.

Hotspots and tethering require high levels of battery power.

- ▶ Connect your smartphone to a power source when using hotspot and tethering.
- ▶ Disable hotspot and tethering when you do not need them.

Enabling and disabling WLAN hotspot

Set up your smartphone as a WLAN hotspot.

- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ **Enable/disable the Use WLAN hotspot** function with the switch

When the hotspot is enabled, the  icon is displayed in the Status bar.

Changing WLAN hotspot settings

Change the network name, security, password and frequency band for access points.

- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ Select the required option and change it as required

Connecting a device to the WLAN hotspot

To connect, you need the hotspot name and password. The name is displayed under **Hotspot name**. Show password:


- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ **Wi-Fi hotspot** ▶ Tap **Hotspot password** ...
The password is displayed

Connecting to the hotspot on the other device:

- ▶ Open the list of WLANs within range ▶ Select network with the network name of the hotspot ▶ Enter the password for the hotspot ▶ Connect.



Setting up and using Bluetooth tethering

Share the Internet connection with other devices via Bluetooth.

 The mobile data connection is active → p. 79

- ▶ Carry out pairing between your smartphone and the device with which you want to share the Internet connection (→ p. 86)
- ▶ Set up the other device so that it establishes a network connection over Bluetooth. Read the instructions for the corresponding device.

Enabling and disabling the Internet connection of the phone via Bluetooth tethering:

- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ Enable/disable the **Bluetooth tethering** function with the switch ... You can now establish an Internet connection with the other device

Setting up and using USB tethering



Share the Internet connection with another device over a USB cable.



The mobile data connection is active → p. 79

- ▶ Use a USB cable to connect a smartphone to another device ▶ Open the notification over the USB connection ▶ Select **USB tethering**

Enabling/disabling USB tethering:

- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ Enable/disable the **USB tethering** function with the switch ... You can now establish an Internet connection with the other device



USB tethering is disabled if you unplug the USB cable.

USB tethering is not available on Mac computers.

Setting up and using Ethernet tethering



Share the Internet connection with another device's RJ45 connection cable via a USB Ethernet adapter.



The mobile data connection is active → p. 79

- ▶ Use a USB Ethernet adapter to connect a smartphone to another device ▶ Open the notification about the USB connection ▶ Select **Ethernet tethering**

Enabling/disabling Ethernet tethering:

- ▶  ▶  **Settings** ▶ **Hotspot & tethering** ▶ Enable/disable the **Ethernet tethering** function with the switch ... You can now establish an Internet connection with the other device



Ethernet tethering is disabled if you unplug the USB Ethernet adapter.

Ethernet tethering is not available on Mac computers.

System

The following sections include information about system updates, backing up and restoring the system and resetting your smartphone.

Date and time

- ▶  ▶  Settings ▶ System ▶ Date & time ...

Automatic setting

The date and time are set automatically using a time server:

- ▶ Tap **Set time automatically** ▶ Select the required option (network or GPS)

or: ▶ Disable it and set the date and time manually

Manual setting

- ▶ **Date** ▶ Select a date in the calendar ▶ **Confirm**
- ▶ **Time** ▶ Select the time ▶ **Confirm**

Setting the time zone

The time zone is set automatically by default. Select time zone:

- ▶ Disable the switch next to **Set time zone automatically** ▶ Tap **Select time zone** ▶ Select the region and time zone from the list

Setting the time zone based on location

The time zone can be set automatically based on your current location:



GPS is enabled → p. 75

- ▶ Enable the switch next to **Use location to set time zone**

Setting the date and time format

Use Date and time format appropriate for the country set (→ p. 62).

- ▶ Enable the switch next to **Use locale default**

or



Displaying the time in 24-hour format (e.g. 18:30) / 12-hour format (6:30 pm):

- ▶ Enable/disable the switch next to **Use 24-hour format**

System update

Your smartphone checks automatically for new system updates (Android versions). You can also trigger this process manually.

Checking the Android version

▶  ▶  **Settings** ▶ **Phone info** ... The current version is displayed under **Android version**

Download system update

You are notified when a new system update is available for your smartphone by default.



The charge level of your smartphone must be at least 20%.



The system update may require high data usage.

Check the charge level of your smartphone before installation (→ p. 65). Connect your smartphone to the power if required and establish a WLAN connection.

Installing a system update after receiving a notification

Display not locked: ▶ From the Notifications bar, swipe down ▶ Tap the notification

Display locked: ▶ Double tap the notification on the lock screen

Start the installation: ▶ Tap **Download**

Installing a system update without receiving a notification

▶  ▶  **Settings** ▶ **System** ▶ **System Update** ▶ **Check for updates** ... The system is checked




If there is a more up-to-date version: ▶ Tap **Download**

You will be notified when the new version has downloaded.

▶ Installing a system update

System update settings

You can configure various settings for system updates:

▶  ▶  **Settings** ▶ **System** ▶ **System Update** ▶ Tap  ▶ **Settings**

You can define the following:

- How often a search is performed automatically for a new version.
- A system update should only be installed when your smartphone has a WLAN connection.
- System updates may be downloaded automatically.

On this screen, you have access to the data protection policy and declaration of agreement.

Backing up and restoring the system

Backing up data and settings

Use the Android Backup Service to backup data linked to one or more Google accounts. If you have to swap your smartphone or delete data, you can restore the data from every Google account backed up beforehand.

The following data is backed up:

- Google calendar settings
- WLAN networks and passwords
- Wallpaper of start screens
- Gmail settings
- Apps installed with Google Play (apps backed up in the Play Store app)
- Screen settings (i.e. brightness and sleep mode)
- Language and input settings
- Date and time
- Settings and data of third party apps (different depending on app)



The Android Backup Service is not used by all apps. Not all data might be backed up or restored for certain apps.

- ▶ ▶ Settings ▶ System ▶ Backup ▶ Enable/disable **Google One-Back-up** function with the switch

Resetting network settings

Reset WLAN, mobile and Bluetooth data.

- ▶ ▶ Settings ▶ System ▶ Reset options ▶ Reset network settings ▶ Reset network settings

Resetting app settings

Reset settings for apps such as disabling, notifications, standard settings. All app data remains unchanged.

- ▶ ▶ Settings ▶ System ▶ Reset options ▶ Reset app preferences ▶ Reset apps

Smart Touch

Smart Touch is a smart assistant that can be used to display functions across all apps. The functions are controlled with the Smart Touch Ball.

Enabling Smart Touch:

- ▶  ▶  **Settings** ▶ **Smart Touch** ▶ Use the switch to enable **Smart Touch**

Configuring Smart Touch:

- ▶  ▶  **Settings** ▶ **Smart Touch** ▶ Select **Gesture mode** or **Menu mode**.

Gesture mode: ▶ Personalised functions are triggered by single-clicking, double-clicking or holding down the Smart Touch Ball.

Menu mode: ▶ Personalised functions are triggered by 5 freely assignable buttons.

Setting with selected option **Gesture mode**:

- ▶ Select the required functions for the actions **Single click**, **Double click** and **Hold**.

Setting with selected option **Menu mode**:

- ▶ The five freely assignable buttons are displayed ▶ Tap the button ▶ Select the required functions from the list.

or

- ▶ Click on **App** ▶ Select the required app from the list.

Setting for visibility of the Smart Touch Ball:

- ▶ Enable/disable the **Auto-hide after three seconds of inactivity** option.

Troubleshooting

Sometimes your smartphone may not function as it should.
The following sections contain troubleshooting information.

Rebooting your smartphone

If apps or other functions are not working properly or the screen of your smartphone is no longer reacting, reboot your smartphone.



- ▶ Hold down the **on/off button** for at least 10 seconds . . . Your smartphone will reboot

Resetting your smart phone to default settings

If you cannot rectify the issue any other way, you can reset your smartphone to the default settings. You will then have to set up your smartphone again from scratch.



When resetting to default settings, the internal storage and all your personal data will be deleted. Downloaded apps, music, photos etc. will be removed and your Google account login will be cancelled.

- ▶  ▶  Settings ▶ System ▶ Reset options ▶ Erase all data (factory reset) ▶ Erase all data

Your smartphone reboots. Now set up your smartphone again (→ p. 12).

Questions and answers (FAQ)

This section contains answers to frequently asked questions about your smartphone and describes how to solve problems.

If none of the answers help you rectify the problem, please contact a Gigaset Service Centre.

Why won't my smartphone switch on?

Your smartphone battery is not inserted. Insert the battery (→ p. 12).

Your smartphone battery is not charged enough or has run out of charge completely. If the battery charge falls below a minimum level, your smartphone switches off automatically. Recharge the battery.

Why does the battery run out so fast or why isn't it charging?

Charge the battery for at least 2 hours. Please note that the battery may only reach its full capacity after multiple charging sessions.

Why doesn't my SIM card fit in the slots?

Your smartphone supports the nano SIM format. If your SIM card is a different format (for example, micro SIM), contact your mobile network operator and swap your SIM card for a nano SIM.

Why does the status bar show little or no mobile signal?

If you're somewhere with poor network coverage, you won't be able to get a good signal. If no mobile signal is found, there may be no network coverage, the SIM card may not be inserted properly or there may be no active mobile network contract. Go somewhere with better network coverage, check that the SIM card in your smartphone is inserted correctly or contact your mobile network operator.

Why isn't the touchscreen reacting anymore when I type?



Your smartphone's operating system might have crashed. Reboot your smartphone (→ p. 95).

Why can I barely hear the person I'm talking to or they're breaking up?

If the person you're talking to is too quiet, increase the volume with the volume + button. If the person you're talking to is hard to understand, it could be down to bad mobile signal at your end or theirs. Check the mobile signal in the status bar and move somewhere with better network coverage if necessary.

Where can I find a certain smartphone setting?

Your smartphone has a helpful search function:

▶  ▶  Settings ▶ Enter the search term at the top in the search bar

How do I adjust the display brightness?

Open quick settings and adjust the brightness.



Alternatively, you can also adjust the brightness via Settings:

▶  ▶  **Settings** ▶ **Display** ▶ **Brightness level**

For more information, see the corresponding section (➔ p. 63).

How do I set the ringtone, notification sounds or vibration?

You can adjust the various sounds of your smartphone via Settings:

▶  ▶  **Settings** ▶ **Sound** ▶ Select the category (phone, notifications, alarms) ▶ Select ringtone ▶ **OK**

For more information, see the corresponding section (➔ p. 64).

Why aren't photos and videos saving?

The device storage on your smartphone might be full. Check the available storage capacity (➔ p. 67) or expand the storage with a memory card (➔ p. 10).

How do I install more apps on my smartphone?

You can install more apps on your smartphone using the **Play Store** app. You need a Google account to use the **Play Store**.

What do I need to think about if I want to sell or dispose of my smartphone?

Personal data such as photos, passwords and photos could be saved on your smartphone. Delete all personal data from your smartphone before passing it on to a third party or disposing of it. Reset your smartphone to default settings to do this (➔ p. 67).

Appendix

Customer service United Kingdom and Ireland

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

United Kingdom

Service Hotline: 020 36953111

(local call cost charge)

Ireland

Service Hotline: 0818 200 033

(6.6561 Ct./Call)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia-----	+61 1300 780 878	Jordan-----	00962 6 5625460/1/2
Austria-----	-0043 1 311 3046	Kuwait-----	+965 -22458737/22458738
Bahrain-----	-31 73 11 173	Lebanon-----	+9611240259/ -----
Belgium-----	-07815 6679	-----	+9611236110
Bosnia Herzegovina-----	033 276 649	Luxembourg-----	(+352) 8002 3811
Brazil		Malaysia-----	+603-8076 9696
Grandes Capitais e Regiões Metropolitanas:		Malta-----	+39 02360 46111 (0,10 €)
-----	-4003 3020	Mexico-----	01800 999 4442738
-----	(Preço de uma ligação local)	-----	(01800 999 GIGASET)
Demais localidades:		Netherlands-----	-0900-3333102
-----	-0800 888 3020	New Zealand-----	-0800 780 878
-----	-----	Norway-----	+47 2231 0845
Bulgaria-----	+359 2 9710666	Oman-----	+968 70928 Ext. 49/21/75
Canada-----	1-866 247-8758	Poland-----	-----801 140 160
China-----	0 21 400 670 6007 (RMB 0.11)	Portugal-----	-----(+351) 308 804 760
Croatia-----	01 / 2456 555	-----	----- (custo de uma chamada local)
Czech Republic-----	233 032 727	Romania-----	+40 021 204 9130
Denmark-----	+45 43682003	Russia-----	8-800 333 4956
Finland-----	+358 (0)9725 19734	Serbia-----	-0800 222 111
France-----	(0)1 57 32 45 22	Singapore-----	-----6735 9100
Germany-----	02871 / 912 912	Slovak Republic-----	-0905 035 305
Greece-----	+30 2111 98 1778	Slovenija-----	+386 (1) 5466 511
Hong Kong-----	-2763 0203	South Africa-----	0800 98 08 42
-----	2389 7285	Spain-----	-----(+34) 910 920 931
Hungary-----	06(1)267-2109	Sweden-----	+46 (0)8502 52347
India-----	Please refer to your	Switzerland-----	-0848 212 000
-----	local warranty card	Taiwan-----	-02 266 24343
Indonesia-----	-(62-21) 5673813	Turkey-----	- Son kullanıcı için +90 212 888 6346
-----	-(62-21) 888856000	-----	- Bayi için +90 212 888 6347
Ireland-----	0818 200 033	Ukraine-----	+380-44-451-71-72
Italy-----	-02.600.630.45	United Arab Emirates-----	+97144458255
(Il numero è di tipo "urbano nazionale" e può essere		-----	+97144458254
chiamato da qualunque operatore di rete fissa o		United Kingdom-----	020 36953111
mobile. Il costo della chiamata è inerente al proprio		USA-----	1-866 247-8758
piano tariffario definito con l'operatore telefonico,		-----	----- tollfree
ad esempio in caso di un contratto con tariffa FLAT,			
non ci sono costi aggiuntivi per la chiamata a			
questo numero, in quanto si tratta di un numero			
urbano nazionale.)			

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Guarantee Certificate - United Kingdom and Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Gigaset Communications.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Gigaset Communications
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom and in the Republic of Ireland the Guarantee is issued by: Gigaset Communications UK Limited, 2 White Friars, Chester, CH1 1NZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk. This number is also to be found in the accompanying user guide.

Exclusion of liability

The display is made up of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Certain content and services which can be accessed using this device are the property of third parties and are protected by copyrights, patents, trademarks and/or other laws for the purpose of safeguarding intellectual property. Such content and services are provided solely for non-commercial, private usage. You may not use content or services which has/have not been authorised by the owner of particular content or a service provider. Without limiting the generality of the foregoing, except as expressly specified by the owner of the content or the service provider, the modification, reproduction, dissemination, uploading, publication, transmission, translation, sale, creation of derived works, distribution of content or services shown on this device are not permitted in any form and on any medium.

Manufacturer's advice

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset GX4 (E940-2797-00) is in compliance with Directive 2014/53/EU and the UK Radio Equipment Regulations 2017.

The full text of the EU and UK declaration of conformity is available at the following internet address:

www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.



The 5150 - 5350 MHz band is restricted to indoor use in the UK and for the following countries..

	AT	BE	BG	CH	CY	CZ	DE	DK	EE	EL	ES	
	FI	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV	MT
	NL	NO	PT	PL	RO	SE	SI	SK	TR	UK/NI		

Waste and environmental protection

Correct disposal of this product

(Directive for electric and electronic equipment (WEEE))

(Applicable in countries with waste separation systems)



EU: This label on the product, accessory or in documentation indicates that the product and its electronic accessories (such as charger, headphones and USB cable) may not be disposed of in household waste.

UK: The Waste Electrical and Electronic Equipment Regulations 2013.

To avert potential environmental harm and health risks from unmanaged waste disposal, recycle responsibly with the aim of encouraging sustainable reuse of raw materials.

Private users should turn to the dealers from where they bought their products, or contact the authorities responsible, who are able to provide information on where parts can be taken for disposal in an environmentally friendly manner.

Commercial users should please contact their suppliers and check the general terms of their purchase agreement.

This product and the electronic accessory parts may not be disposed of with other commercial waste.

This "WEEE" is compatible with the RoHS Directive.

Delete all personal data from your smartphone before disposing of it.

Correct disposal of batteries in this product

(Applicable in countries with waste separation systems)



This label on the battery, in the manual or on the packaging denotes that the batteries in this product may not be disposed of in household waste.

Not disposing of batteries properly means the substances inside pose a health risk and a risk to the environment.

To protect natural resources and encourage environmentally responsible reuse of material resources, please separate batteries from other waste streams and dispose of them at your local, free collection point for used batteries.

About radiation

Information on SAR certification (specific absorption rate)

THIS DEVICE SATISFIES THE INTERNATIONAL DIRECTIVES FOR EXPOSURE BY RADIO WAVES.

Your mobile device has been developed so as not to exceed internationally recommended exposure thresholds for radio waves.

These directives have been specified by an independent scientific organisation (ICNIRP) and include a high margin of safety which should guarantee the safety of all regardless of age and state of health. The directives on exposure to radio waves use a unit called the specific absorption rate (SAR).

The SAR threshold for mobile devices:

SAR on head/body (while on phone)	2.0 W/kg
SAR on limbs (worn on arm for example)	4.0 W/kg

The highest SAR values in the ICNIRP Directives for this device model:

SAR on head (while on phone)	0.625 W/kg (10 g)
SAR on body (worn in trouser pocket for example)	1.465 W/kg (10 g)
SAR on limbs (worn on arm for example)	1.782 W/kg (10 g)

The SAR values for wearing on the body are determined at a distance of 5 mm. To comply with the HF exposure directives for wearing on the body, the device should be positioned at least this distance away from the body.

Technical data

Frequency and bands

Frequency	Bands	maximum power
2G	900 MHz	32.90 dBm
	1800 MHz	30.16 dBm
3G	900 MHz	23.30 dBm
	2100 MHz	23.03 dBm
4G / 4G+	B1/B3/B7/B8/B20/B28/B38/B40	23.43 dBm
WLAN 2.4 GHz	2.4 GHz	12.45 dBm
WLAN 5.1-5.7 GHz	5.1 - 5.7 GHz	11.63 dBm
WLAN 5.8 GHz	5.8 GHz	11.35 dBm
BT	2.4 GHz	7.4 dBm
NFC	13.56 MHz	-19.766 dBuA/m
WPT	110 KHz - 205 KHz	-7.665 dBuA/m
FM	87.5 MHz - 108 MHz	-
GNSS	1559 MHz - 1610 MHz	-

Accessories

Only use Gigaset approved chargers, batteries and cables. Unapproved accessories can damage the device.

Battery

Technology:	Li-Polymer
Capacity:	5000 mAh
Part number:	V30145-K1310-X480

Open source software

General

Included on your Gigaset device is Open source software which is subjected to various licence conditions. With regard to Open source software, the granting of usage rights extending beyond operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software.

You can find more details under:

▶  ▶  **Settings** ▶ **About emulated device** ▶ **Legal information**

In relation to the respective licensors of open source software, the wordings of the respective licences regularly contain liability disclaimers. The disclaimer for GPL version 2 for example is:

"This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details."

and for LGPL version 2.1:

"This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details."

Liability on the part of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset device includes Open Source software that is subject to the GNU General Public License (GPL) or the GNU Library / Lesser General Public License (LGPL). The source code can be downloaded from the Internet at

www.gigaset.com/opensource

The appropriate source code can also be requested from Gigaset Communications GmbH at cost price within three years of purchasing the product. Please use the contact details provided at

www.gigaset.com/service

Your Gigaset device includes Open Source software that is subject to the Common Public License. The corresponding source code can be downloaded from the Internet at

www.gigaset.com/opensource

The appropriate source code can also be requested from Gigaset Communications GmbH. Please use the contact details provided at

www.gigaset.com/service

Index

-
- Numerics**
 4G calls 80
-
- A**
 Account 73
 Add 74
 Remove 74
 Synchronise 74
 Account types 74
 Activating Google Assistant 17
 Air pressure sensor 3
 Android Device Manager 73
 Android version
 Update 92
 App
 Data usage 78
 Default 76
 Detecting harmful 36
 End 32
 Exit 31
 Force stop 77
 Install 32
 Install from other source 35
 Move on start screen 23
 On start screen 22
 Open last time 21
 Restrict usage 39
 Security 35
 Store in folder on screen 23
 Unknown source 35
 Using two apps in parallel 34
 App authorisations 30, 77
 App permissions 72, 77
 Granting/Denying 72
 On installation 72
 App settings 77
 General 78
 Reset 79
 Apps
 Contacts 54
 Data usage 80
 Messages 58
 Phone 49
 Settings 62
 Authorisation 101
 Authorisation manager 72
 Authorisations 77
-
- B**
 Battery 103
 Charging 12
 Disposal 102
 Insert 12
 Replace 13
 Battery charge level 65
 Battery charge limit 65
 Blocking incoming numbers 52
 Bluetooth
 Change name of your own device 86
 Change names of connected devices 86
 Enable/disable 85
 End pairing 86
 Pairing 86
 Tethering 89
 Brightness 63
 Brightness sensor 3
 Buttons
 Virtual 21
-
- C**
 Call
 Accepting 50
 Delete from call list 53
 Ending 49
 Initiate 49, 58
 Initiate from call list 53
 Initiate from contact 54
 Reject 50
 Reject with SMS 50
 Call account 52
 Call details 53
 Call list 53
 Call log
 Call back caller 53
 Delete calls 53
 Call swapping 50
 Calls, sort sequence in the Phone app 51
 Camera
 Front camera 3
 Macro camera 3
 Main camera 3
 Certificate
 WLAN 83
 Charge icon 12
 Checking the Android version 92

- Coil (internal) 3
 - Concentration mode 40
 - Conference call 51
 - Configuration 14
 - Configuration wizard 14
 - Connecting the USB cable 12, 46
 - Connection
 - Bluetooth 85
 - Data usage 83
 - Mobile 79
 - VPN 87
 - WLAN 81
 - Consultation 50
 - Contact
 - Add to Favourites 57
 - Add to group 55
 - Add to start screen 57
 - Call 54
 - Create 55
 - Delete more than one 57
 - Deleting 57
 - Divert call to mailbox 57
 - Send 59
 - Set ringtone 57
 - Contact group 55
 - Contacts 54
 - Correcting and managing 56
 - Enable for Bluetooth device 86
 - Group 55
 - Import/Export 56
 - Name format 54
 - Restoring 56
 - Sorting 54
 - Conversation 59
 - Block 61
 - Delete 61
 - Create screenshot 46
 - Creating folders for apps 23
 - Customer Care 99
 - Customer care 98
 - Customer service 98
 - Customer Service & Assistance 99
-
- D**
- Dark design 64
 - Data
 - Backup 93
 - Copy to device 15
 - Delete remotely 73
 - loaded via Bluetooth 86
 - Data connection
 - Check usage 83
 - Enable 88
 - Data protection 68
 - Data protection policy 92
 - Data roaming 79
 - Data save mode 85
 - Data usage 78, 80, 83
 - Limit 84
 - Reduce 85
 - Warning 84
 - Data usage cycle 84
 - Date and time
 - Set automatically 91
 - Set manually 91
 - Date format 91
 - Declaration of agreement 92
 - Default app 76
 - Defaults 95
 - Device
 - Configuration 14
 - Locate 73
 - Lock remotely 73
 - Ring remotely 73
 - Switch on 13
 - Usage duration 38
 - Device Manager 73
 - Device storage 67
 - DHCP, in WLAN 83
 - Dialpad 49
 - Dialpad tones 65
 - Enable in Phone app 51
 - Digital wellbeing 38
 - Display
 - Brightness 63
 - Idle 18
 - Rotate 64
 - Display lock 69
 - Facial recognition 70
 - Password 69
 - Pattern 69
 - PIN 69
 - Replacement for fingerprint 37
 - Disposal 102
 - Do not disturb 41
 - Disable 41
 - Enable 41
 - Rules 42
 - Double tapping 14
 - Downloads 36
 - Draft, SMS 58
 - Drag 14
 - DuraSpeed 33
-
- E**
- Email account
 - Set up from Settings 74
 - Set up with wizard 17
 - Emergency information 70
 - Emergency location service 76
 - Emoticon in SMS 58
 - Enabling/disabling mobile data 79
 - Environment 102
 - Ethernet tethering 90

Exchange account	74
Exclusion of liability	101
Export of contacts	56

F

Facial recognition	
Delete	70
Enabling/disabling	70
Setting up	70
Family Link	44
Favourite, in contacts	57
Favourites bar	4
Tailoring	22
Fingerprint	
Alternative method	37
Capturing	16
Name	37
Processing	37
Set up from Settings	37
Using	38
Fingerprint sensor	3, 37
Flash	3
Flight mode	87
Font size	64
For multimedia messages, see MMS	
For text messages, see SMS	
For the screen lock, refer to the Display lock	
Function key	3

G

Google account	74
Google apps	33
Google keypad	26
Google Play Protect	35
Google services	74
Enable/disable with wizard	16
Guarantee Certificate	100

H

Handsfree mode	50
Headset jack	3
Help	98
Help on the Messages app	58
Home button	19, 21
Hotspot	88

I

Icons	
User guide	5
Idle mode	
Enable	18
End	19
Set period of inactivity	19
Import of contacts	56
Importing vCards	56
Installation, app	32

K

Keypad	26
Keypad settings	27

L

Language	
Setting from Settings menu	62
Setting with wizard	15
Location detection	75
Location history	76
Lock screen	
Emergency information	70

M

Main memory	67
Making calls	
Using headset	50
Using speaker	50
Making/receiving calls	49
Memory	
Freeing up	67
Memory card	
Ejecting	67
Insert	10
Storage capacity	67
Using again	67
Message LED	3, 4
Message LED, status displays	4
Messages	58
Manage	60
Read	60
Microphone	3
Muting	50
MMS	
Create	59
Search all	61
Mobile network	79
Mobile signal	96
Music	
Managing	47
Mute	
Do not disturb at night	41
Muting	
From button	26

N

Name format	
Contact in Contacts app	54
Contact in Phone app	51
Navigation	
Using gestures	20
Using virtual buttons	21
Navigation bar	4, 20
Adjusting	21
Navigation buttons	4

-
- Network connections 79
 - Network services 52
 - Night light 63
 - Notification 28
 - Clear 29
 - Permit/prevent from apps 41
 - Reset 29
 - Sound 30
 - Vibration mode 30
 - View 29
 - Notification dot 30
 - Notifications
 - Settings 29
 - Notifications bar 4
 - Open 28
 - Number
 - Enter from keypad 49
 - Numbers
 - Block 52
-
- O**
 - Open source software 104
 - Operation using gestures 24
-
- P**
 - Package contents 10
 - Pairing 86
 - Ending 86
 - Parental controls 44
 - Password
 - Display lock 69
 - Pattern
 - Display lock 69
 - Permissions for apps 72
 - Phone number
 - Add to contacts from call log 53
 - PIN
 - Display lock 69
 - Power Save mode 66
 - Power save mode
 - Enable automatically 67
 - Preferred SIM card 80
 - Premium SMS 58
 - Printing 47
 - Protection against unauthorised use 69
 - Protection from unauthorised use
 - Set up with wizard 16
 - Proxy, WLAN 82
-
- Q**
 - Questions and answers 96
 - Quick response
 - Edit 51
 - Send 50
 - Quick settings 25
 - Enabling/disabling function 25
-
- R**
 - Radiation 103
 - Rebooting 95
 - Receiver 3
 - Resetting network settings 93
 - Responses to SMS/MMS 60
 - Ringtone
 - Change 51, 65
 - Disabling using the Volume button 26
 - Set for contact 57
 - Roaming 79
 - Disable 85
 - Rules for do not disturb 42
-
- S**
 - Safety information 6
 - SAR certification 103
 - Scaling screen content 14
 - Screen content
 - Create screenshot 46
 - Rotate 64
 - Sending to another device 48
 - Screen pinning 71
 - Send email to contact 54
 - Send file 59
 - Sending pictures and videos 59
 - Sensor
 - Air pressure sensor 3
 - Brightness sensor 3
 - Fingerprint sensor 3
 - Setting Heads Up 41
 - Setting up facial recognition 16
 - Setting voice entry 28
 - Settings for function key 28
 - Show notification history 29
 - SIM card 96
 - Insert 10
 - Preferred 80
 - Unlocking 18
 - Using two 80

- SIM card lock 71
 - Sleep time mode 40
 - Smart Lock 69
 - Smart Touch 94
 - Smiley in SMS 58
 - SMS
 - Billable 58
 - Draft 58
 - Save as draft 58
 - Search all 61
 - Send to a contact 54
 - Write 58
 - SMS/MMS 58
 - Respond to 60
 - Send 59
 - Software update 92
 - Sort sequence, Phone app 51
 - Sorting sequence, contacts 54
 - Speaker 3
 - Speech-to-text messages 60
 - Split screen mode 34
 - Spread apart / pinch together your fingers 14
 - Start screen 3, 19
 - Add 24
 - Add, remove, move apps 22
 - Add, remove, move widgets 23
 - Change wallpaper 22
 - Contact for direct dial 57
 - Overview 4
 - Remove 24
 - Return to 19
 - Switching 19
 - Status bar 4
 - Status displays 4
 - Storage capacity
 - Assignment 67
 - Available 67
 - Storage, permanent 67
 - Storage, temporary 67
 - Streaming 48
 - Swipe or drag 14
 - Switch on and off 3, 18
 - Switching off 18
 - Switching on 13, 18, 96
 - Synchronisation
 - Automatic 75
 - Synchronise
 - Manually 75
 - Synchronising 74
 - System
 - Backup 93
 - Update 92
 - System update
 - Download 92
 - With notification 92
 - Without notification 92
-
- T**
 - Tap 14
 - Tethering
 - Bluetooth 89
 - Ethernet 90
 - USB 90
 - Text
 - Font size 64
 - Writing and editing 26
 - Time format 91
 - Time server 91
 - Time zone 91
 - Touch and hold 14
 - Touchscreen 3
 - Transferring files to/from a computer 46
 - Trust agents 69
 - TTY mode 52
 - Two SIM cards 80
-
- U**
 - Update 92
 - Usage duration 38
 - USB tethering 90
 - USB type C connector 3
 - User
 - Set up 44
 - Switch 45
 - Using gestures 24
 - Using hearing aids 52
 - Using the device 18
-
- V**
 - Vibration
 - Enable/Disable in Phone app 51
 - Enabling/disabling from Volume button 26
 - Virtual buttons 21
 - Virtual Private Network, see VPN
 - Volume
 - Setting from menu 64
 - Setting from Volume button 26
 - Volume - 3
 - Volume + 3
 - VPN 87
 - Add 87
 - End connection 87
 - Establish connection 87

W	
Wallpaper	
Change	22
Website	
Set the usage duration	39
Show usage	39
Widget	23
Change size	23
Move on start screen	23
On start screen	23
Wi-Fi Direct	83
WLAN	
Add	81
Certificate	83
Configuration	82
Connecting device to hotspot	89
DHCP	83
Enabling/disabling	81
Enabling/disabling hotspot	88
Establish connection	15, 81
Establish connection with wizard	15
Hotspot	88
Proxy	82
Remove	81
Share	82
WLAN settings	
Additional	83

Z	
Zoom	14

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com

Google, Android, and Google Chrome are trademarks of Google LLC.