



Wi-Fi Kit

Quick Start Guide

Quick Start Guide

© 2020 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

This Manual is the property of Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision"), and it cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise expressly stated herein, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual, any information contained herein.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website (<http://www.hikvision.com/>).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks Acknowledgement

- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED “AS IS” AND “WITH ALL FAULTS AND ERRORS”. HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY,

INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU and the RE Directive 2014/53/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at

designated collection points. For more information, see:

www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol,

which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information, see:

www.recyclethis.info.

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut

fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions"

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

 Warnings	 Cautions
Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings

For Network Camera:

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- The power source should meet limited power source or PS2 requirements according to IEC 60950-1 or IEC 62368-1 standard.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket. When the product is mounted on wall or ceiling, the device shall be firmly fixed.

- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

For NVR Device:

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- The power source should meet limited power source or PS2 requirements according to IEC 60950-1 or IEC 62368-1 standard.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- If the PoE ports of device do not comply with Limited Power Source, the additional equipment connected to PoE ports shall have fire enclosure.
- The USB interface of the /P devices can be connected with the mouse and U-flash disk storage device only.



Cautions

For Network Camera:

- CAUTION: Hot parts! Burned fingers when handling the parts.



Wait one-half hour after switching off before handling parts. This sticker is to indicate that the marked item can be hot

- and should not be touched without taking care. For device with this sticker, this device is intended for installation in a restricted access location, access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken.
- Make sure the power supply voltage is correct before using the camera.
 - Do not drop the camera or subject it to physical shock.
 - Do not touch sensor modules with fingers. If cleaning is necessary, use clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period, please replace the lens cap to protect the sensor from dirt.
 - Do not aim the camera at the sun or extra bright places. Blooming or smearing may occur otherwise (which is not a malfunction), and affect the endurance of sensor at the same time.
 - The sensor may be burned out by a laser beam, so when any laser equipment is in using, make sure that the surface of sensor will not be exposed to the laser beam.
 - The operating temperature shall be -30°C to +60°C (-22 °F to +140 °F). Do not place the camera in extremely hot, cold, dusty

or damp locations, and do not expose it to high electromagnetic radiation.

- To avoid heat accumulation, good ventilation is required for operating environment.
- Keep the camera away from liquid while in use.
- While in delivery, the camera shall be packed in its original packing, or packing of the same texture.
- Regular part replacement: a few parts (e.g. electrolytic capacitor) of the equipment shall be replaced regularly according to their average enduring time. The average time varies because of differences between operating environment and using history, so regular checking is recommended for all the users. Please contact with your dealer for more details.
- This equipment is not suitable for use in locations where children are likely to be present.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

ATTENTION: IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS

- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).

- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

For NVR Device:

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.

- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

L'utilisation ou le remplacement inadéquats de la pile peuvent entraîner un risque d'explosion. Remplacez-la par le même type ou l'équivalent du même type seulement. Jetez les piles usagées conformément aux directives fournies par le fabricant de la pile.

Power Supply Instructions for NVR Device:

Use only power supplies listed in the user instructions.

Standard	Power Supply Models	Manufacturer
European	MSA-C2000IC12.0-24P-DE	MOSO POWER SUPPLY TECHNOLOGY CO.,LTD
	ADS-26FSG-12 12024EPG	SHENZHEN HONOR ELECTRONIC CO.,LTD
British	MSA-C2000IC12.0-24P-GB	MOSO POWER SUPPLY TECHNOLOGY CO.,LTD
	ADS-26FSG-12 12024EPB	SHENZHEN HONOR ELECTRONIC CO.,LTD


Table of Contents

1 Introduction	14
1.1 Application	14
1.2 NVR Appearance	15
1.2.1 Front Panel	15
1.2.2 Rear Panel	16
1.3 Camera Appearance	17
2 NVR Installation	19
2.1 Precautions	19
2.2 Hard Disk Drive Installation	19
3 Camera Installation	22
3.1 Ceiling Mounting	22
3.2 Mounting with a Junction Box	24
3.3 Waterproof Measures	27
3.3.1 Install Network Cable Waterproof Jacket	27
3.3.2 Waterproof Other Cables	28
4 Menu Operation	29
4.1 Startup and Shutdown	29
4.2 Activate Your NVR	29
4.3 Use the Setup Wizard	30
4.4 Add IP Cameras	31
4.4.1 Wi-Fi Kit Cameras	31
4.4.2 Other Cameras	33
4.5 Hik-Connect Setup	34

1 Introduction

1.1 Application

The Wi-Fi kit includes four network cameras and a NVR device. The NVR works as a wireless network router, and the camera connects to the NVR's Wi-Fi automatically after the camera is powered on.

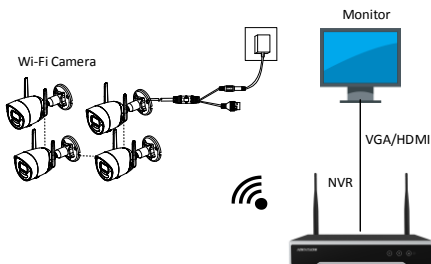

Note:

If you want to access the NVR via Internet, connect your NVR with the router.

1.2 NVR Appearance

1.2.1 Front Panel

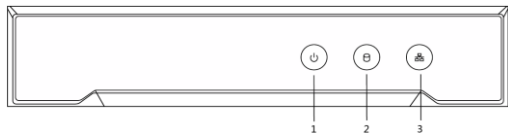


Figure 1-1 Front Panel

Table 1-1 Description

No.	Icon	Description
1		Indicator turns red when NVR is powered up.
2		Indicator lights in red when there is data transmission.
3		Indicator blinks blue when network connection is functioning properly.

1.2.2 Rear Panel

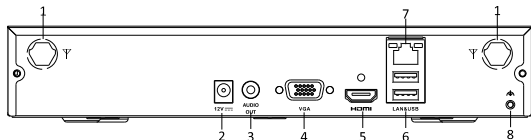


Figure 1-2 Rear Panel

Table 1-2 Description

No.	Icon	Description
1	Wi-Fi Antenna	Wi-Fi antenna interface.
2	Power supply	12 VDC power supply.
3	Audio out	One audio output.
4	VGA	VGA interface
5	HDMI	HDMI video output connector.
6	USB	Two USB 2.0 interface.
7	LAN	One RJ-45 10M/100M self-adaptive Ethernet interface

No.	Icon	Description
8	Ground	Ground (needs to be connected when device starts up).

1.3 Camera Appearance

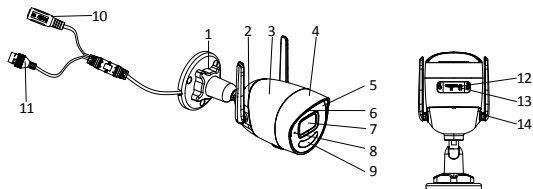


Figure 1-3 Overview

Table 1-3 Description

No.	Description
1	Bracket
2	Back Cover
3	Main Body
4	Front Cover
5	IR LED Cover

No.	Description
6	Status Indicator
7	Lens
8	Microphone
9	IR LED
10	Power Interface
11	Network Interface
12	RESET Button
13	Memory Card Slot
14	Antenna

Note:

Hold RESET about 10s when the camera is powering on or rebooting to restore the default settings, including the user name, password, IP address, port No., etc.

2 NVR Installation

2.1 Precautions

During installation of the NVR:

- Use brackets for rack mounting.
- Ensure ample room for audio and video cables.
- When routing cables, ensure that the bend radius of the cables is no less than five times than its diameter.
- Connect the alarm cable.
- Allow at least 2 cm (≈0.75-inch) of space between racks mounted devices.
- Ensure the NVR is grounded.
- Environmental temperature should be within the range of -10 °C to +55 °C, +14 °F to +131 °F.
- Environmental humidity should be within the range of 10% to 90%.

2.2 Hard Disk Drive Installation

Before you start:

- If the NVR has been installed with hard disks, skip this section.
- Disconnect the power from the NVR before installing a hard disk drive (HDD). A factory recommended HDD should be used for this installation.

Tools Required: Screwdriver.

Steps:

1. Remove the cover from device by unfastening the screws on panels.

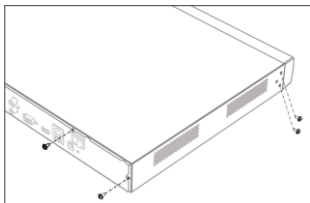


Figure 2-1 Remove Cover

2. Connect the data cable and power cable.
 - a) Connect one end of data cable to the device motherboard.
 - b) Connect the other end of data cable to HDD.
 - c) Connect one end of power cable to HDD.
 - d) Connect the other end of power cable to the device motherboard.

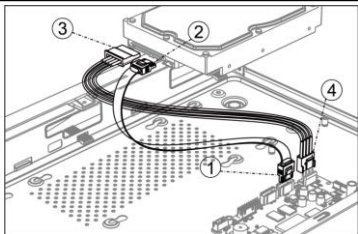


Figure 2-2 Connect Cables

3. Set the device up, match HDD screw threads with the reserved holes on the device bottom, and fix HDD with screws.

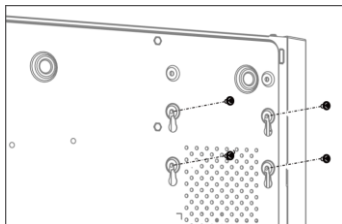


Figure 2-3 Fix HDD to Device Bottom

4. (Optional) Repeat the steps above to install other HDDs.
5. Reinstall the device cover and fasten screws.

3 Camera Installation

Before you start:

- Make sure the device in the package is in good condition and all the assembly parts are included.
- The standard power supply is 12 VDC. Make sure your power supply matches with your camera.
- Make sure all the related equipment is power-off during the installation.
- Check the specification of the products for the installation environment.
- Make sure that the wall is strong enough to withstand four times the weight of the camera and the bracket.

For the camera that supports IR, you are required to pay attention to the following precaution to prevent IR reflection:

Make sure that there is no reflective surface too close to the camera lens. The IR light from the camera may reflect back into the lens causing reflection.


3.1 Ceiling Mounting

Before you start:

The camera supports wall mounting and ceiling mounting and the installation steps are similar. Here we take ceiling mounting as an example.

Steps:

1. Paste the drill template on the wall or ceiling and drill holes according to the marked holes on the drill template.

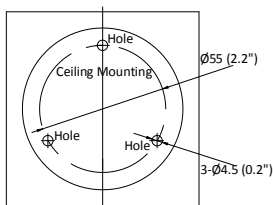

Unit: mm (inch)

Figure 3-1 Paste the Drill Template

2. If you need to route cables through the wall or ceiling, drill a cable hole according to the drill template. Skip this step if you want to route the cables on the surface of the wall or ceiling.
3. Route the cables of the camera.
4. Install the camera to the wall or ceiling with screws.

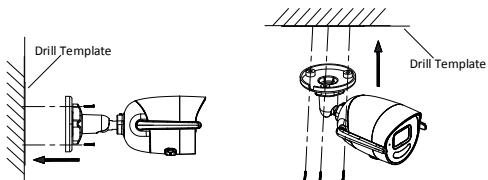


Figure 3-2 Install the Camera

Note:

- In the supplied screw package, both self-tapping screws, and expansion bolts are contained.
- If the ceiling is cement, expansion bolts are required to fix the camera. If the ceiling is wooden, self-tapping screws are required.

5. Adjust the view angle of the camera.

3-axis (pan/tilt/rotation) adjusting allows adjustment for optimum camera rotation and placement.

1). Loosen the 3-axis adjusting nut.

2). Adjust the panning, tilting and rotation position of the camera.

The adjusting range of the panning is from 0° to 360° , range of the tilting is from 0° to 90° and range of the rotation is 0° to 360° .

3). Tighten the adjusting nut.

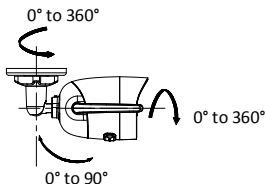


Figure 3-3 View Angle Adjustment

3.2 Mounting with a Junction Box

Before you start:

- Both wall mounting and ceiling mounting are suitable for the bullet camera. Wall mounting will be taken as an example in this section.

And you can take steps of wall mounting as a reference for ceiling mounting.

- You need to purchase a junction box first.

Steps:

1. Paste the drill template (supplied) to the desired mounting position on the wall.
2. Drill the screw holes and the cable hole (optional) in the wall according to the drill template.

Note:

Drill the cable hole, if adopting ceiling outlet to route the cable.



Figure 3-4 The Drill Template

3. Take apart the junction box, and align the screw holes of the bullet camera with those on the junction box's cover.
4. Fix the camera on the junction box's cover with screws.




Figure 3-5 Fix the Camera on Junction Box's Cover

5. Secure the junction box's body with three supplied screws on the wall.

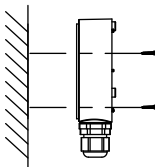


Figure 3-6 Fix the Junction Box on the Wall

6. Route the cables through the cable hole.
7. Combine the junction box cover with its body with three screws on the junction box's cover.

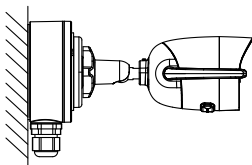


Figure 3-7 Combine Junction Box's Cover with its Body

8. Repeat steps 5 of 3.1 *Ceiling Mounting* to complete the installation.

3.3 Waterproof Measures

If the camera is installed outdoor, you should use the waterproof accessory or tapes to waterproof the cables. Otherwise, the cables might get wet or a short circuit occurs.

3.3.1 Install Network Cable Waterproof Jacket

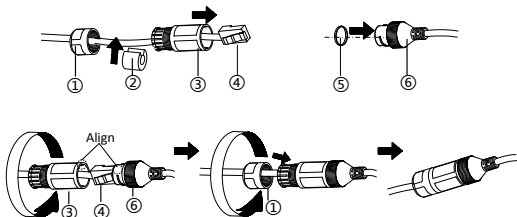


Figure 3-8 Install Waterproof Jacket

Steps:

1. Feed the network cable through ① and ③ in order.
2. Fix ② on the network cable between ① and ③.
3. Place ⑤ onto the end of ⑥, and plug the RJ45 male connector into RJ45 female connector.
4. Screw ③ to ⑥ clockwise.
5. Push ② into ③.
6. Secure ① with the ③ in clockwise direction.

3.3.2 Waterproof Other Cables

After routing and connecting the cables, use the waterproof tapes to wrap up the cables. Connected cables and spare cables both should be wrapped up as the figures below.

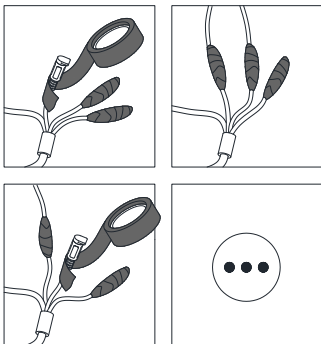


Figure 3-9 Waterproof Cables

4 Menu Operation

4.1 Startup and Shutdown

To start your NVR:

Steps:

1. Check the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device. The Power button on the front panel should be red, indicating the device is receiving the power.
2. Press the power switch on the panel. The Power LED should turn blue. The unit will begin to start.

After the device starts up, the wizard will guide you through the initial settings, including modifying password, date and time settings, network settings, HDD initializing, and recording.

To shut down the NVR:

Steps:

1. Enter the Shutdown menu. Go to **Menu > Shutdown**.
2. Select **Shutdown**.
3. Click **Yes**.

4.2 Activate Your NVR

Purpose:

For the first-time access, you need to activate the NVR by setting an admin password. No operation is allowed before activation. You can also activate the NVR via Web Browser, SADP or client software.

1. Input the same password in the text field of Create New Password and Confirm New Password.



STRONG PASSWORD RECOMMENDED– We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

2. Enter IP Camera Activation Password to set the IP camera activation password.
3. Select **Area/Country**.
4. Click **OK**.

4.3 Use the Setup Wizard

The Setup Wizard can guide you to configure the system resolution, system date/time, HDD initialization, IP camera management, etc.

4.4 Add IP Cameras

4.4.1 Wi-Fi Kit Cameras

The supplied Wi-Fi kit cameras can connect to the NVR automatically after it is powered on.

Steps:

1. Connect the NVR to a display.
2. Connect camera 01, 02, 03, and 04 to NVR. The cameras connects to NVR's Wi-Fi automatically.

Note:

Make sure the distance between Camera 01, 02, 03, 04 and the NVR is no more than 15 m.

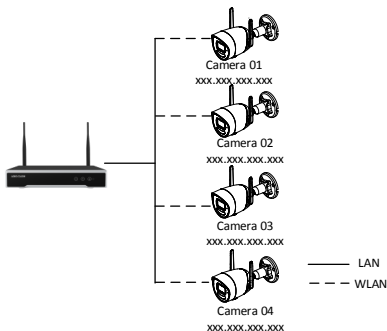


Figure 4-1 Connect to the NVR

(Optional) If you want to install a camera in a long distance, you can enable the repeater function on NVR. Here we take Camera 04 as an example.

Steps:

1. Right click the screen and select **Menu > Camera**.
2. Click **Enable Repeater** and the repeater function of NVR and cameras is enabled.

Note:

Make sure the distance between Camera 01, 02, 03, 04 and the NVR is no more than 15 m.

3. Install Camera 04 to the desired position and power it on. Then it connects to the NVR via the repeater function.

Note:

The farthest installation distance for Camera 04 depends on the actual environment.

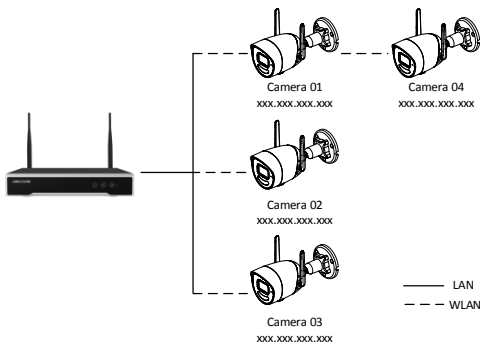


Figure 4-2 Connect Cameras to NVR via Repeater Function

4.4.2 Other Cameras

For the cameras not included in the kit, choose one of the following methods to add the cameras.

Auto Connection:

Steps:

1. Power the camera up and hold the RESET button for 10 seconds to restore the camera to defaults.

Note:

Make sure the camera is not activated before the installation.

2. Right click the screen and select **Wi-Fi Match**. The camera connects to the NVR within 120 s.

Manual Connection:**Steps:**

1. Click to select an idle window in the live view mode.
2. Click  in the center of the window.
3. Select the detected IP camera and click **Add** to add it directly.
4. Go to **Menu > Configuration > Wi-Fi**.
5. Set wireless network parameters, including Network Bridging, SSID, Security Mode, and Key.
6. Access the Web of the camera.
7. Go to **Configuration > Network > Advanced Settings > Wi-Fi** to set the Wi-Fi parameters.

Note:

For the detailed information, see the User Manual of the Network Camera.

4.5 Hik-Connect Setup

The Hik-Connect mobile client can generally manage various kinds of devices. With the client, you can remotely control NVRs, DVRs, and network cameras, etc.

Steps:

1. Get and install Hik-Connect application by the following ways.
 - Visit <https://appstore.hikvision.com> to download the application according to your mobile phone system.
 - Visit the official site of our company. Then go to **Support > Tools > Hikvision App Store**.
 - Scan the QR code below to download the application.



Note:

If errors like “Unknown app” occur during the installation, solve the problem in two ways.

- Visit <https://appstore.hikvision.com/static/help/index.html> to refer to the troubleshooting.
 - Visit <https://appstore.hikvision.com/>, and click **Installation Help** at the upper right corner of the interface to refer to the troubleshooting.
2. Launch the app and register for a Hik-Connect user account.
 3. Log in Hik-Connect app after registration.
 4. Use a network cable to connect the NVR with a router.
 5. In the Hik-Connect app, tap "+" on the upper-right corner and then scan the QR code of the NVR to add the NVR.
 6. After the adding, you can get the live view, and play back the videos in the app.

Note:

For detailed information, refer to the user manual of the Hik-Connect app.

